 
 


ÄLSKVÄRD

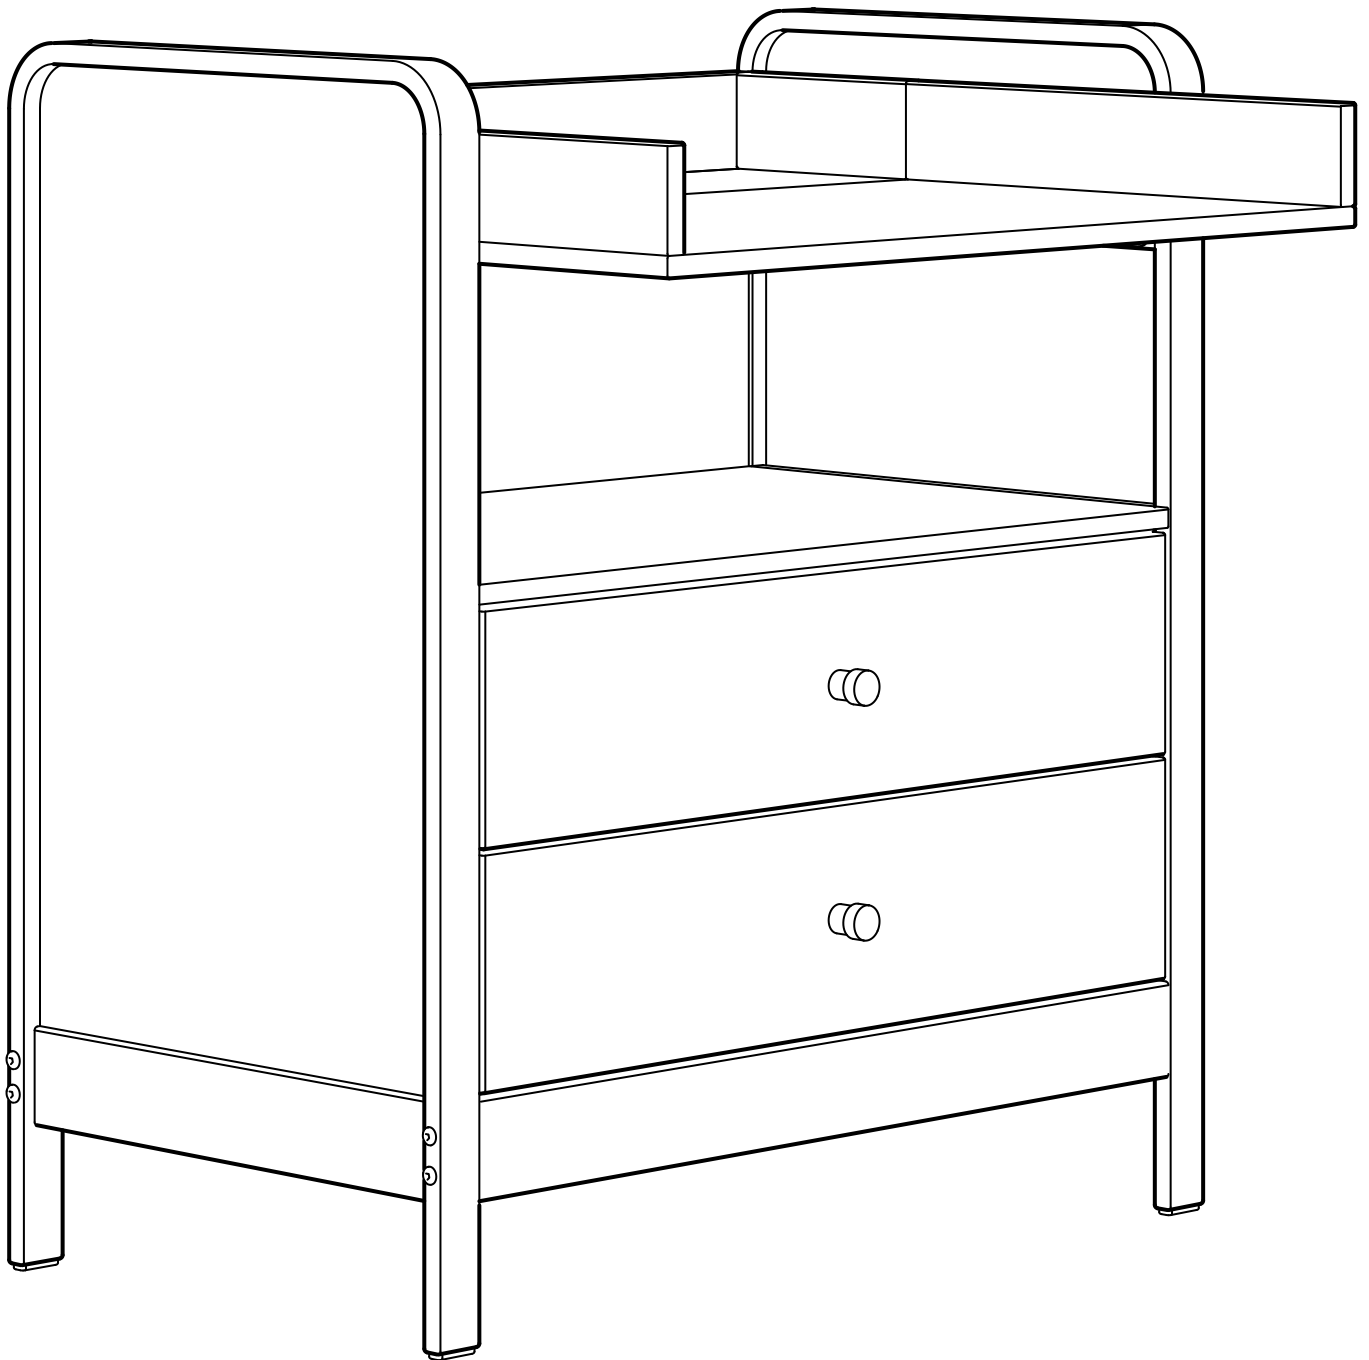

Design and Quality
IKEA of Sweden

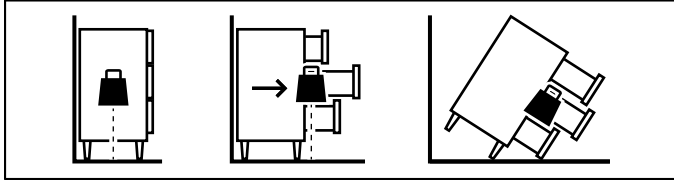

English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

NEVER open more than one drawer at a time.


Place heaviest items in the lowest drawers.




English

Read and follow each step of the instruction carefully.

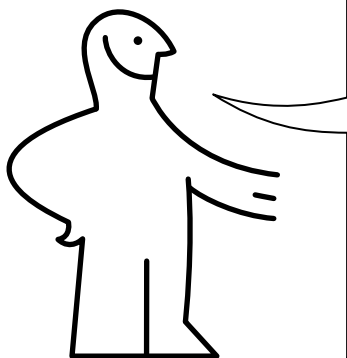


Ø 8 mm (5/16'')	Ø 8 mm (5/16'')	Ø 3 mm (1/8'')

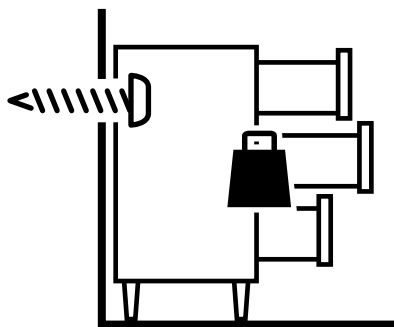 


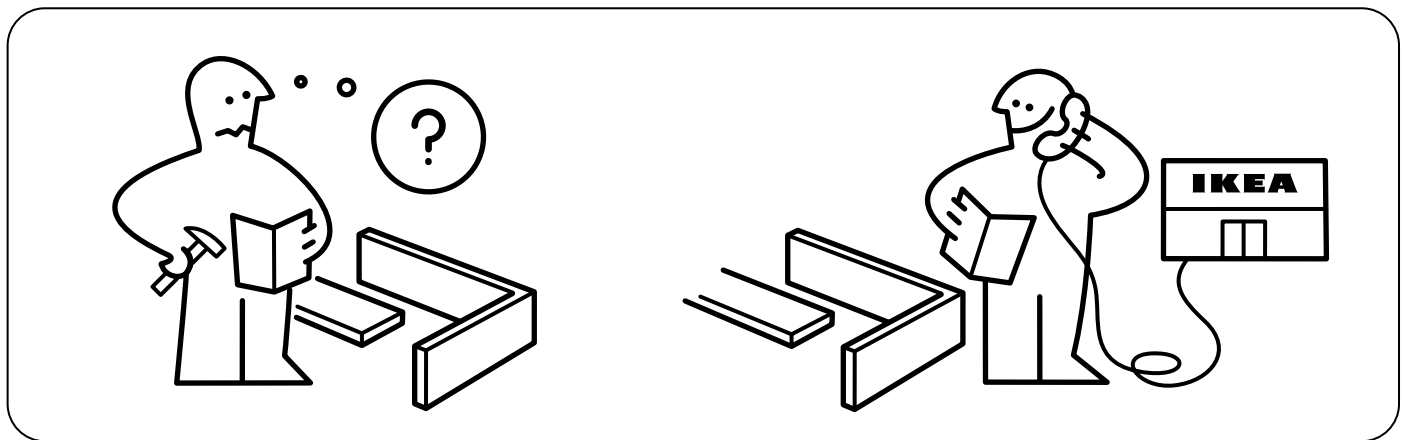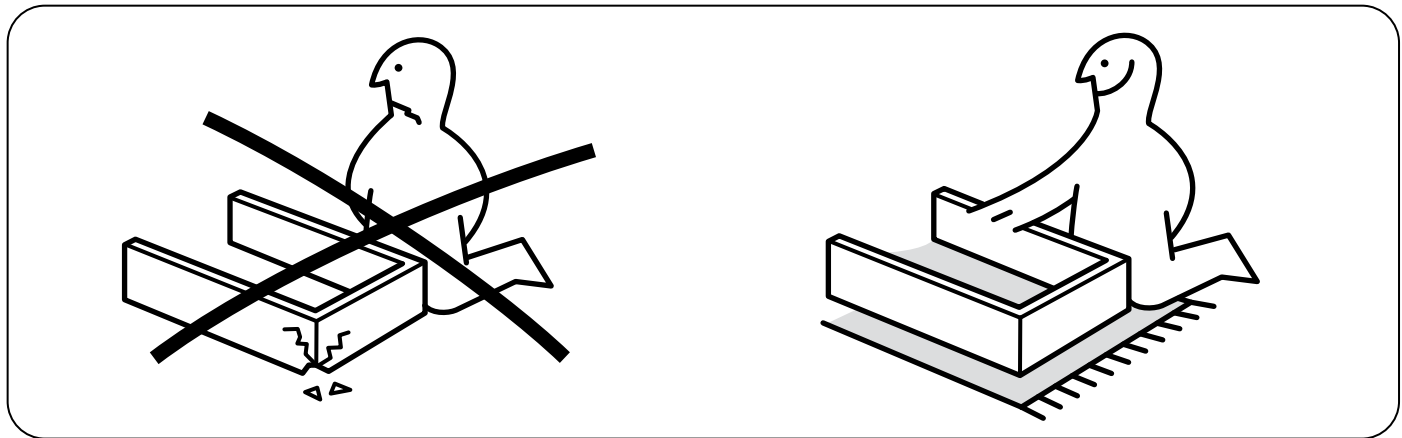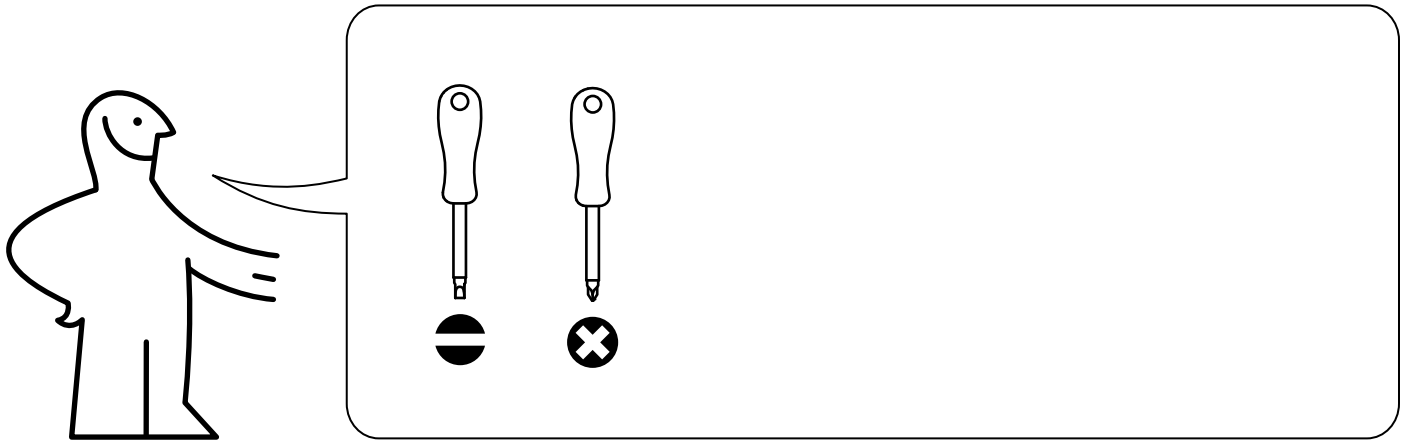   


1

 


2x

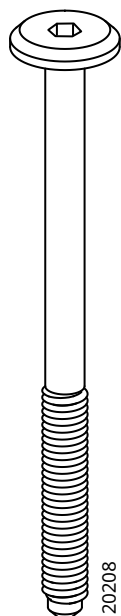 


8x

 


4x

 


2x

 

18x

 

18x

 


8x




14x



 
12x

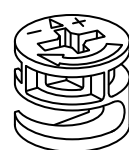


26x

 


18x

 


2x

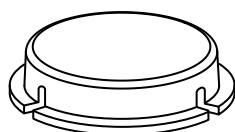 


2x

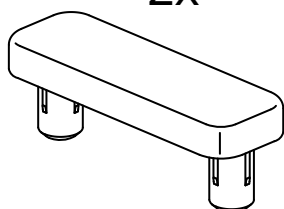 


4x

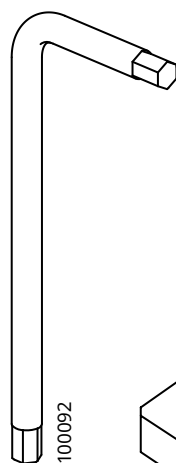 

1x

 


3x

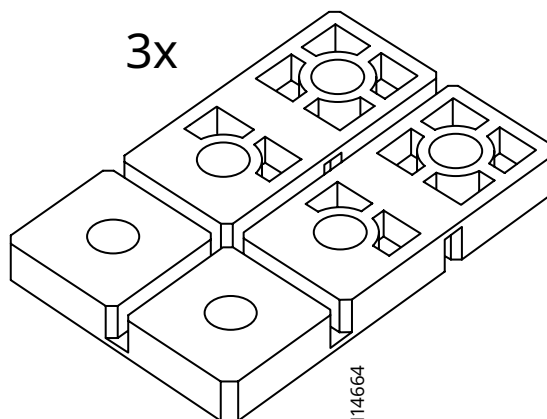 


2x

 
2




8x

 

8x

 


2x

 


4x



 
12x

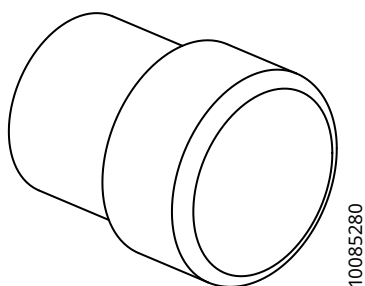

2x

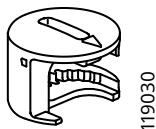 


16x

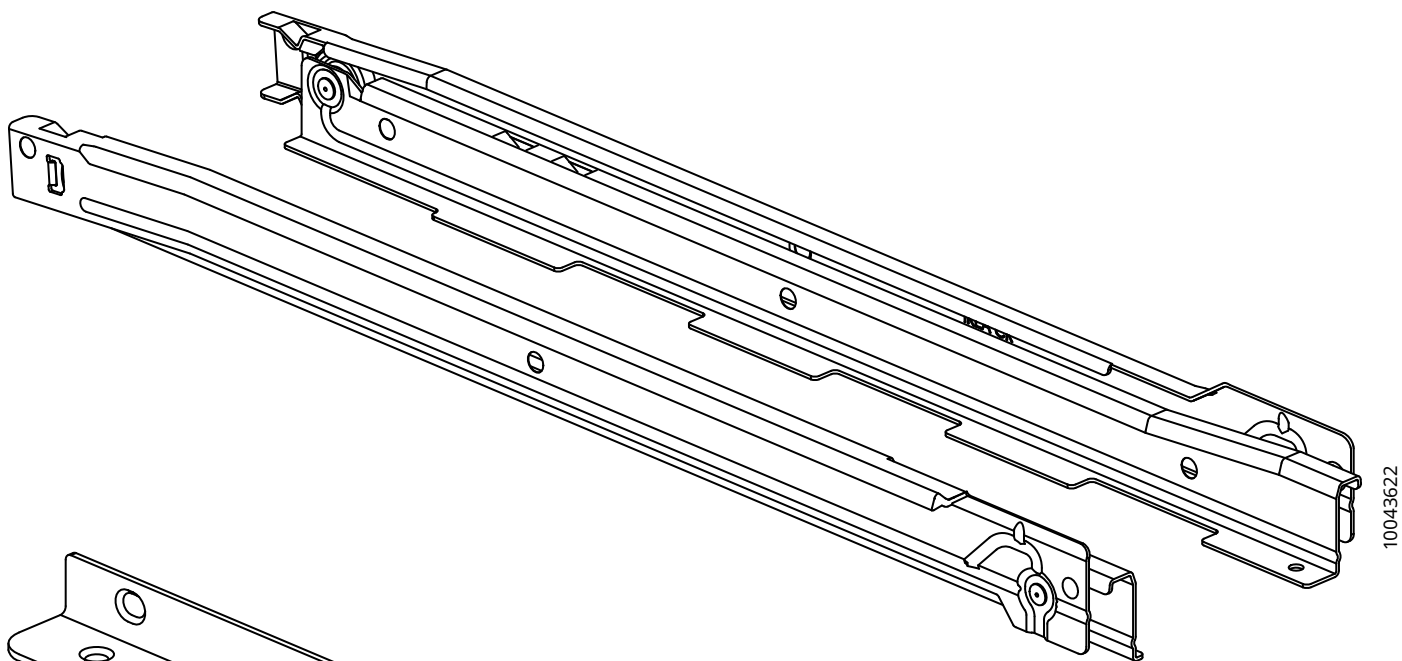 


10043622

 2x

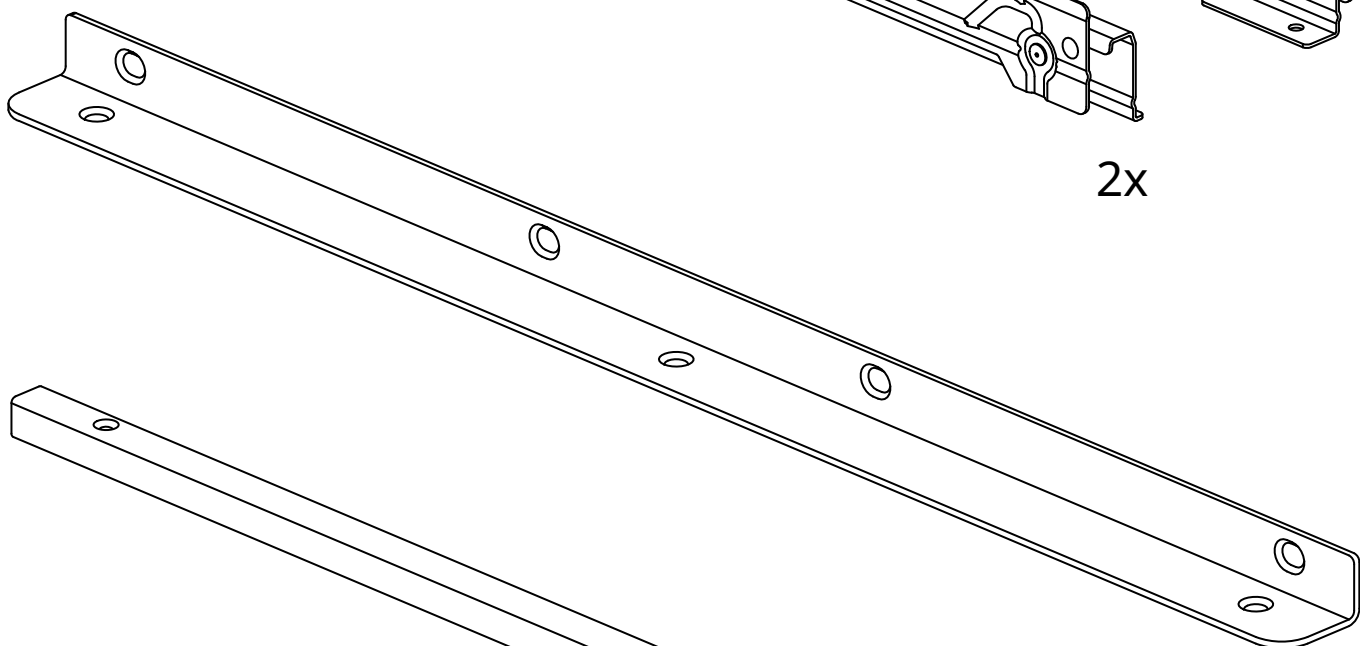


10101068

 2x

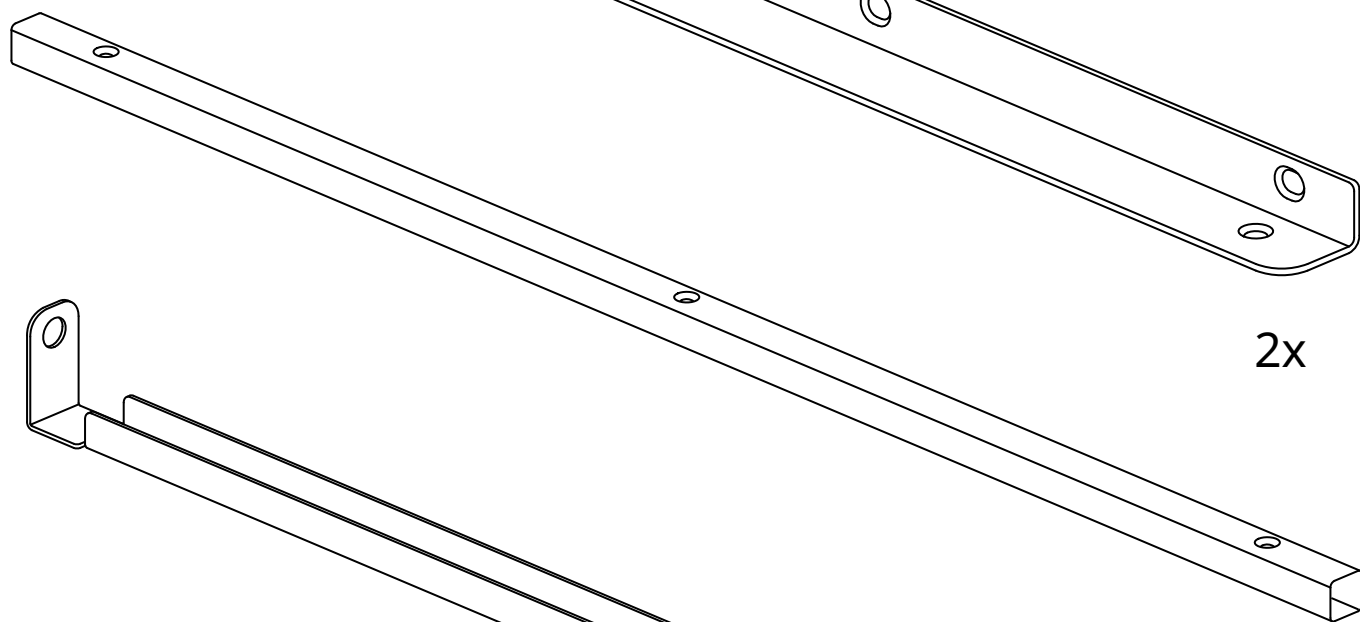

10092907


 
1x

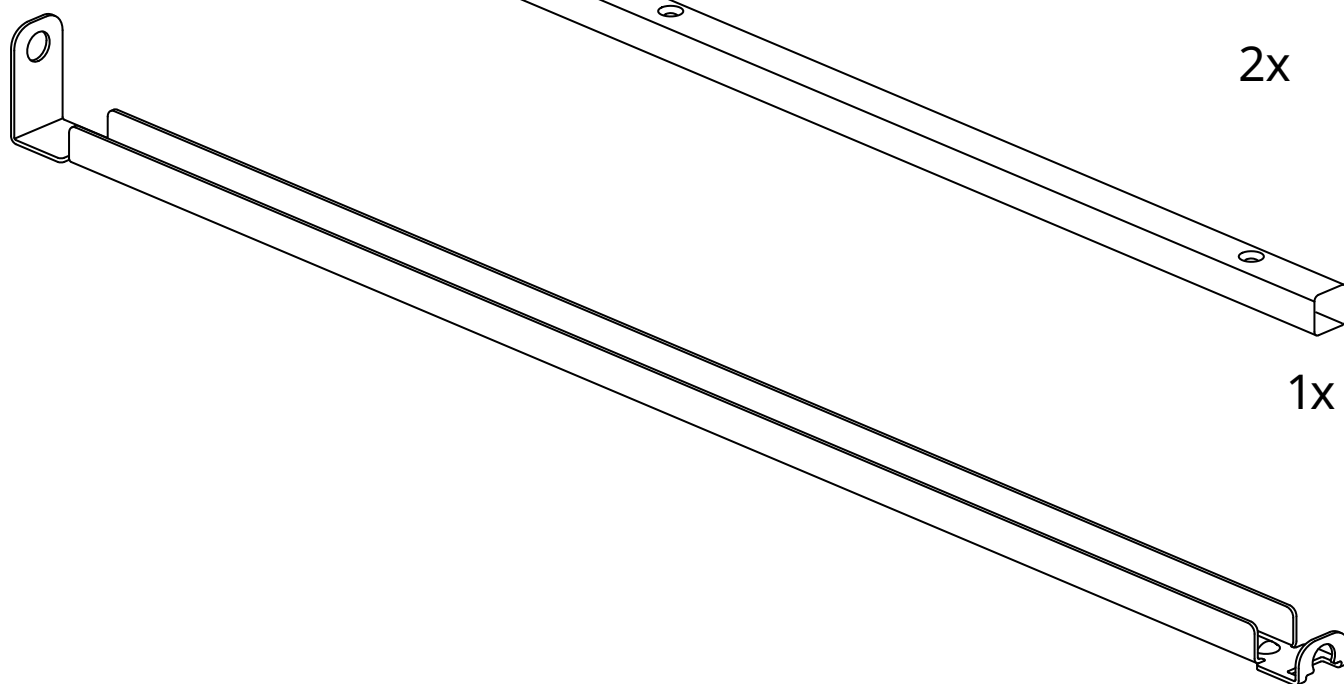



150497

2x

  
2x

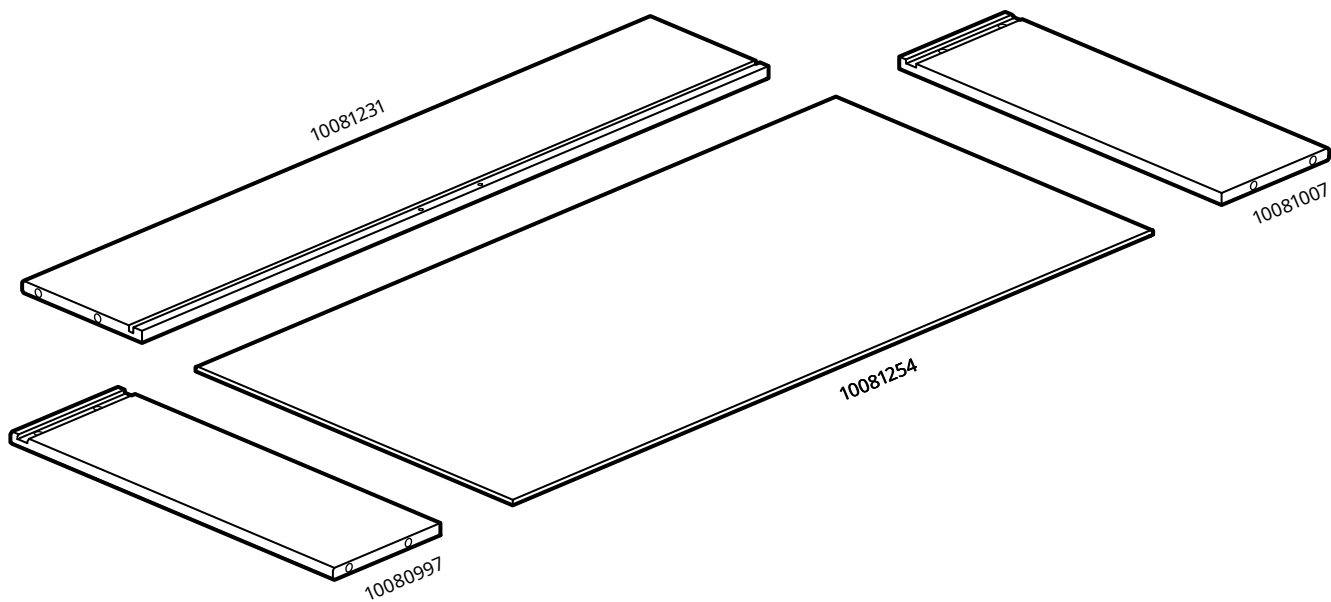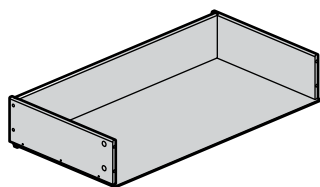


1

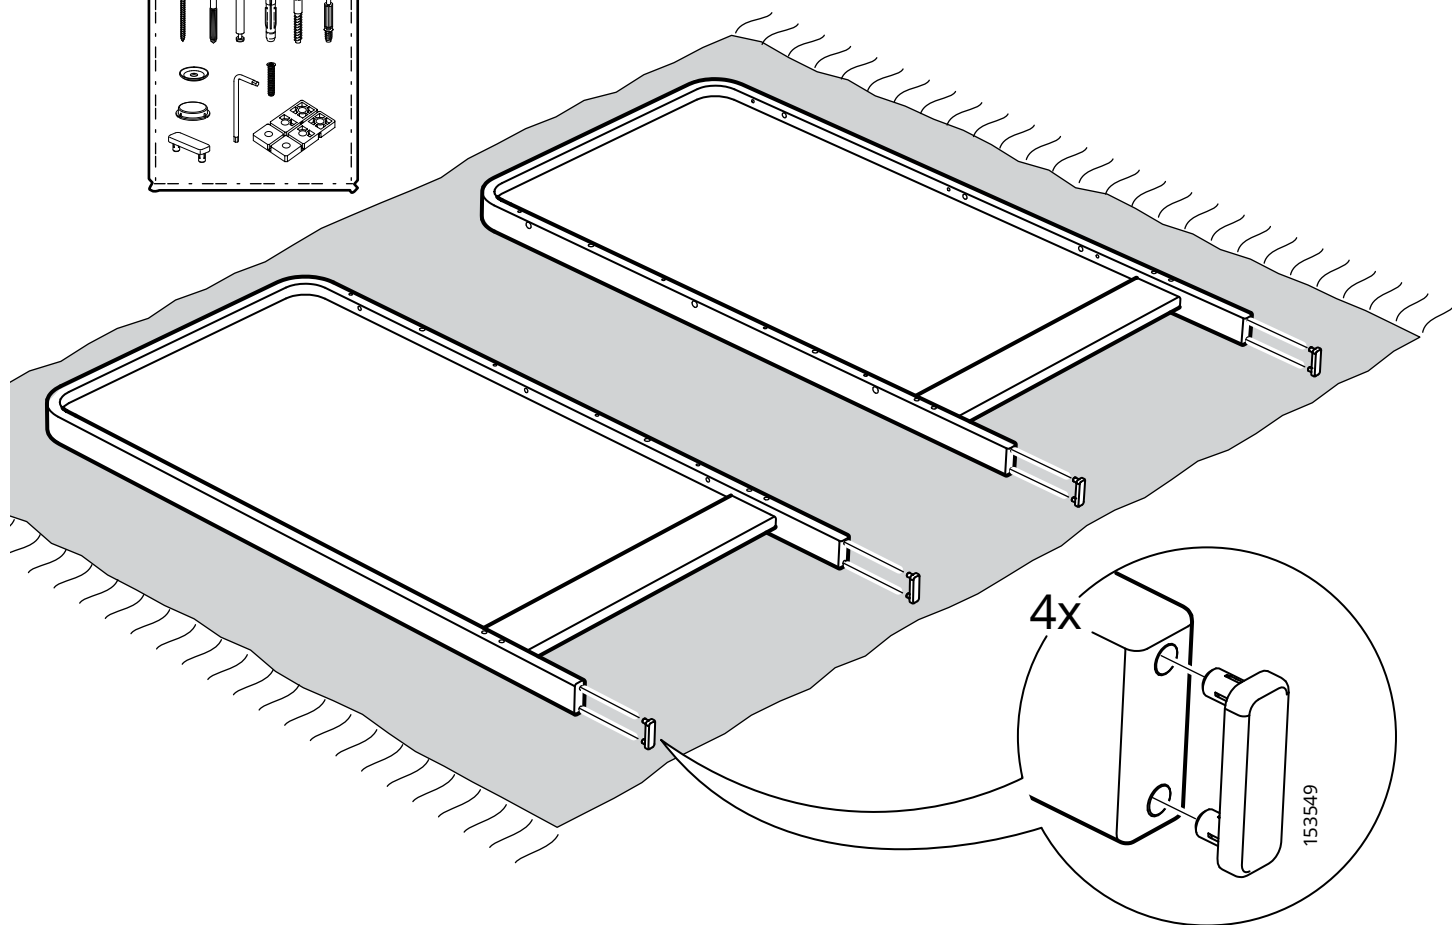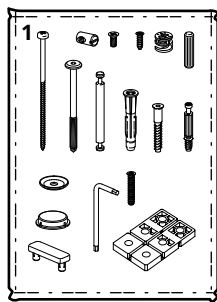  


2

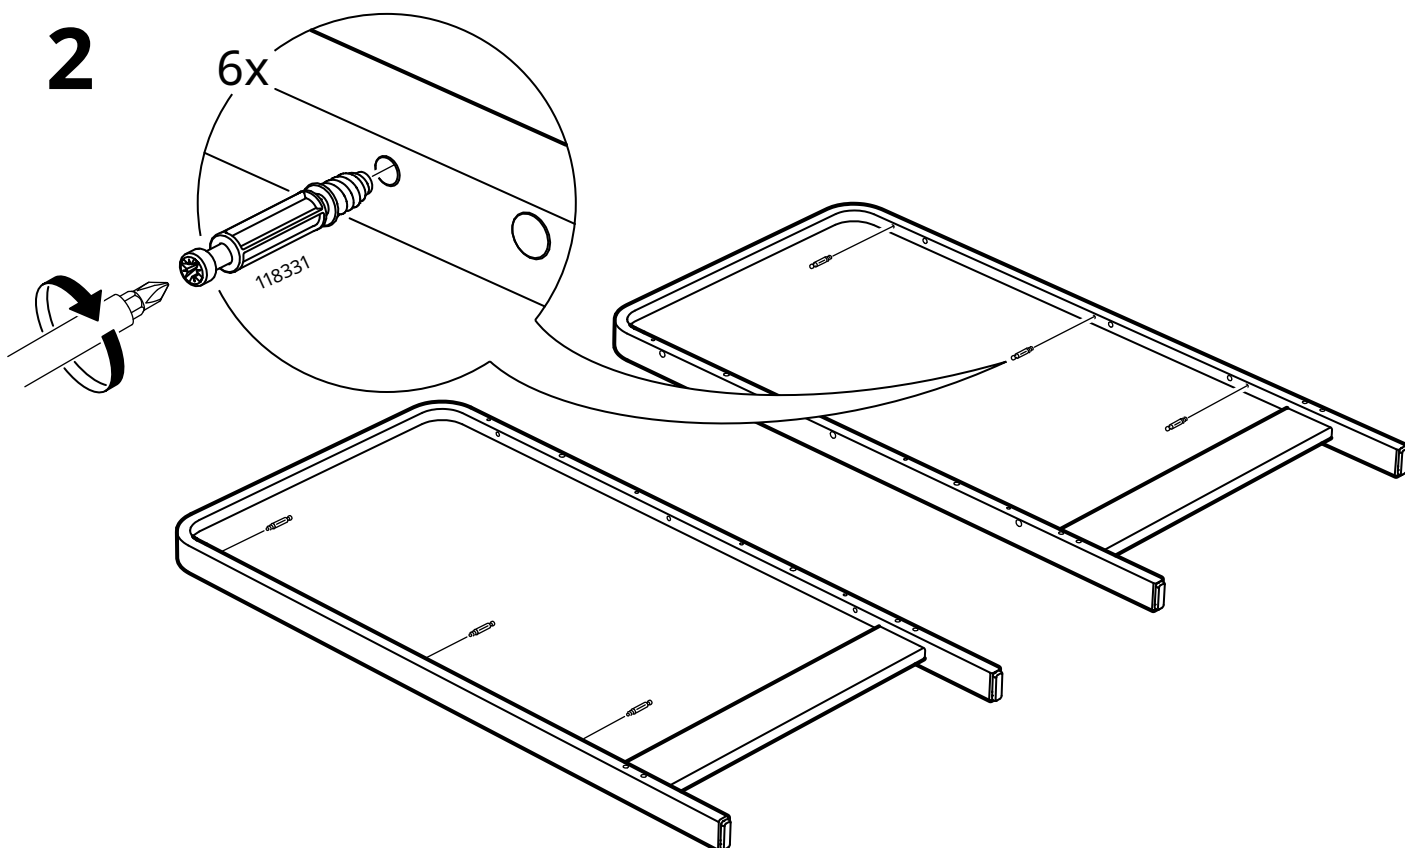 


3

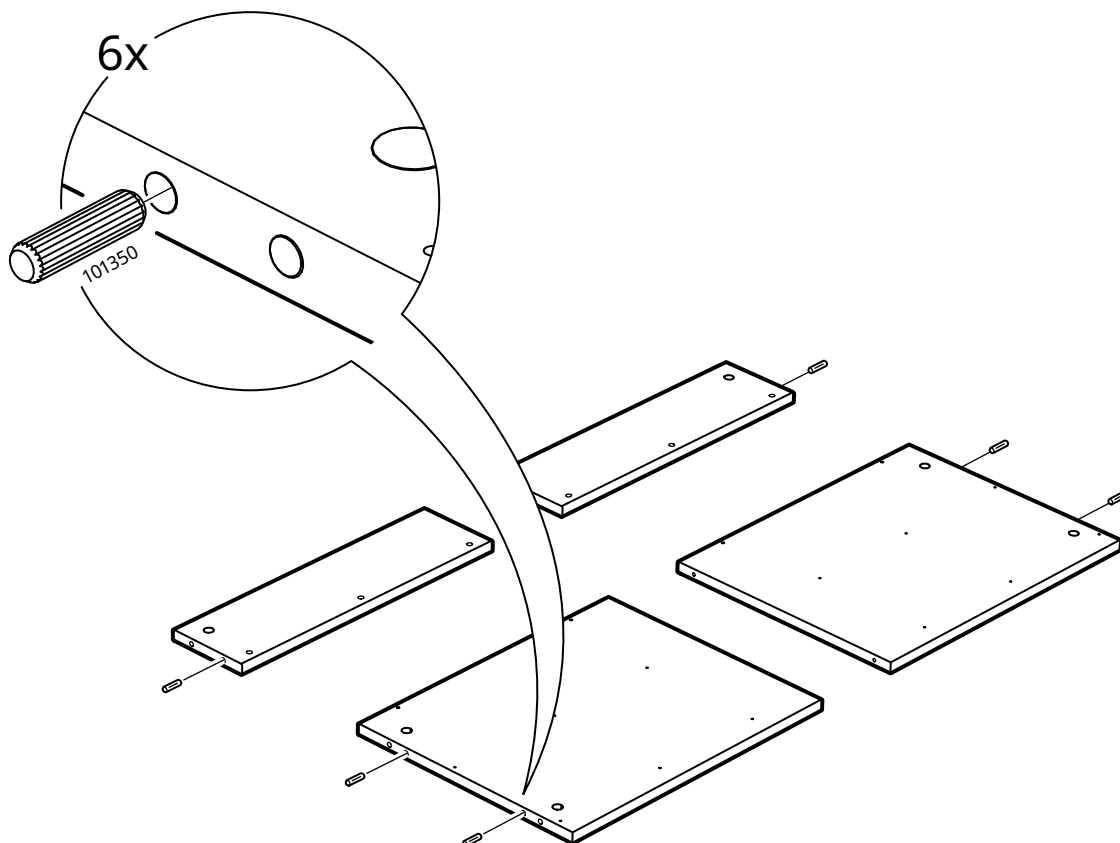 


4

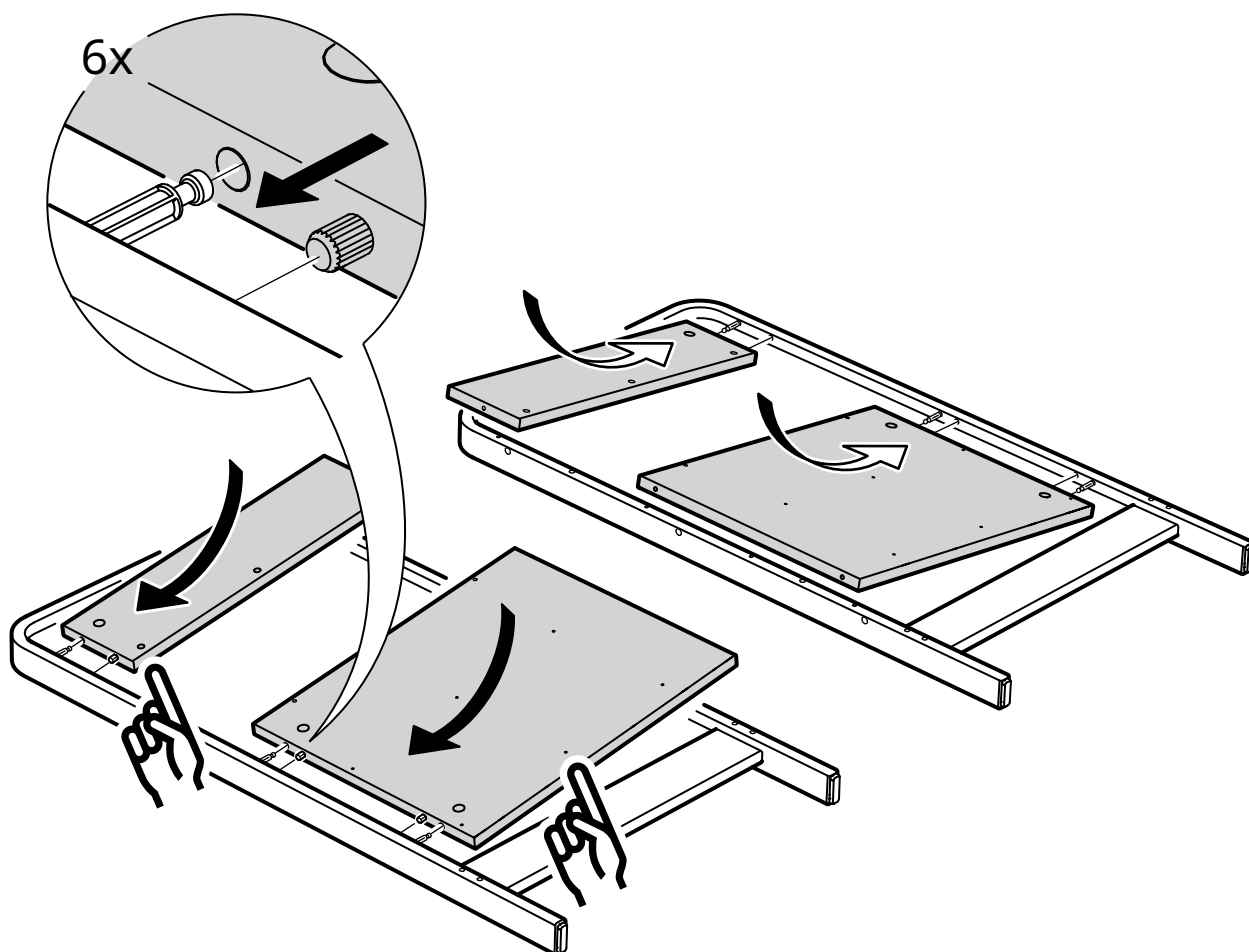 


5

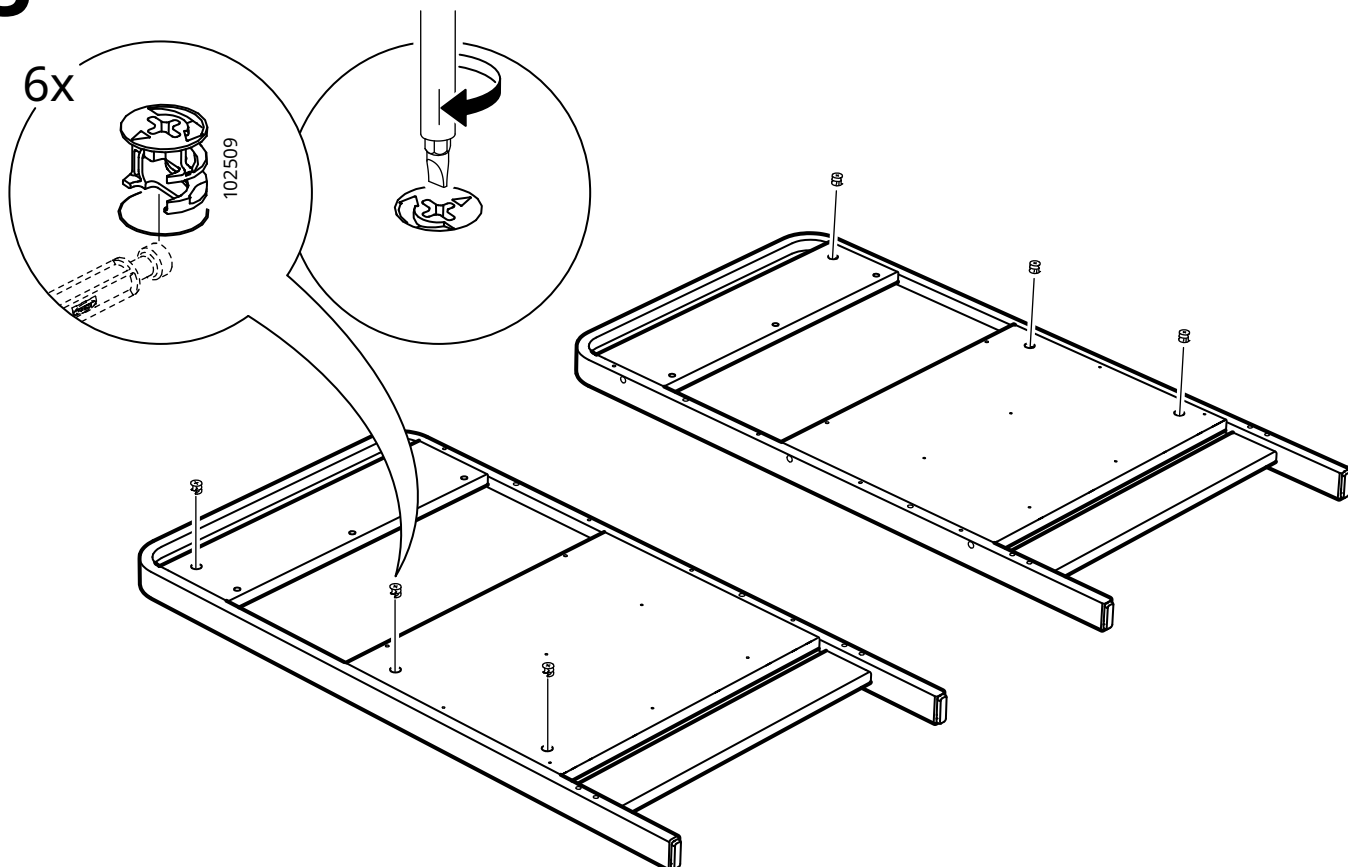 



6

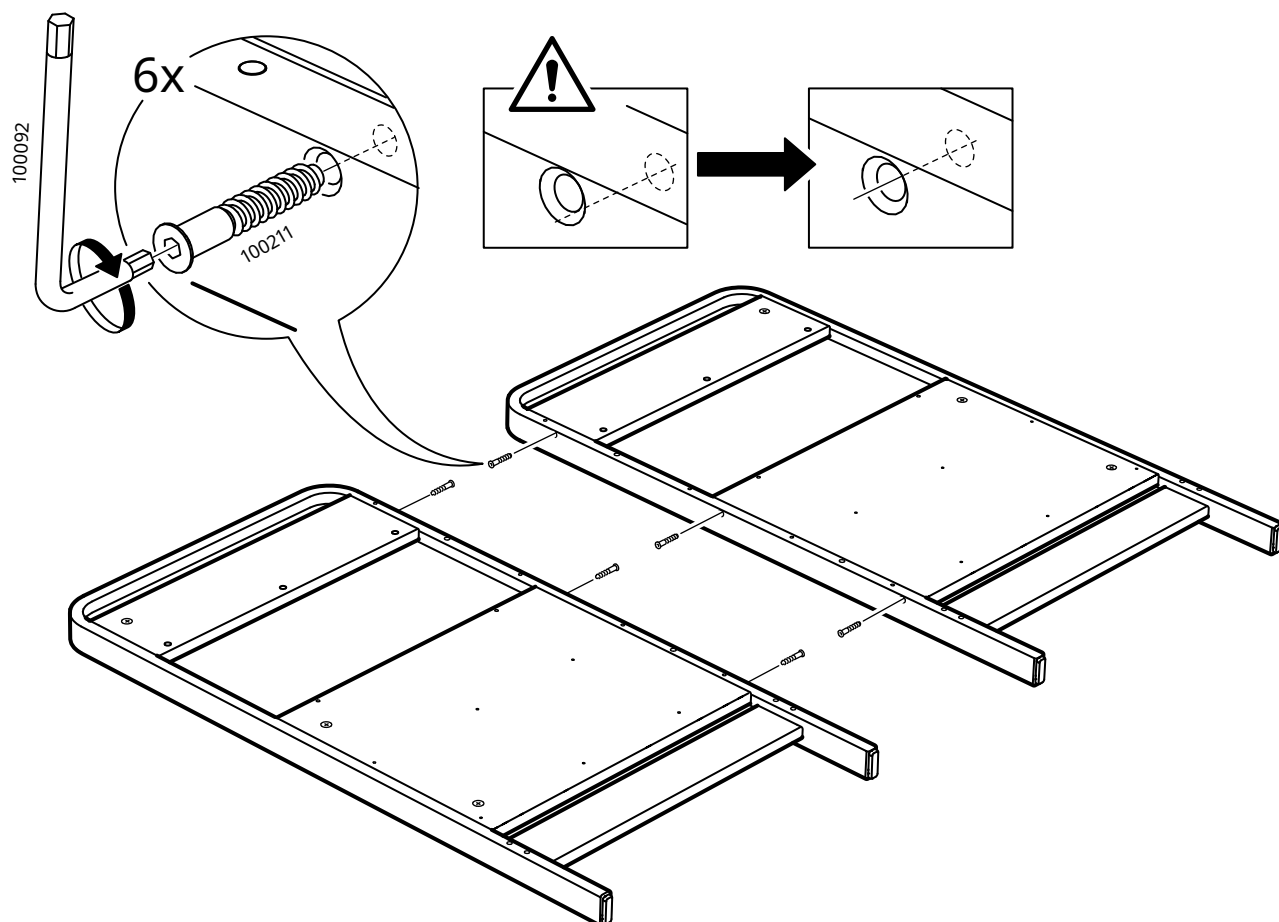 


7

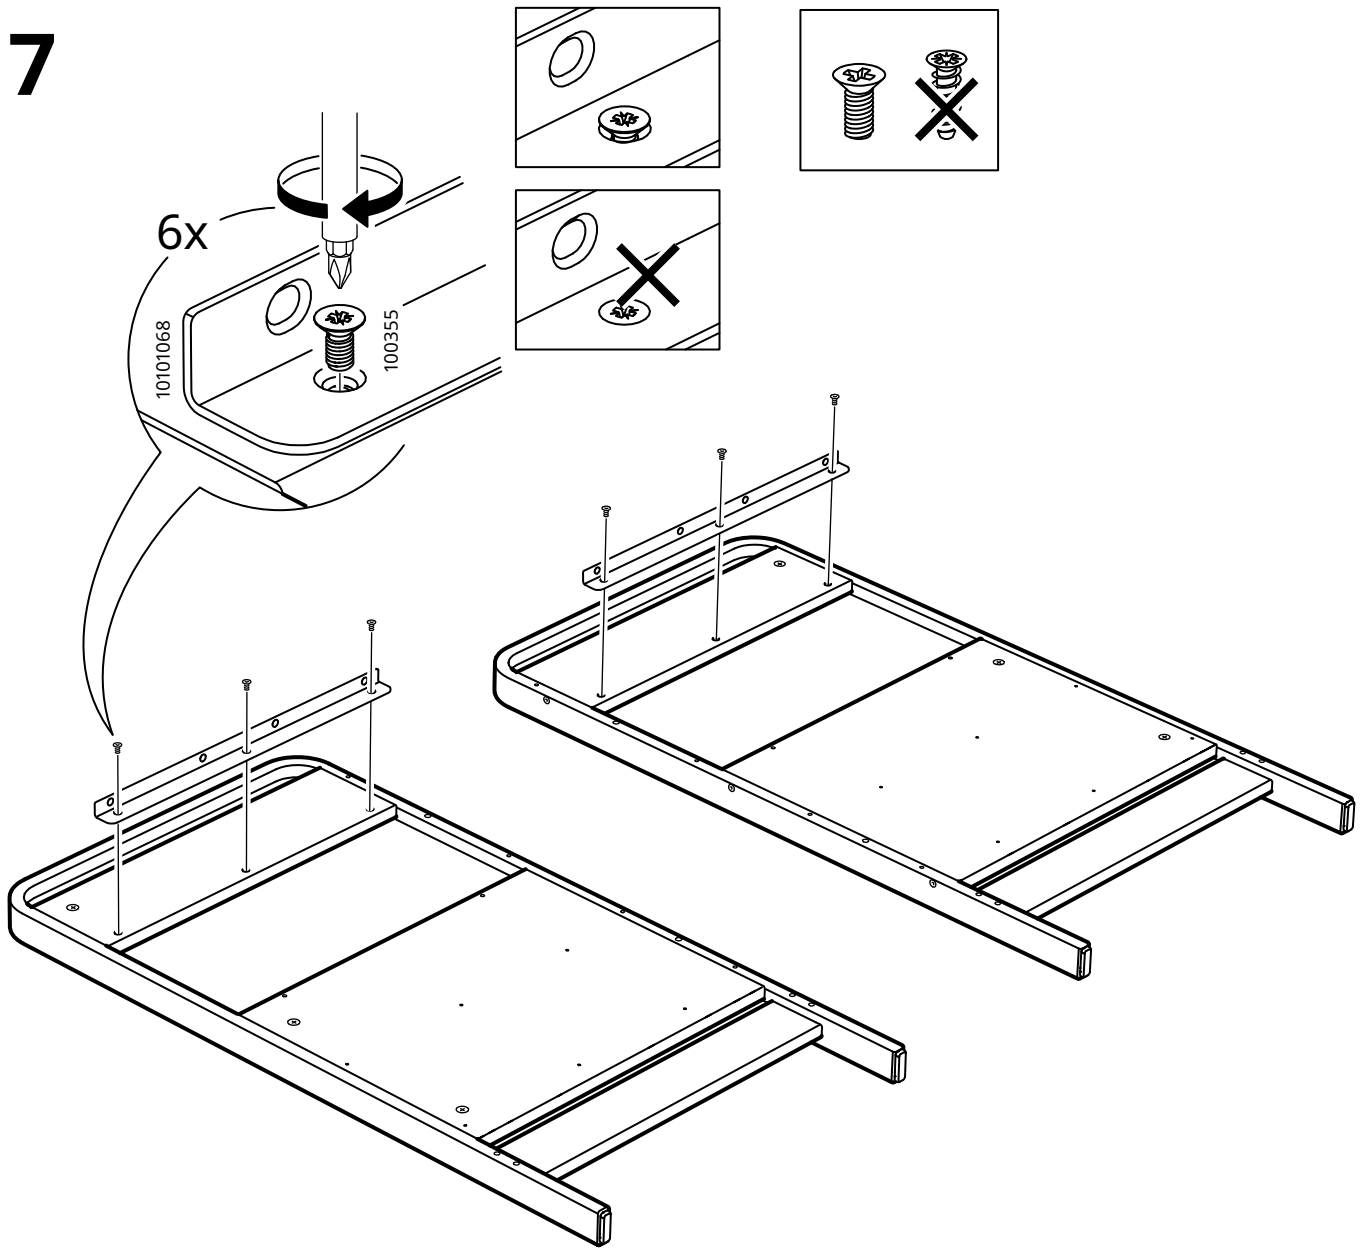 


8

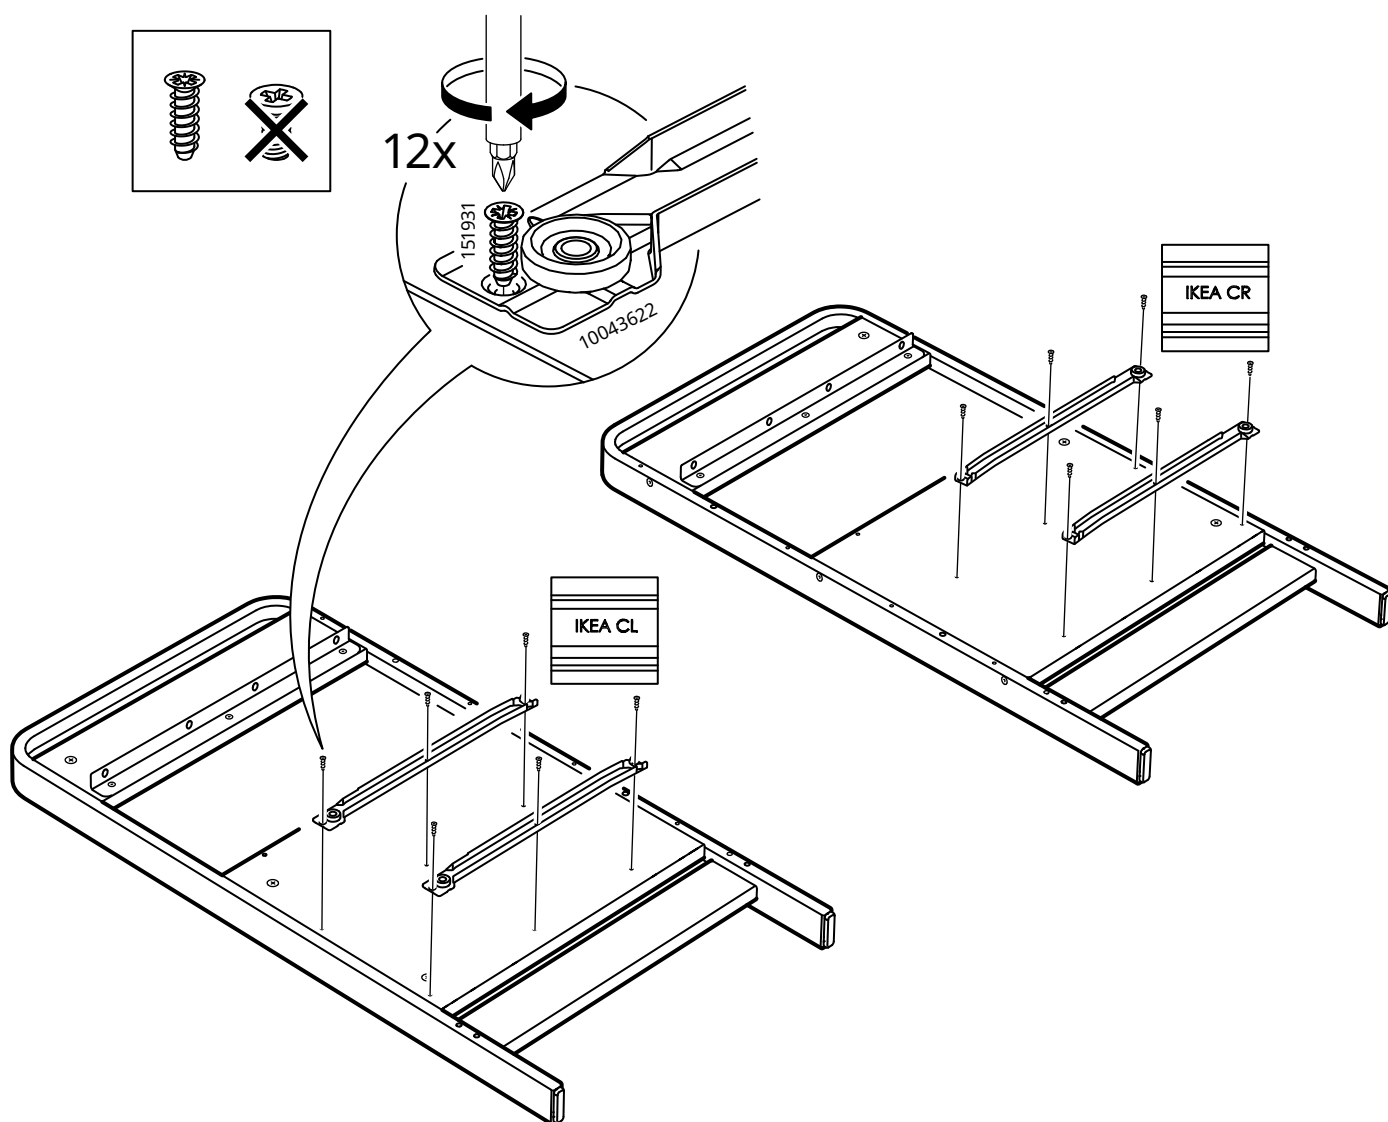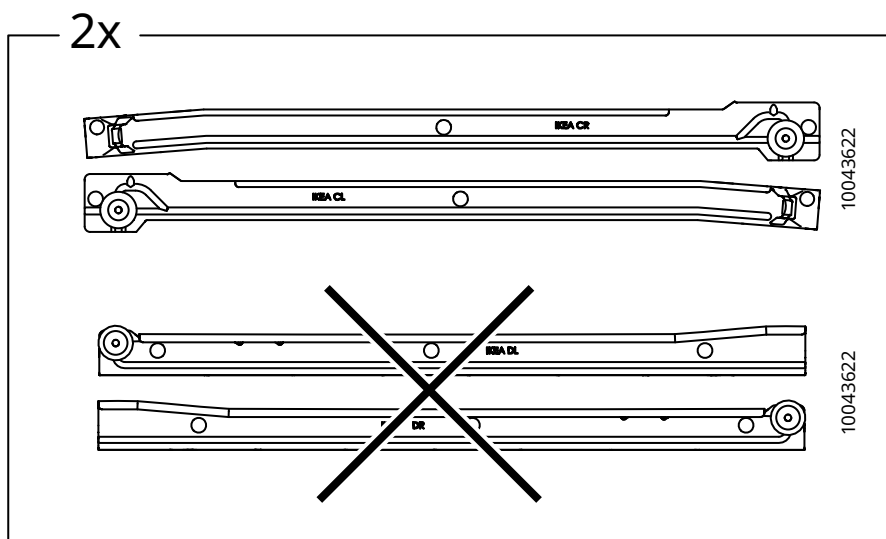  


9

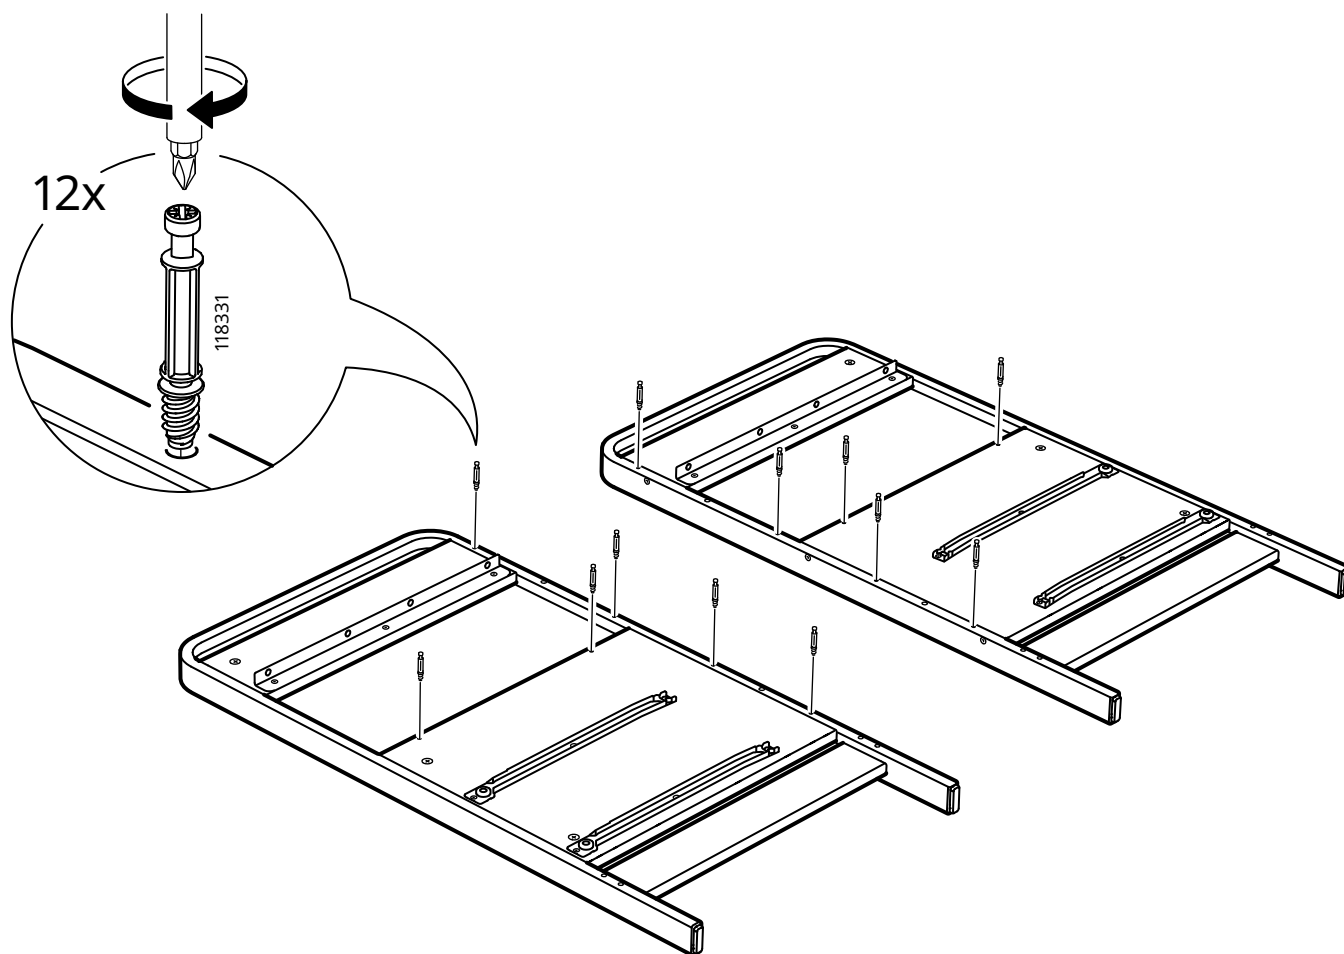 


10

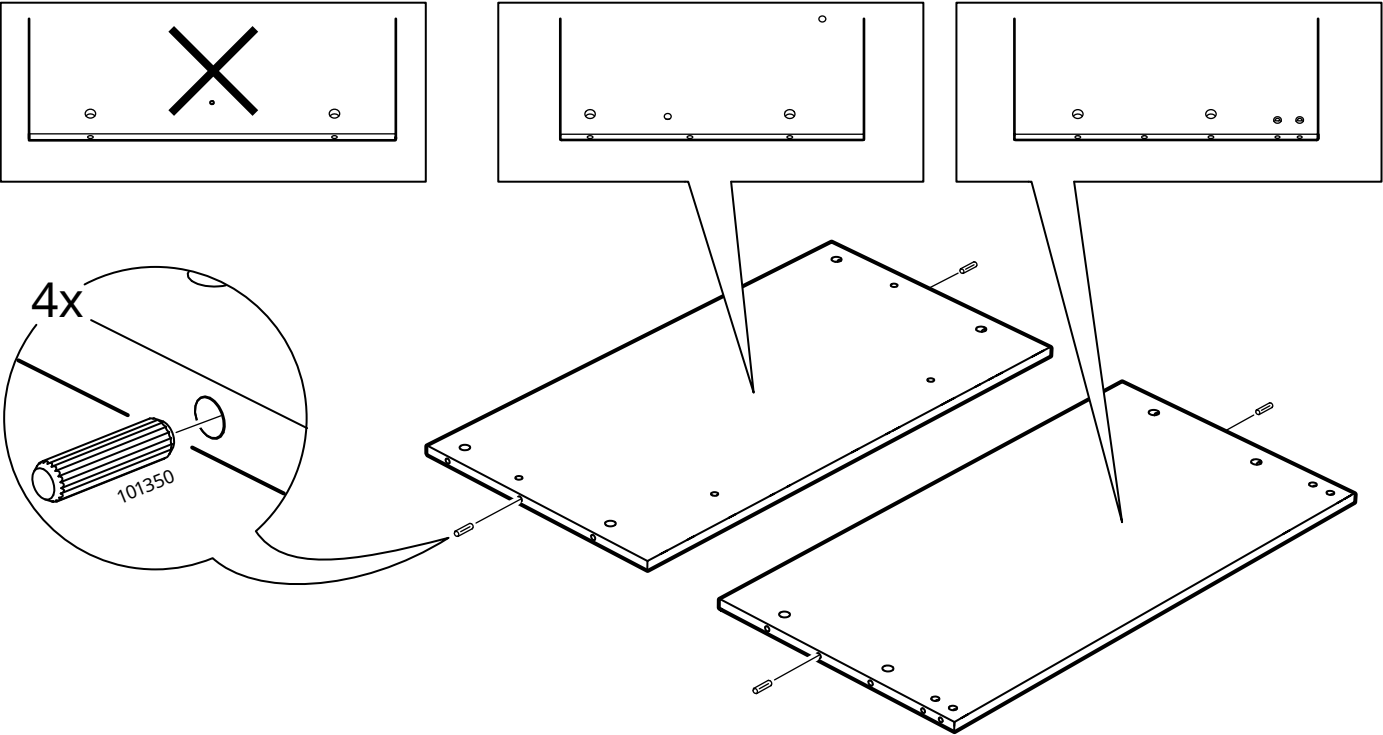 


11

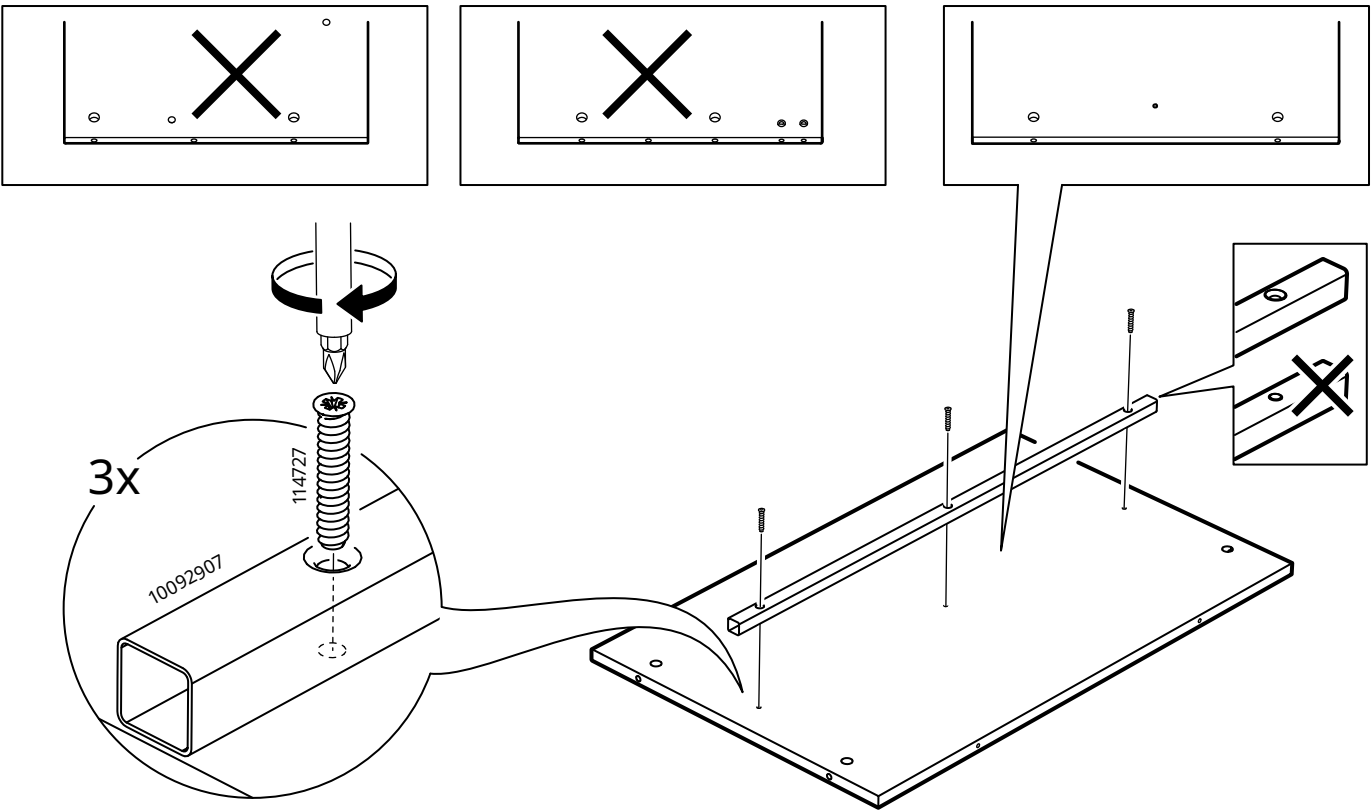 


12

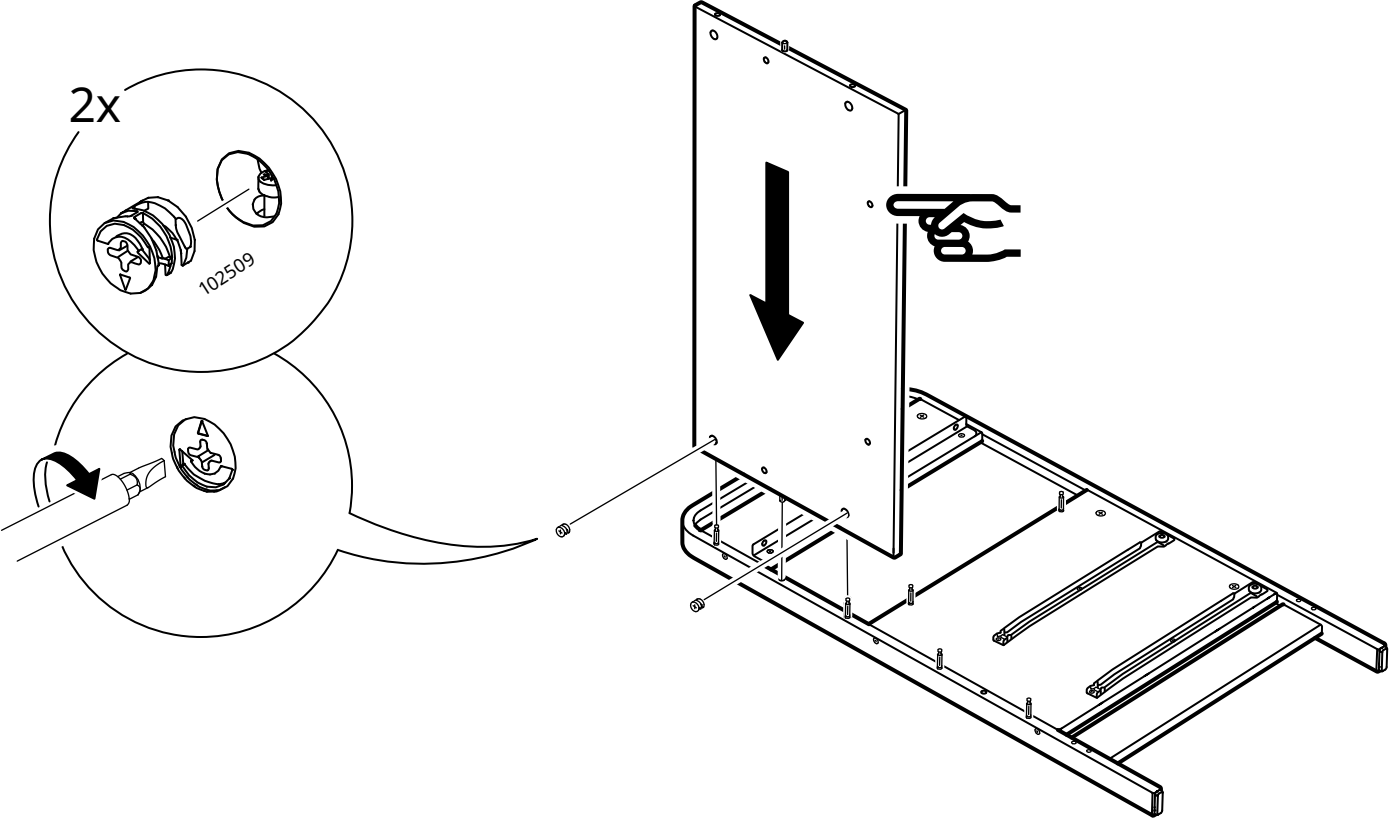 


13

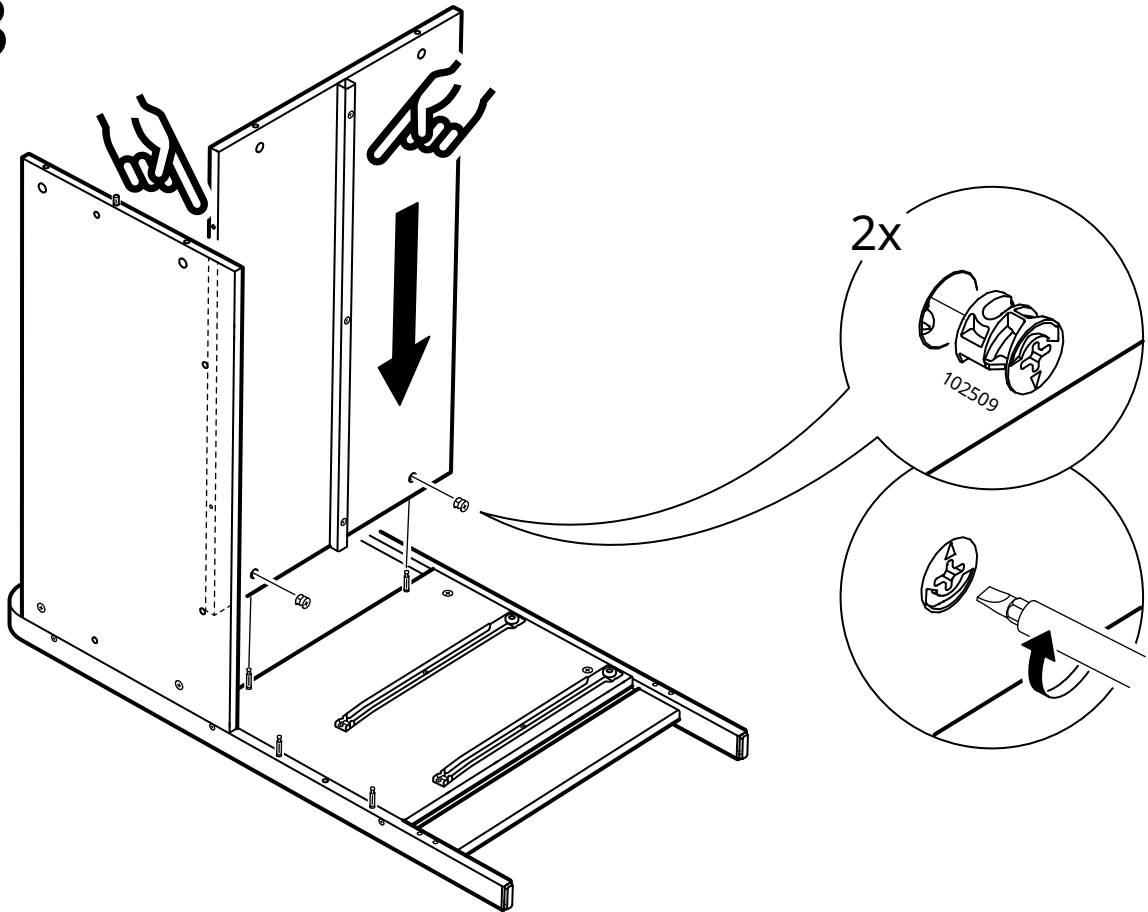 


14

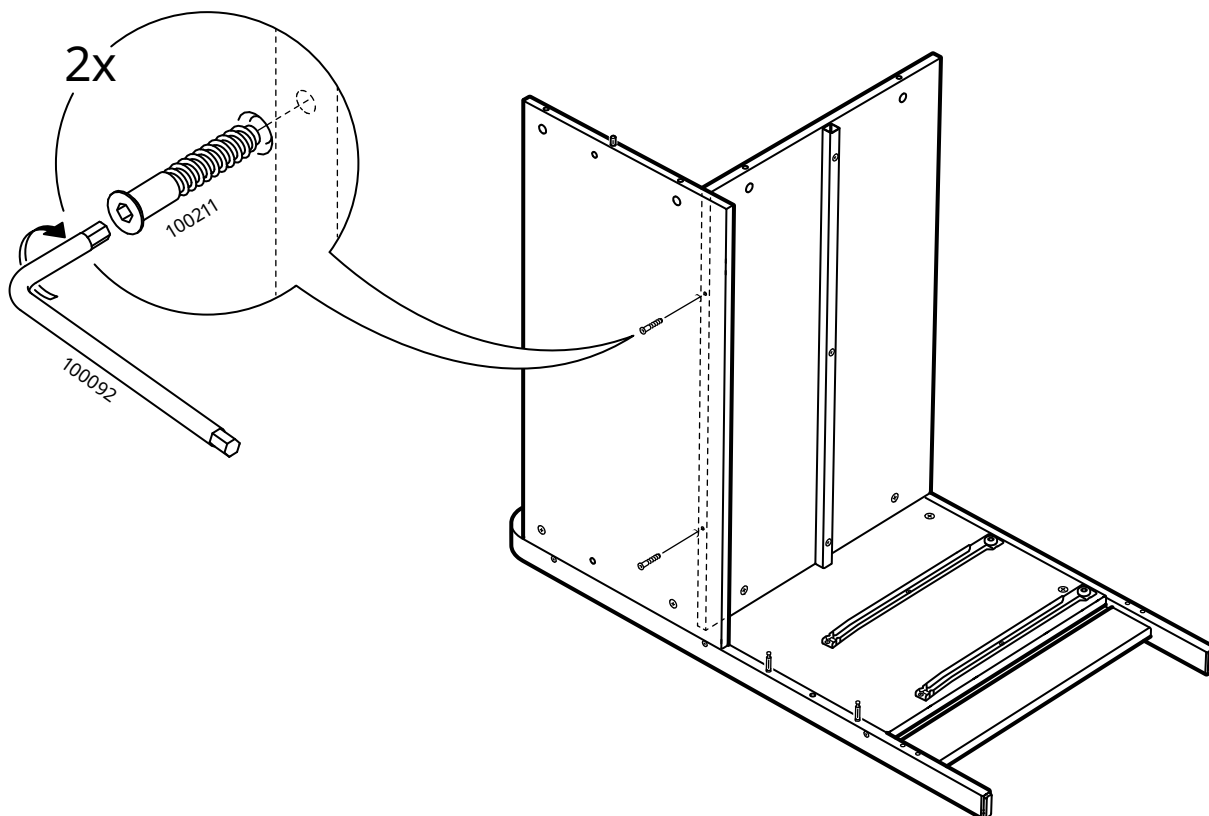 


15


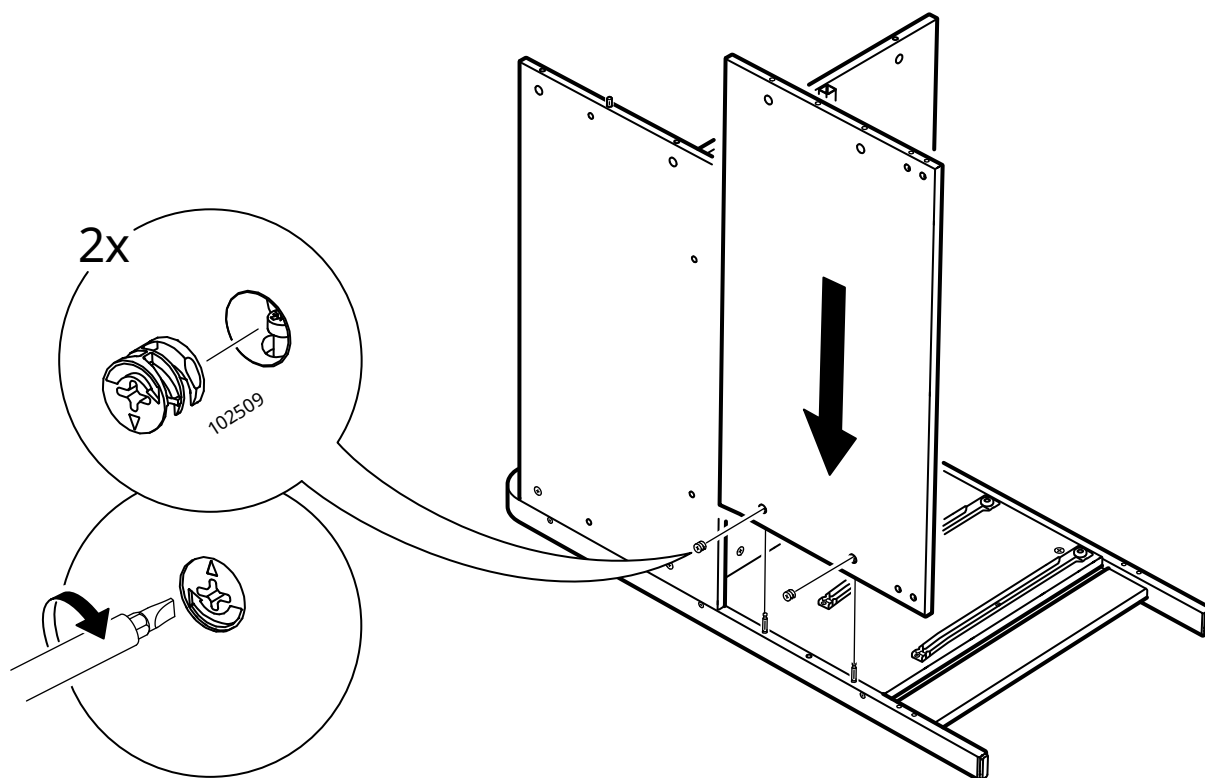 


16


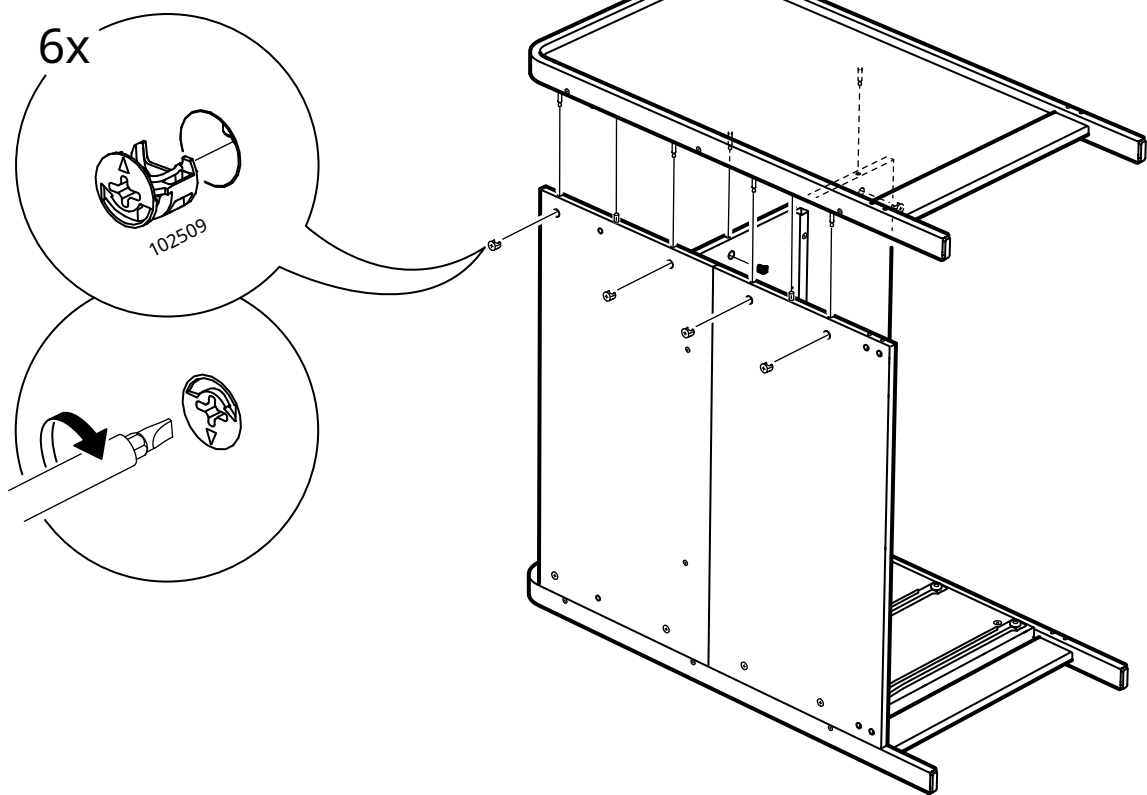 



17

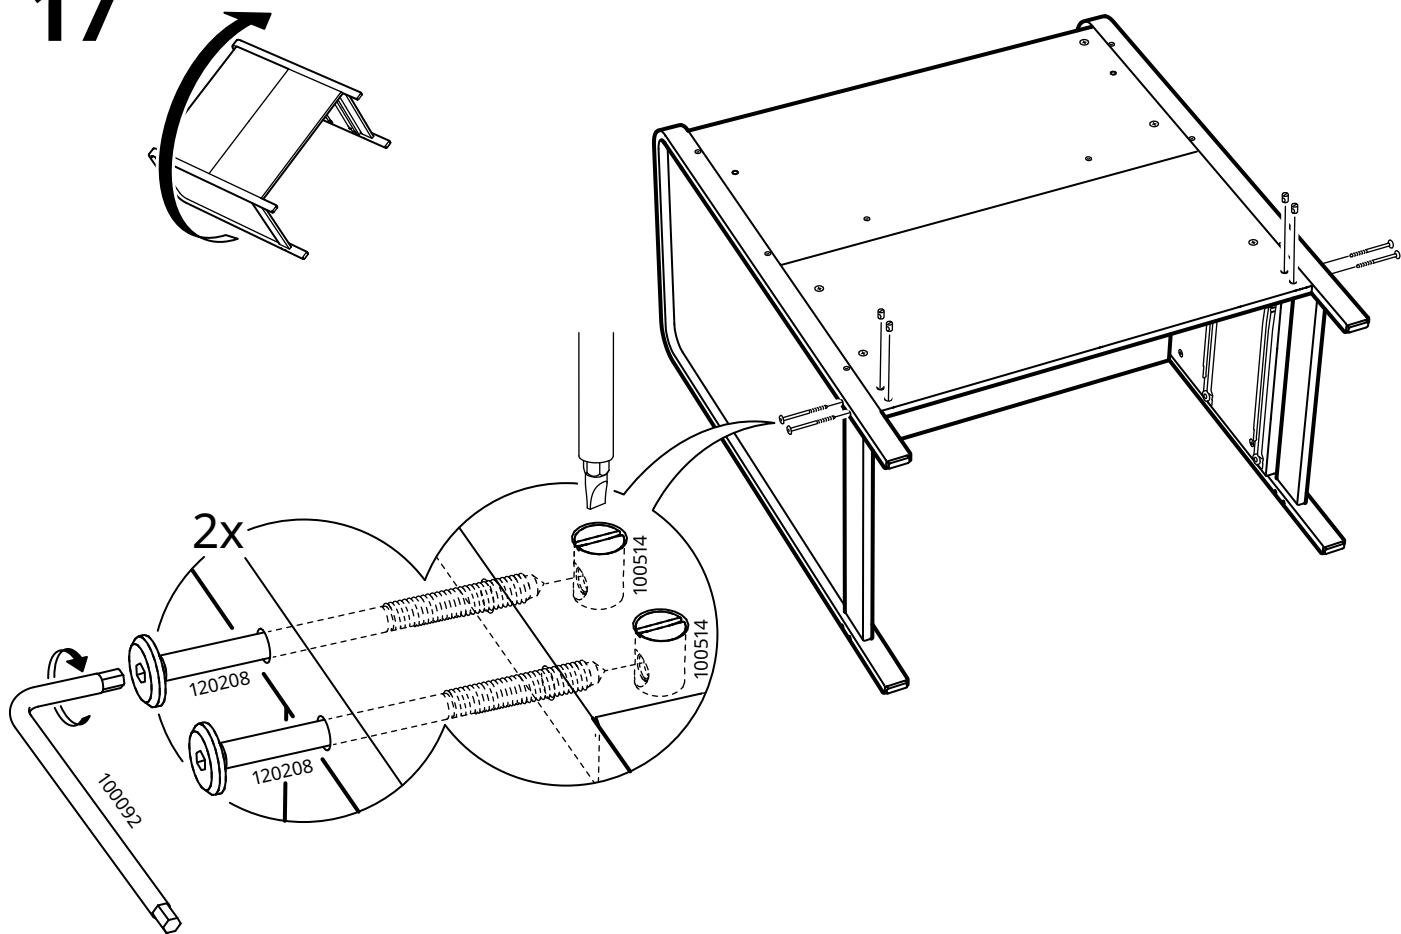 

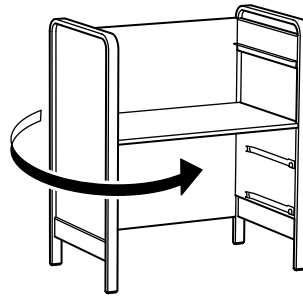 
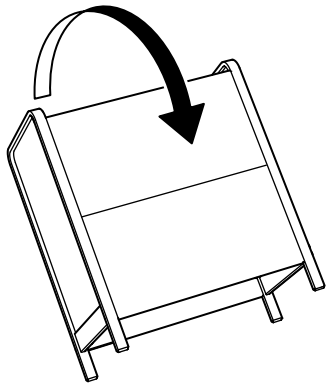 


18

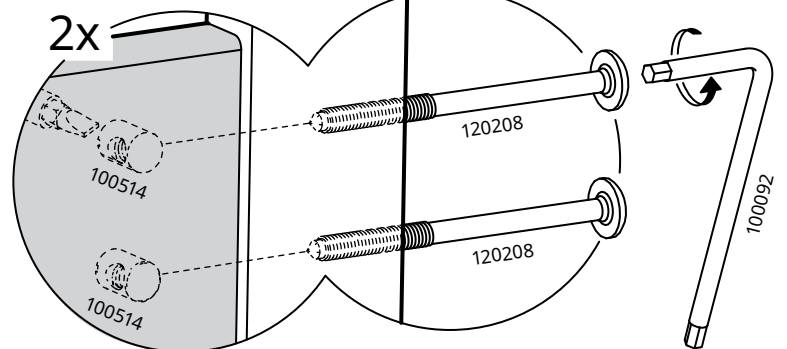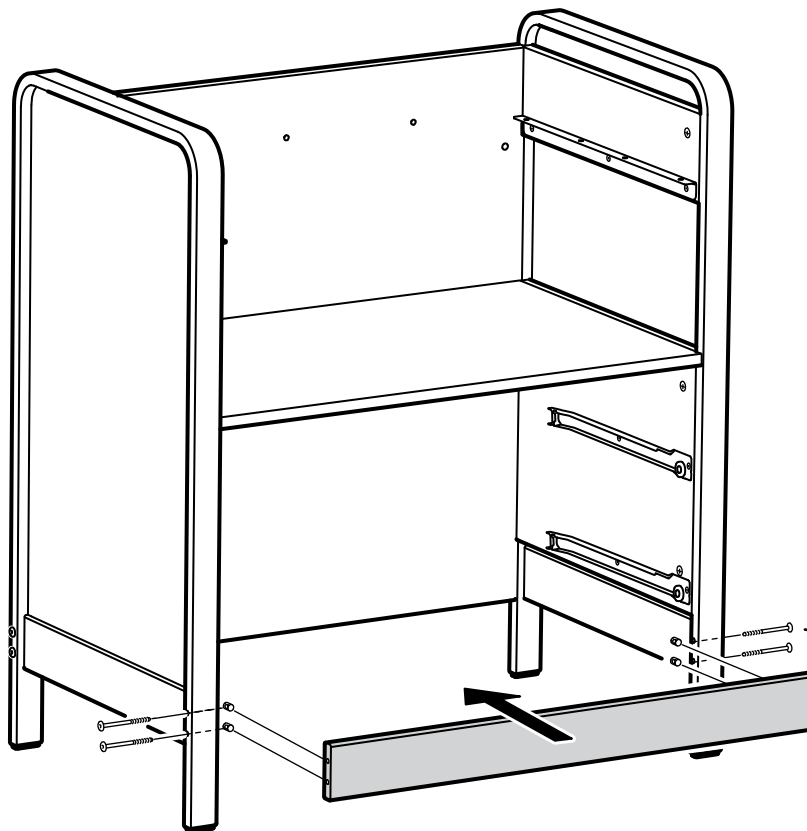  


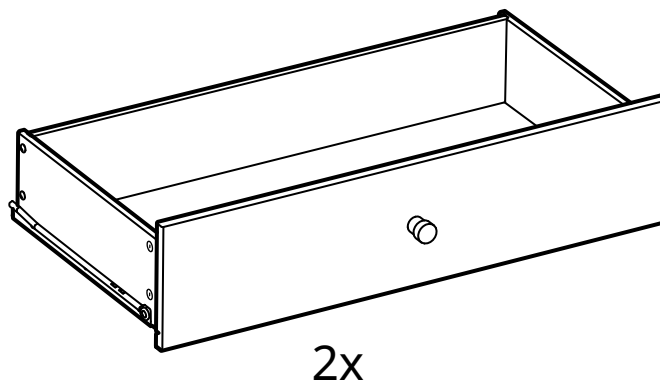 


19

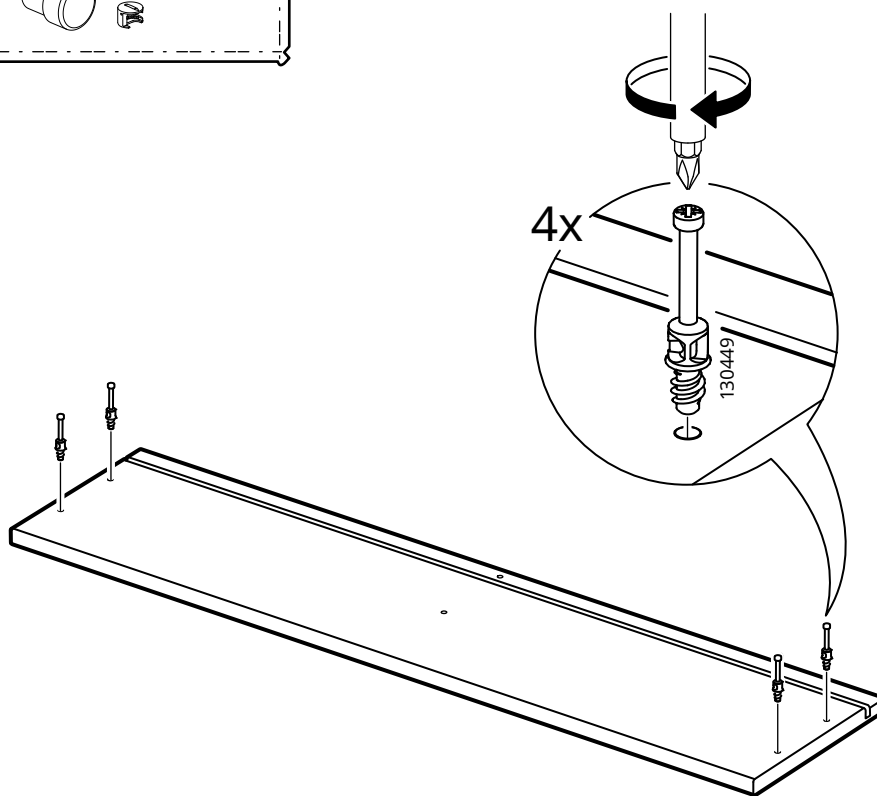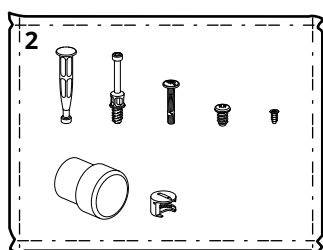  


20

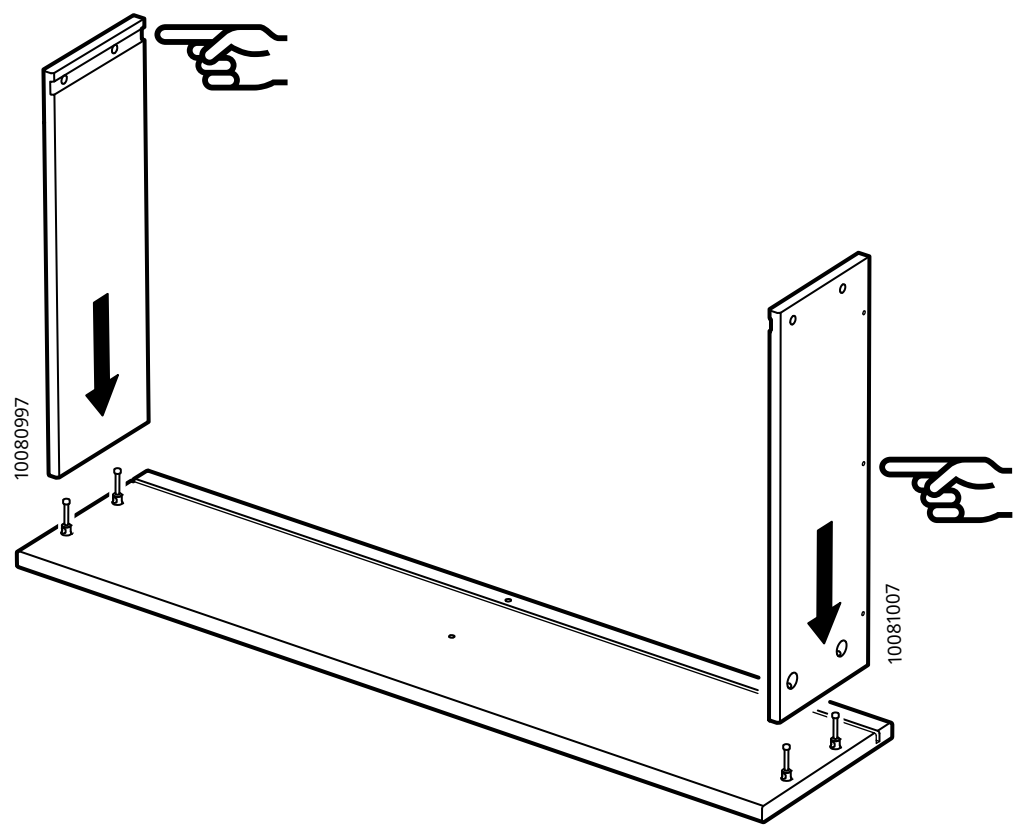 


21

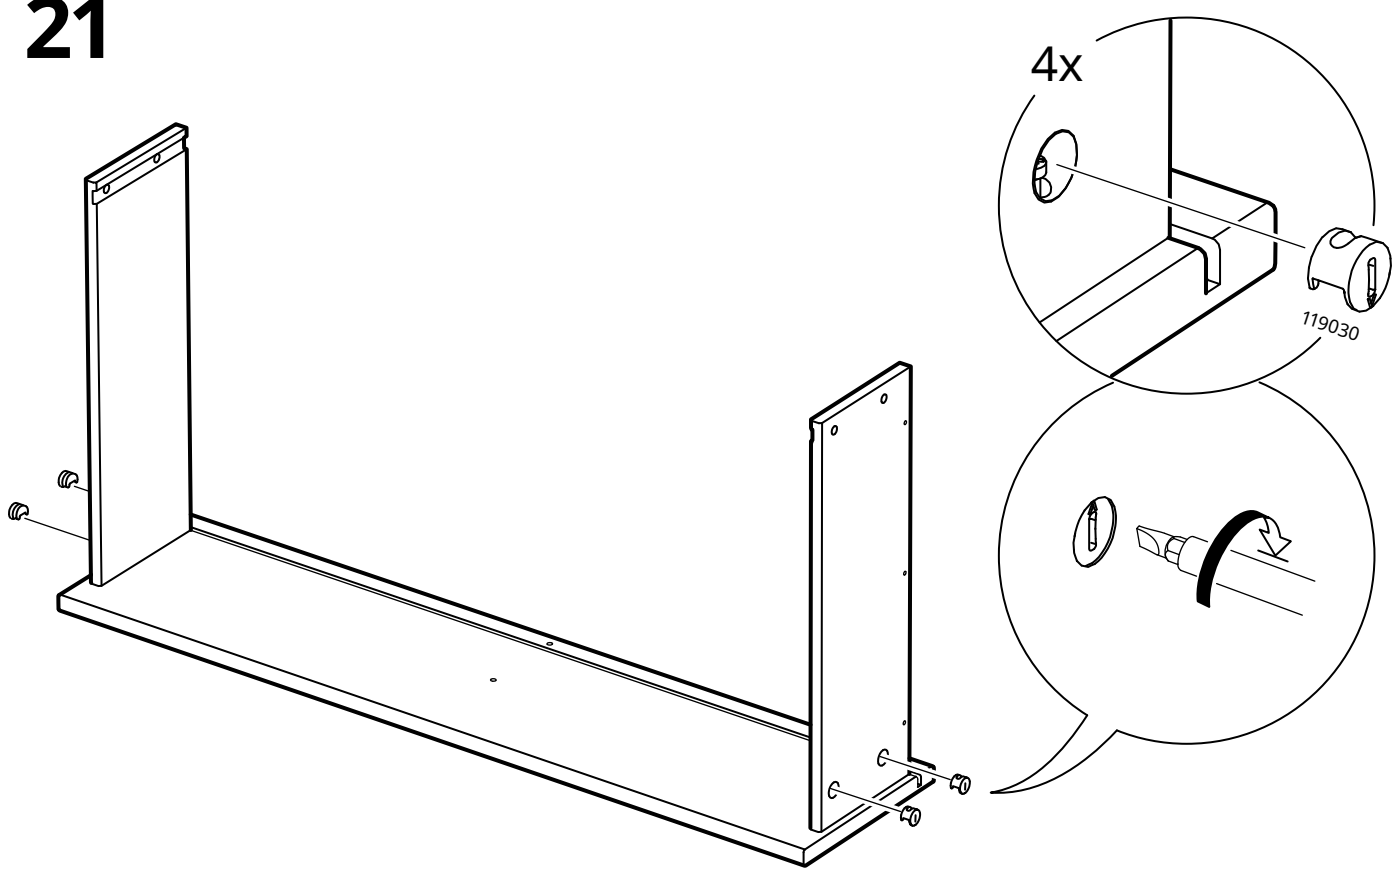 


22

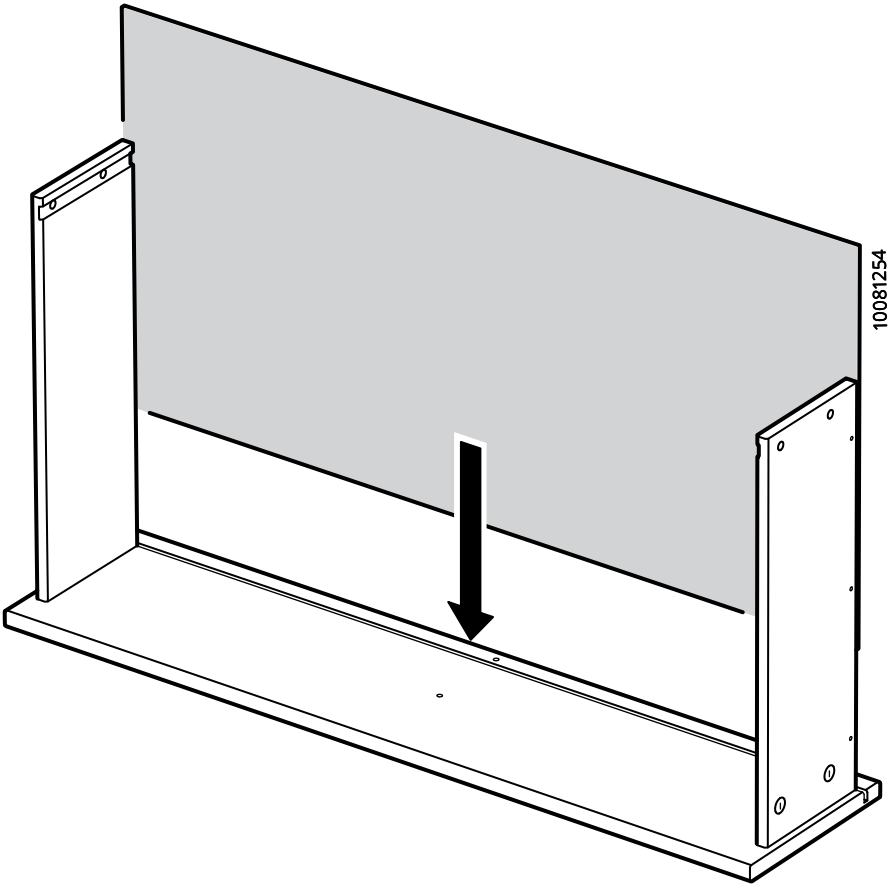 


23

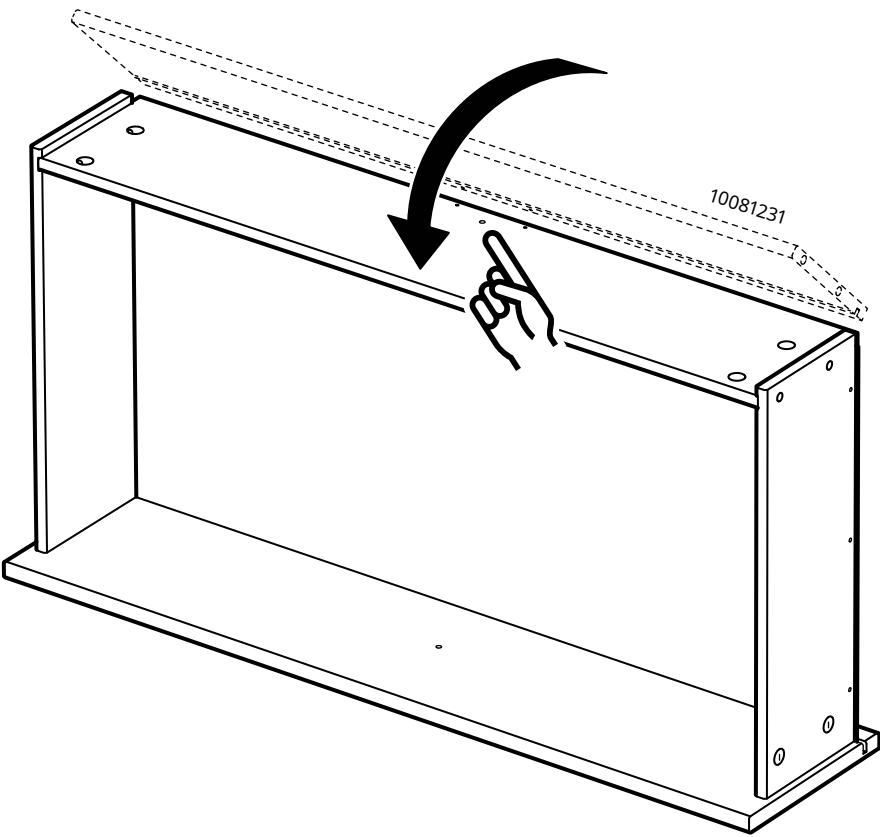 


24

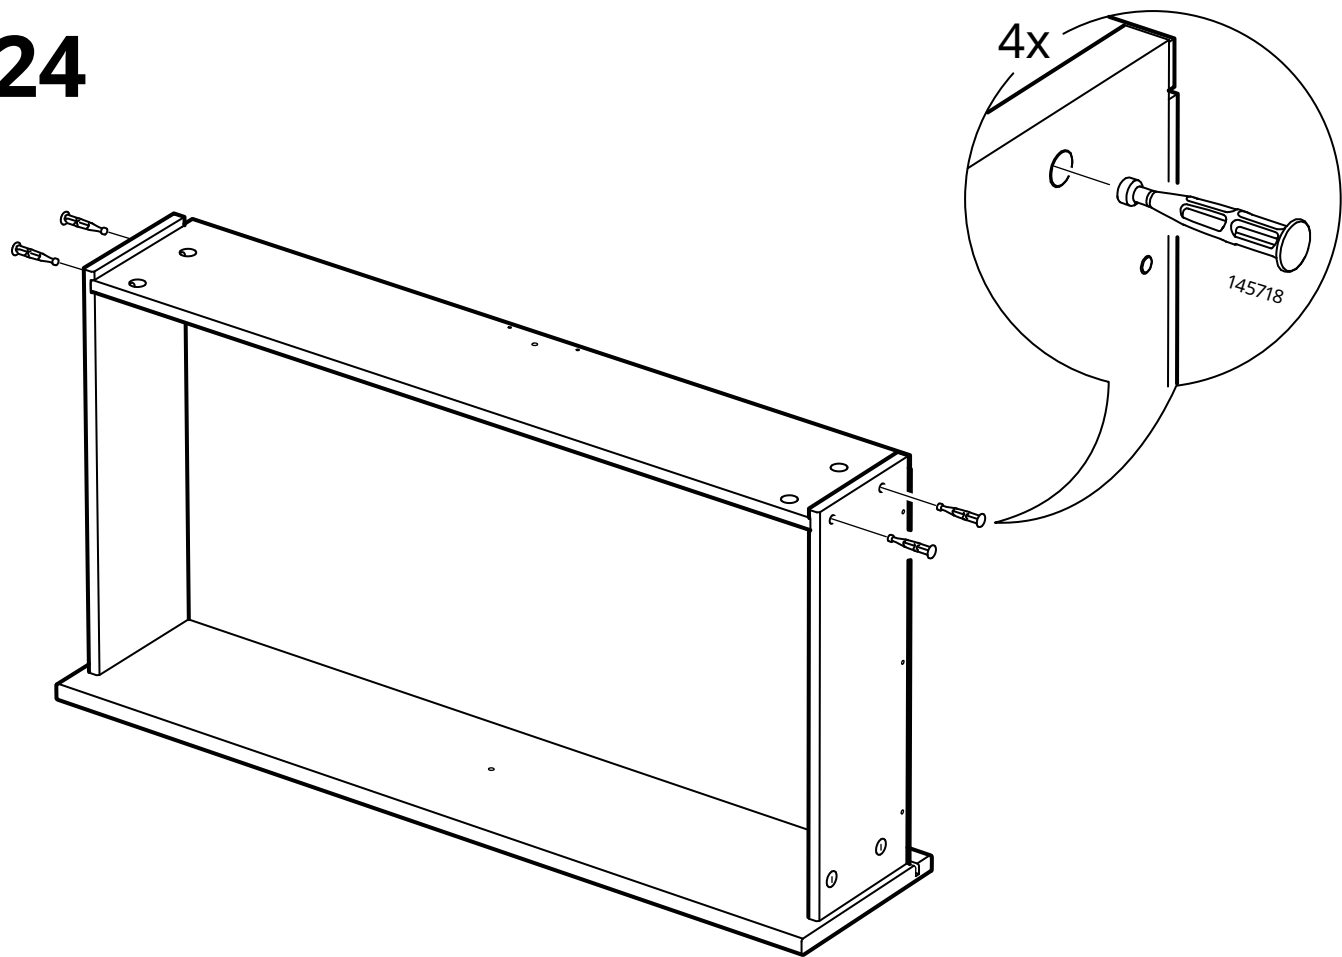 


25

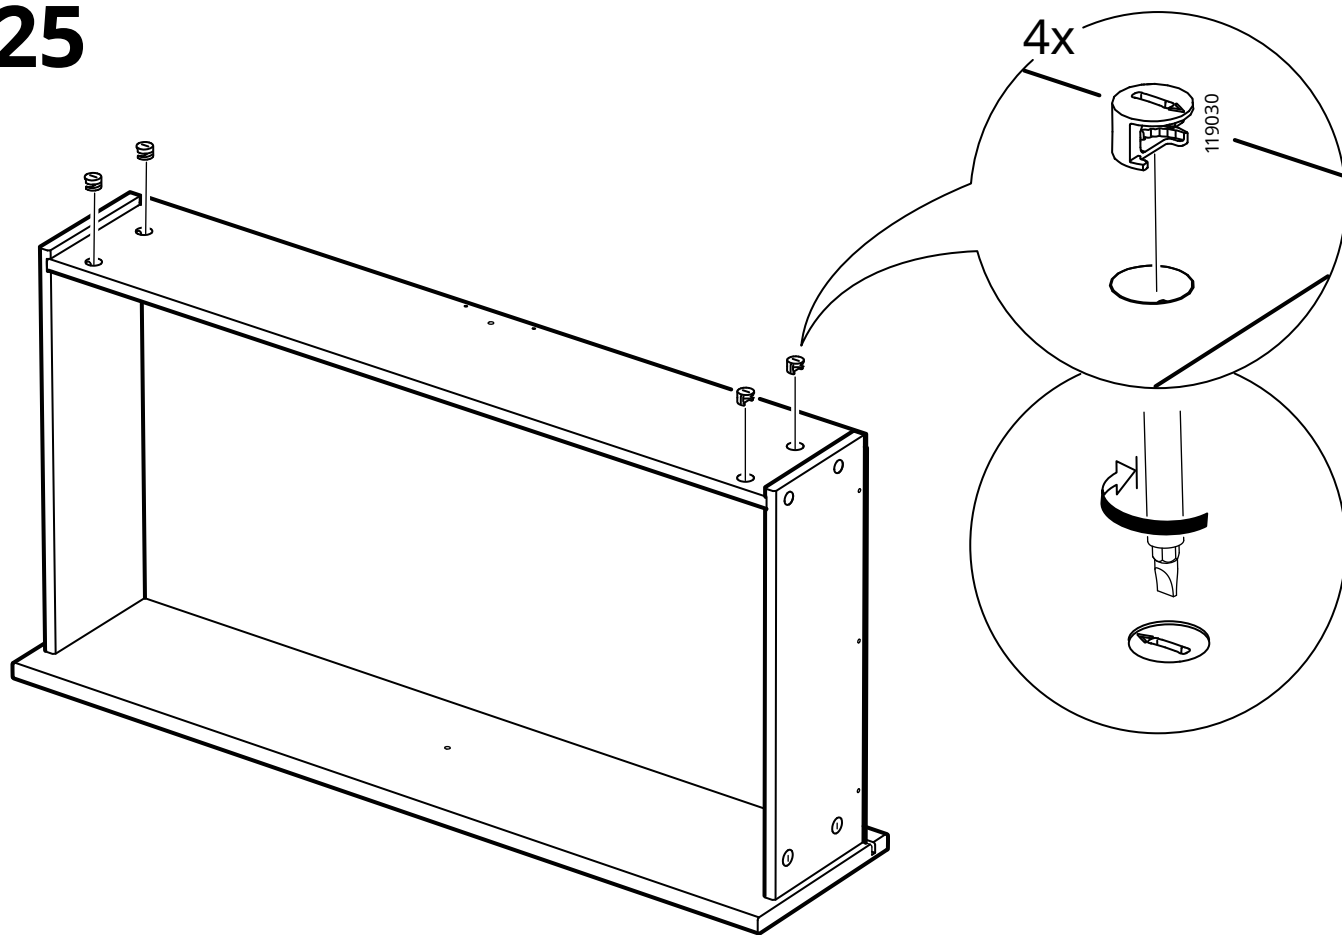 


28

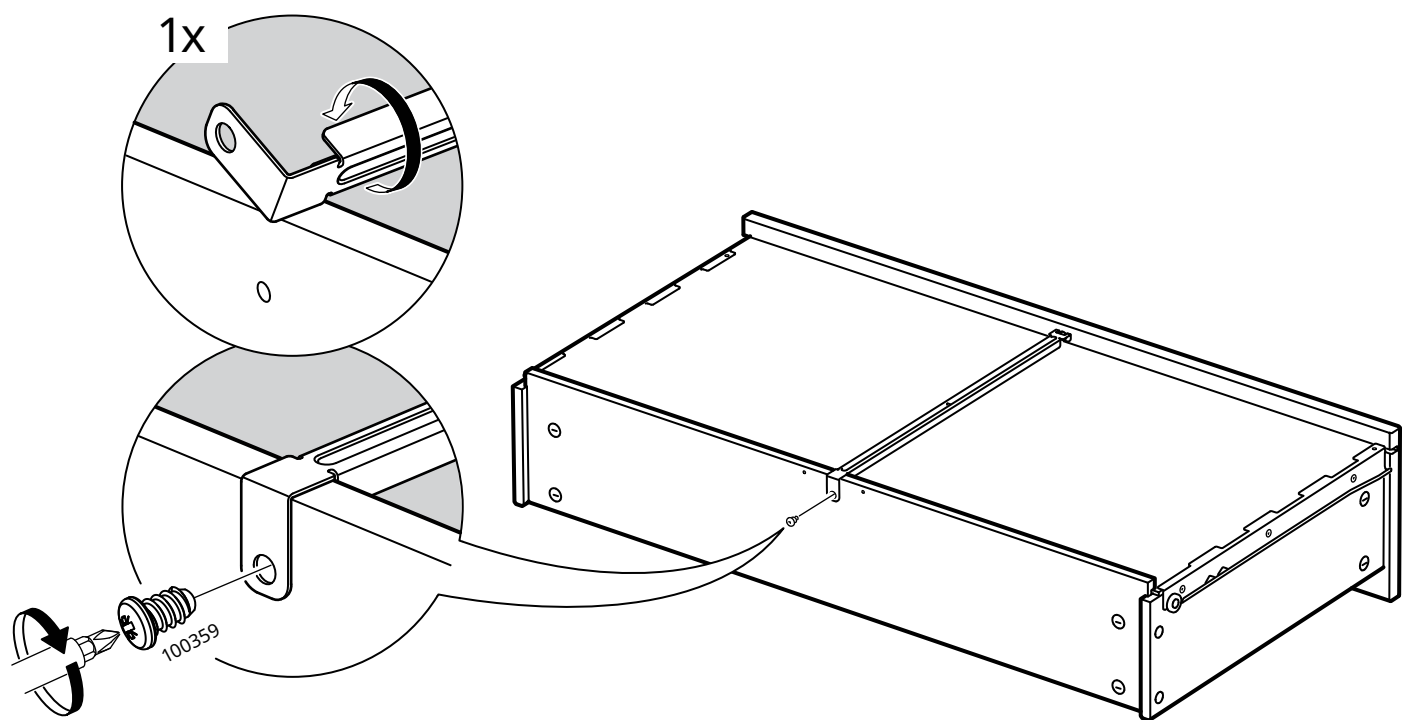 


29

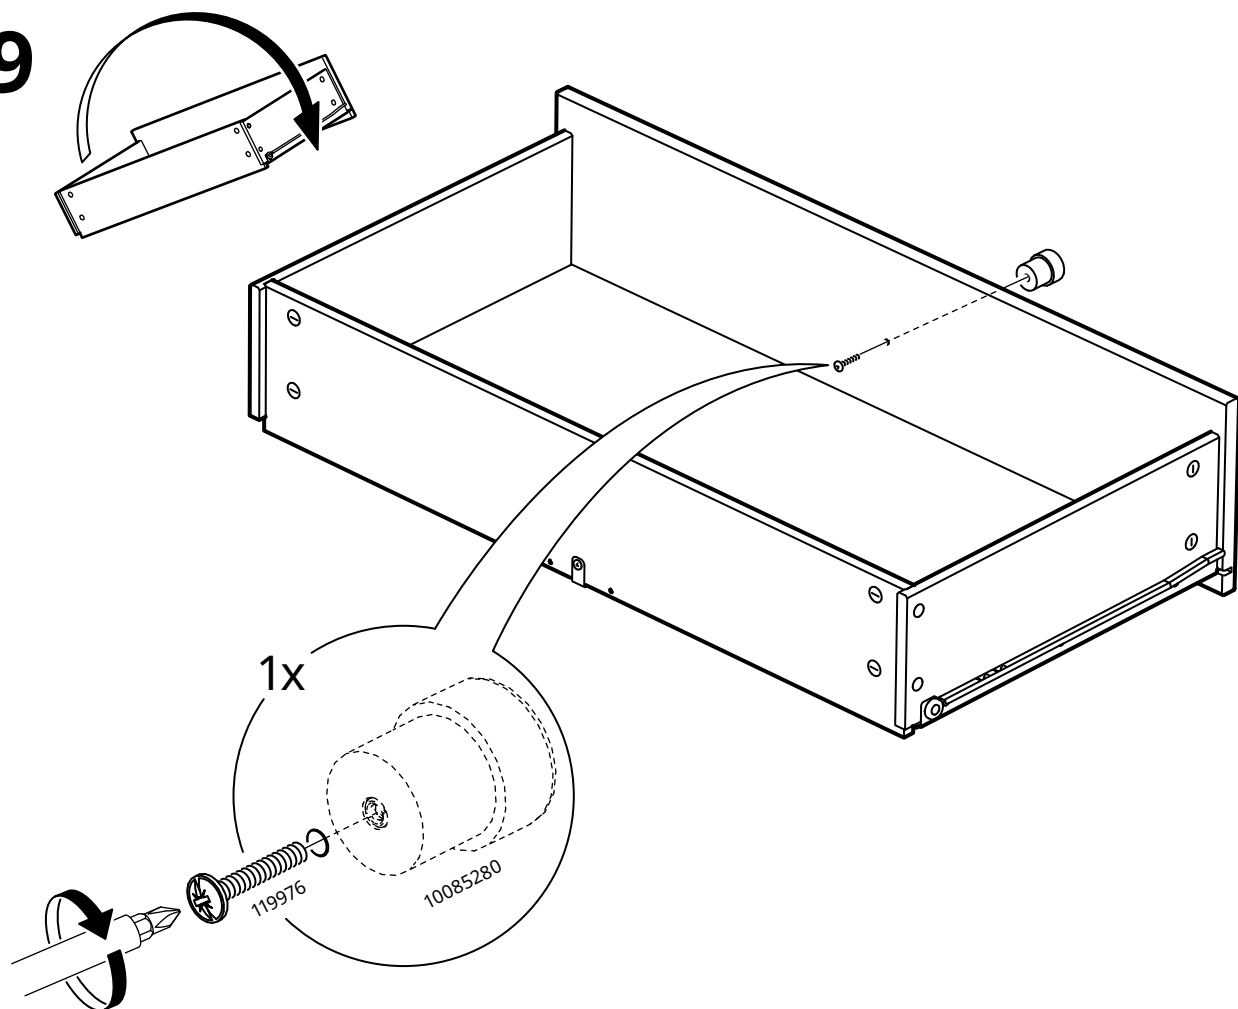 


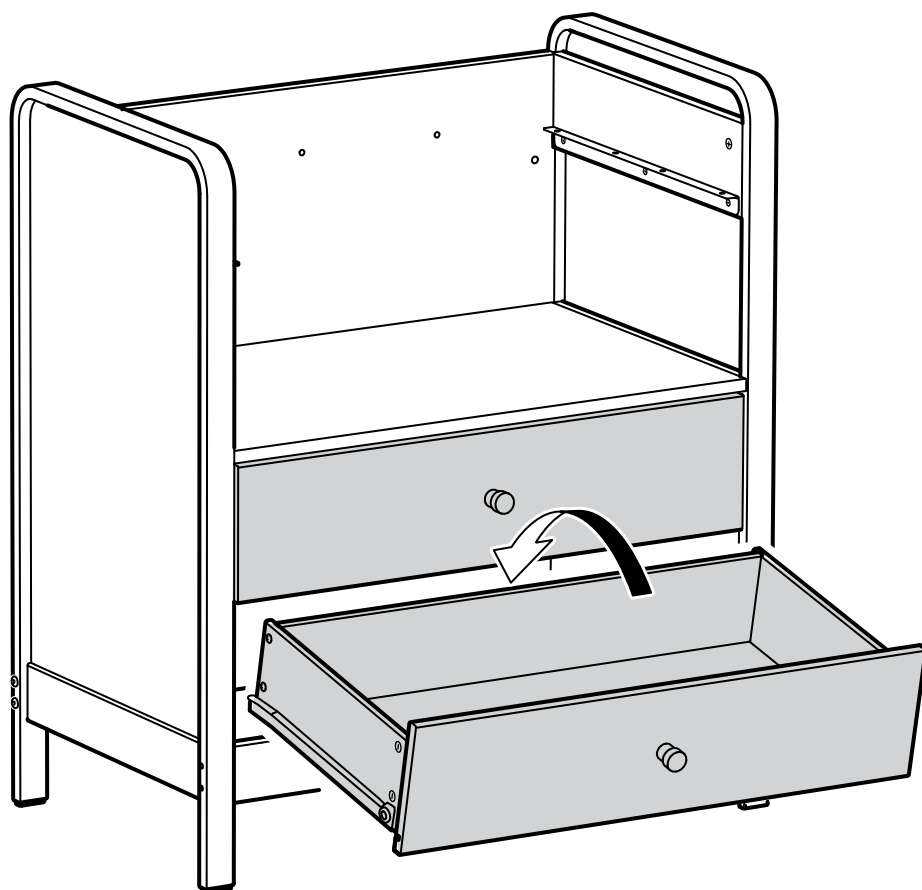 

31

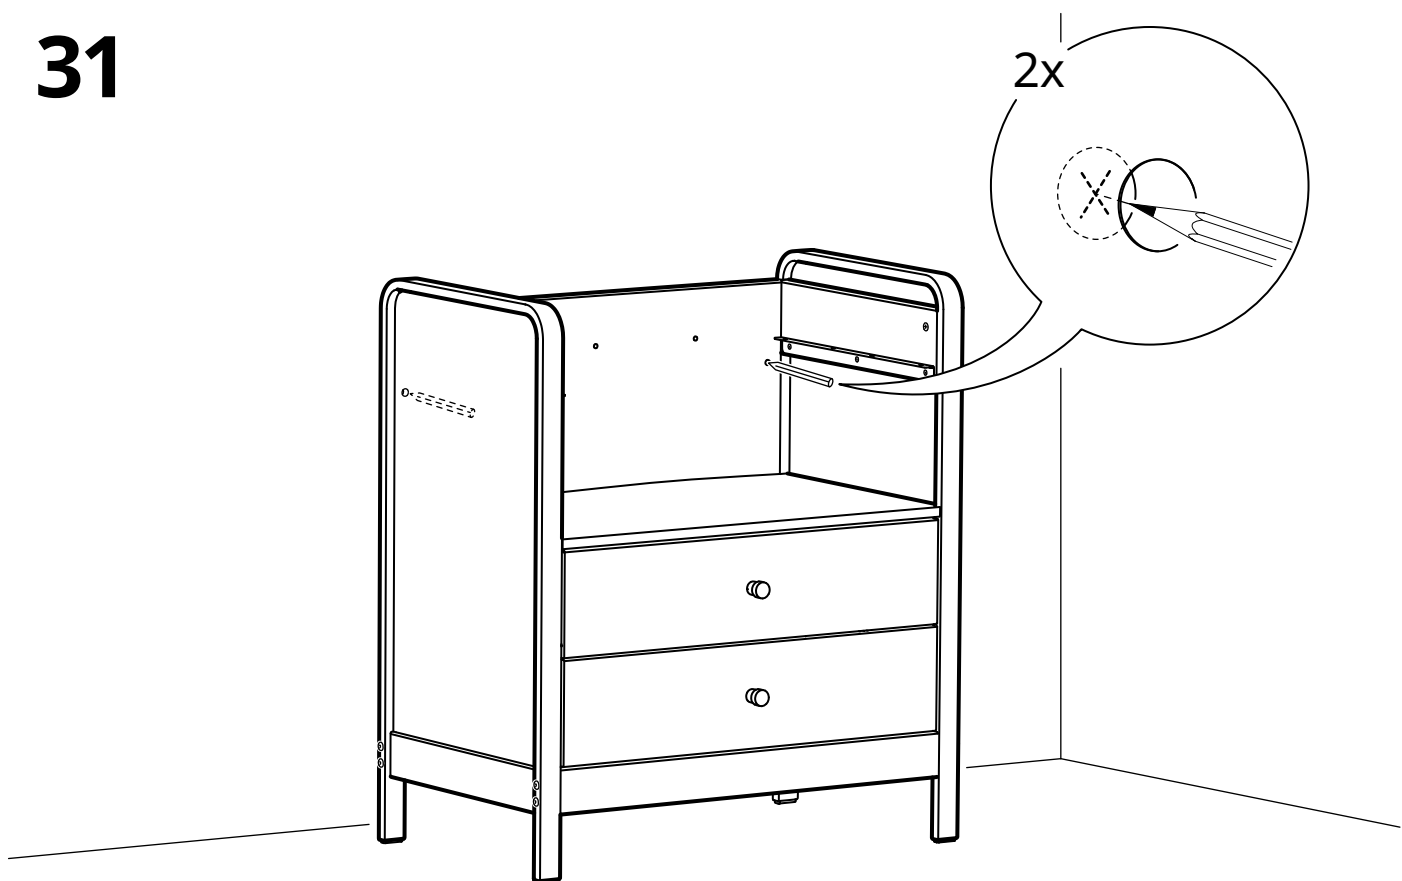 

32

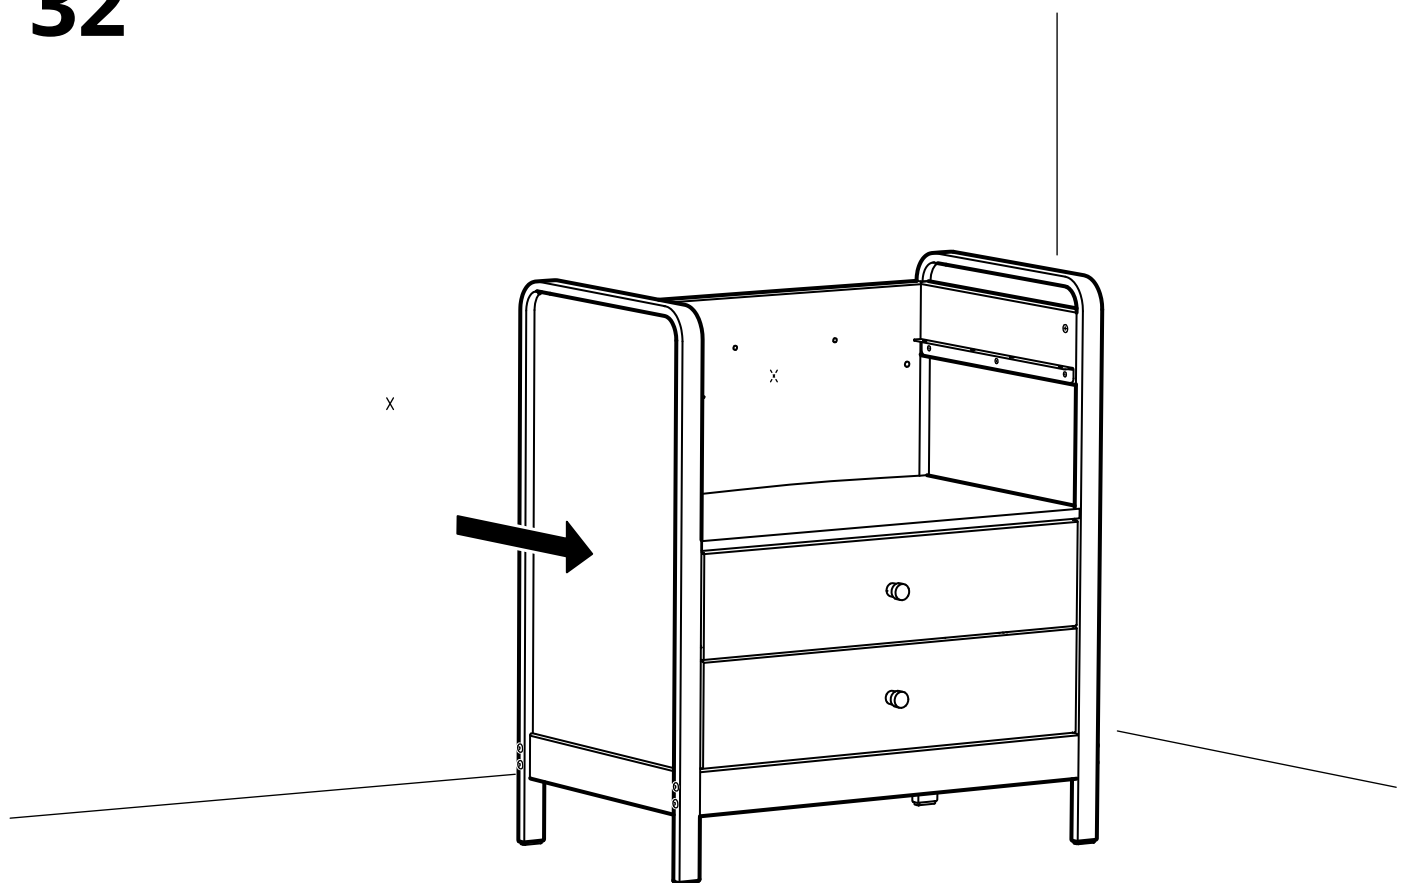 




www.IKEA.com/secure-it











 
www.IKEA.cn/secure-it

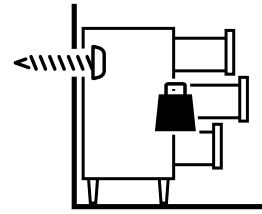


English

          
The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

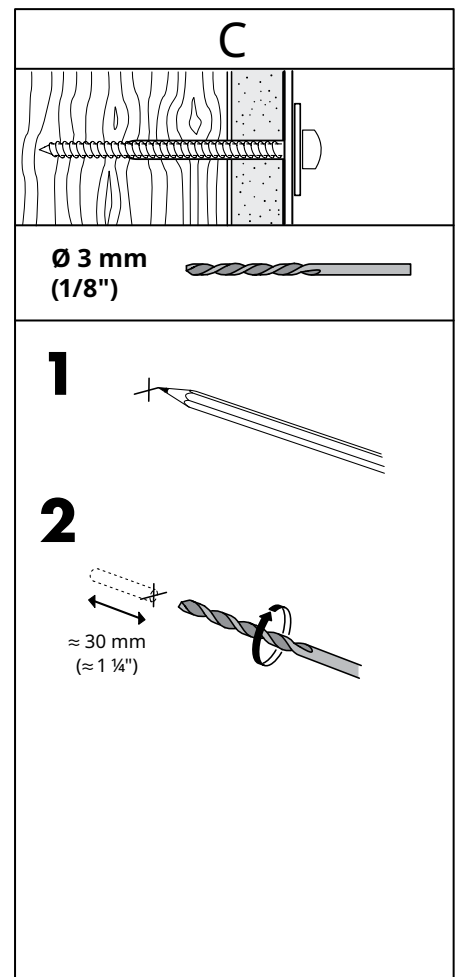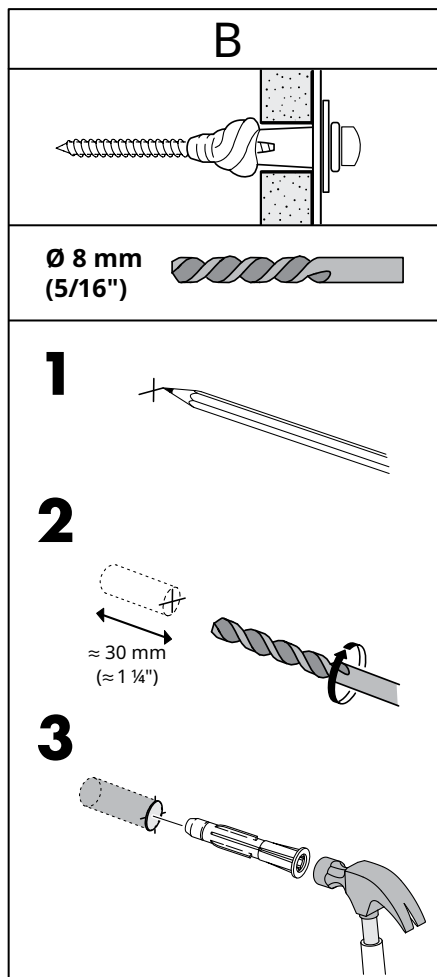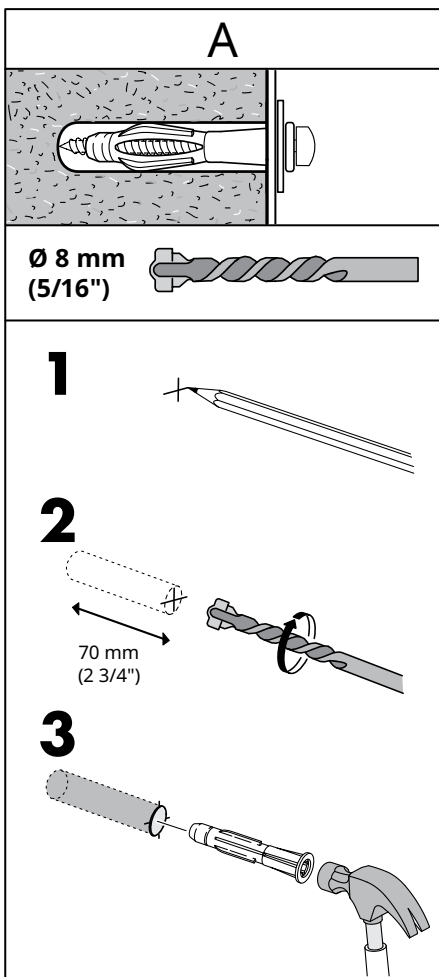


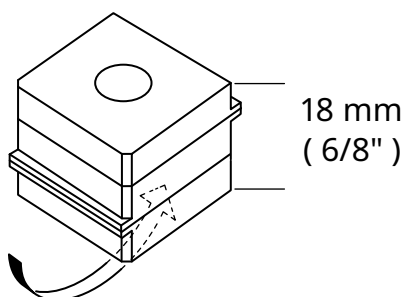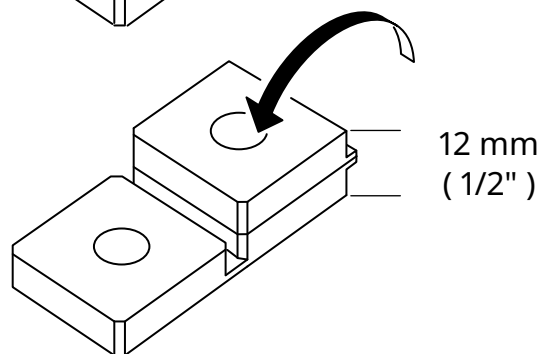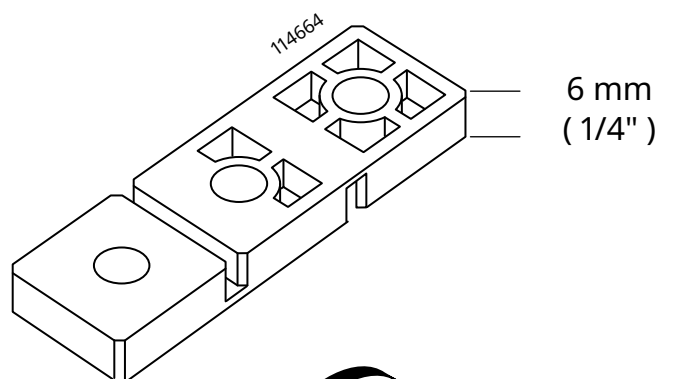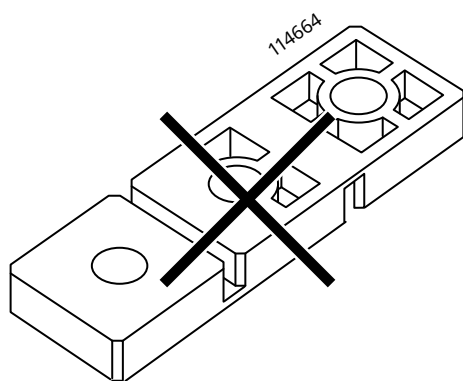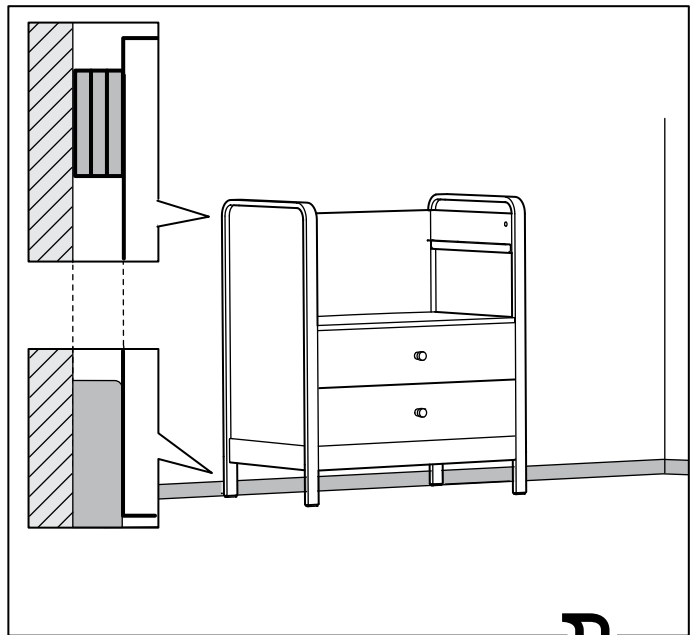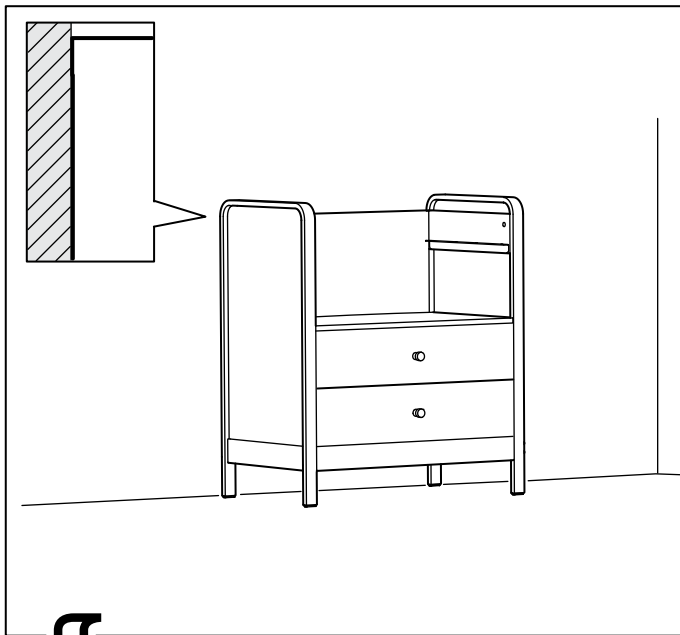

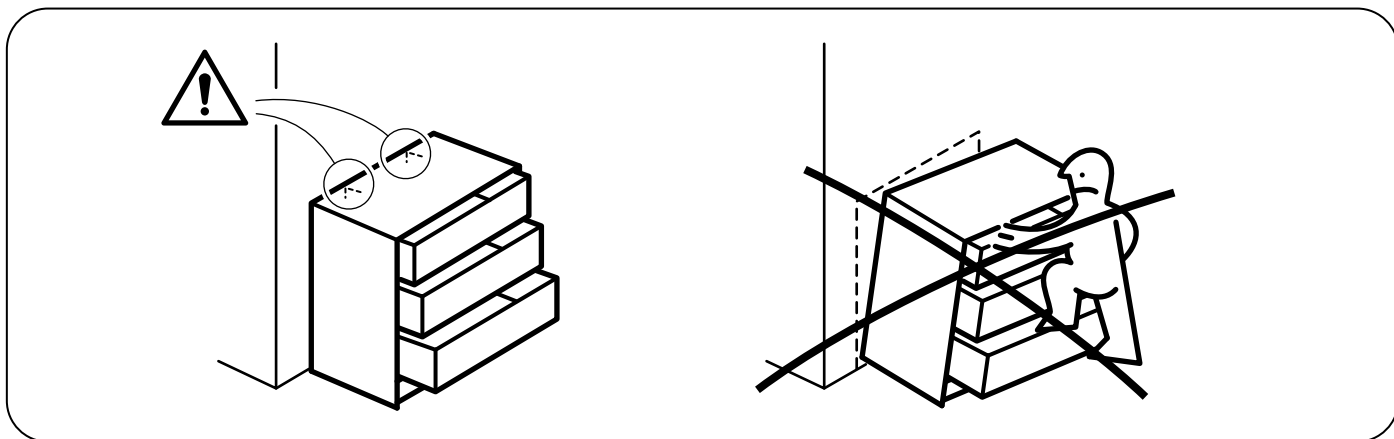


34

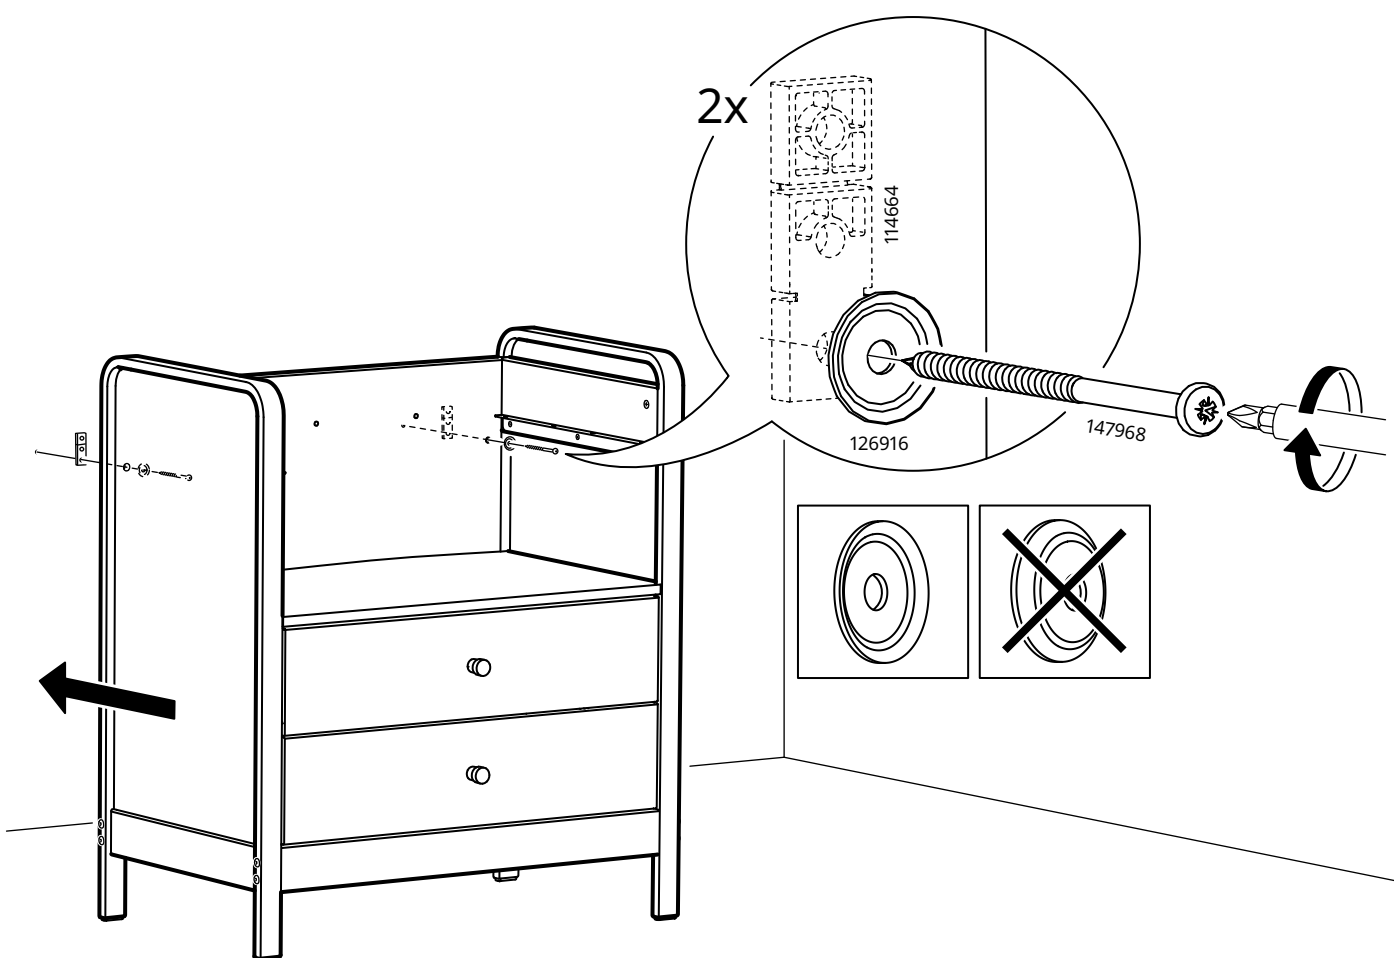 


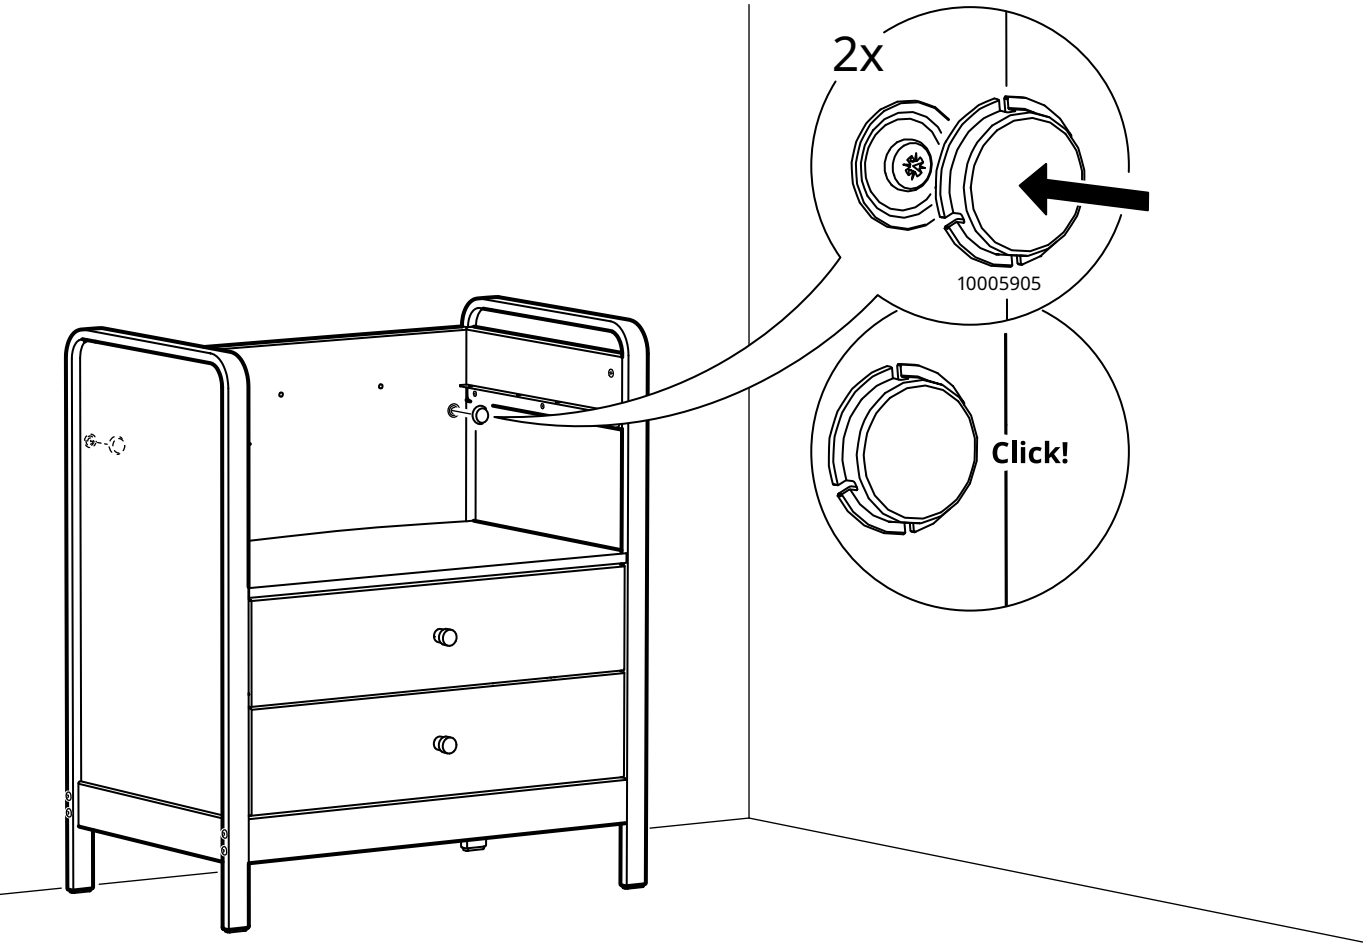 


36

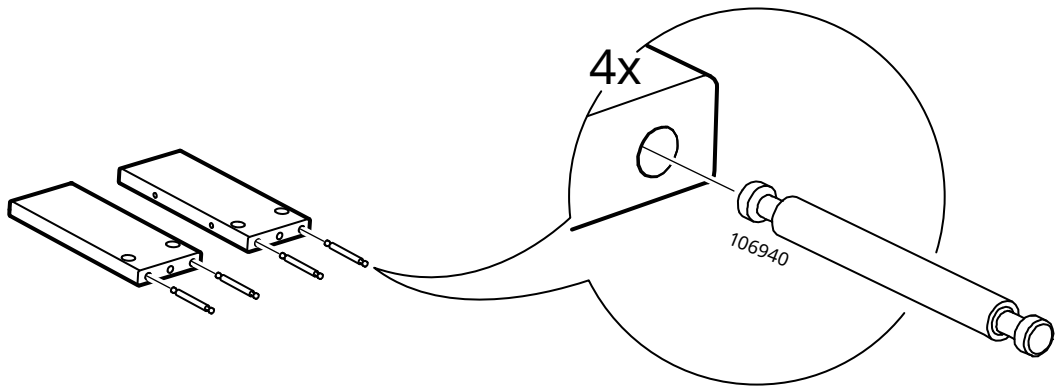 


37

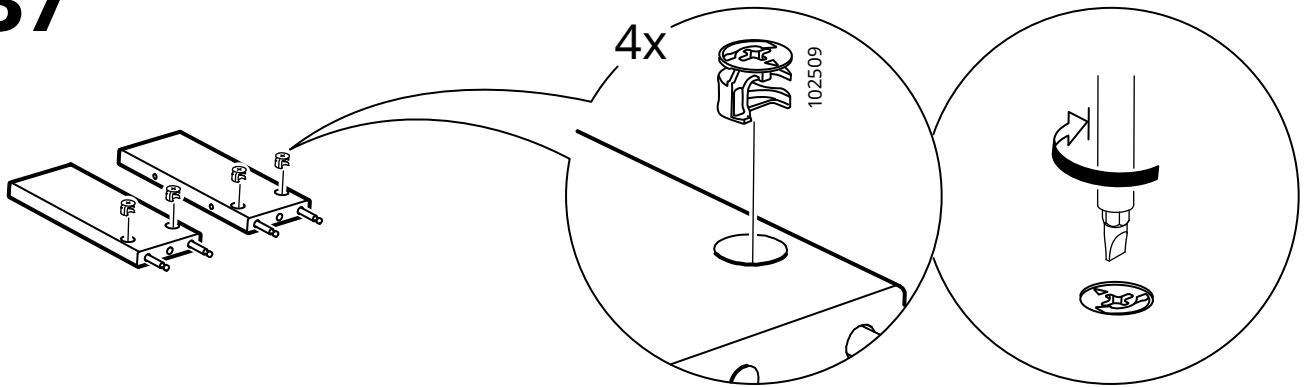 


38

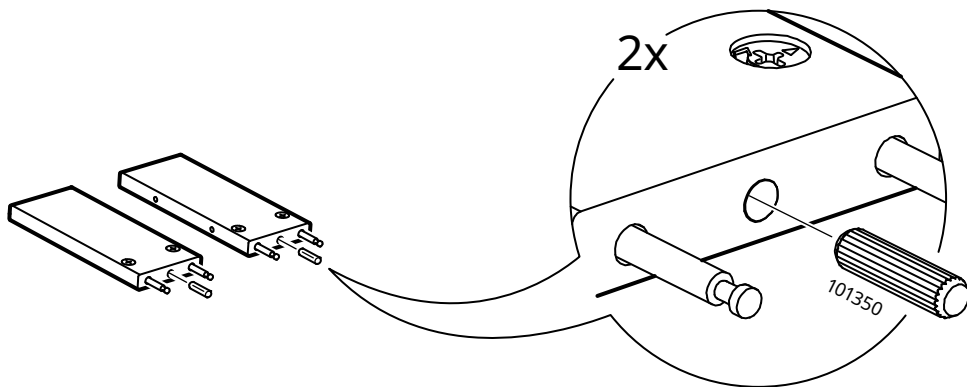 


39

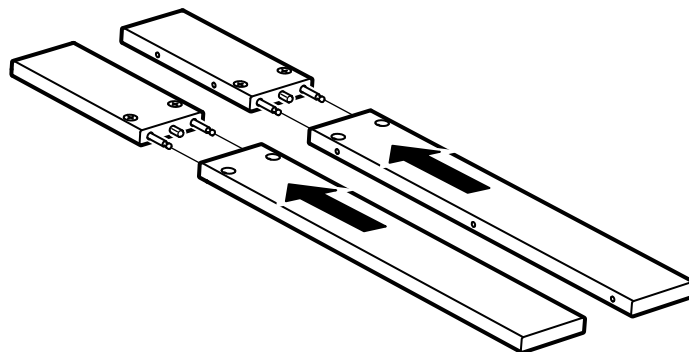 


40

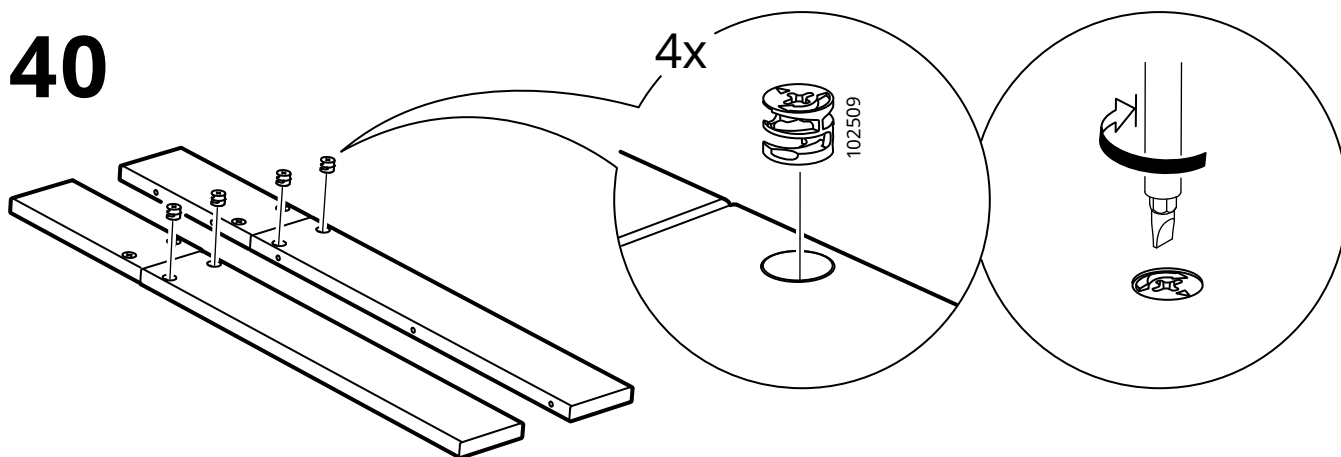 


41

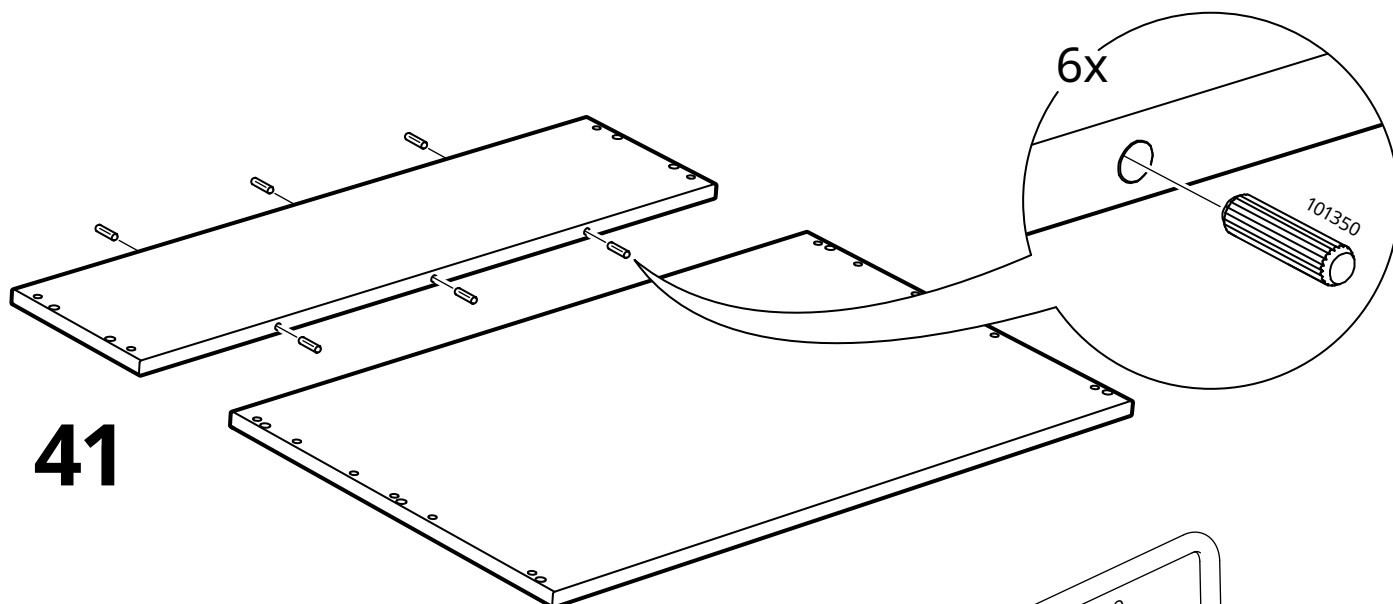 


42

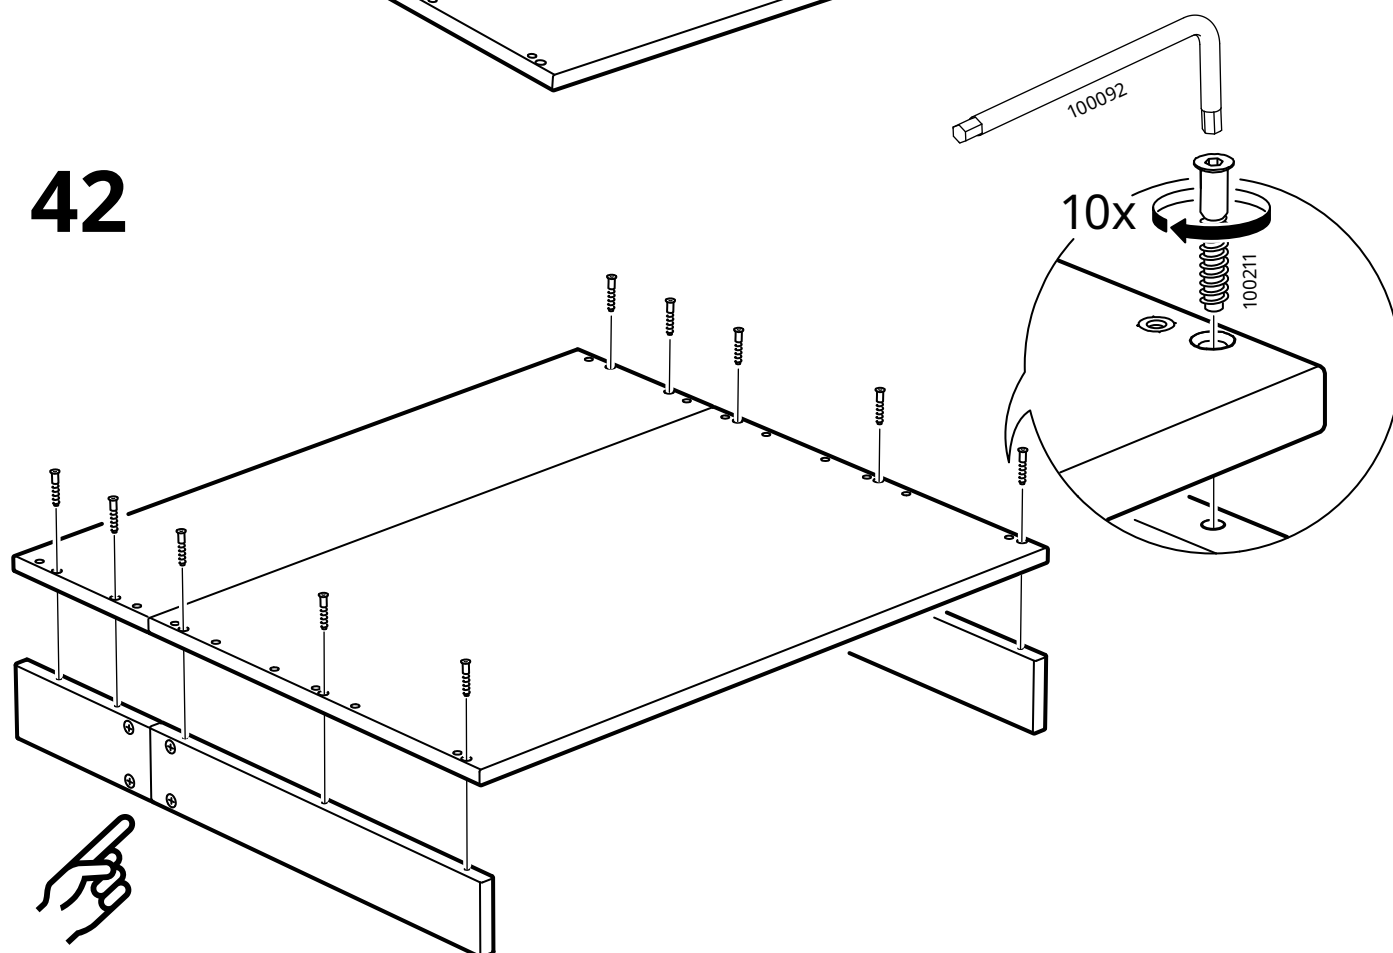 


43

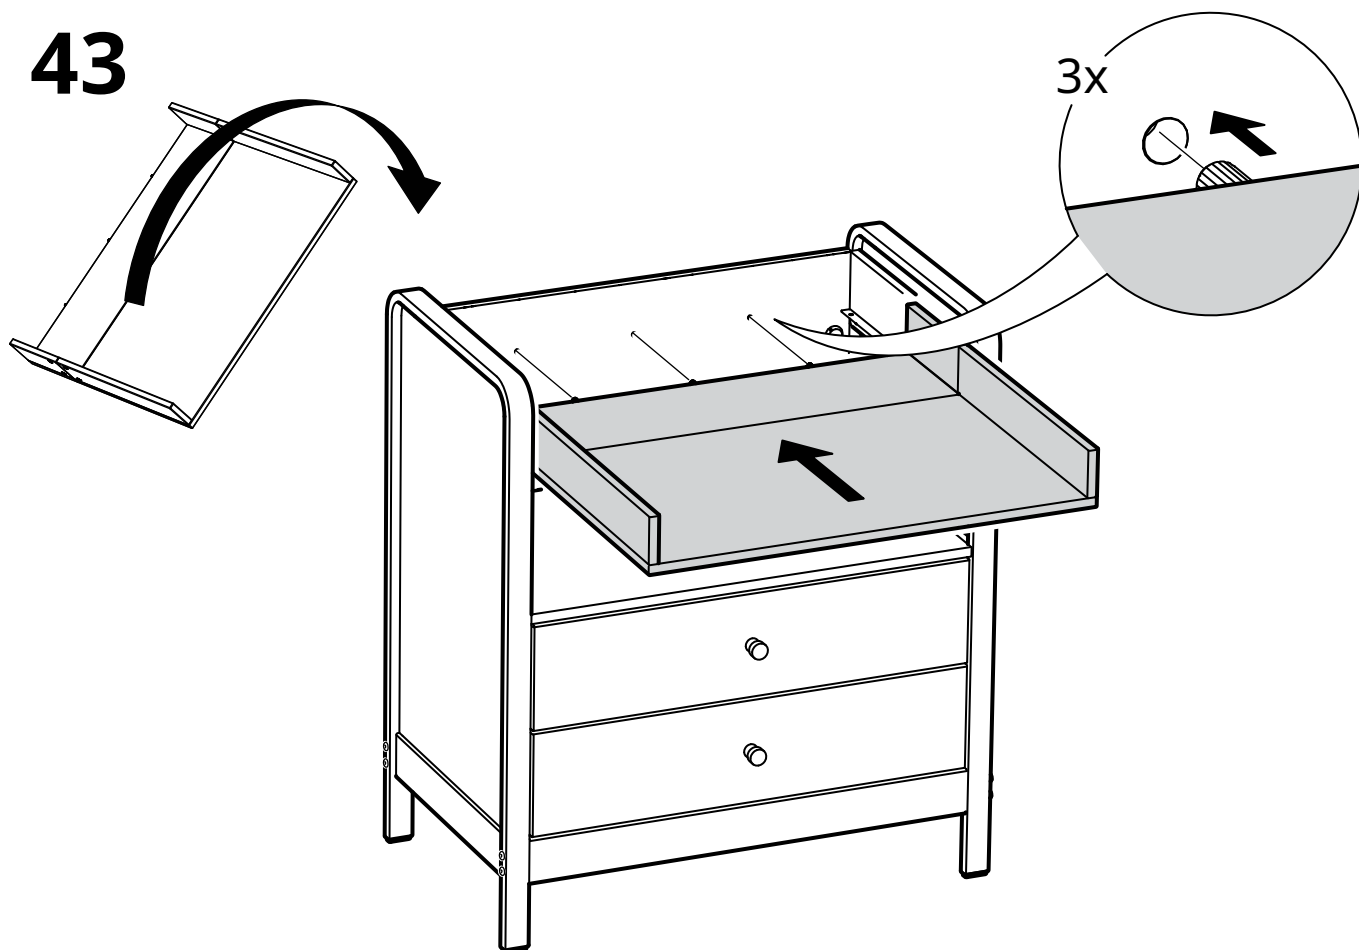 


44

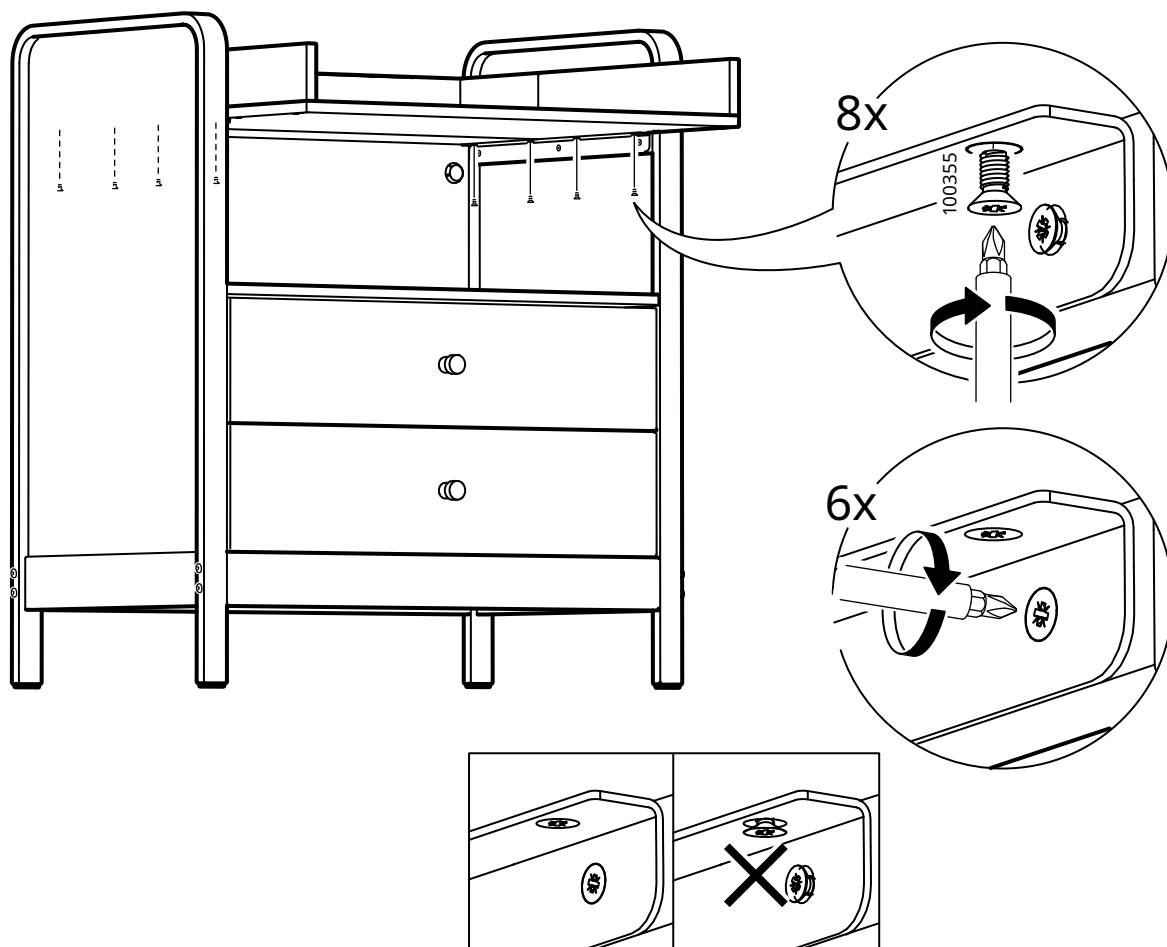 


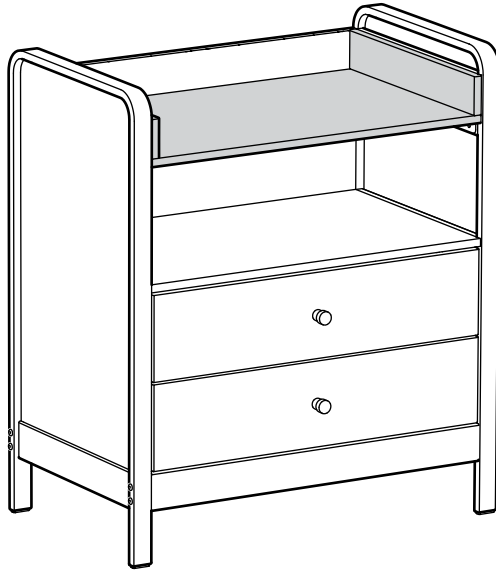 


1

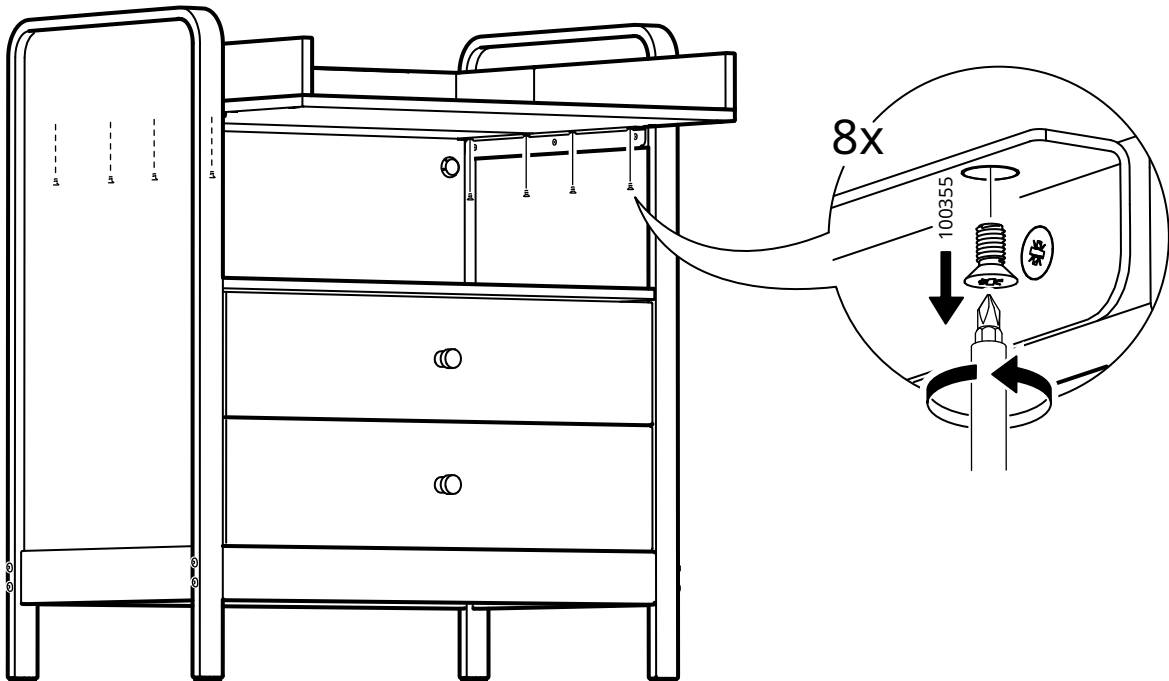 


2

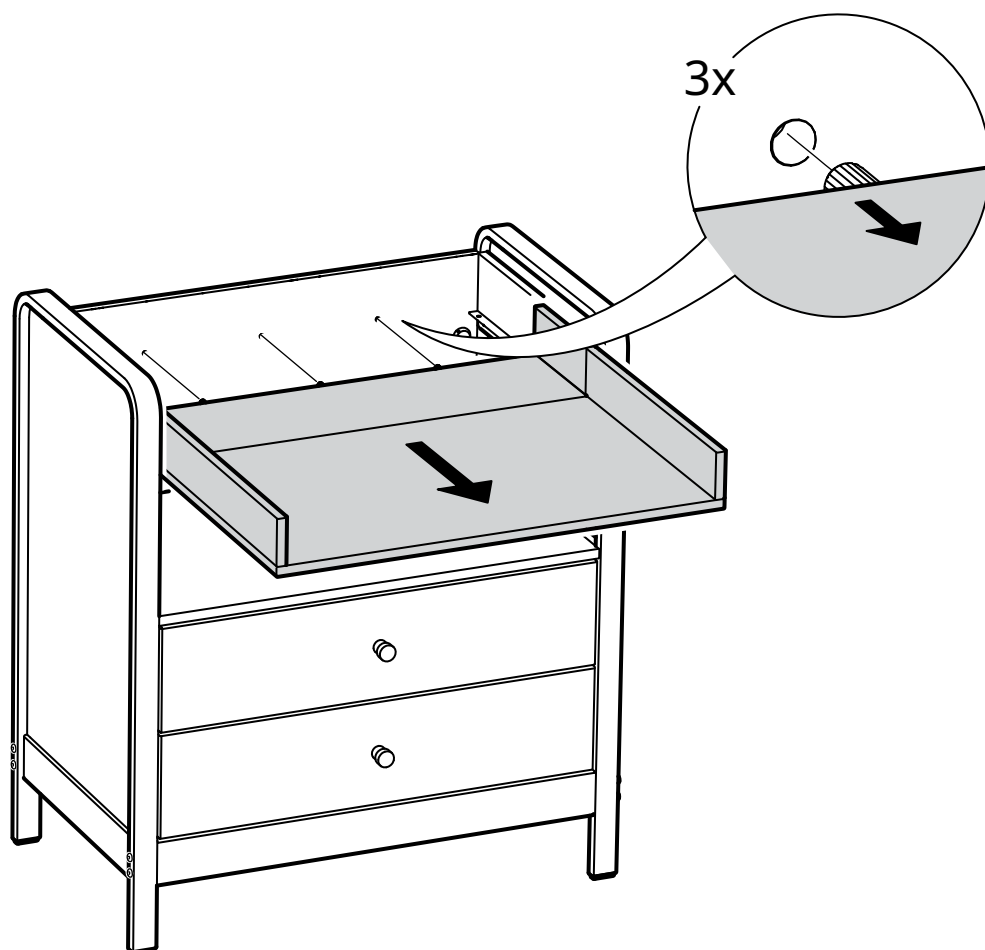 

3

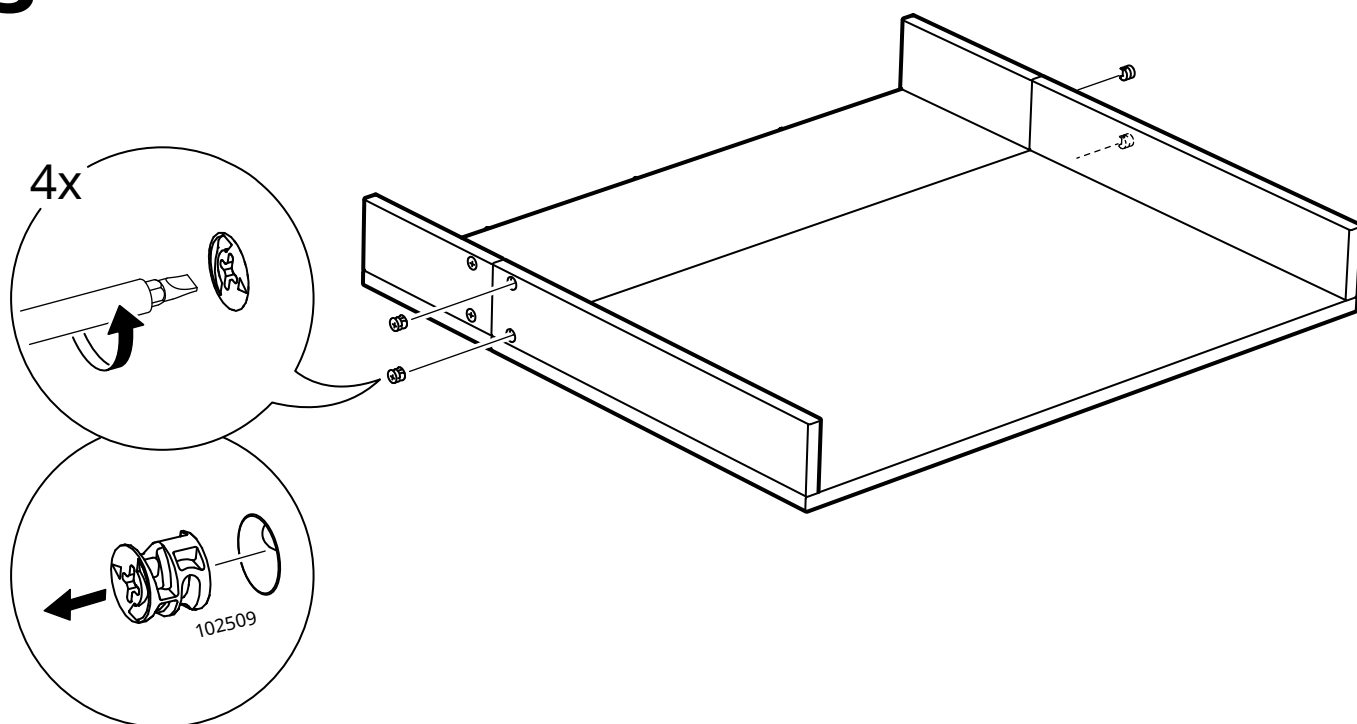 

4

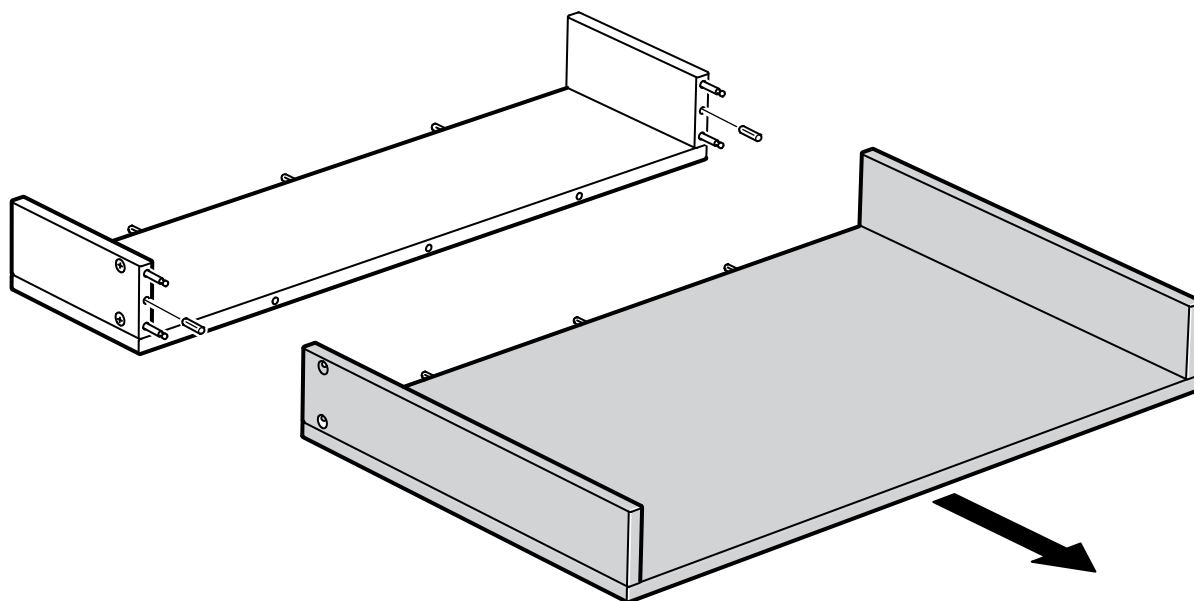 

5

