 
 


BISSA

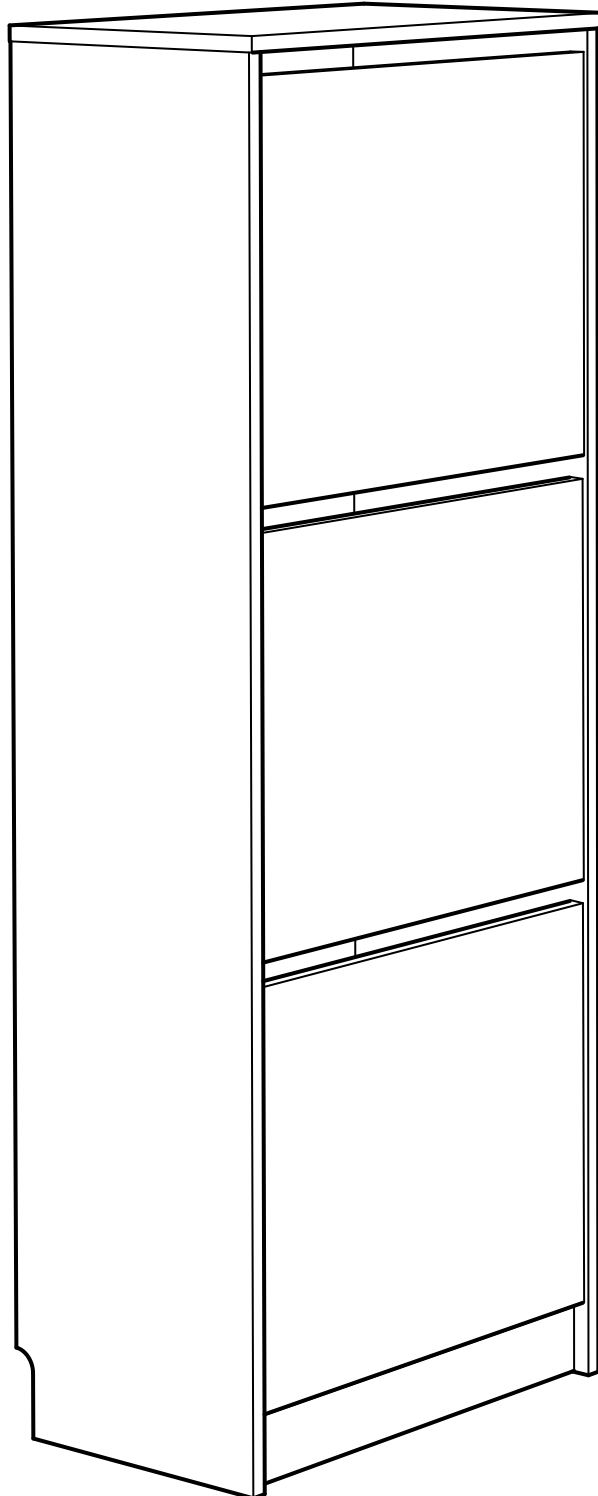

Design and Quality
IKEA of Sweden

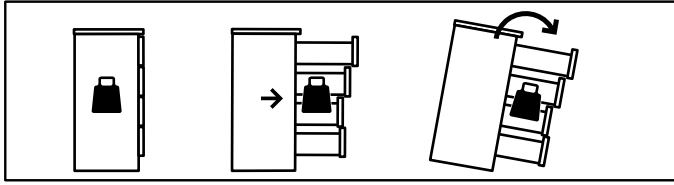

English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

 
 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

 
 
 
NEVER open more than one drawer at a time.

Place heaviest items in the lowest drawers.

English

Read and follow each step of the instruction carefully.

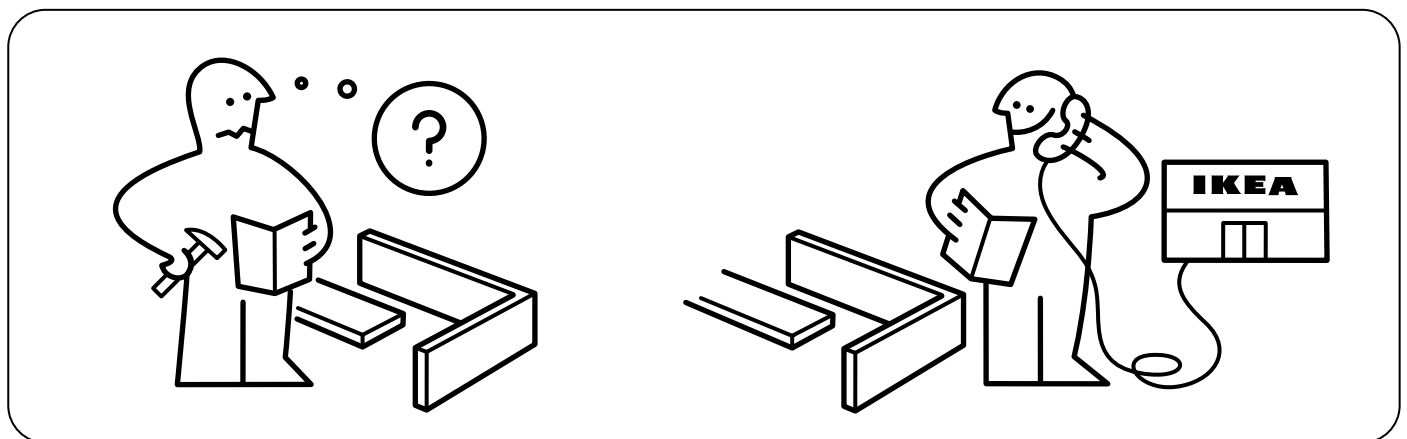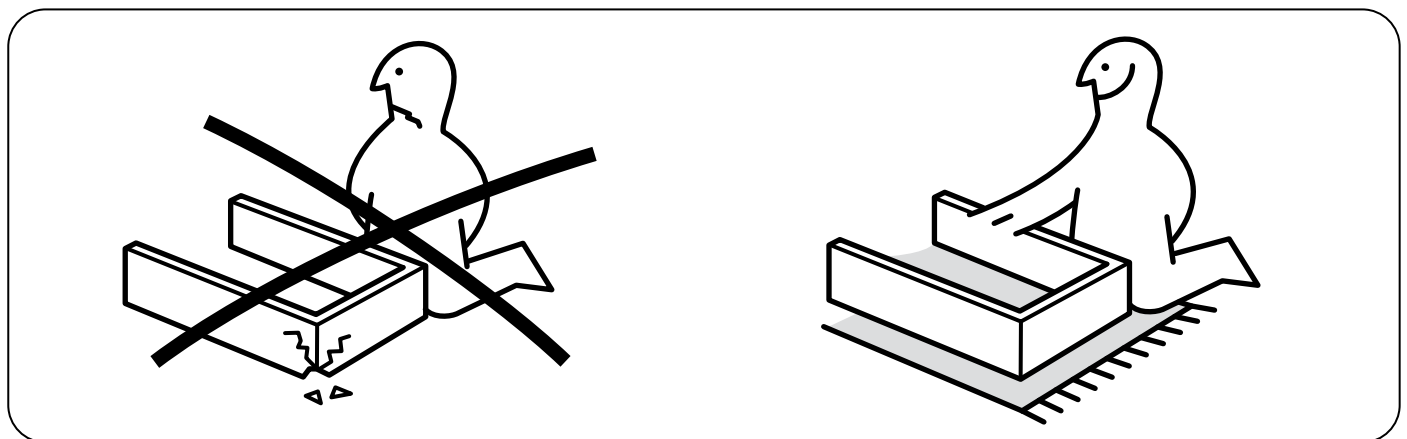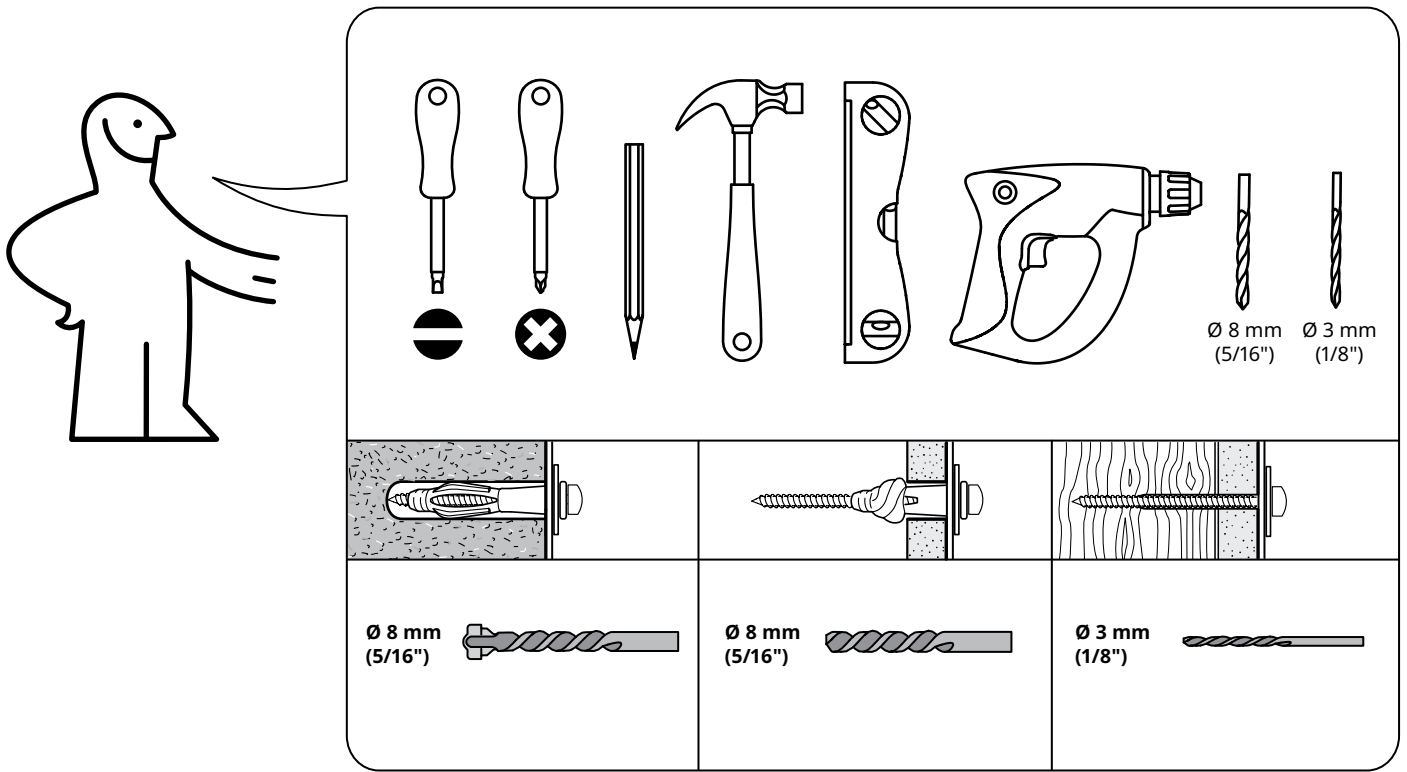

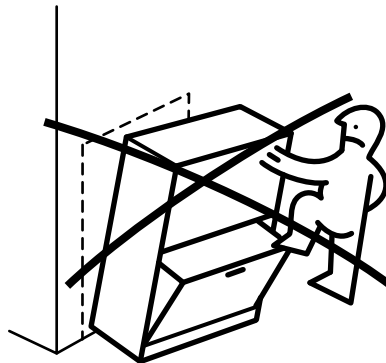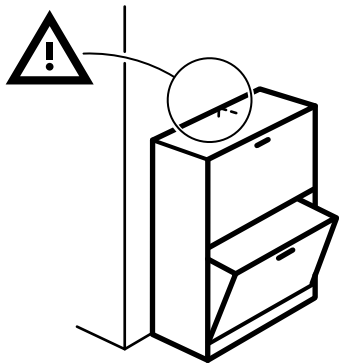


118331

10x




118224

 10x



101350

 10x

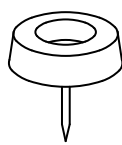


107849

4x



109535

 18x

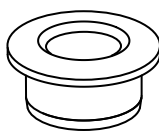


10095065

6x



112792

 24x

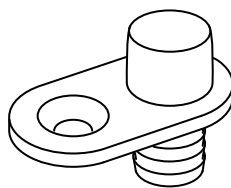


10097027

6x




100347

 6x



109048

 2x



121714

 
2x




100823

2x


1

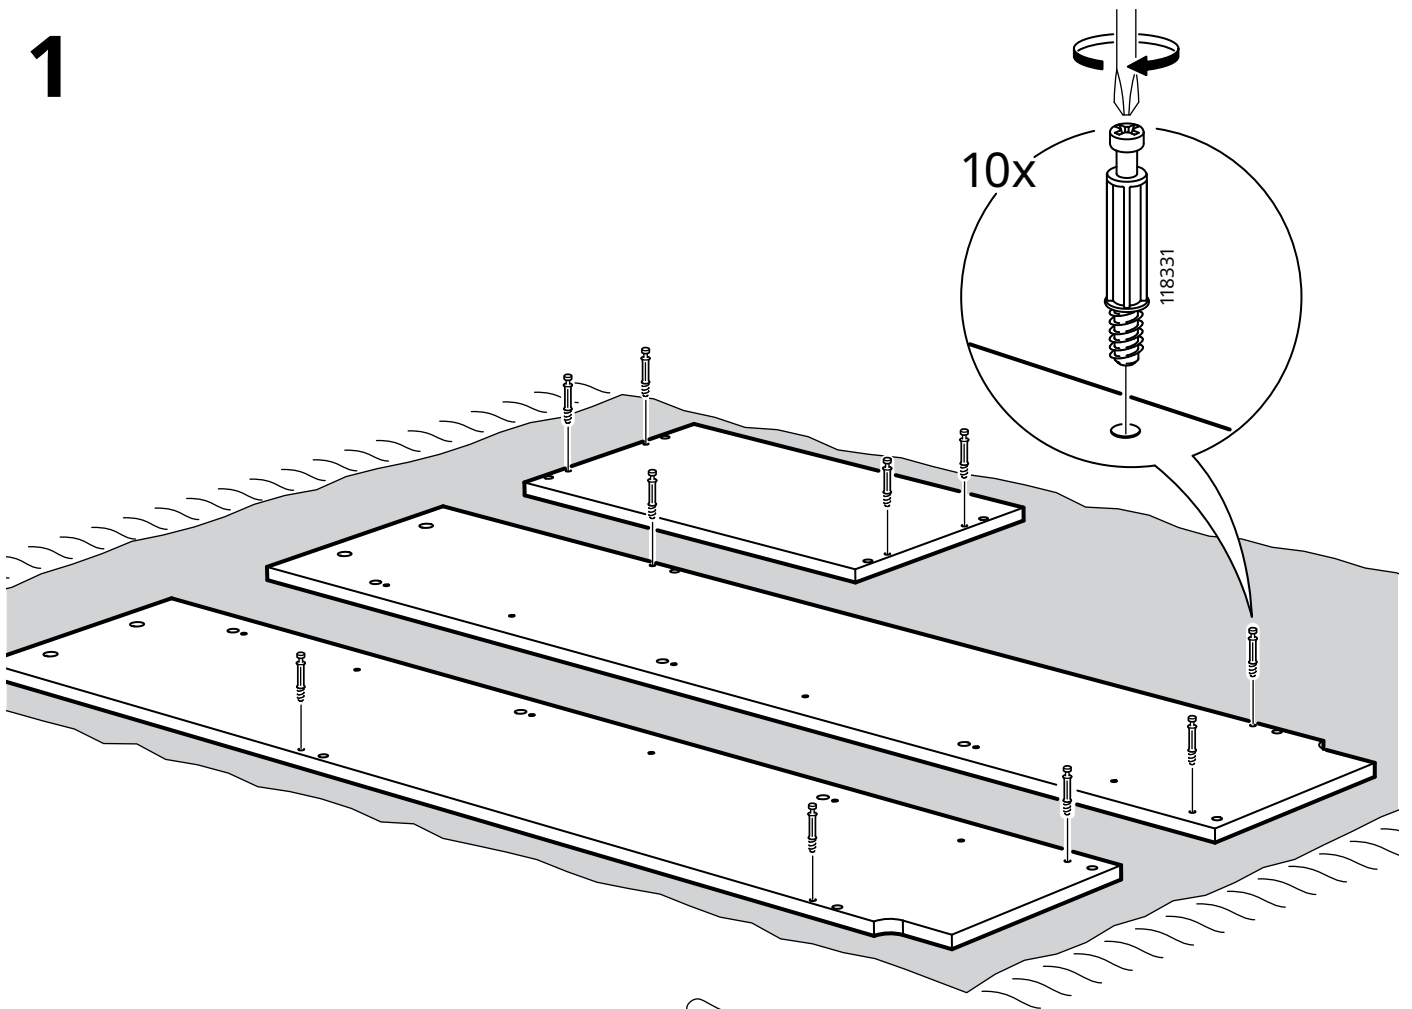


2

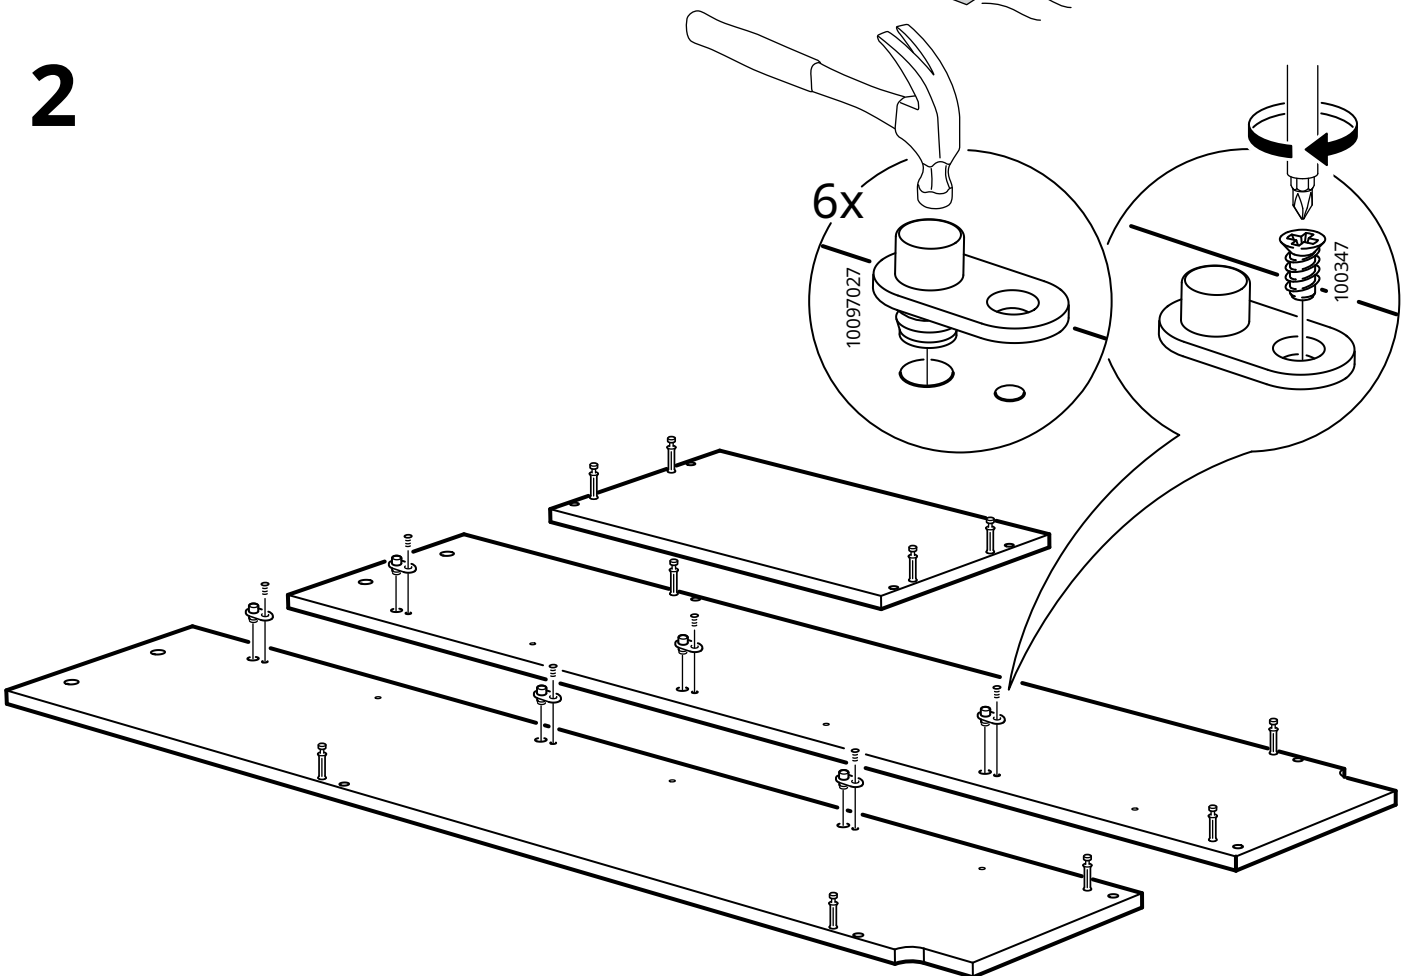 


3

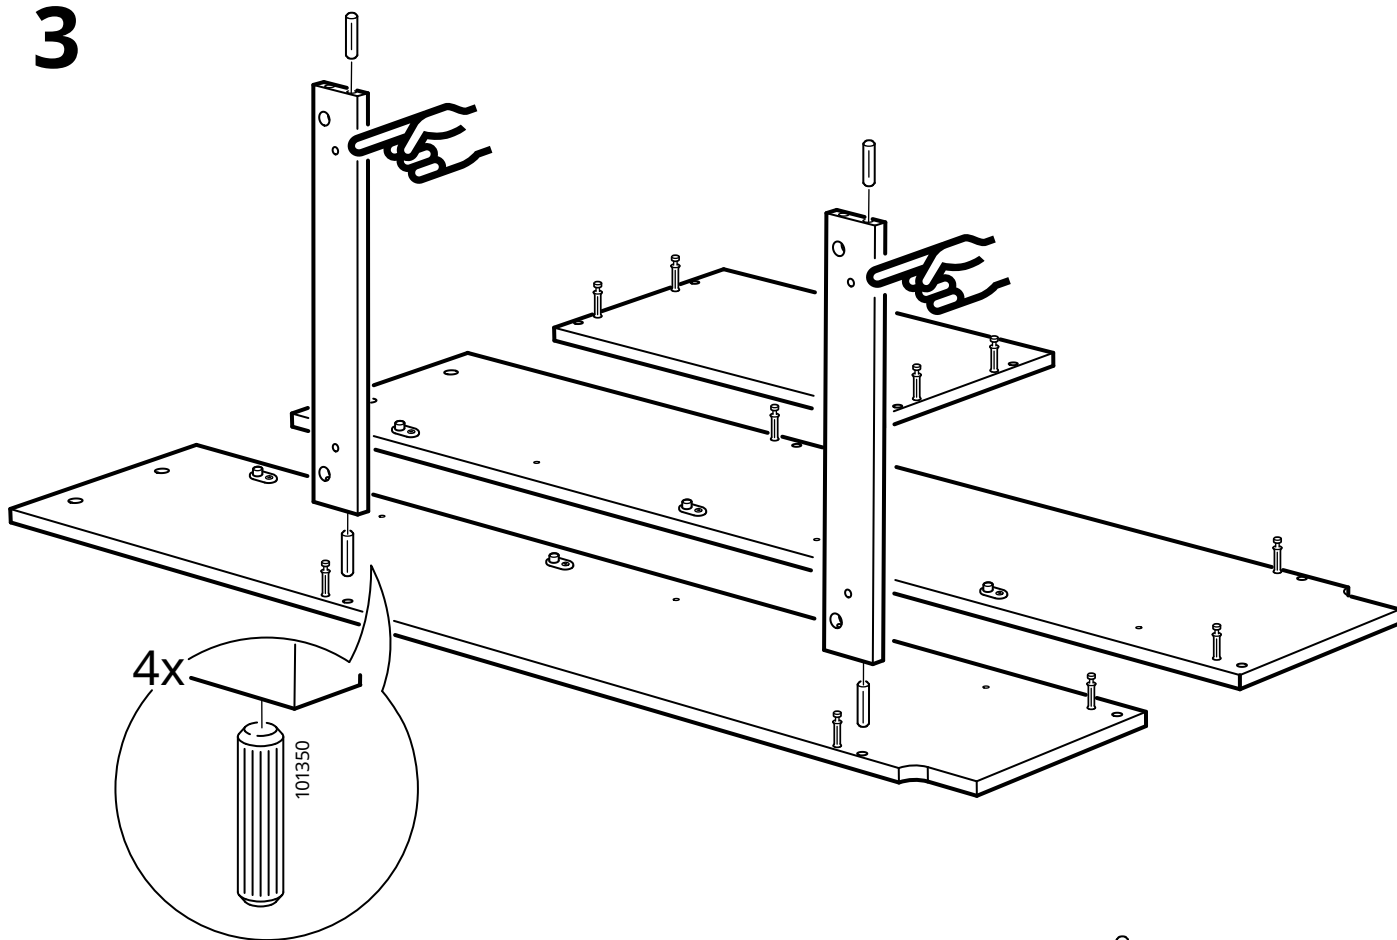 


4

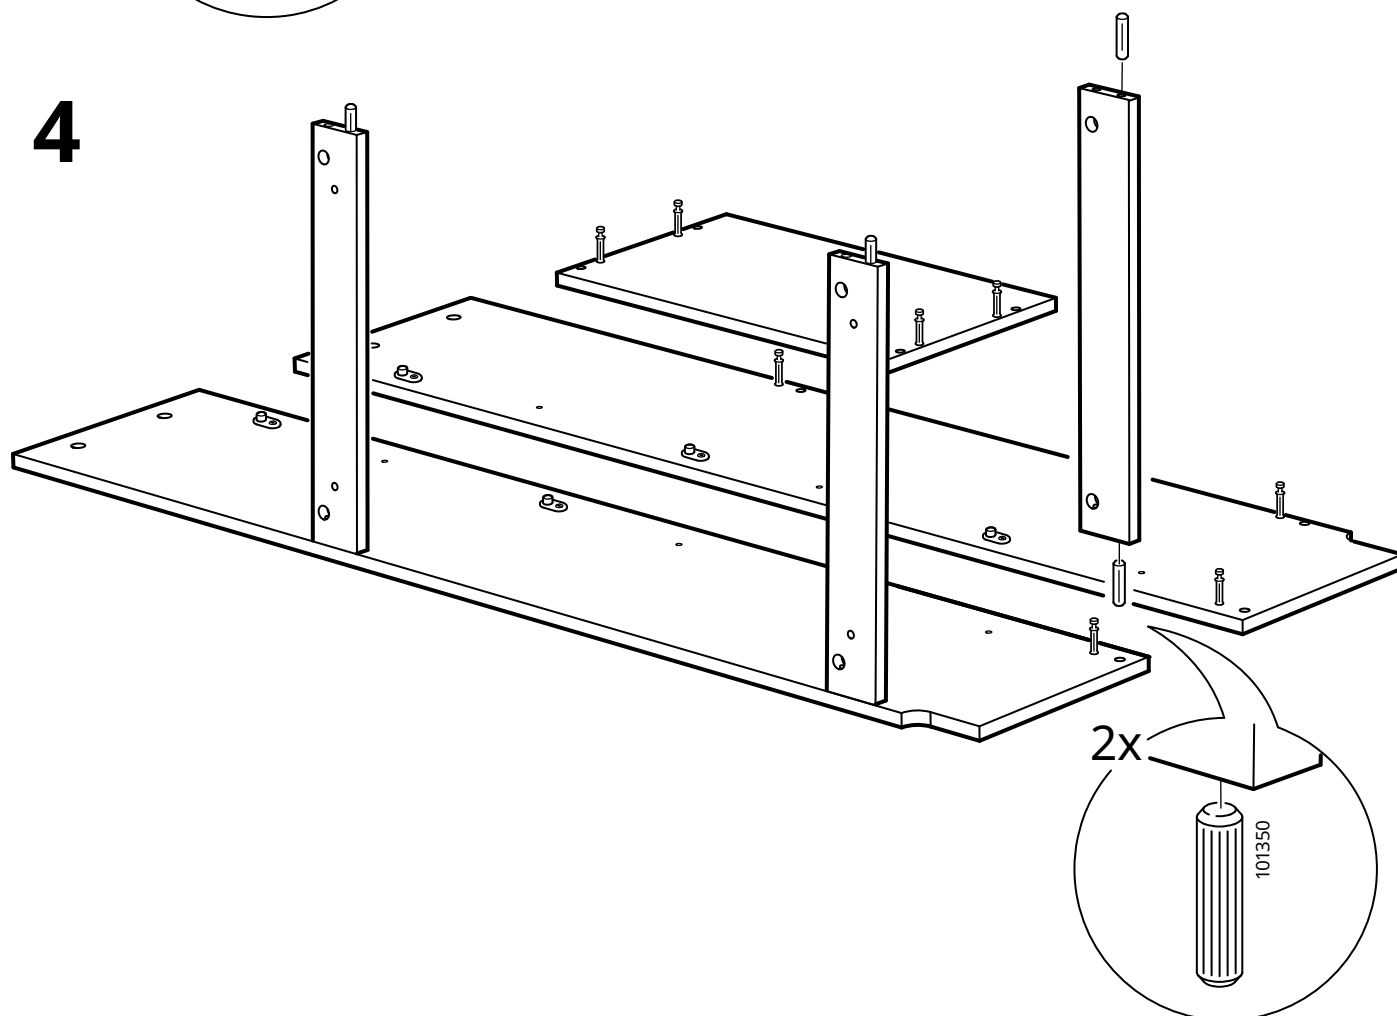 


5

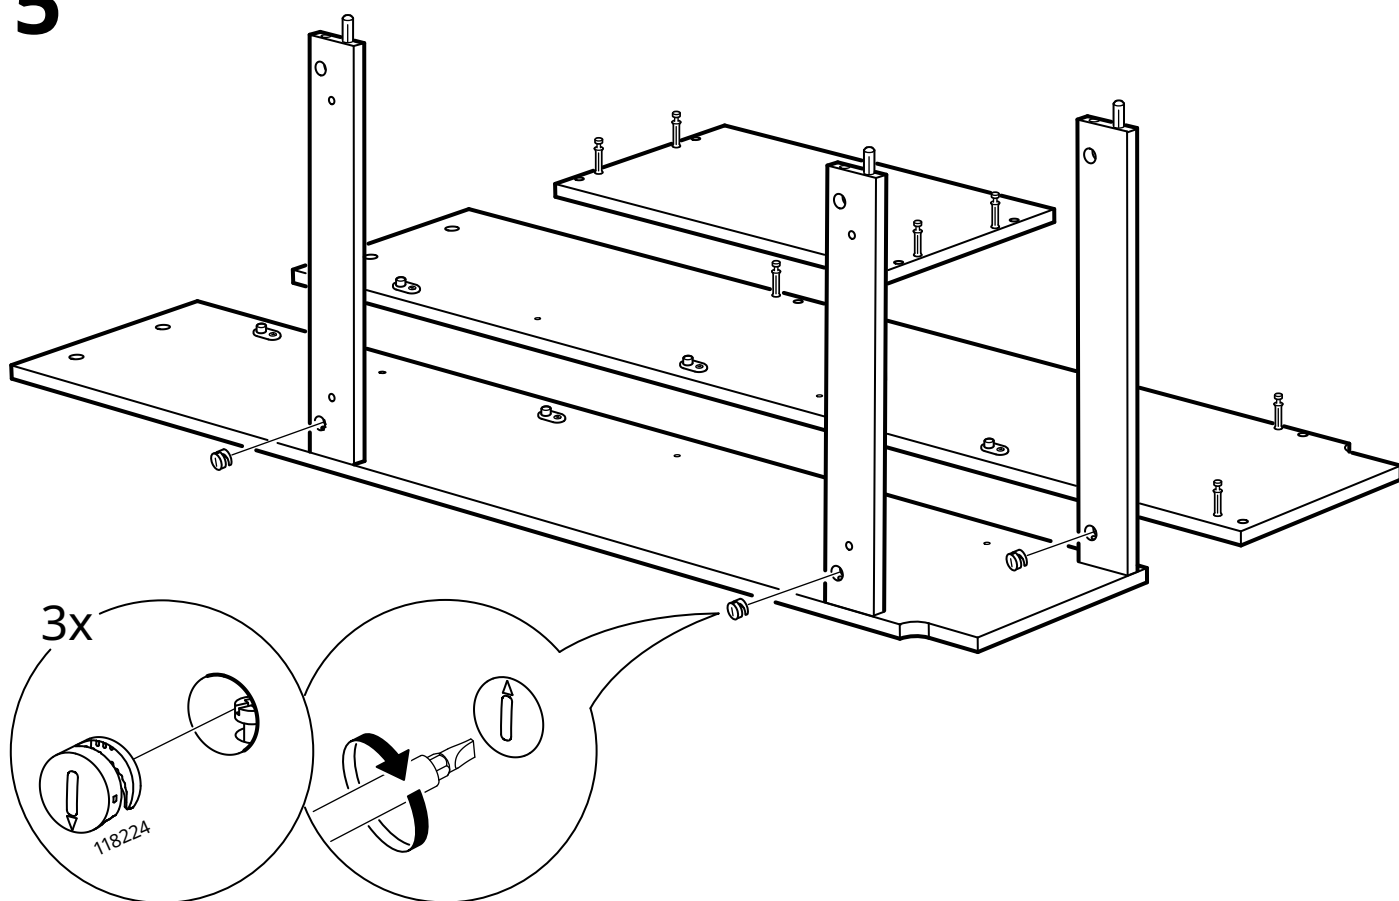 


6

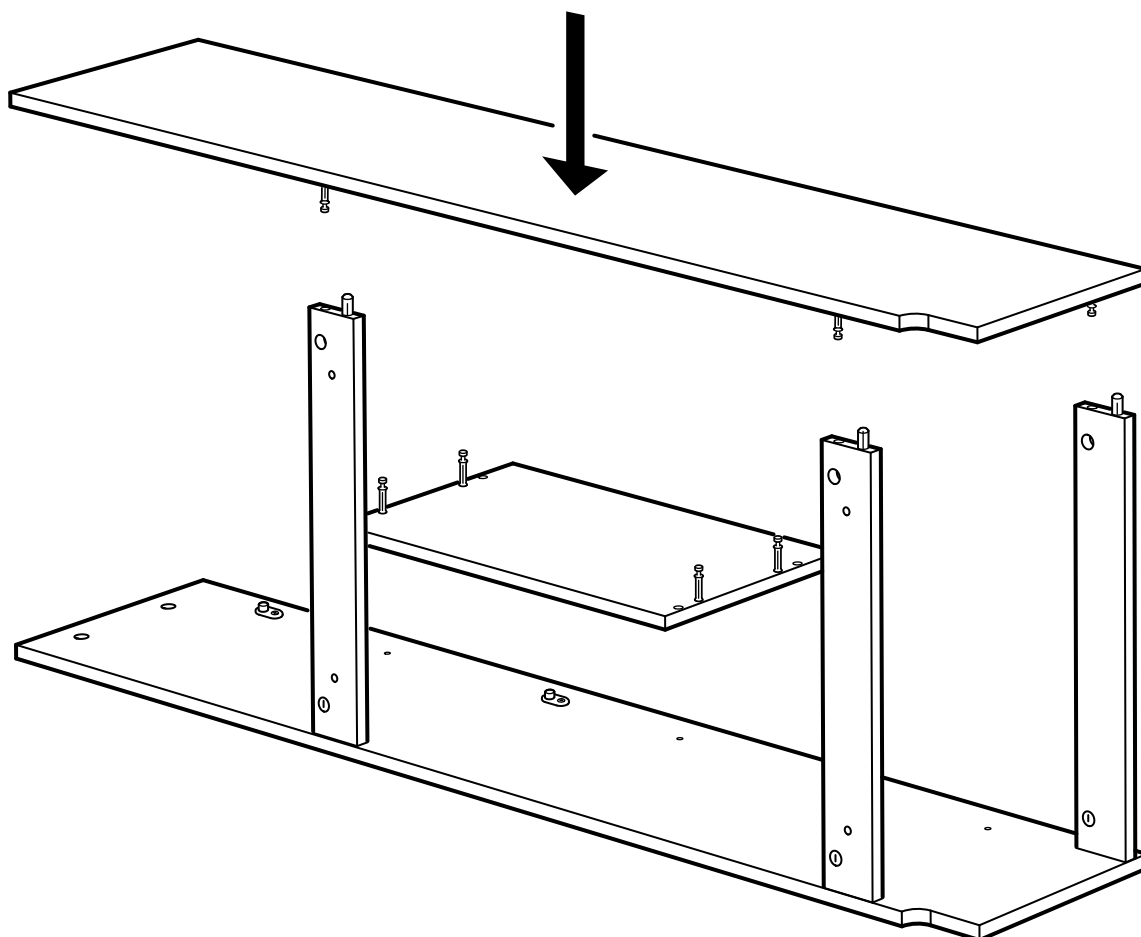 


7

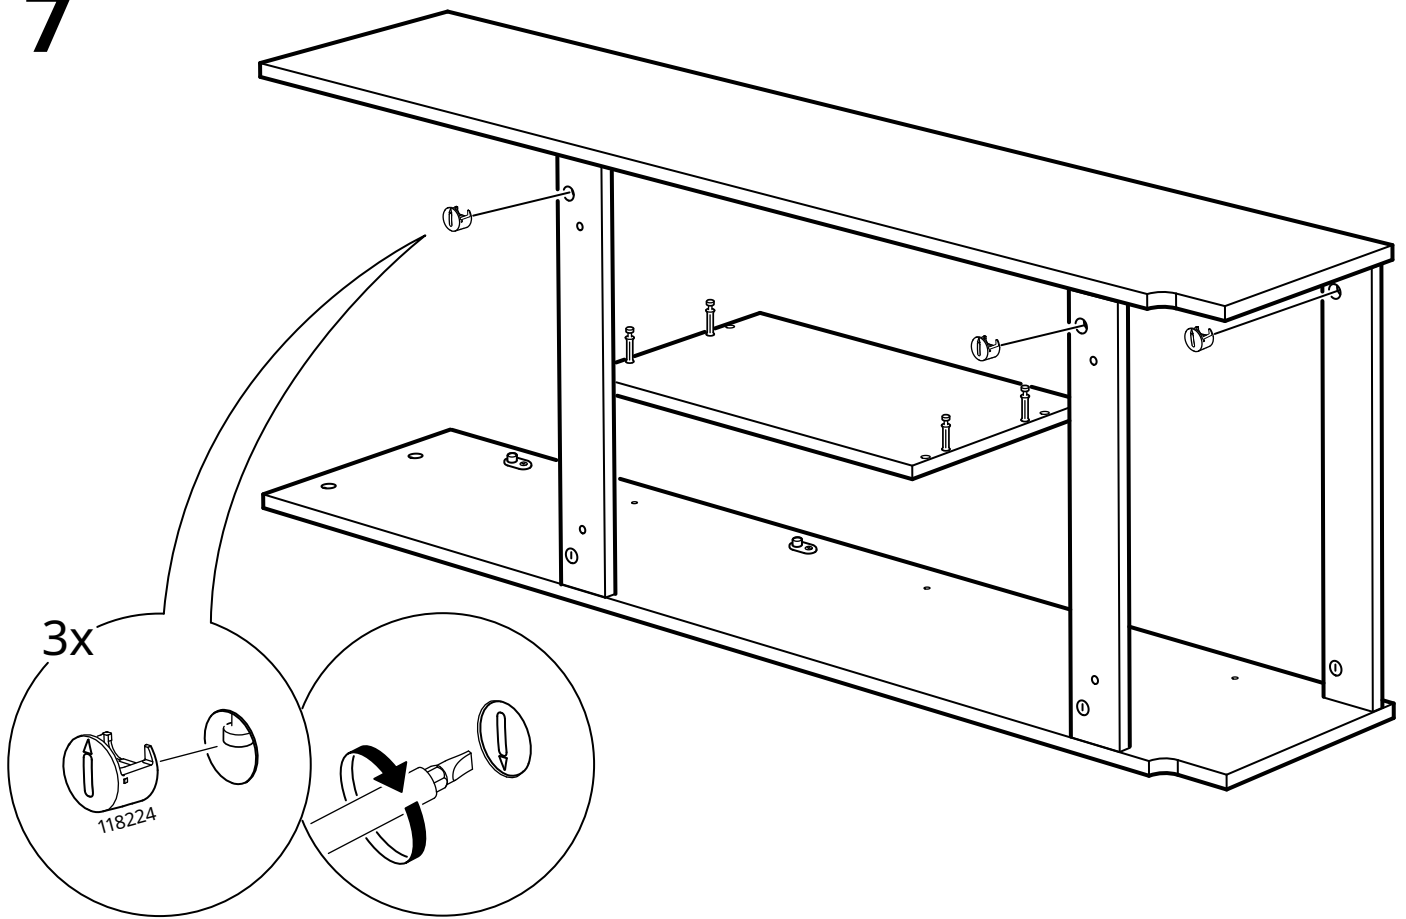 


8

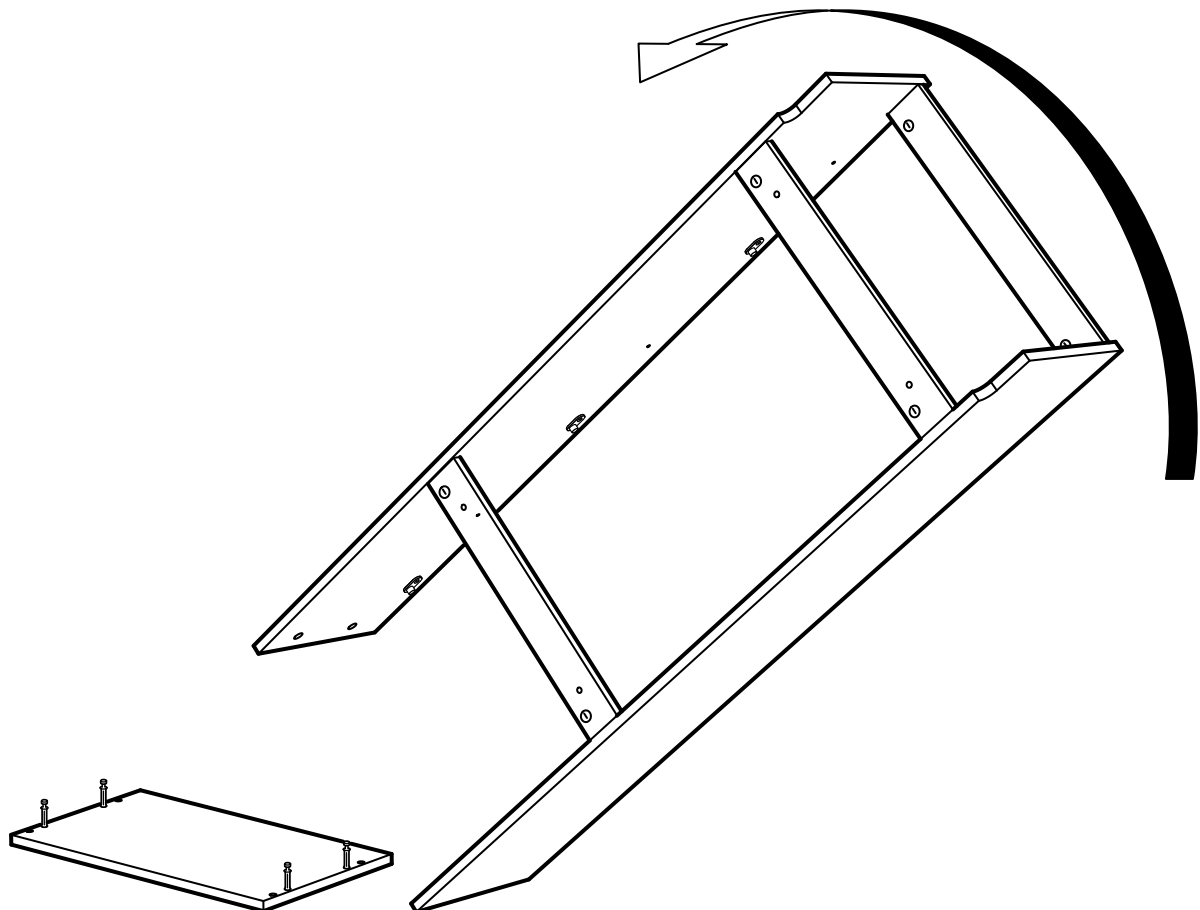 



9

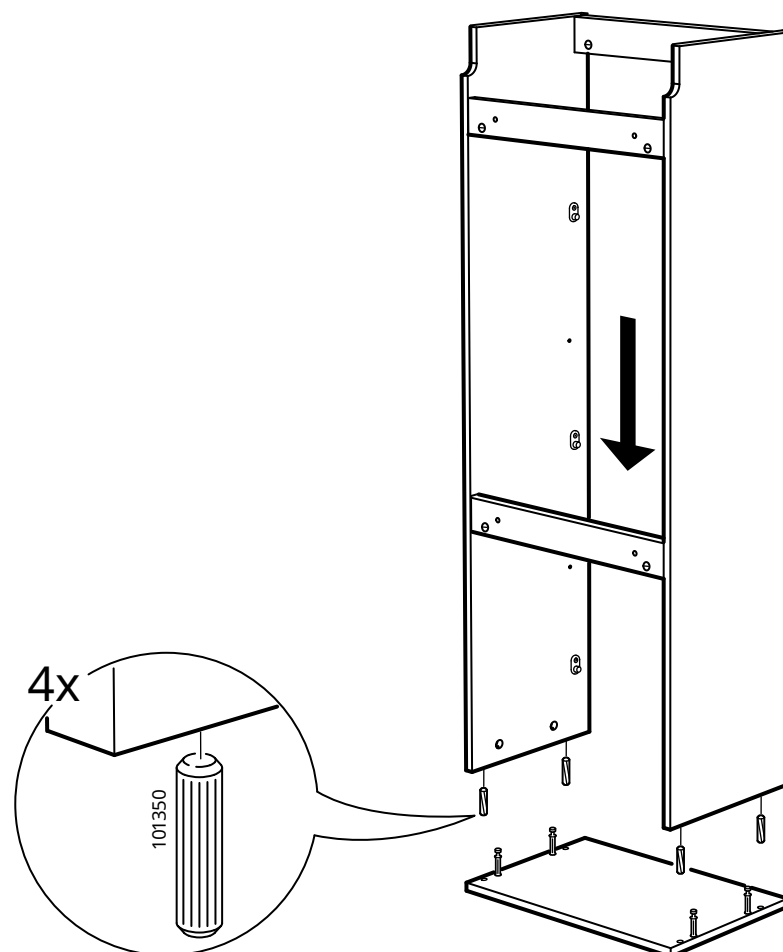 


10

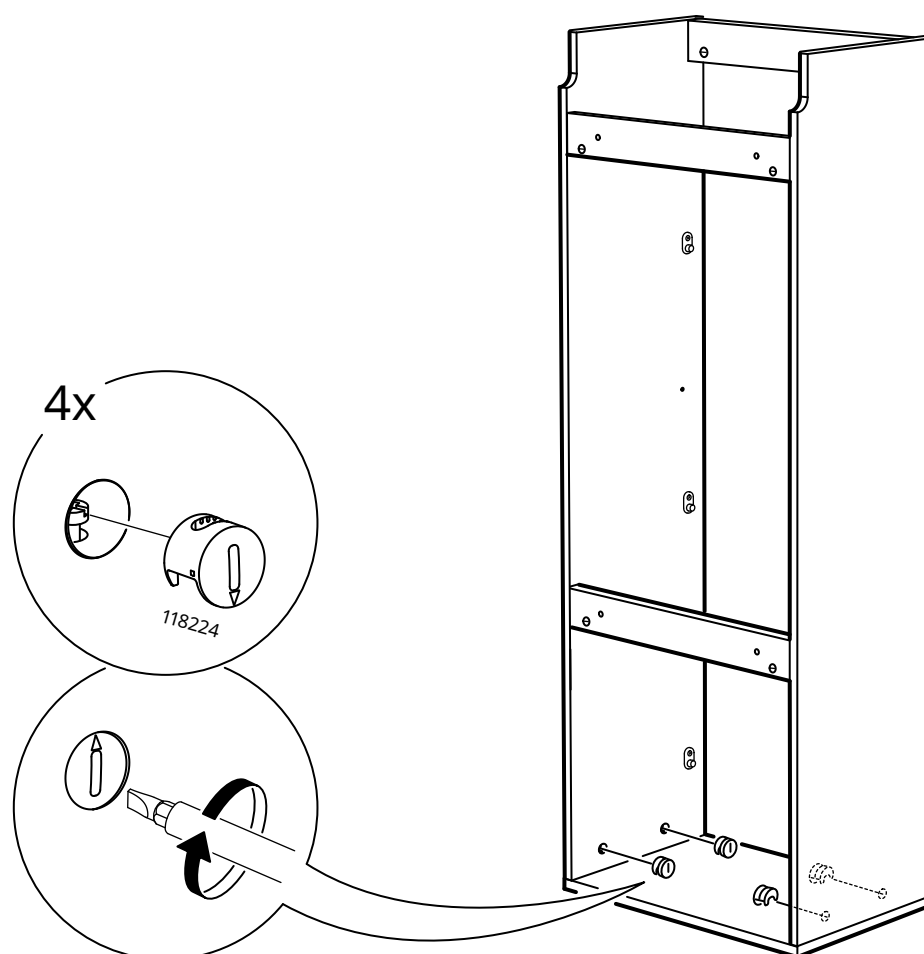 



11

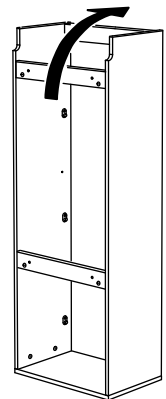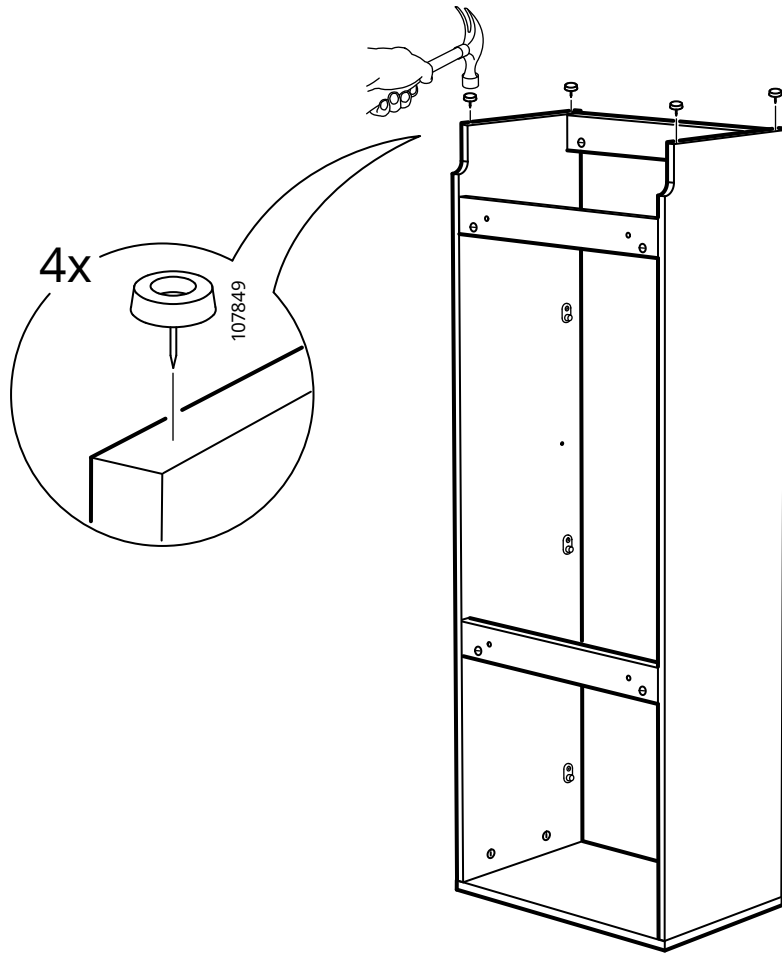  


12

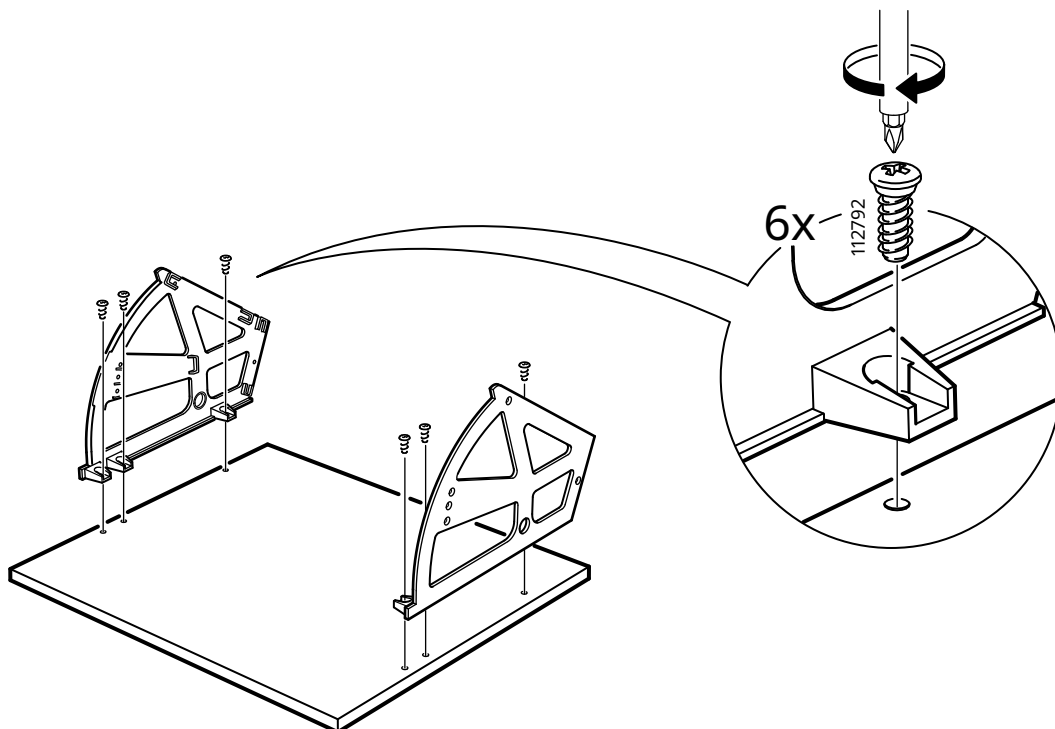 



13

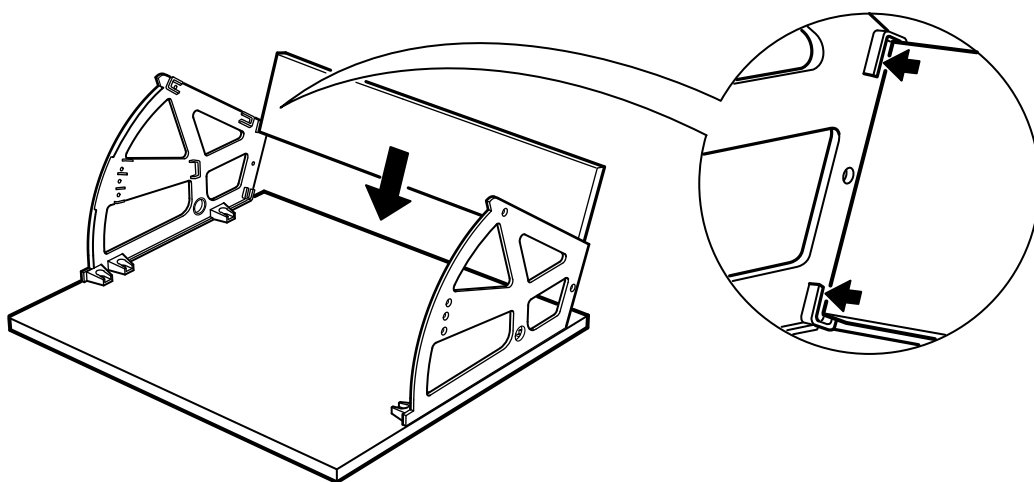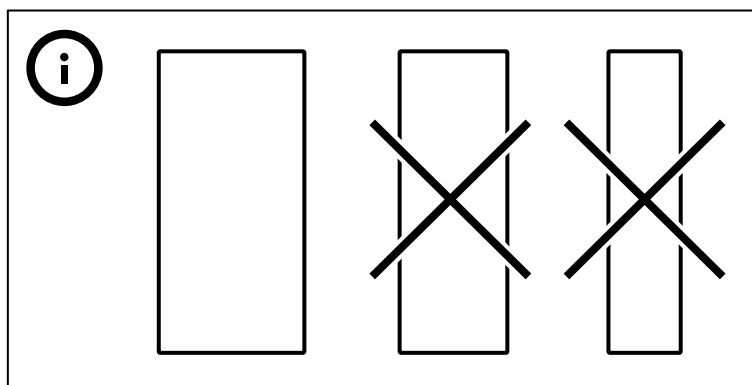  


14

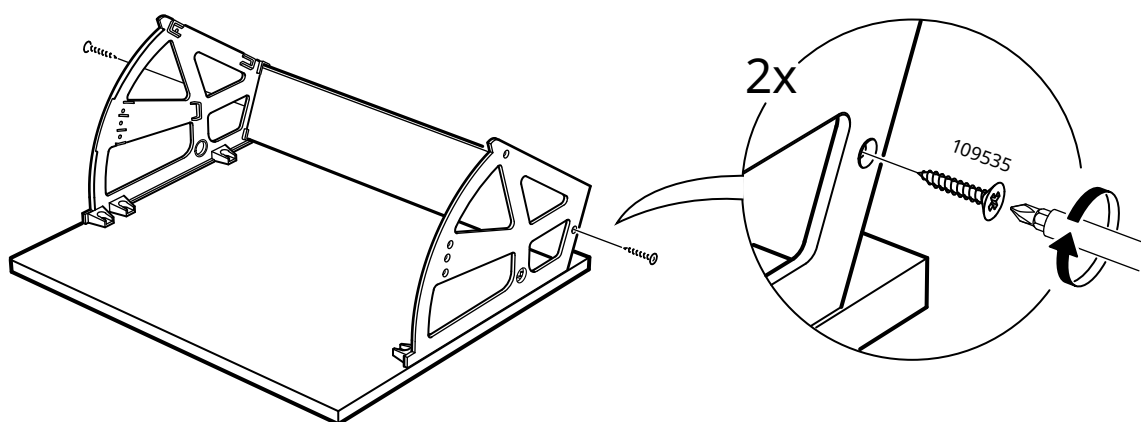 


15

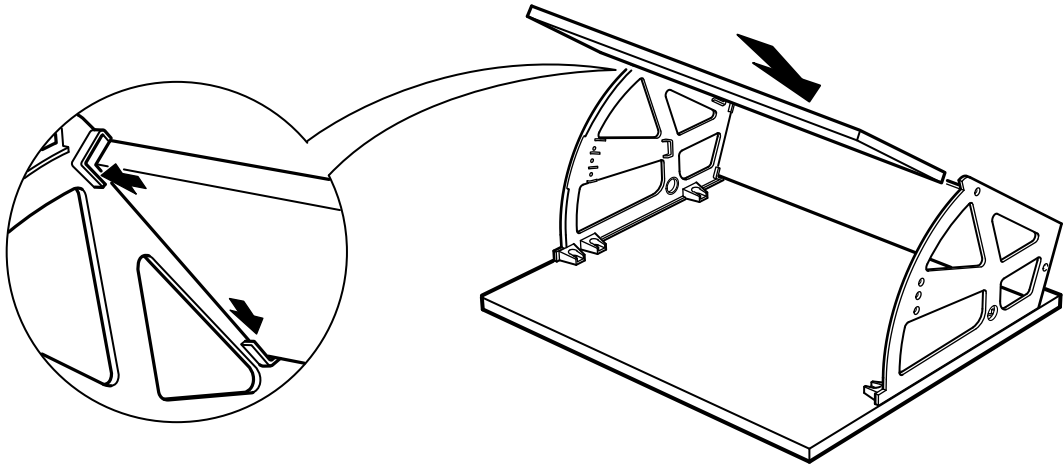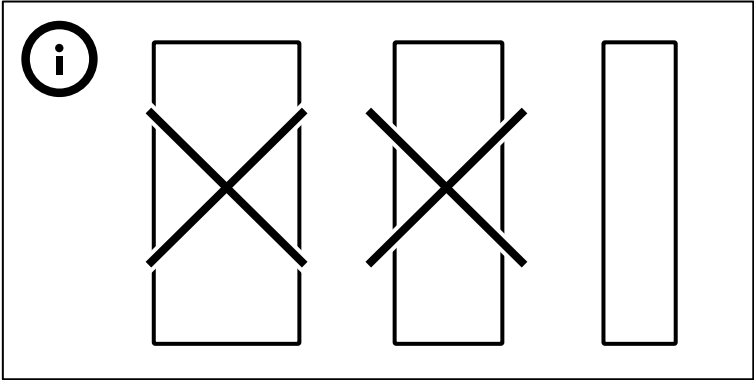  


16

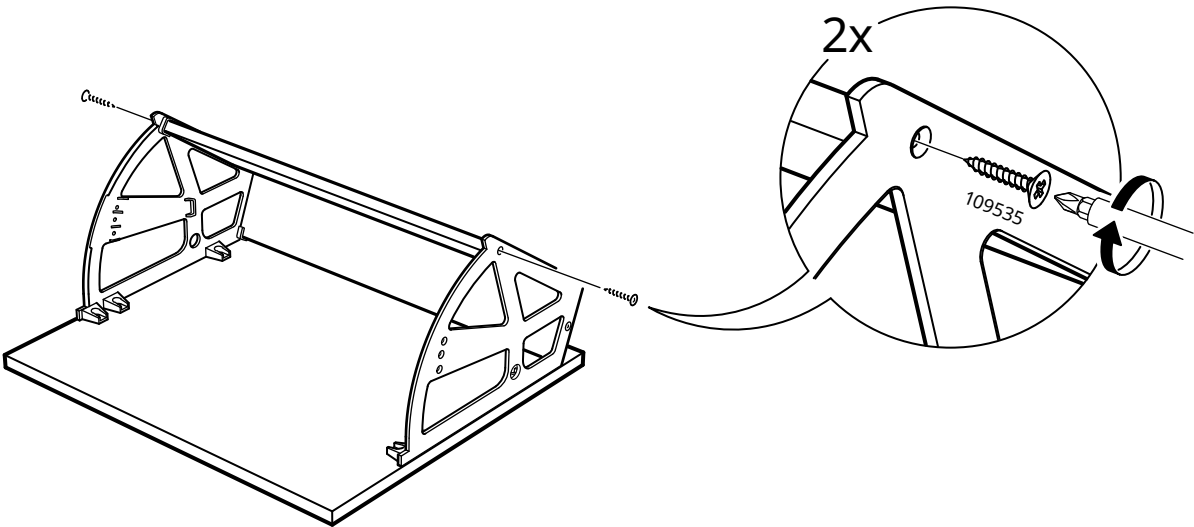 


17

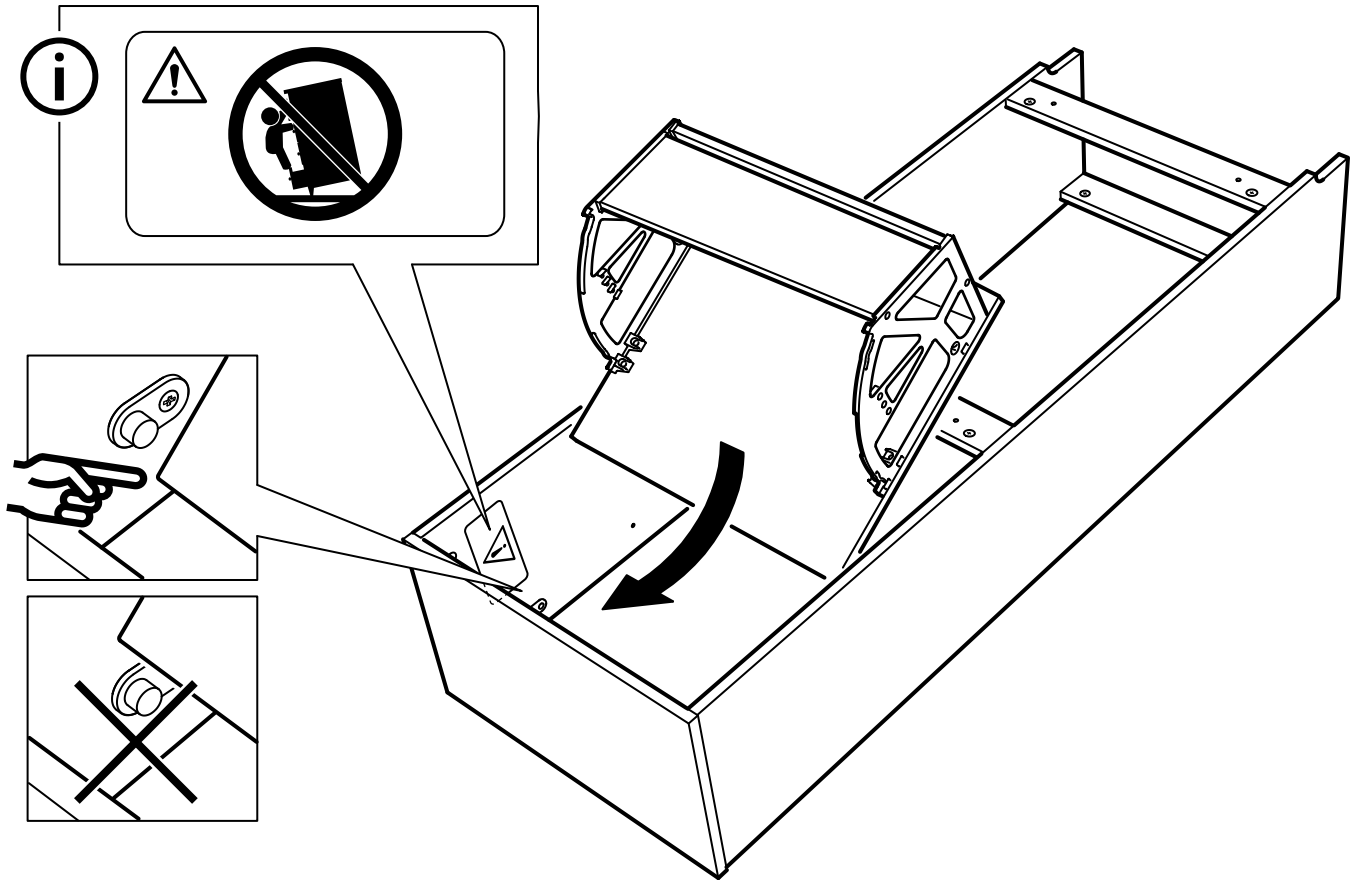 



18

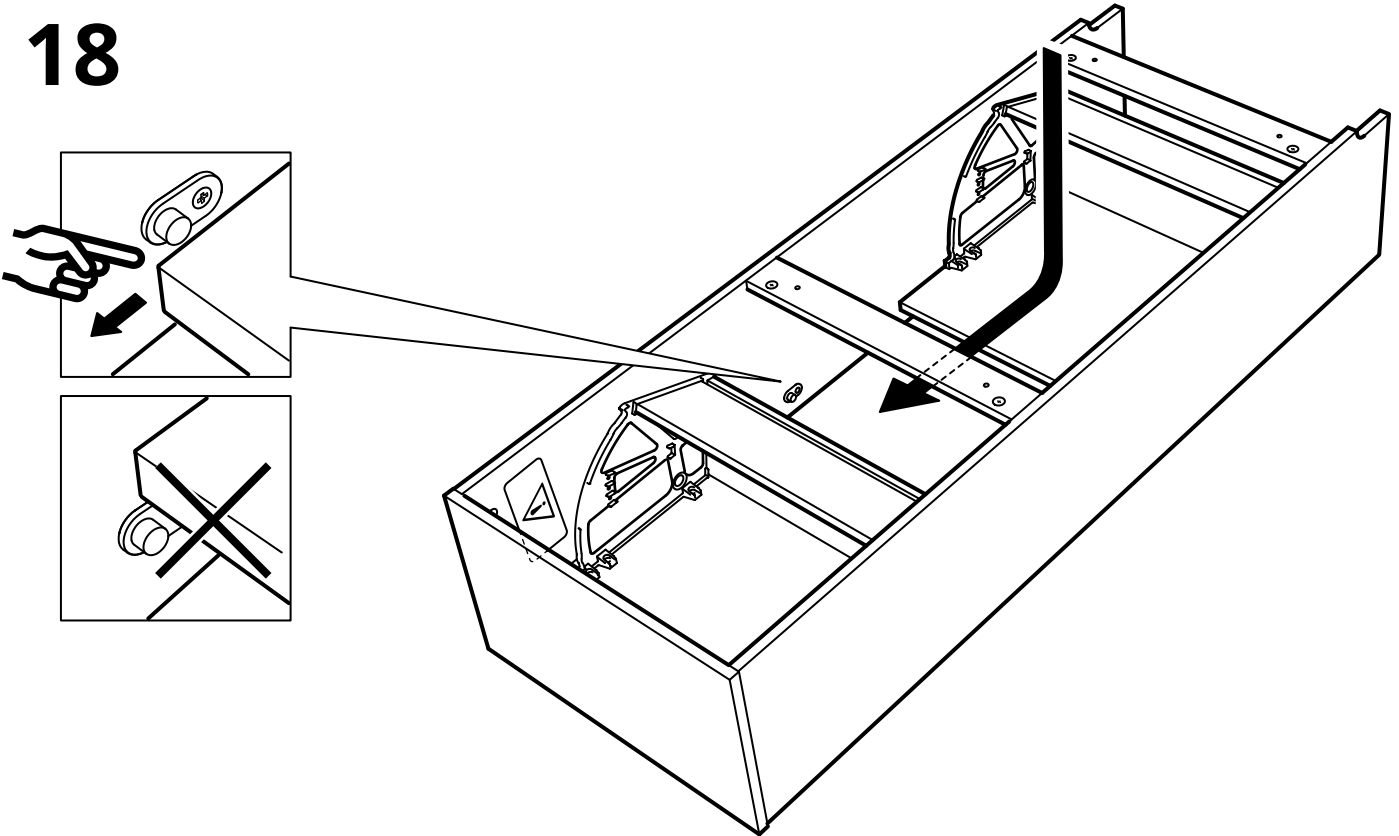 

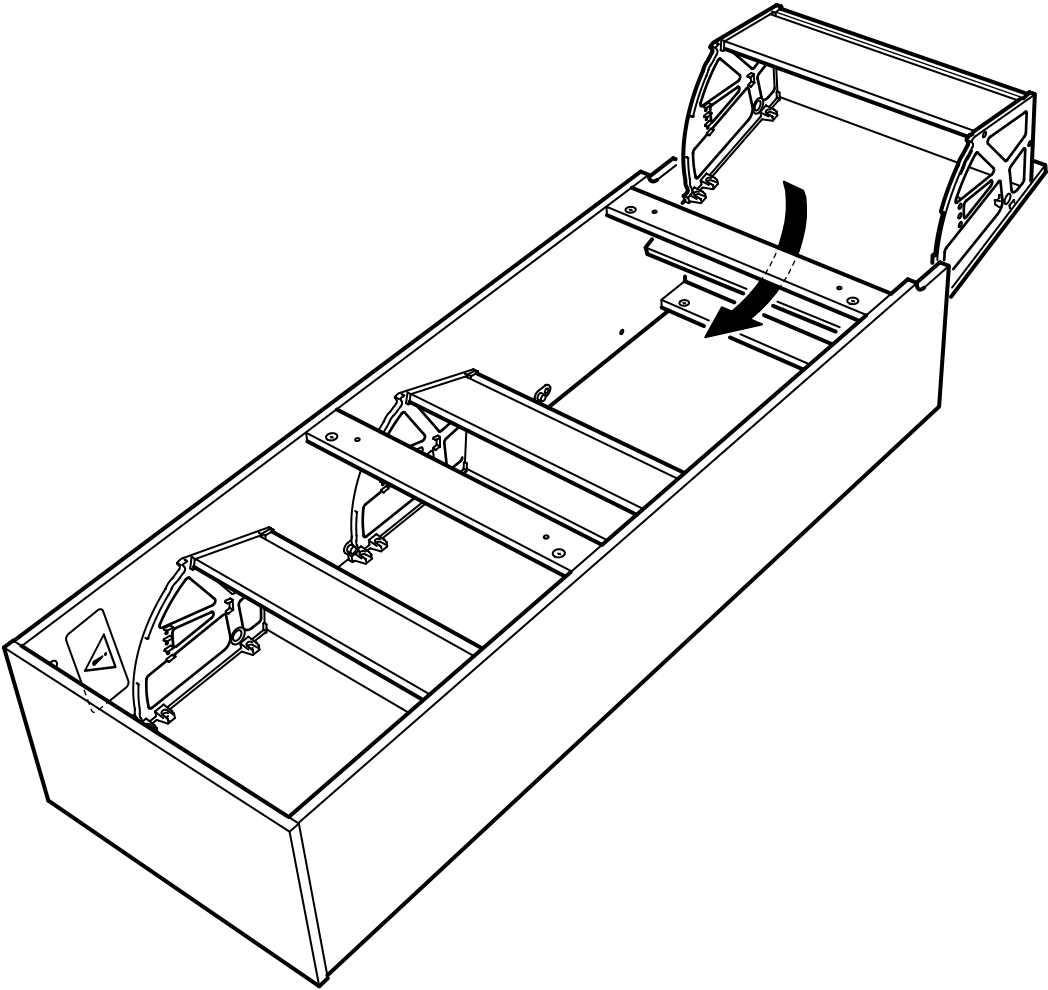 

20

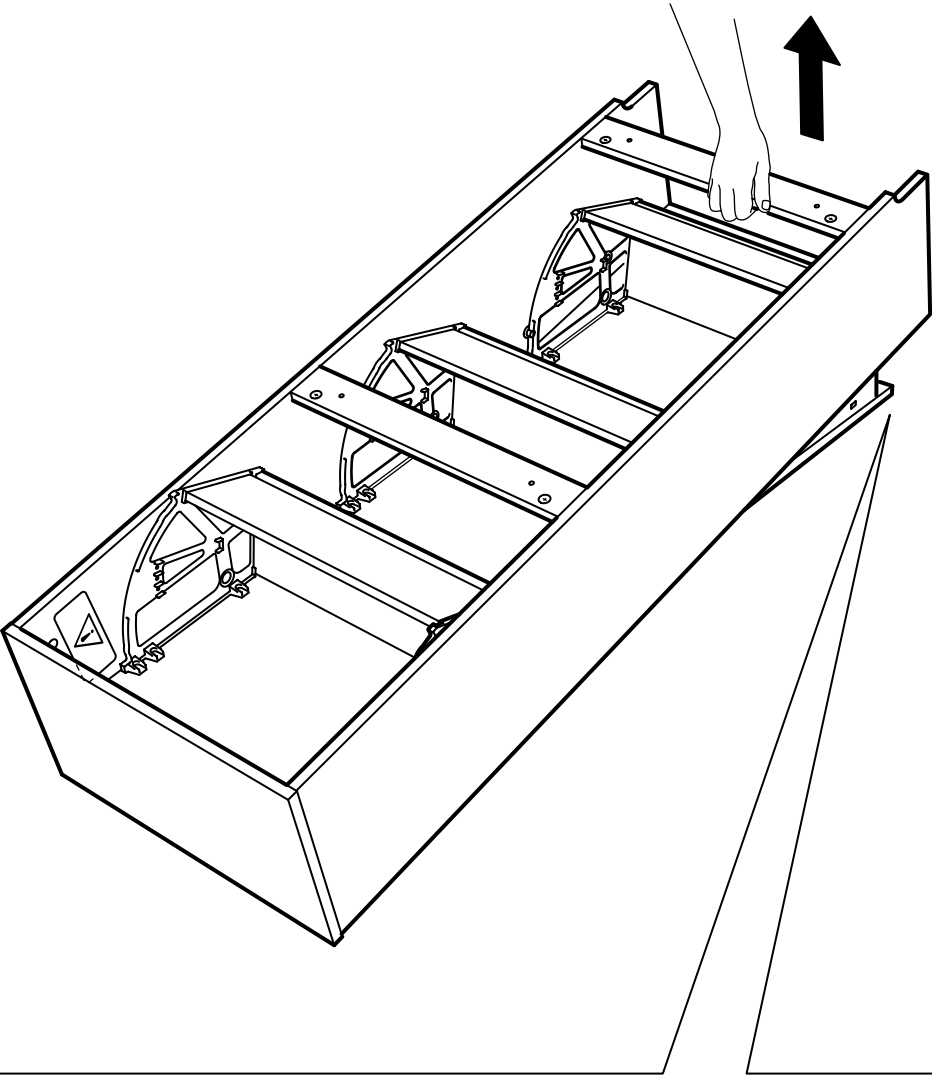 

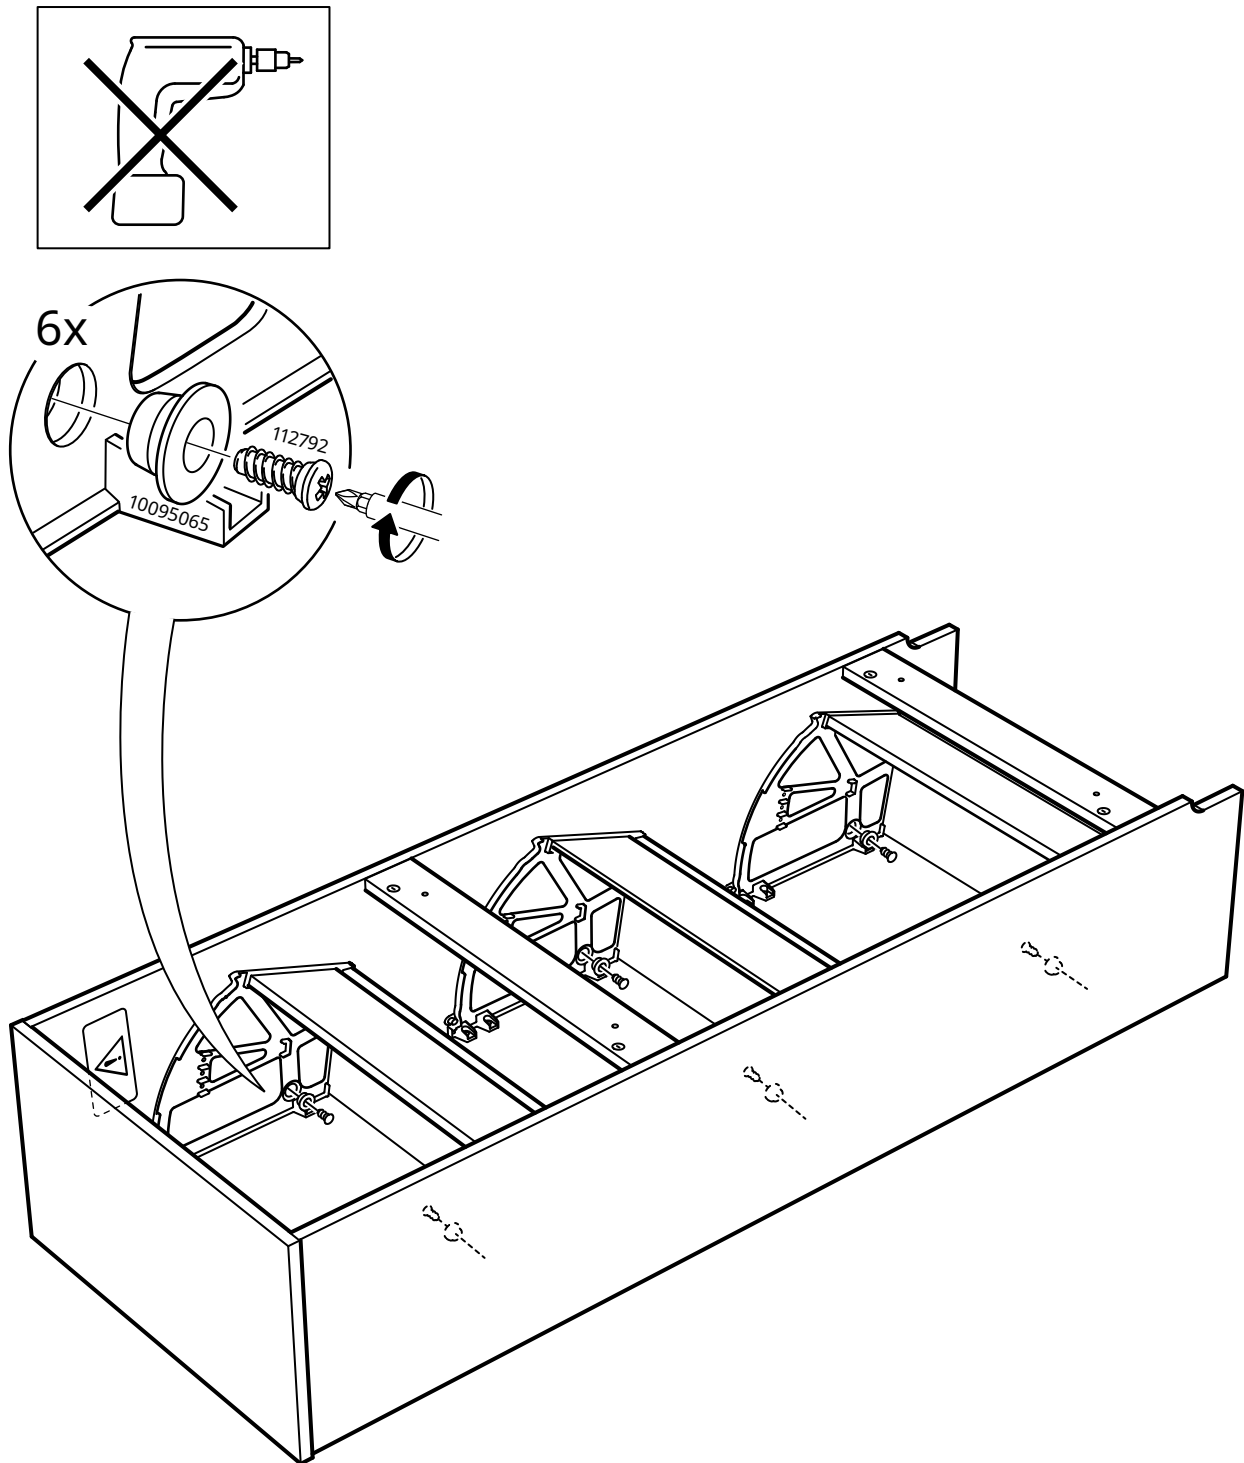 




www.IKEA.com/secure-it



 
www.IKEA.cn/secure-it

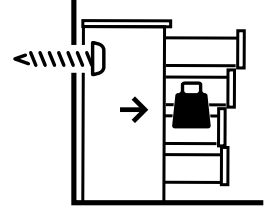

English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

 
A

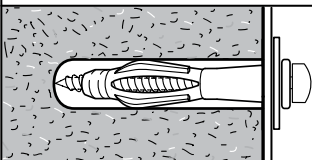


Ø 8 mm
(5/16")



 
1




2

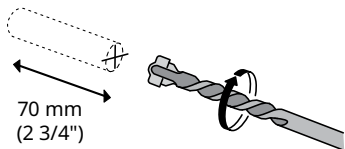 

3

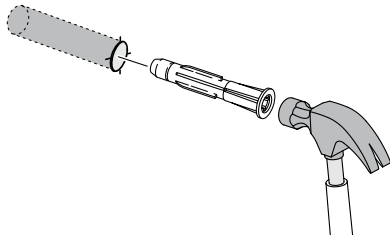 


B

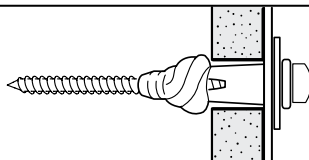 


Ø 8 mm
(5/16")



 
1




2

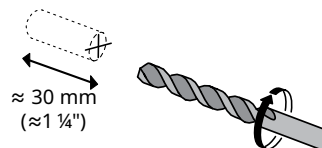 

3

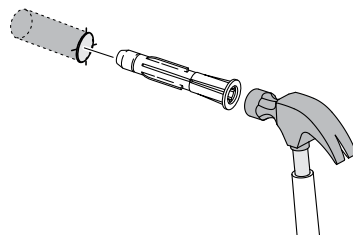 


C

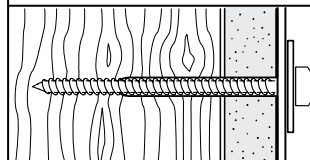 


Ø 3 mm
(1/8")




 1



2

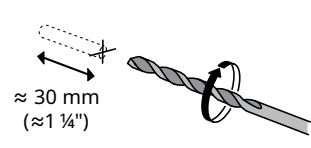 

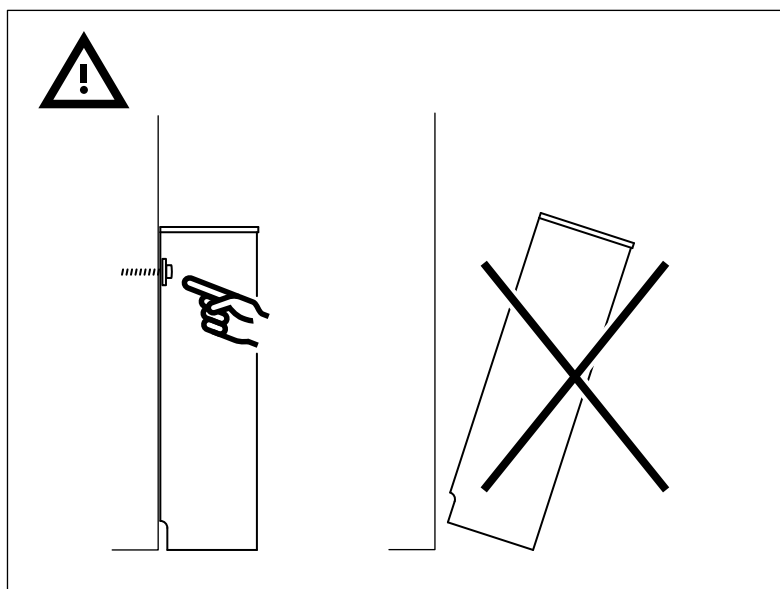 

22

