 
 
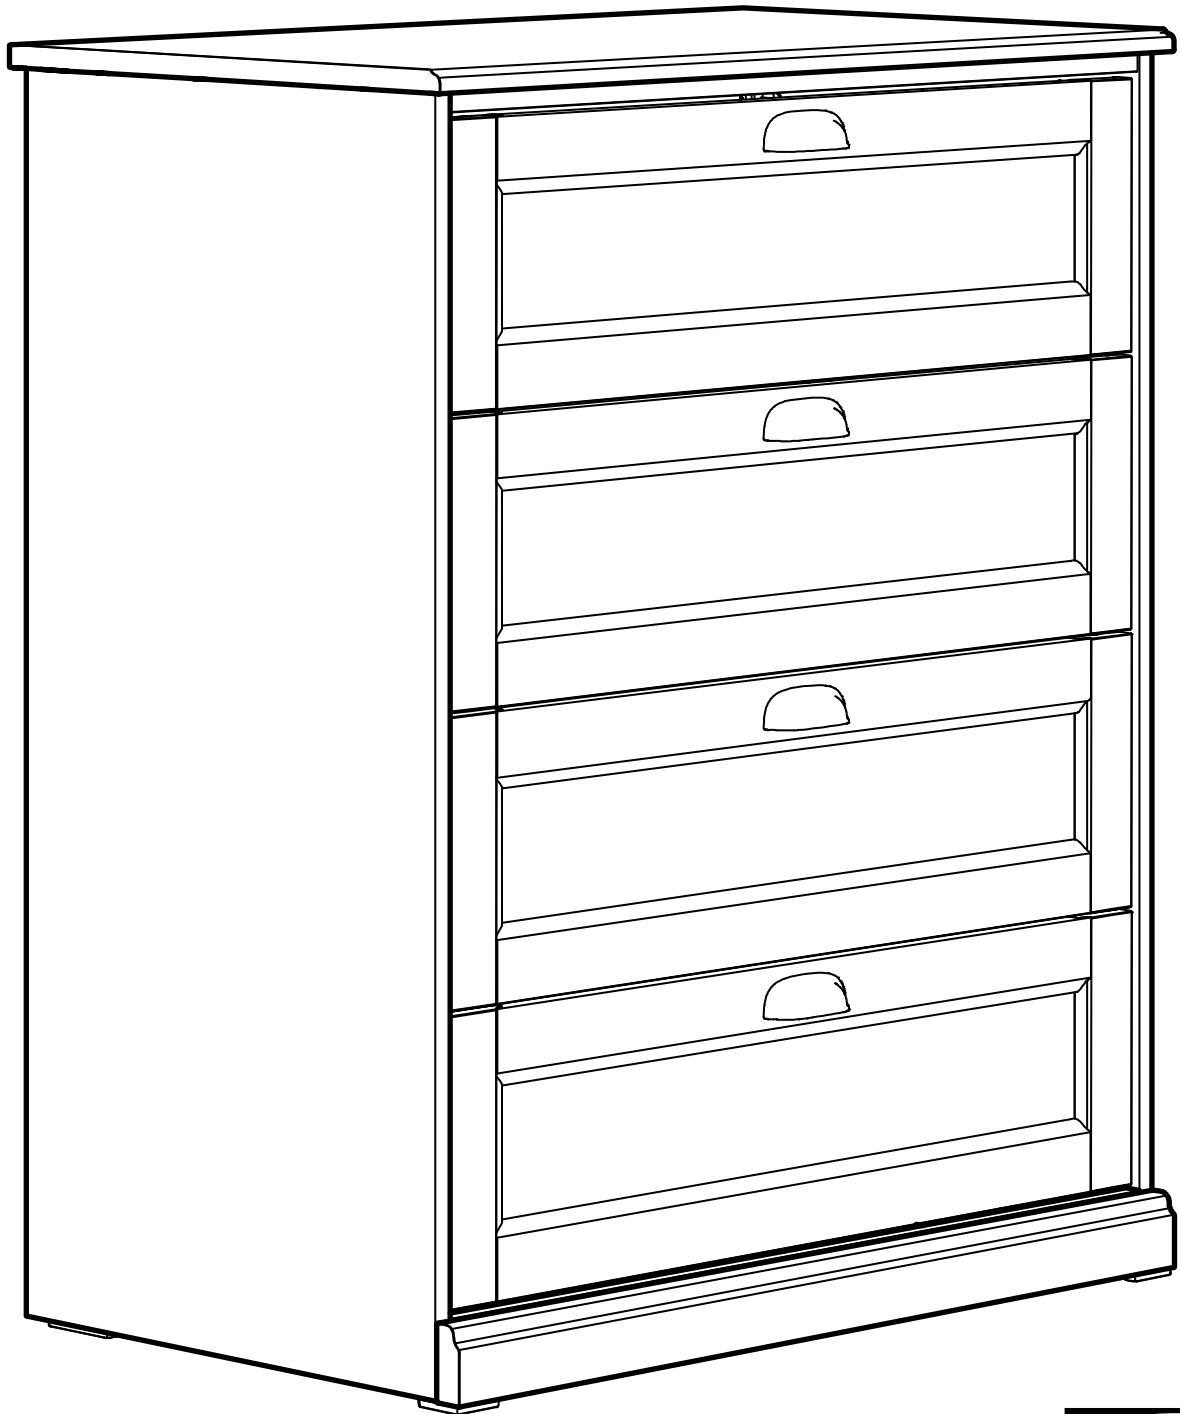 
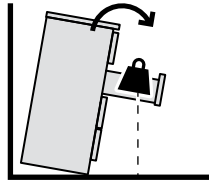 


FÅGELFJÄLLET

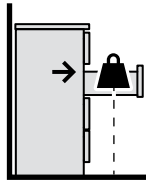

Design and Quality
IKEA of Sweden



English

WARNING!

Children have died from furniture tipover.

To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.


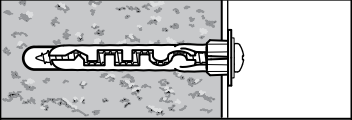 
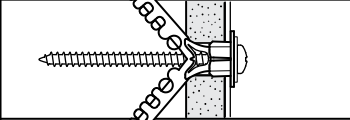 
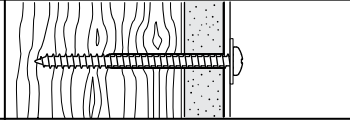 
 
 

NEVER open more than one drawer at a time.






DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.

Place heaviest items in the lowest drawers.

Read and follow each step of the instruction carefully.

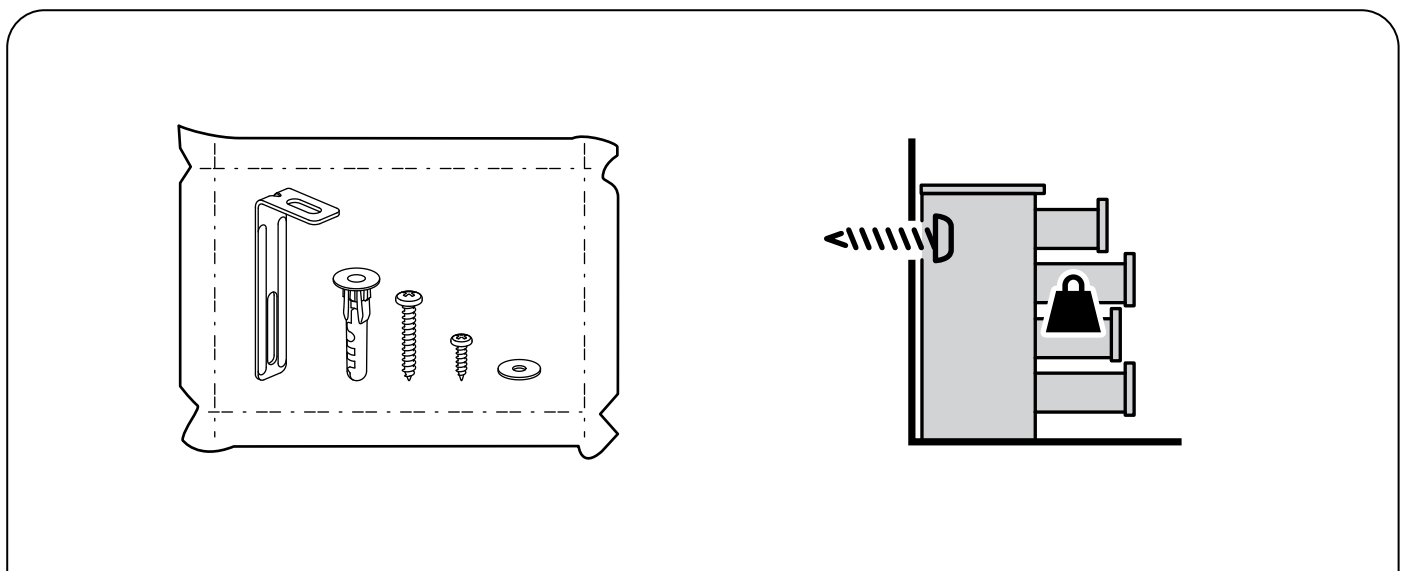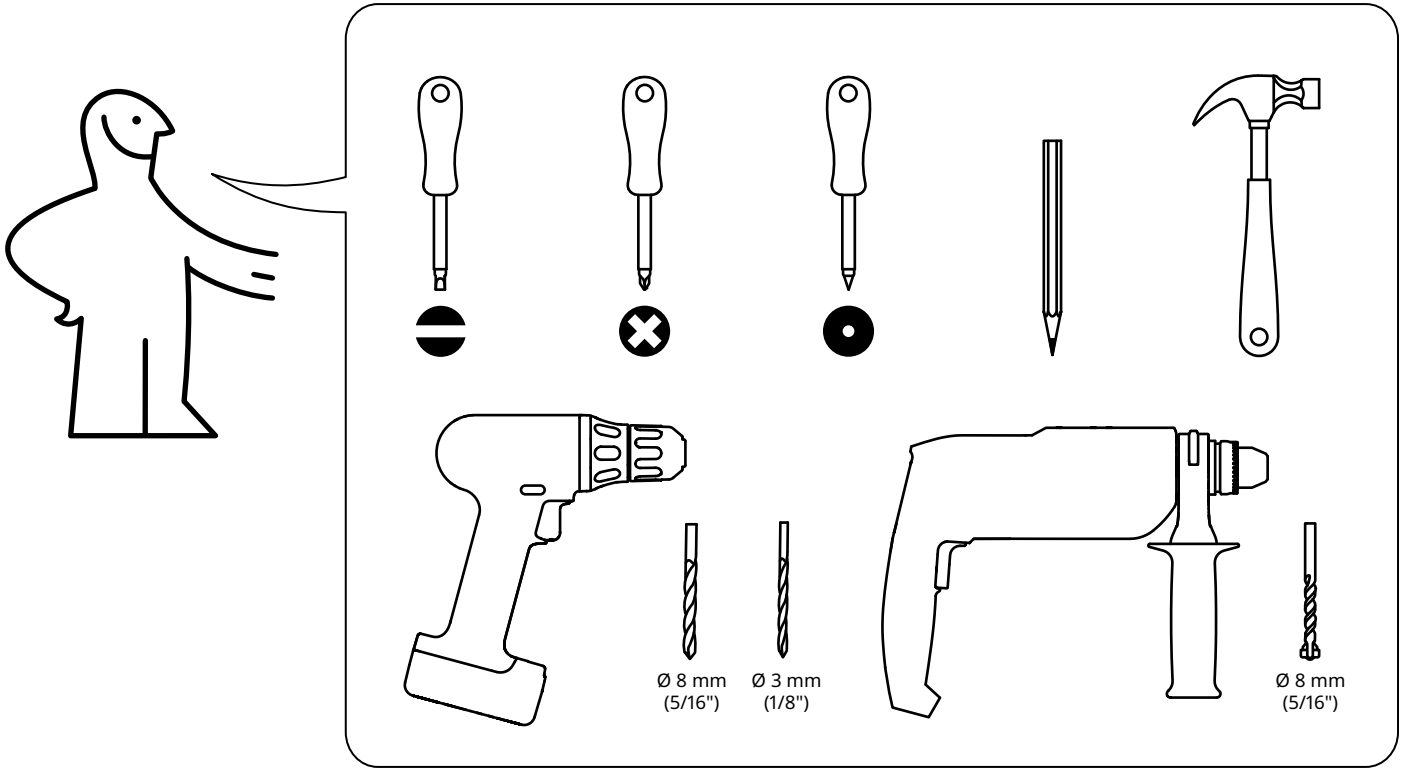


 <p>www.IKEA.com/secure-it</p>	A	B	C
			
	$\text{Ø } 8 \text{ mm (5/16")}$ 	$\text{Ø } 8 \text{ mm (5/16")}$ 	$\text{Ø } 3 \text{ mm (1/8")}$ 

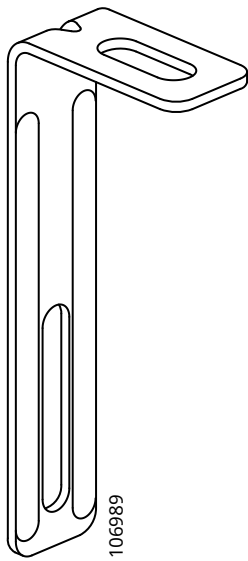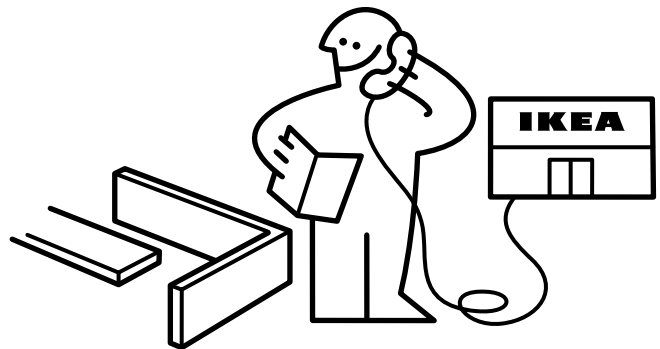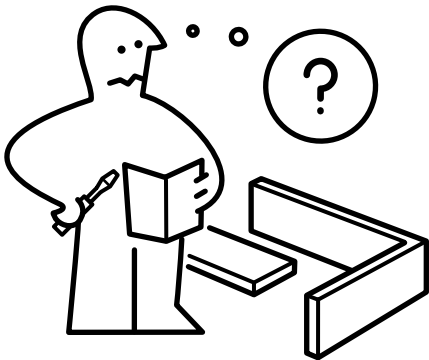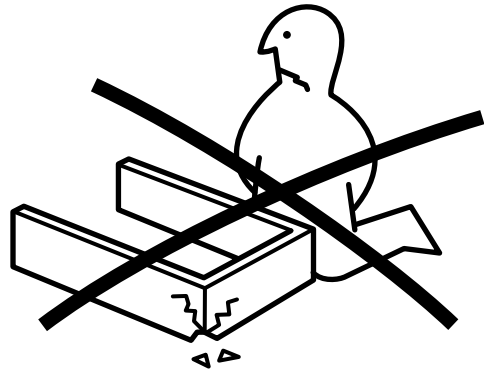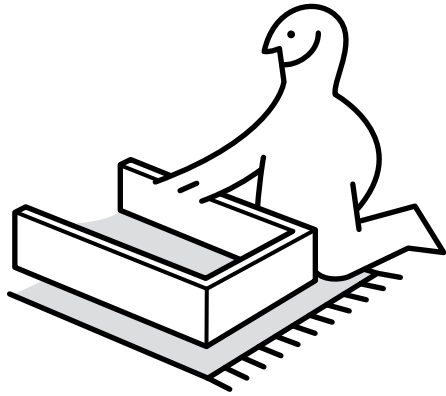     


106989

 2x

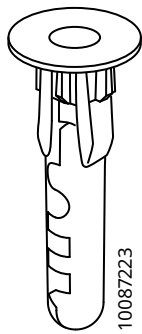

1008723

 2x




109567

2x



109049

 
2x



100823


4x

 1

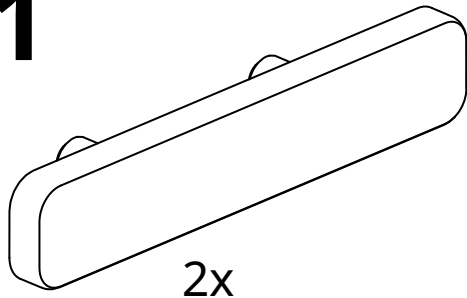


158568
10127144

 2x

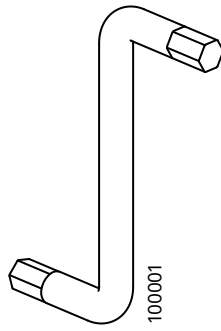


100001

 1x

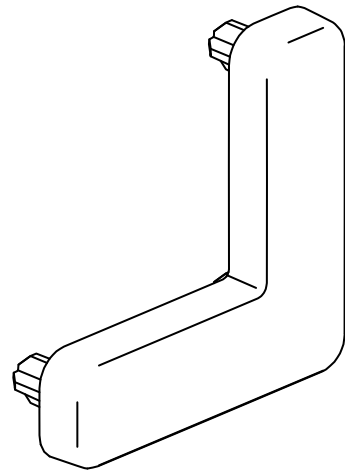


10101849
10099967

 2x



118331

 12x




100217

7x



101345

 18x

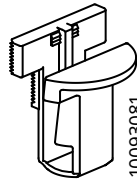


10093081

4x




10093082

 12x

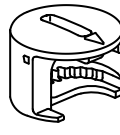

119250
119252

 12x



100359

 
1x



146114


24x

2

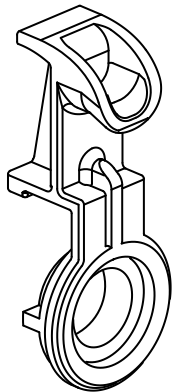


10133139

 4x




145718
159553
10120234

 16x




130449

 16x




119976

 8x

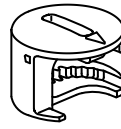

119030
118224
117434

 
32x

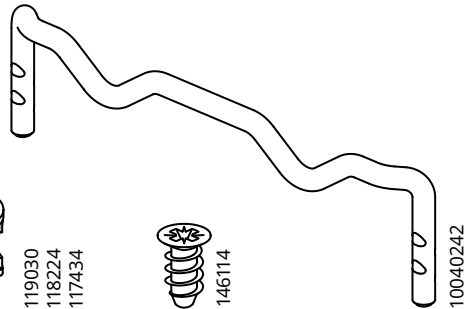

10040242


24x

 4x

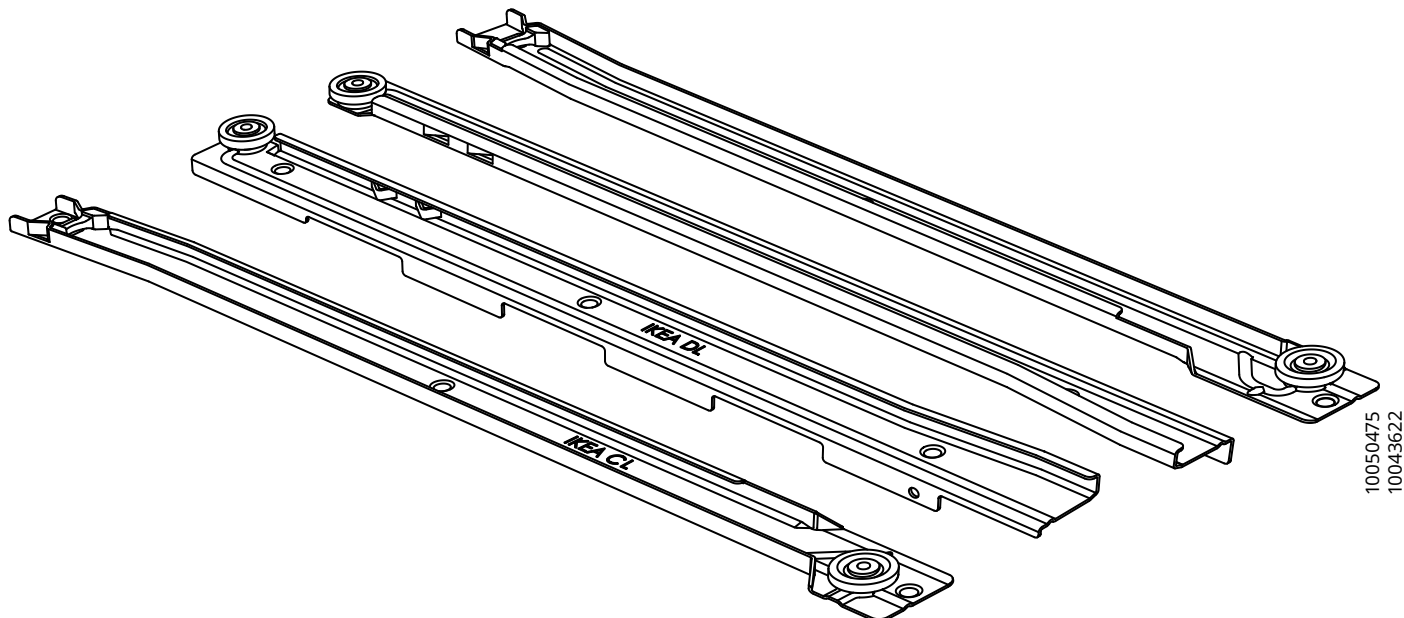


10050475
10043622

 4x

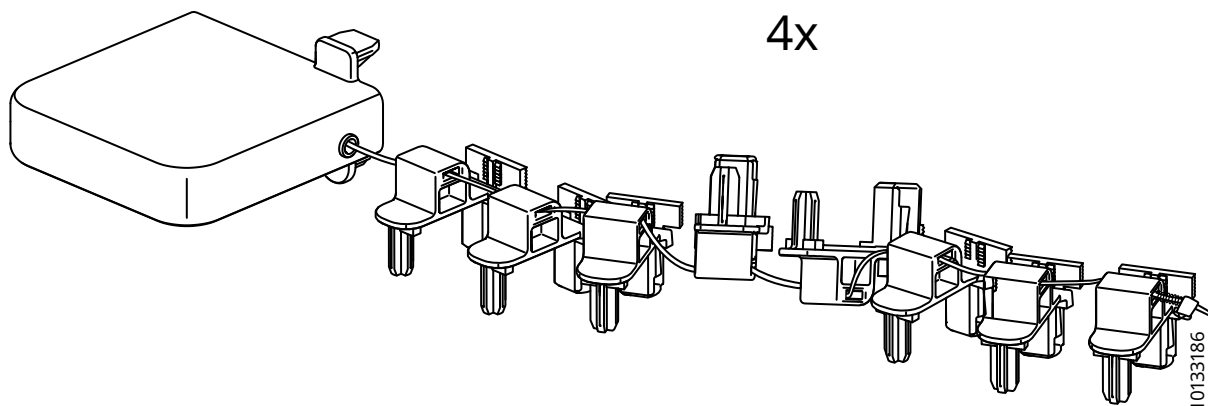


10133186

 1x

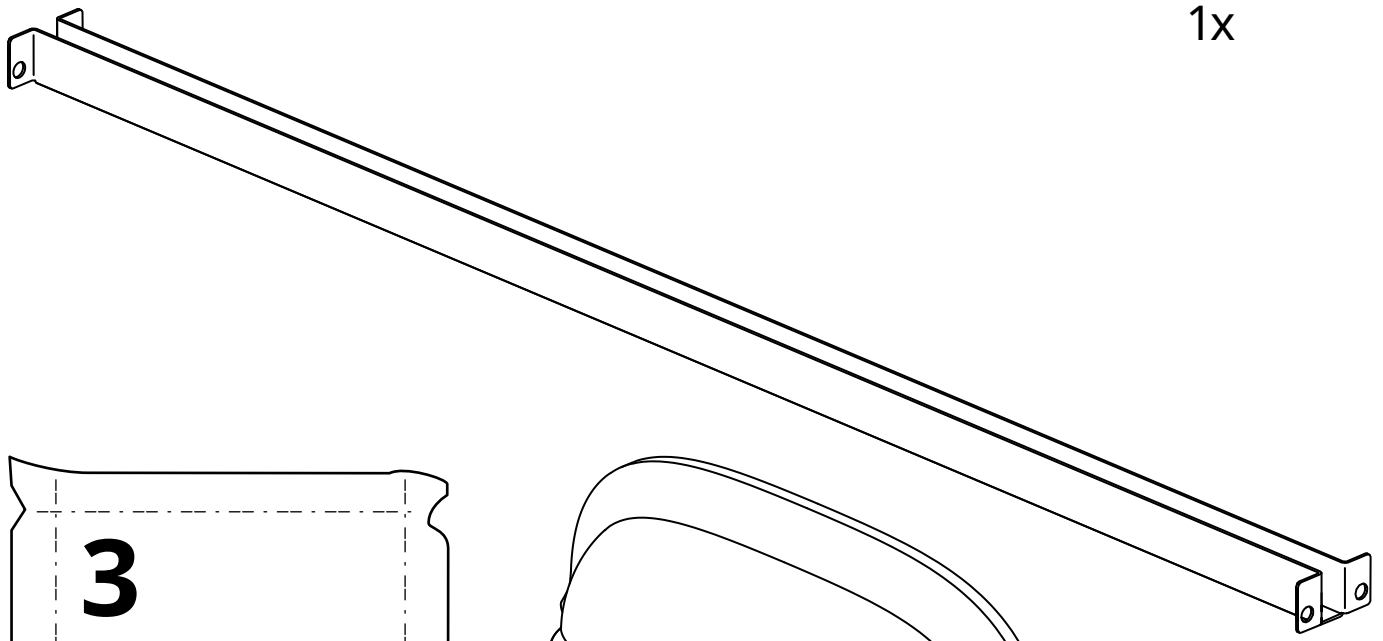

158473

 1x

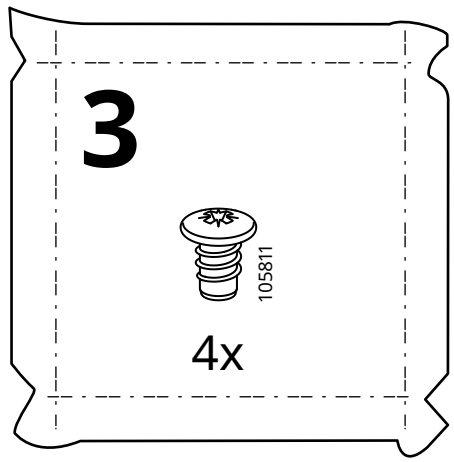


3



105811


 
4x

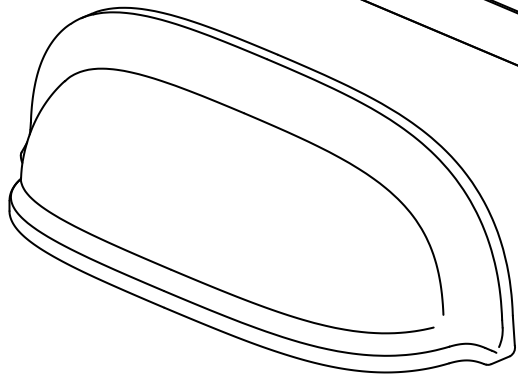


10142618

4x

  
1

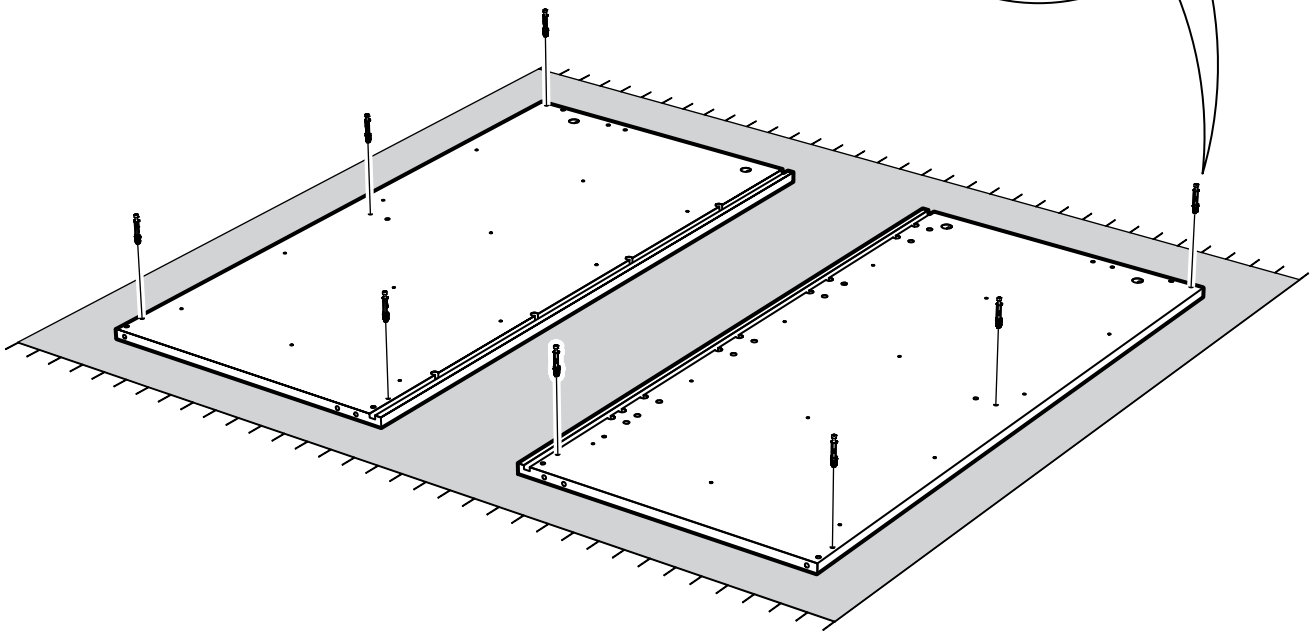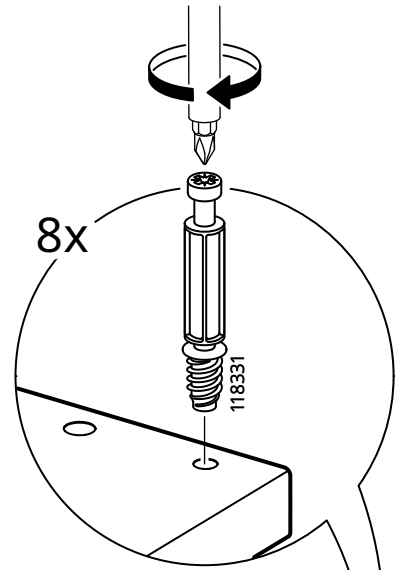


2

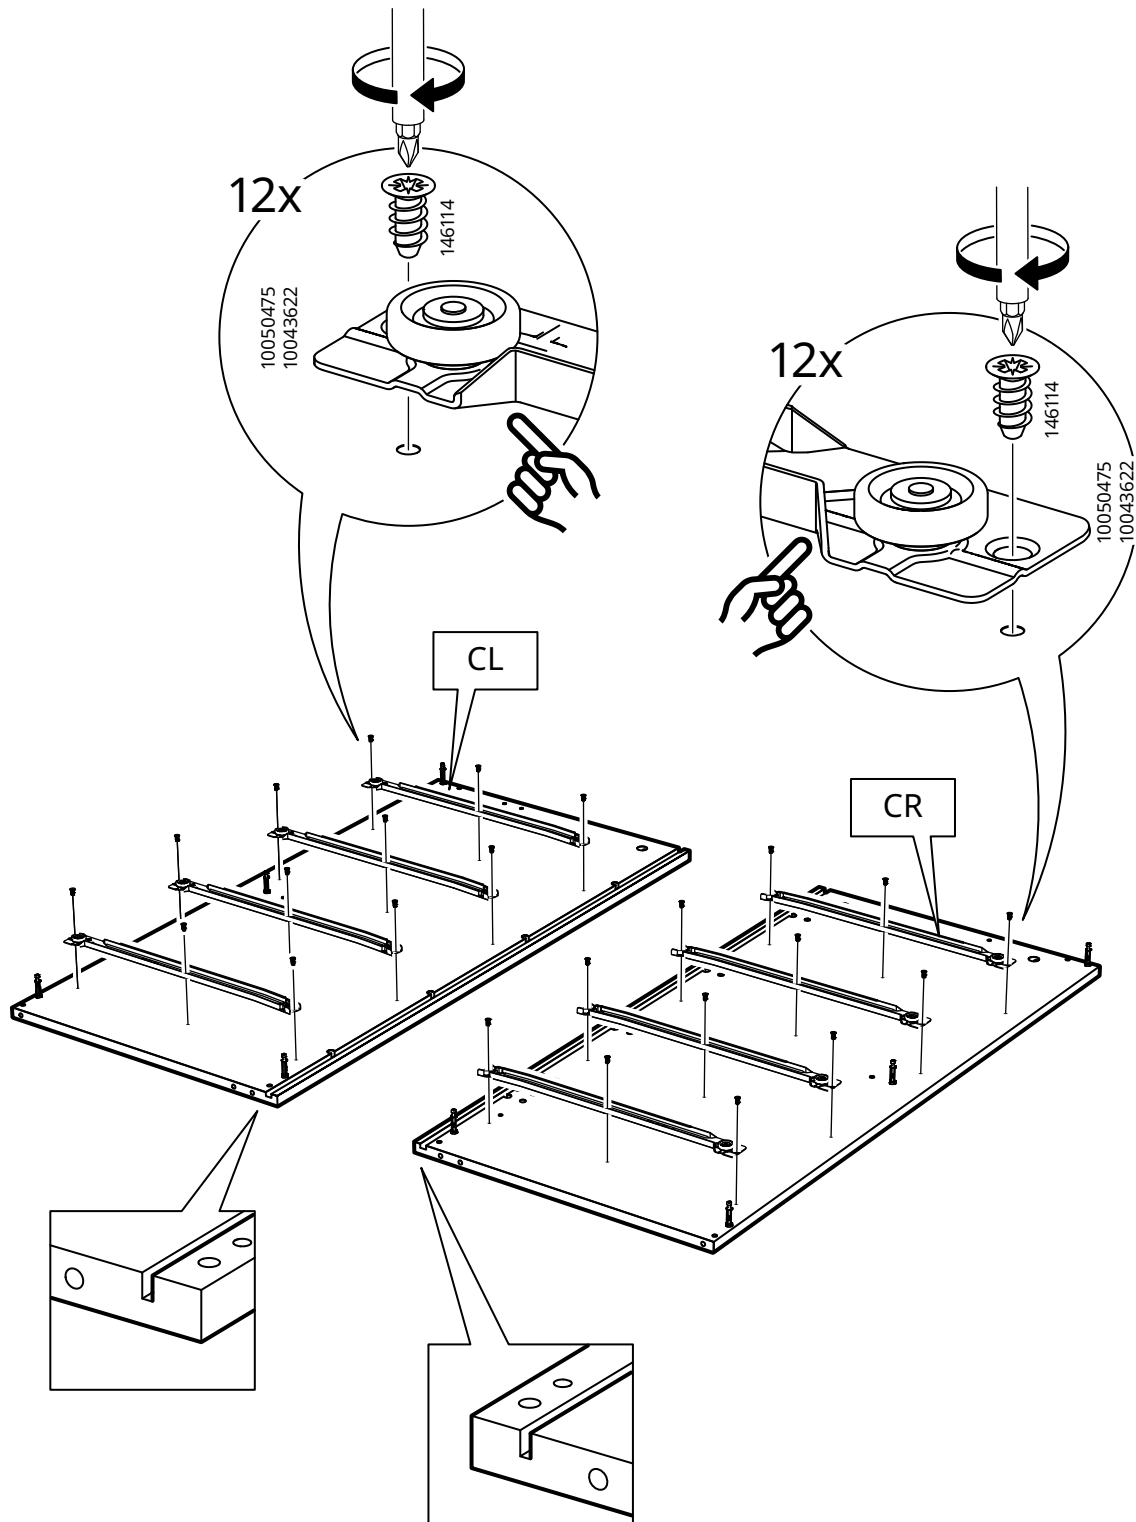 


3

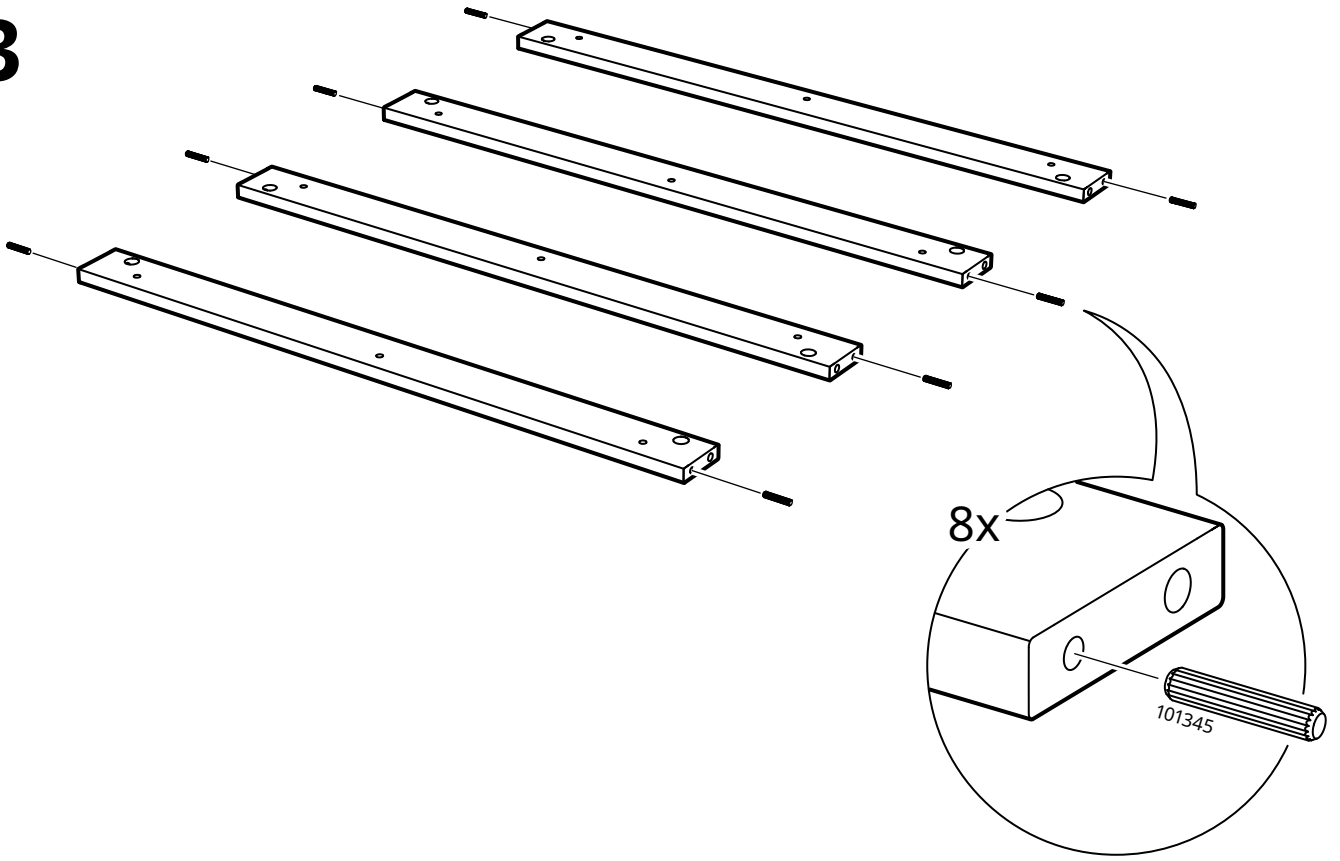 


4

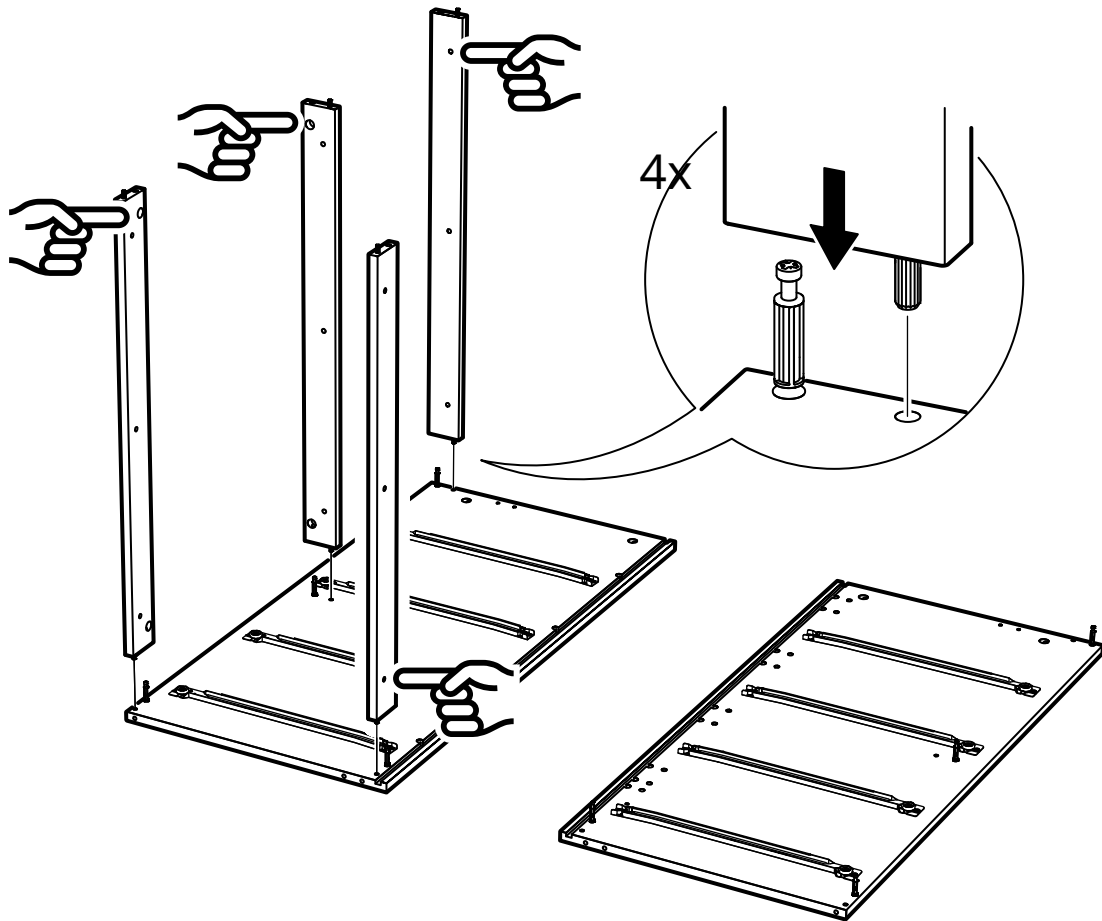 


5

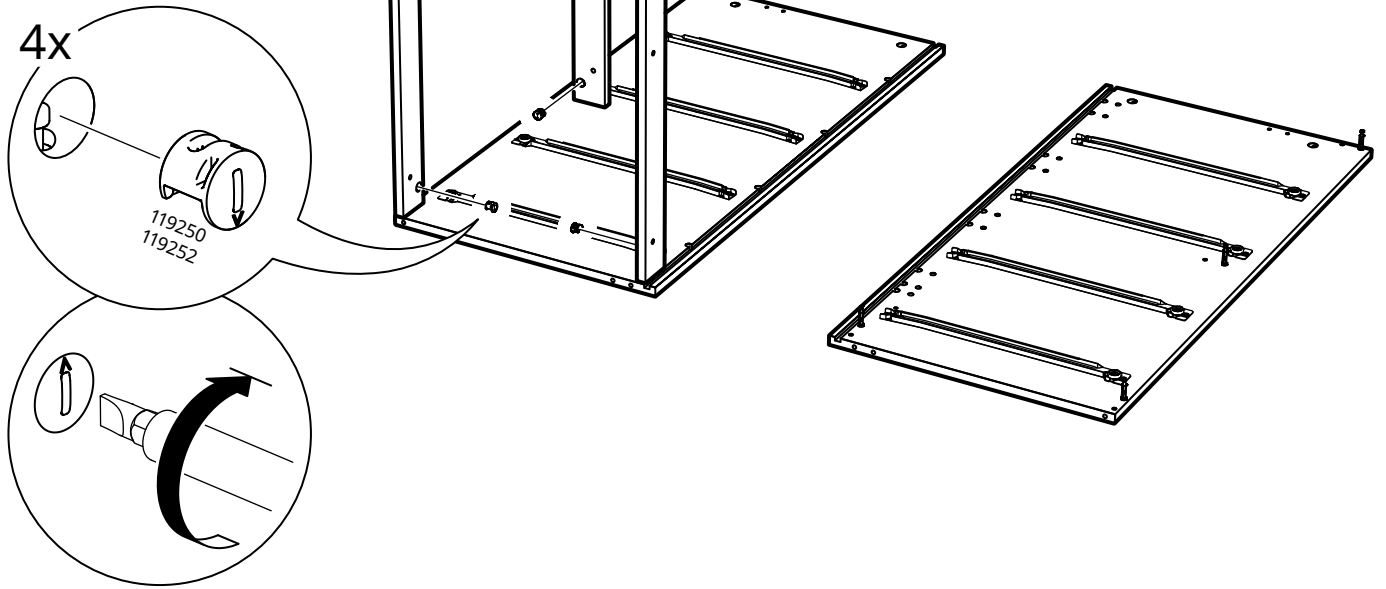 


6

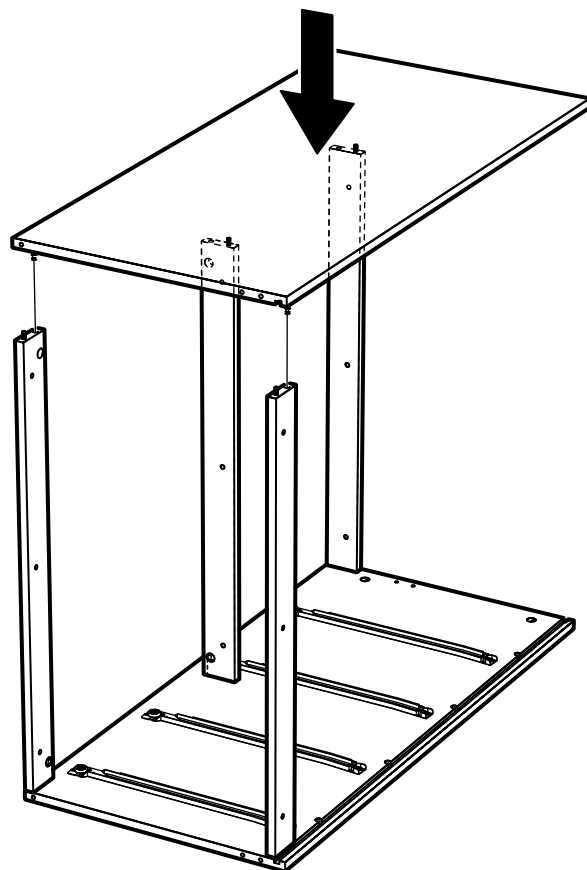 


7

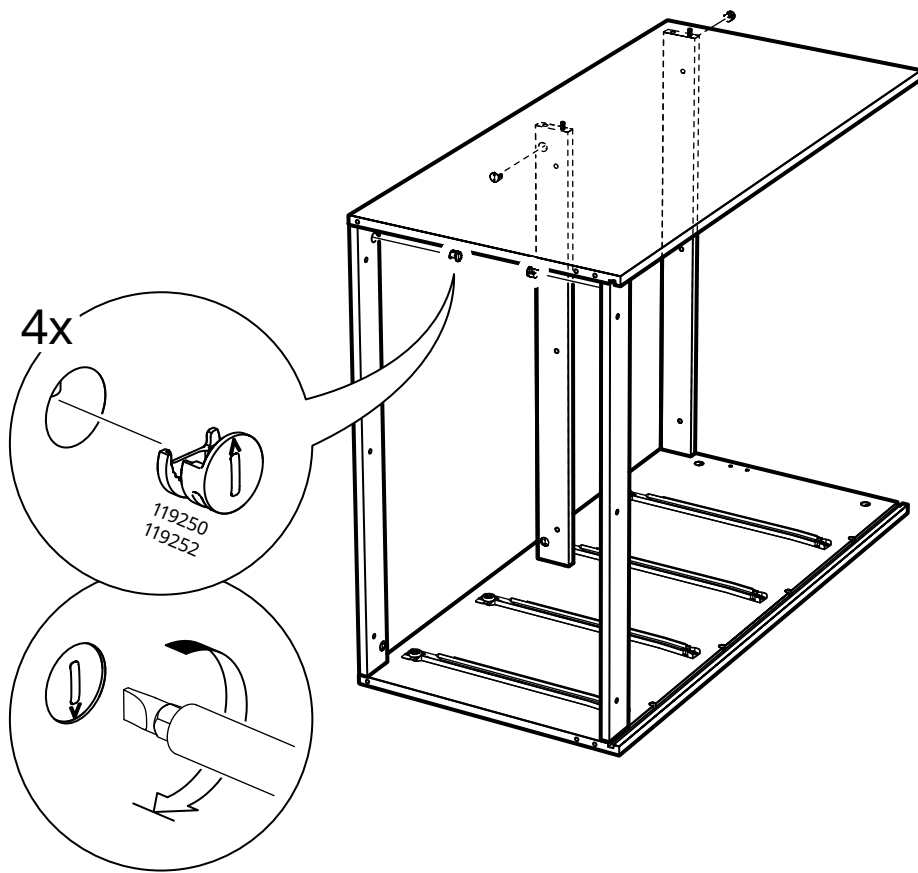 


8

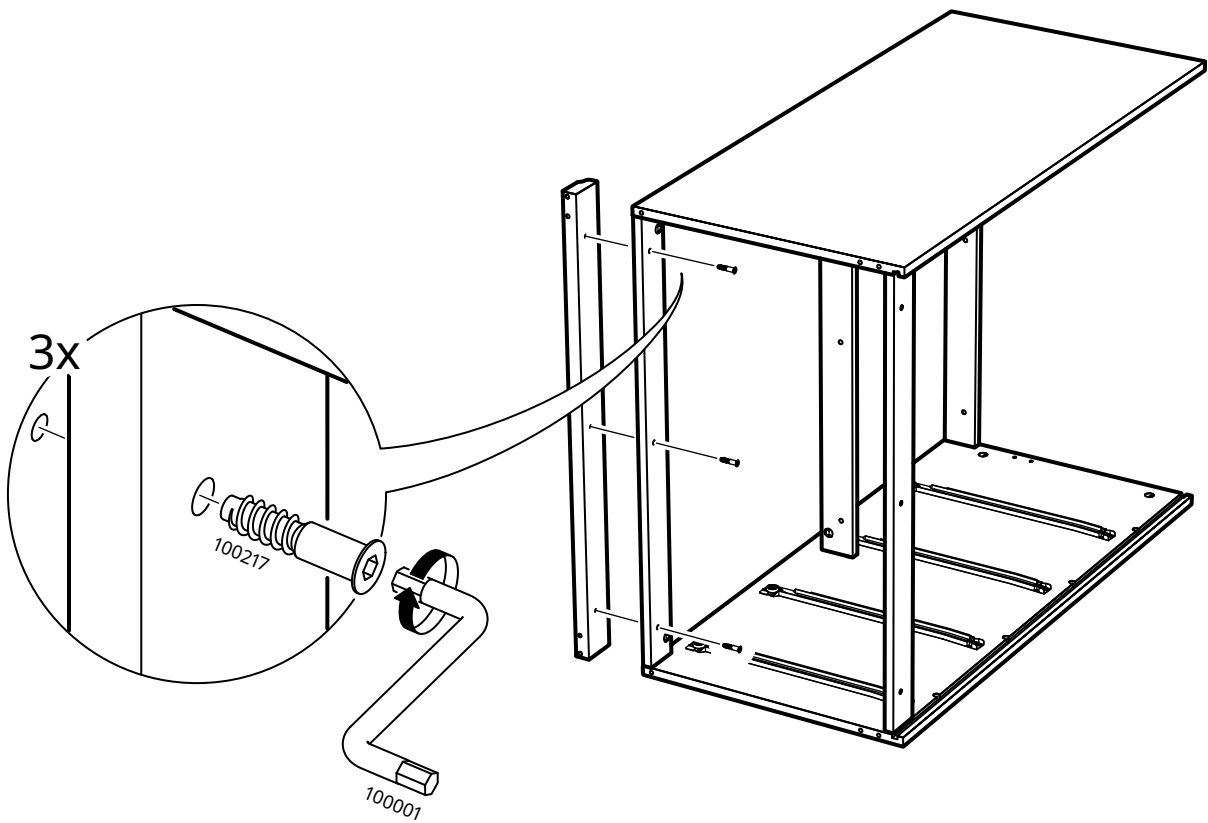 


9

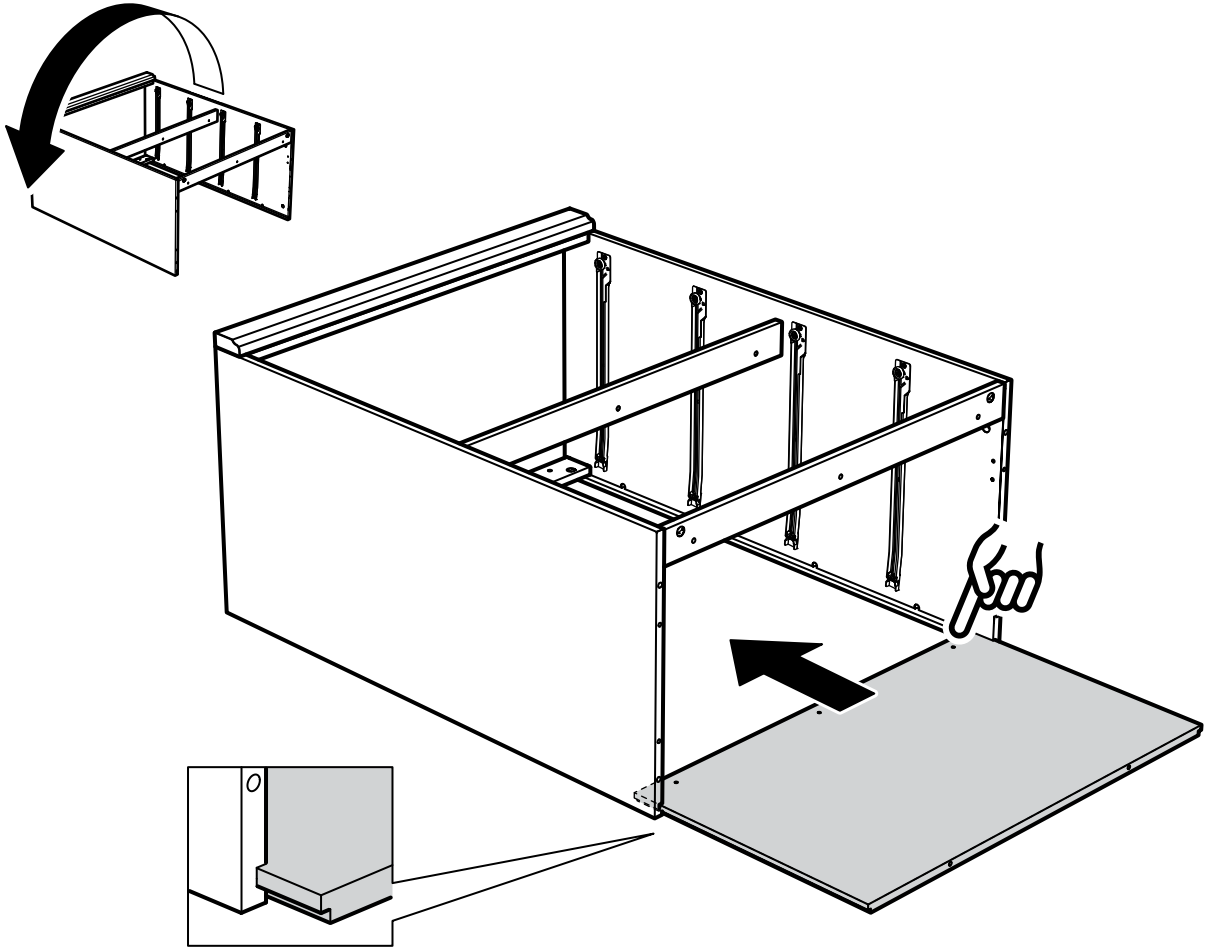 


10

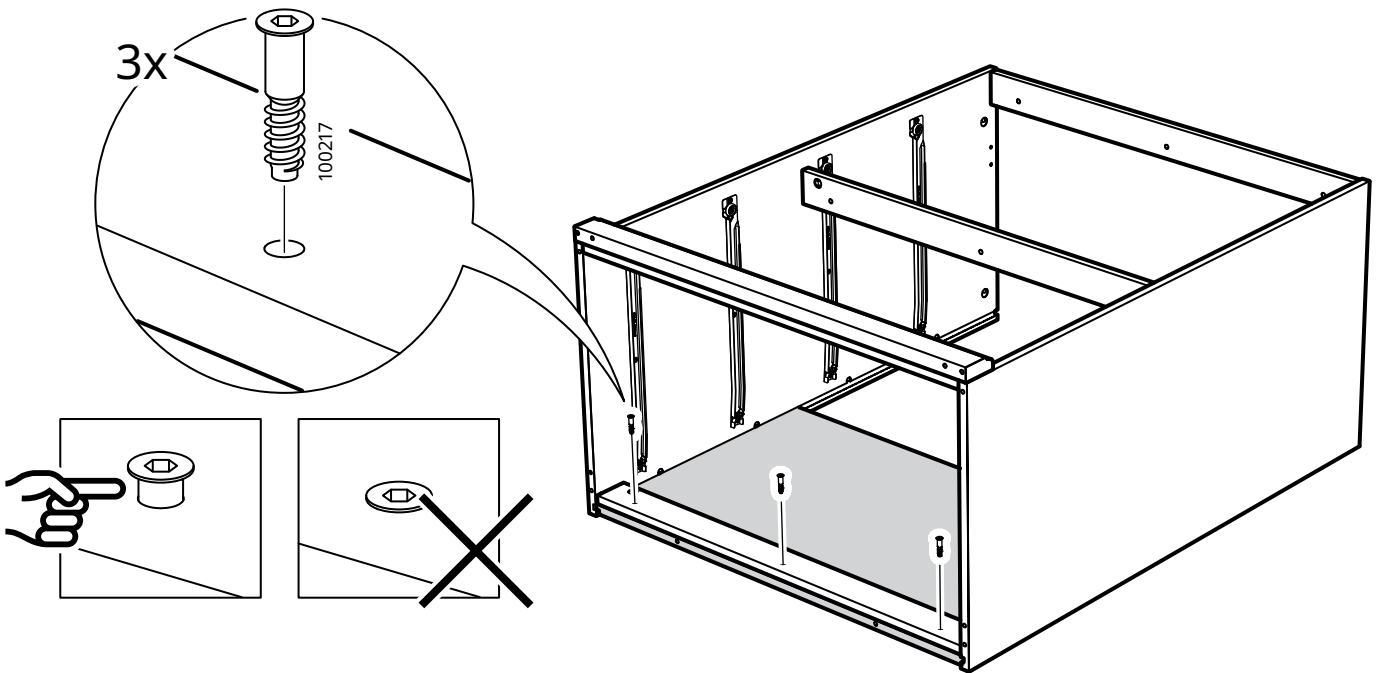 


11

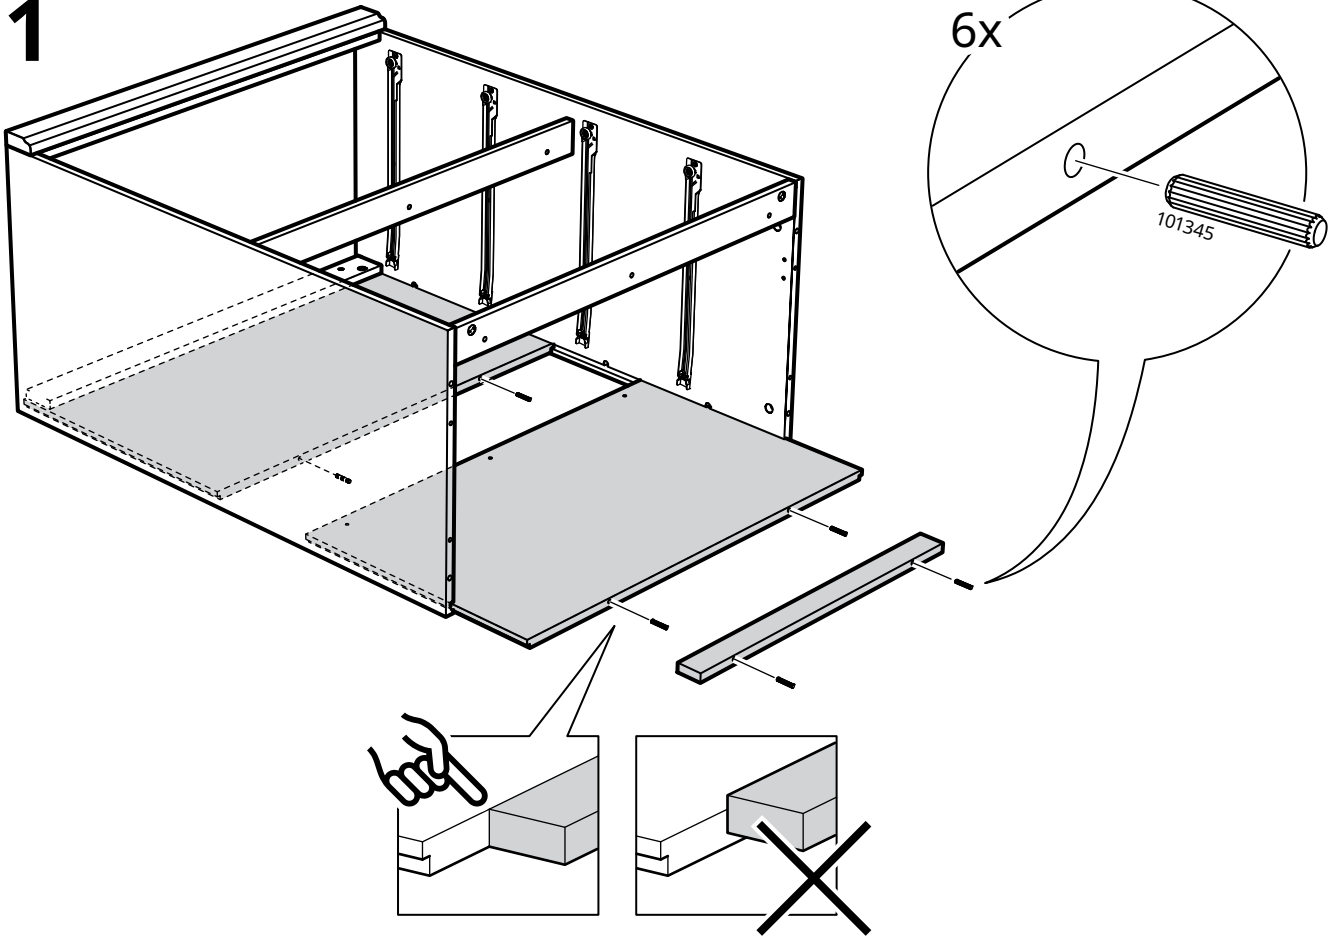 


12

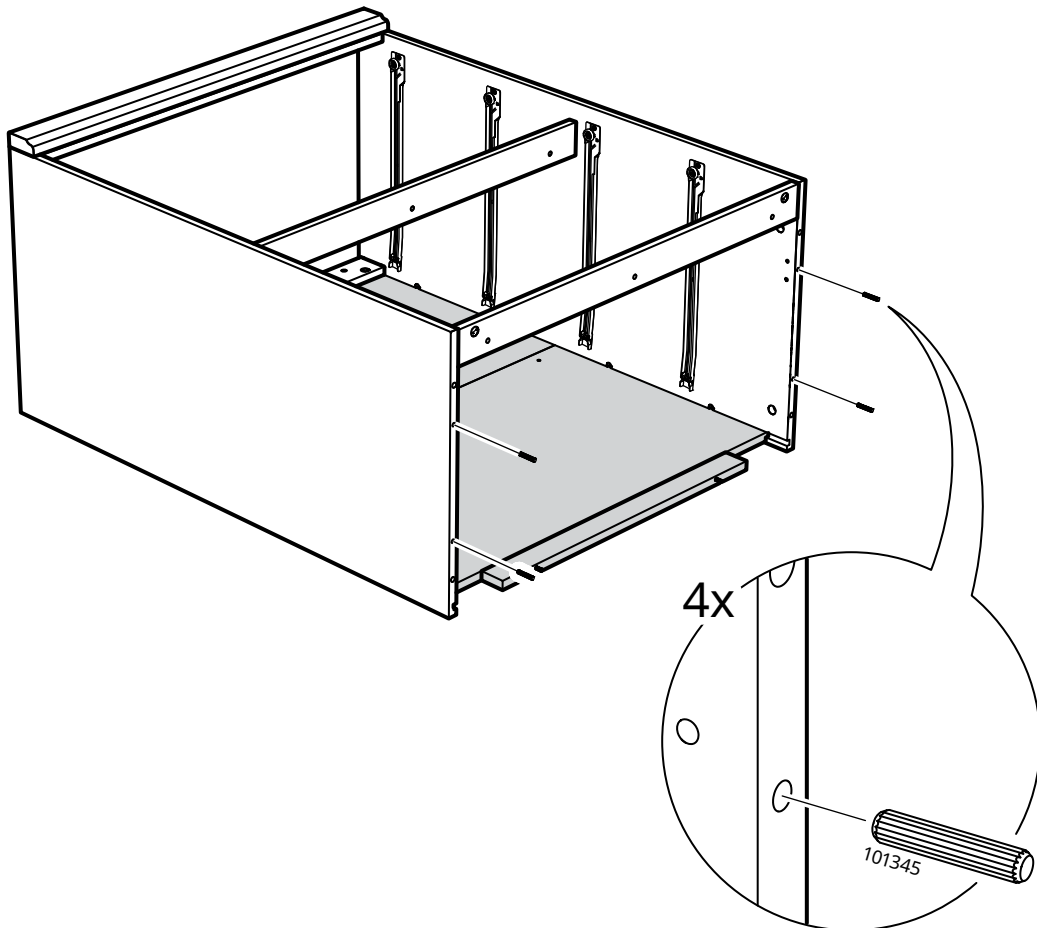 


13

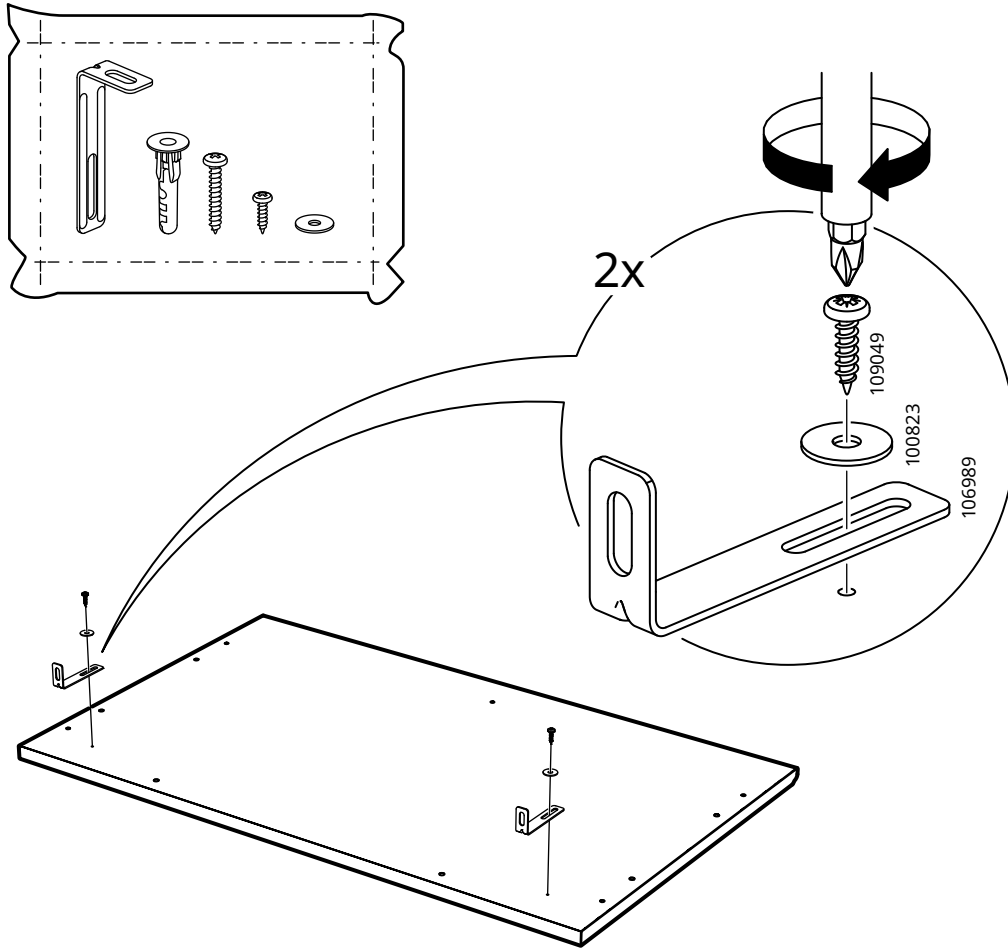 


14

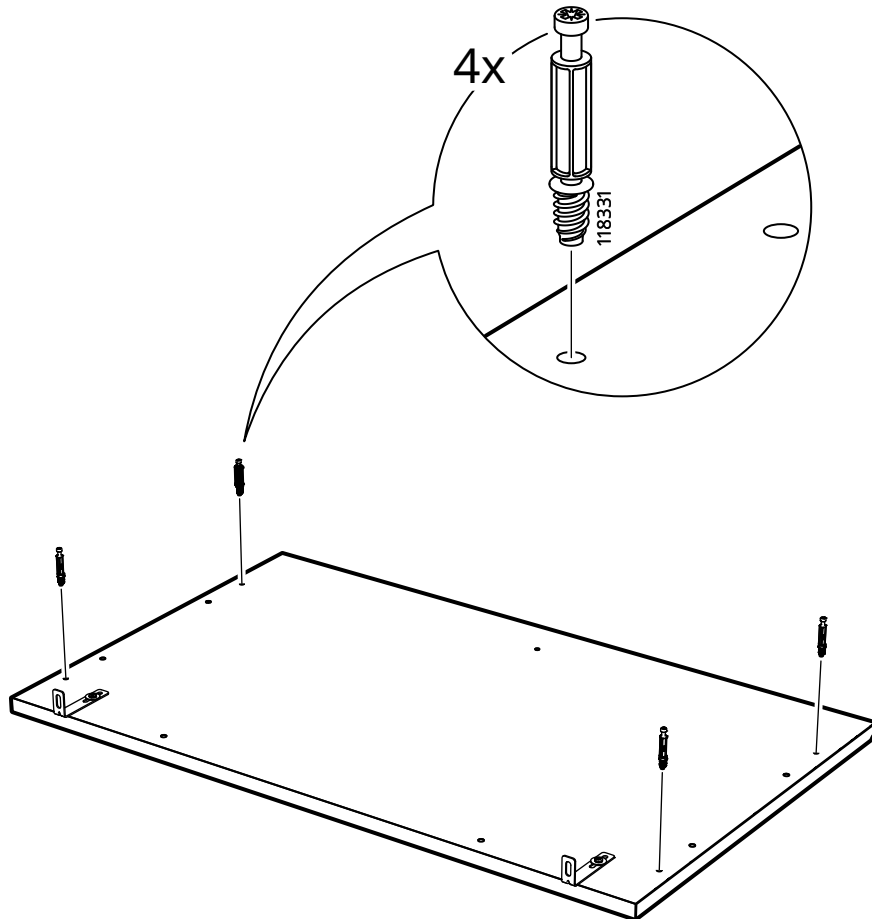 


15

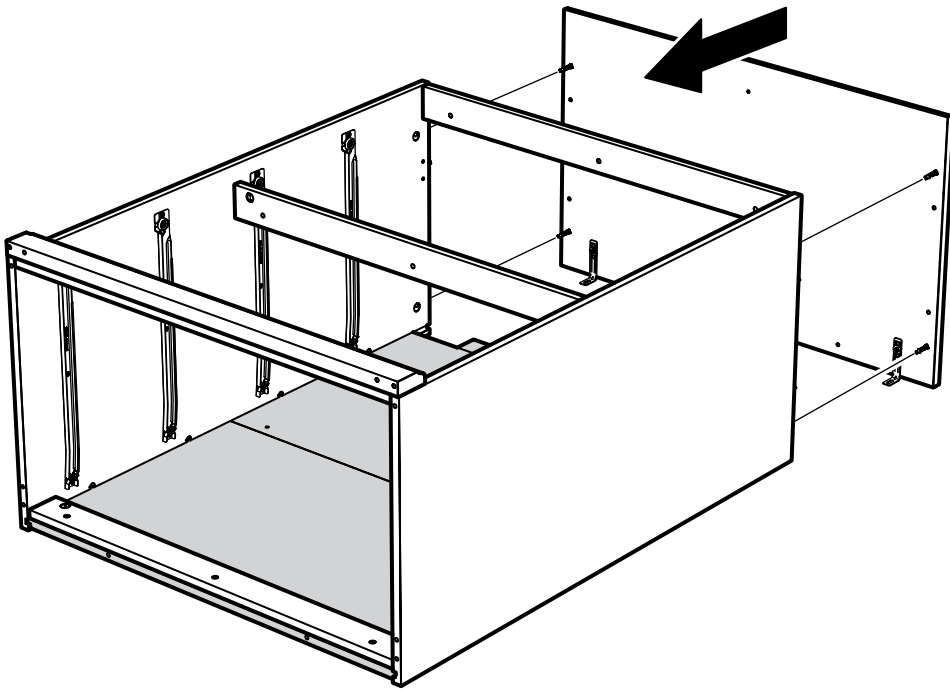 


16

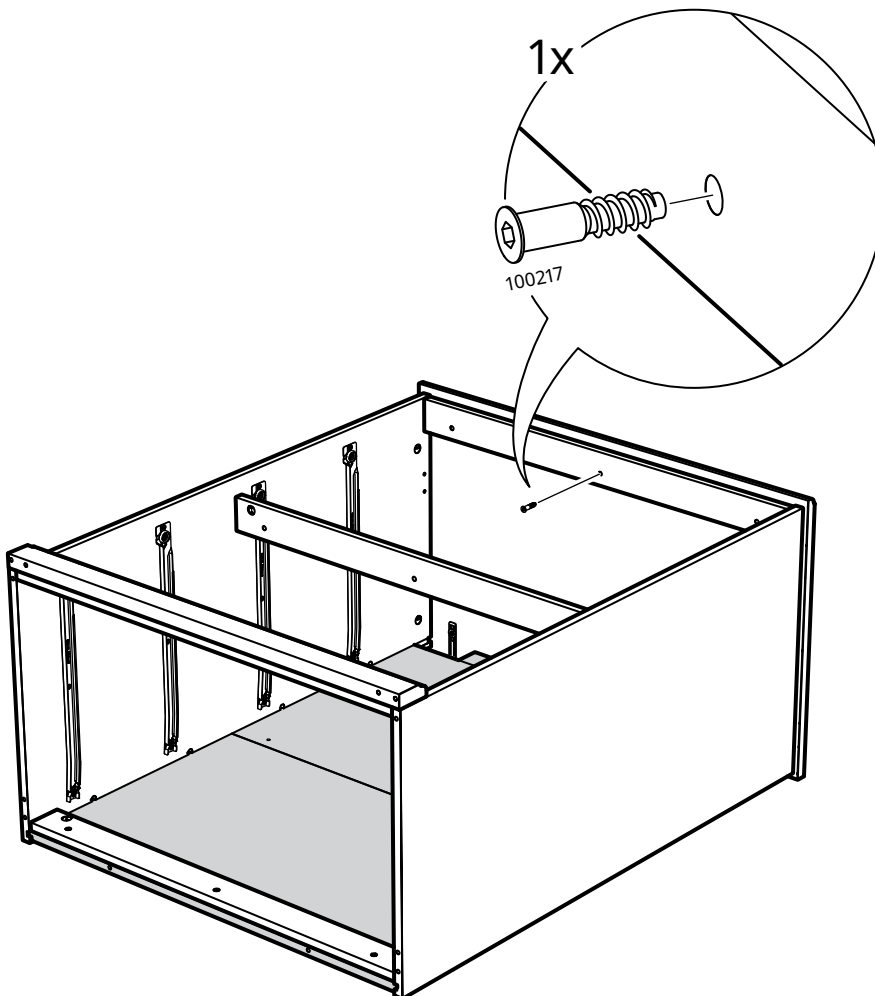 


17

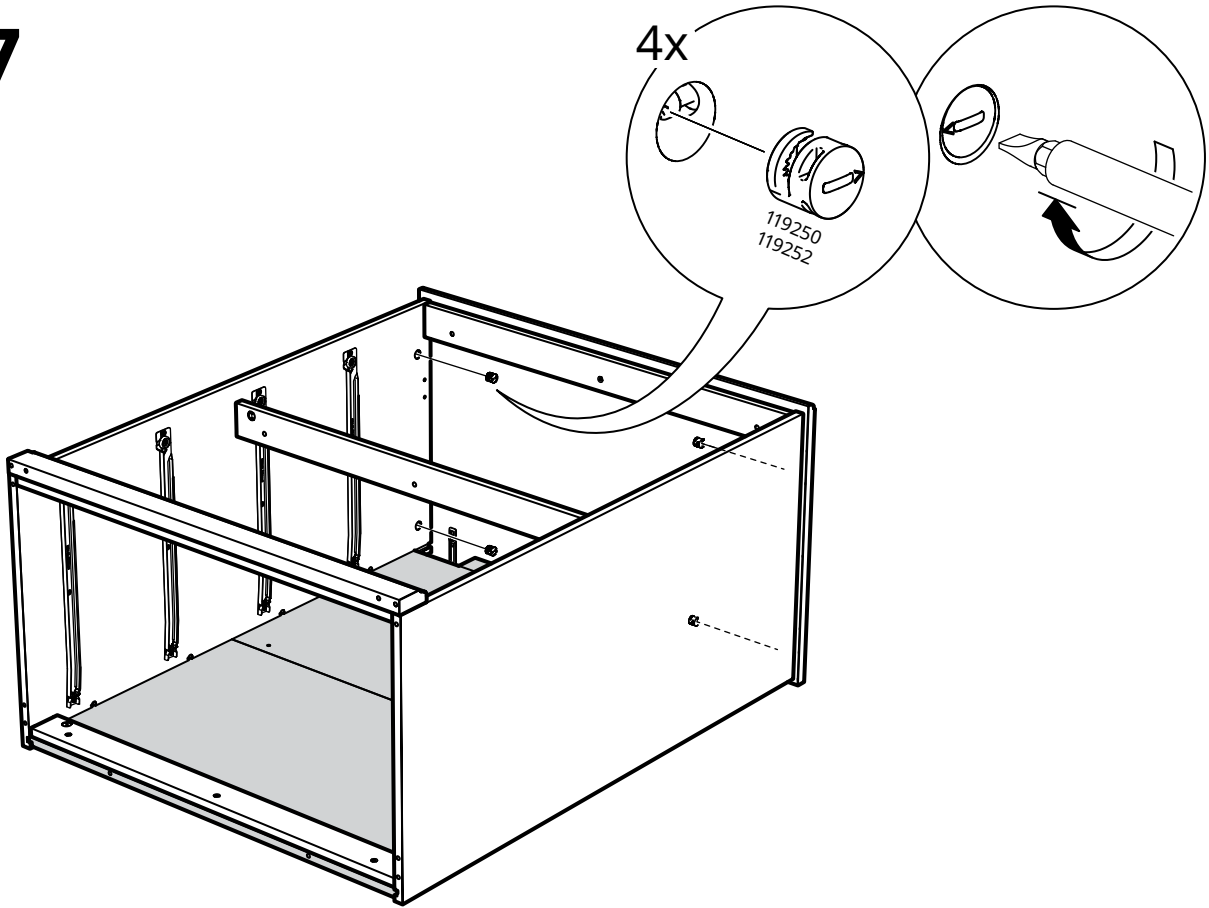 


18

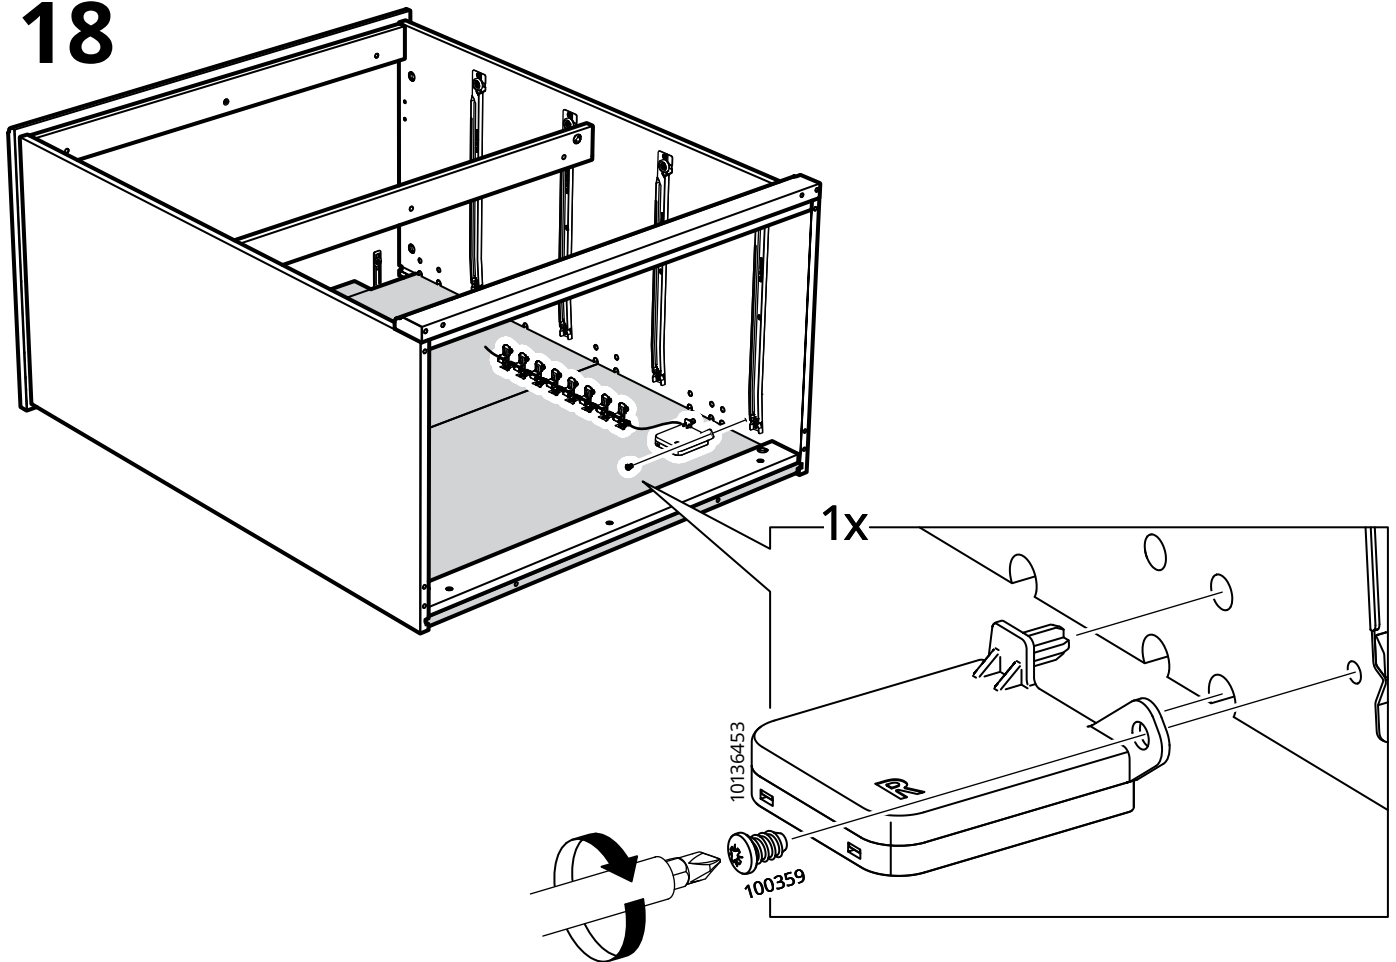 


19

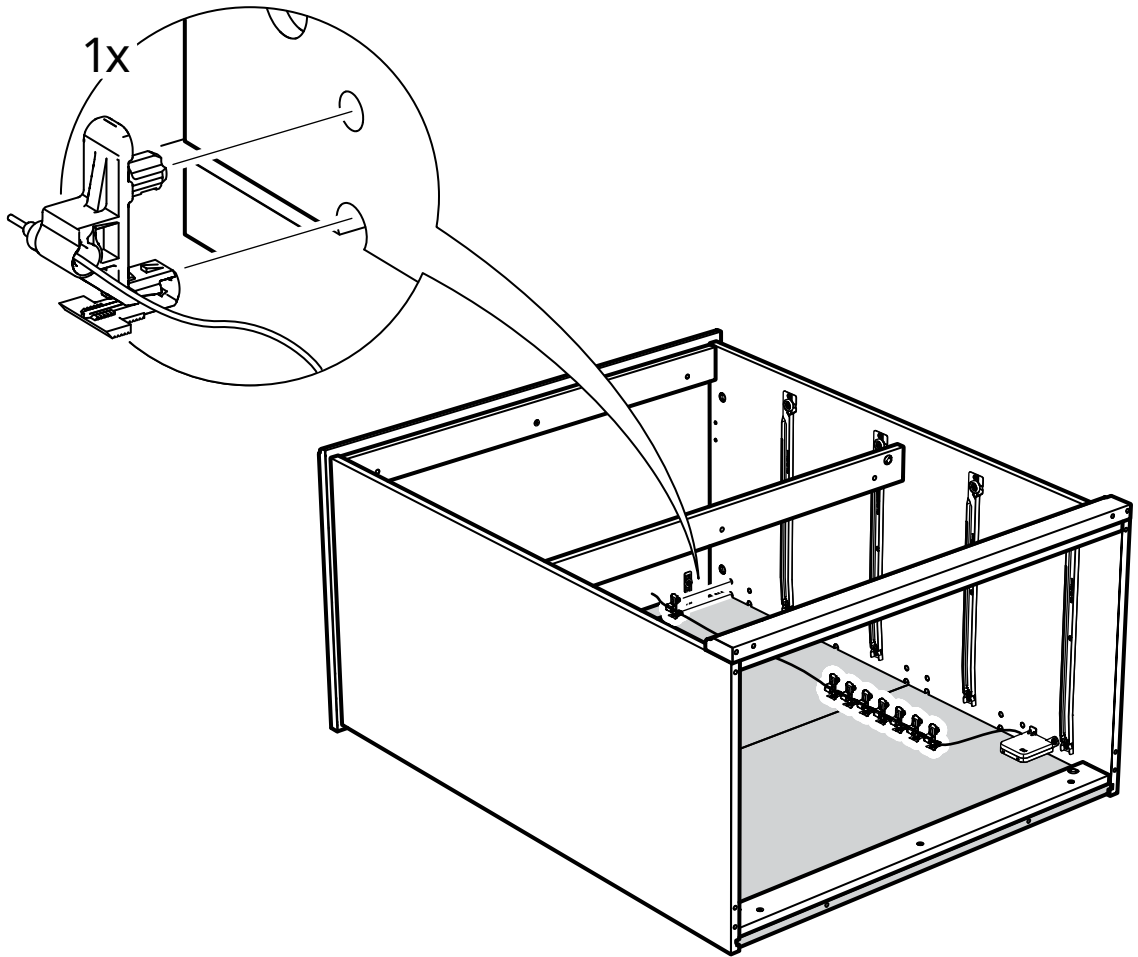 


20

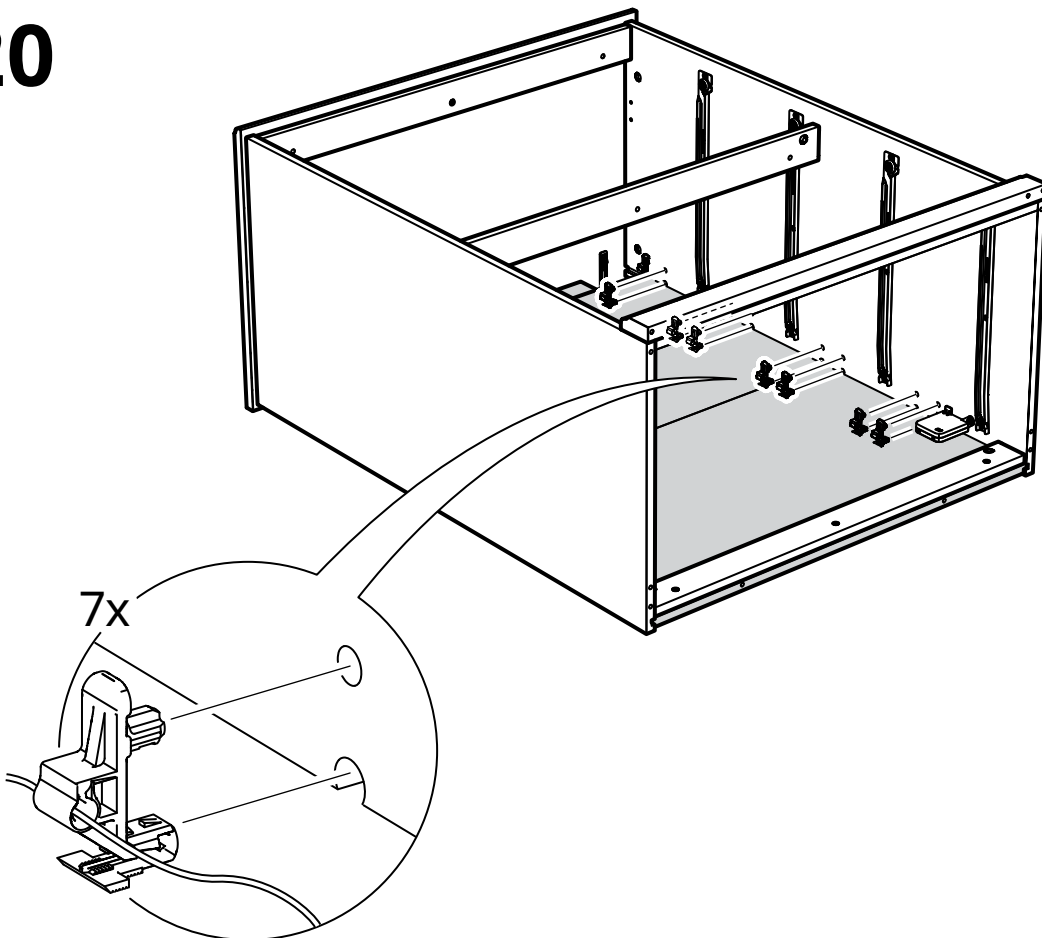 


21

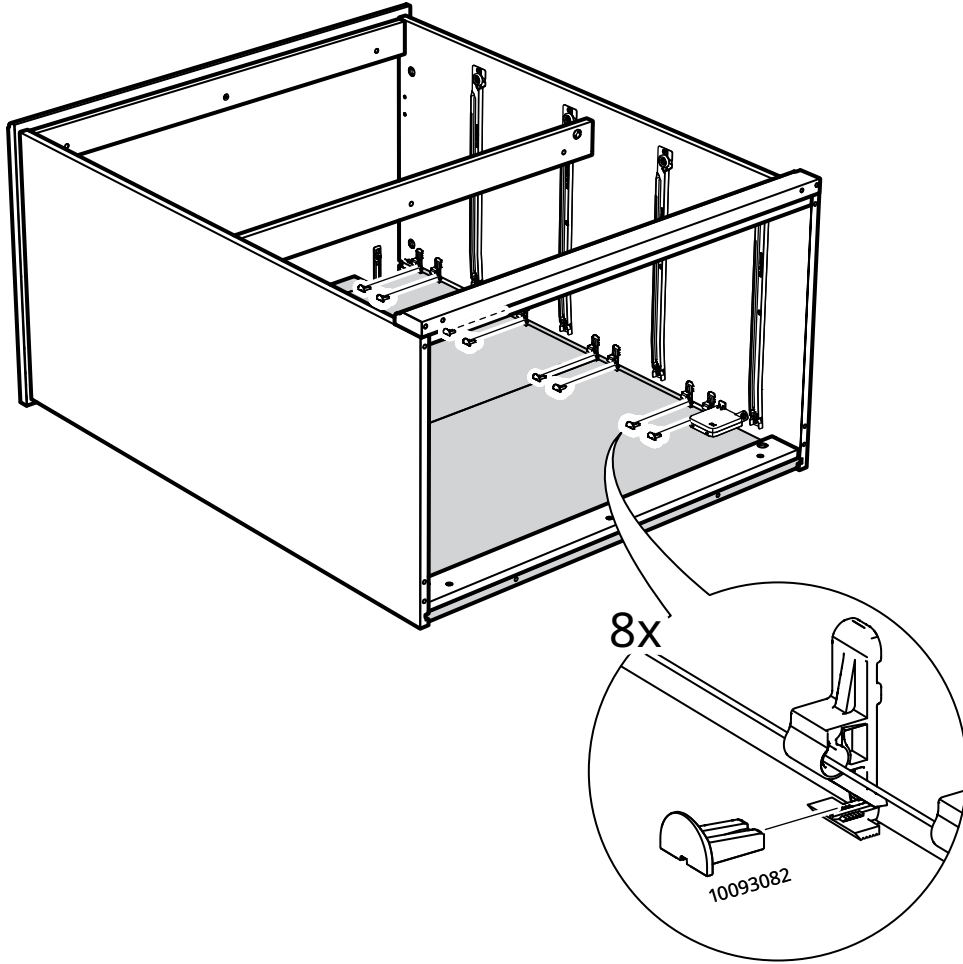 


22

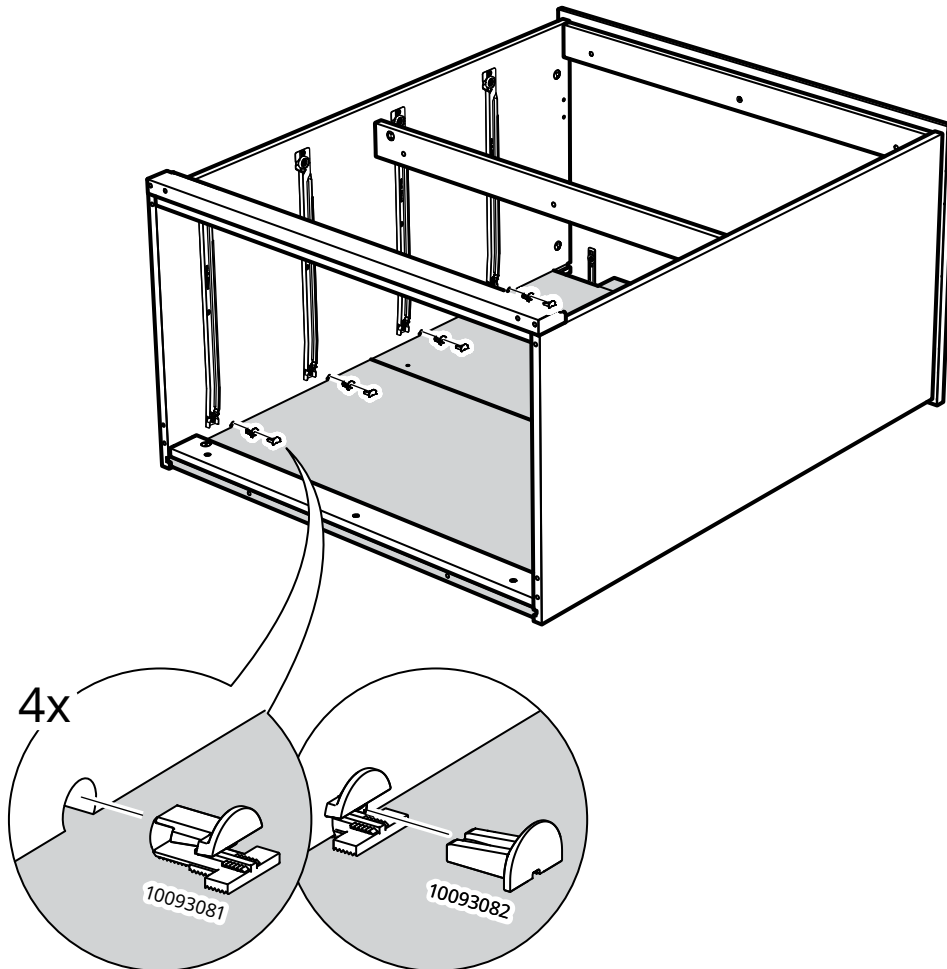 


23

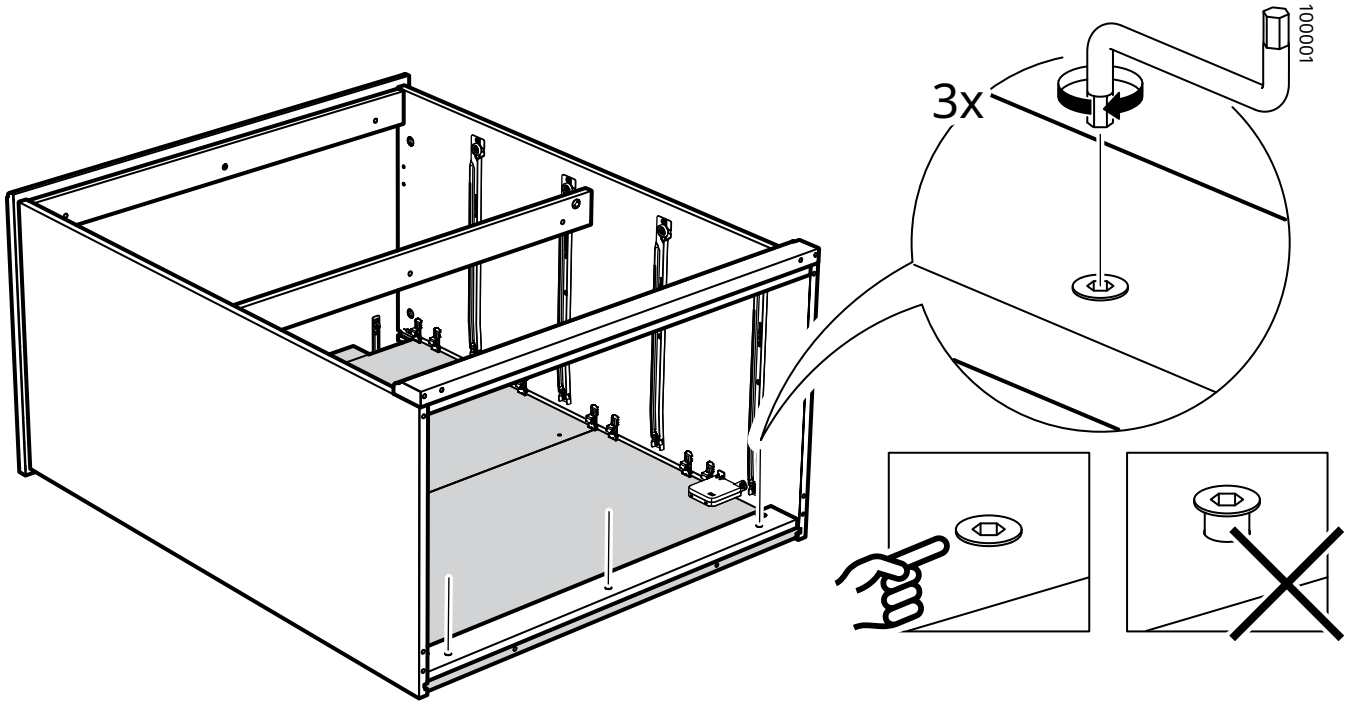 


24

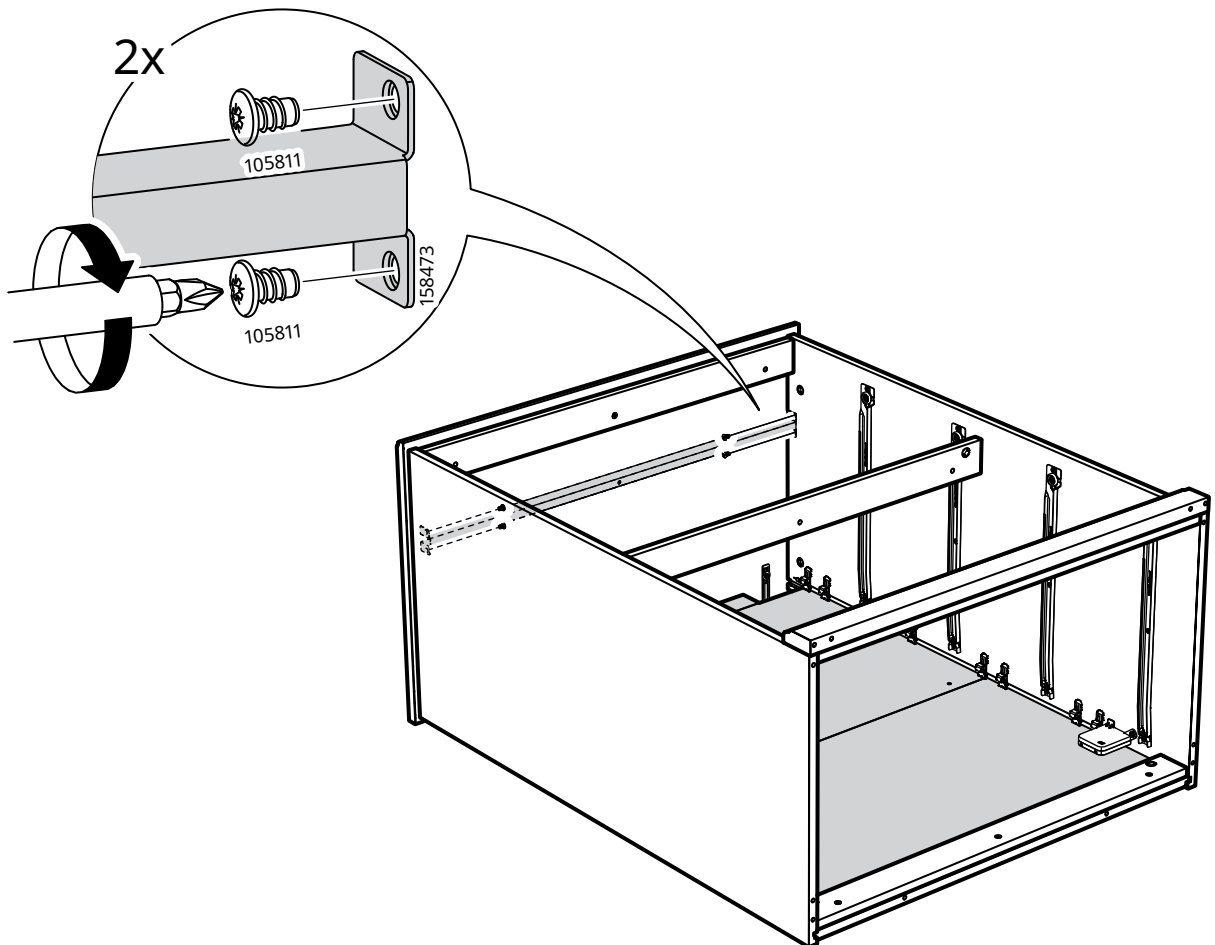 


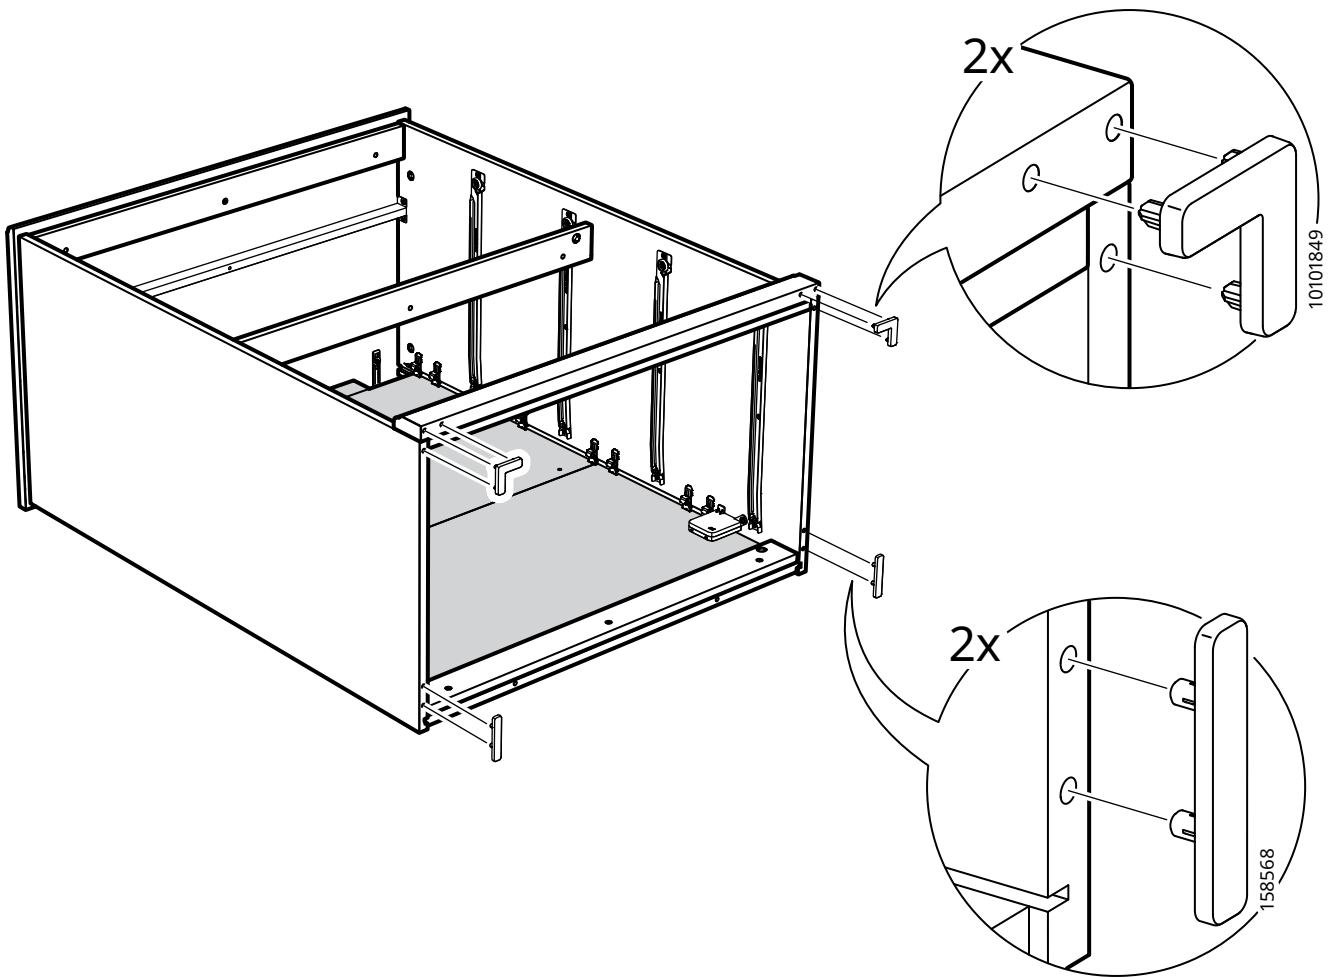 

26

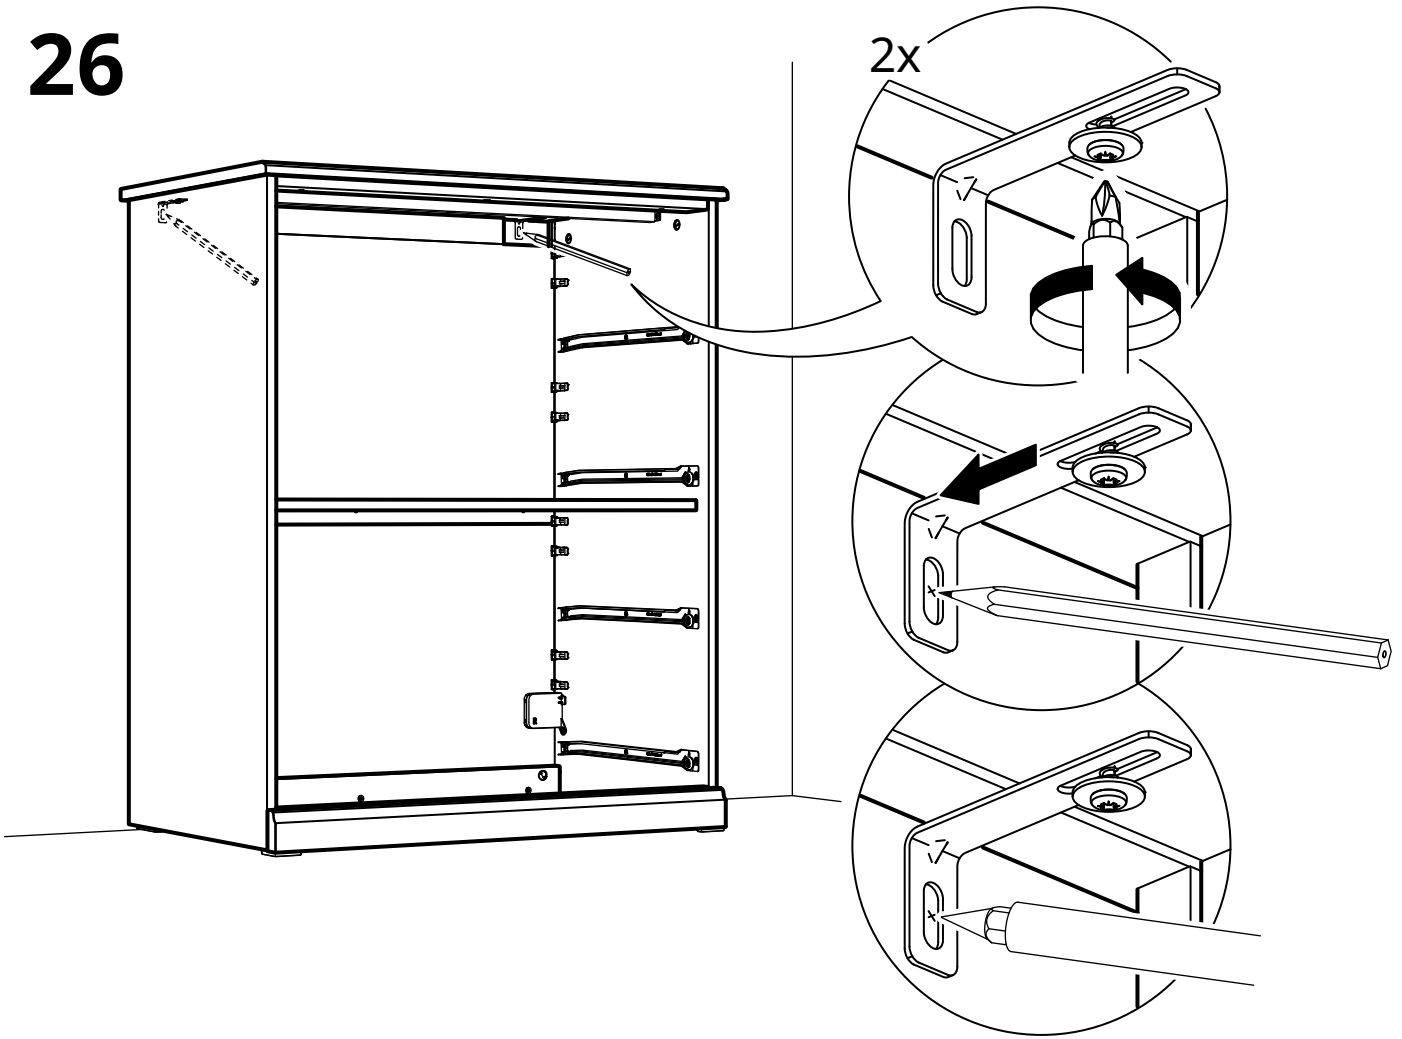 


27

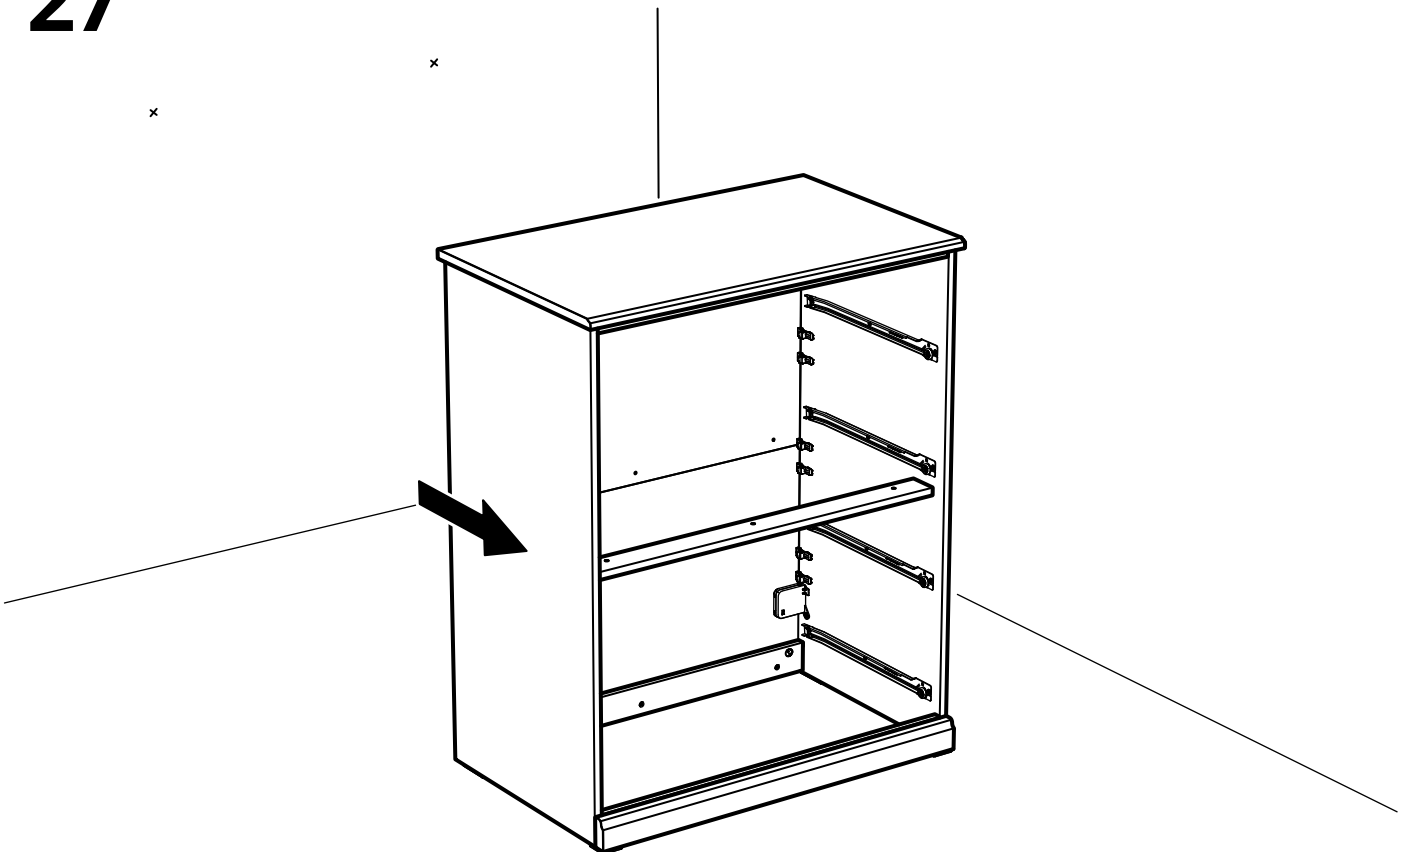 




www.IKEA.com/secure-it

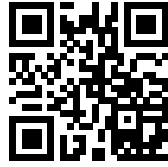 

www.IKEA.cn/secure-it

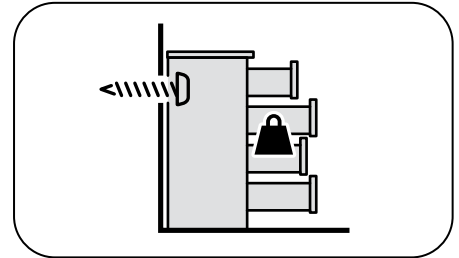 

28

English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

A

Ø 8 mm (5/16")

1

70 mm (2 3/4")

2

23

B

Ø 8 mm (5/16")

1

≈ 30 mm (≈ 1 1/4")

2

24

 
C

Ø 3 mm (1/8")

1


≈ 30 mm (≈ 1 1/4")

26


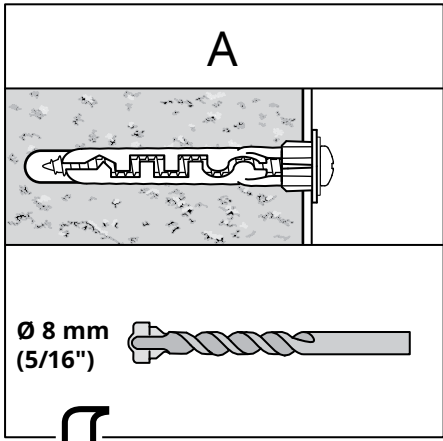




29

 x

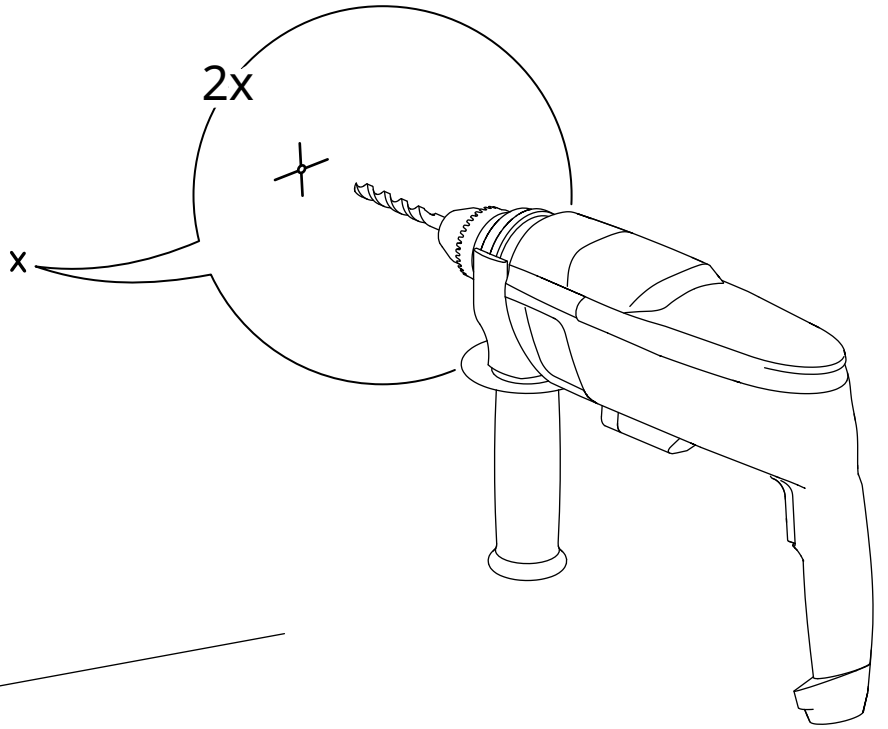


30


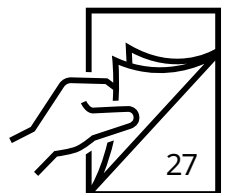 
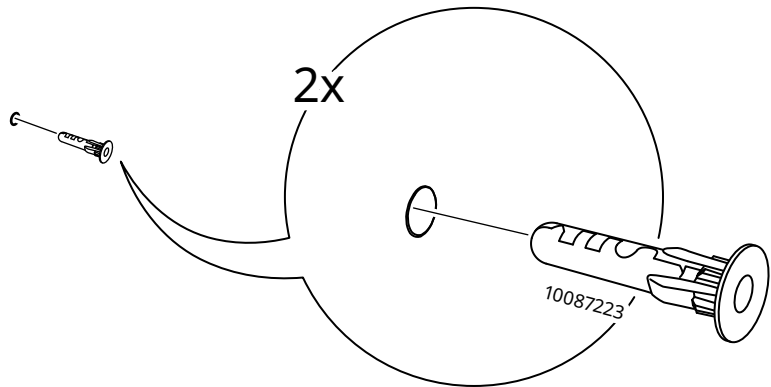 


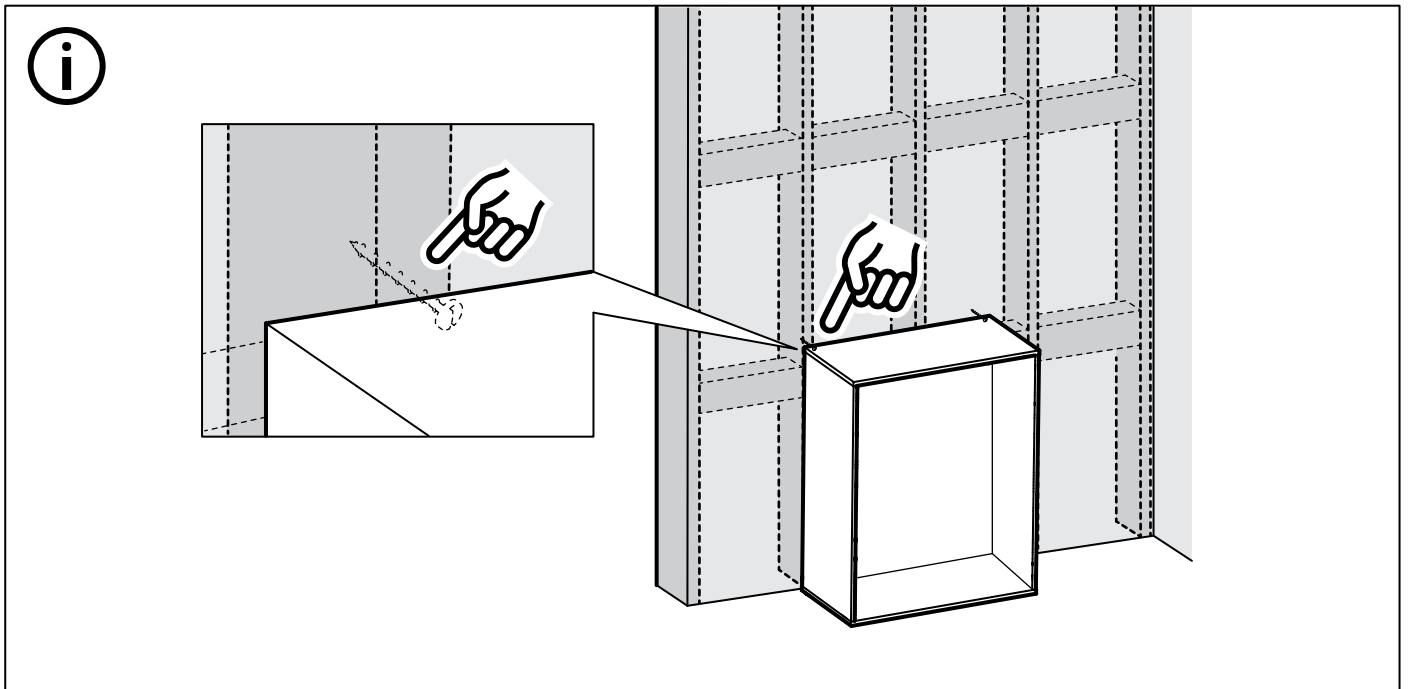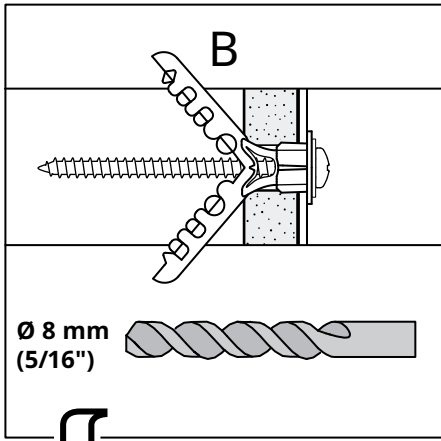  


29

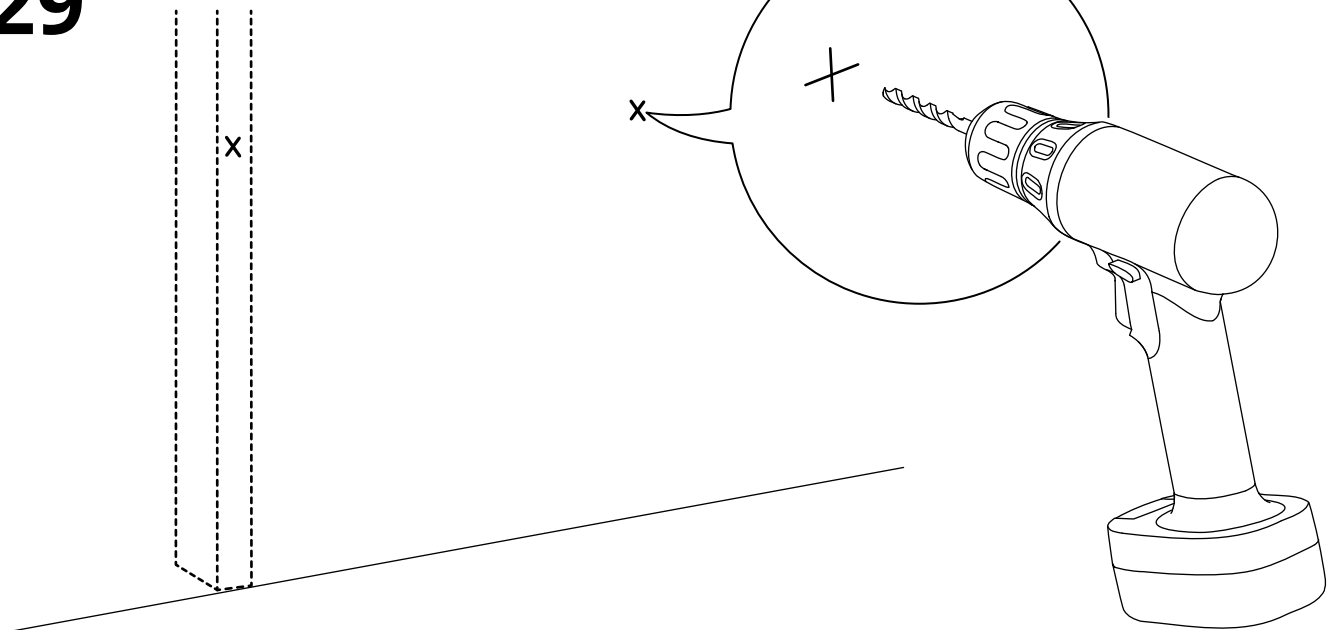 


30

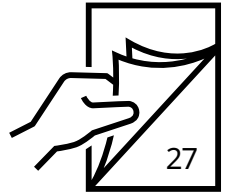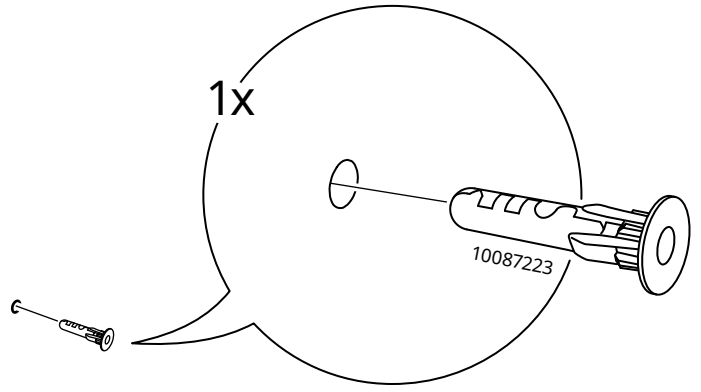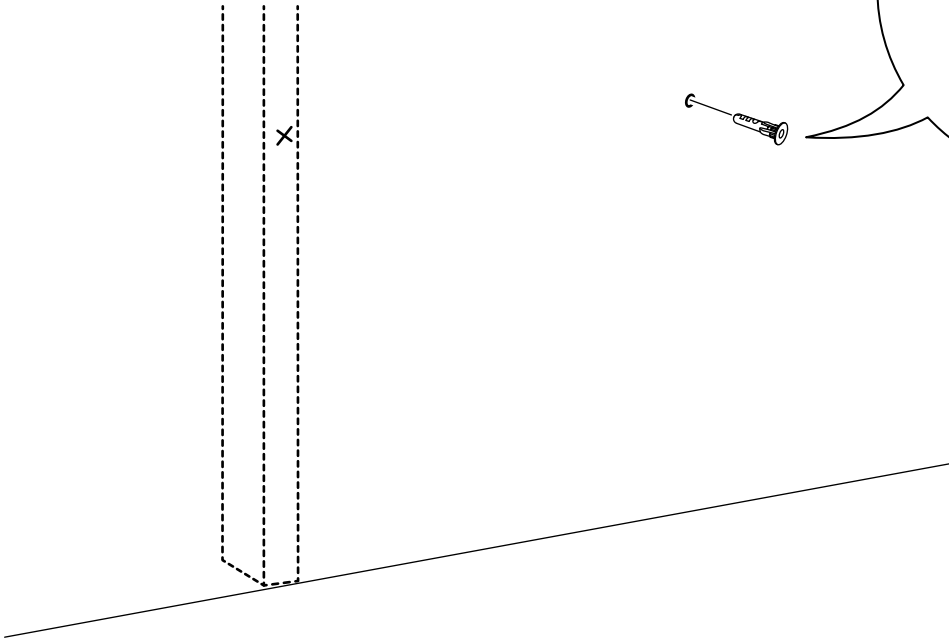   


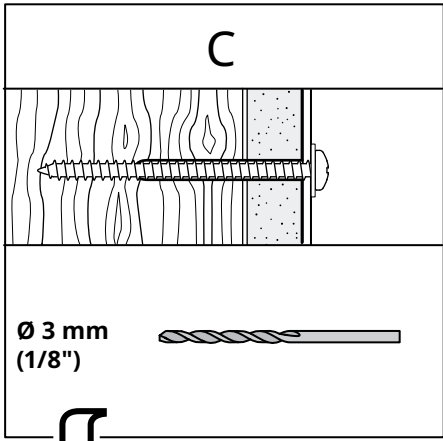 


29

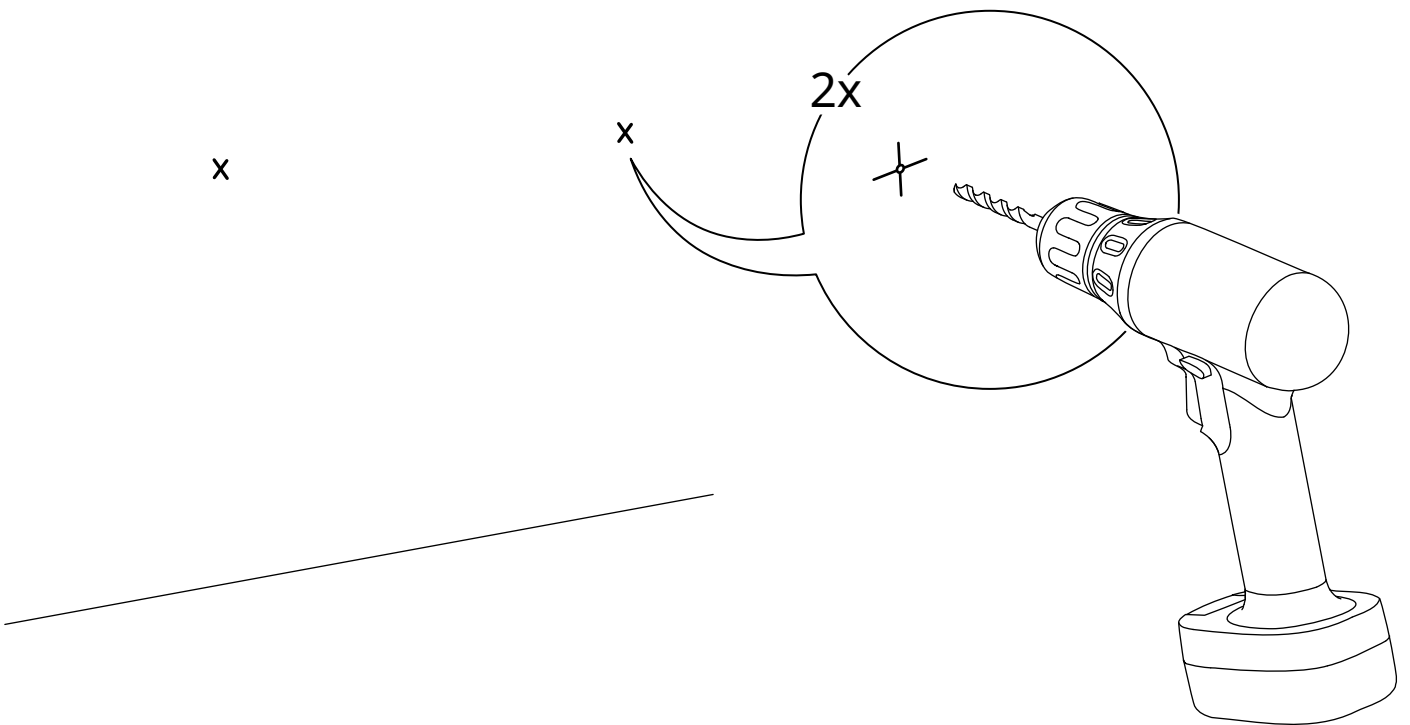 


31

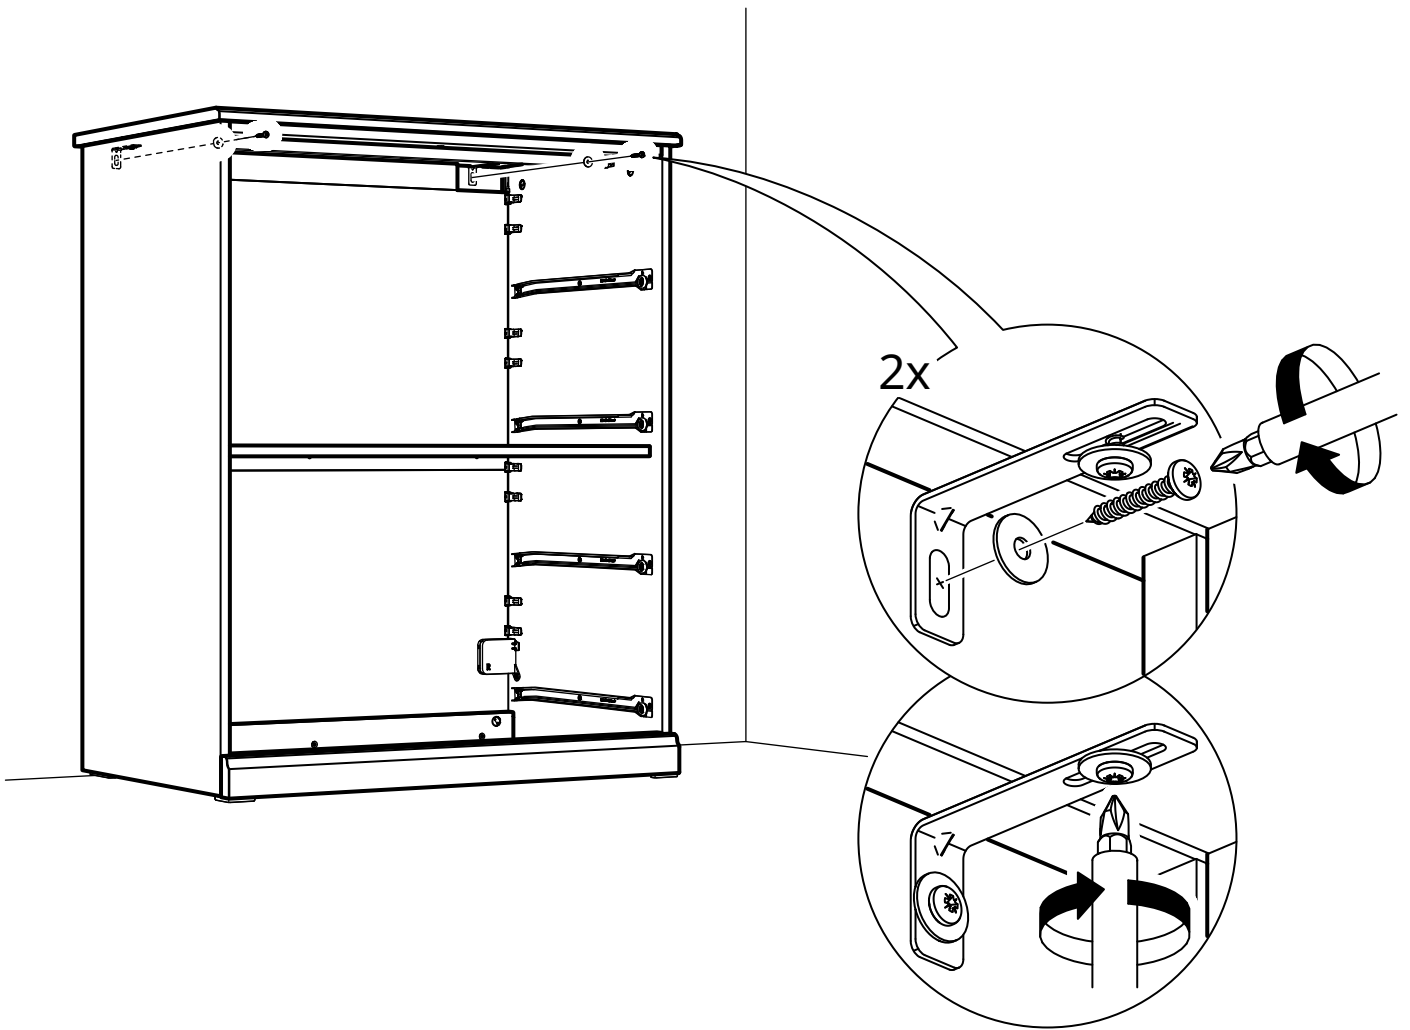 


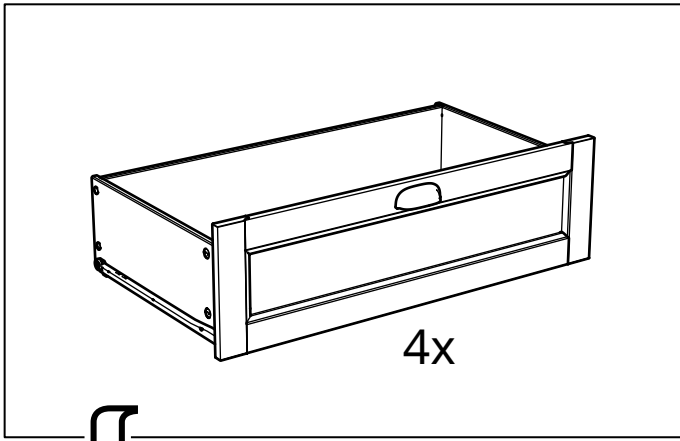 


32

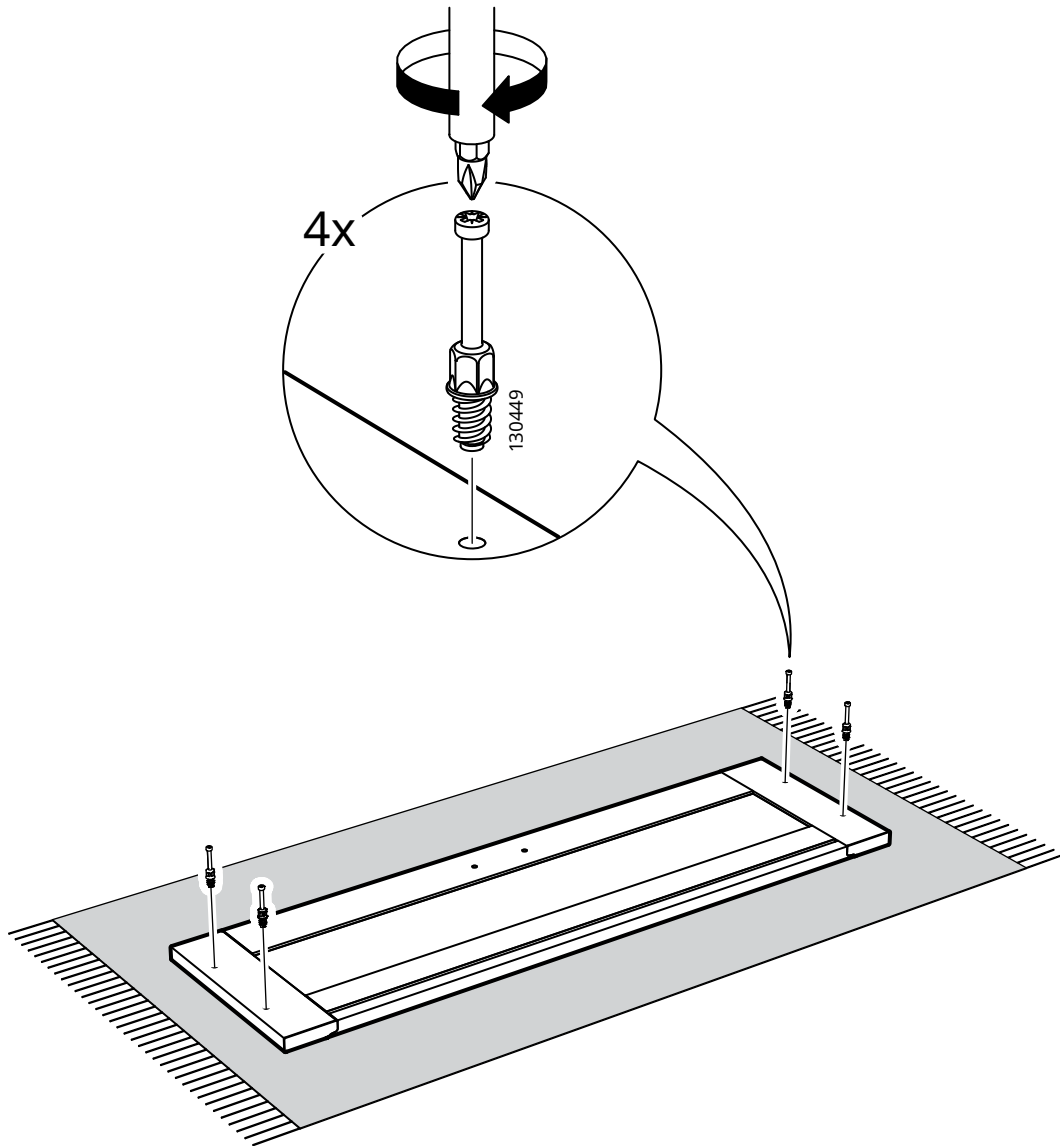 


33

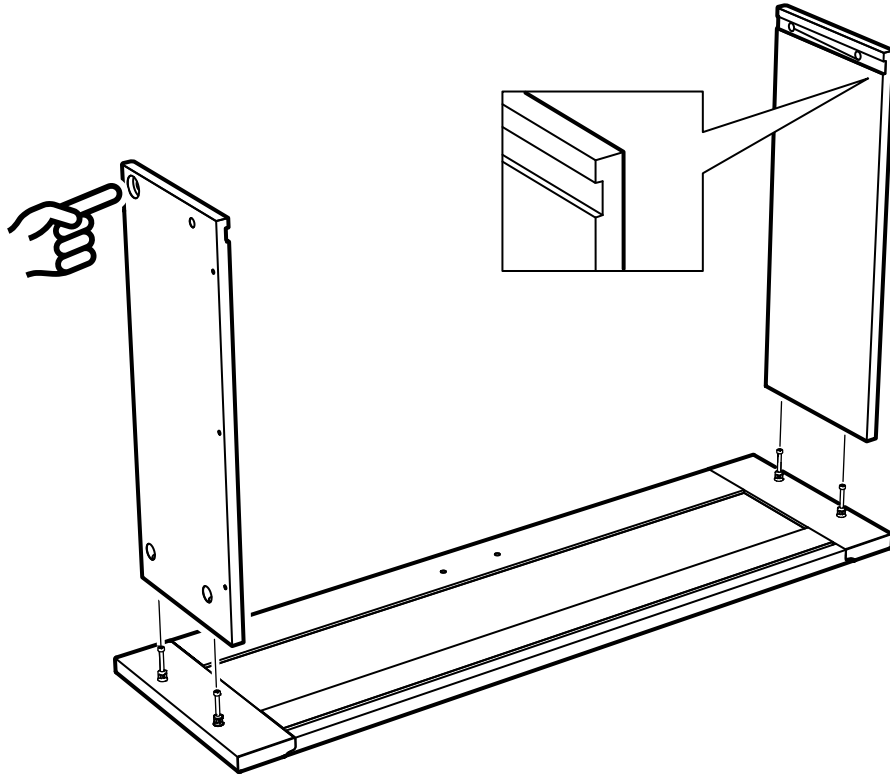 



34

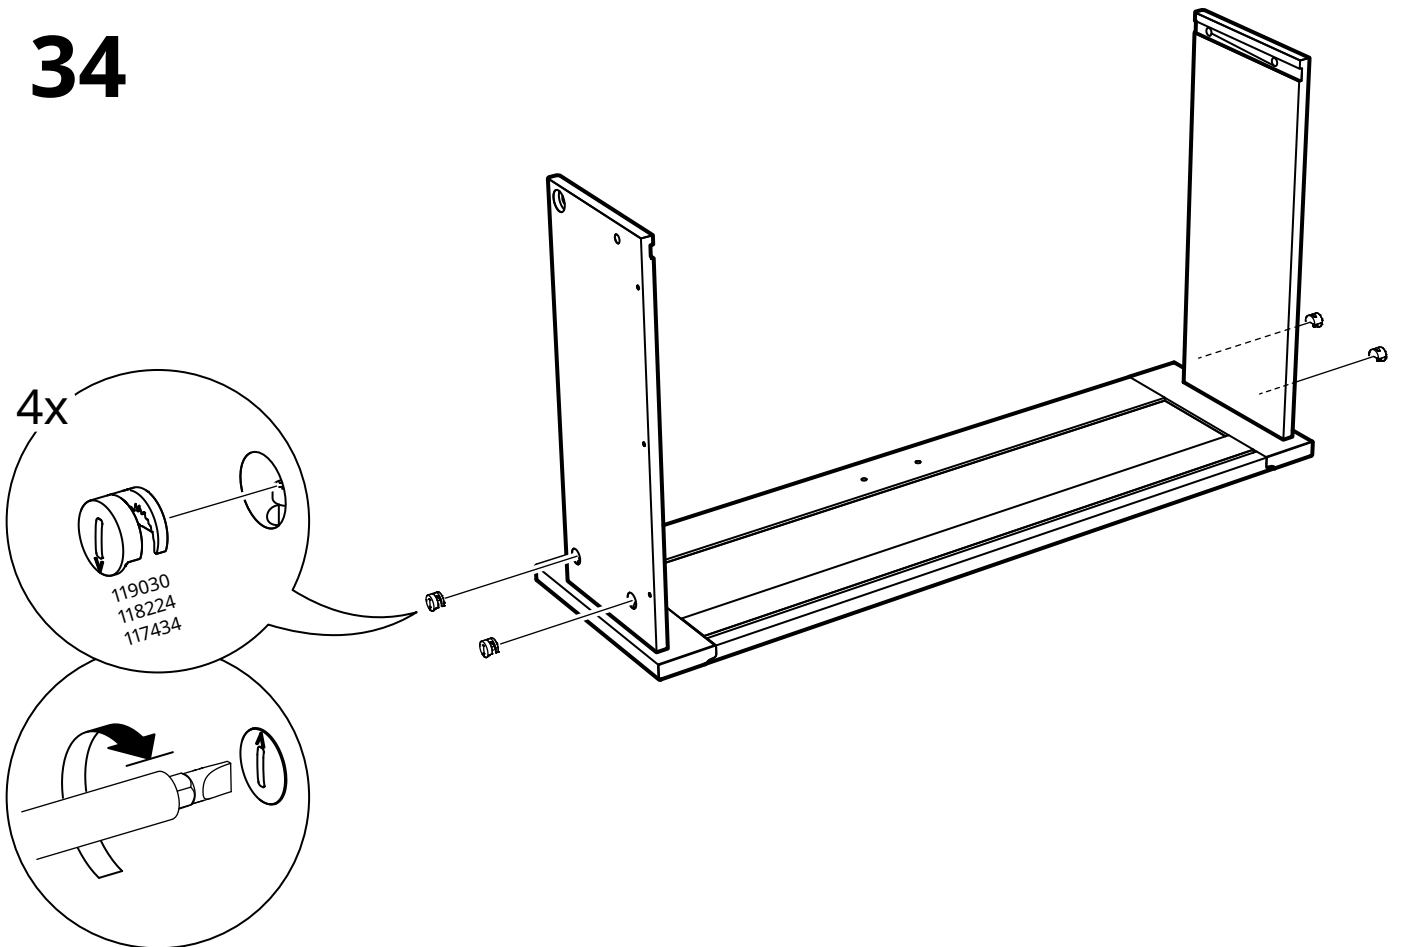 


35

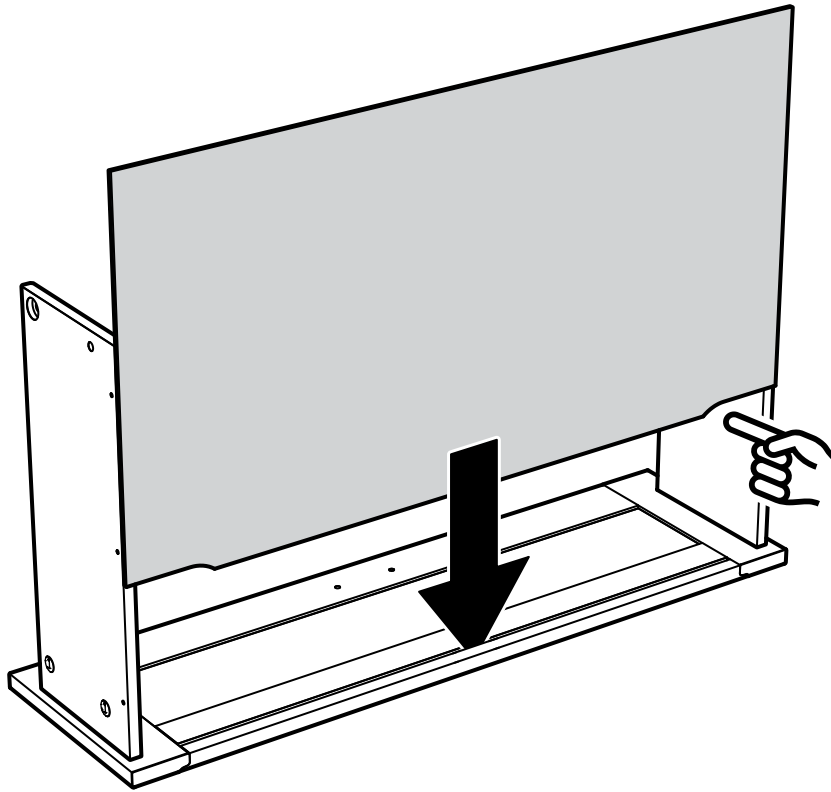 


36

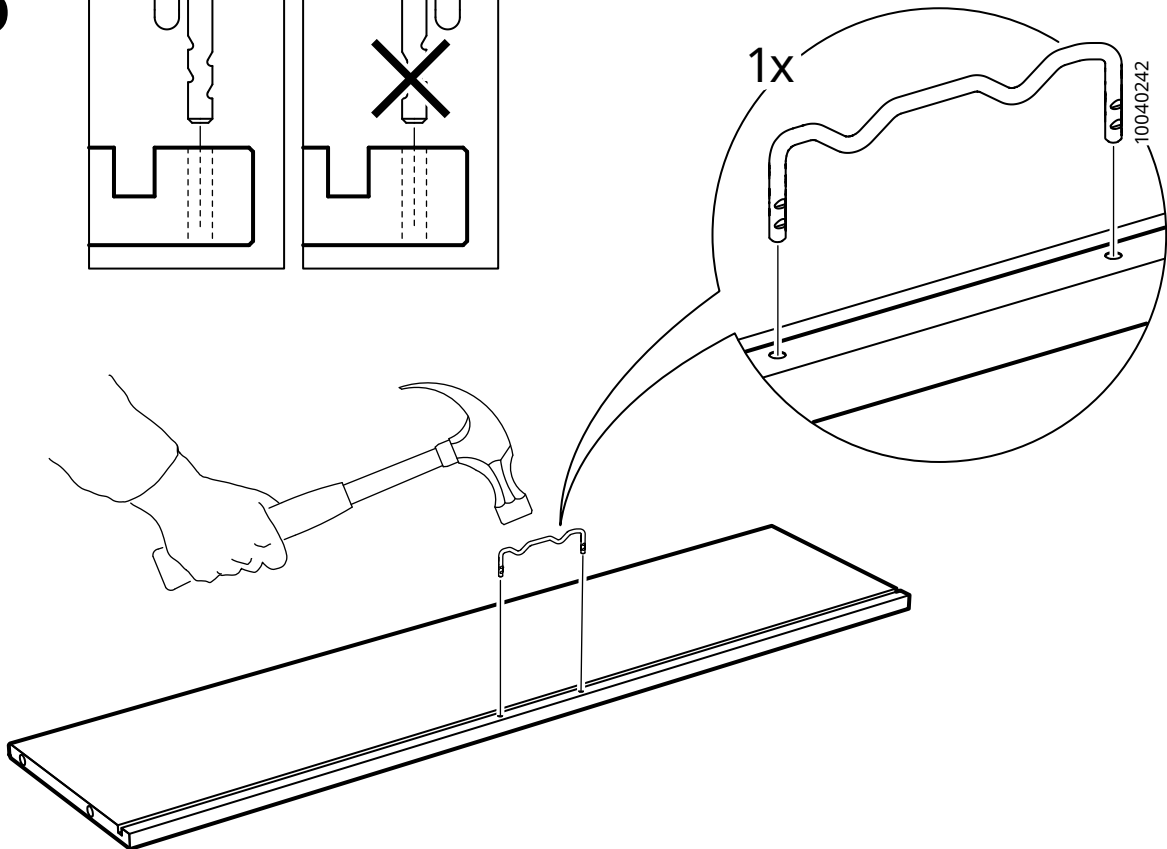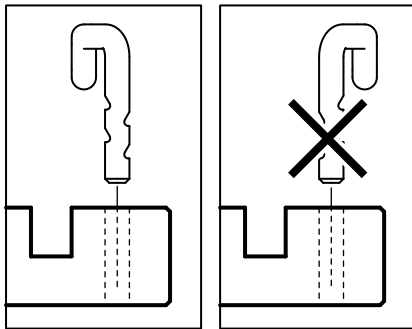  


37

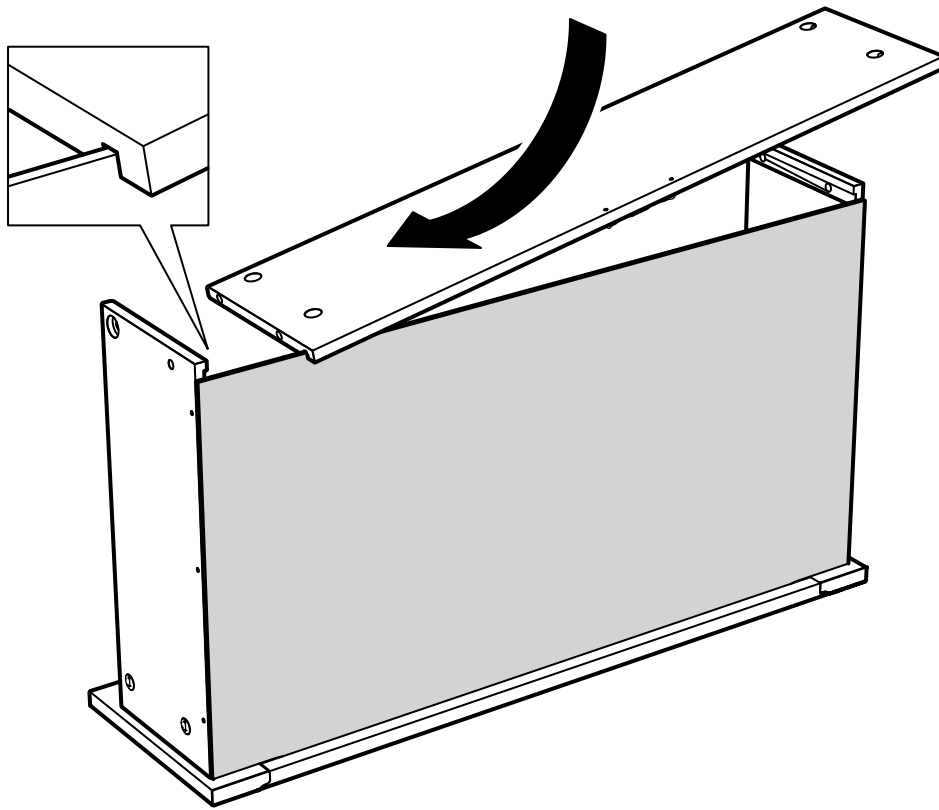 


38

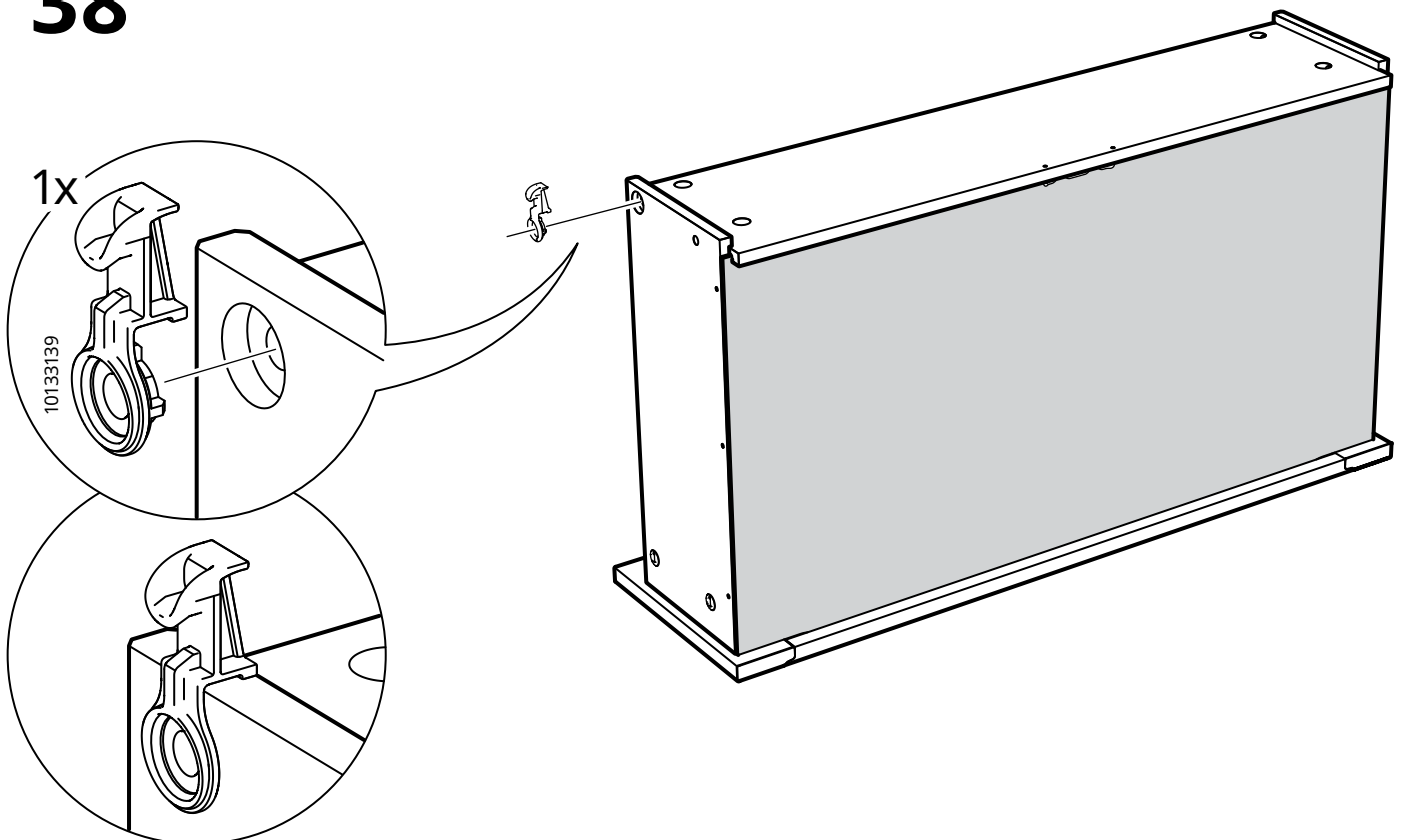 


39

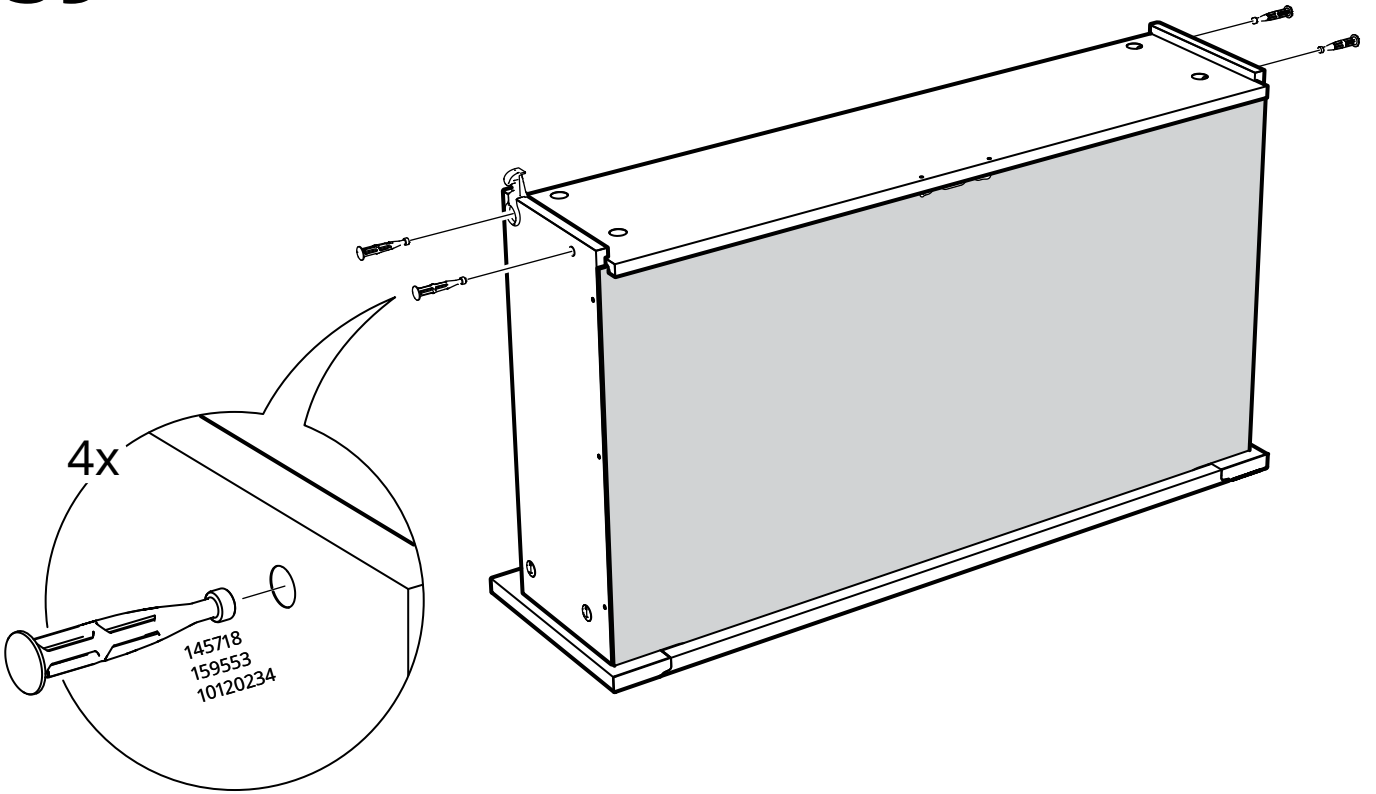 


40

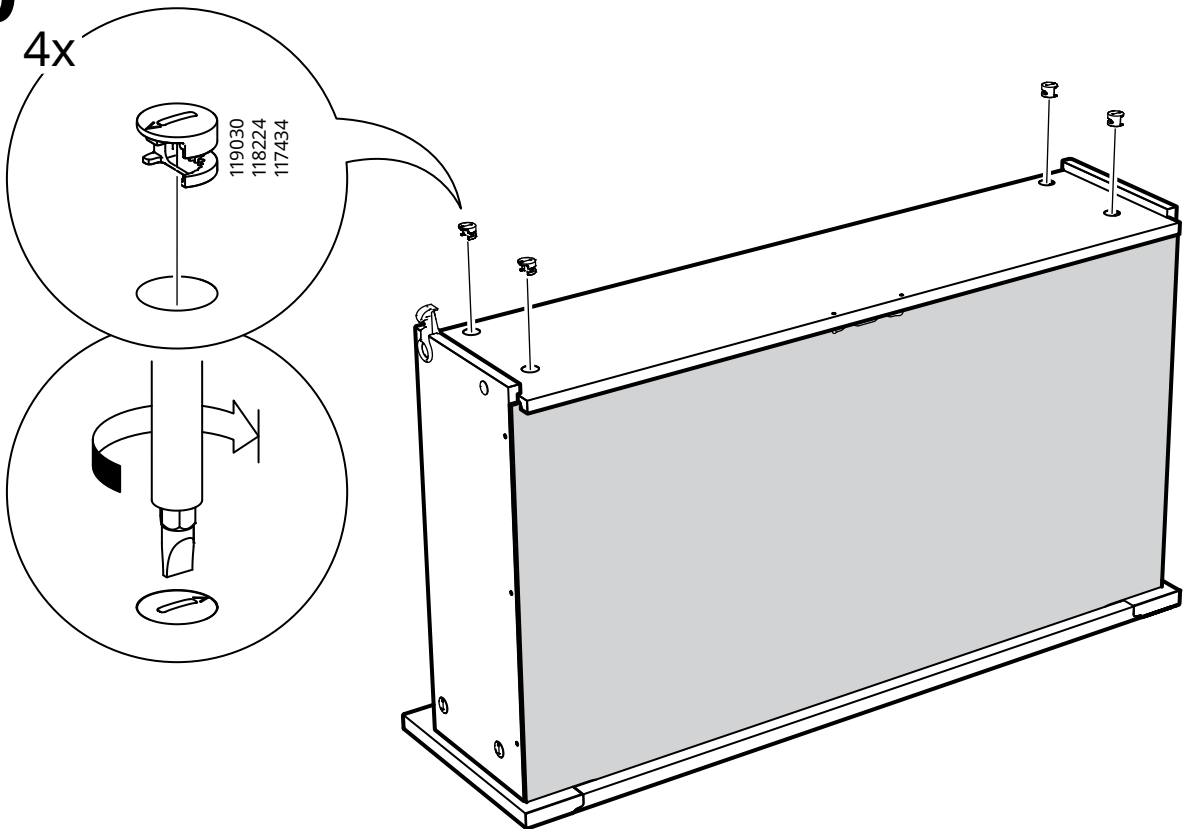 



41

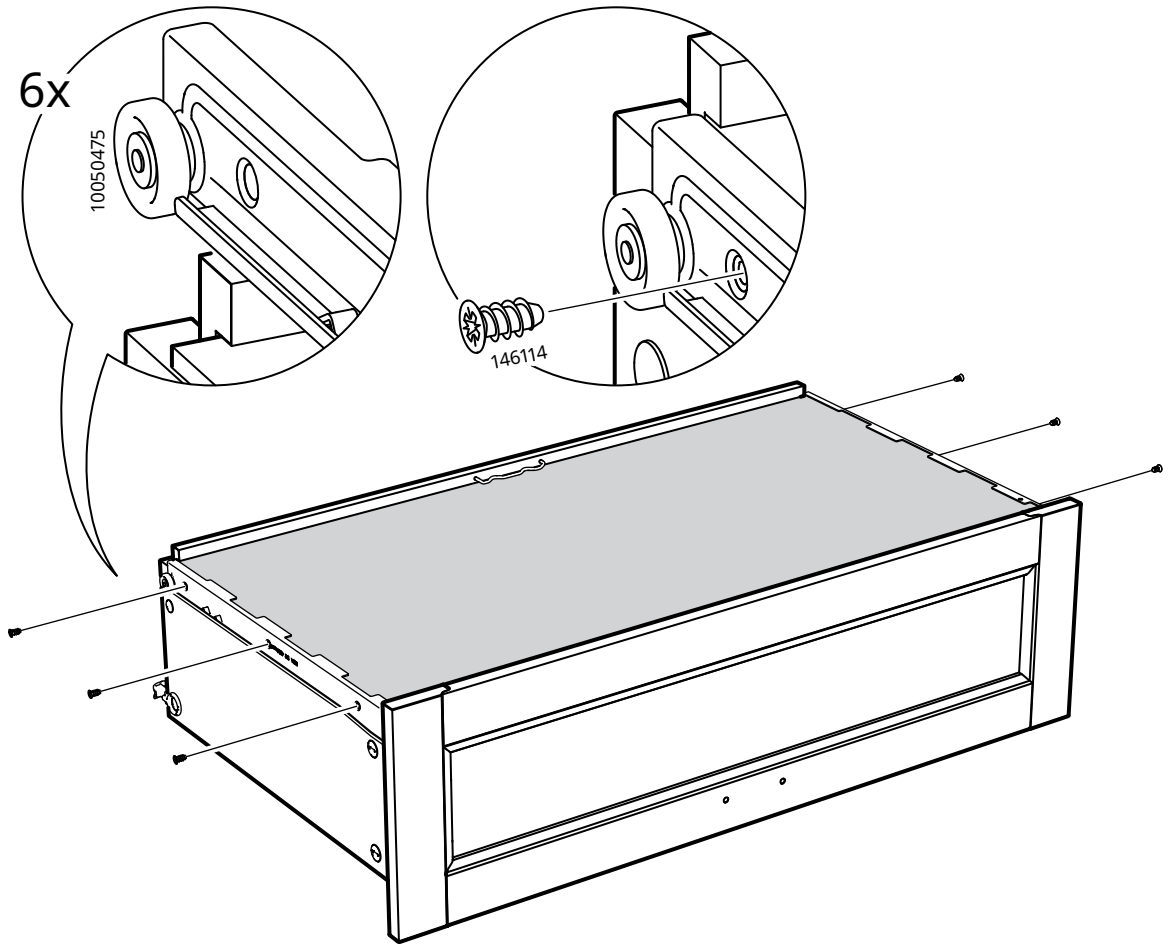 


42

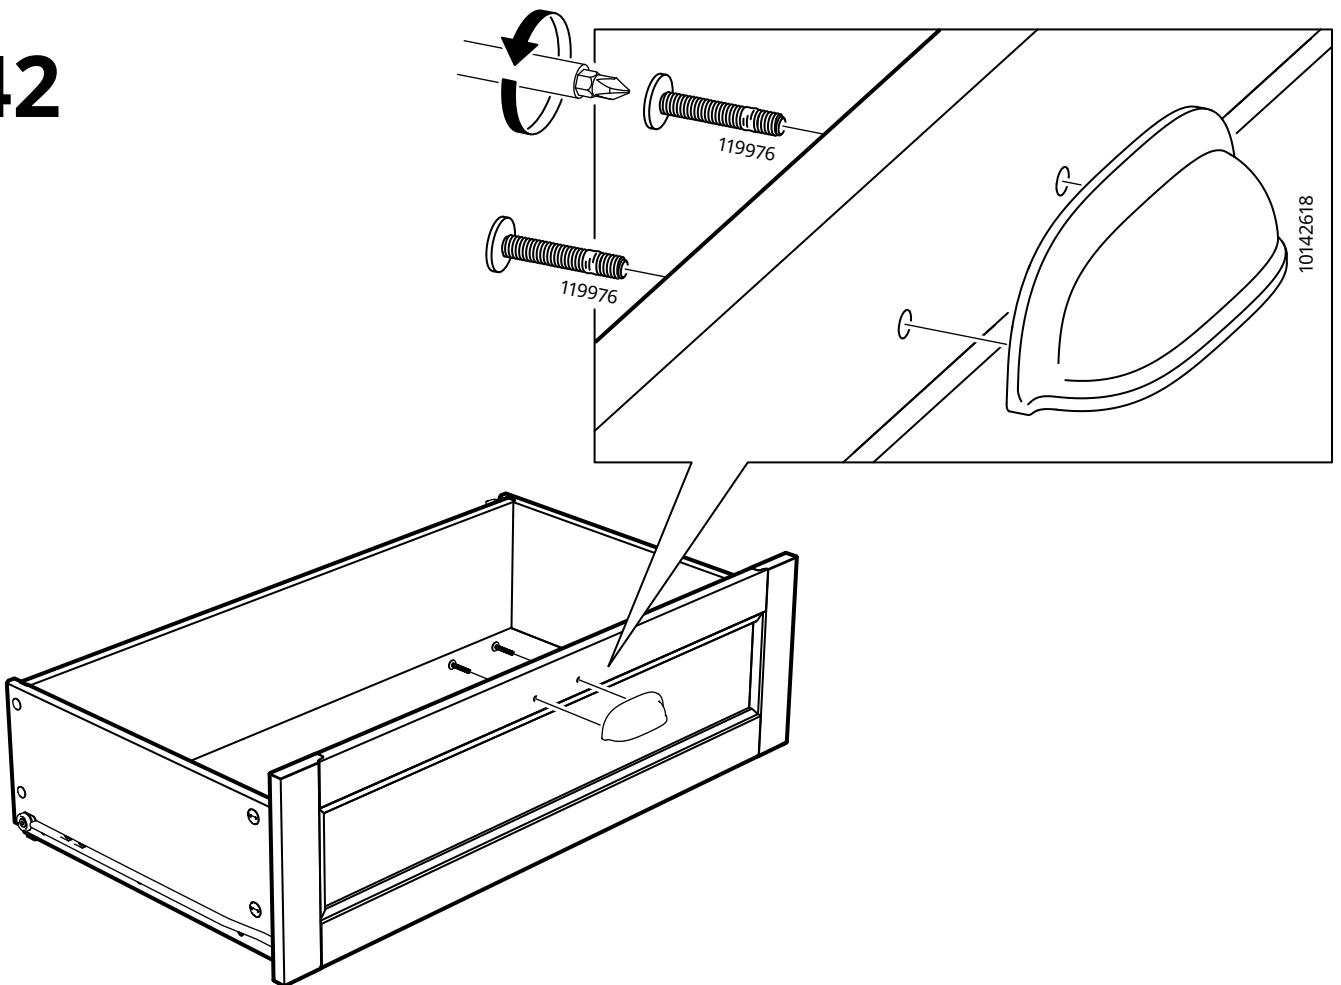 

43

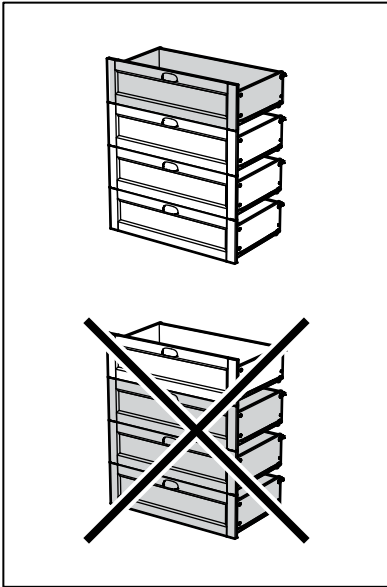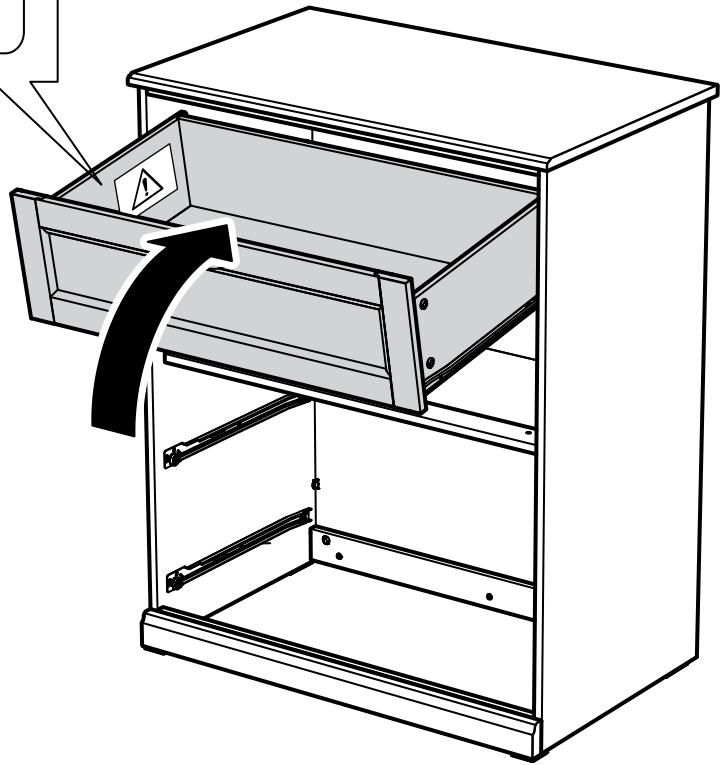  


44

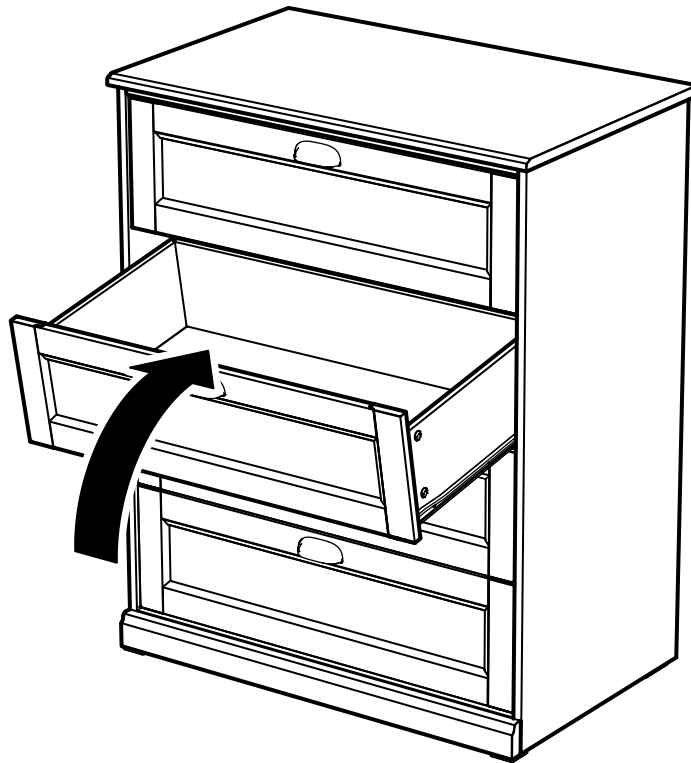 



1

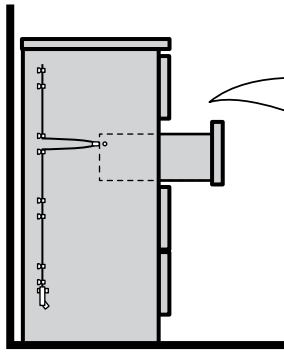 

2

