 
 
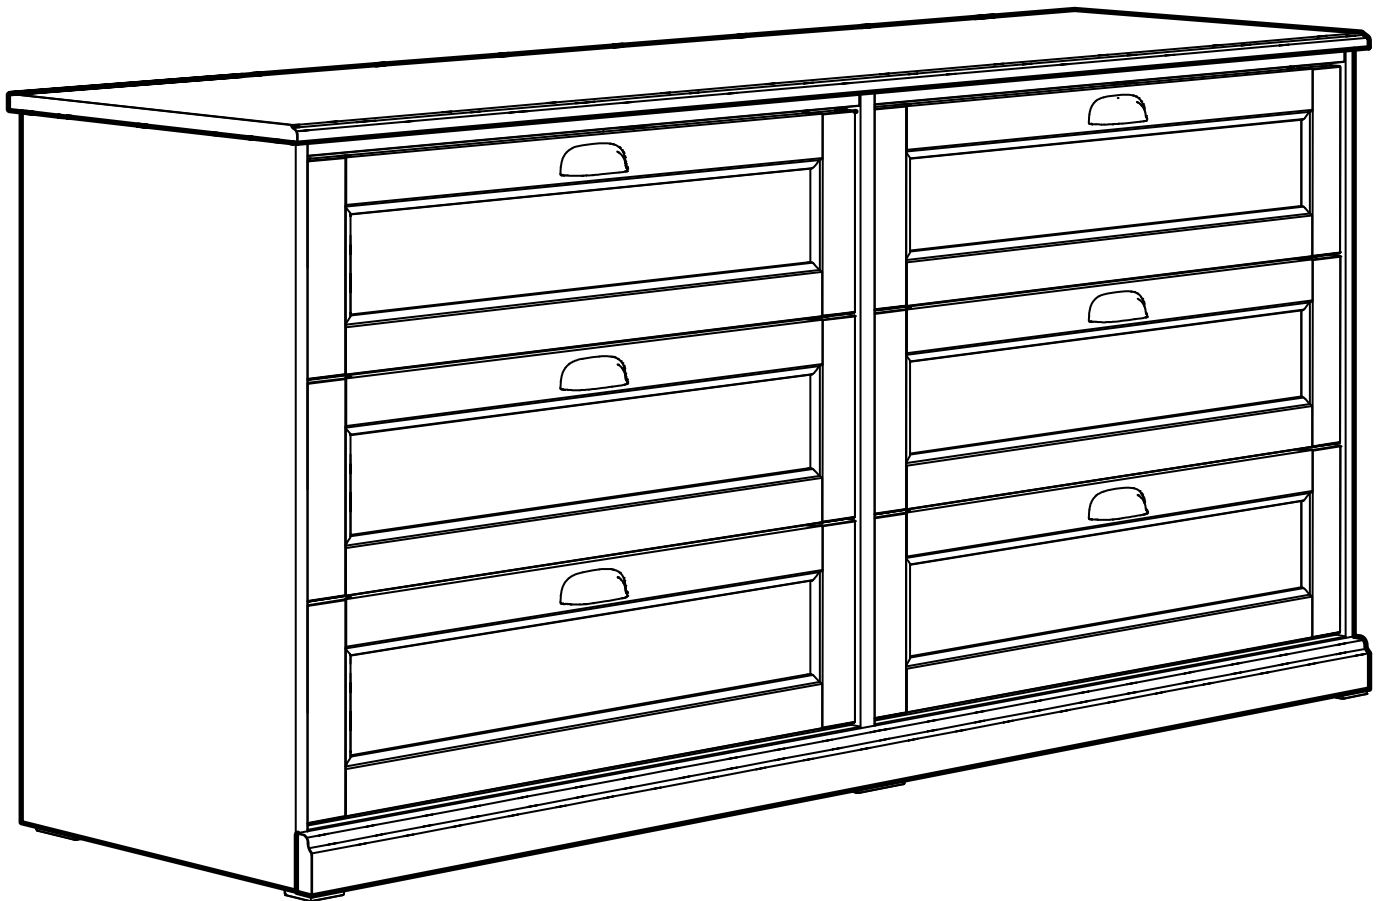 
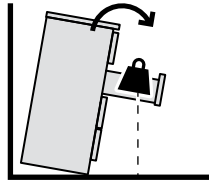 


# FÅGELFJÄLLET

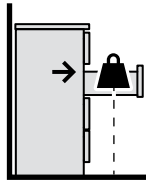

Design and Quality  
IKEA of Sweden



English

## WARNING!

**Children have died from furniture tipover.**

**To reduce the risk of furniture tipover:**

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.


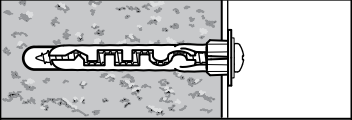 
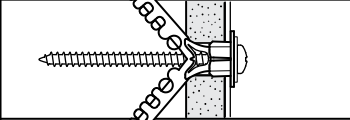 
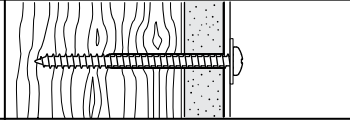 
 
 

NEVER open more than one drawer at a time.






DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.

Place heaviest items in the lowest drawers.

Read and follow each step of the instruction carefully.

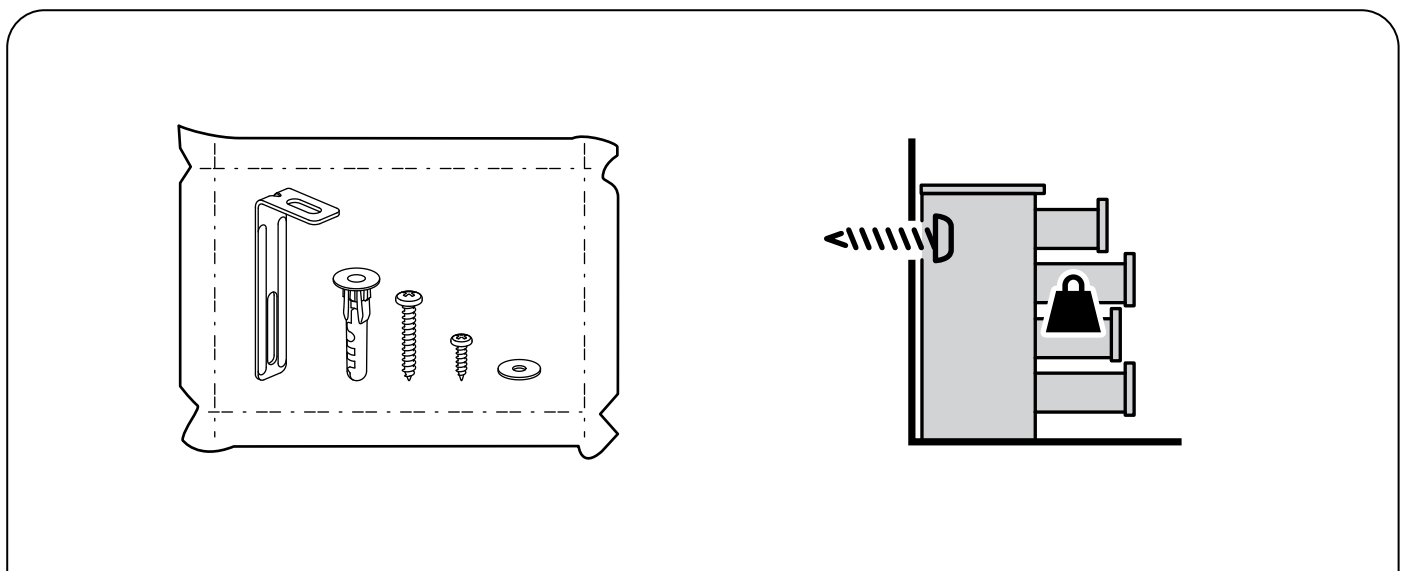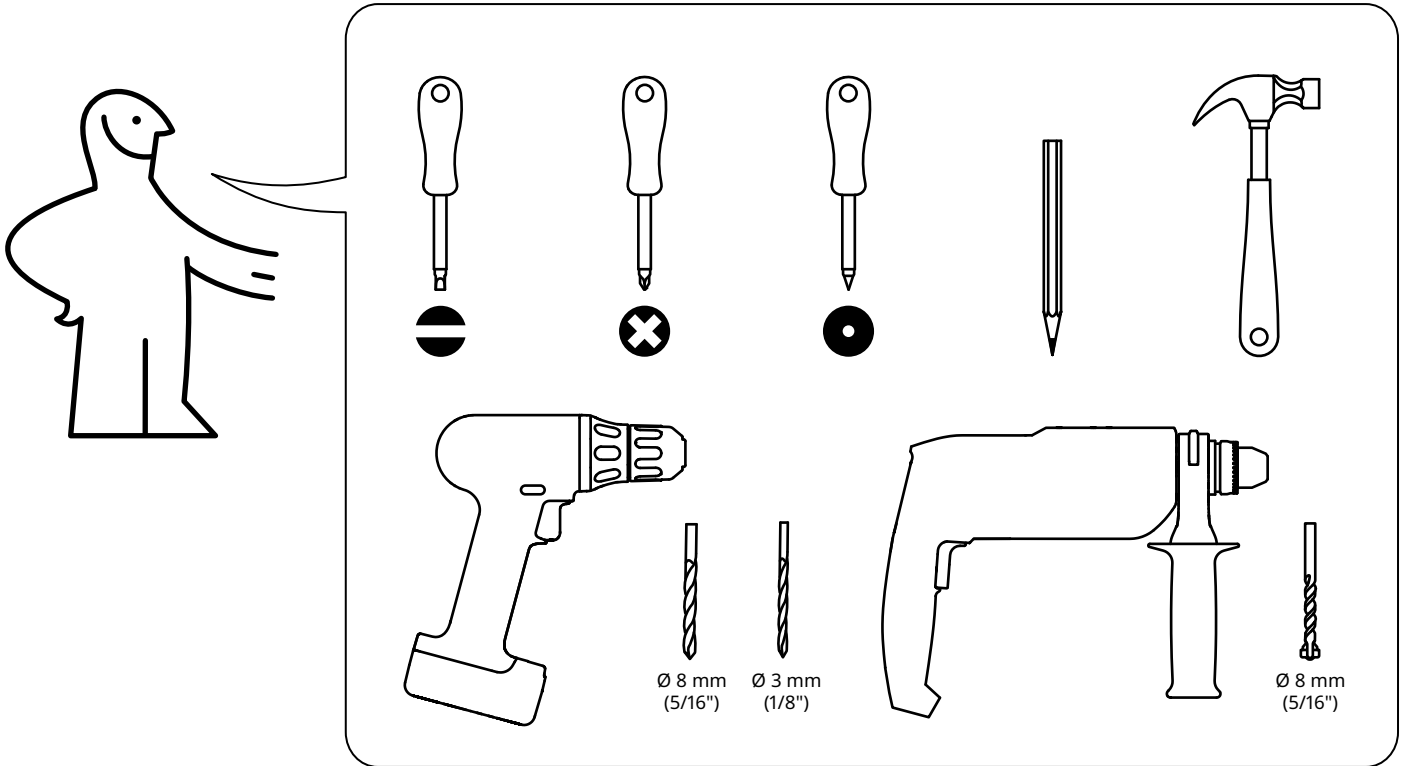


	A	B	C
 <a href="http://www.IKEA.com/secure-it">www.IKEA.com/secure-it</a>			
	$\text{Ø } 8 \text{ mm (5/16")}$ 	$\text{Ø } 8 \text{ mm (5/16")}$ 	$\text{Ø } 3 \text{ mm (1/8")}$ 

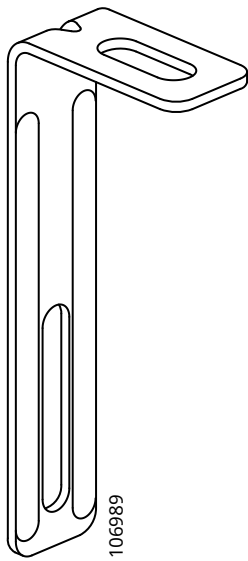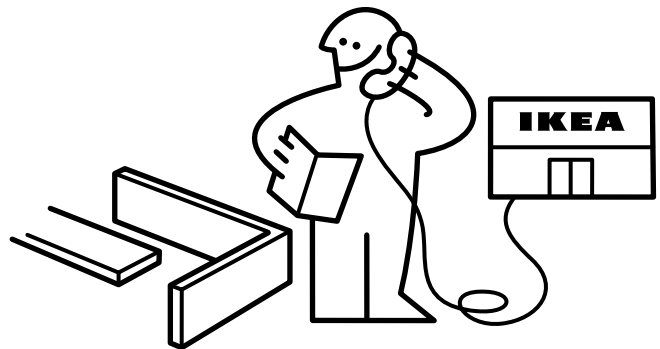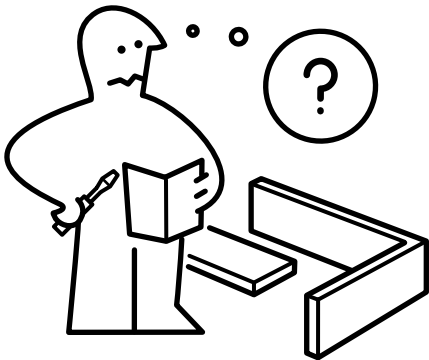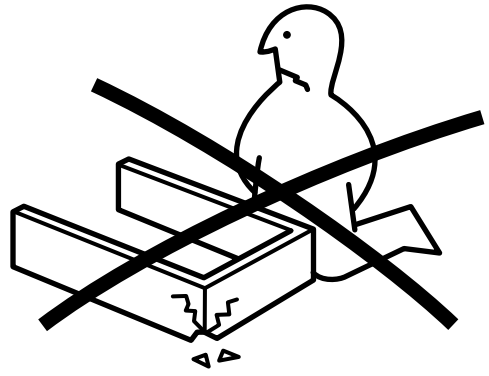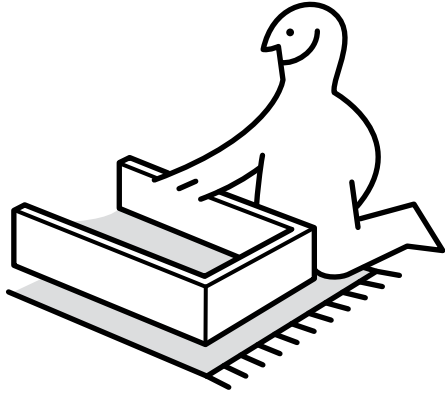     


106989

 2x

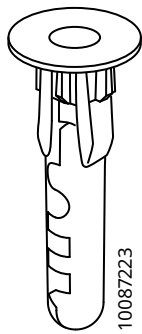

1008723

 2x




109567

2x



109049

 
2x



100823


4x

# 1

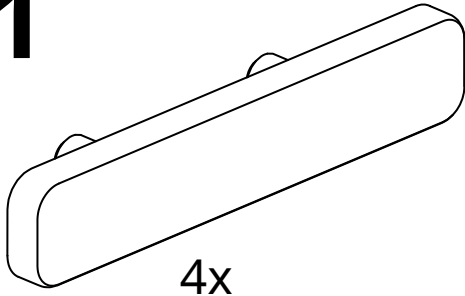 


158568  
10127144

 4x

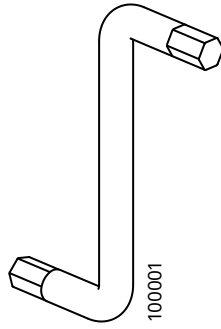


100001

 1x

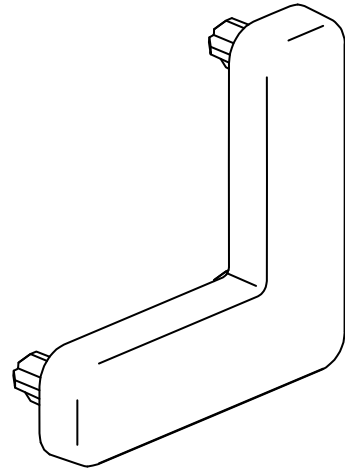


10101849  
10099967

 2x



118331

 18x




100217

8x




101345

 18x




151707

 8x



151708

 8x

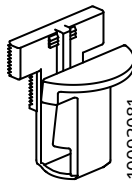


10093081

10x



10093082

 
22x

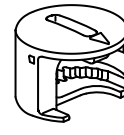

119250

18x

 119252



100359


2x



146114


36x

# 2

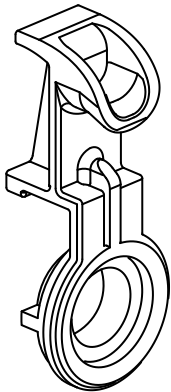 

10133139

 6x




145718

24x


159553

 10120234




130449

 24x



119976

 12x

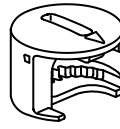


119030

48x

118224

 117434

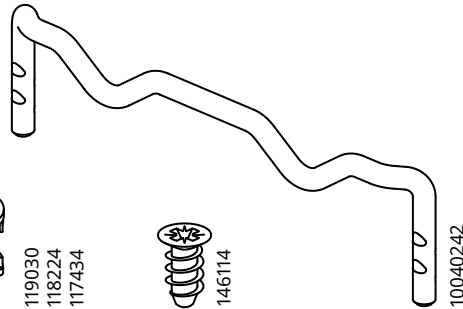


146114

36x


10040242

 6x

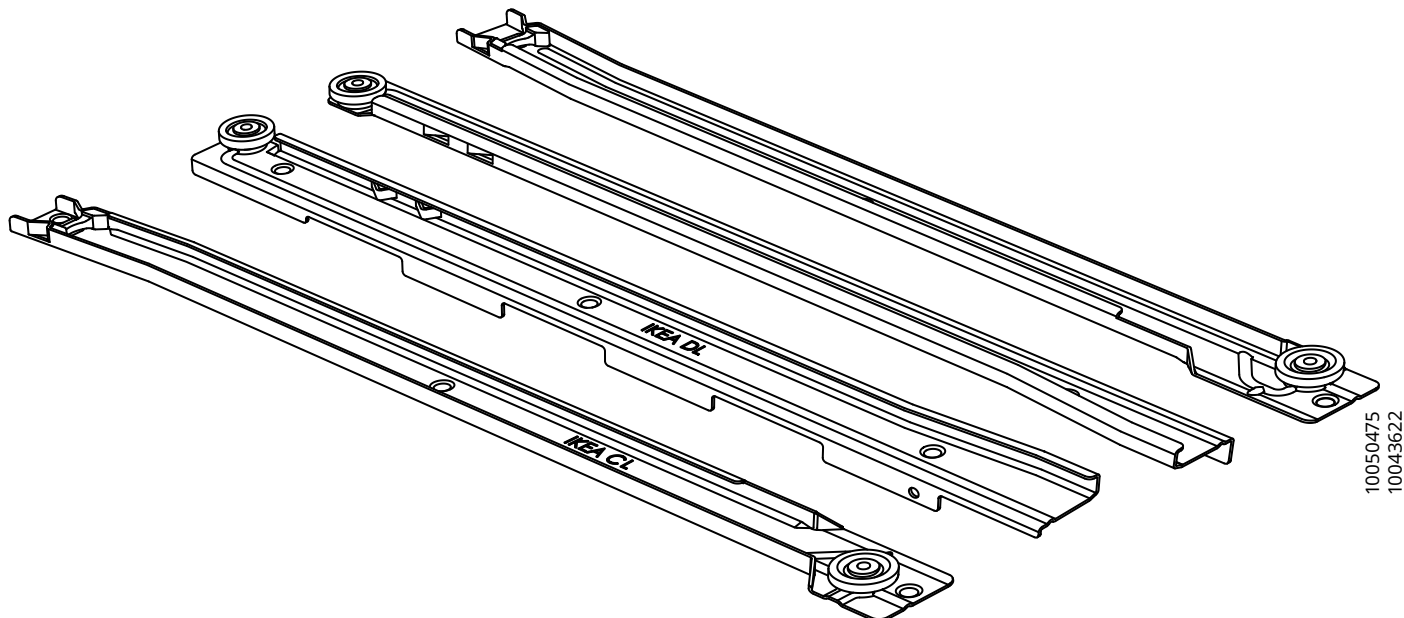


10050475  
10043622

 6x

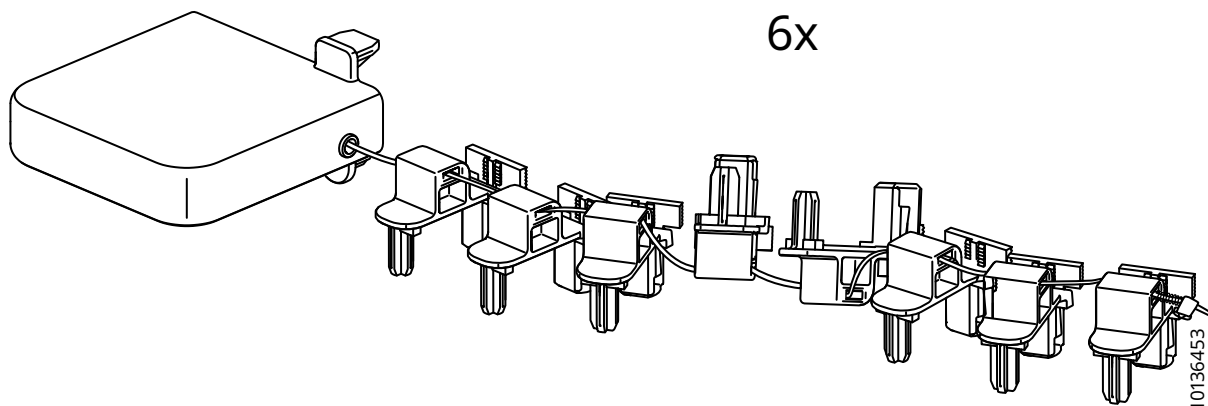


10136453

 2x

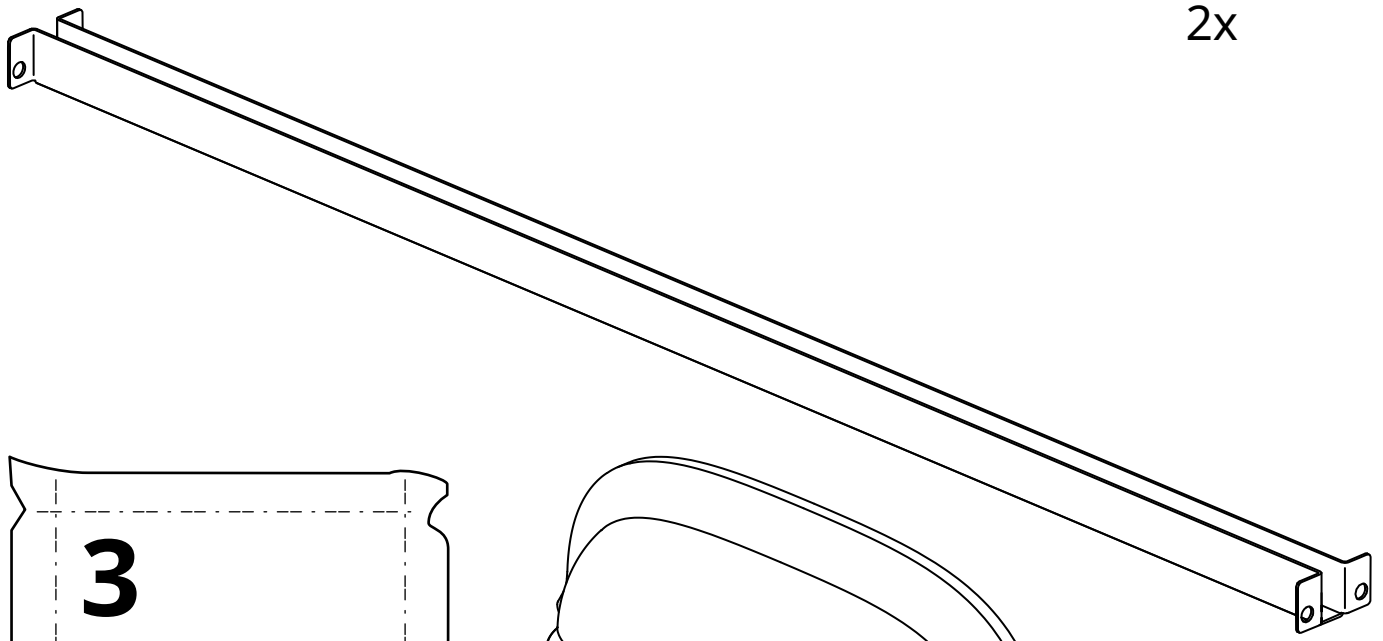

158473

 2x

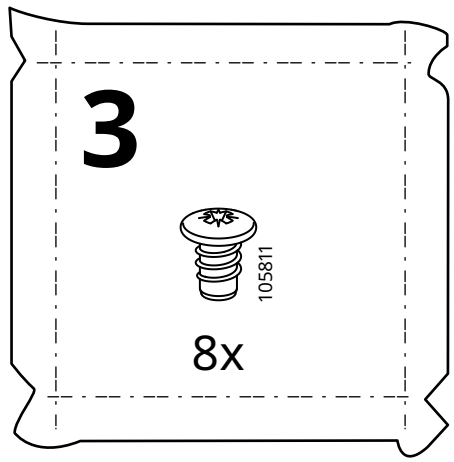


3



105811

 
8x

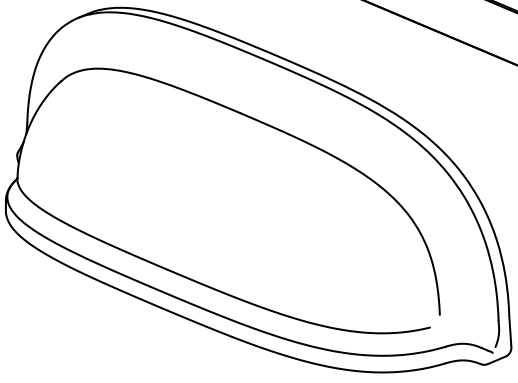


10142618

6x

 
1

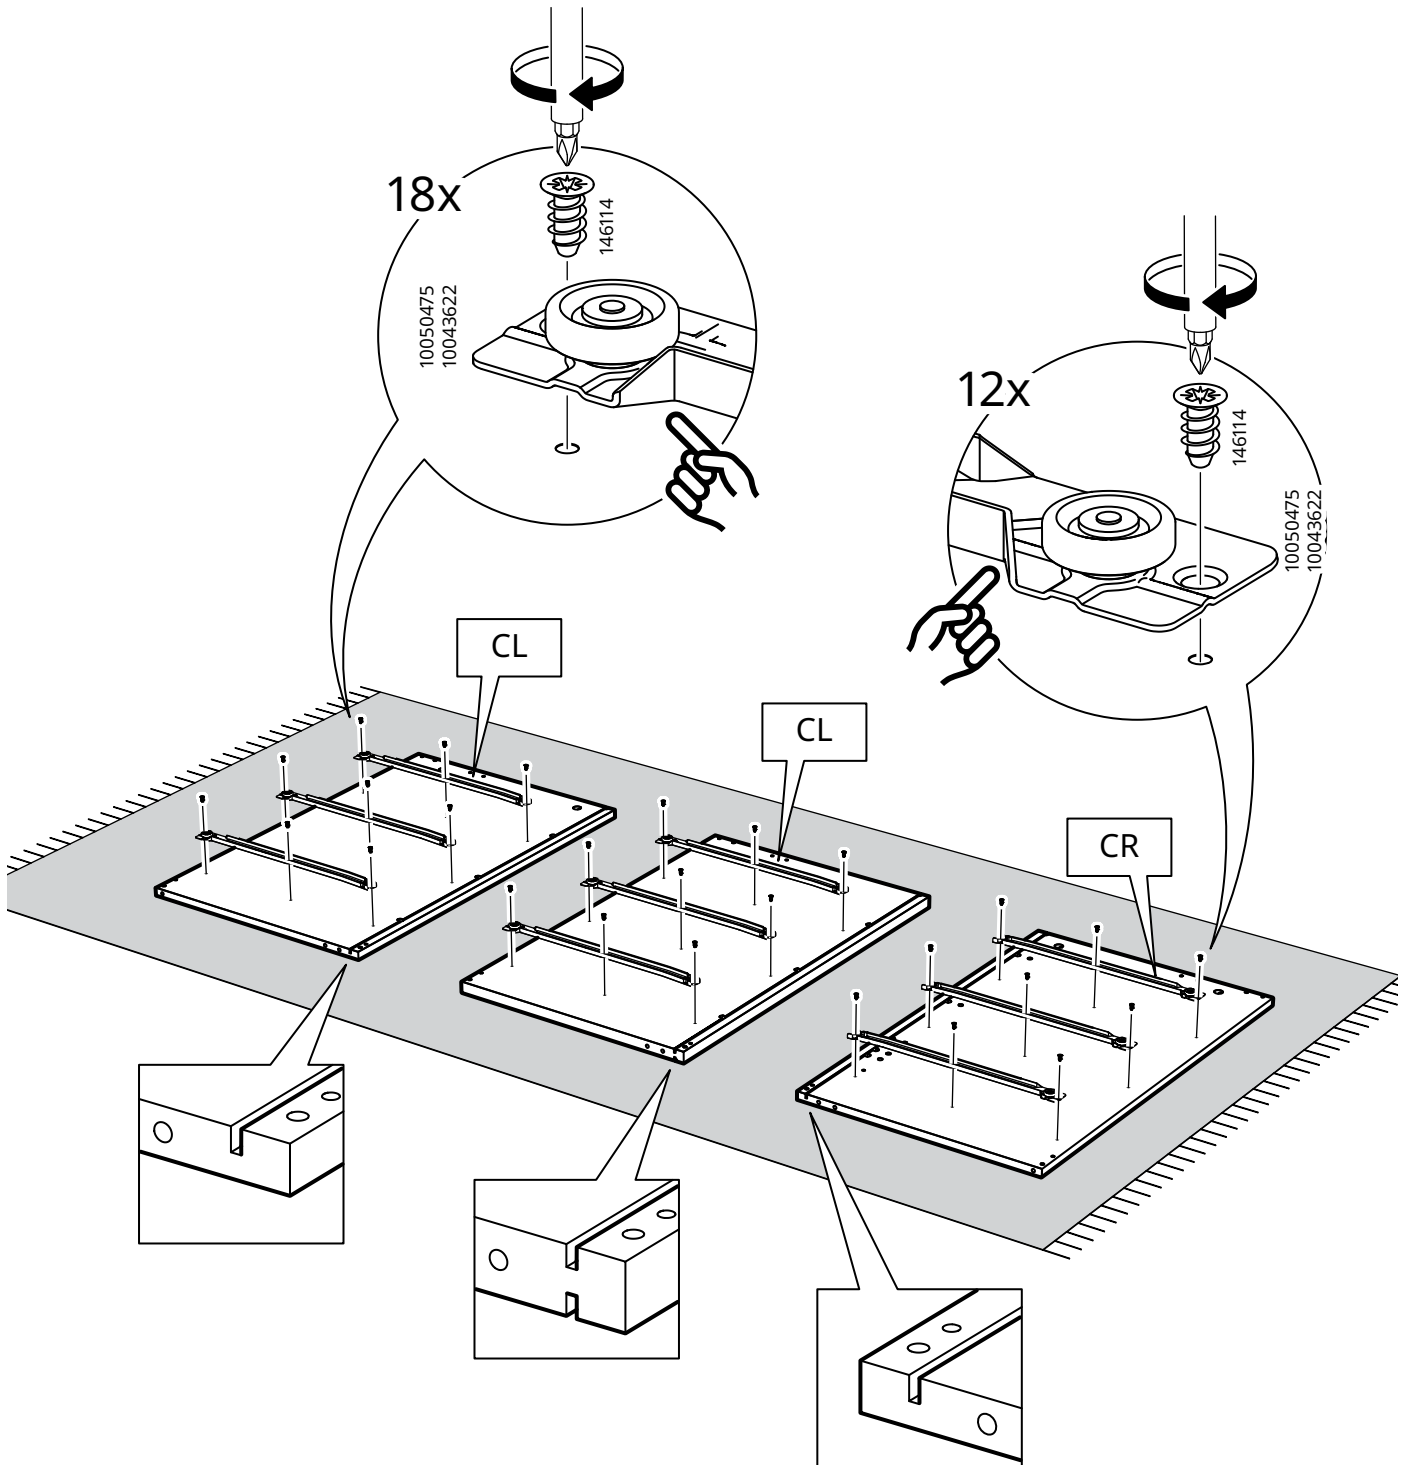


2

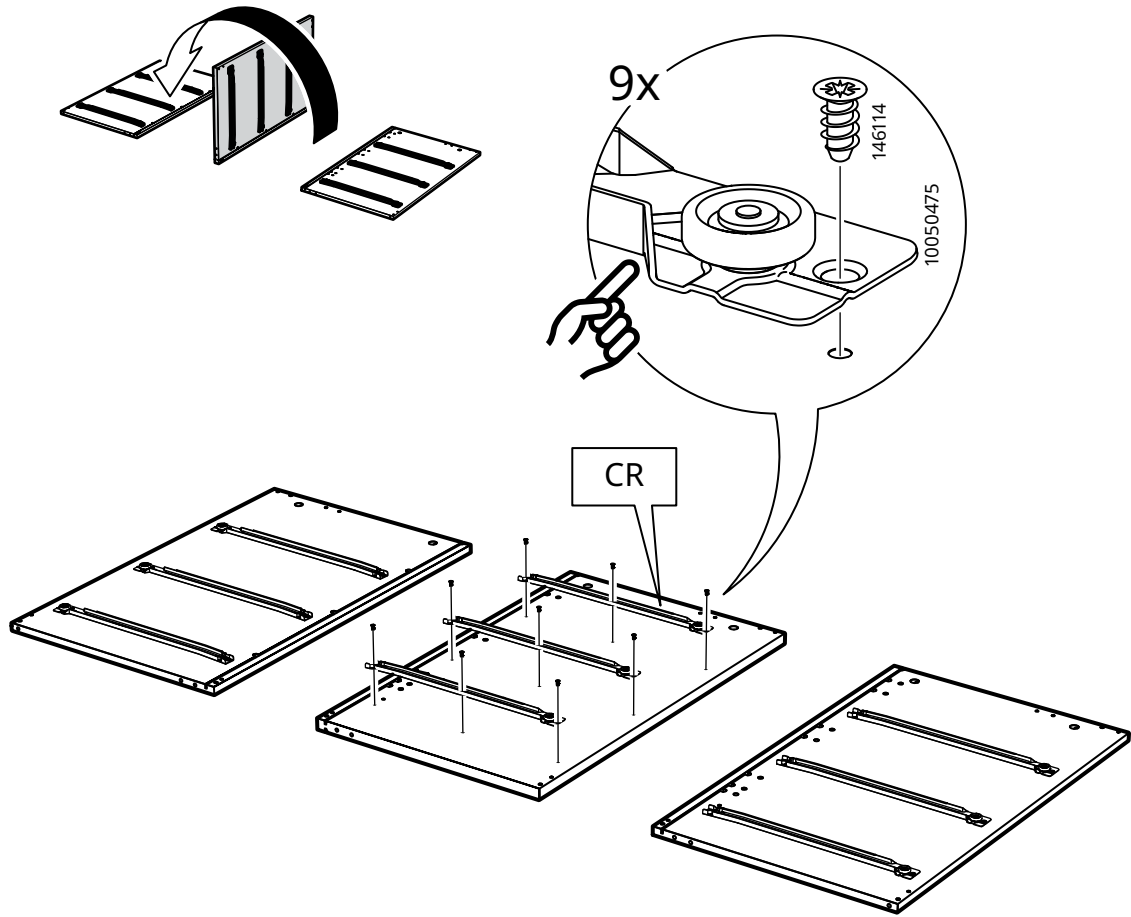 


3

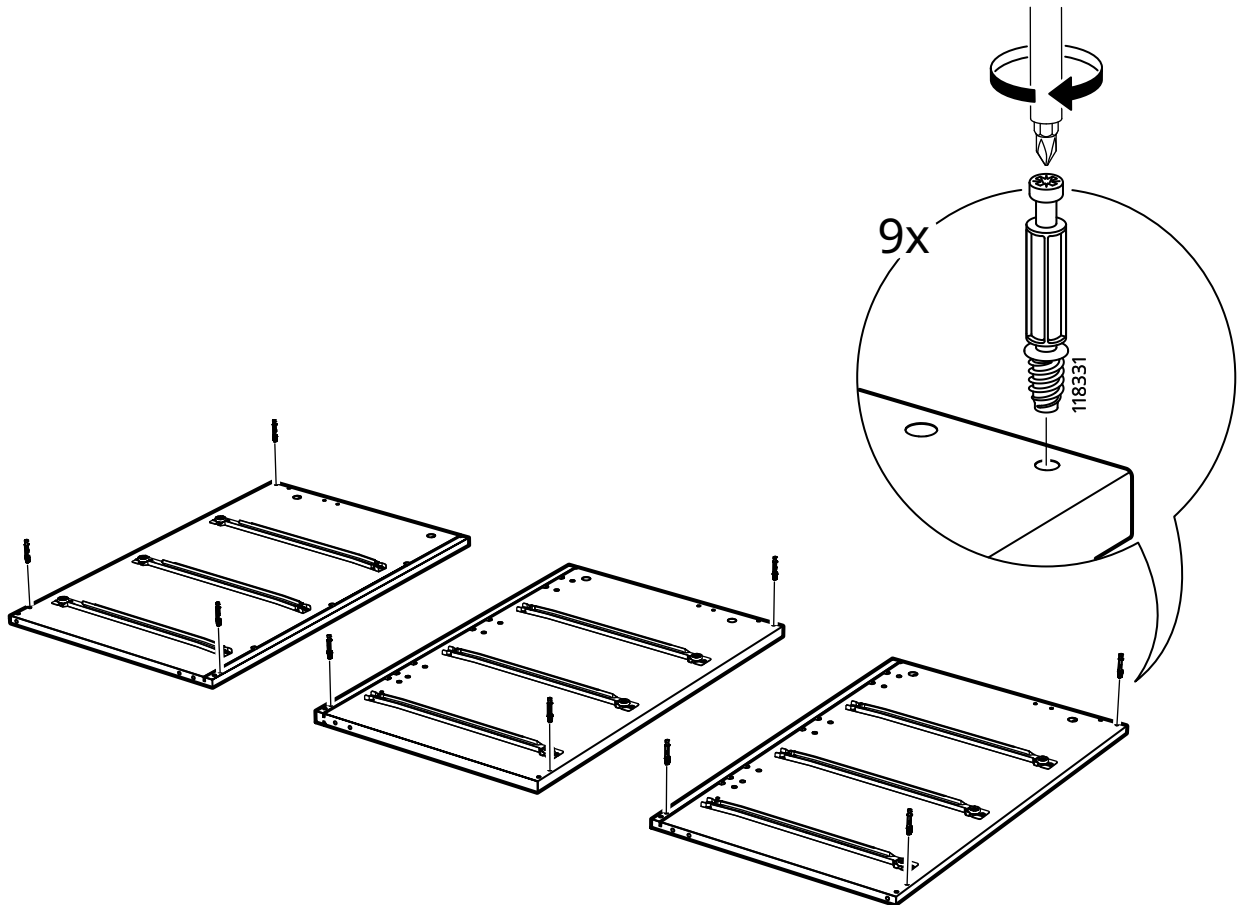 


4

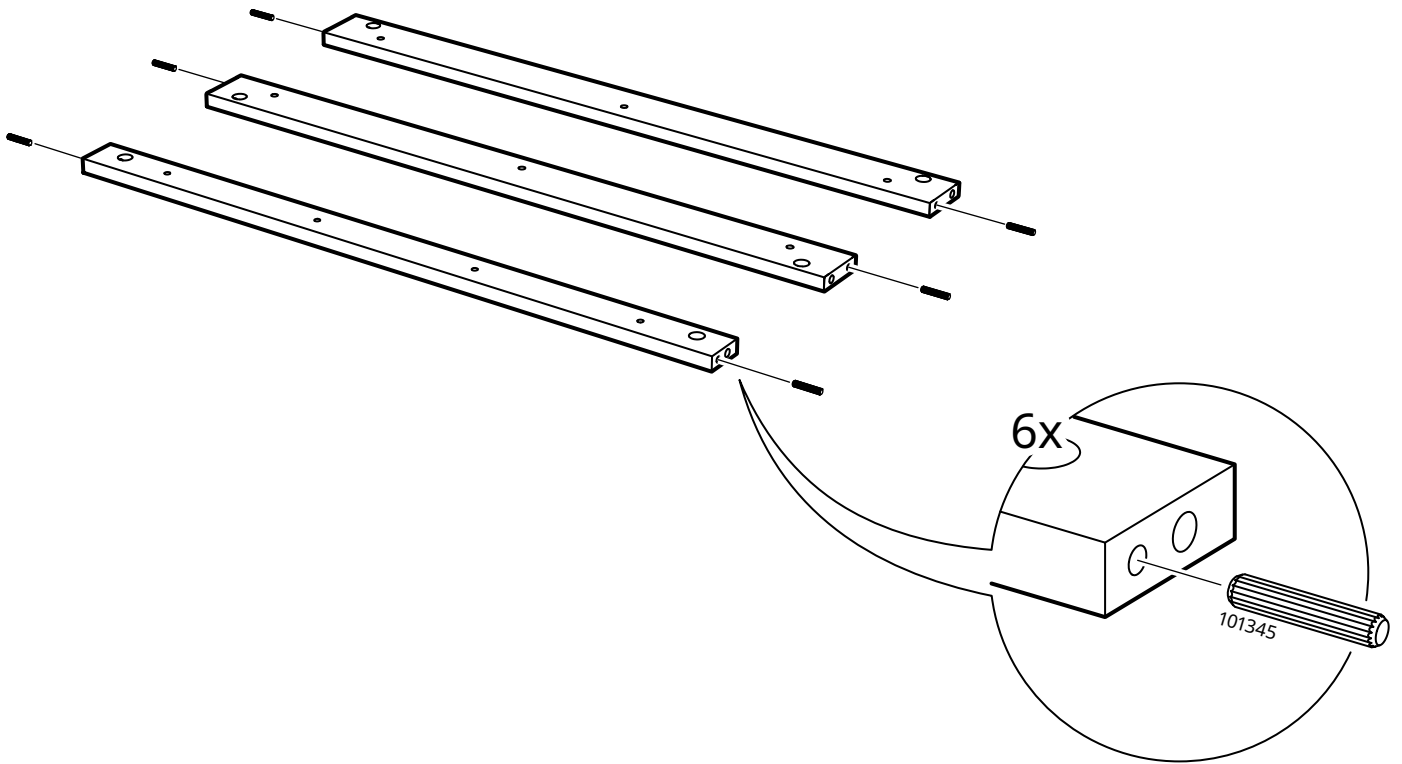 


5

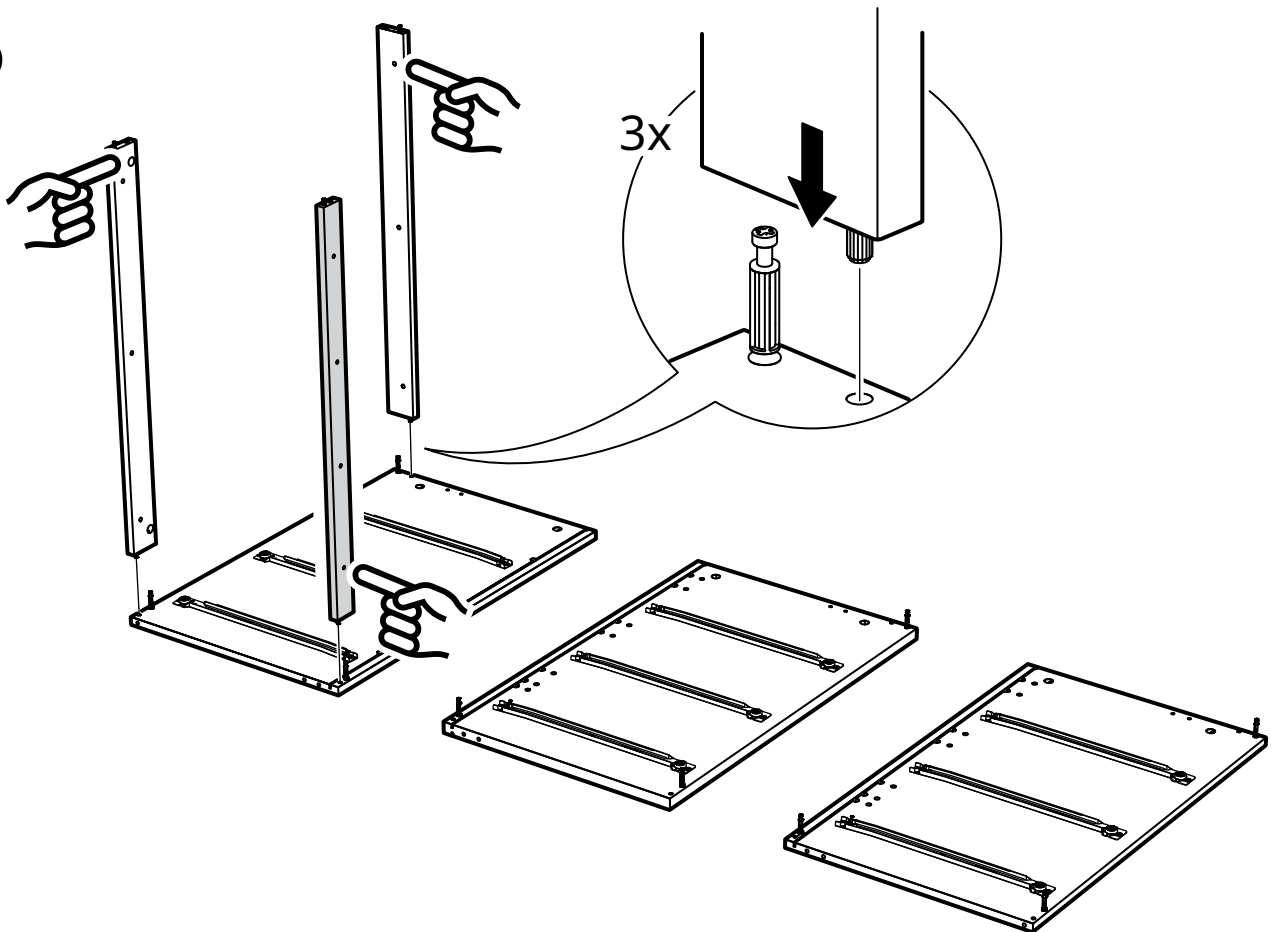 


6

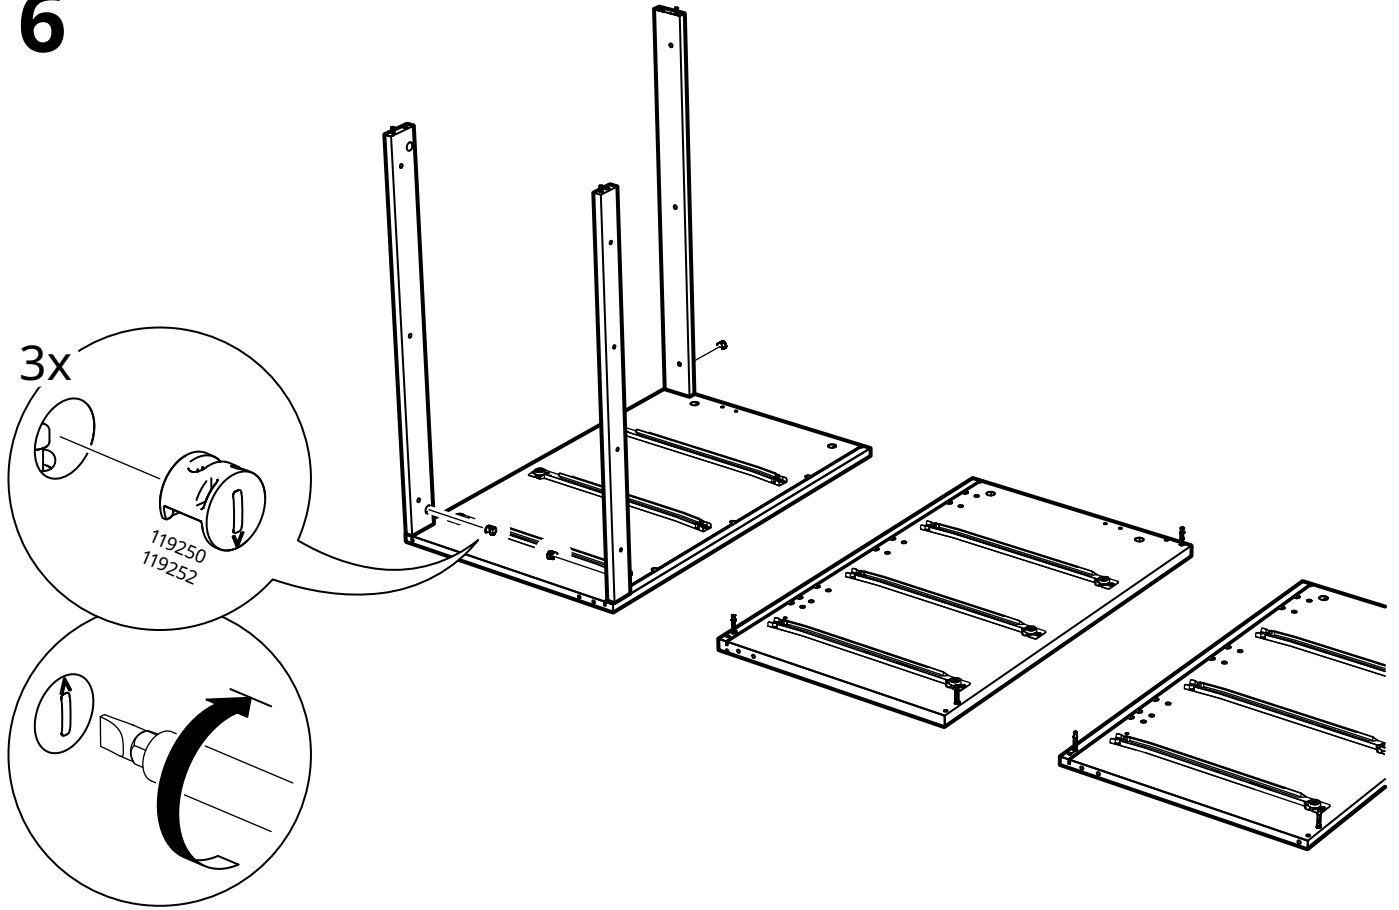 


7

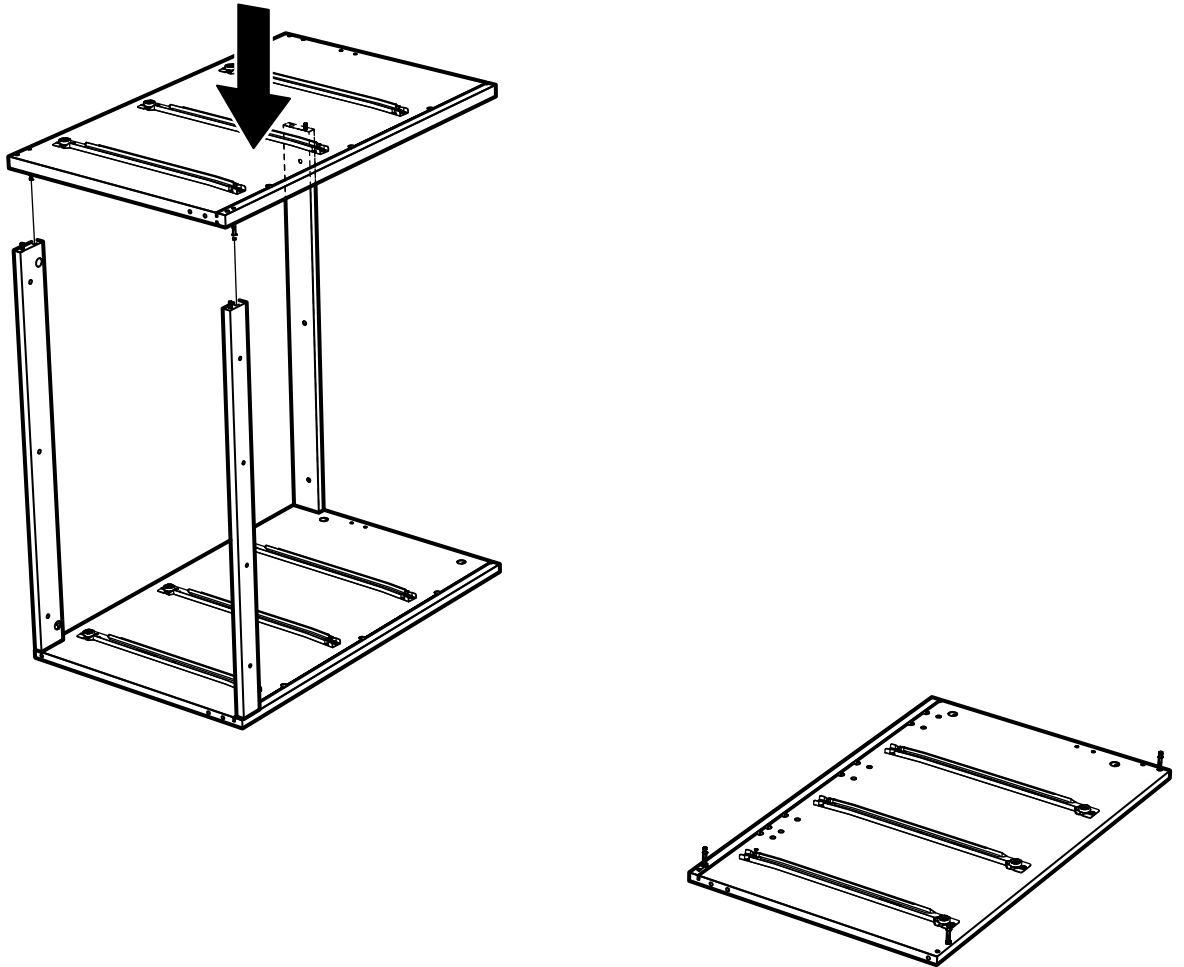 


8

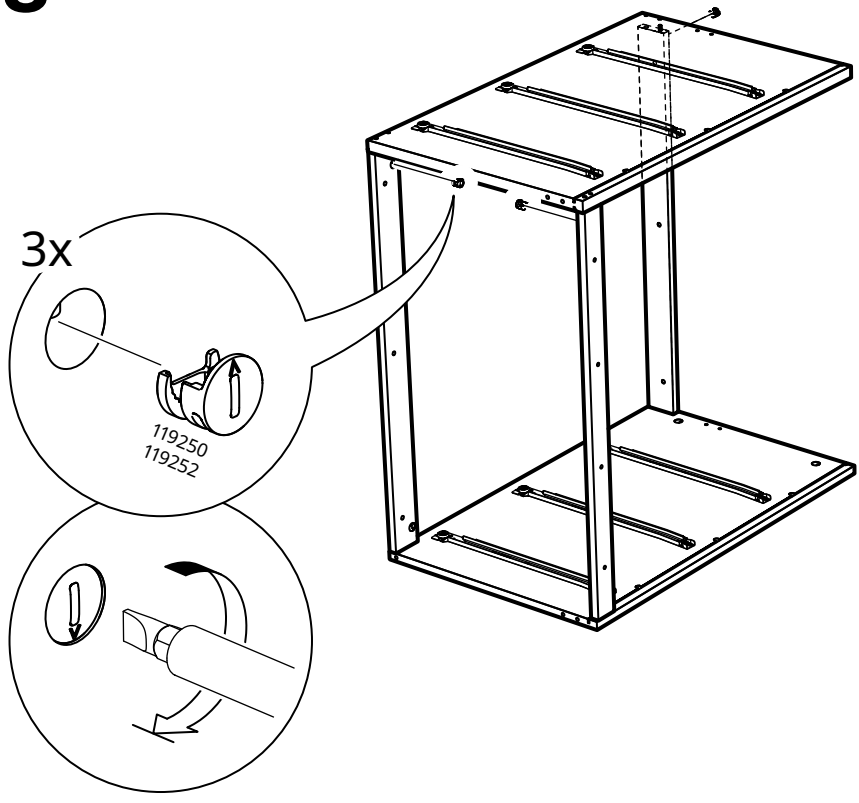 


9

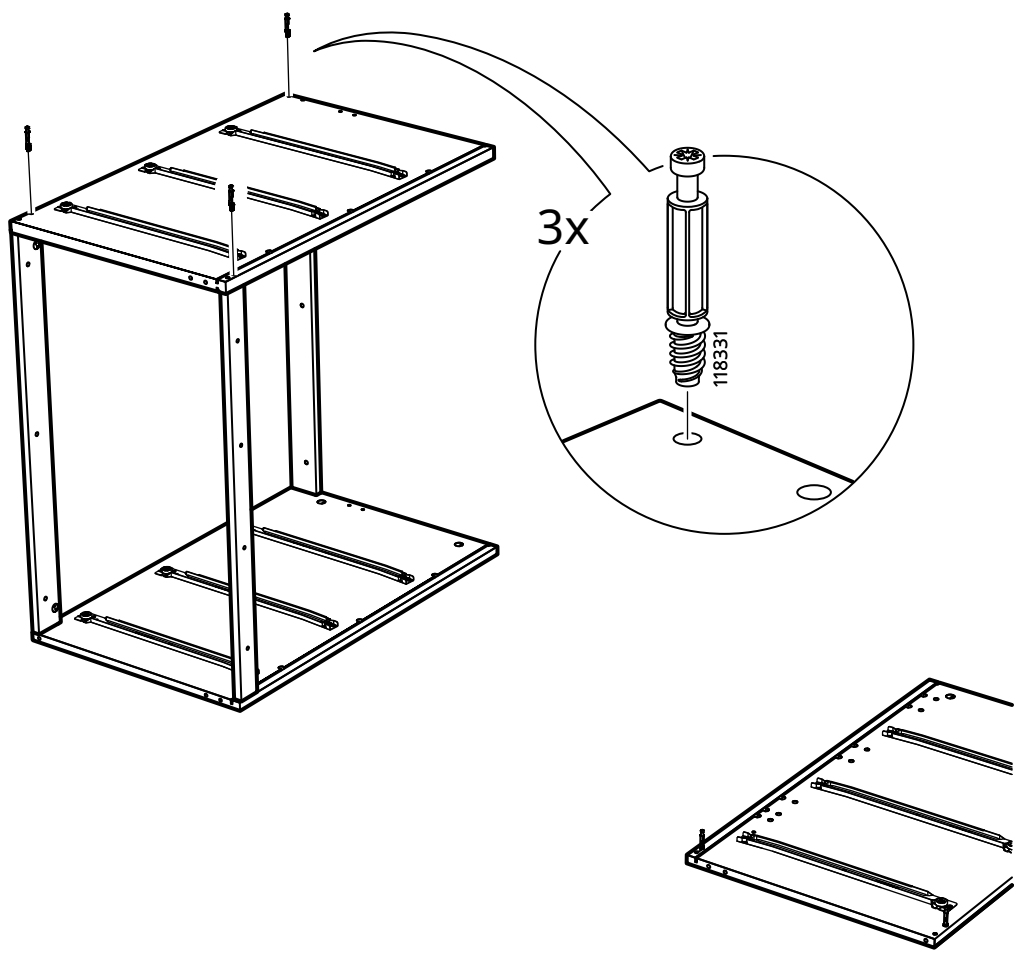 


# 10

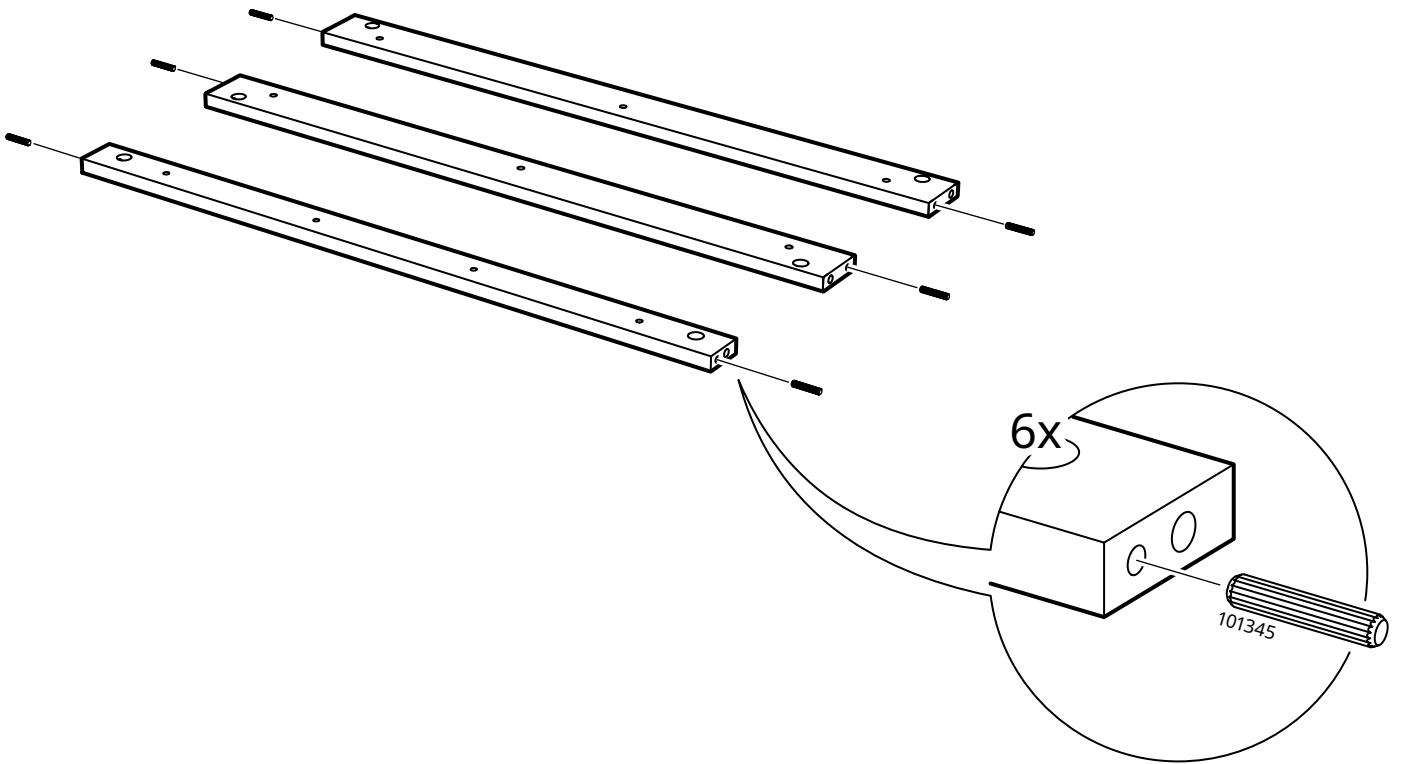 


# 11

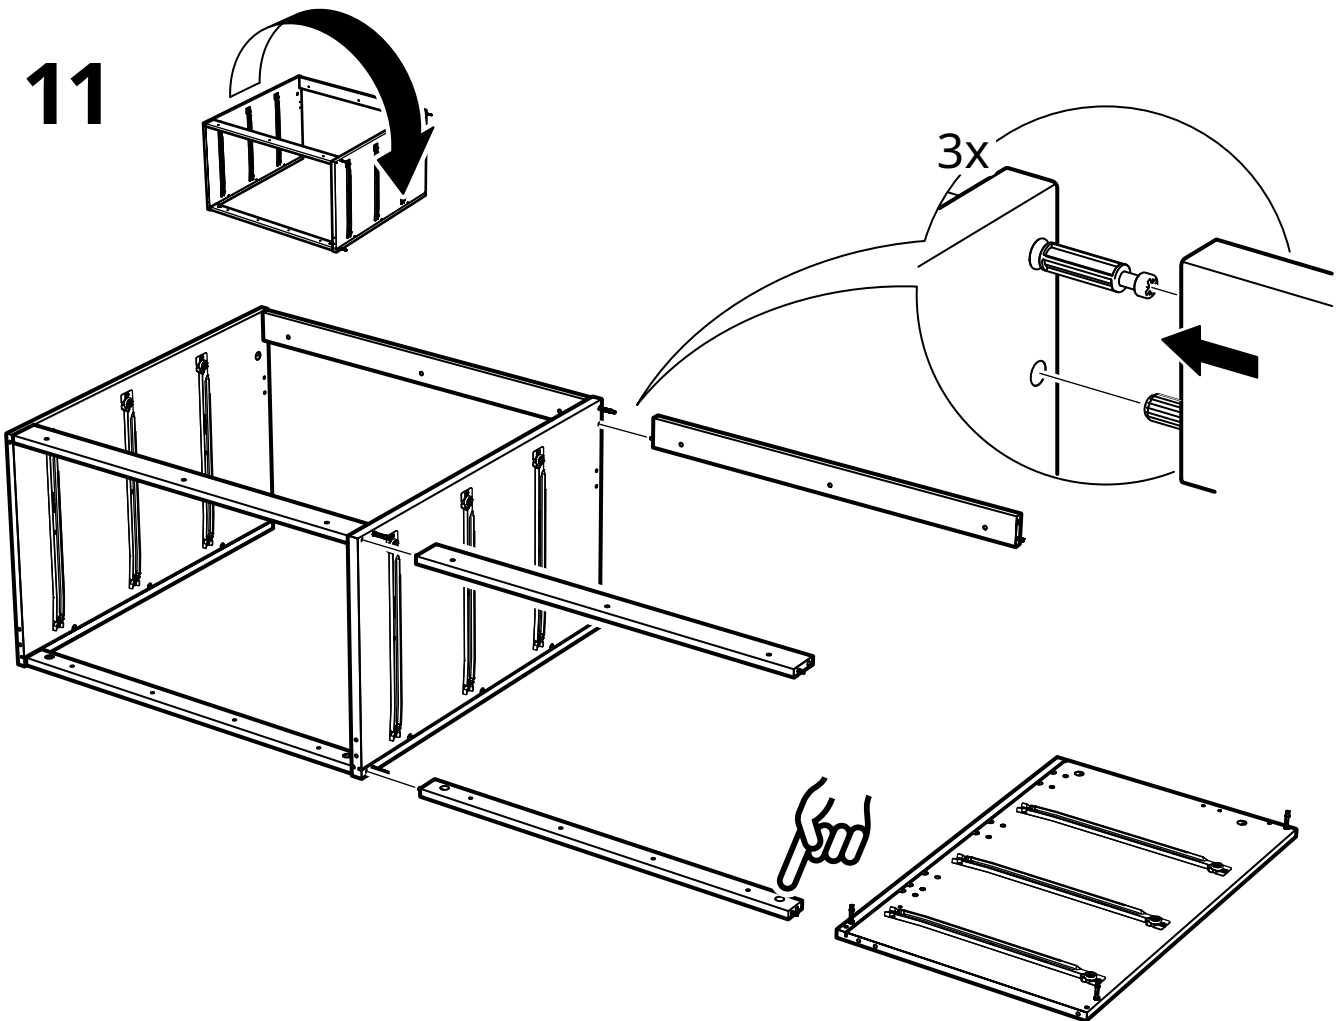 


12

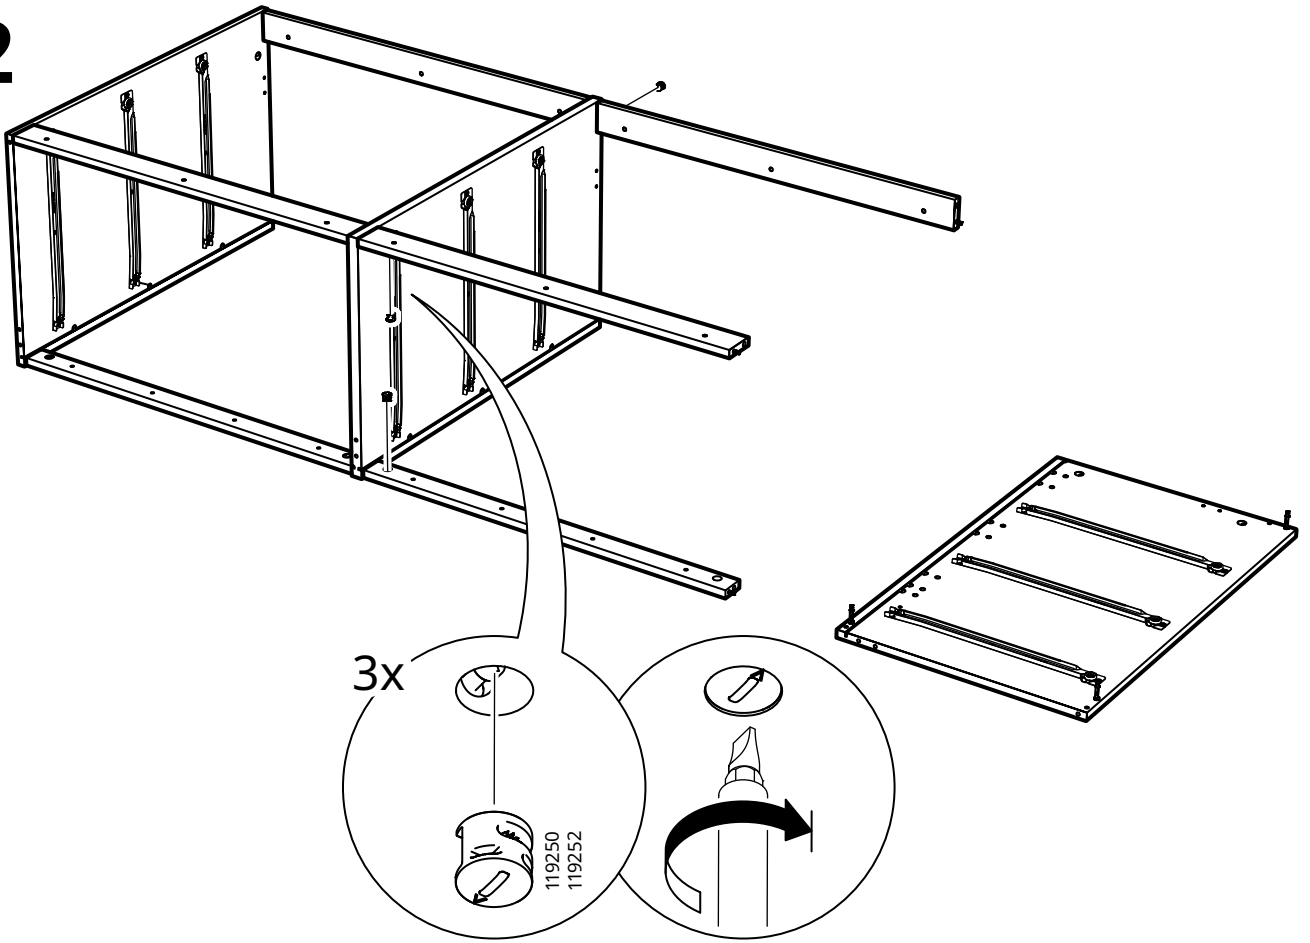 


13

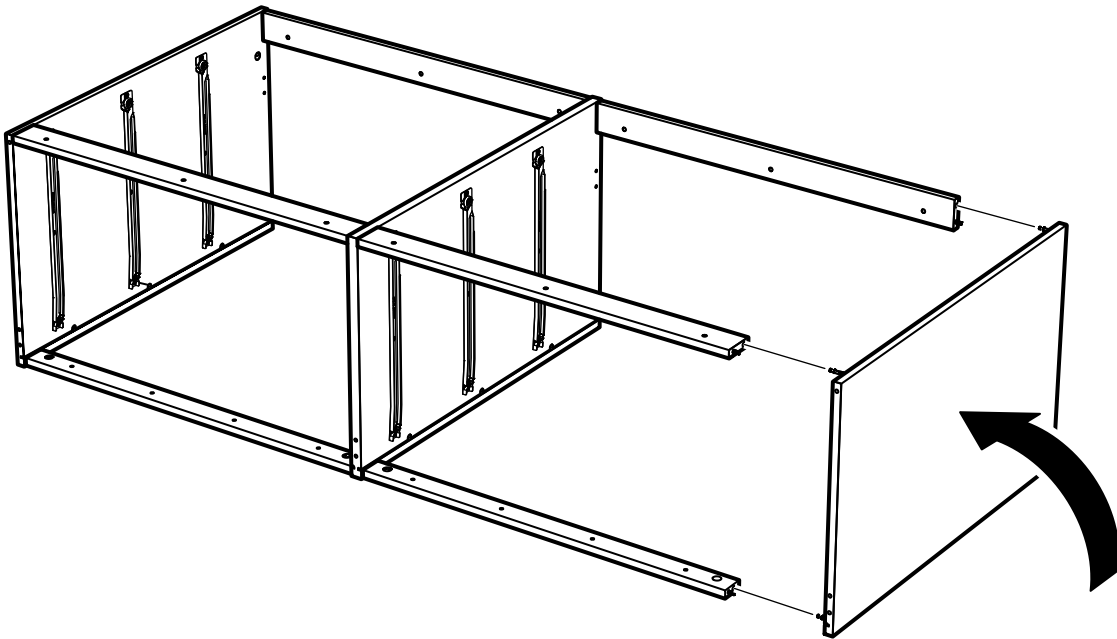 


14

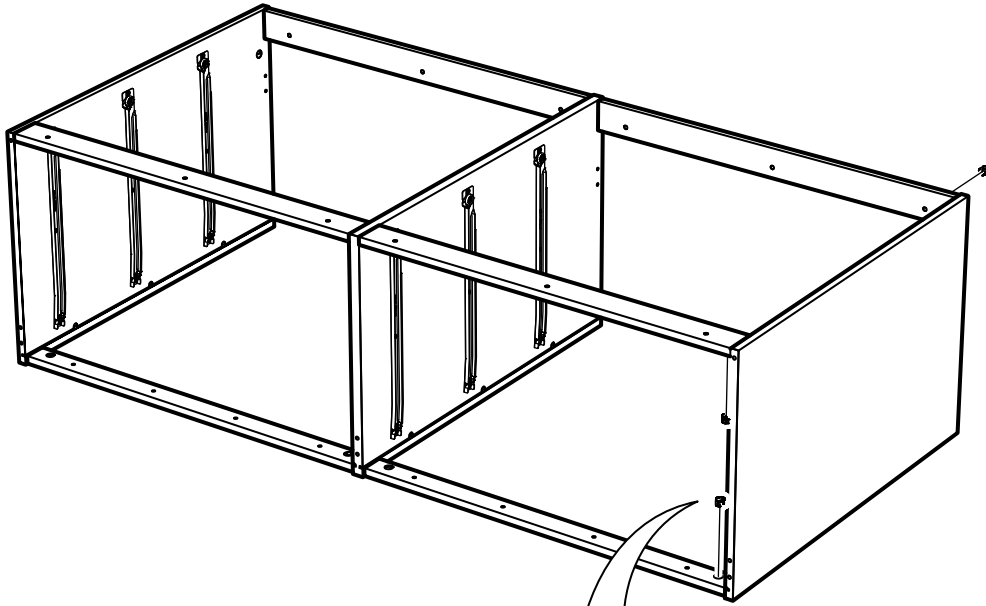 


3x

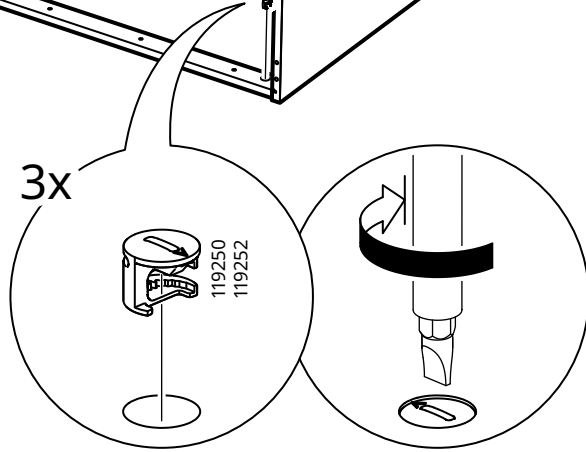 


15

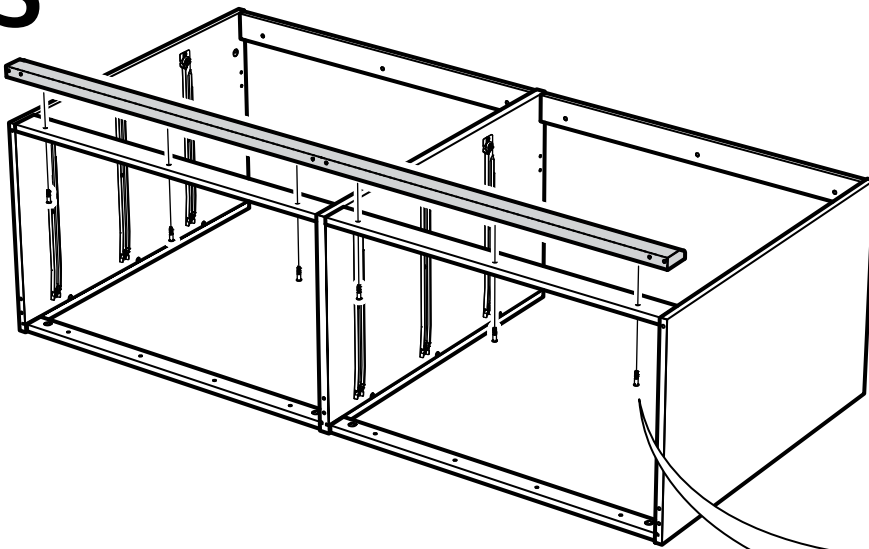 


6x

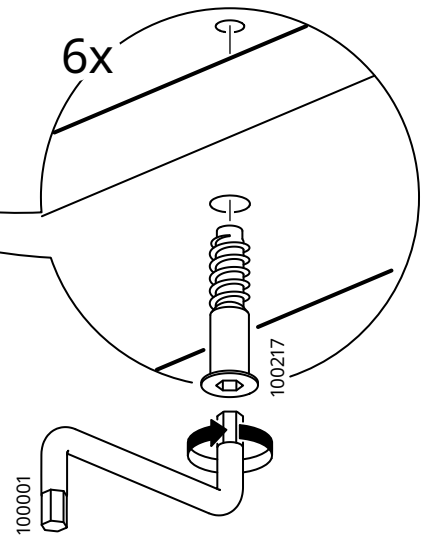 


16

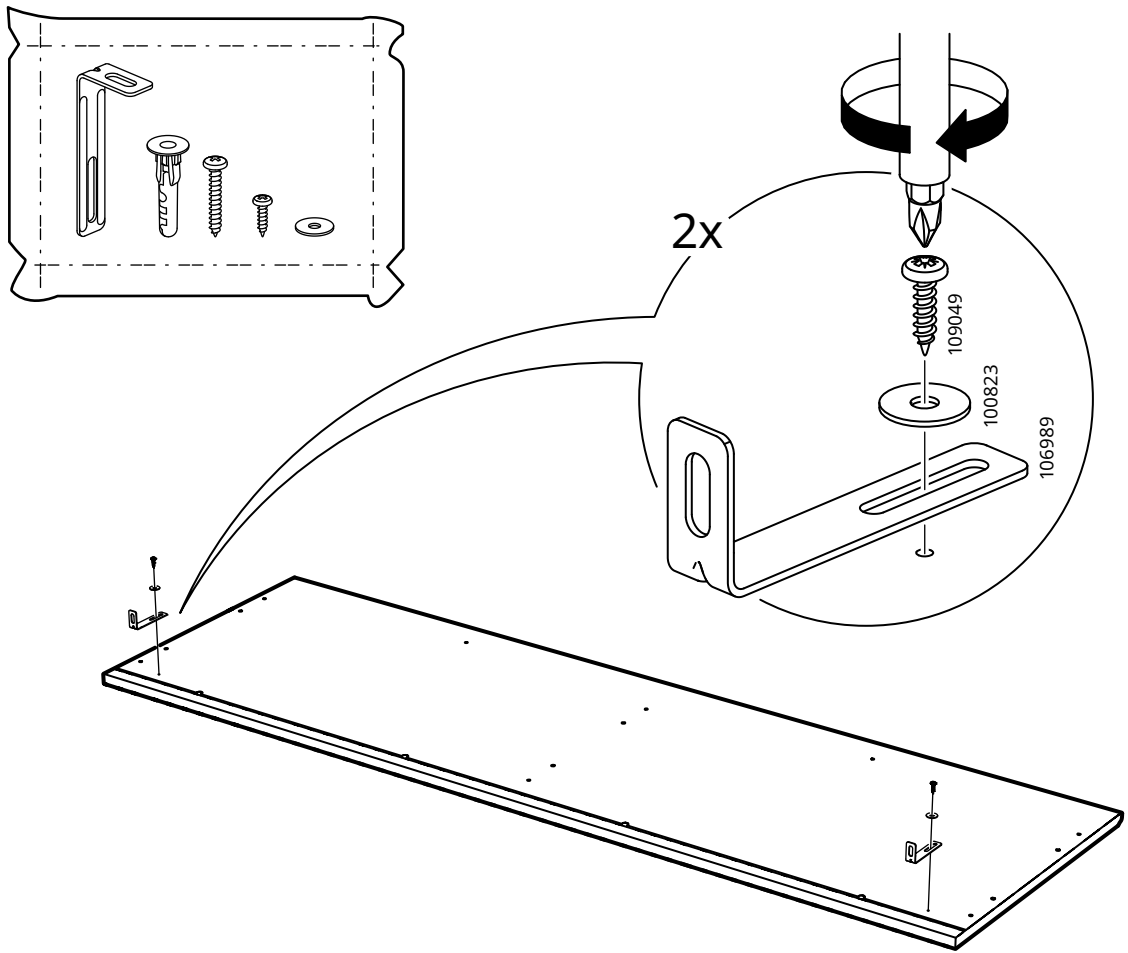 


17

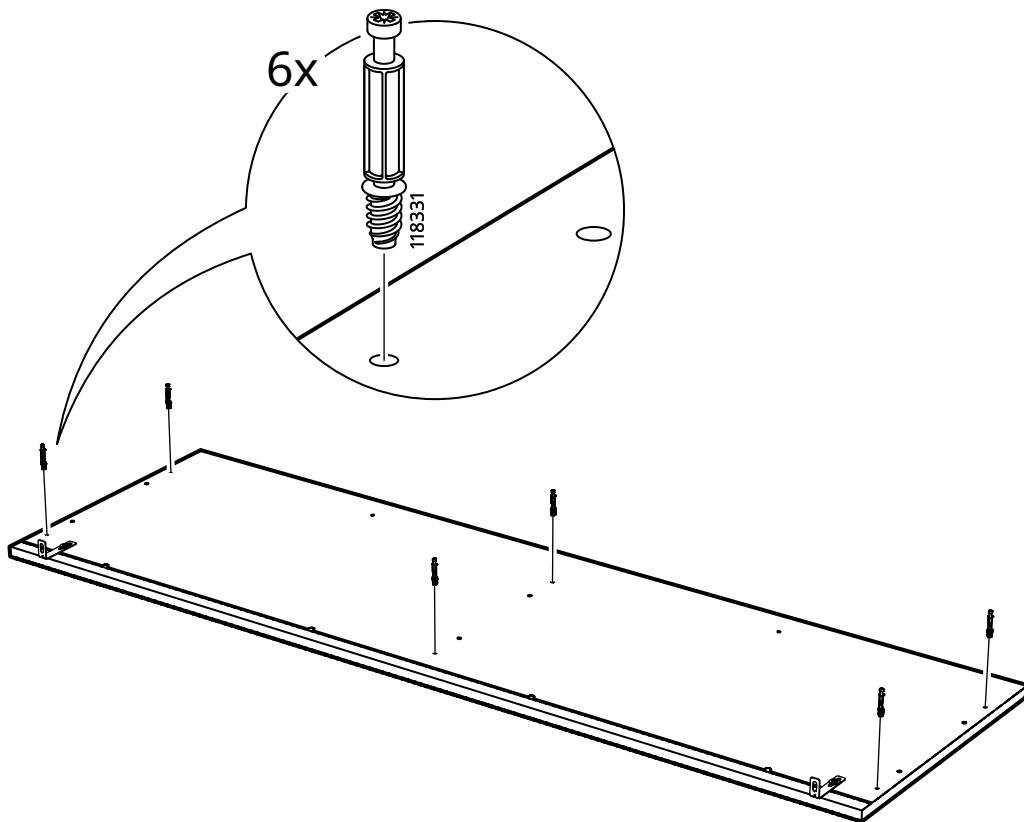 


# 18

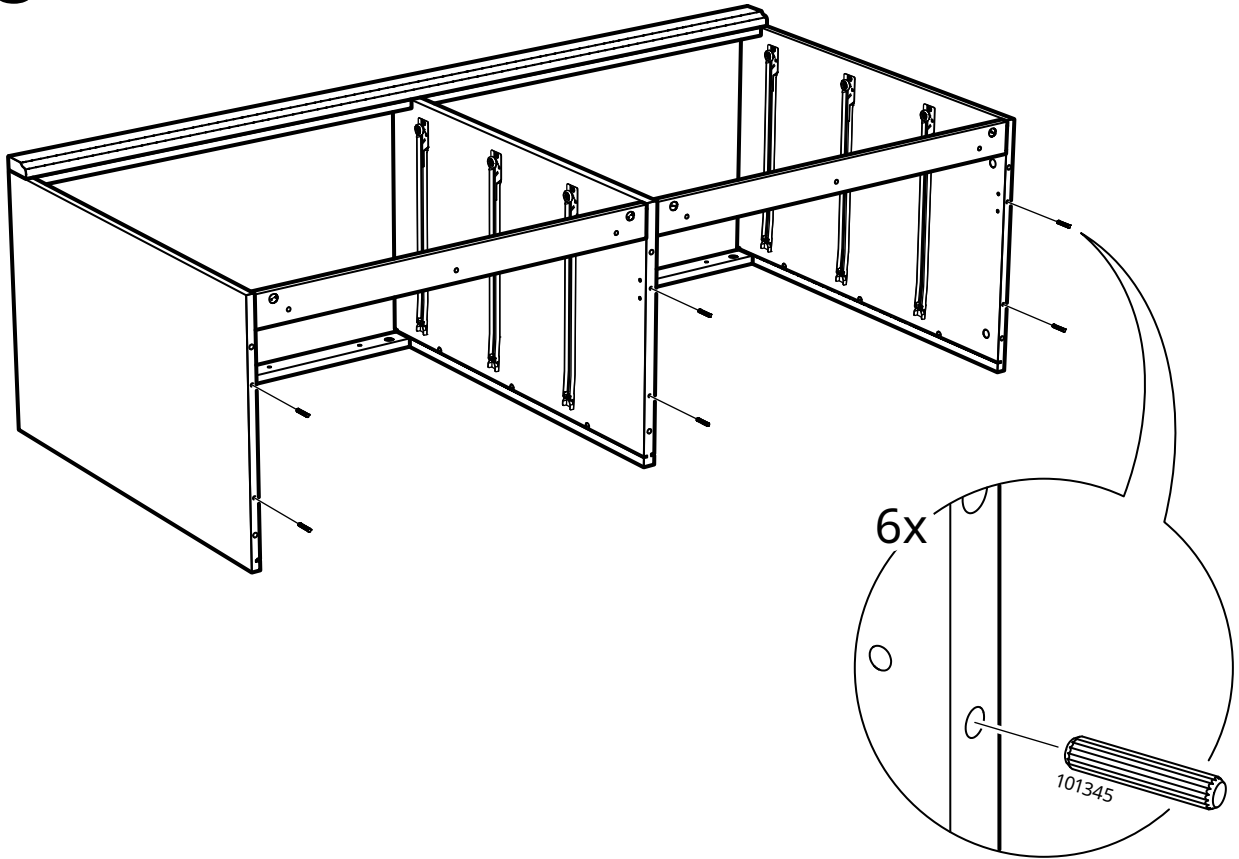 


# 19

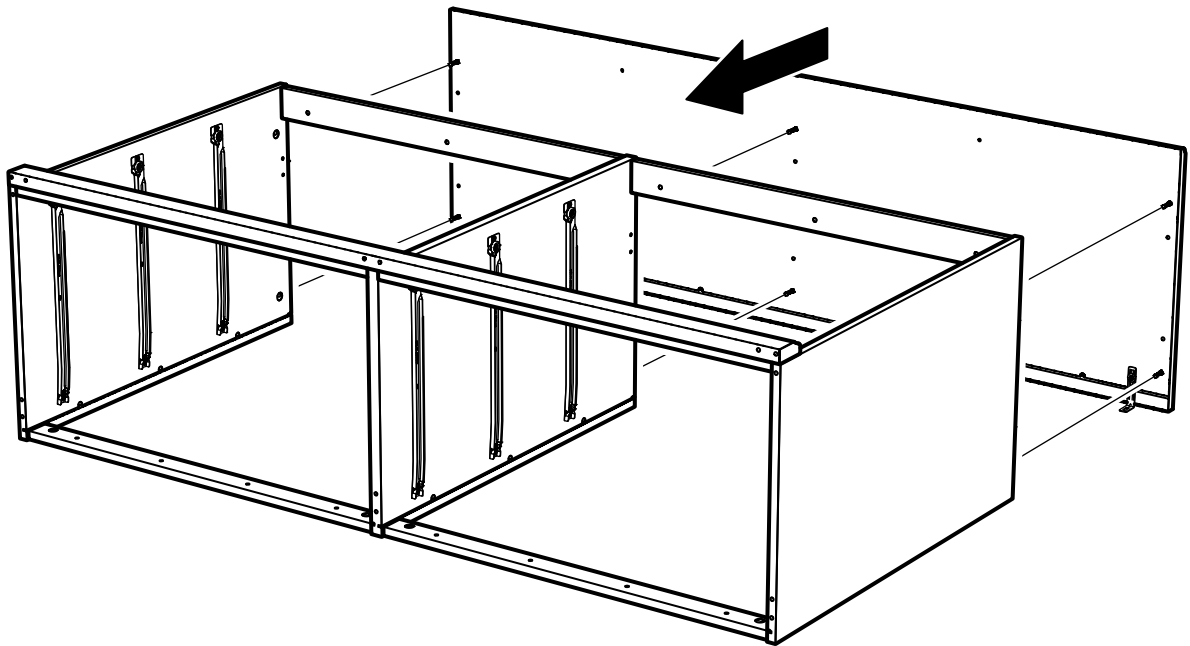 



20

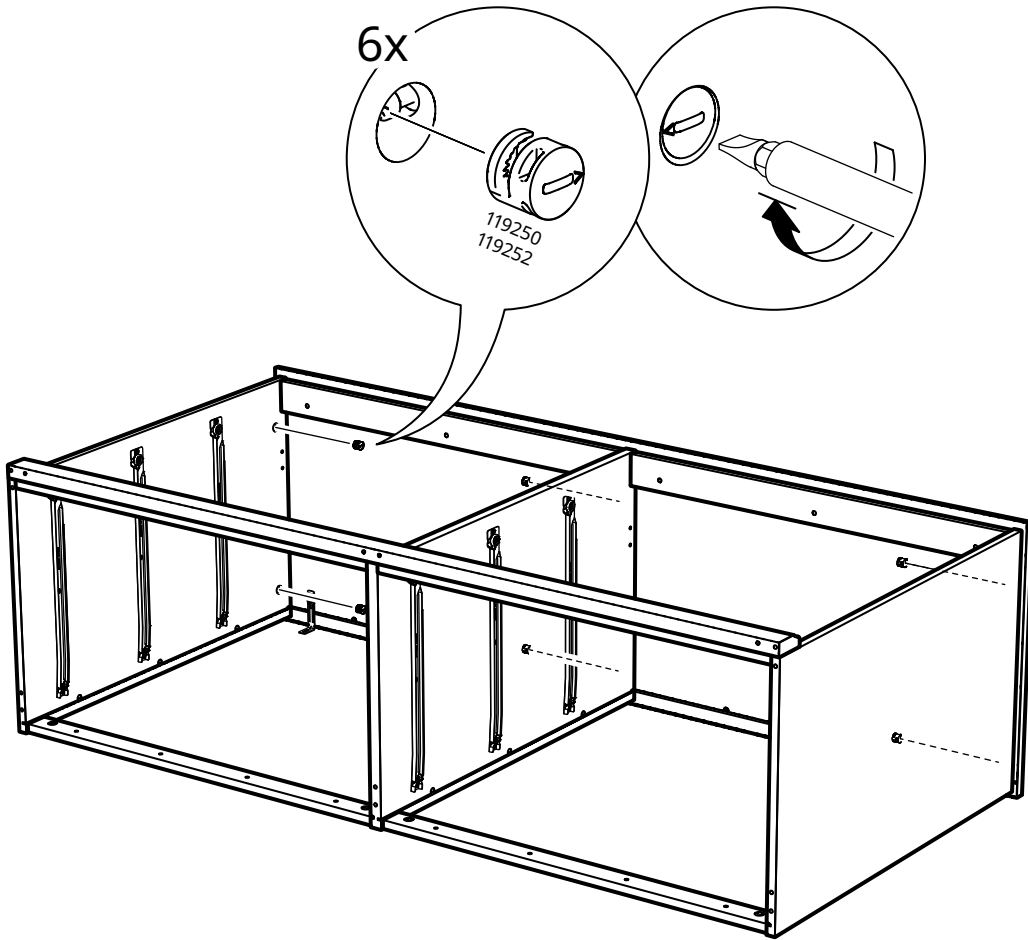 

21

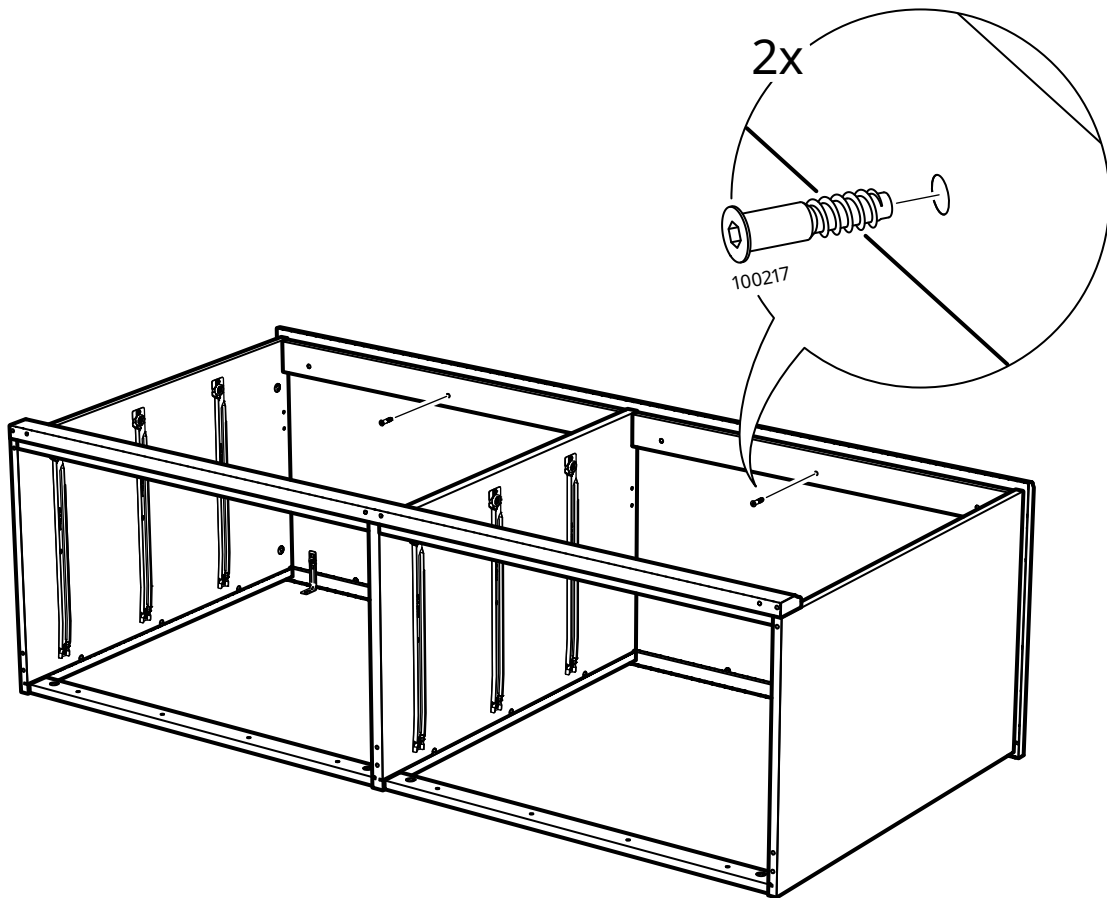 


22

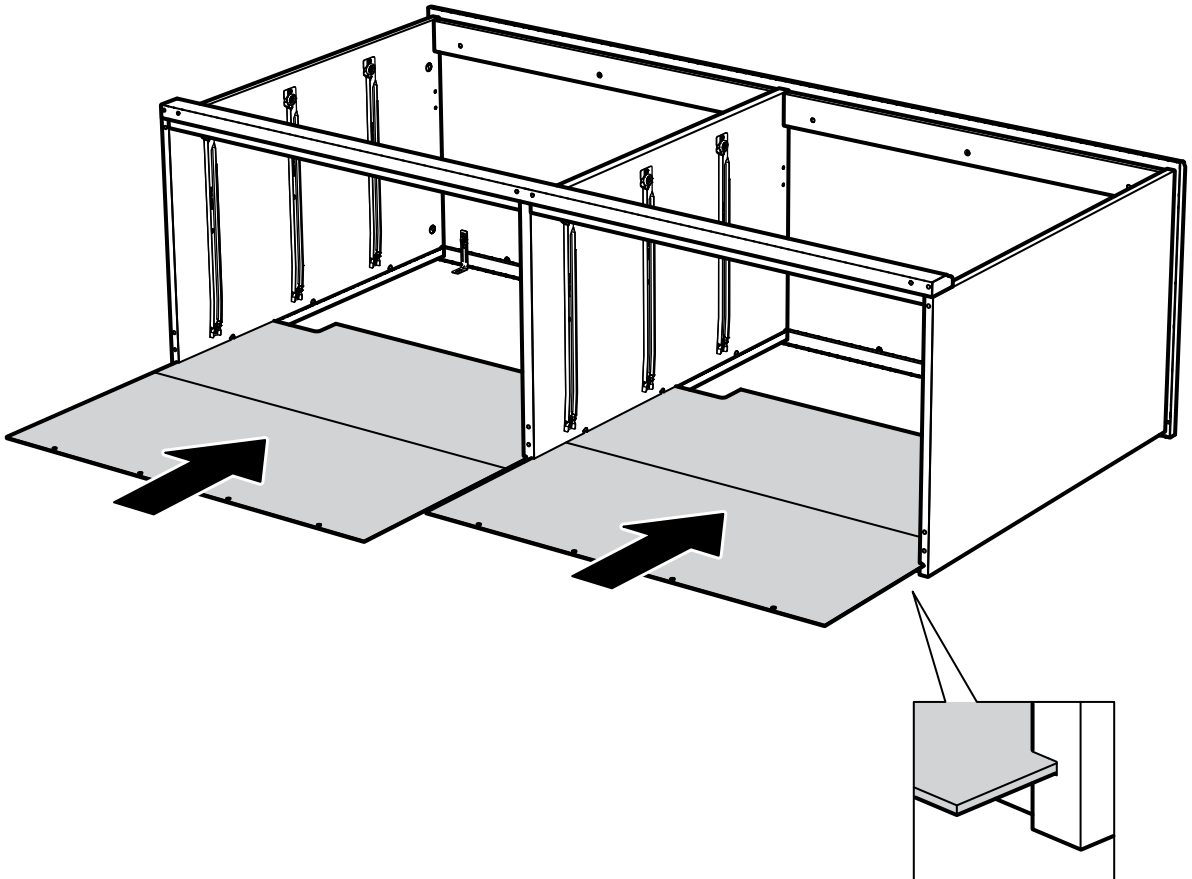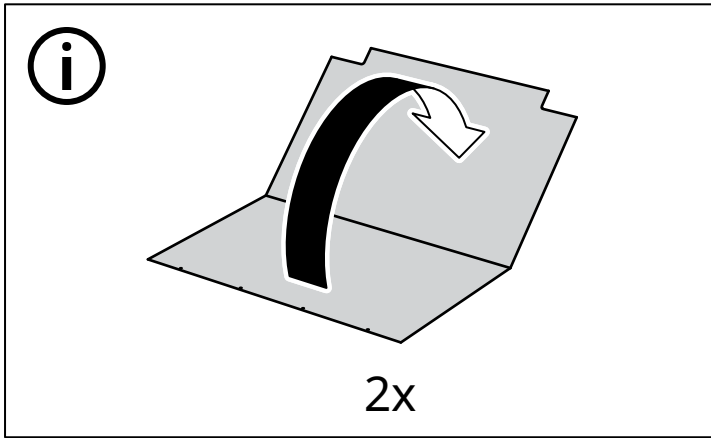  


# 23

 
8x

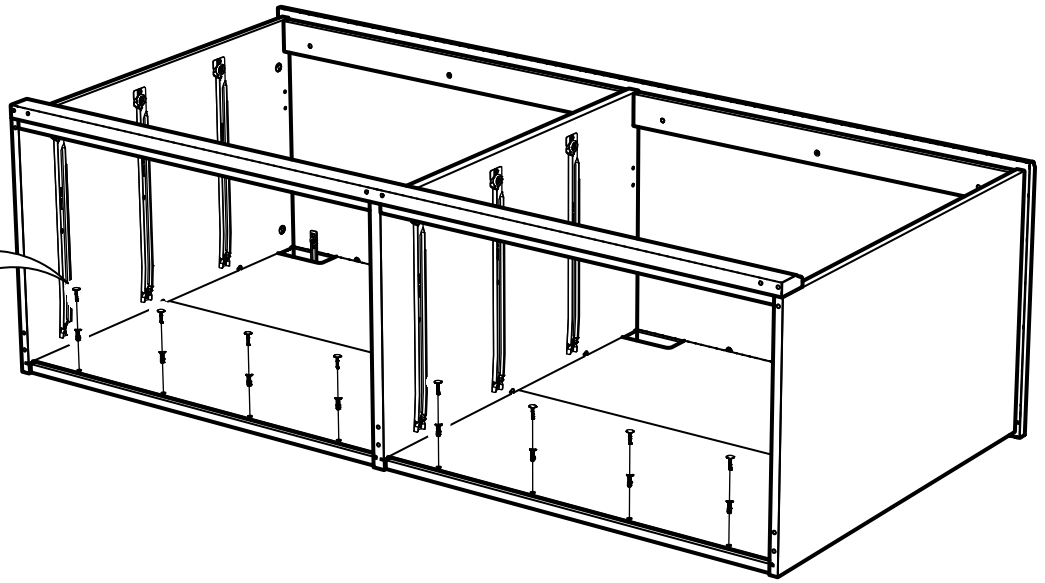


# 24

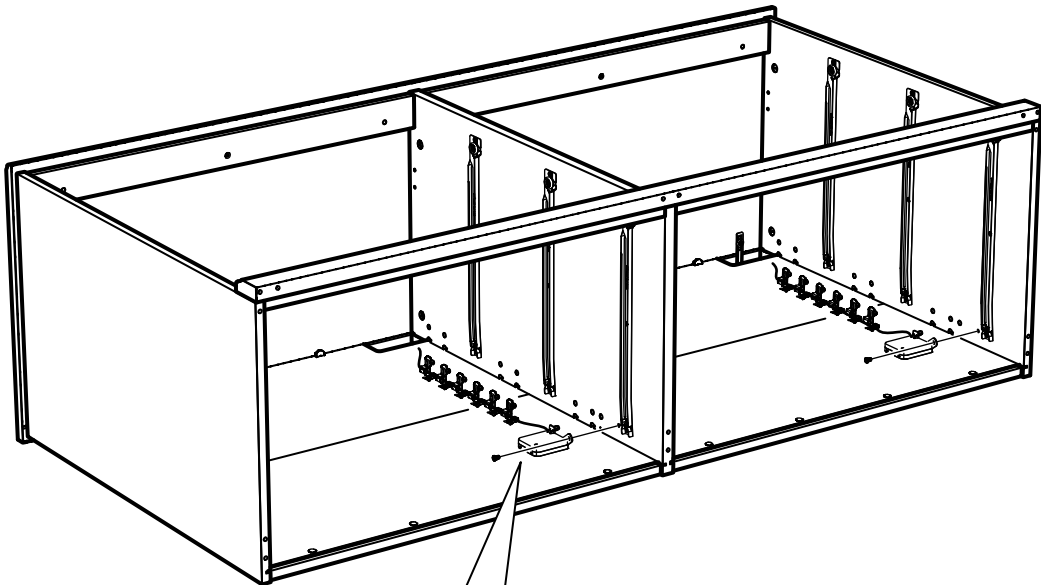 


2x

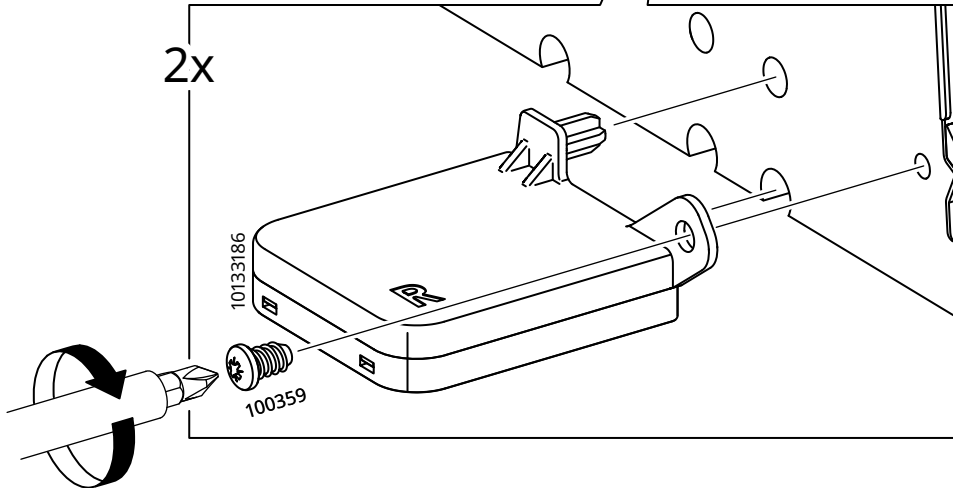 


25

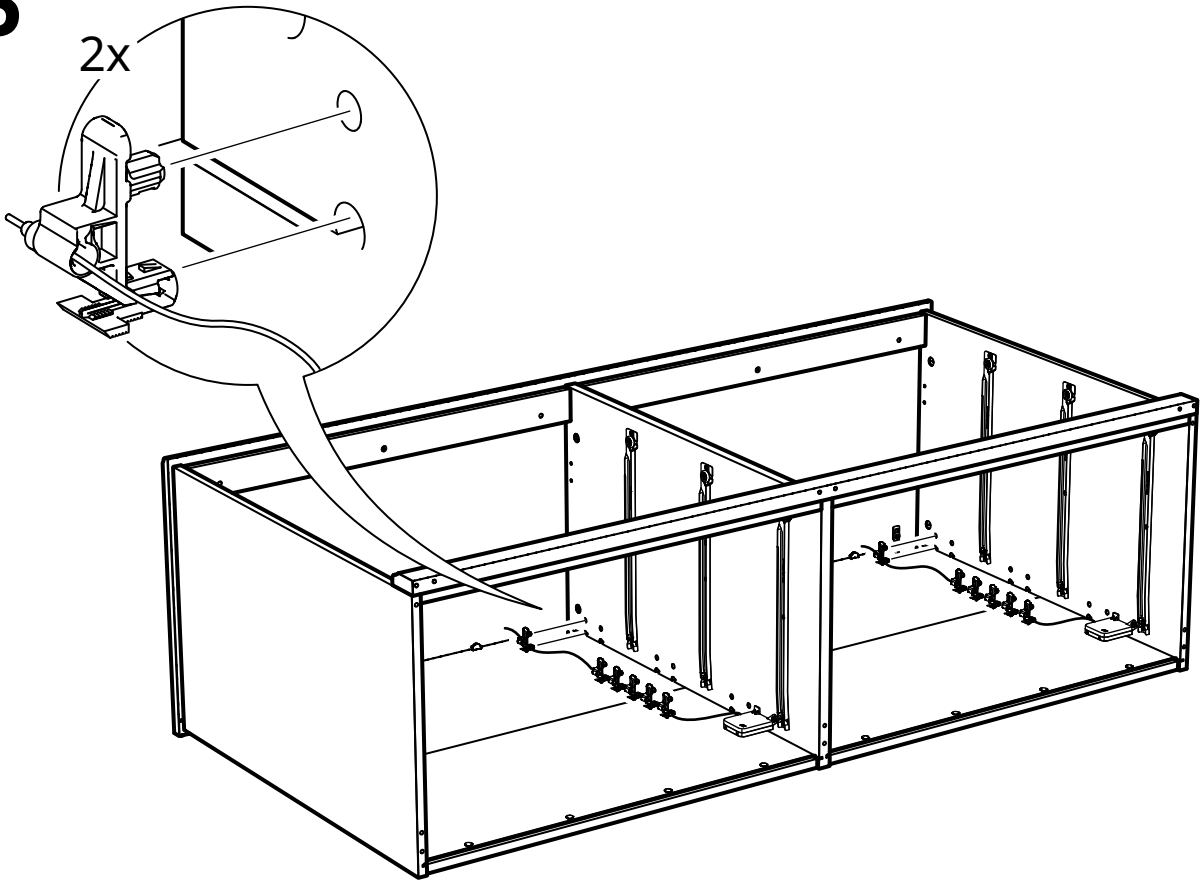 


26

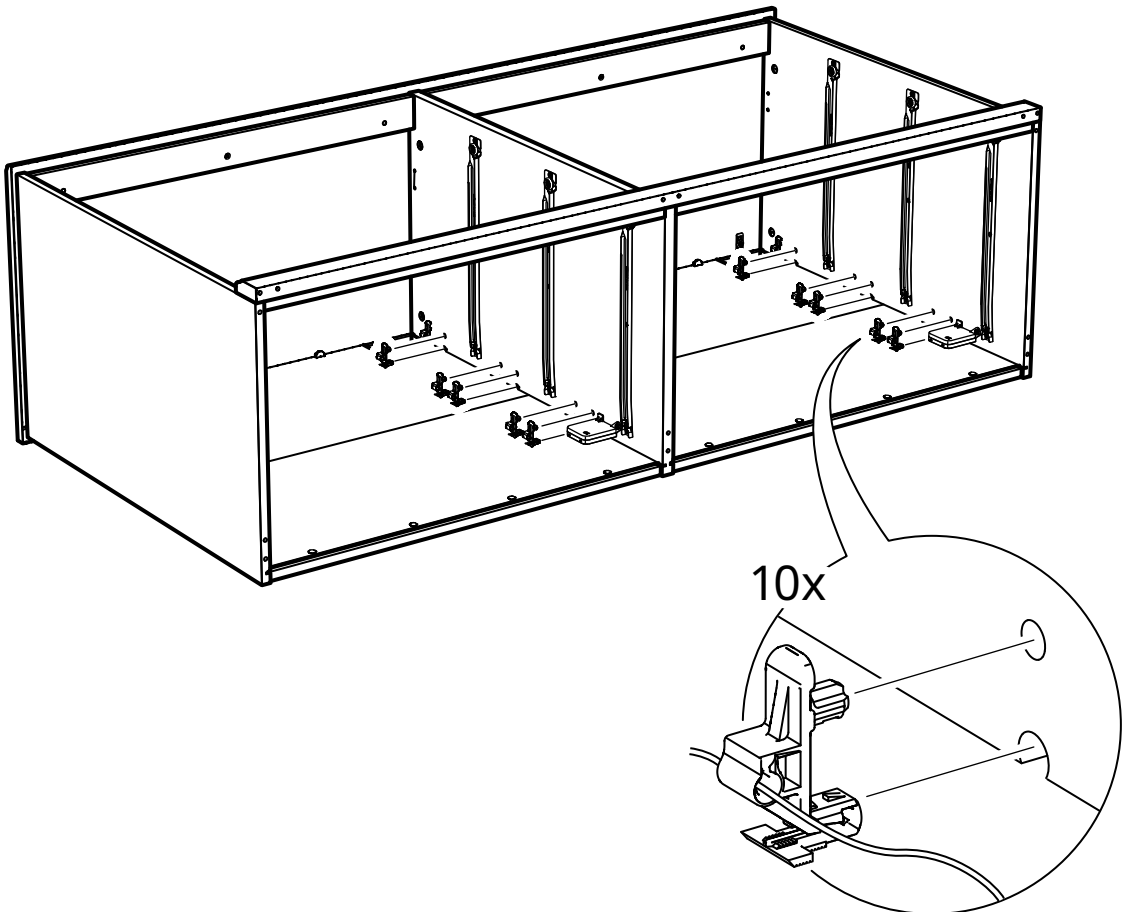 


27

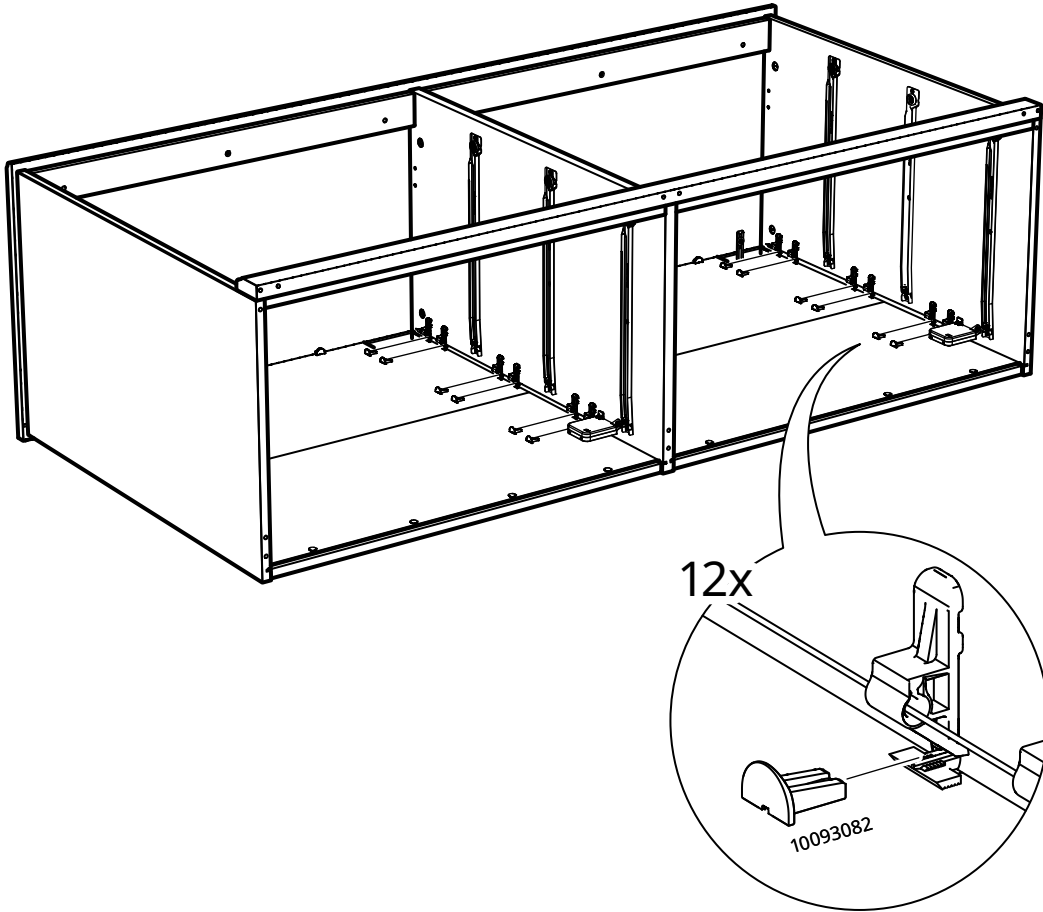 


28

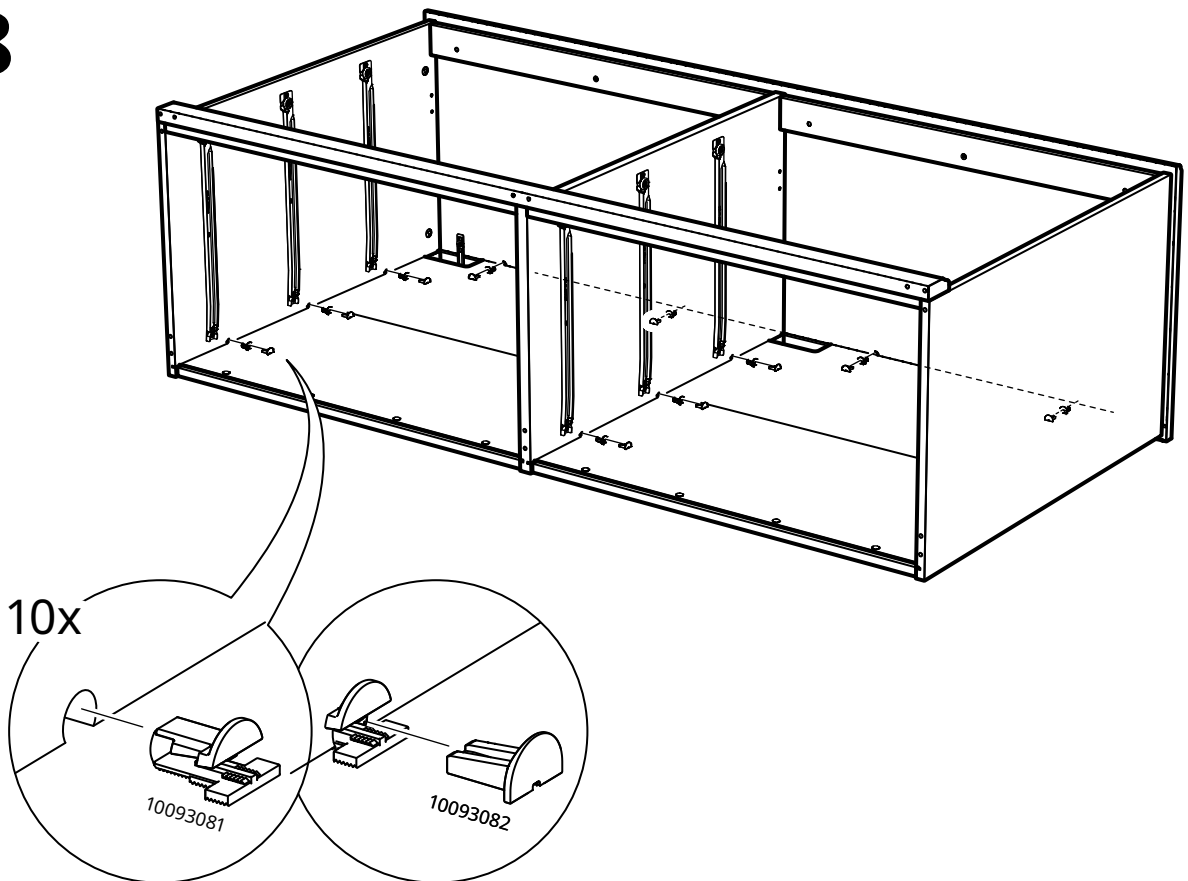 


# 29

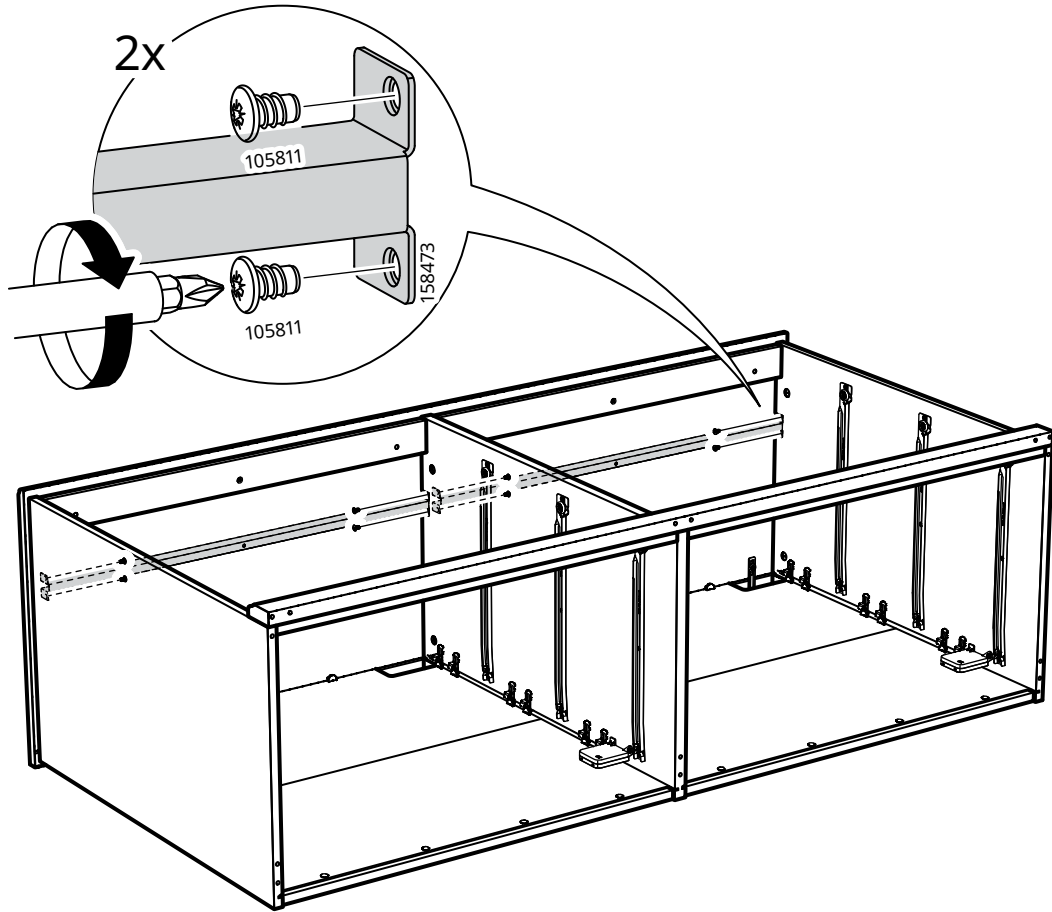 


# 30

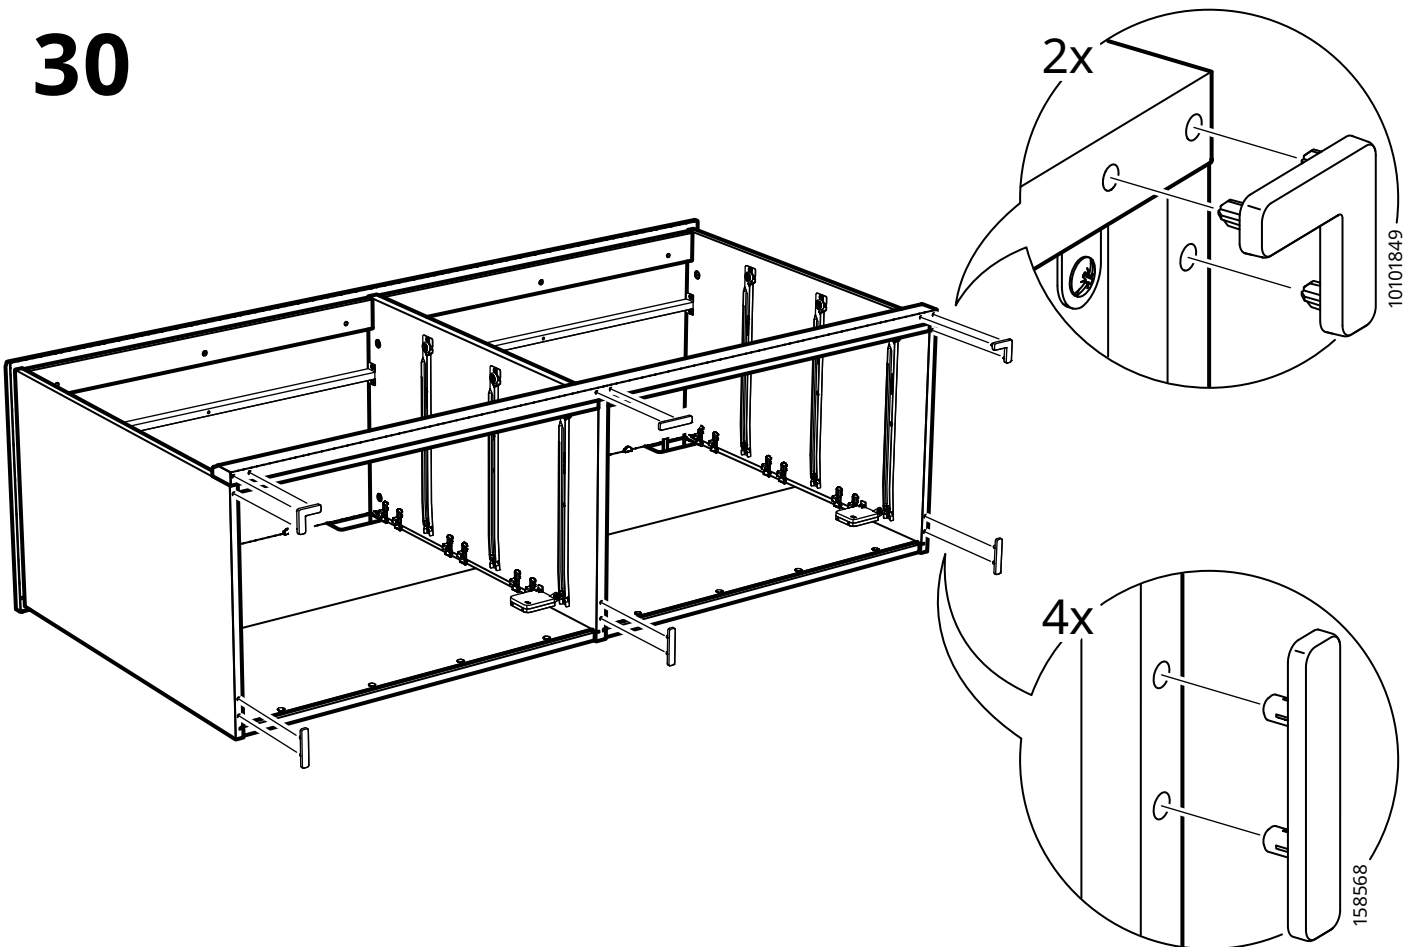 

# 31

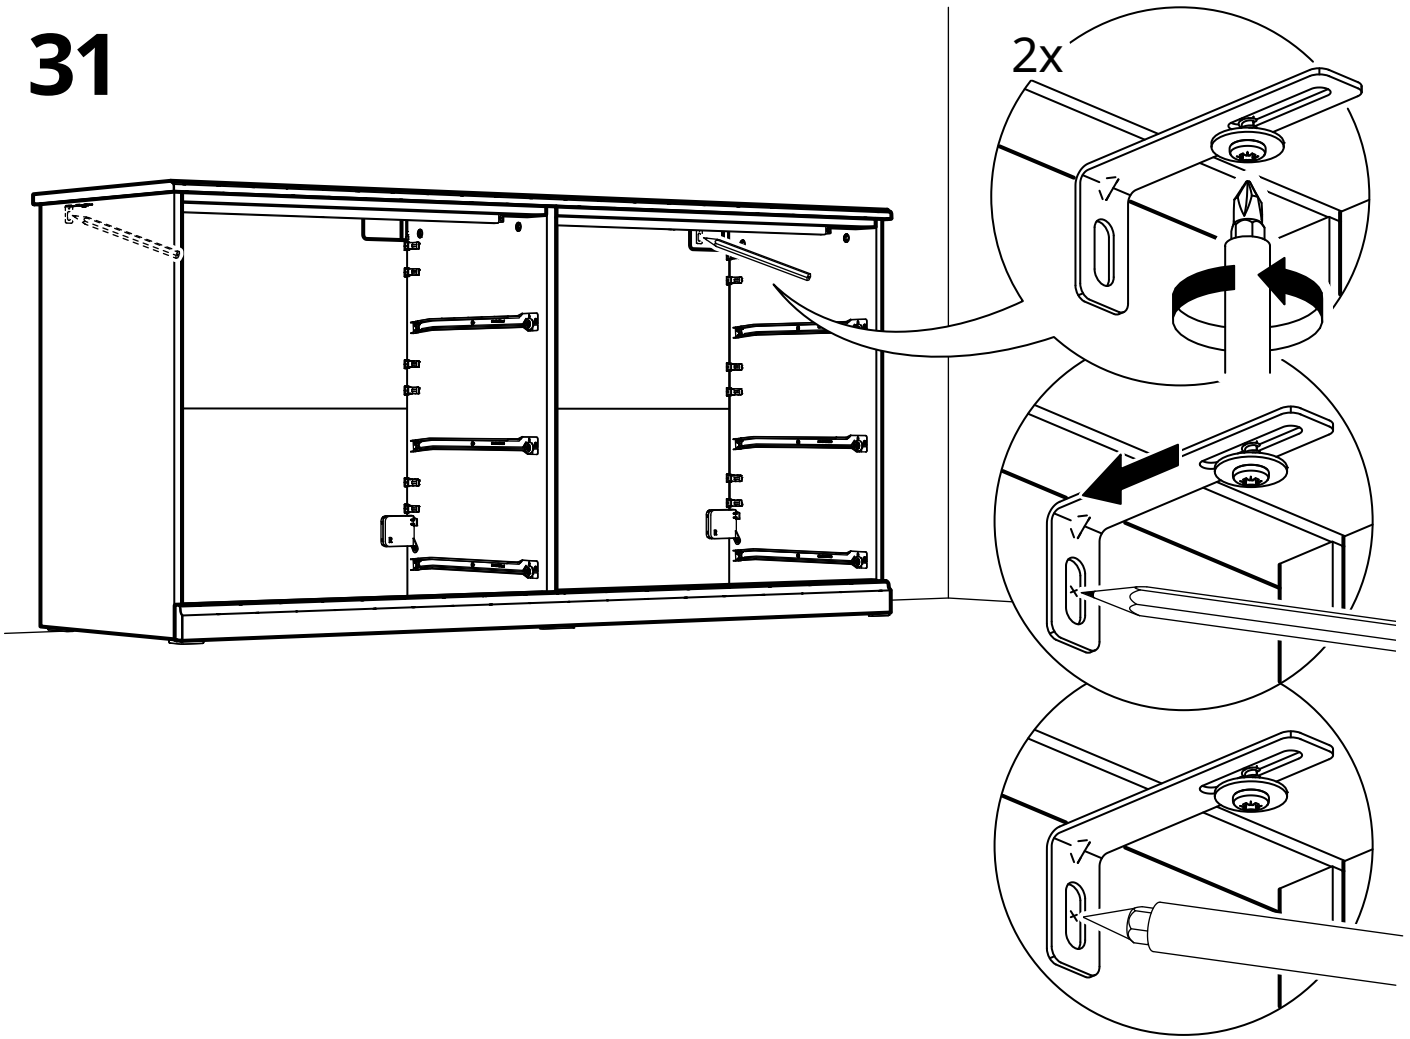 


# 32

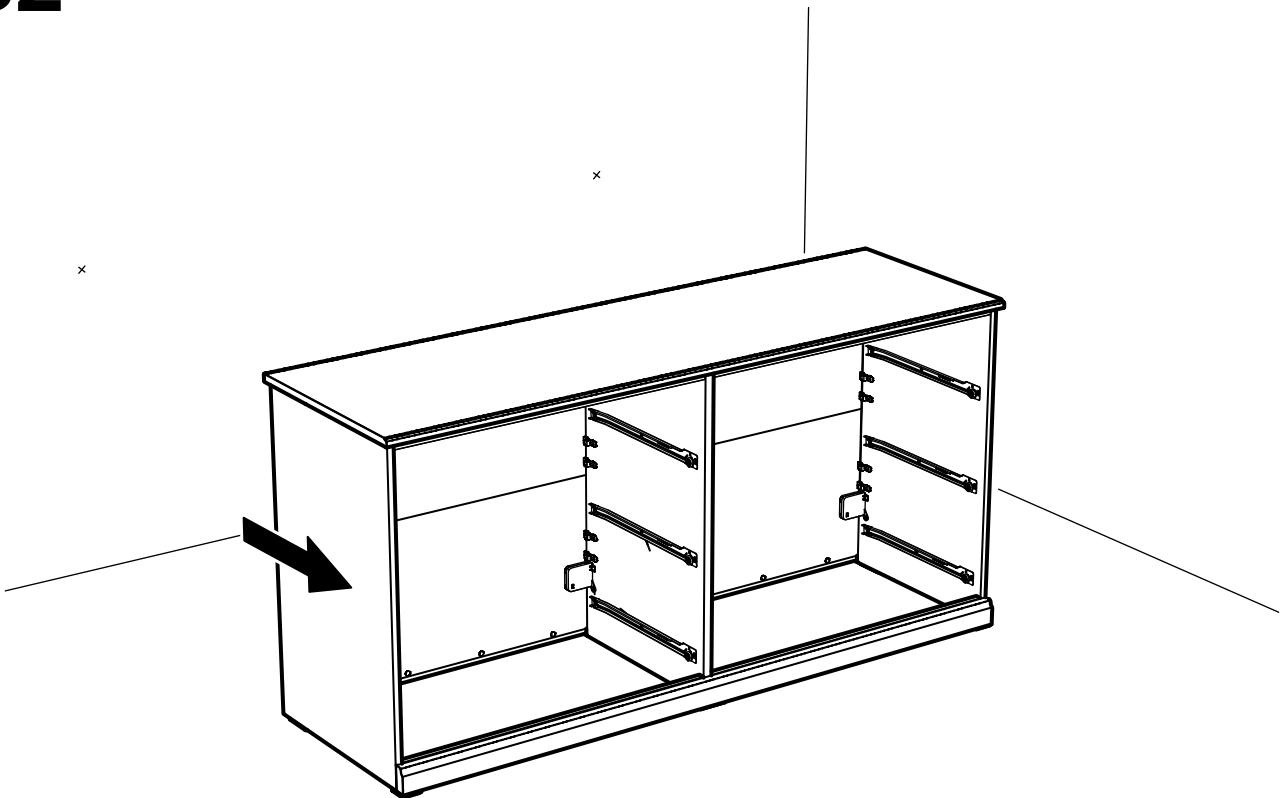 




www.IKEA.com/secure-it

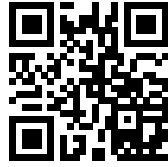 

www.IKEA.cn/secure-it

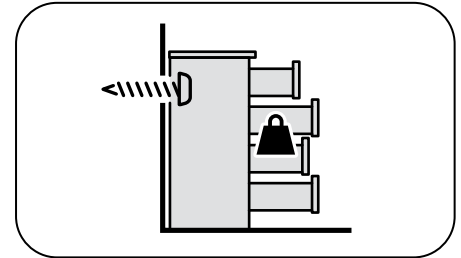 

# 33

## English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

**A**

**Ø 8 mm (5/16")**

**1**

70 mm (2 3/4")

**2**

25

**B**

**Ø 8 mm (5/16")**

**1**

≈ 30 mm (≈ 1 1/4")

**2**

26

 
**C**

**Ø 3 mm (1/8")**

**1**


≈ 30 mm (≈ 1 1/4")

28


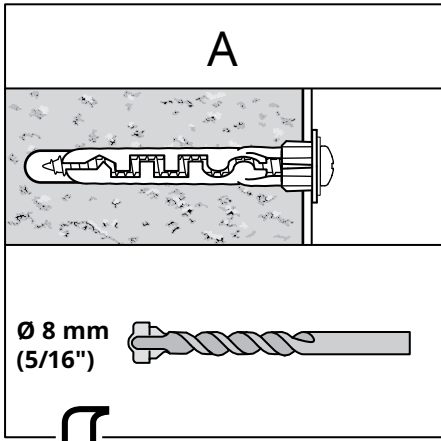




34

 x

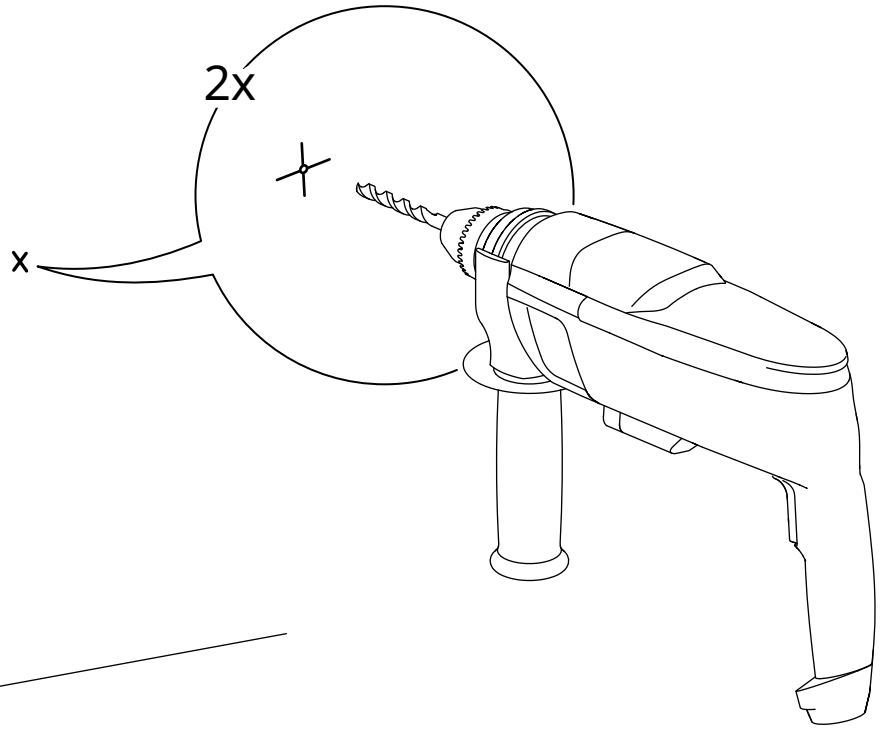


35


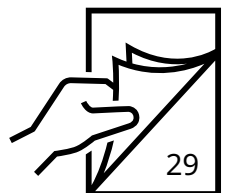 
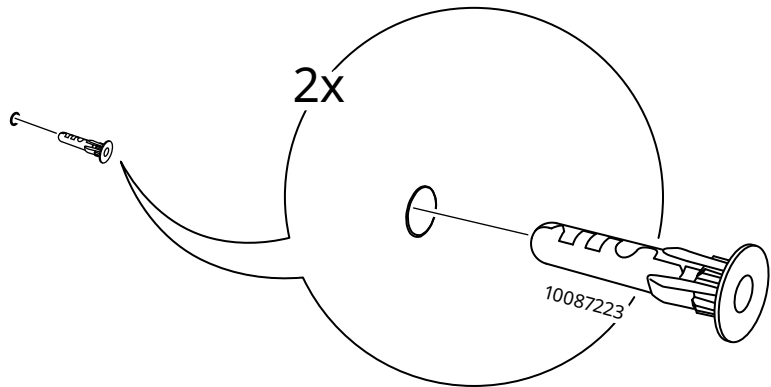 


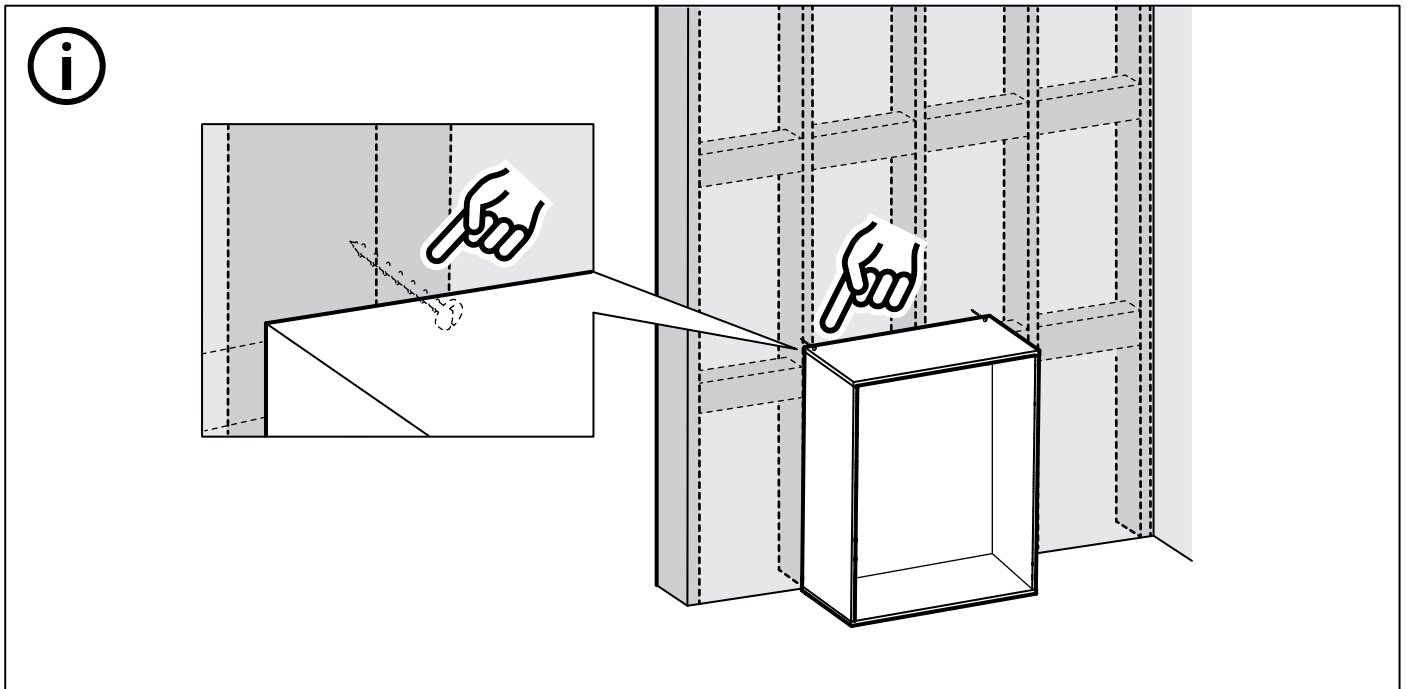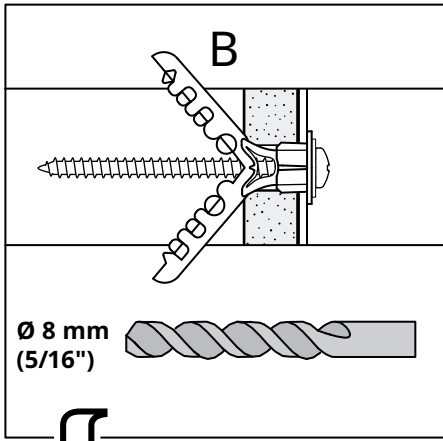  


34

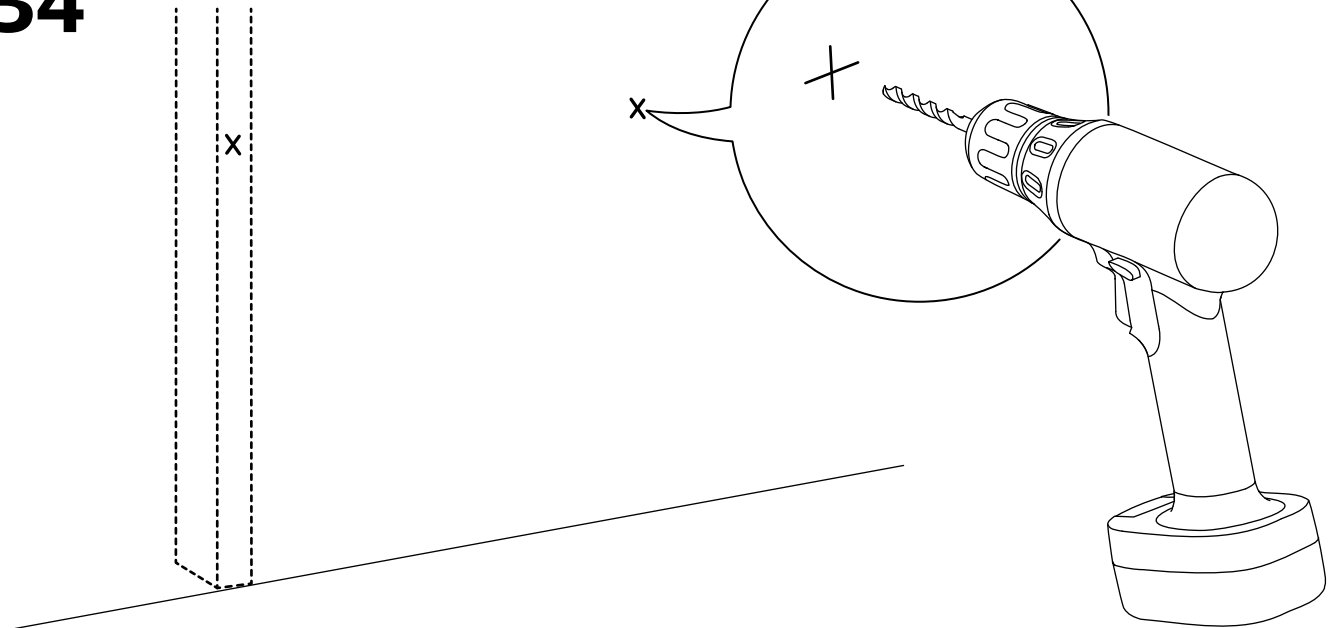 



35

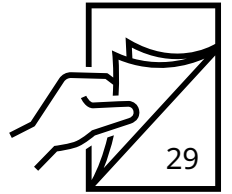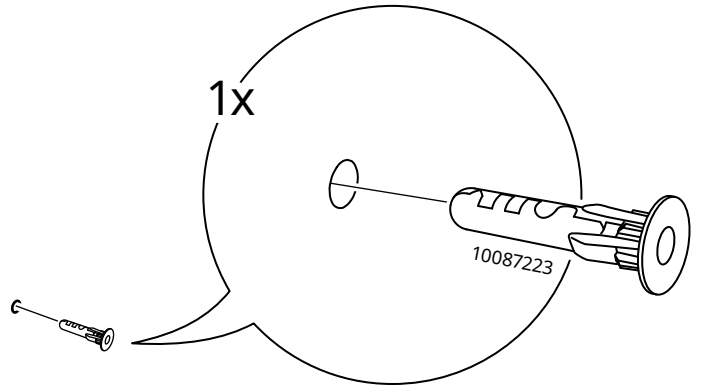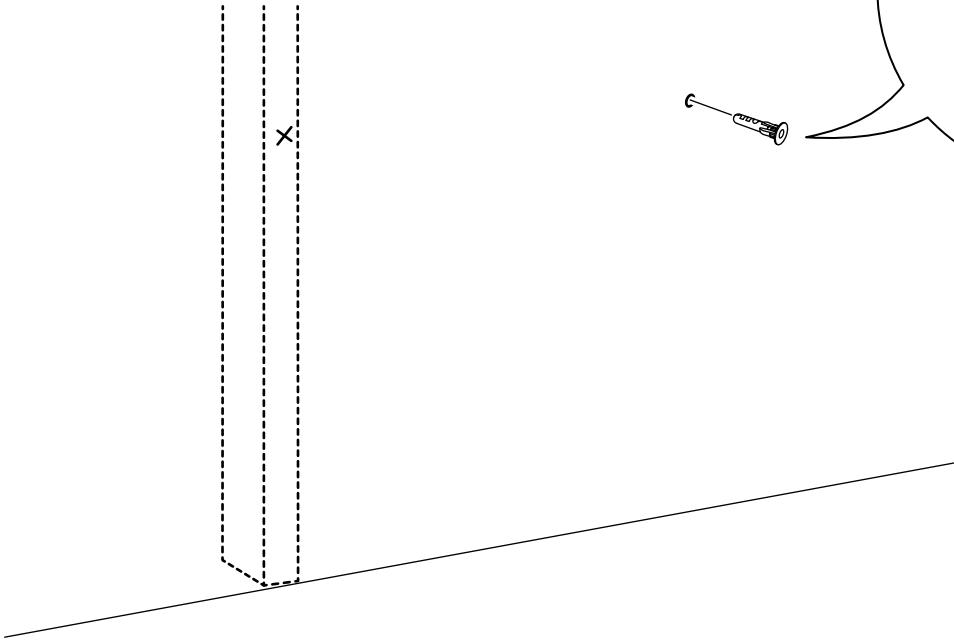   


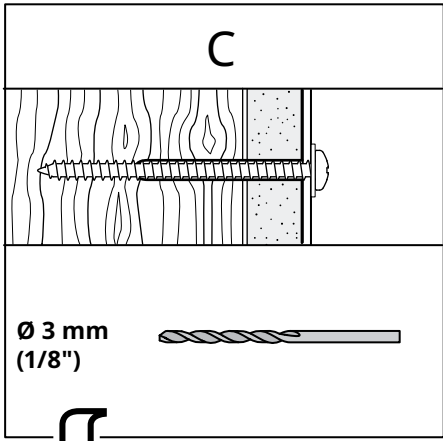 



34

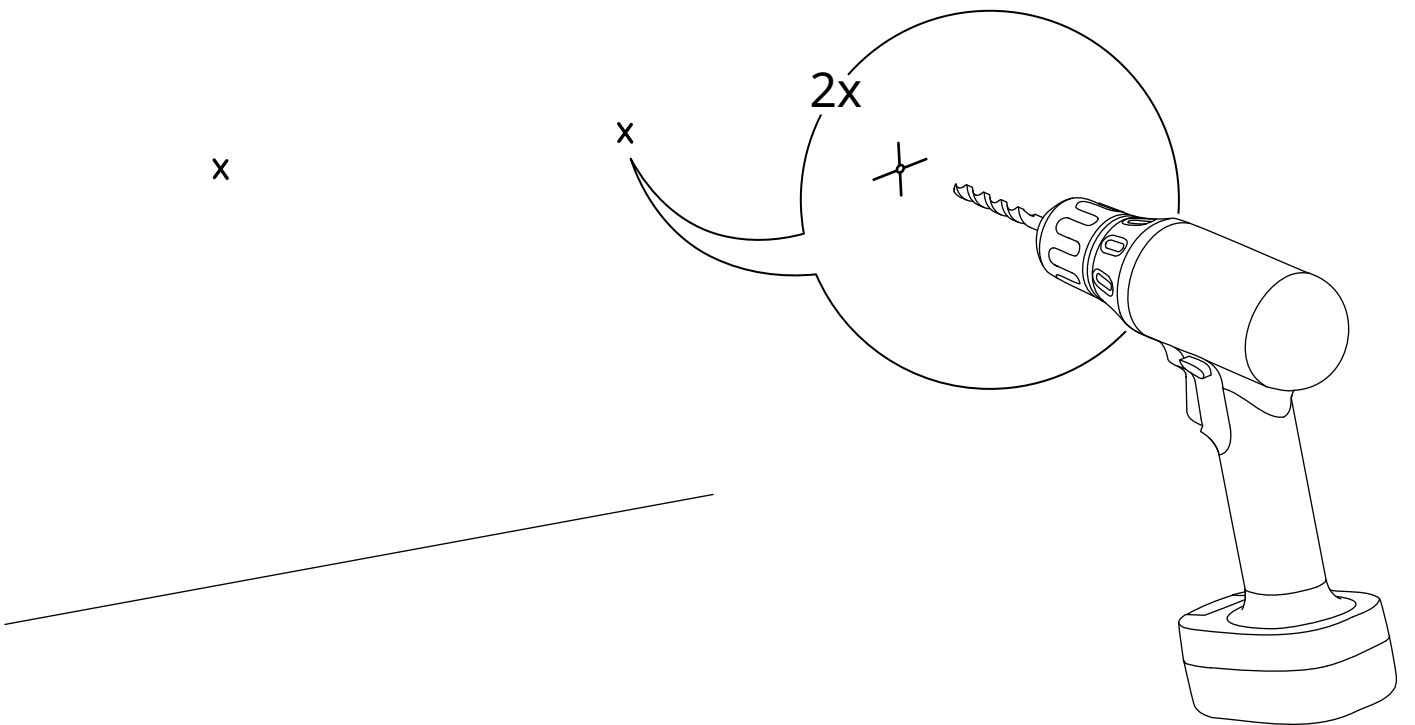 

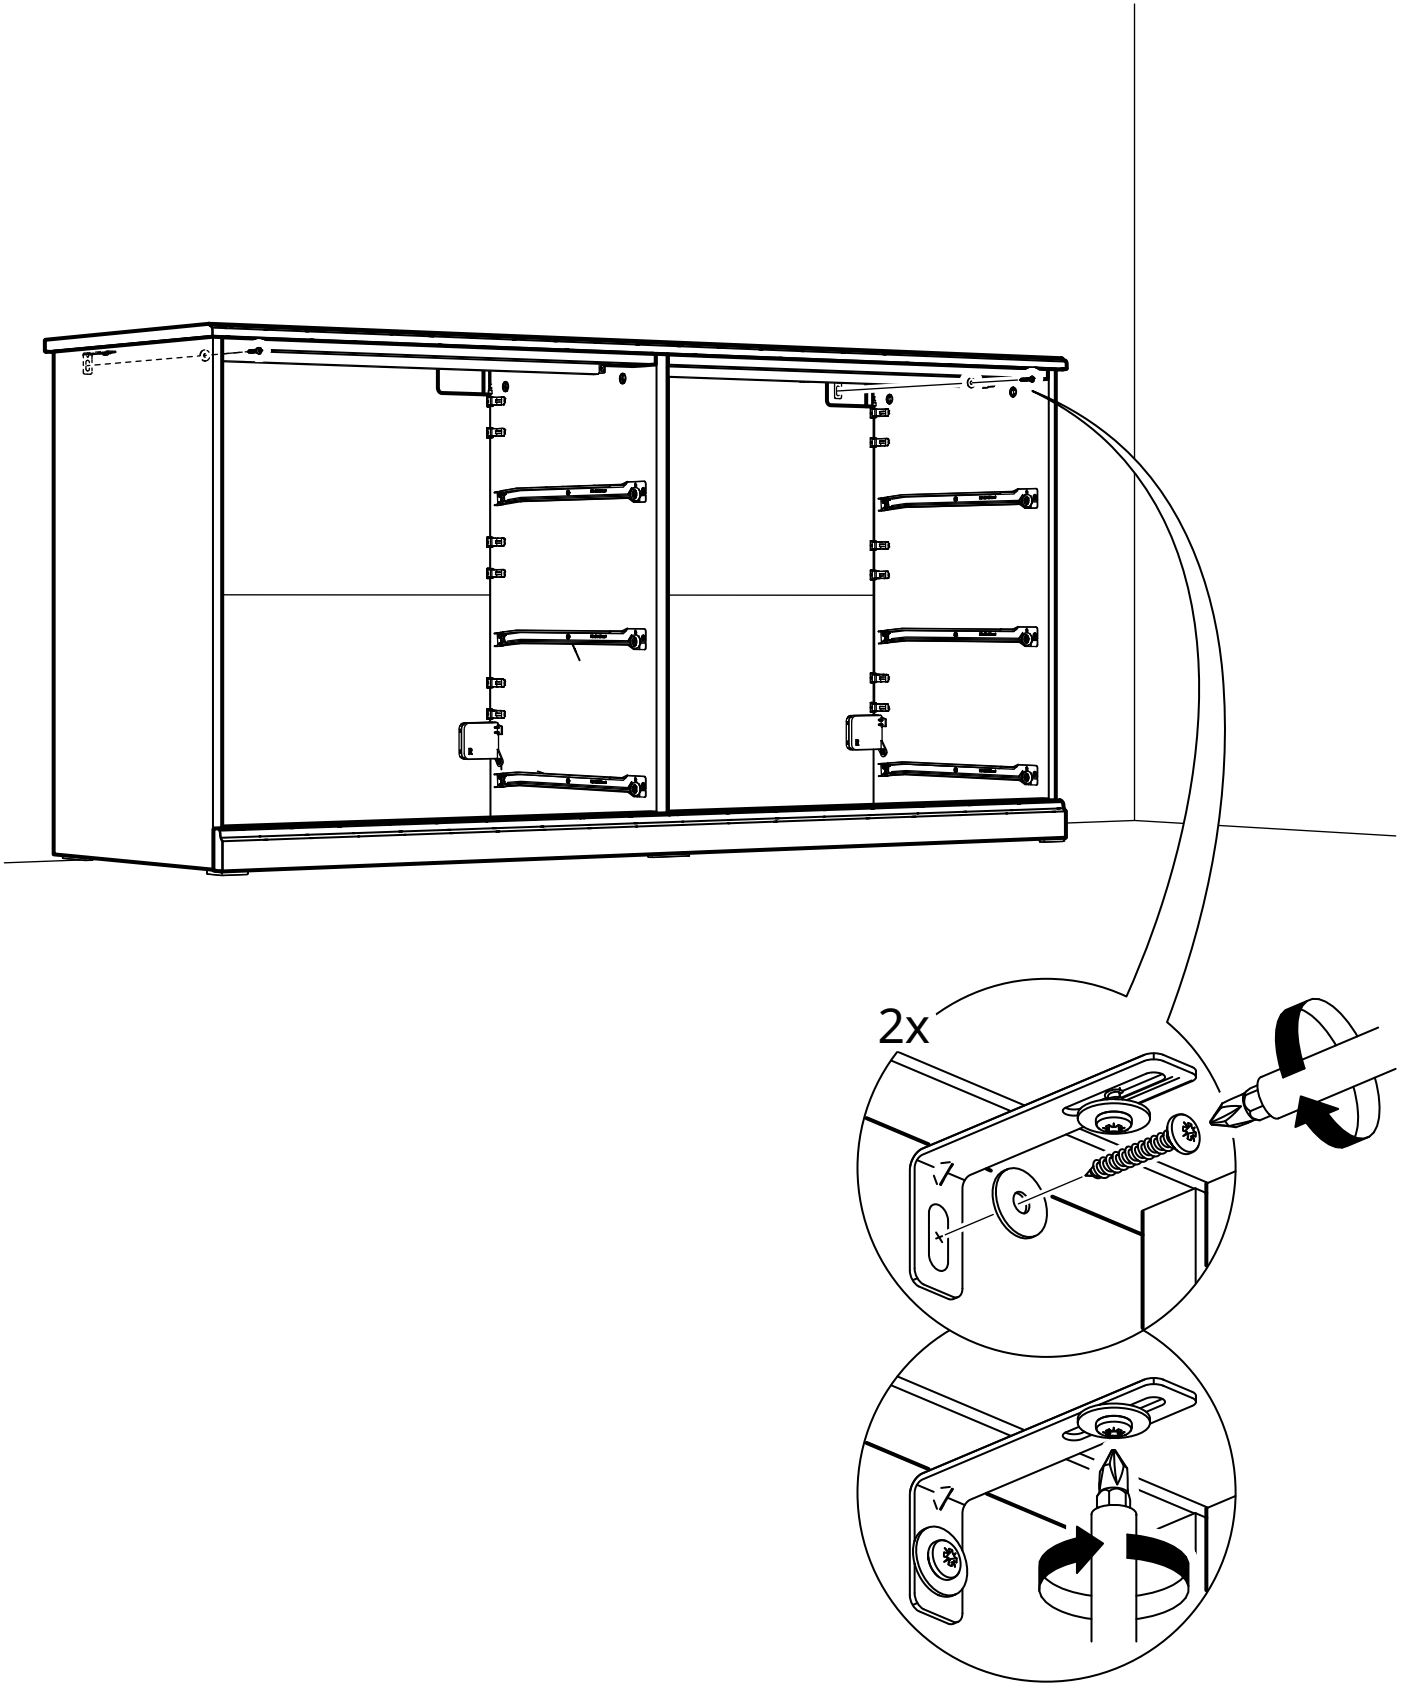 


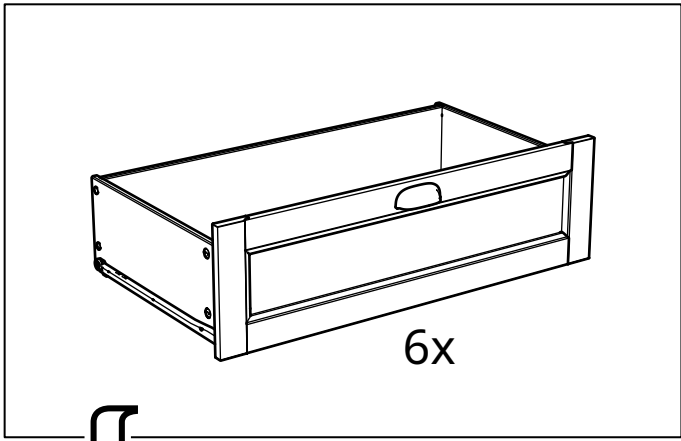 


37

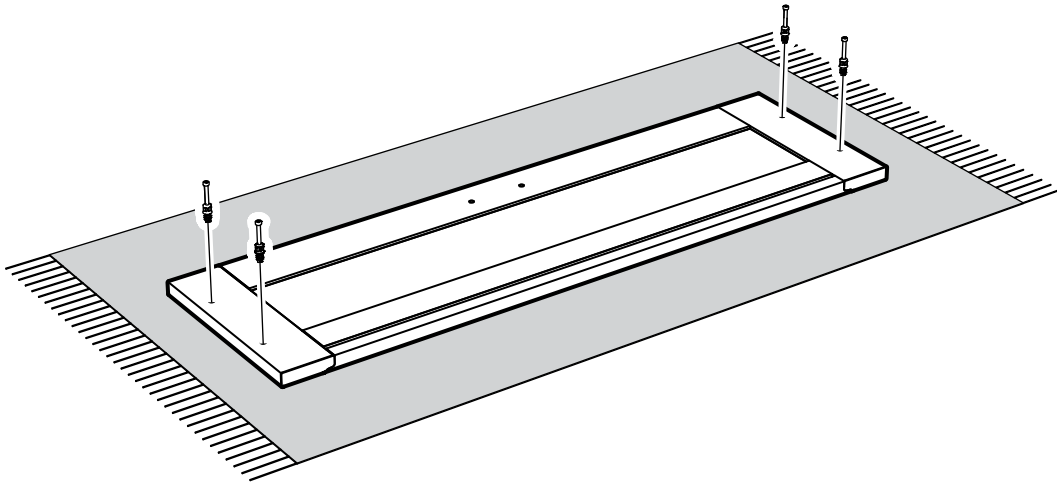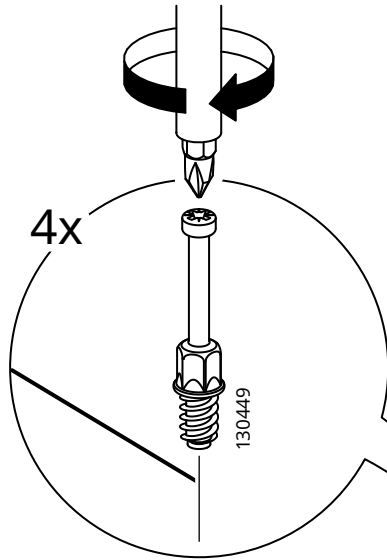  


# 38

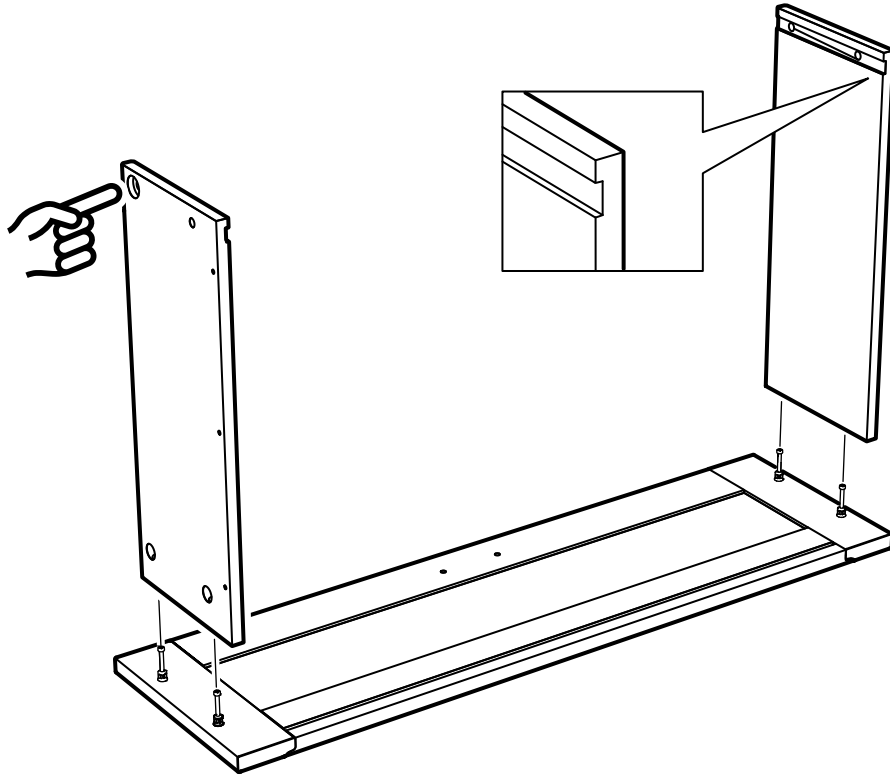 



# 39

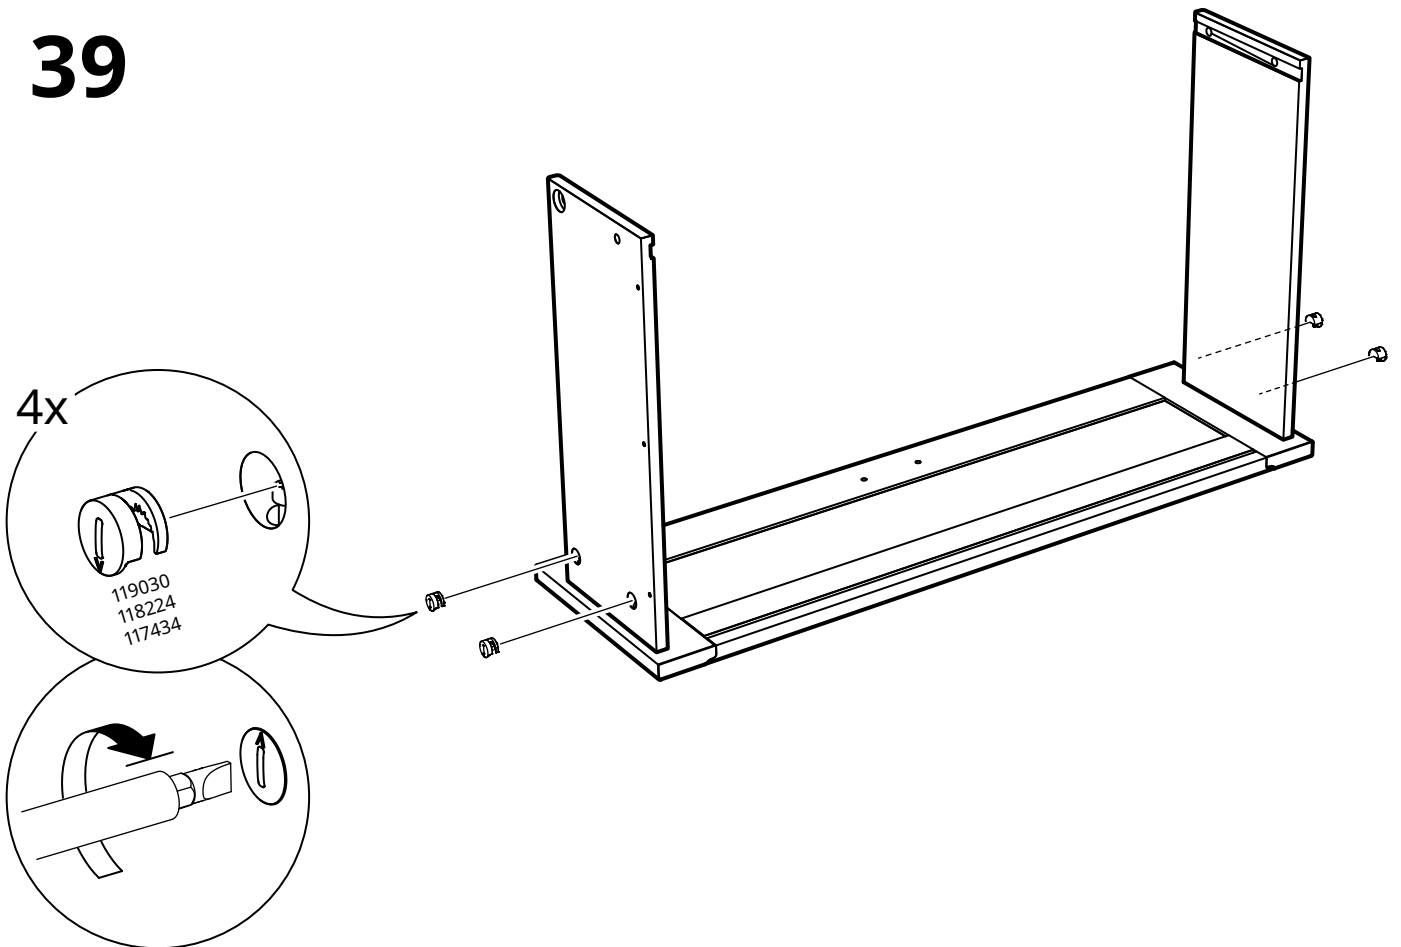 


# 40

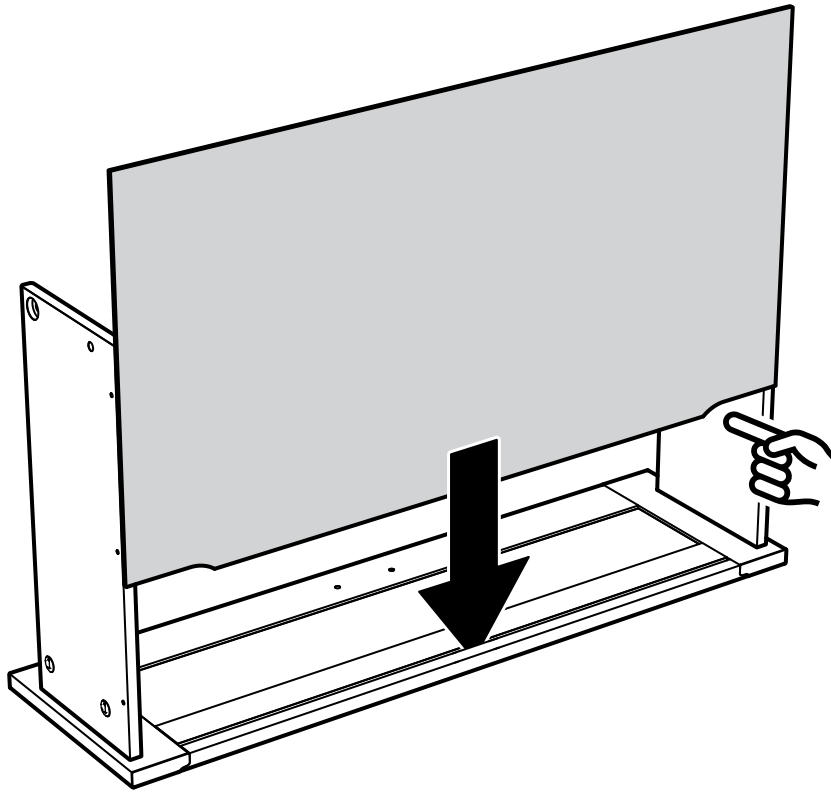 


# 41

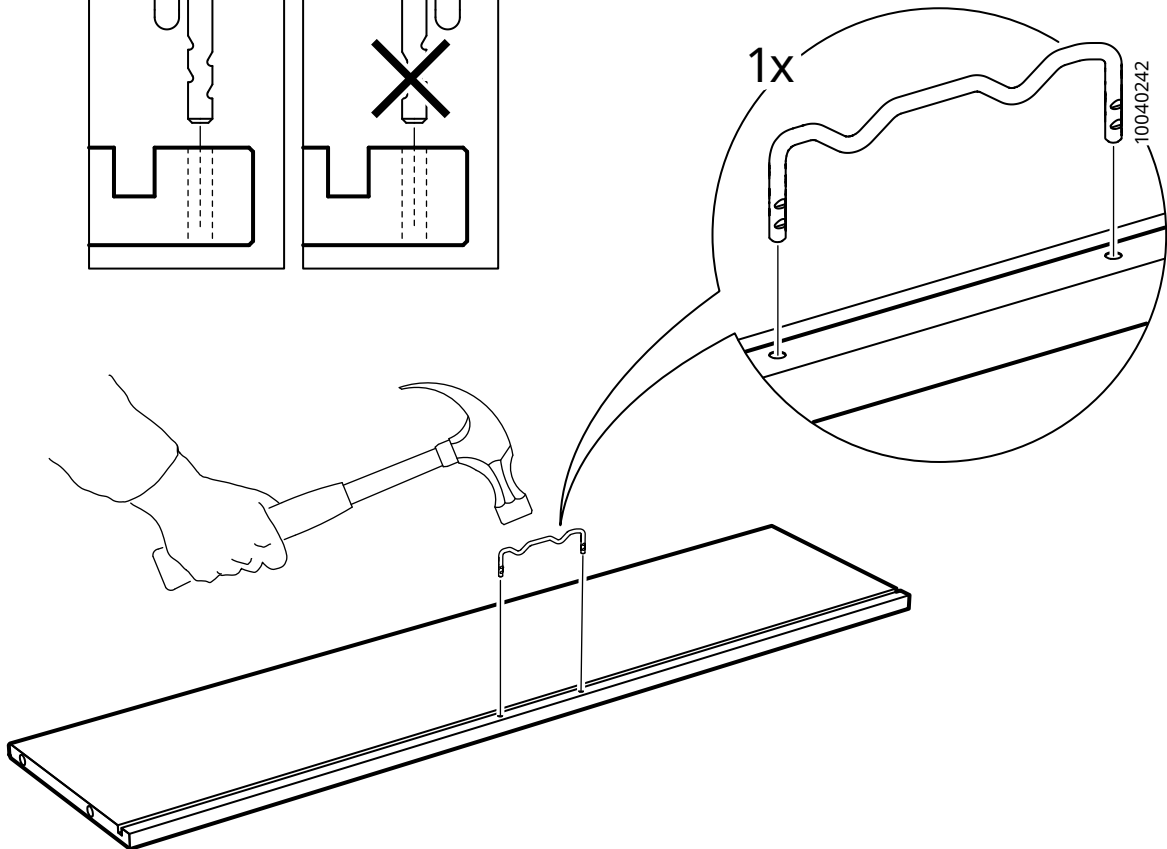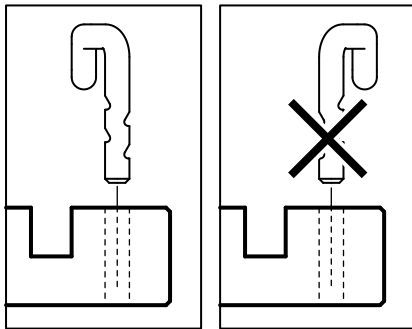  


42

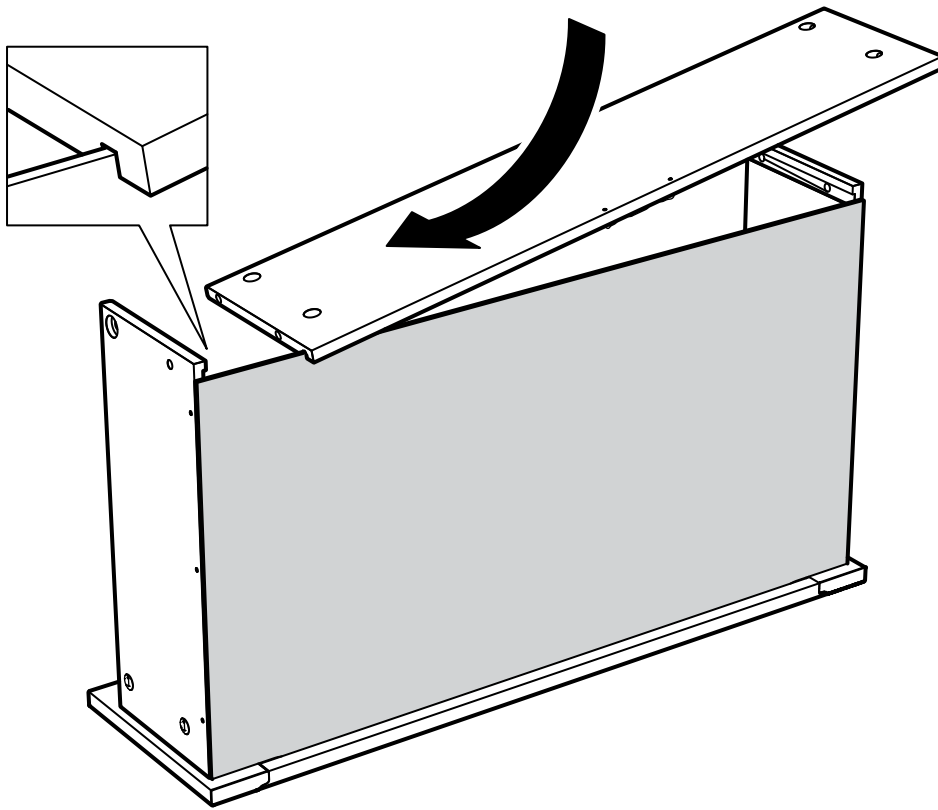 


43

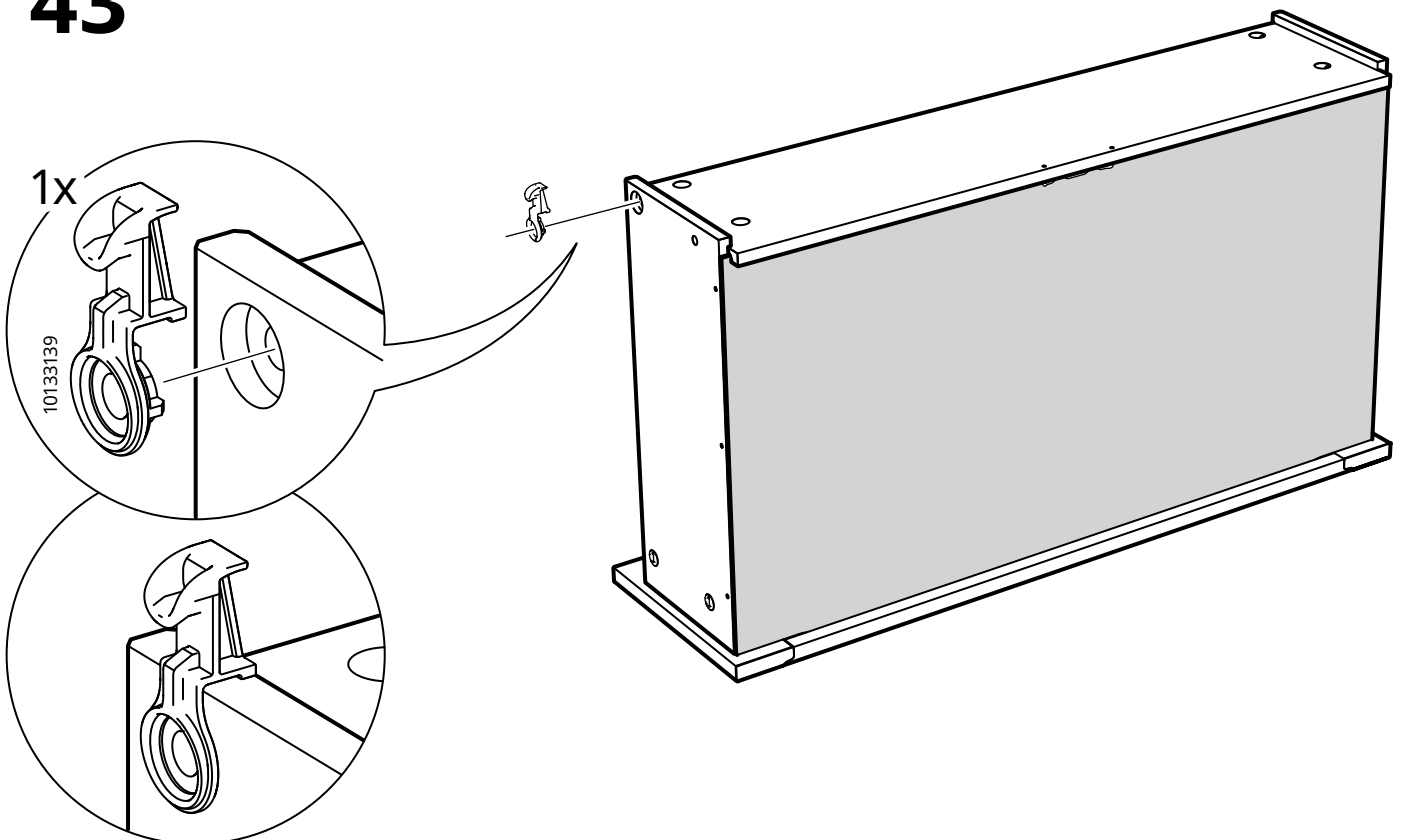 


# 44

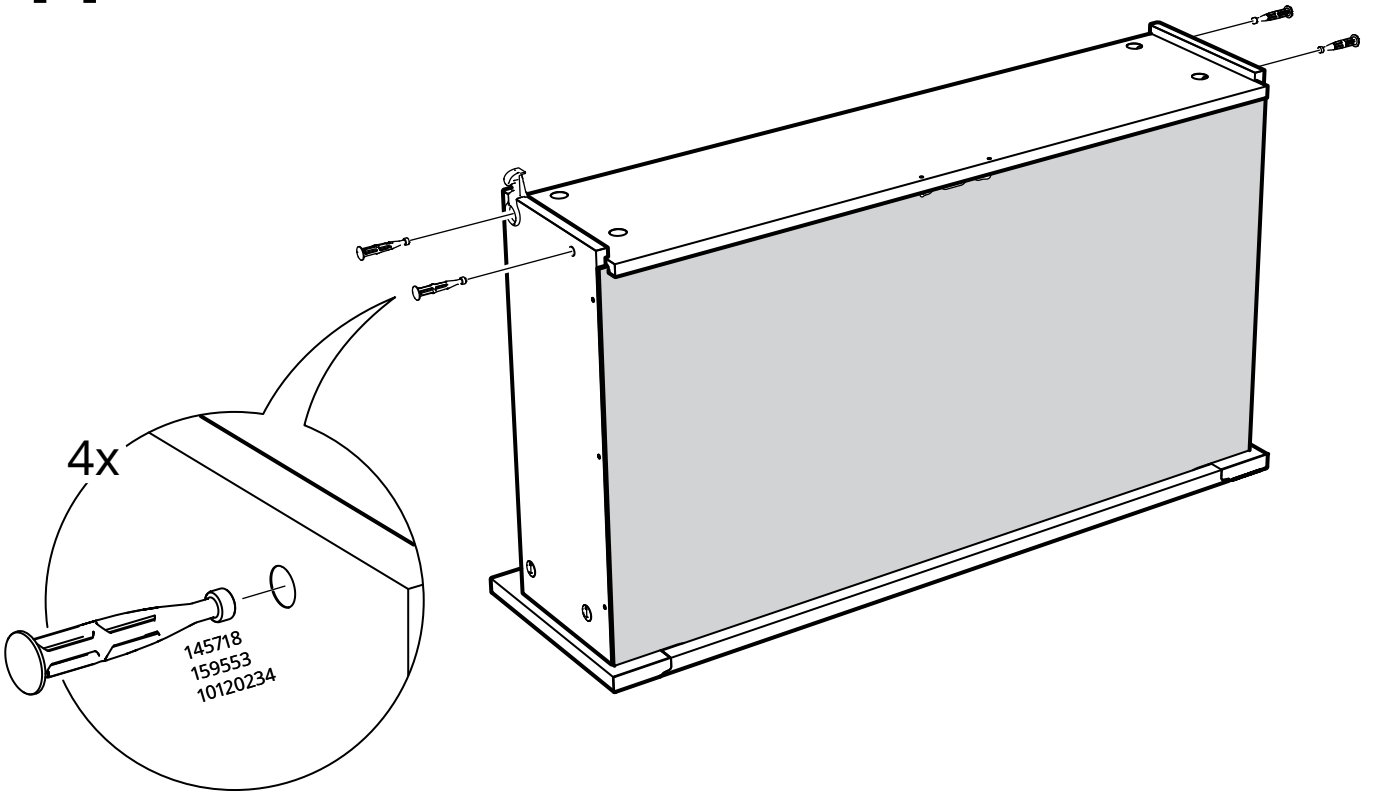 


# 45

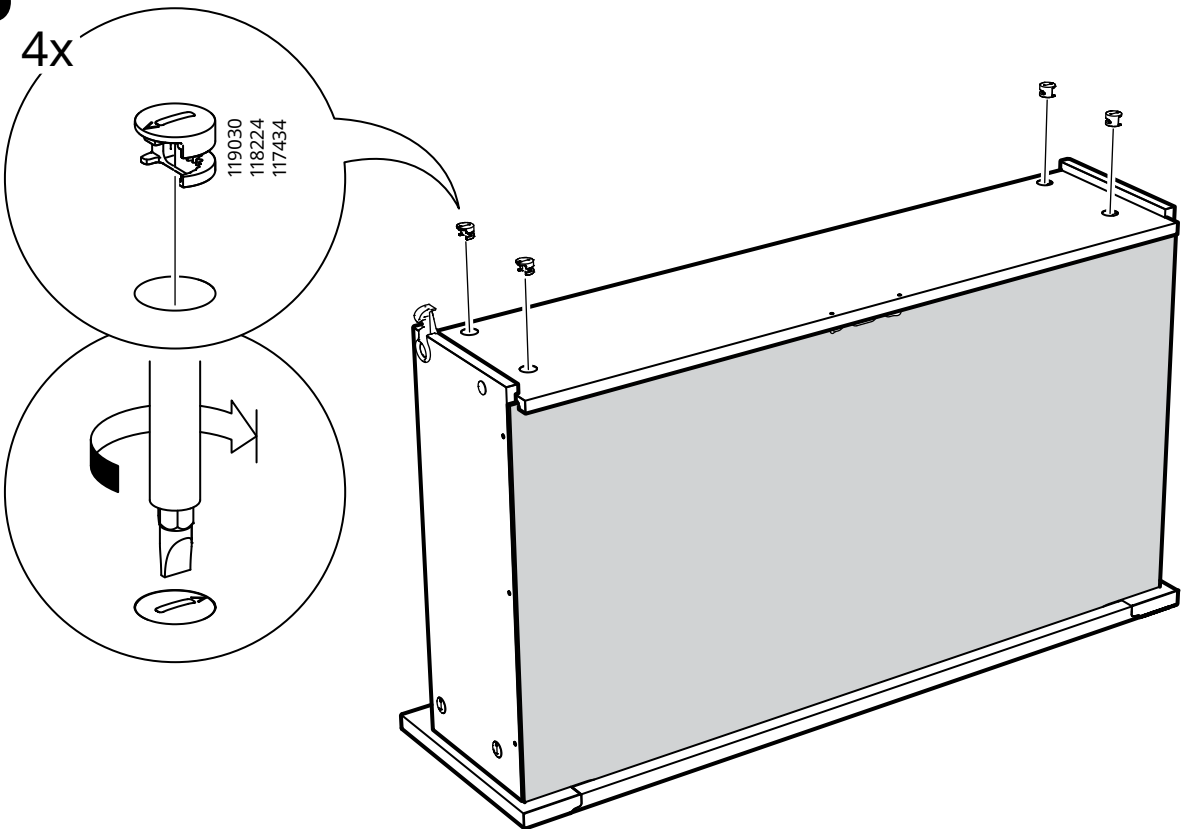 



# 46

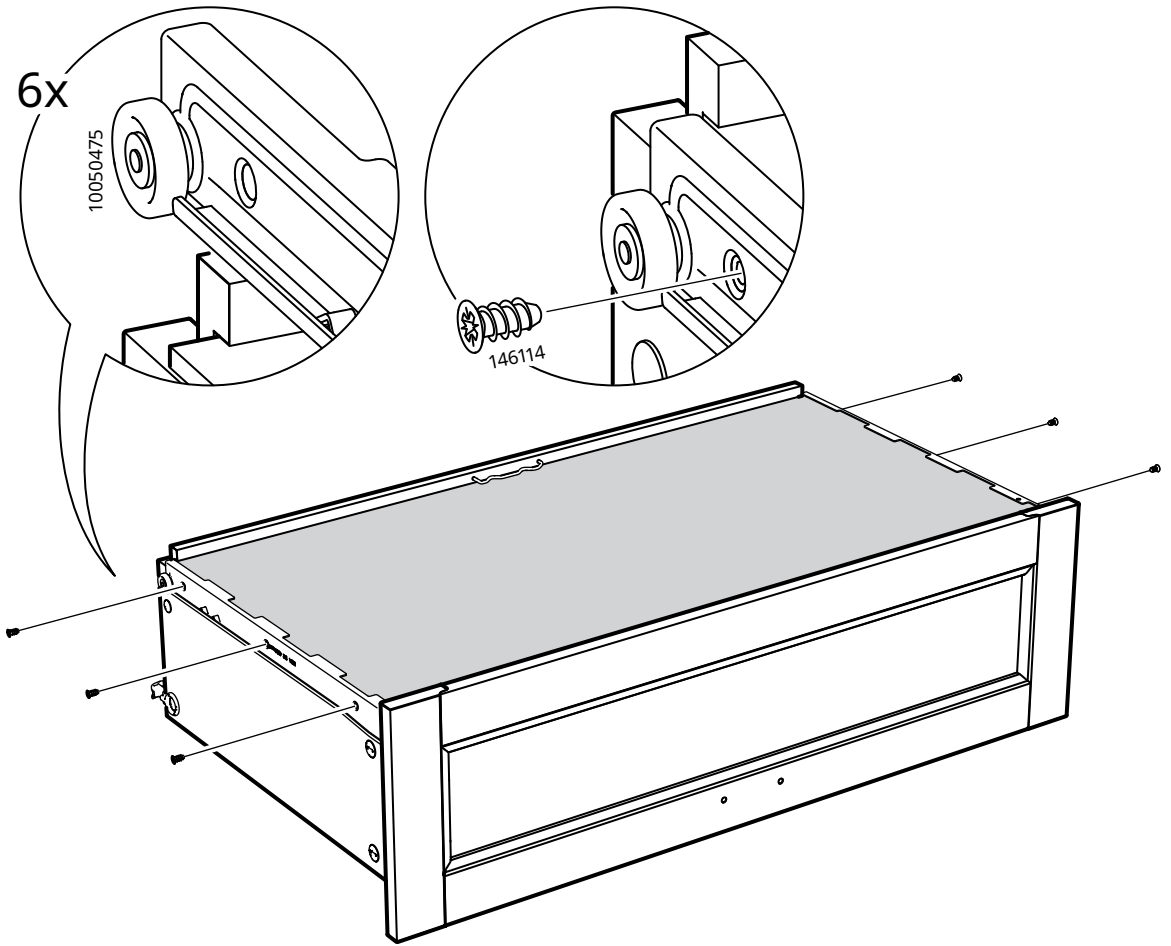 


# 47

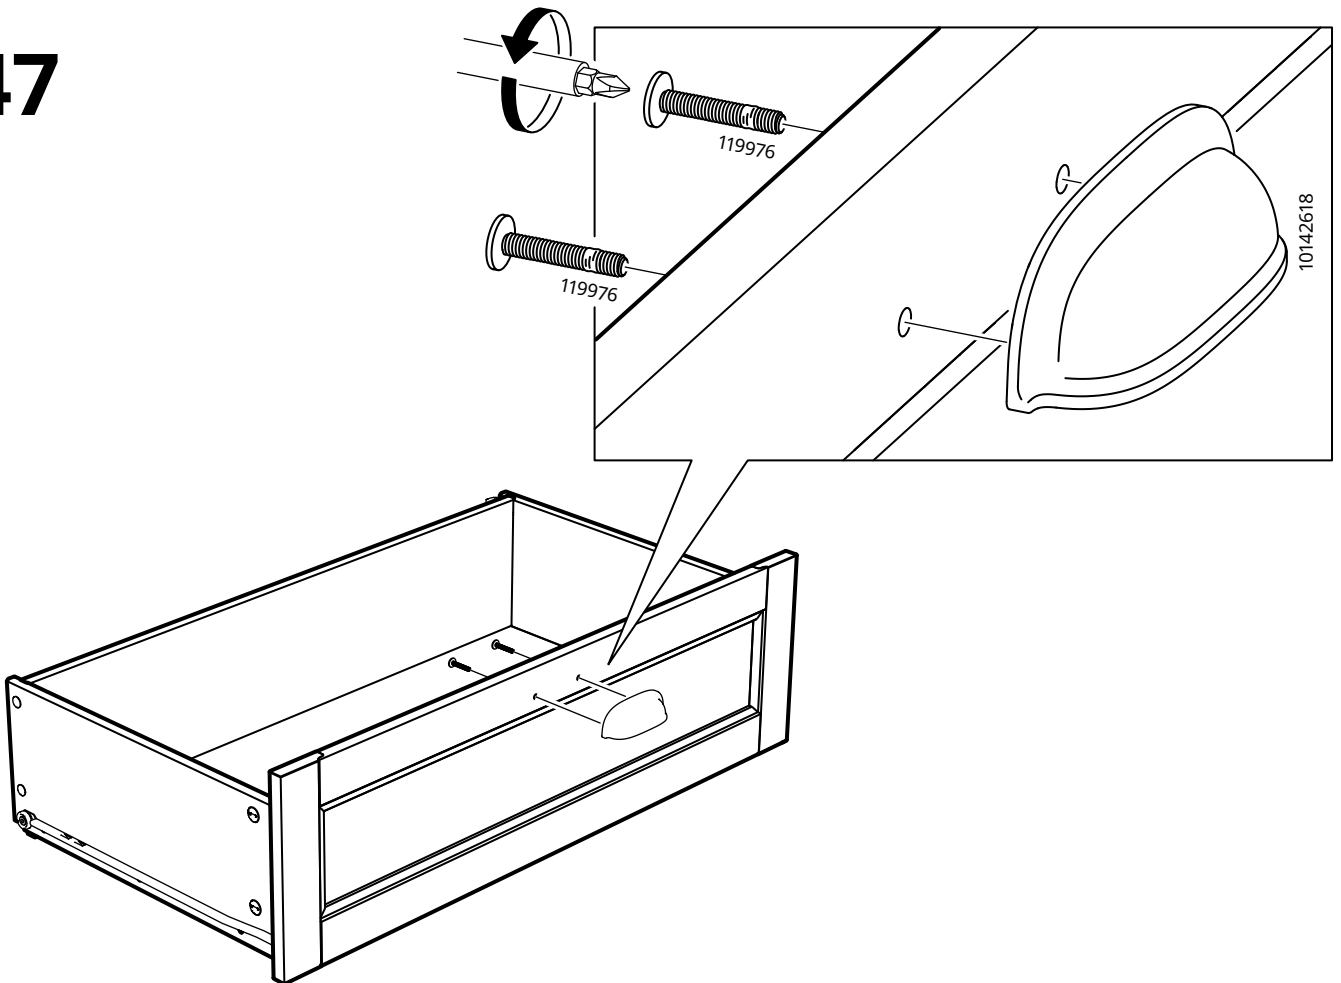 



# 48

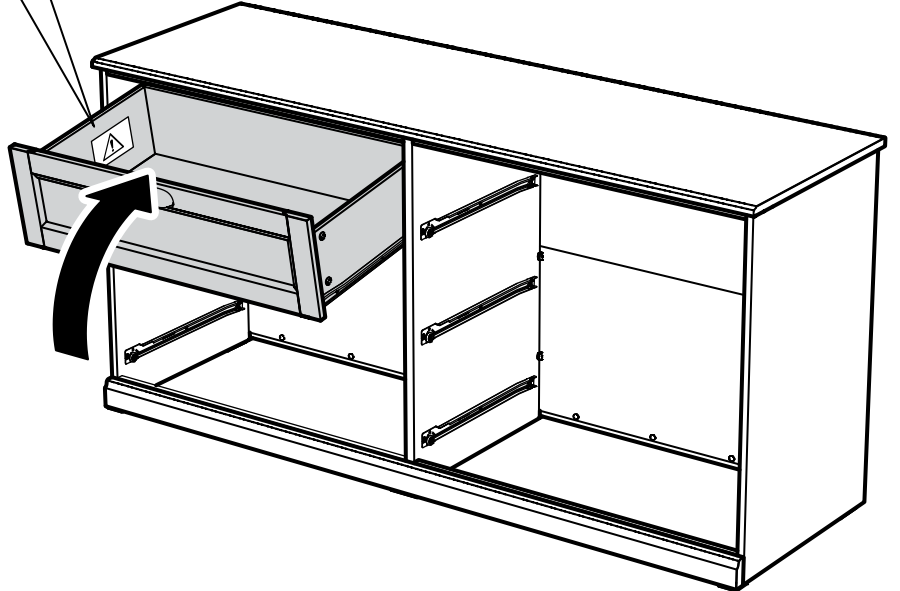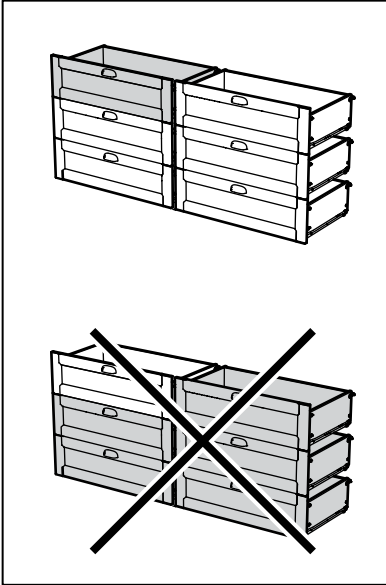  

# 49

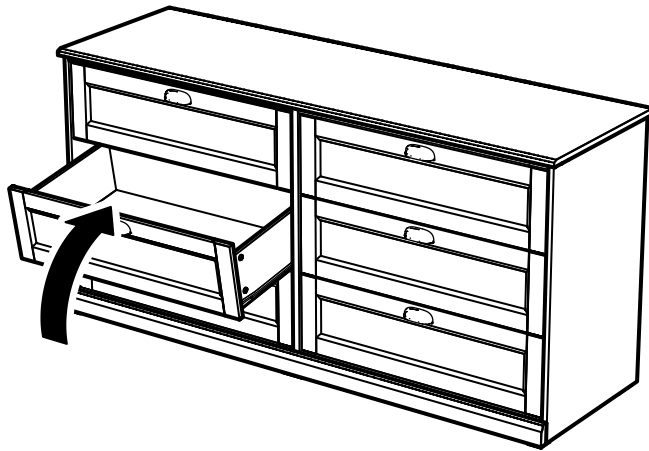 

## 1

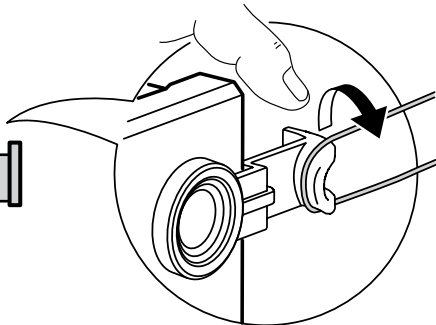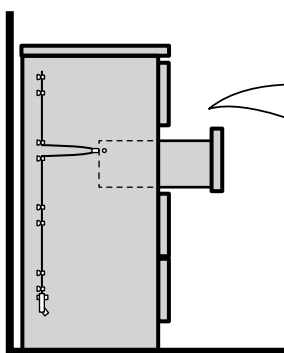  

## 2

