 
 
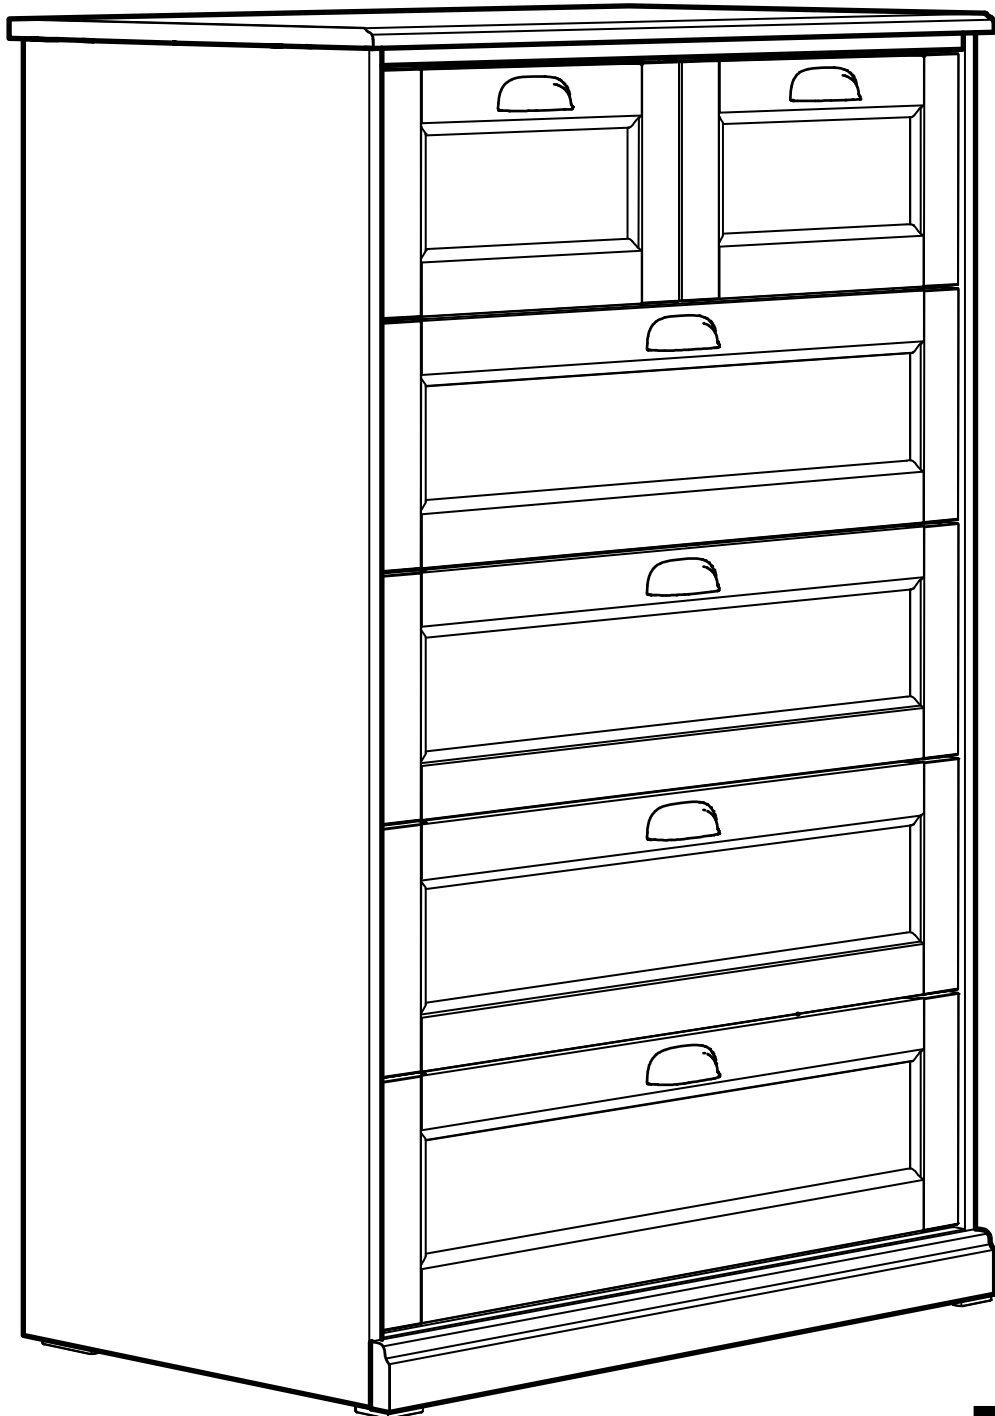 
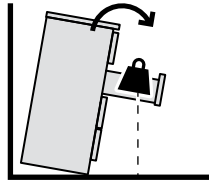 


FÅGELFJÄLLET

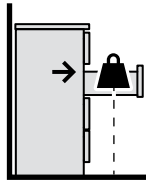

Design and Quality
IKEA of Sweden



English

WARNING!

Children have died from furniture tipover.

To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.


 
 
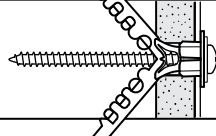 
 
 

NEVER open more than one drawer at a time.






DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.

Place heaviest items in the lowest drawers.

Read and follow each step of the instruction carefully.

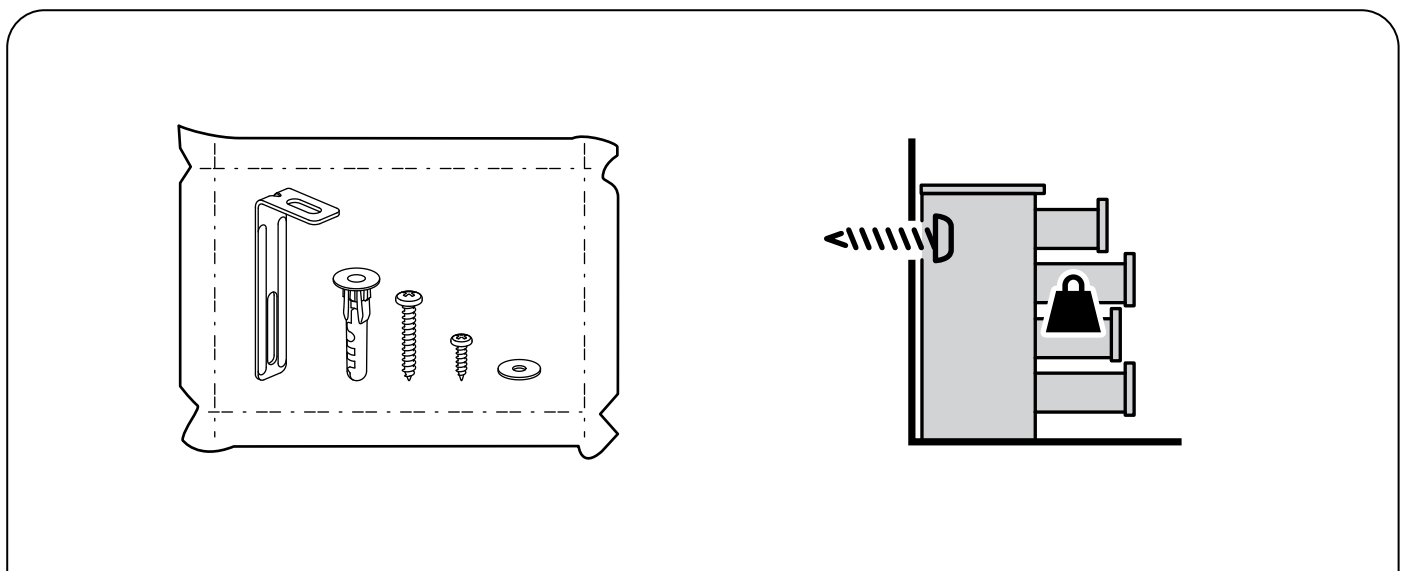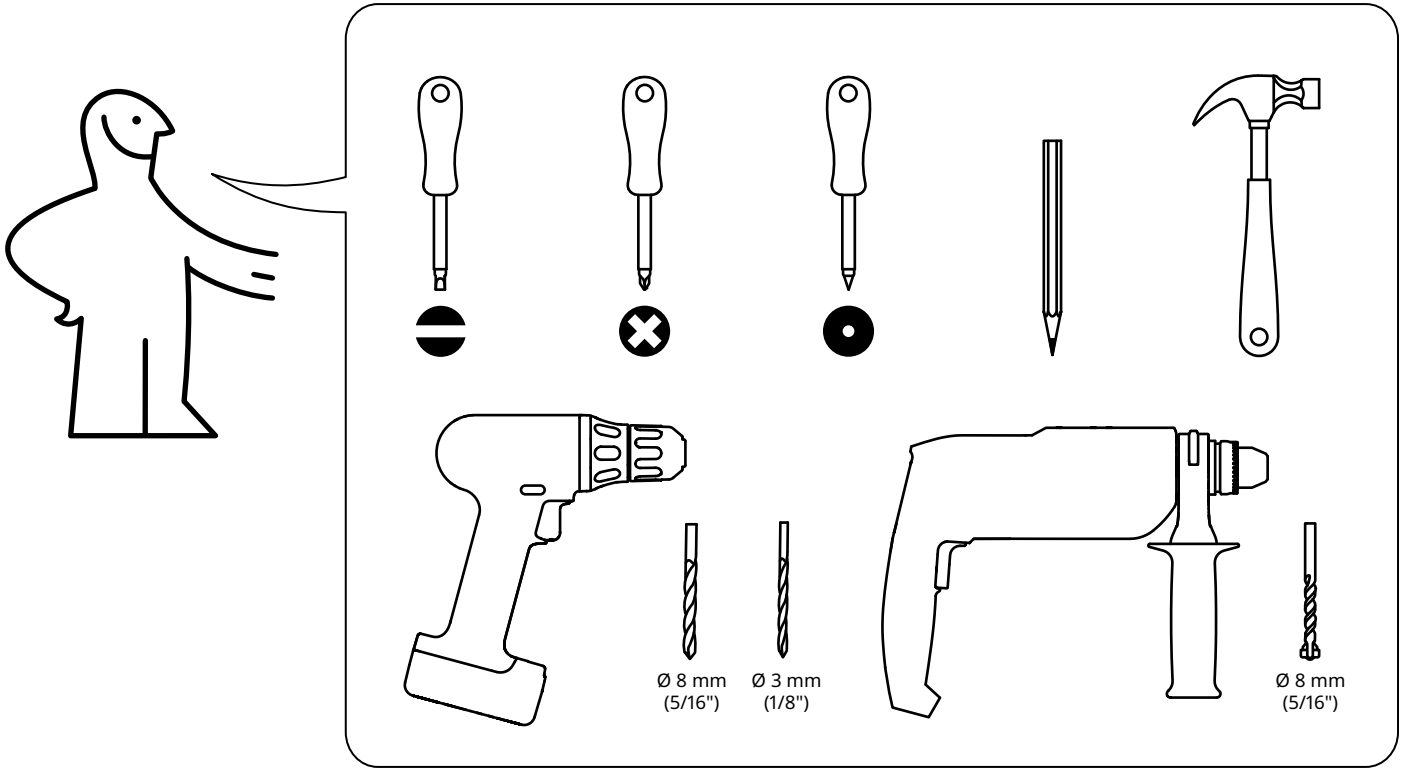


 <p>www.IKEA.com/secure-it</p>	A	B	C
	 <p>Ø 8 mm (5/16")</p> 	 <p>Ø 8 mm (5/16")</p> 	 <p>Ø 3 mm (1/8")</p> 

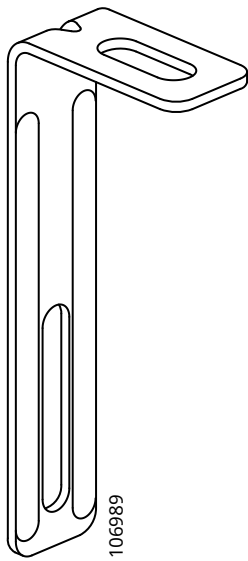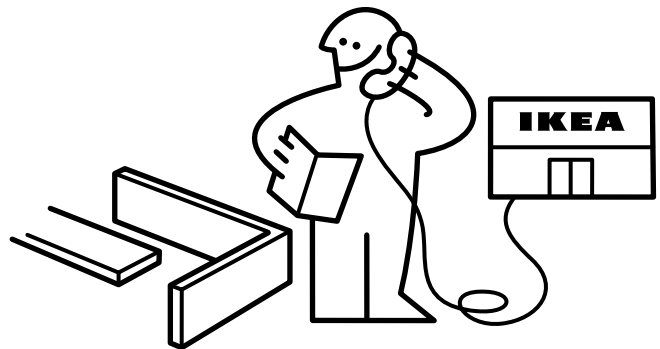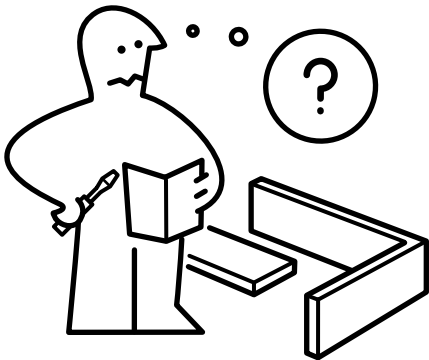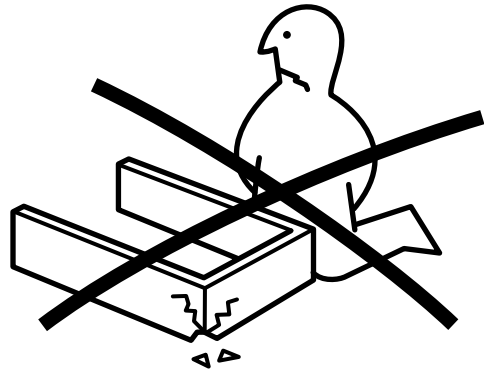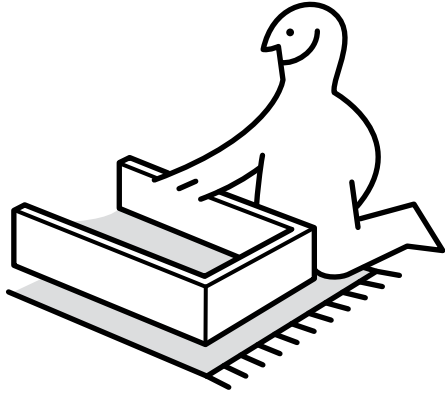     


106989

 2x

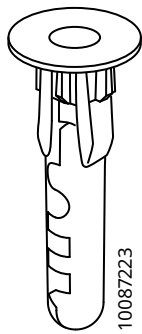

1008723

 2x




109567

2x



109049

 
2x




100823

4x

 
1

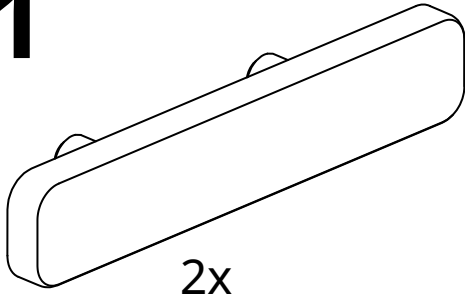


2x

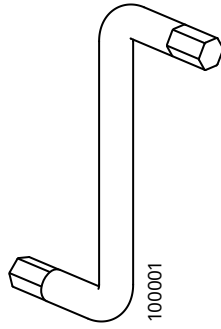 

1x

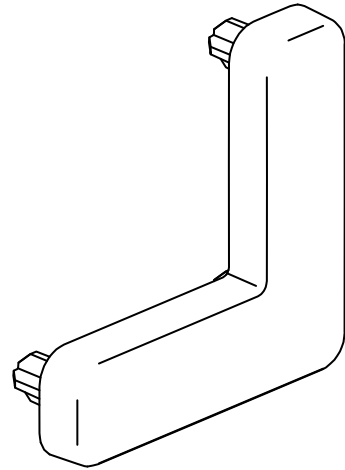 


2x

 


118331

 16x




100217

 4x




101345

 16x




151707

 4x



151708

 4x

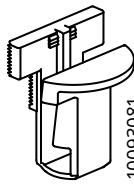


10093081

6x



10093082

 
16x

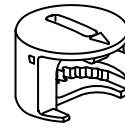

119250

16x

 119252



100359

 
1x



146114


36x

2

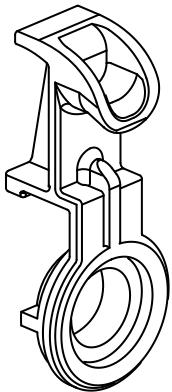

10133139

 6x




145718

24x


159553

 10120234




130449

 24x



119976

 12x

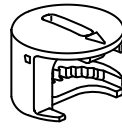


119030

48x

118224

 117434

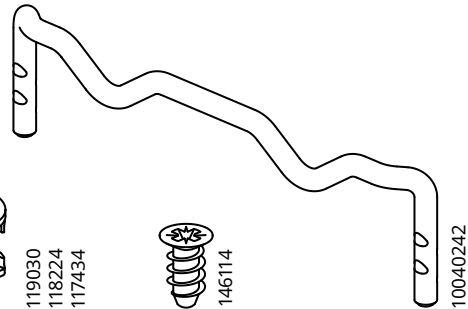


146114

36x


10040242

 4x

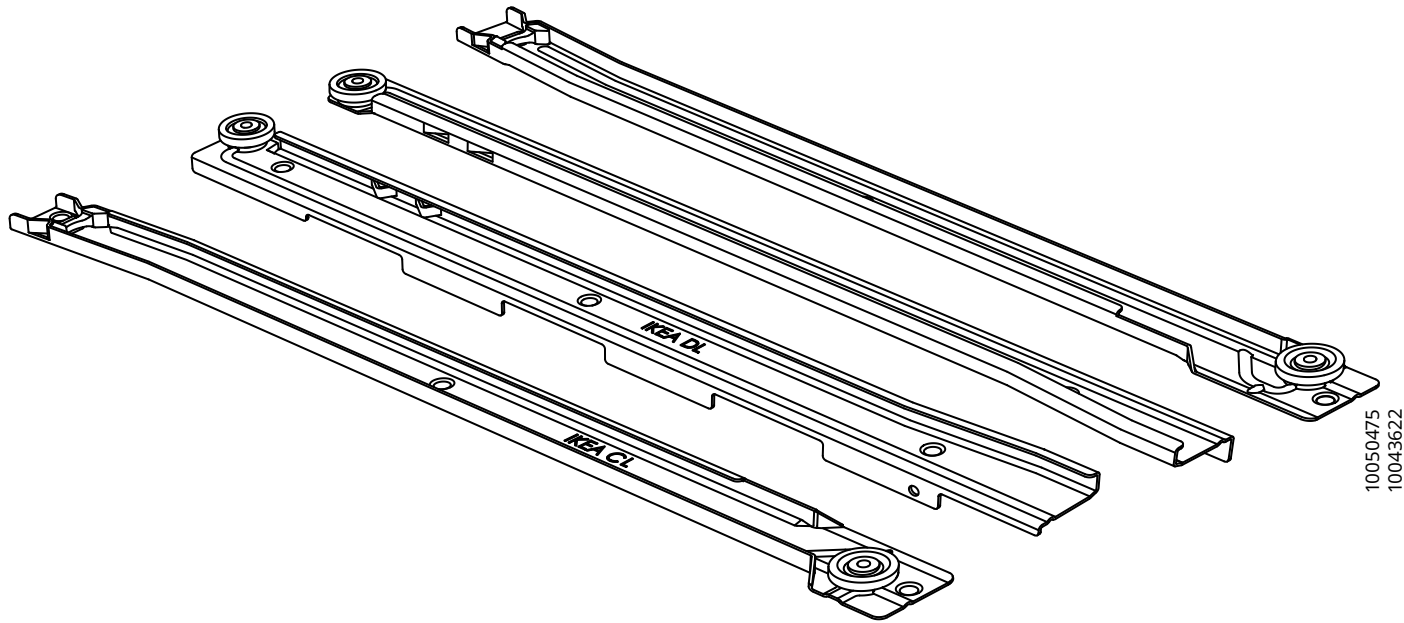


10050475
10043622

 6x

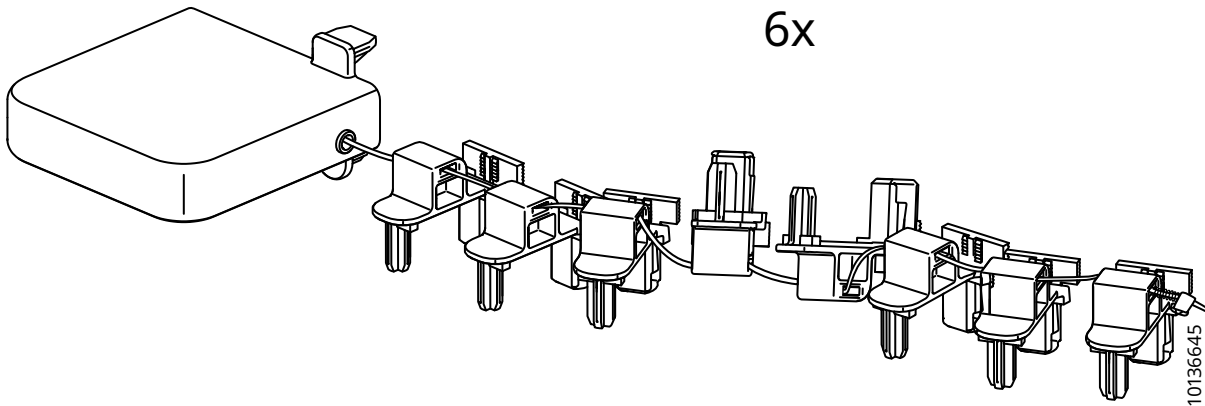


10136645

 1x

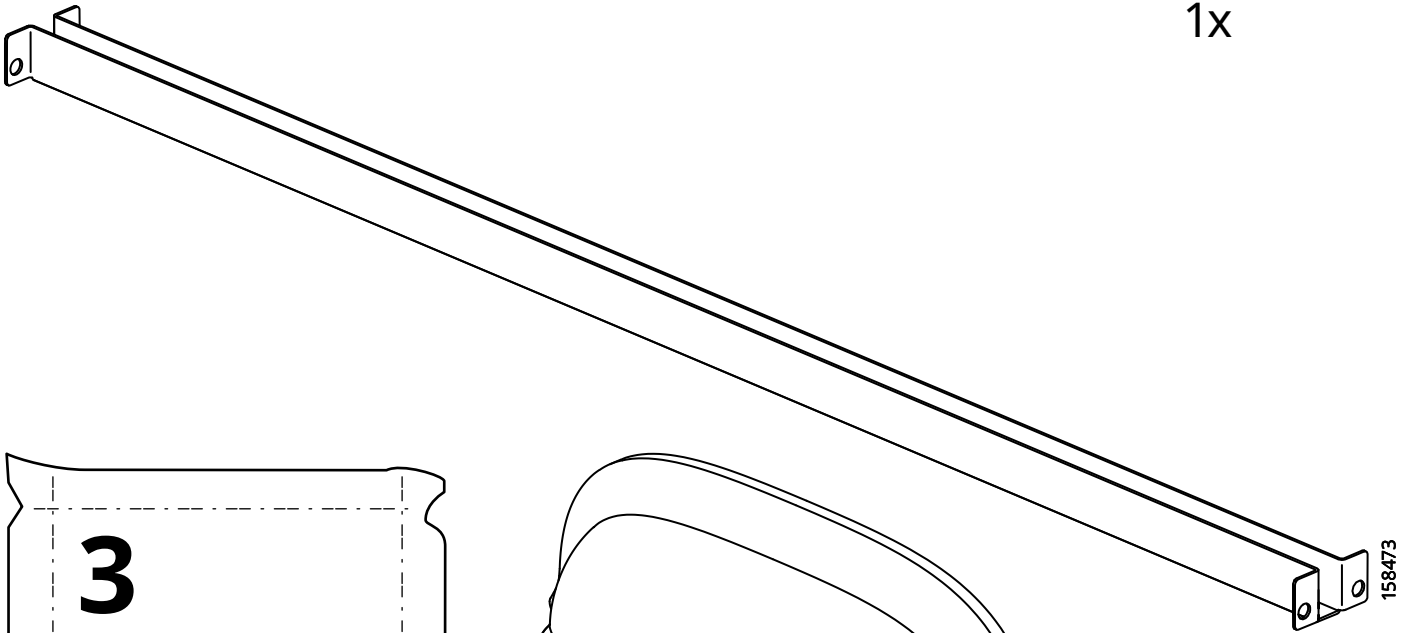

158473

 1x

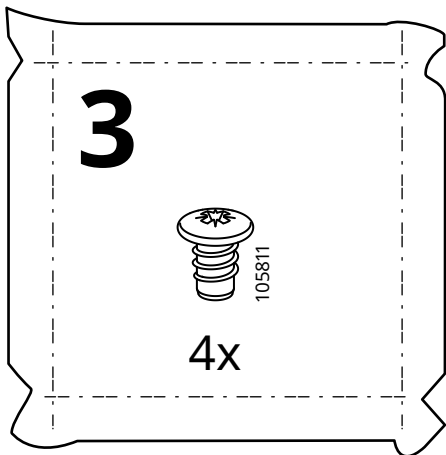


3



105811

 
4x

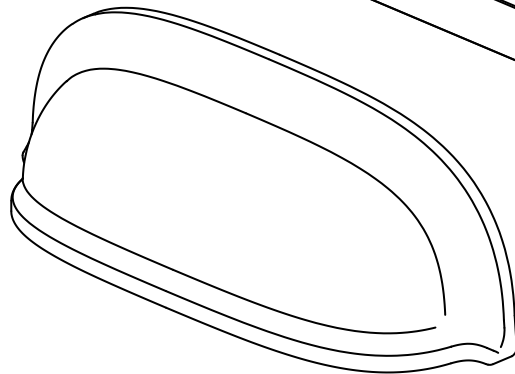


10142618


6x

  1

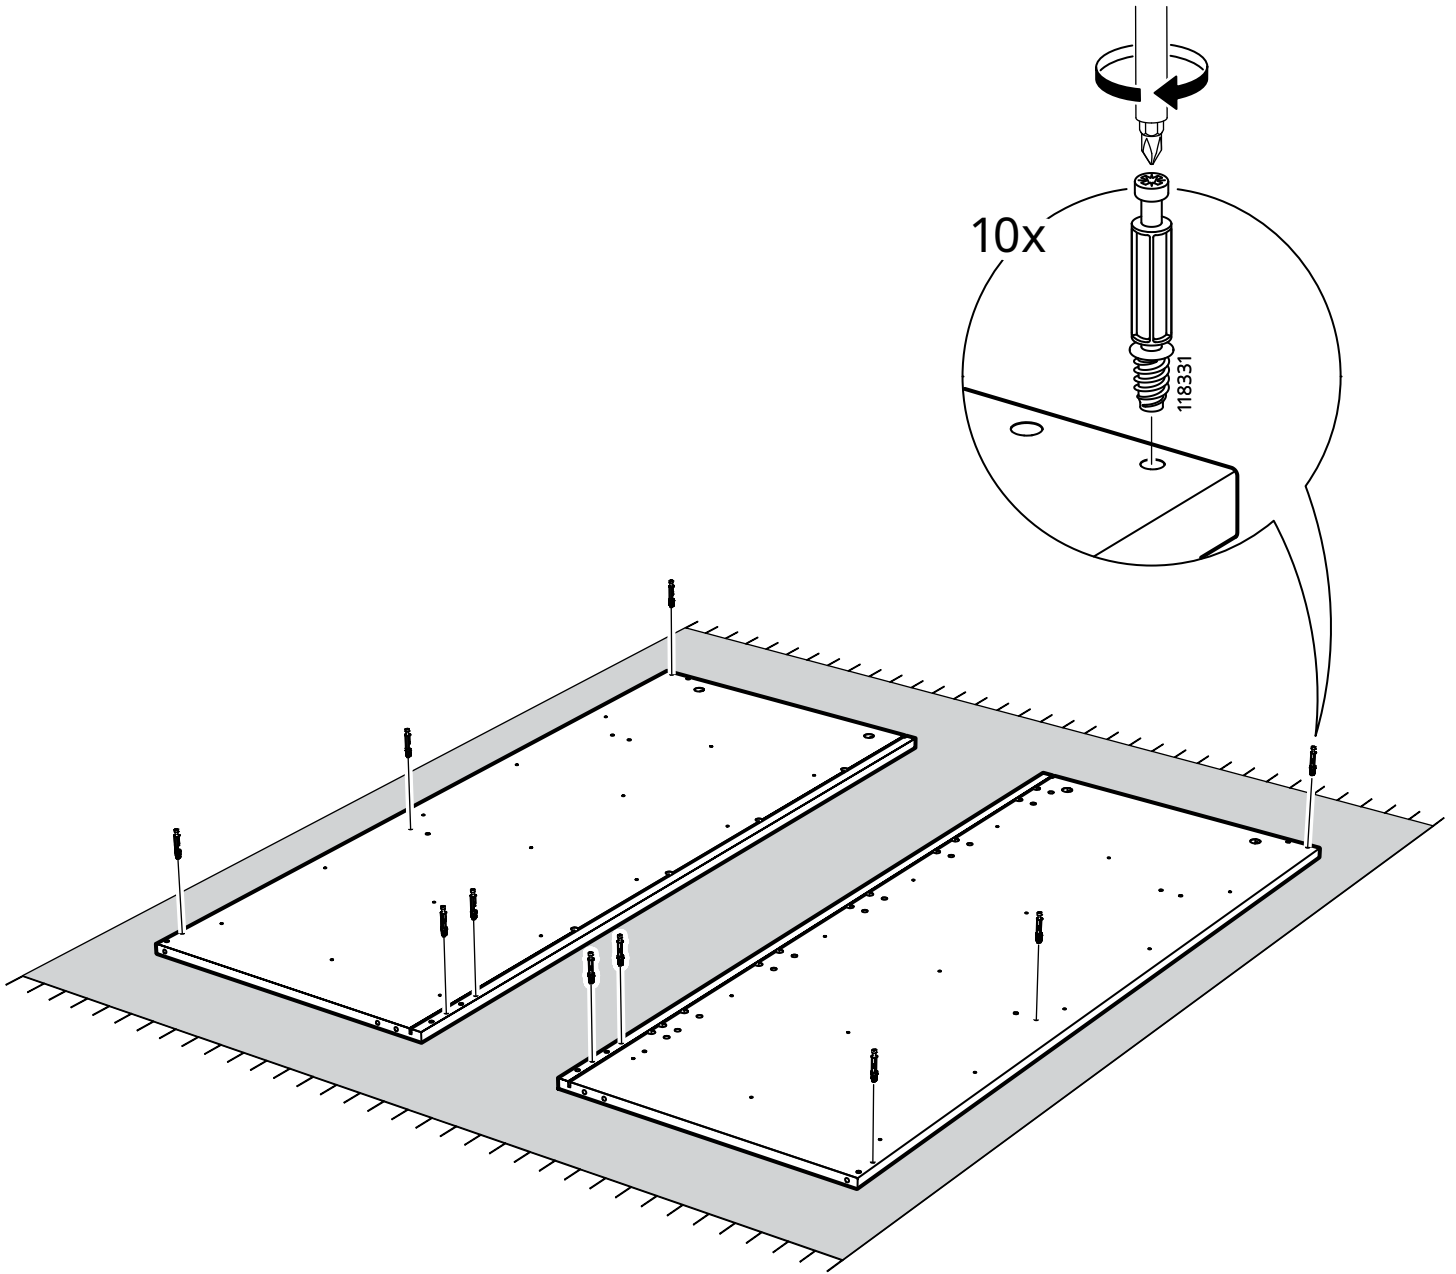


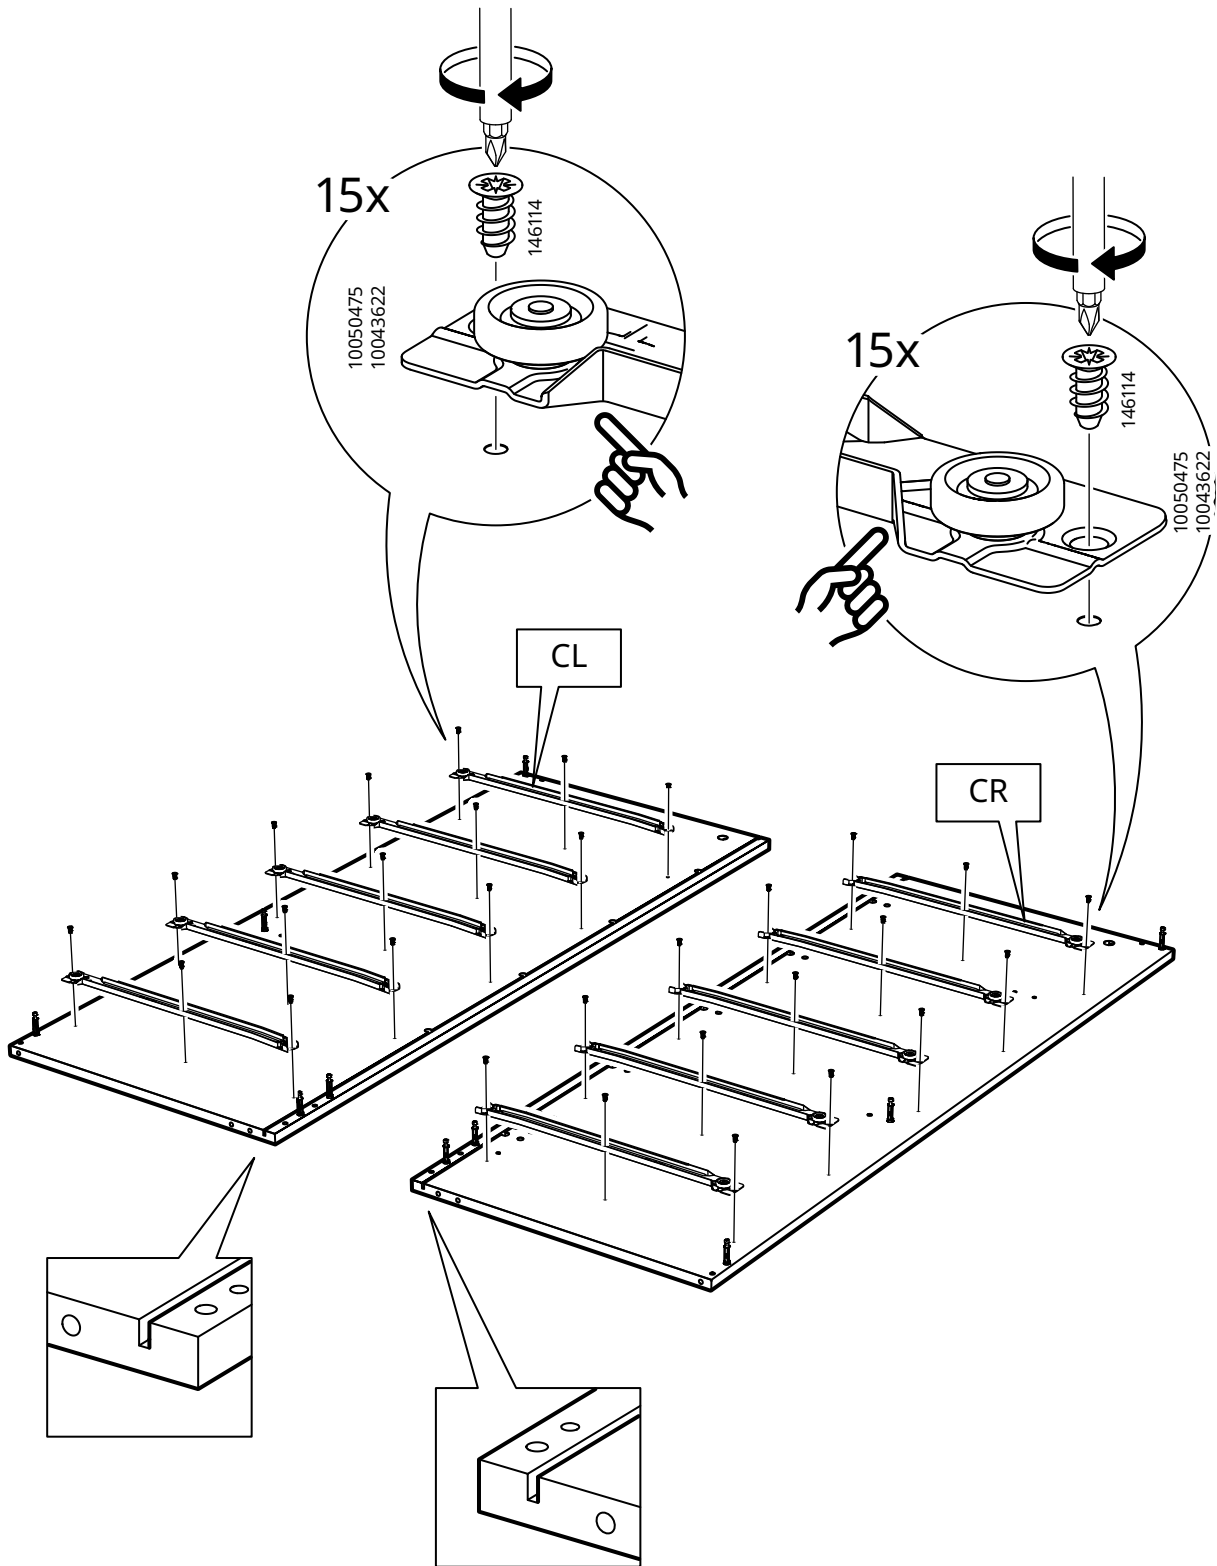


3

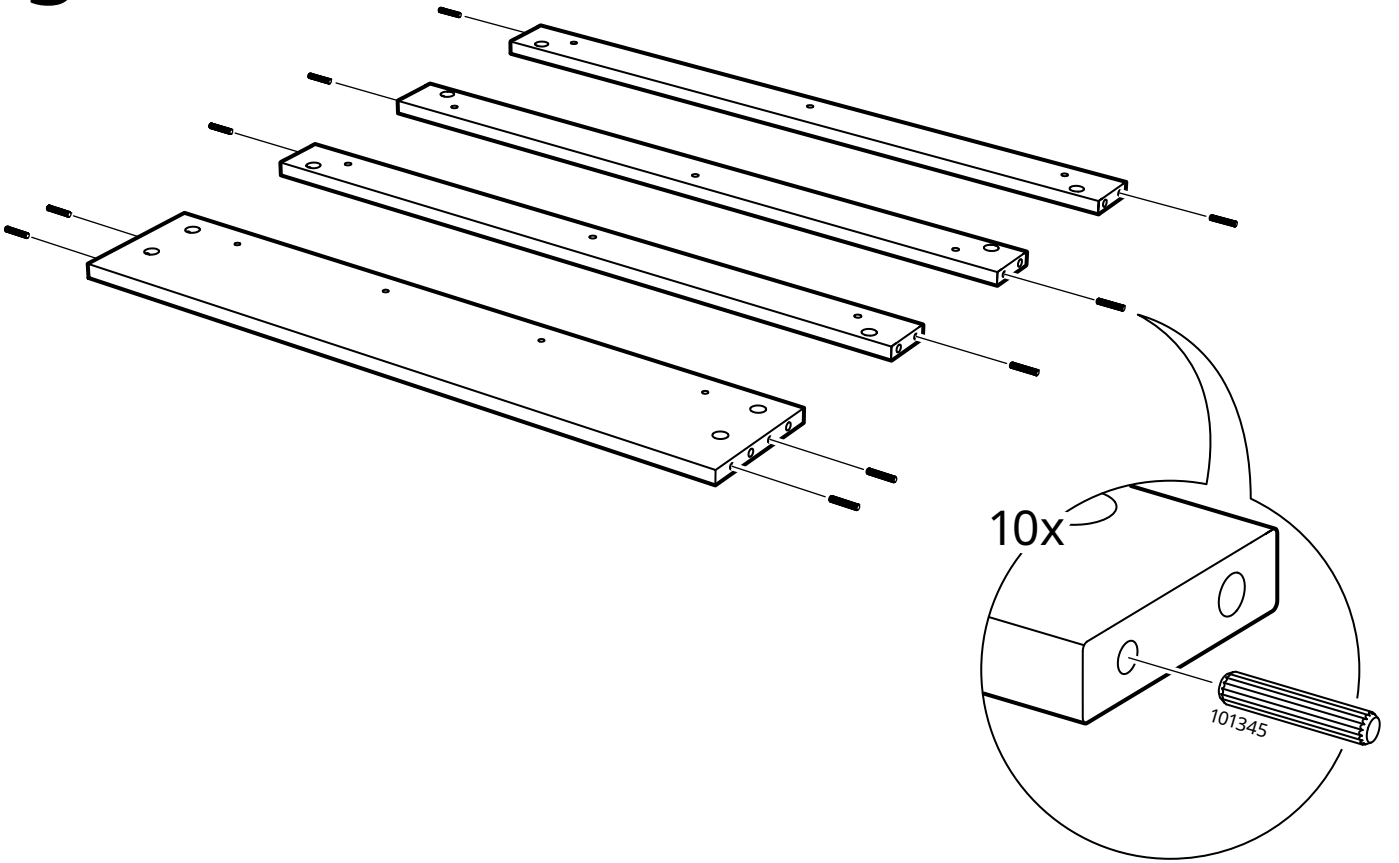 


4

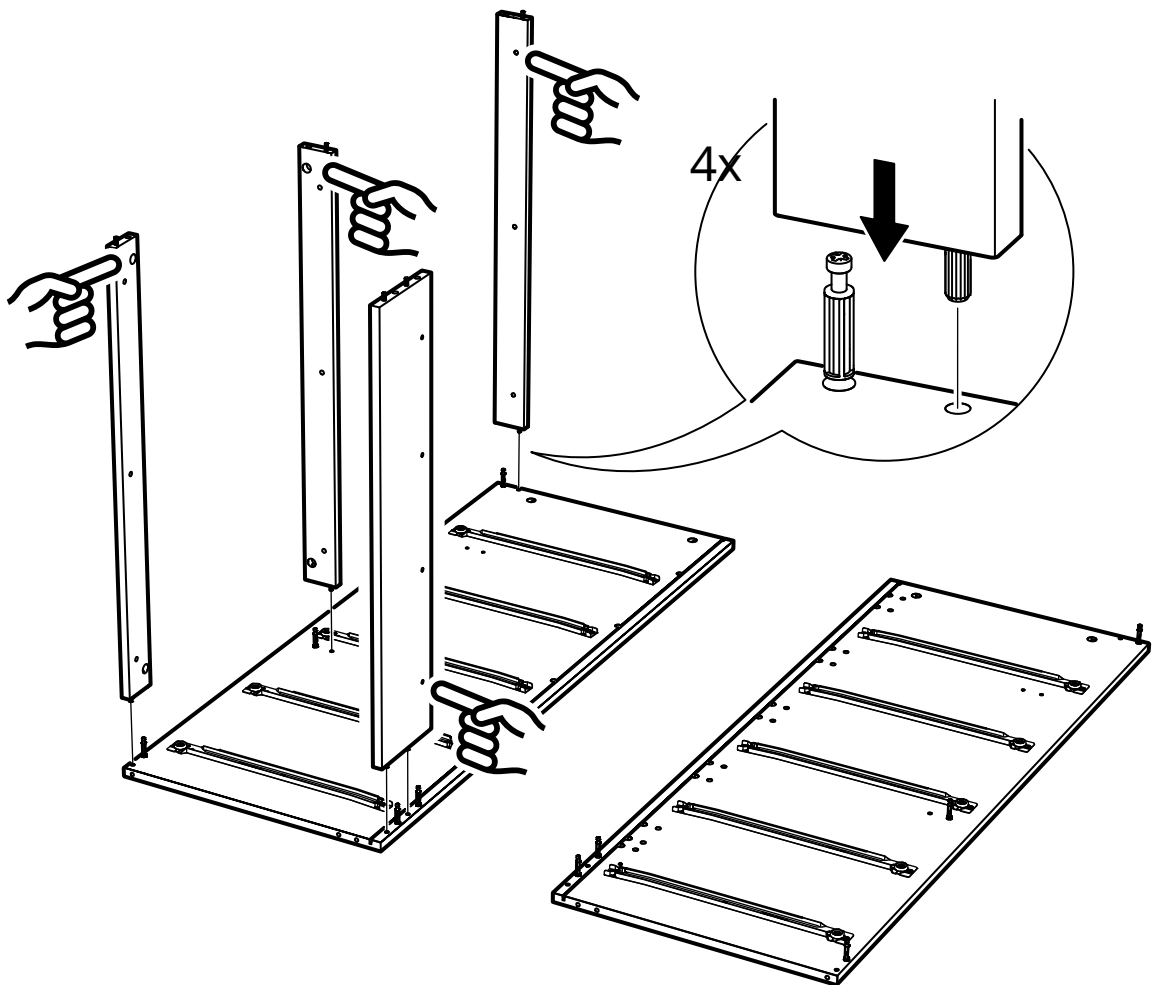 


5

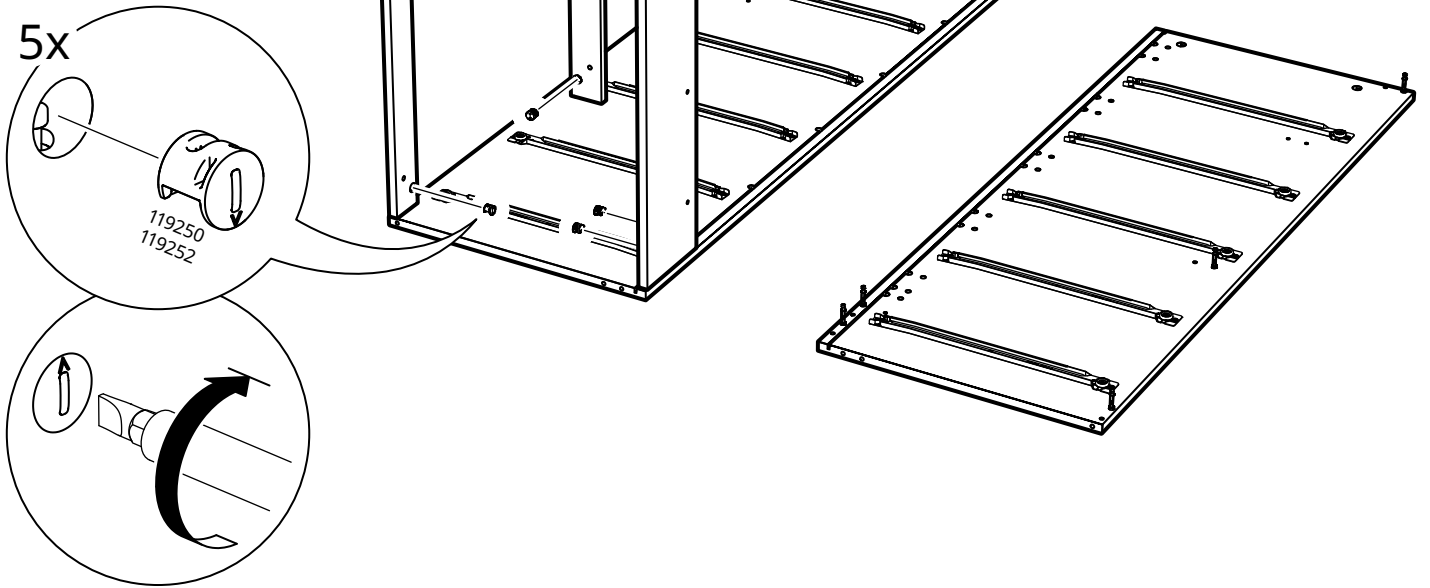 


6

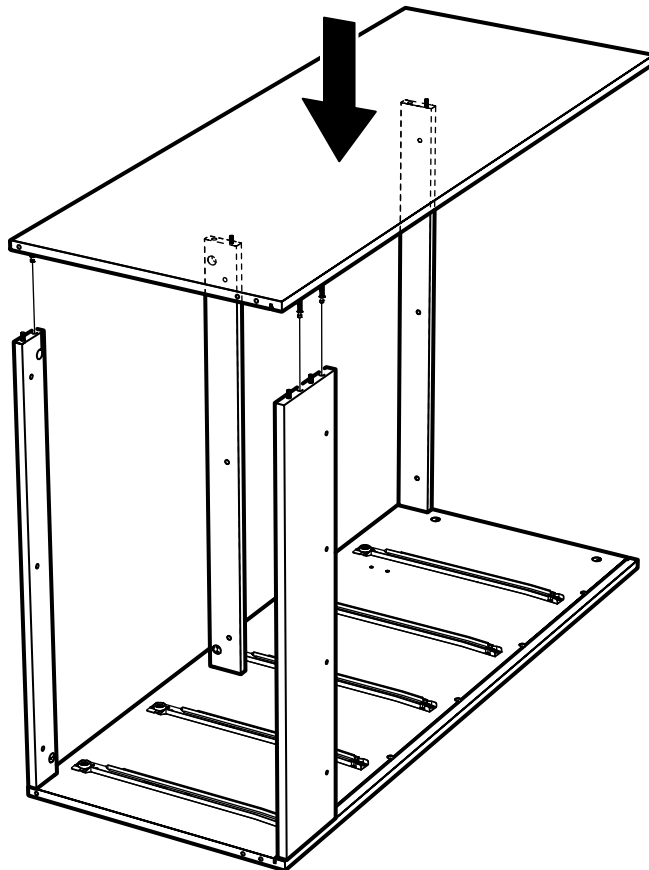 


7

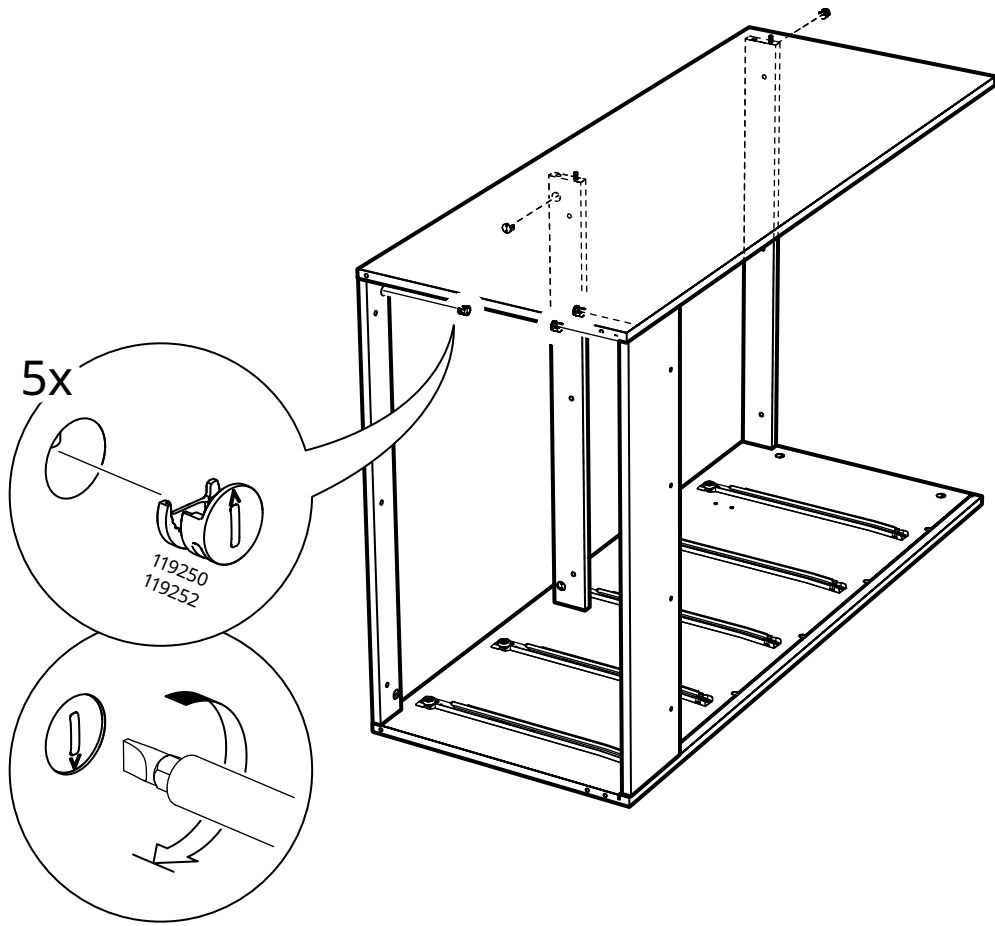 


8

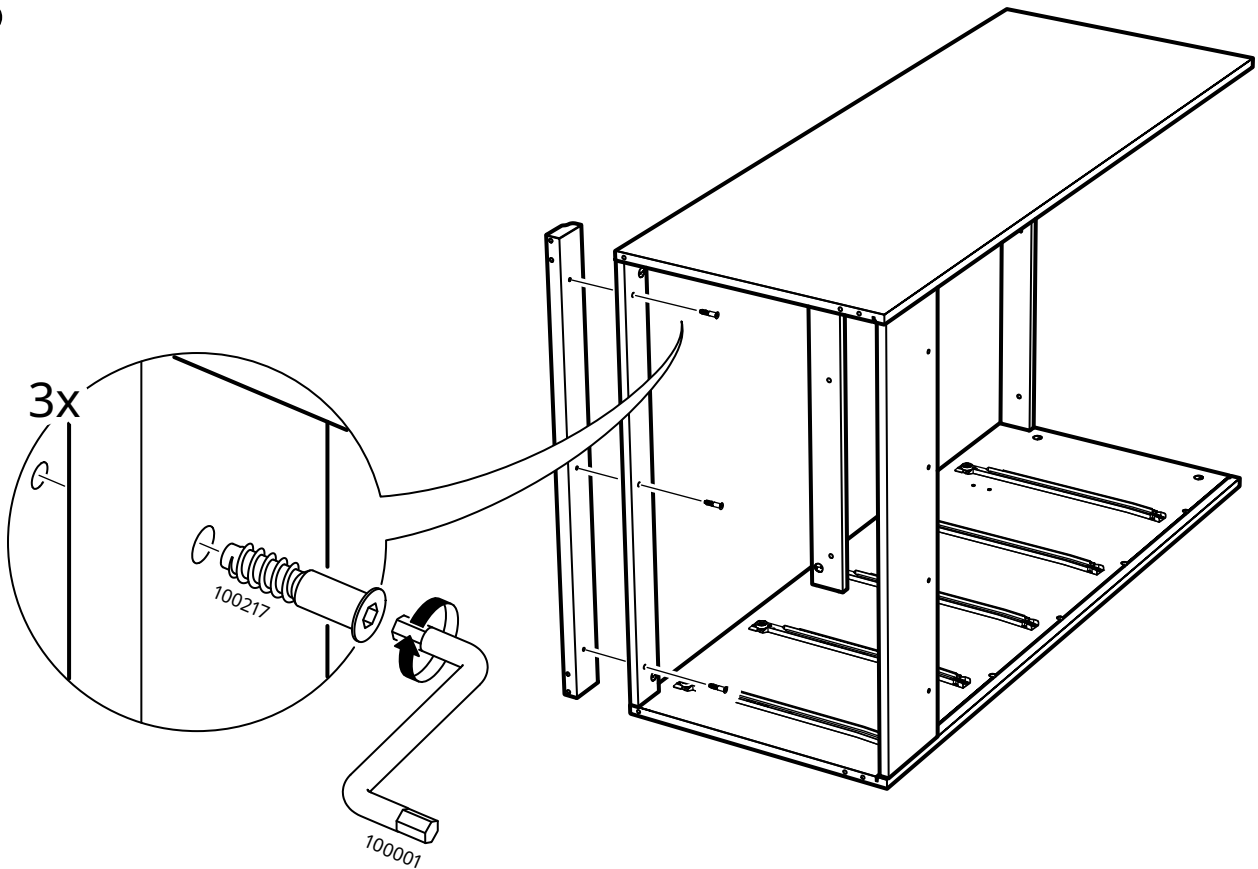 


9

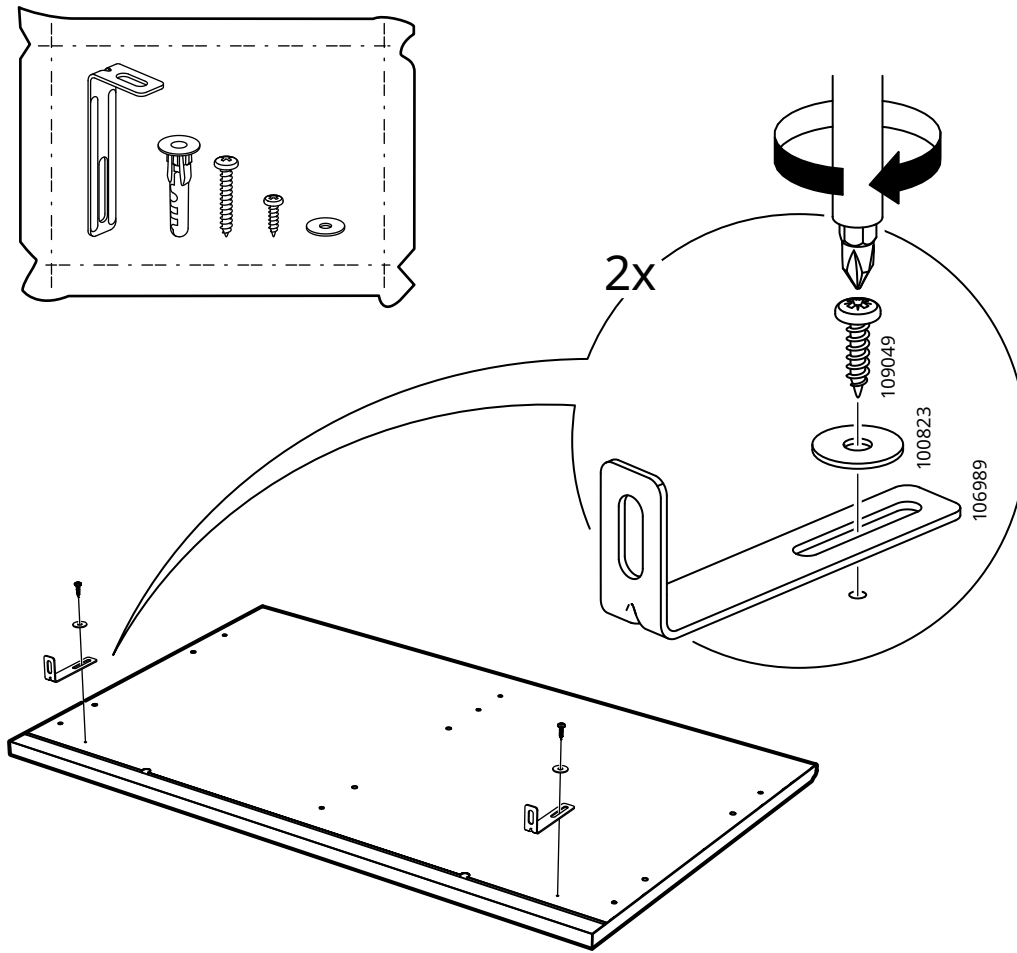 


10

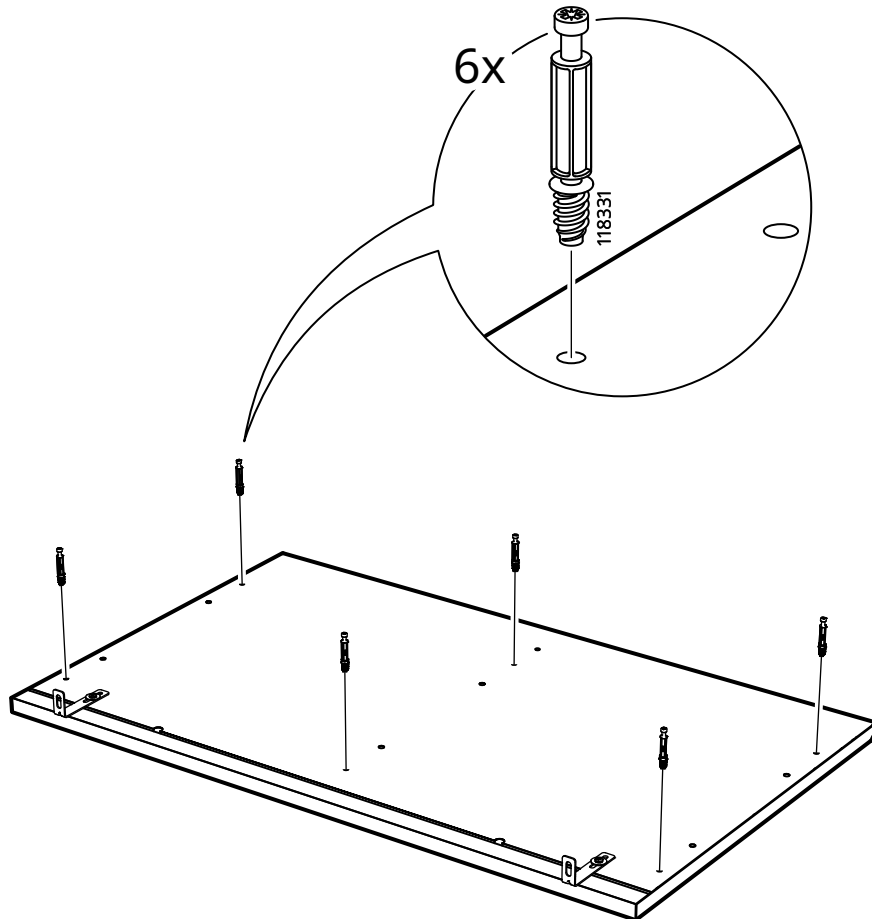 


11

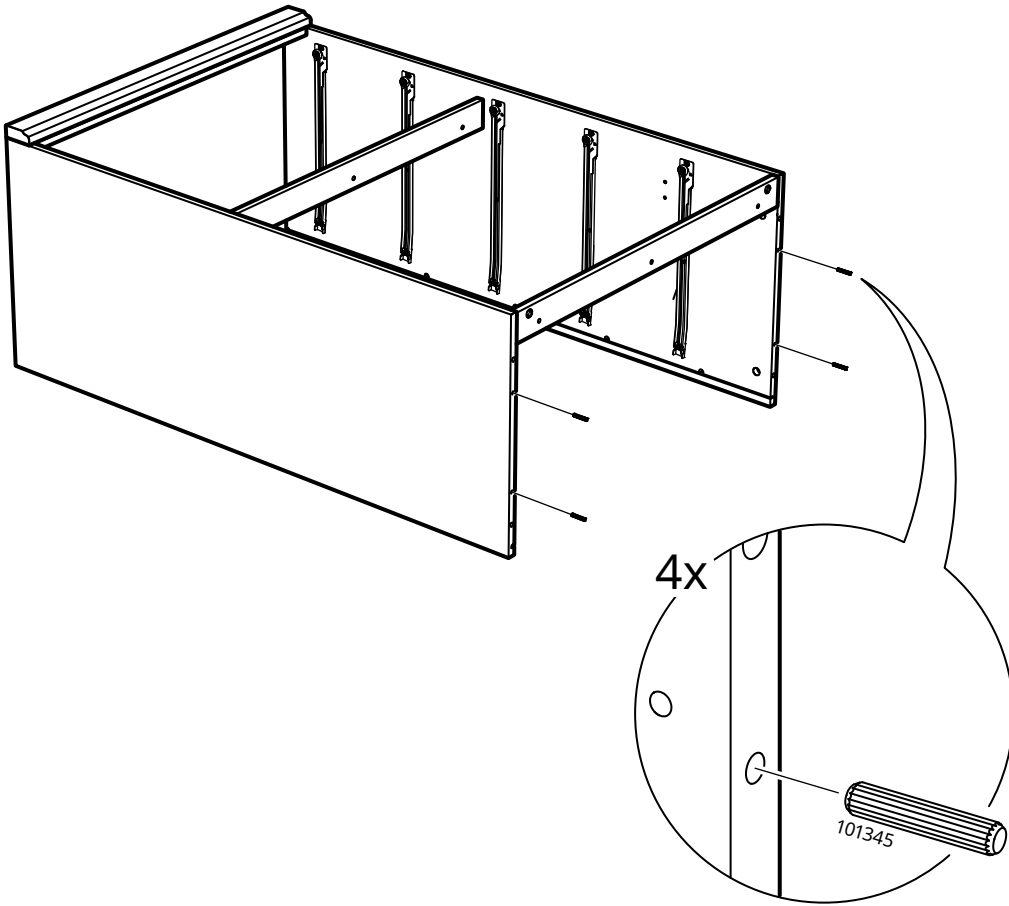 


12

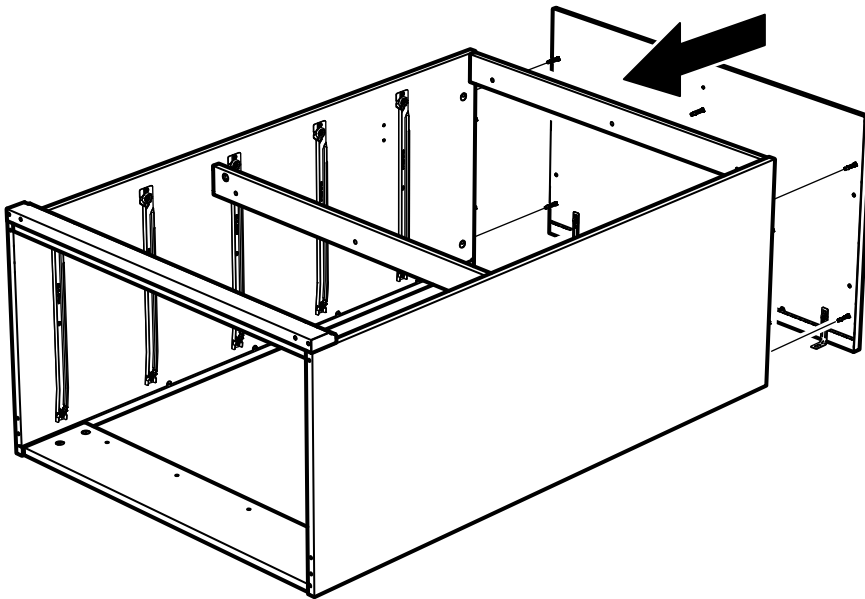 



13

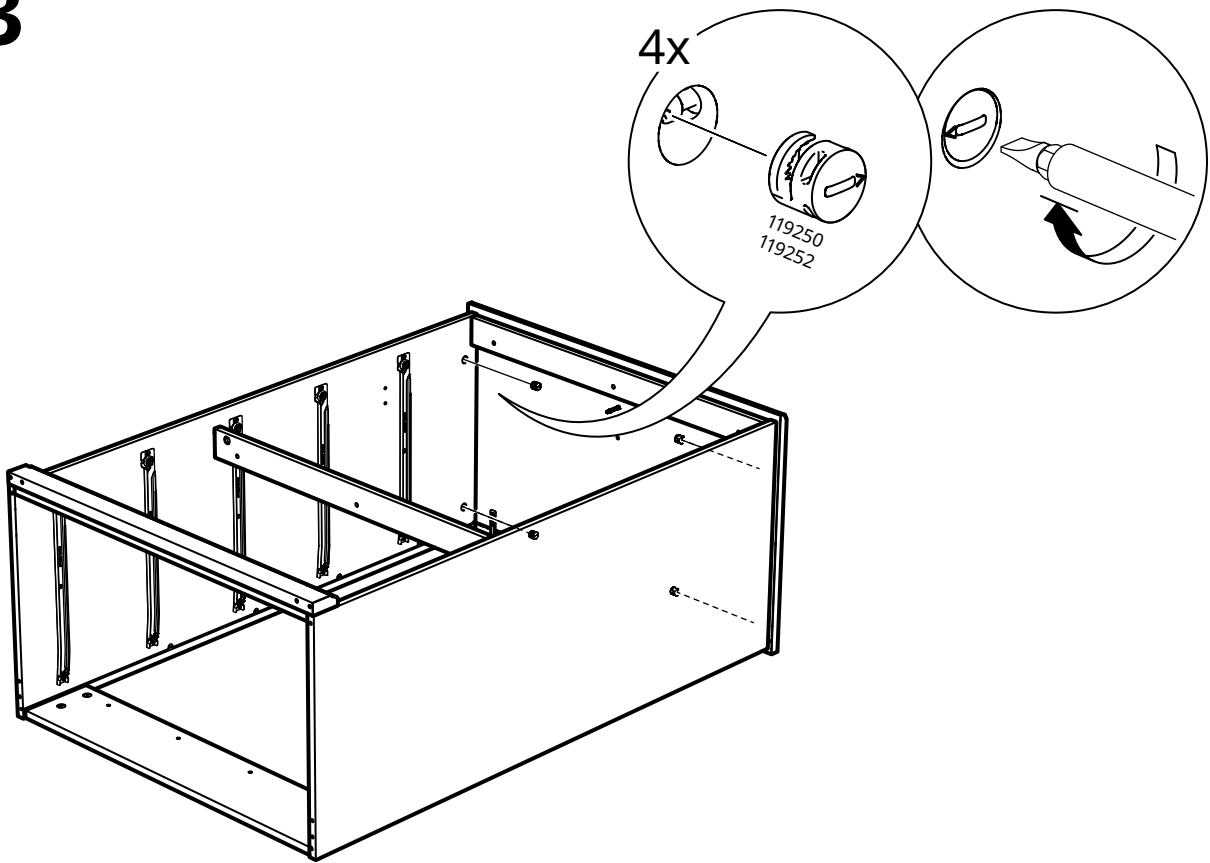 


14

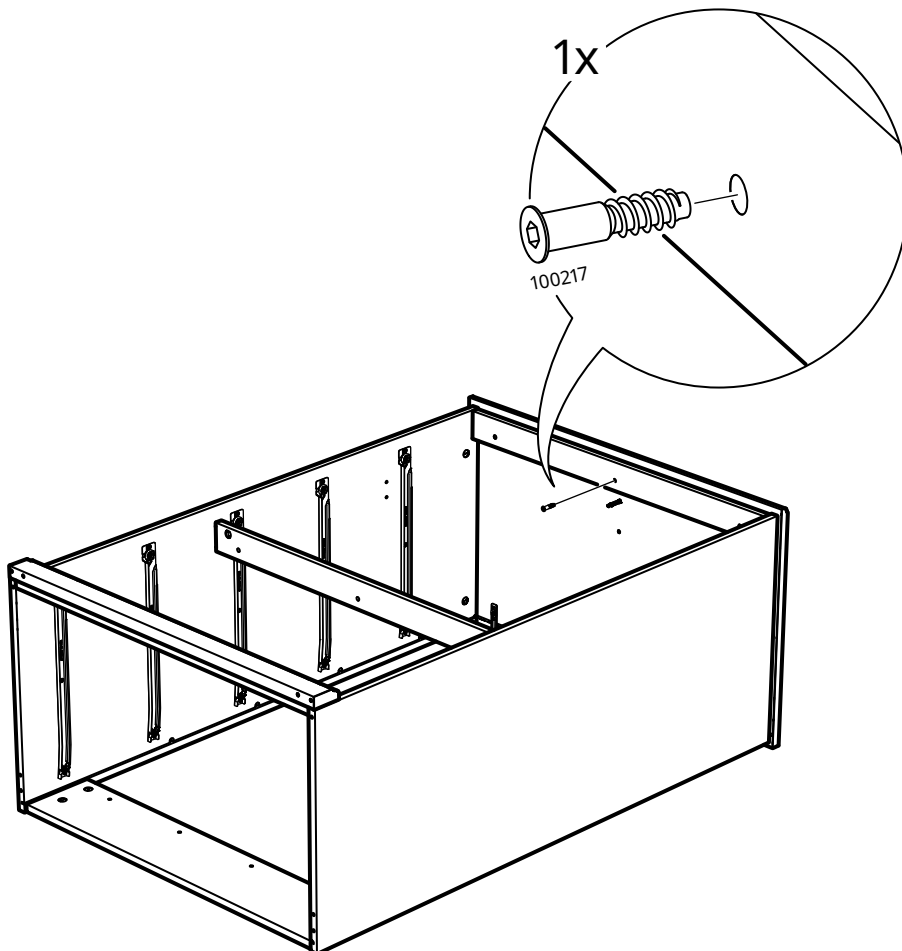 


15

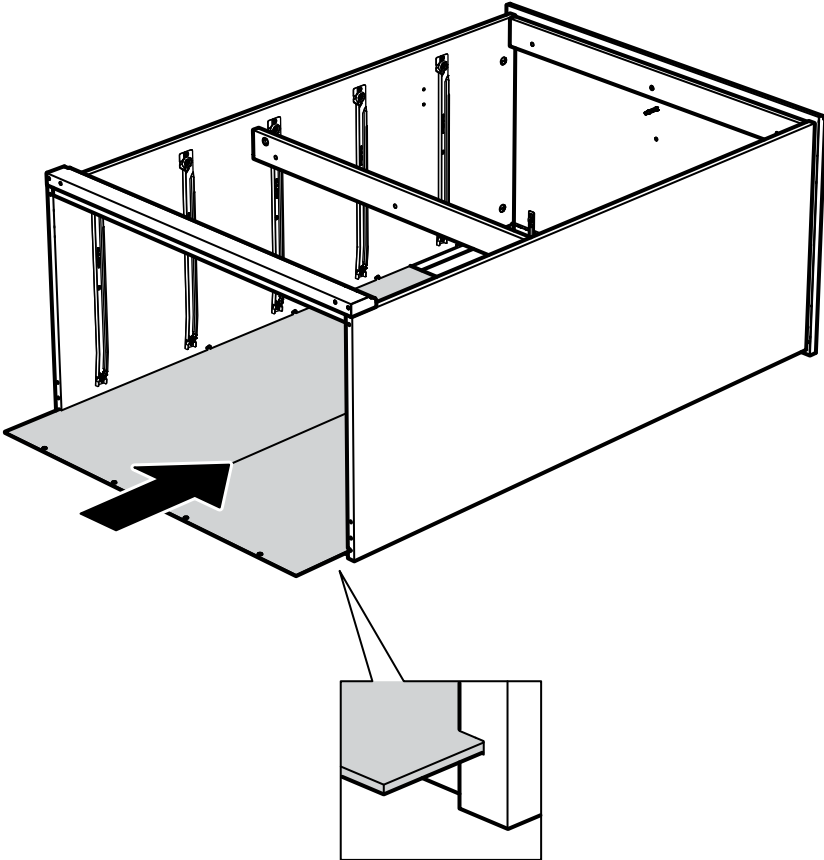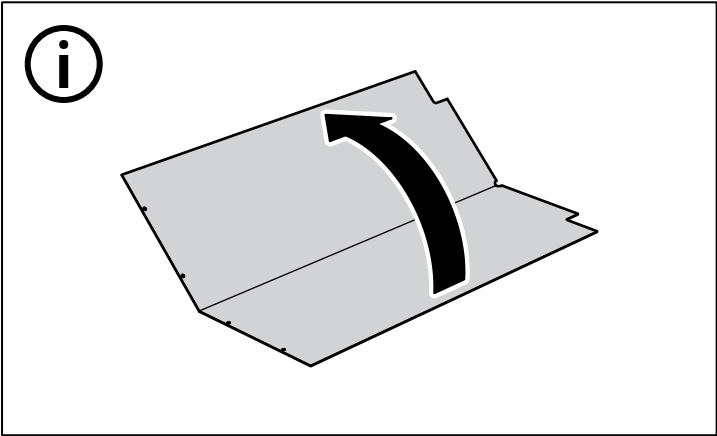  


16

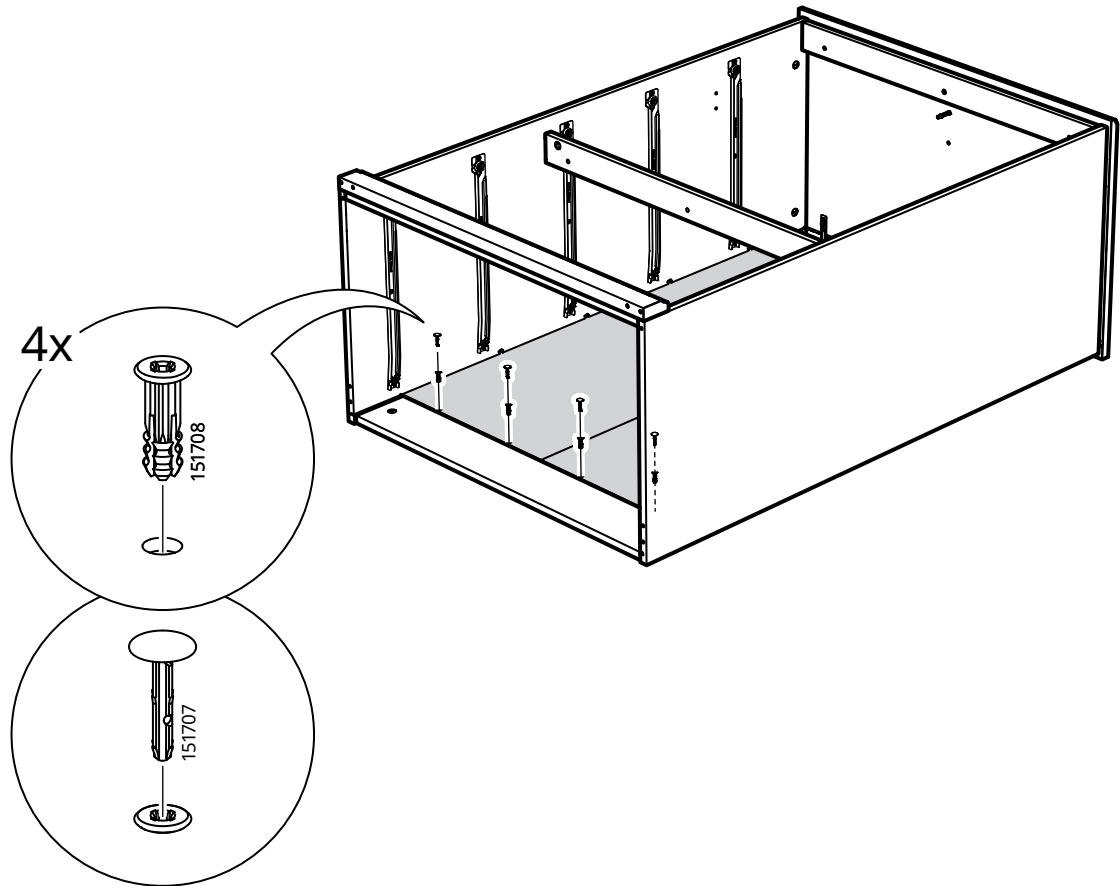 


17

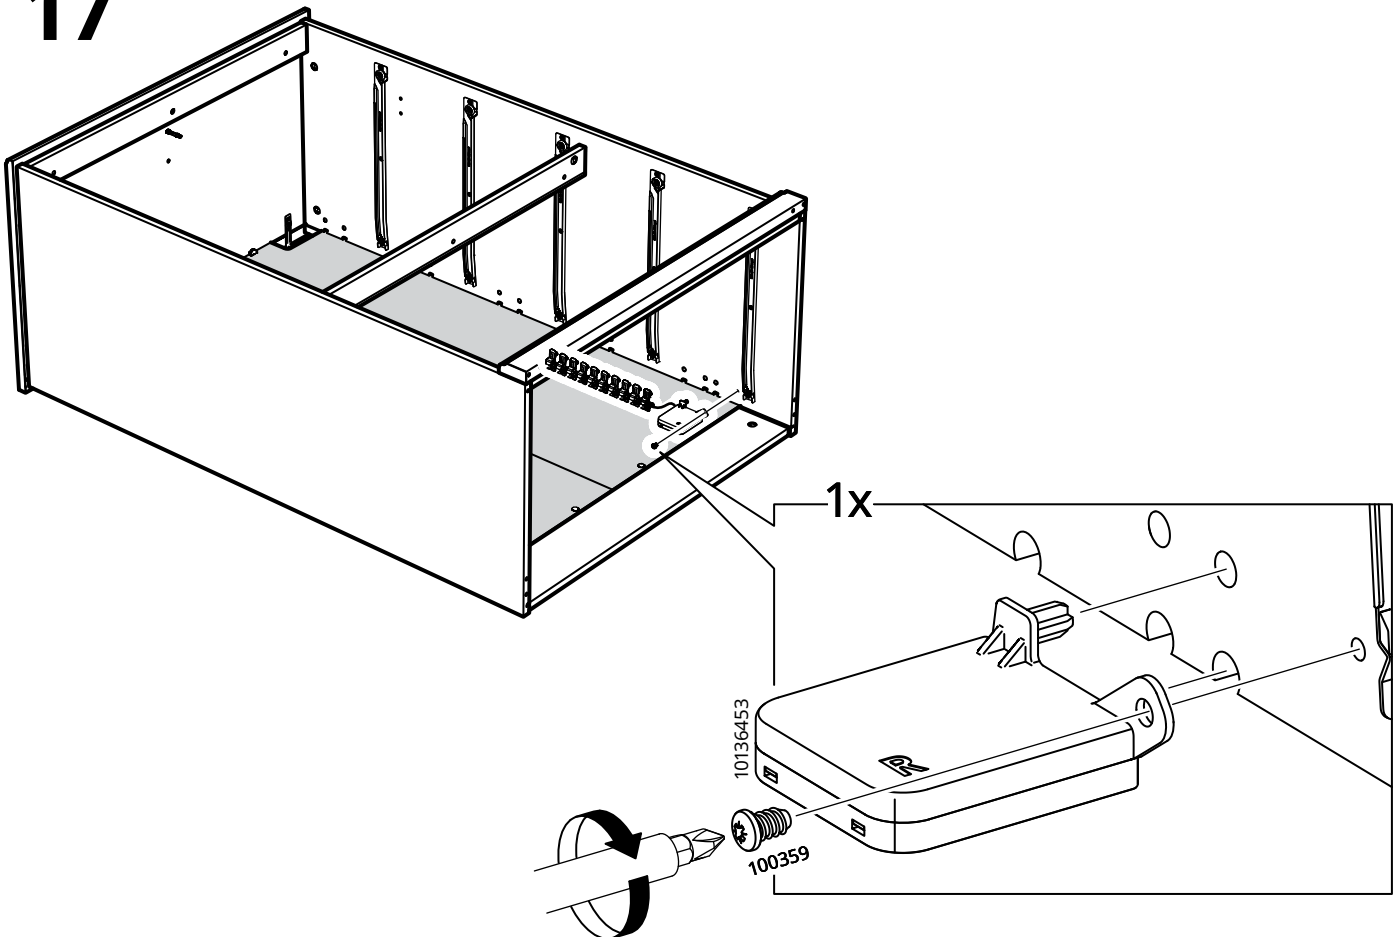 


18

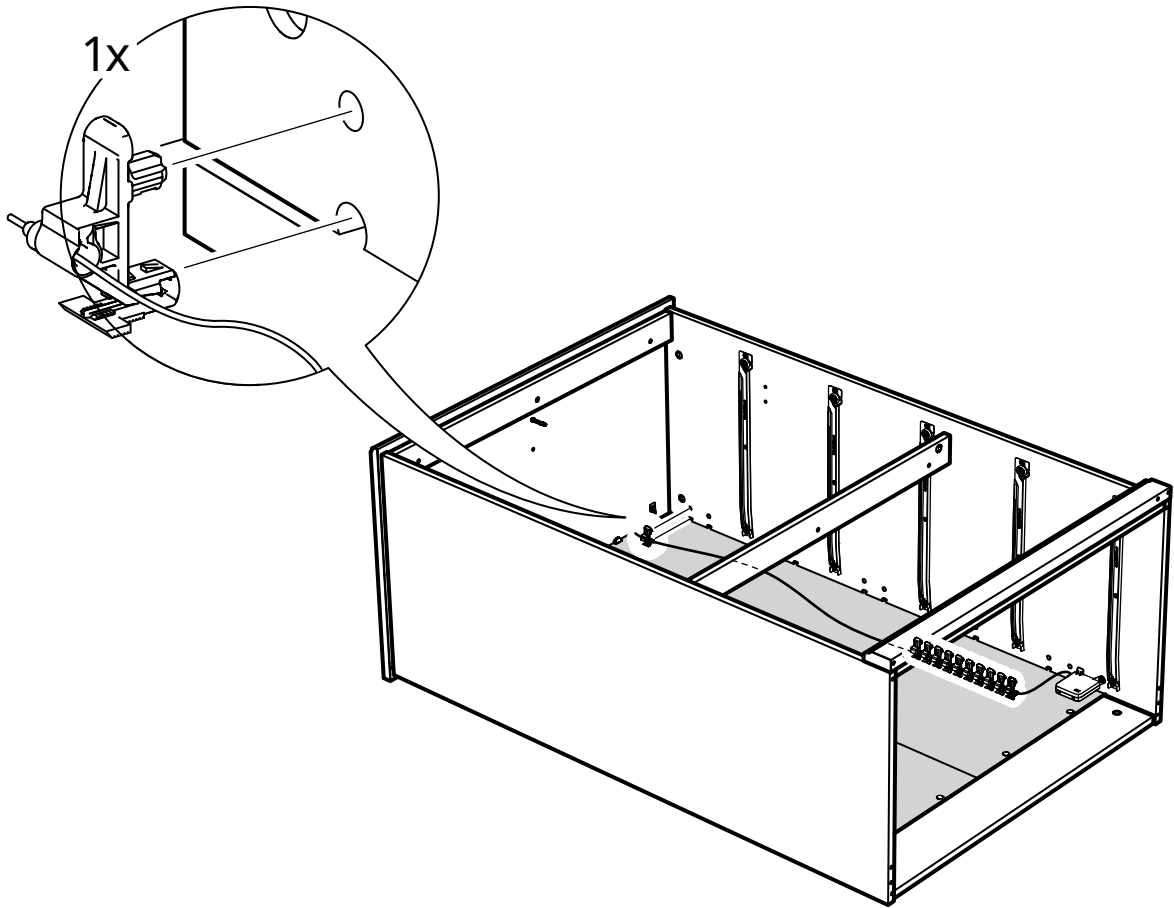 


19

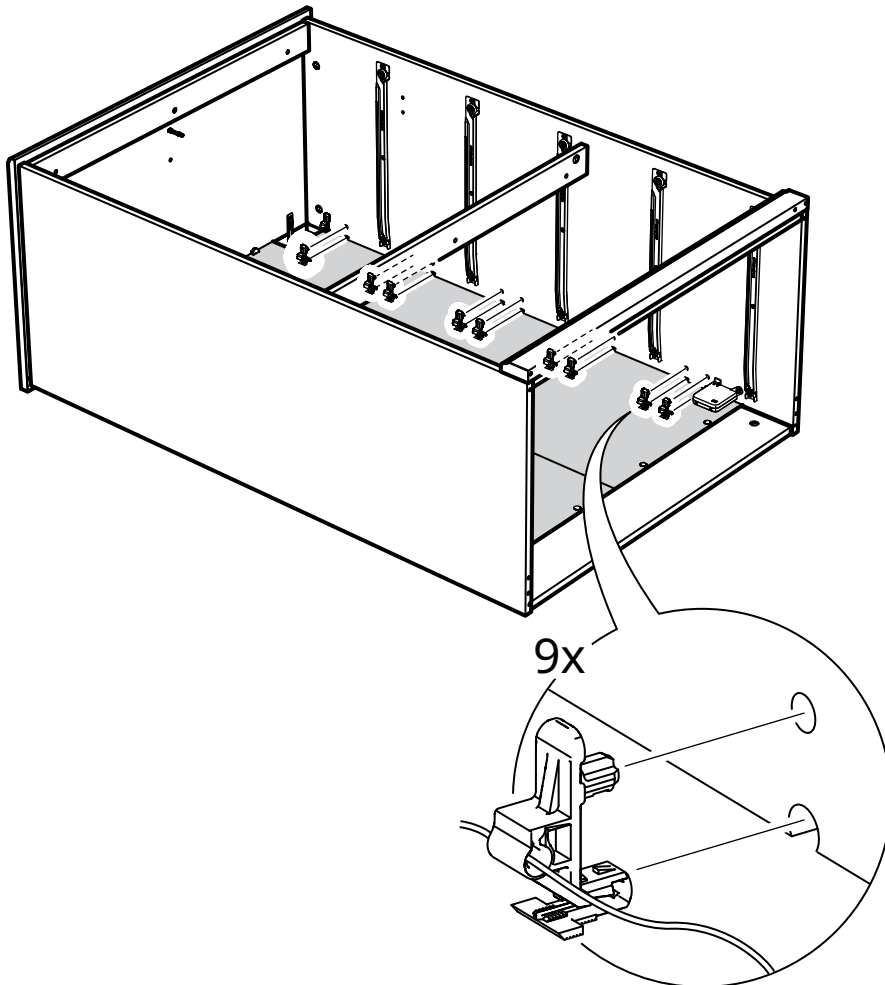 


20

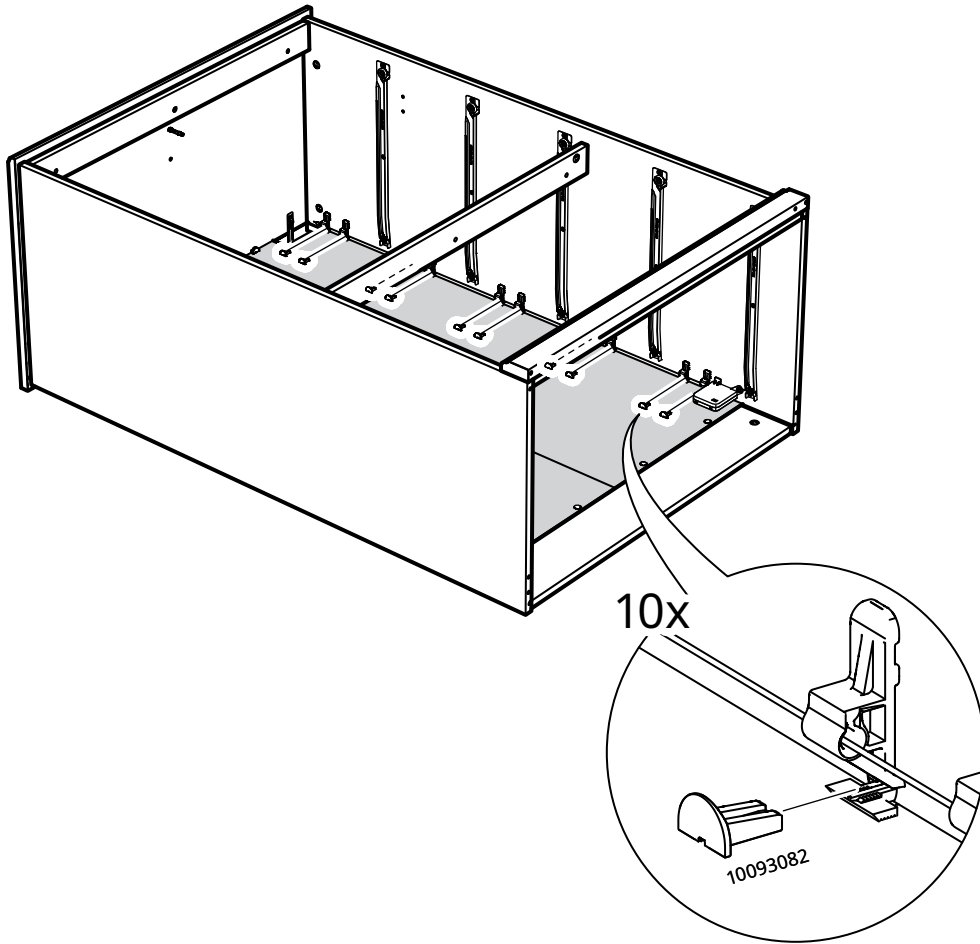 


21

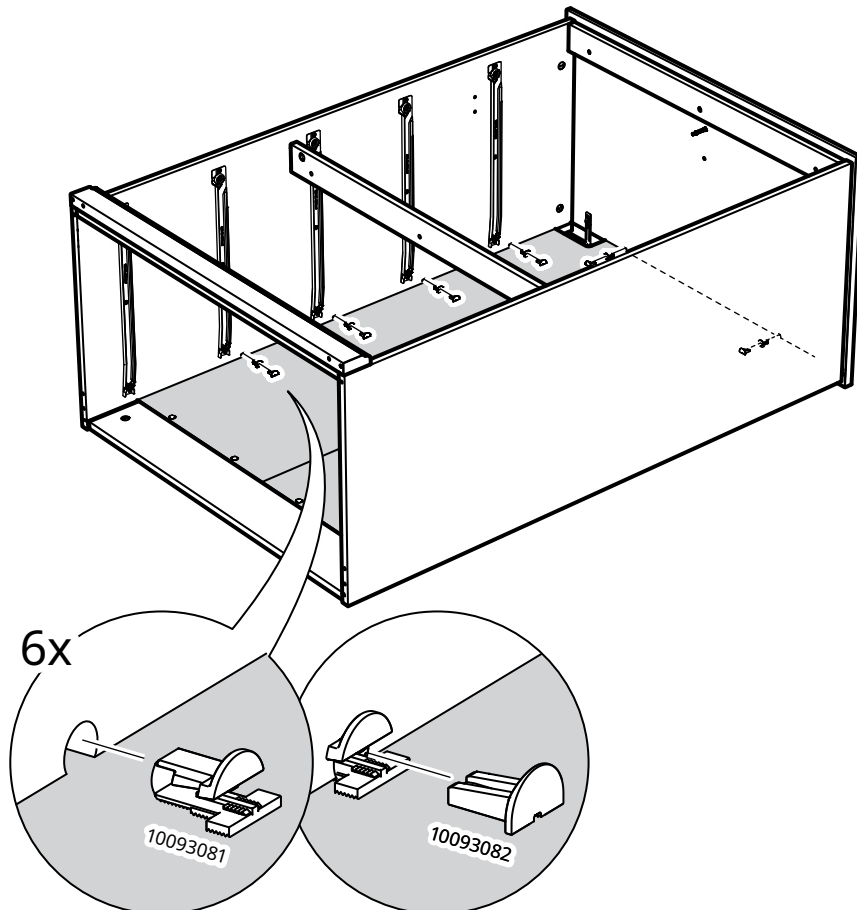 


22

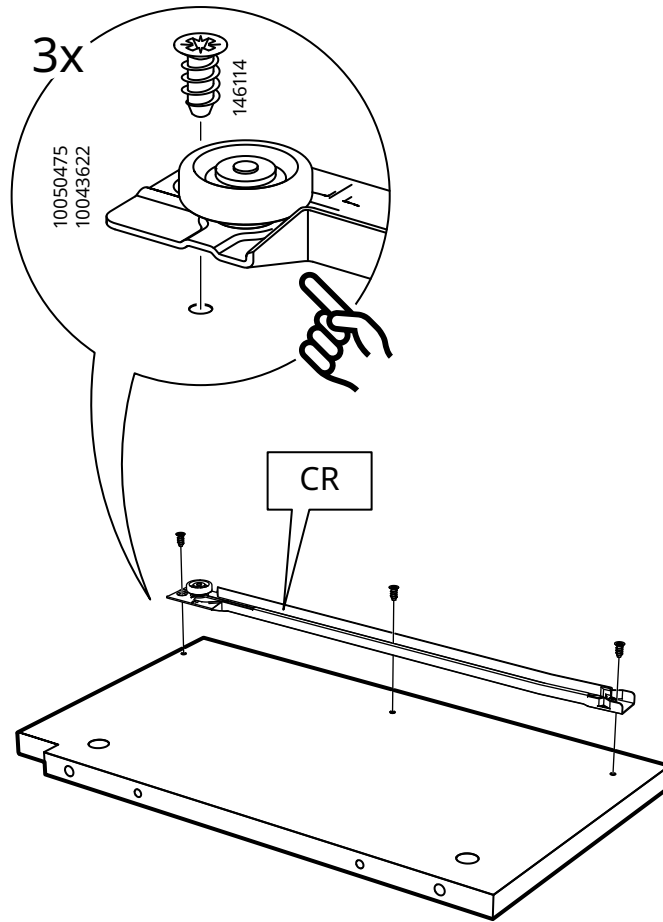 


23

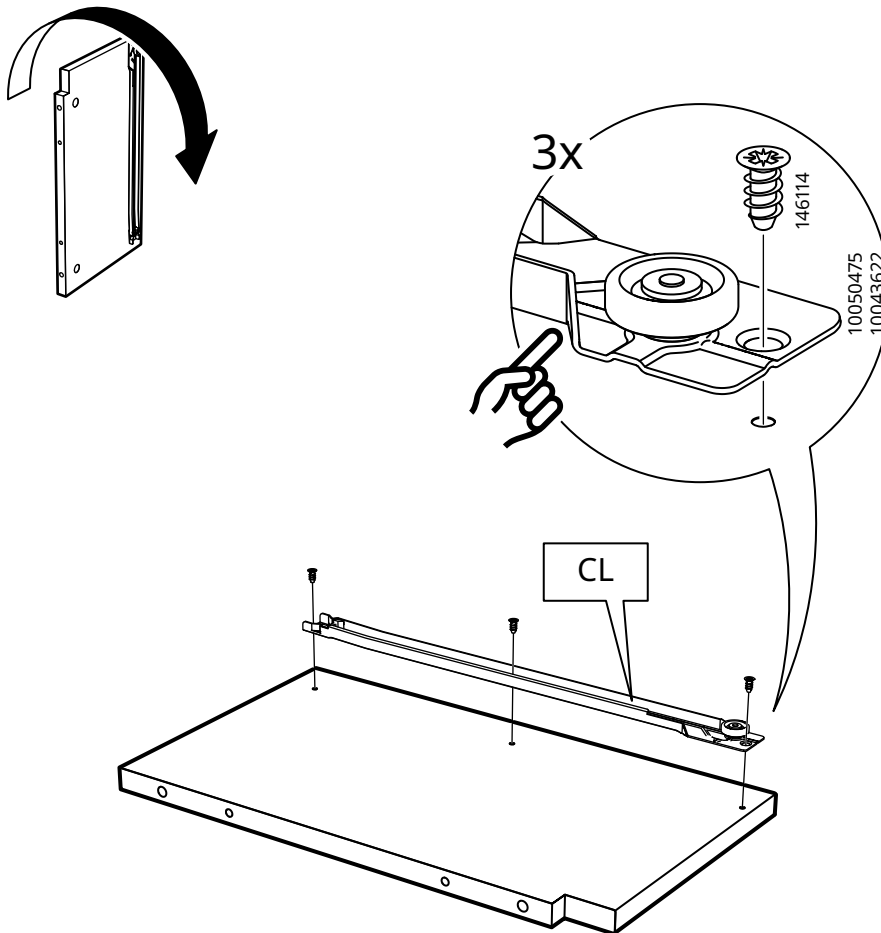 


24

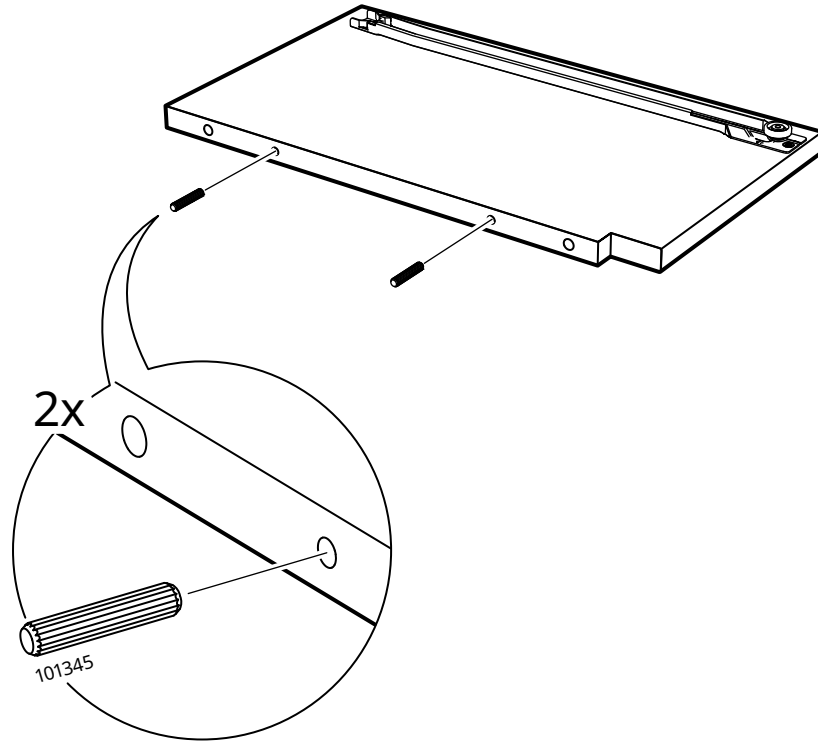 


25

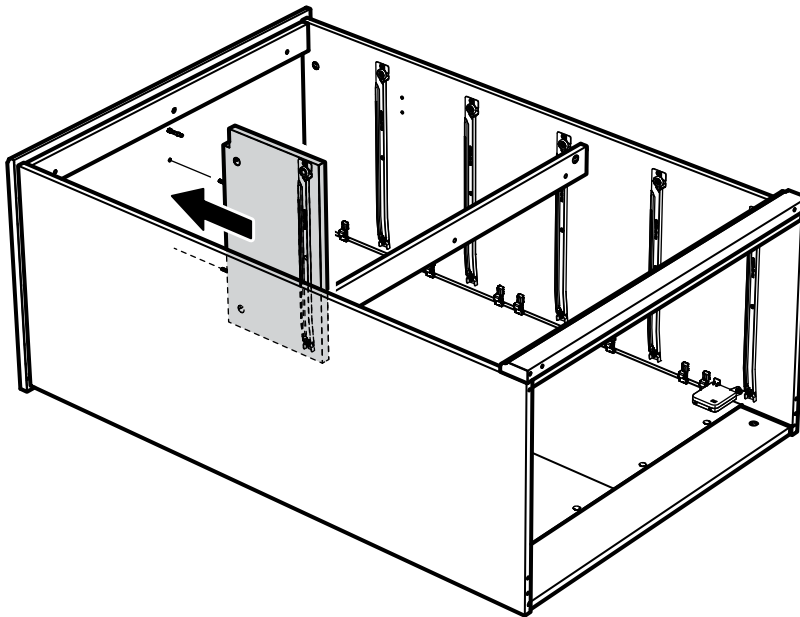 


26

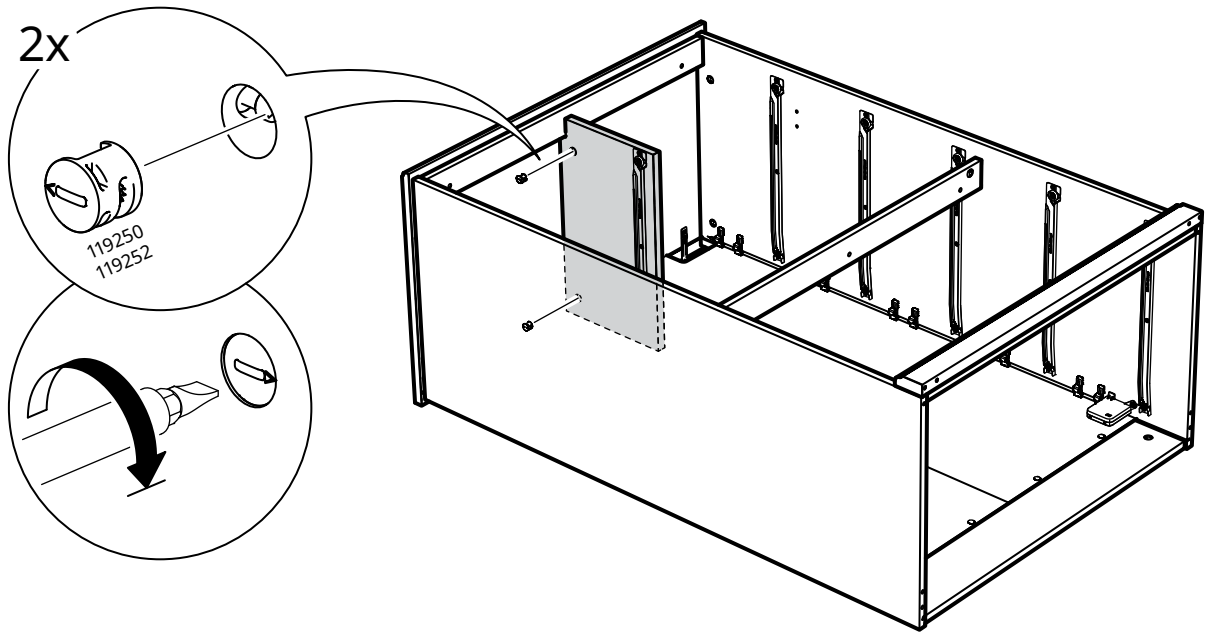 


27

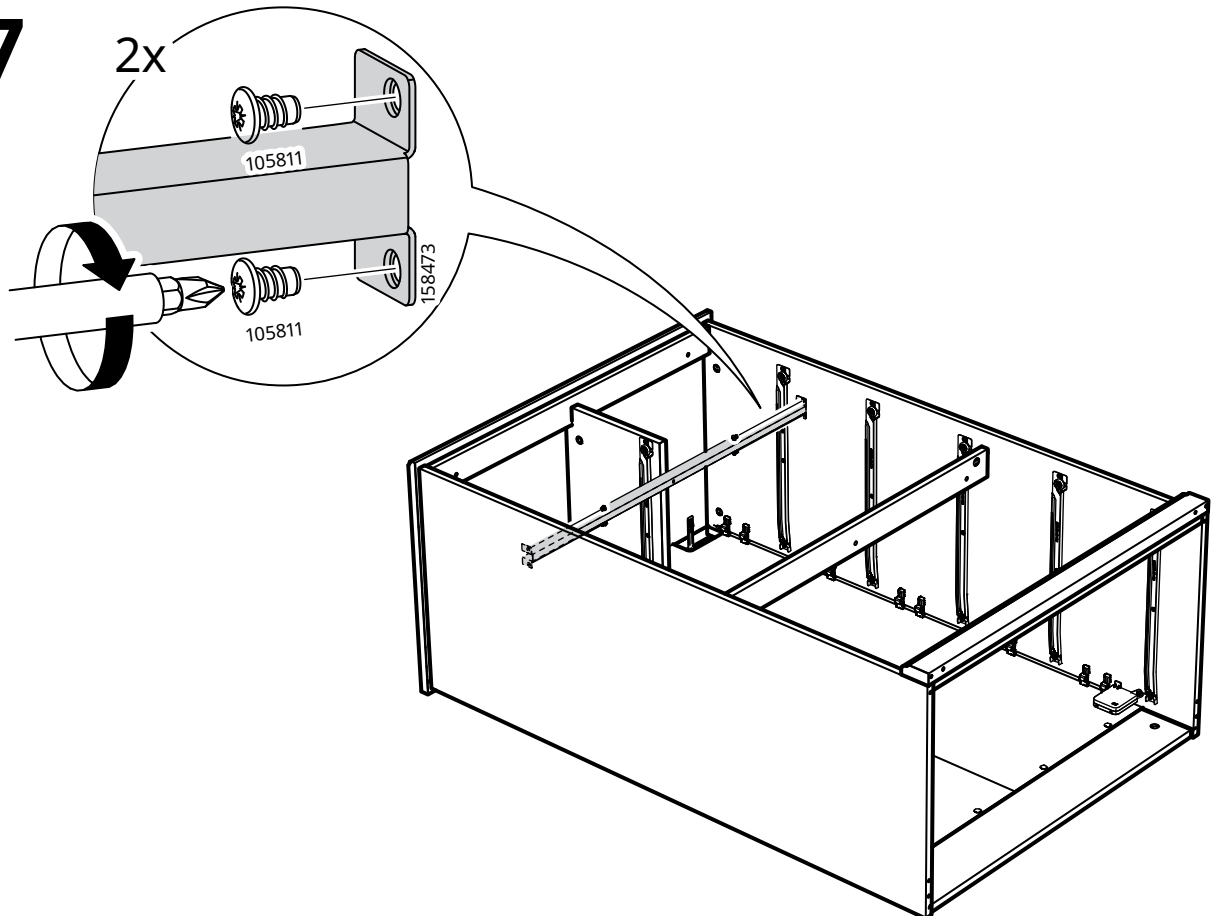 


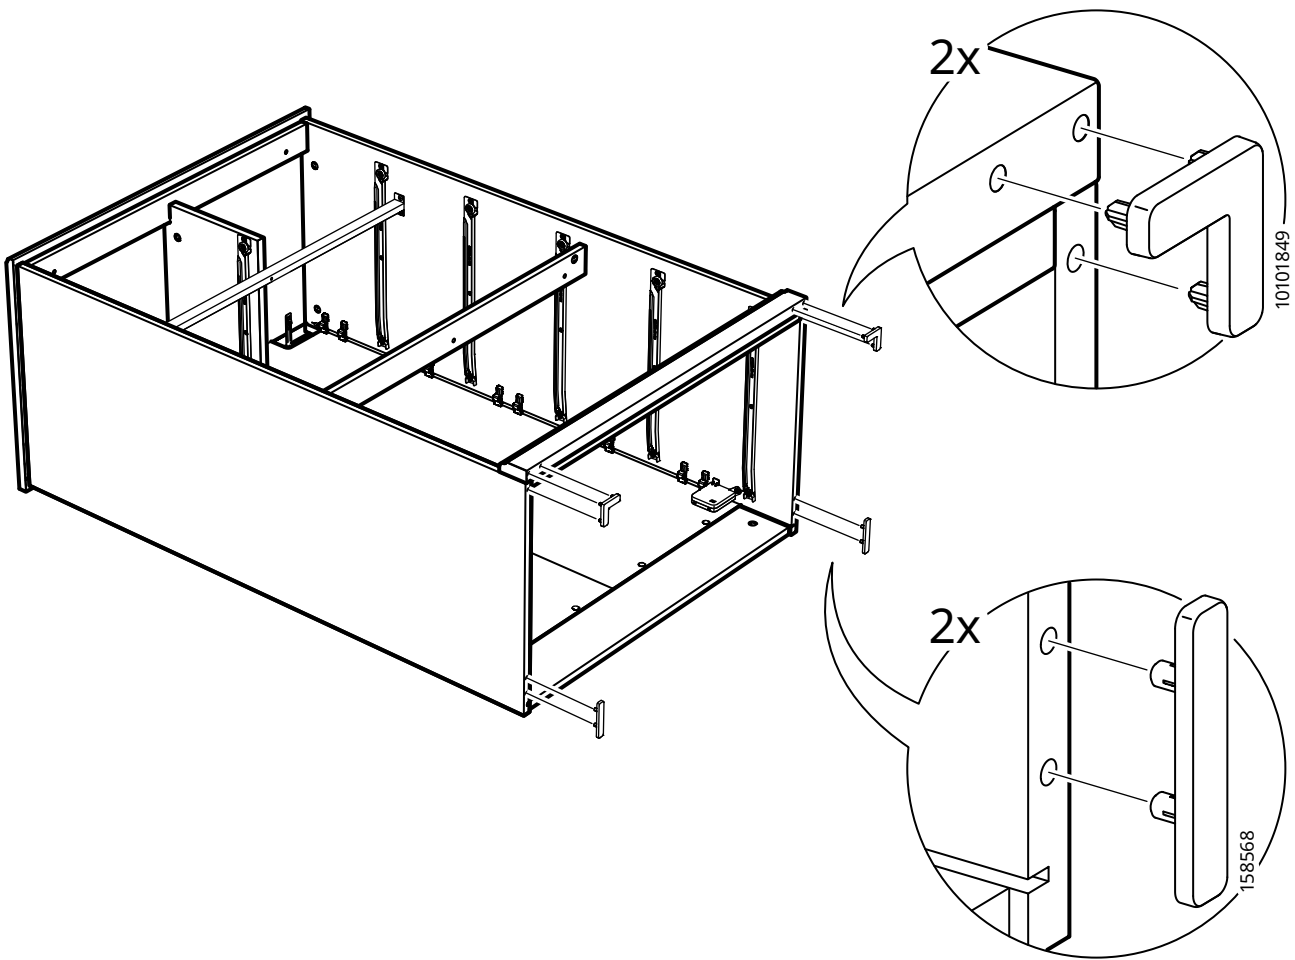 

29

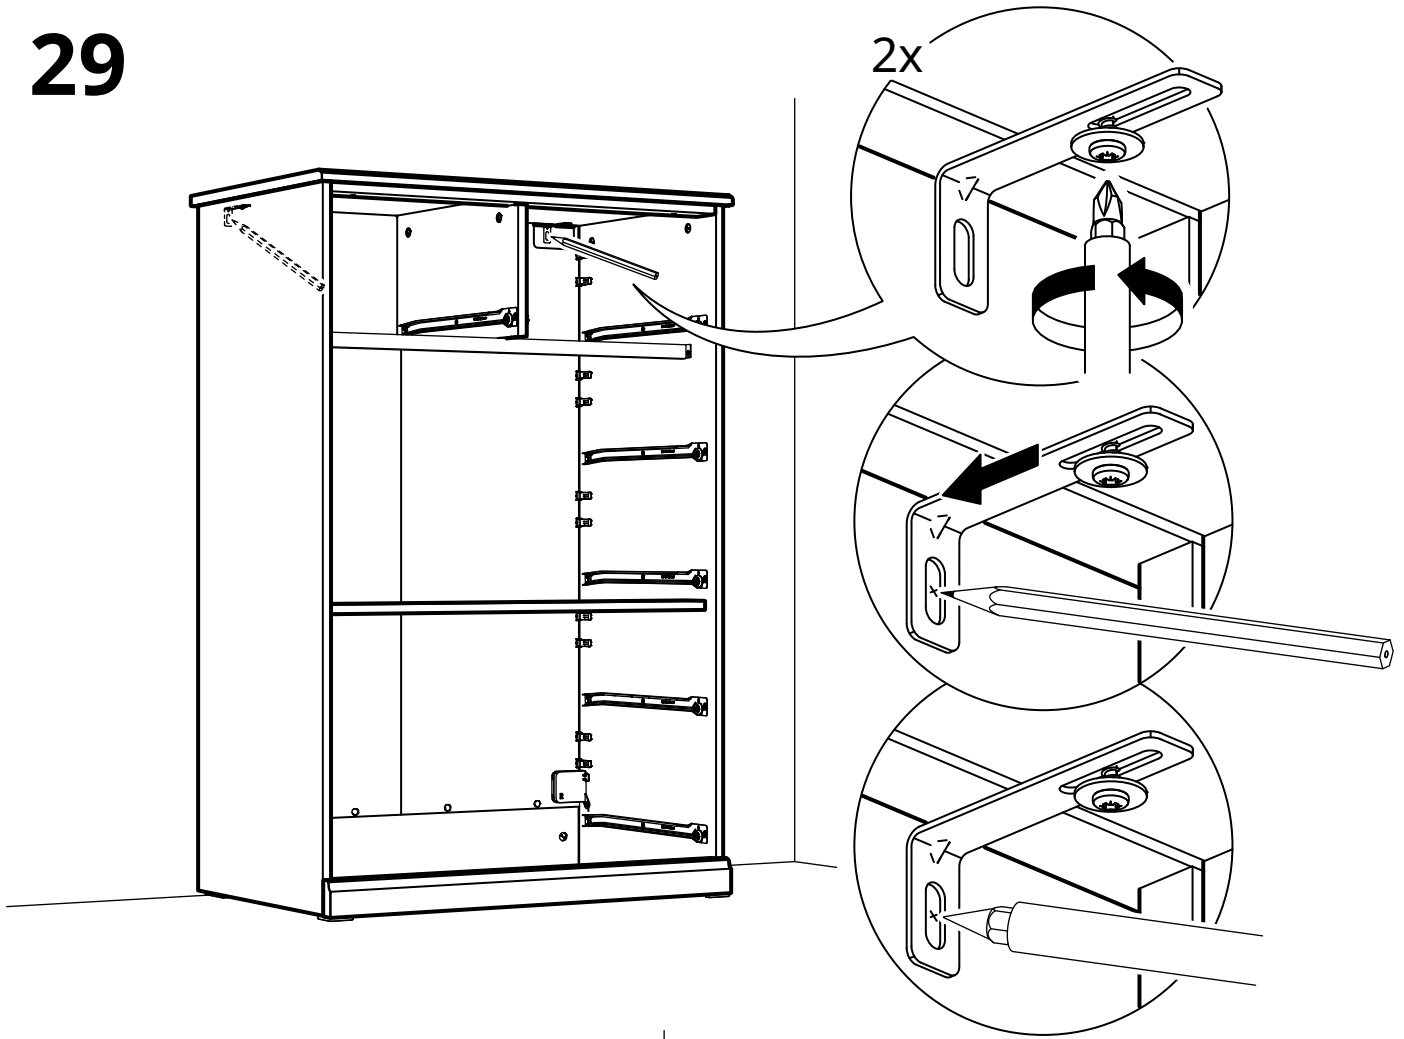 


30

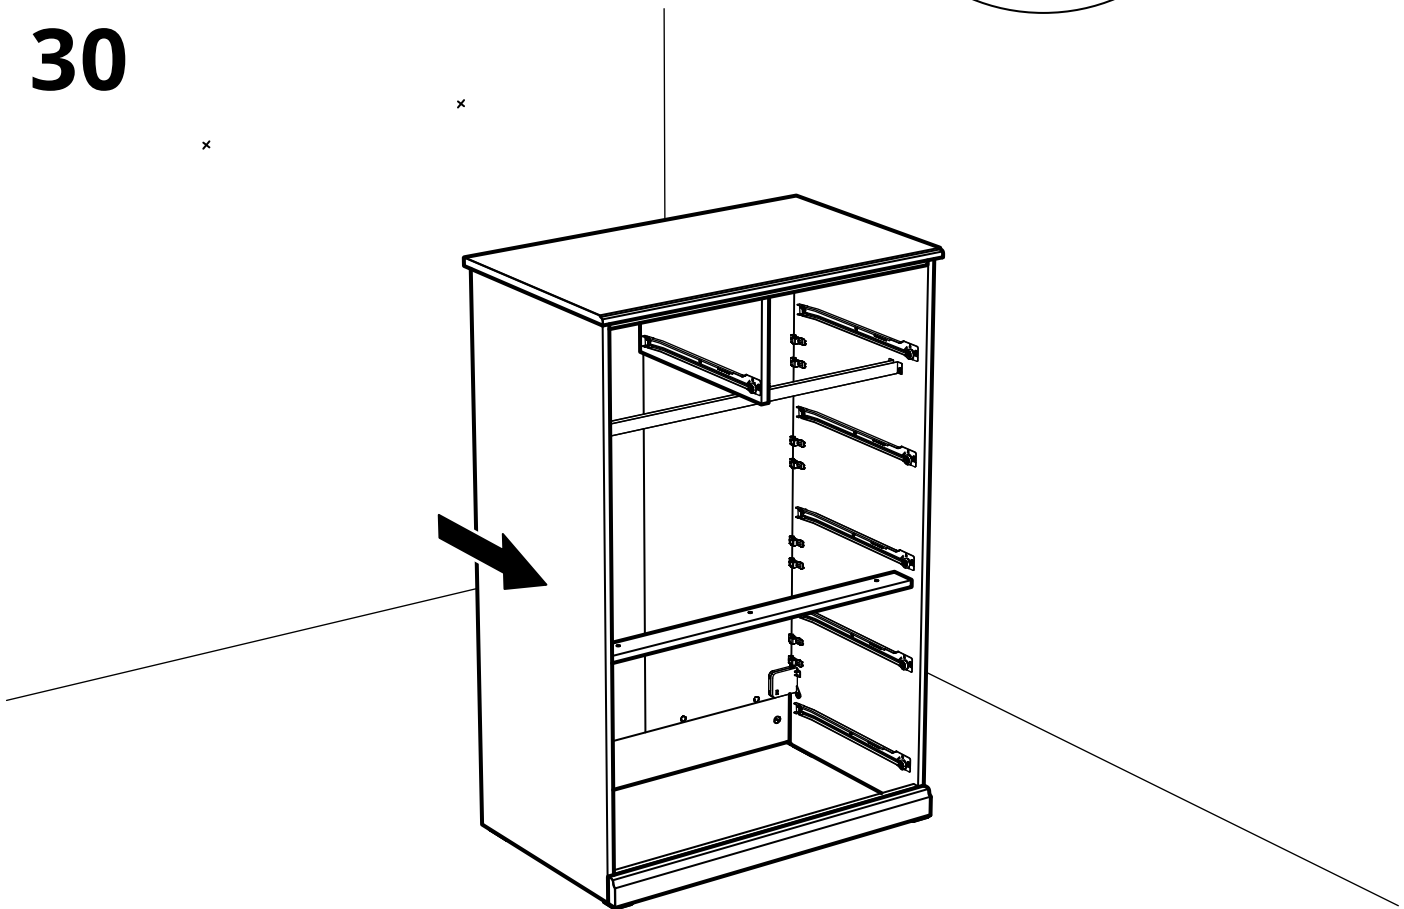 




www.IKEA.com/secure-it

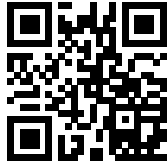 

www.IKEA.cn/secure-it

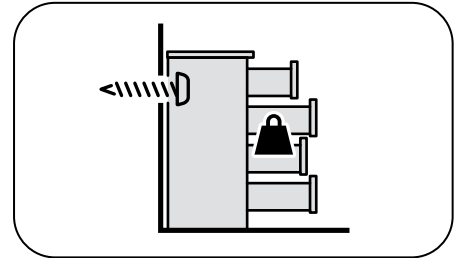 

31

English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

A

Ø 8 mm (5/16")

1

70 mm (2 3/4")

2

25

B

Ø 8 mm (5/16")

1

≈ 30 mm (≈ 1 1/4")

2

26

 
C

Ø 3 mm (1/8")

1


≈ 30 mm (≈ 1 1/4")

28


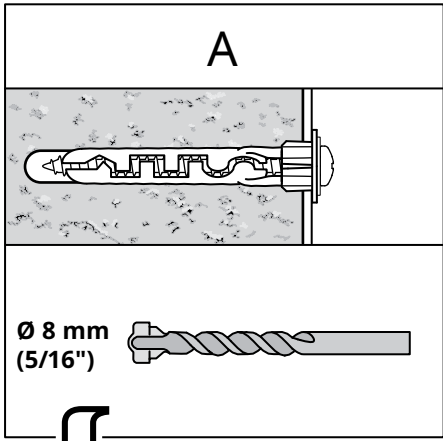




32

 x

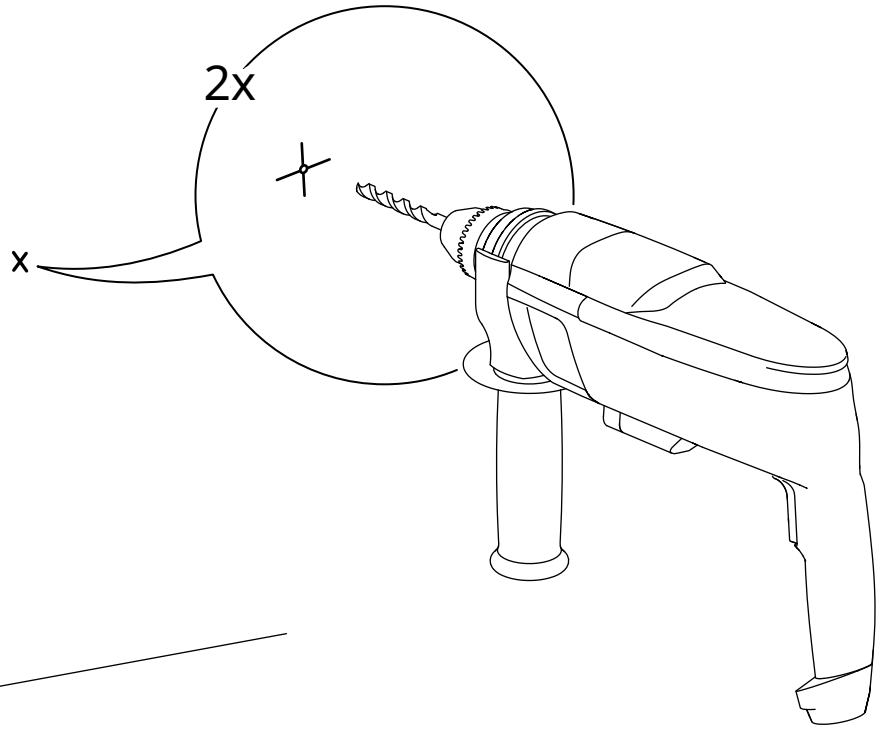


33


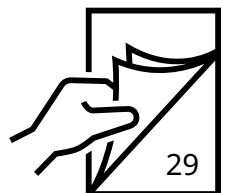 
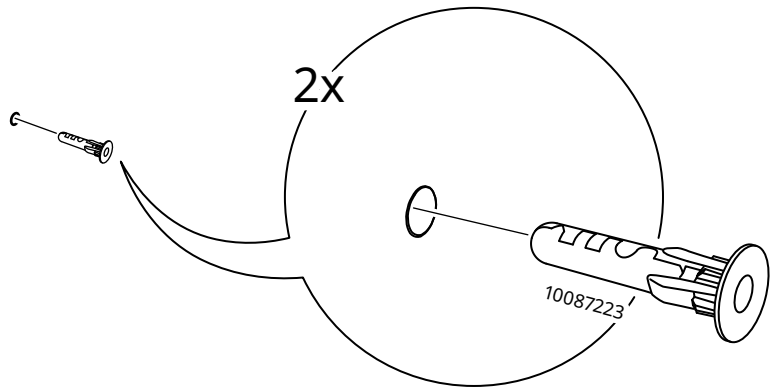 


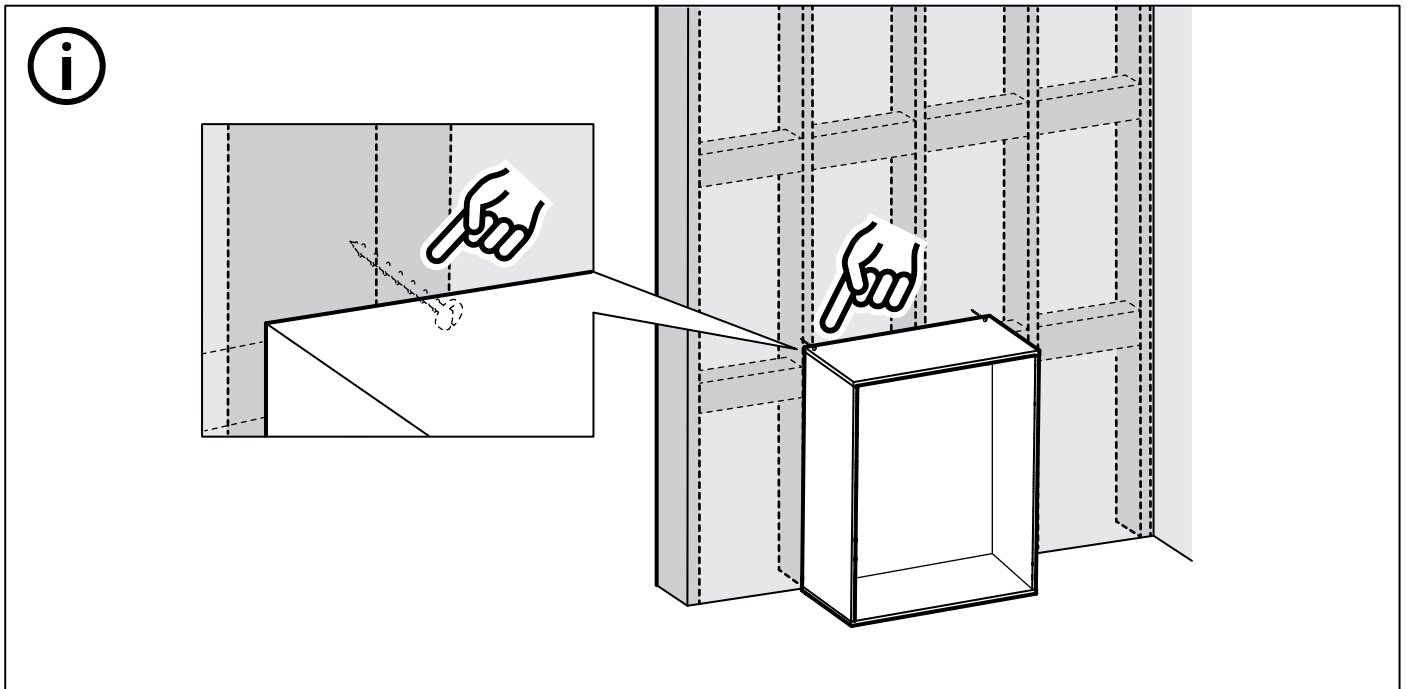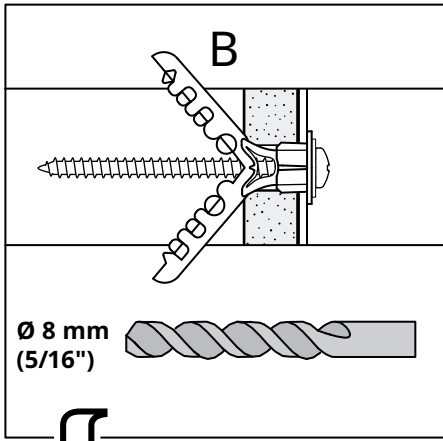  


32

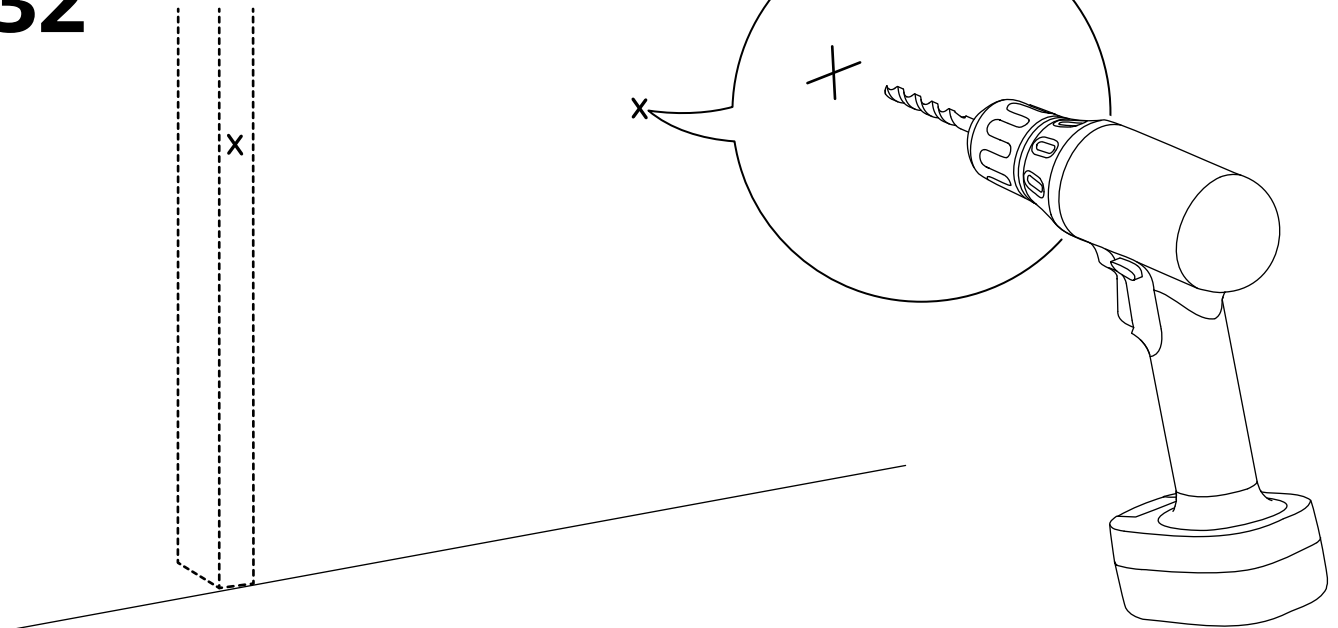 



33

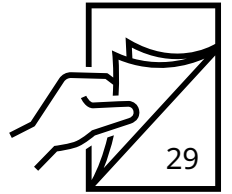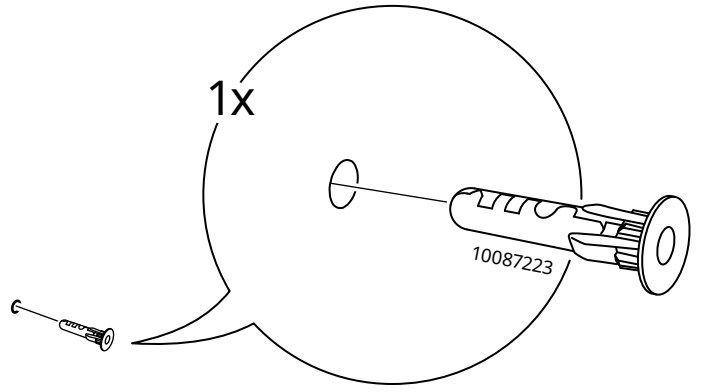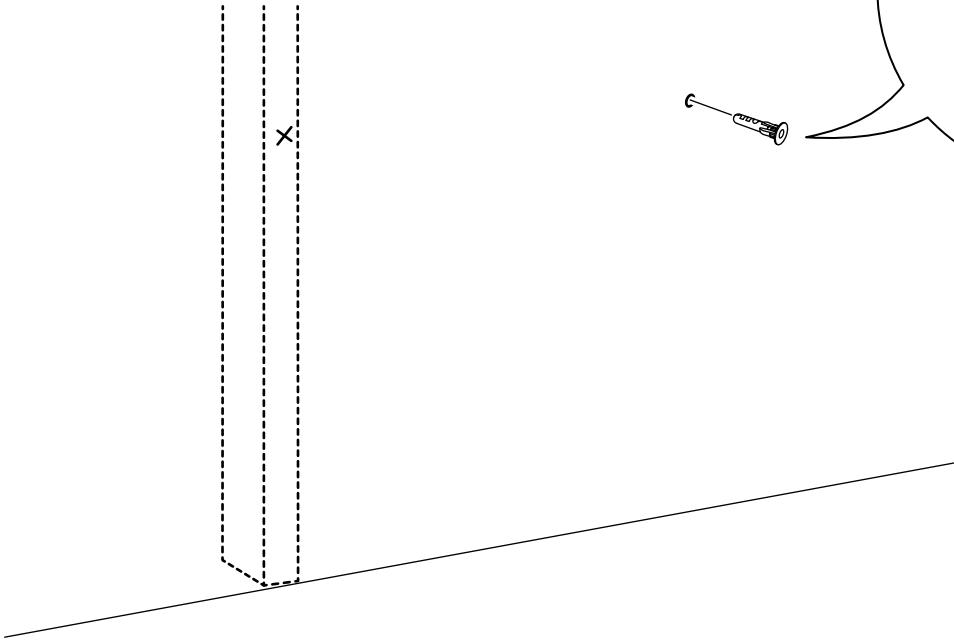   


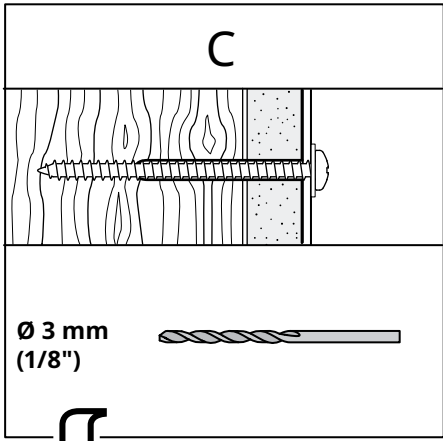 


32

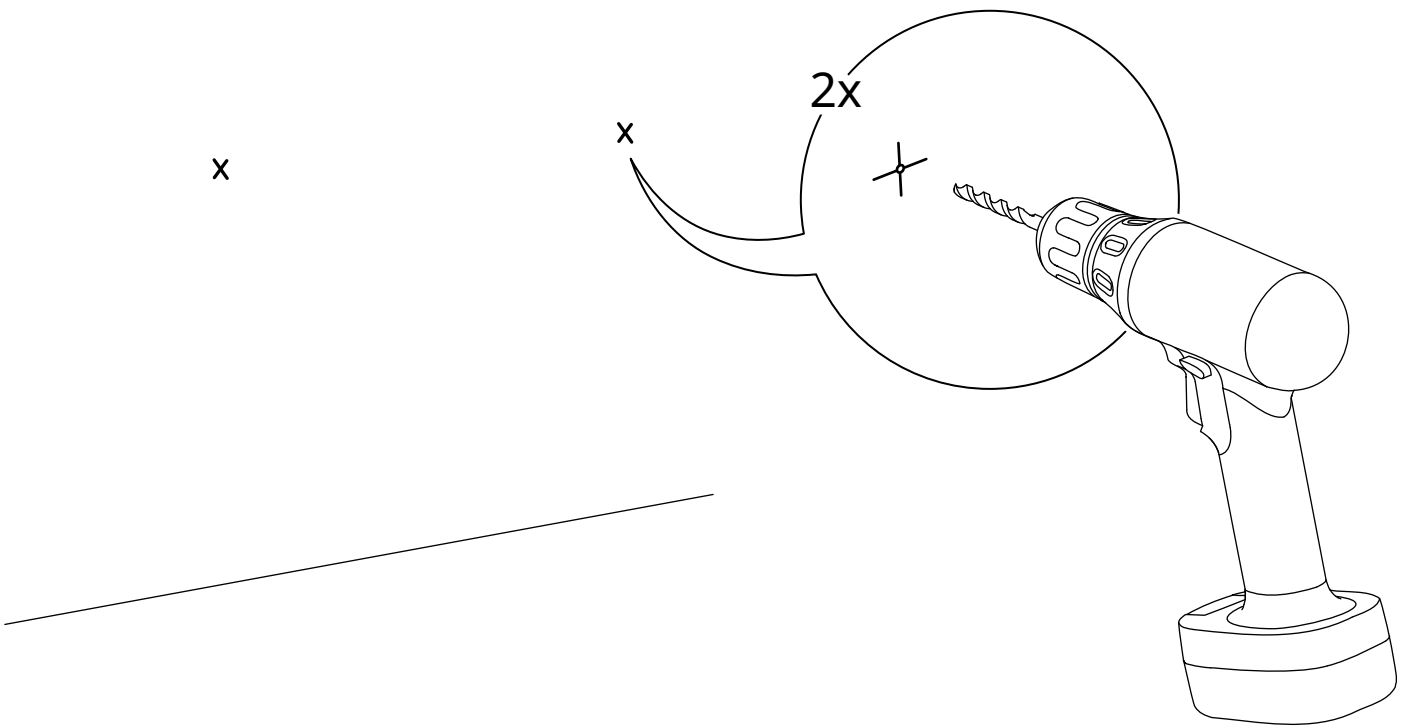 

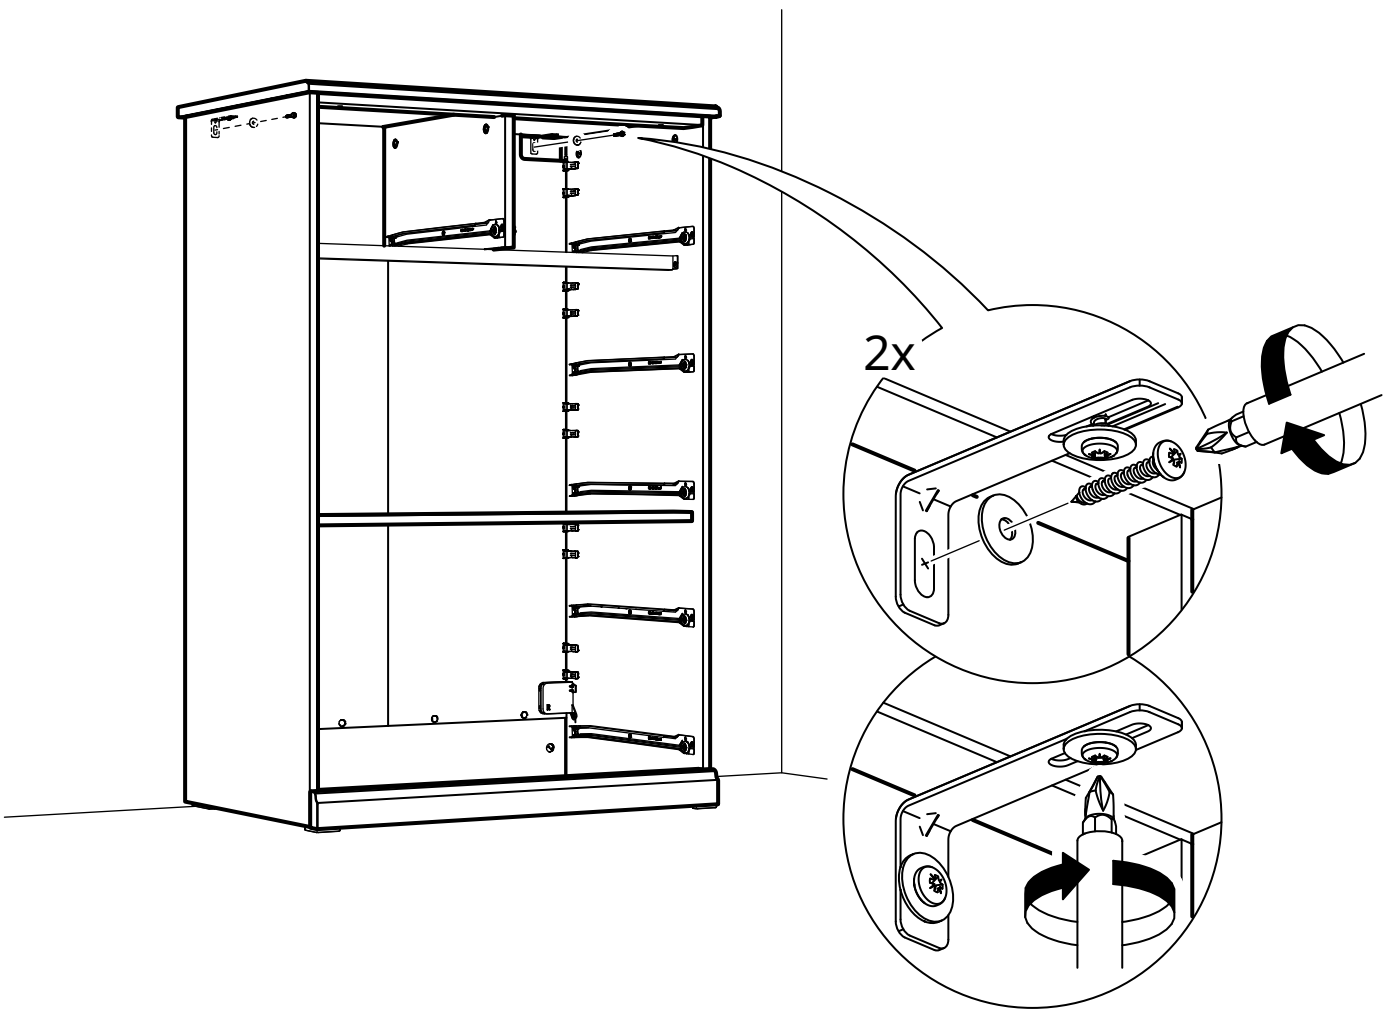 

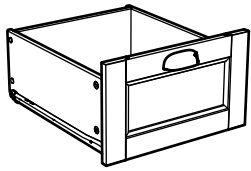 


2x

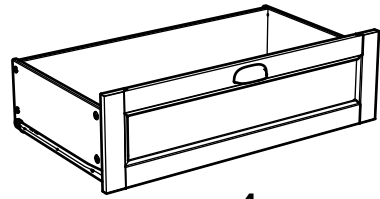 


4x



  
35

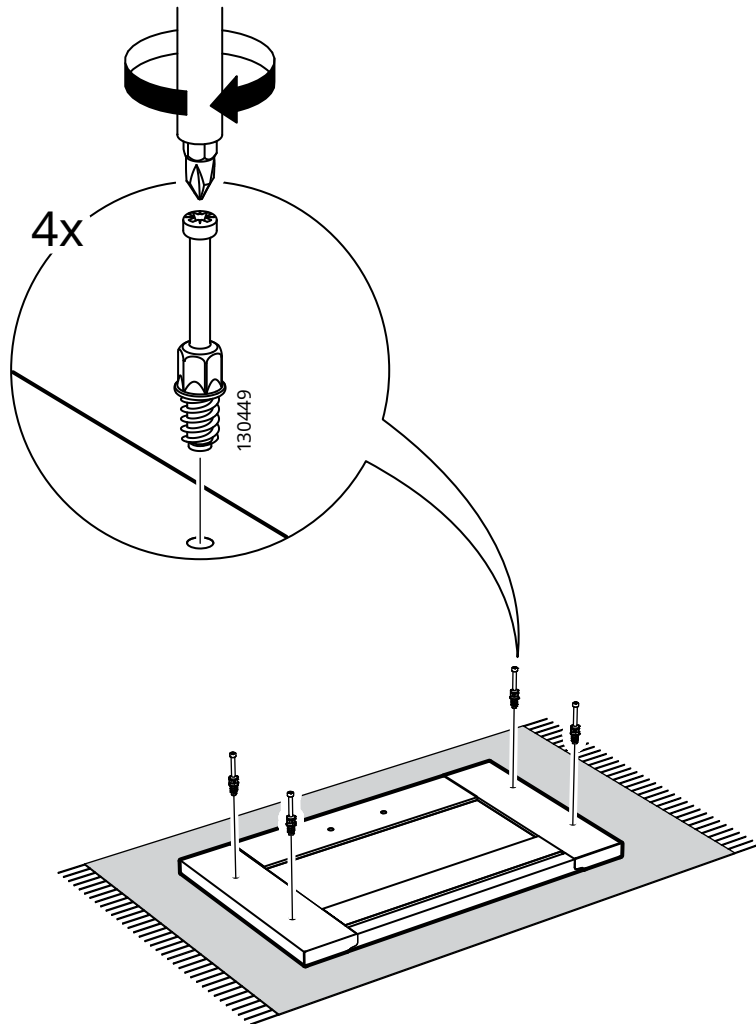

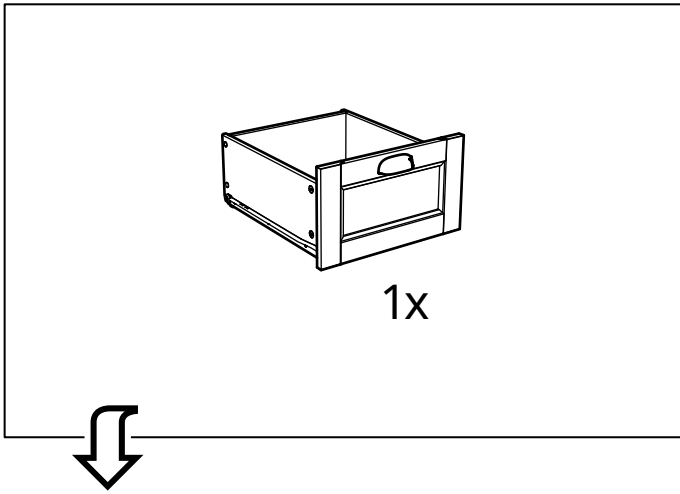

1x



 
36

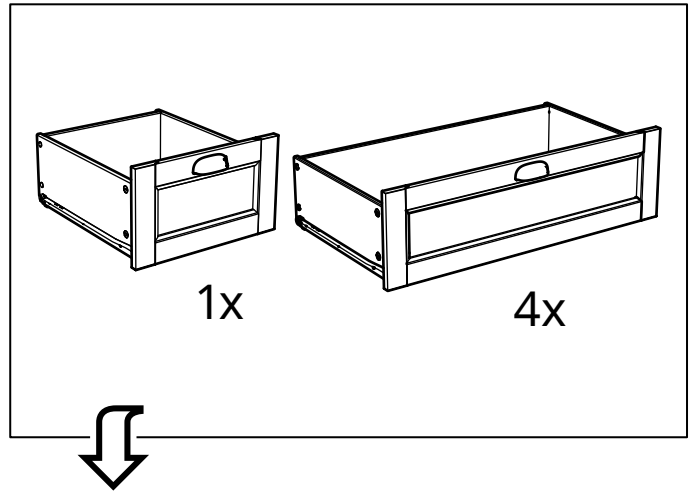


1x


4x

    37

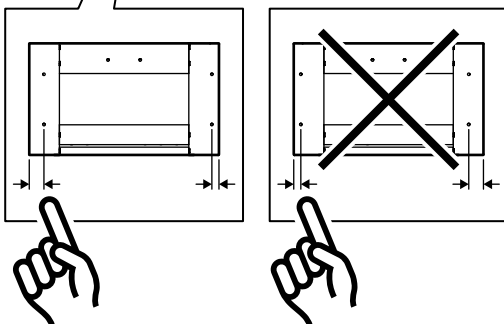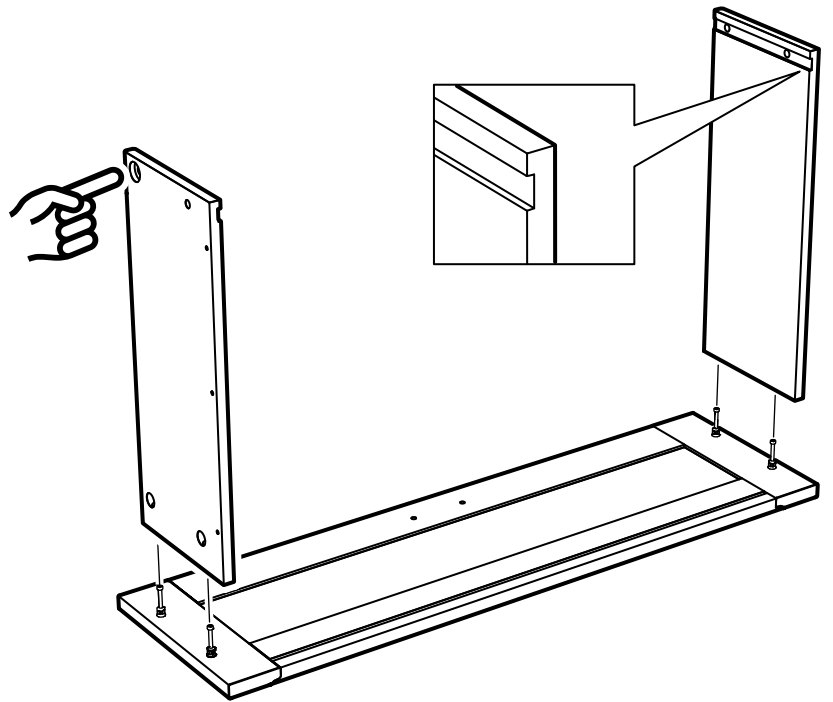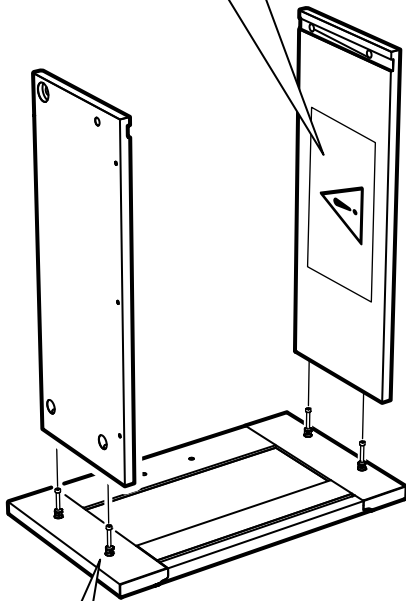

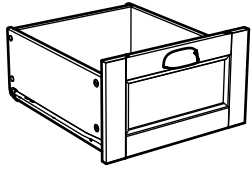


2x

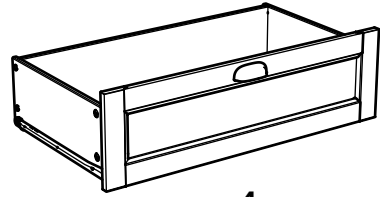 


4x





 38



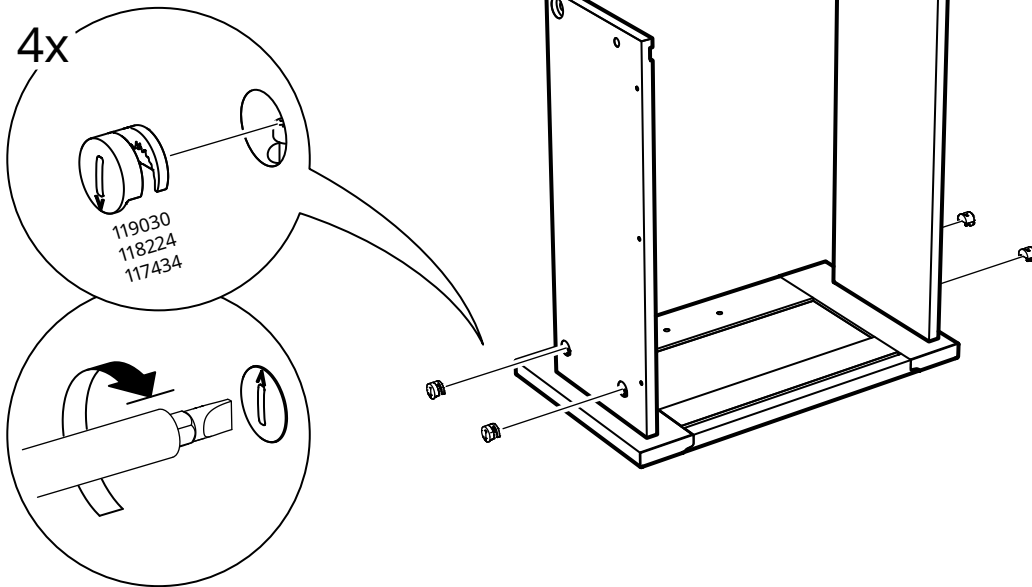


39

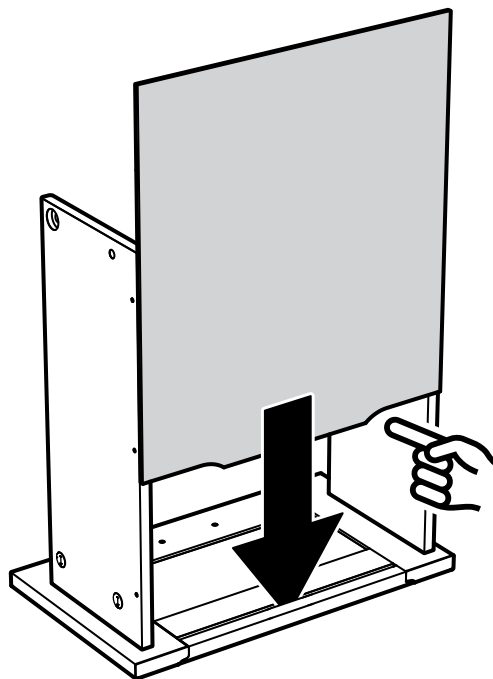 


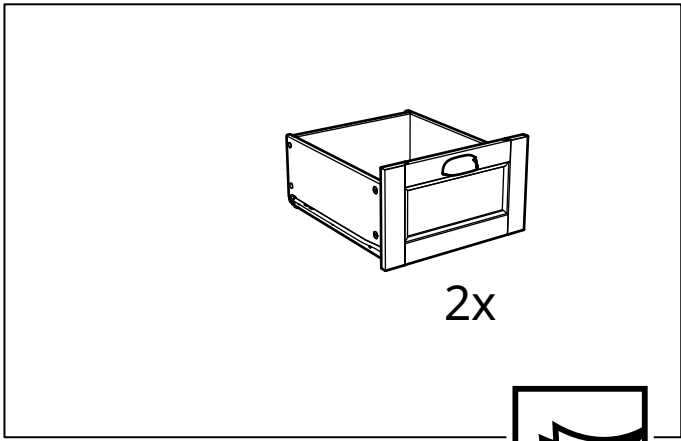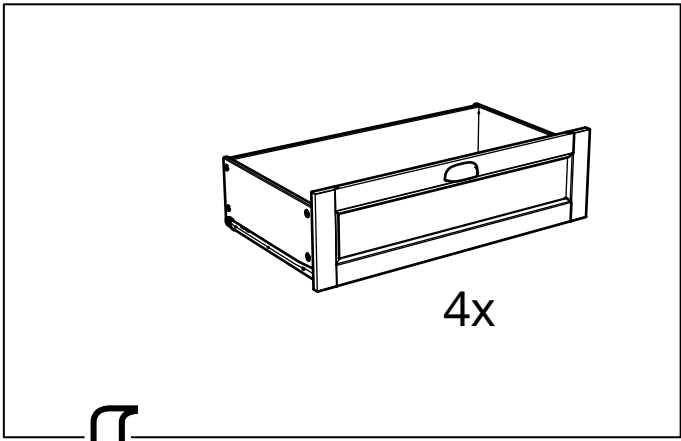  


40

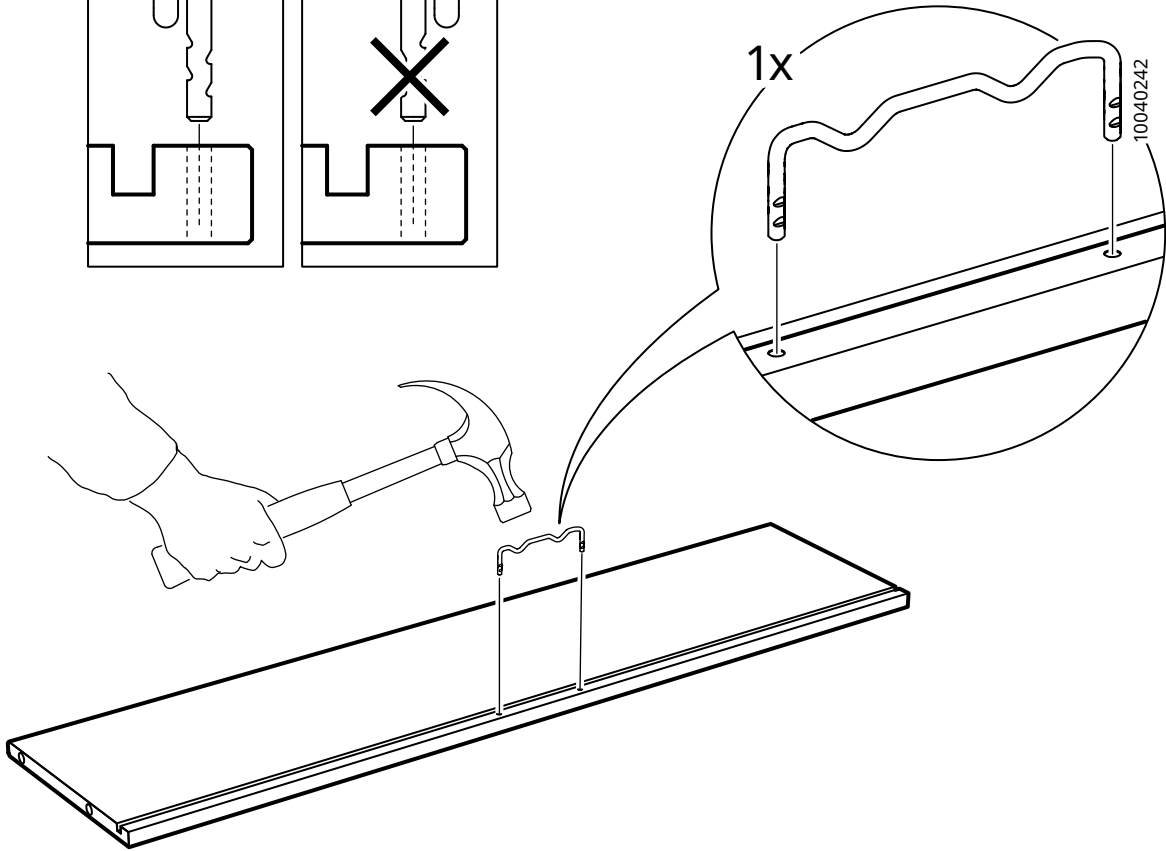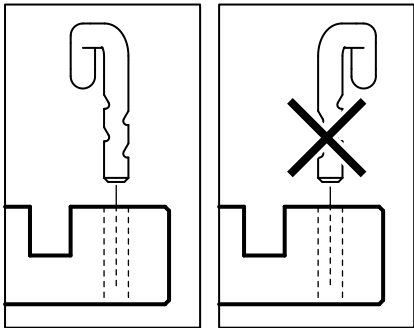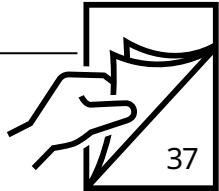   


41

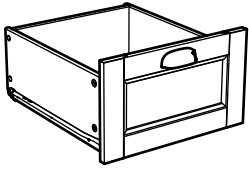 


2x

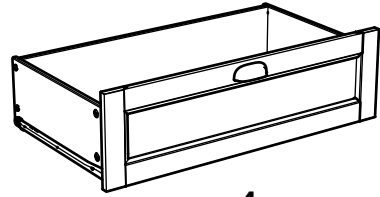 


4x

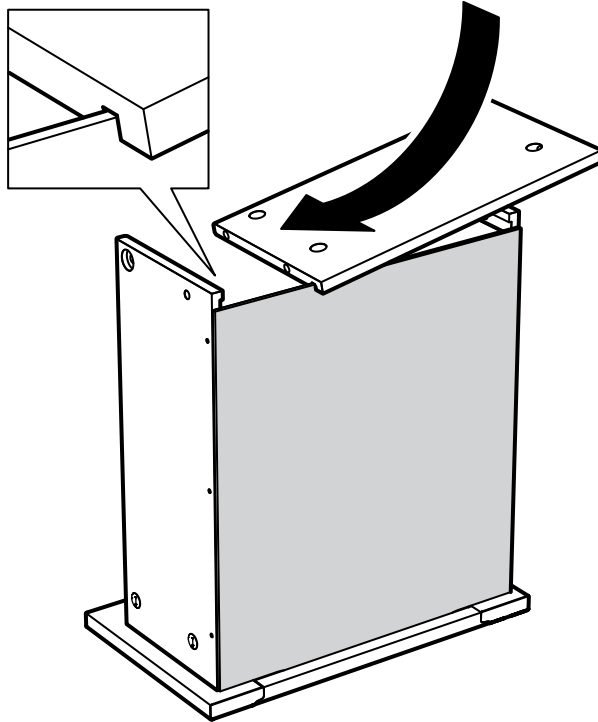 


42

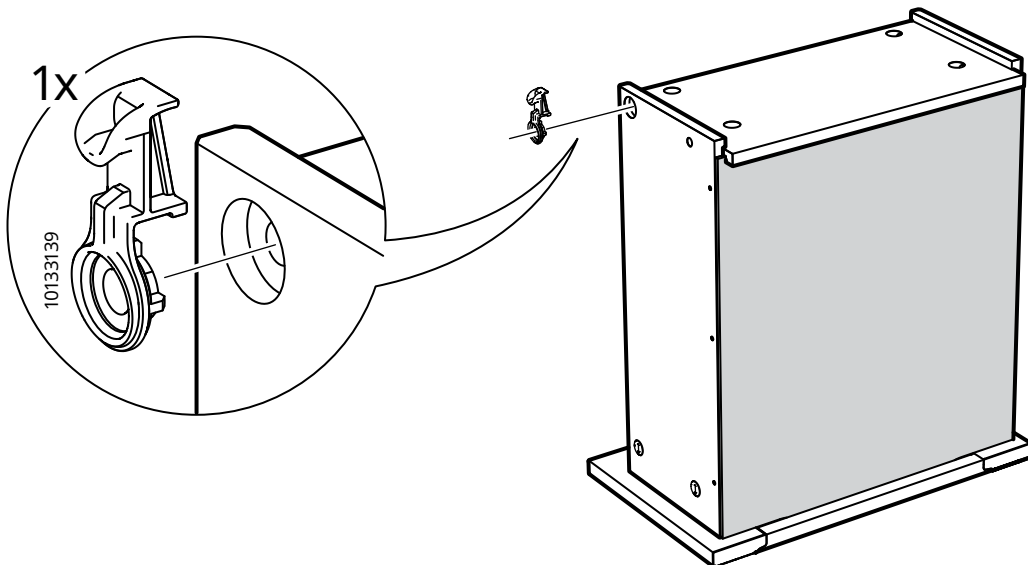 


43

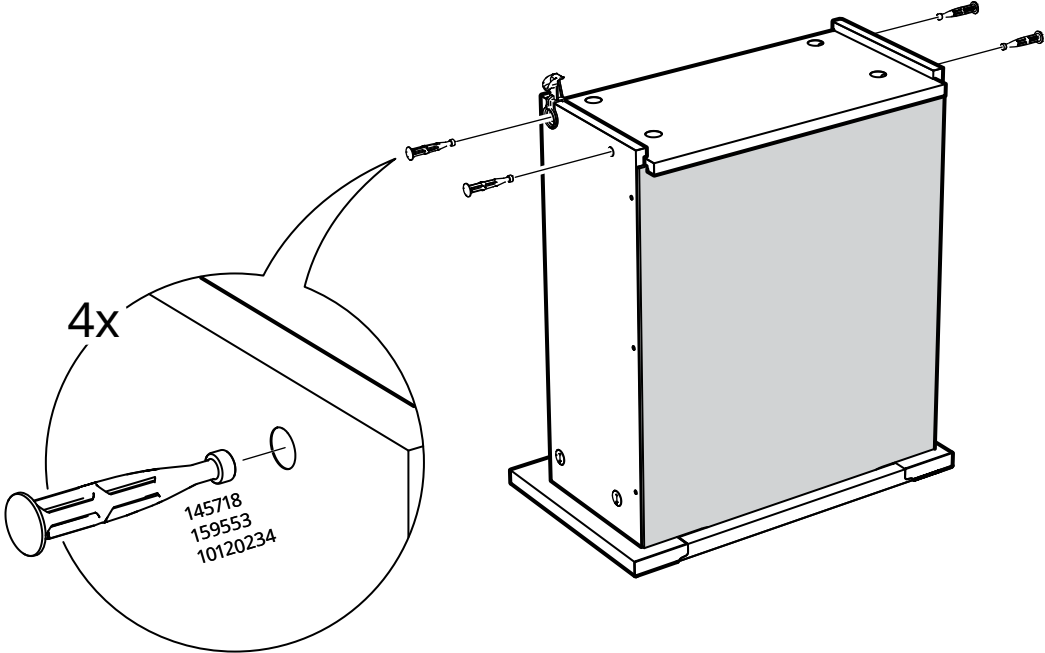 


44

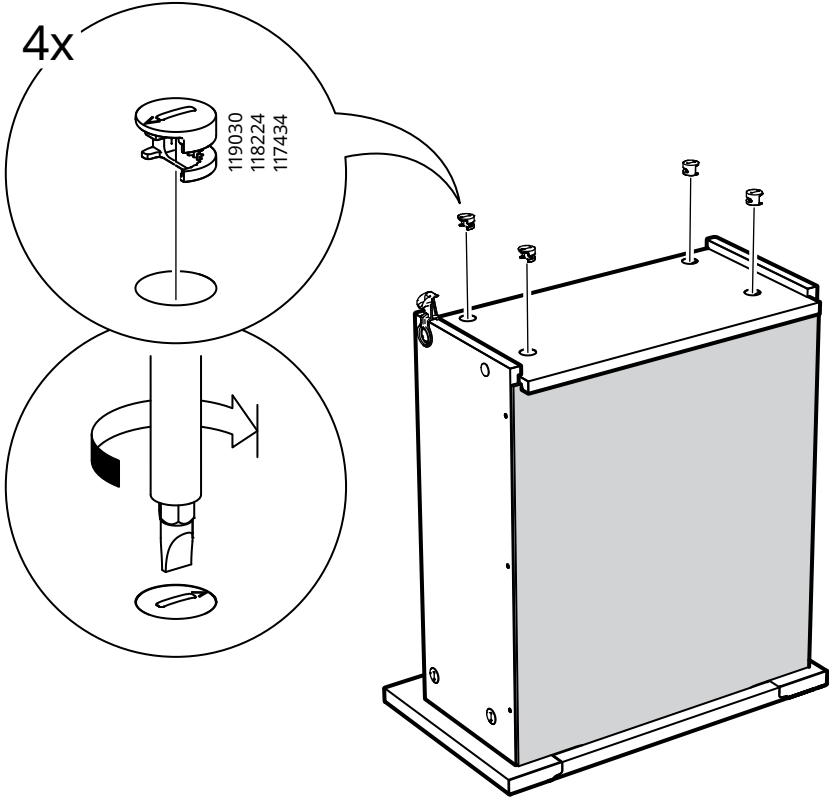 




45

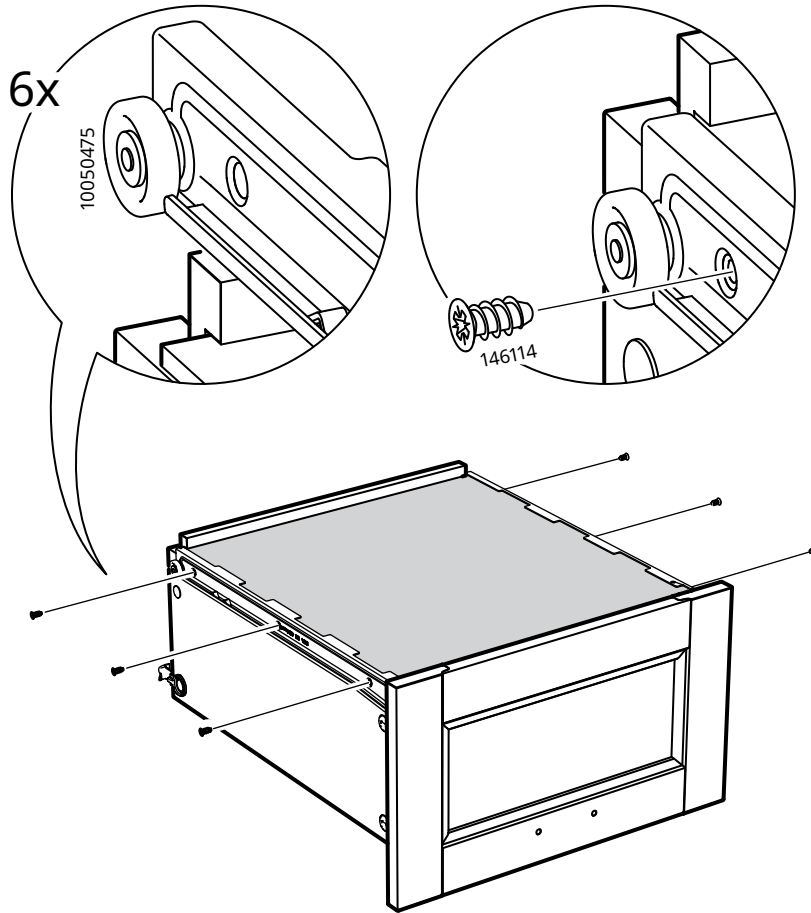 


46

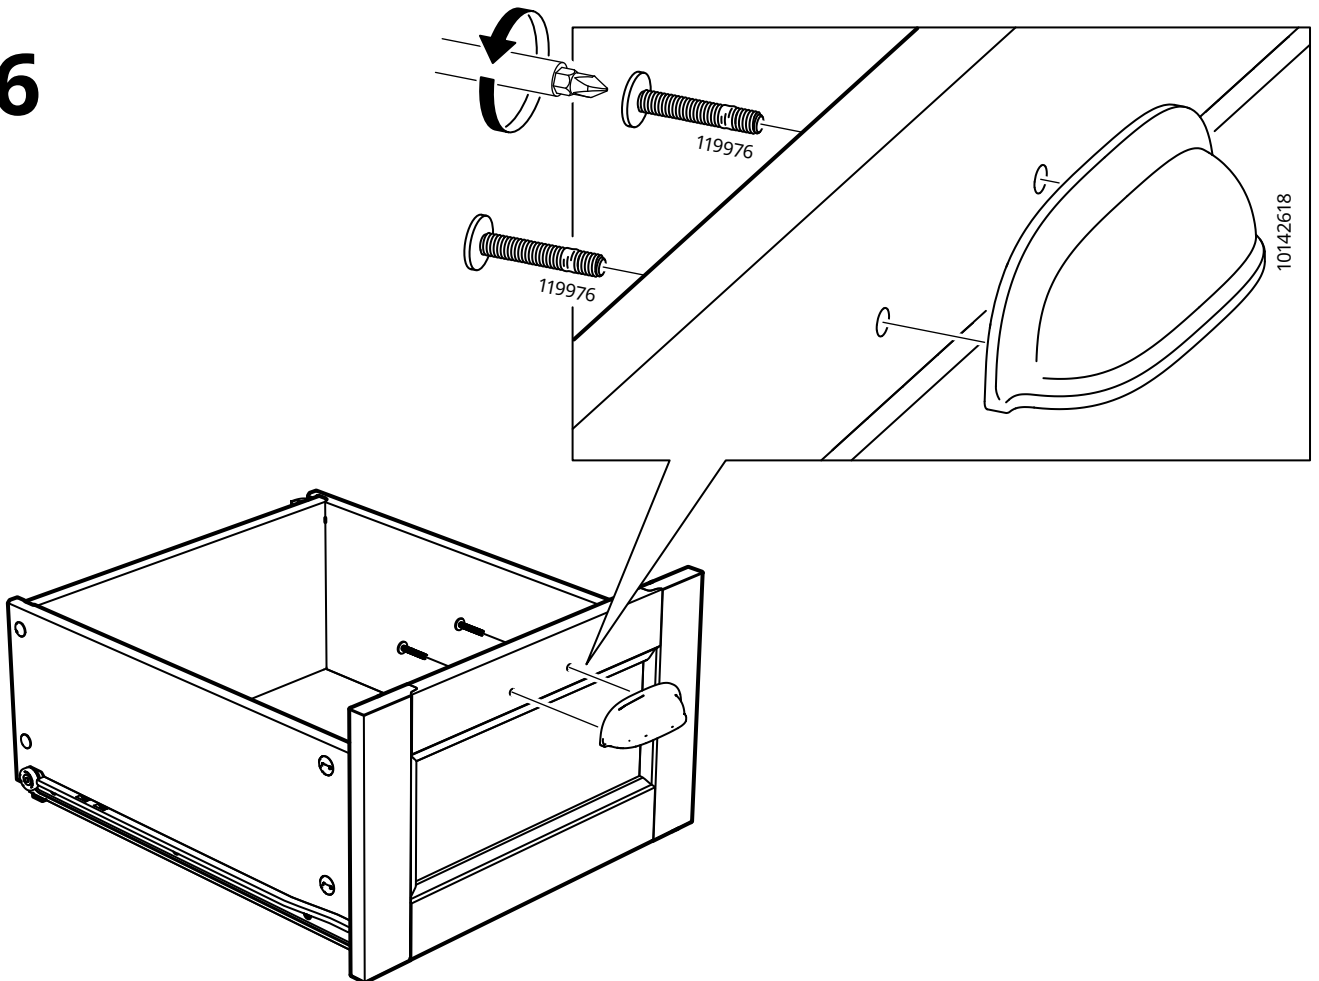 



47

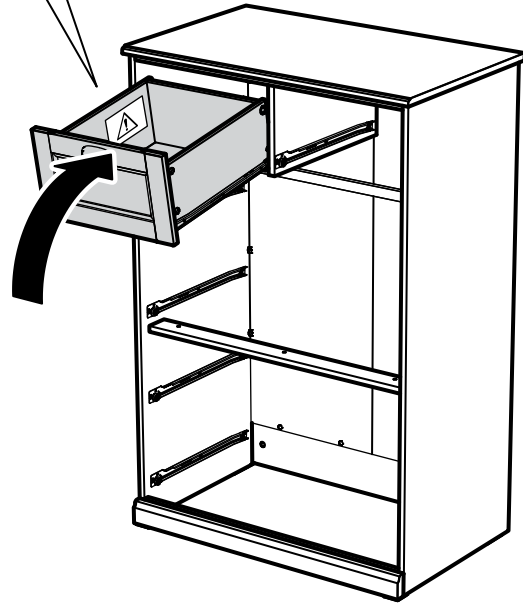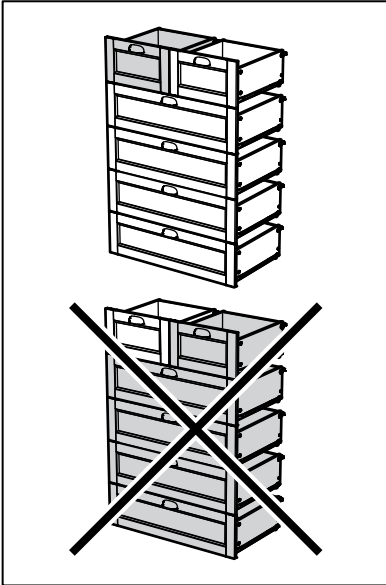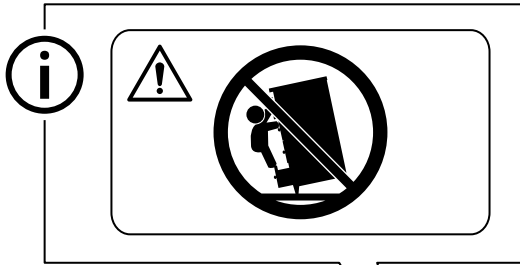   

48

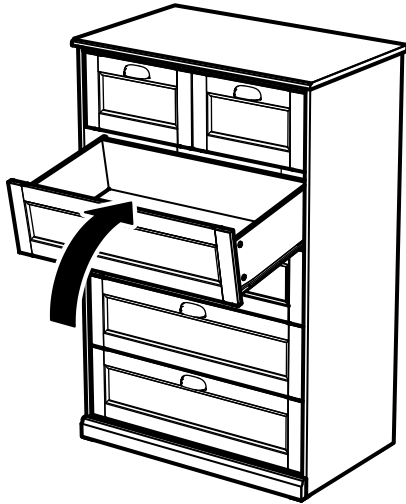 

1

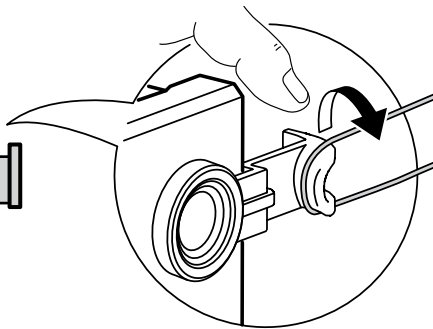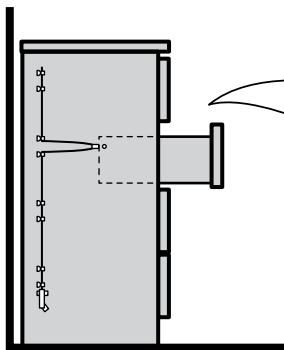  

2

