 


FÅGELFJÄLLET

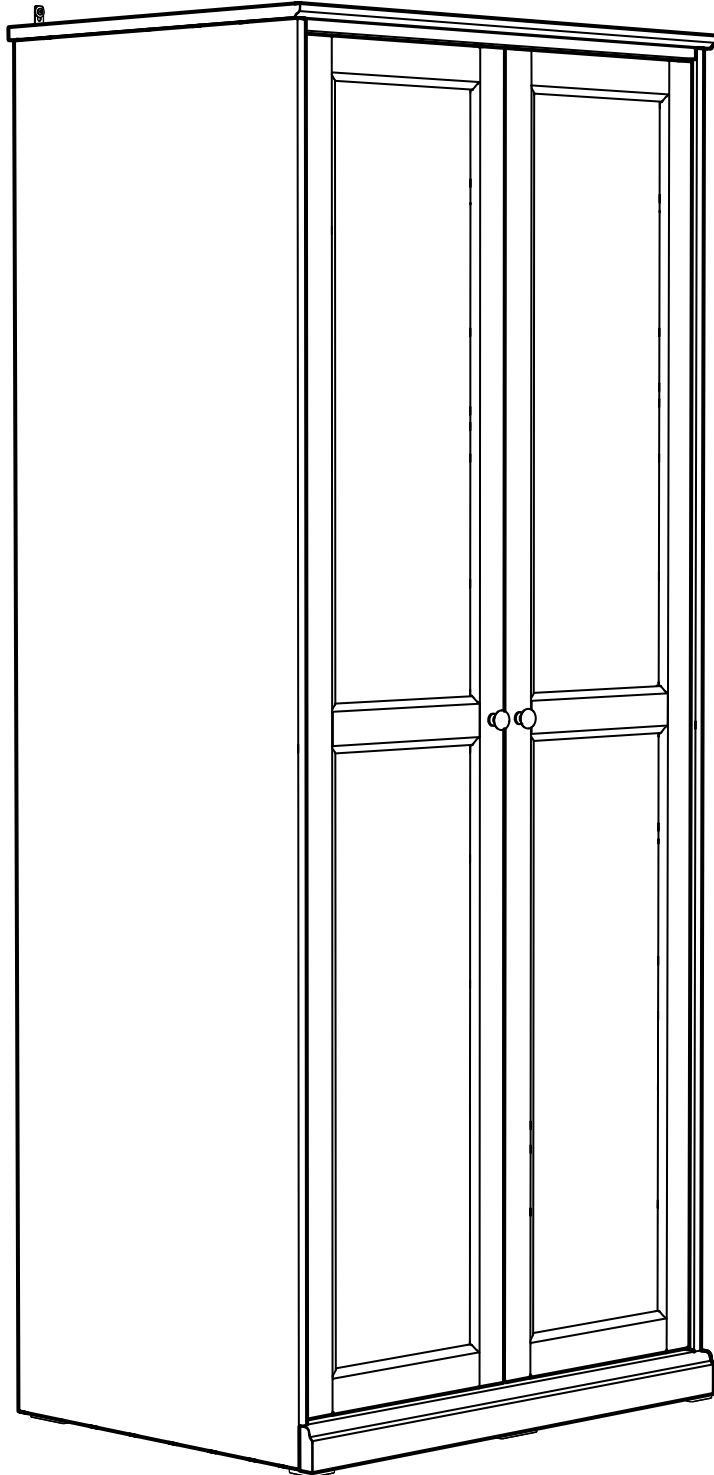

Design and Quality
IKEA of Sweden



English

WARNING!

Children have died from furniture tipover.

To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

 
 
NEVER put a TV on this product.


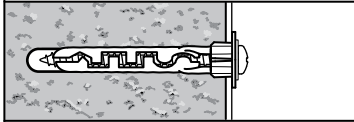 
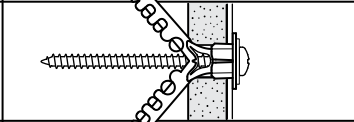 
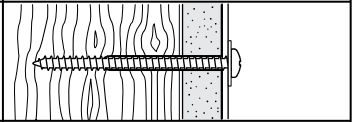 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.




NEVER open more than one drawer at a time.

Place heaviest items in the lowest drawers.


Read and follow each step of the instruction carefully.

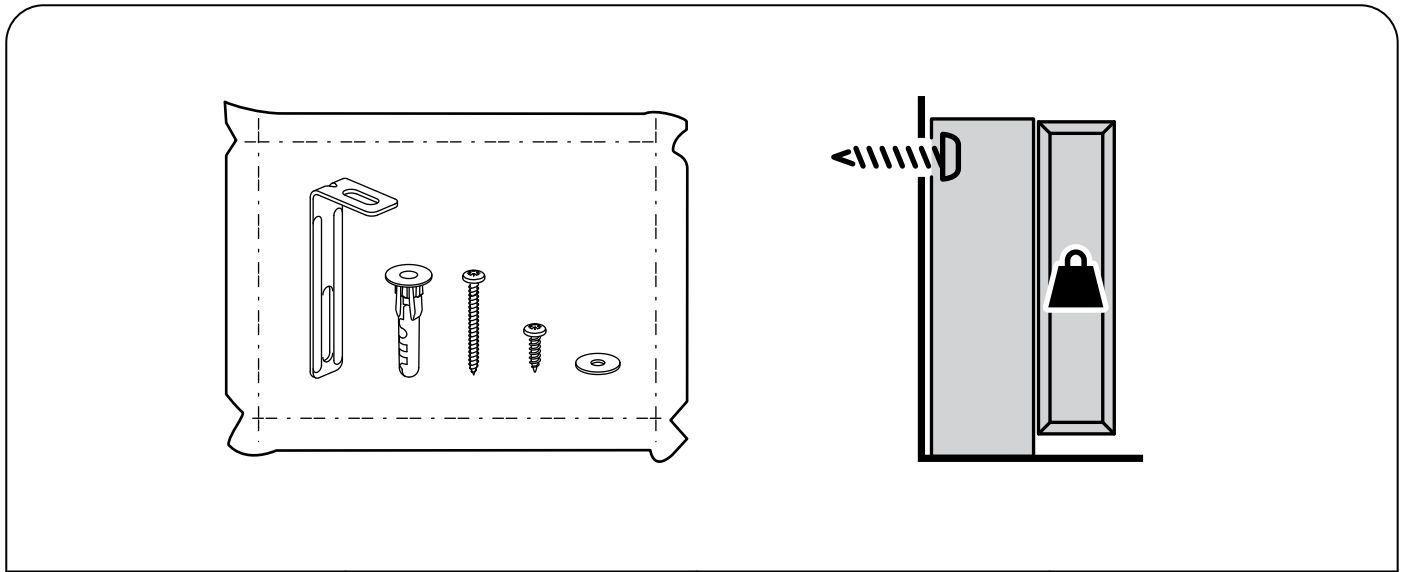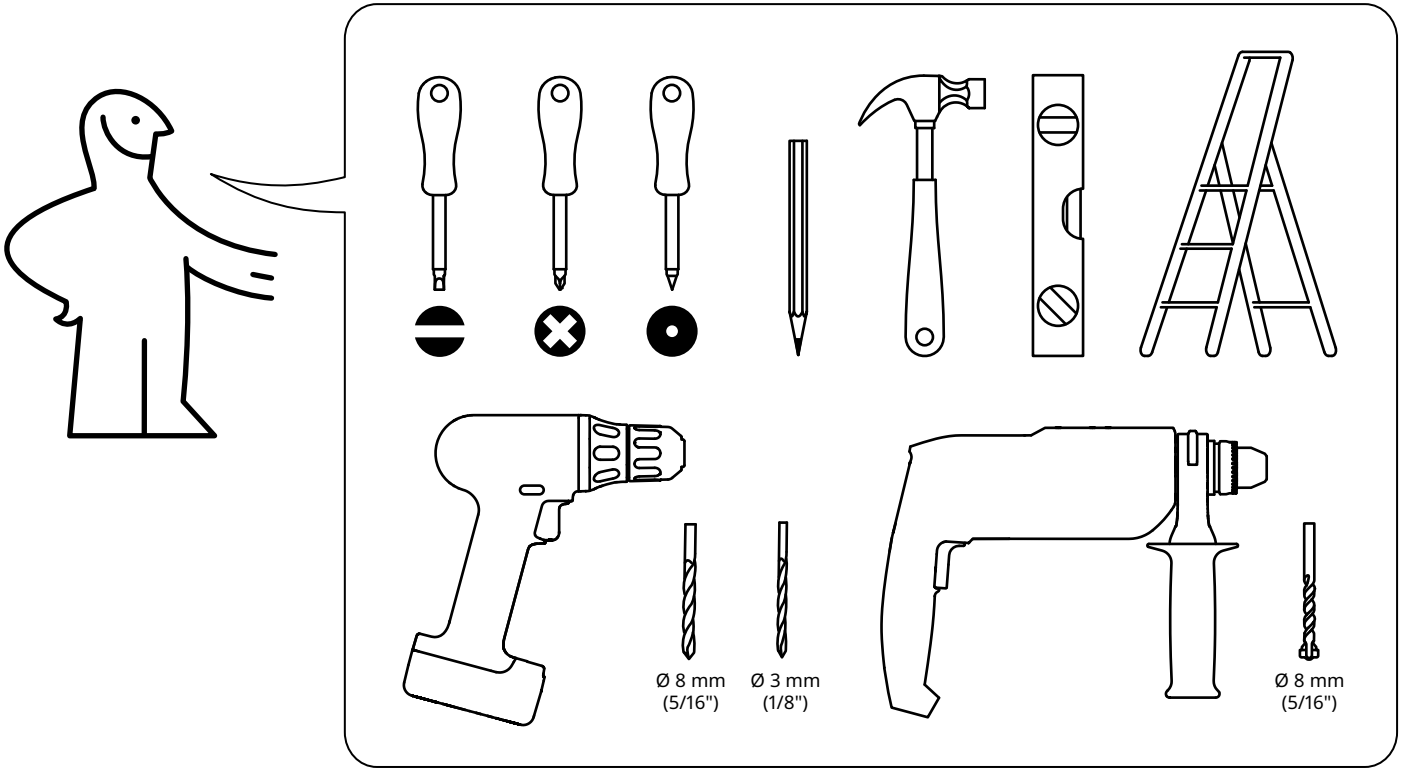

	A	B	C
			
<p>www.IKEA.com/secure-it</p>	<p>Ø 8 mm (5/16")</p>	<p>Ø 8 mm (5/16")</p>	<p>Ø 3 mm (1/8")</p>

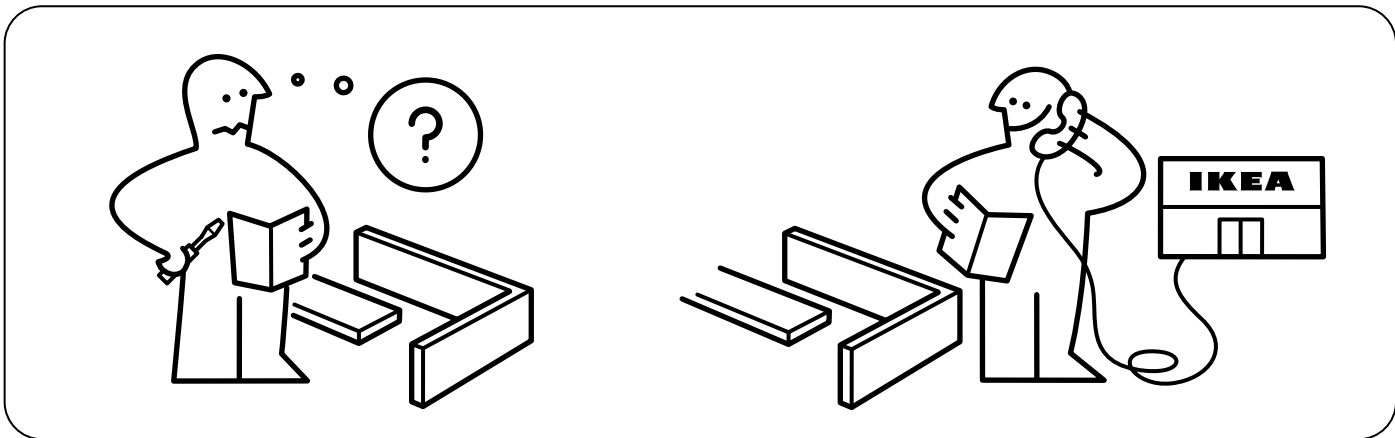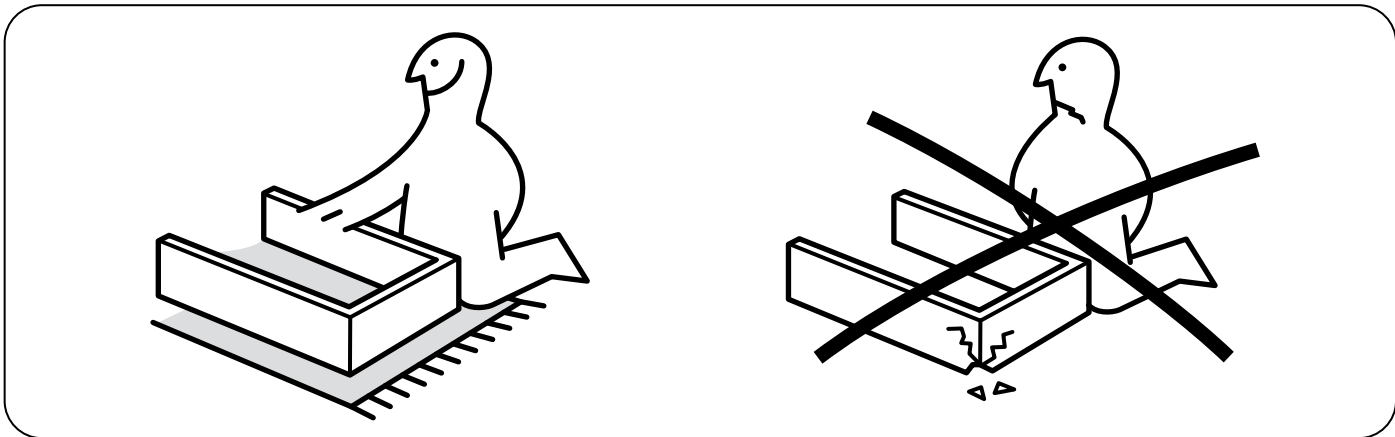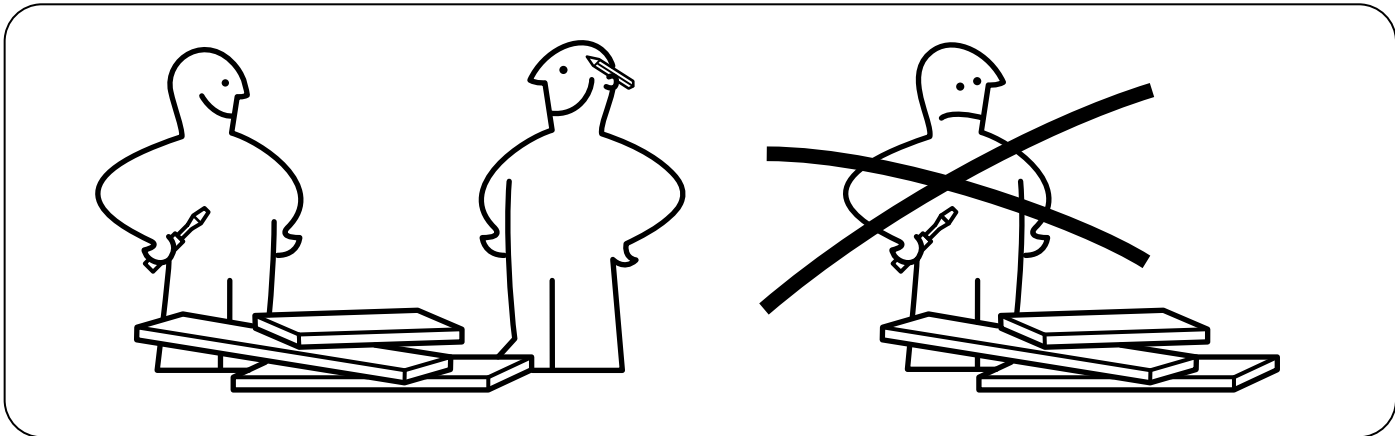   


1

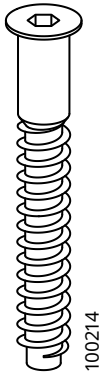 

100214

 3x




100217

1x




118331

 21x




105248

 6x




108098

 1x




101345

 18x

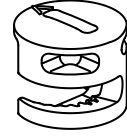


119250
119251
119252

 21x




151708

 4x



151707

 4x

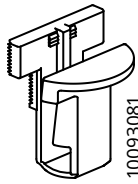


10093081

14x




10093082

 14x




109837
123840
10121196

 4x

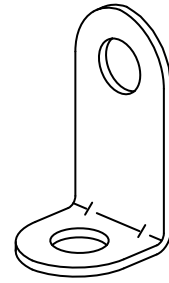


102553

 3x

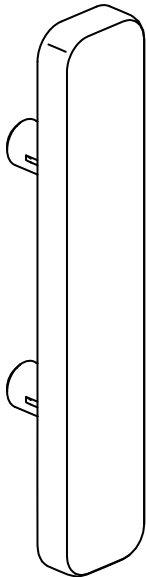


158568
10127144

 3x

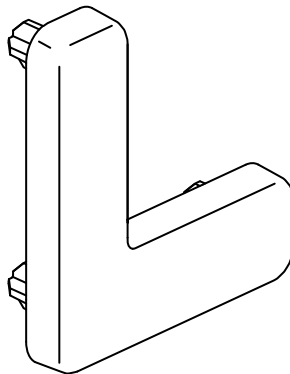

10099967
10101849

 
2x

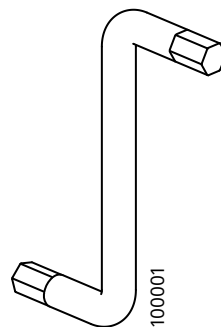

100001

1x

 
2

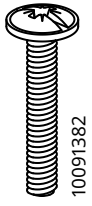


2x



 2x



4x

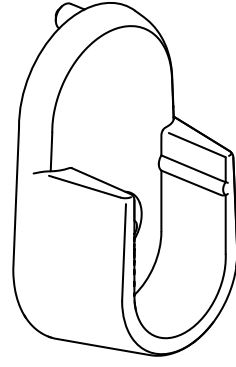 


2x


3



 4x

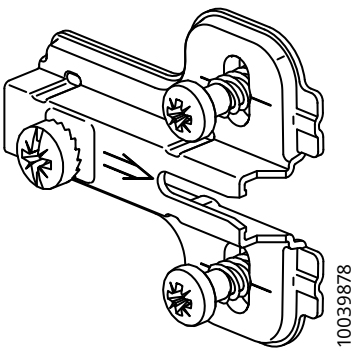



6x

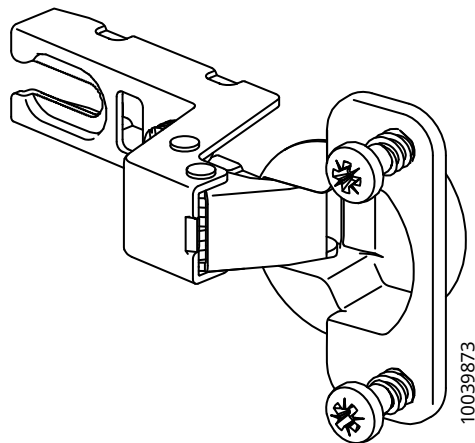 


6x



  
2x

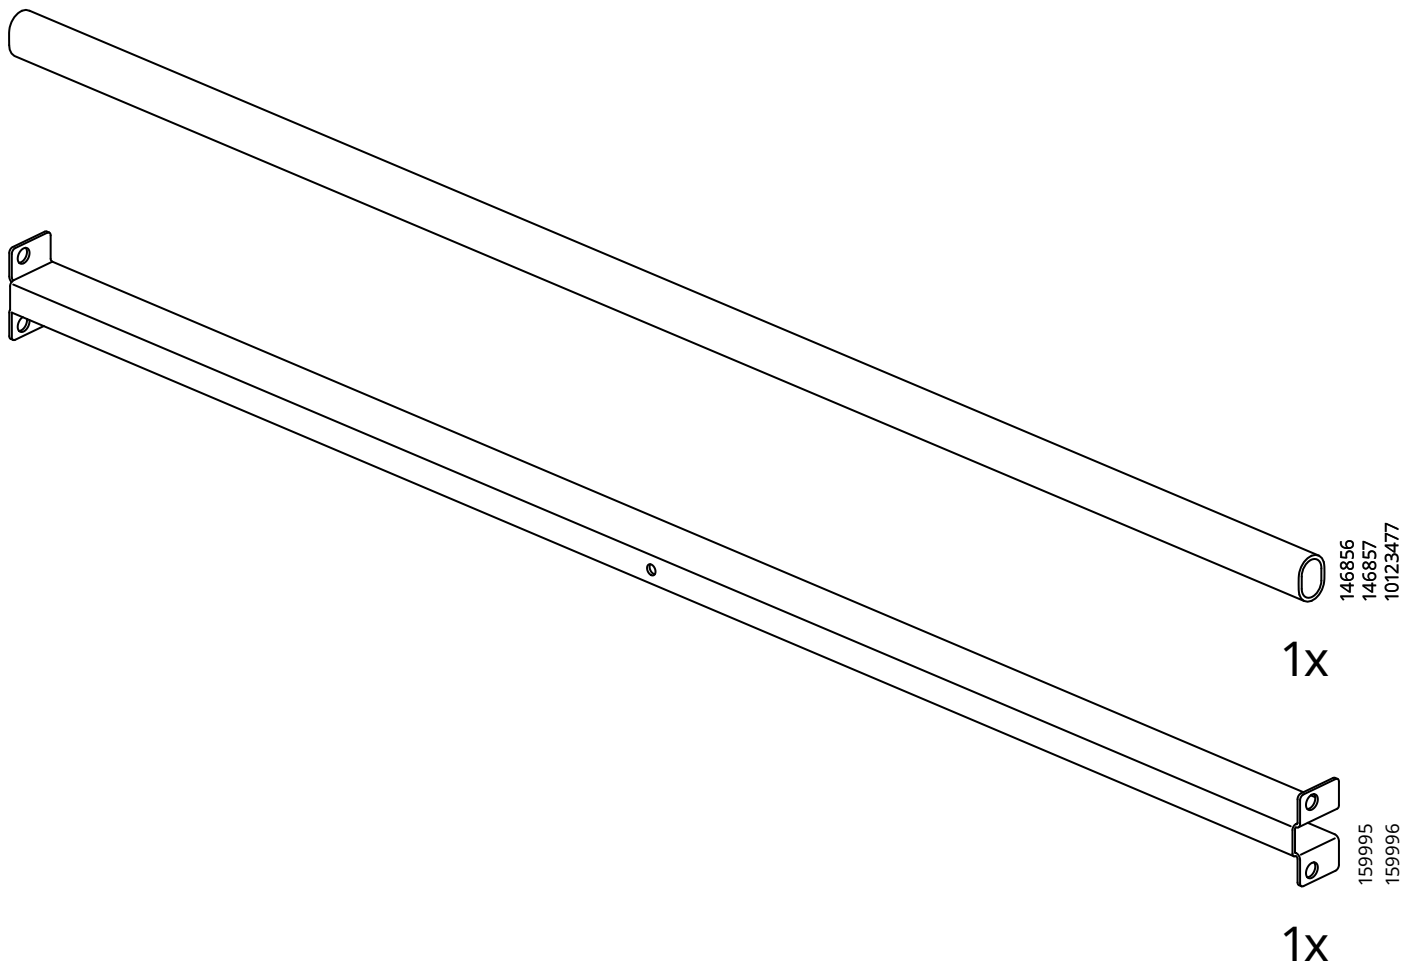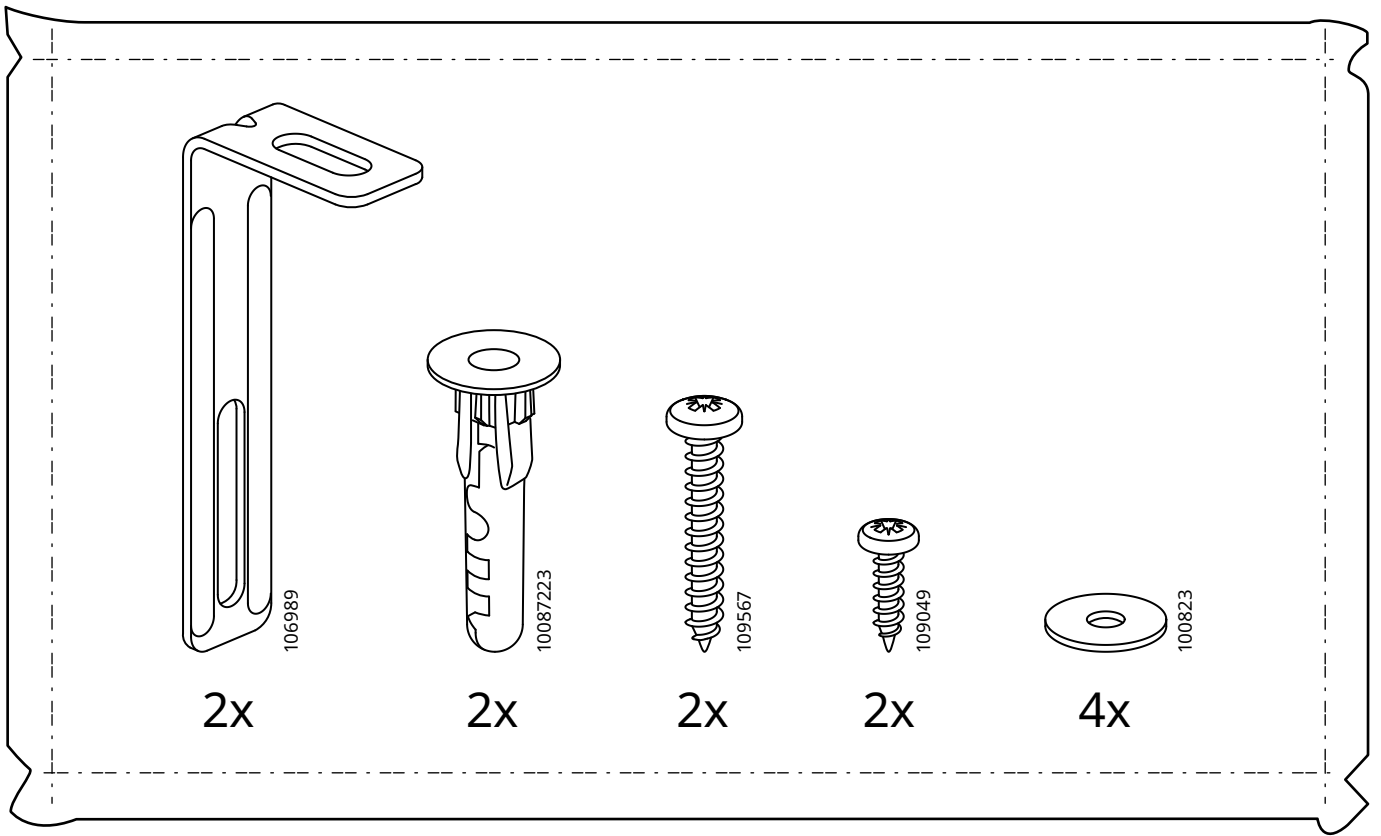




1

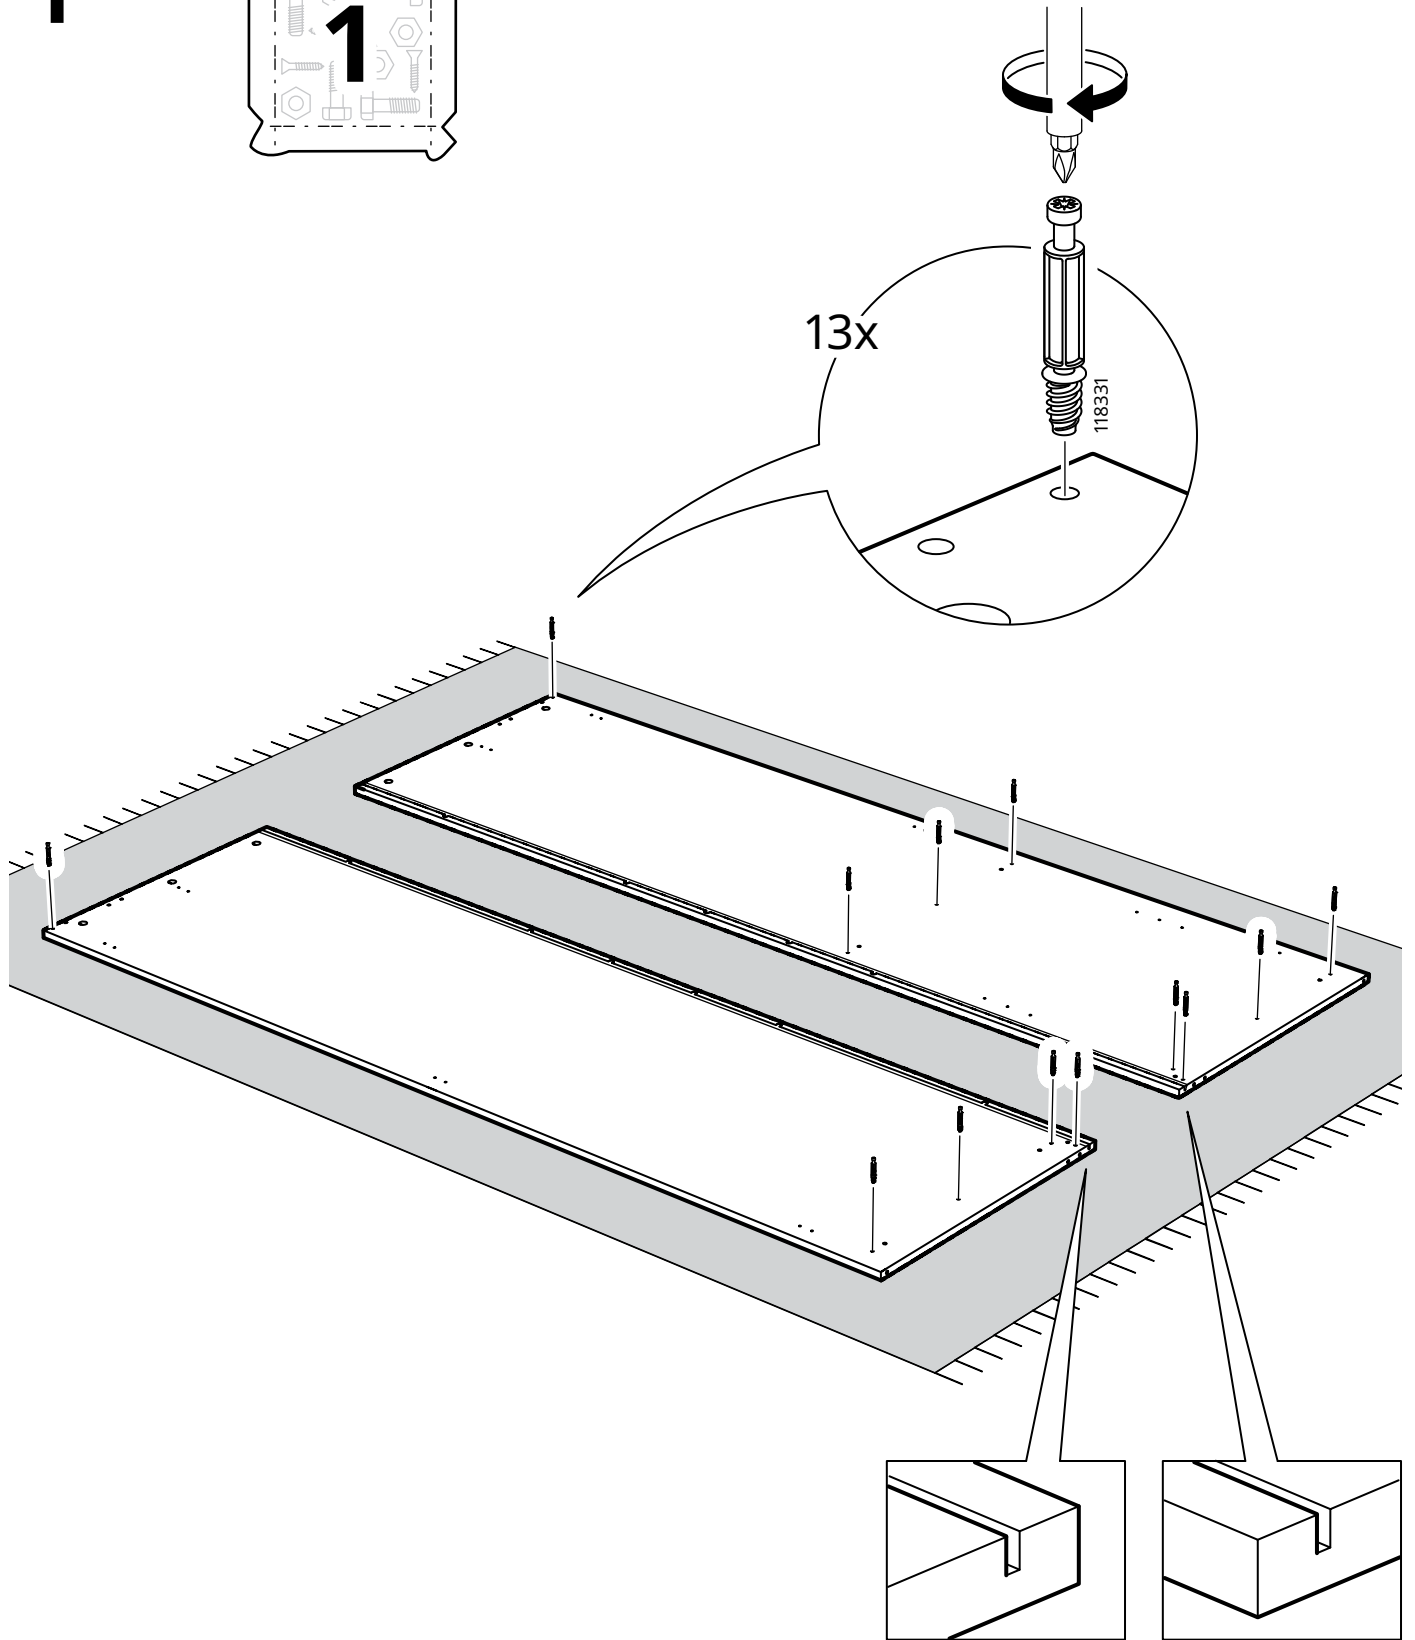 


2

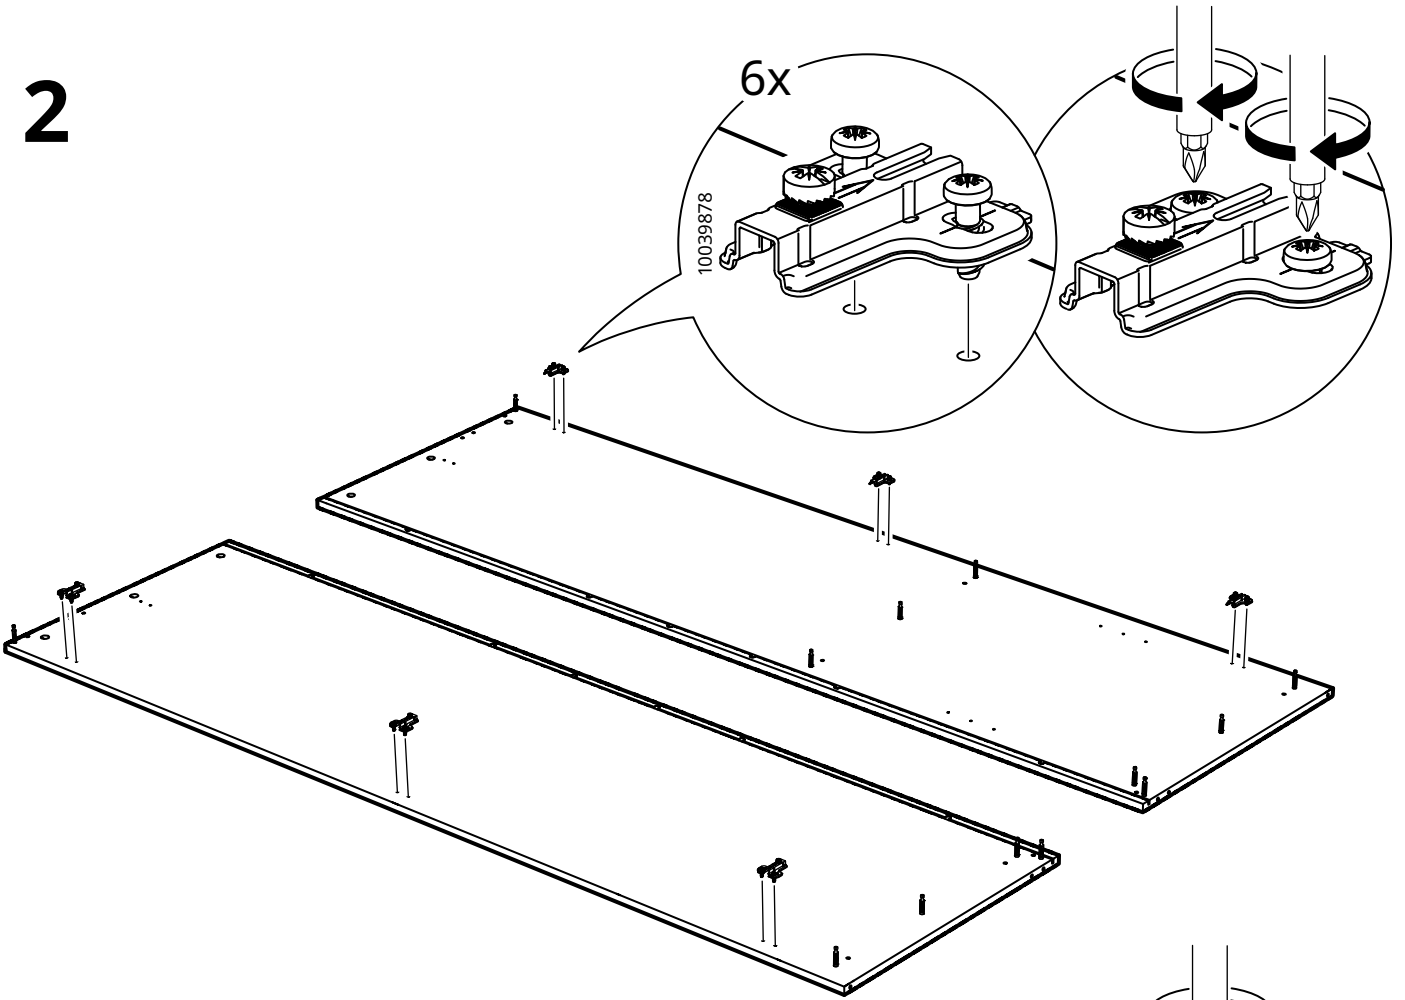 


3

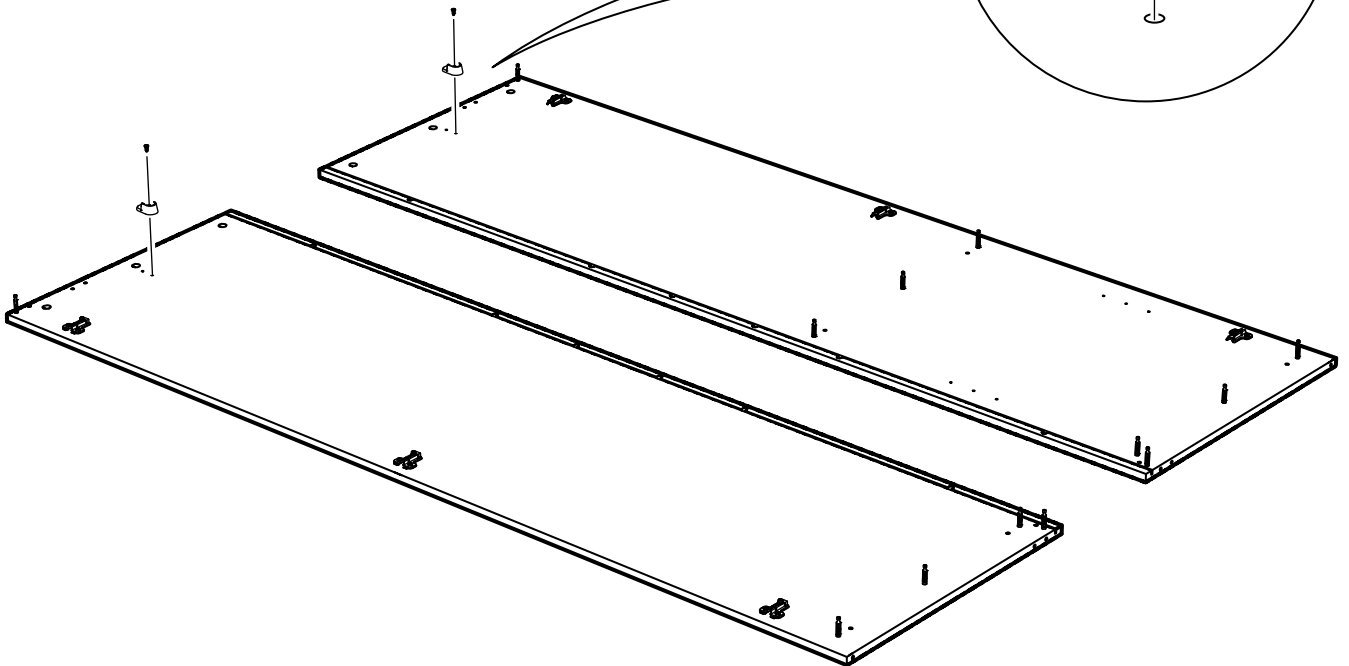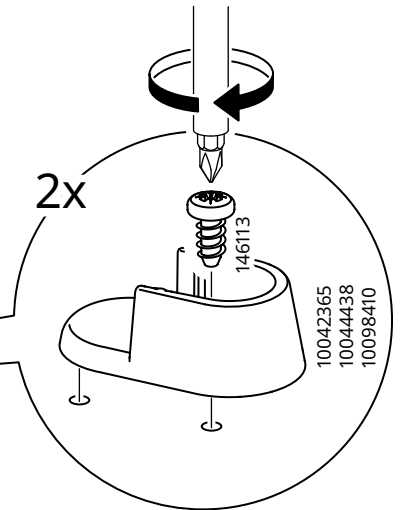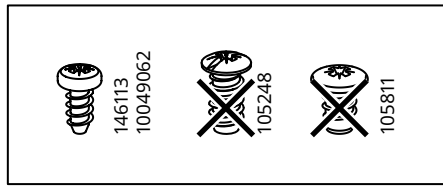   


4

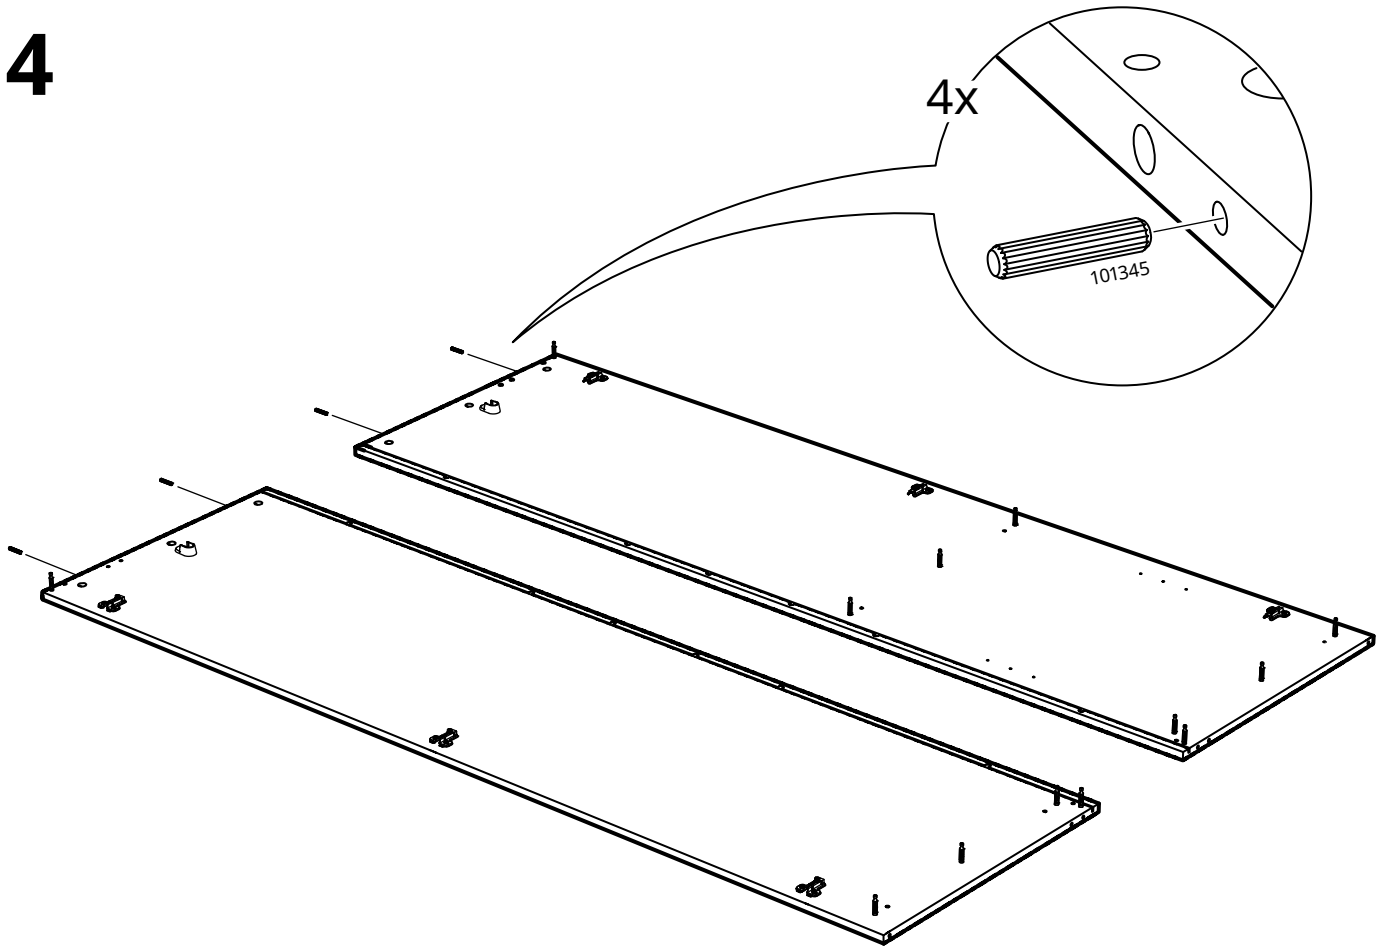 


5

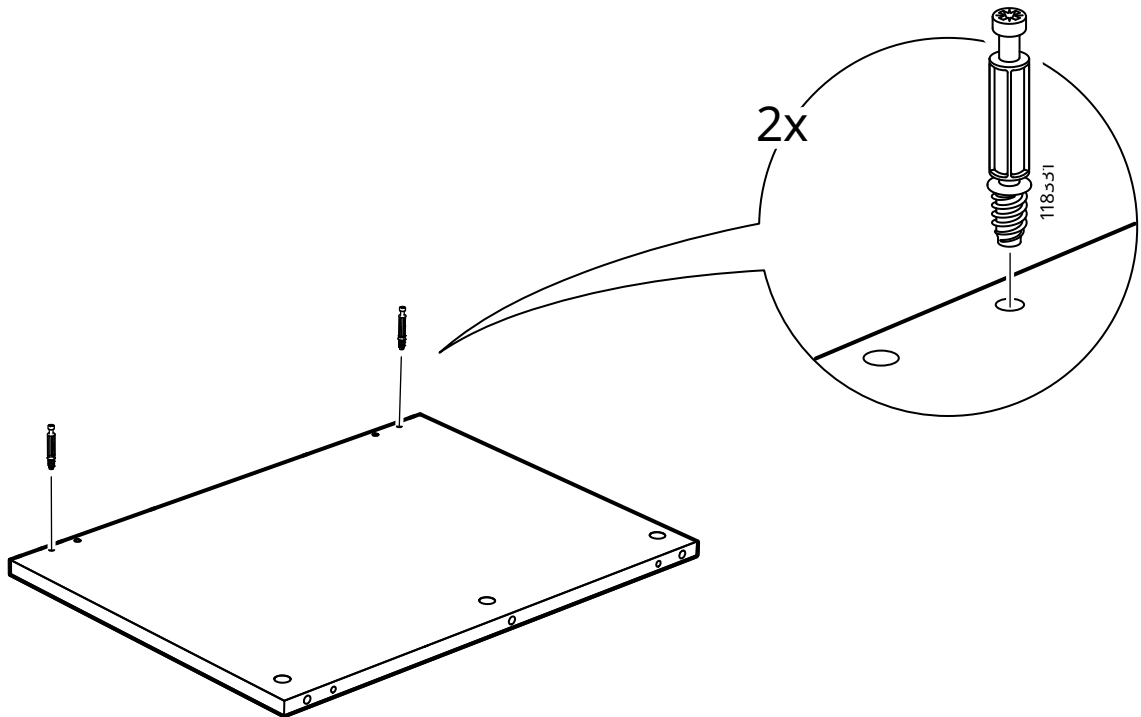 


6

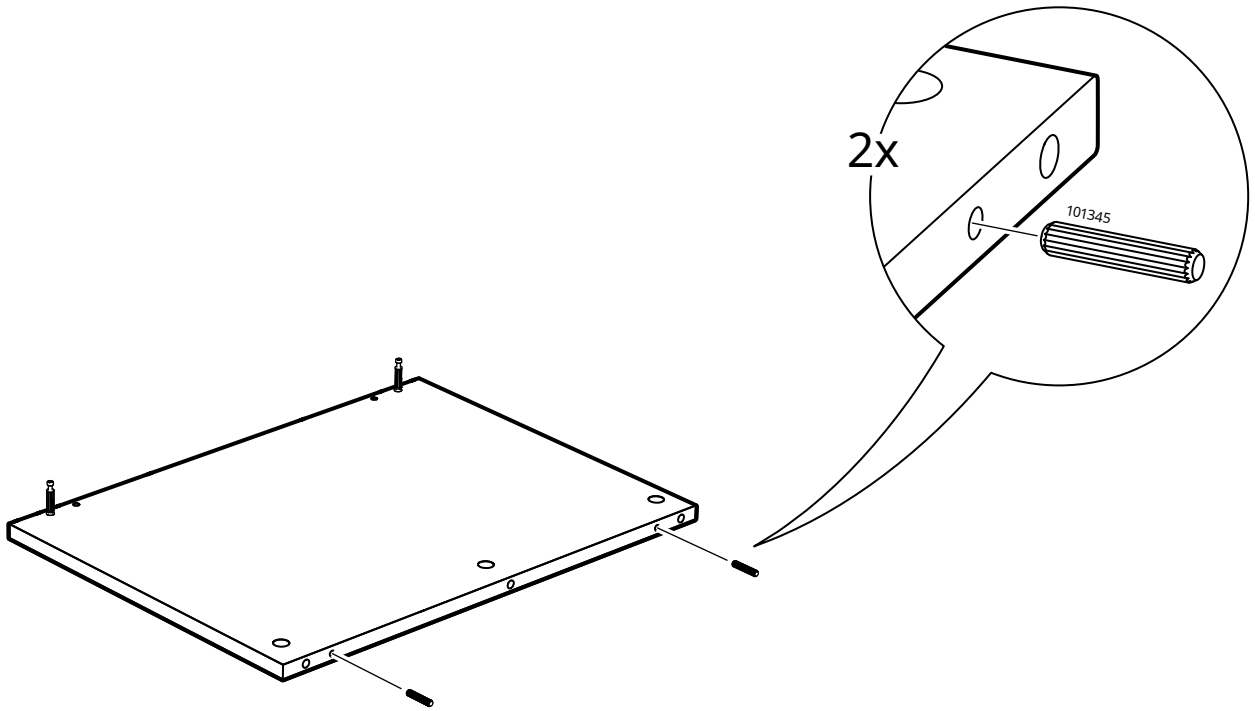 


7

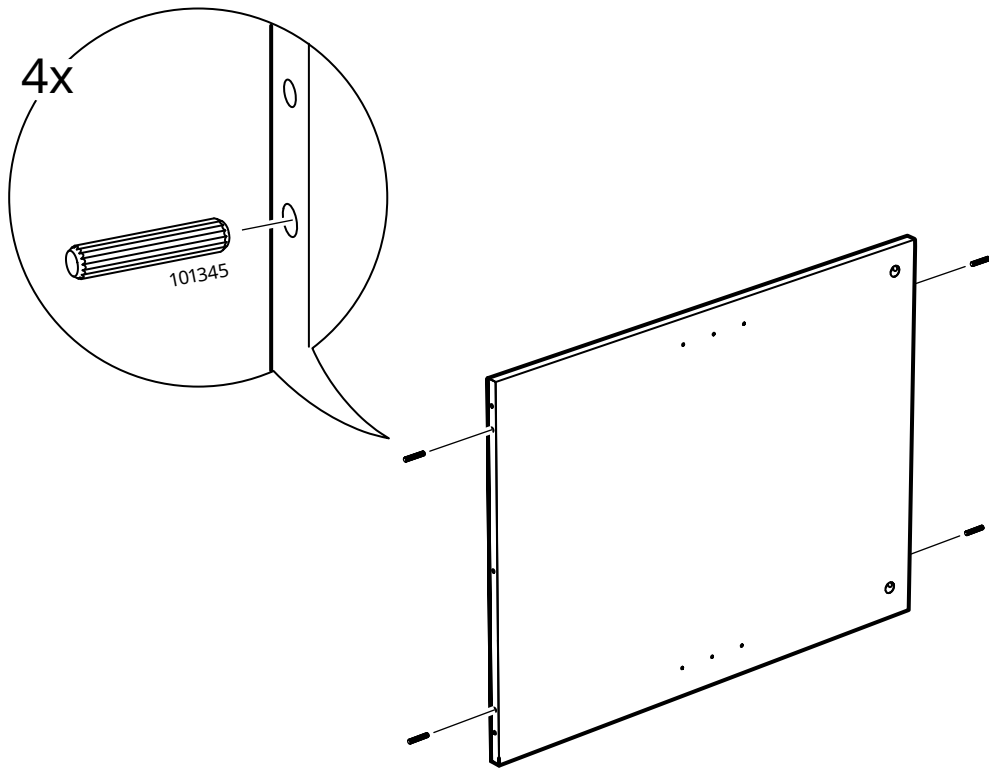 


8

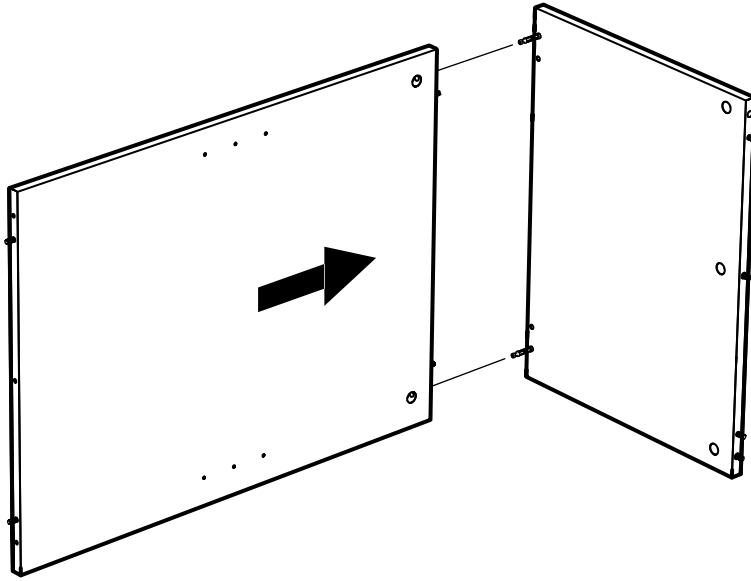 


9

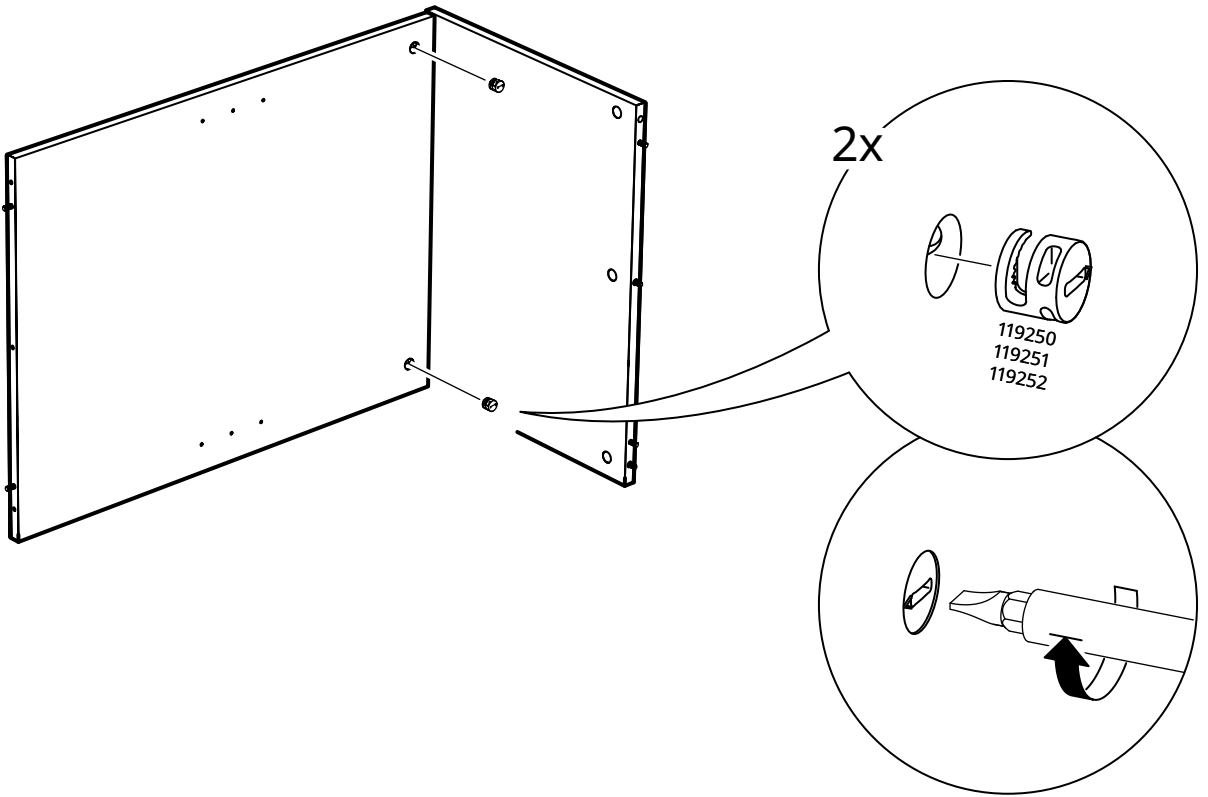 




10

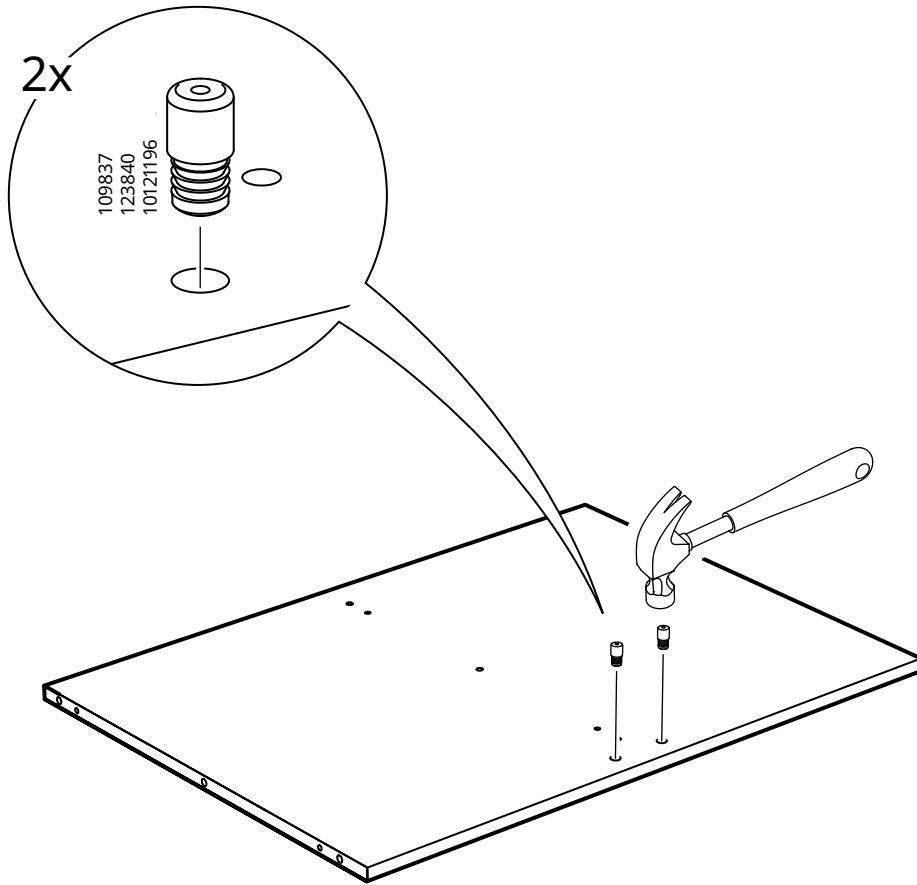 


11

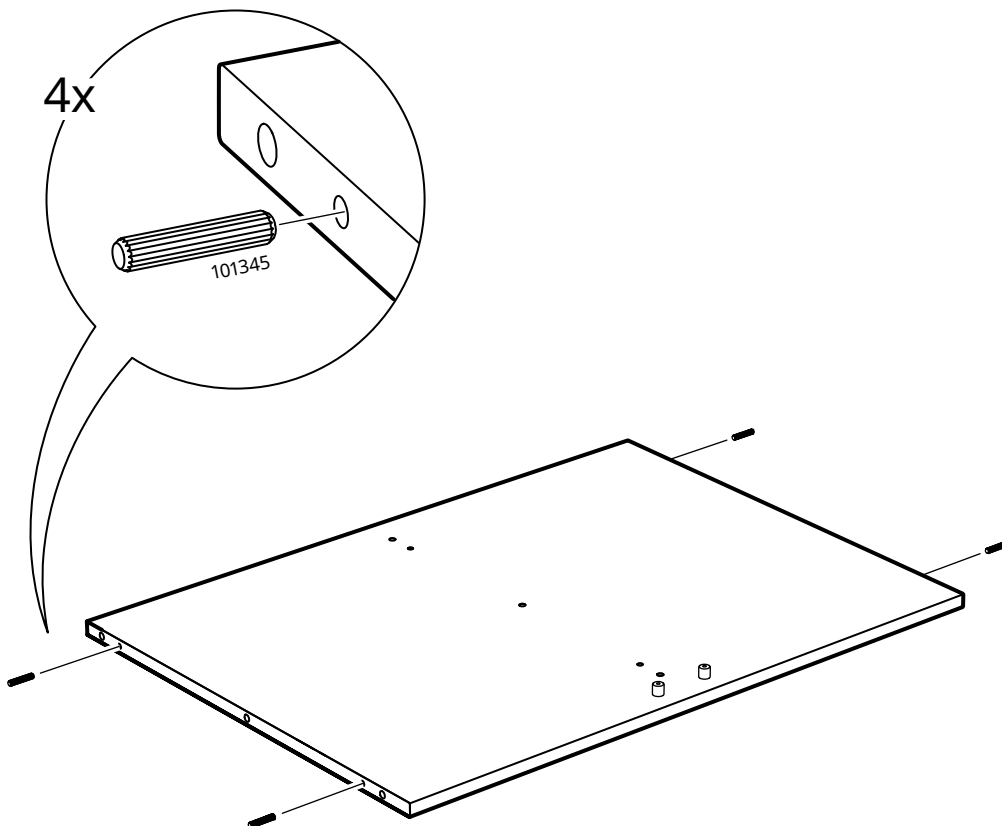 


12

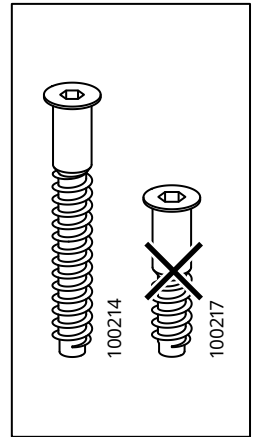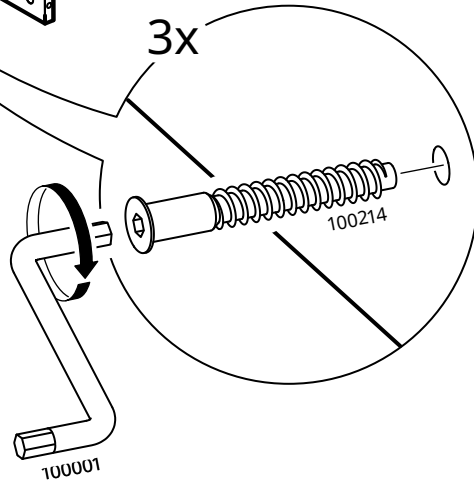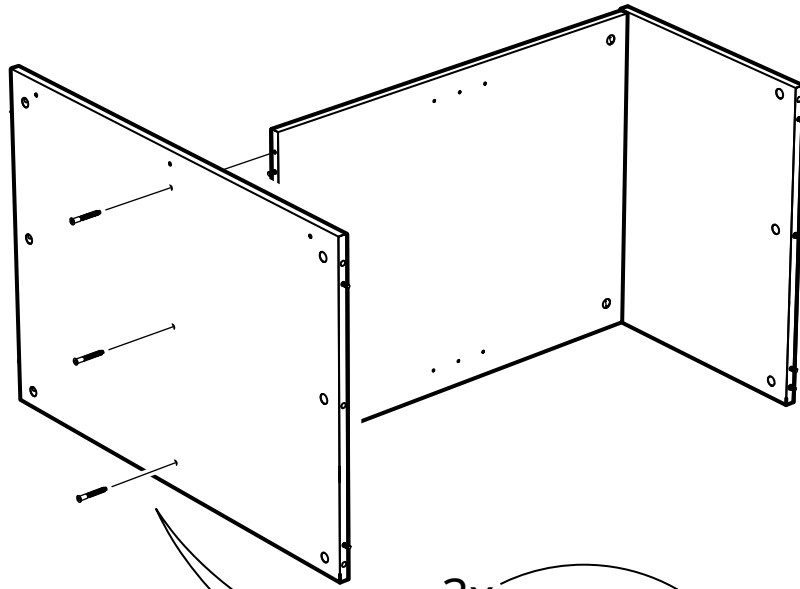   


13

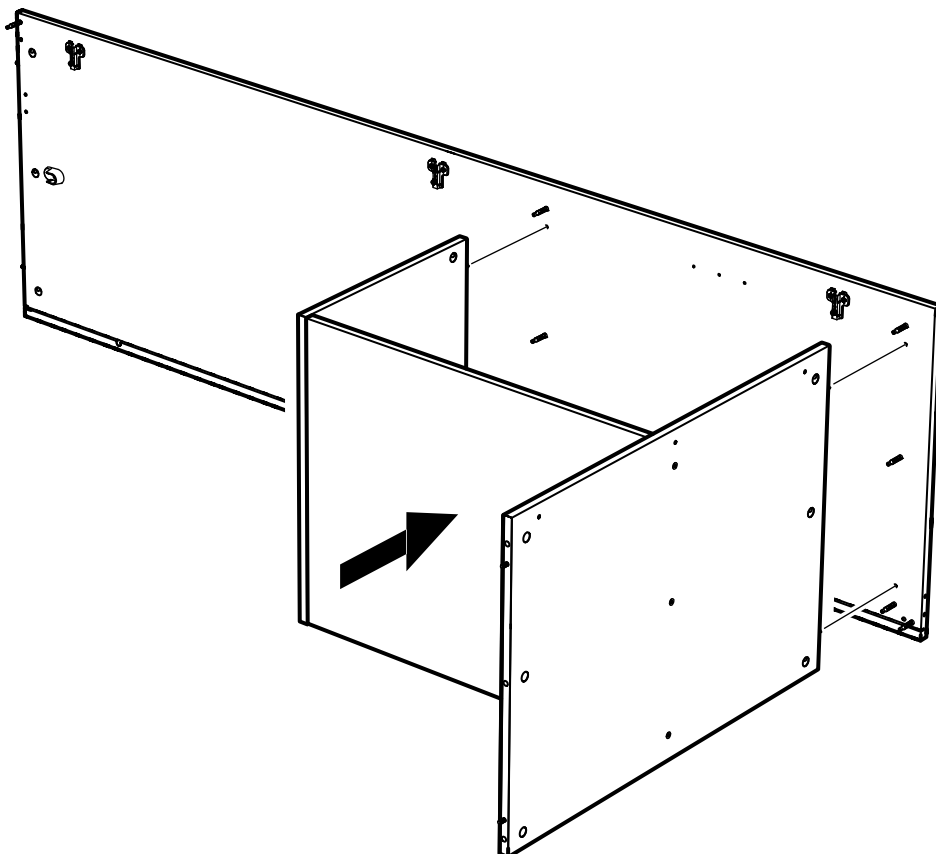 


14

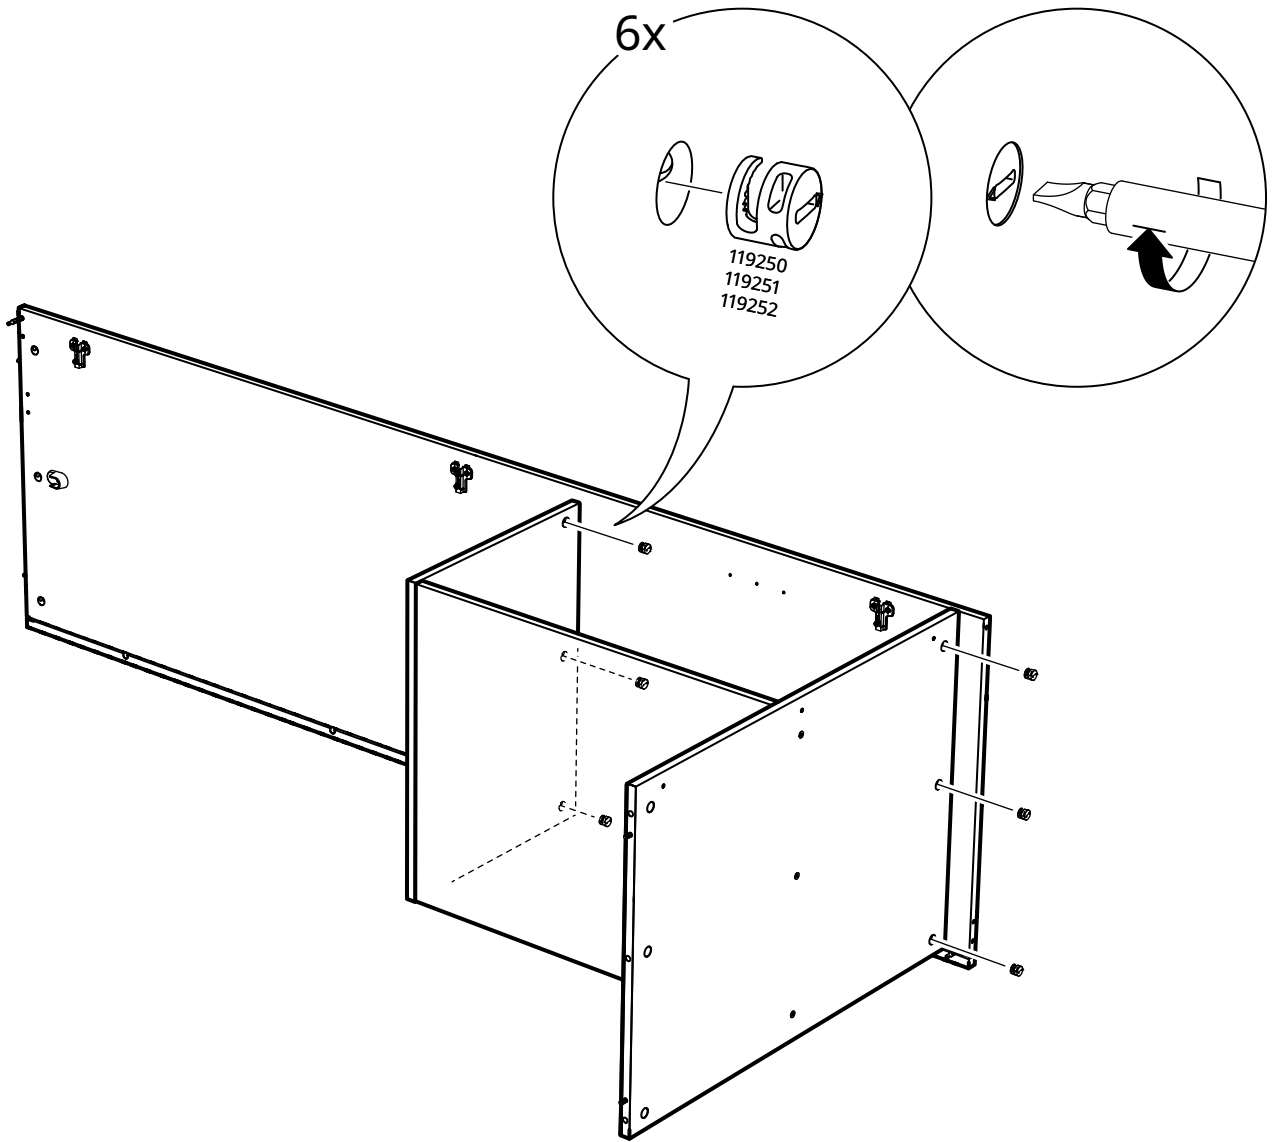 



15

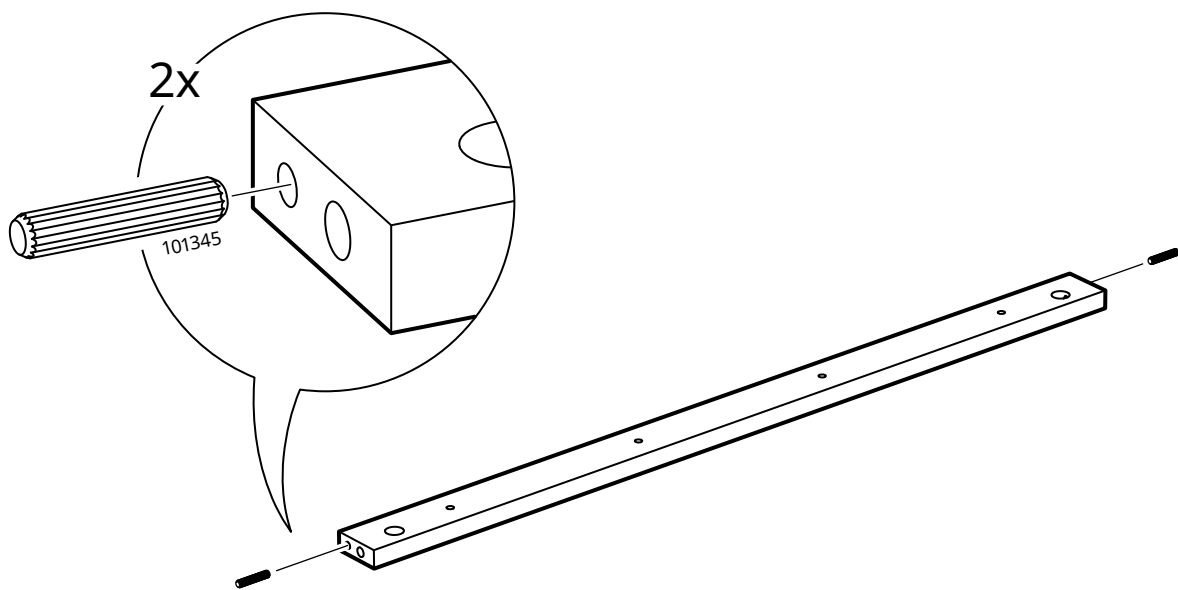 


16

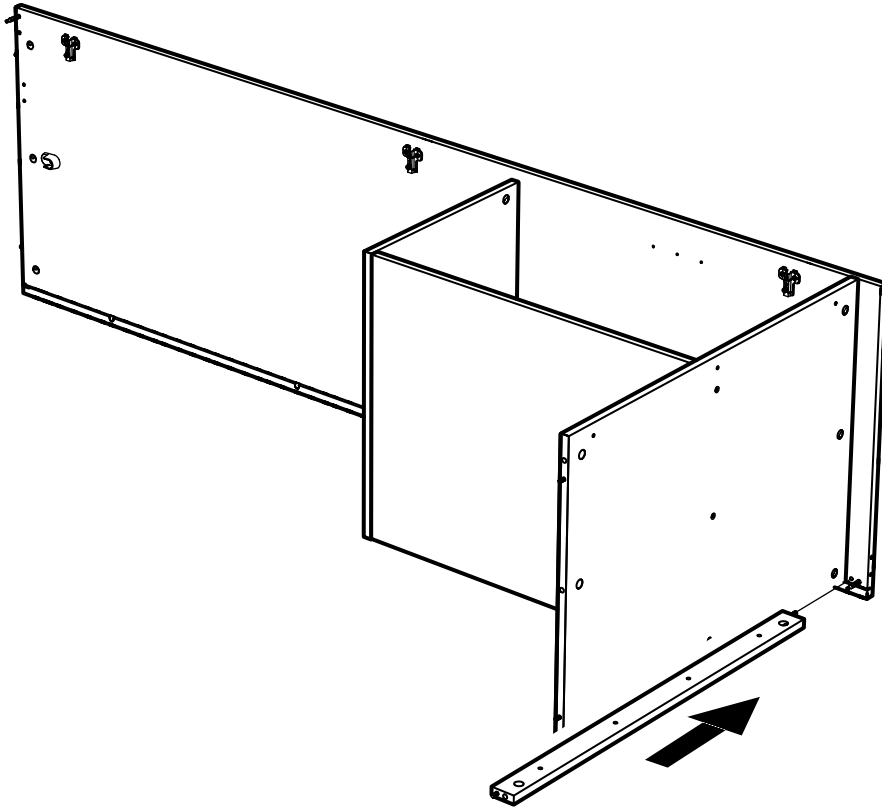 


17

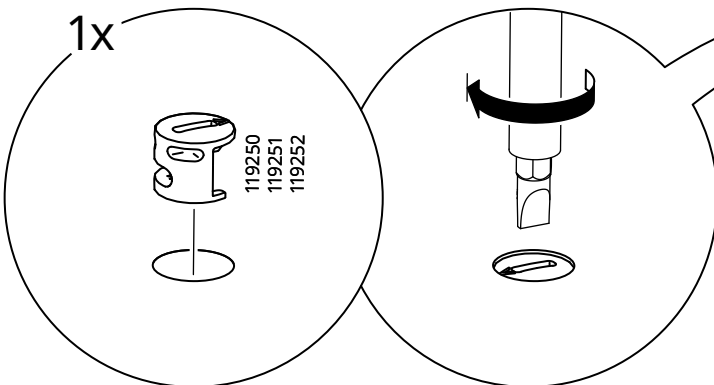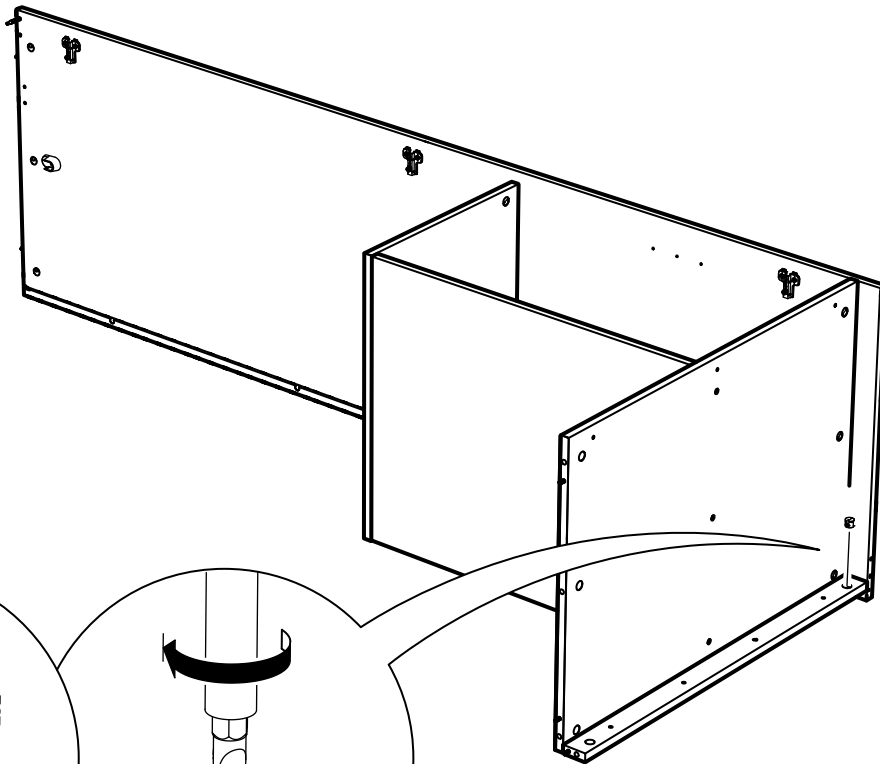  


18

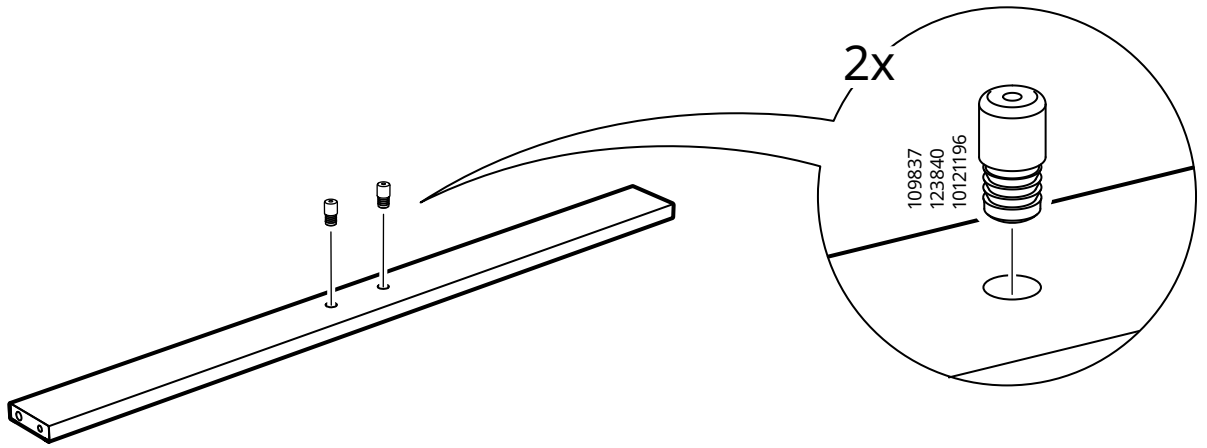 


19

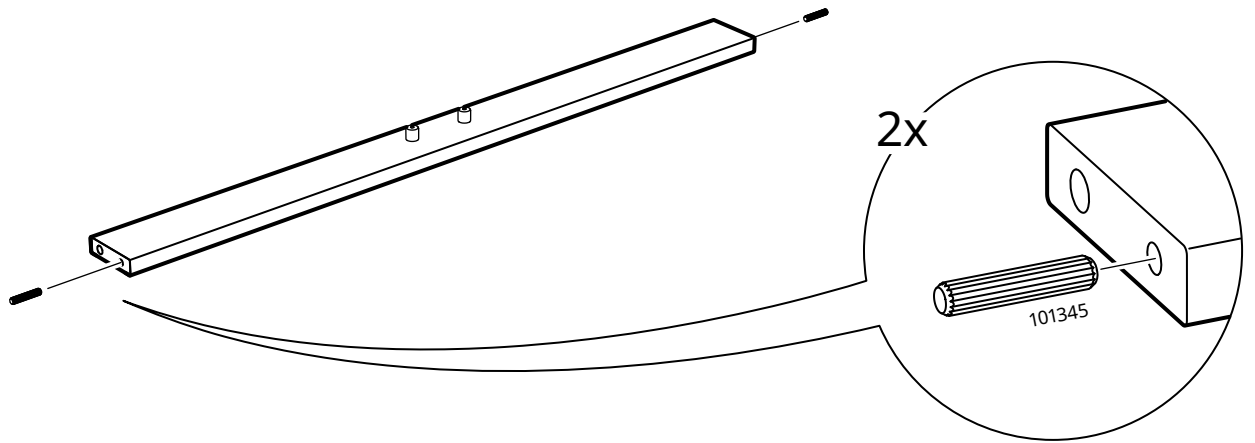 


20

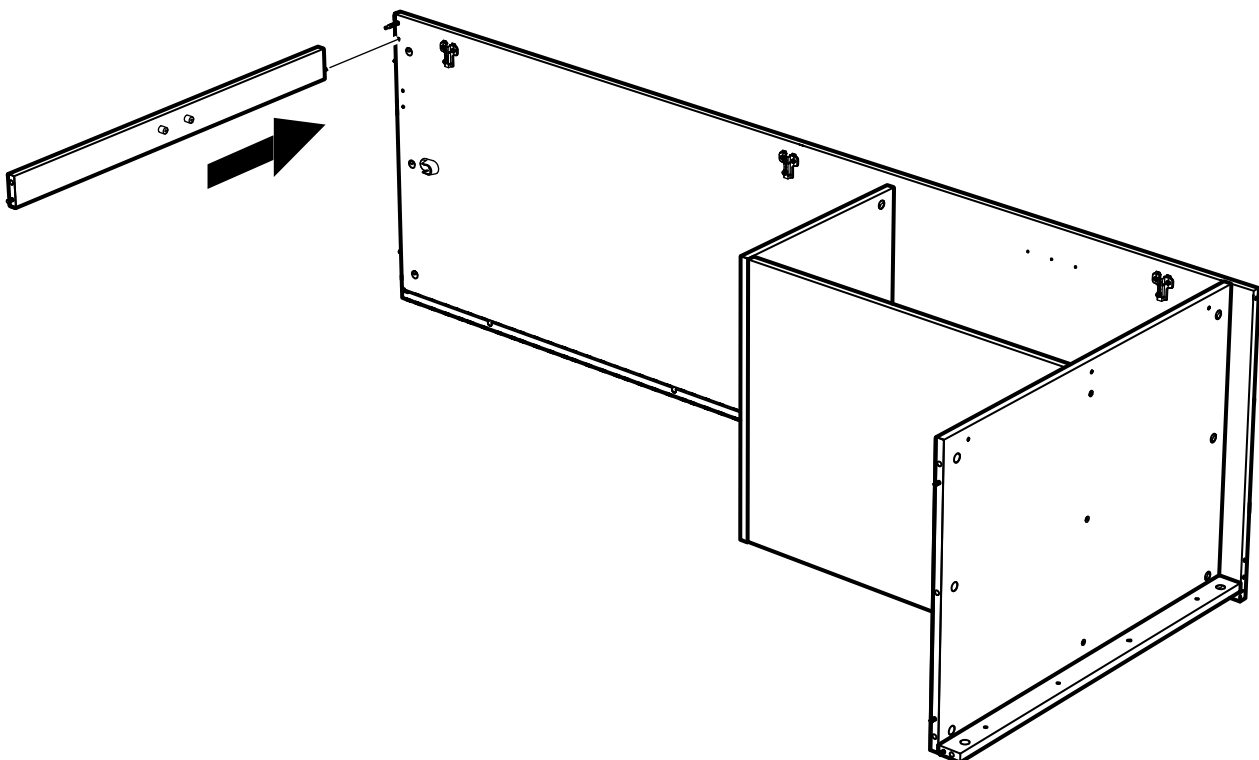 


21

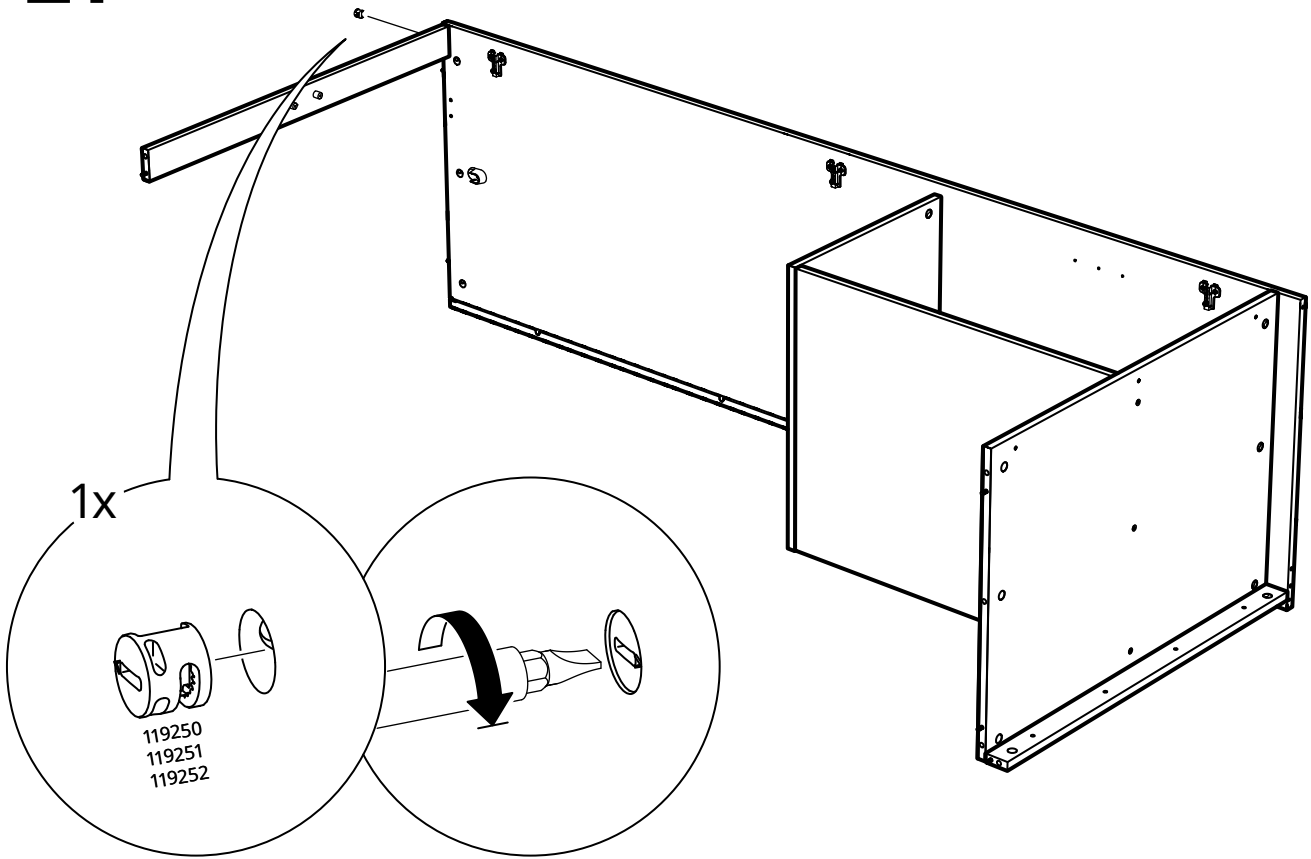 


22

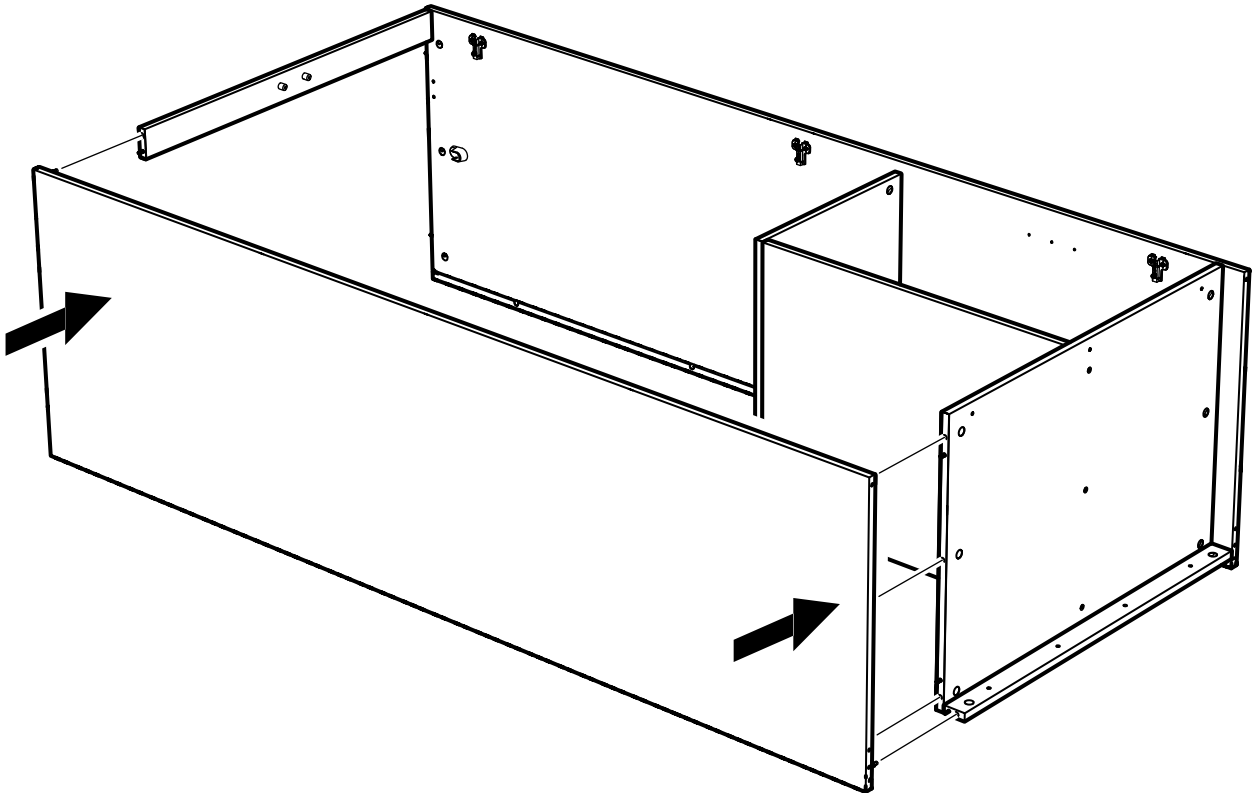 


23

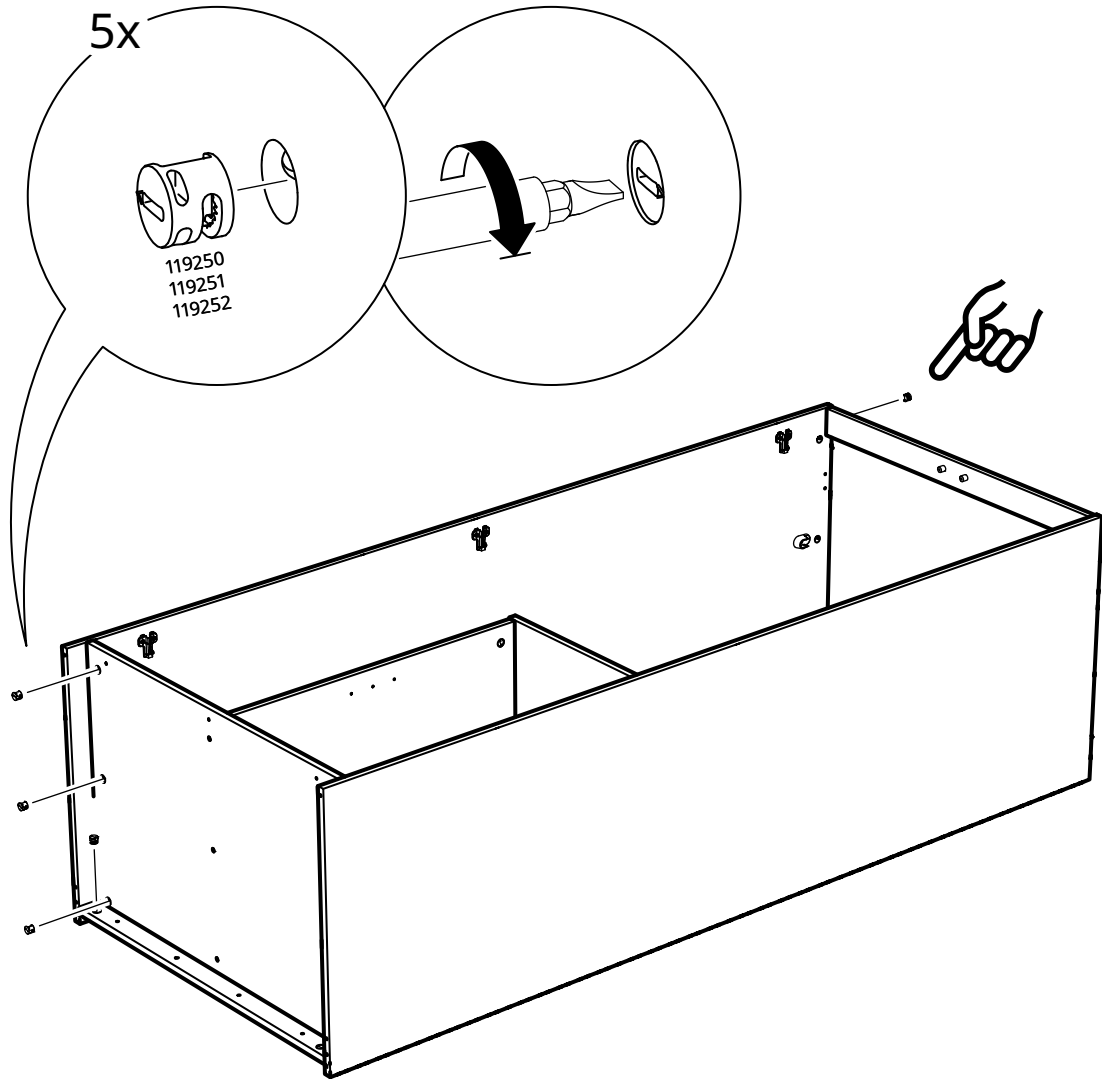 


24

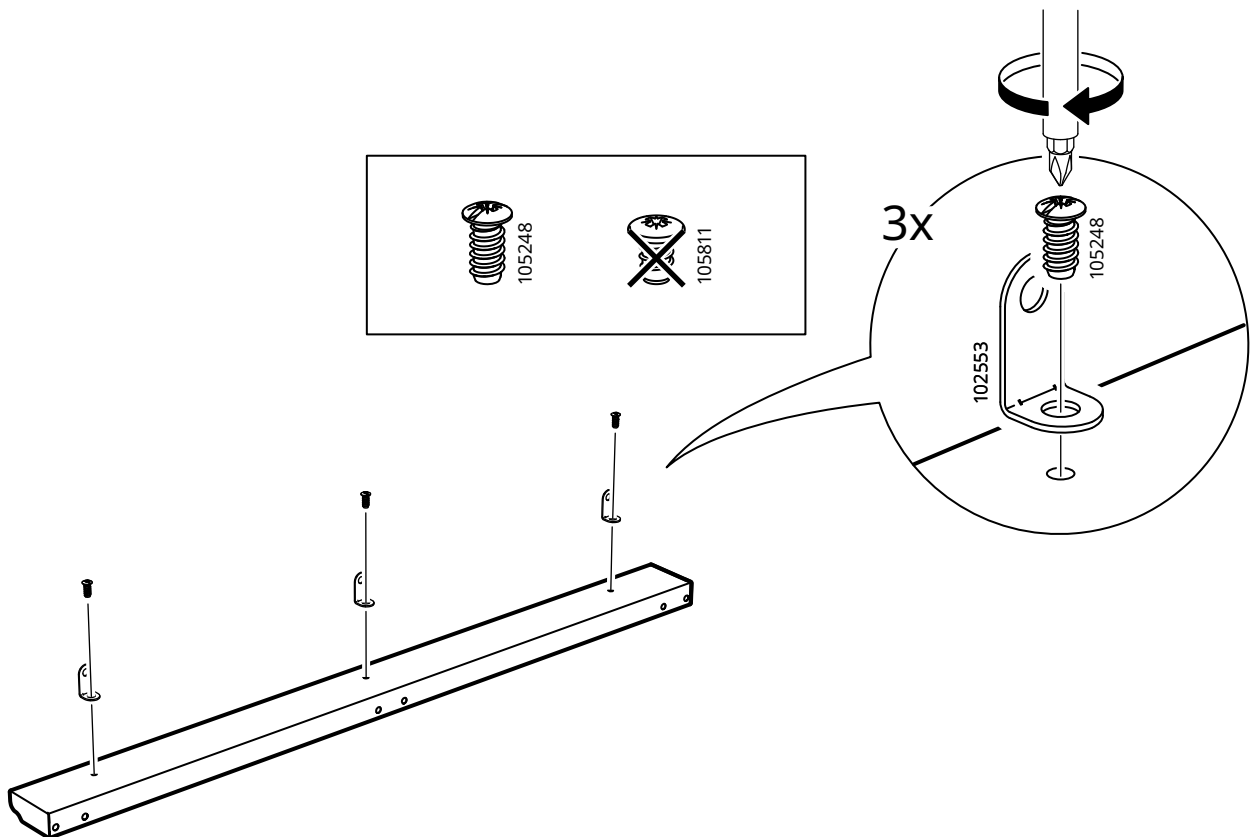 


25

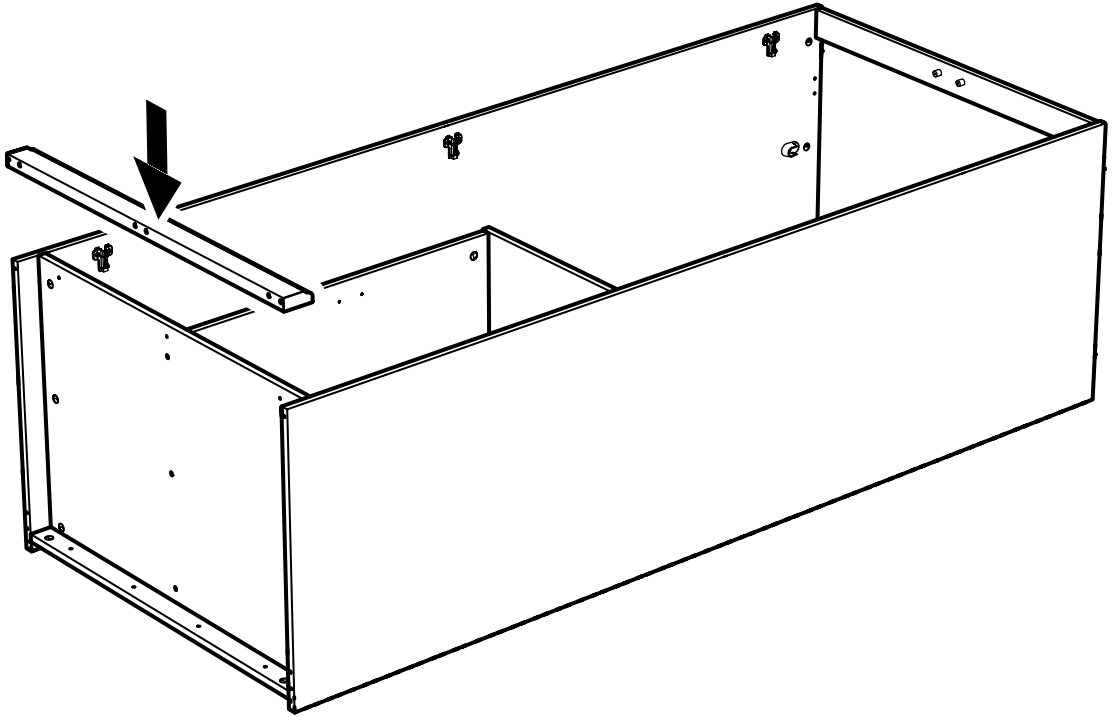 


26

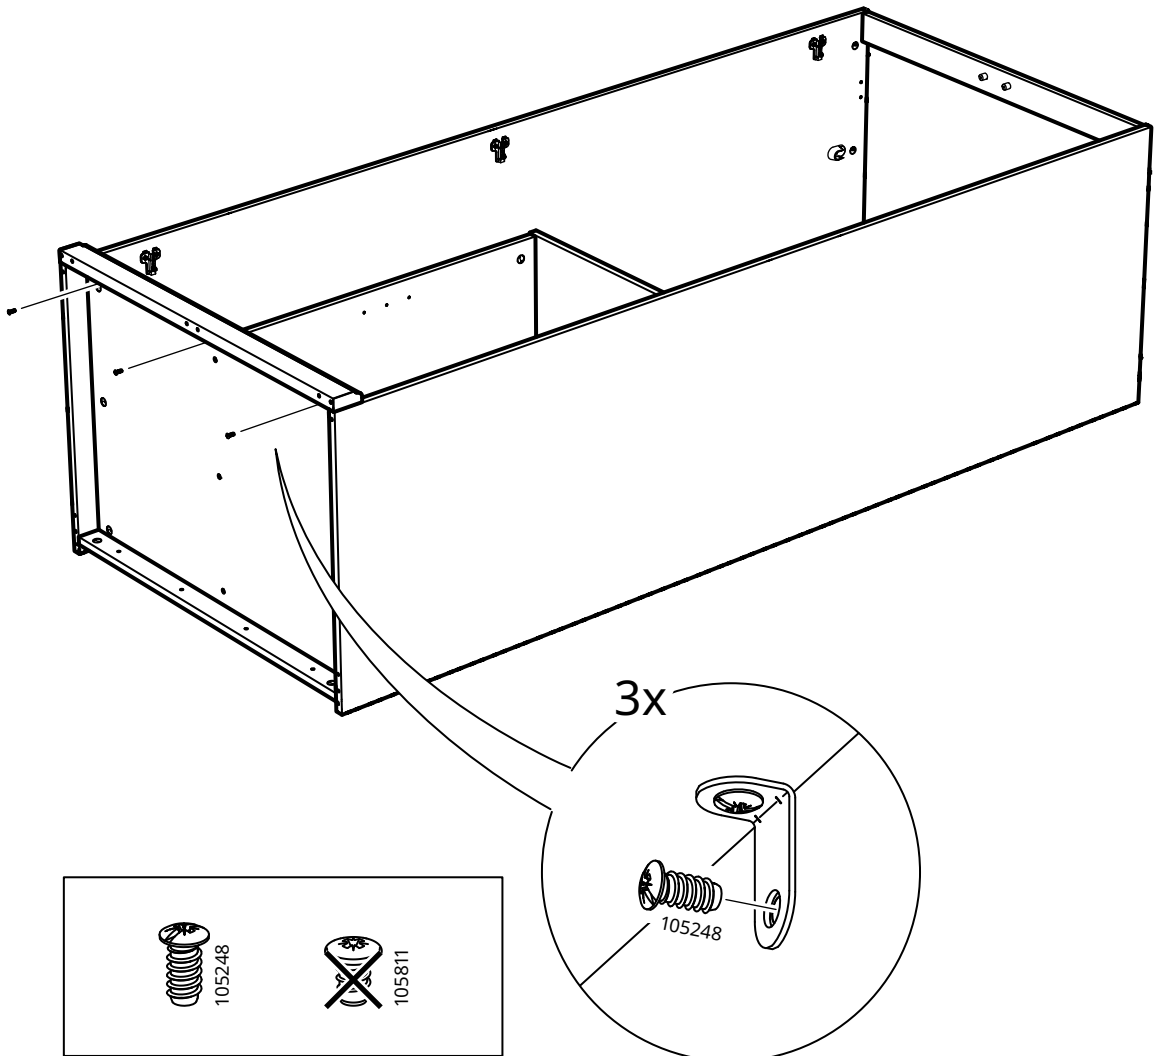 


27

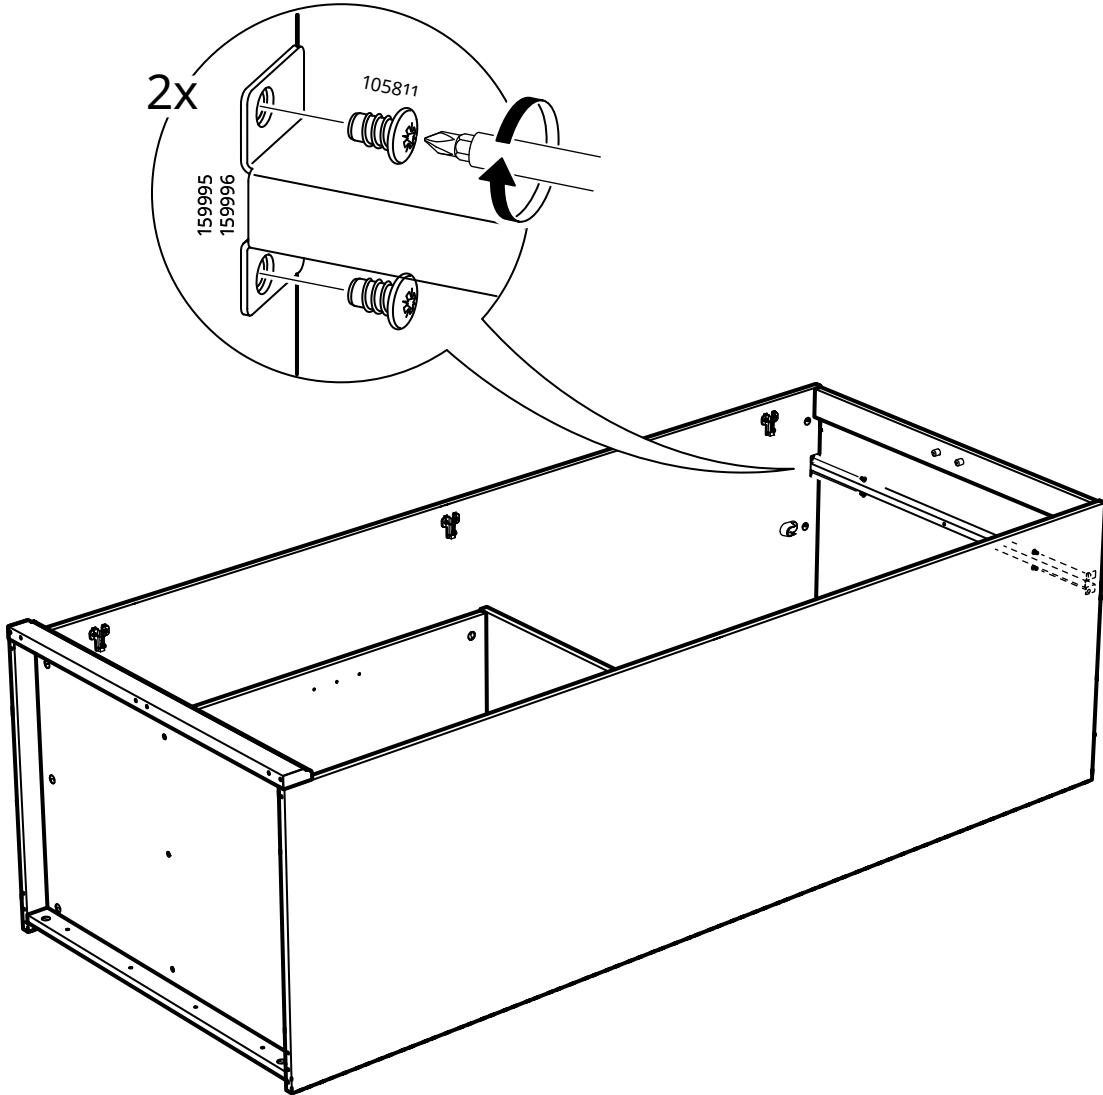 


28

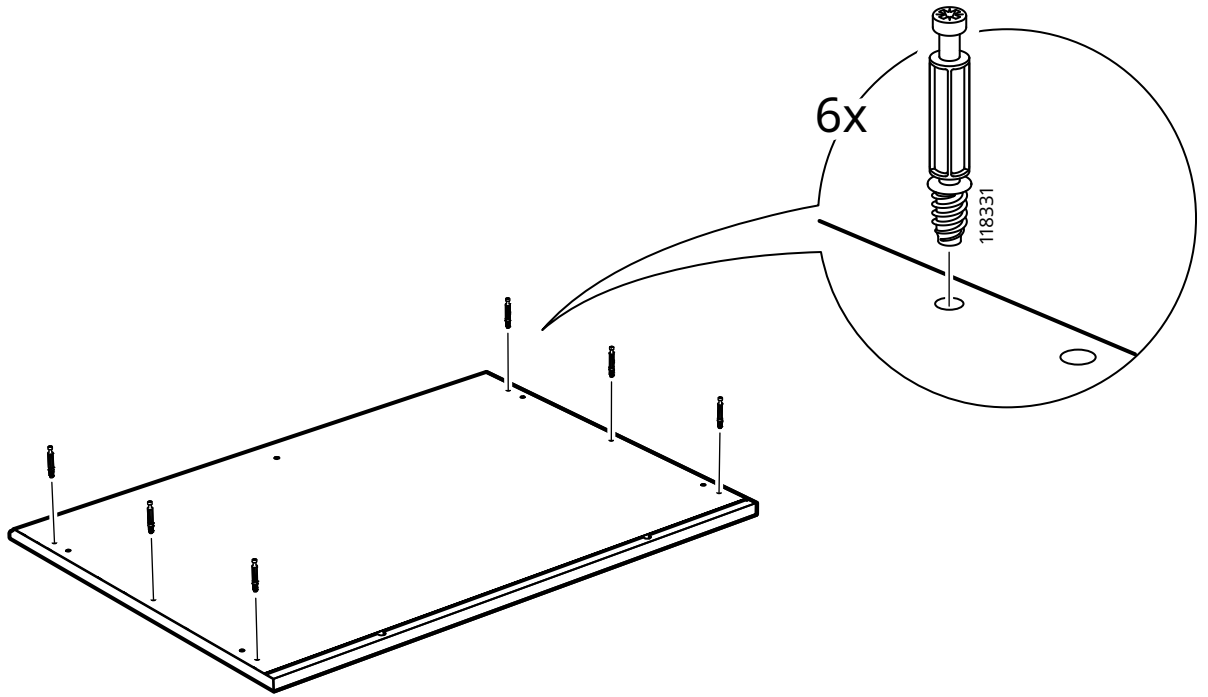 


29

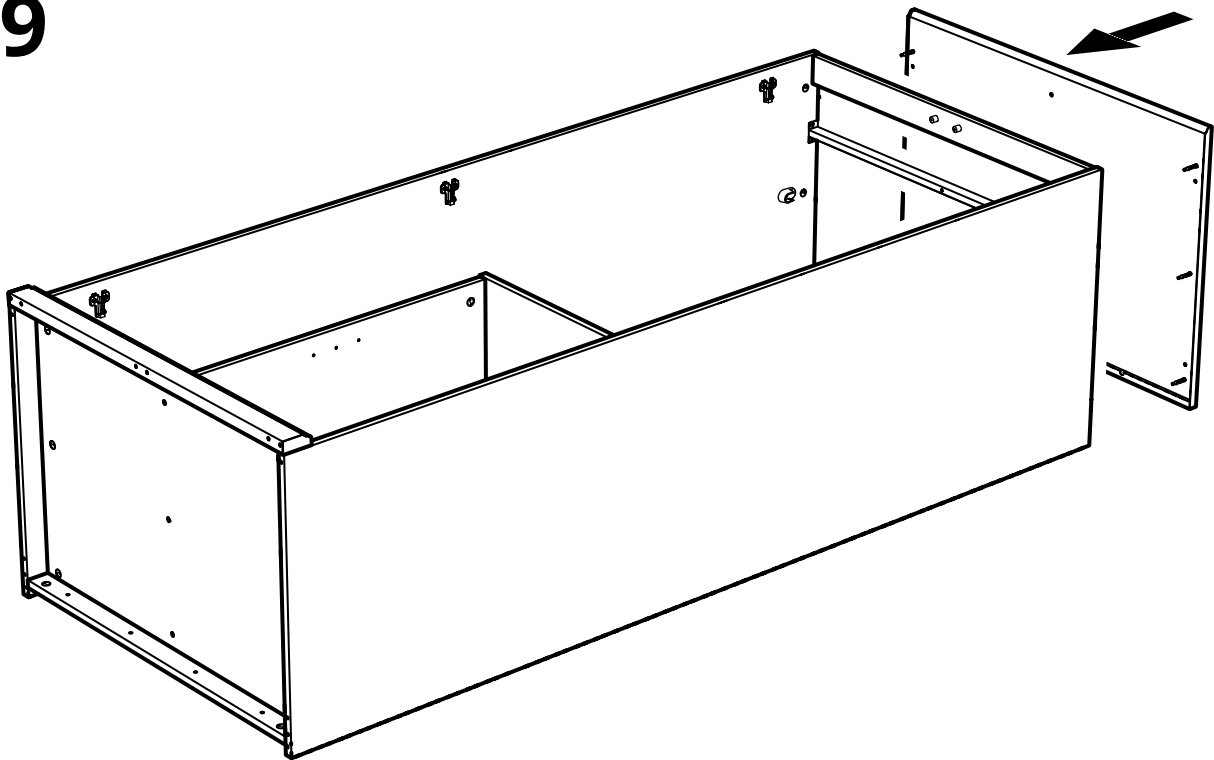 


30

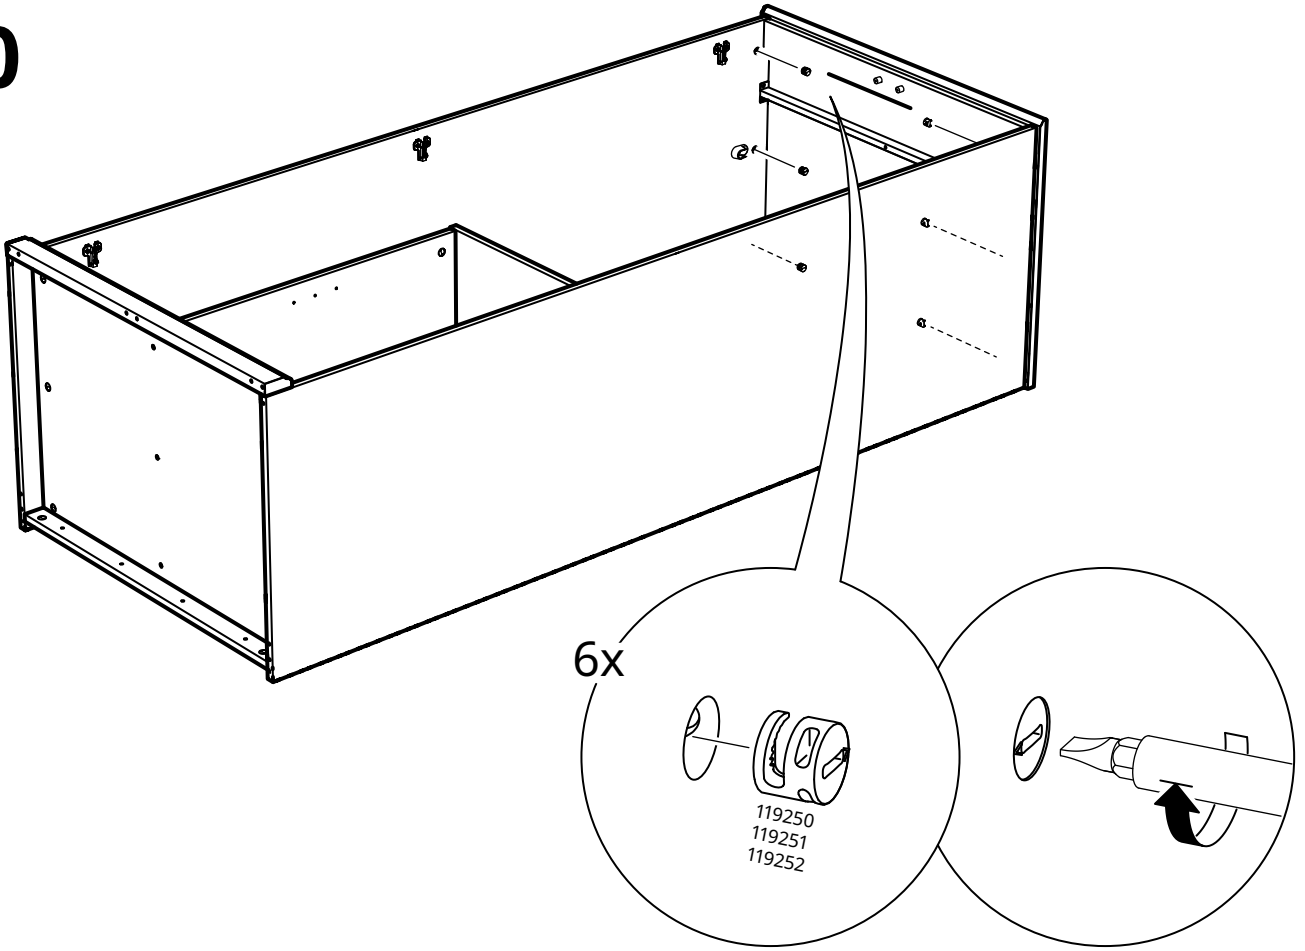 


31

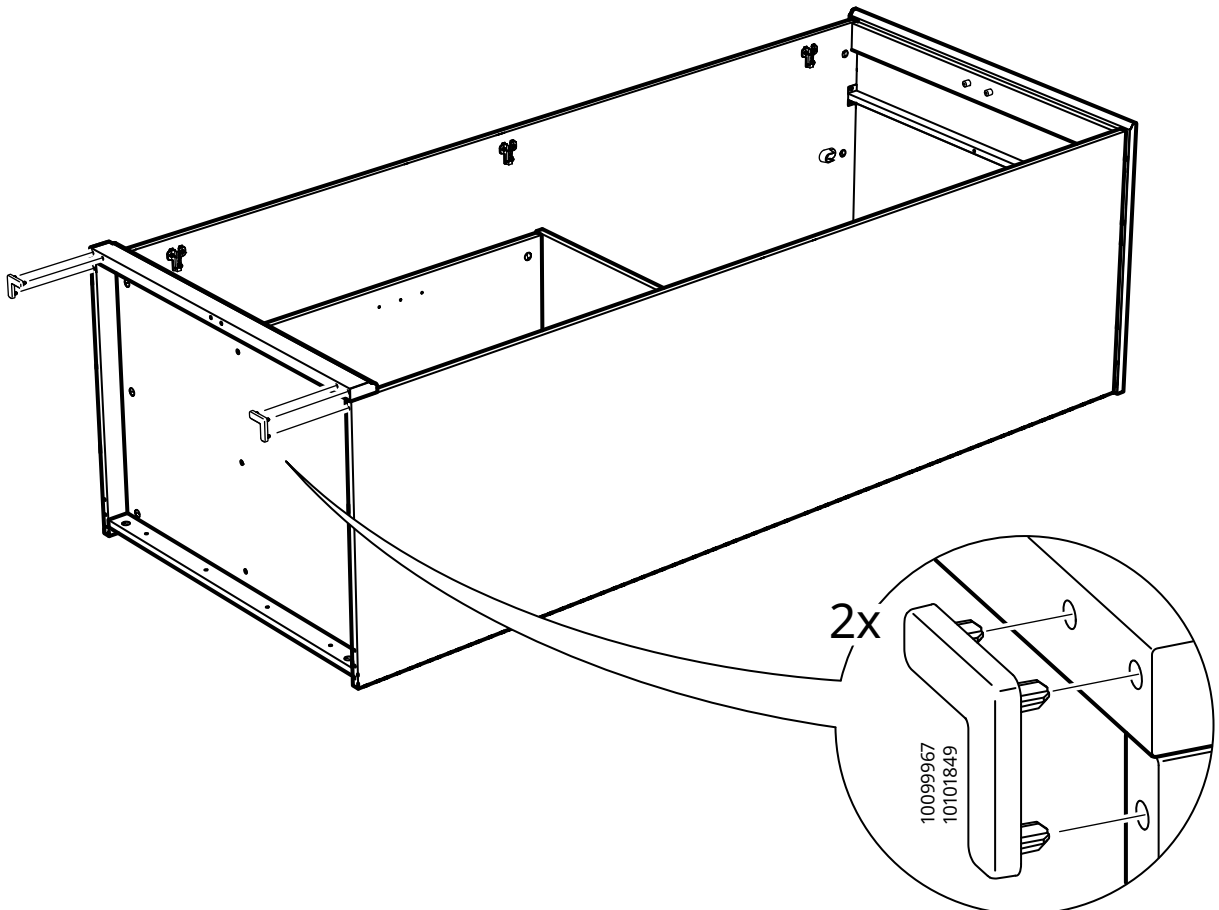 



32

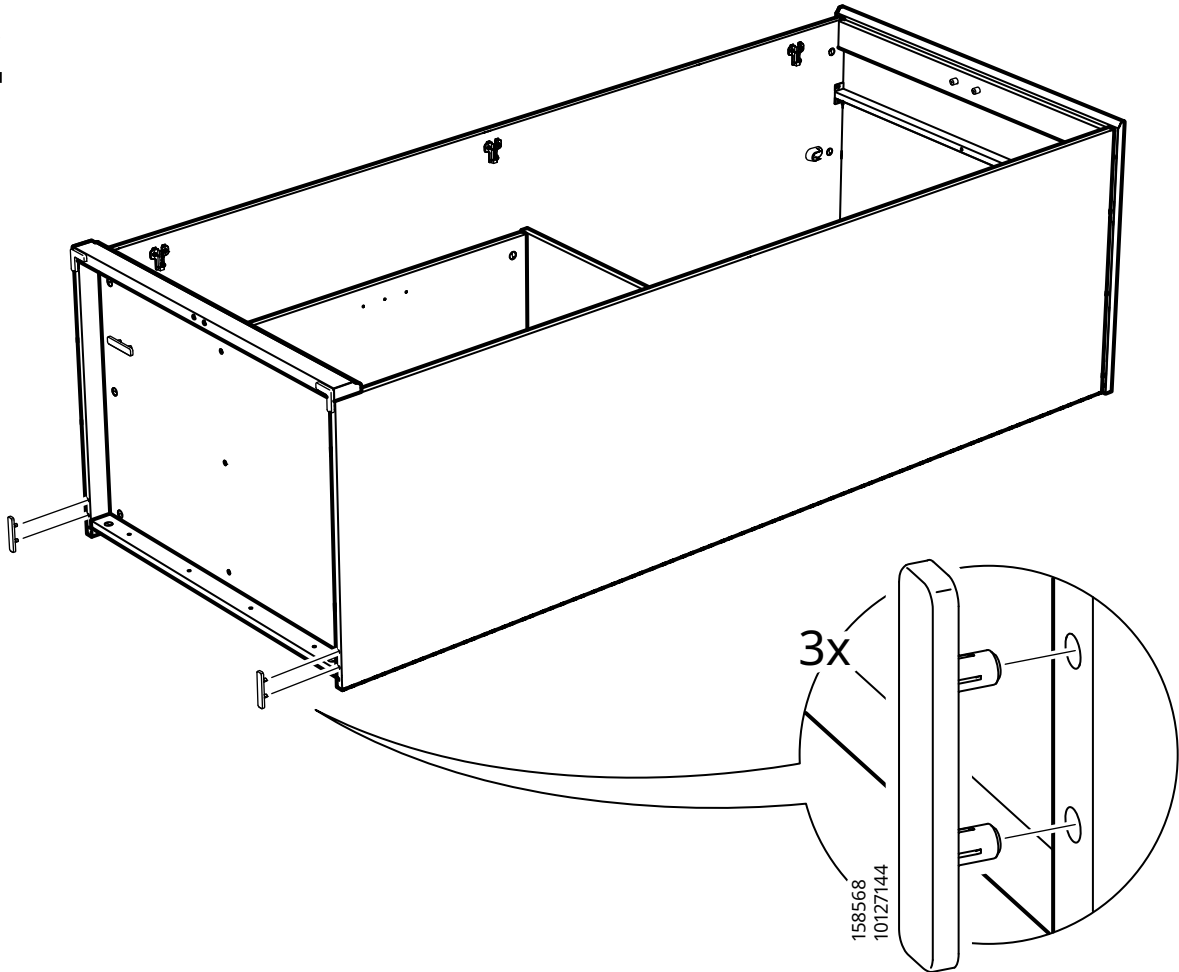 



33

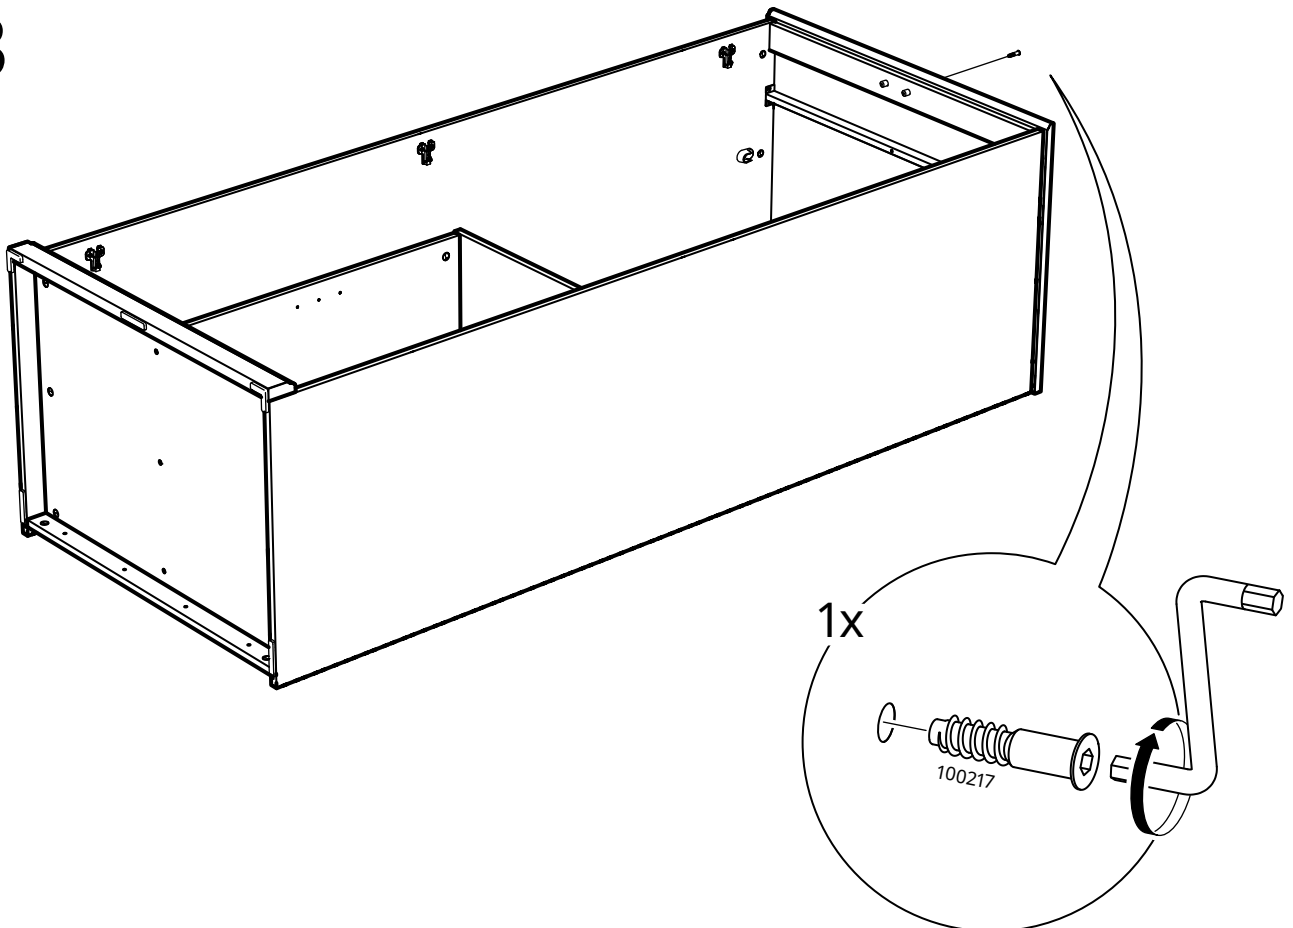 


34

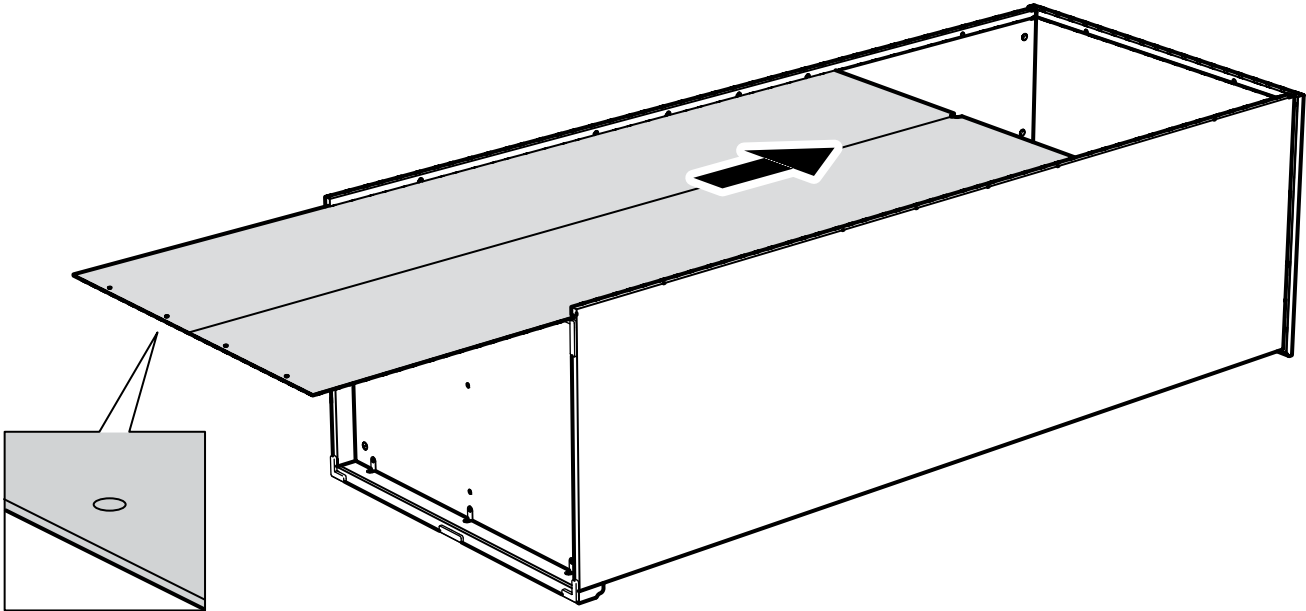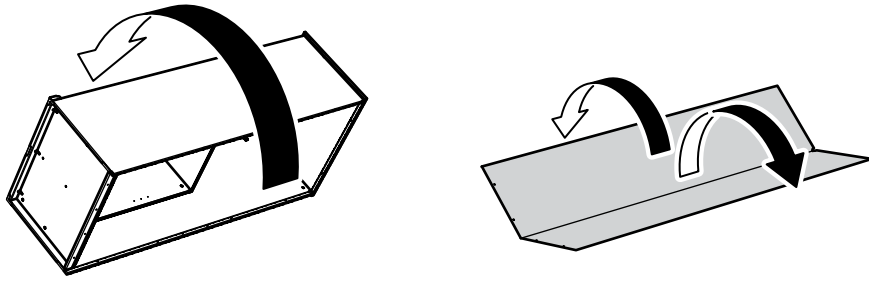  



35

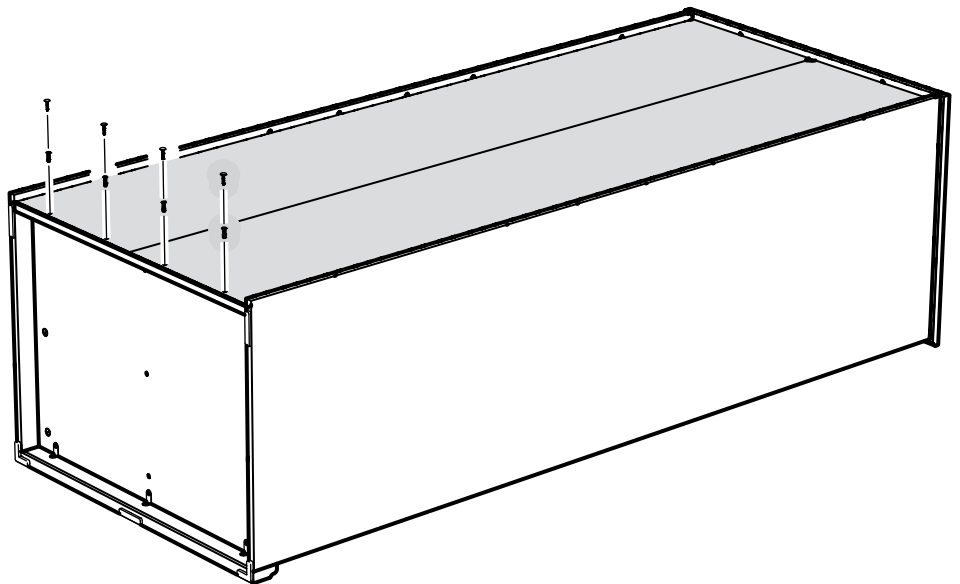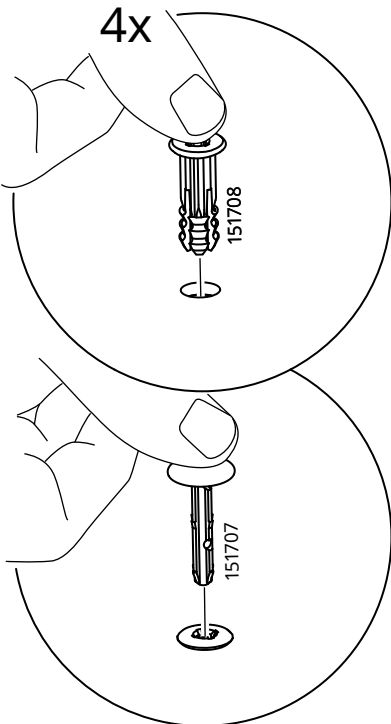  



36

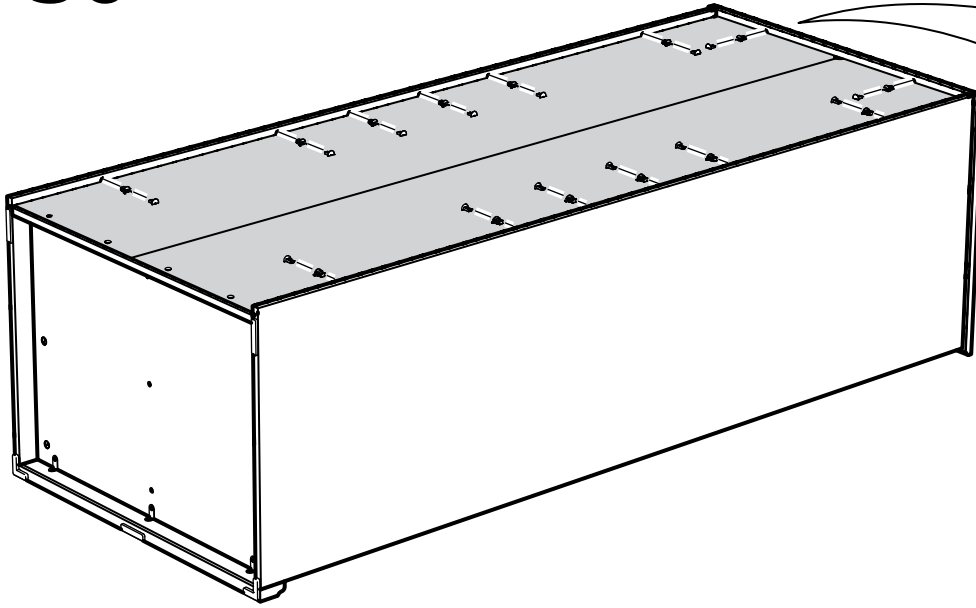 


14x

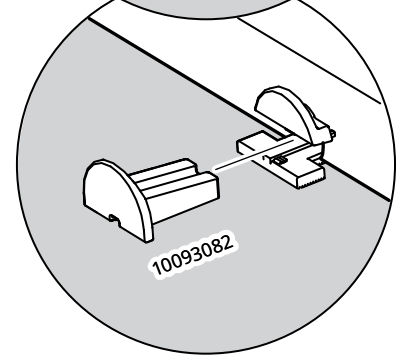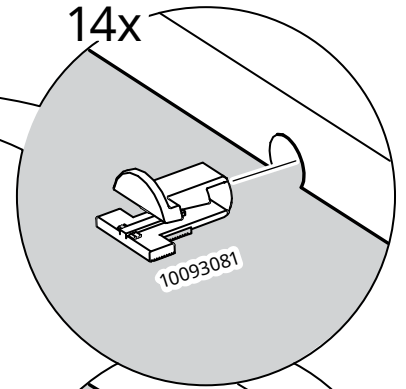  


37

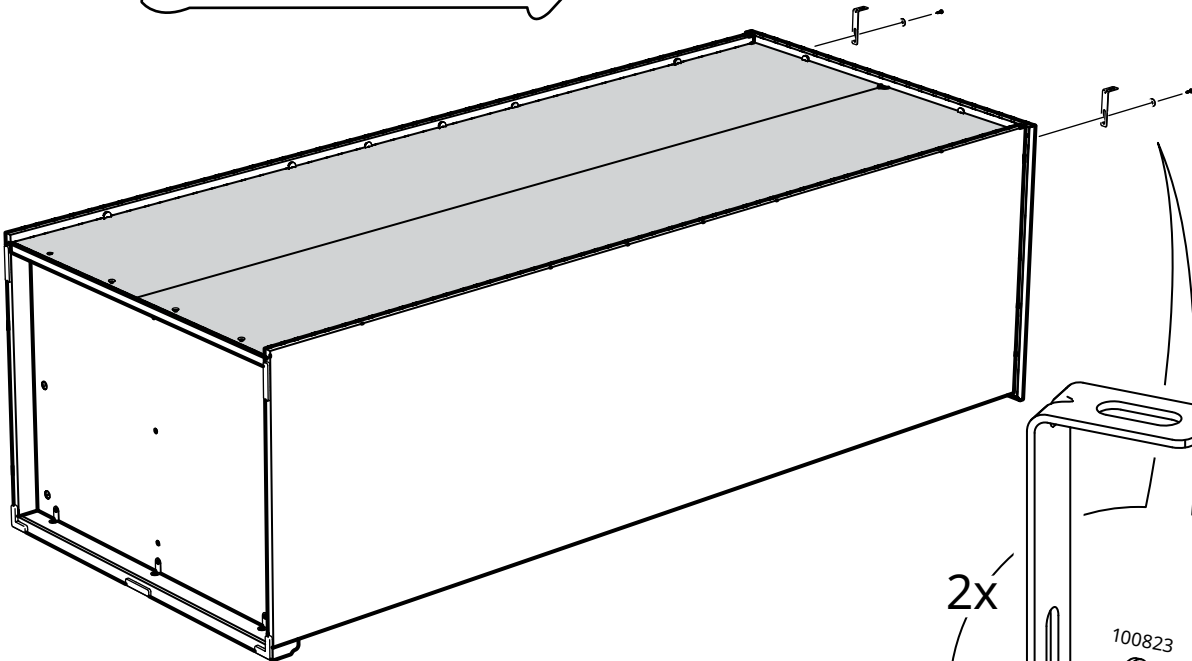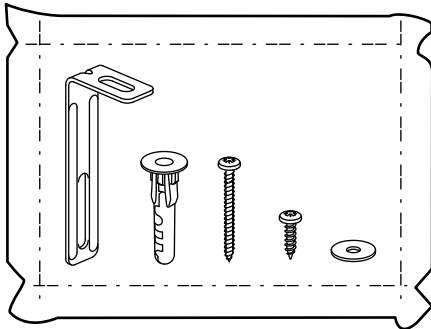  




2x

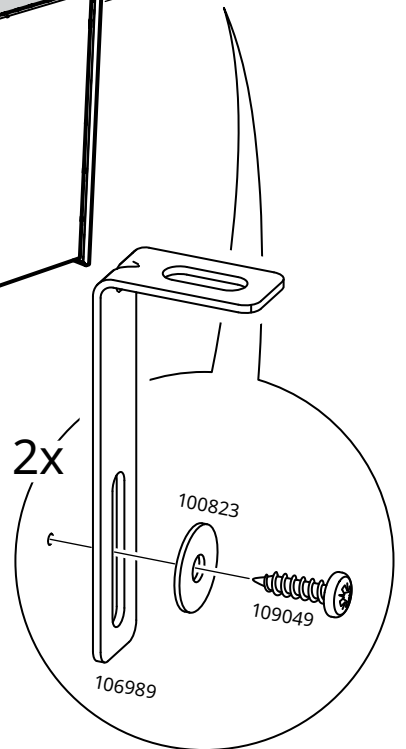 

38

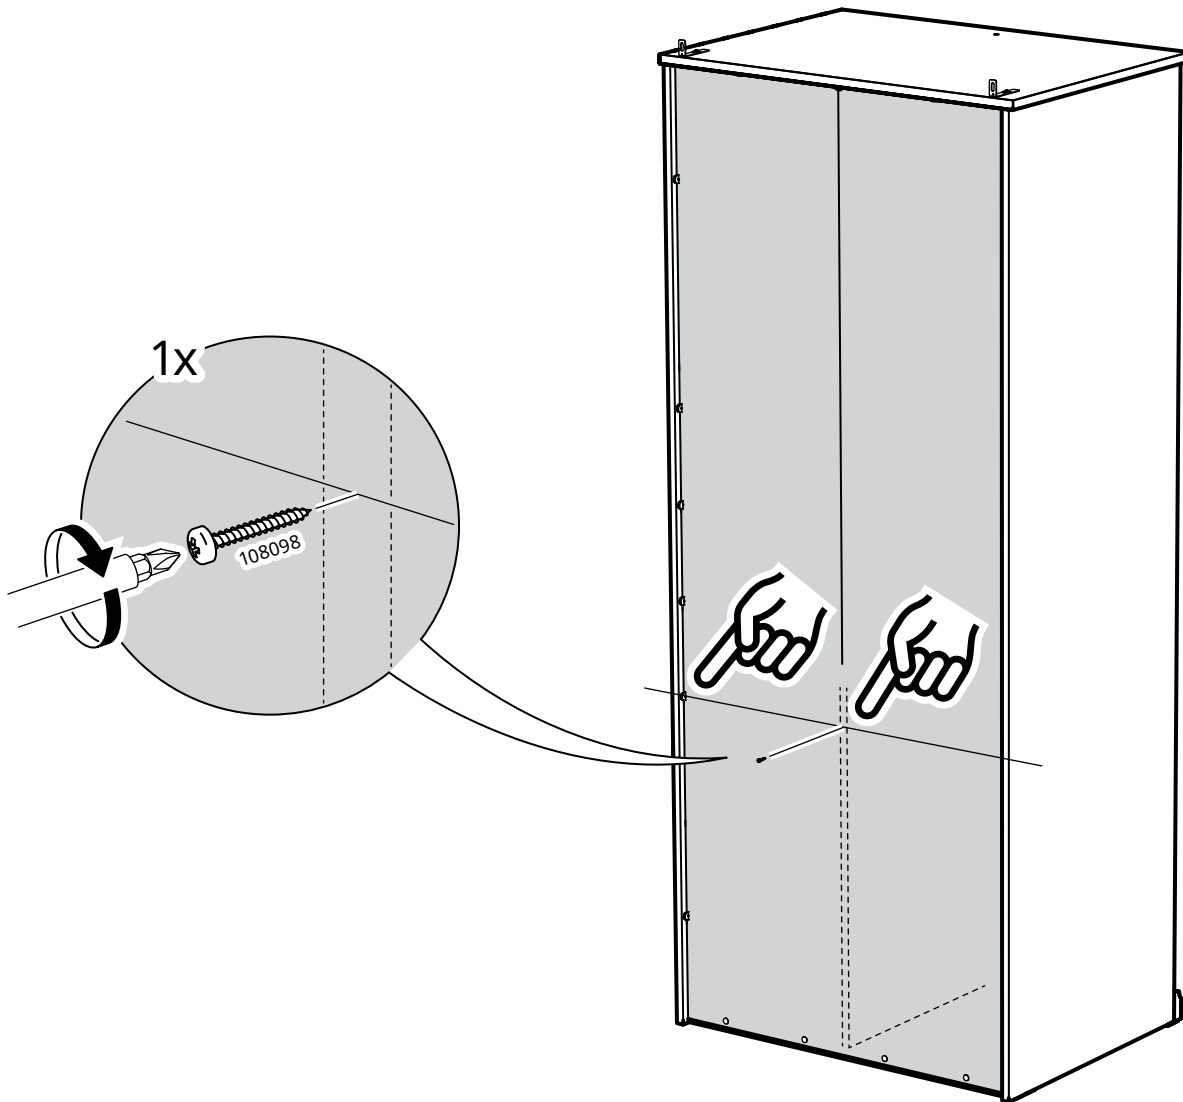 


39

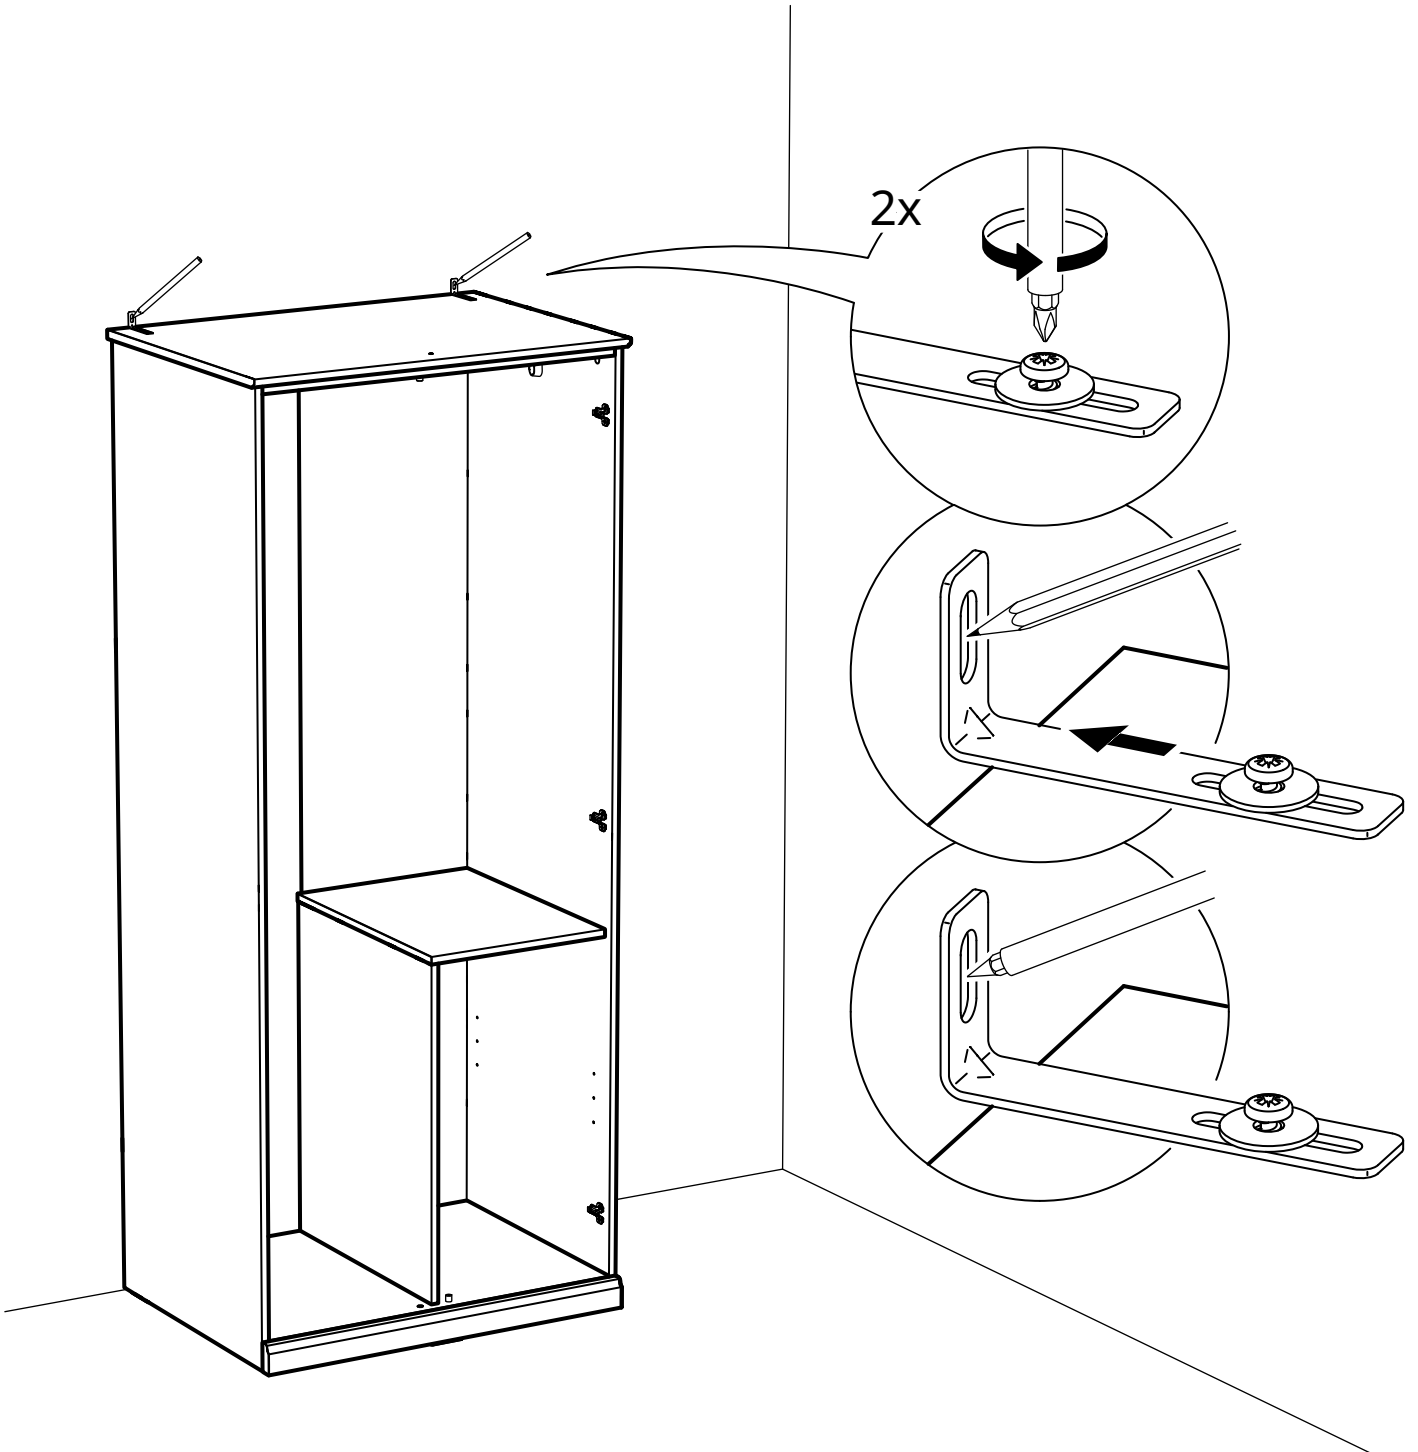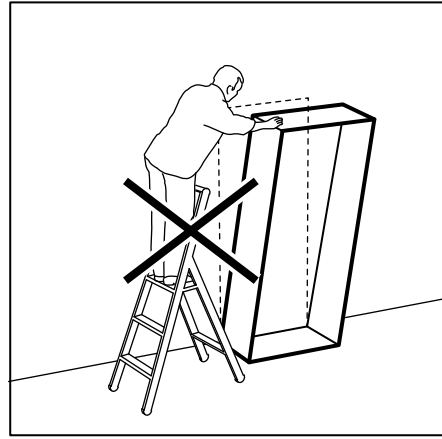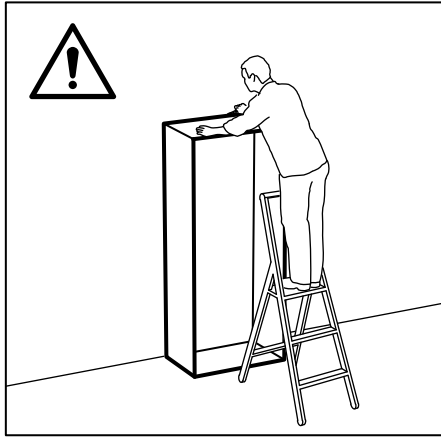   

40


x

 x

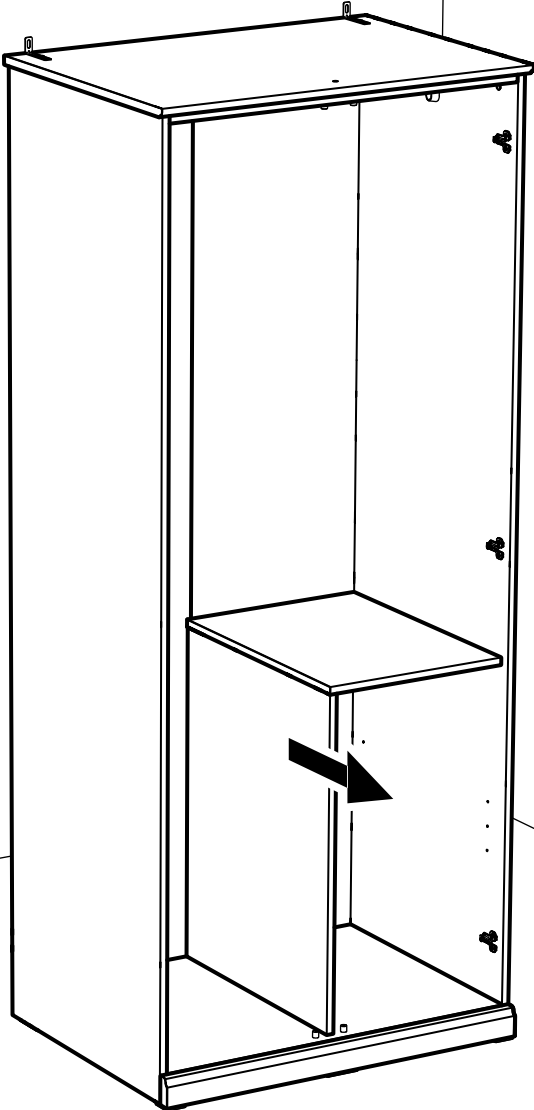




www.IKEA.com/secure-it

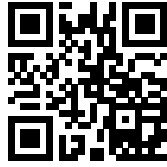 

www.IKEA.cn/secure-it

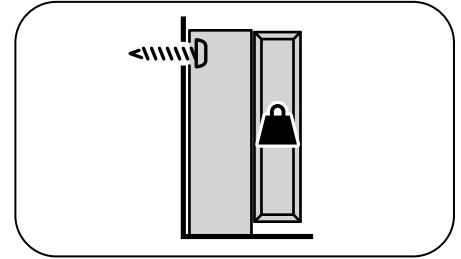 

41

English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

A

Ø 8 mm (5/16")

1

70 mm (2 3/4")

2

31

B

Ø 8 mm (5/16")

1

≈ 30 mm (≈ 1 1/4")

2

32

 
C

Ø 3 mm (1/8")

1

≈ 30 mm (≈ 1 1/4")

34

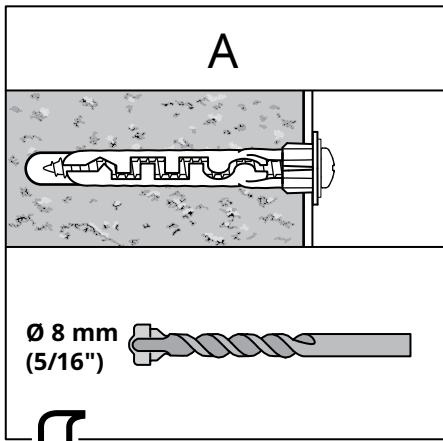


42

x

x


 
2x



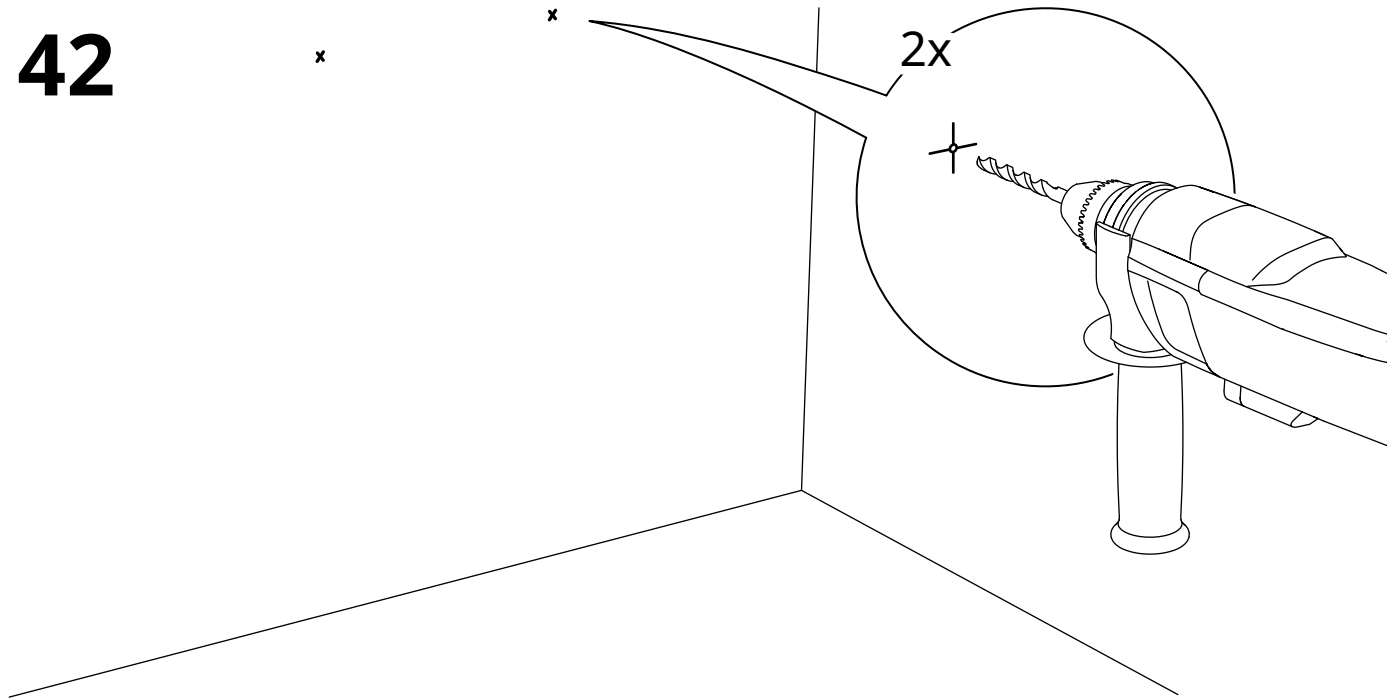


43





     
2x

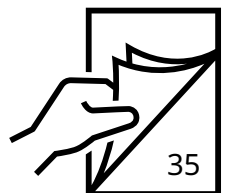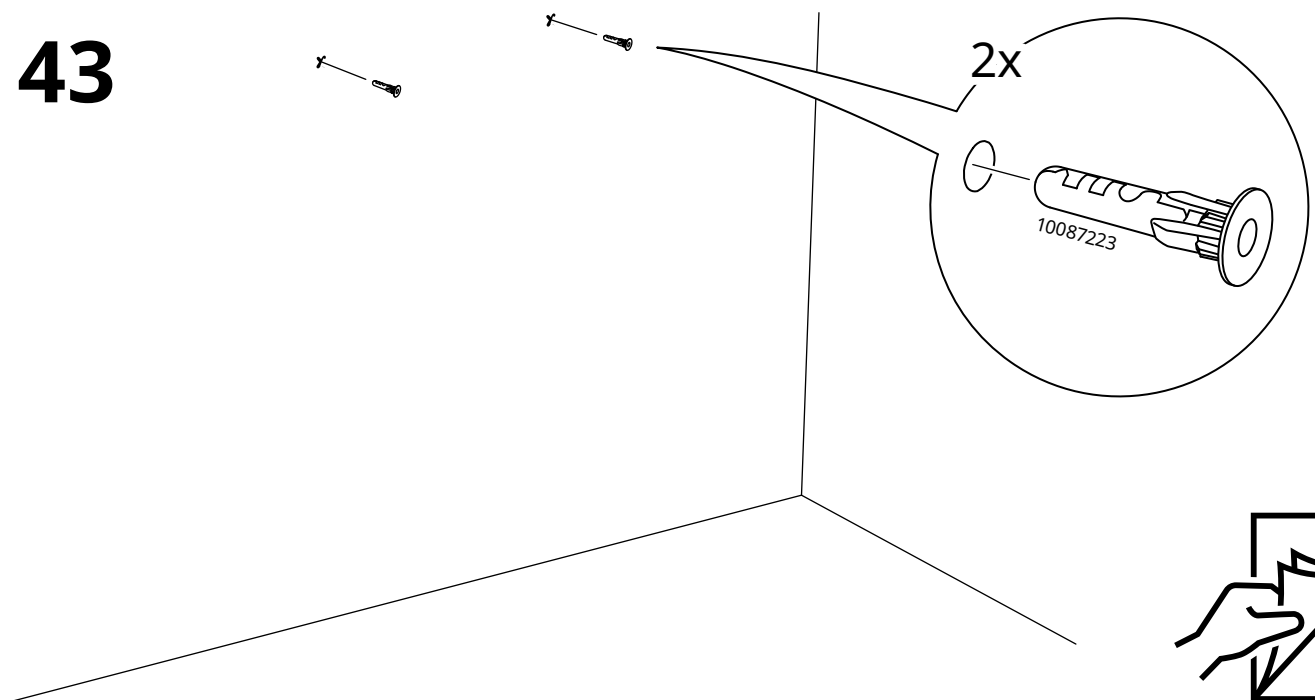

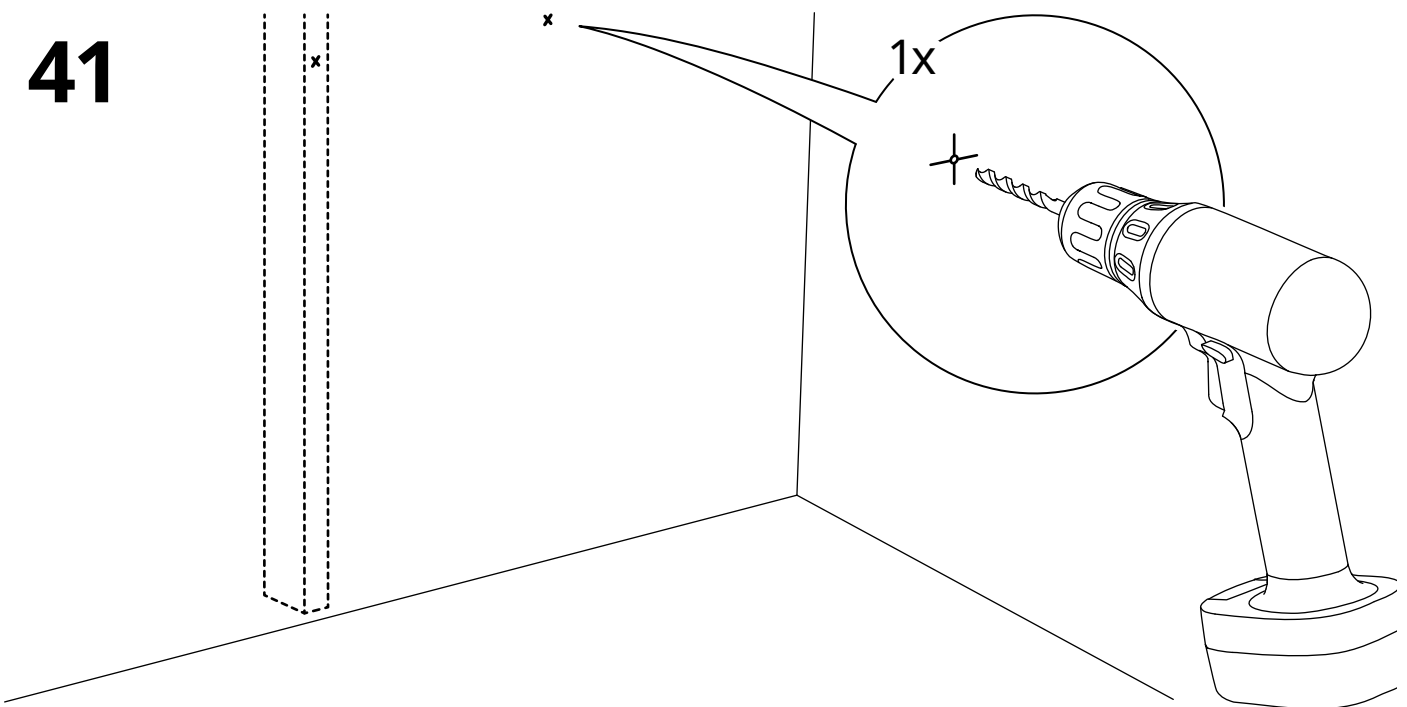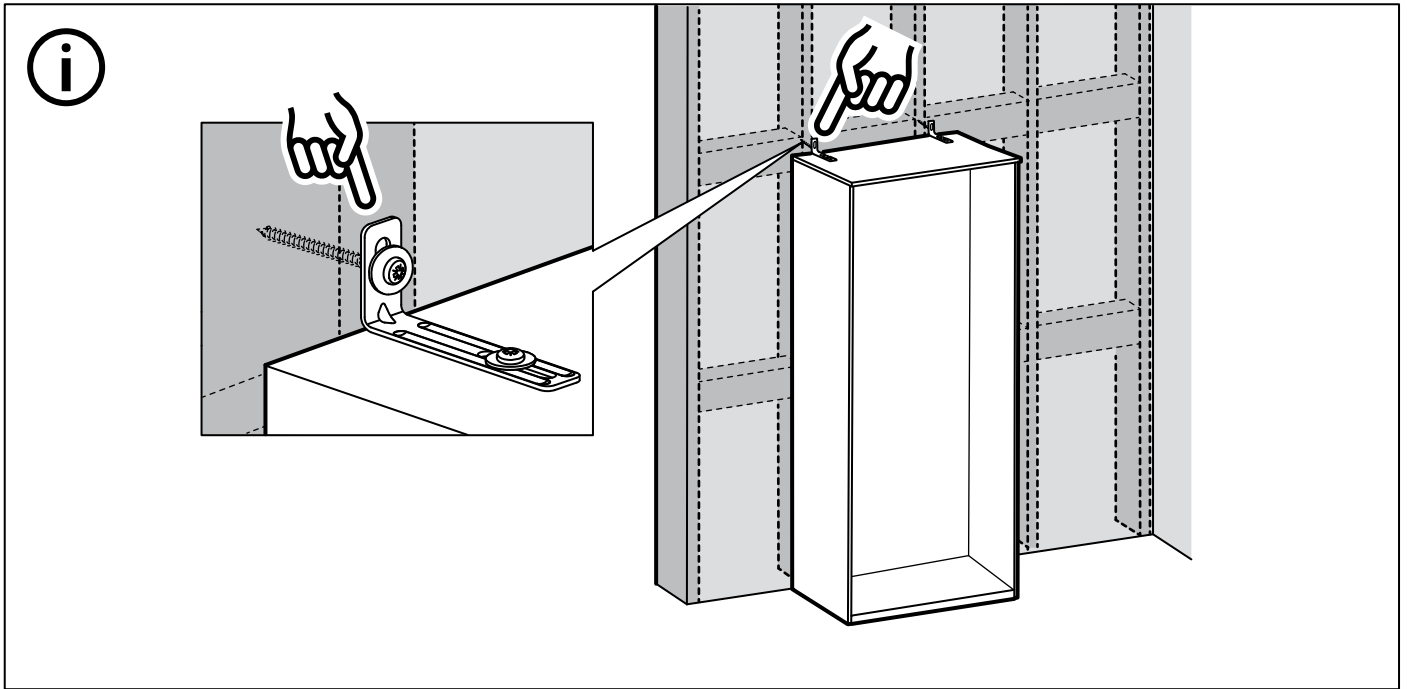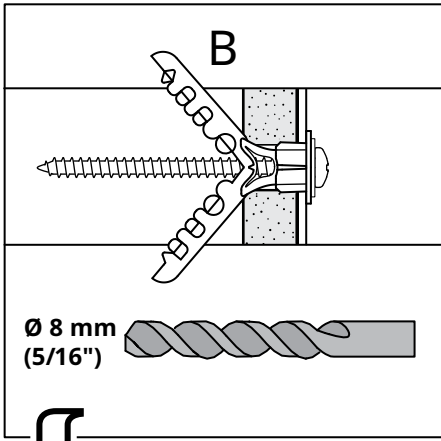



42

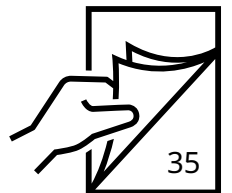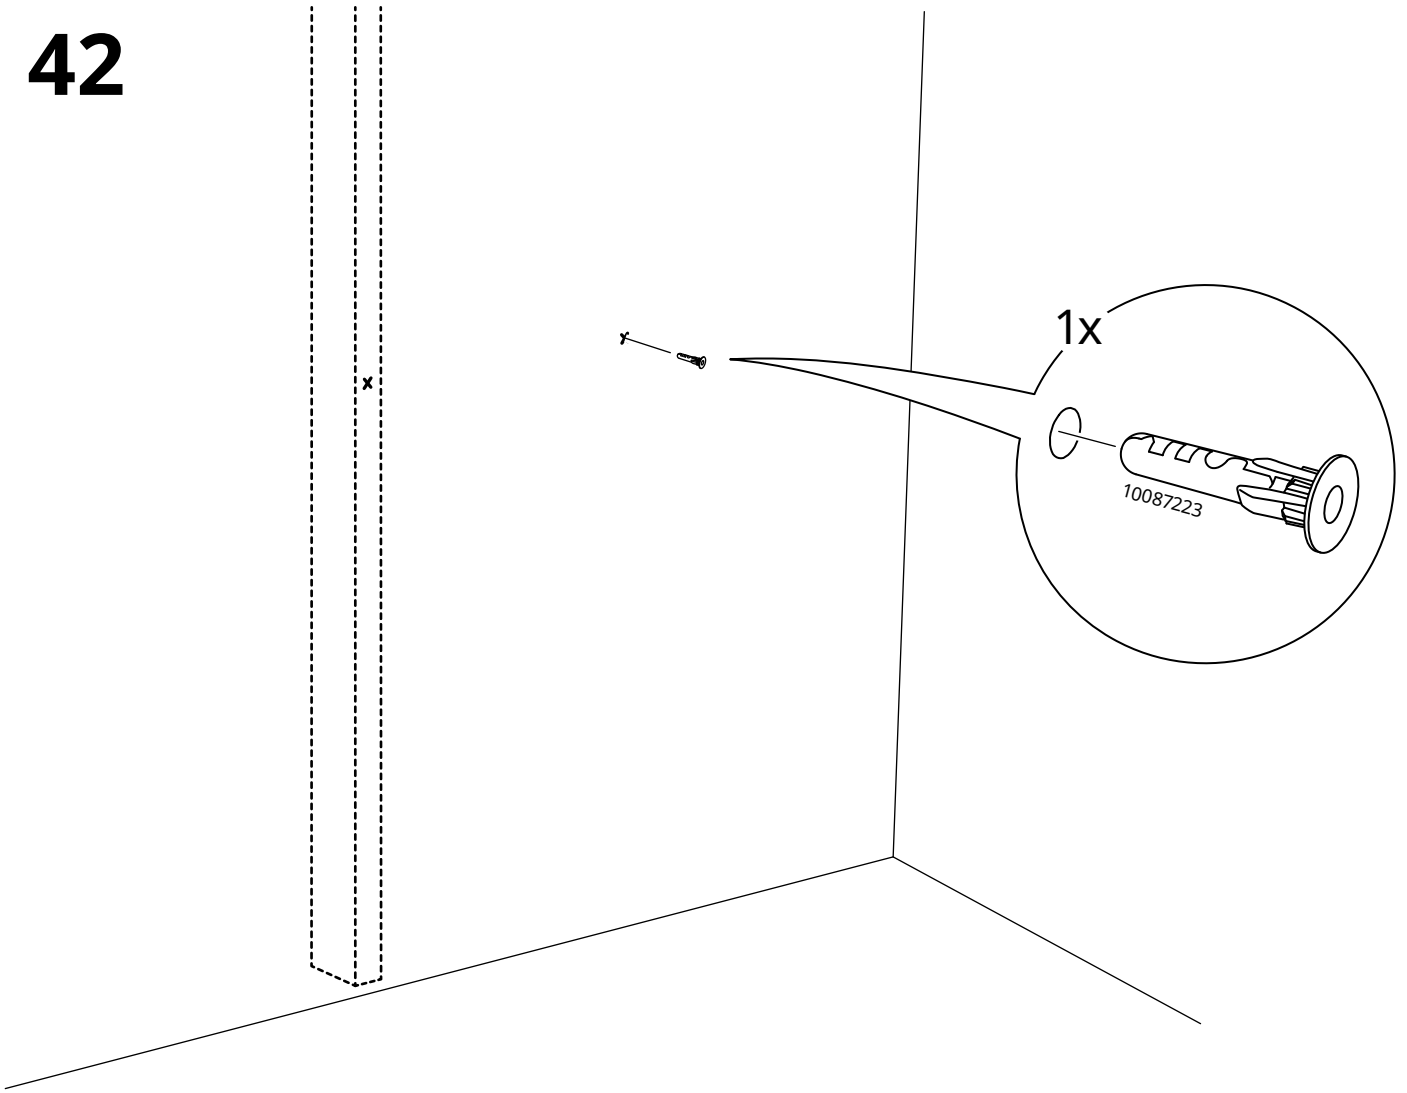  

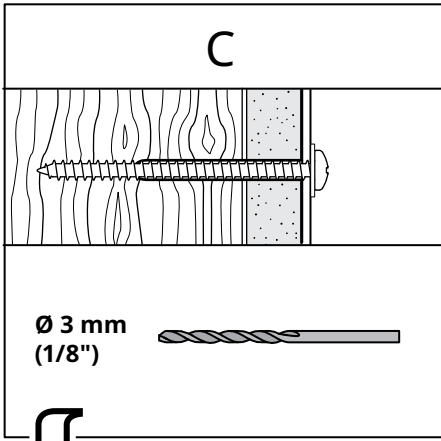 


41

 

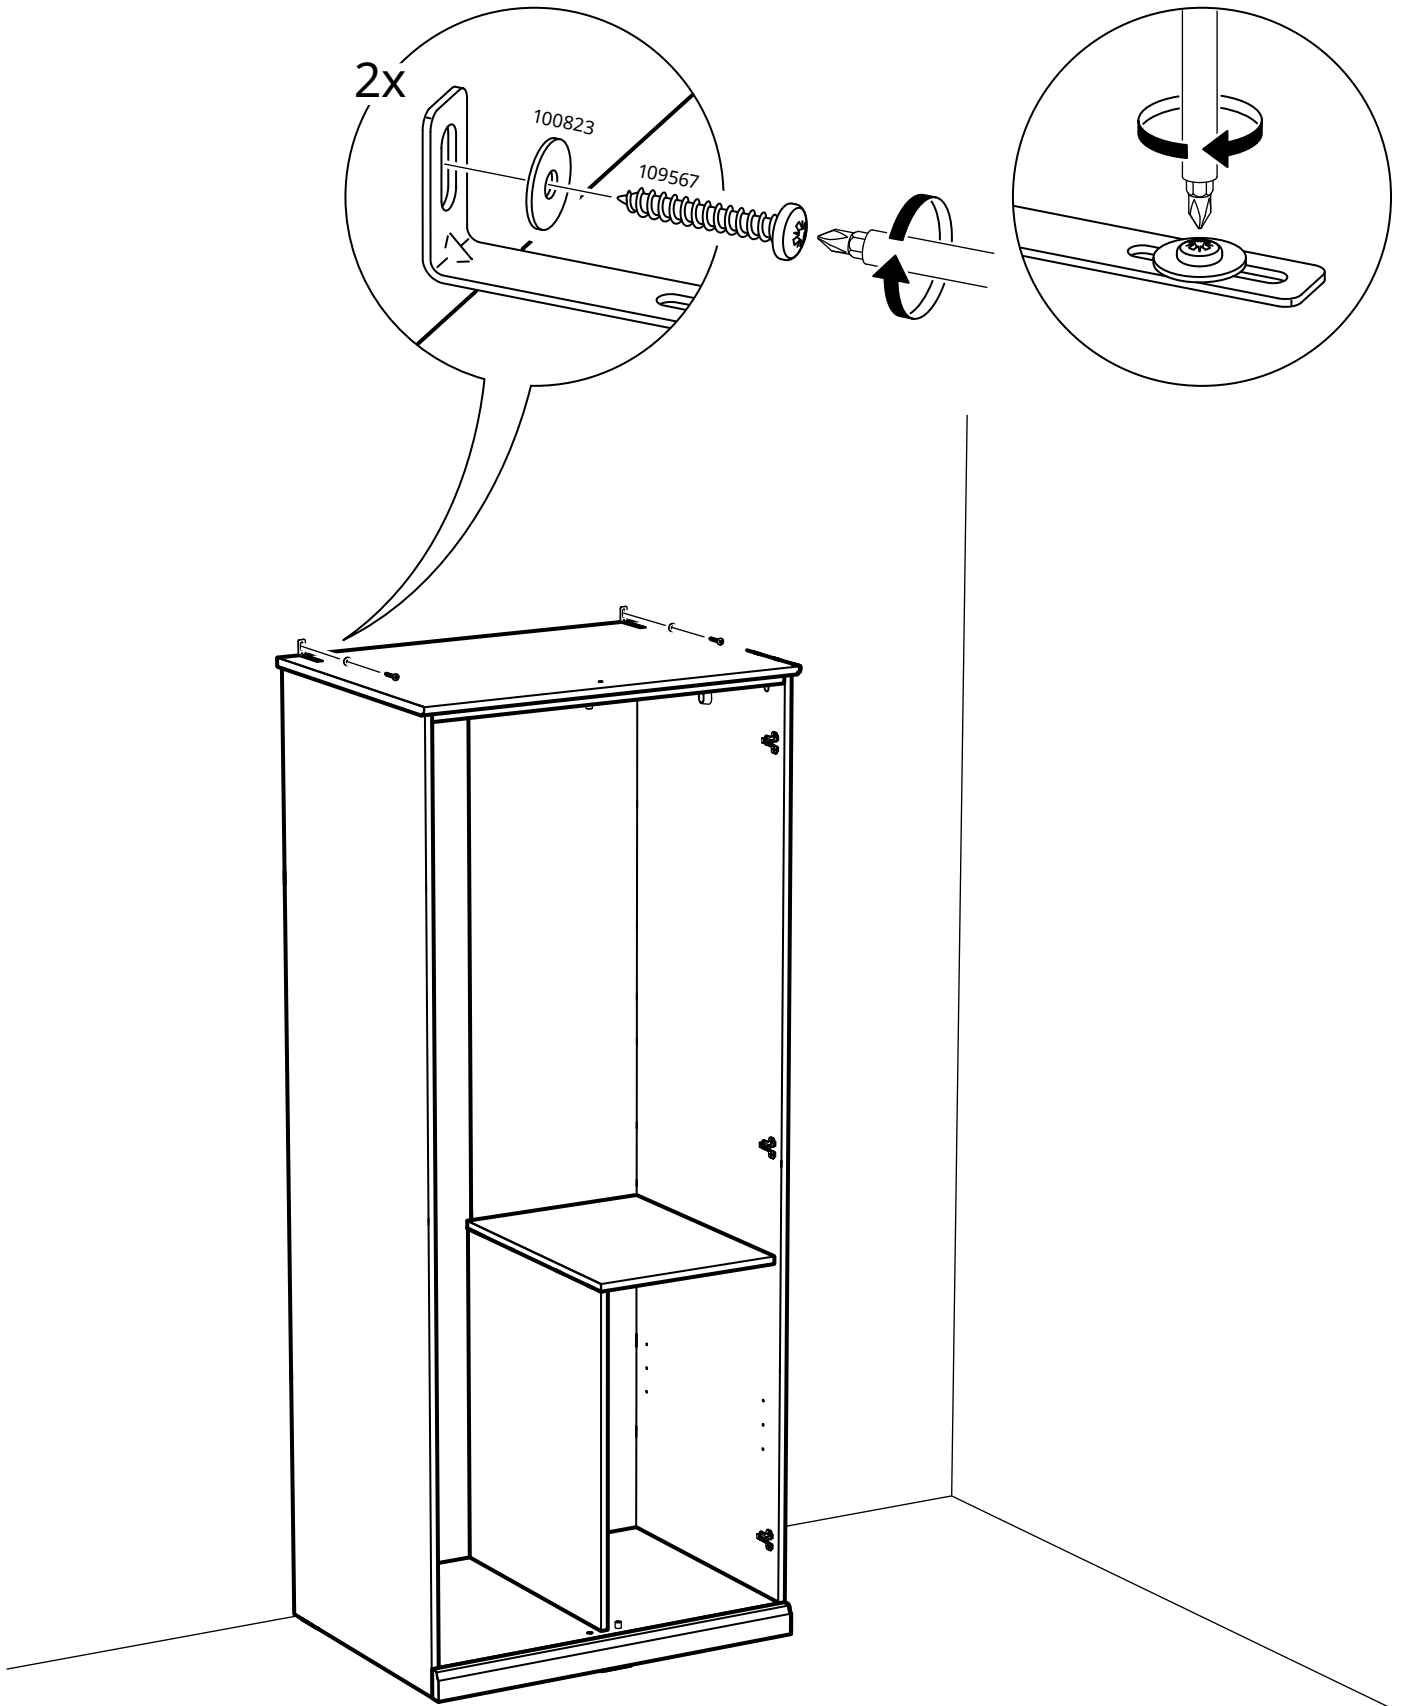 


45

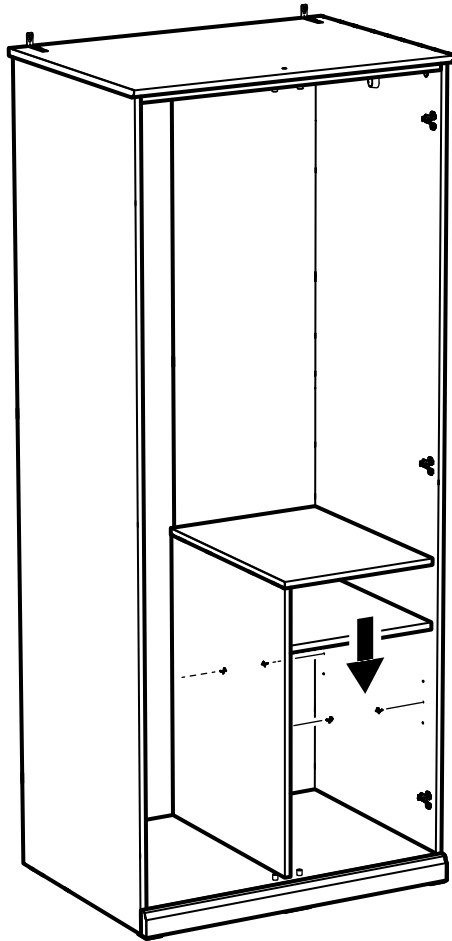 


4x

 131372




46

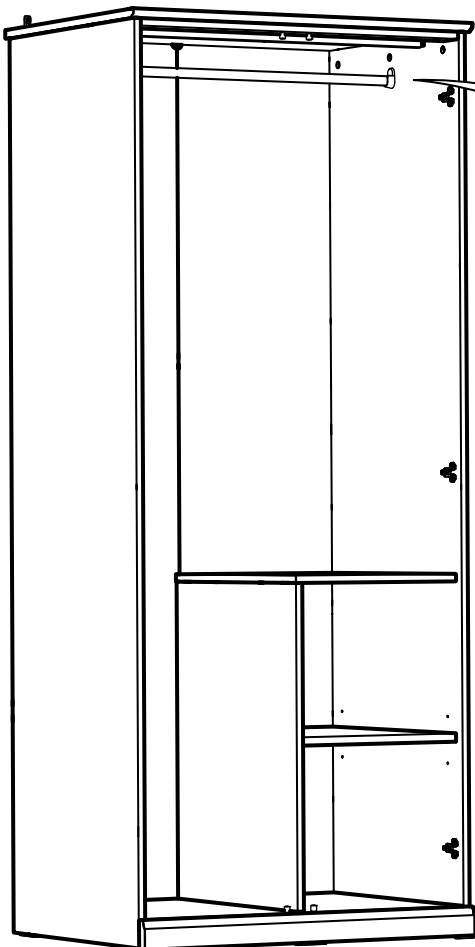 

2x

 146856
146857
10123477

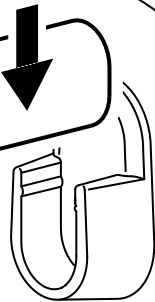

47

