 


FLYSTA

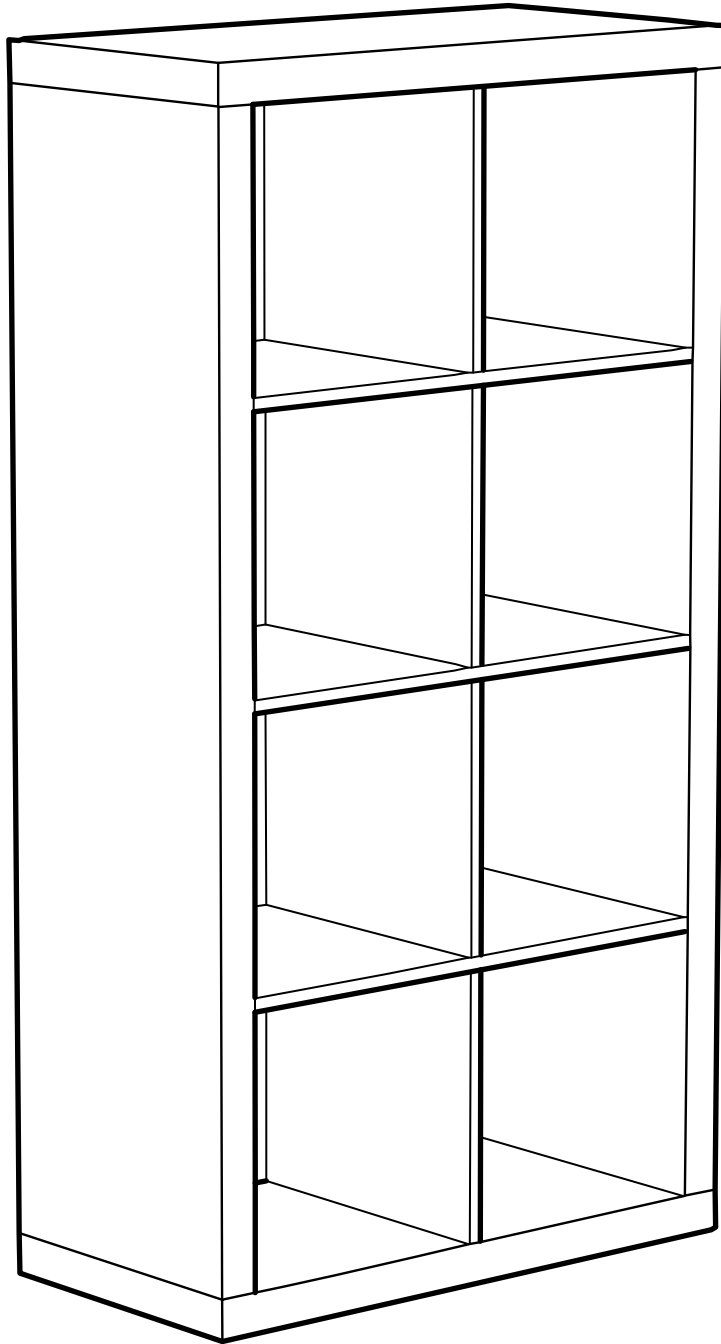

Design and Quality
IKEA of Sweden



English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

 
 
 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

NEVER open more than one drawer at a time.


Place heaviest items in the lowest drawers.

English

Read and follow each step of the instruction carefully.

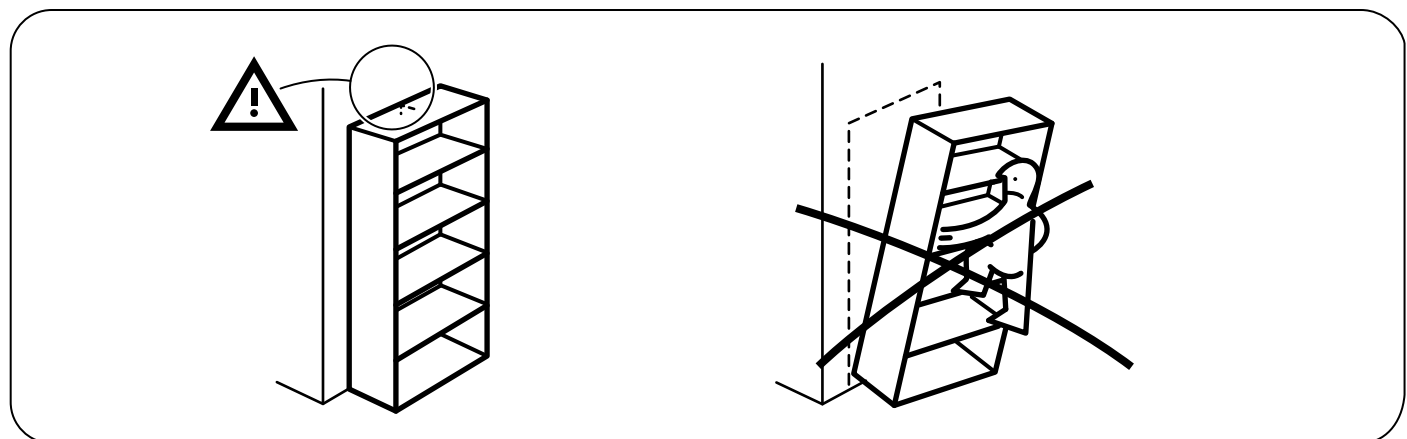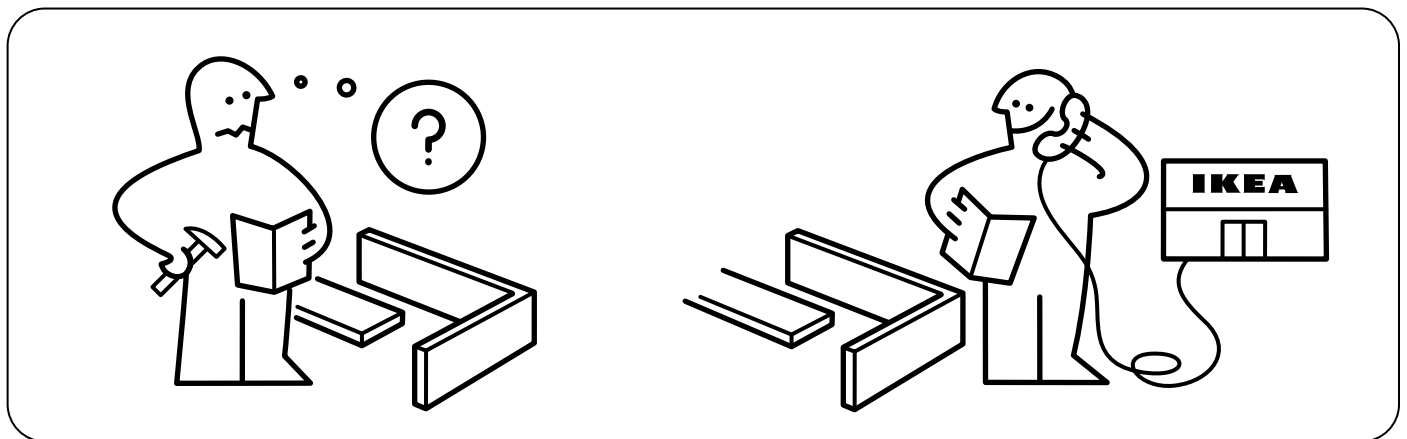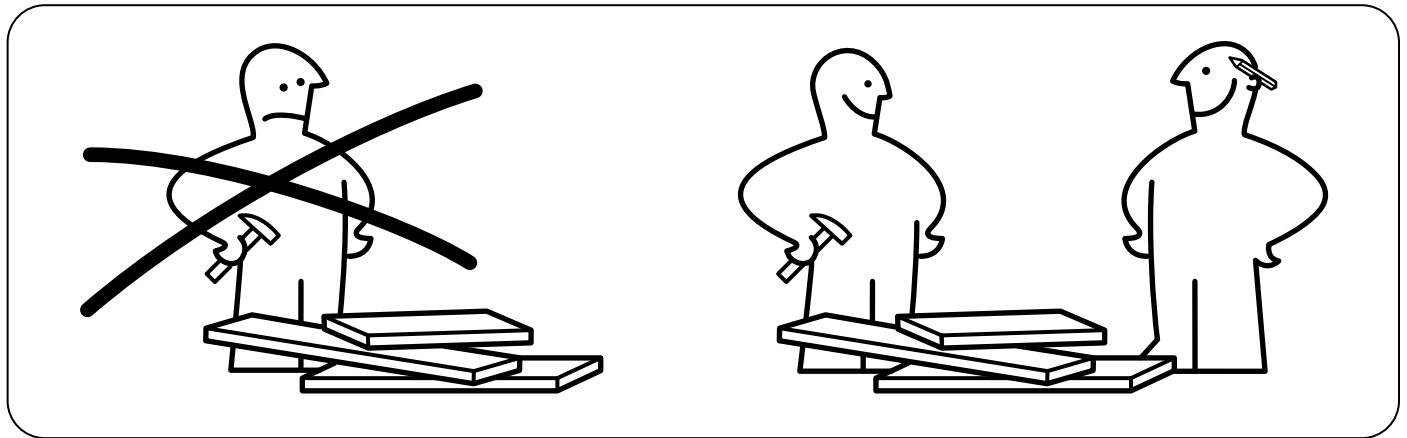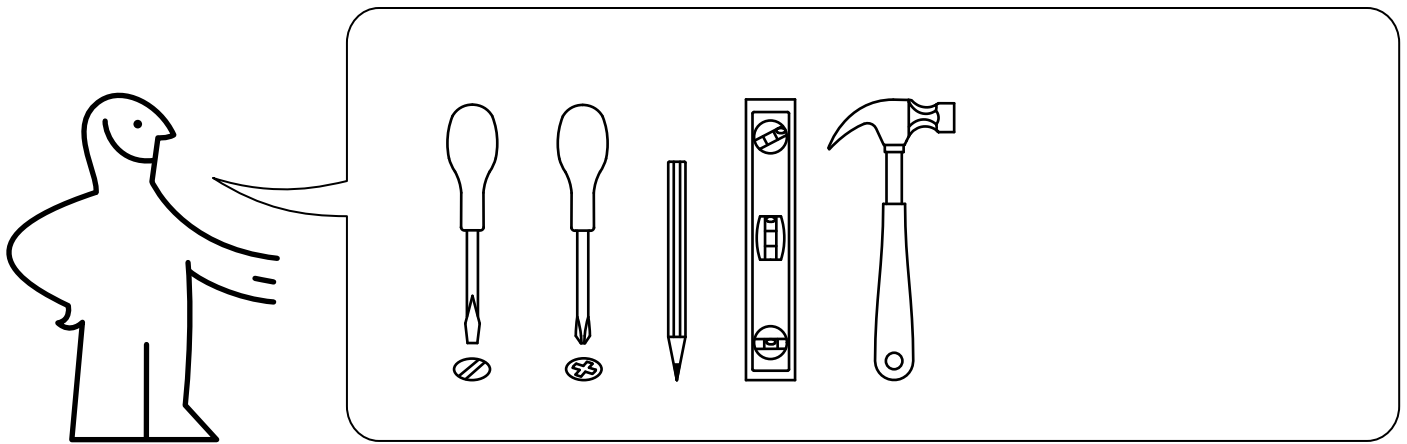


1

 


8x



 
12x

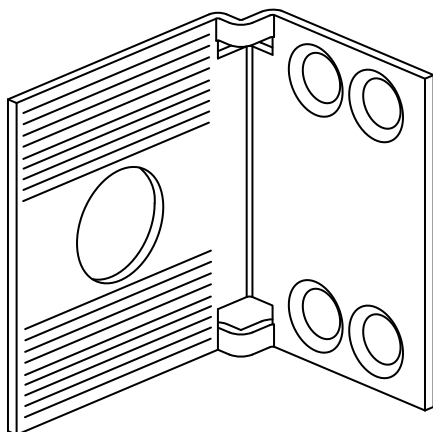

2x

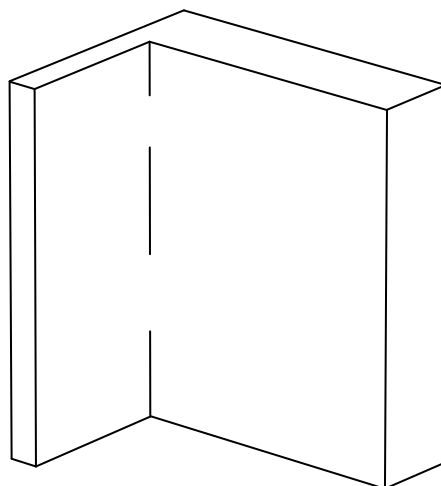 


2x

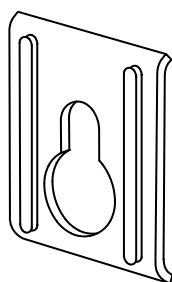 


2x



 
4x

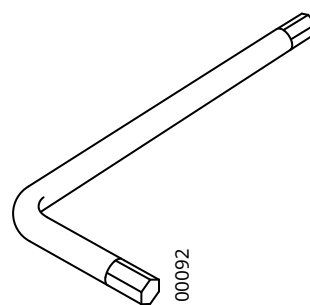

1x

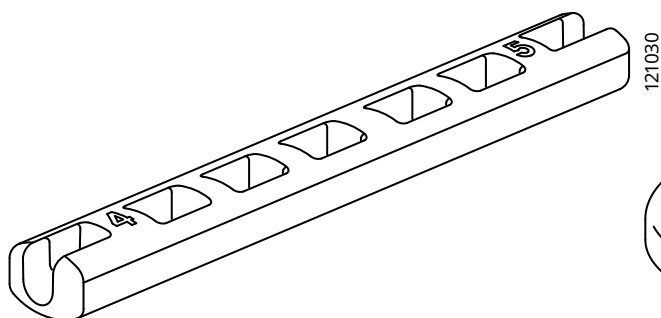 

1x

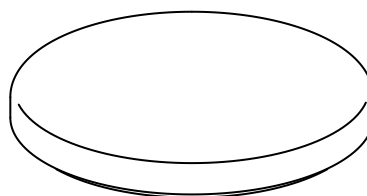 


8x

2



 32x

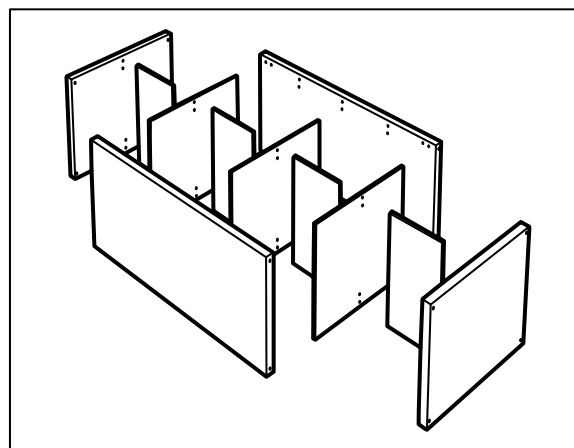

1

2x

104321

 
121030

100092


4

i


3

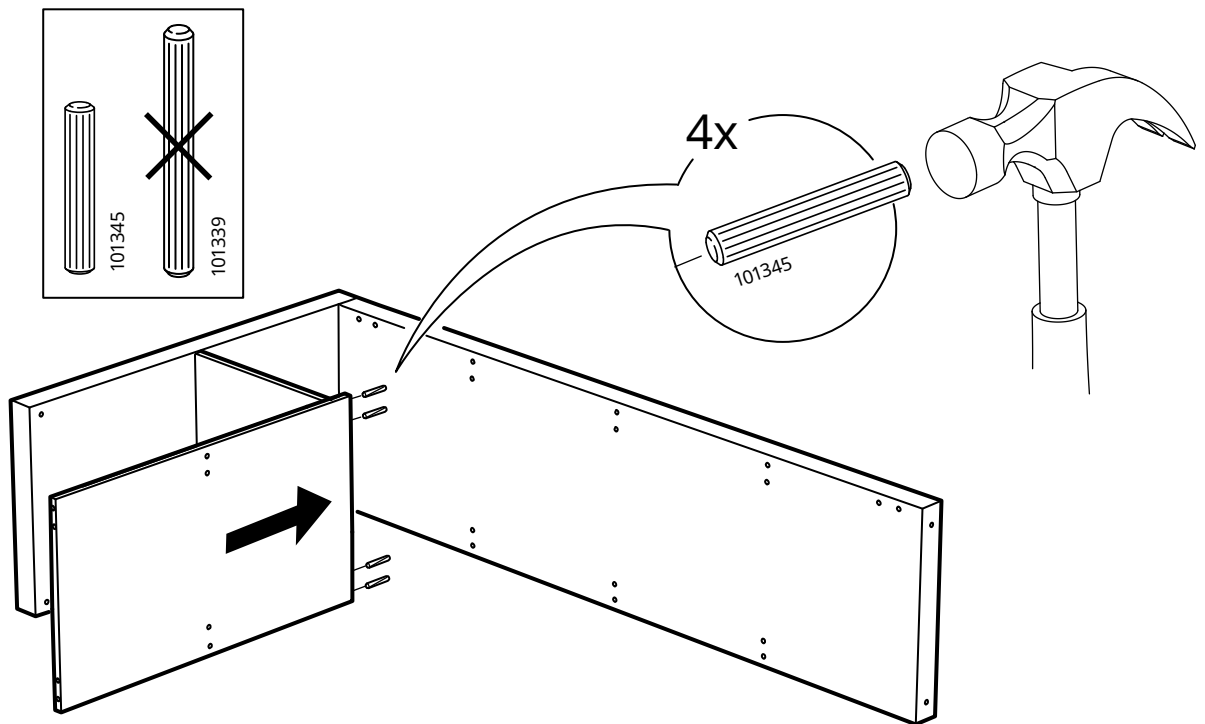


4

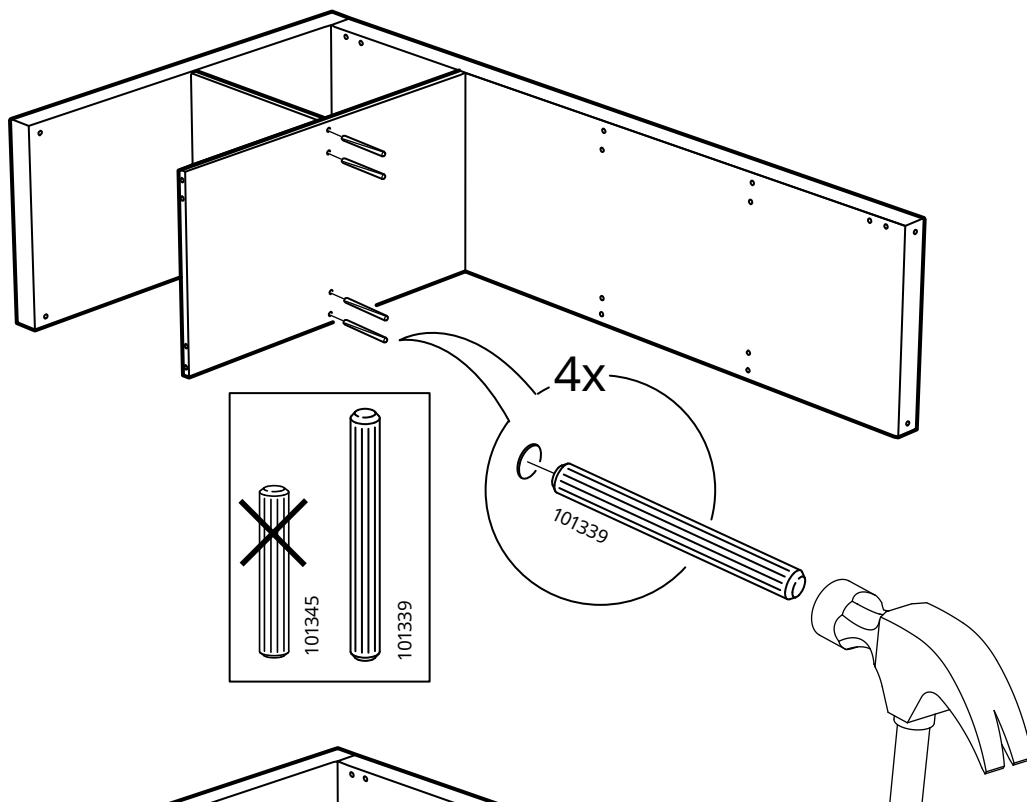 


5

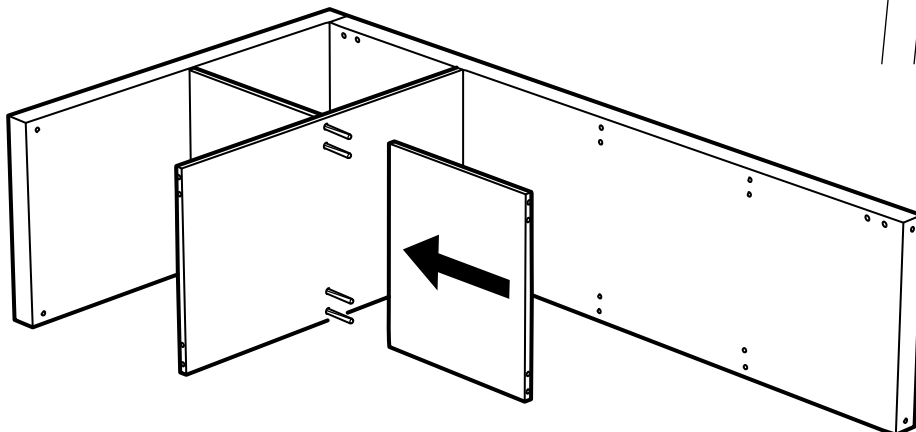 


6

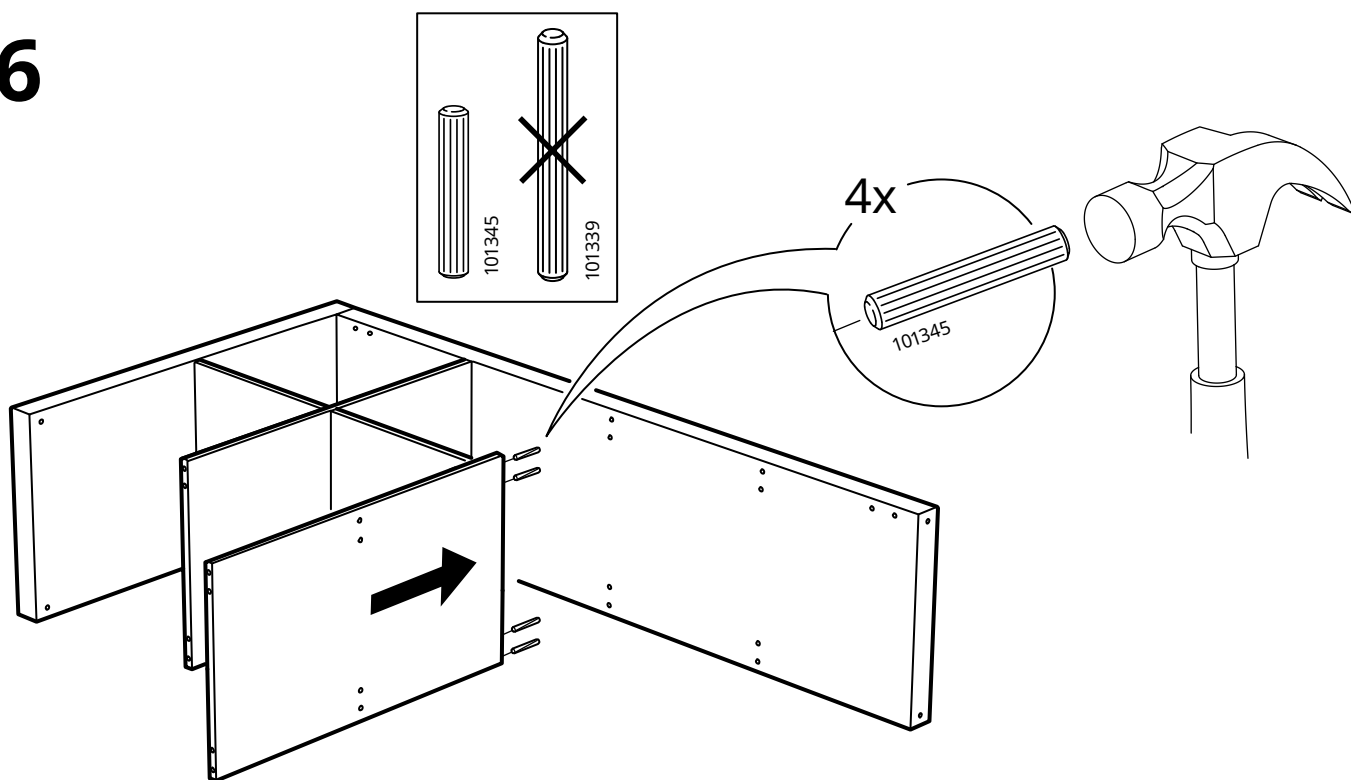 


7

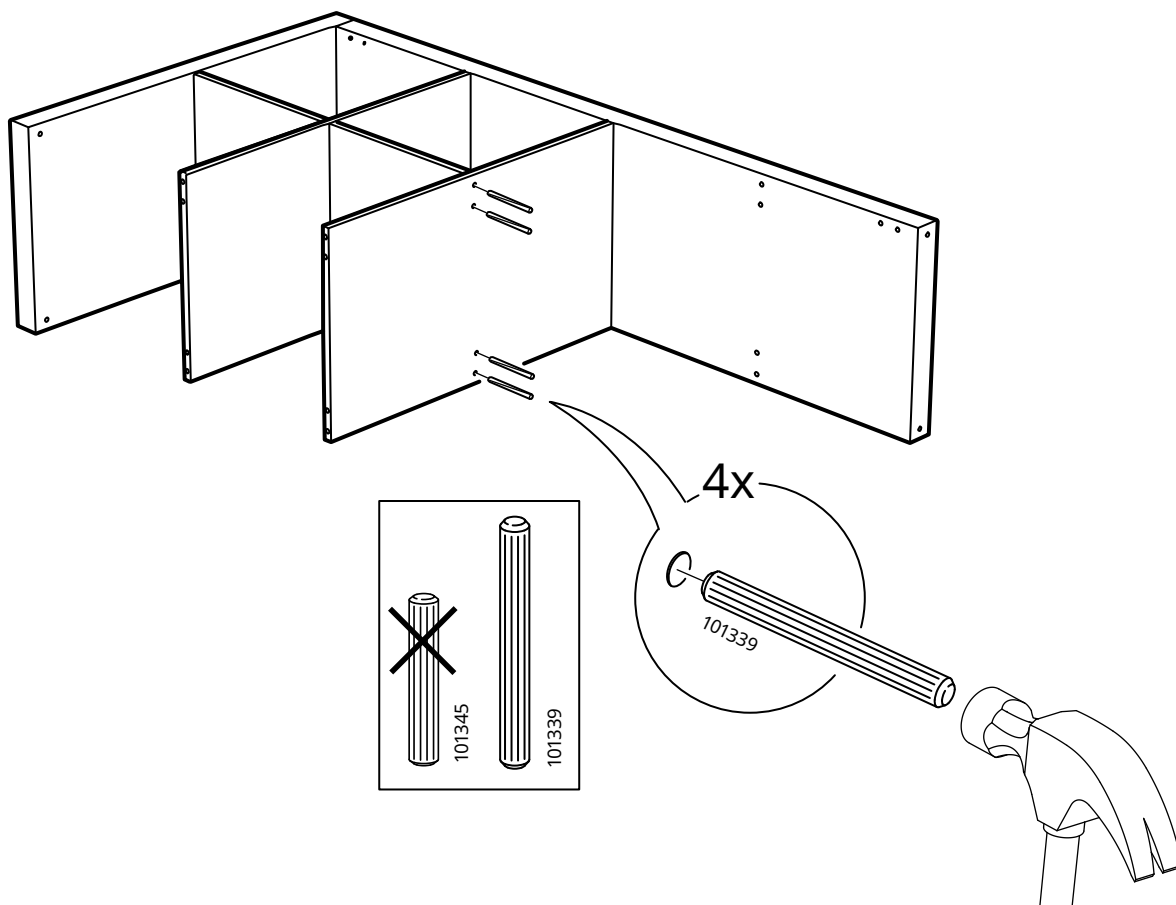 


8

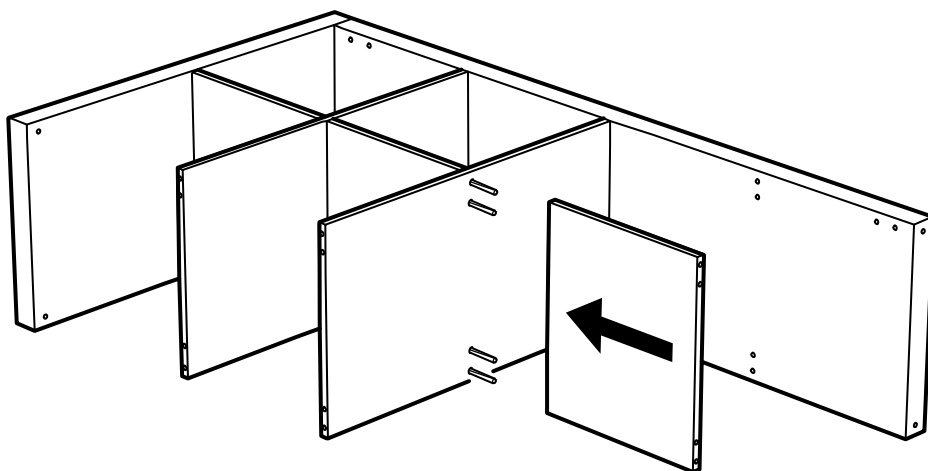 


9

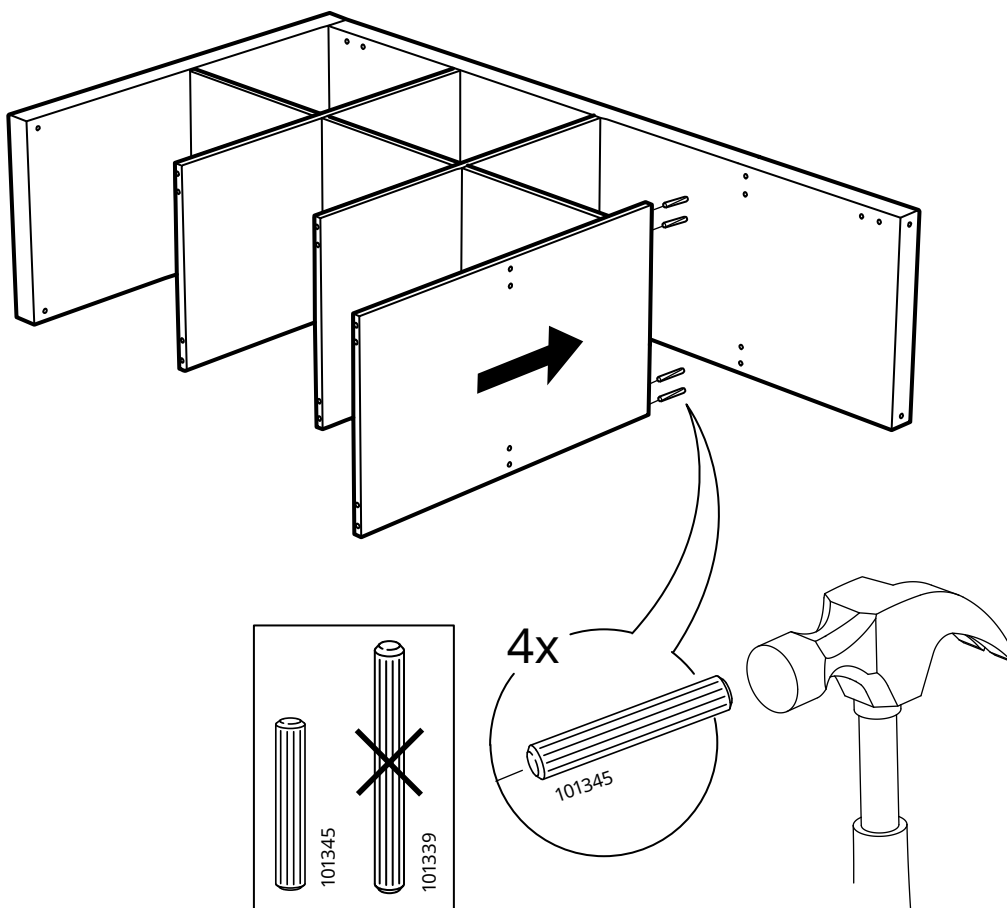 


10

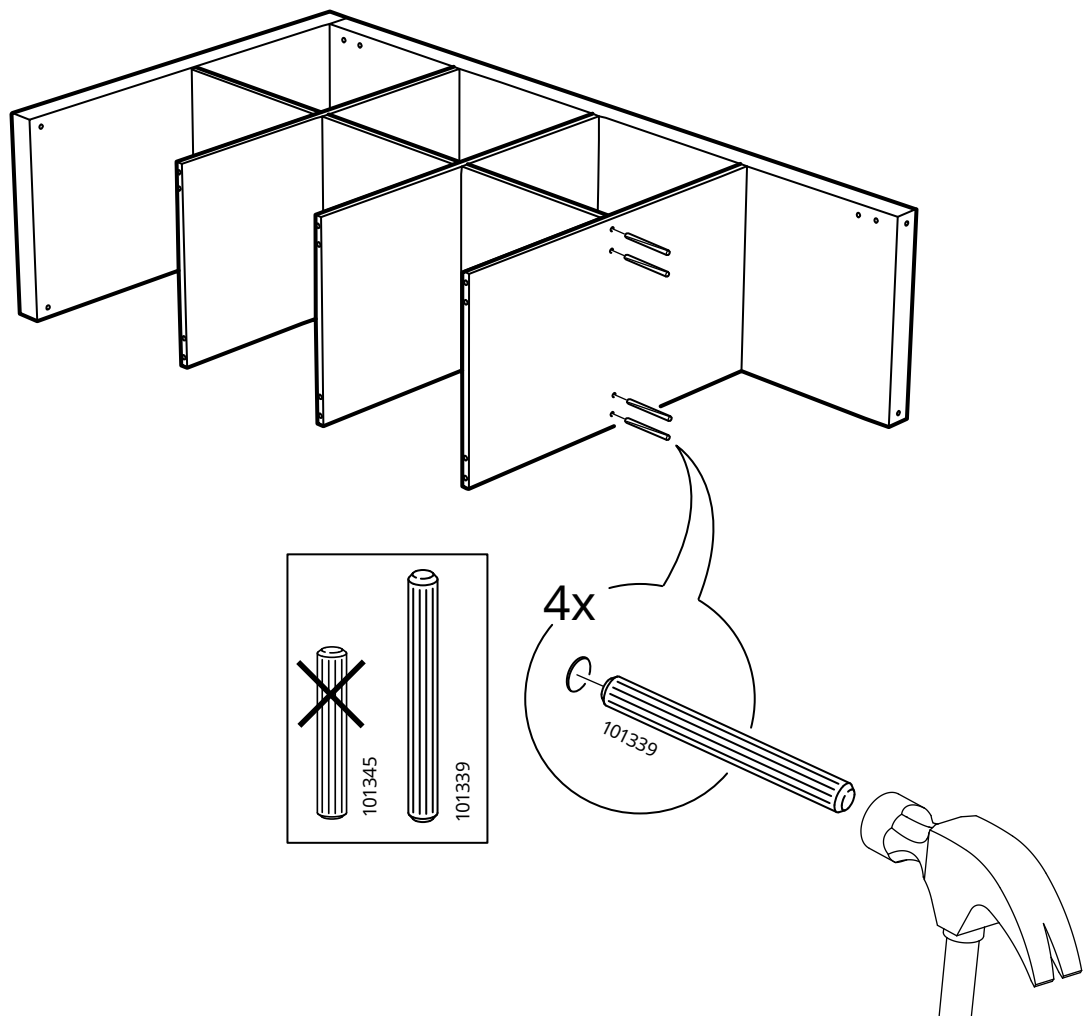 


11

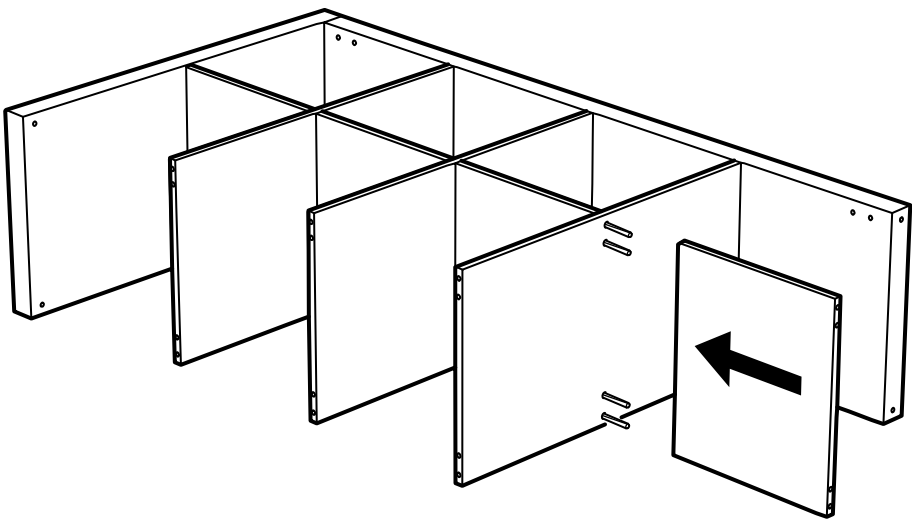 




12


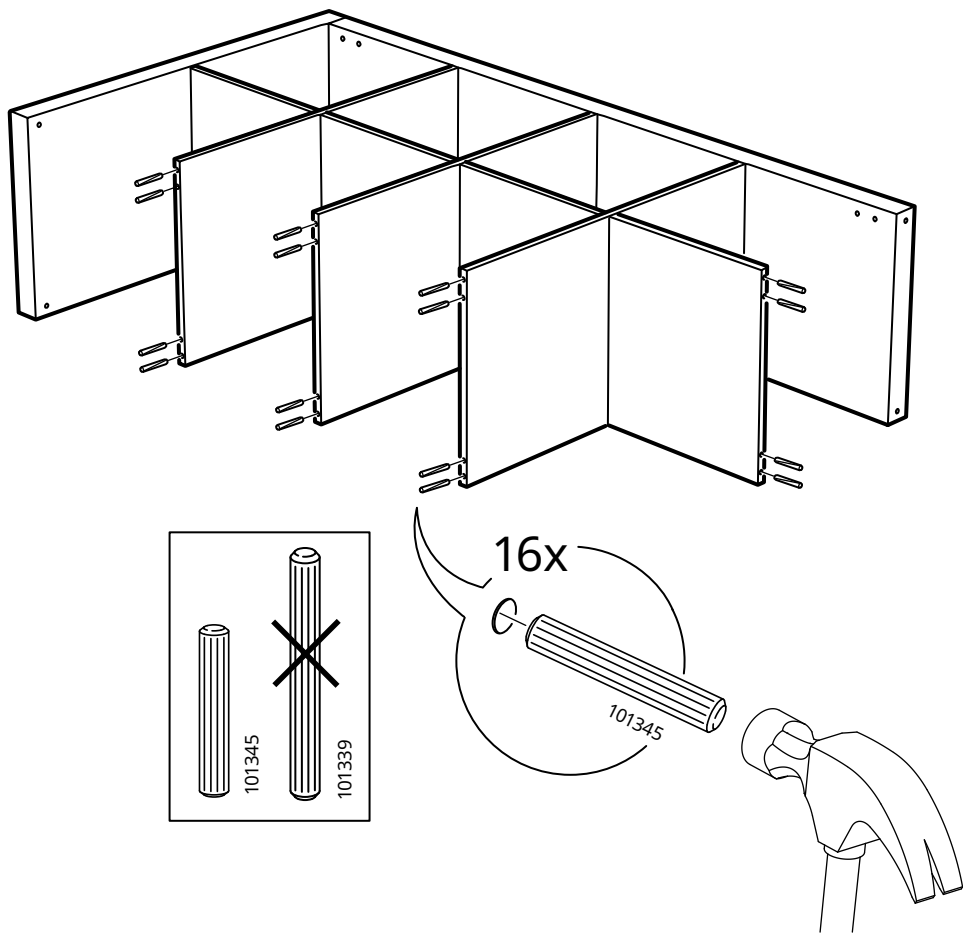 


13



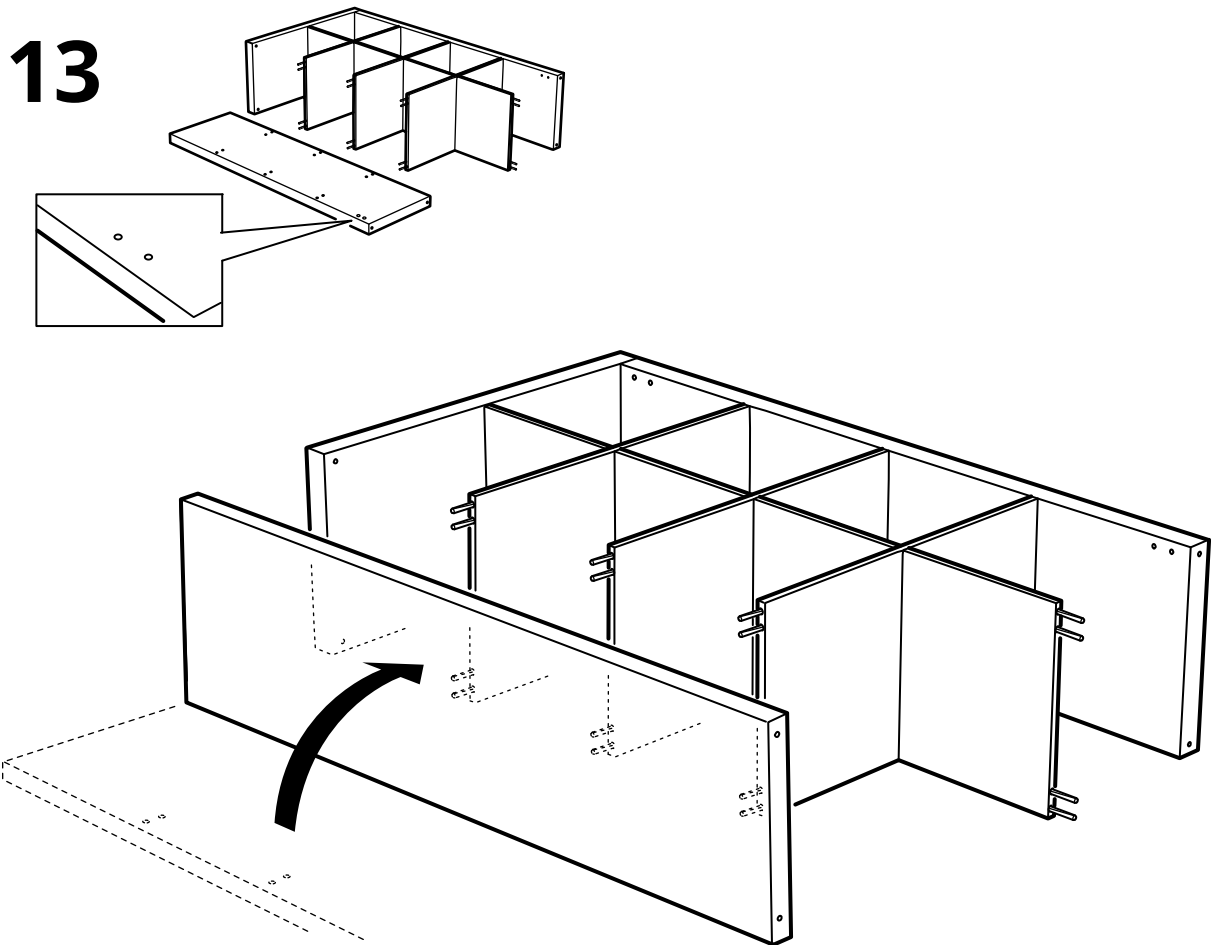 



14

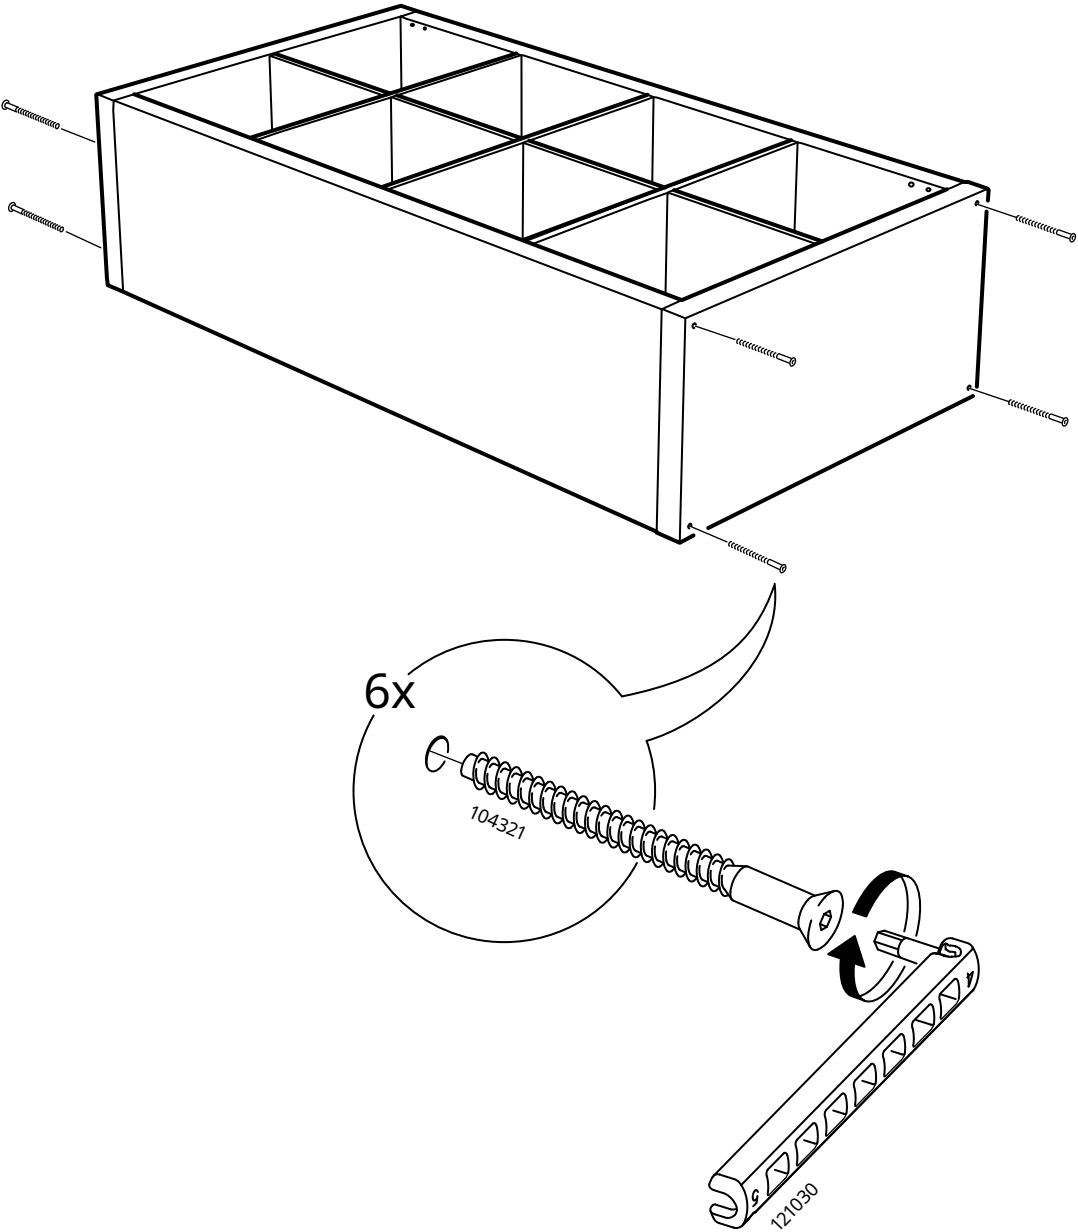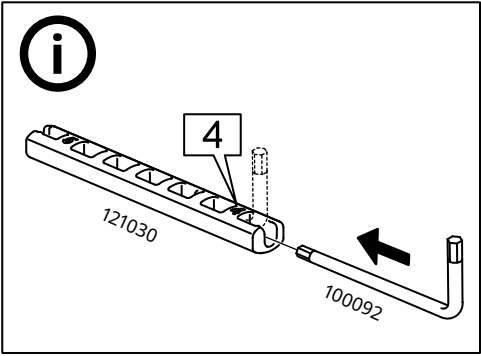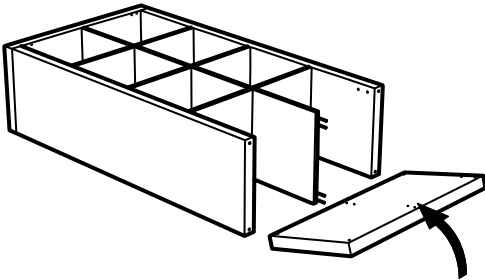   

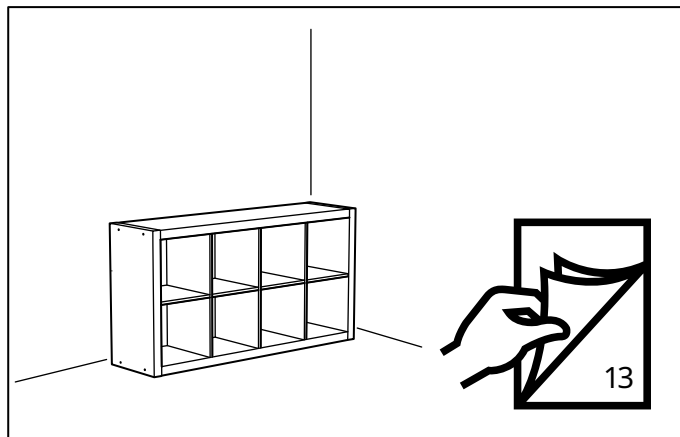 
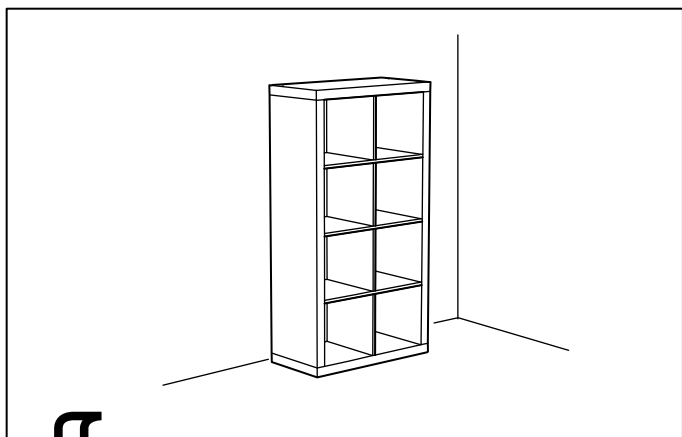 





15

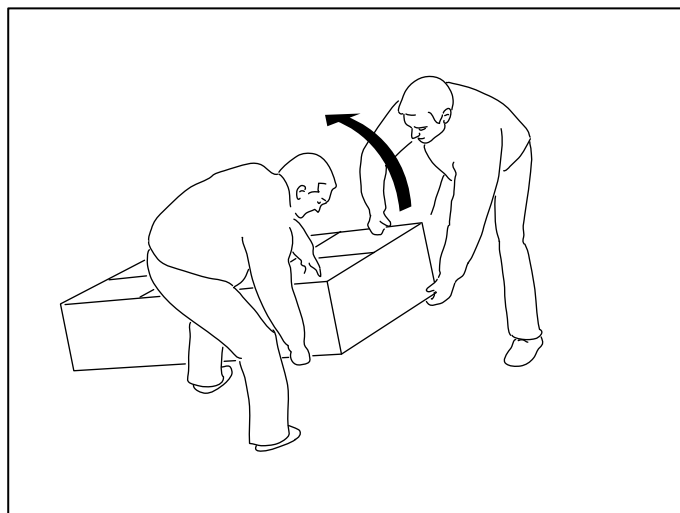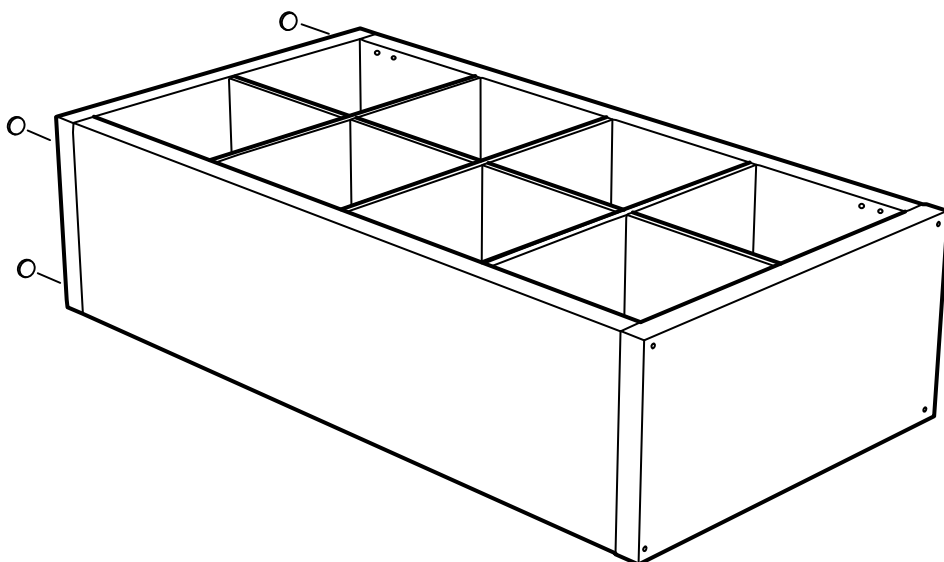  
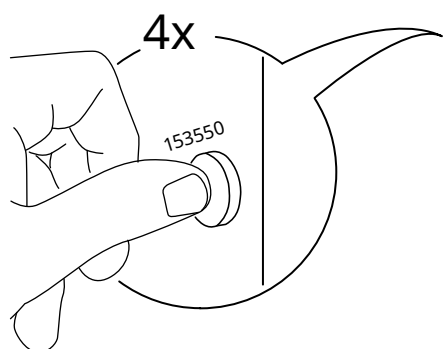 


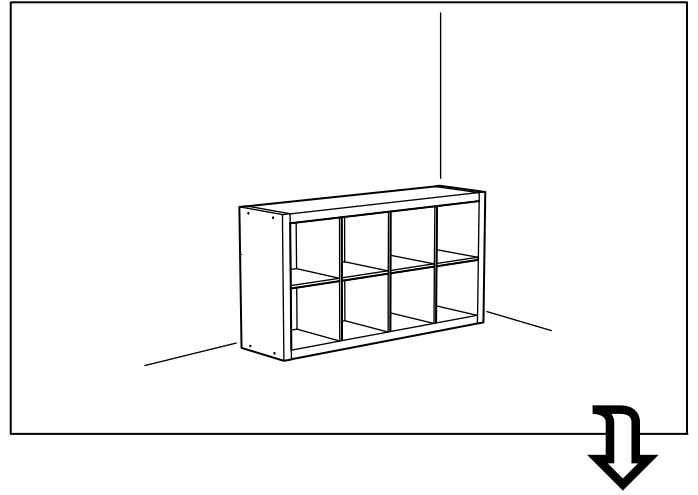 



15

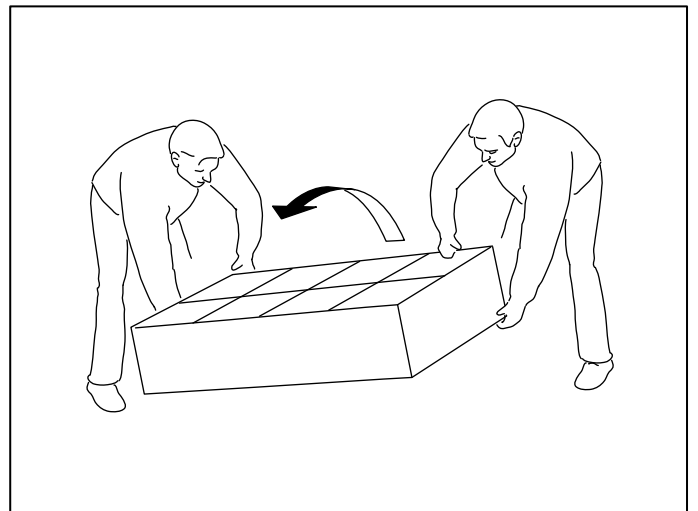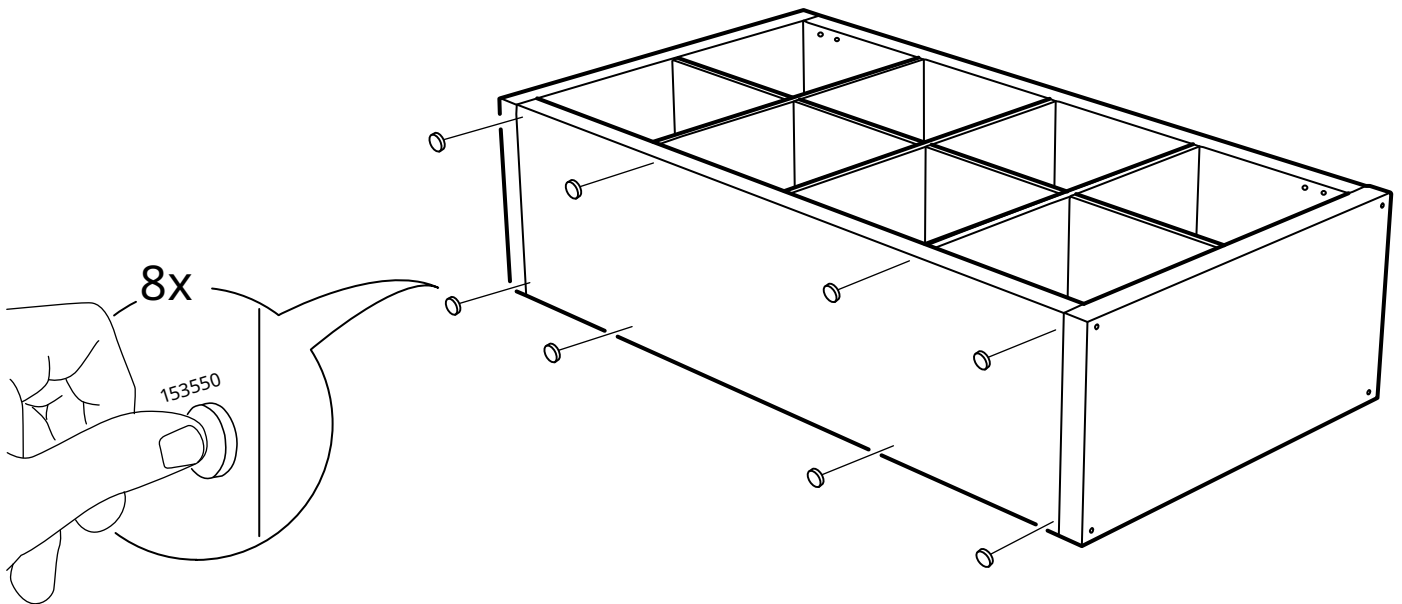  

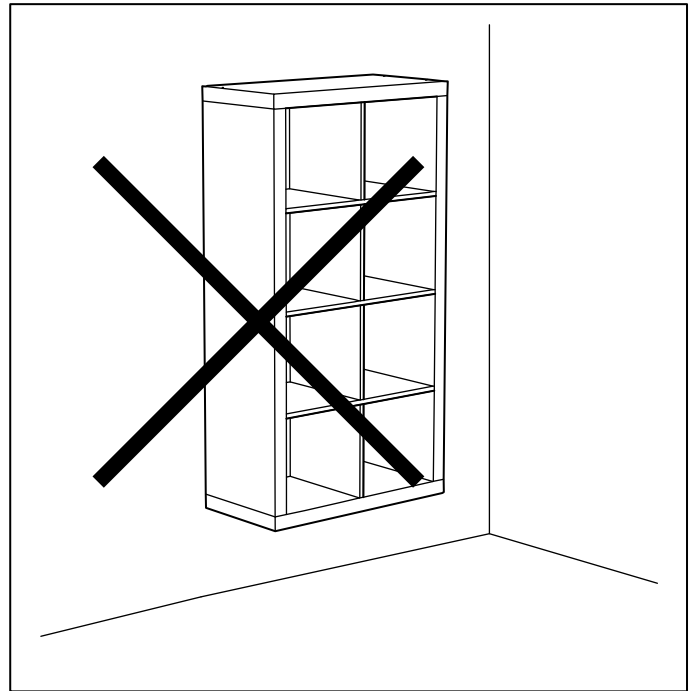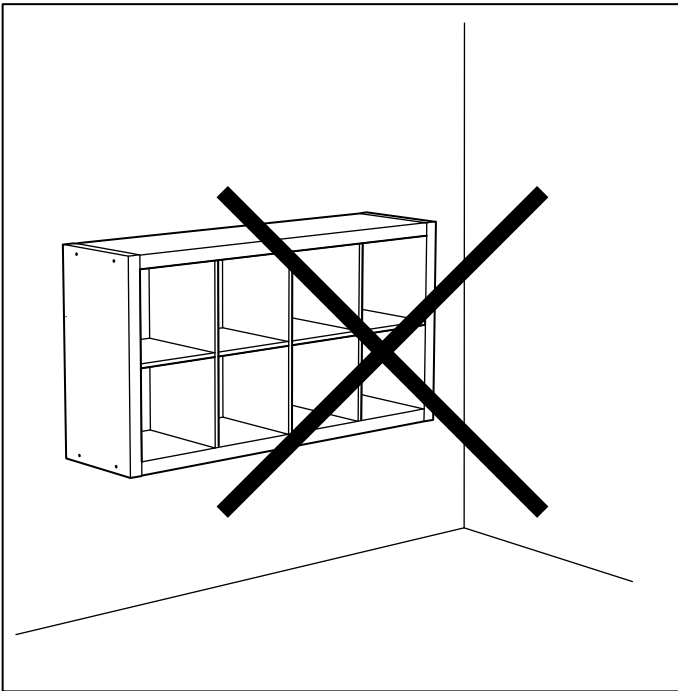  
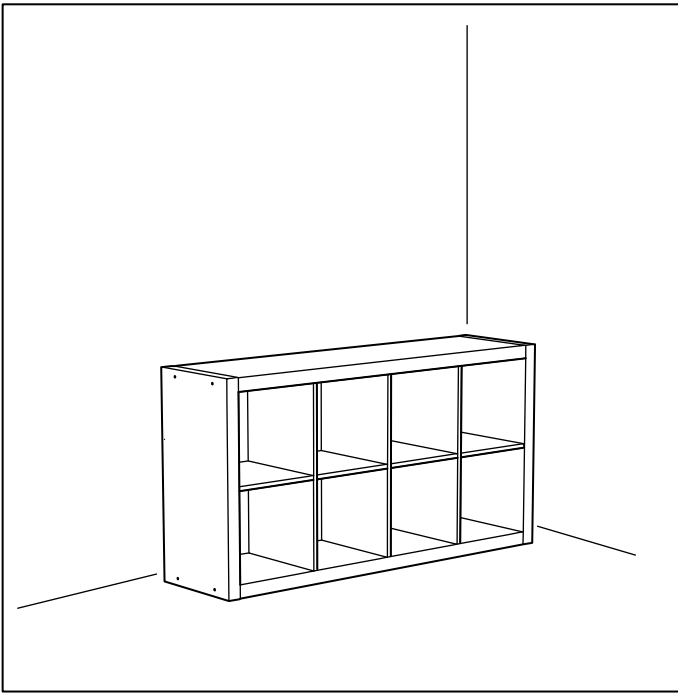 


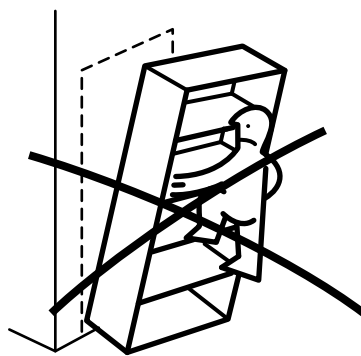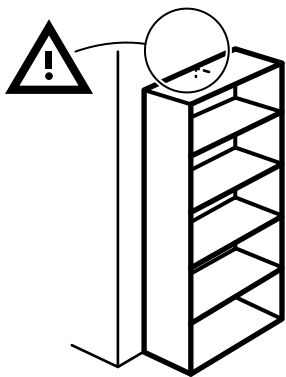  


16

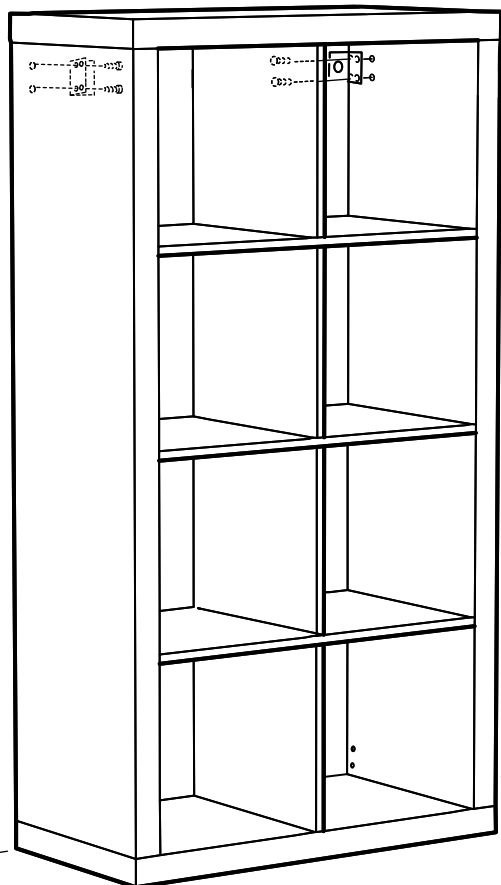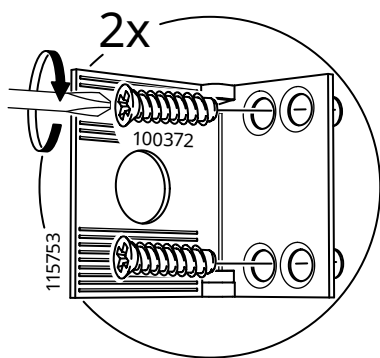  

17

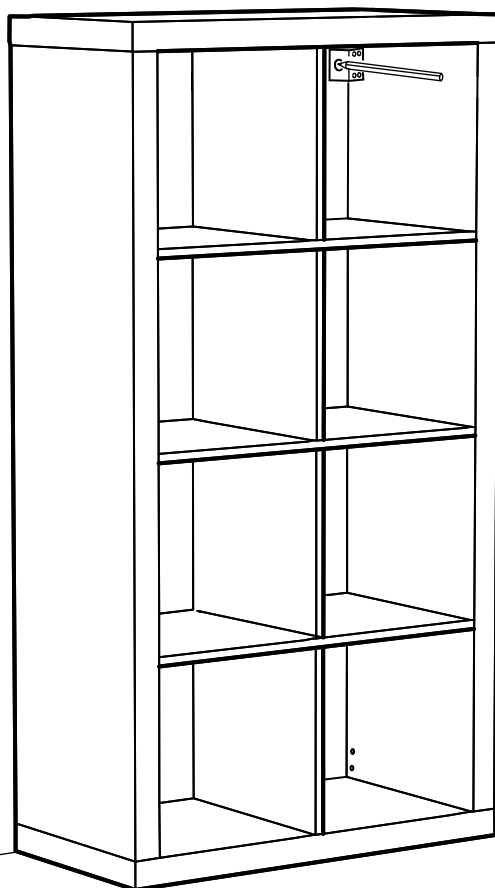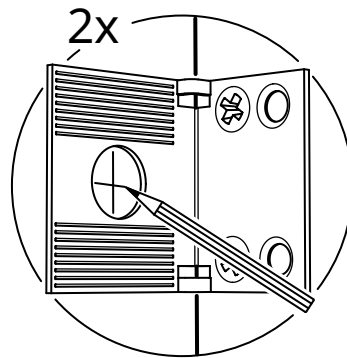  

18

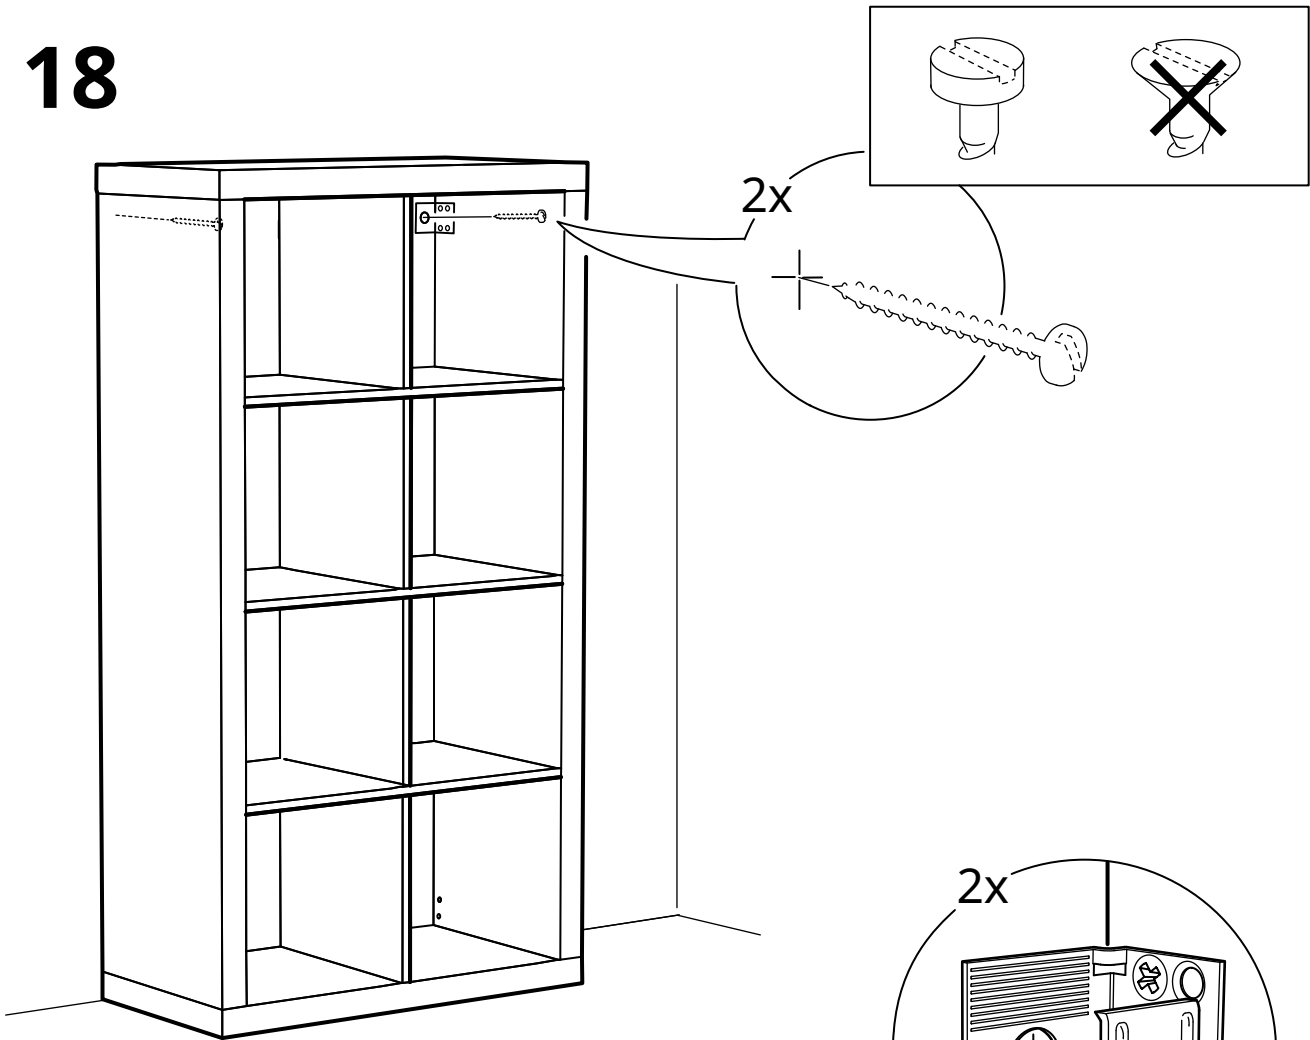 

19

