 


GERSBY

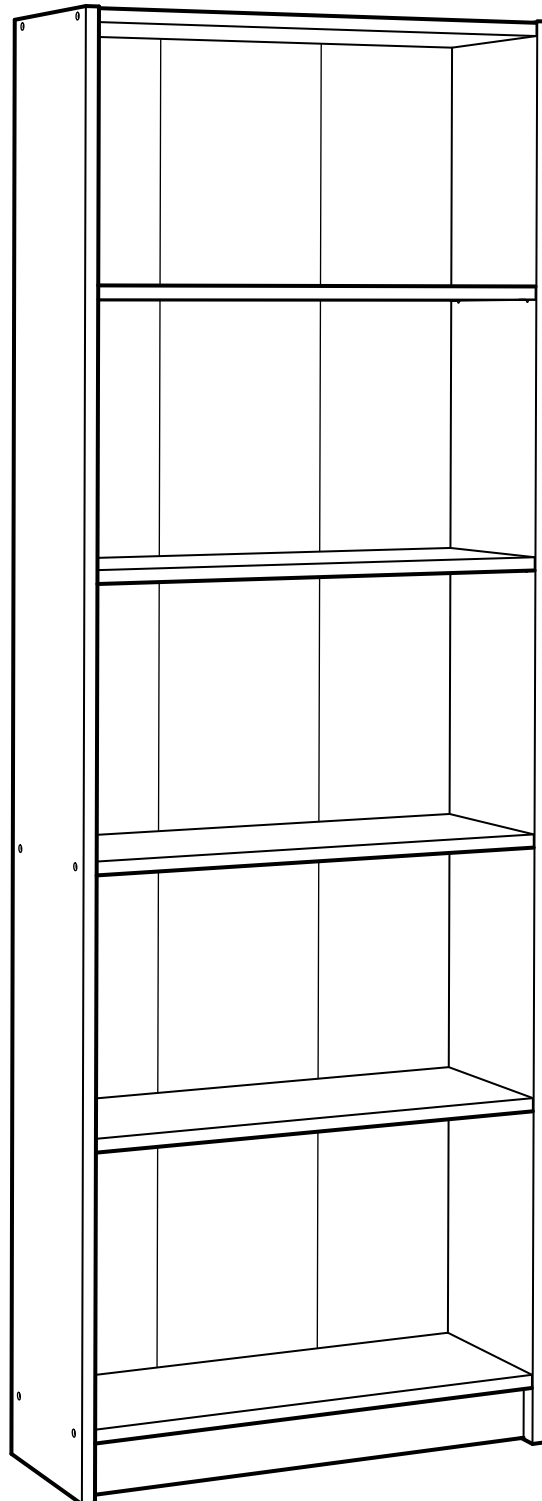

Design and Quality
IKEA of Sweden



English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

 
 
 
 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

 
 
 
NEVER open more than one drawer at a time.

Place heaviest items in the lowest drawers.

English


Read and follow each step of the instruction carefully.

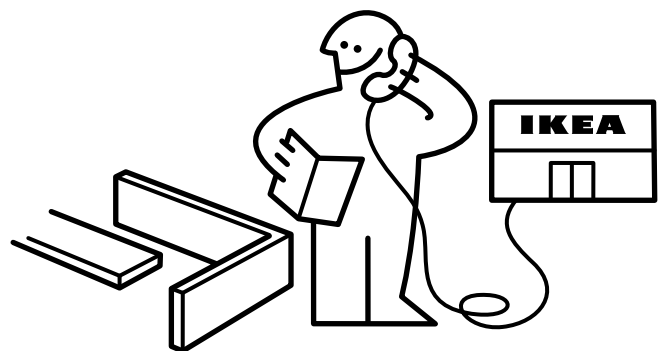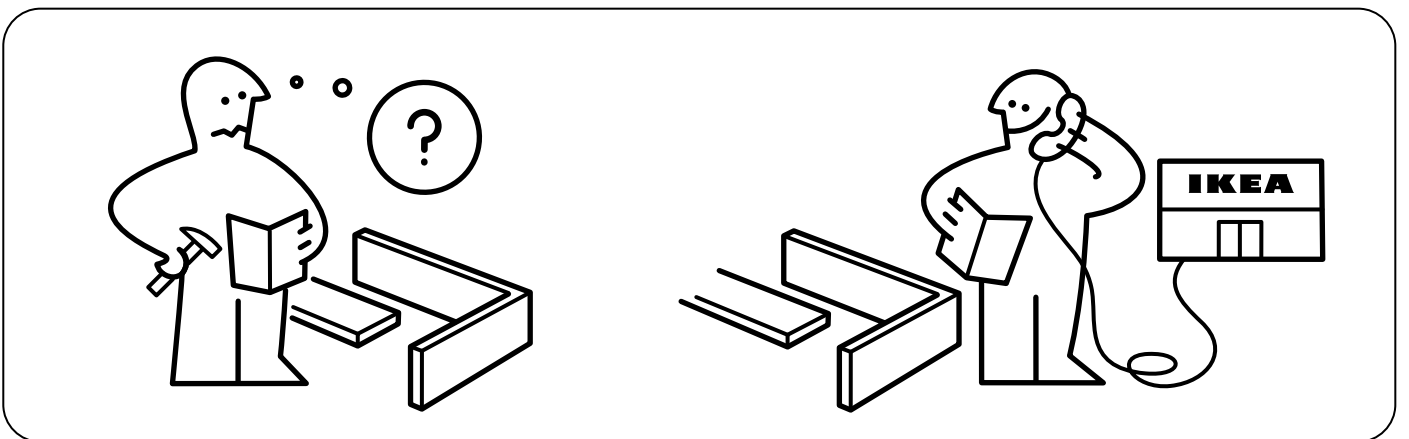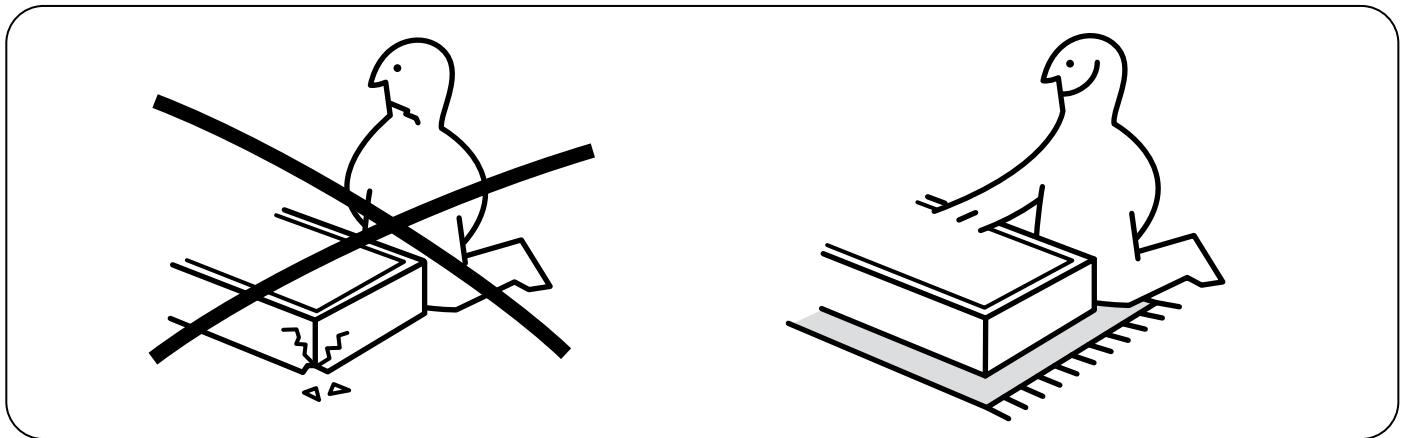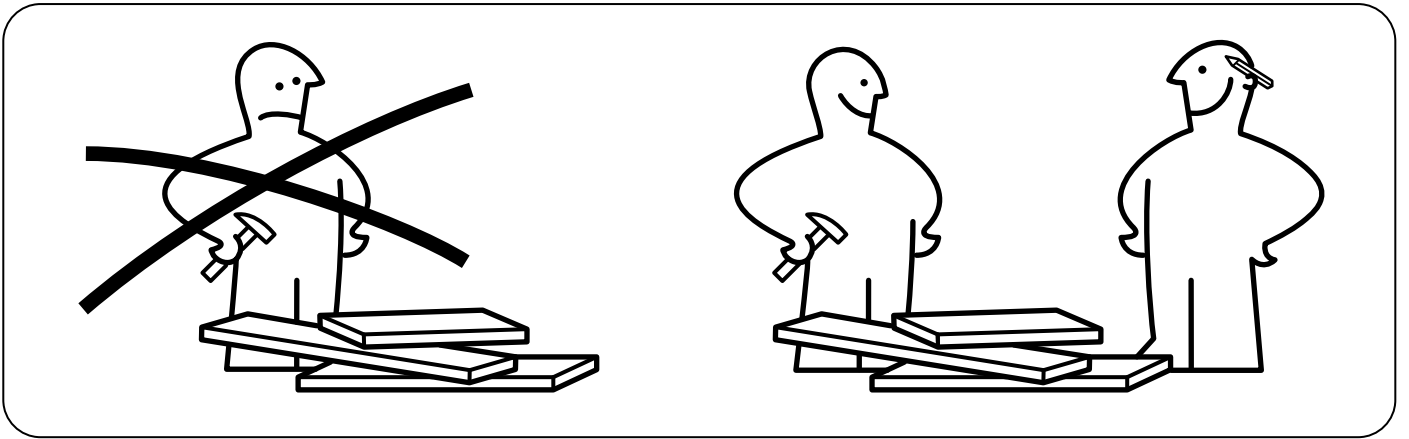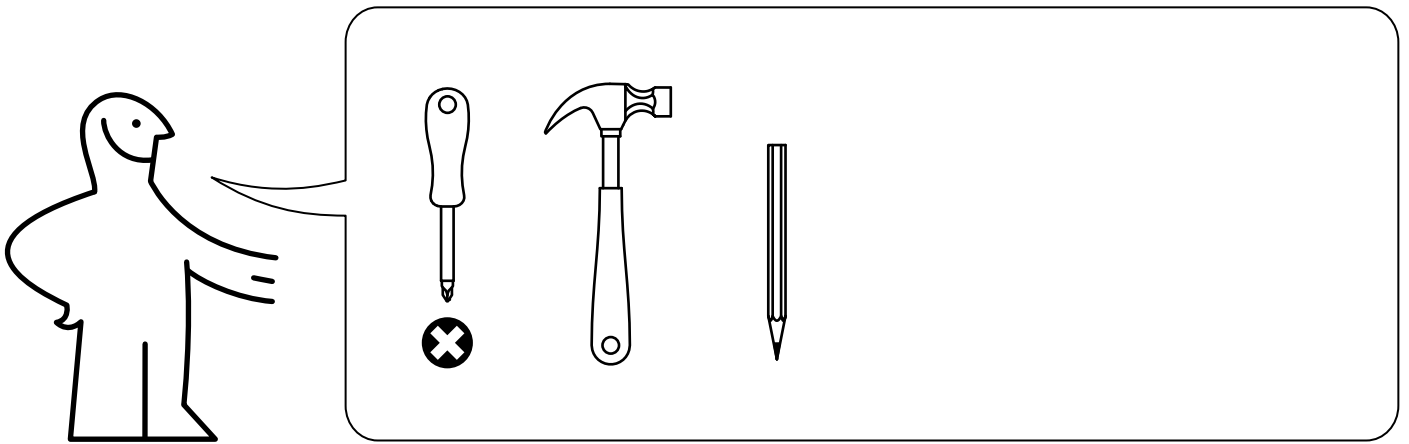

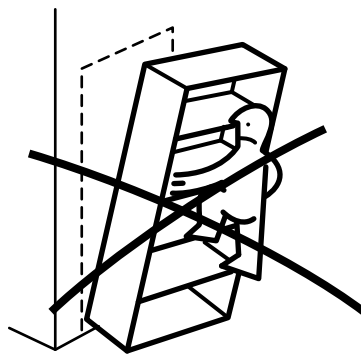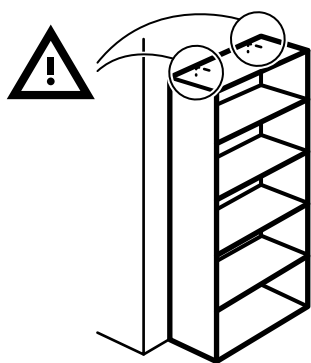


100214

 12x




101350

 16x



101532

 12x




109041

2x




100823

 4x

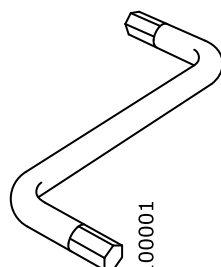


100001

 1x

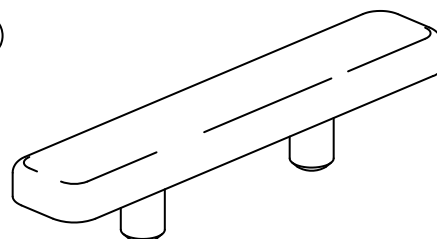


153548

 5x

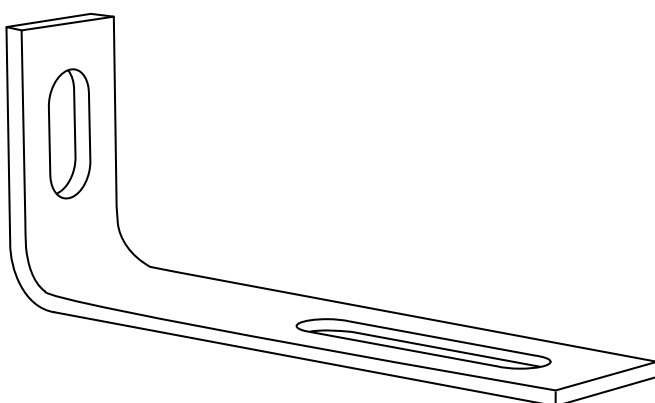

106989

 
2x

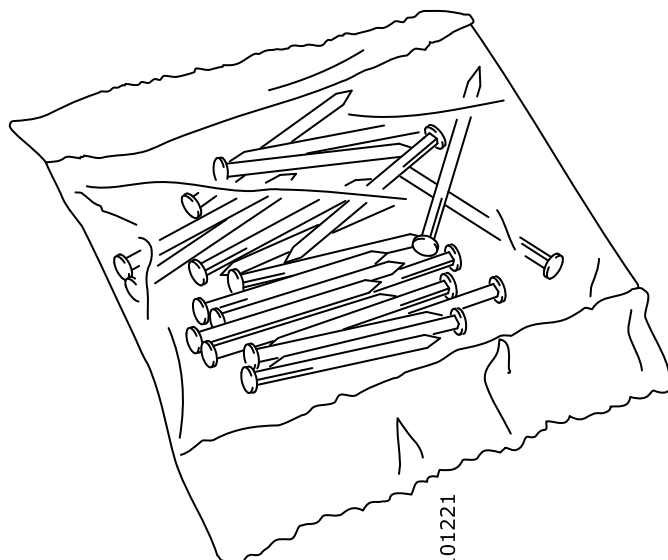



101221

2x


 
1

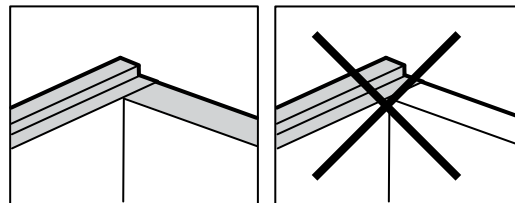


12x

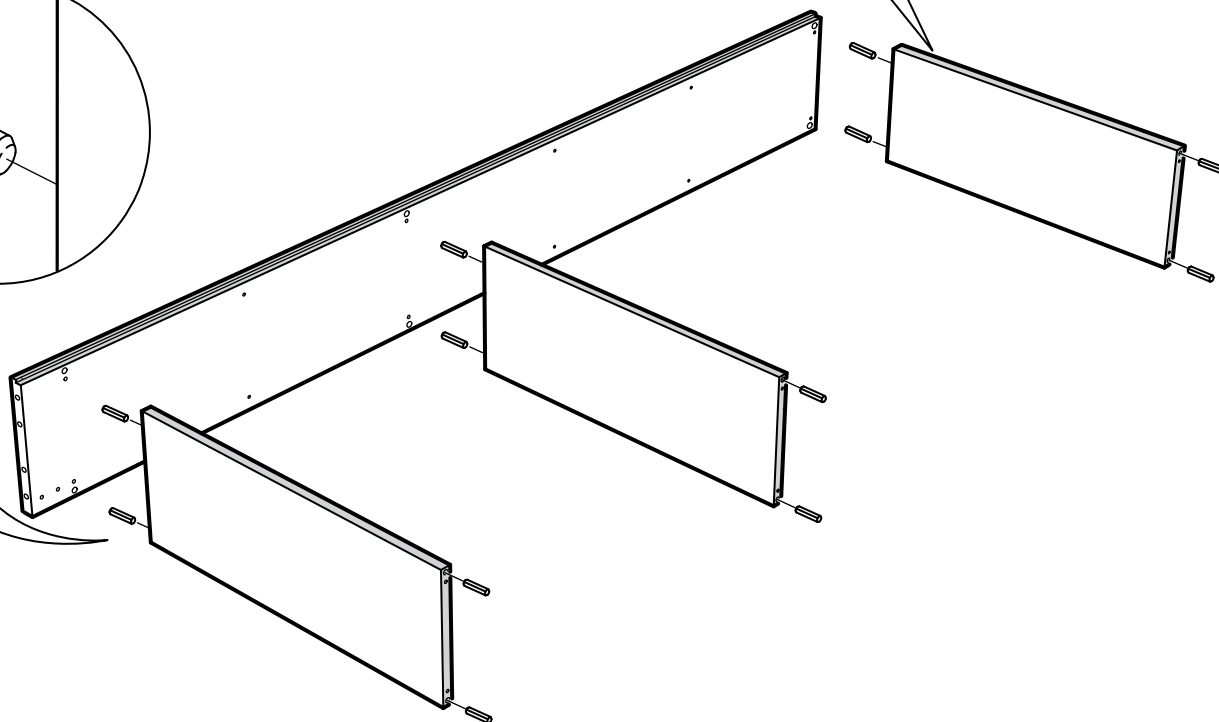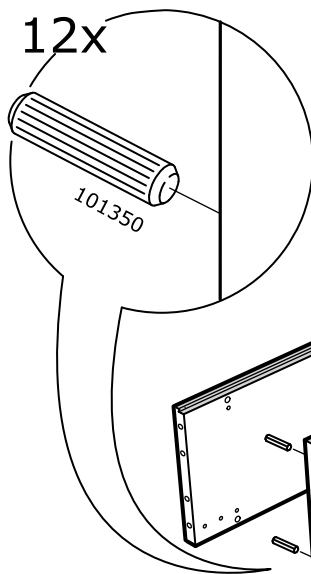  


2

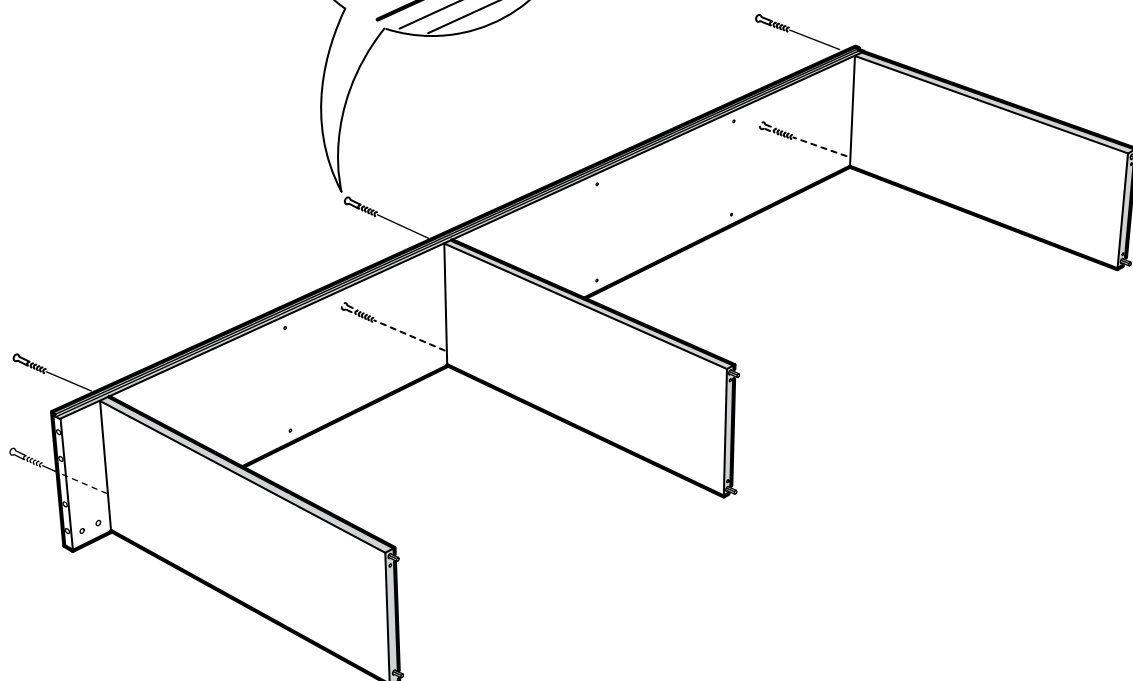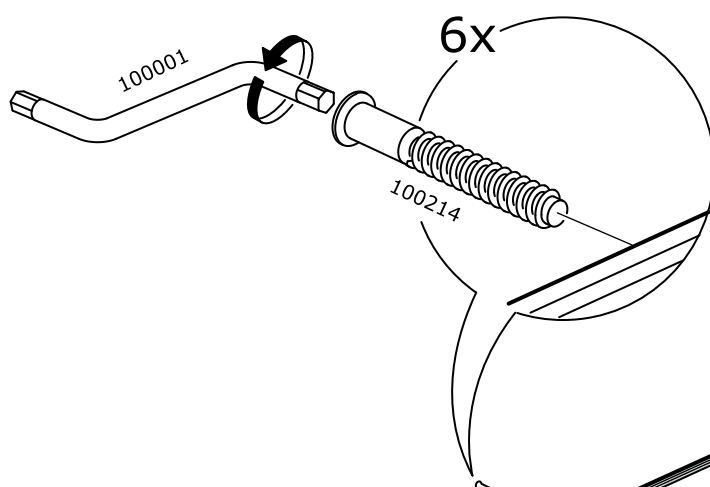  


3

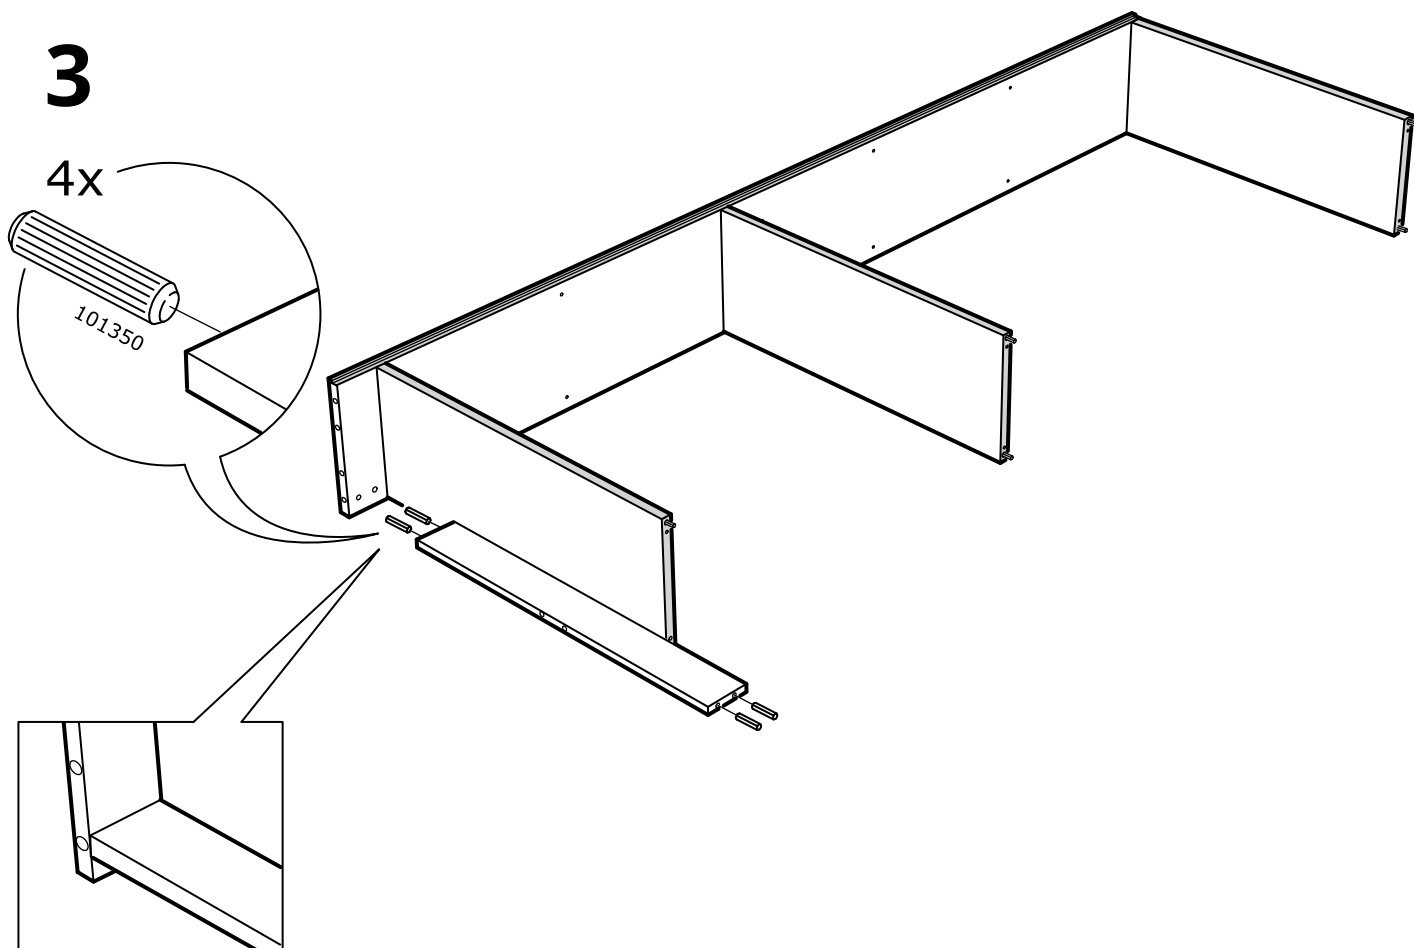 


4

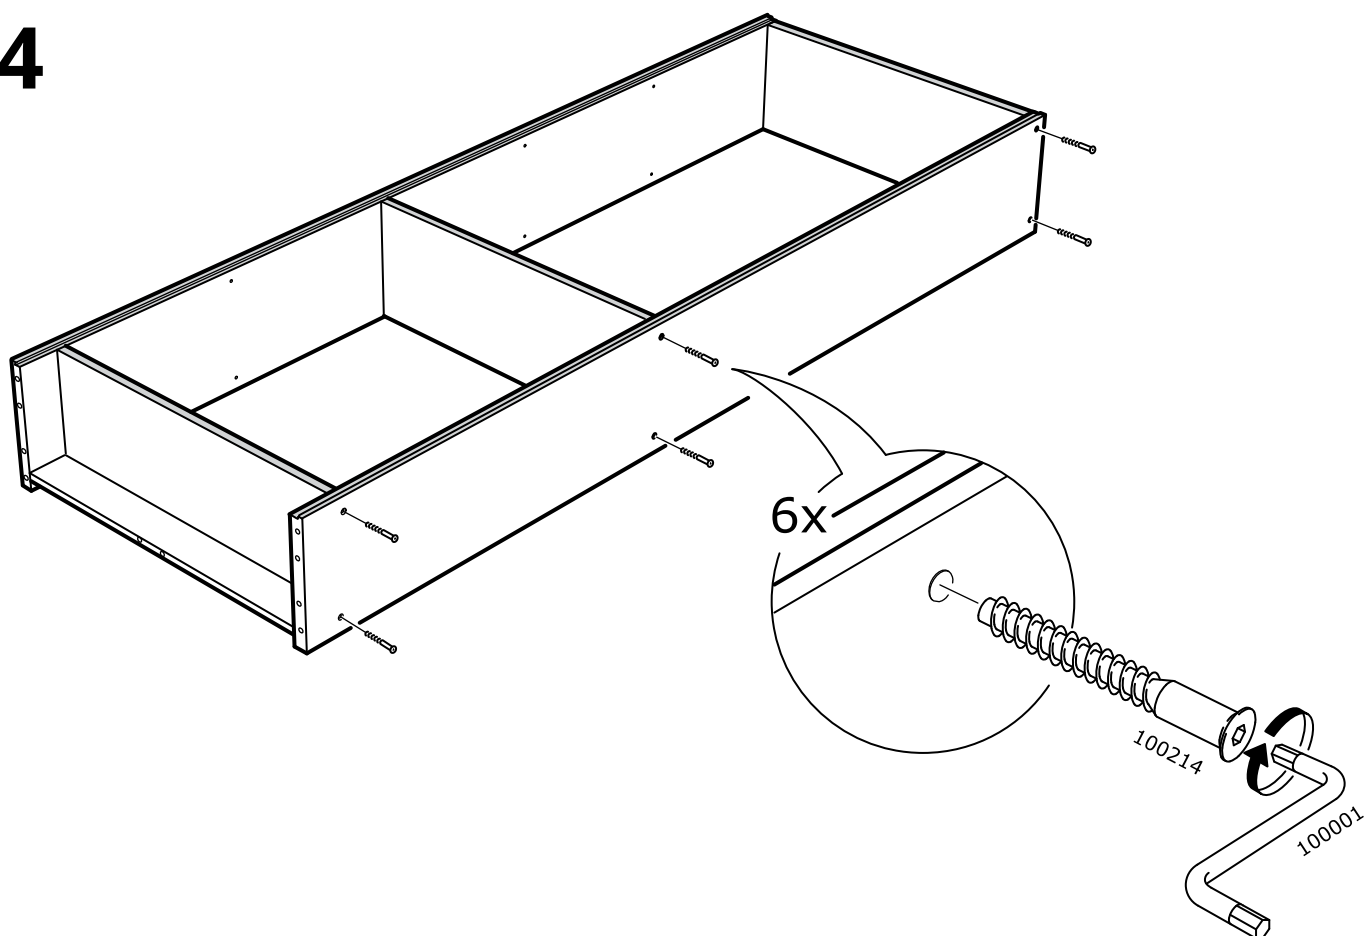 




5

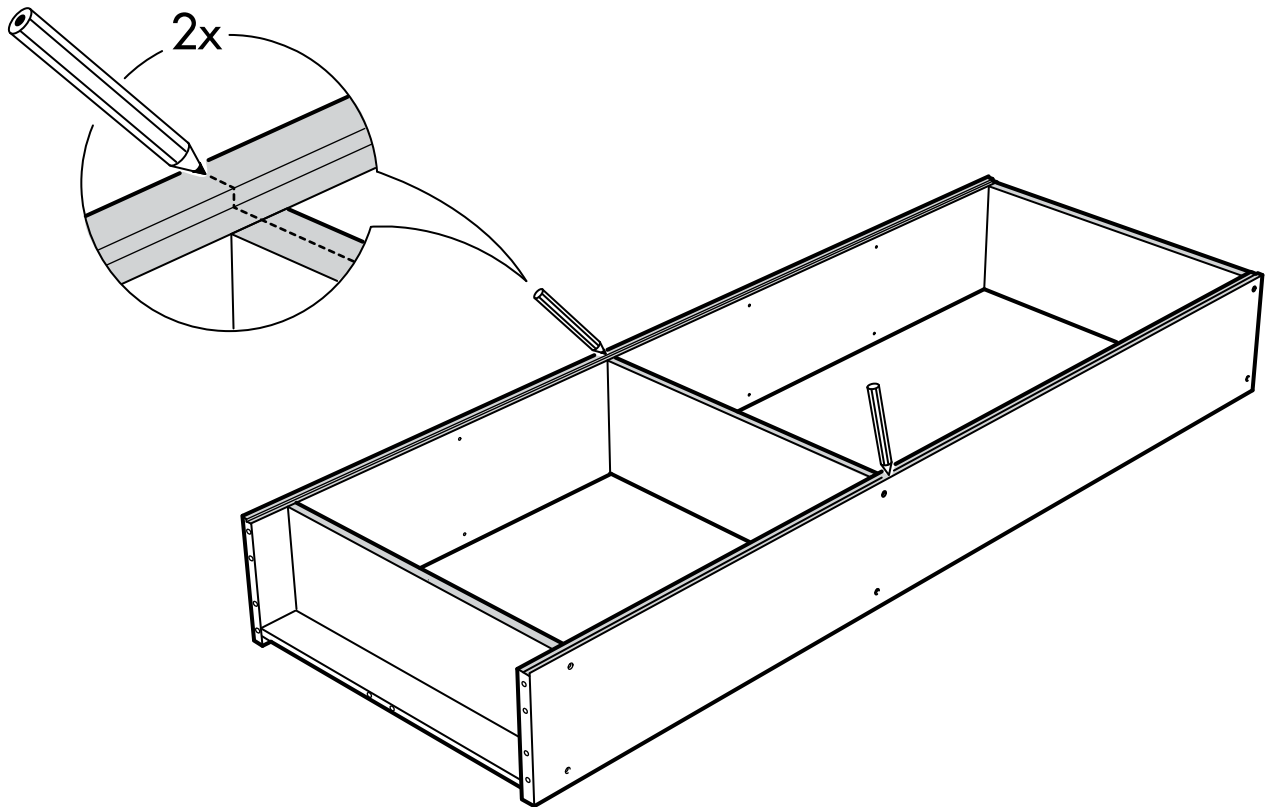 

6

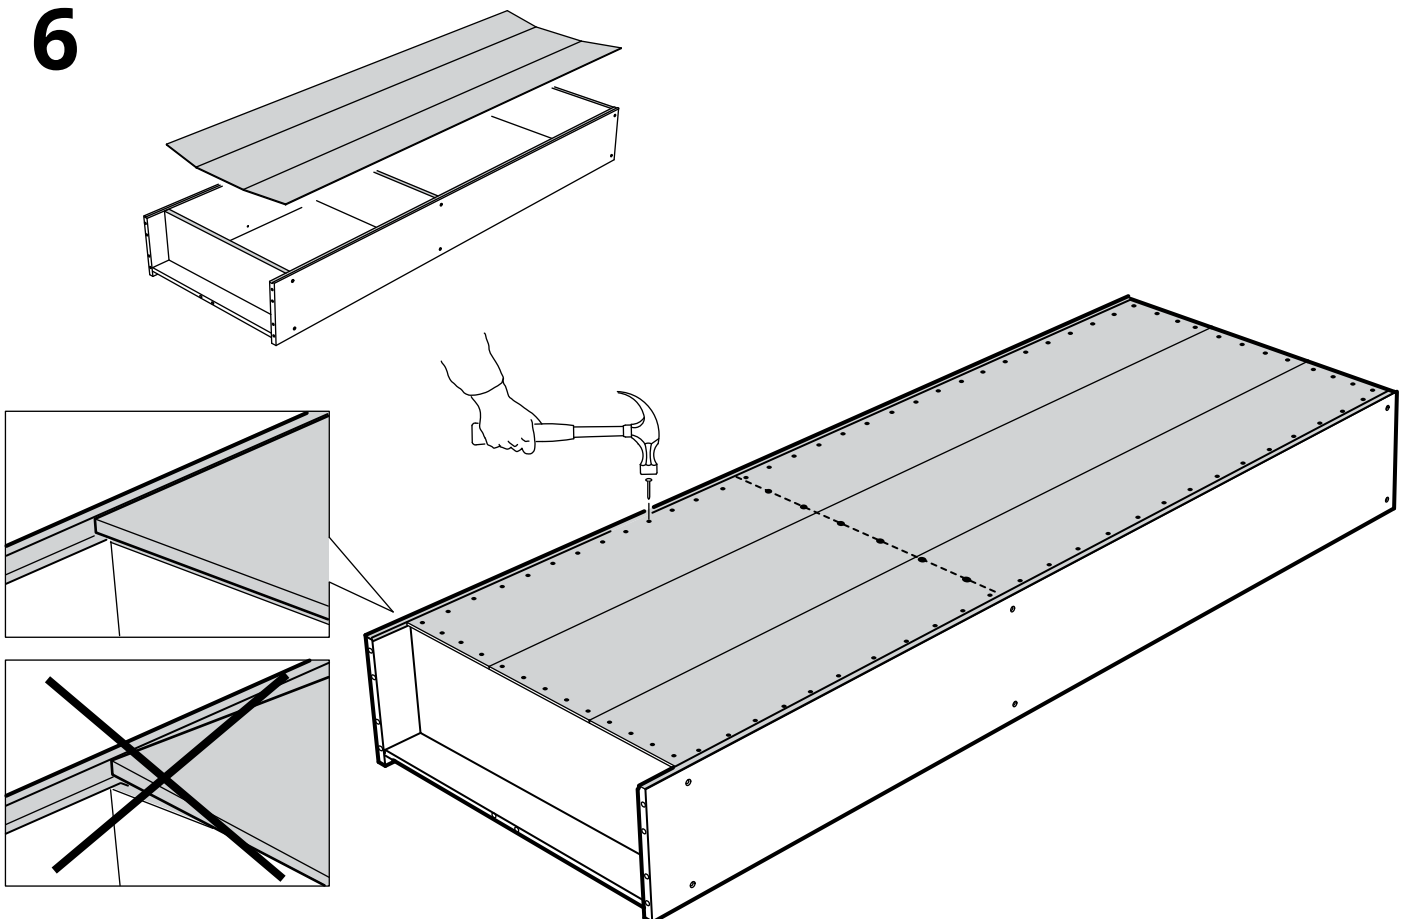 

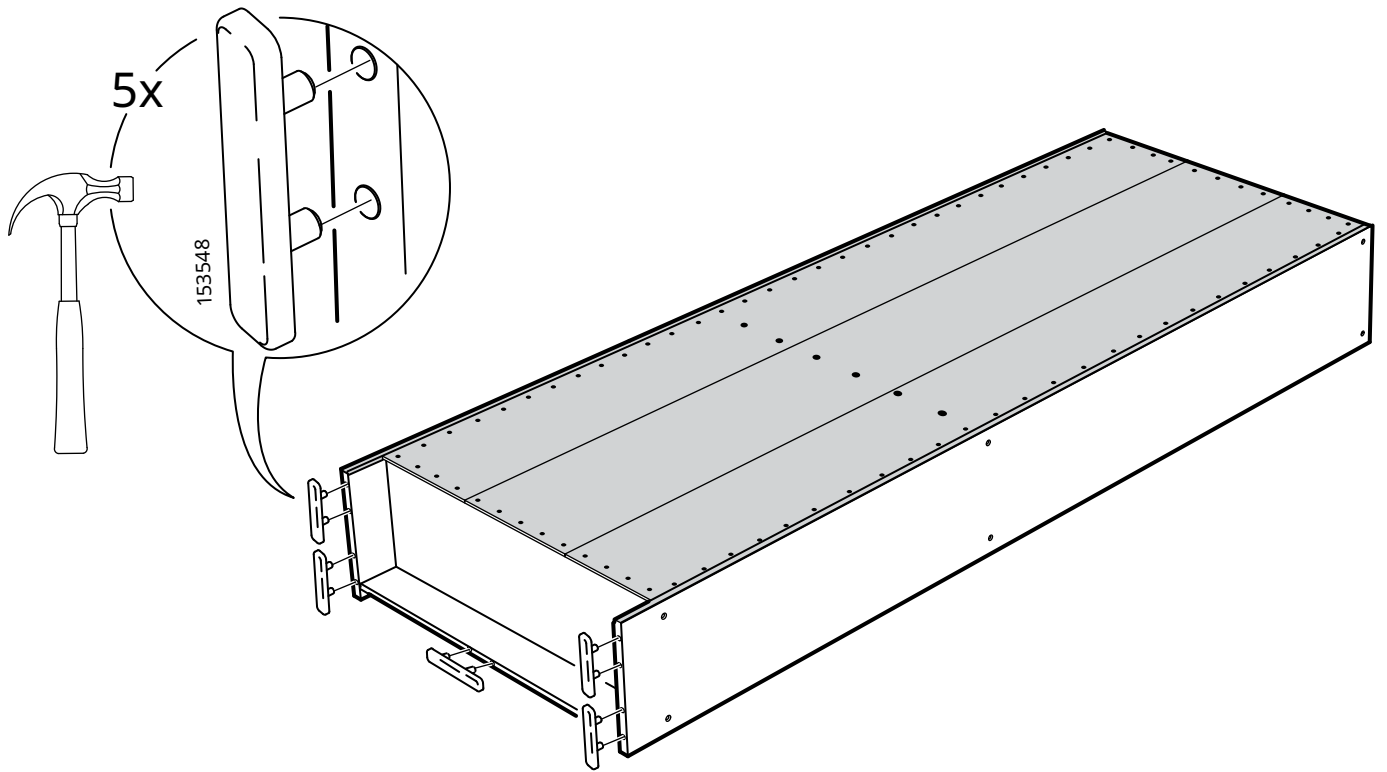 

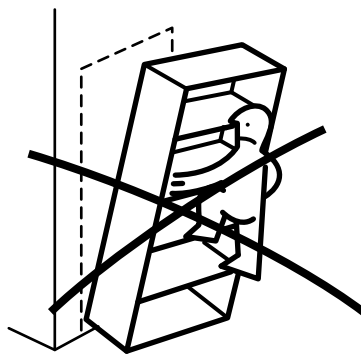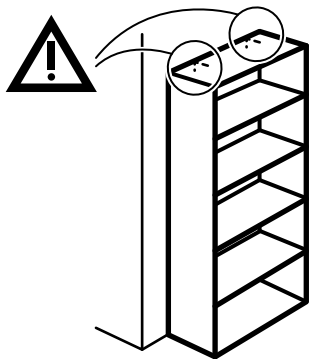  

8

