 
 


GREÅKER

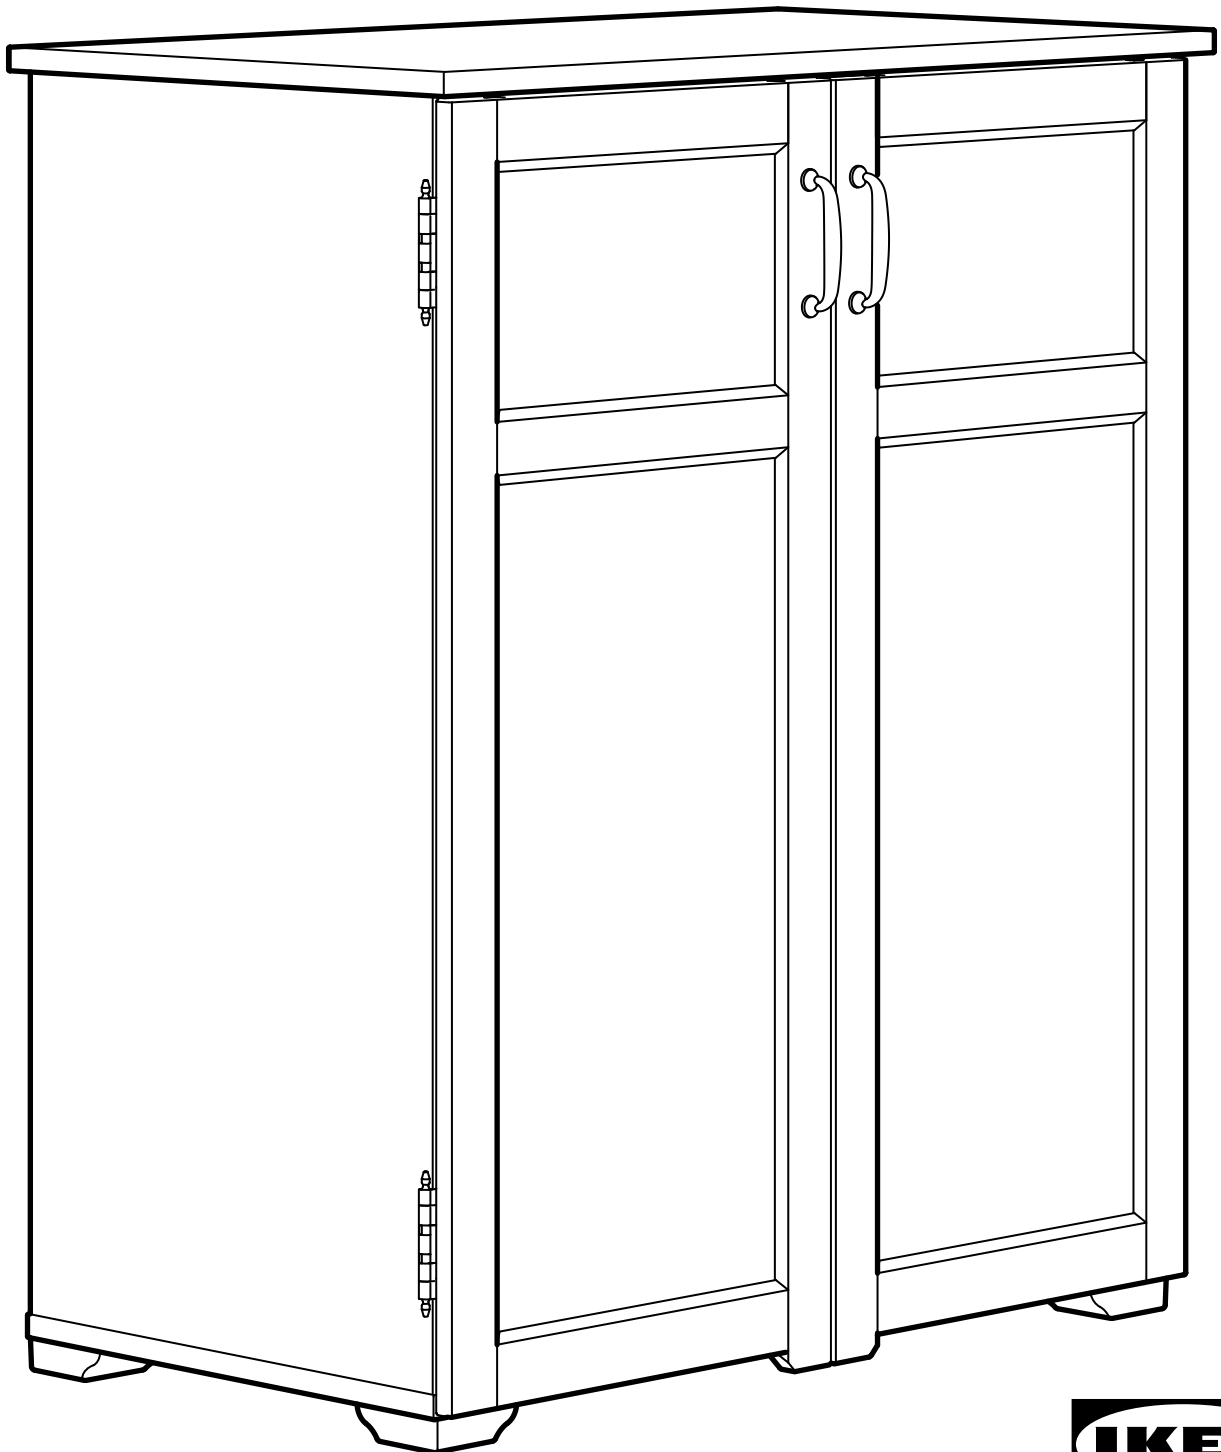

Design and Quality
IKEA of Sweden

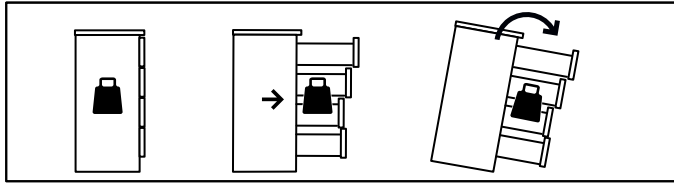

English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

 
 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

 
 
 
 
 
NEVER open more than one drawer at a time.

Place heaviest items in the lowest drawers.

English


Read and follow each step of the instruction carefully.

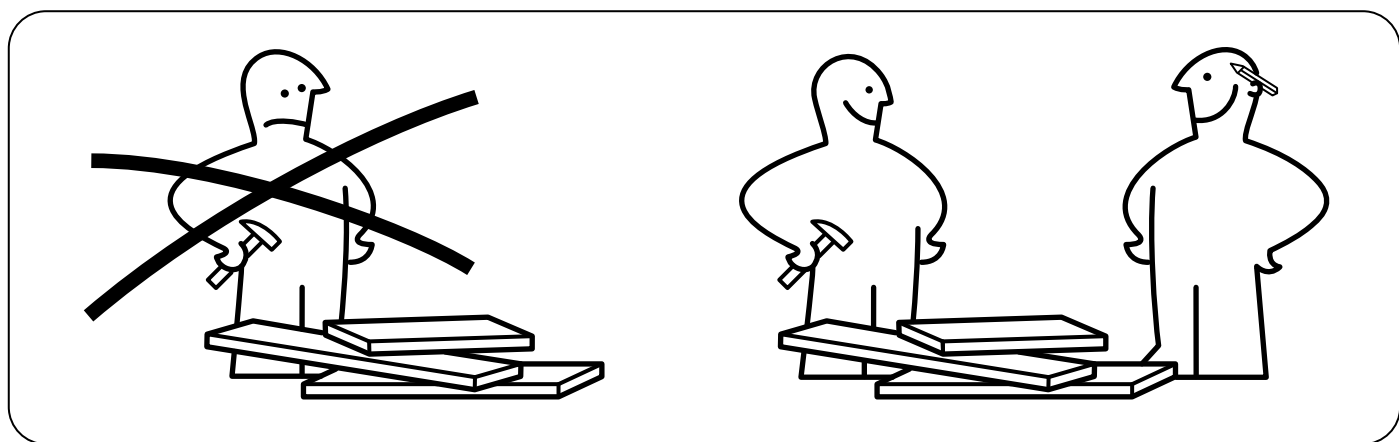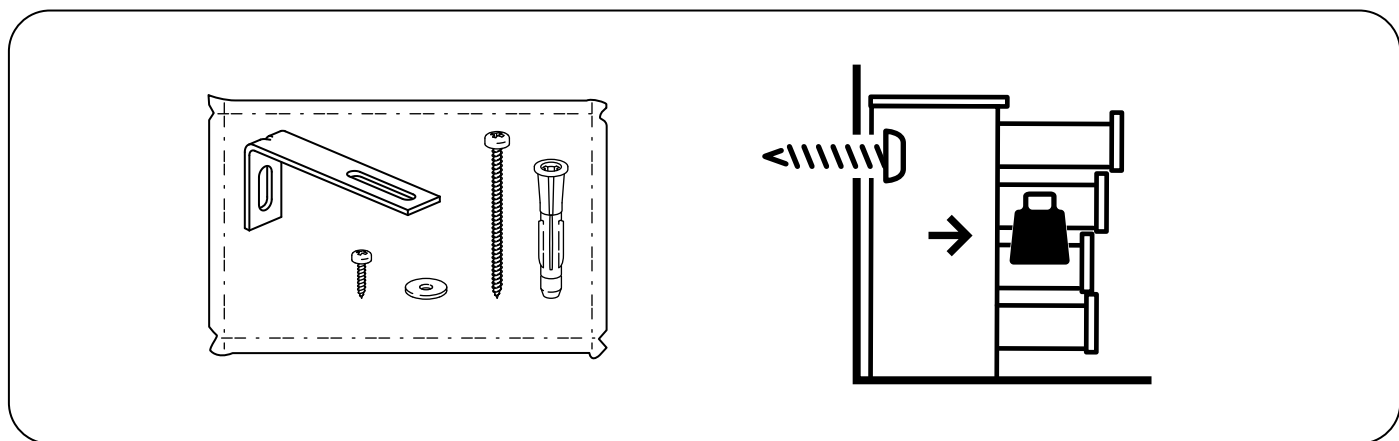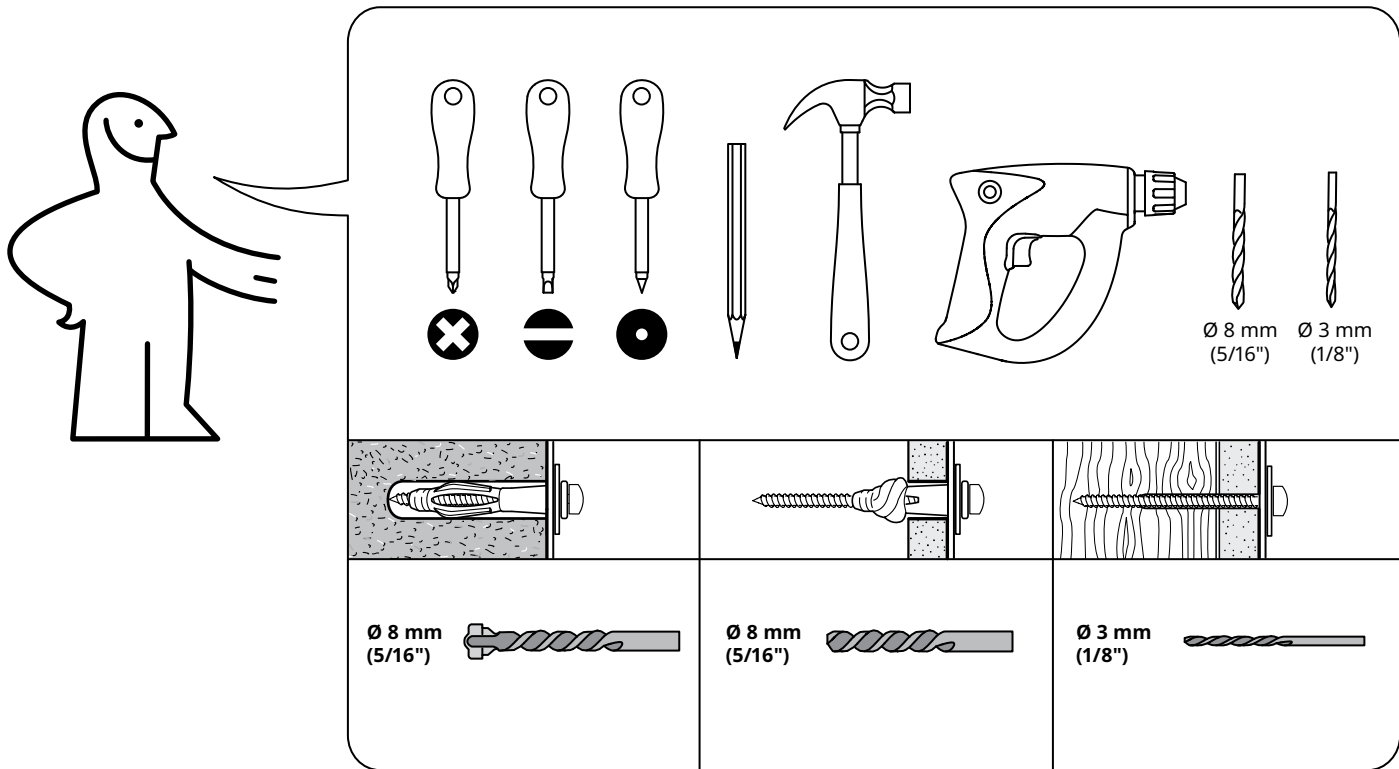

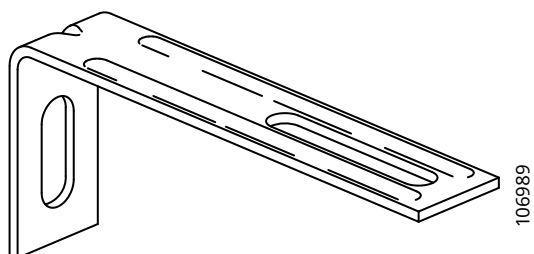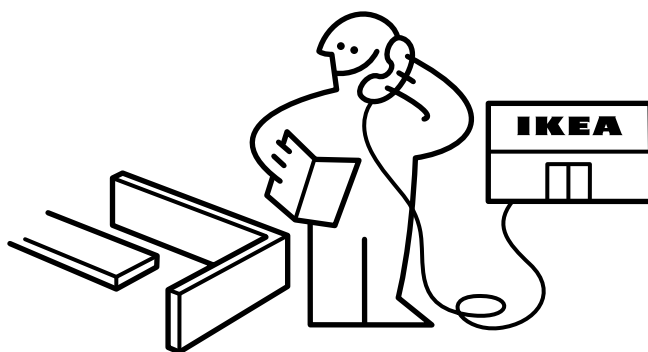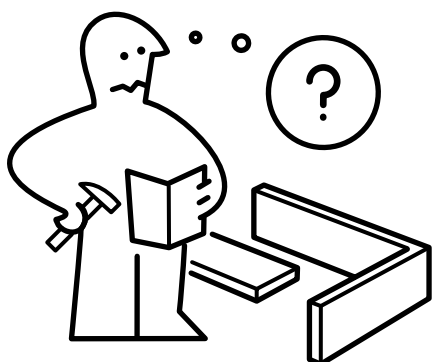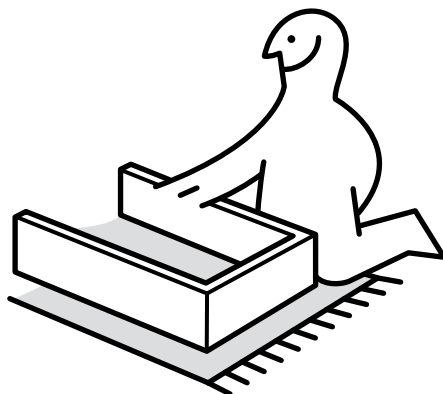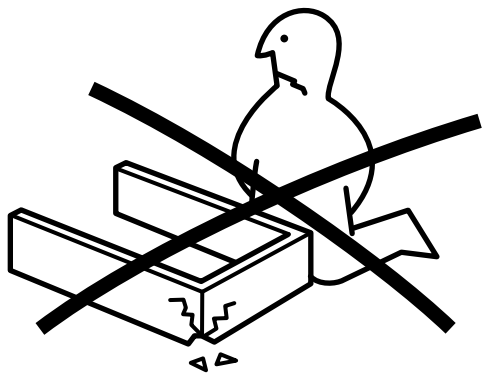


2x

 106989




2x

 109049




4x

 100823




2x

 109048



2x

 
121714

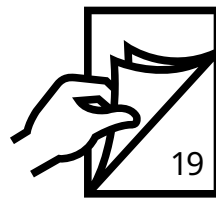


19

326949

 
1



12x

 


4x

 

4x



 
4x



24x



 
18x




4x



 
2x




4x

 


12x

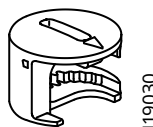 


12x

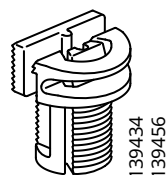 


14x

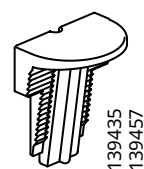 


14x

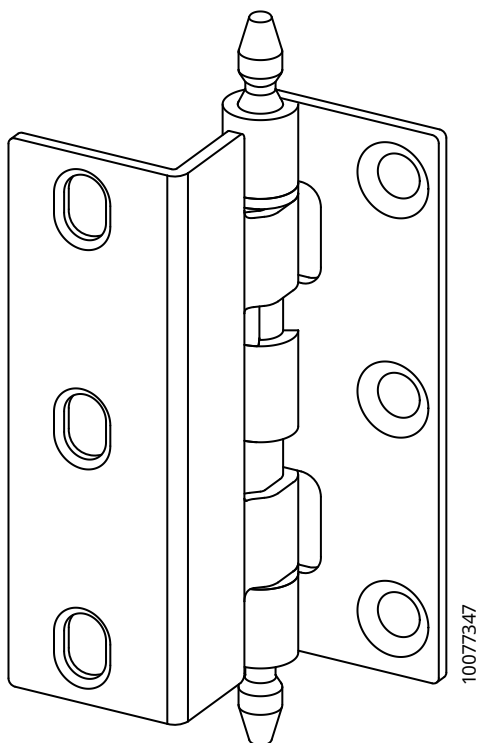 


4x

 


2x

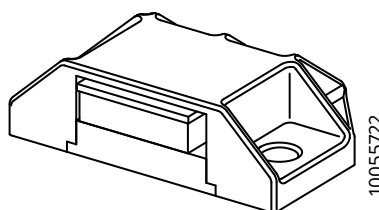 

2x

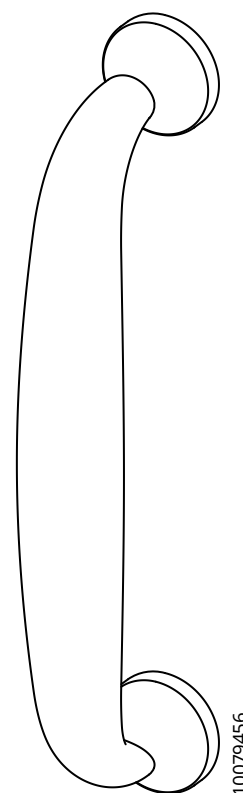 


2x

 


12x



 
18x

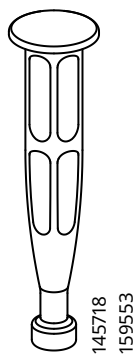


12x

 


12x

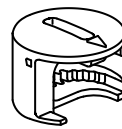 


24x

 


1x

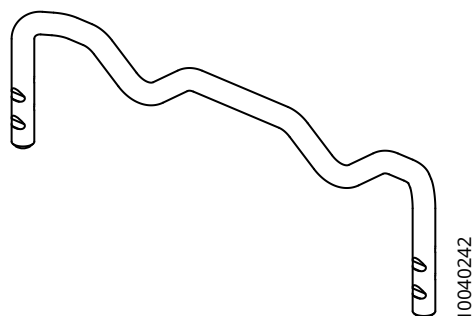 


3x

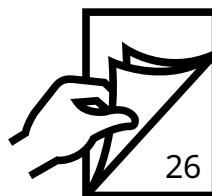 


26

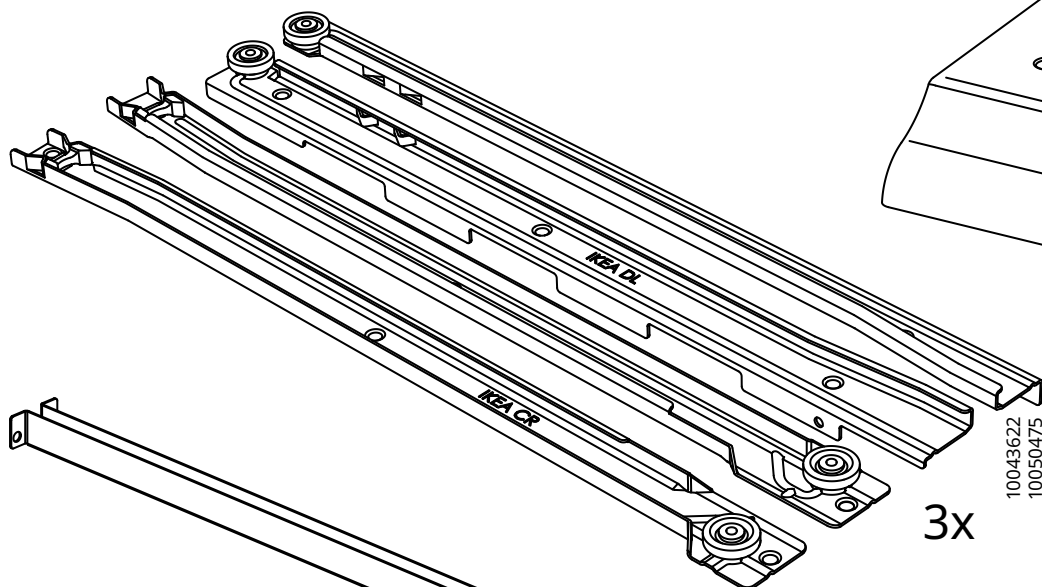 

3x

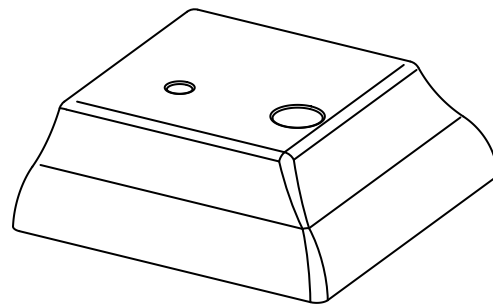 

4x

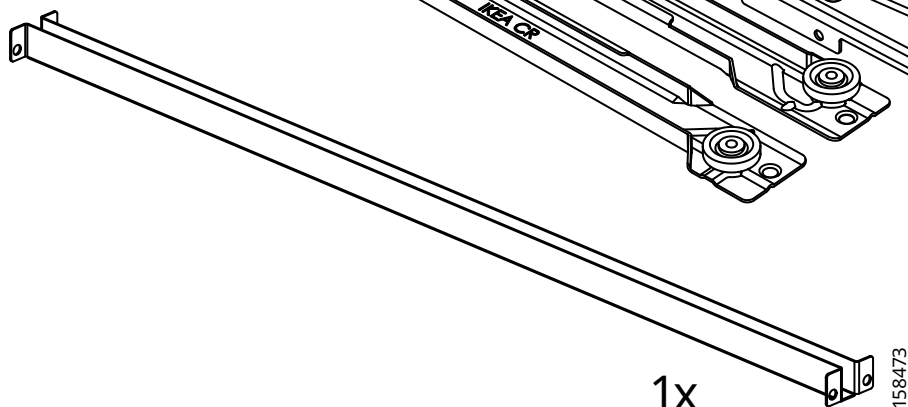 




1x

158473


10043622
10050475

123727

   
1

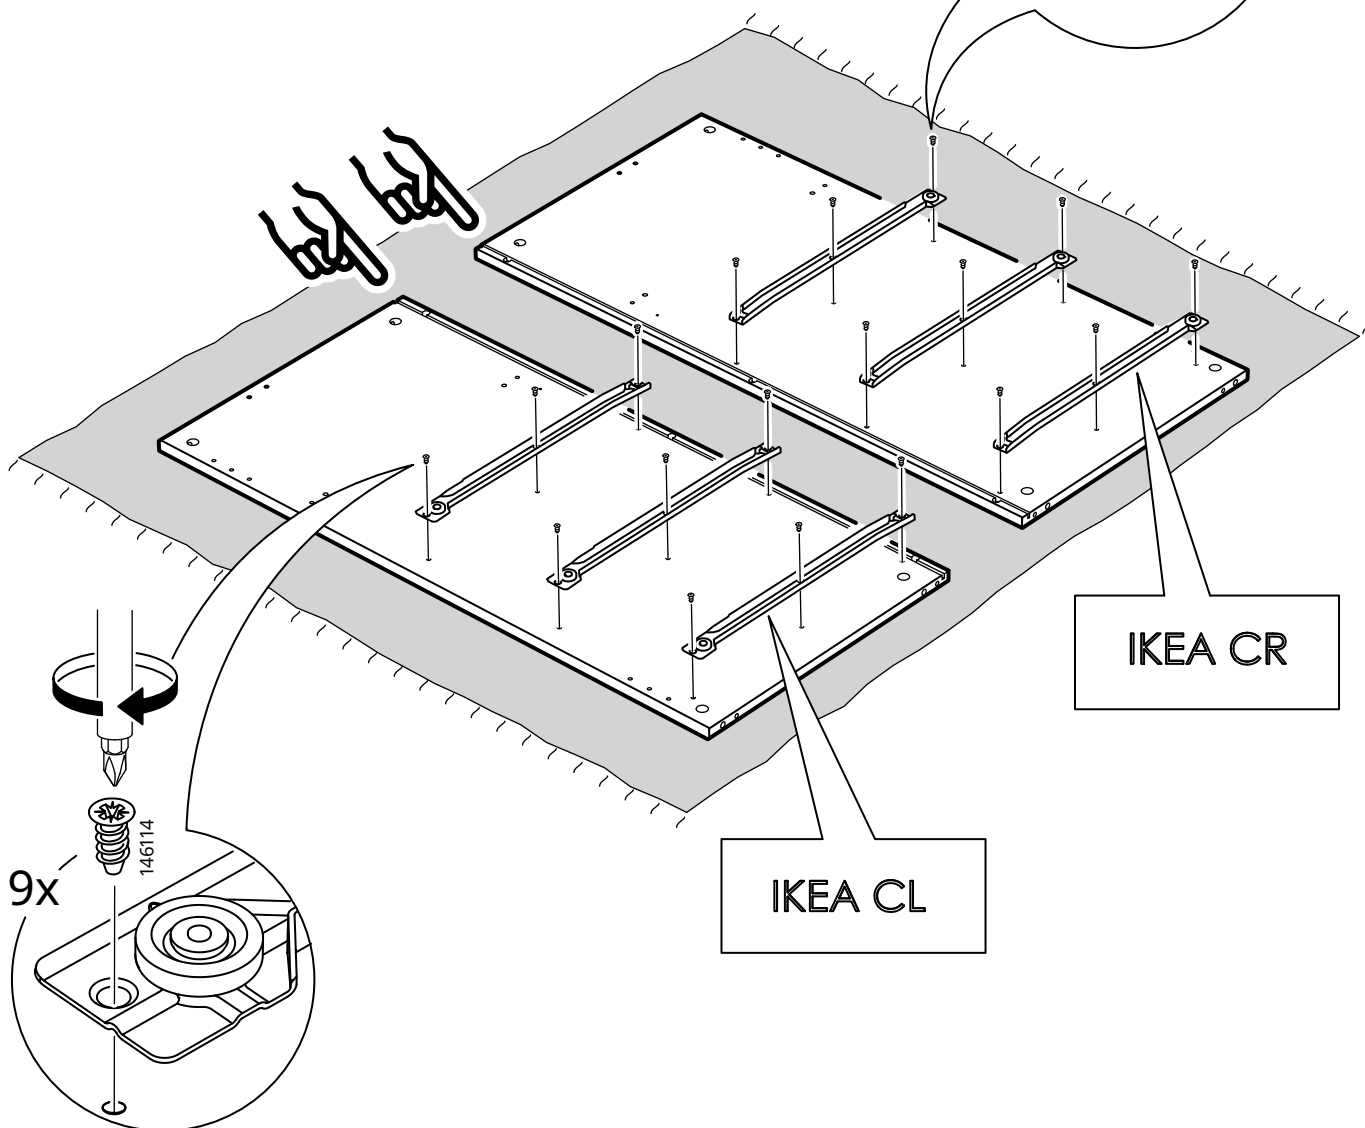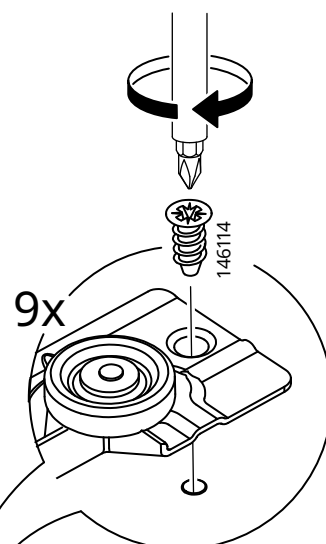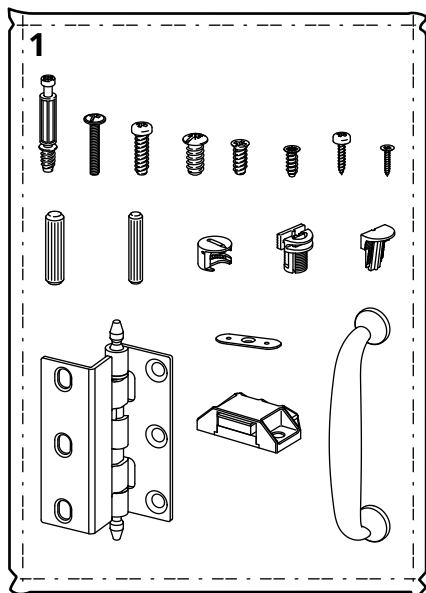


2

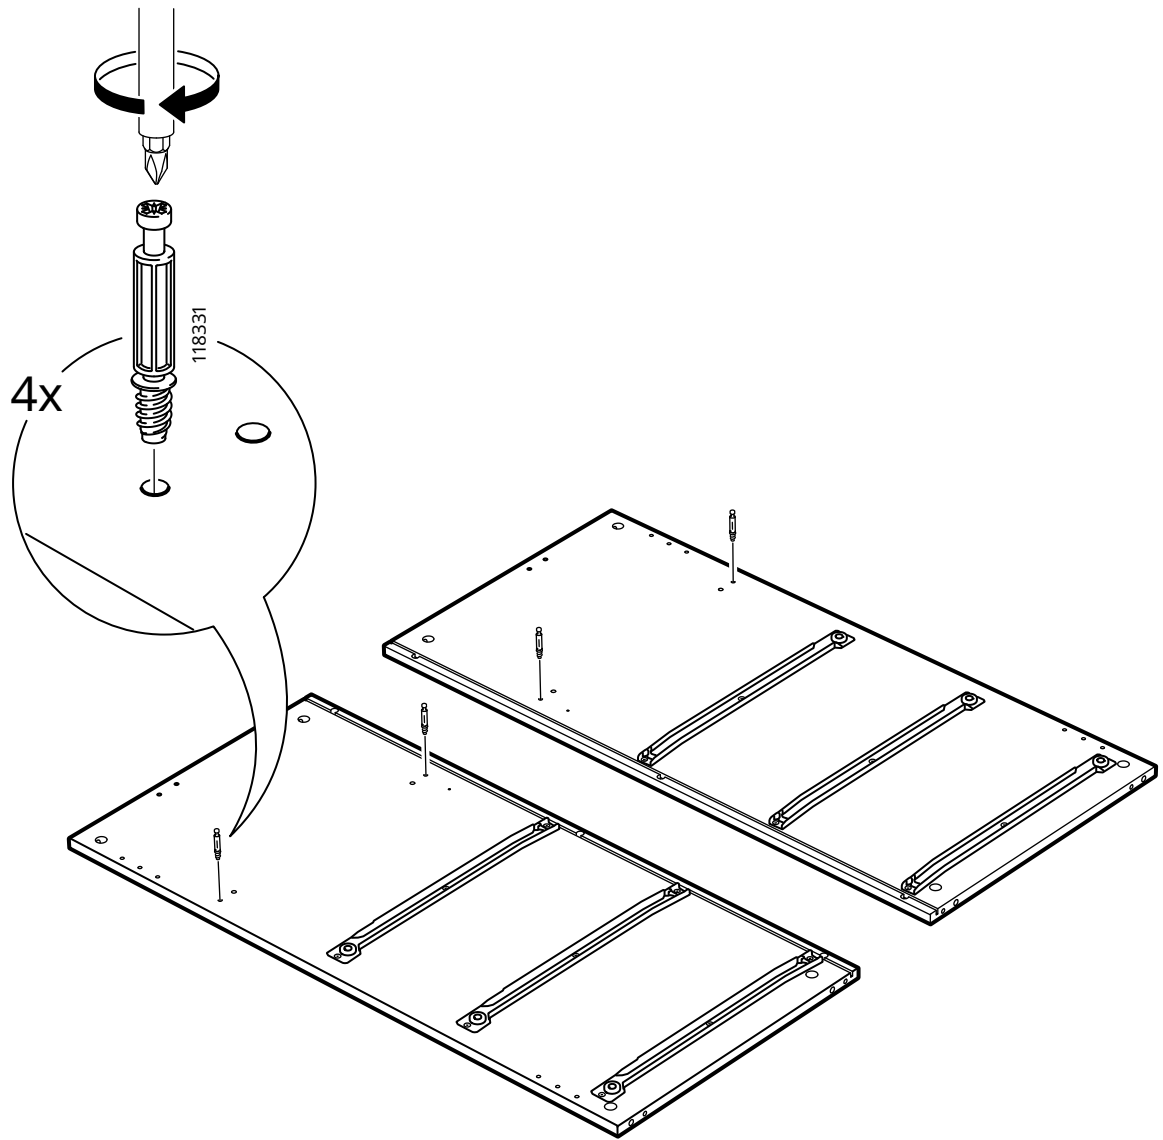 


3

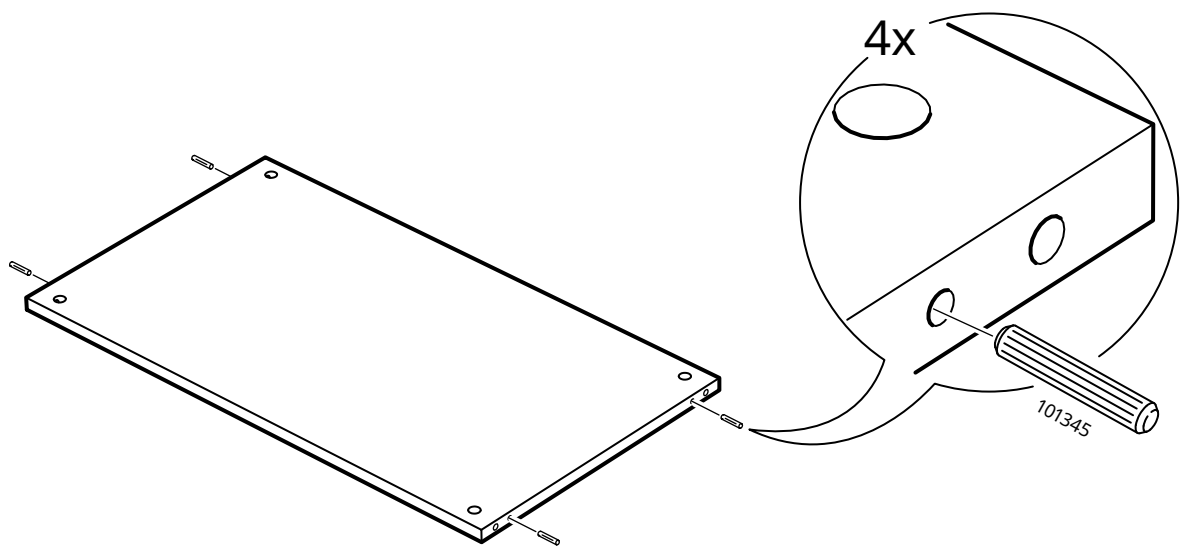 


4

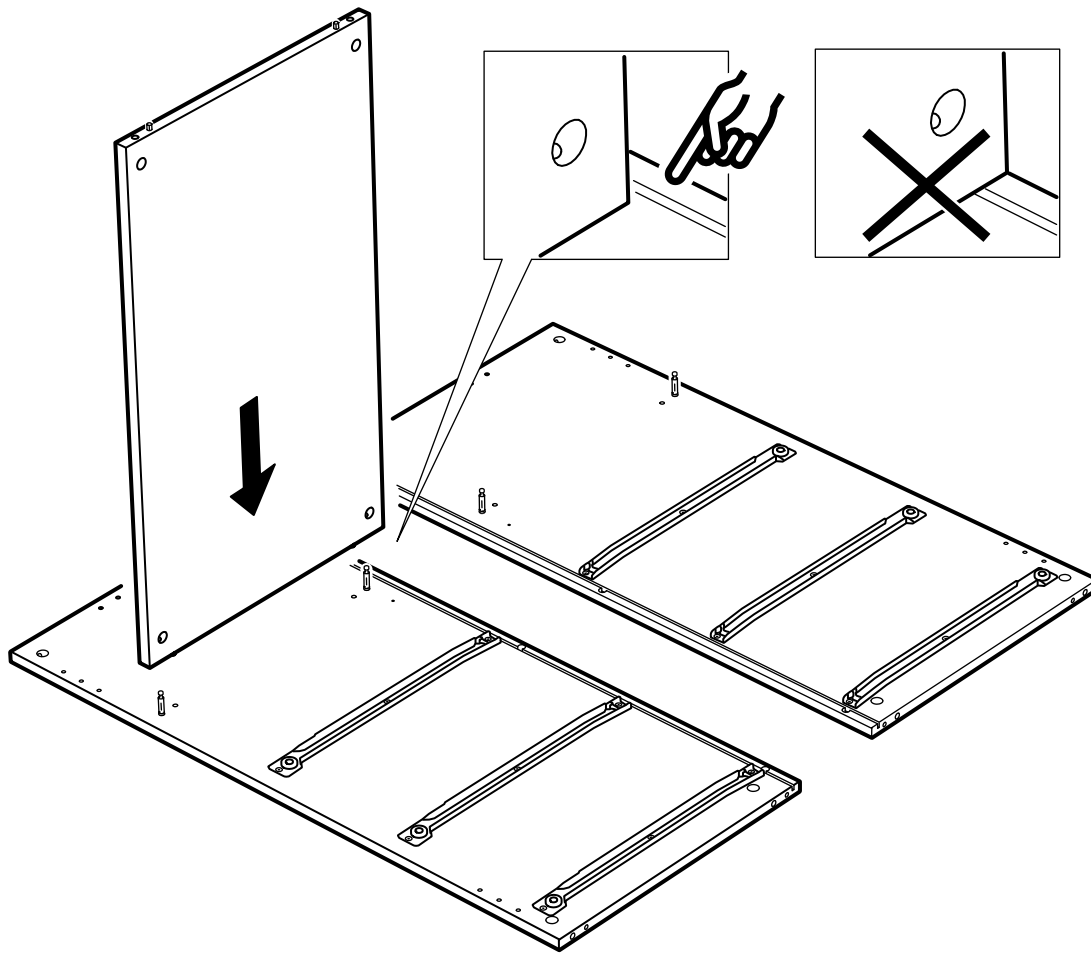 


5

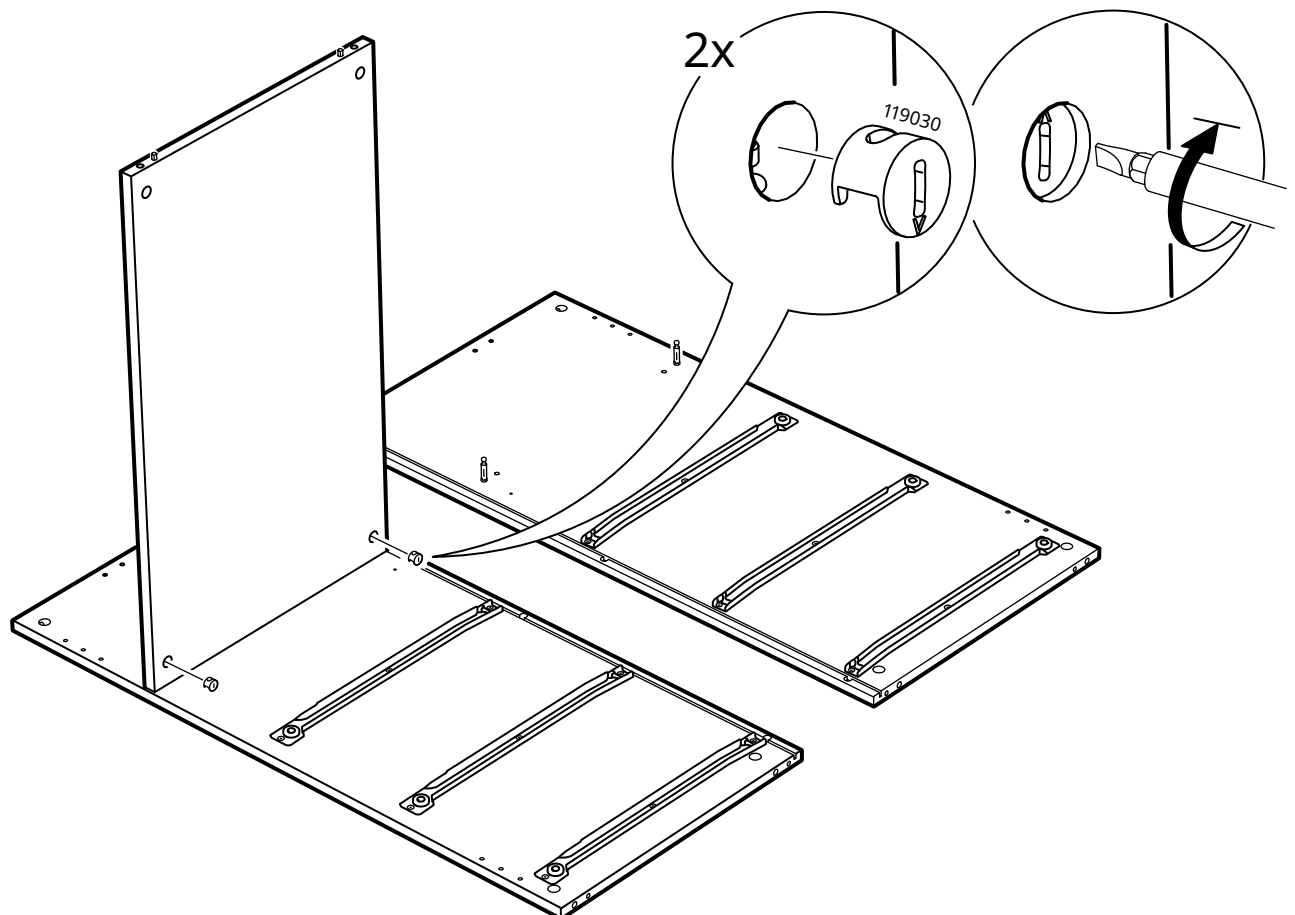 


6

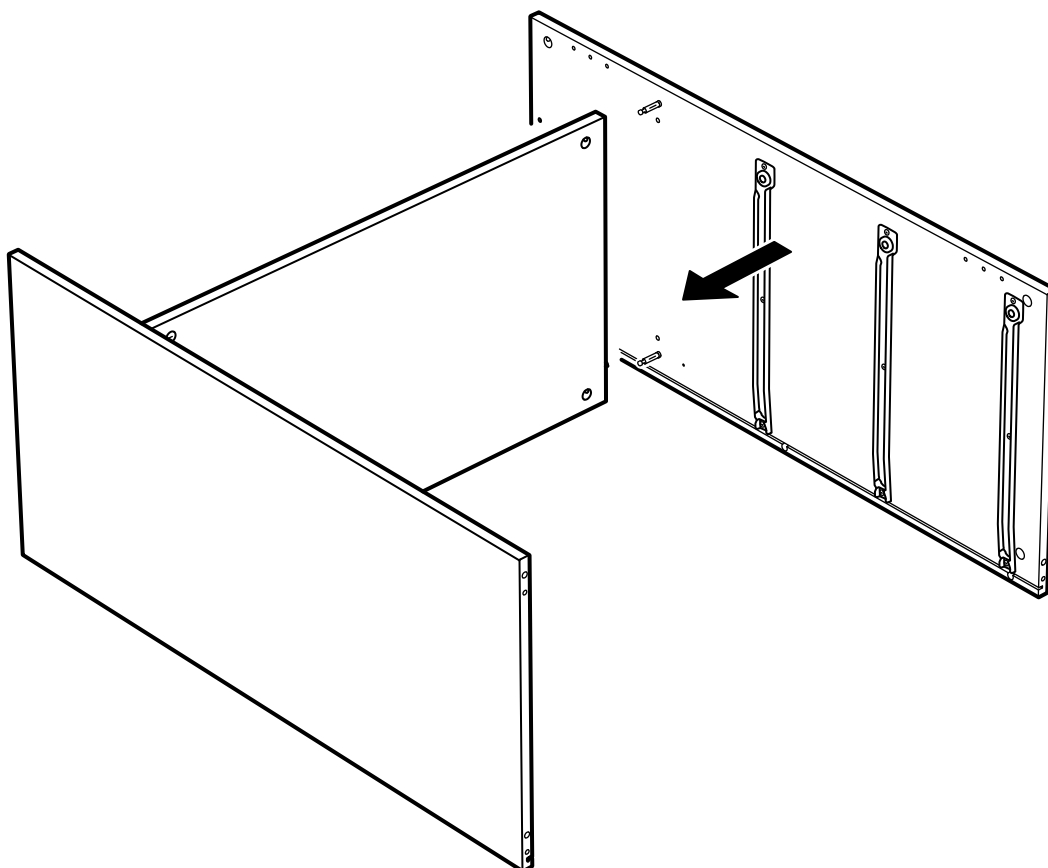 


7

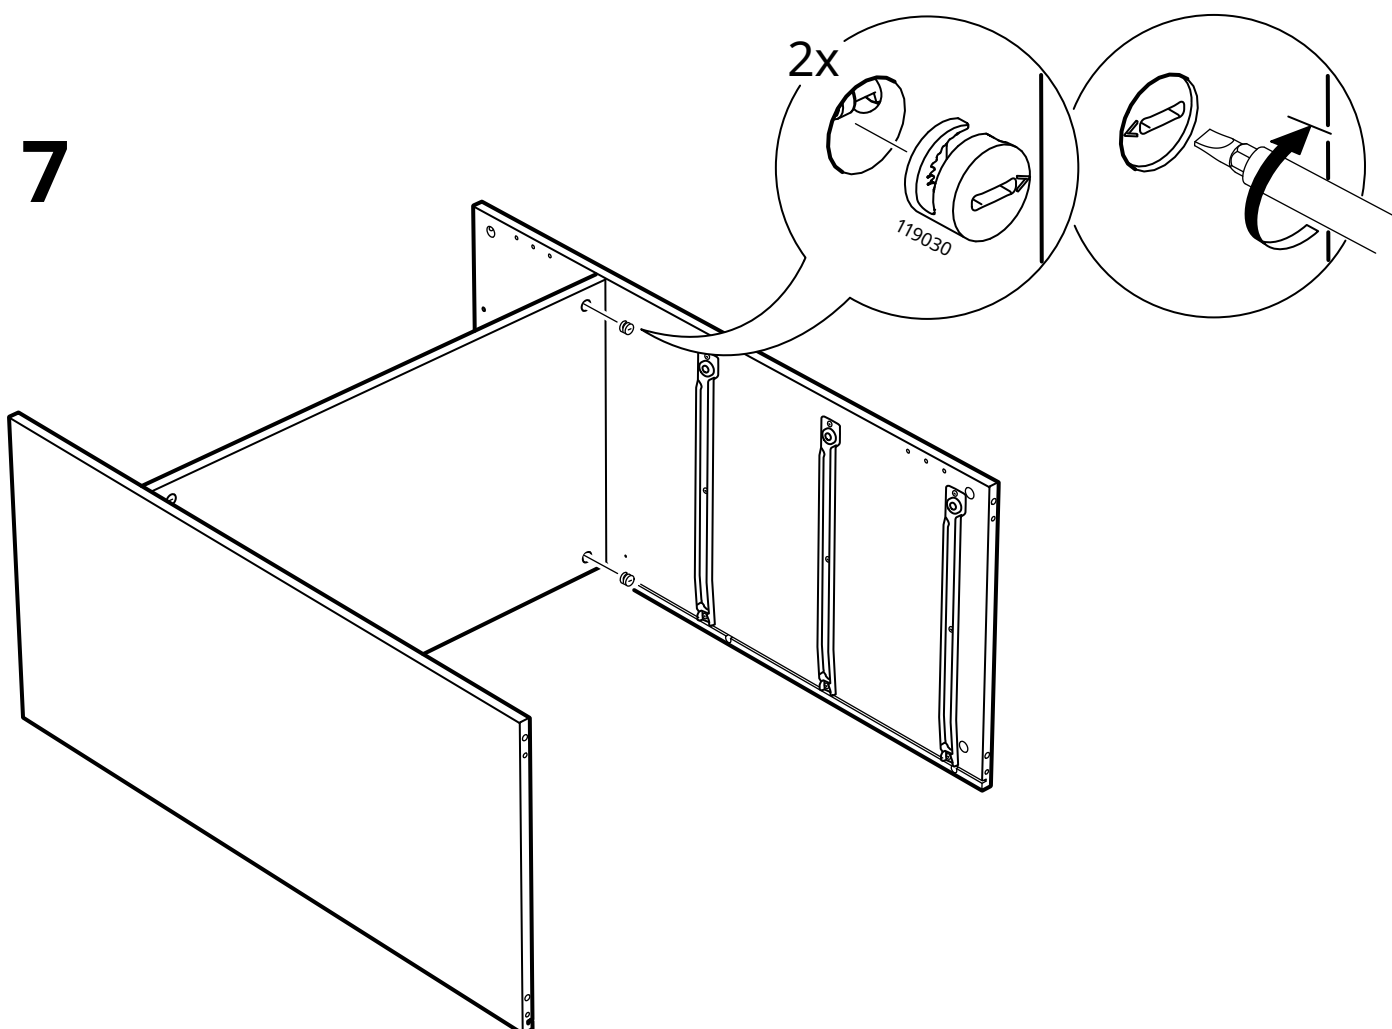 


8

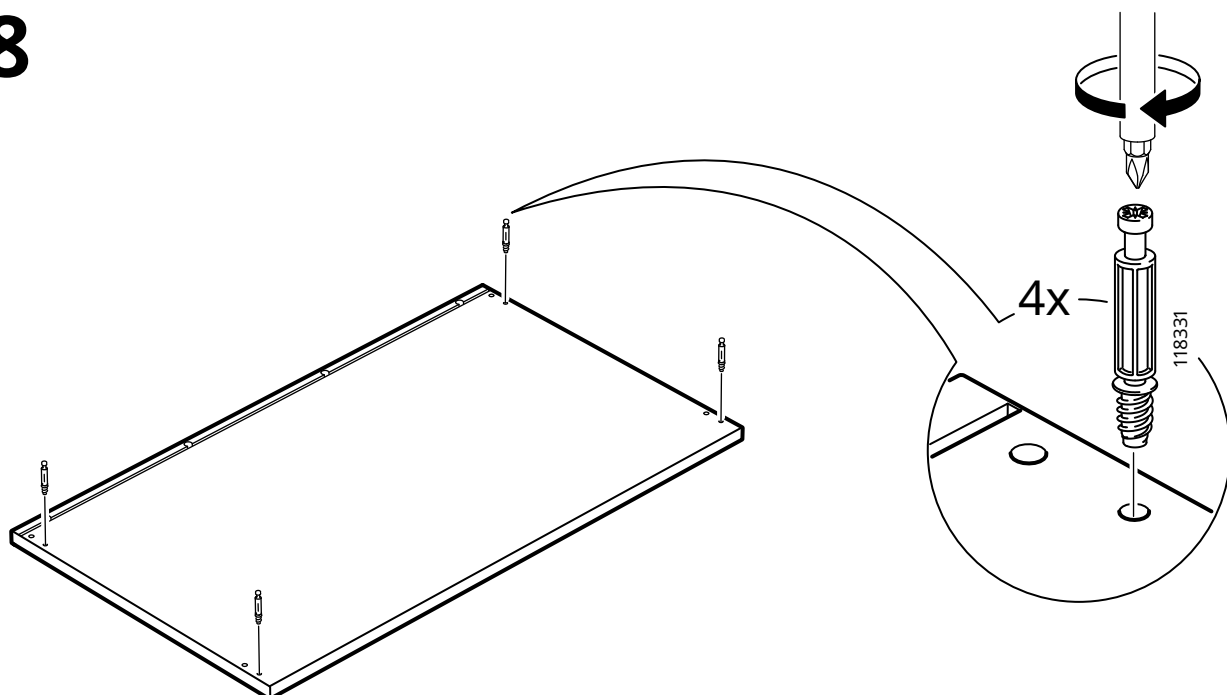 


9

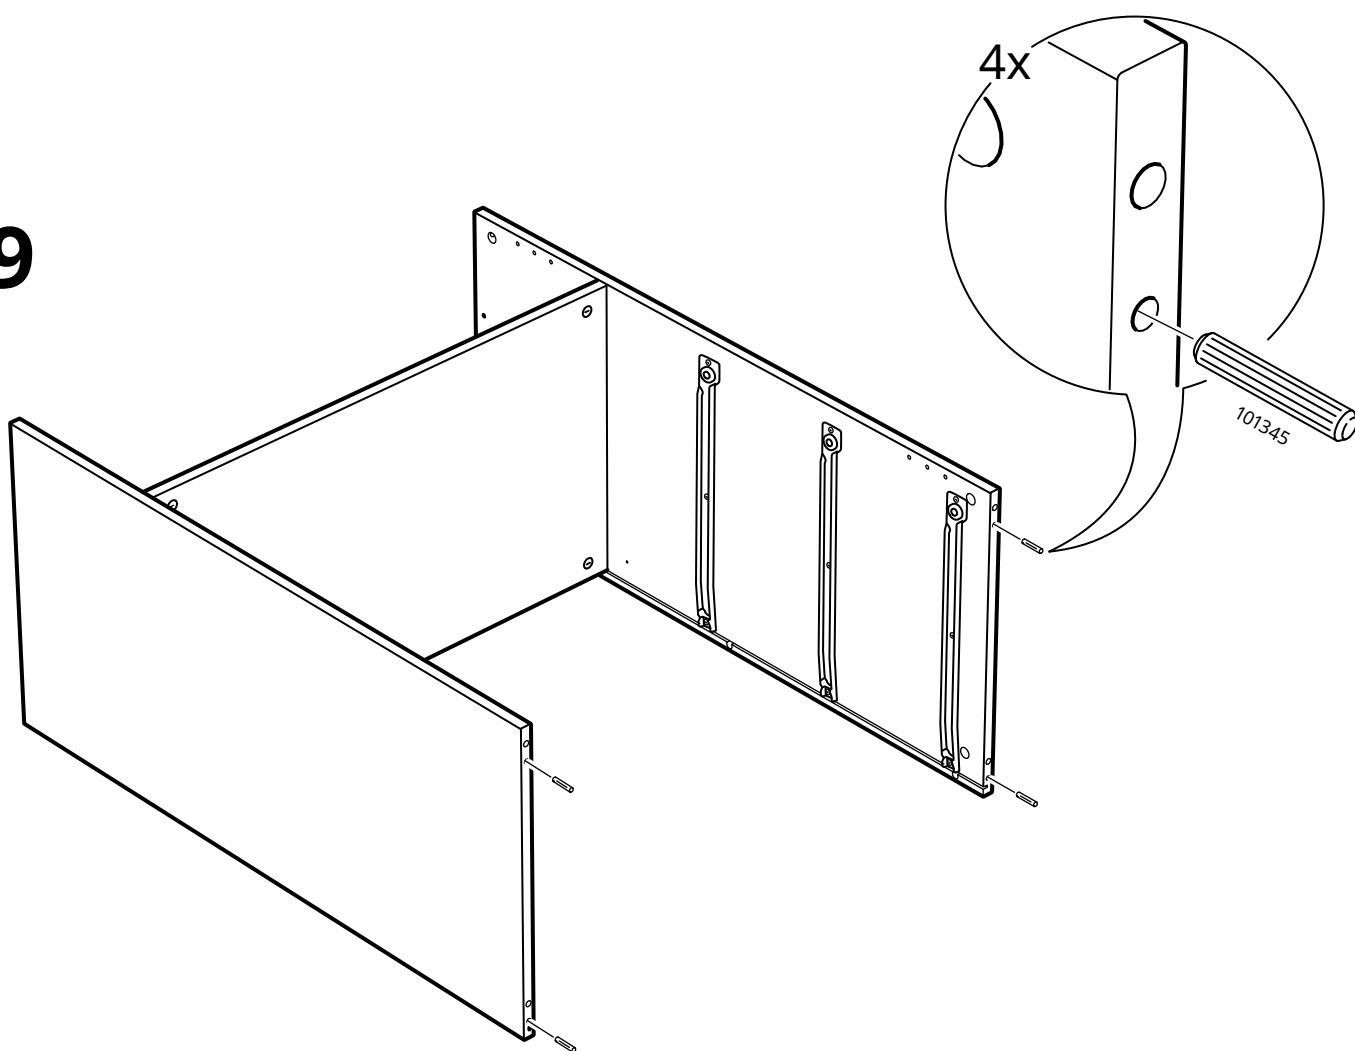 



10

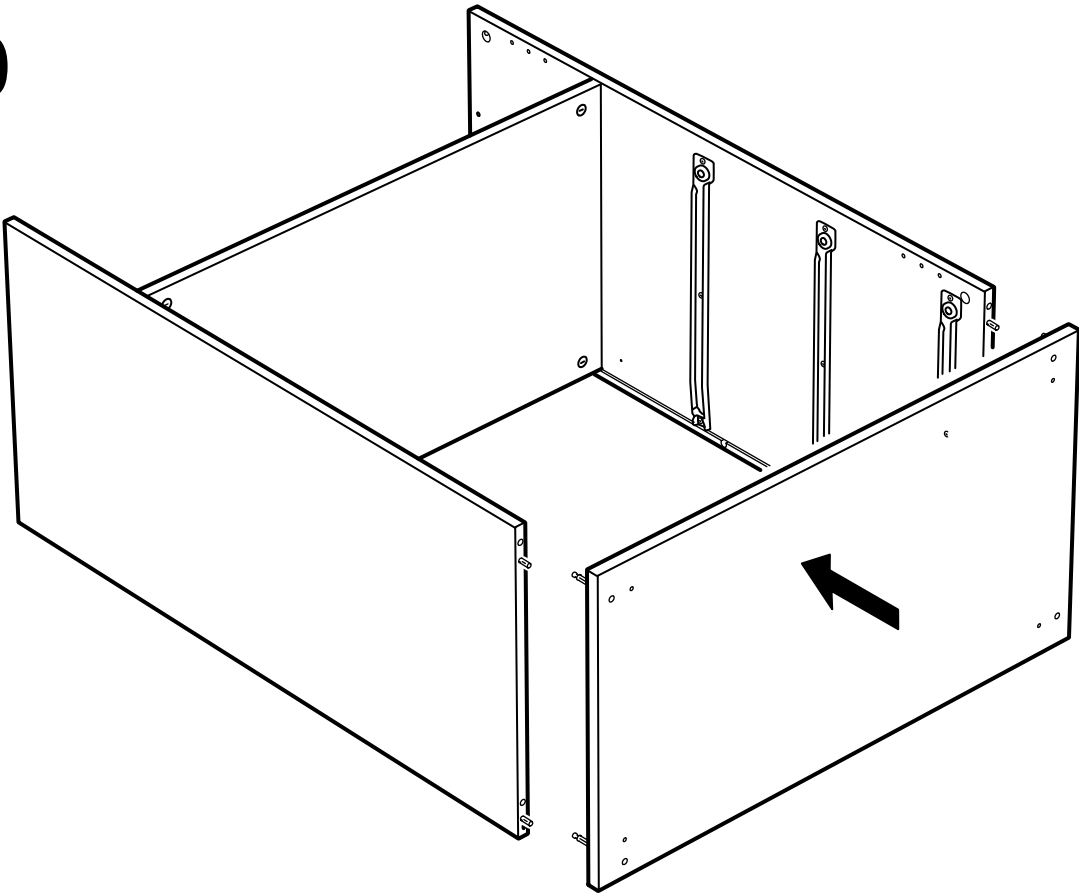 


11

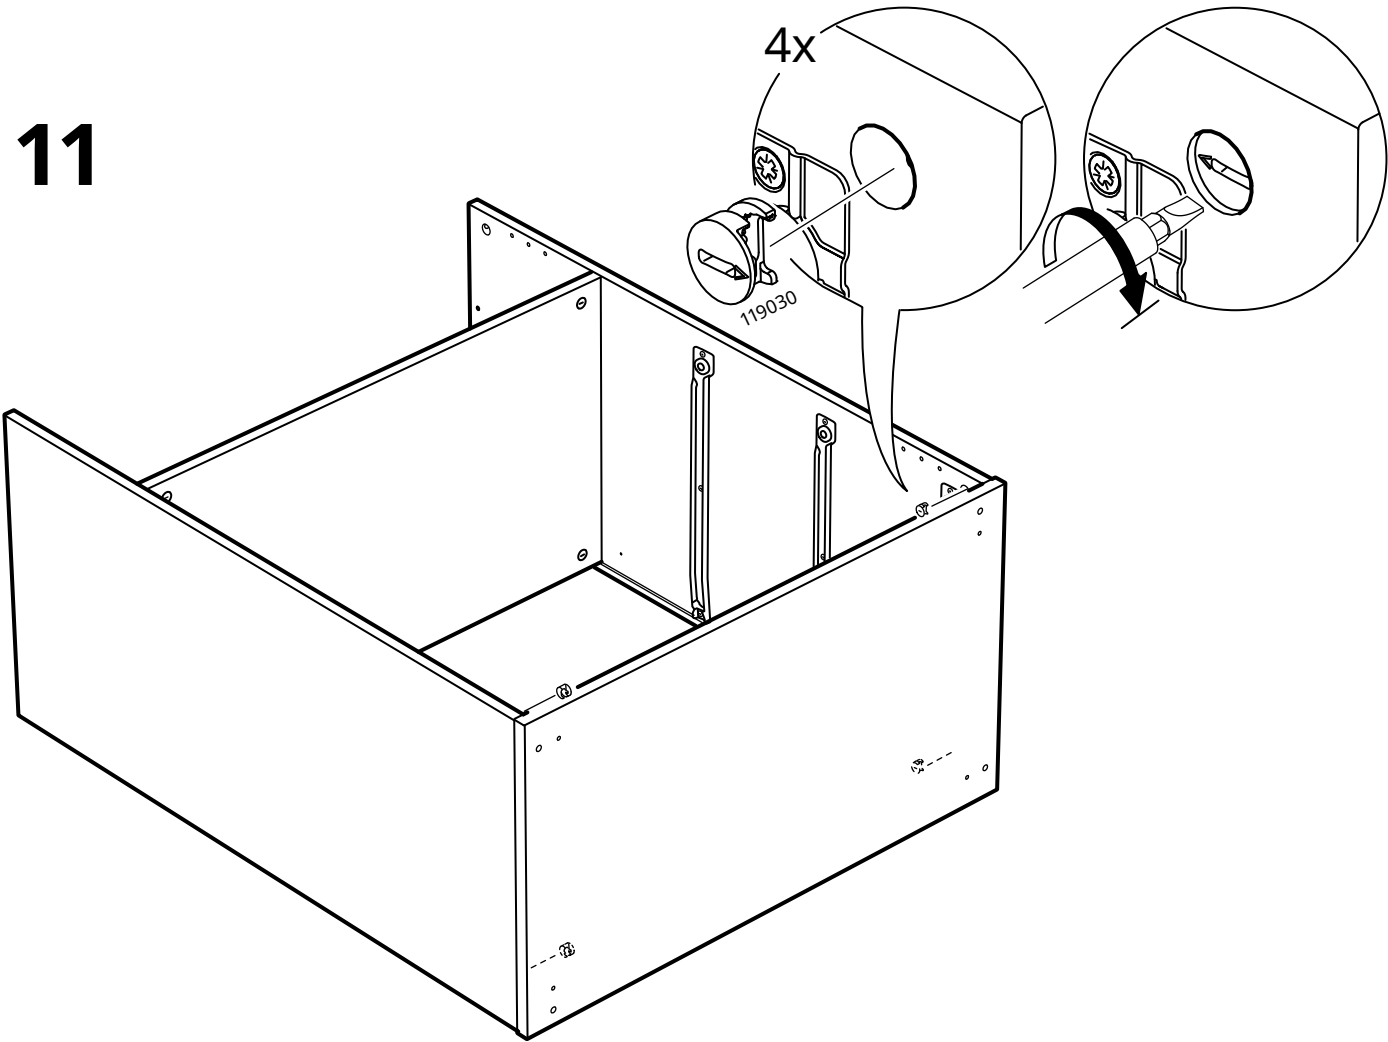 

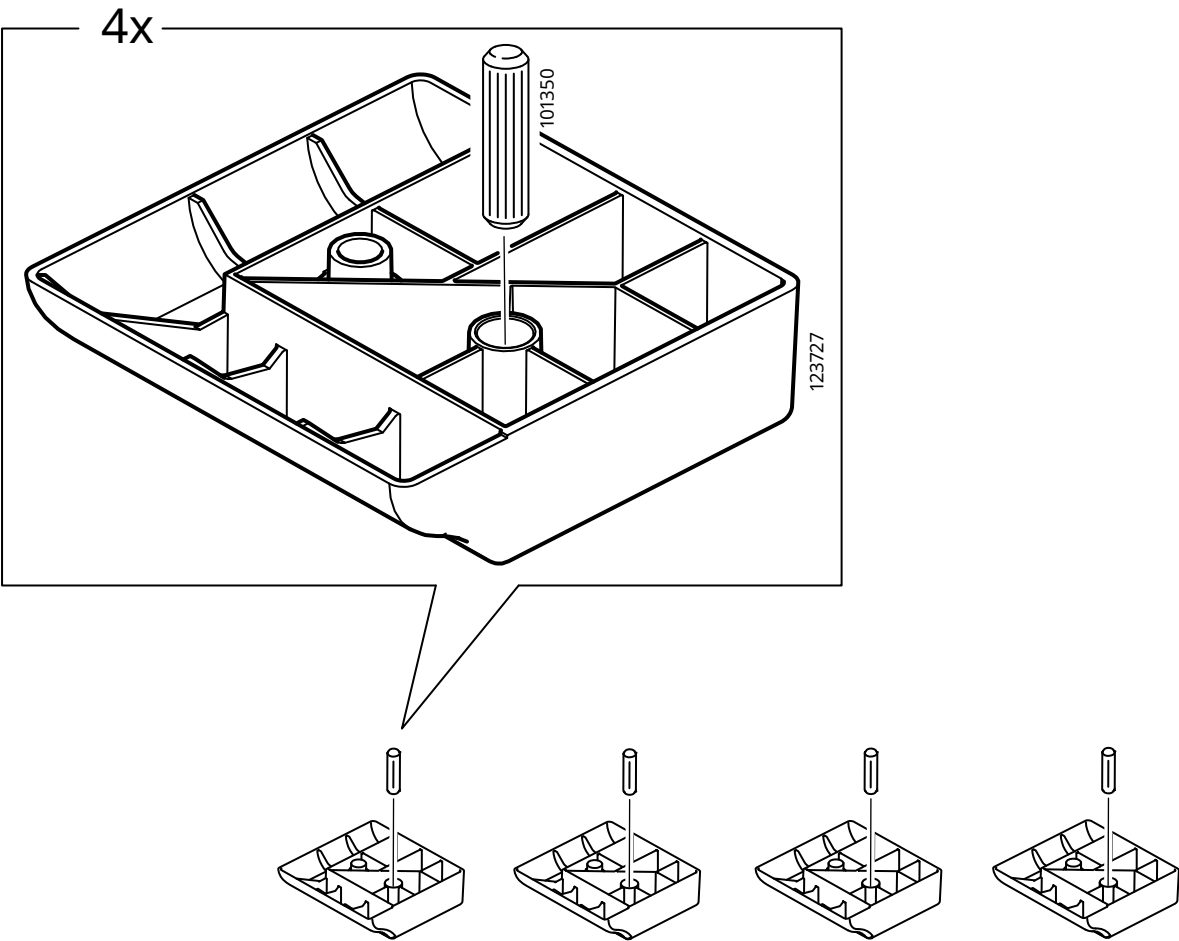 


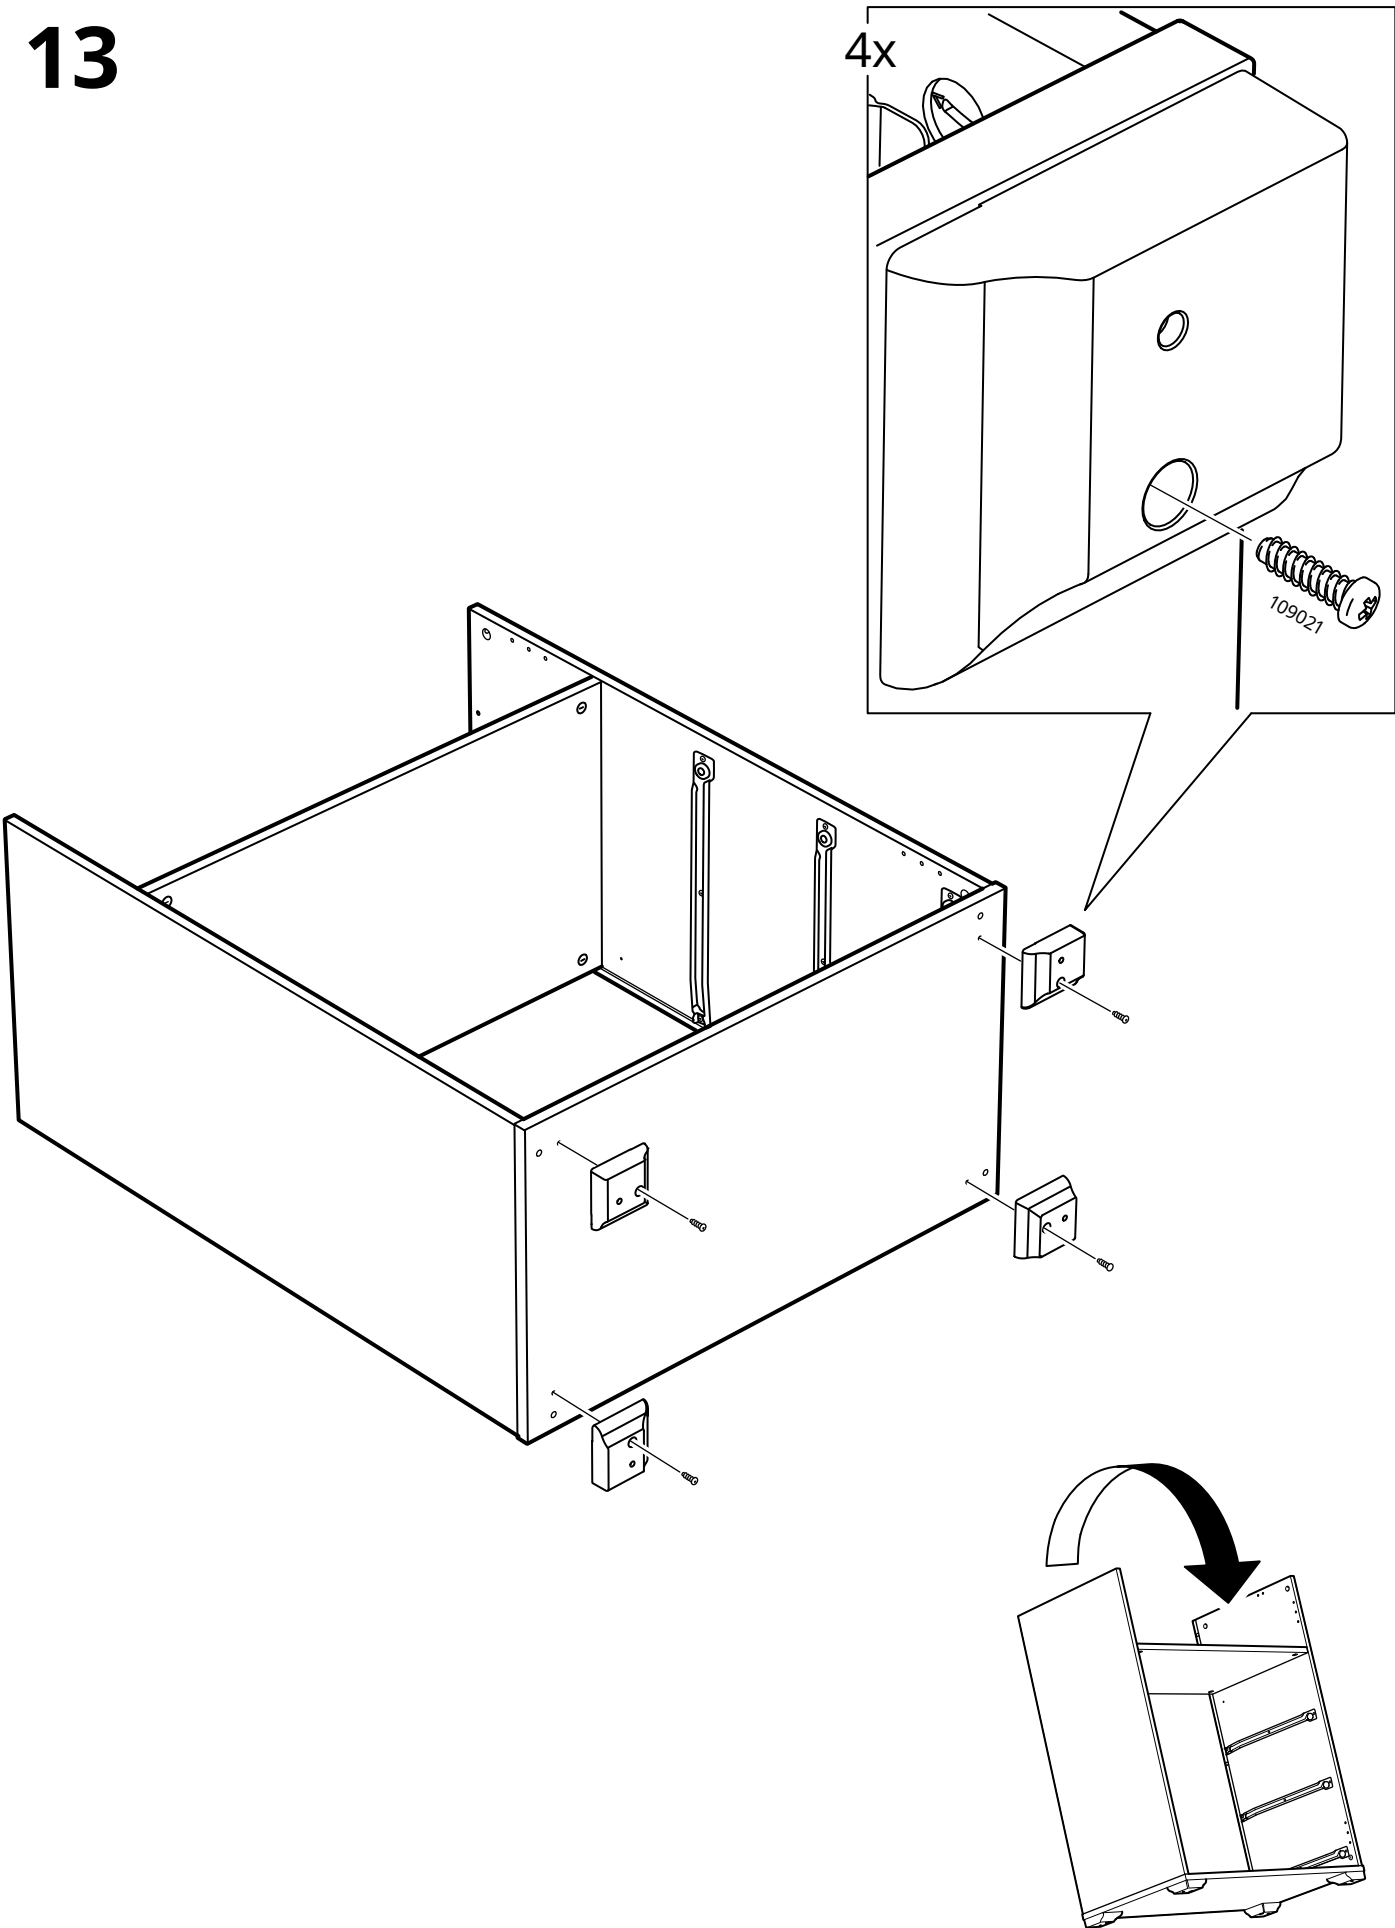 


14

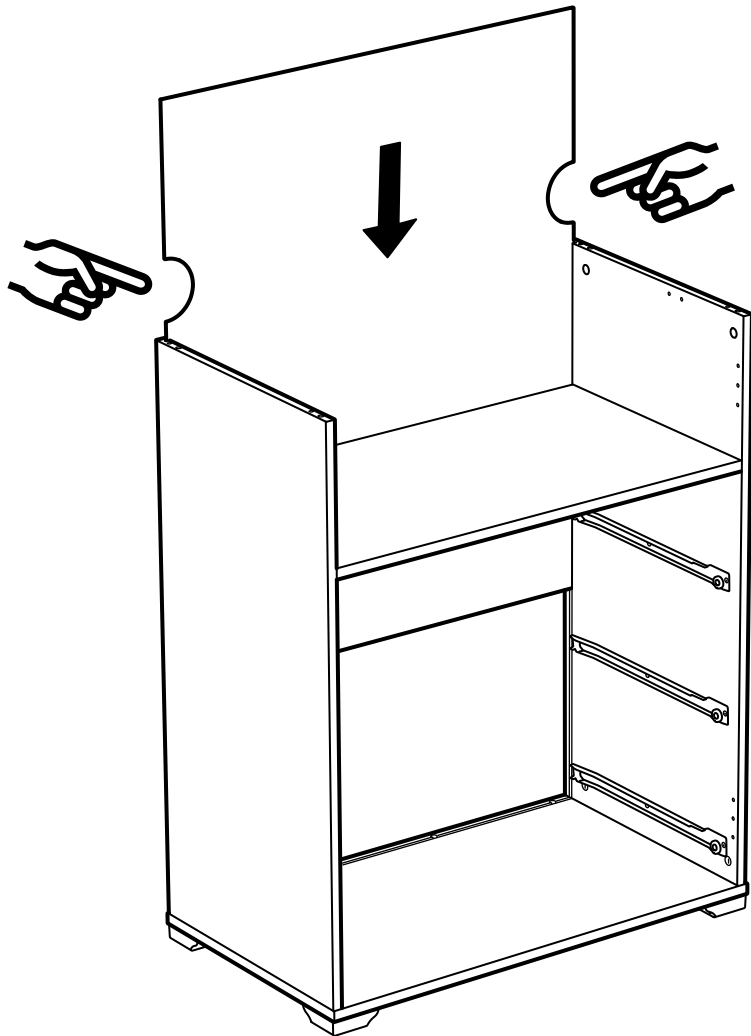 


15

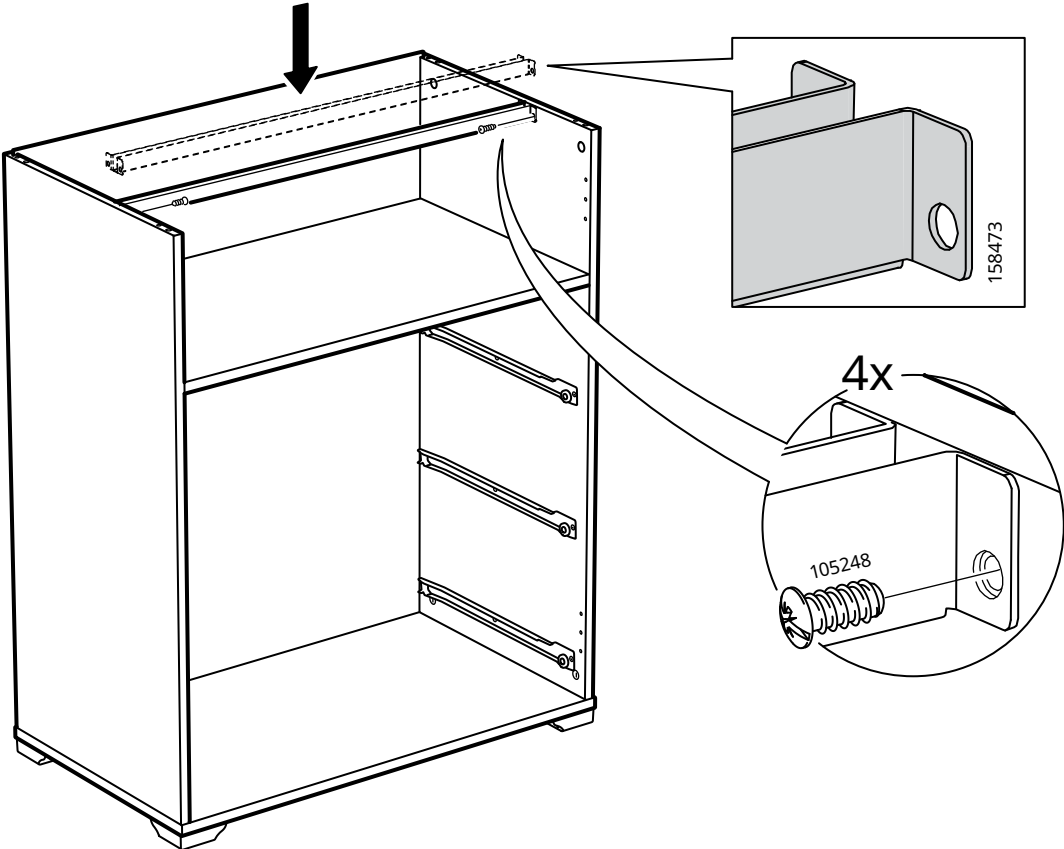 


16

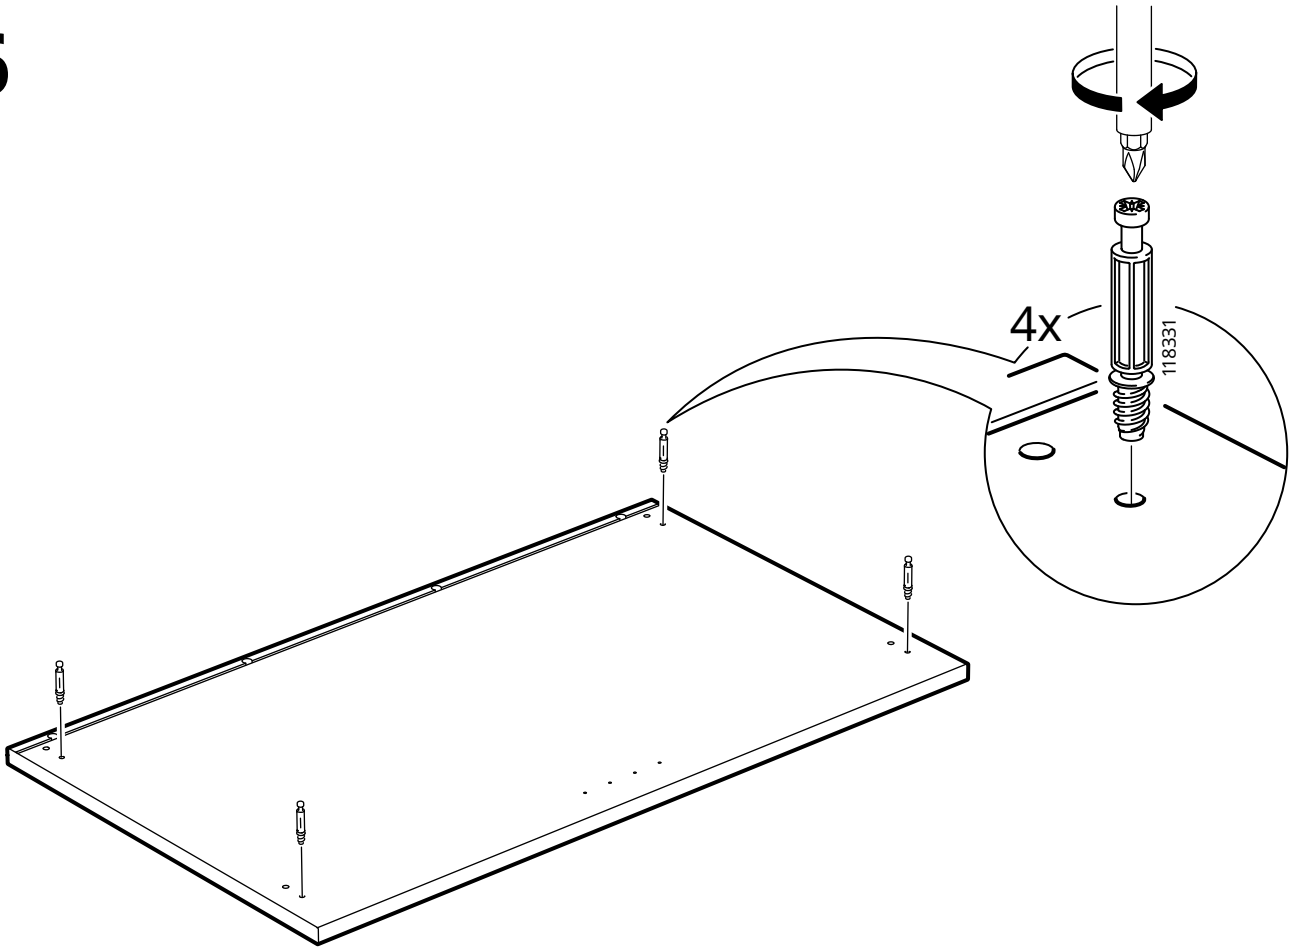 


17

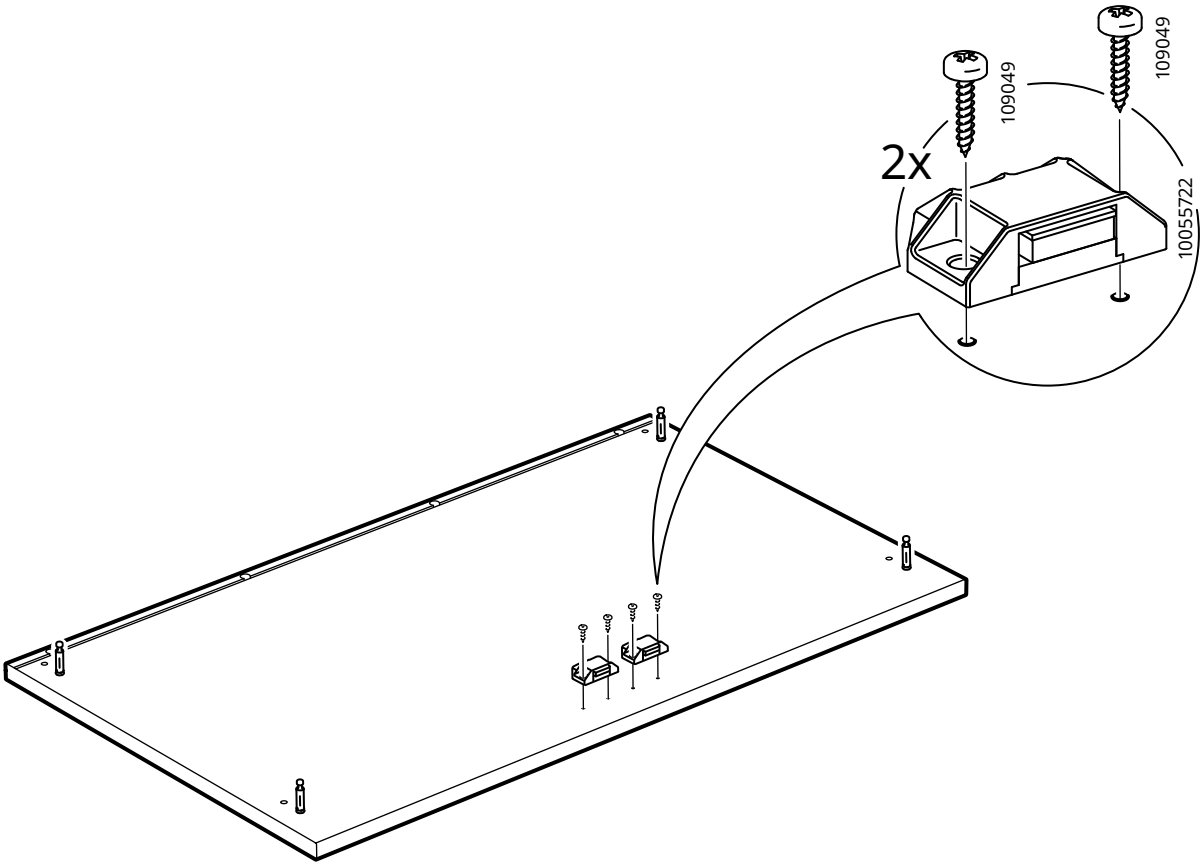 


18

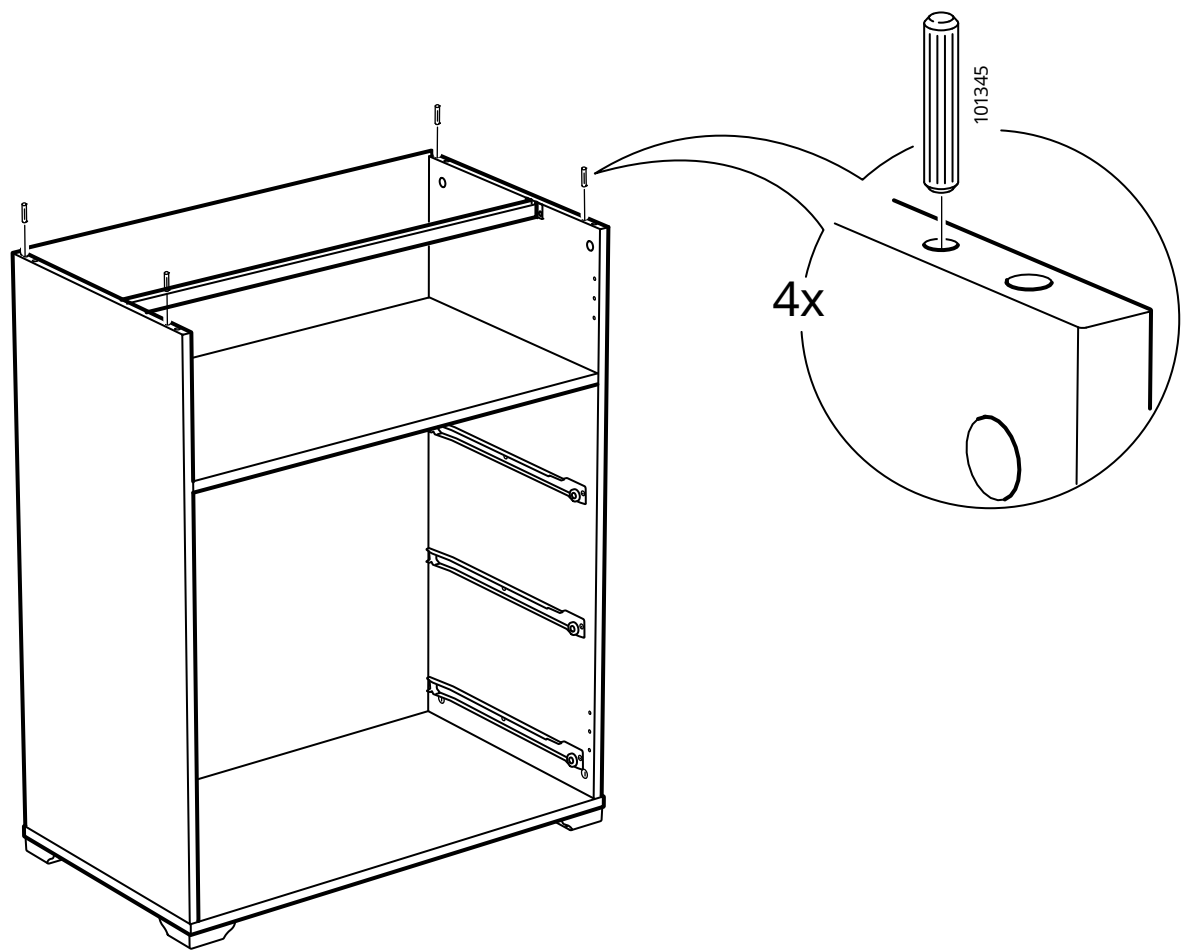 


19

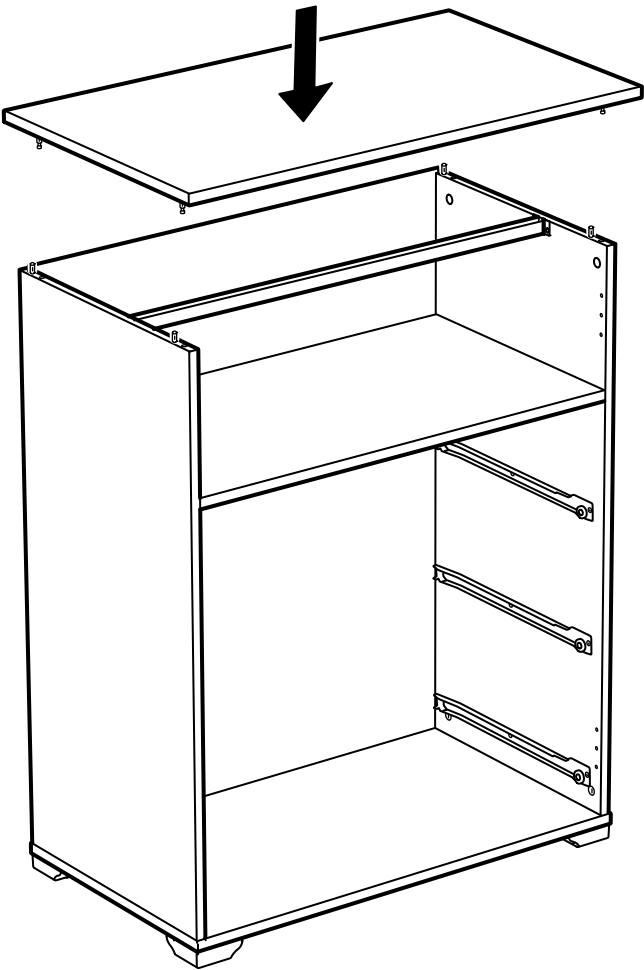 



20

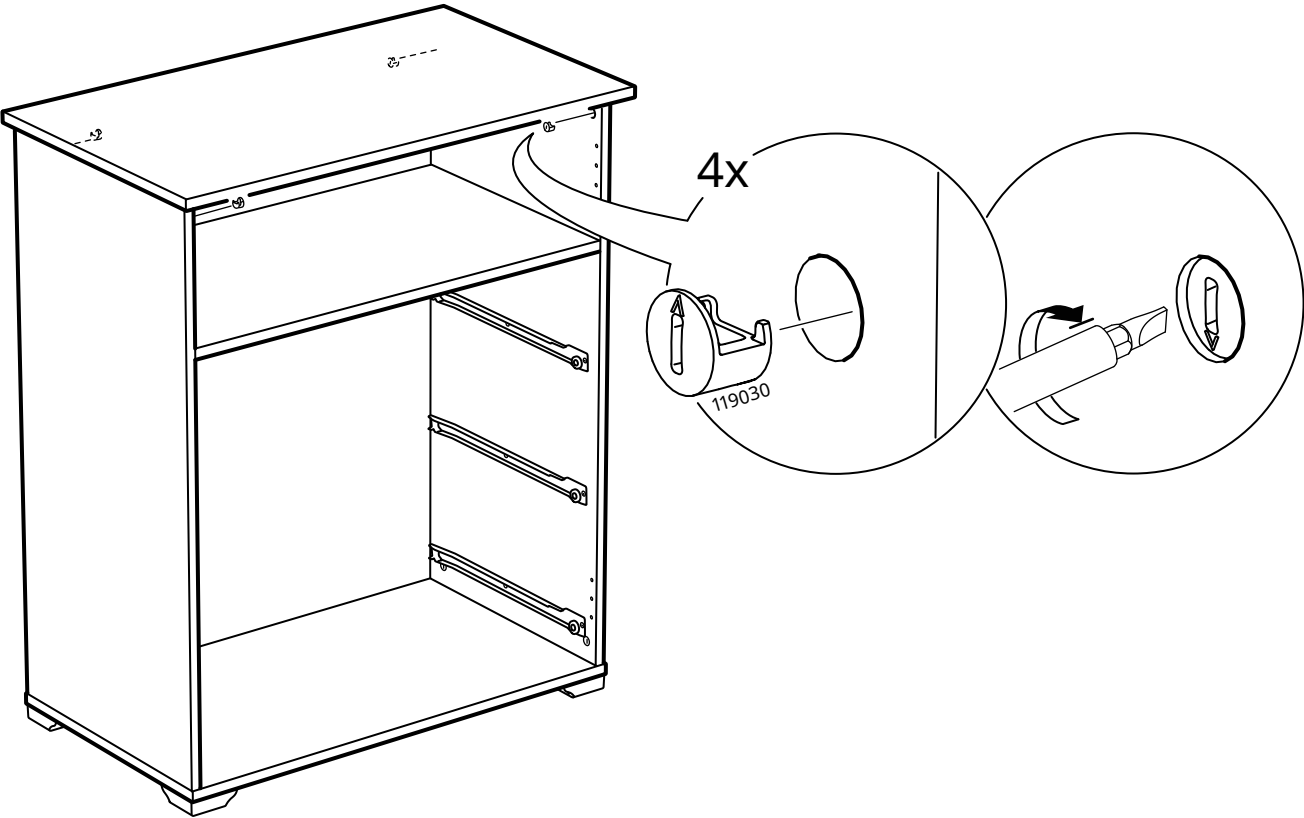 


21

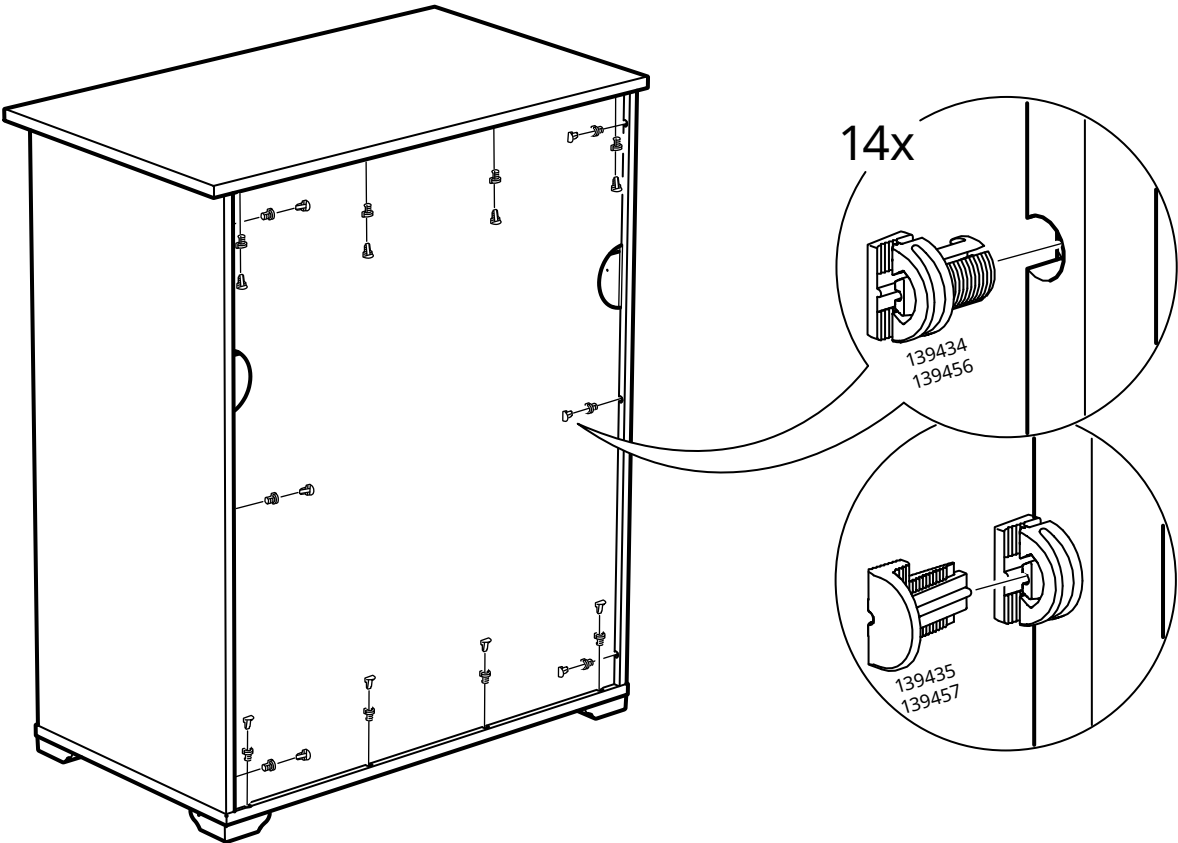 


22

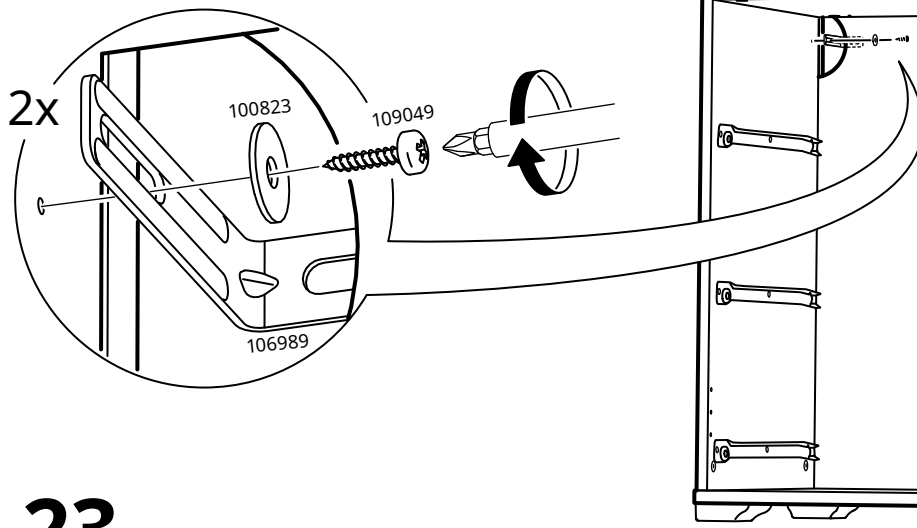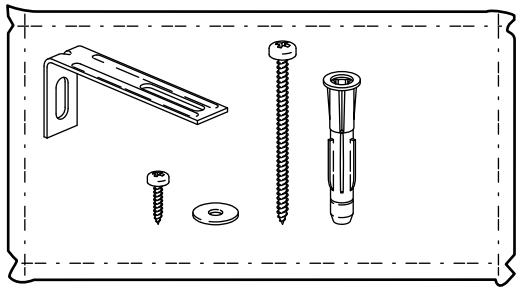  


23

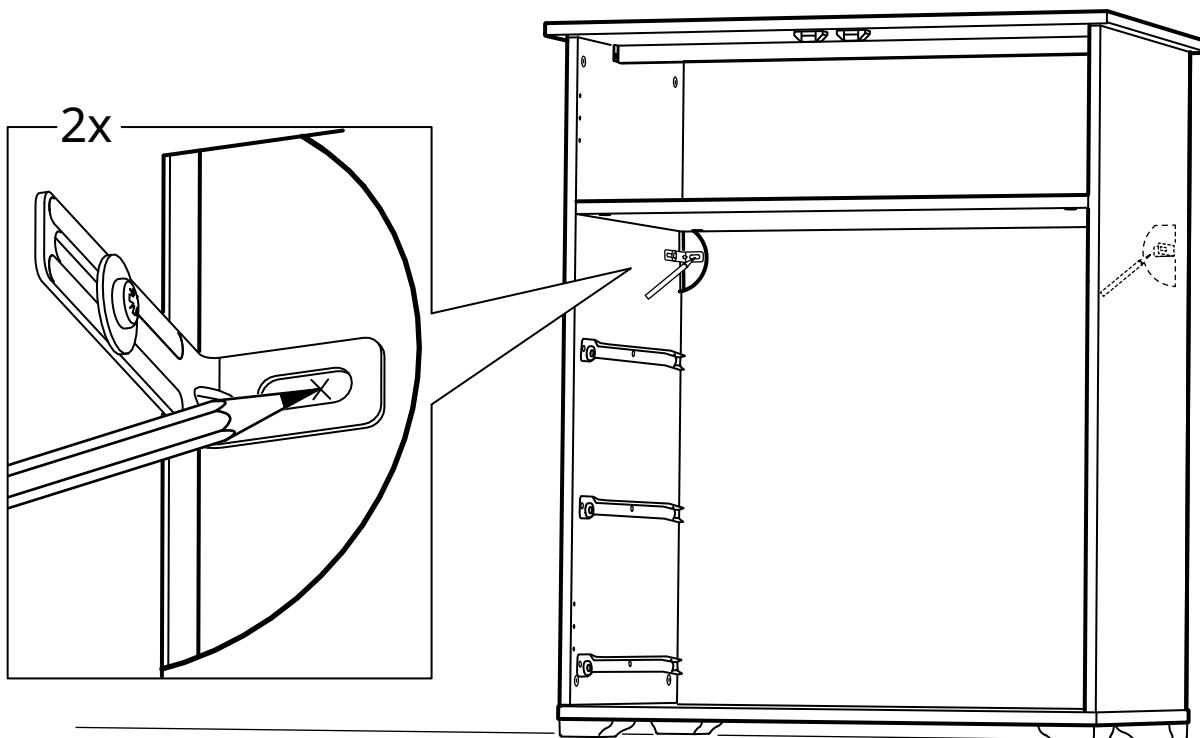 

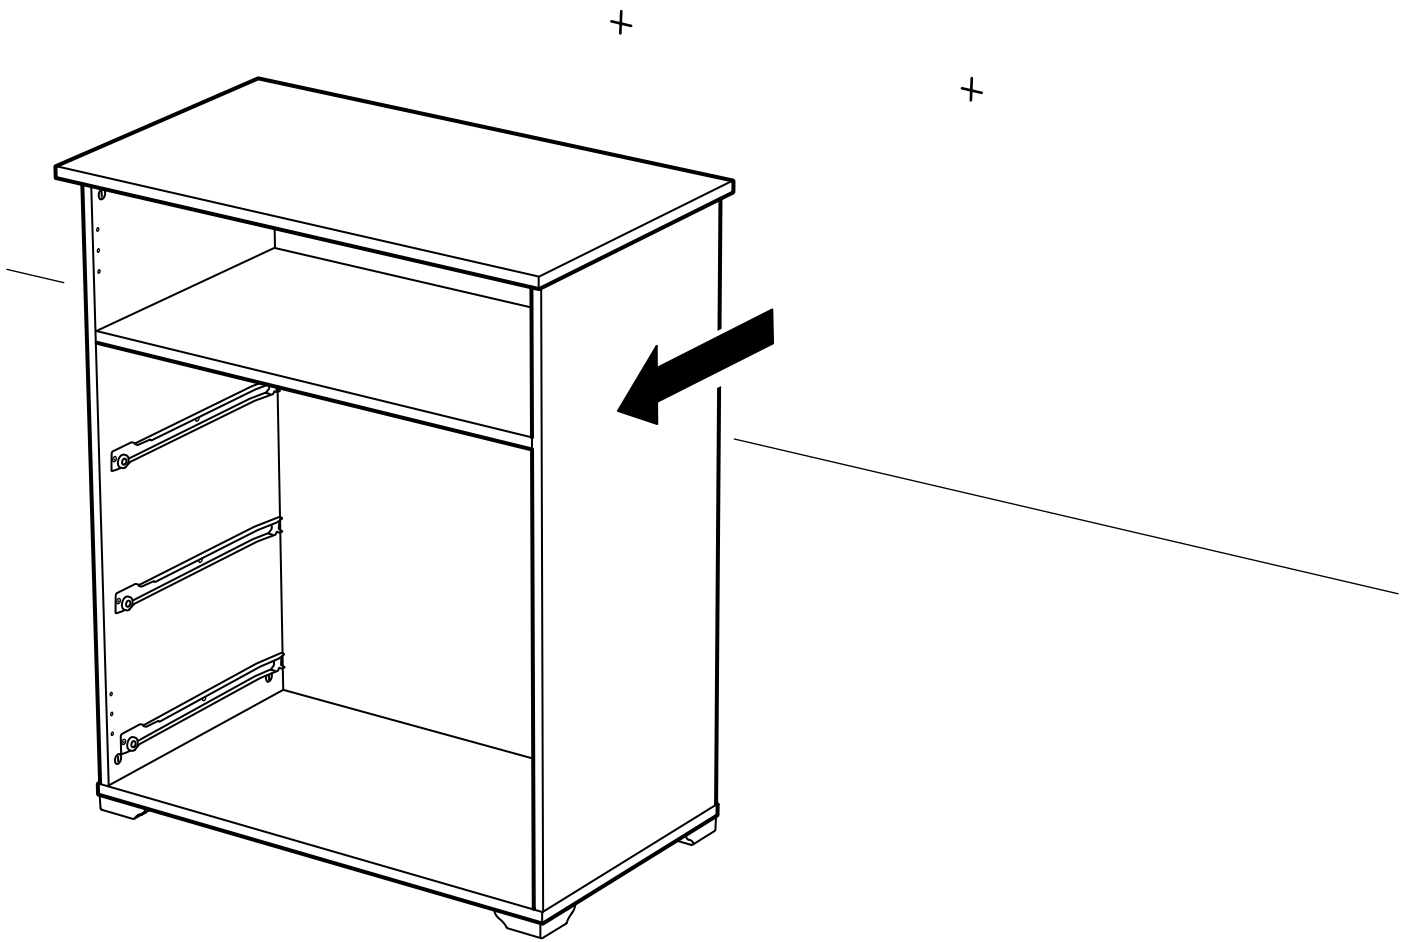 




www.IKEA.com/secure-it

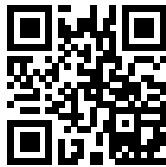 


www.IKEA.cn/secure-it

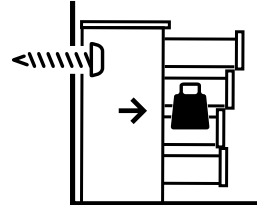 

English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

 
A

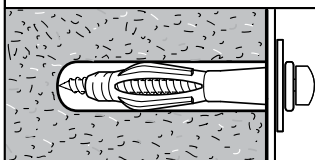


Ø 8 mm
(5/16")



 
1




2

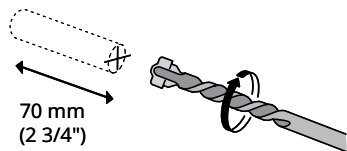 

3

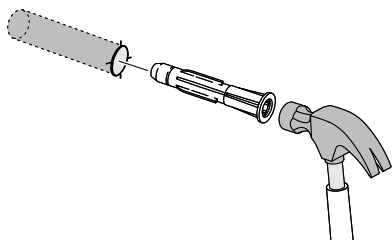 


B

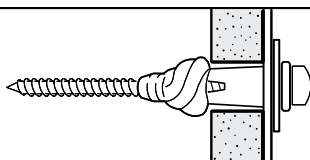 


Ø 8 mm
(5/16")



 
1




2

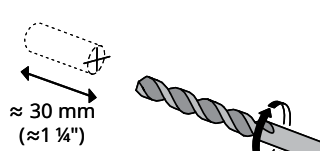 

3

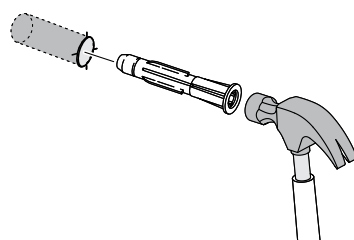 


C

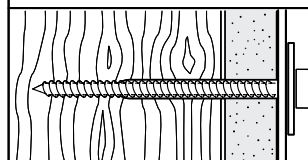 


Ø 3 mm
(1/8")





 1





2

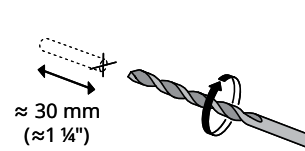 


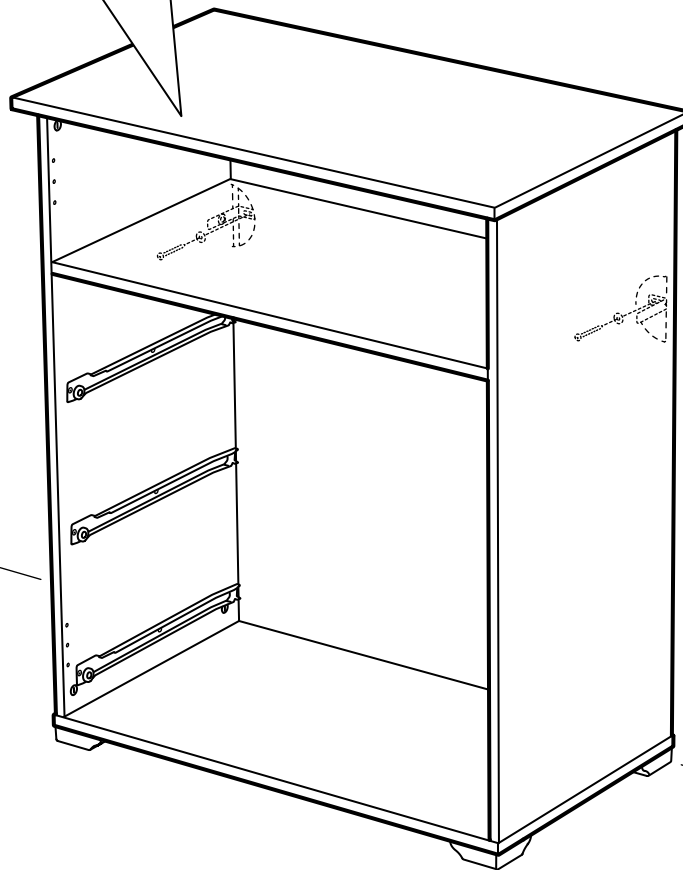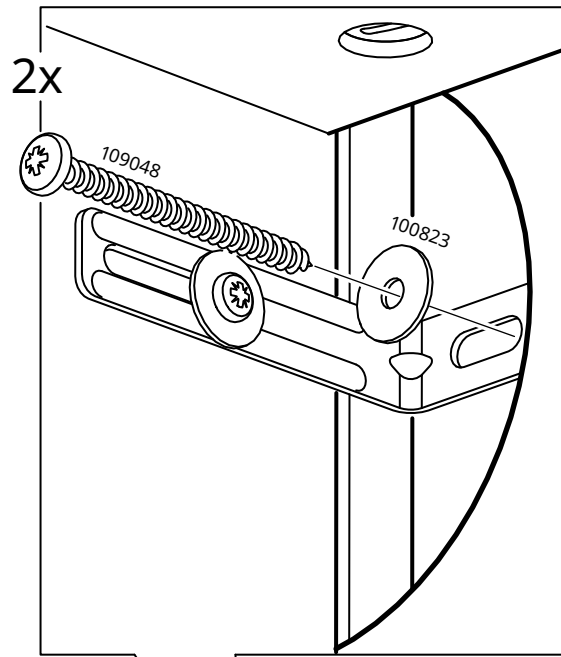  


26

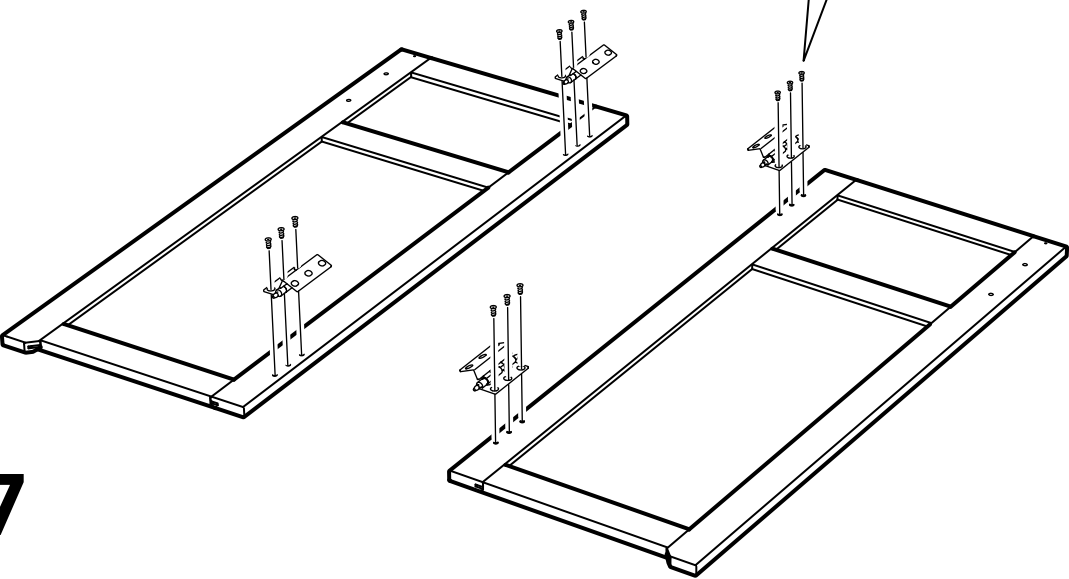 
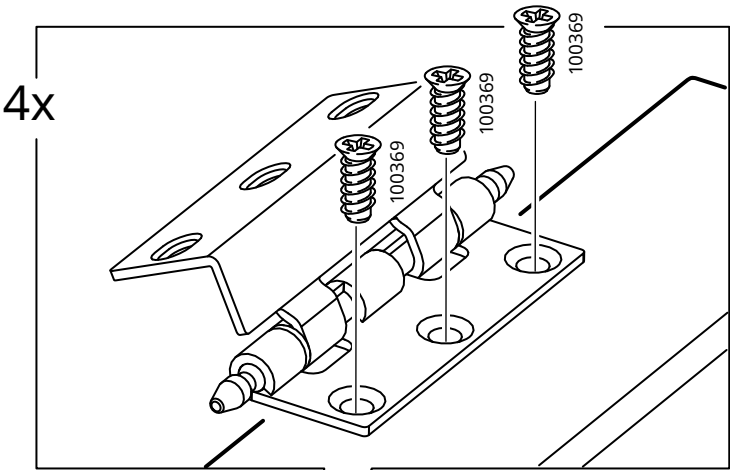 




27

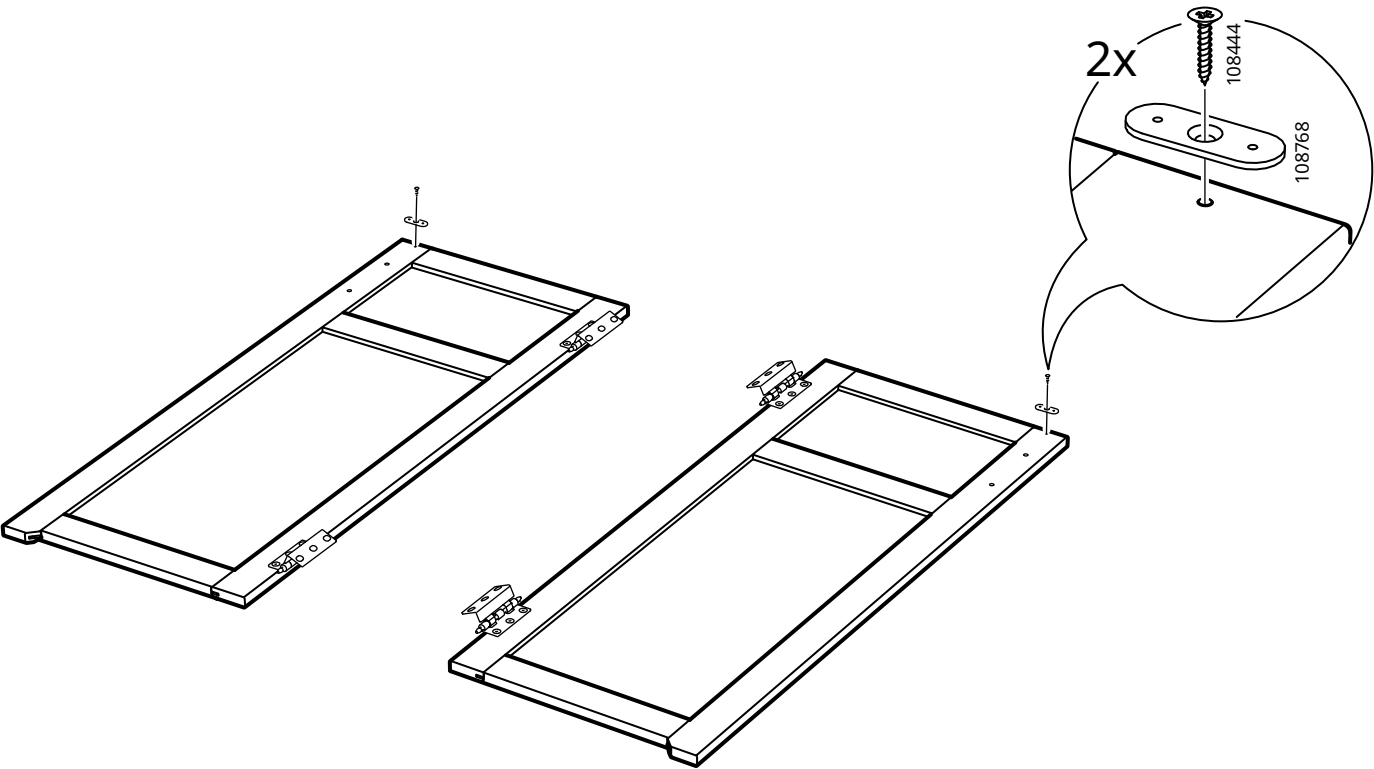 

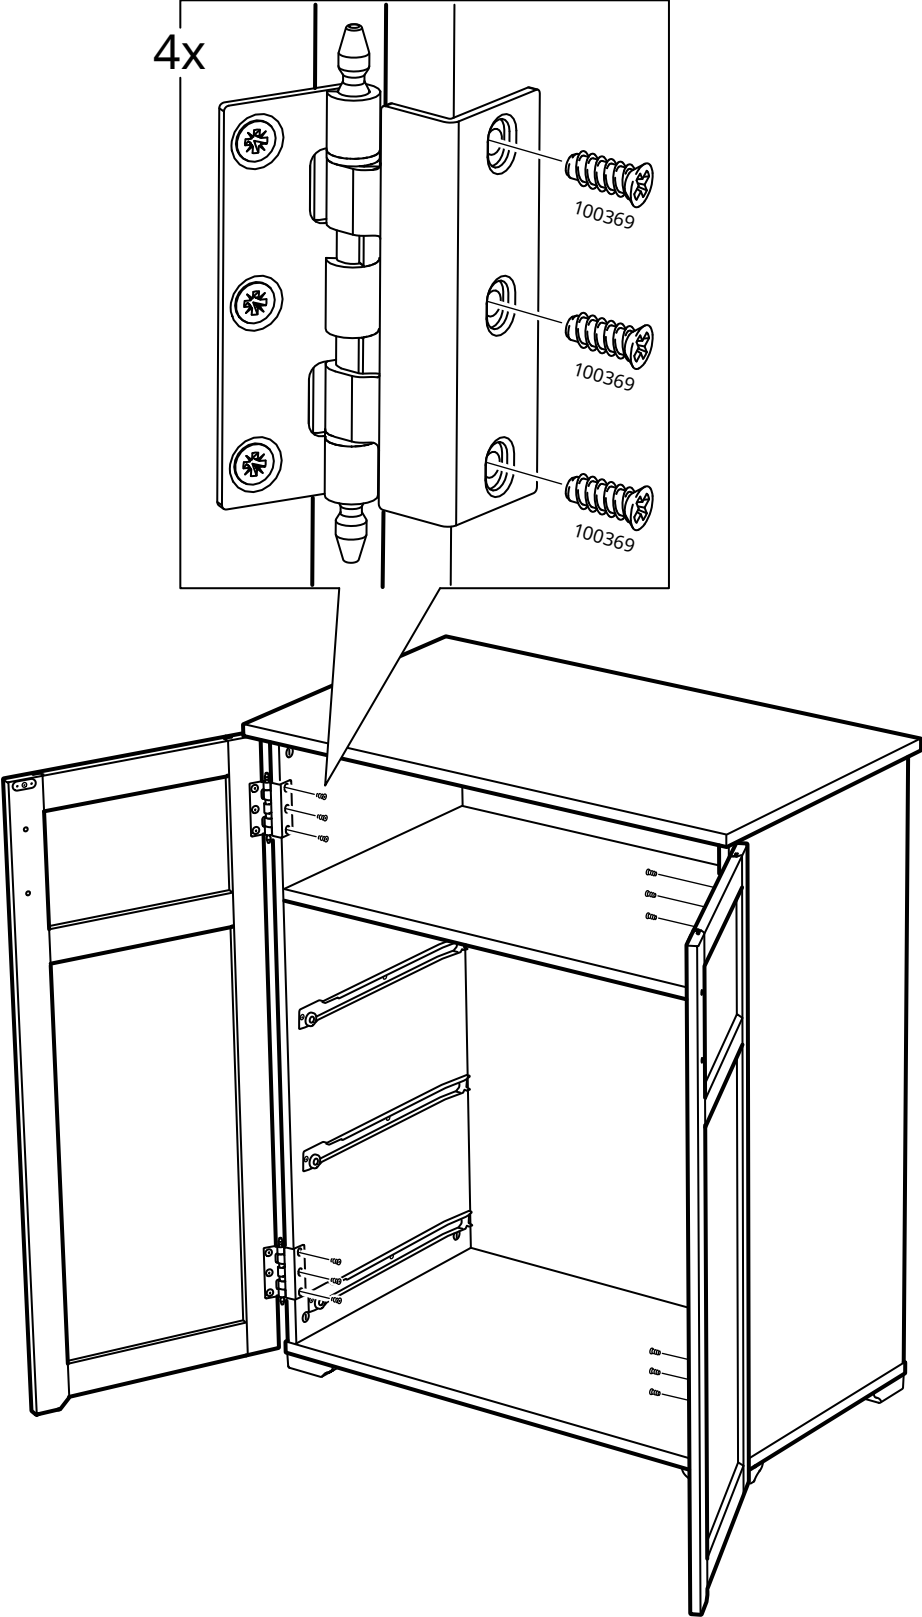 


29

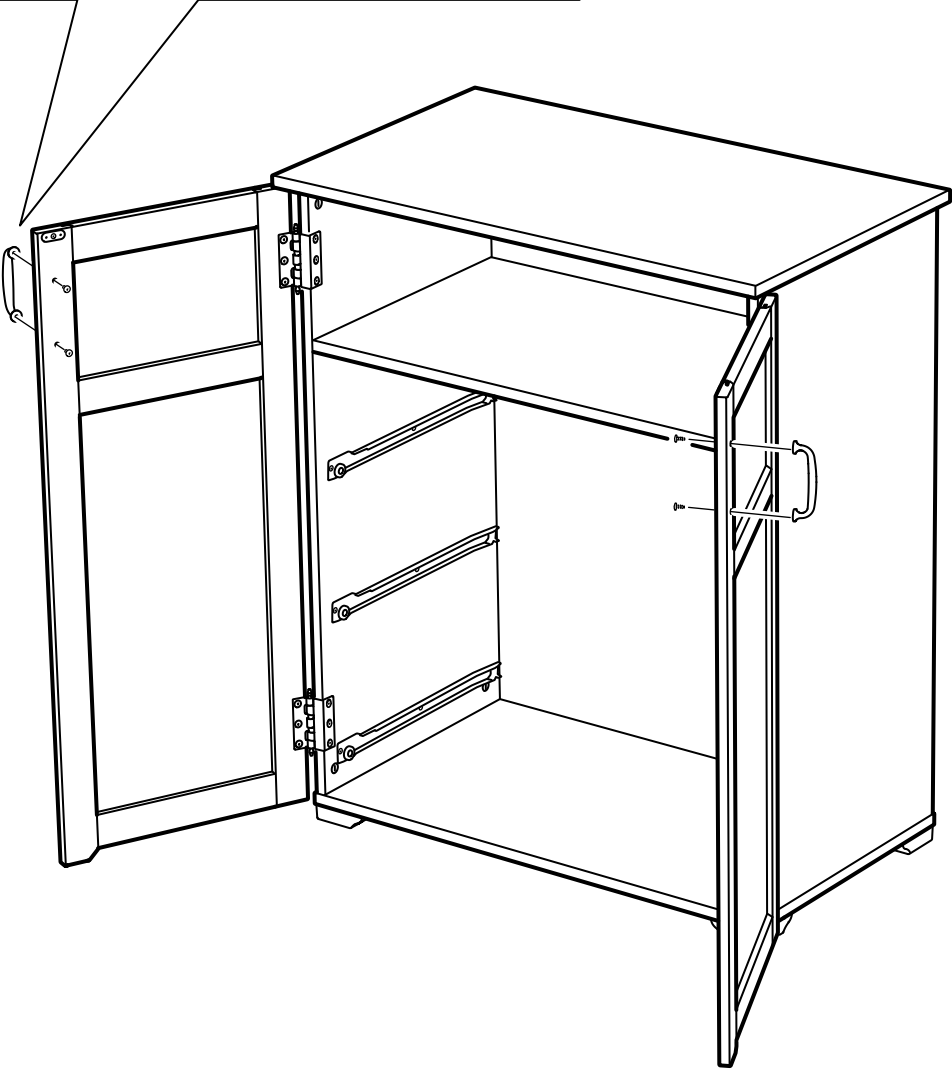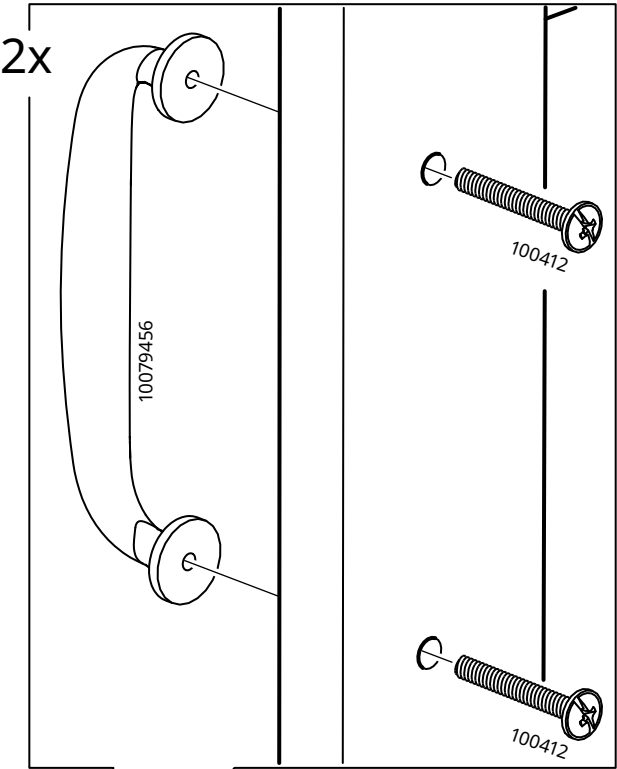  


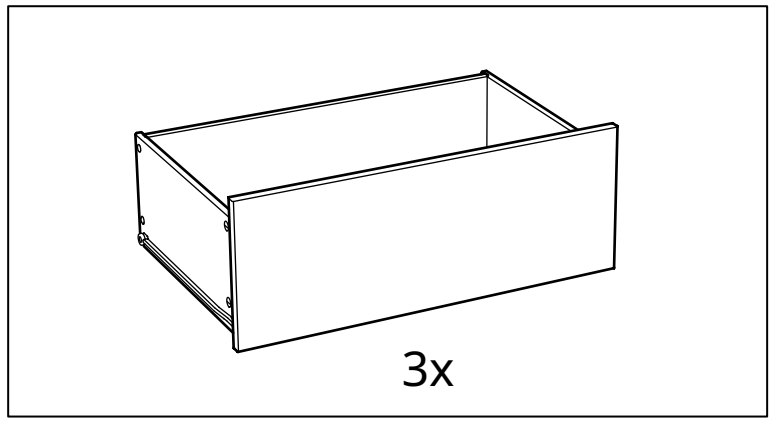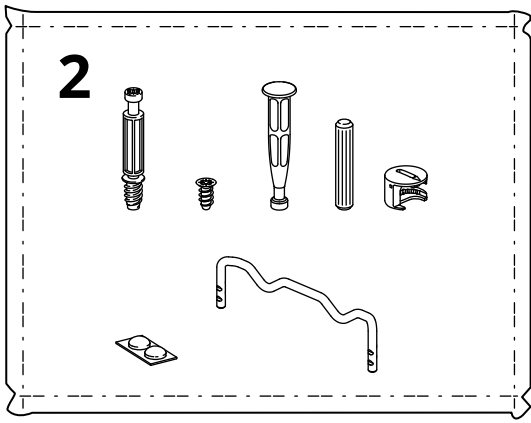  


30

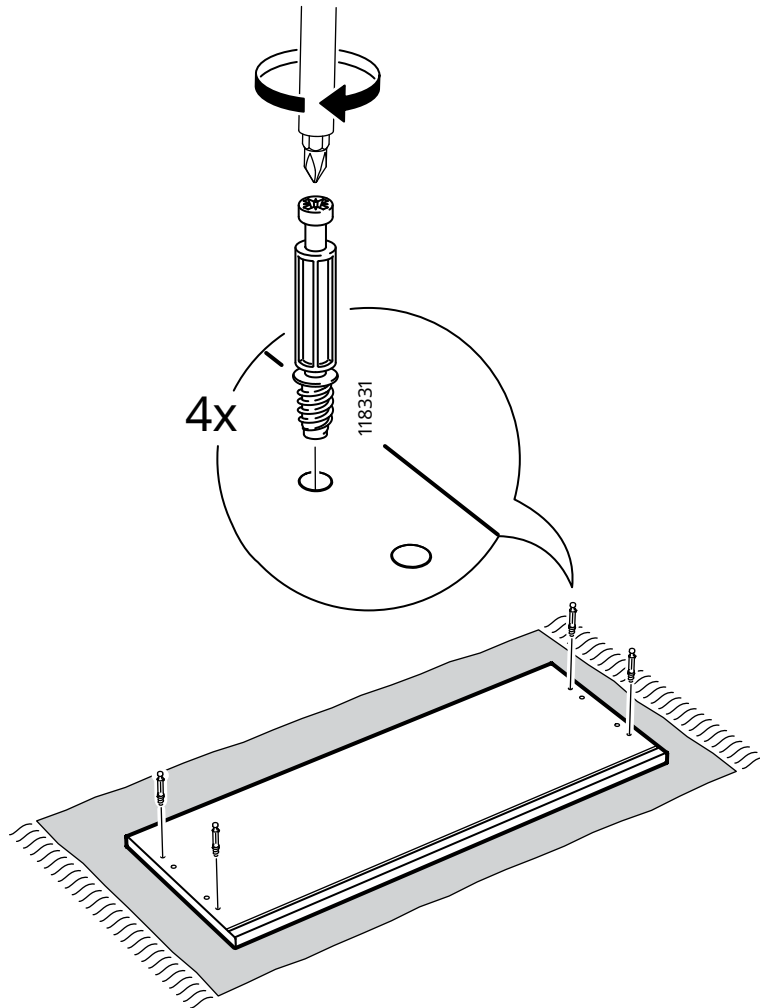 


31

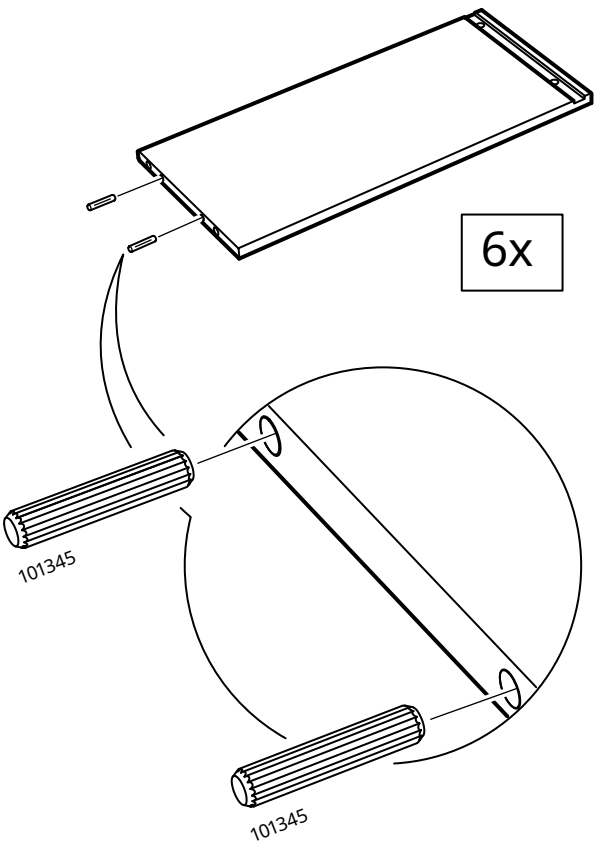 


32

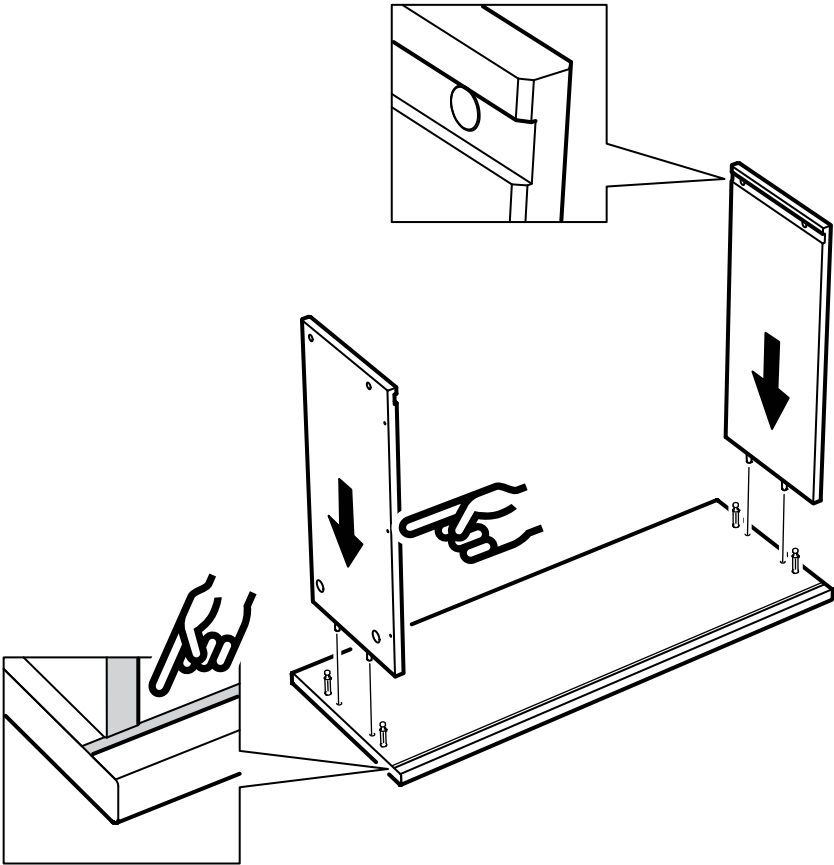 


33

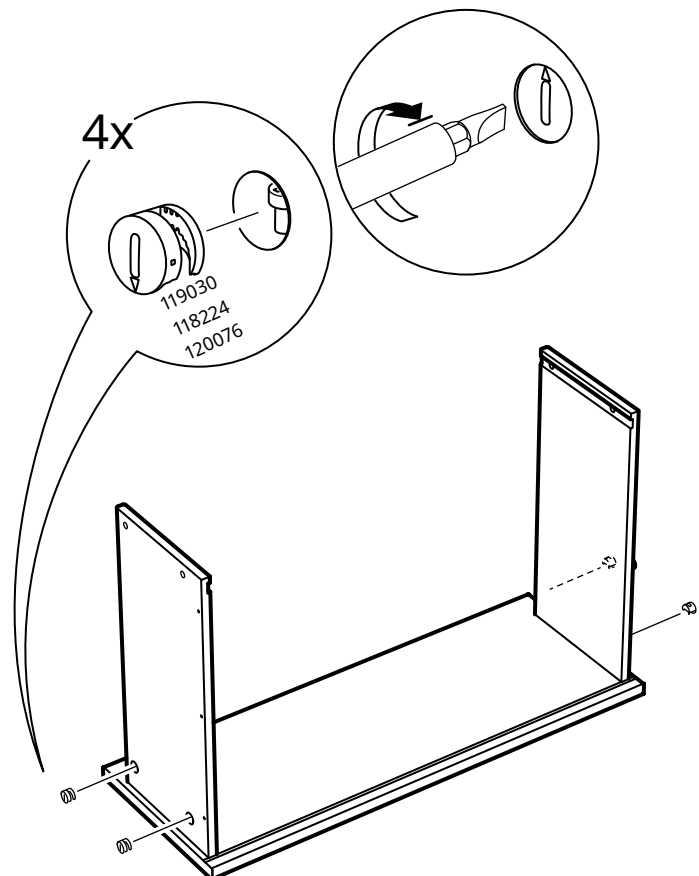 


34

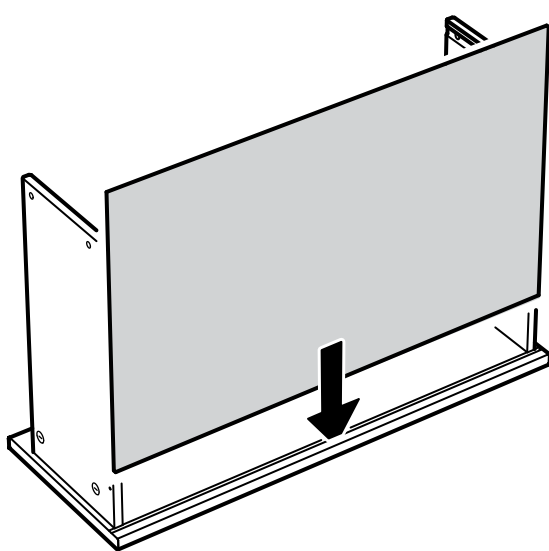 


35

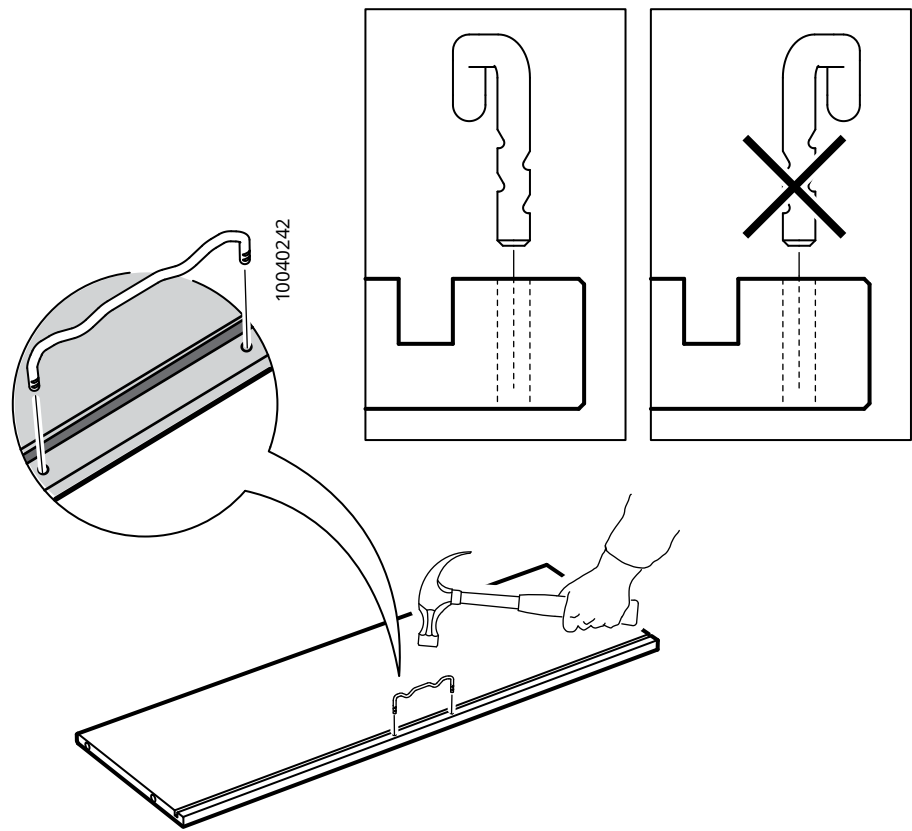 


36

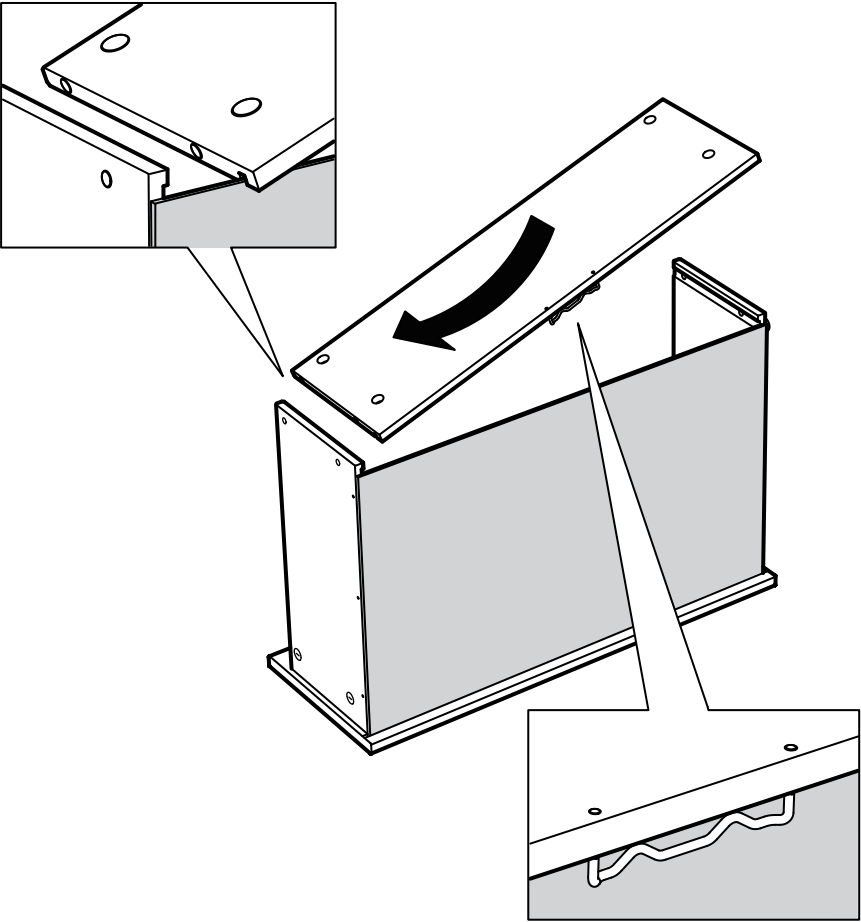 


37

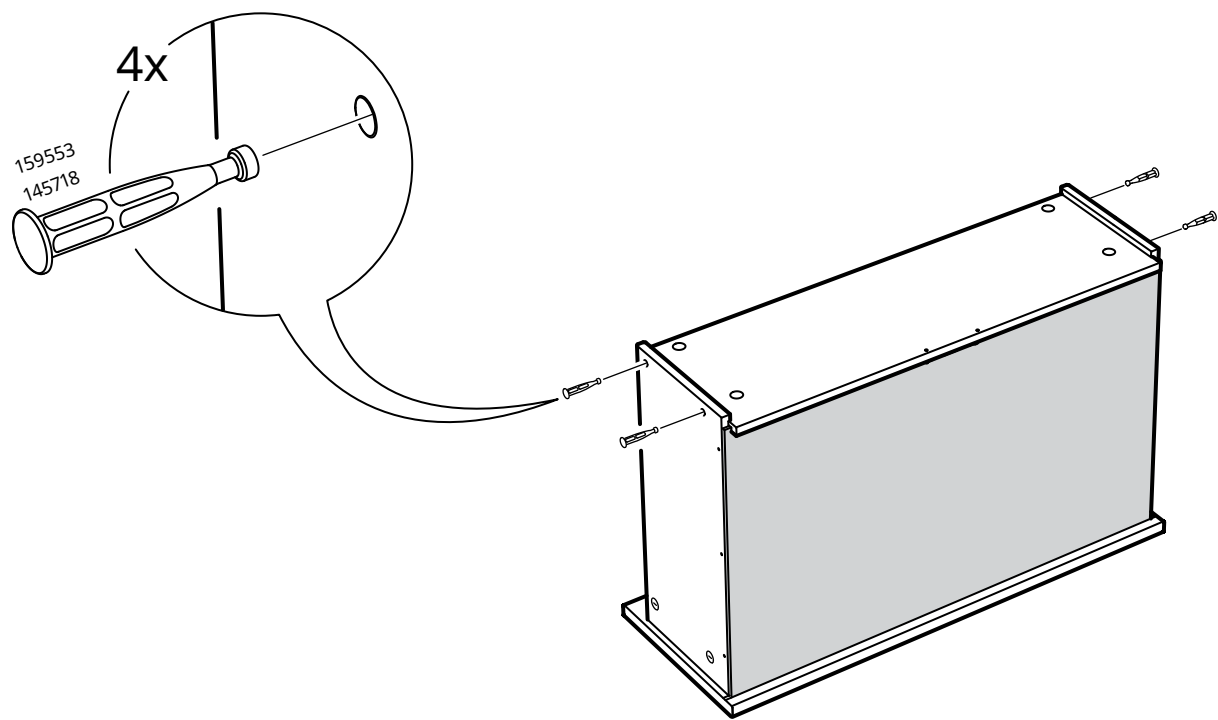 

38

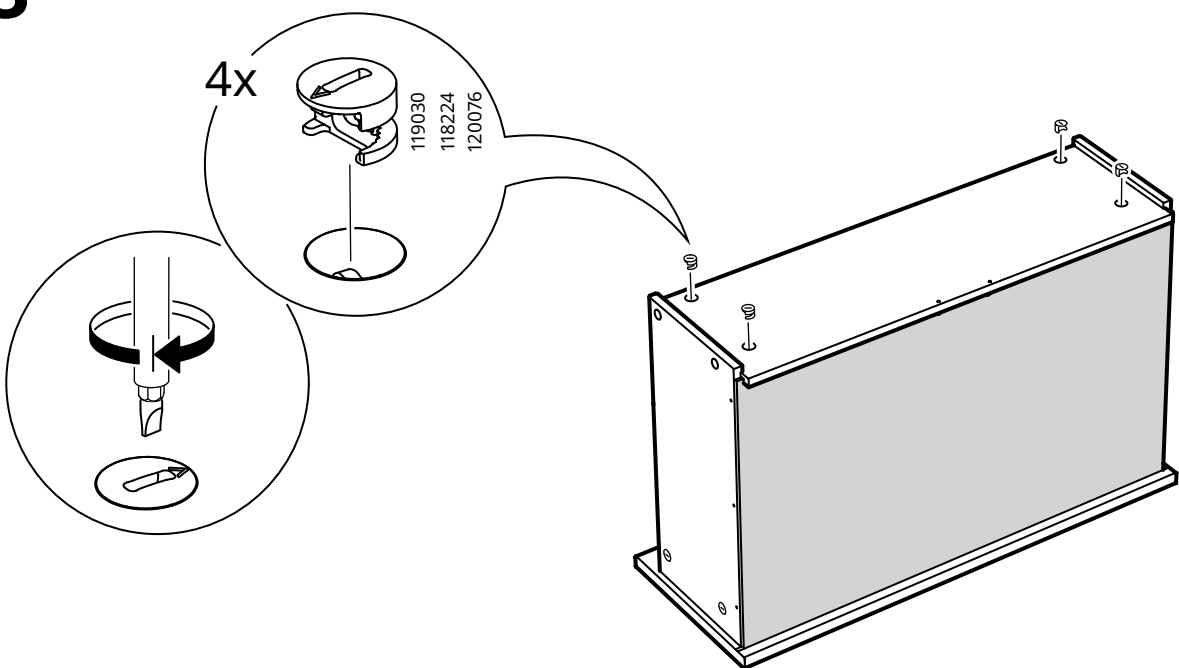 

39

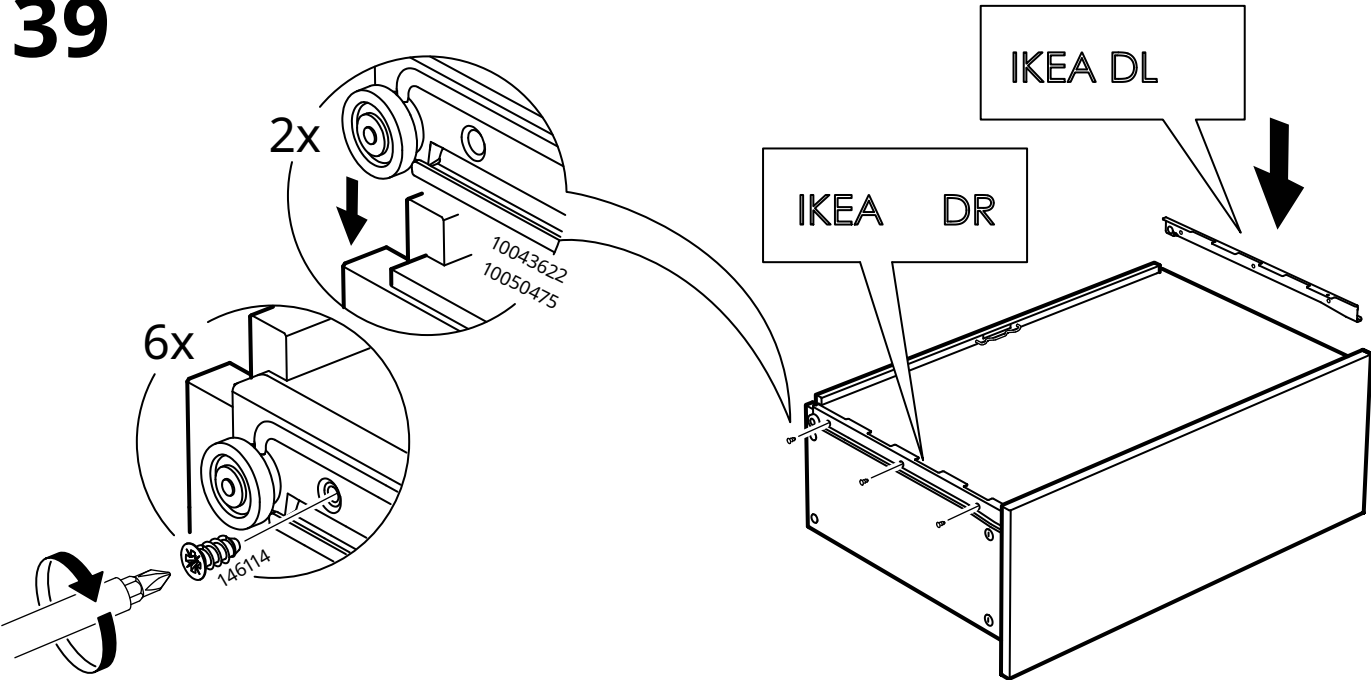 

40

