 
 
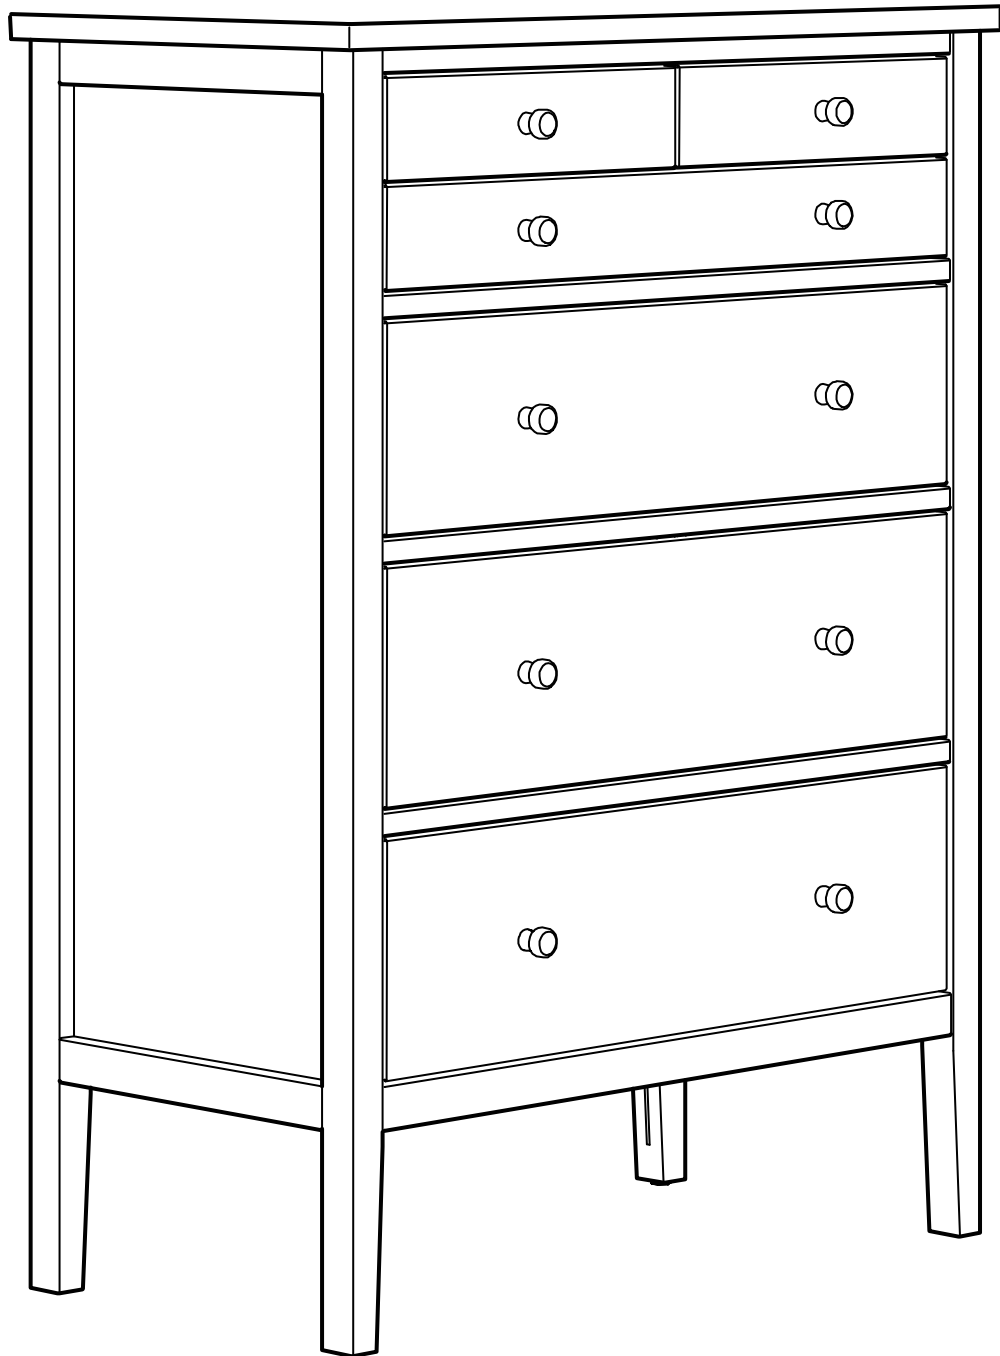 
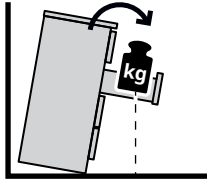 


GULLABERG

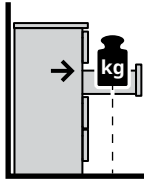

Design and Quality
IKEA of Sweden



English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

 
 
 
NEVER open more than one drawer at a time.

 
 
 
 
 
DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.

Place heaviest items in the lowest drawers.

English


Read and follow each step of the instruction carefully.

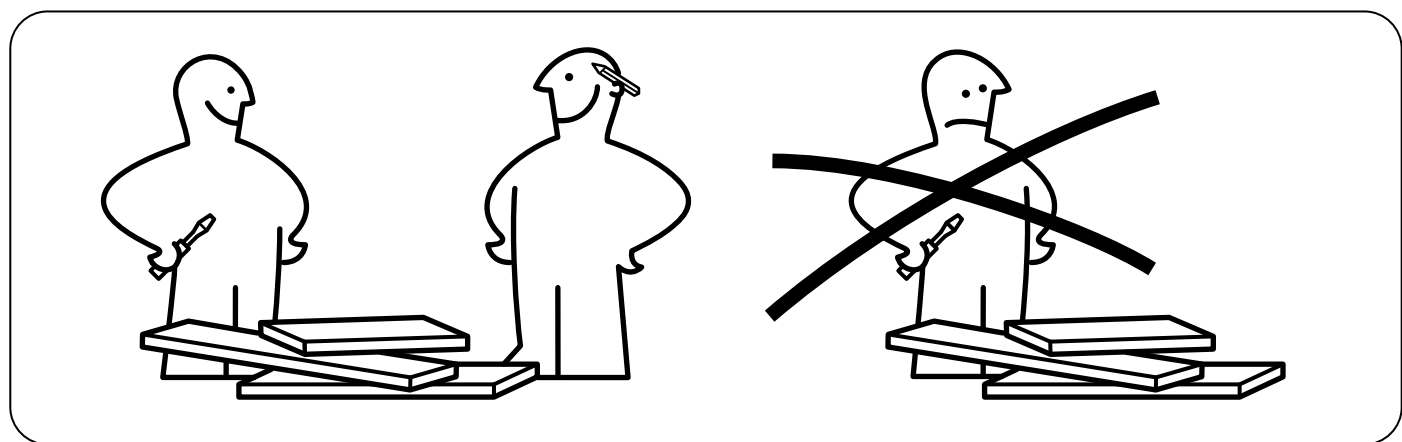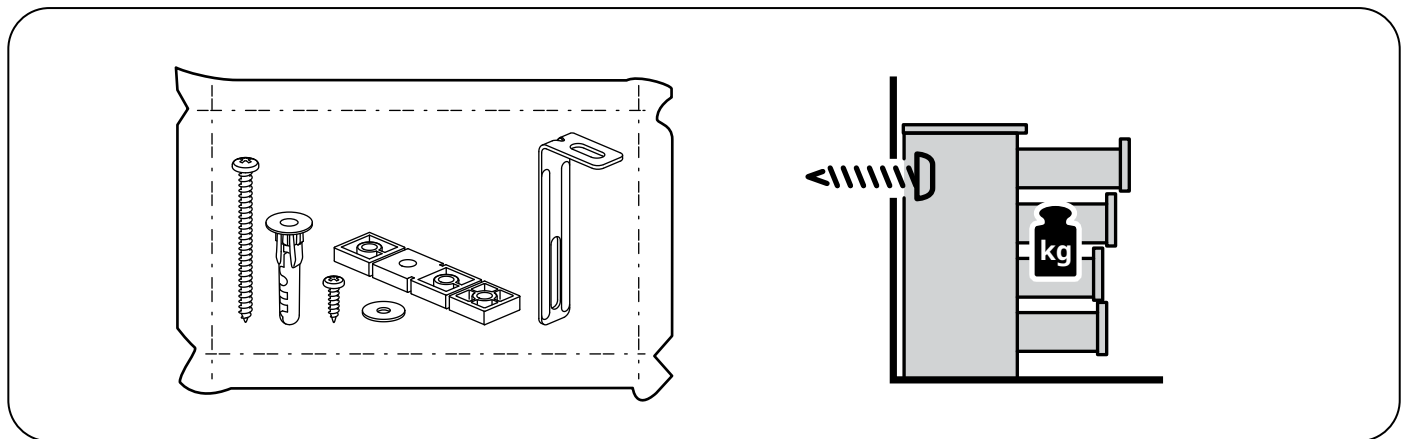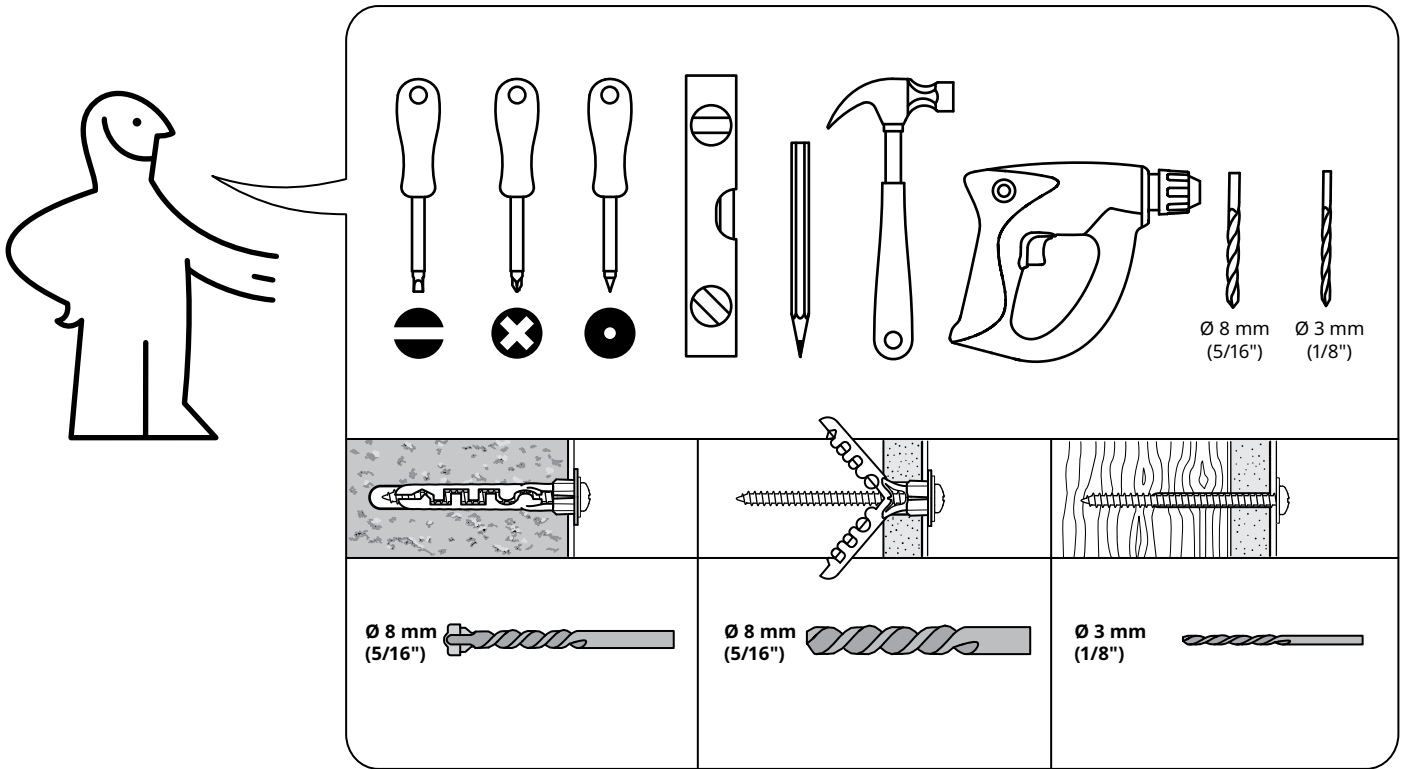

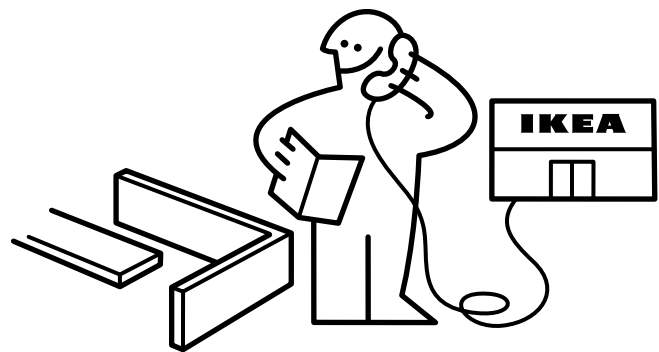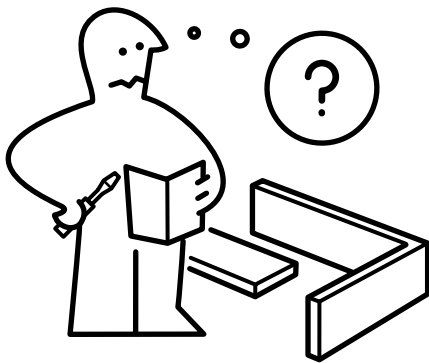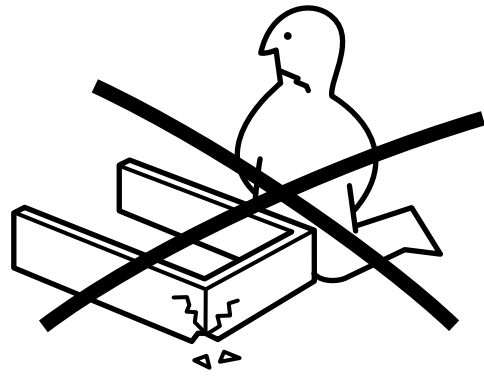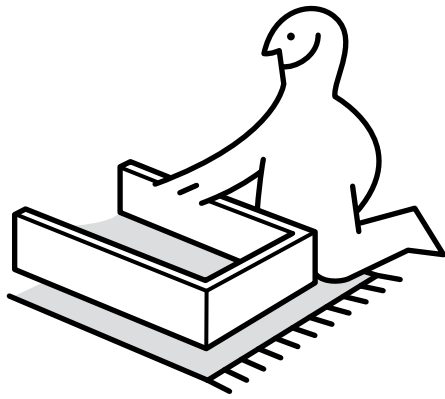

109572

 2x

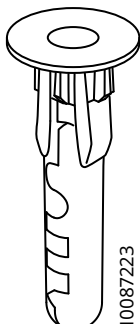


10087223

2x




109049

 1x




100823

 2x

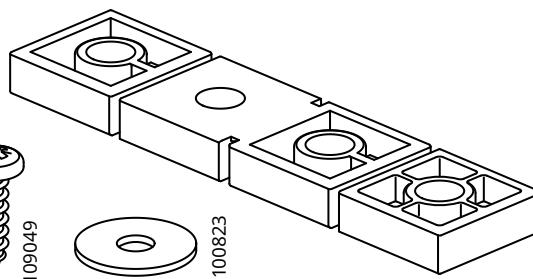

1x

 10102070

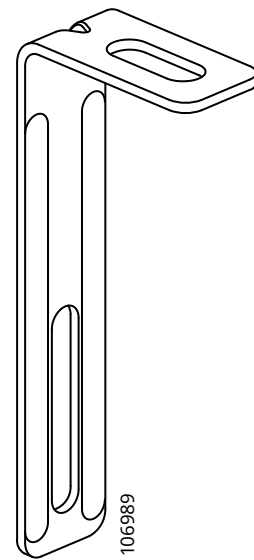

106989

 
1x

370173


1



18x



4x

 


30x



36x



 
4x

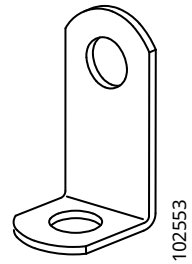


2x



 
4x

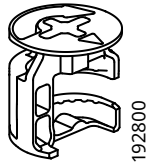


14x

 


4x

 


4x

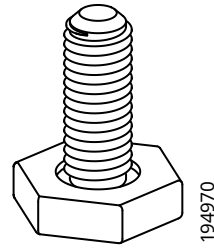 

4x

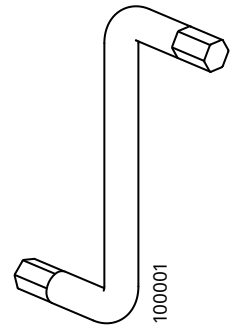 


1x

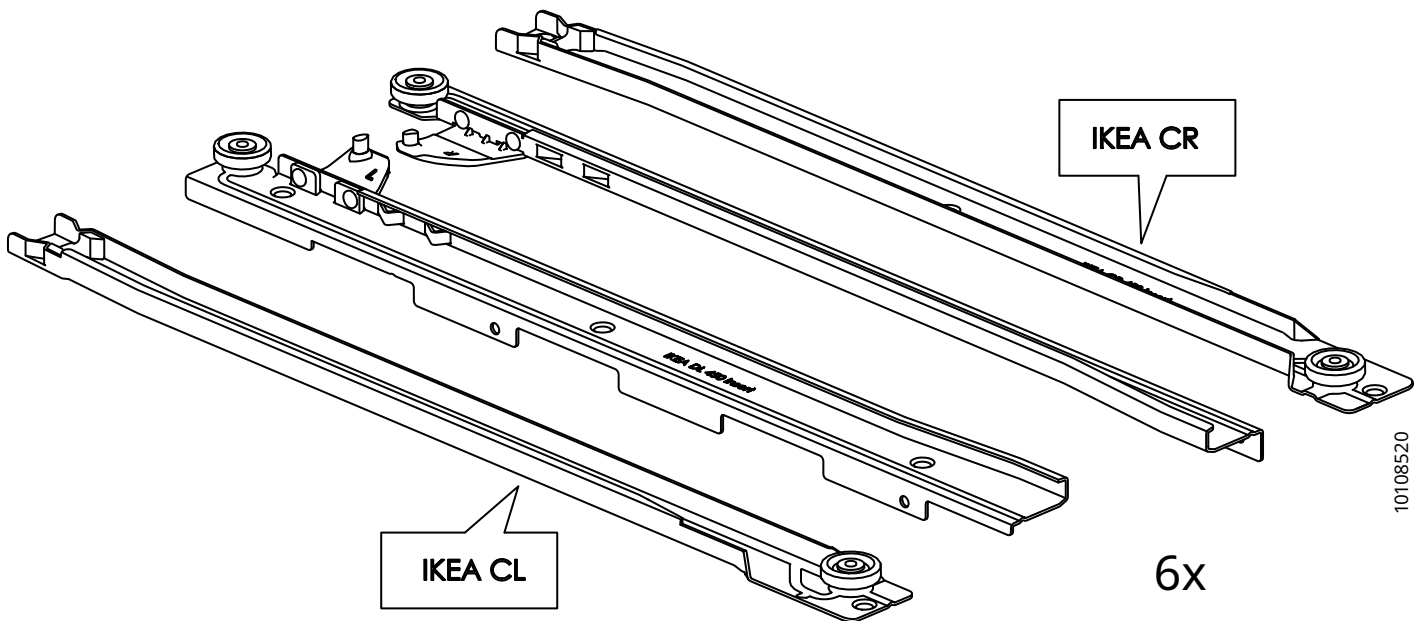 


10108520

 
2




18x

 


18x

 


10x

 

18x

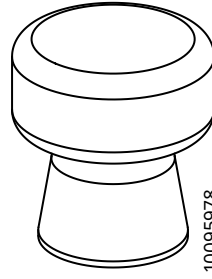 


10x

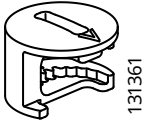 


36x



 36x


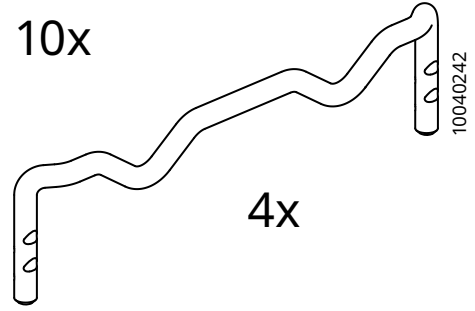


4x

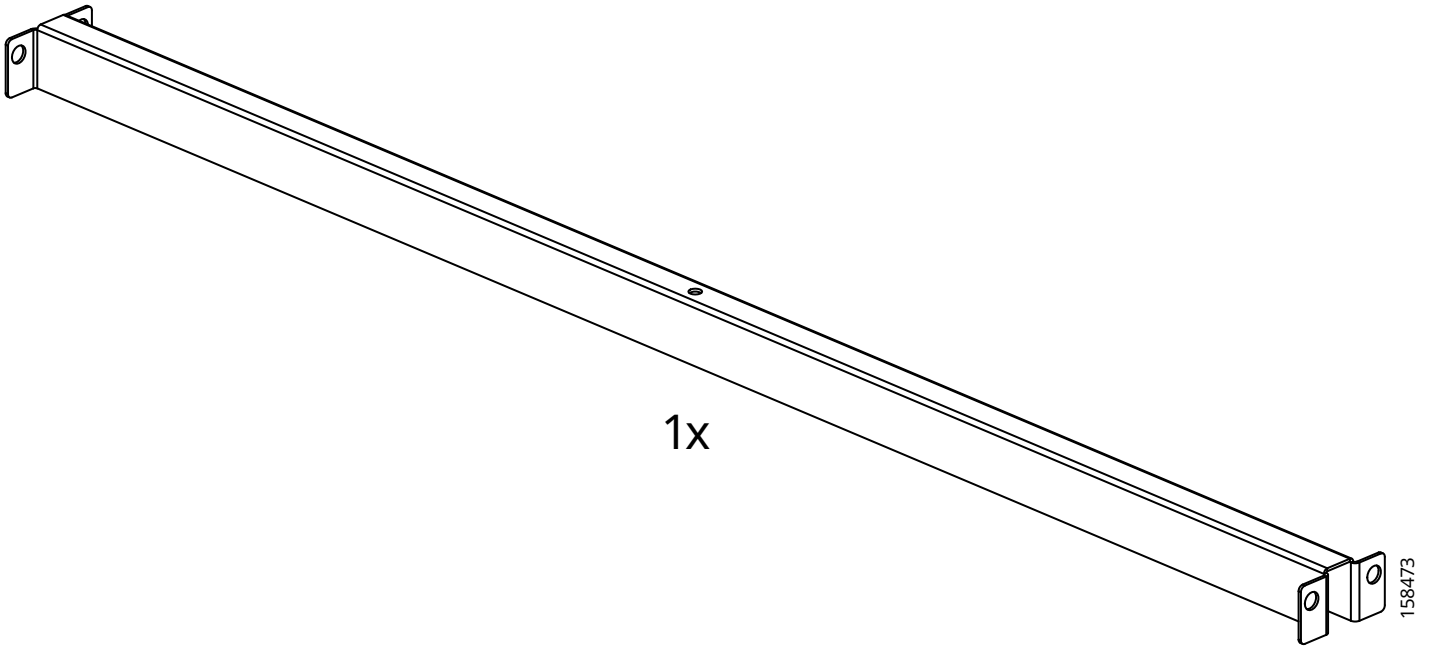 


1x

  
1

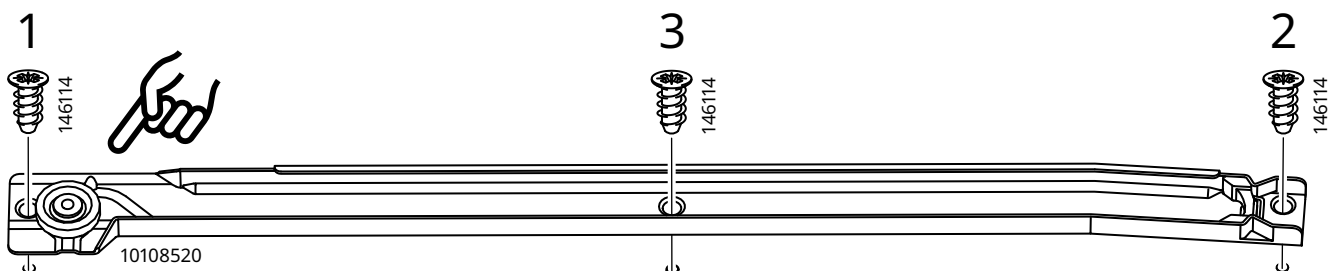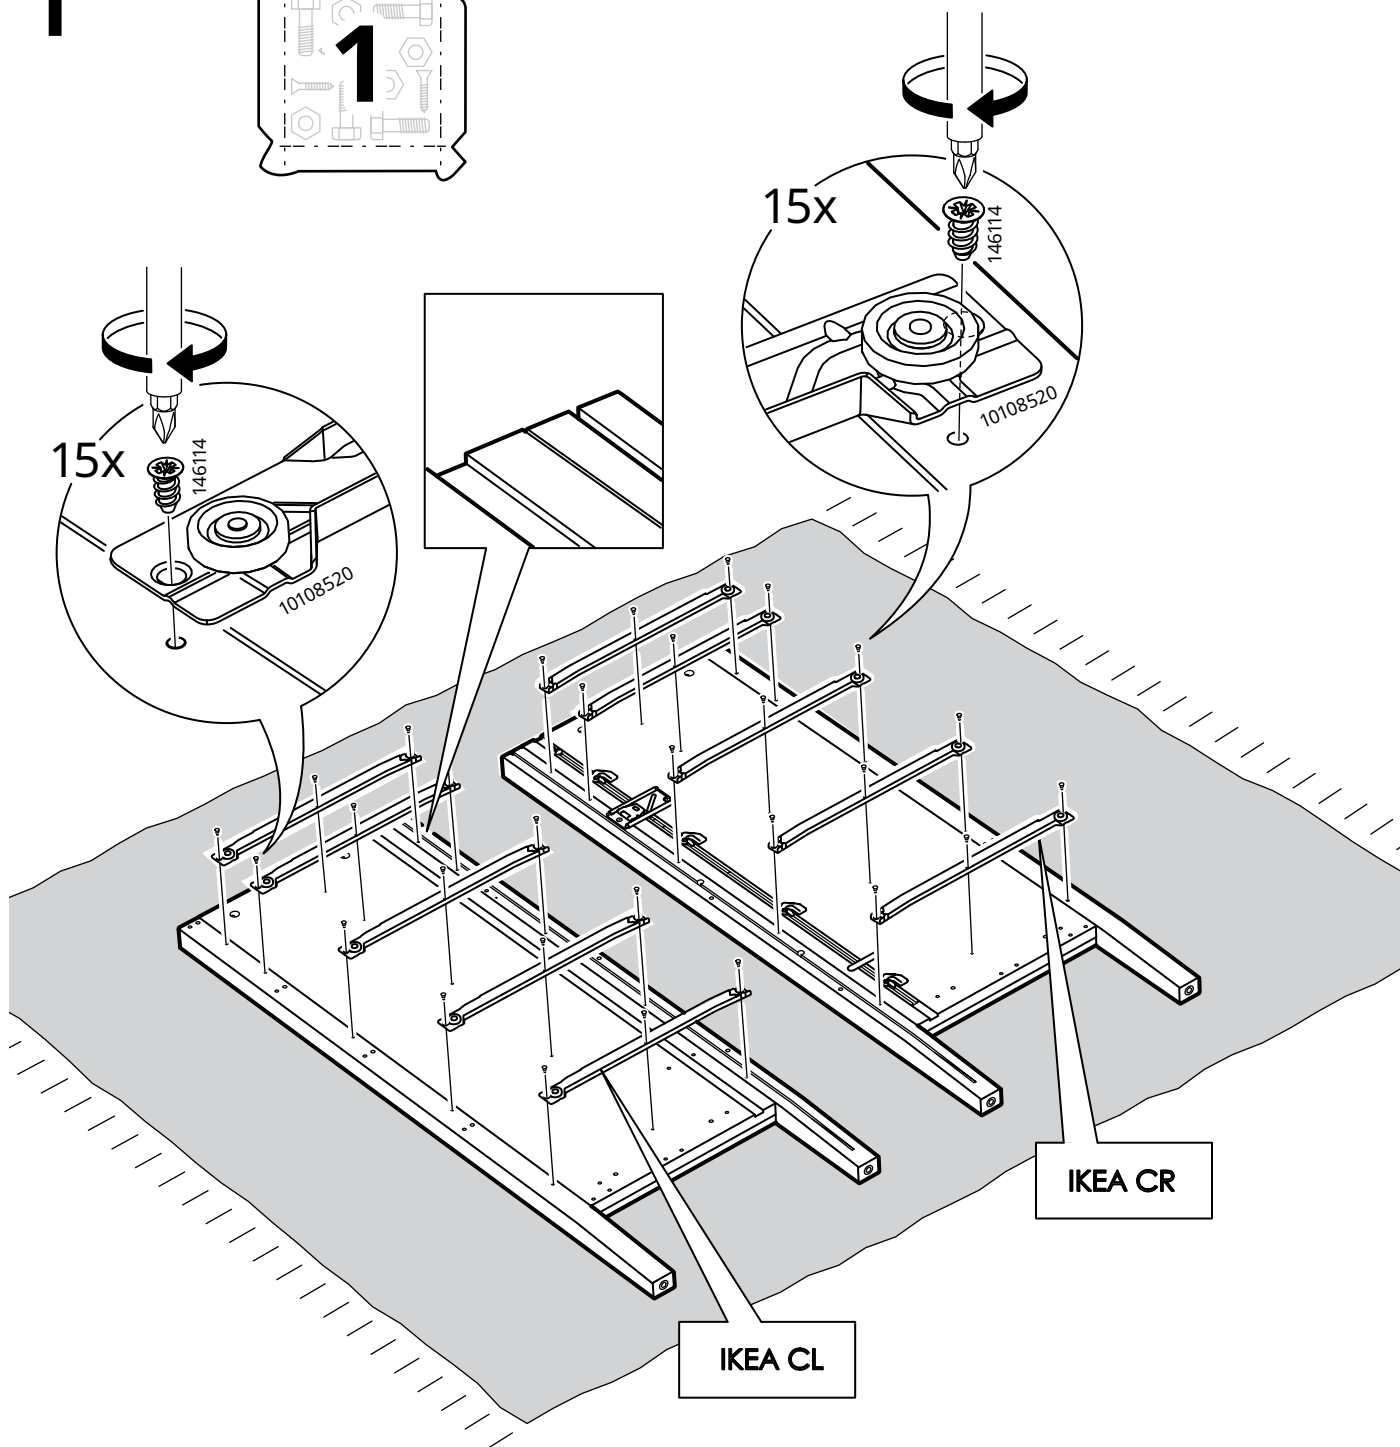


2

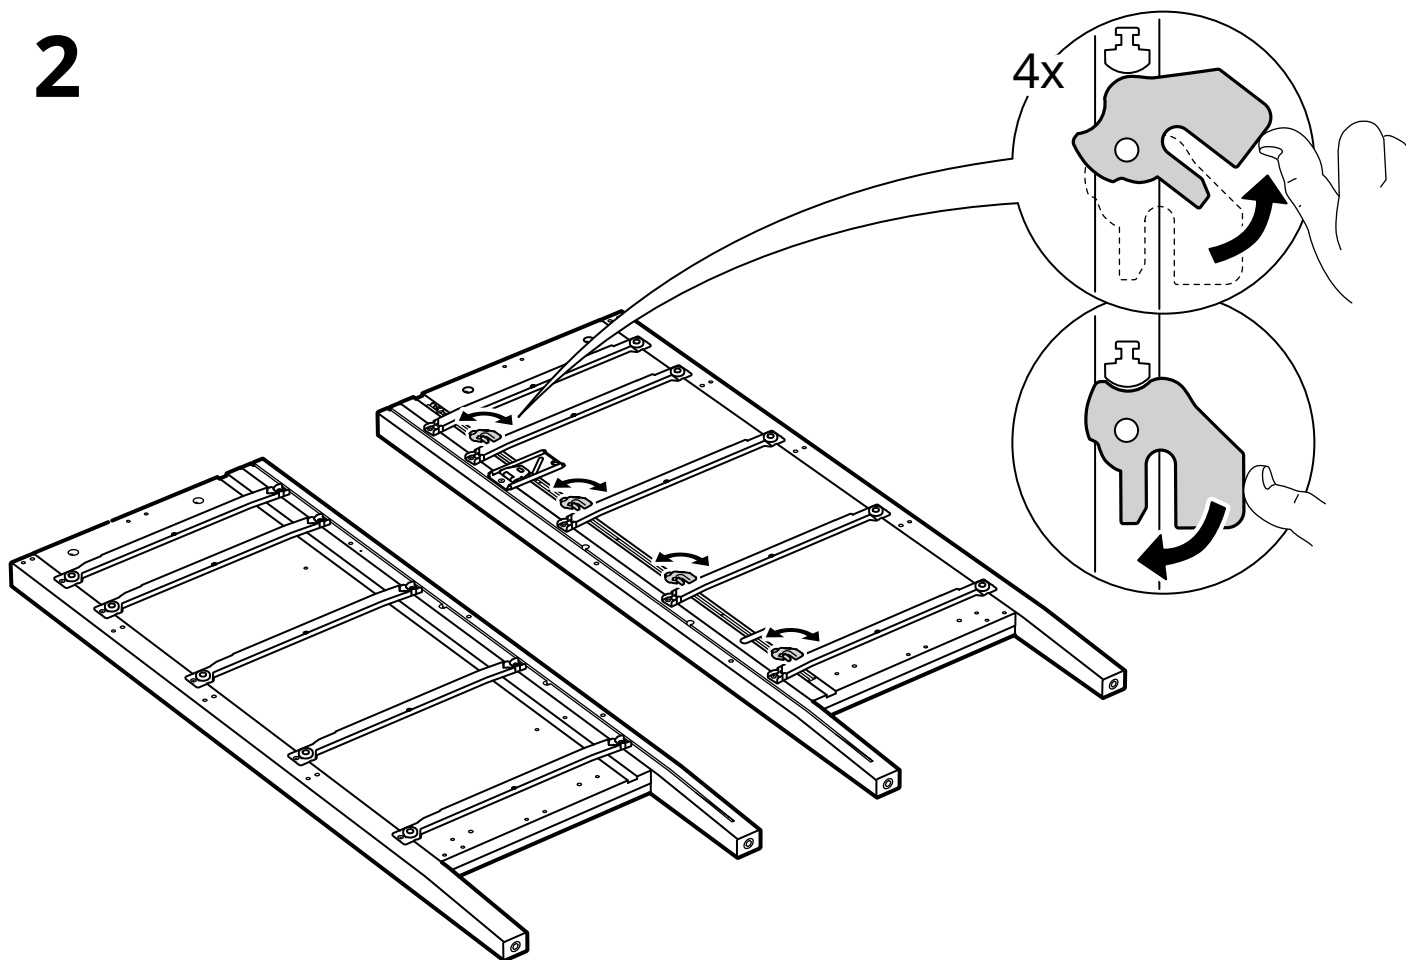 


3

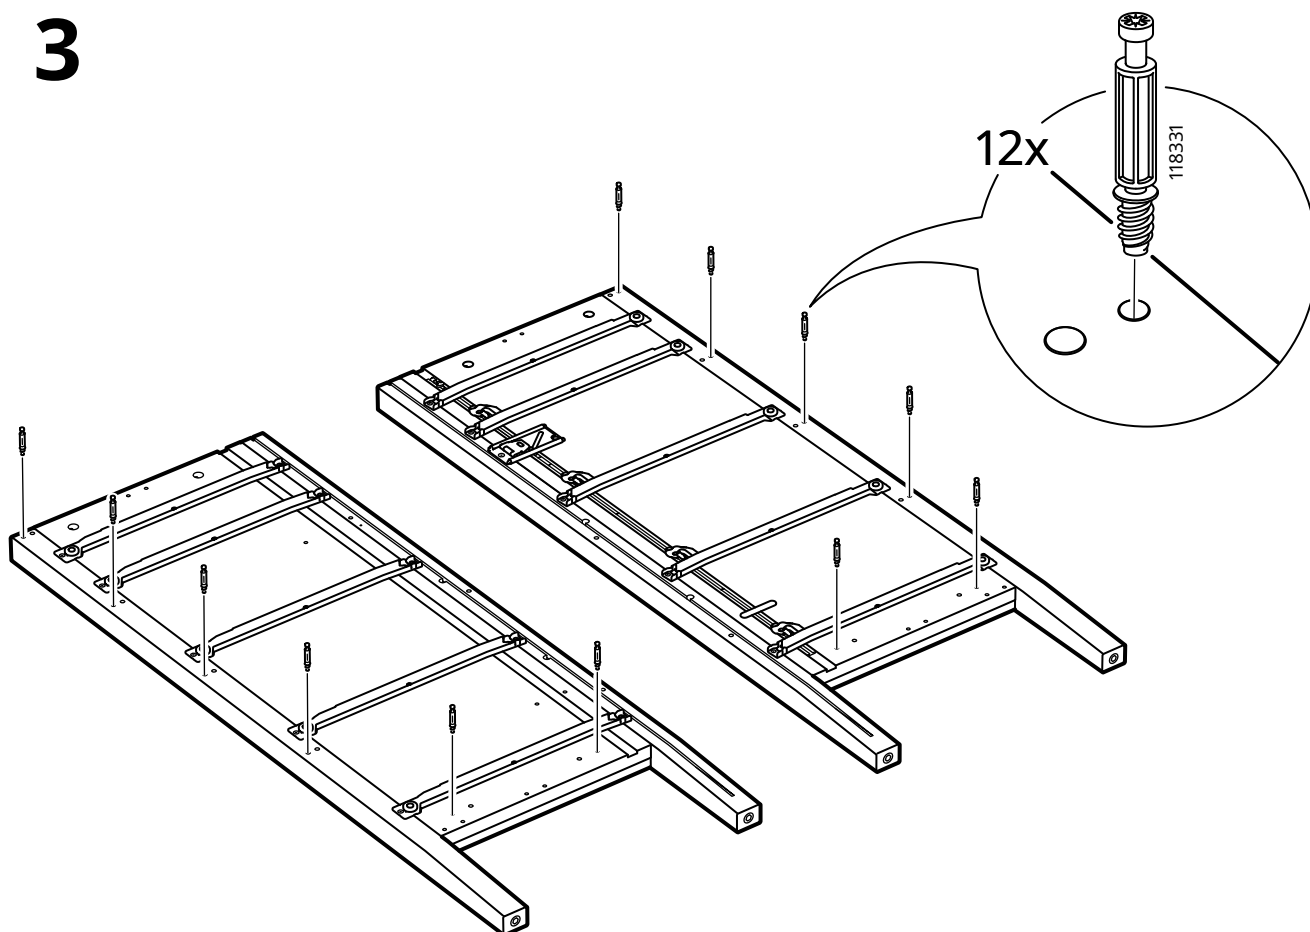 


4

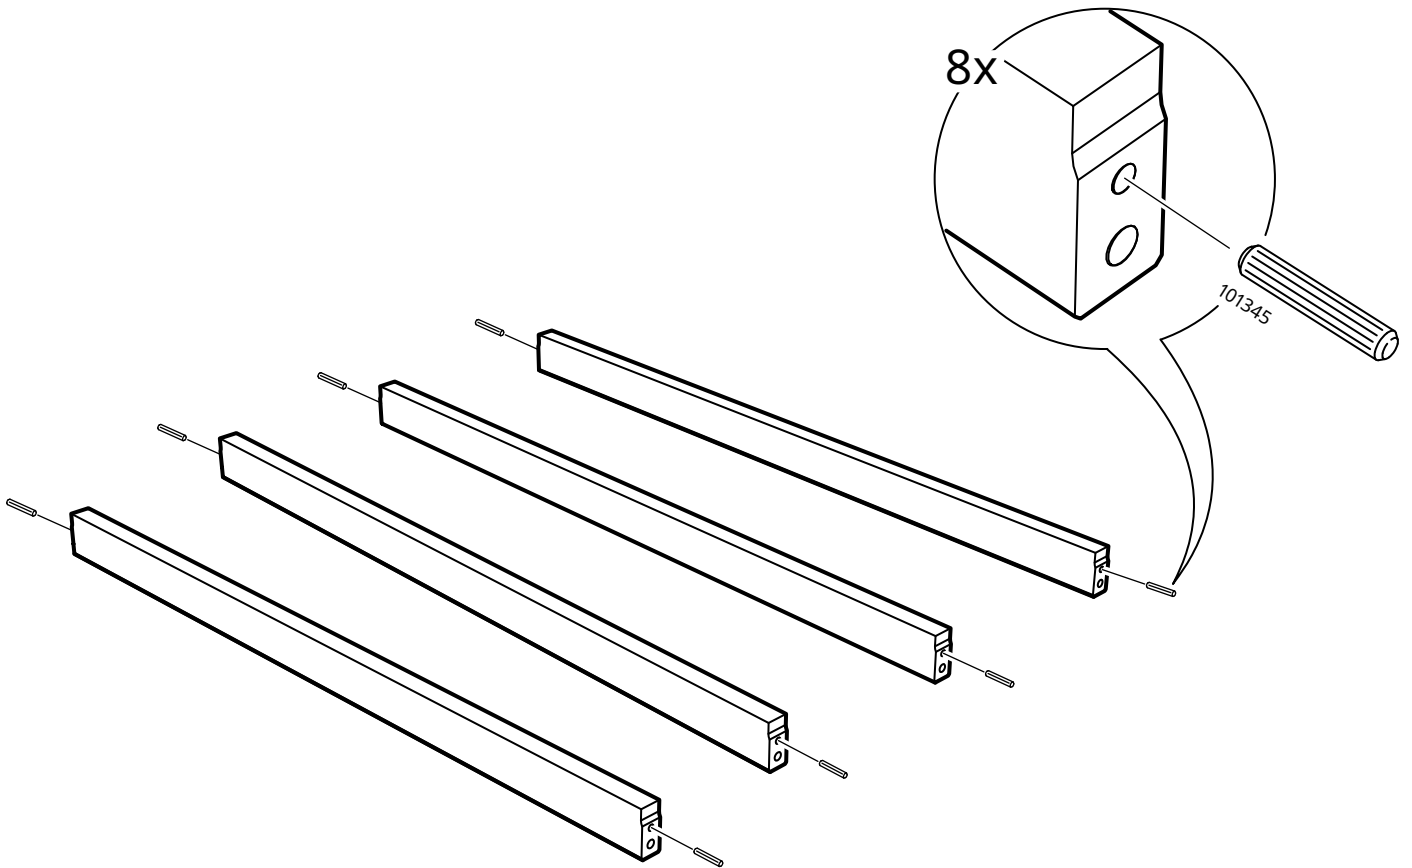 


5

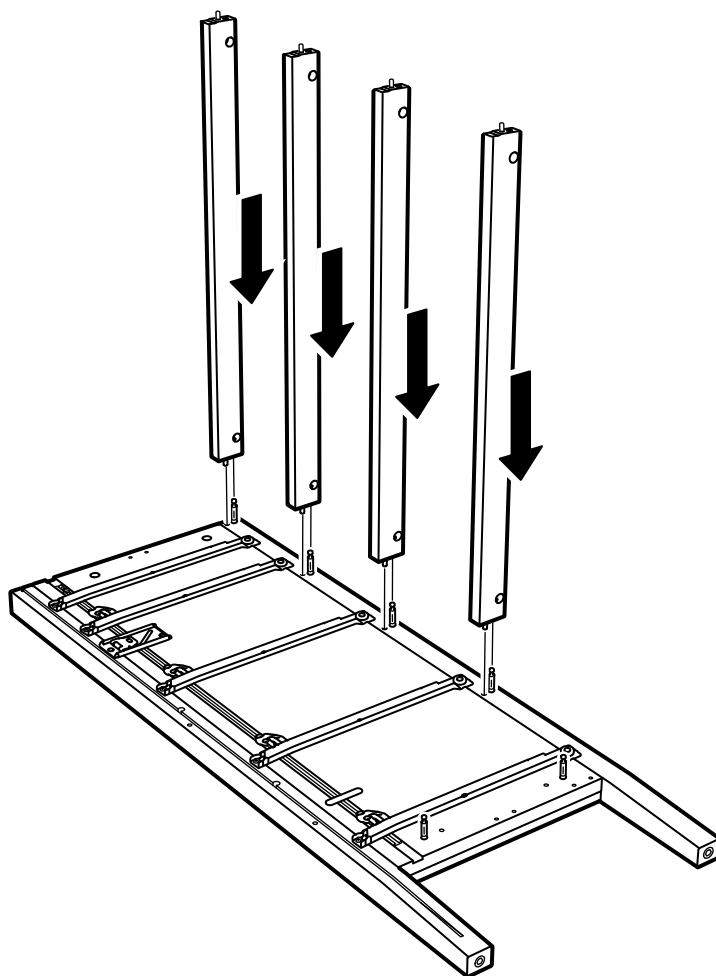 


6

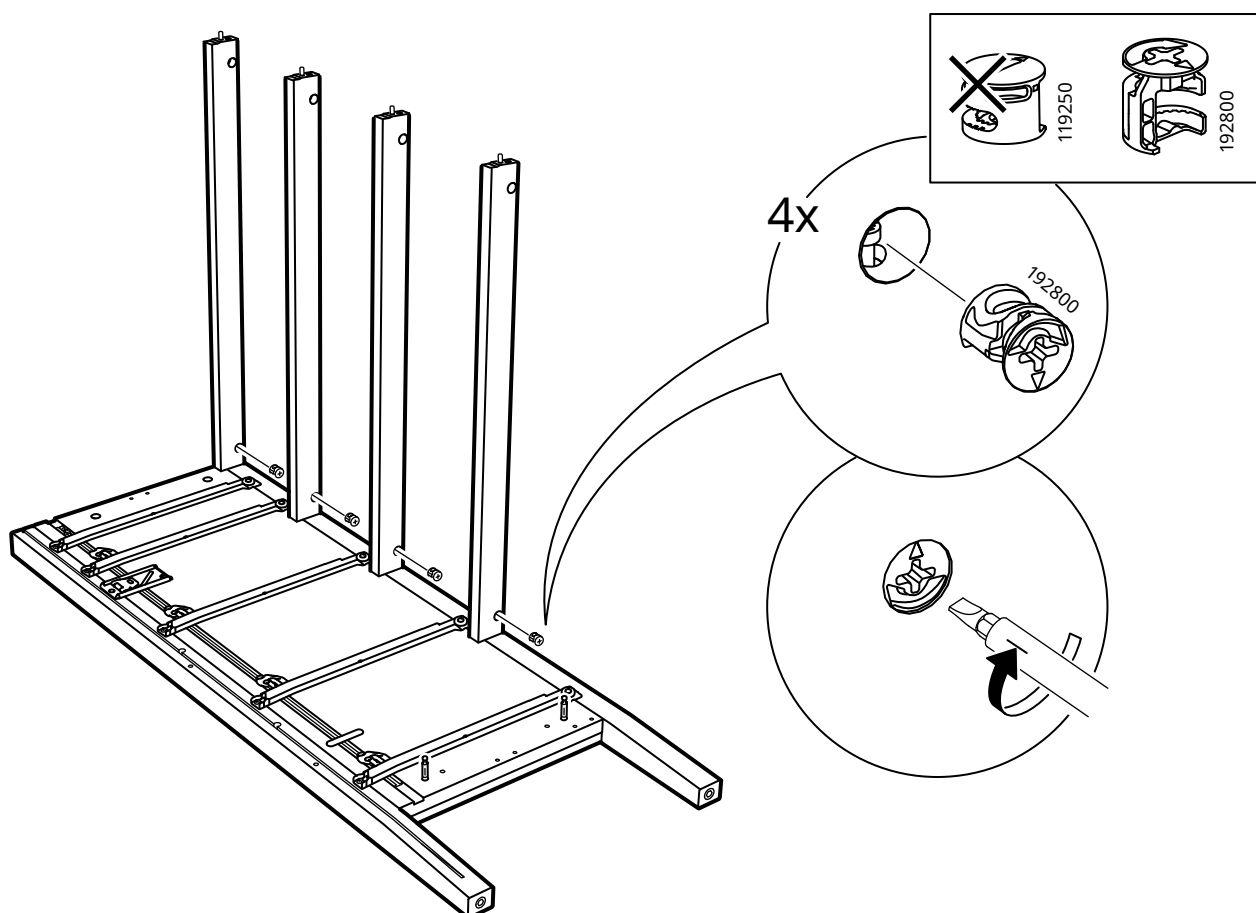 


7

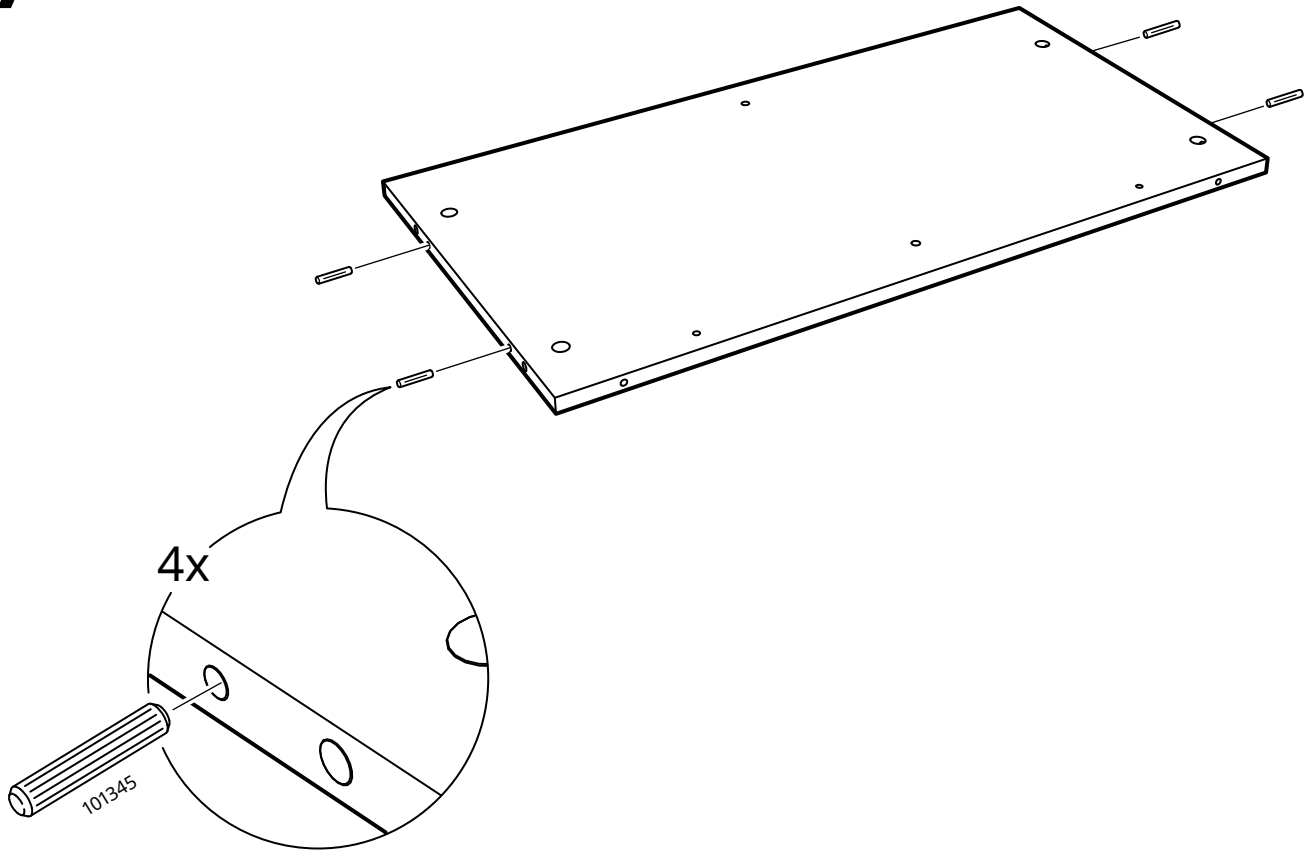 


8

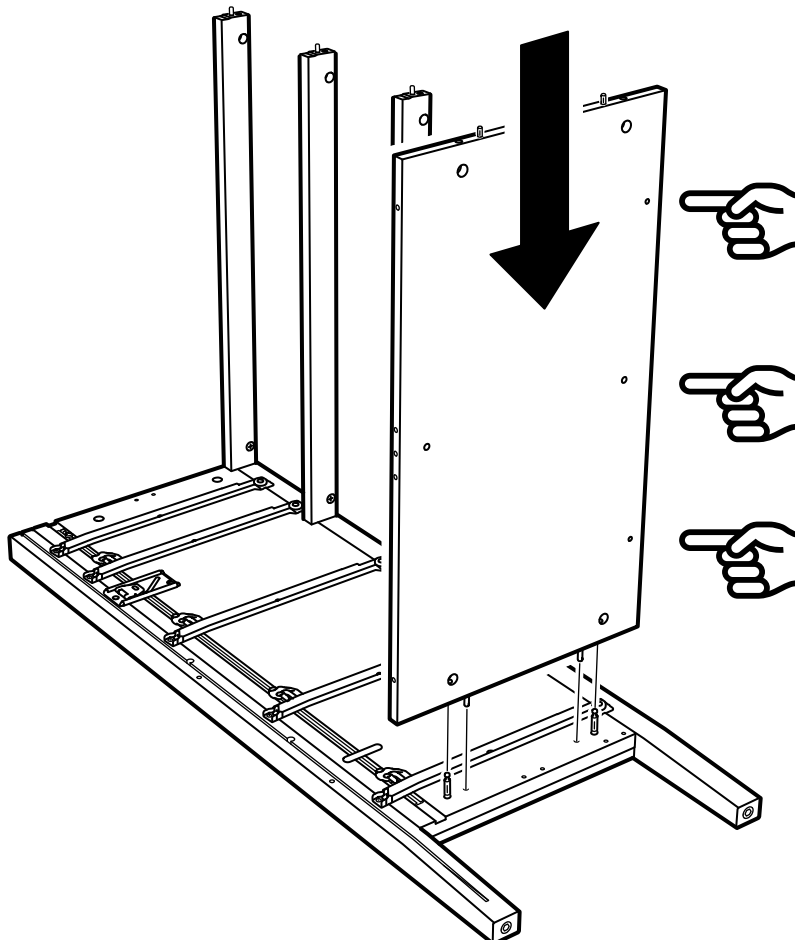 


9

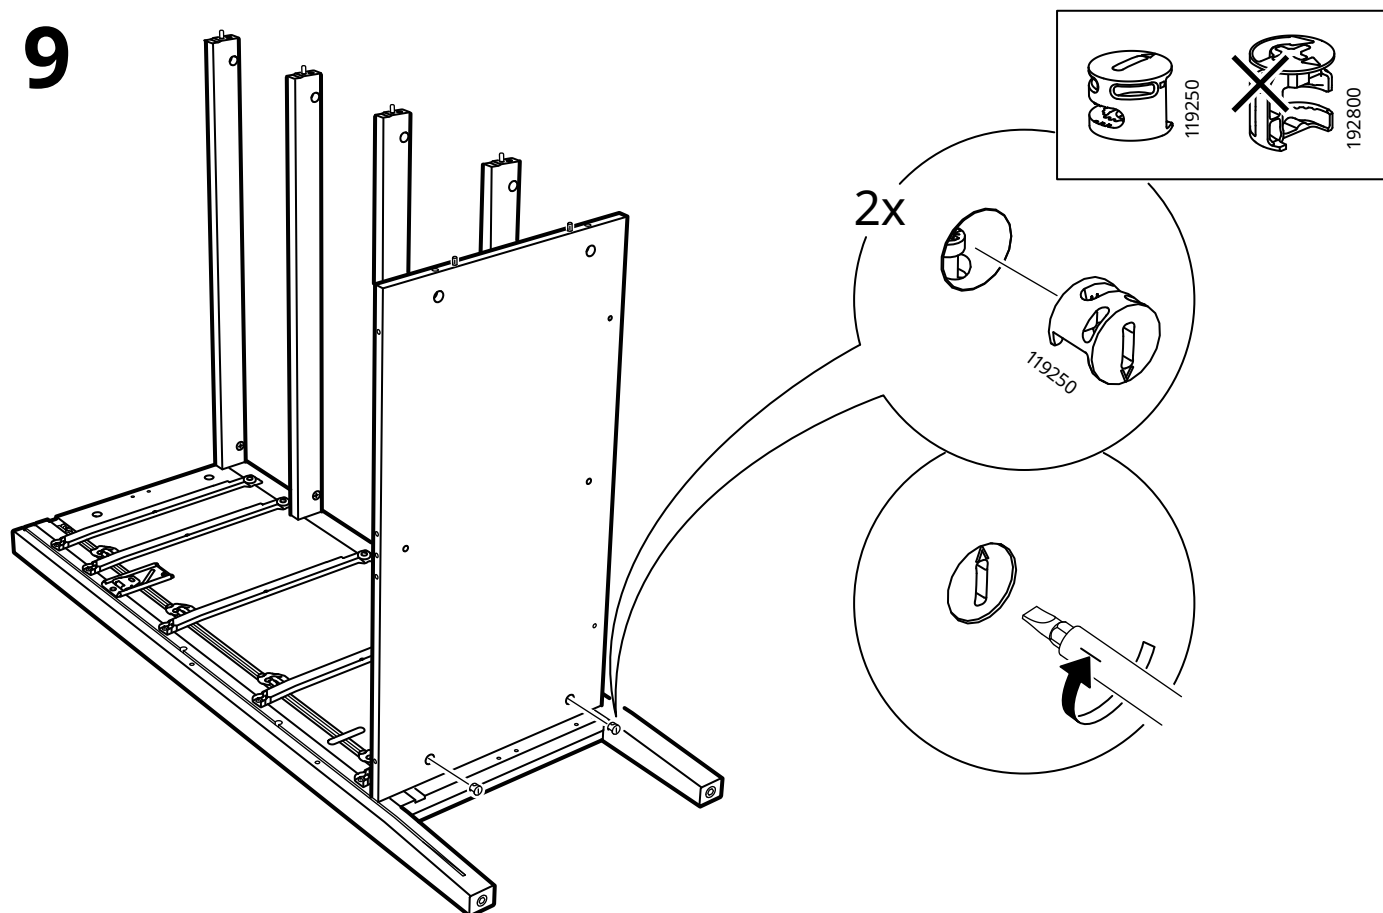 


10

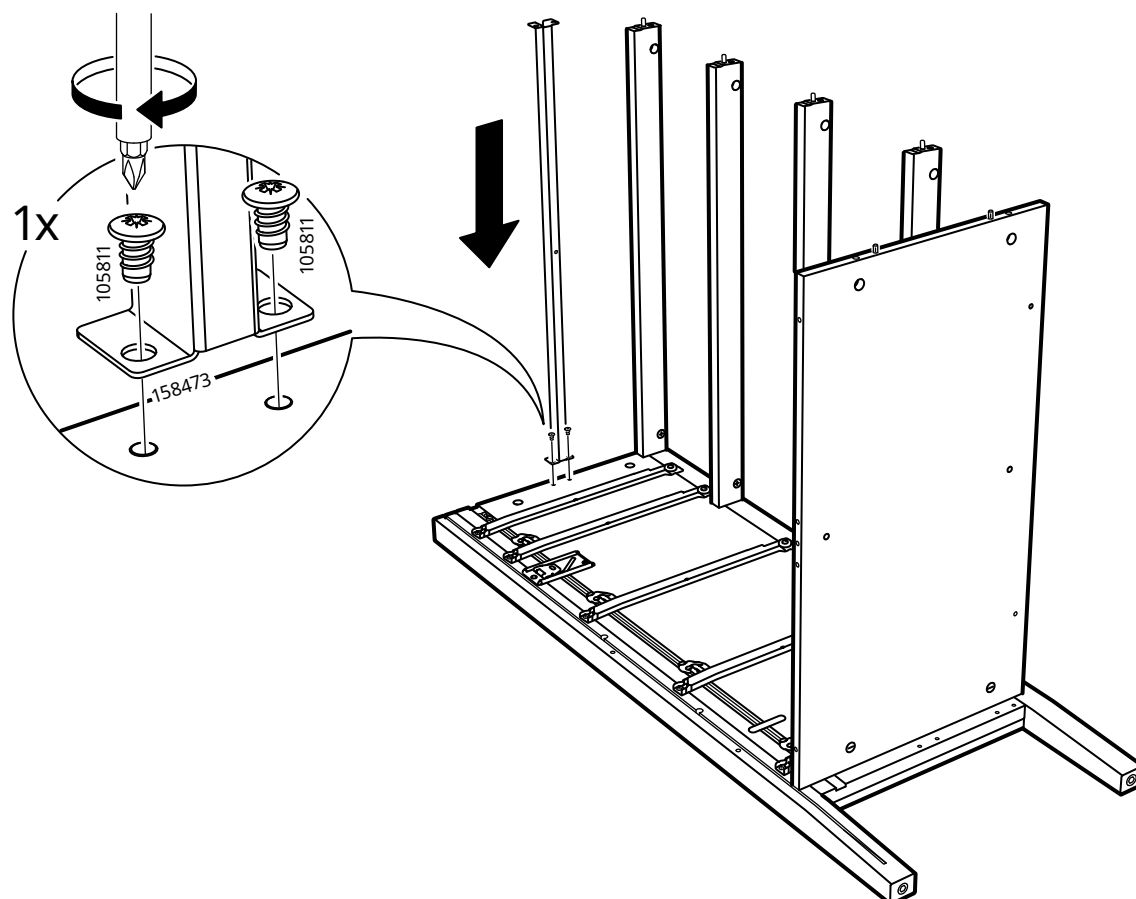 


11

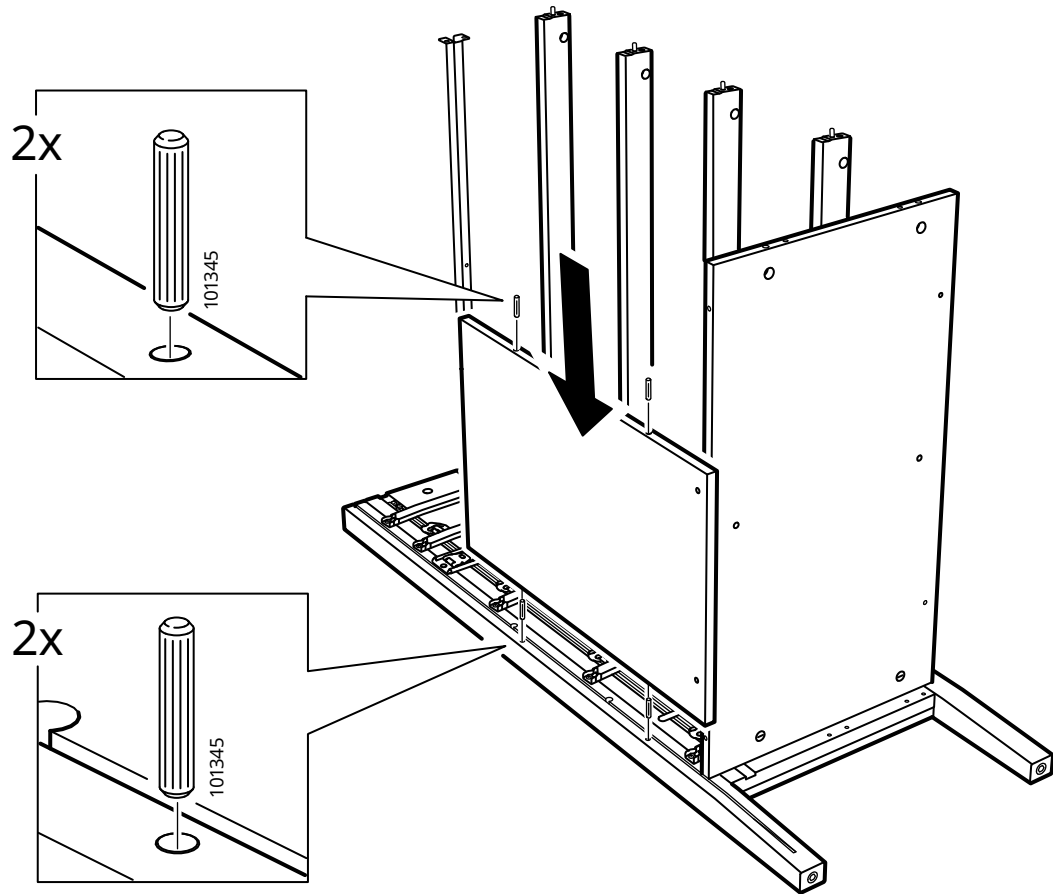 


12

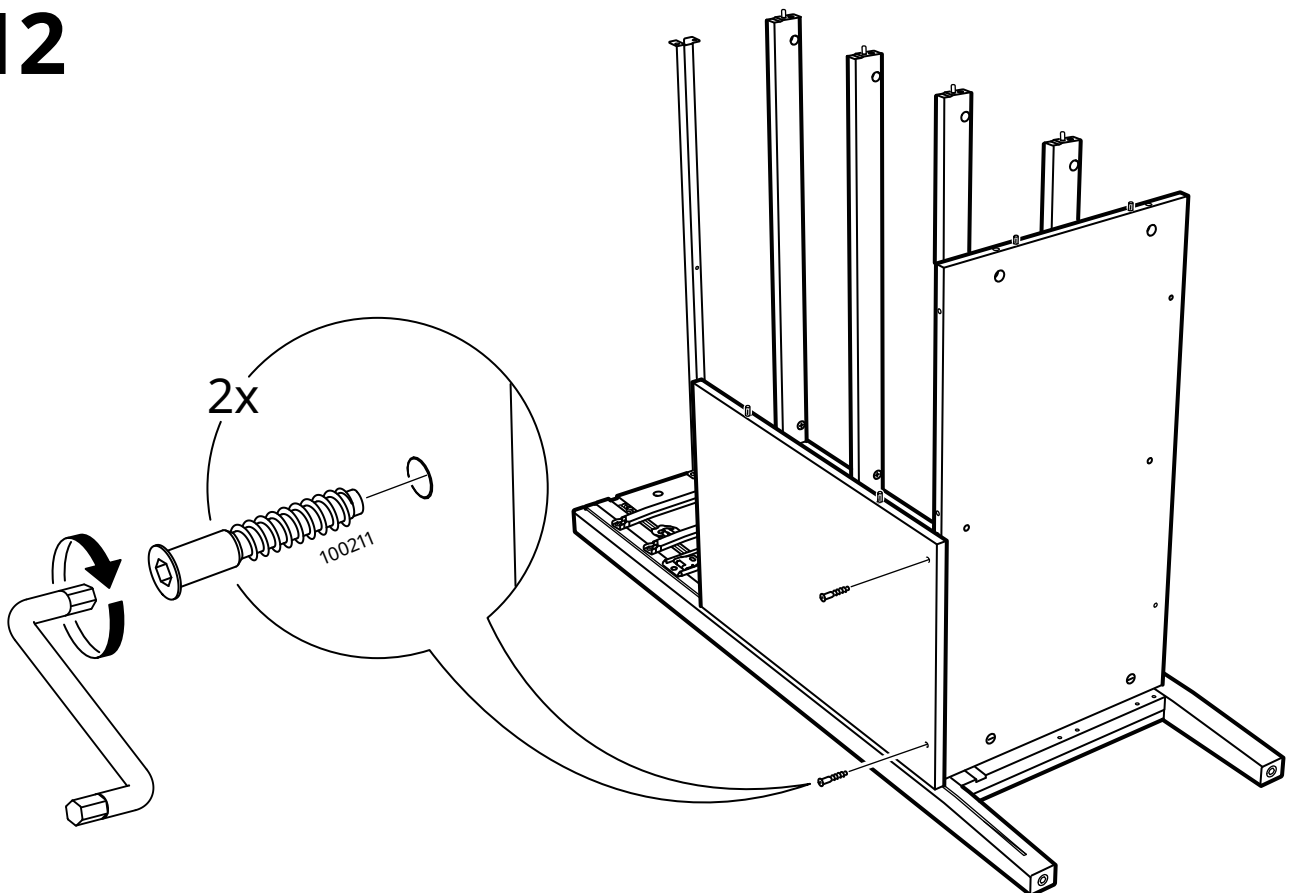 


13

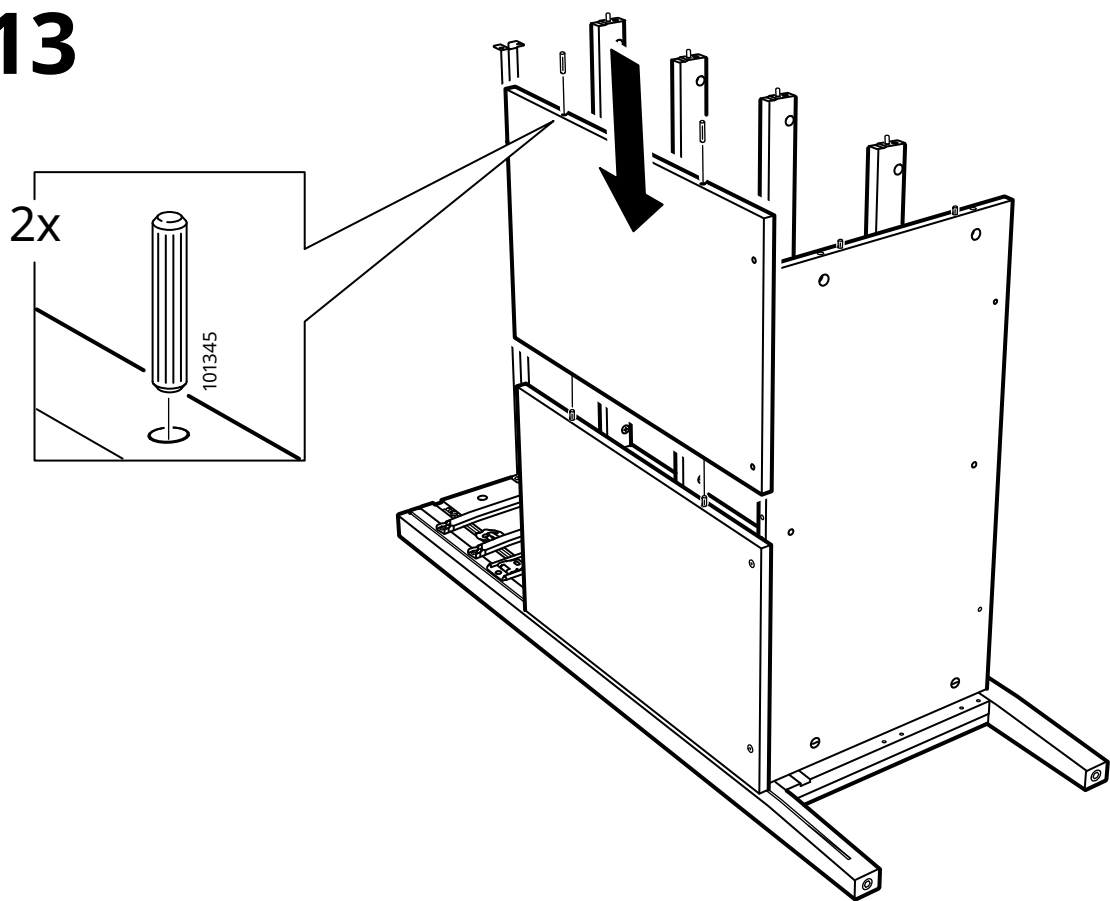 


14


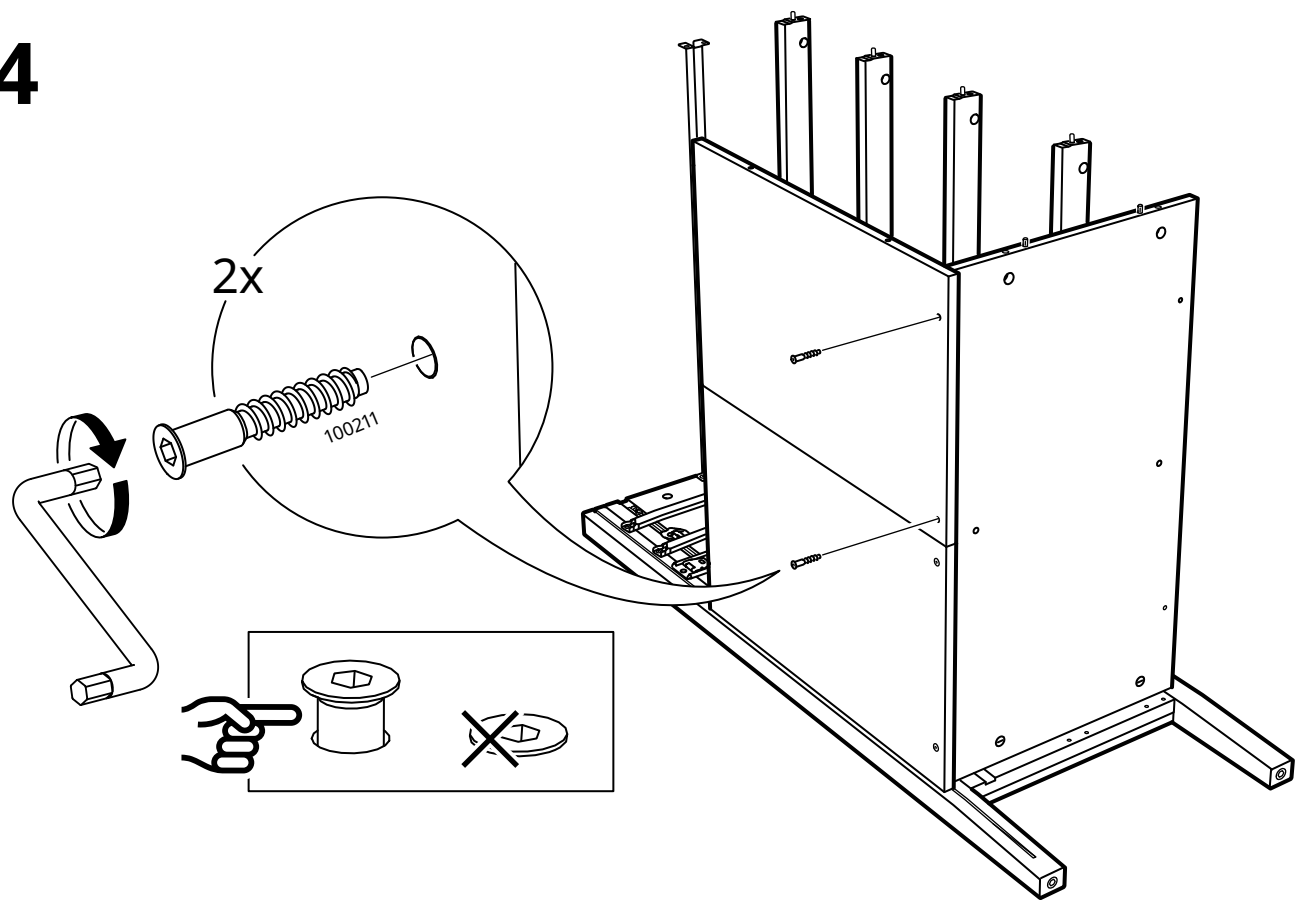 


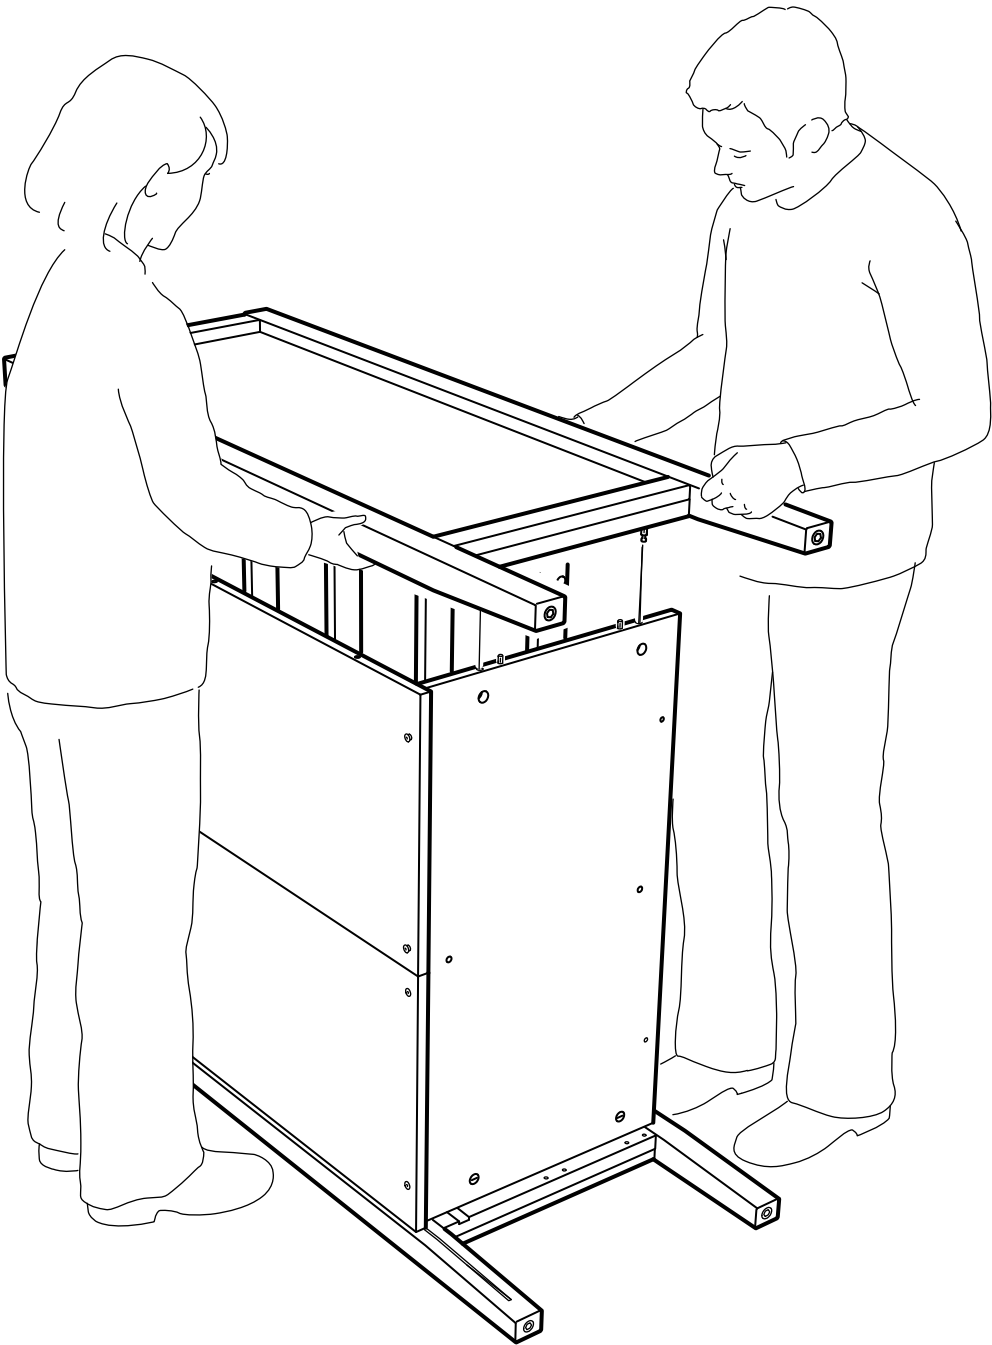 


16

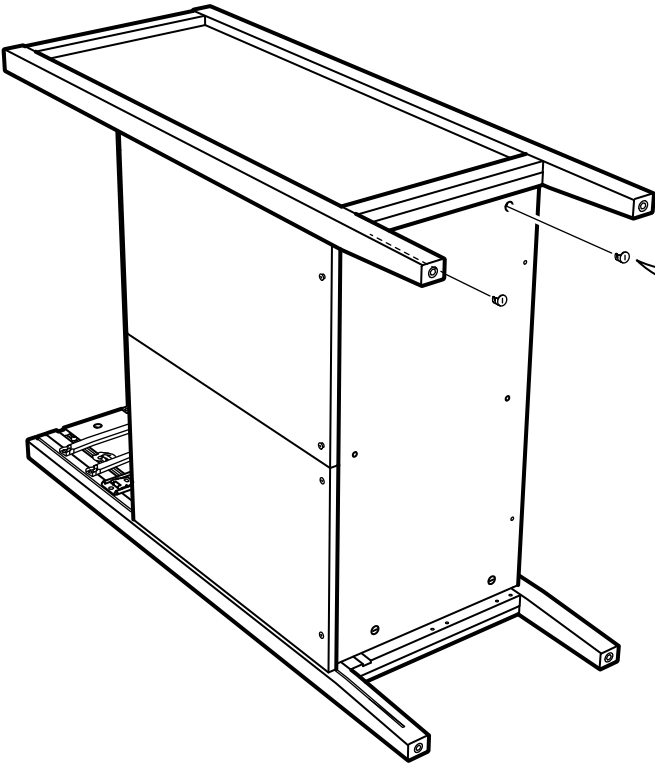 


2x

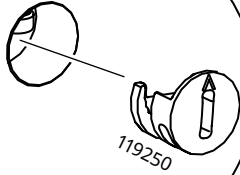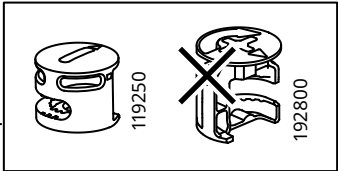  



119250

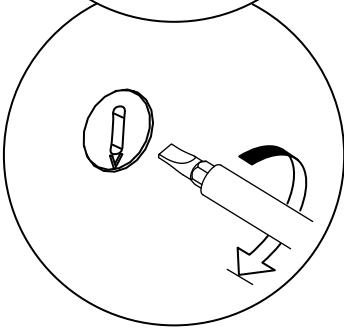 


17

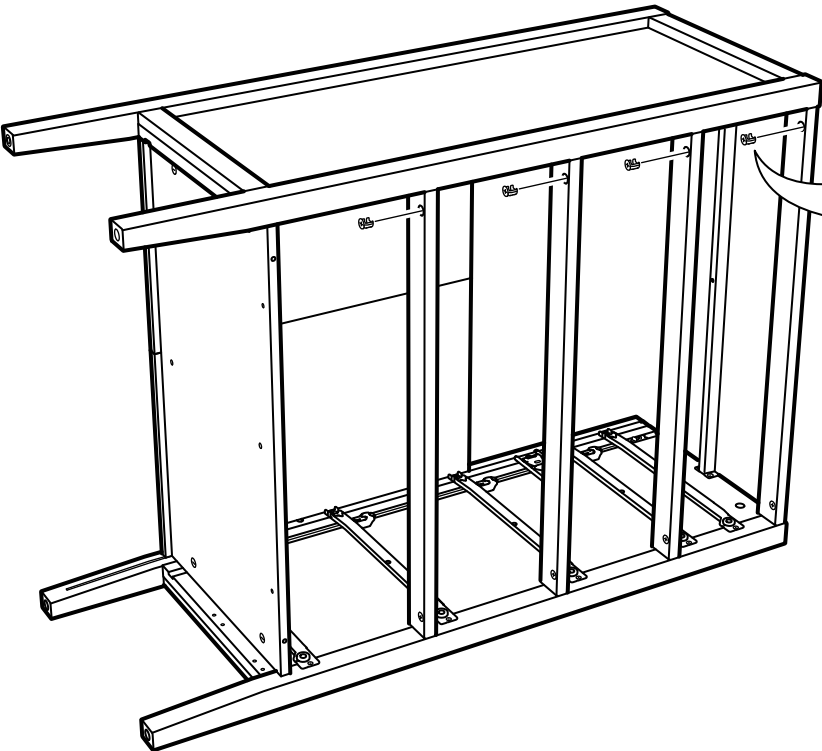 


4x

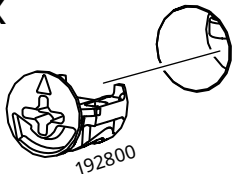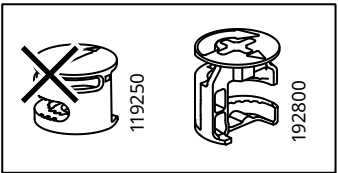  


192800

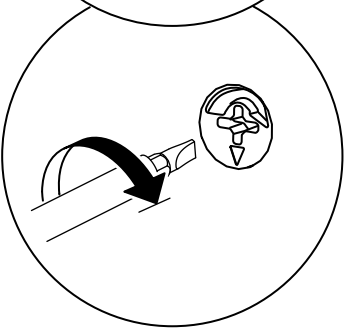 


18

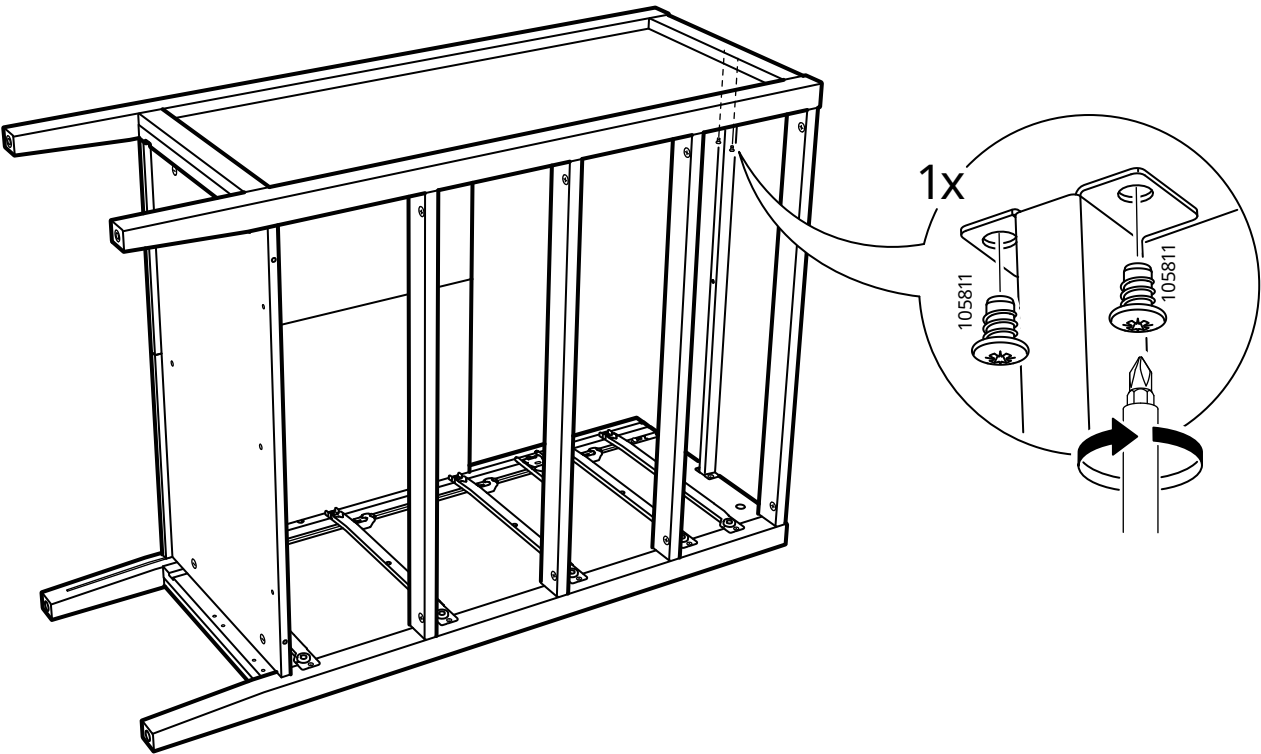 


19

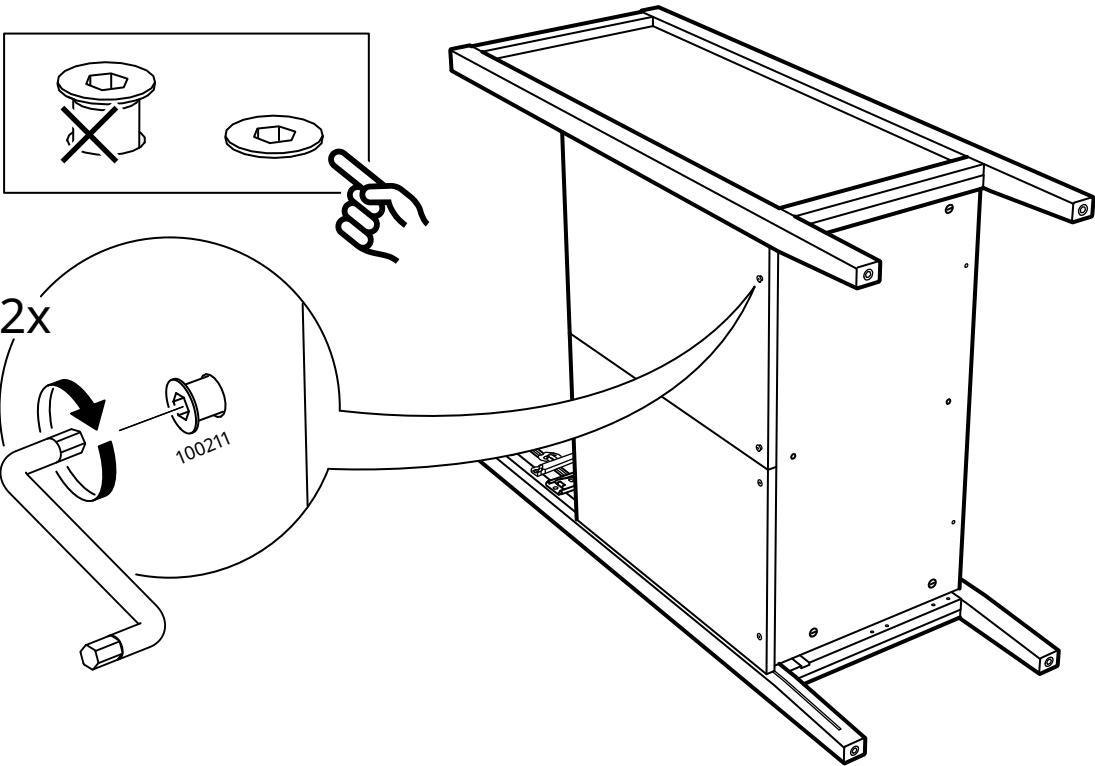 


20

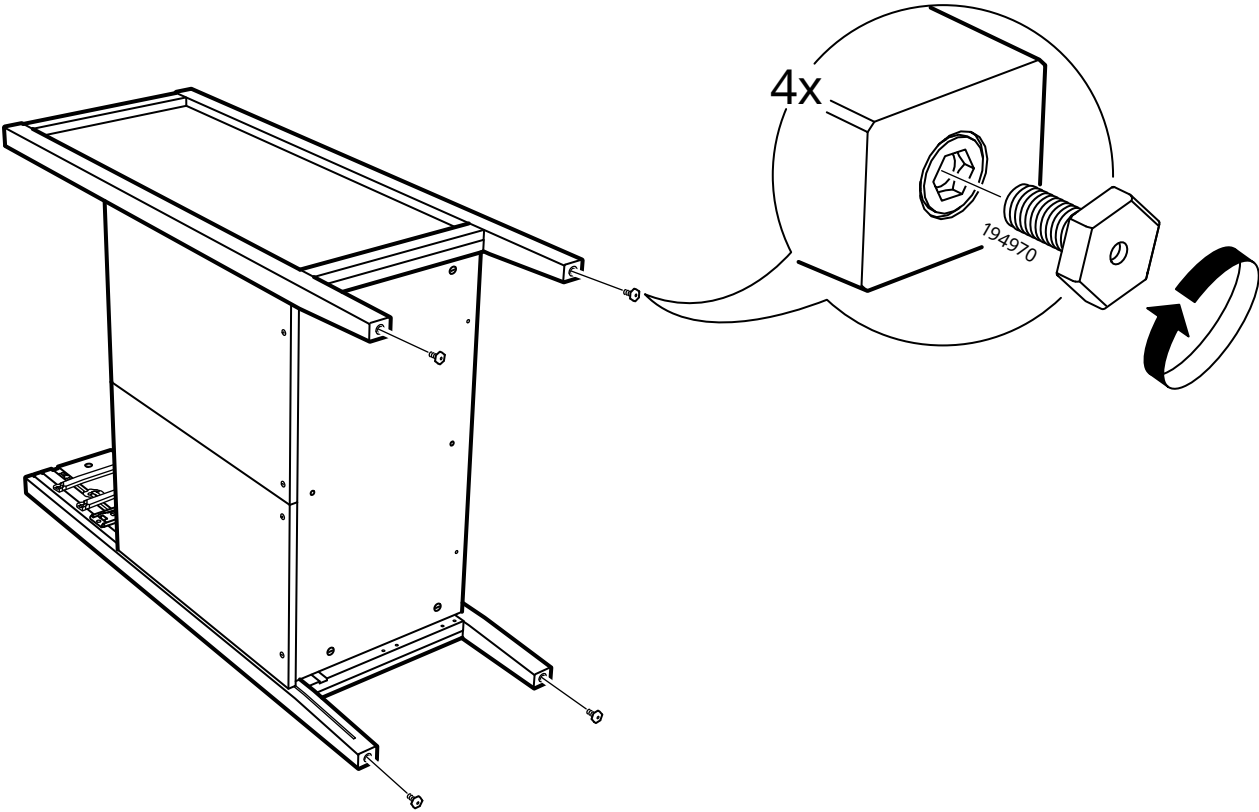 


21

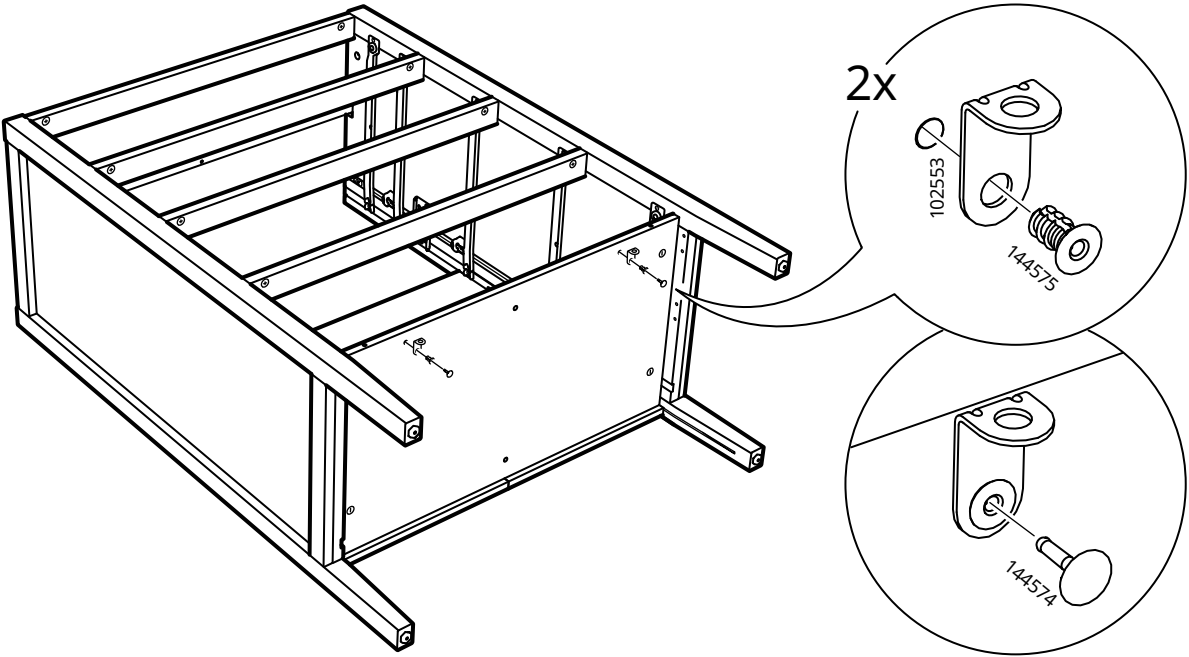 


22

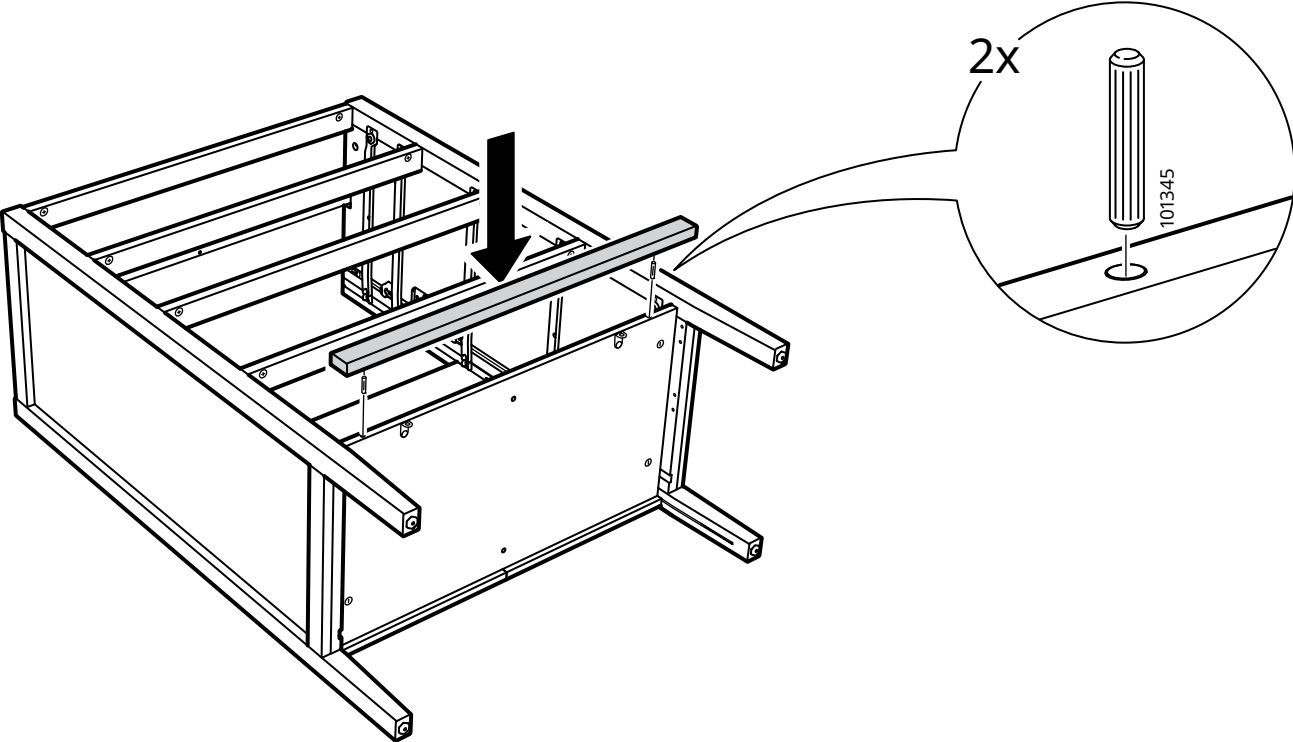 


23

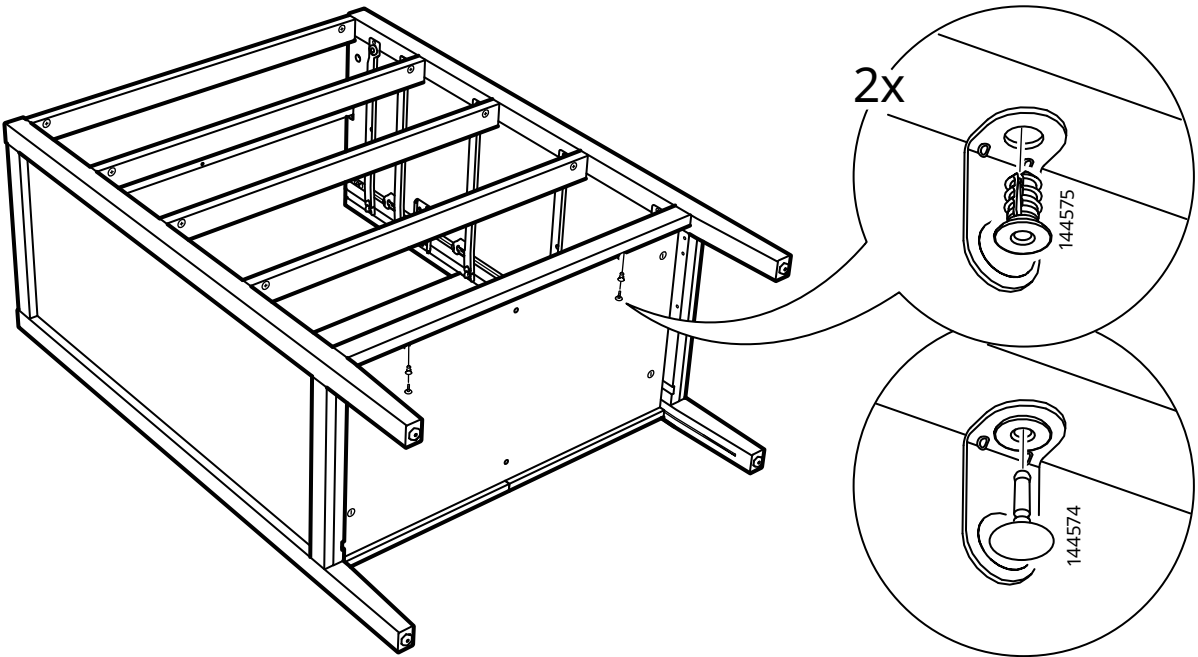 


24

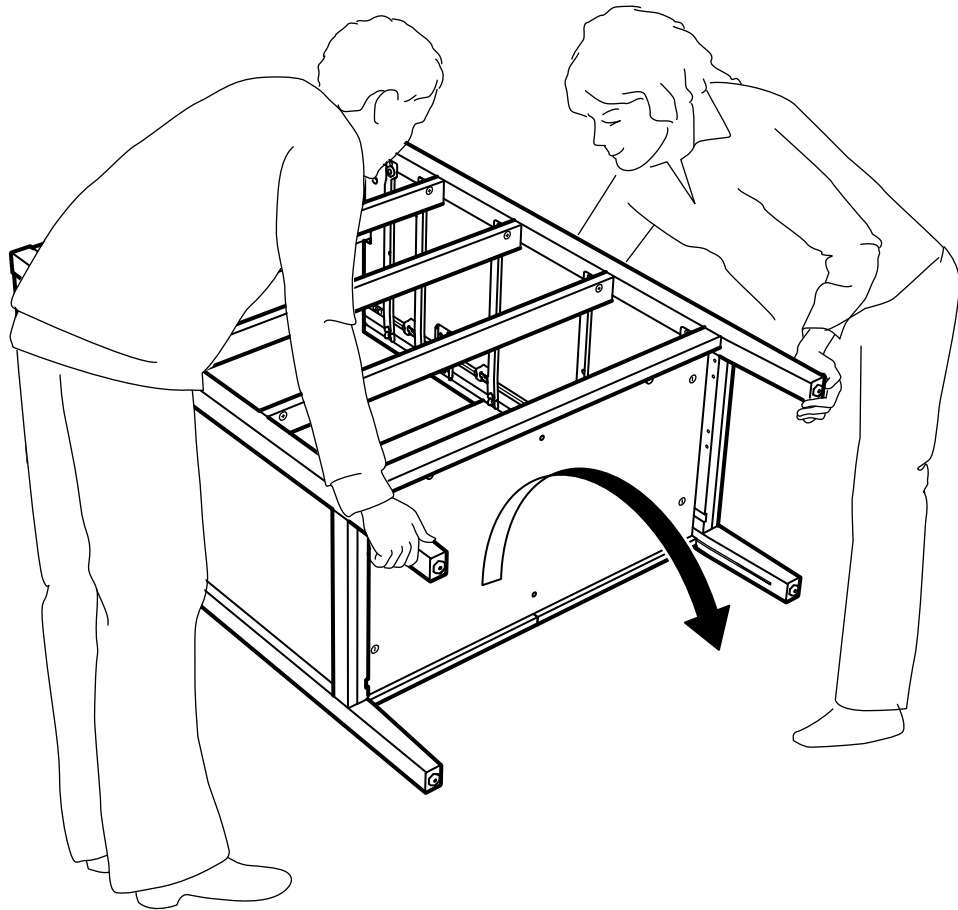 


25

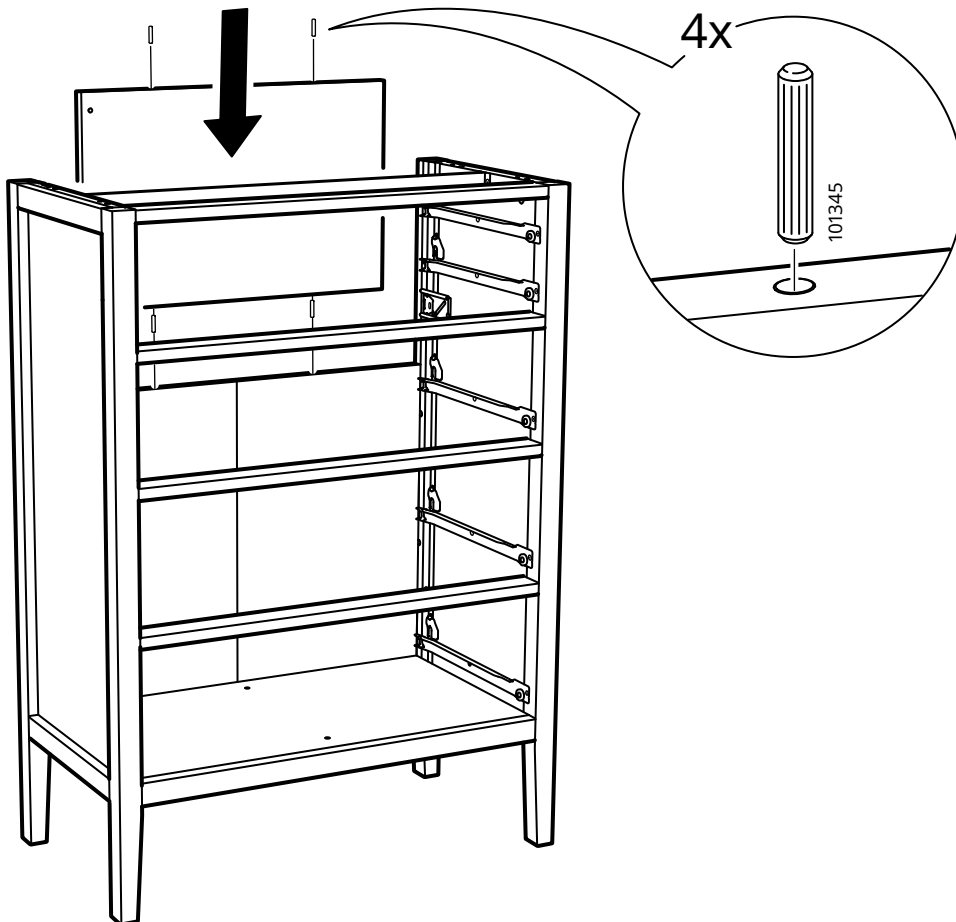 


26

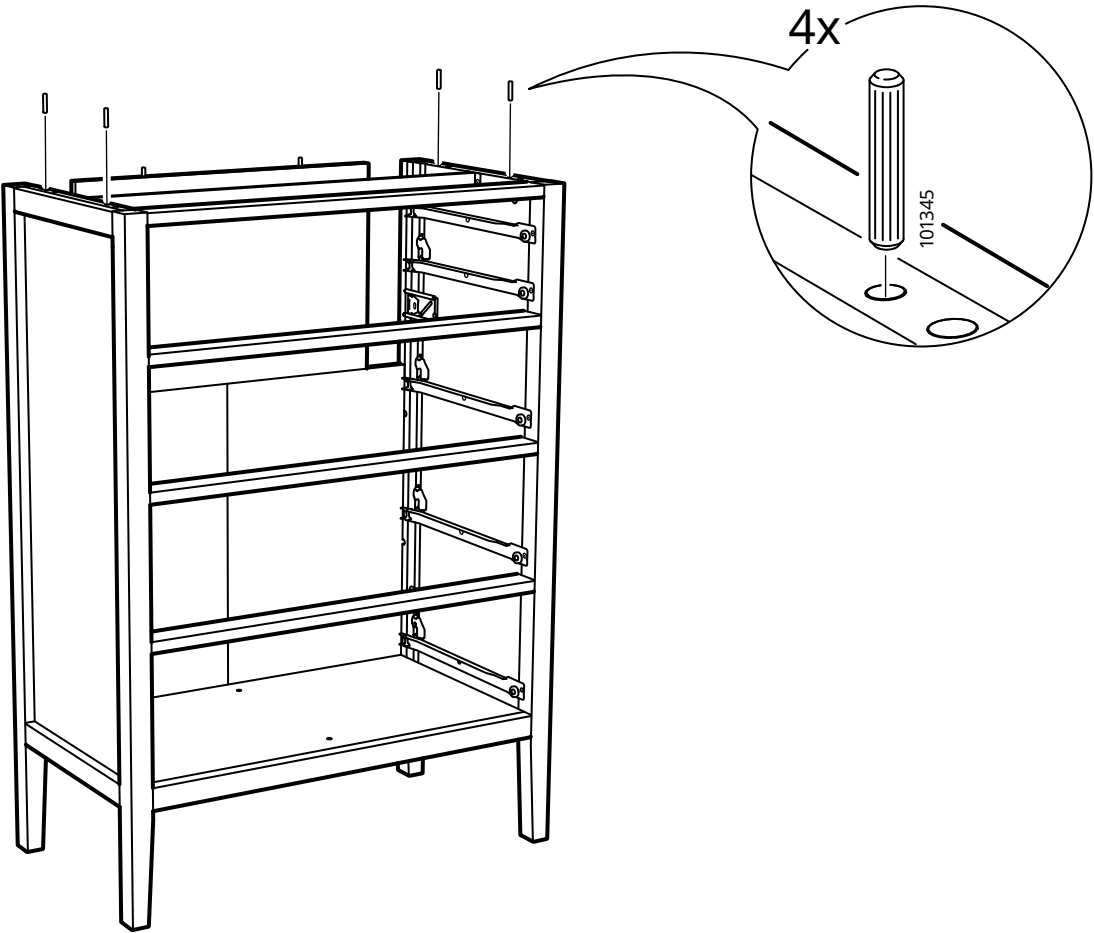 


27

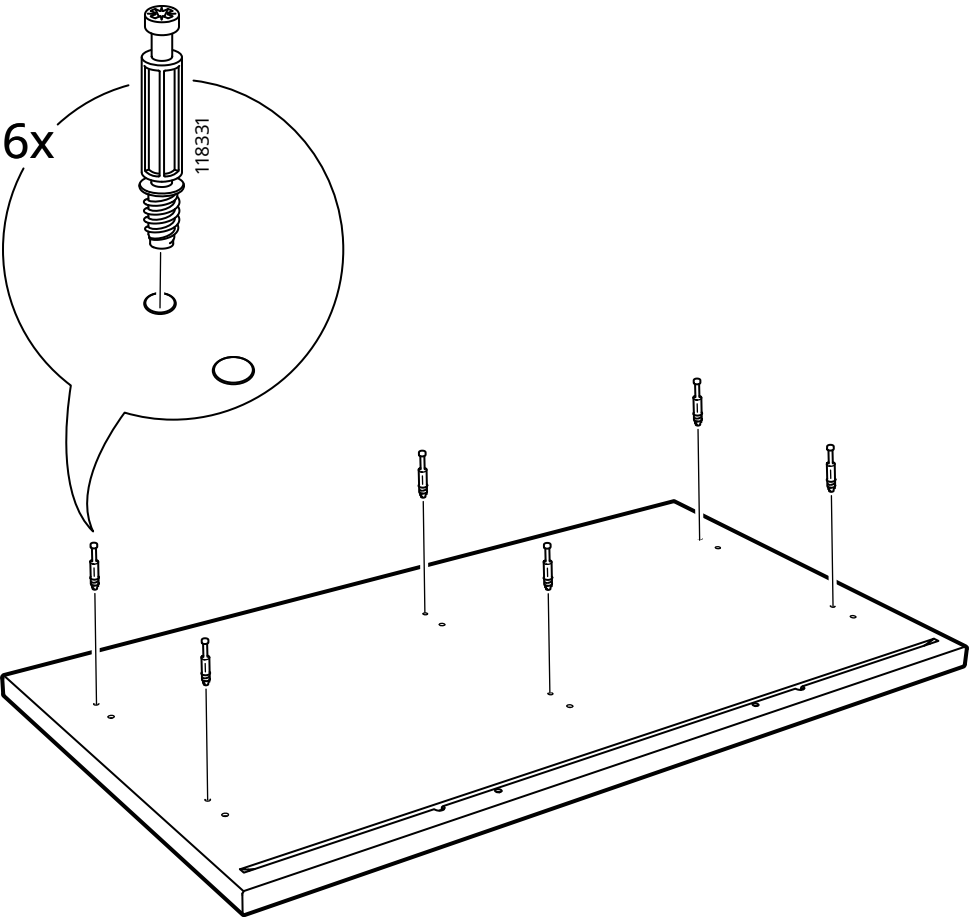 



28

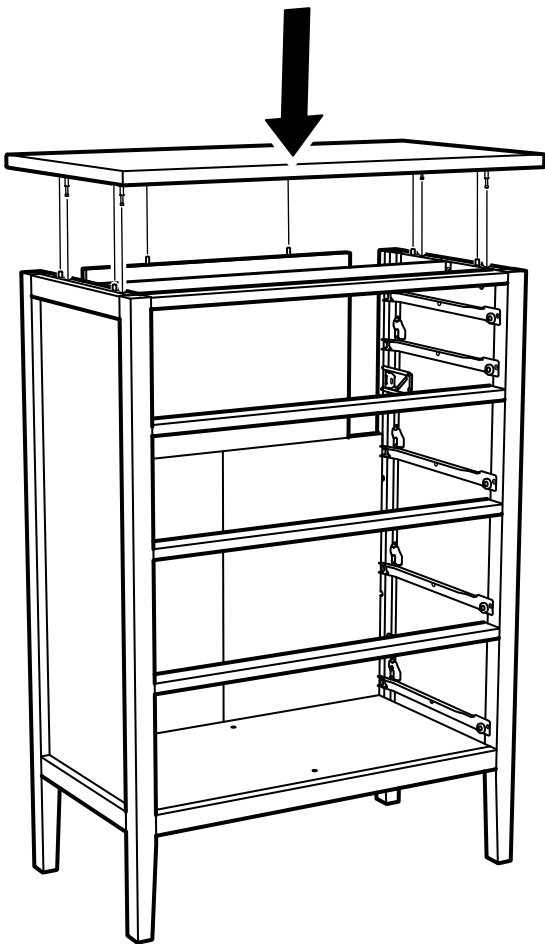 


29

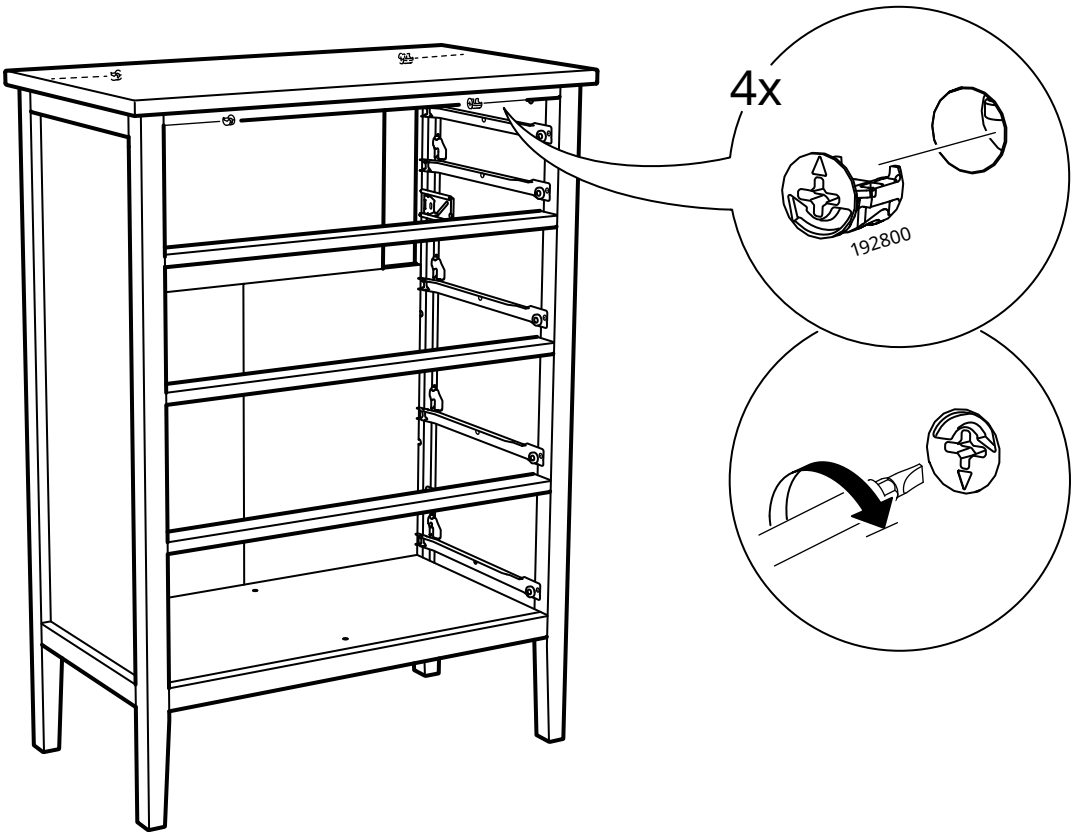 


30

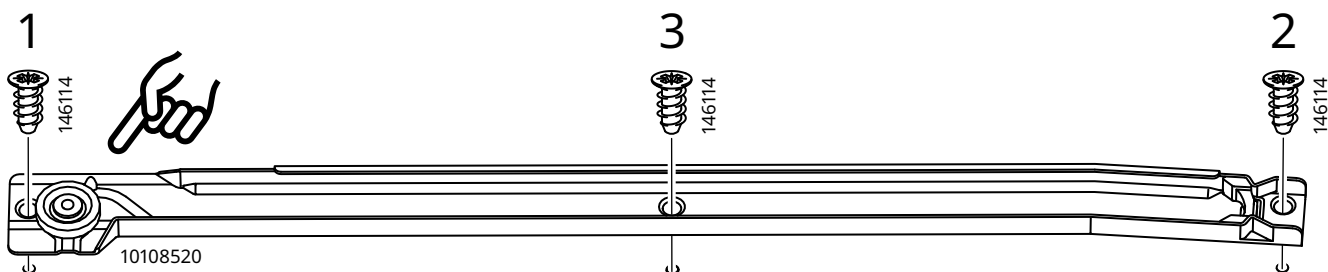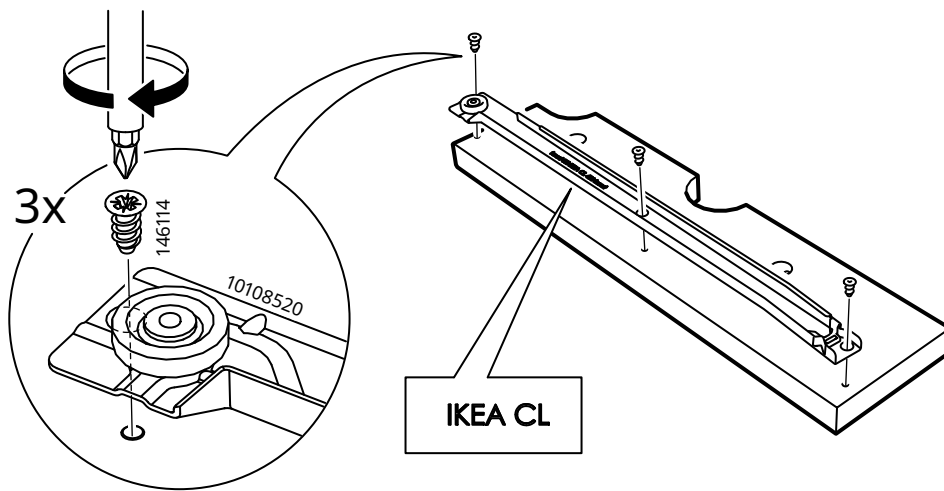  




31

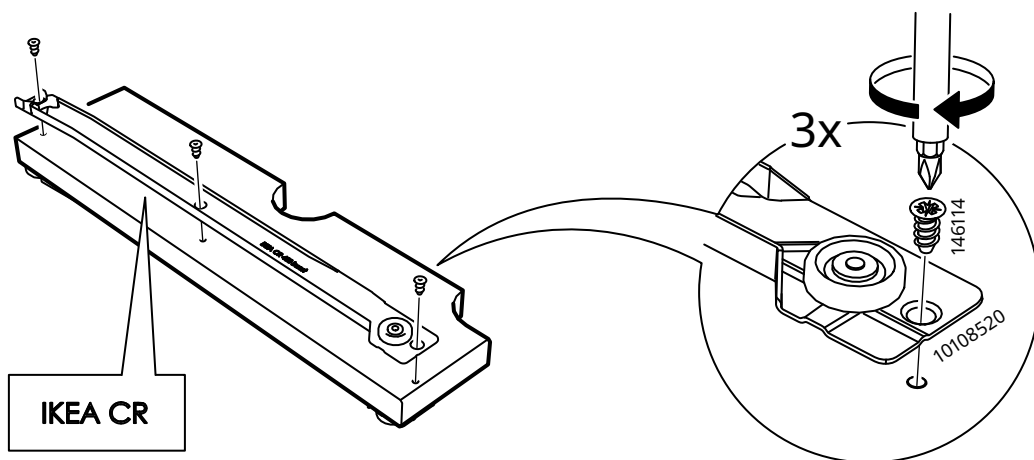 


32

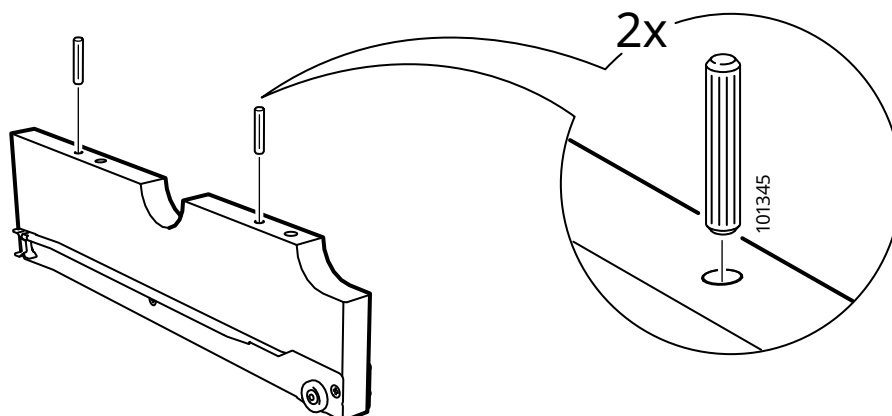 


33

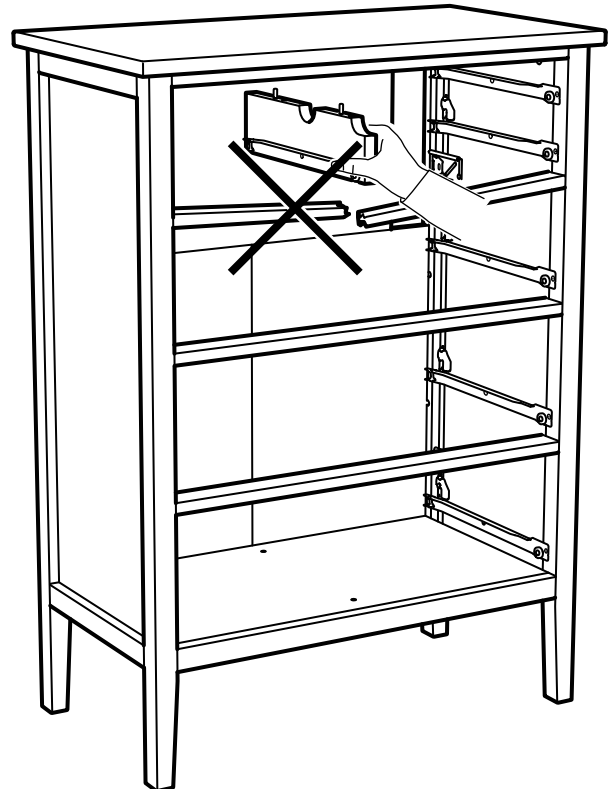 
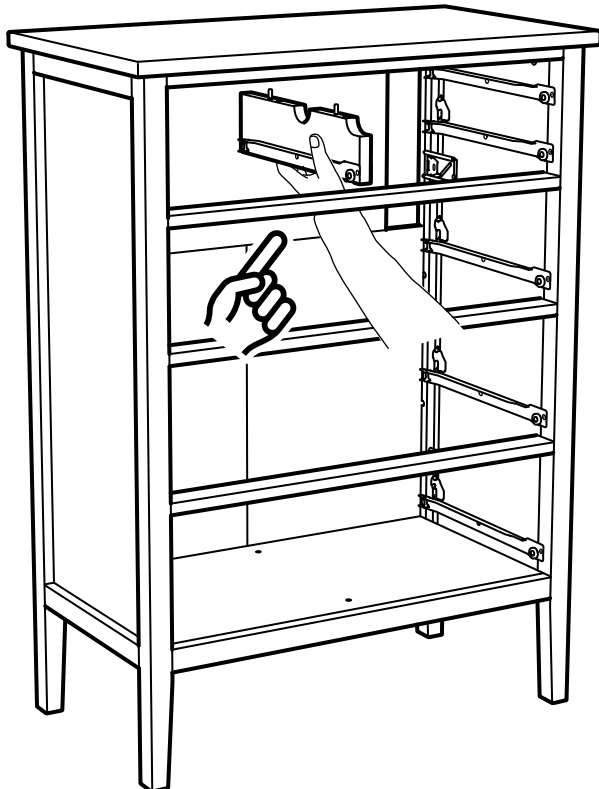 
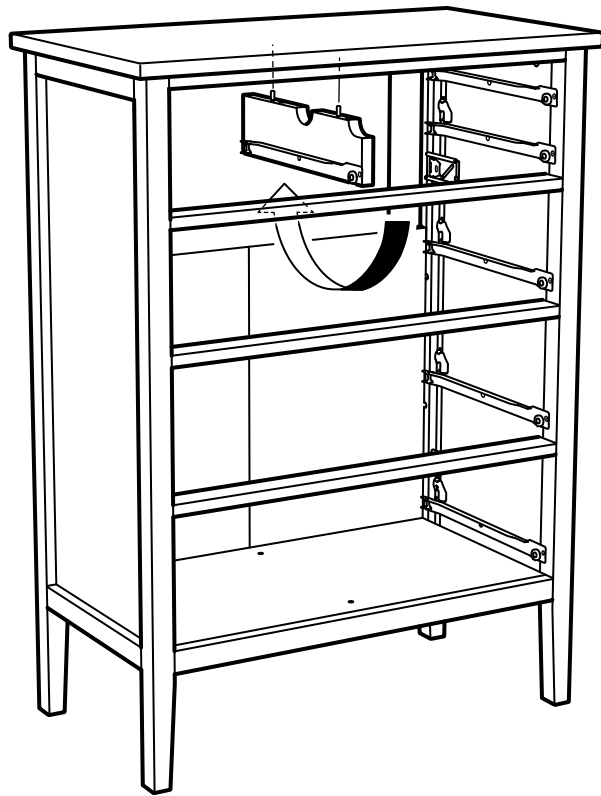 


34




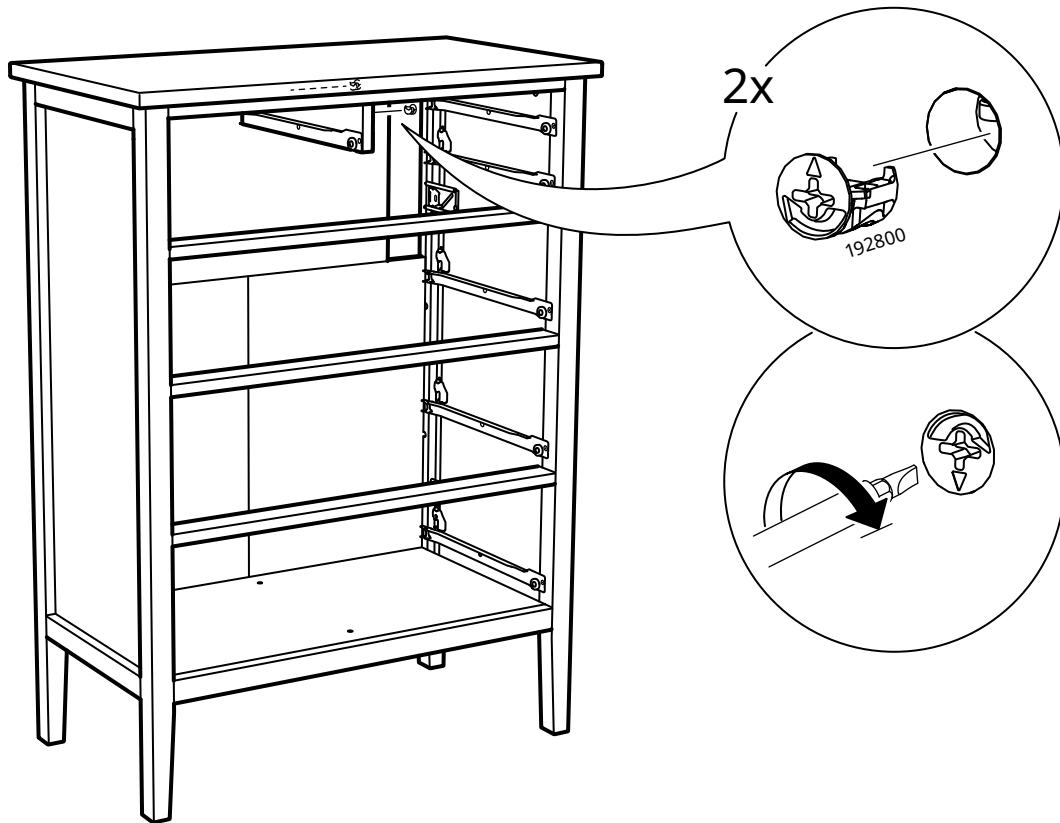 


35


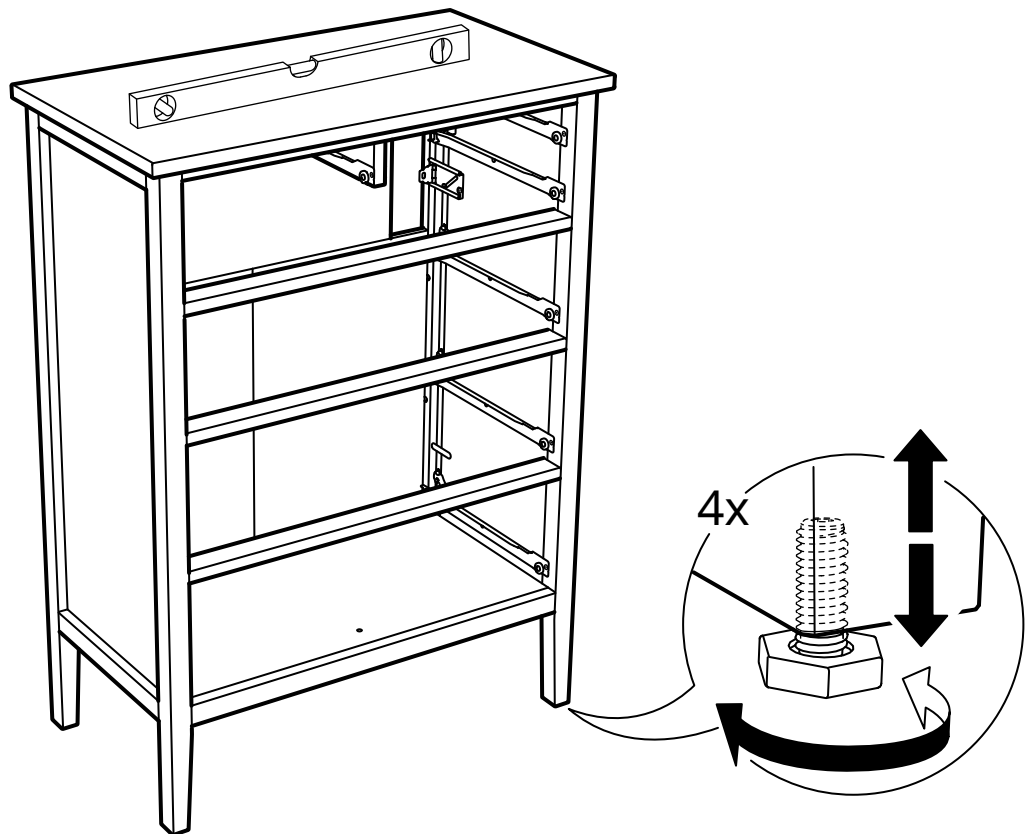 


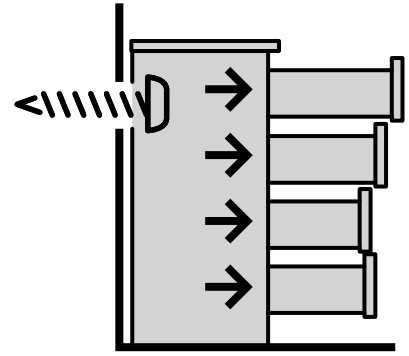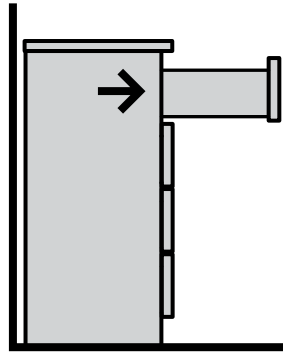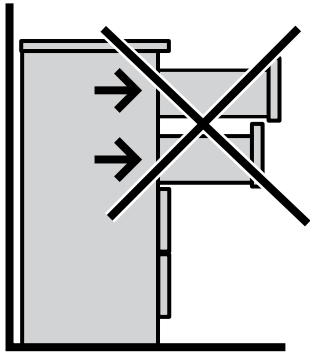   



36

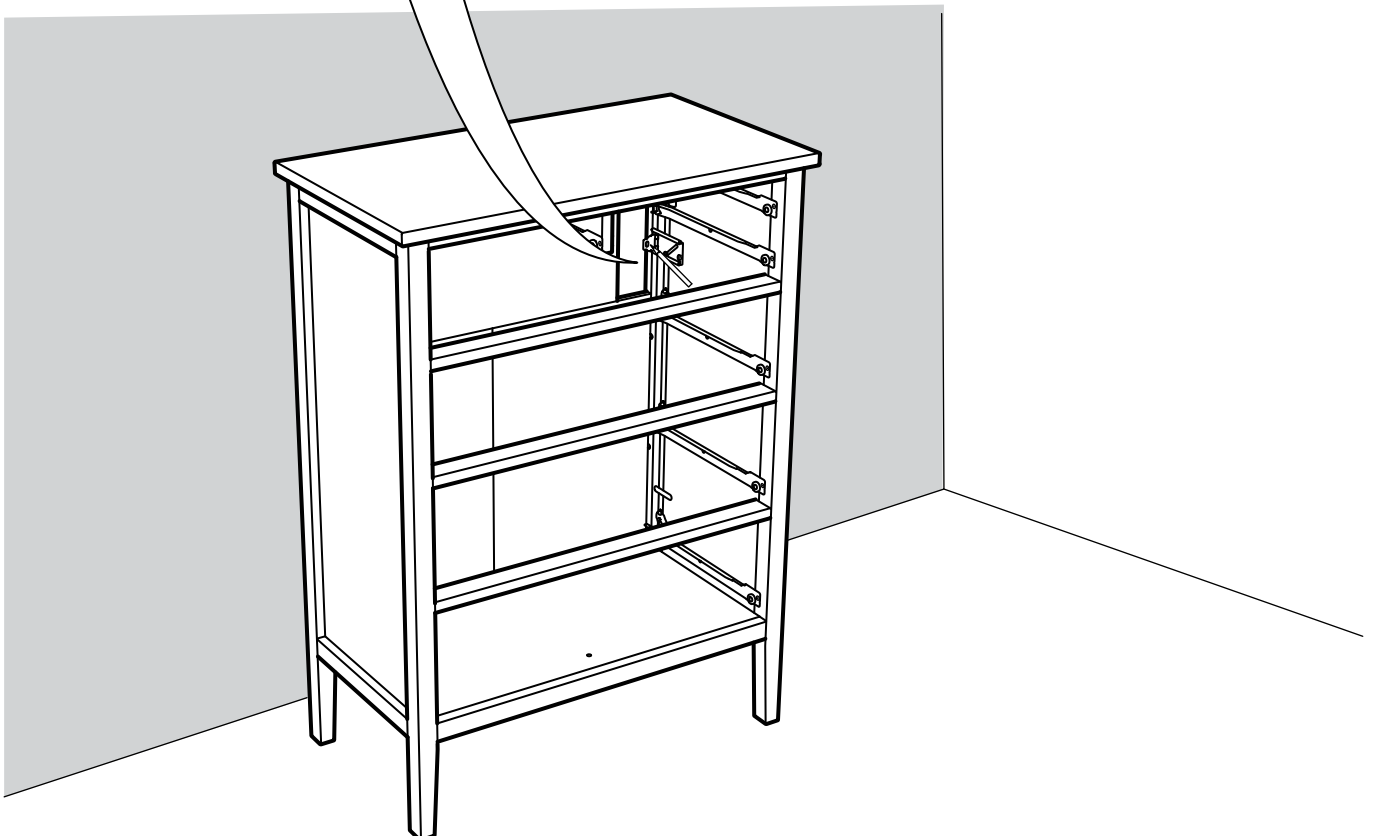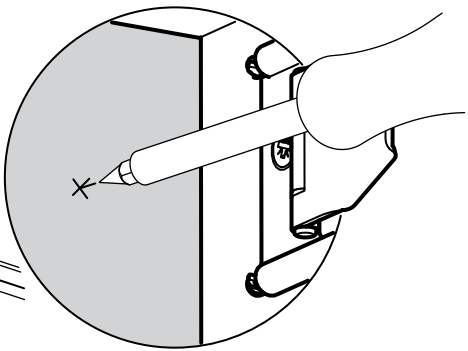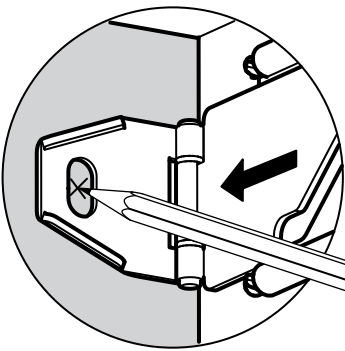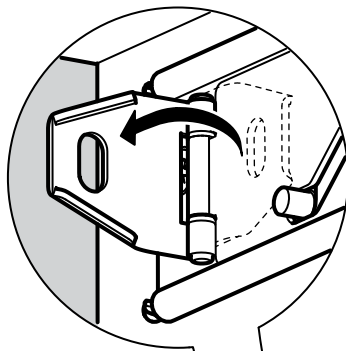    

37

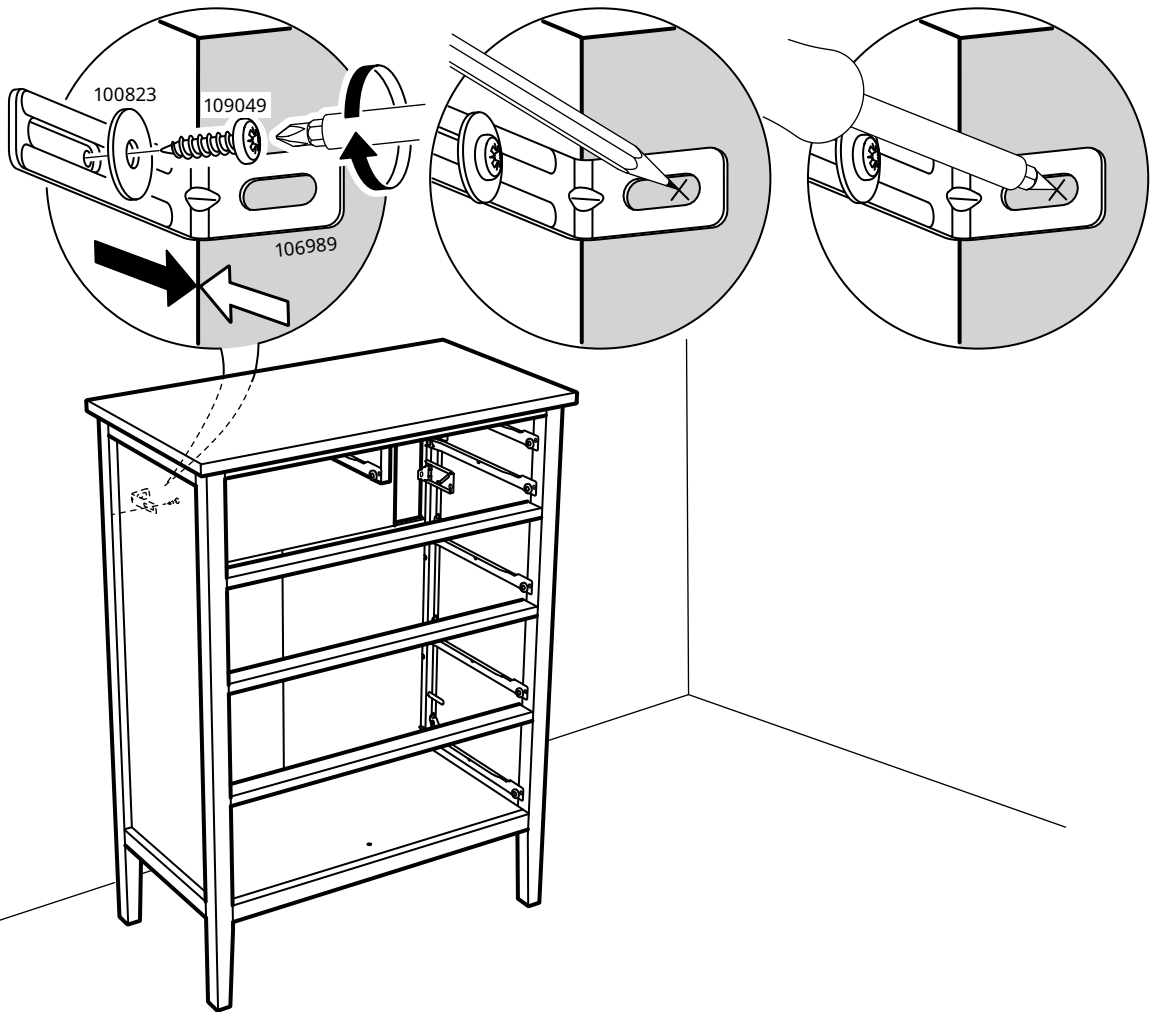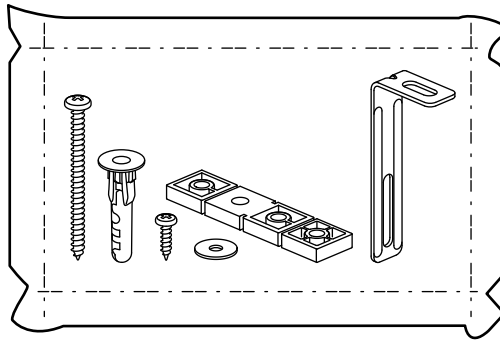  

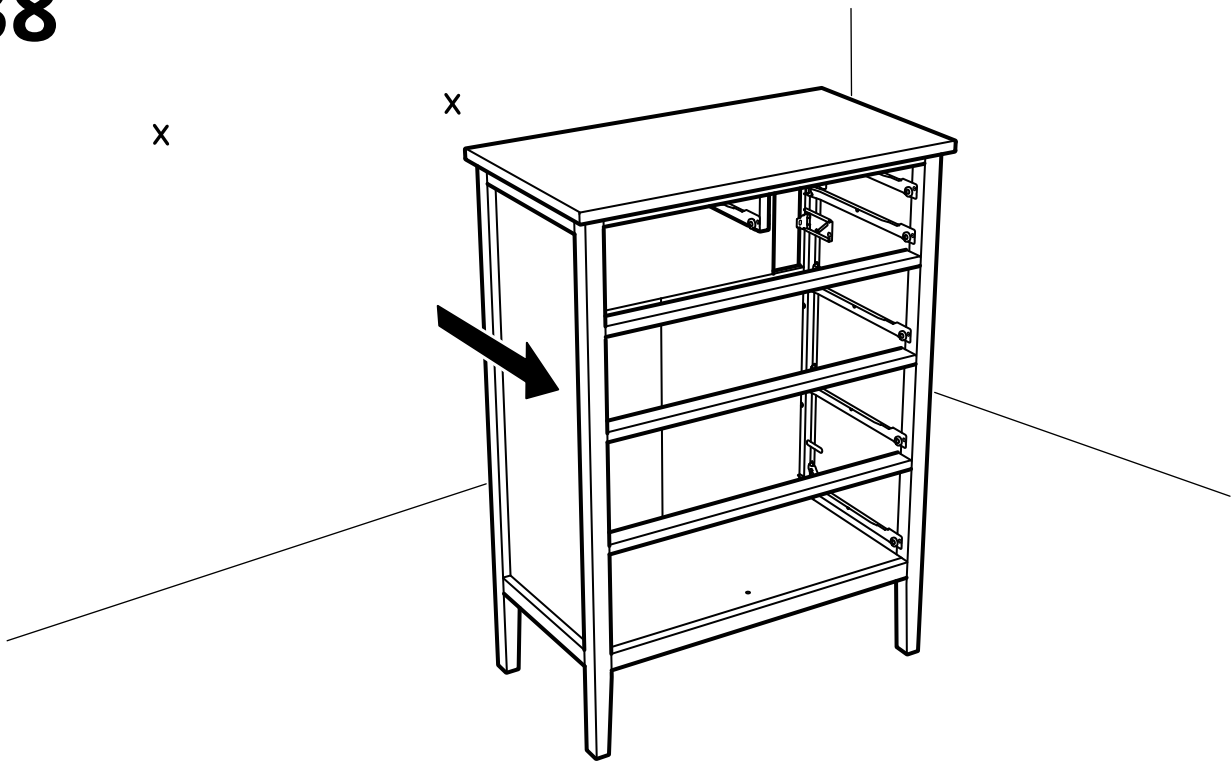 


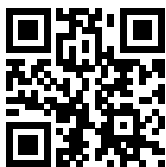 

www.IKEA.com/secure-it



 www.IKEA.cn/secure-it

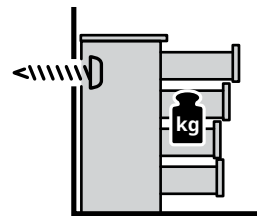


39

English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

 
A

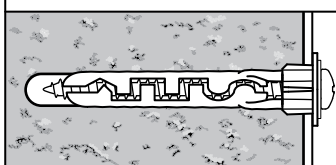


Ø 8 mm
(5/16")



 
1




2

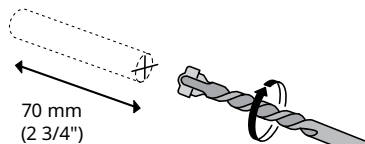 

3

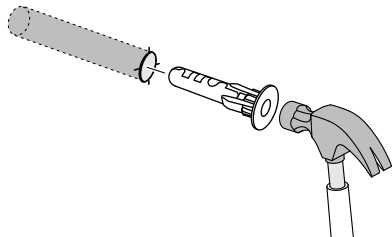 


B

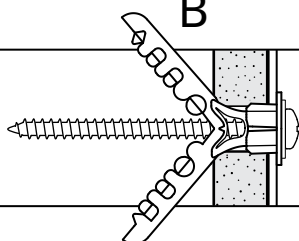 


Ø 8 mm
(5/16")



 
1




2

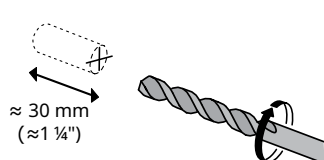 

3

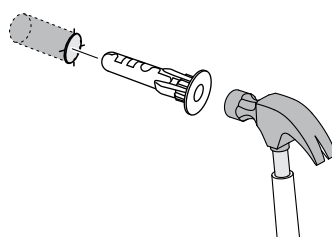 


C

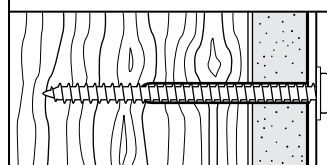 


Ø 3 mm
(1/8")




 
1




2


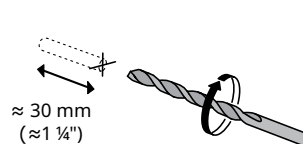 




40

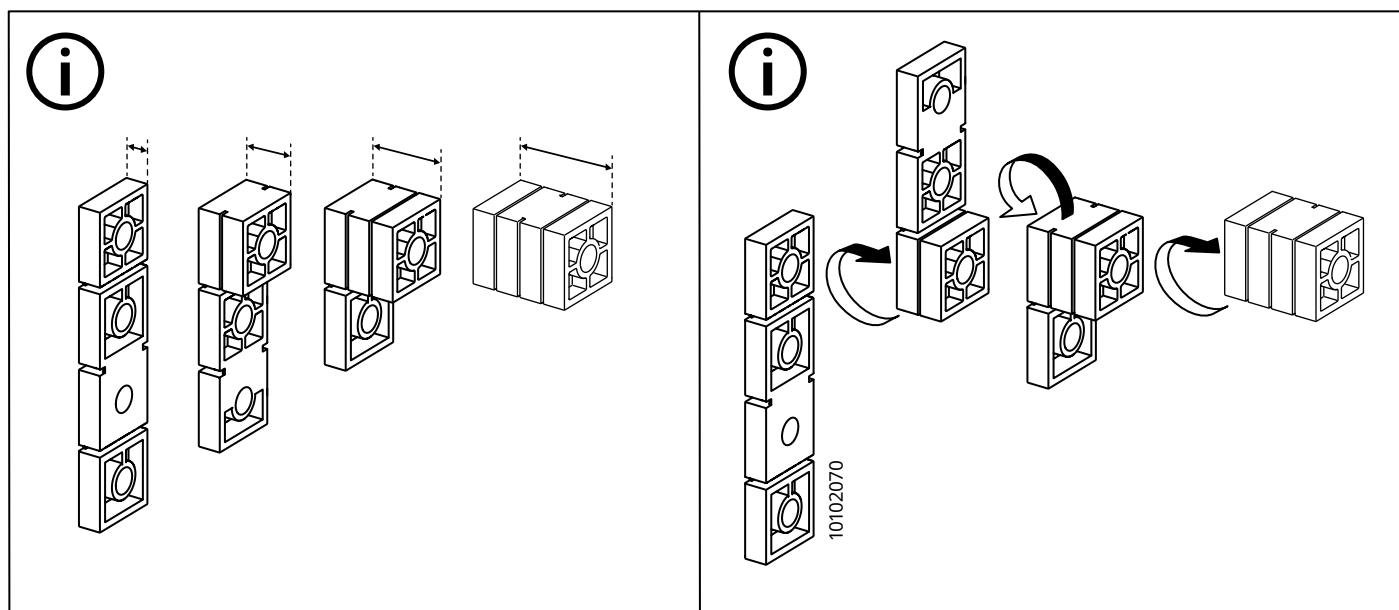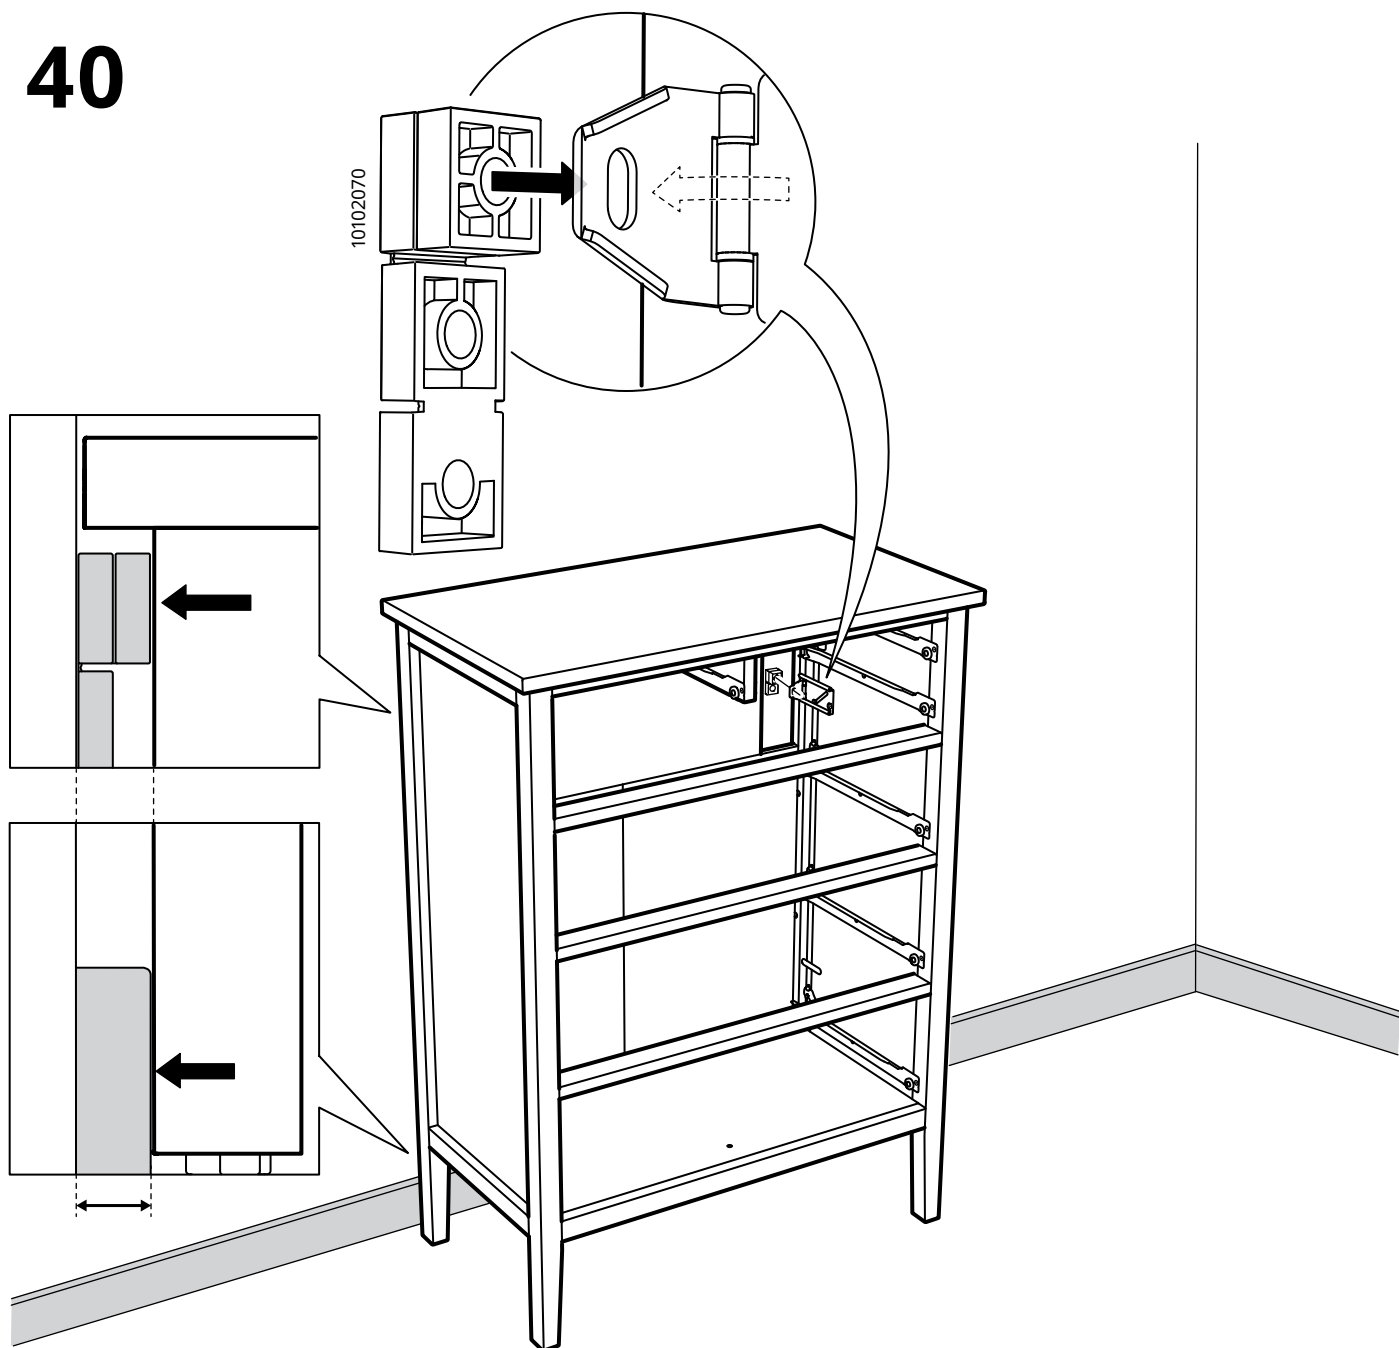  


41

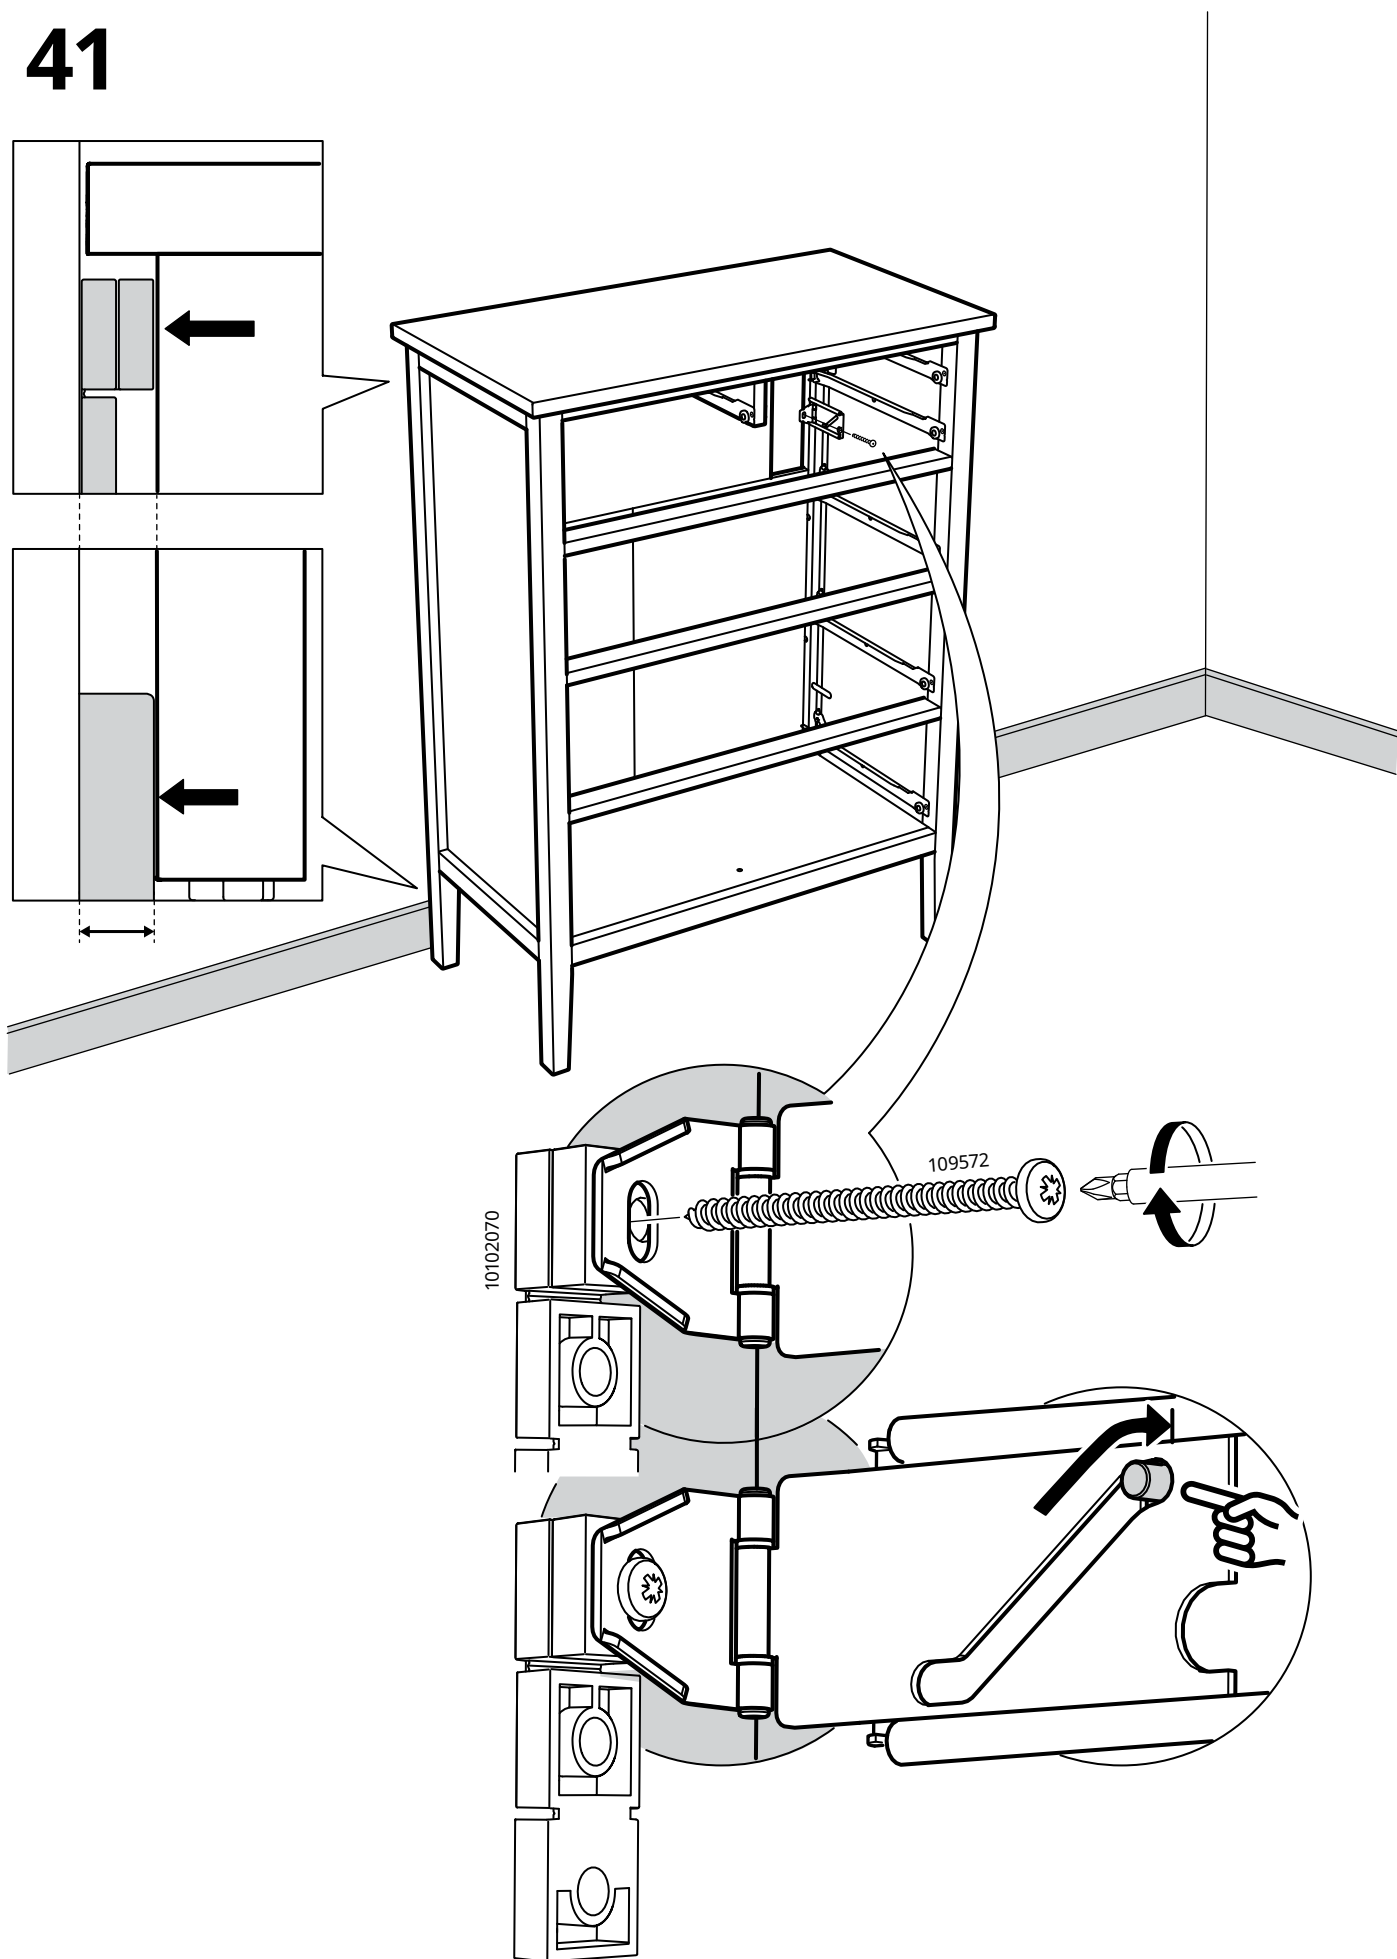 



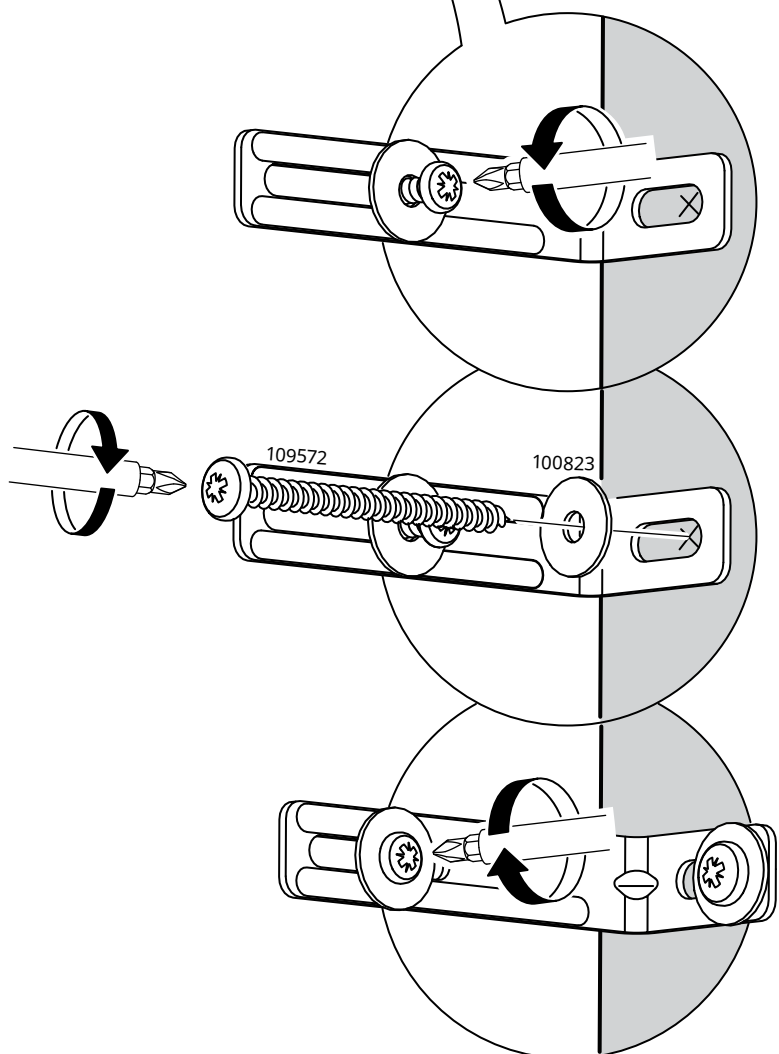 
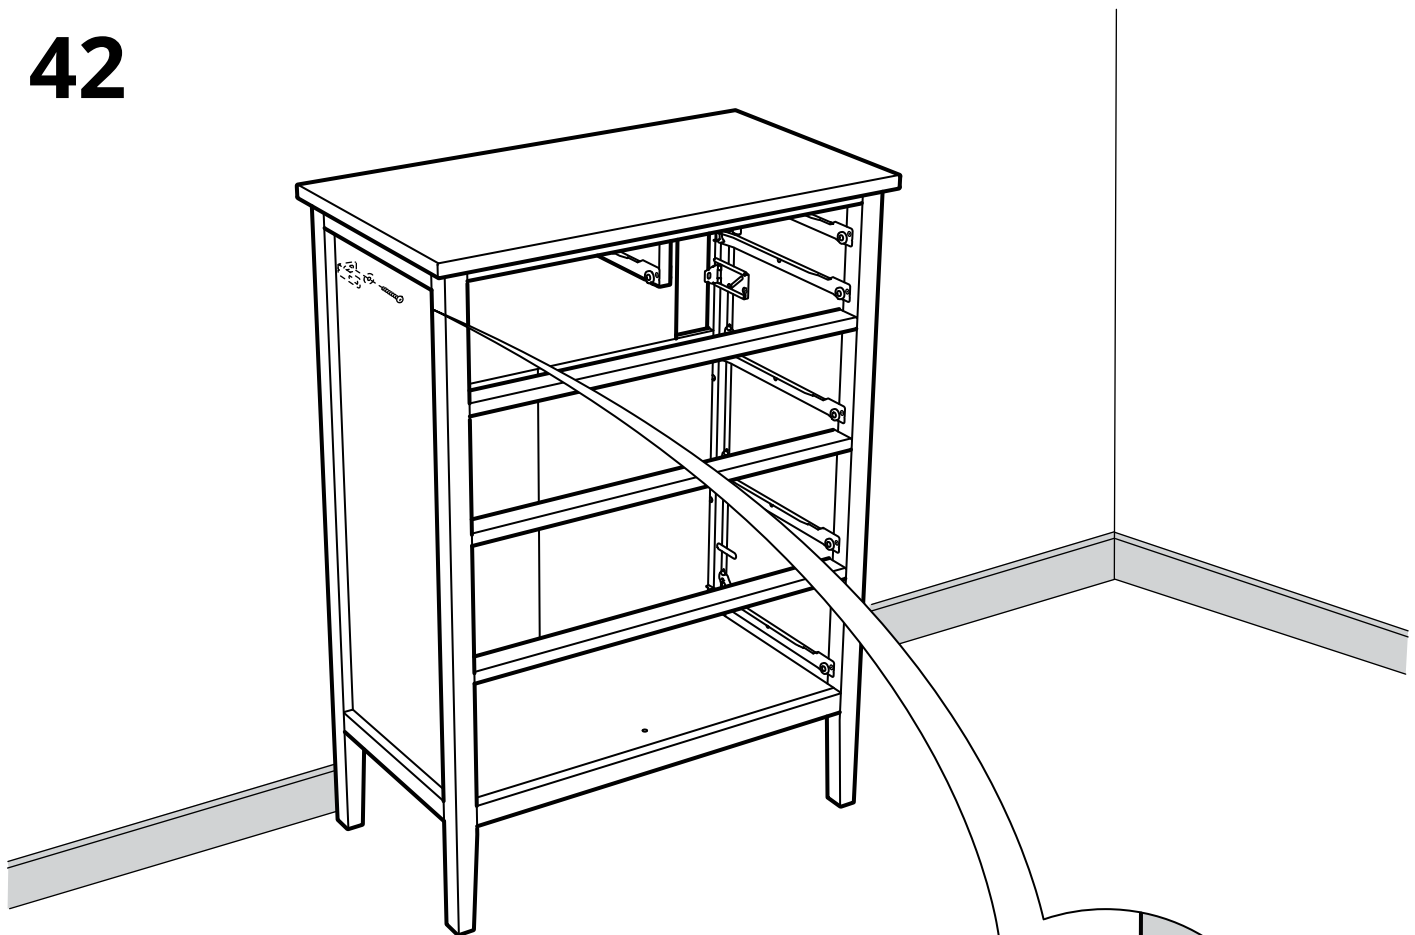 


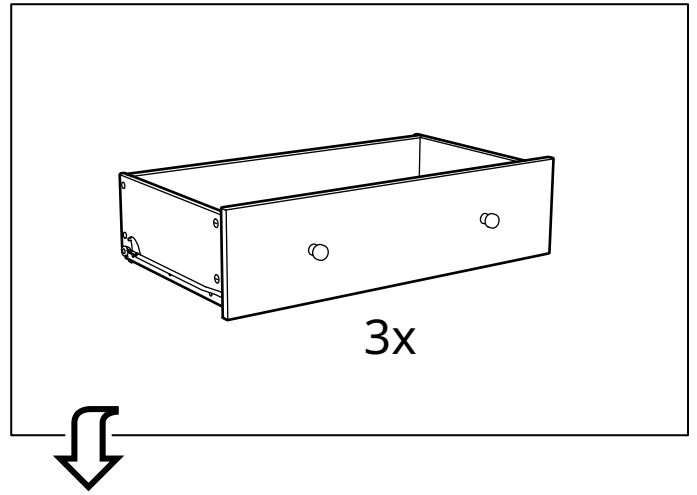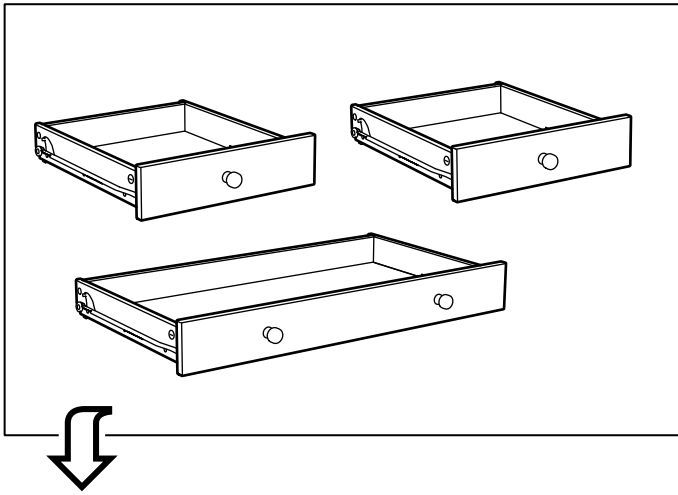  



43

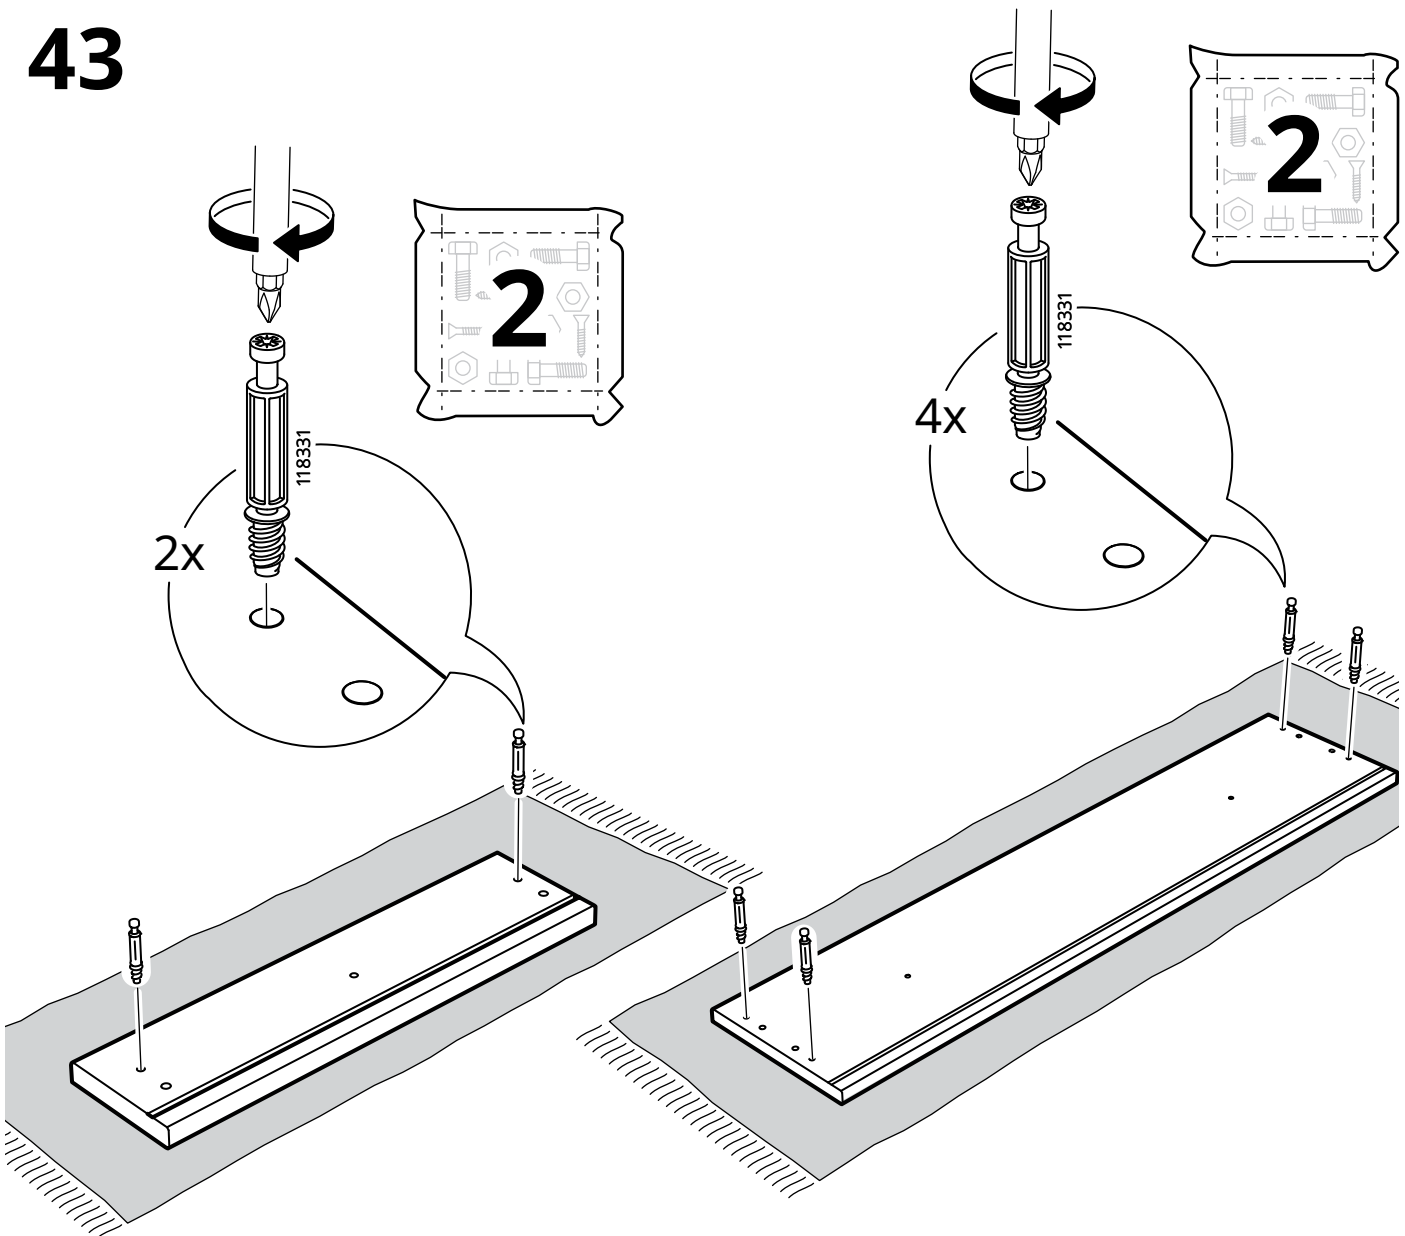 


44

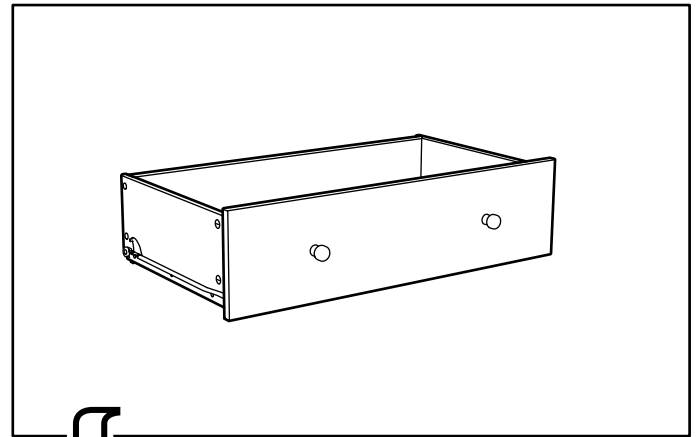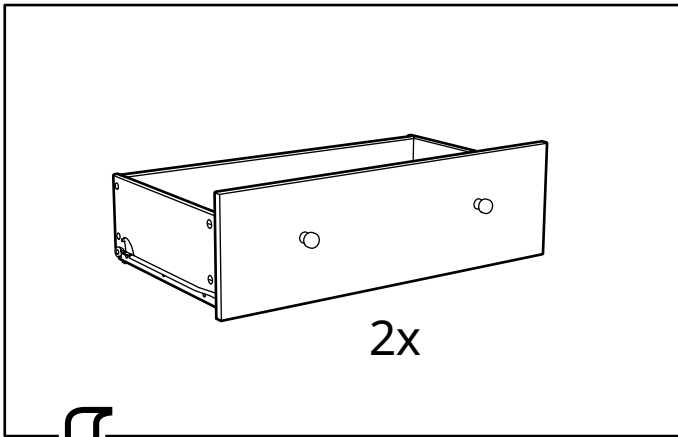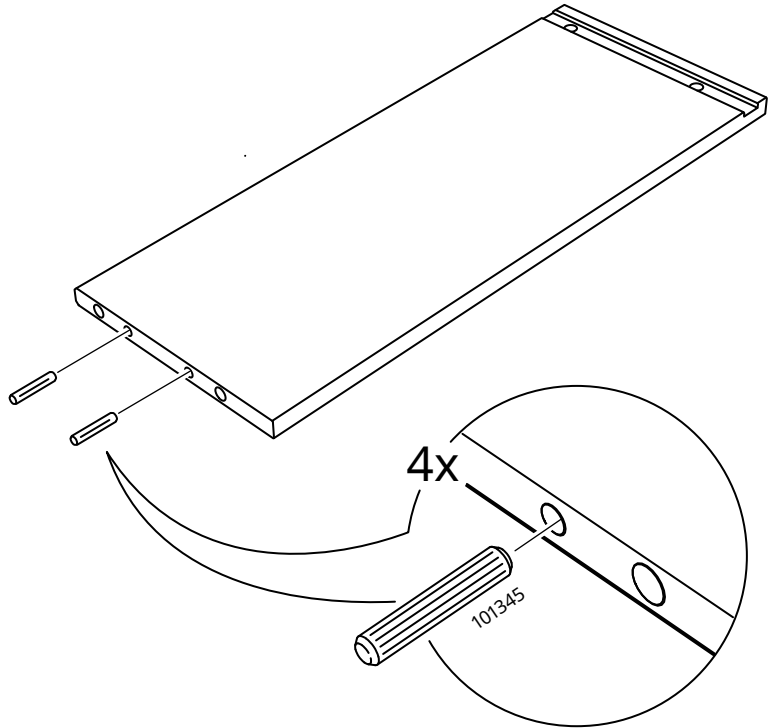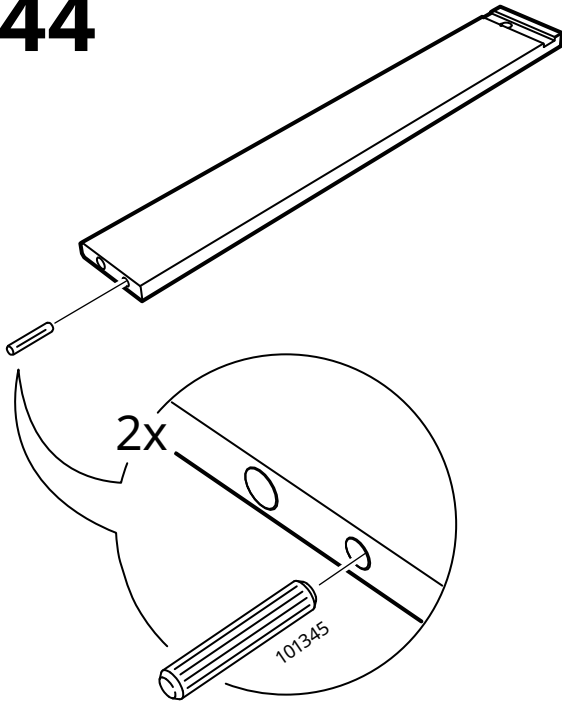    


45




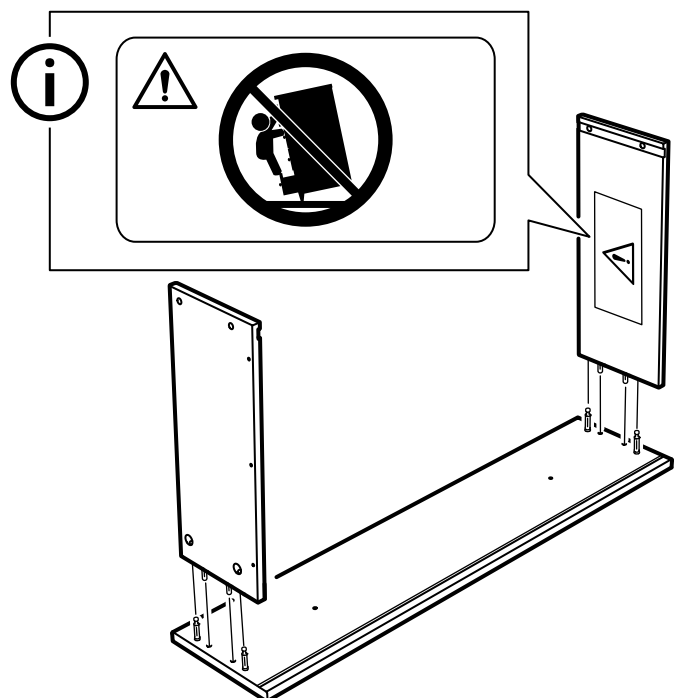 
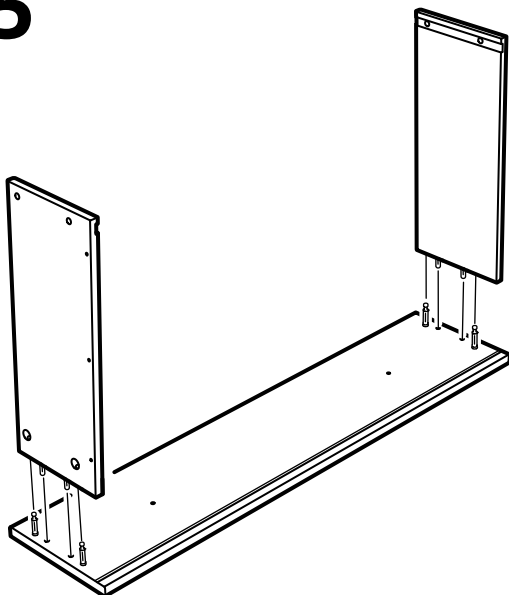 


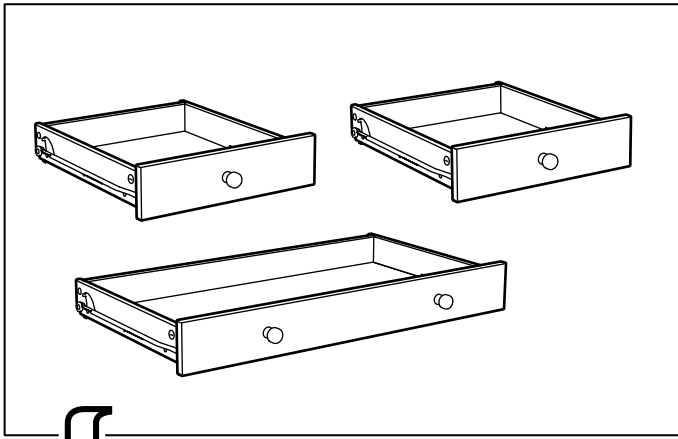 



46

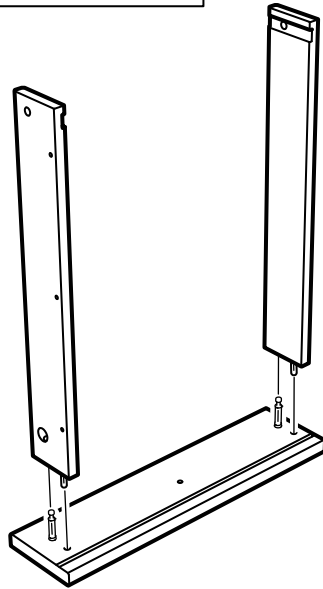 



47

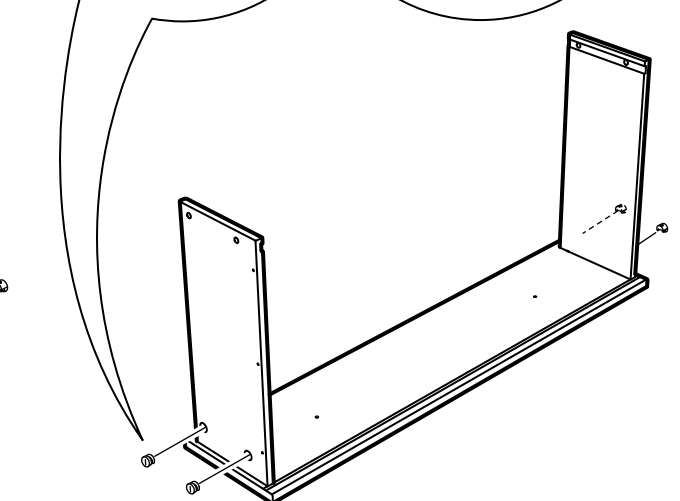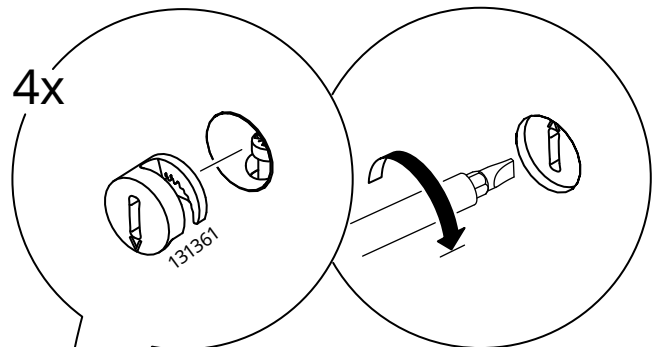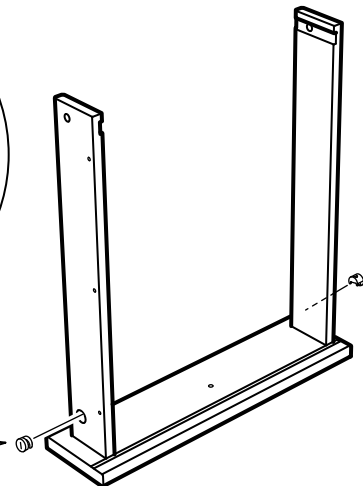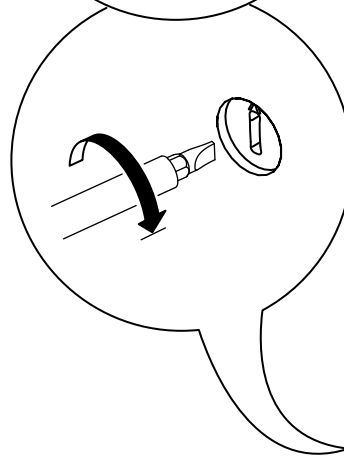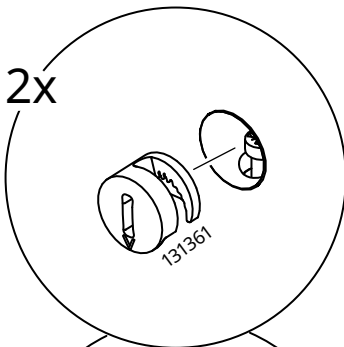     


48

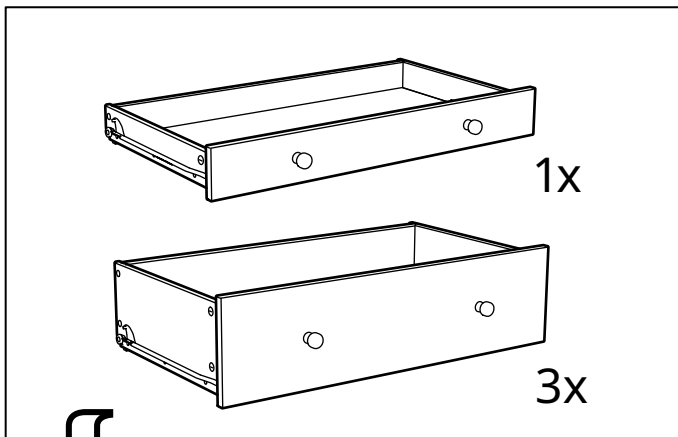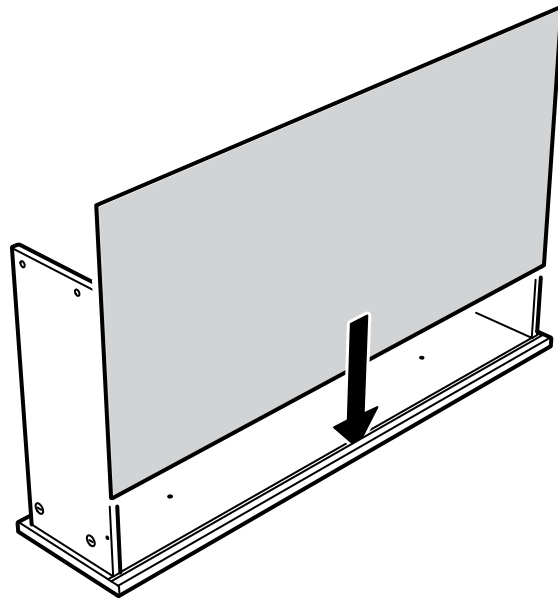  


49

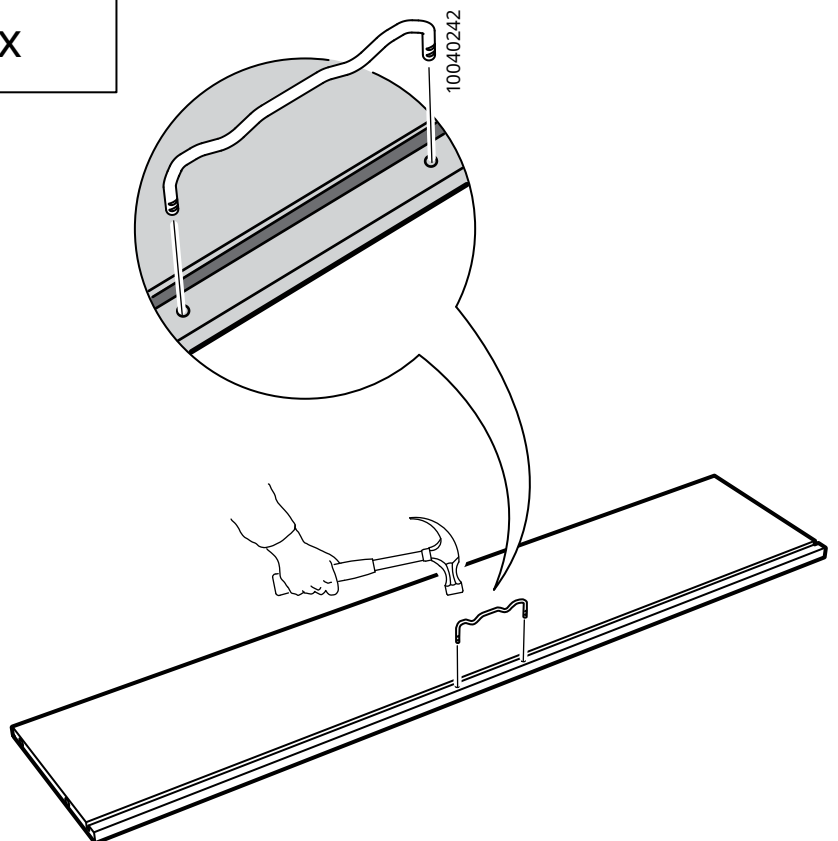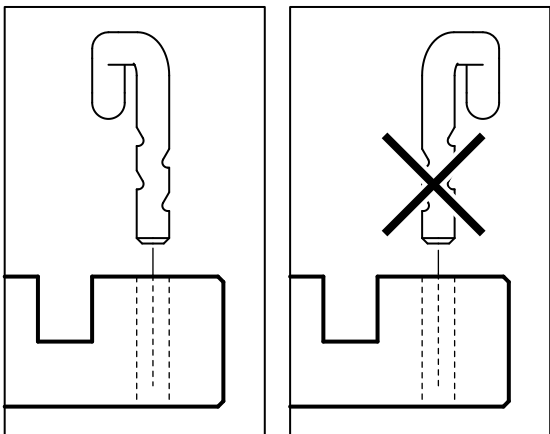  


50

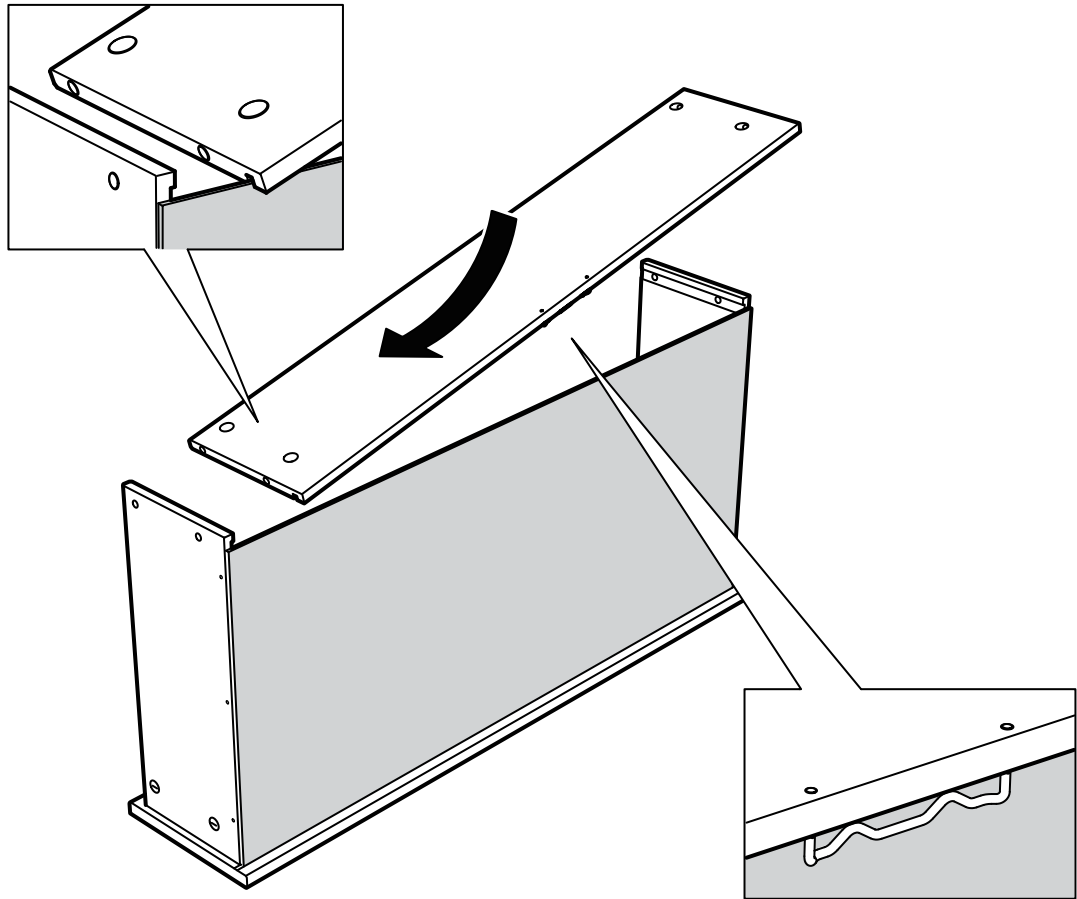 


51


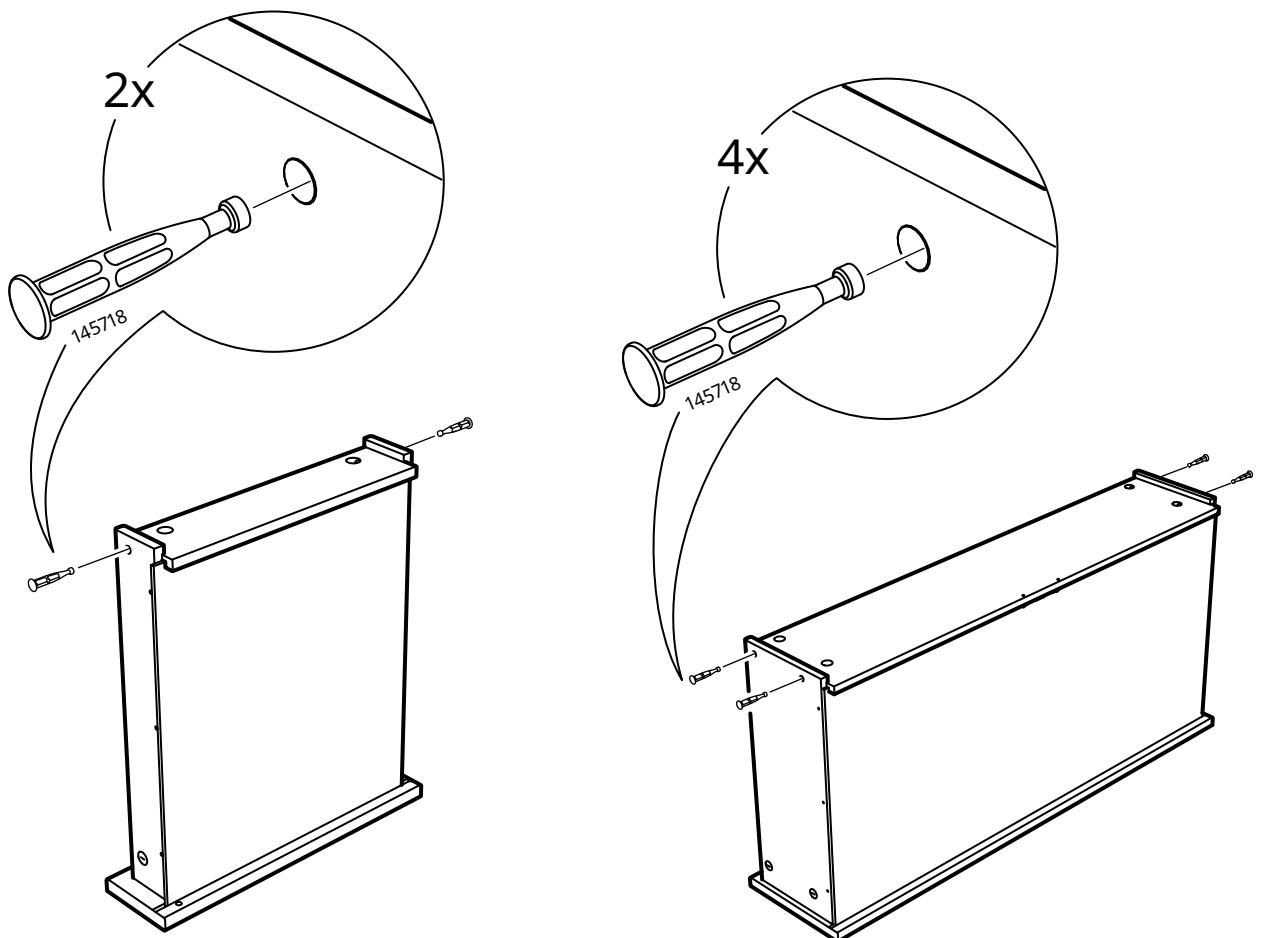 


52

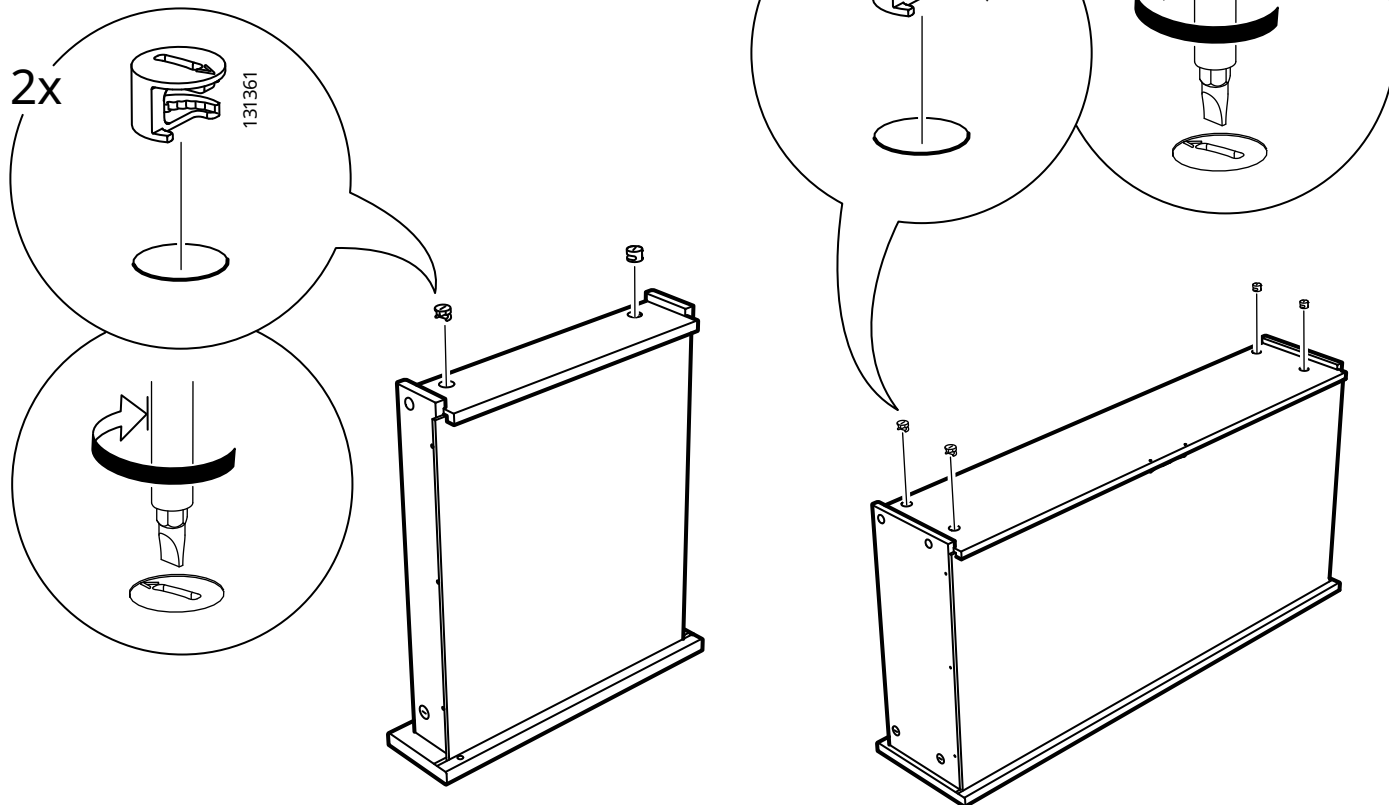 



53


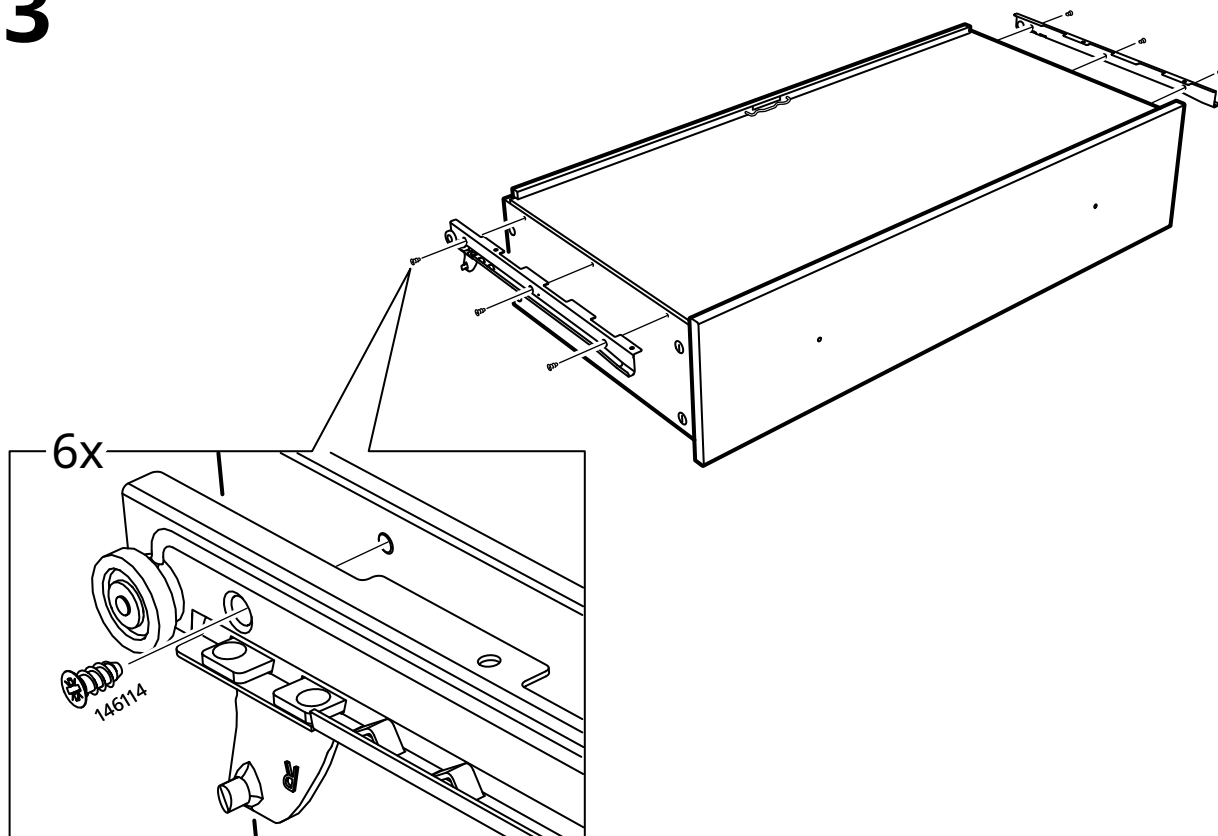 


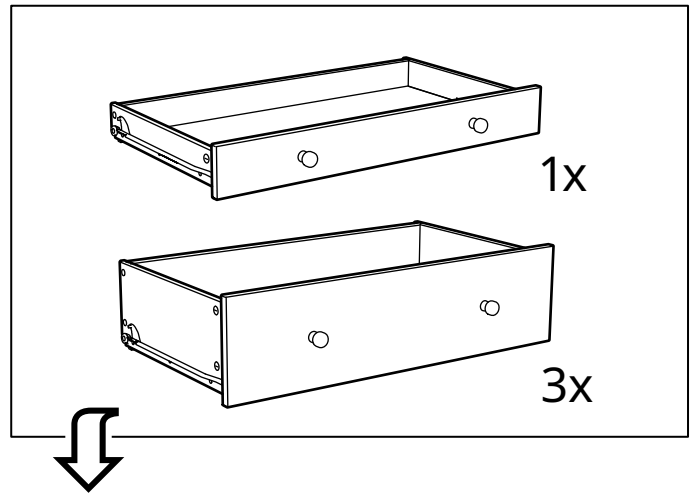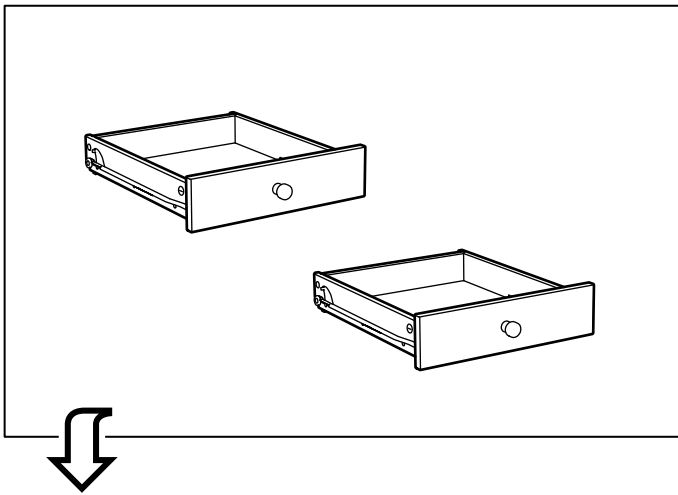  

54

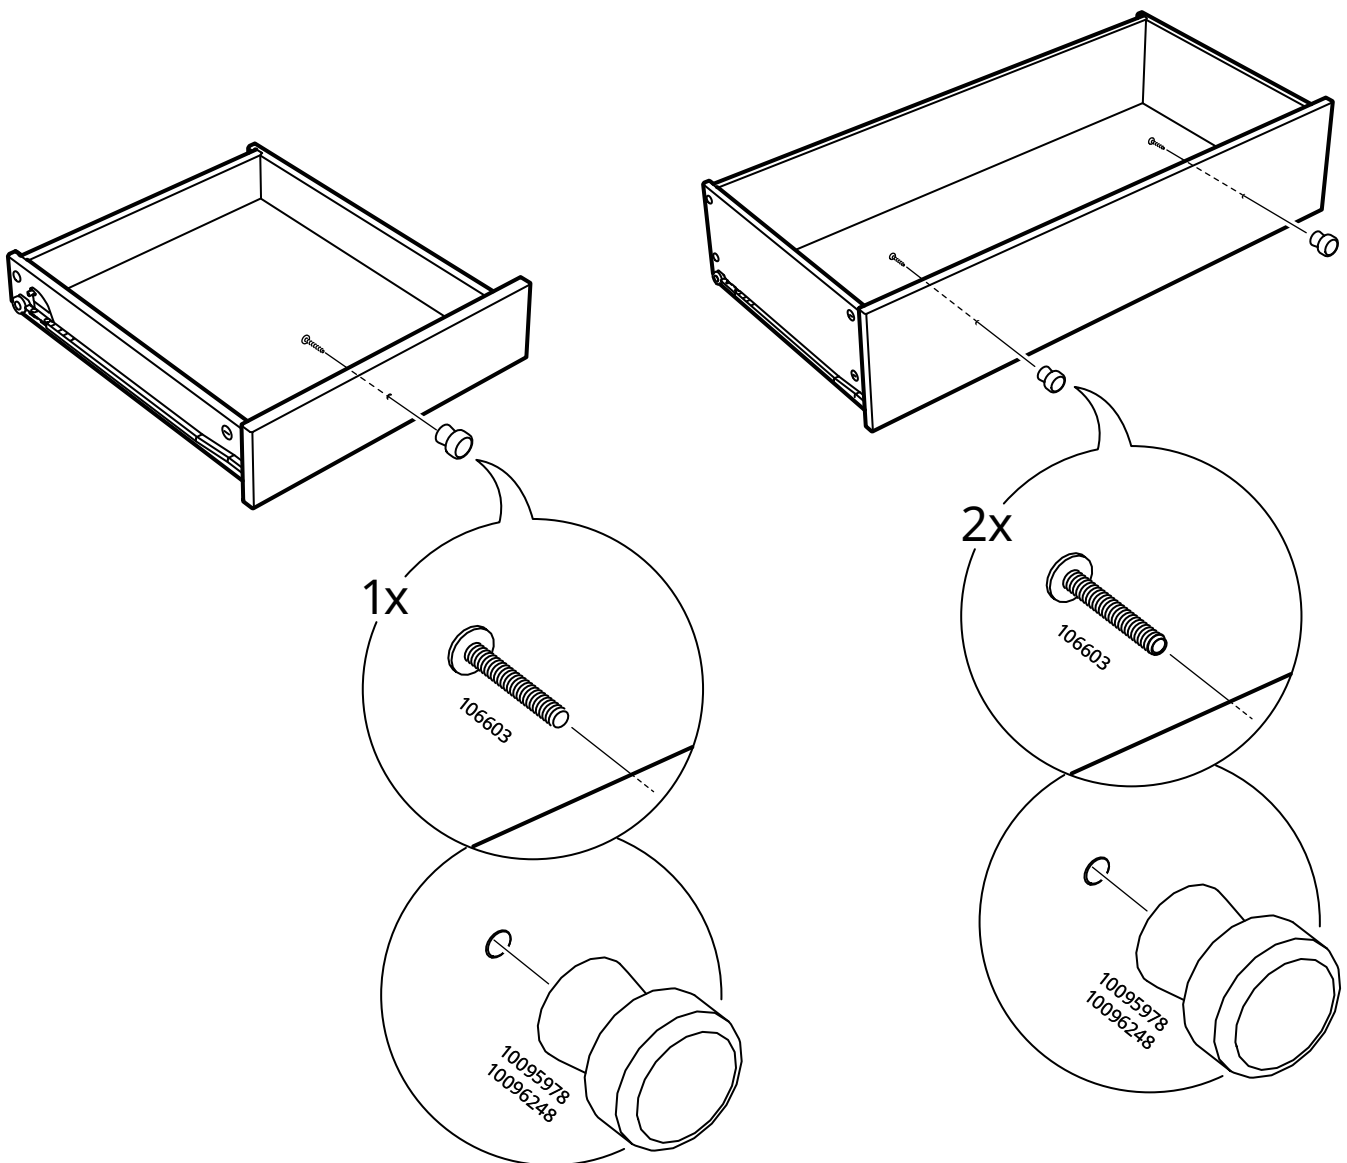 

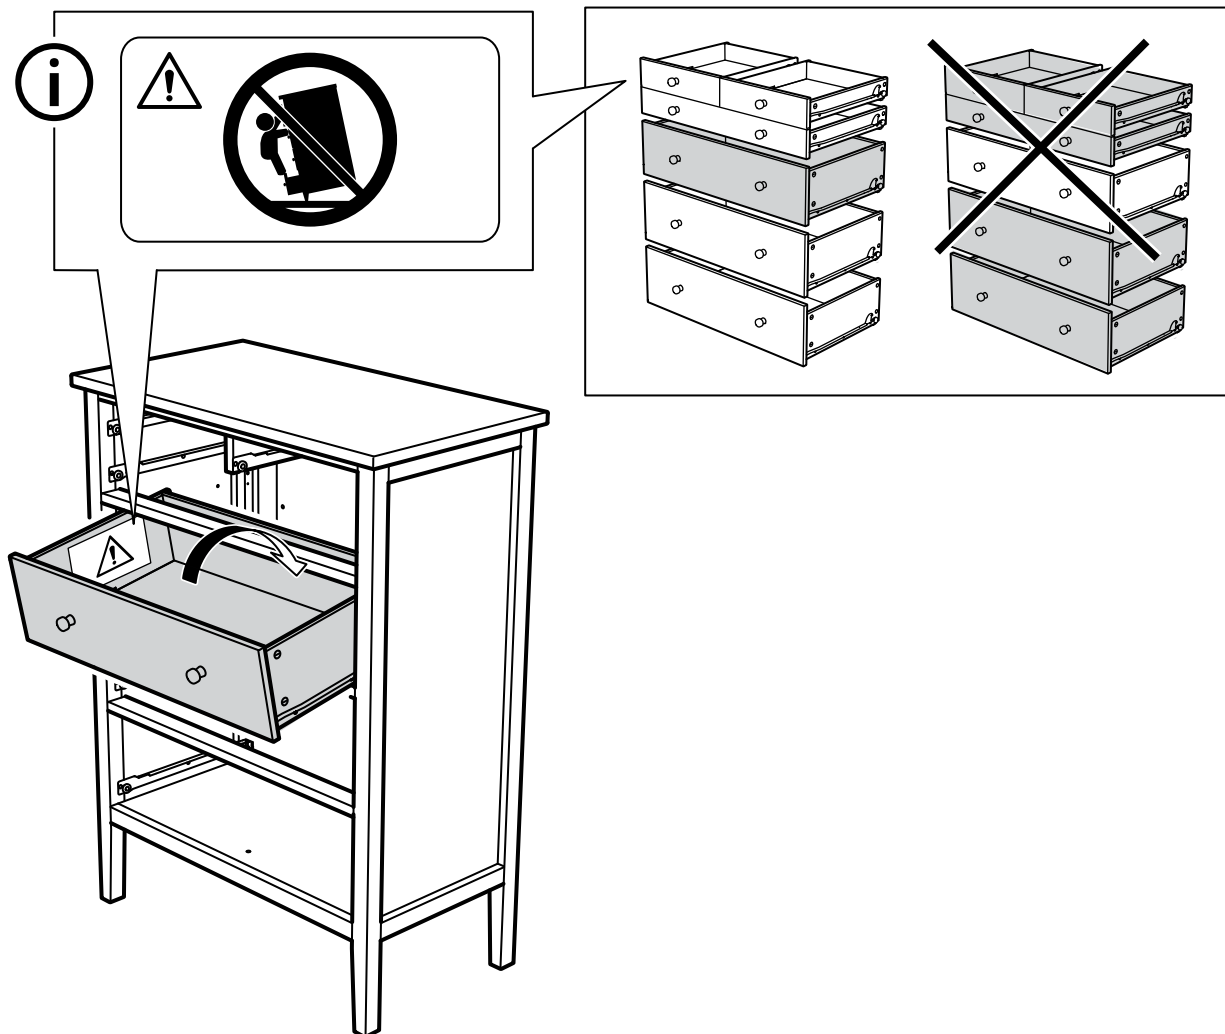 

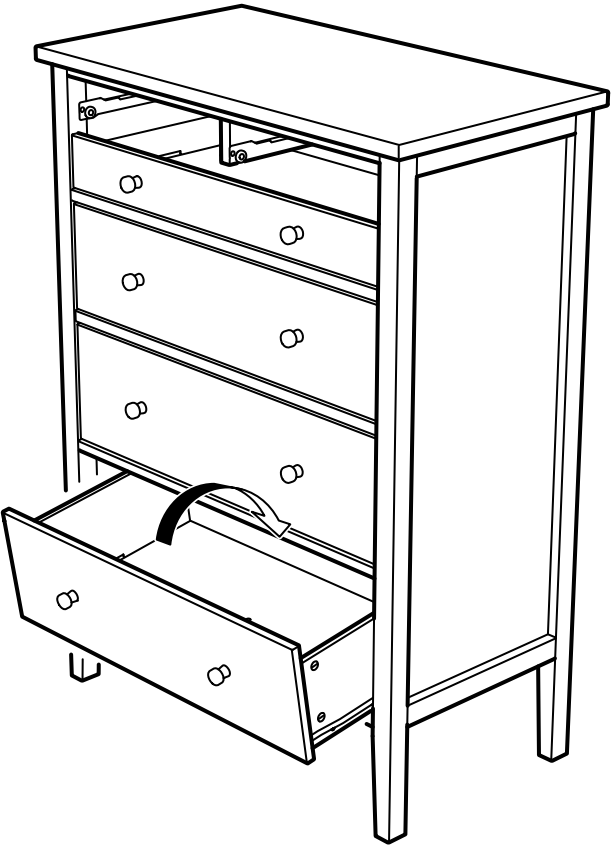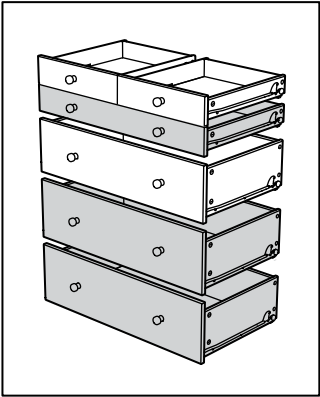  

57

