 


GULLABERG

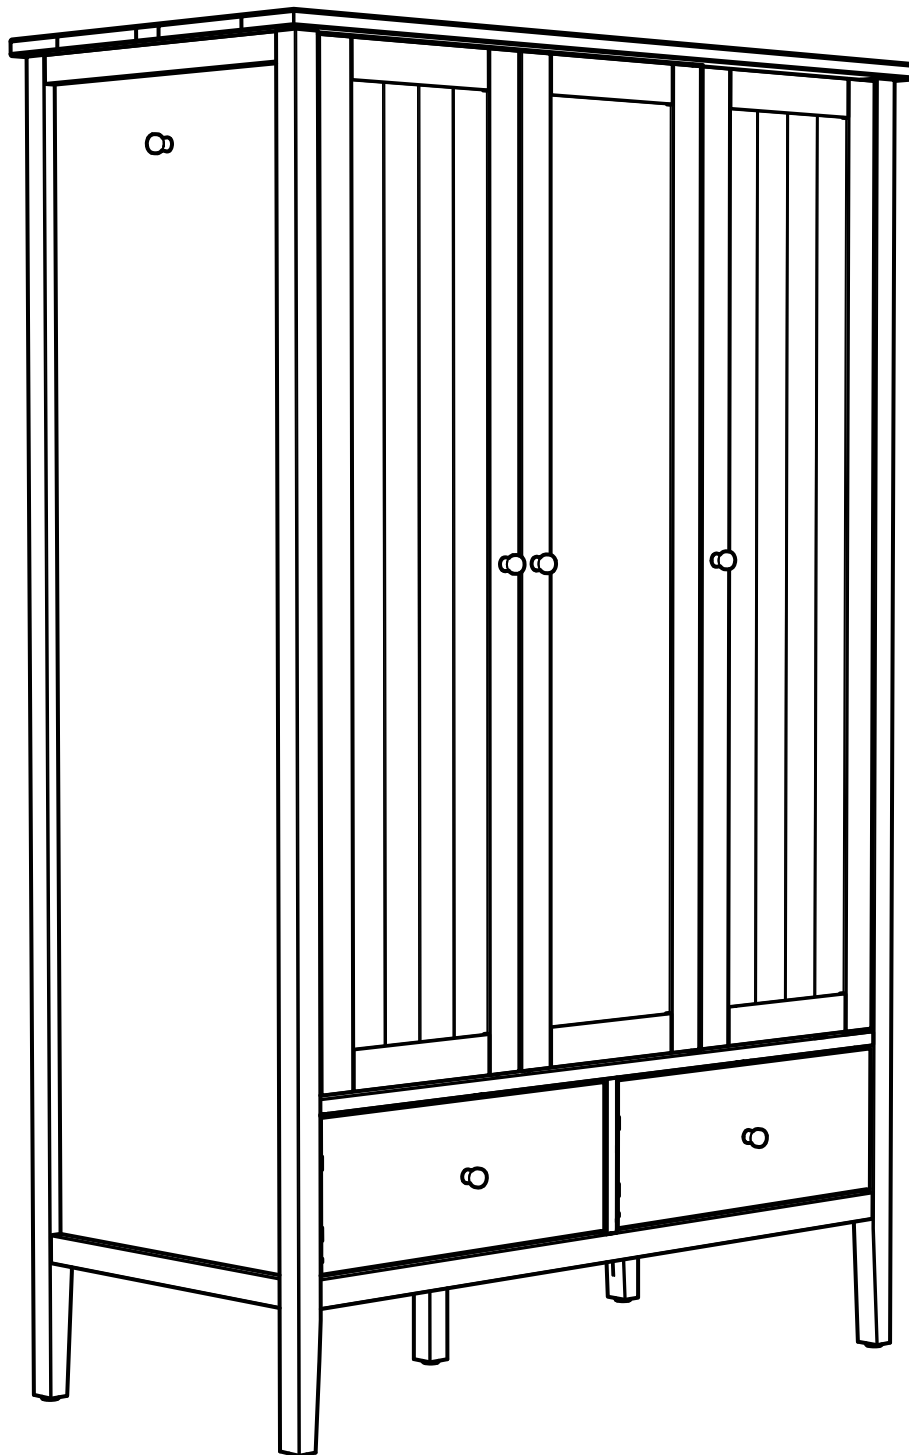

Design and Quality
IKEA of Sweden



English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

 
 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

 
 
 
 
 
NEVER open more than one drawer at a time.

Place heaviest items in the lowest drawers.


English

Read and follow each step of the instruction carefully.

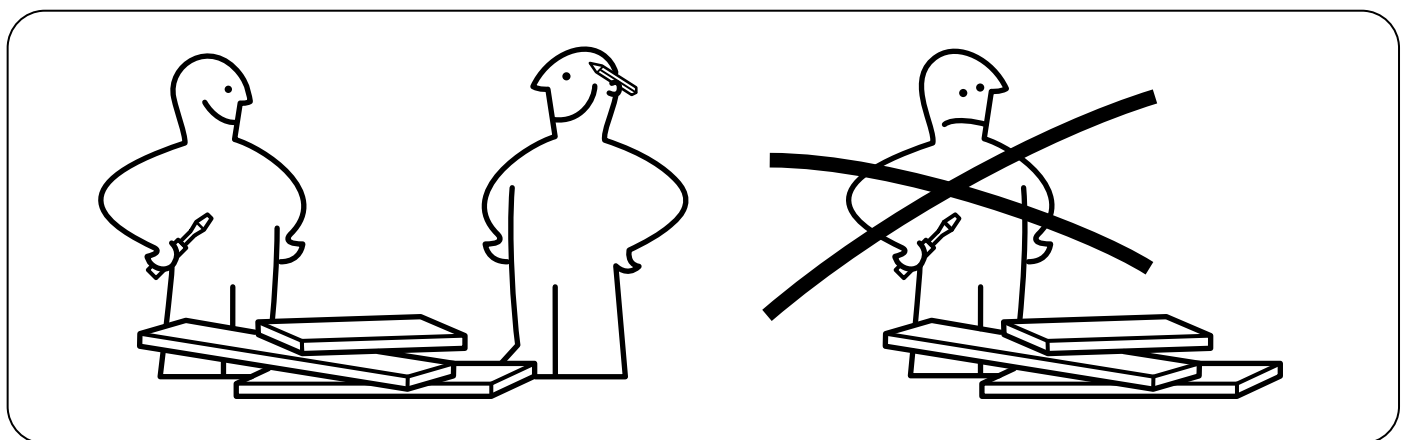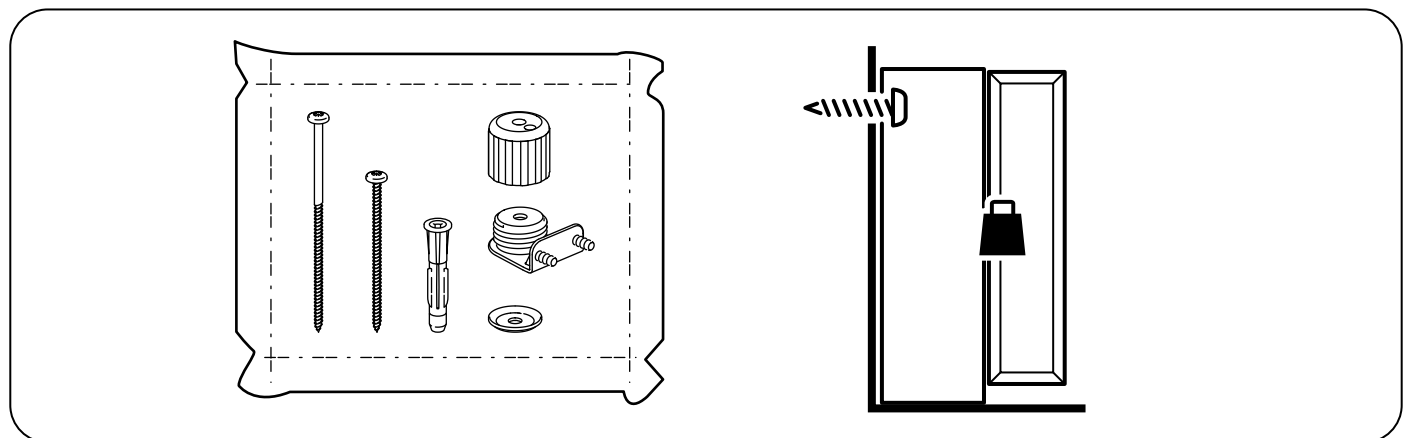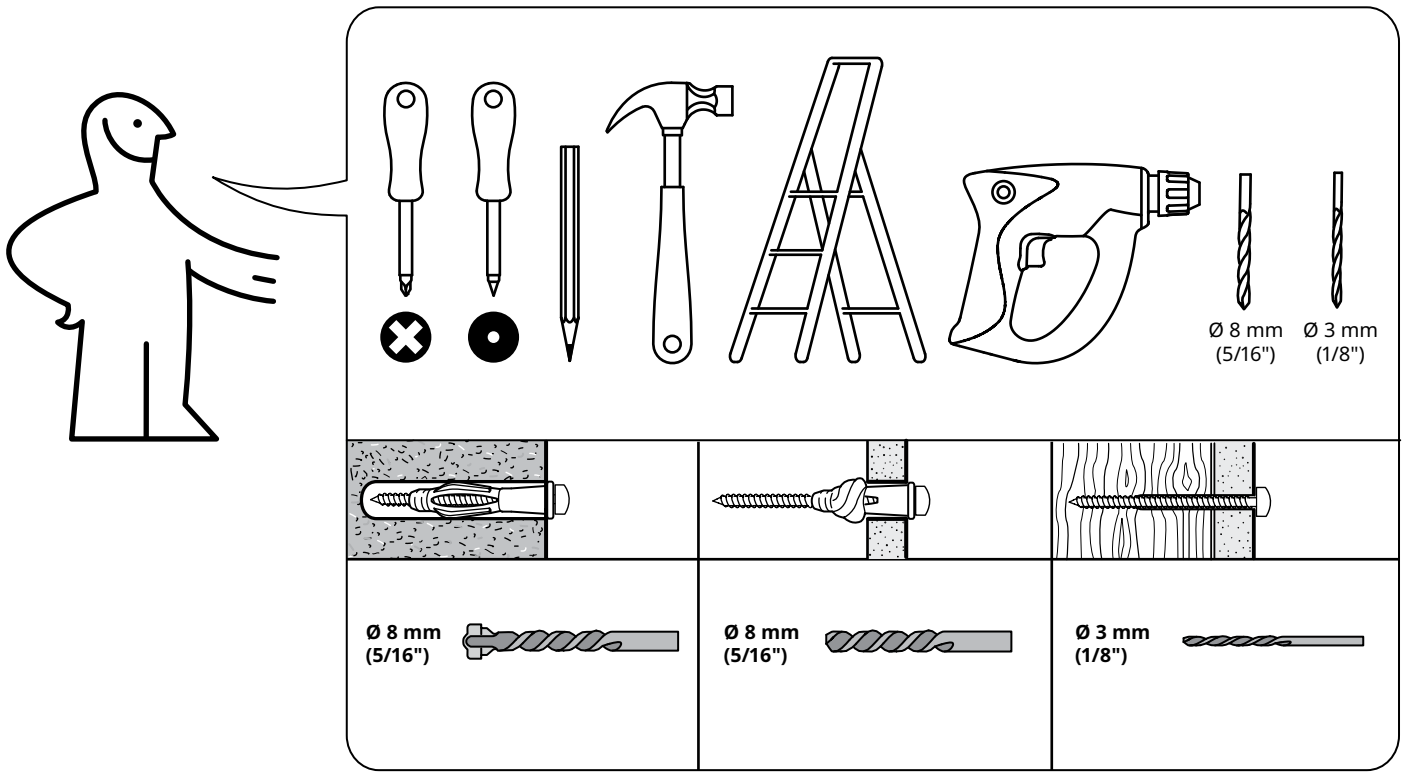

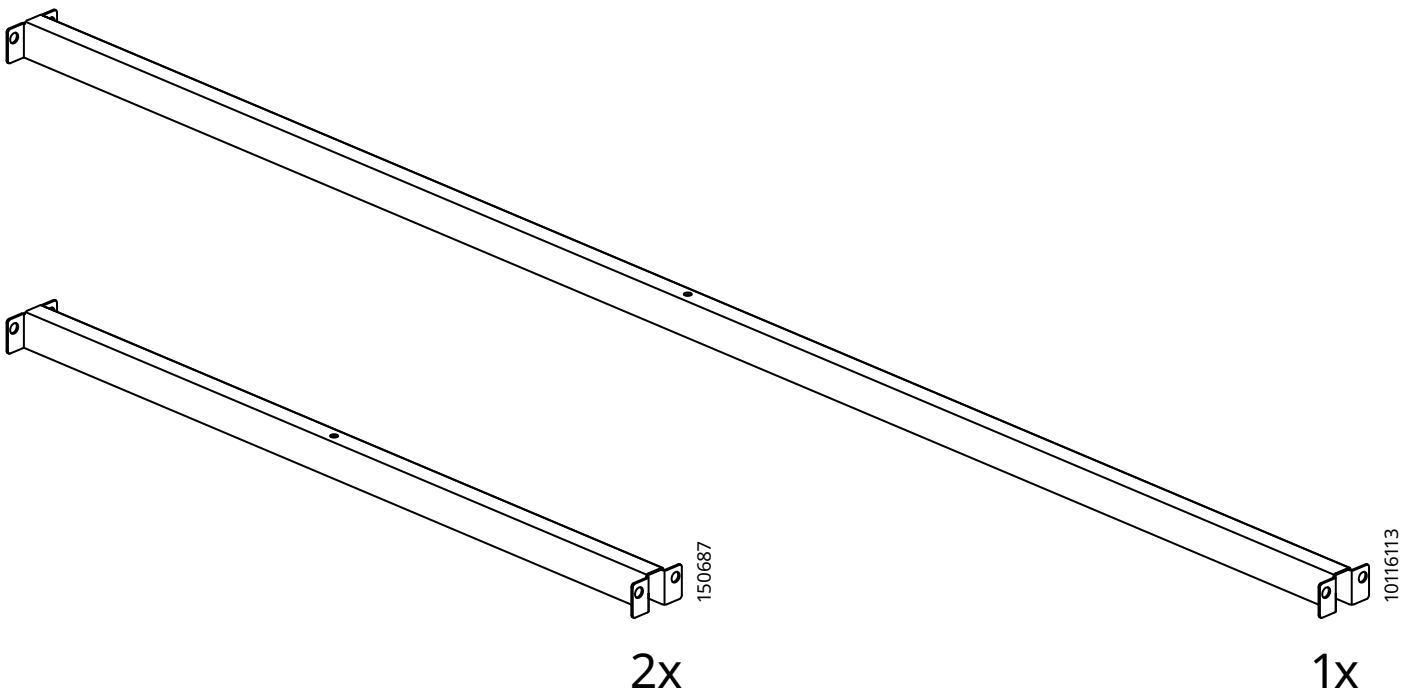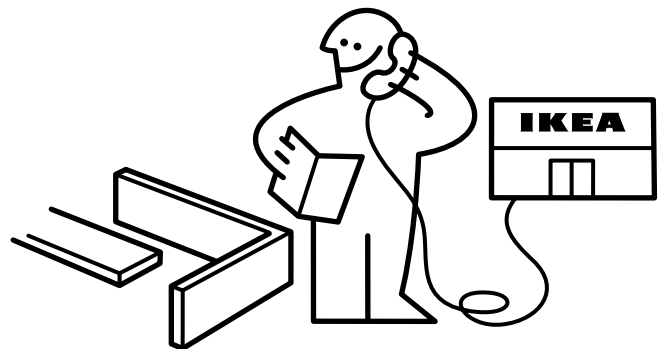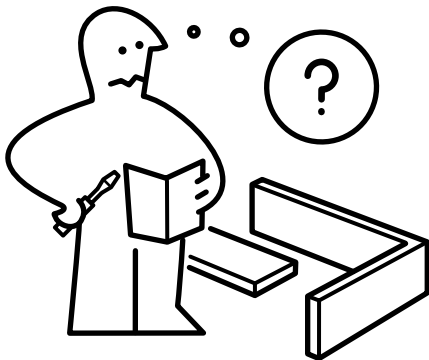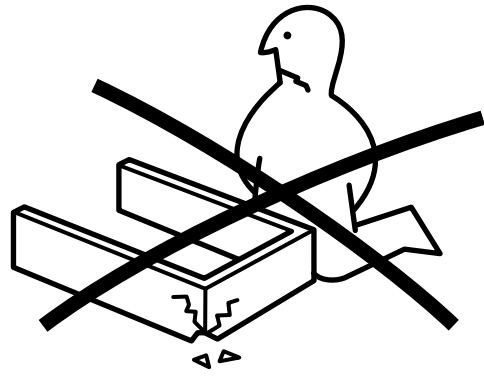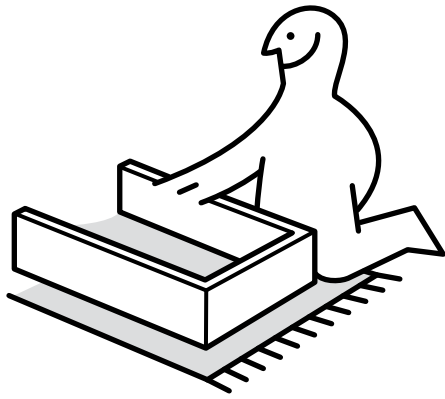


1

 


100214

 2x



100211

 2x




118331

14x



119252
119250

 6x




106603

7x




101345

 4x



128832

 10x

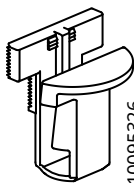


10095326
10093081

13x



10095315
10093082

 13x




144575

4x




144574

 4x




123840
10121196

 2x

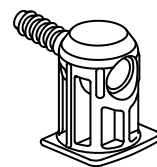


10043847

 18x

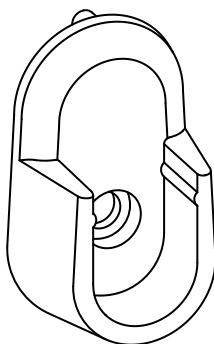


10042365
10044438

 2x

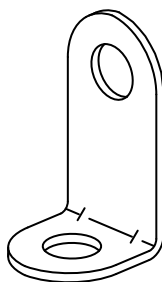


102553

 2x

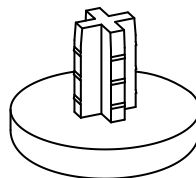


153552
158590

 5x

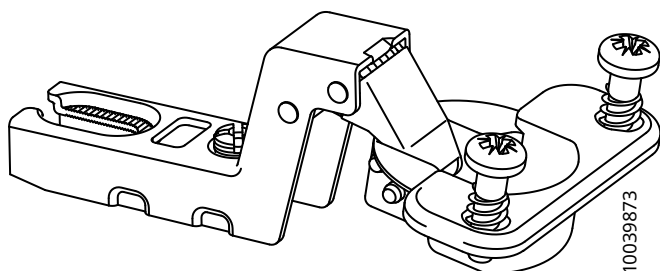


10039873

 9x

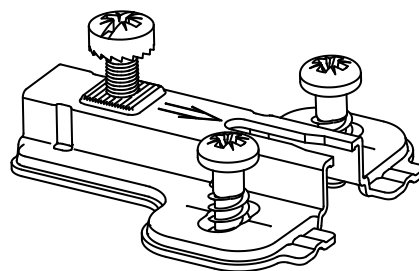

10039878

 
9x

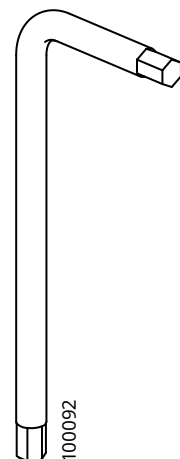

100092

1x

 2




145718

8x



192800

 8x

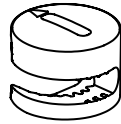

131361

8x



146113

2x



 
105811

12x



146114


24x



151706

151708

 
12x



151705

151707

 
12x

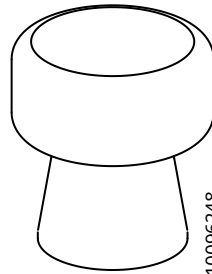

10096248


10095978

 7x

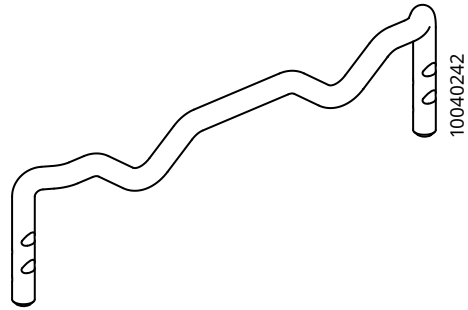



10040242

 2x

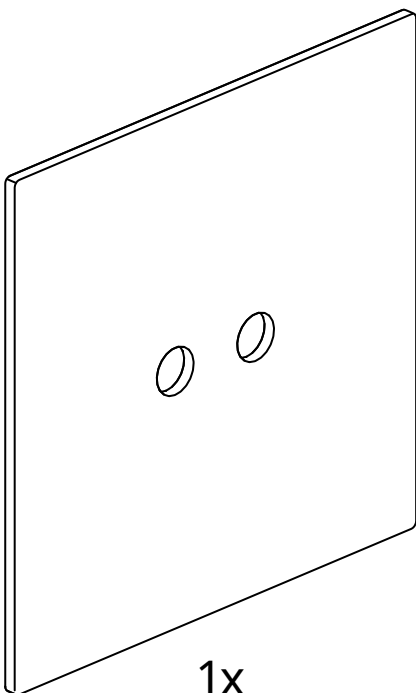


10122413

  
1x

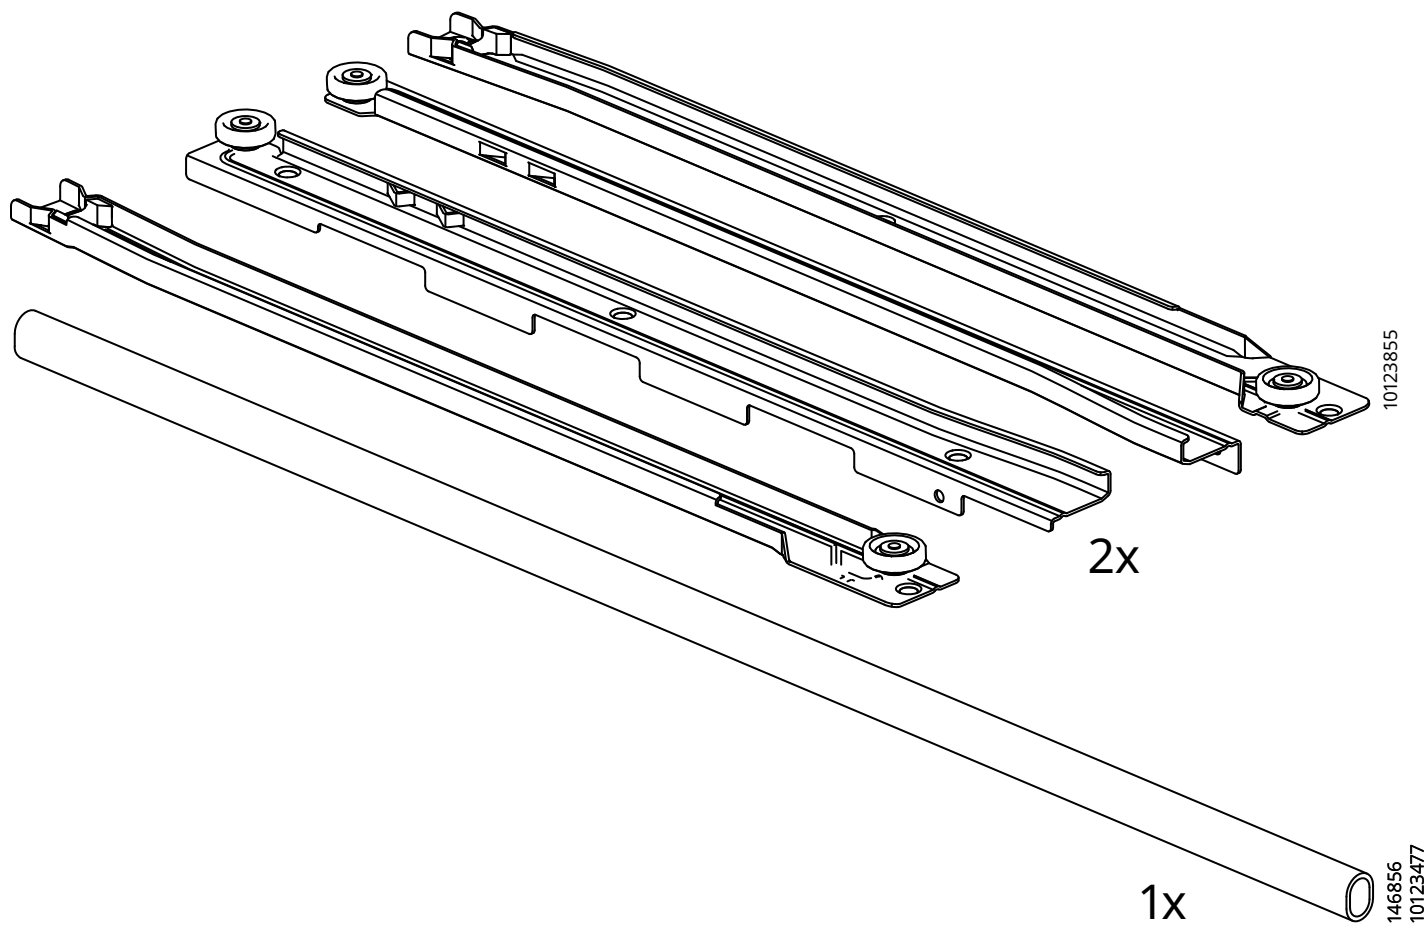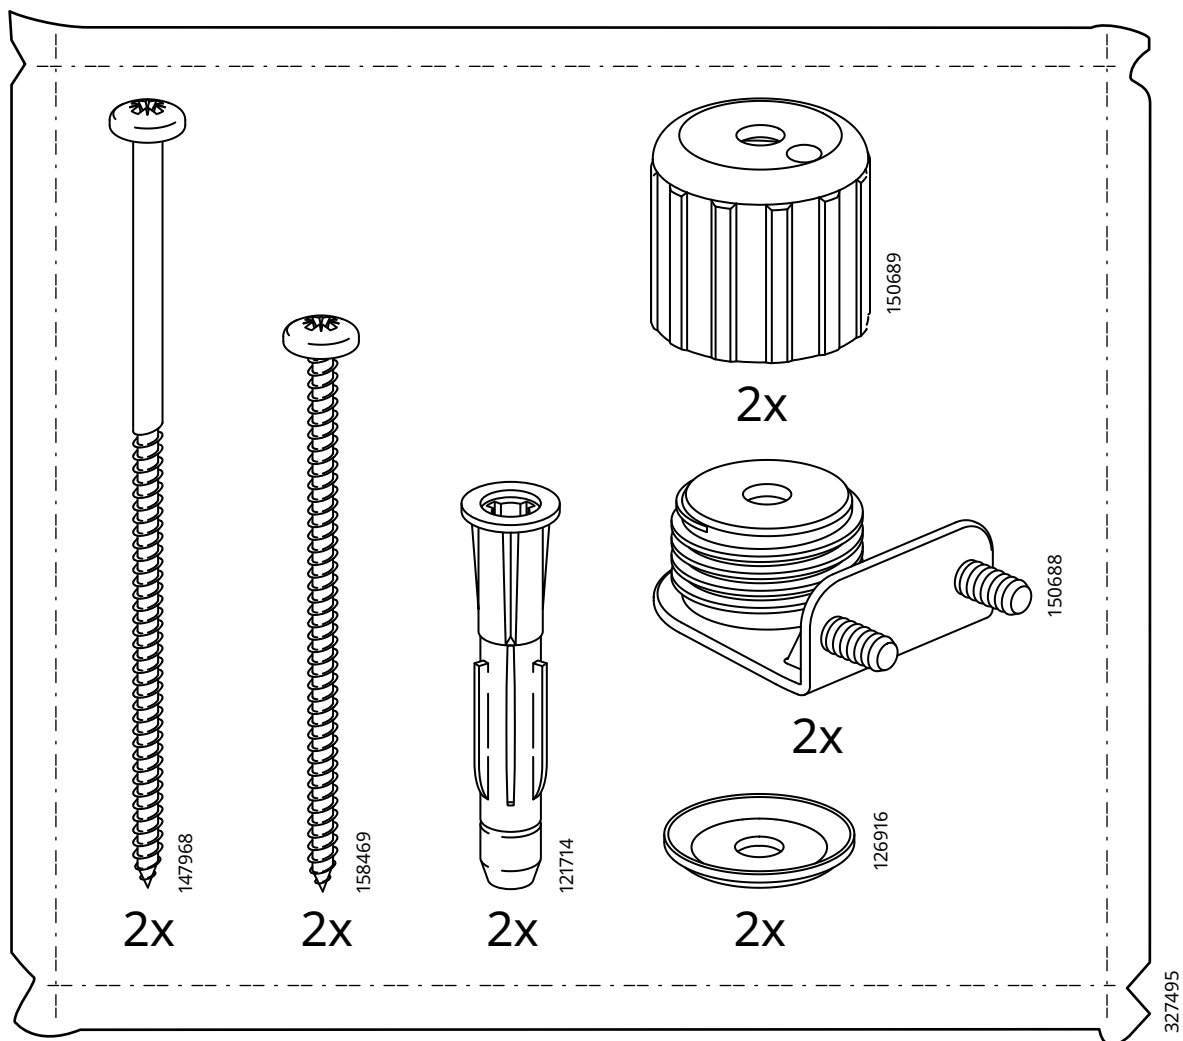





1

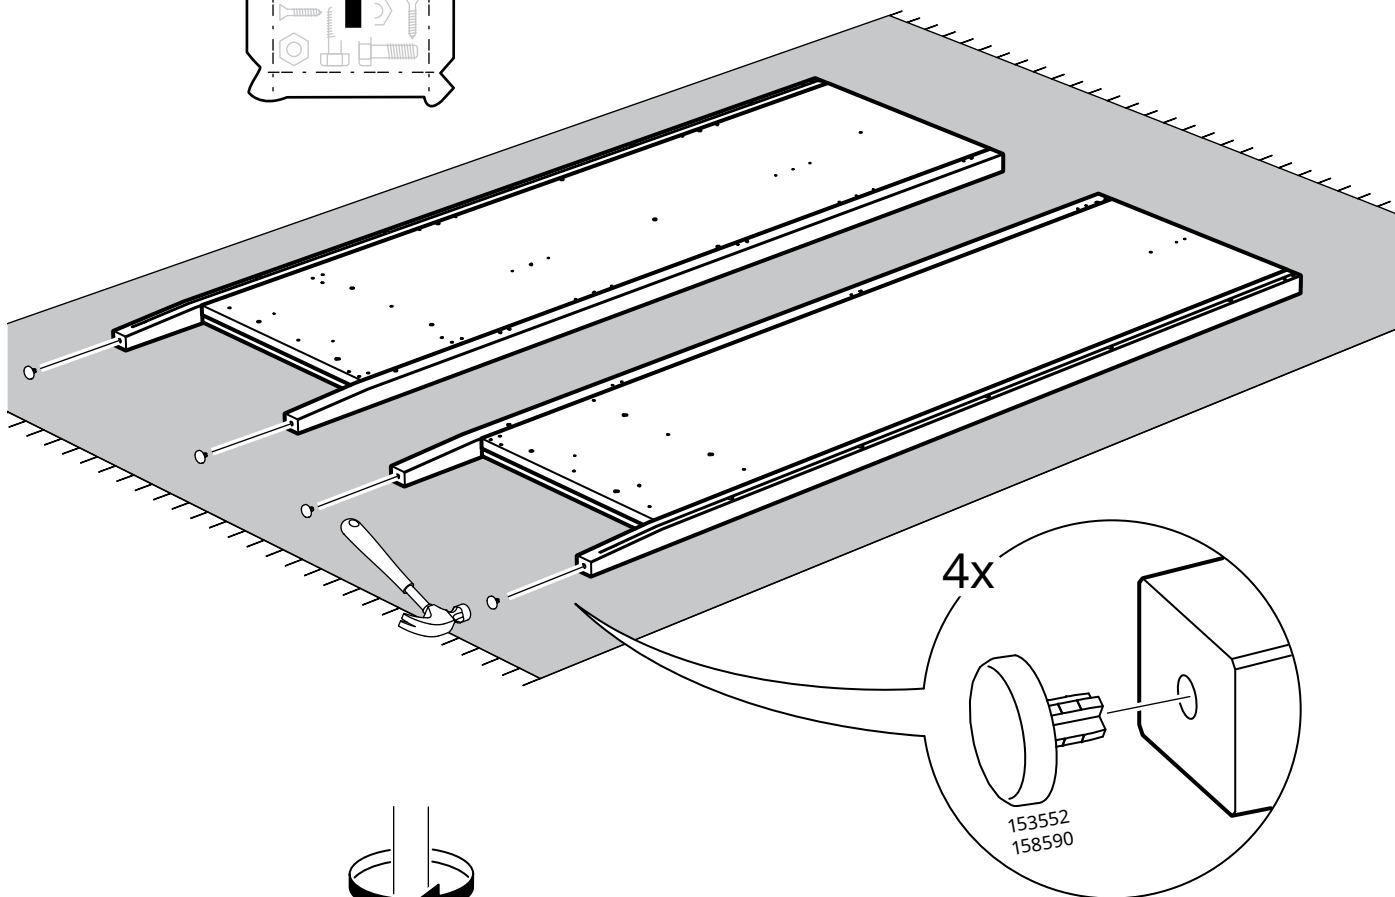 


2

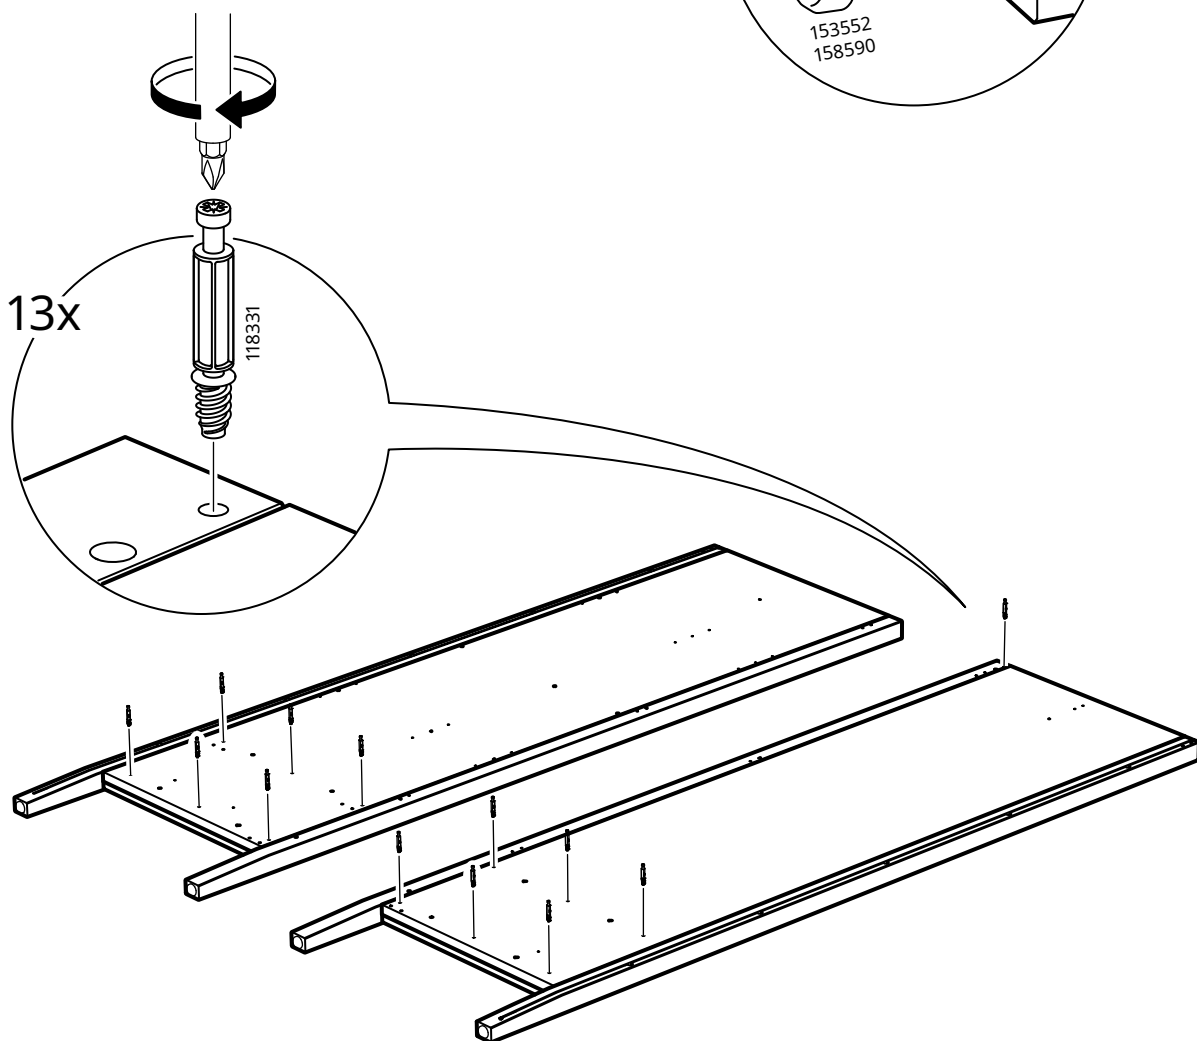 


3

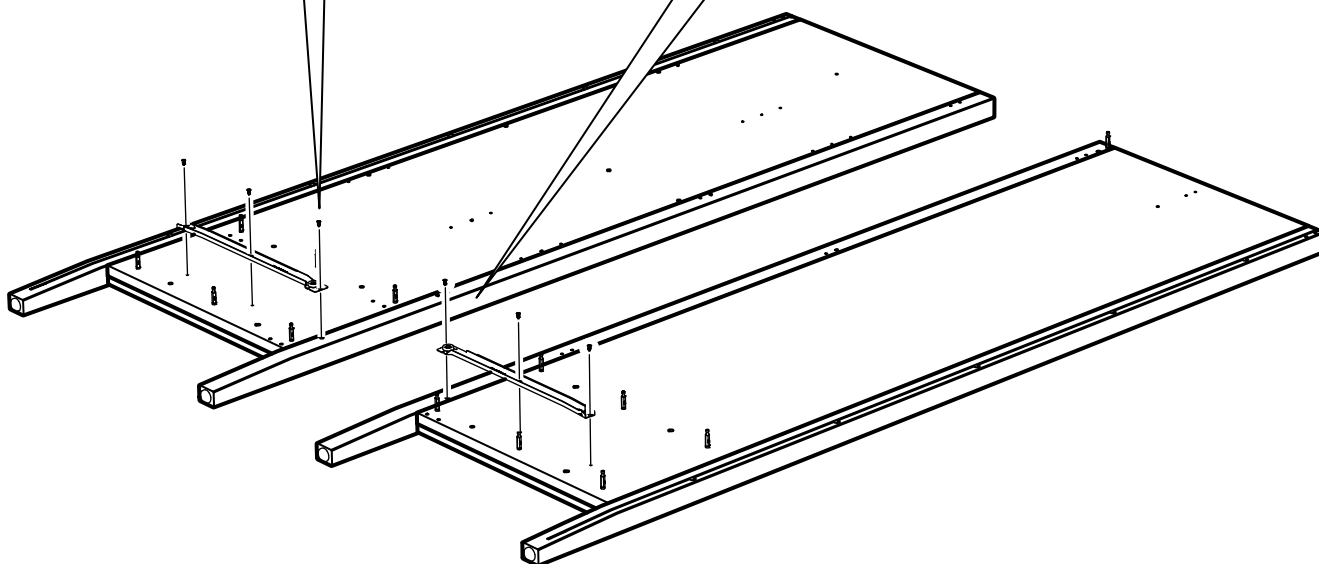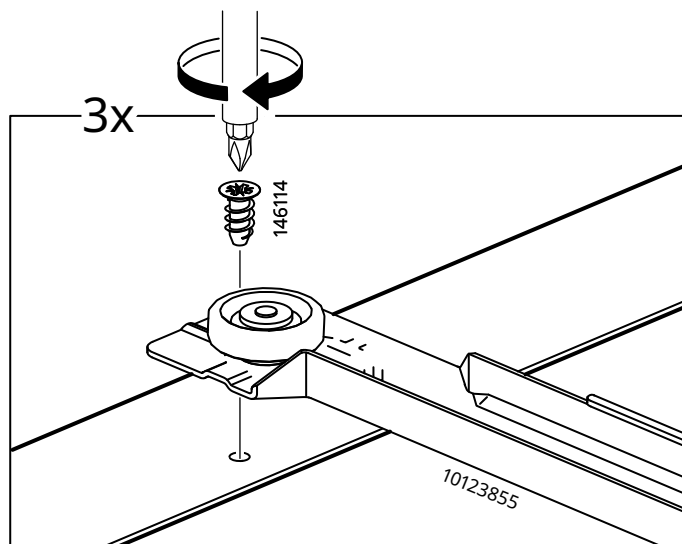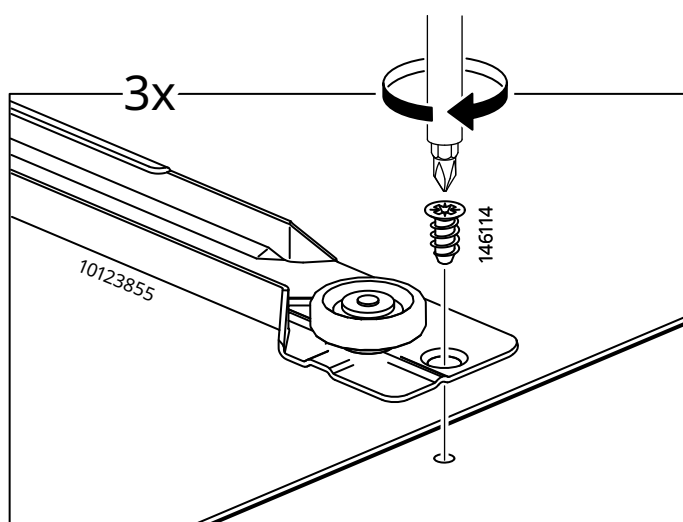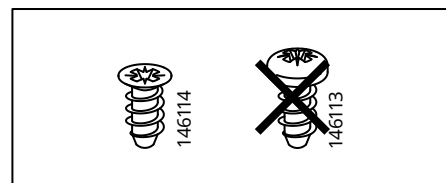    


4

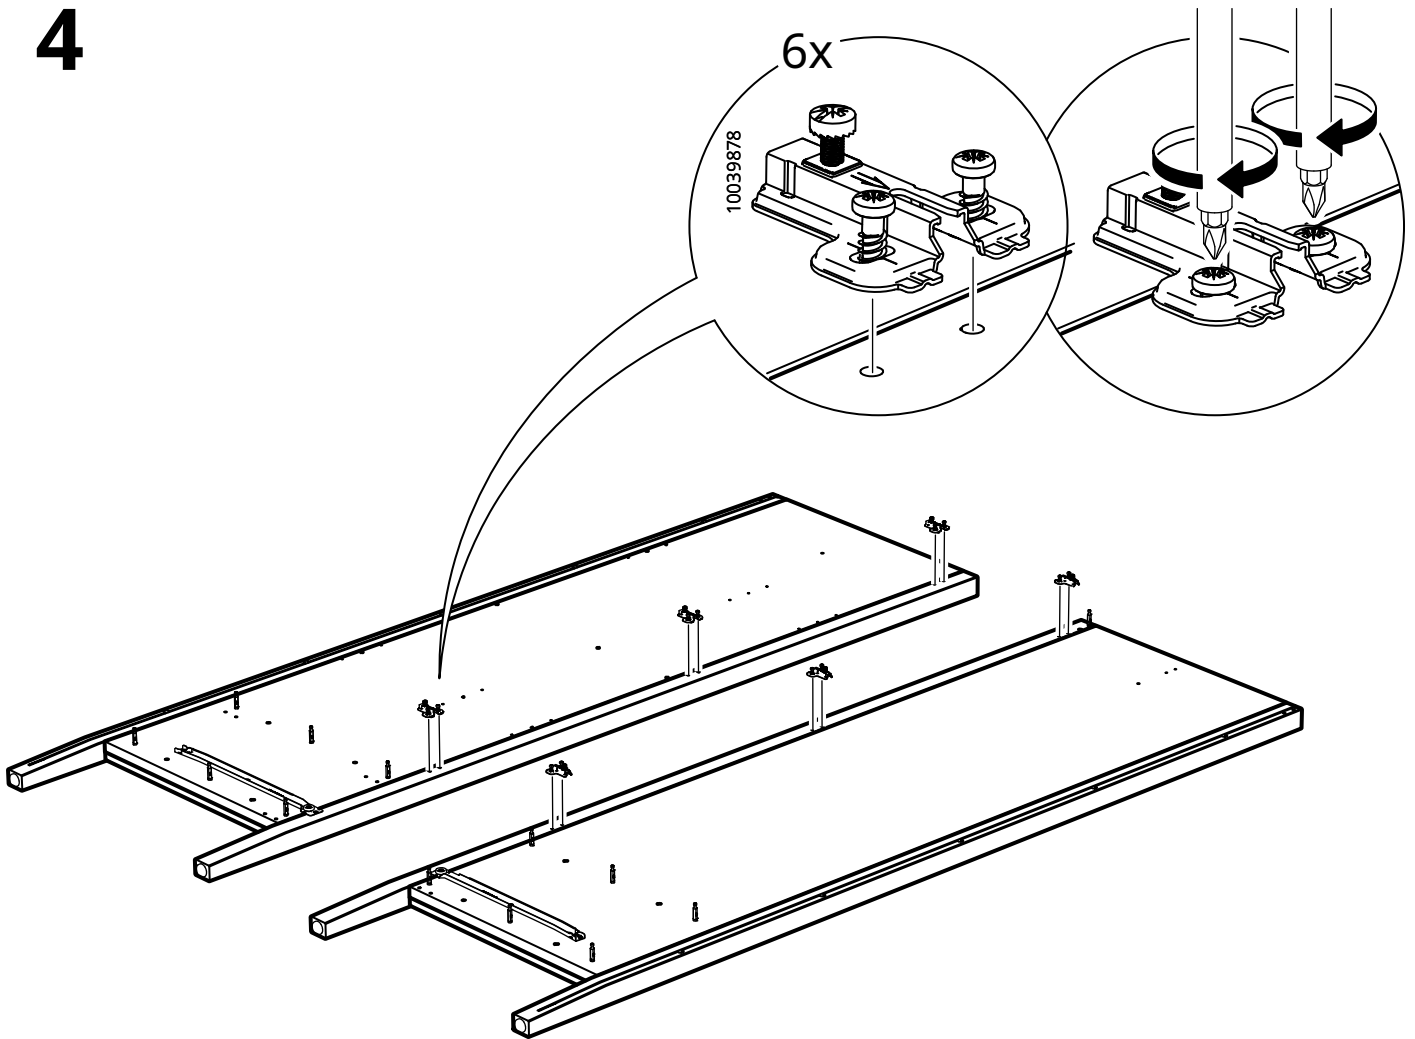 


5

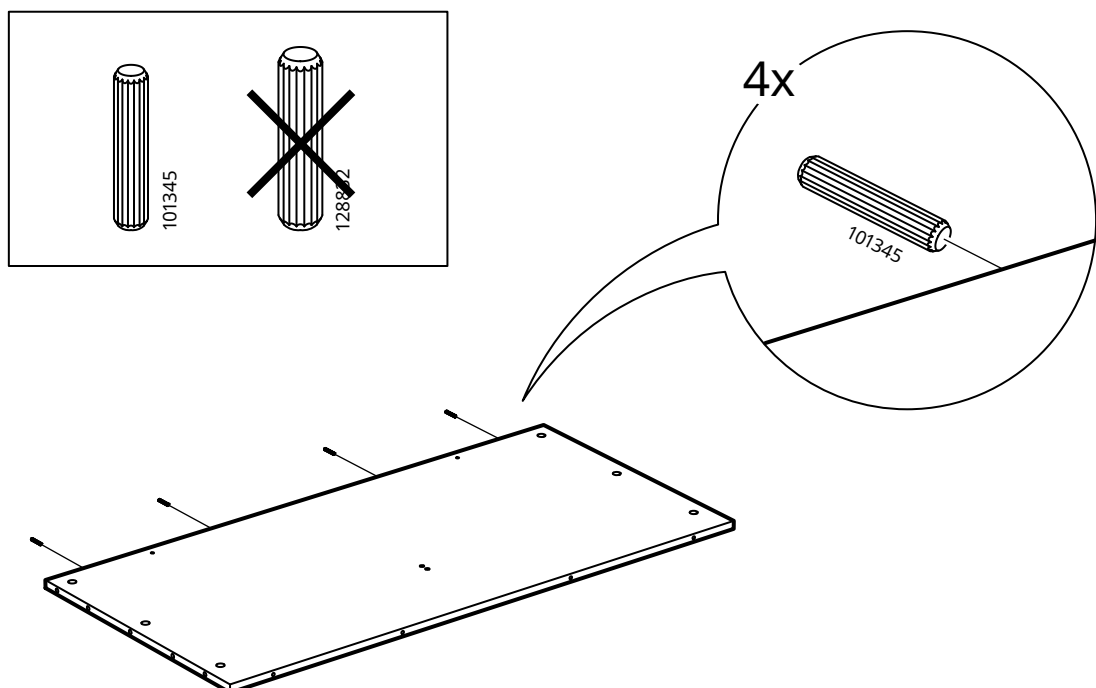 


6

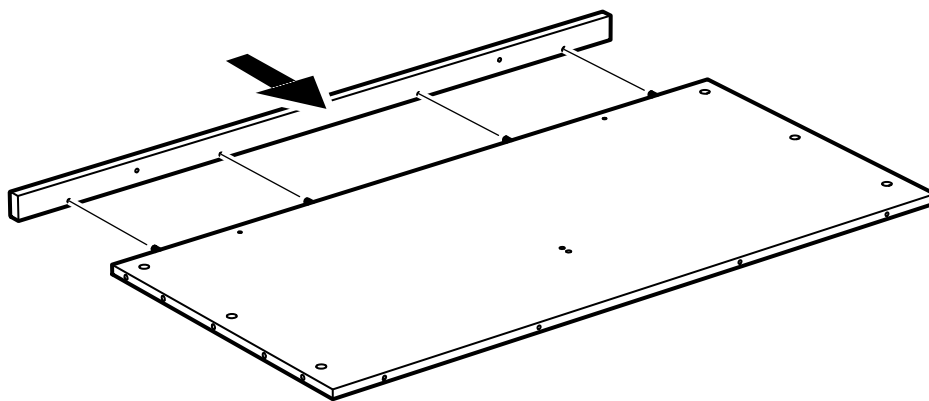 


7

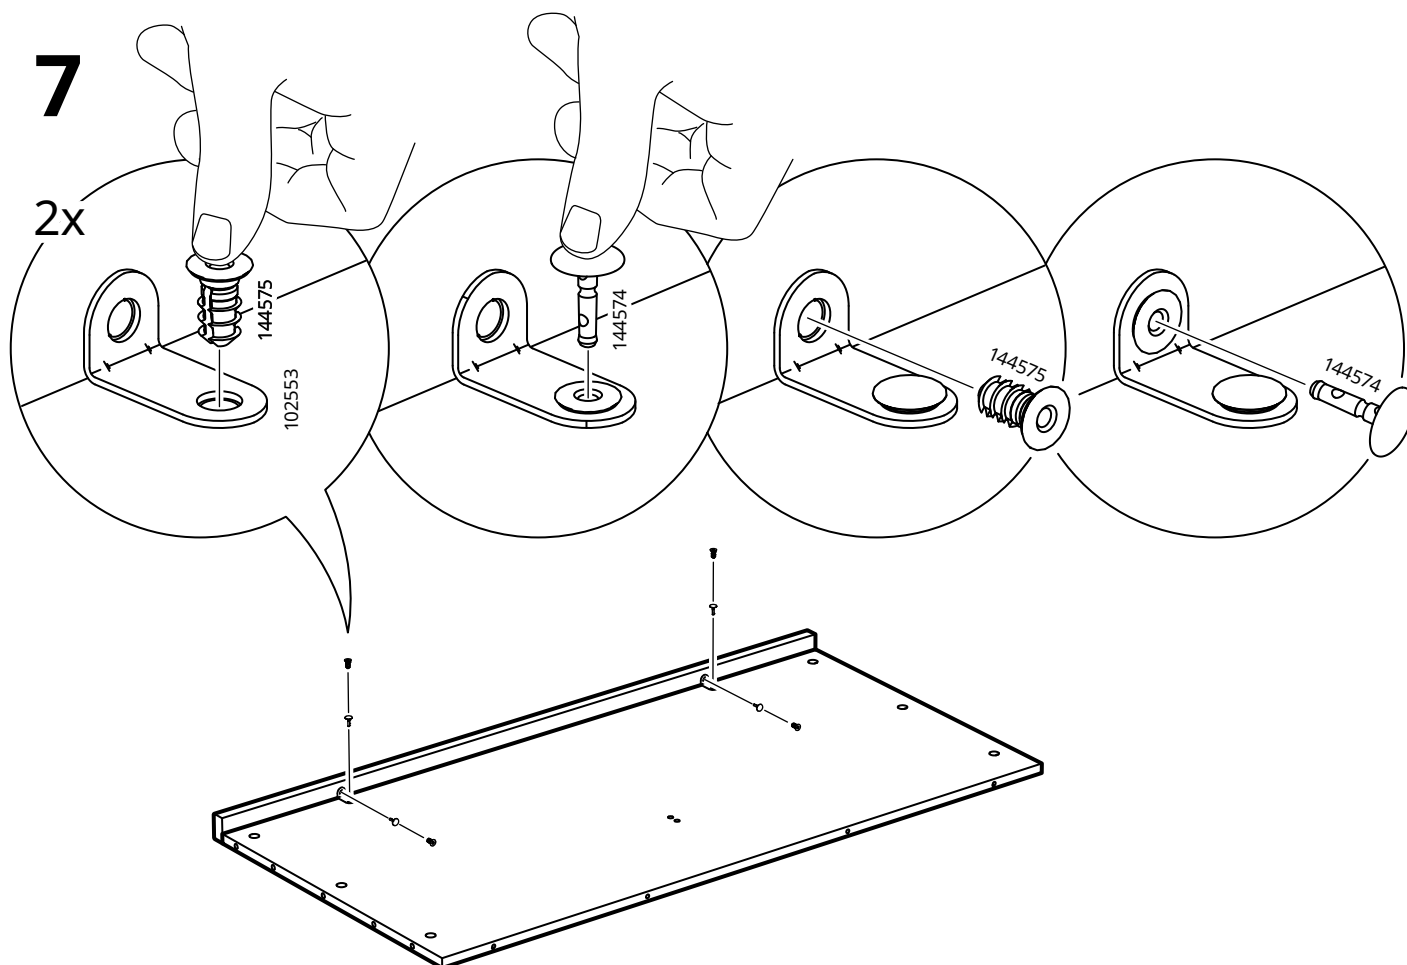 


8

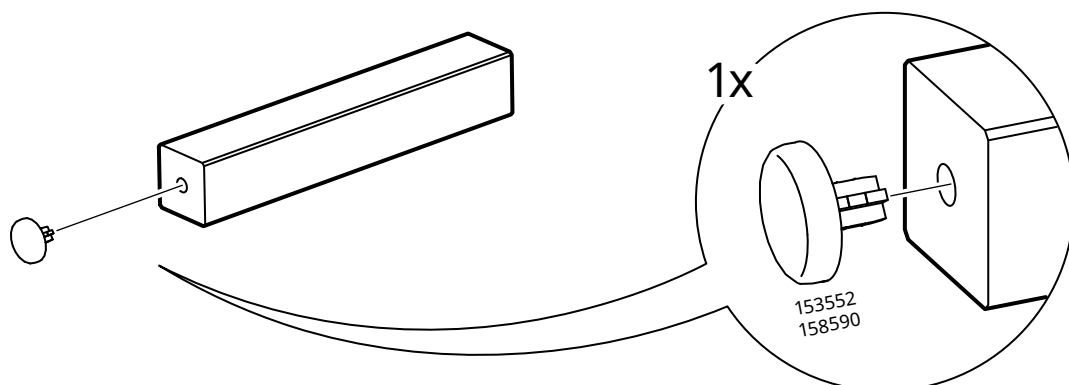 




9

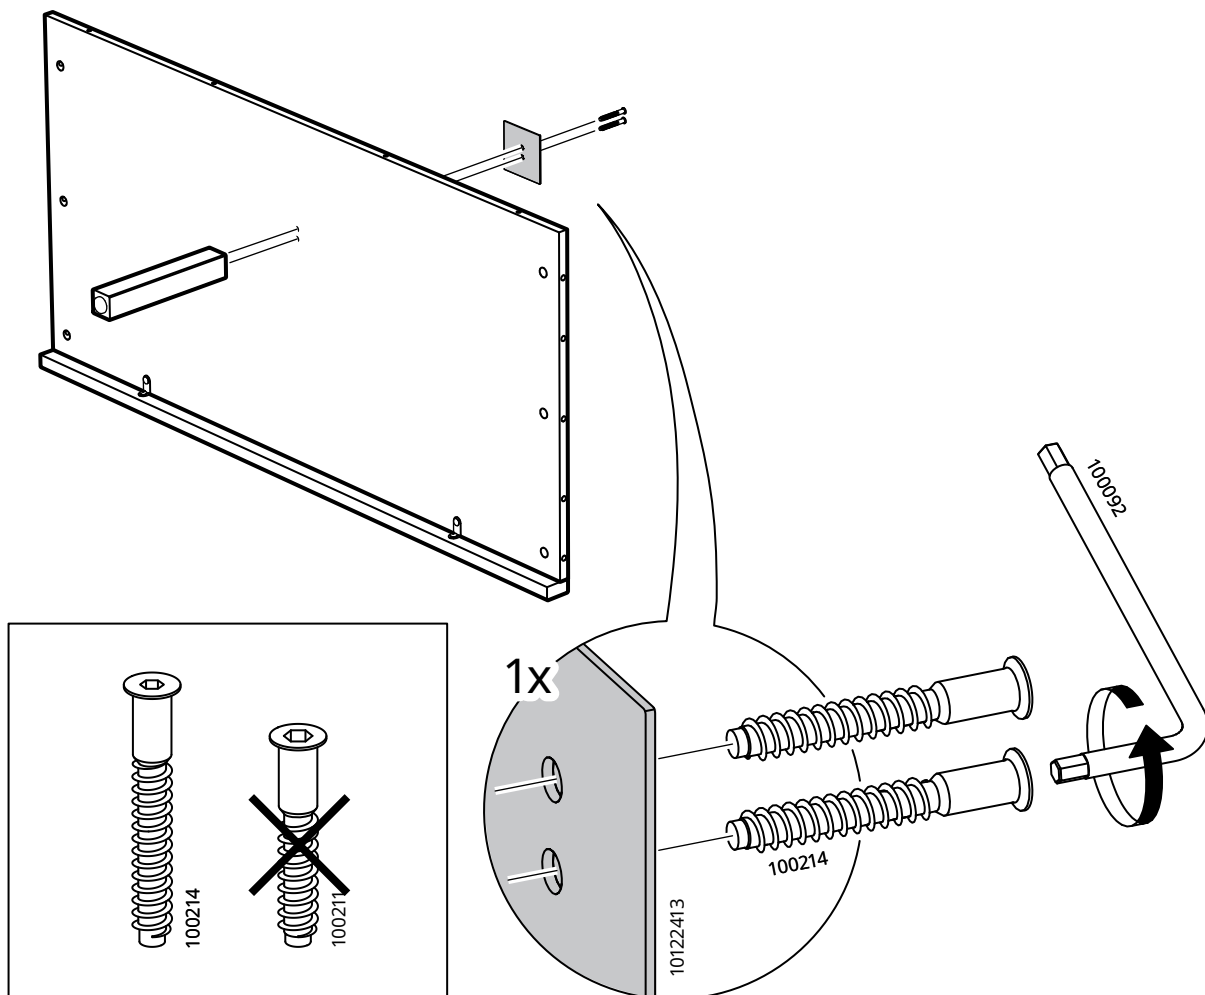 



10

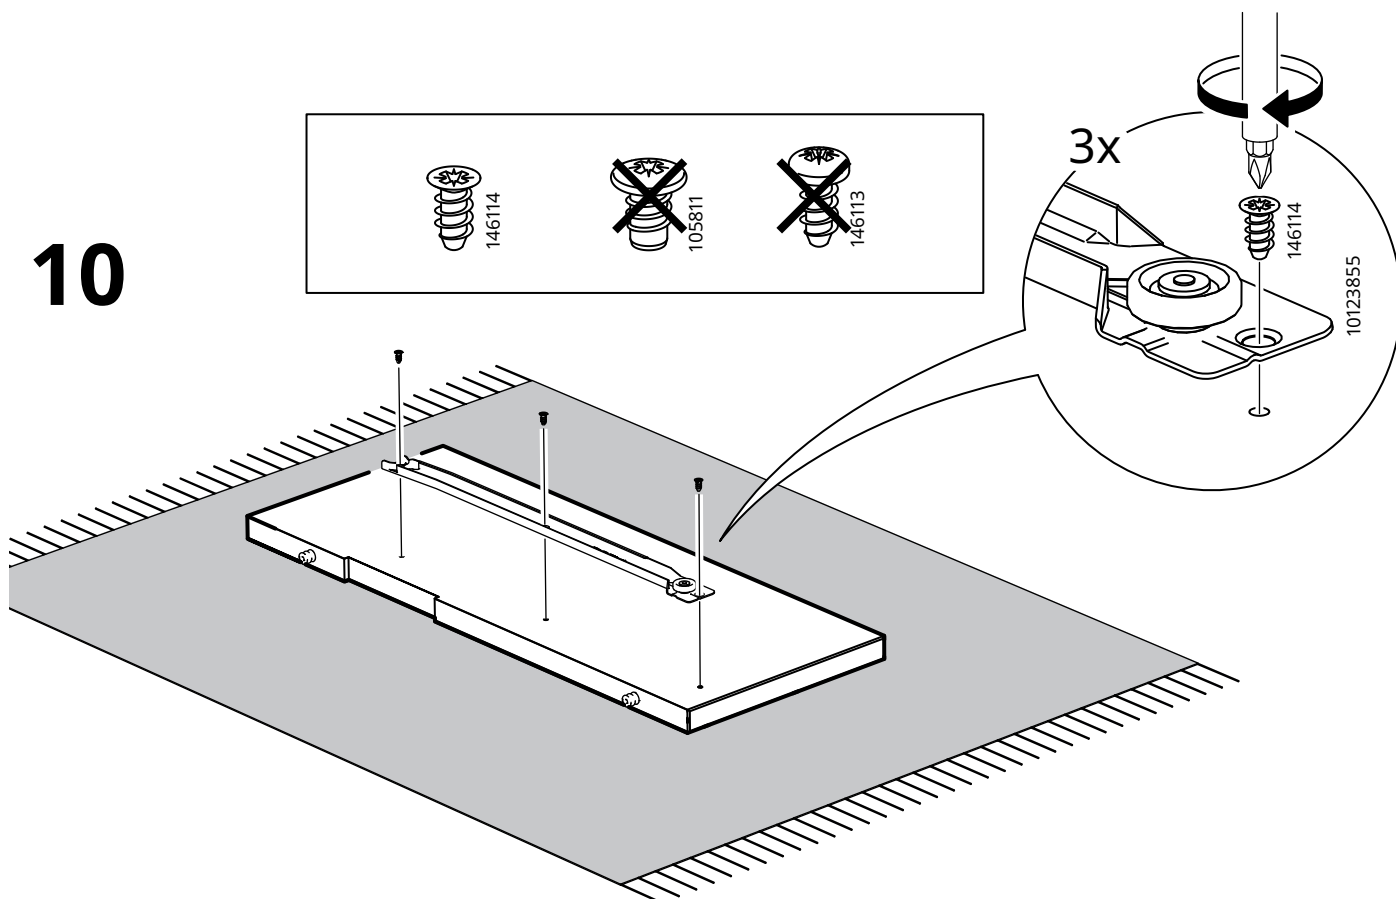 


11

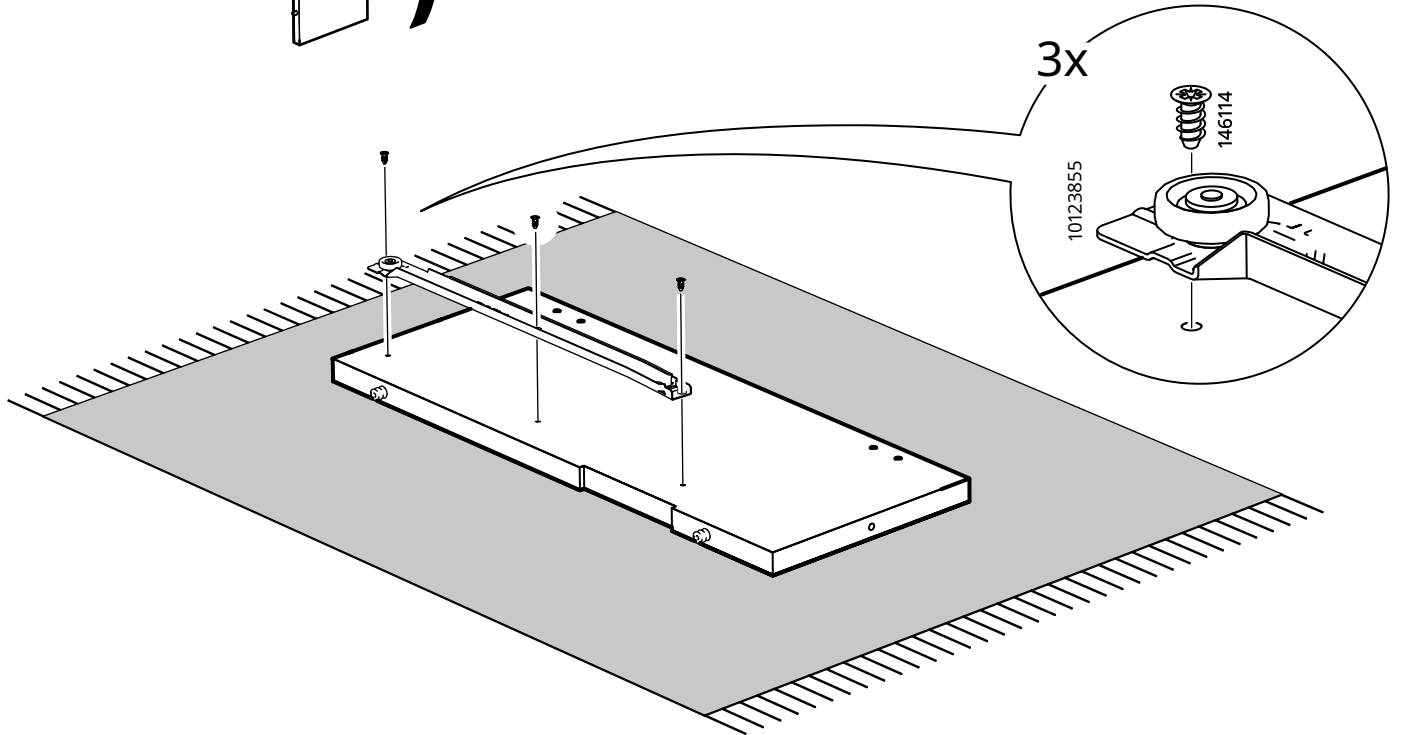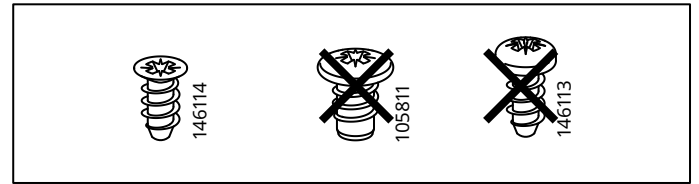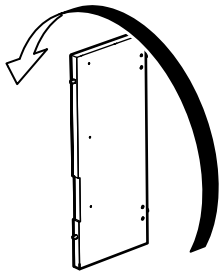   


12

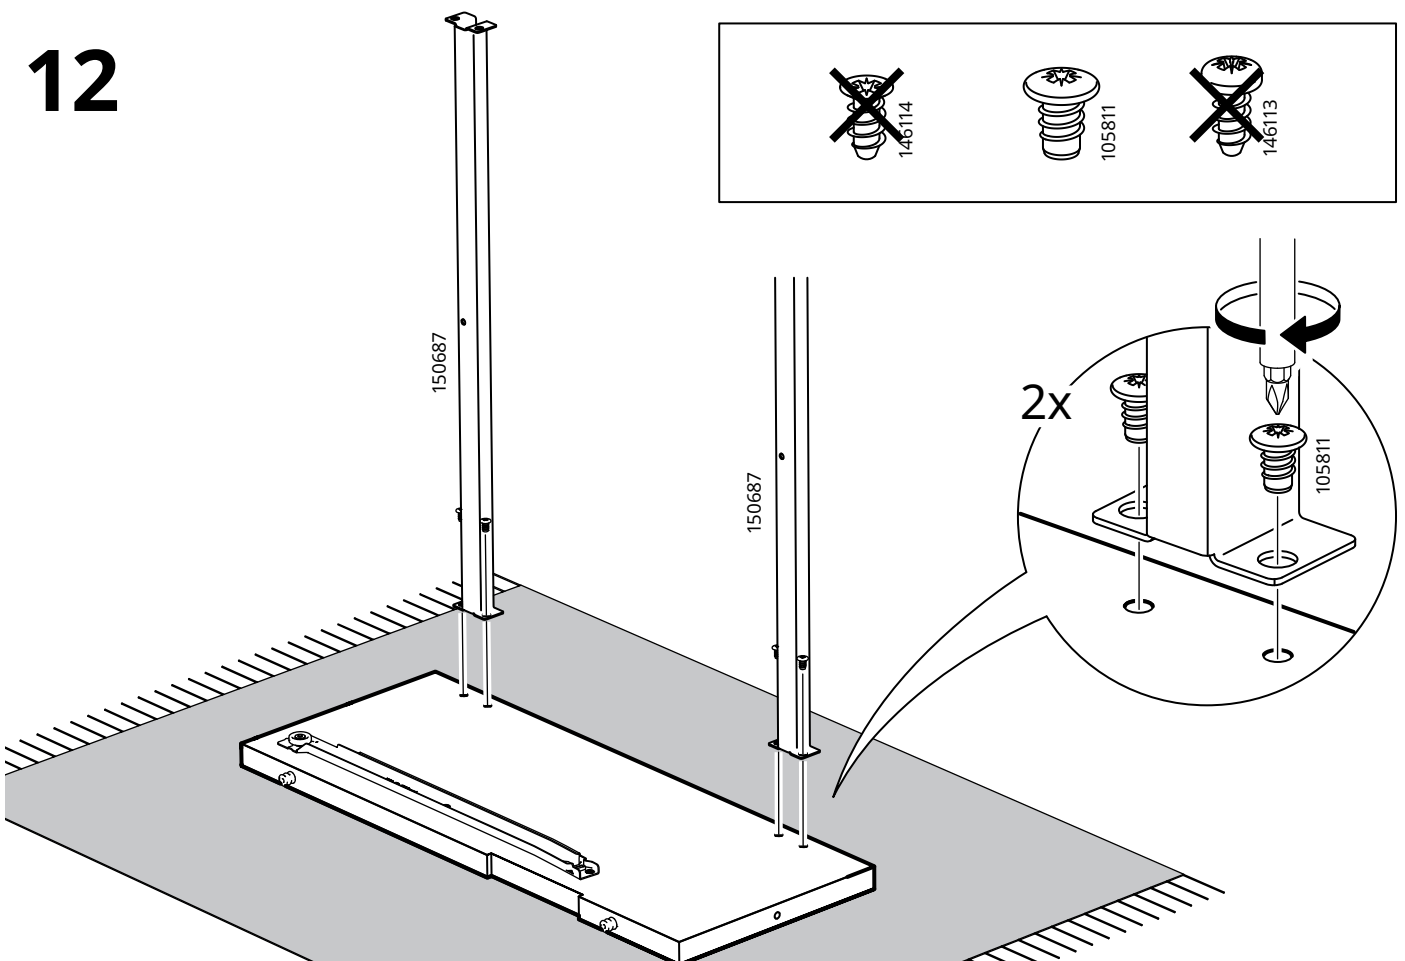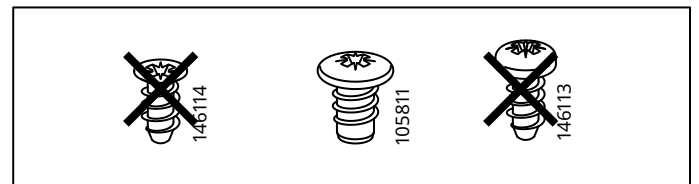  


13

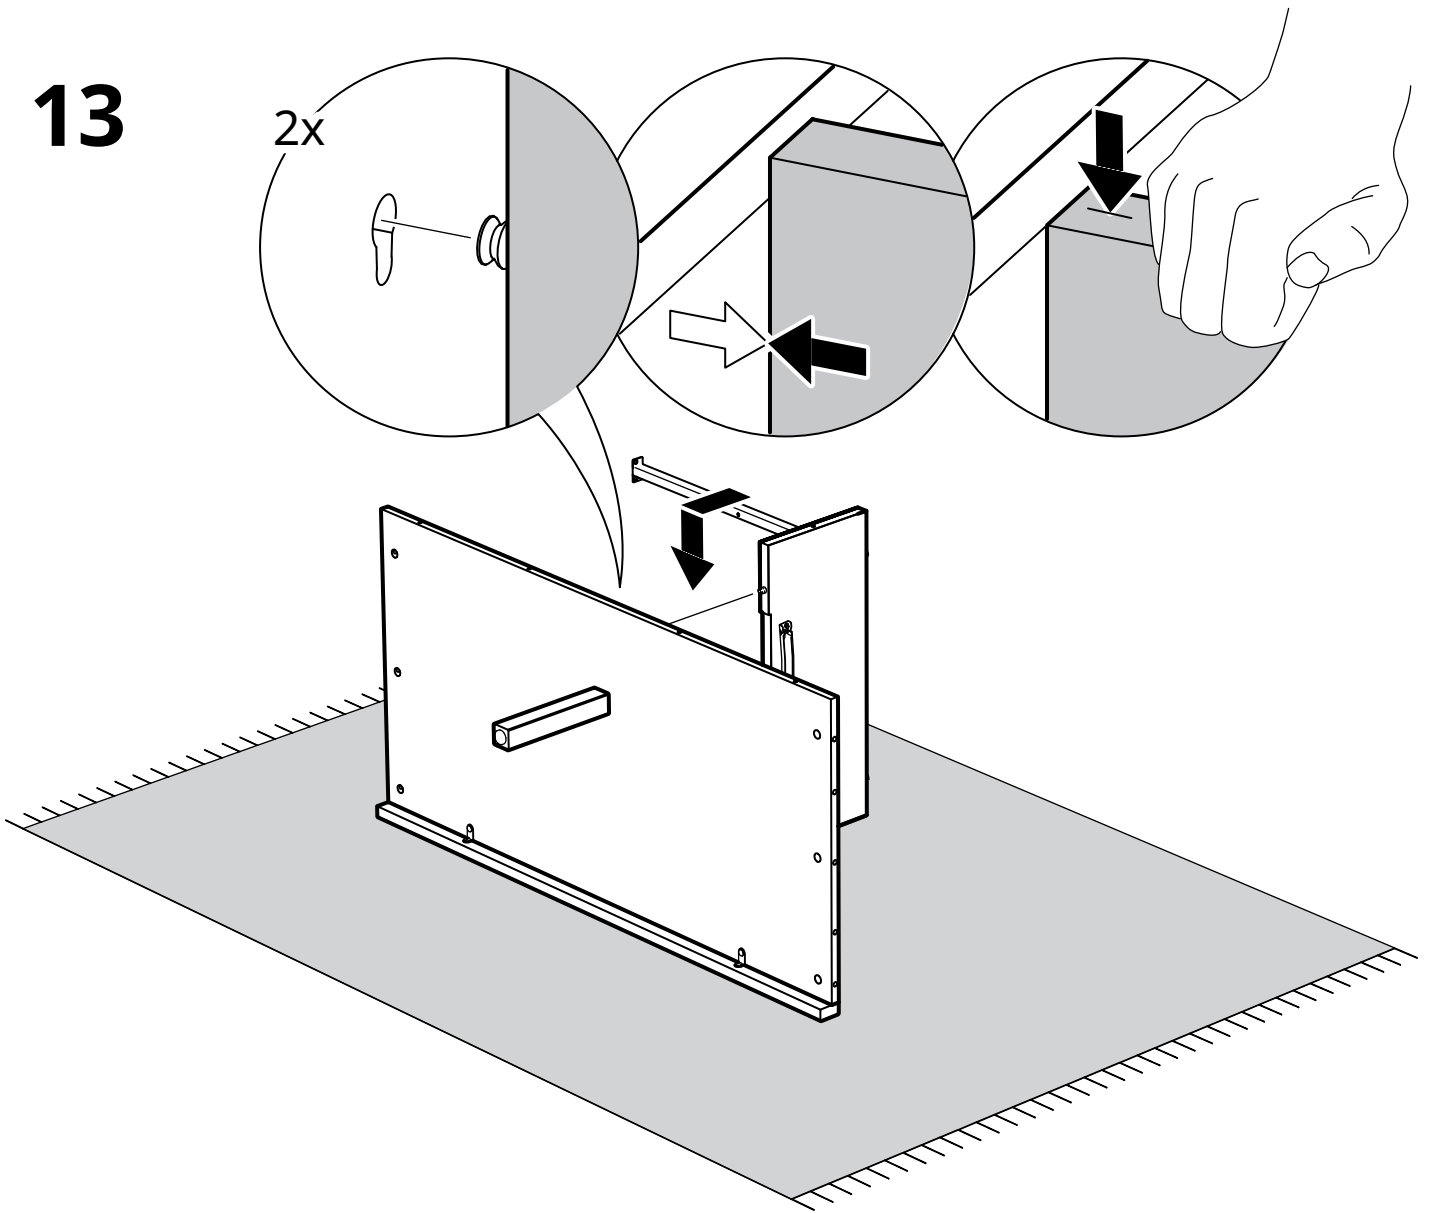 


14

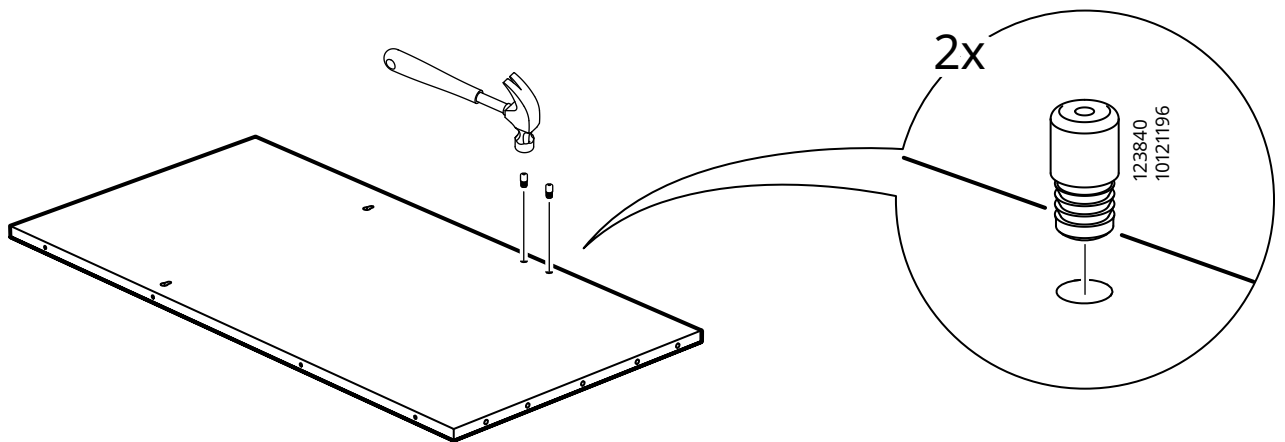 


15

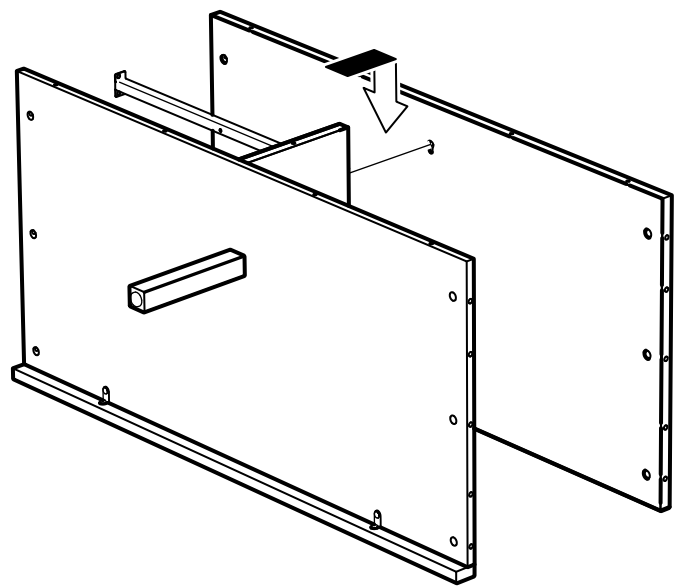 




16

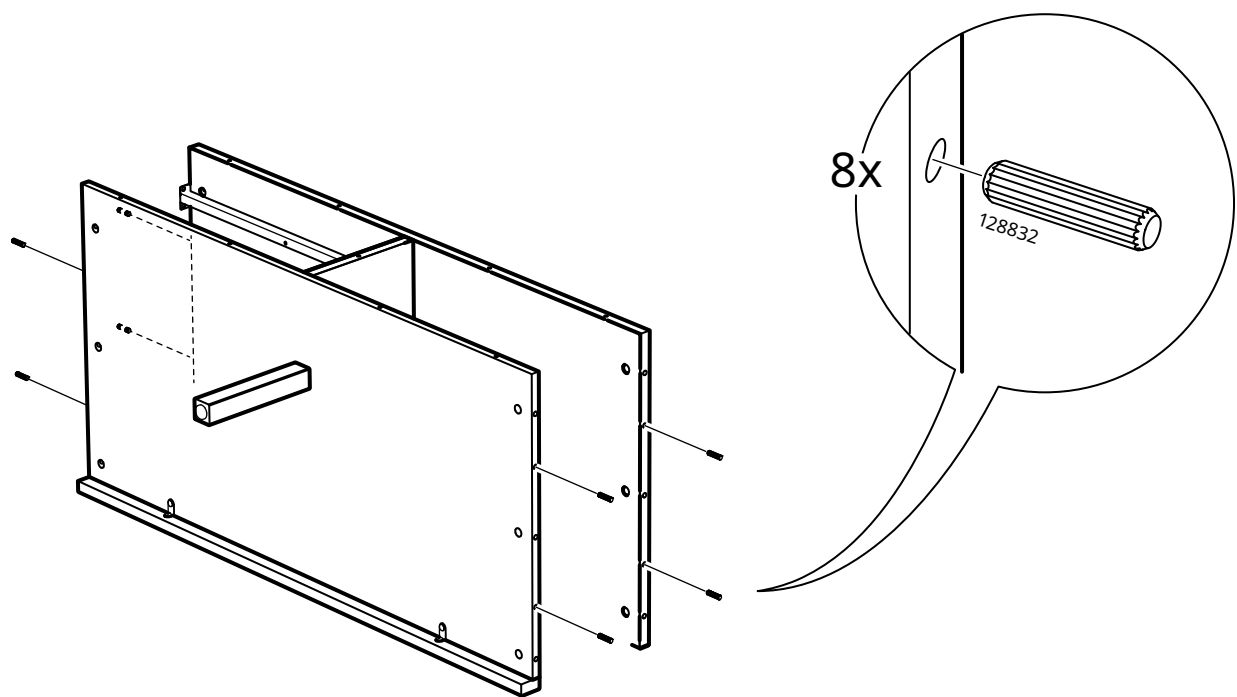 


17

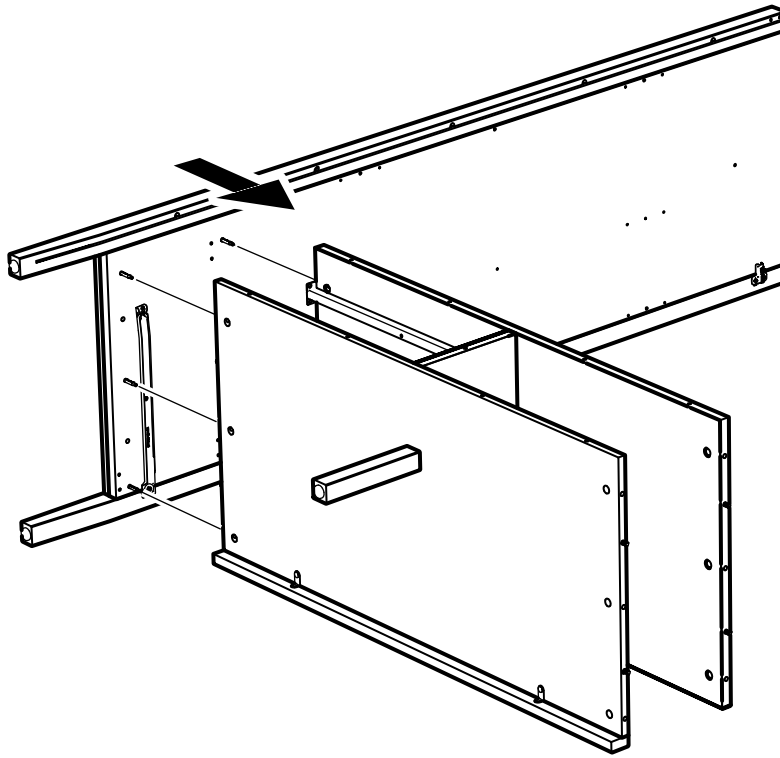 


18

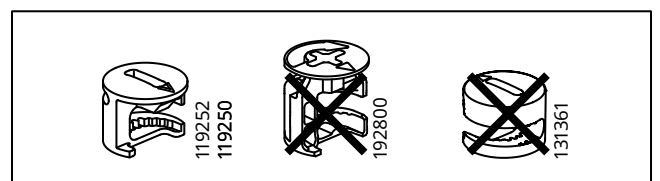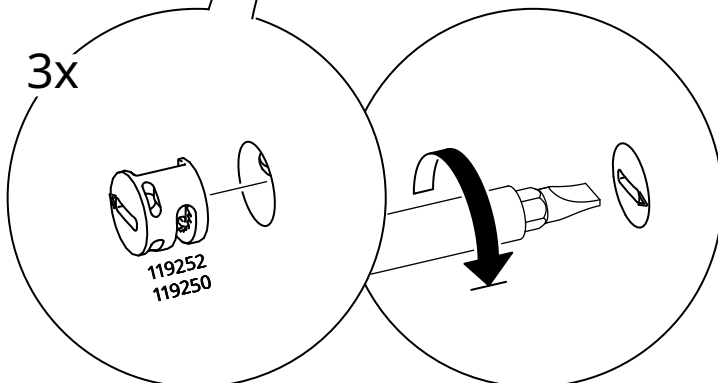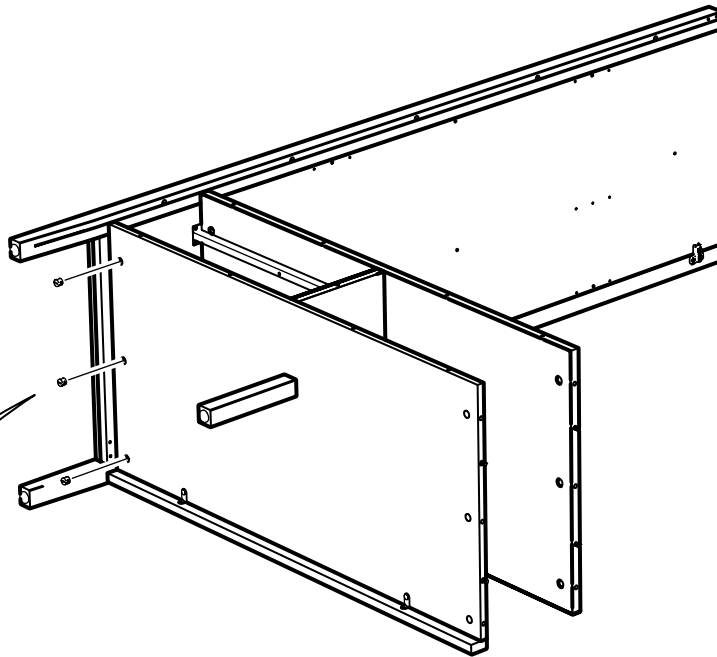   


19

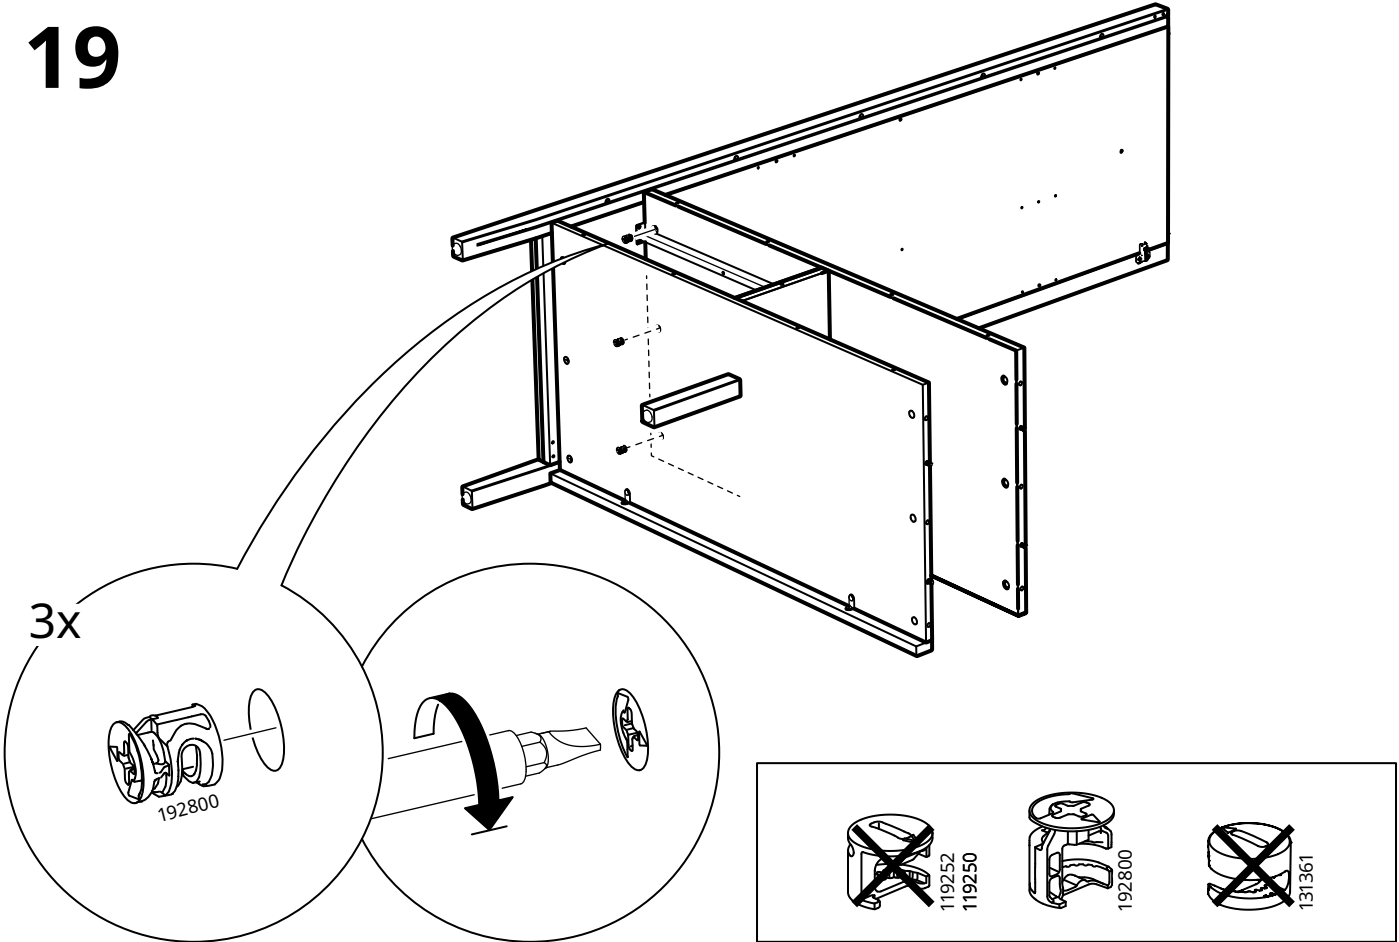 


20

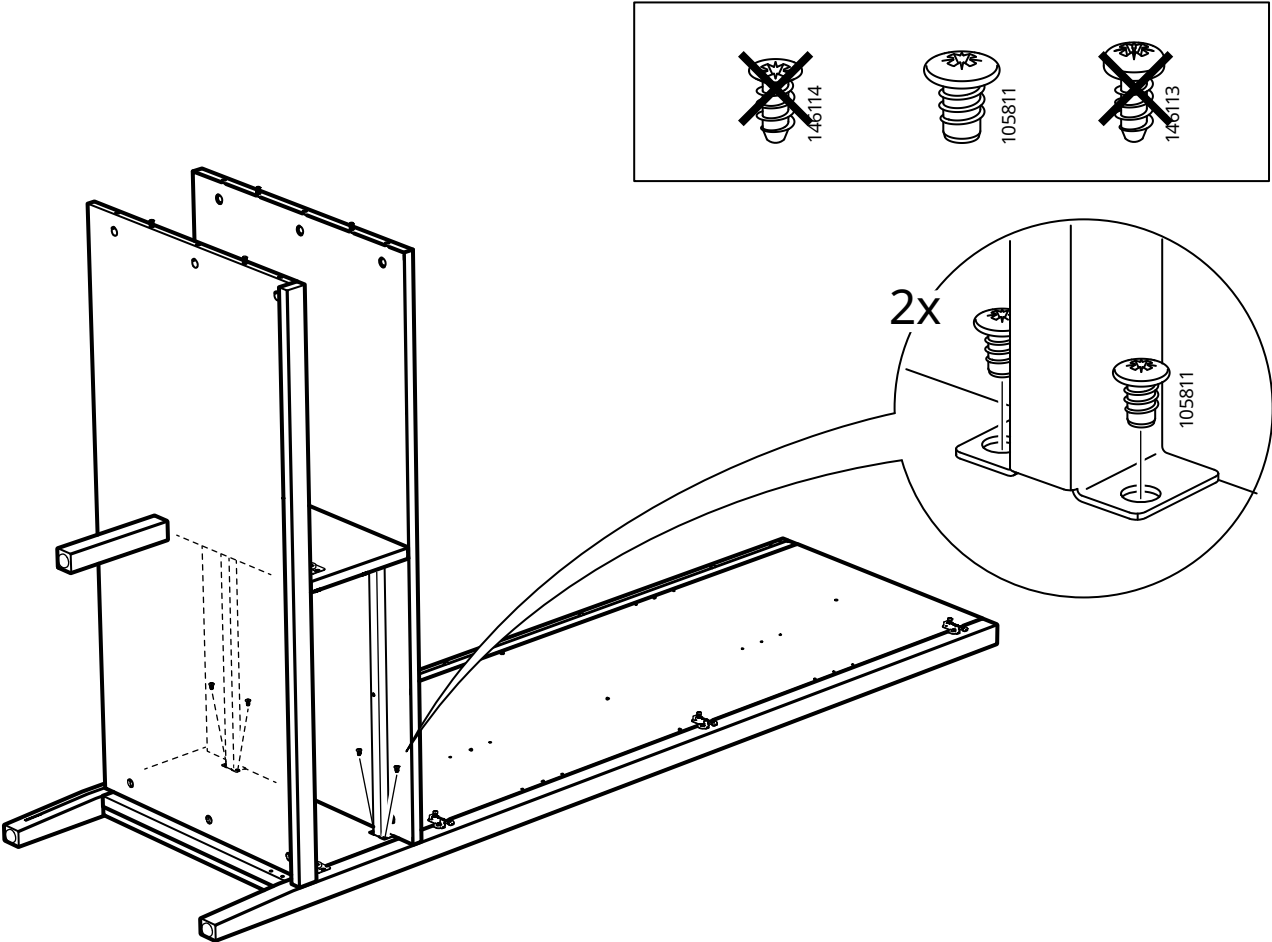 


21

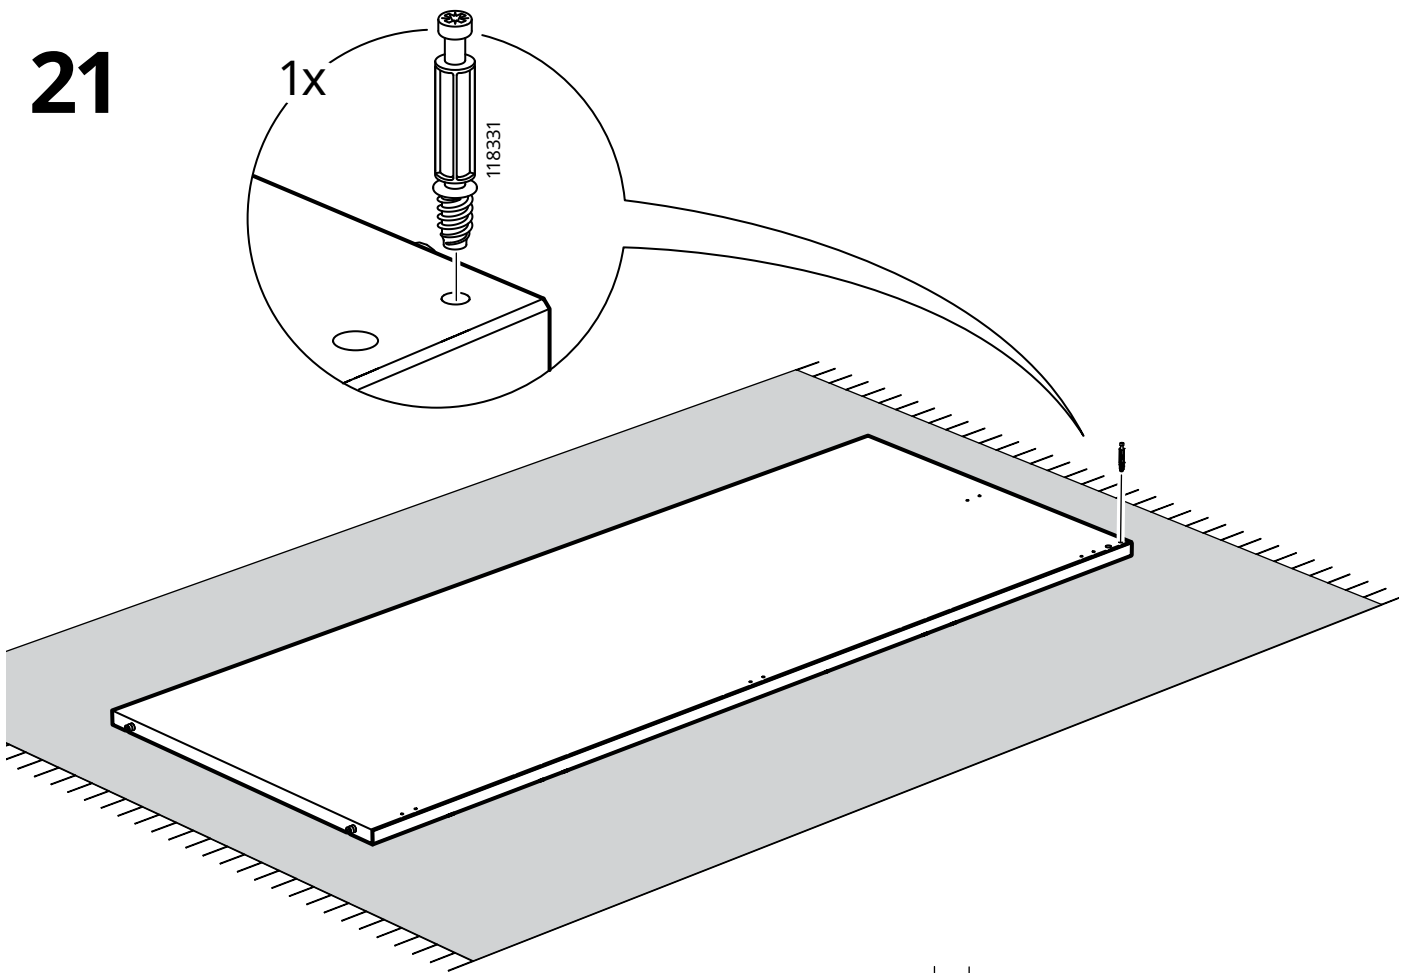 


22

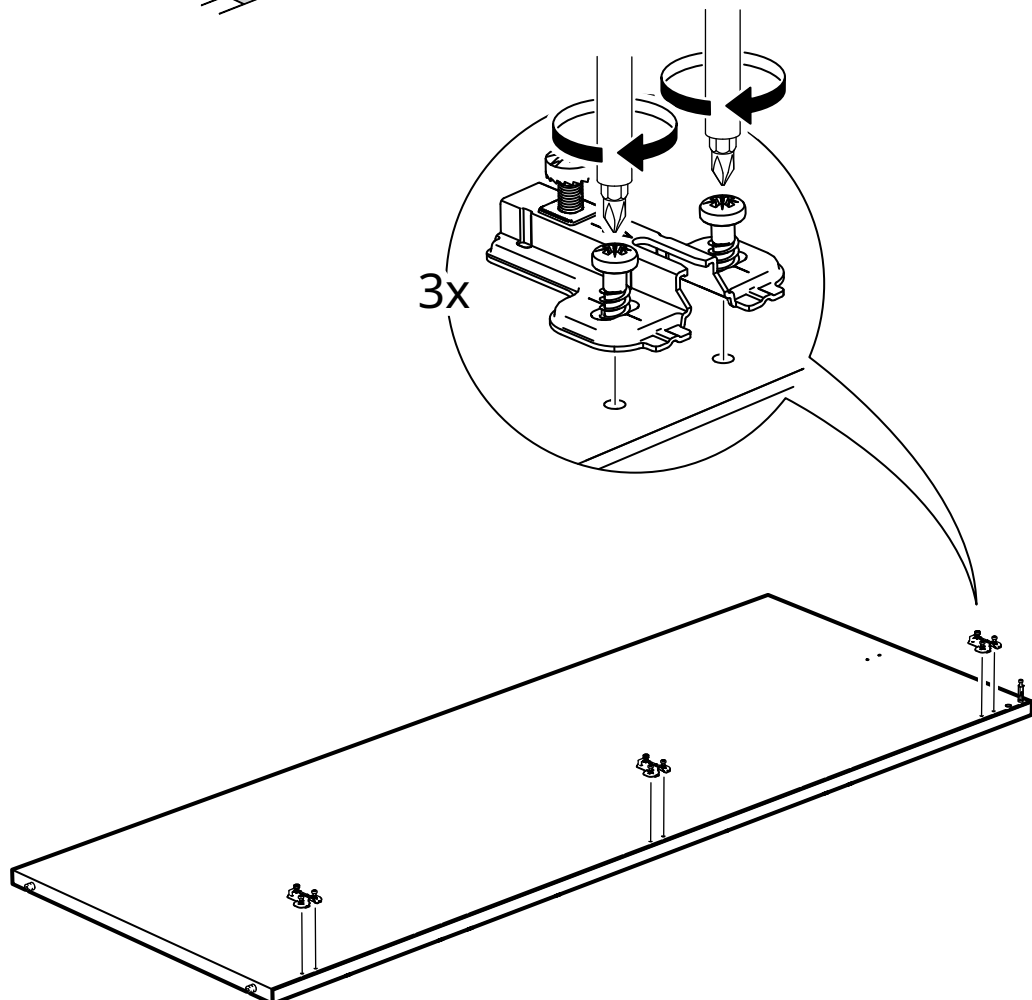 


23

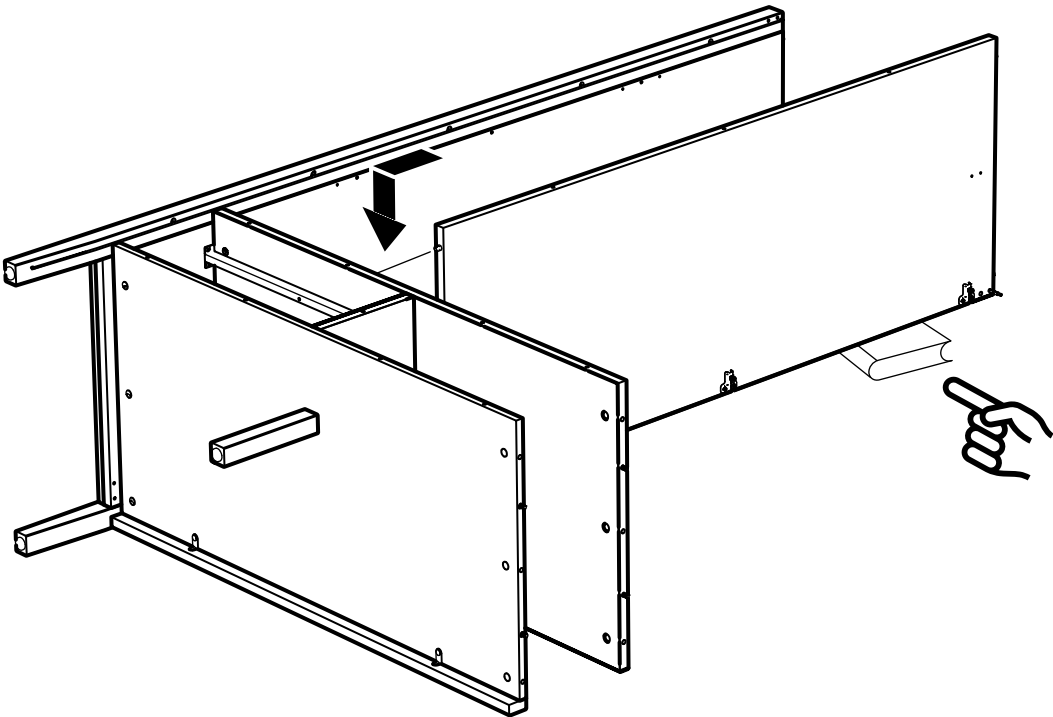 


24

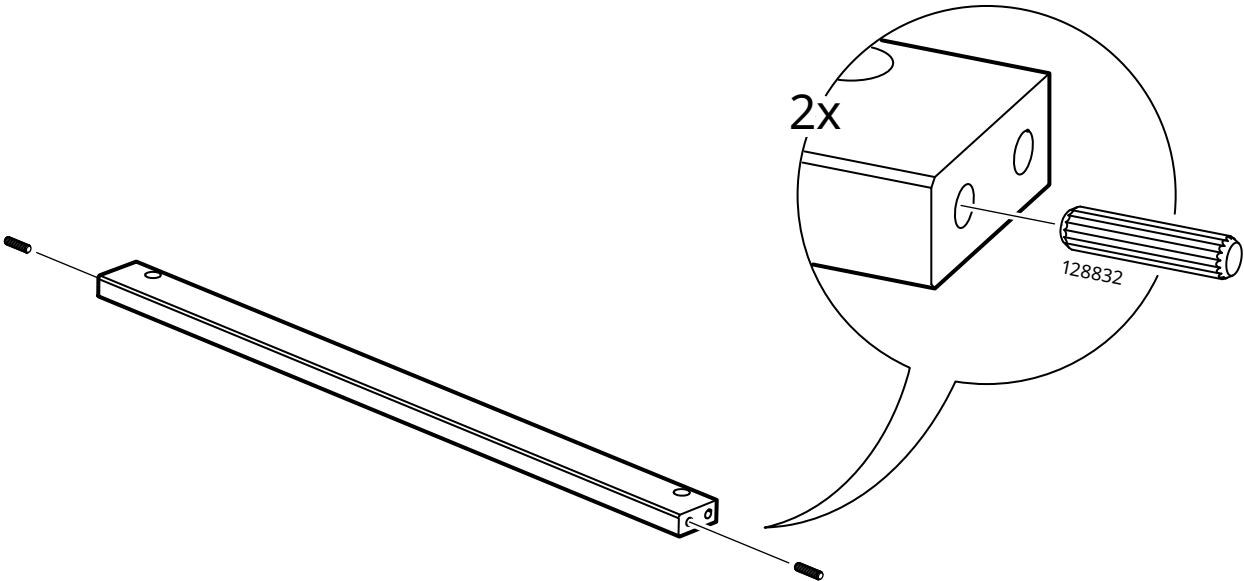 


25

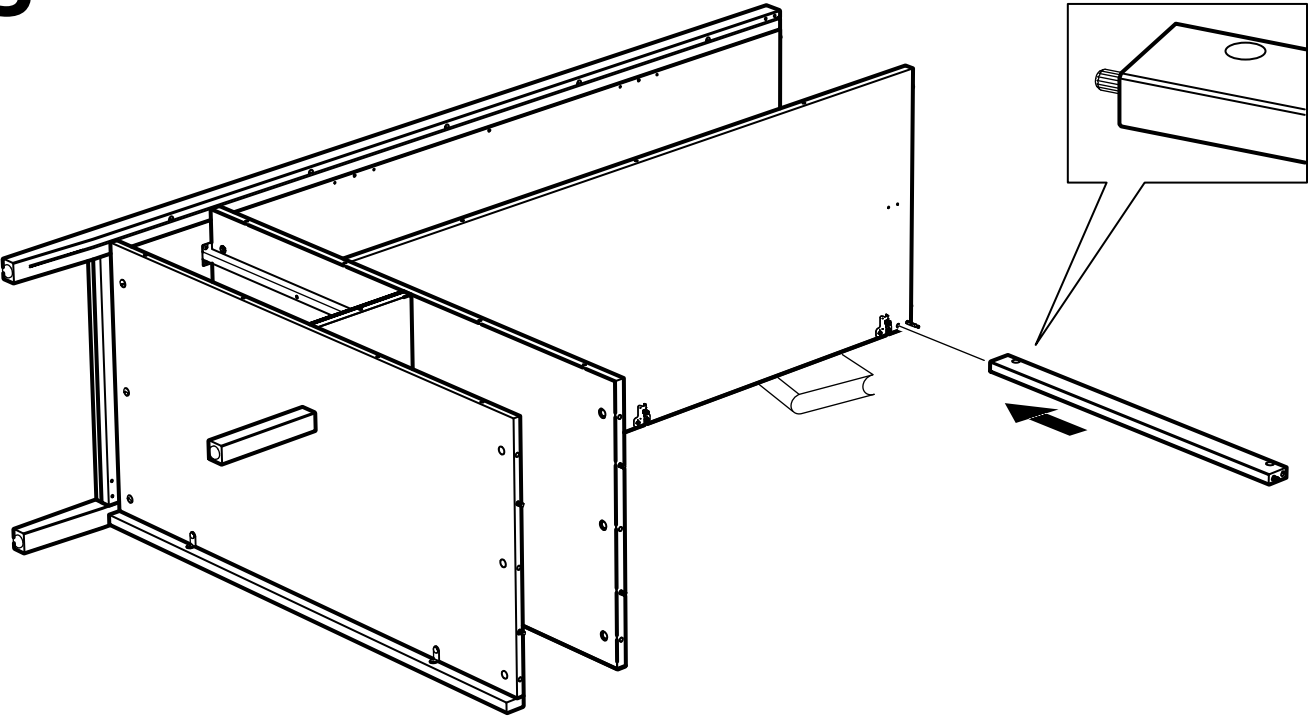 


26

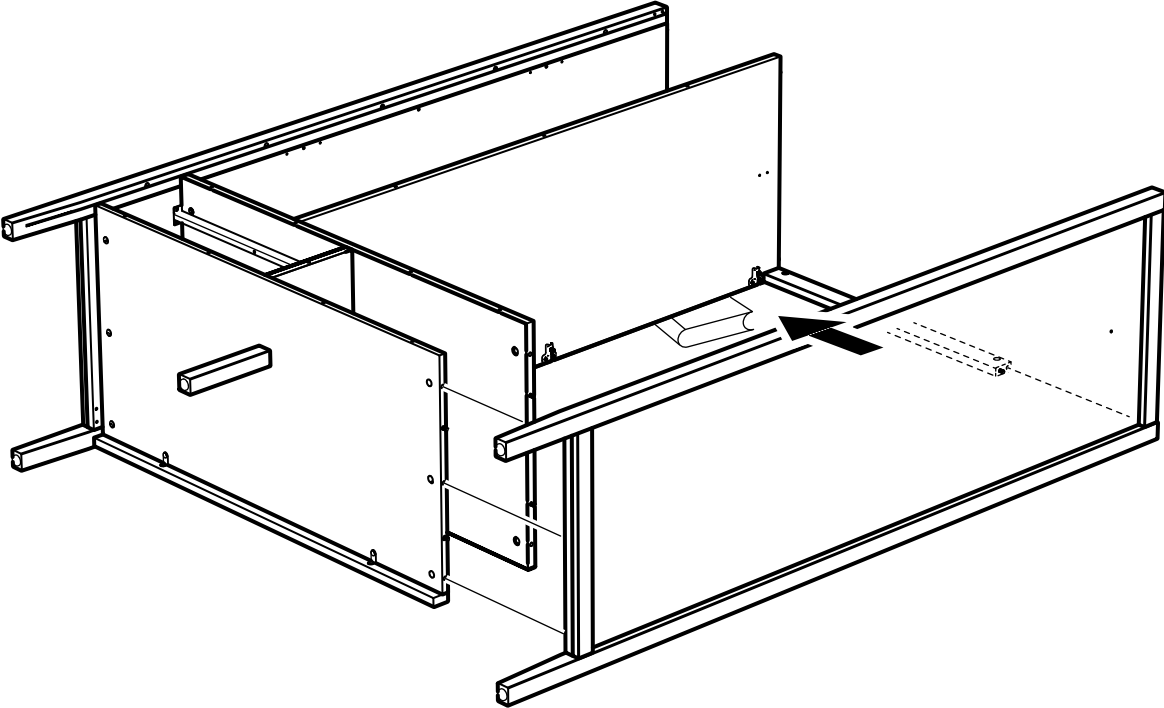 



27

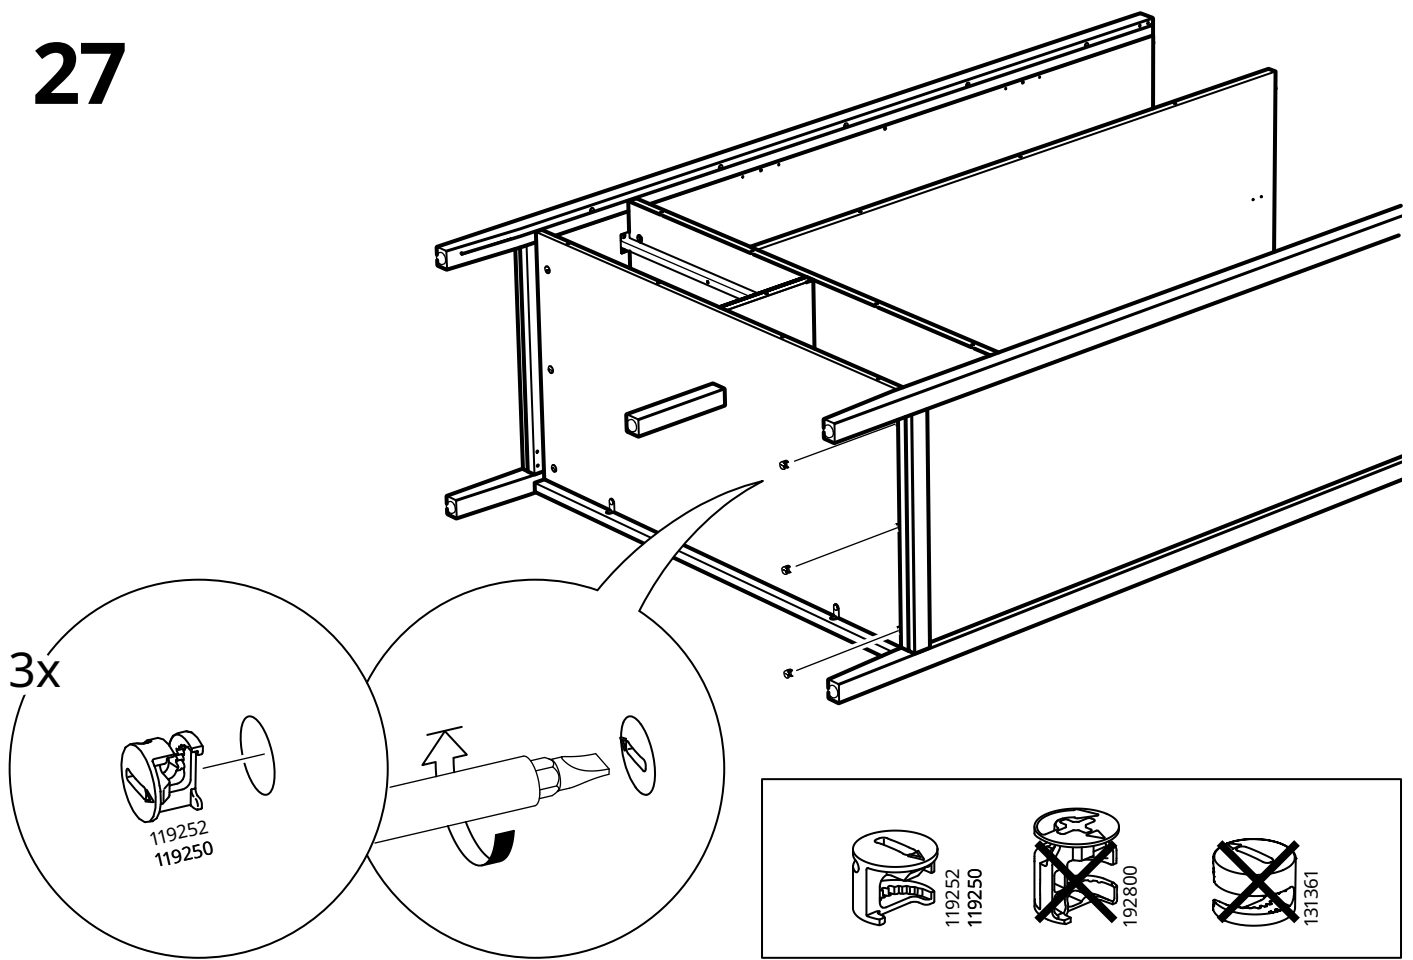 




28

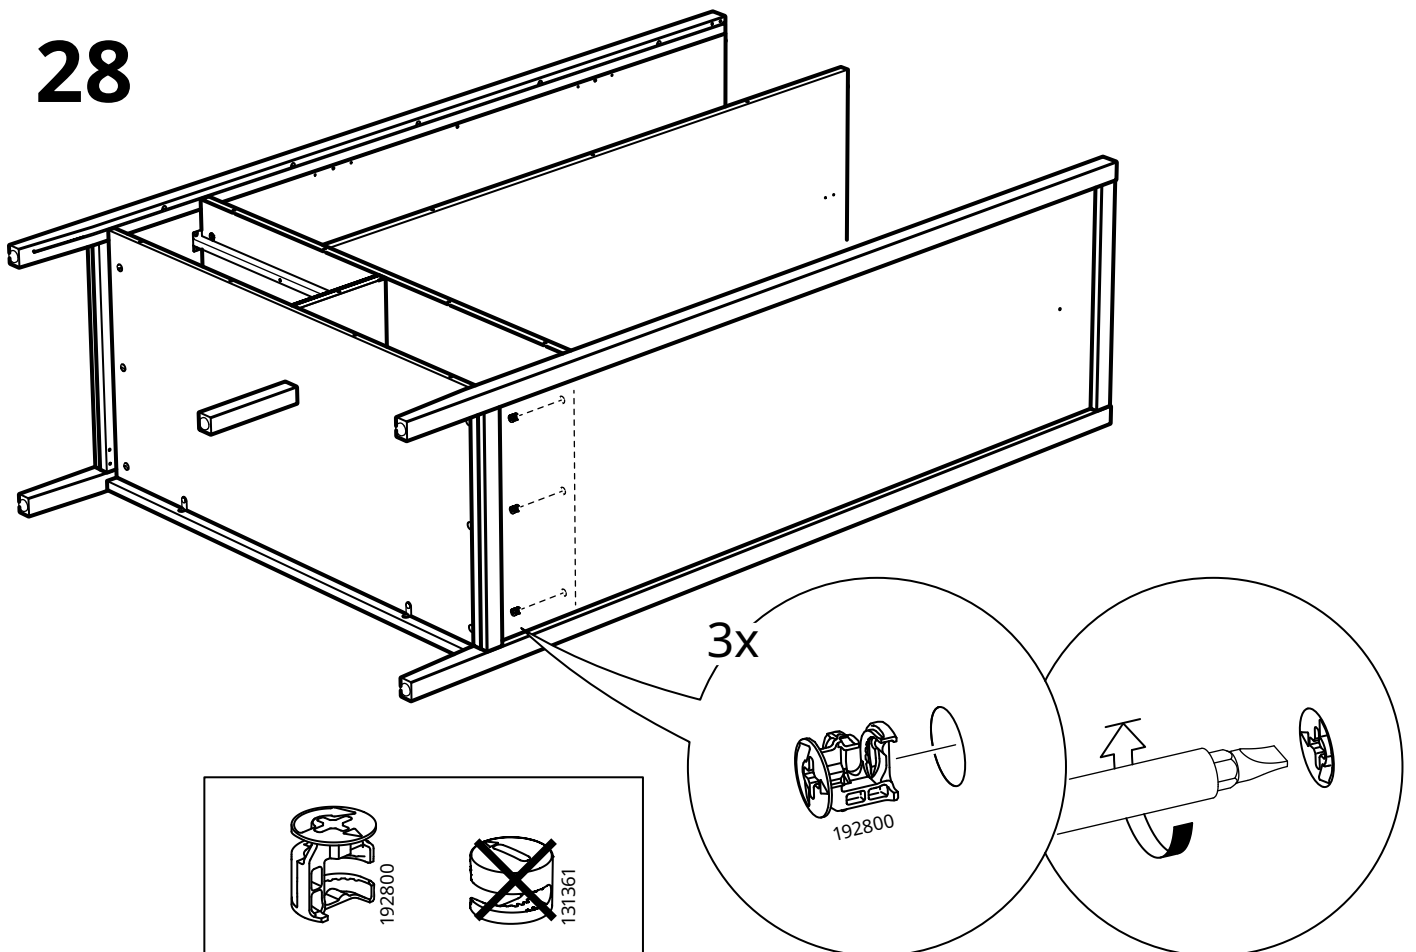 

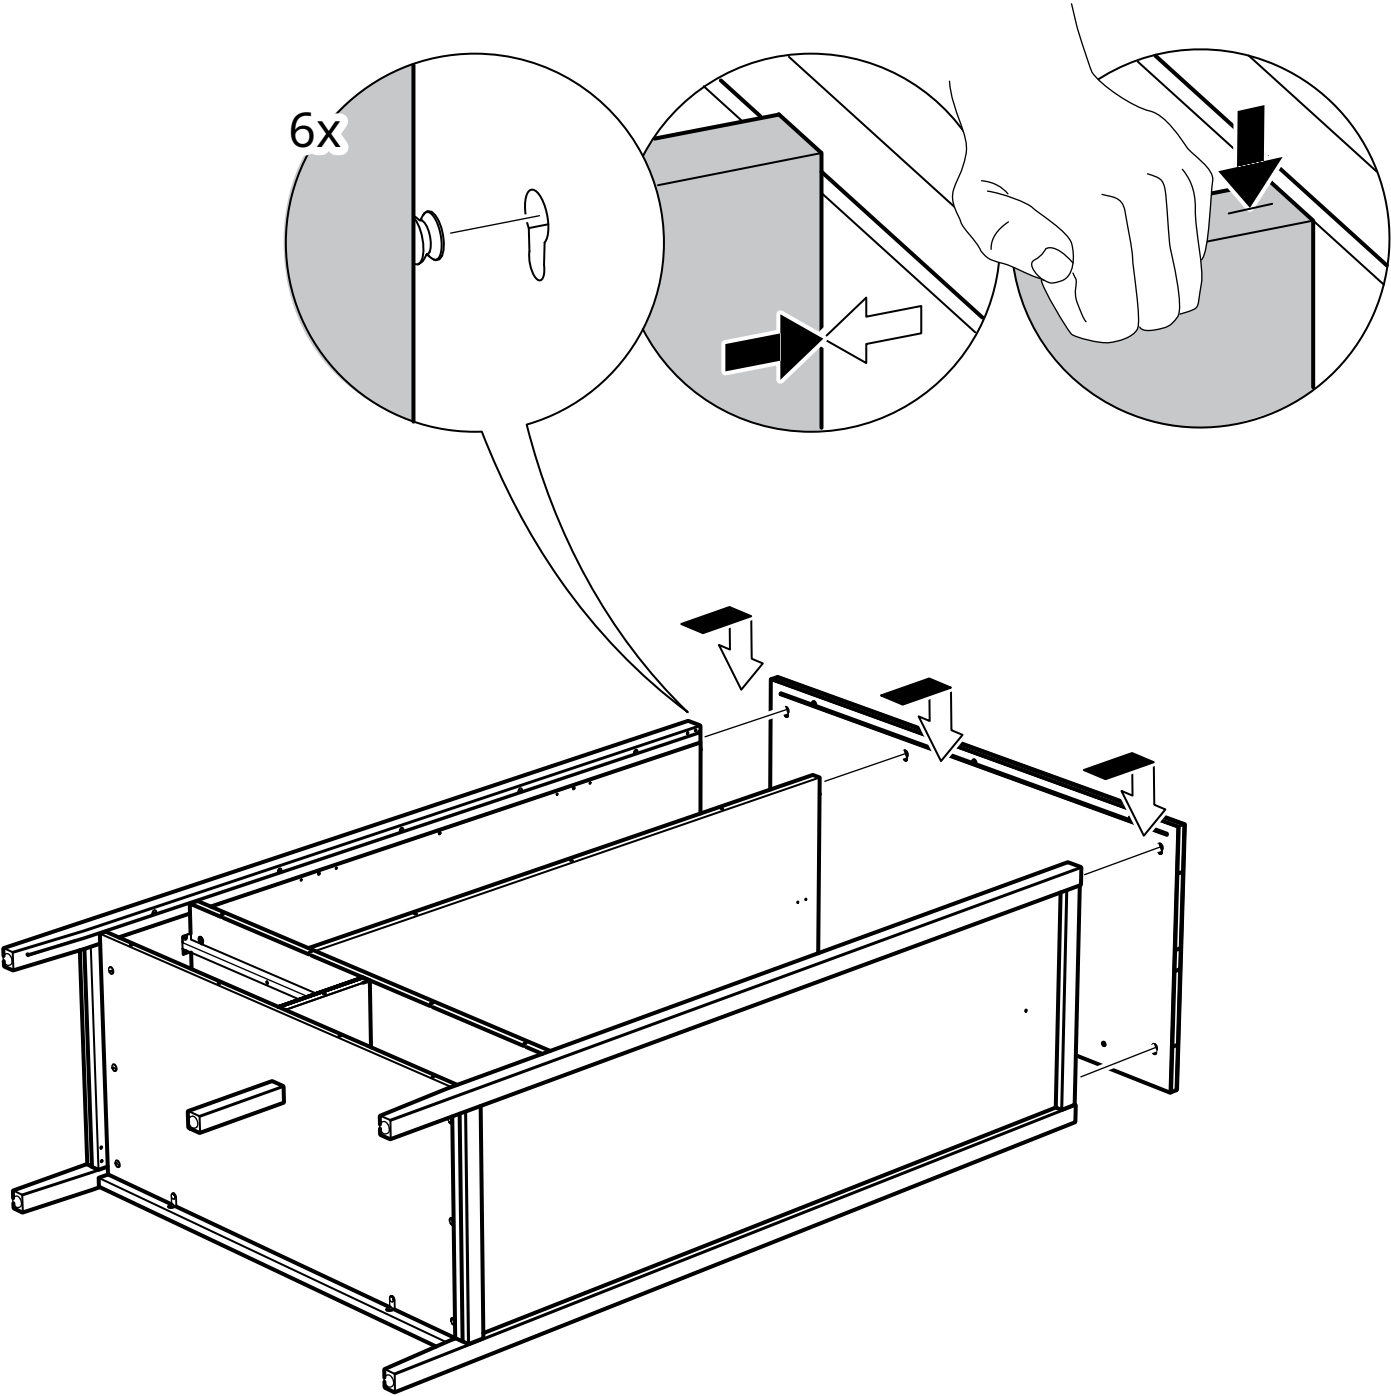 


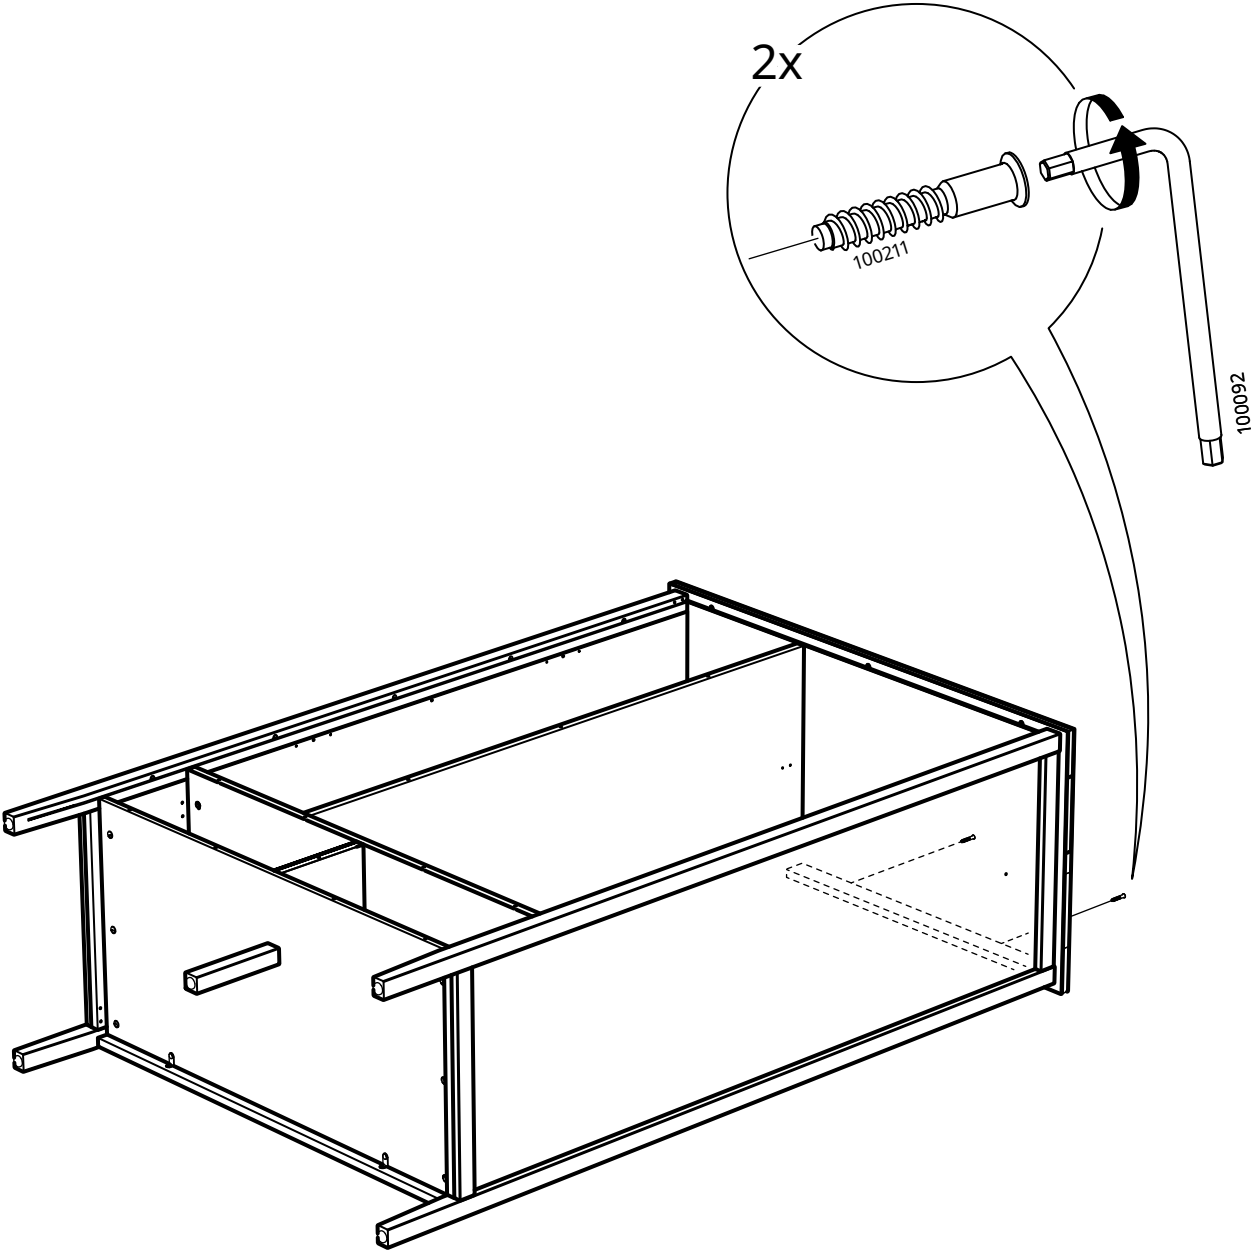 


31

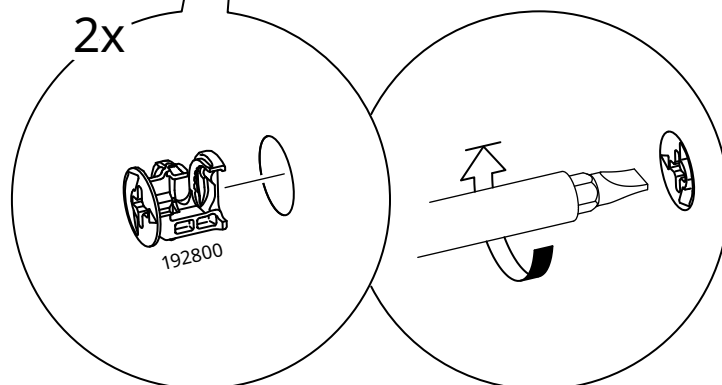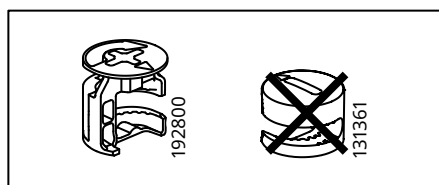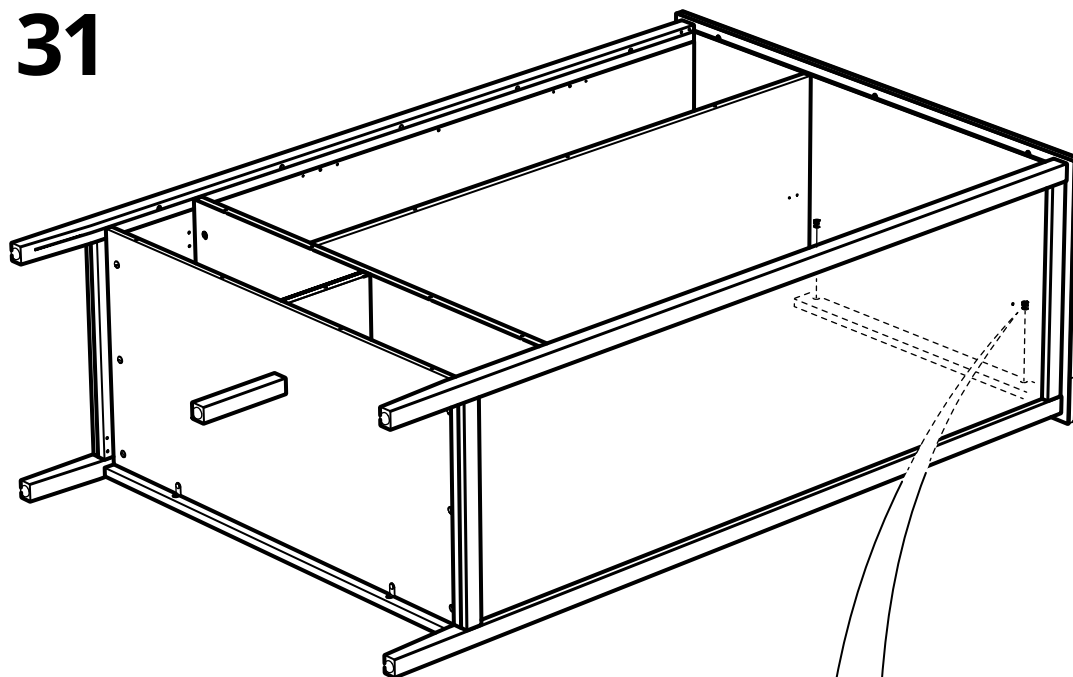   


32

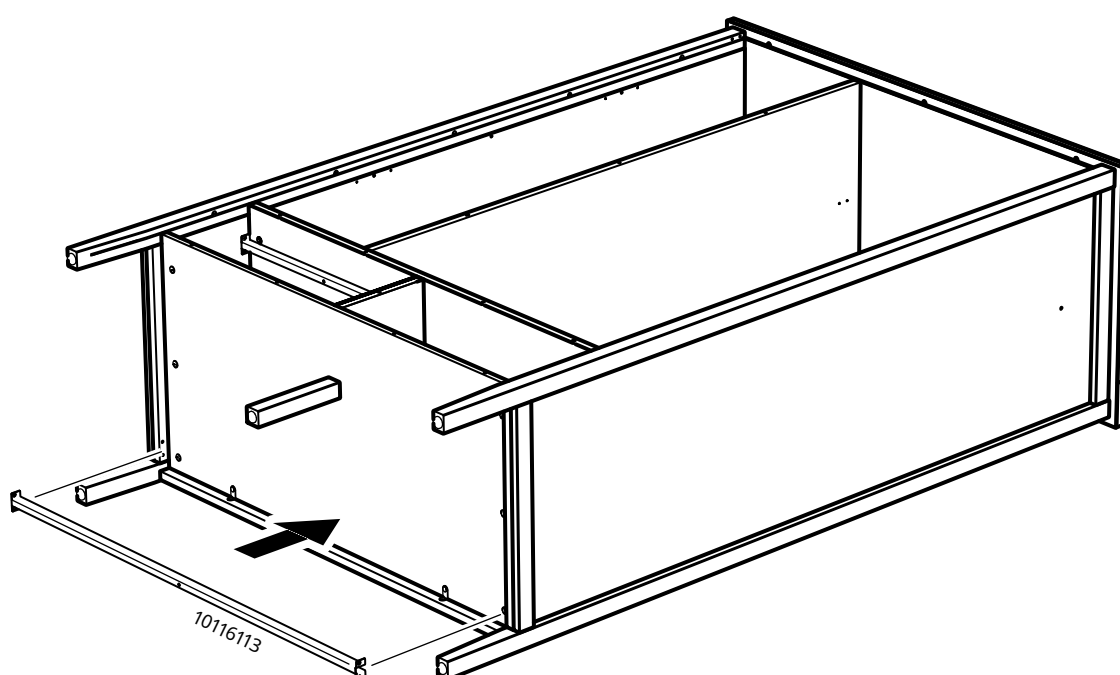 


33

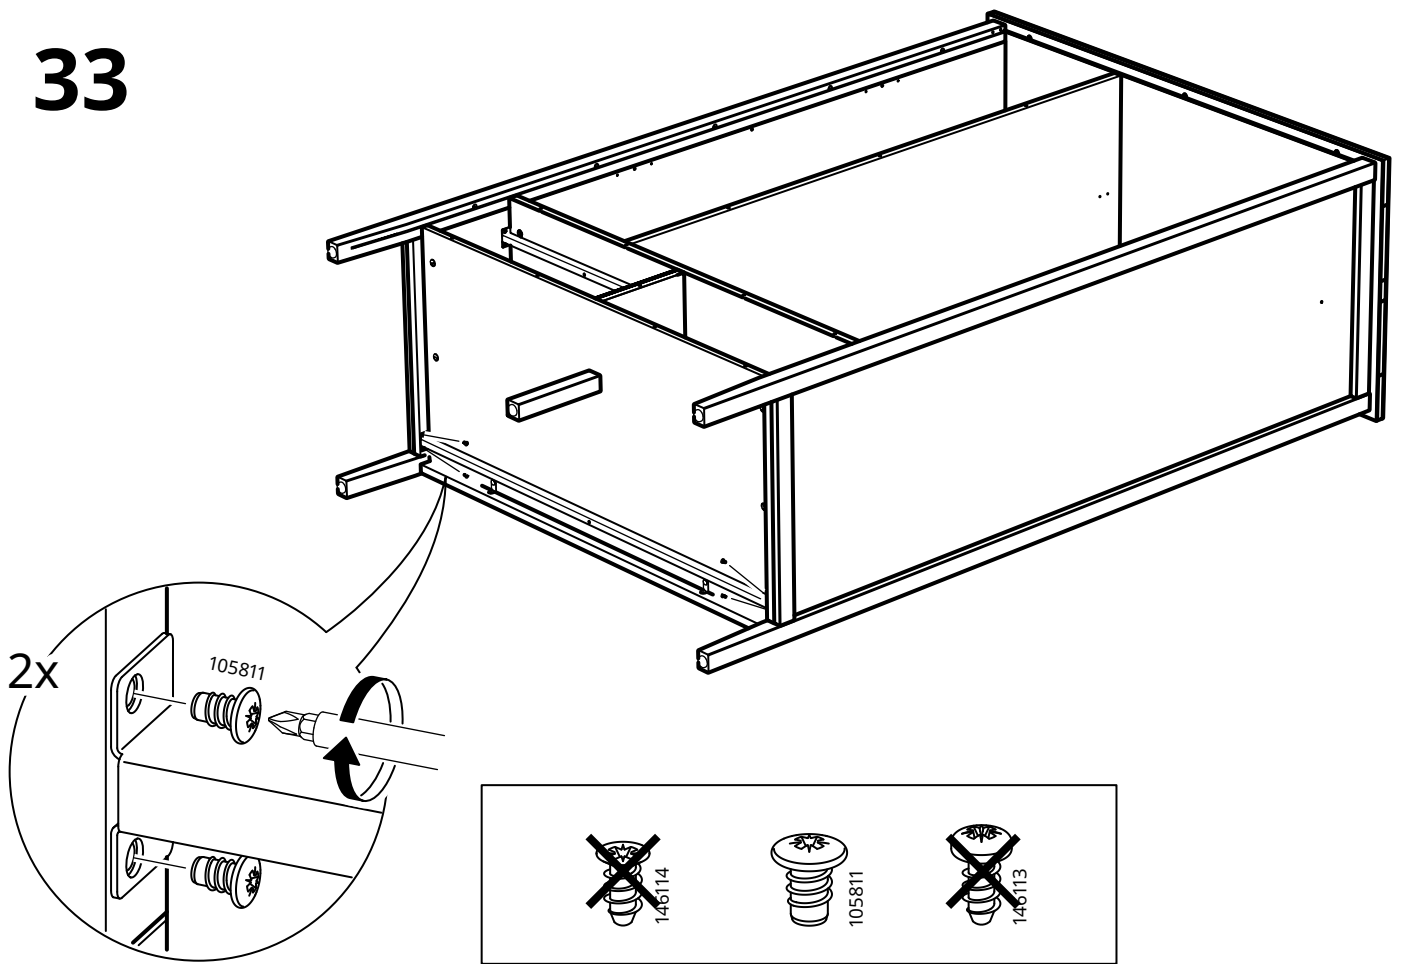 


34

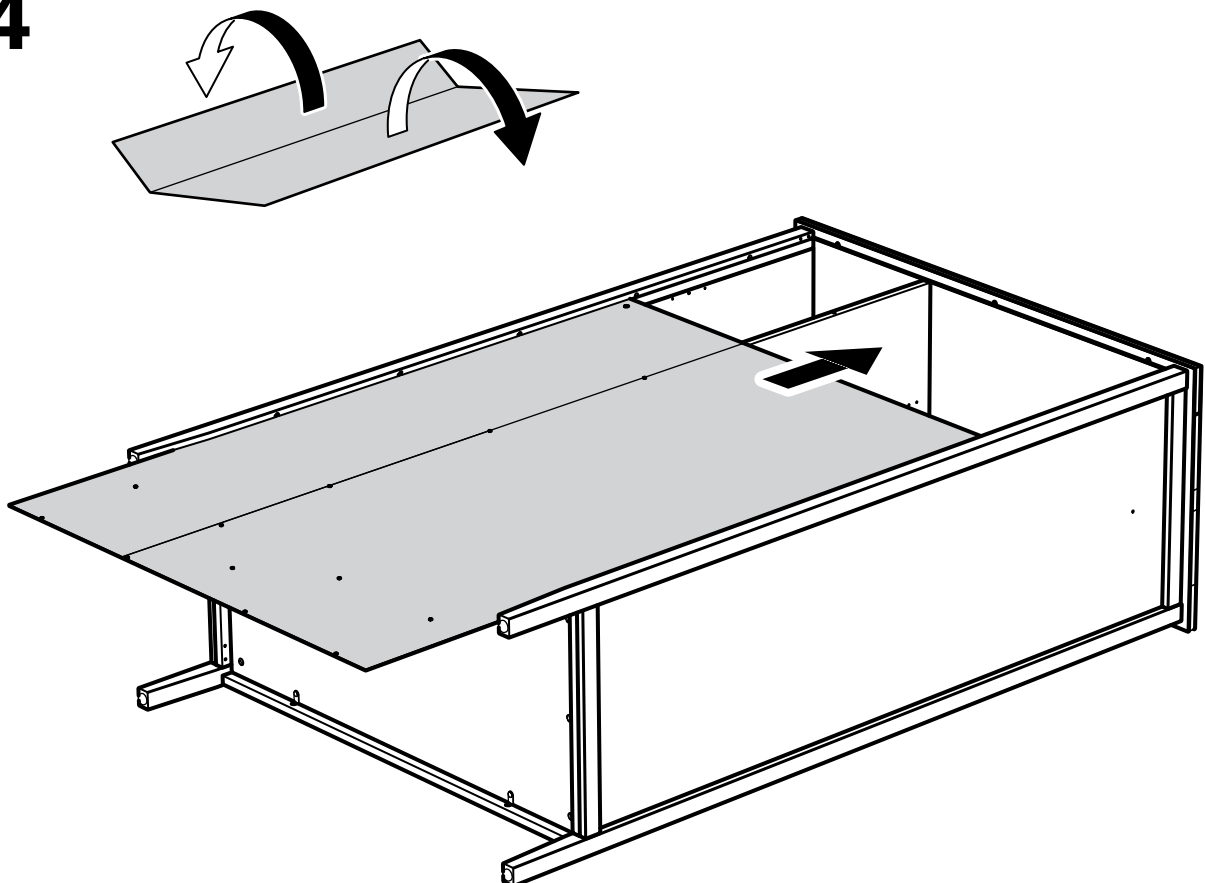 



35


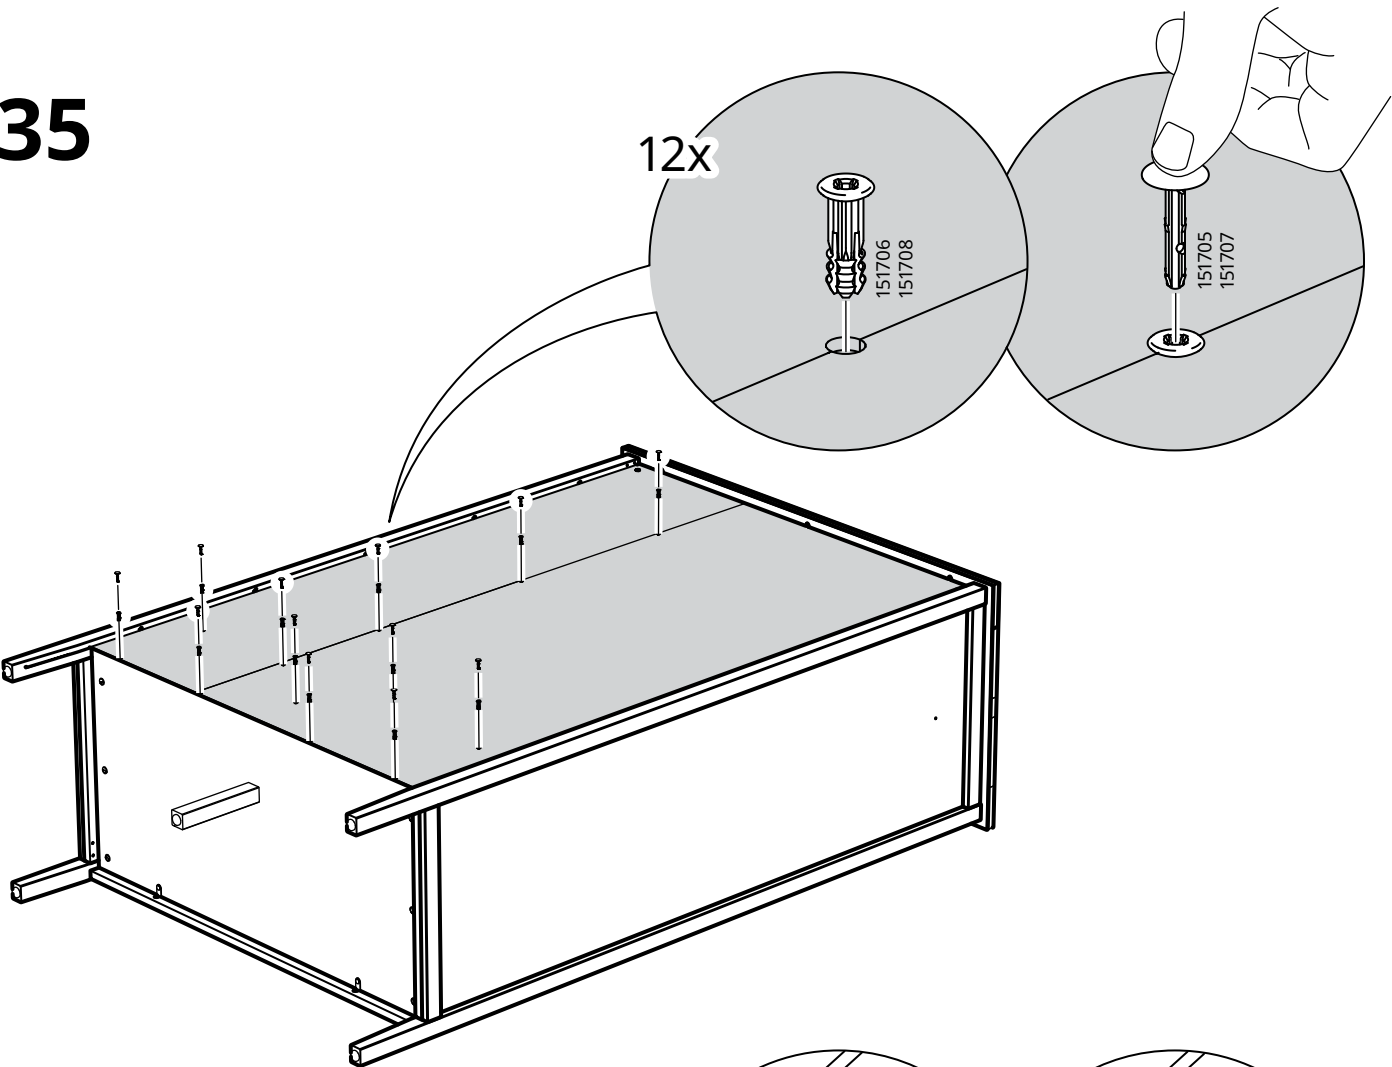 


36

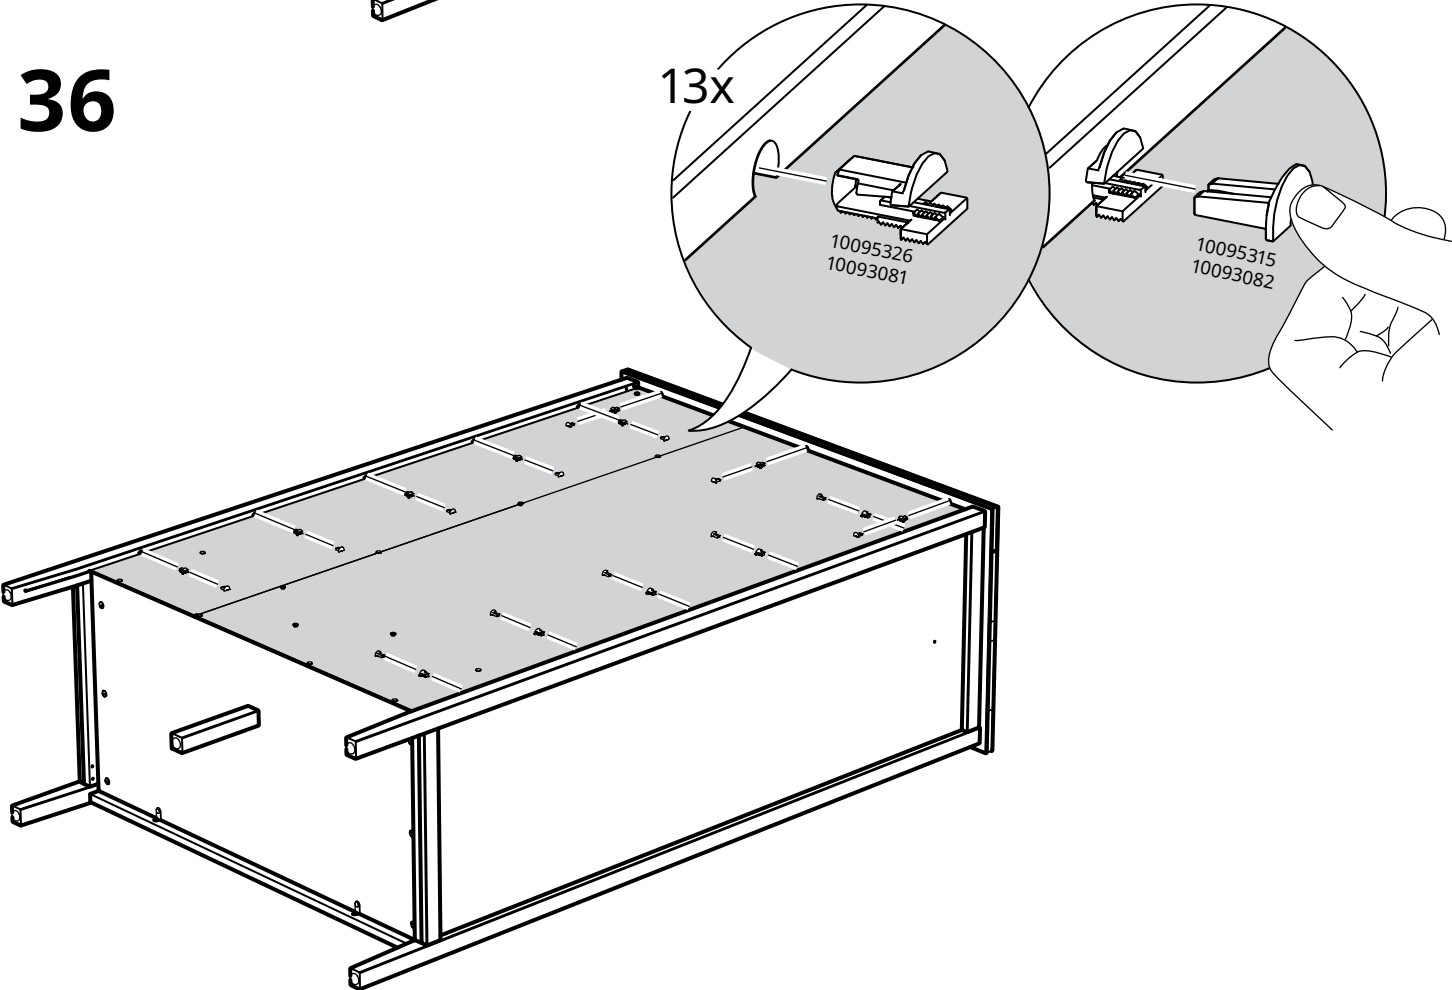 


37

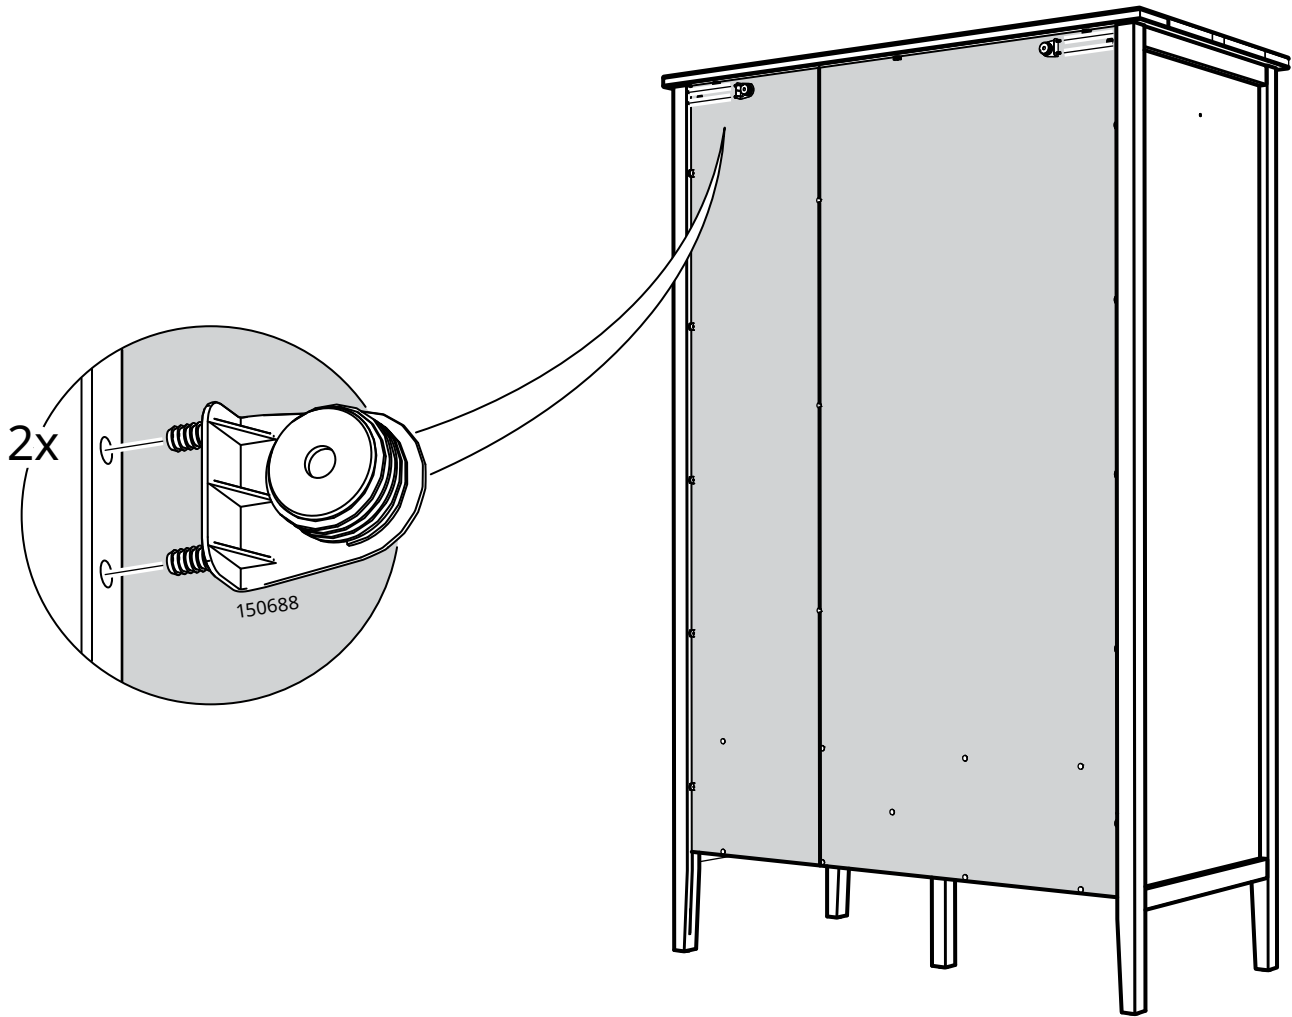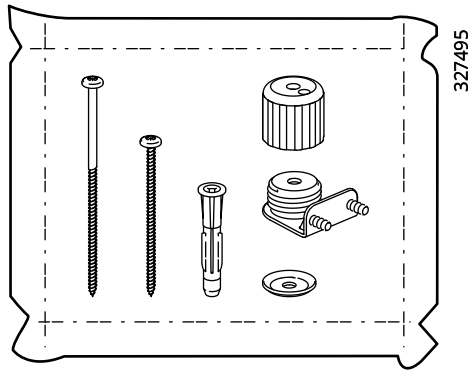  



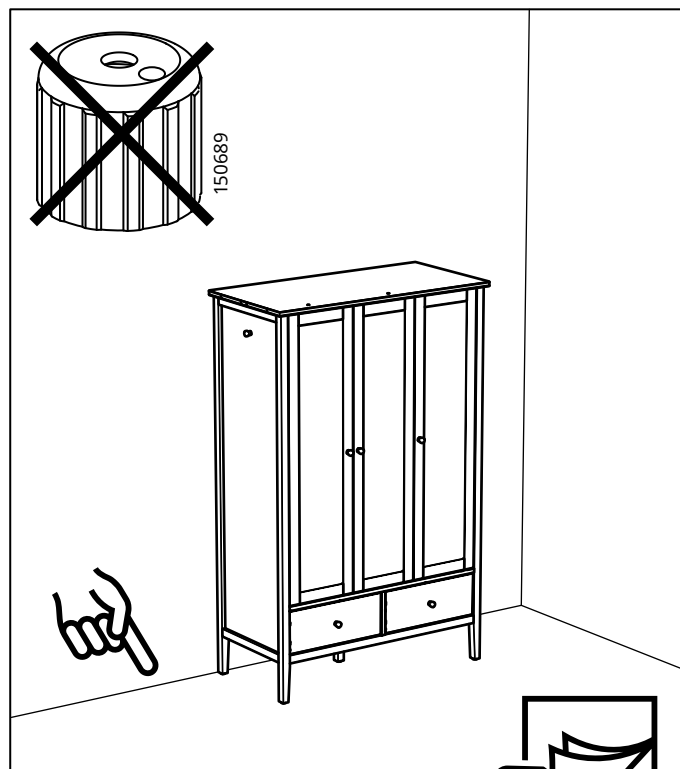 
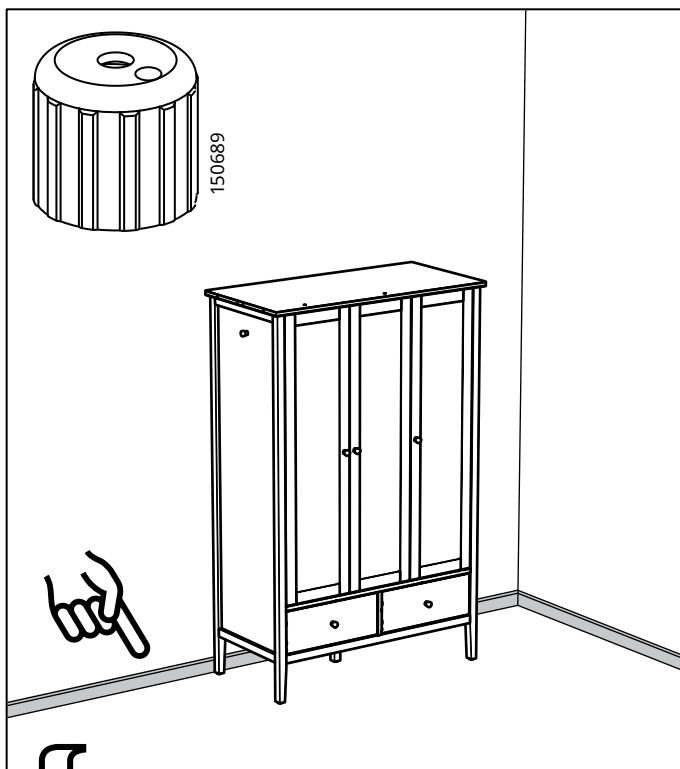 


38

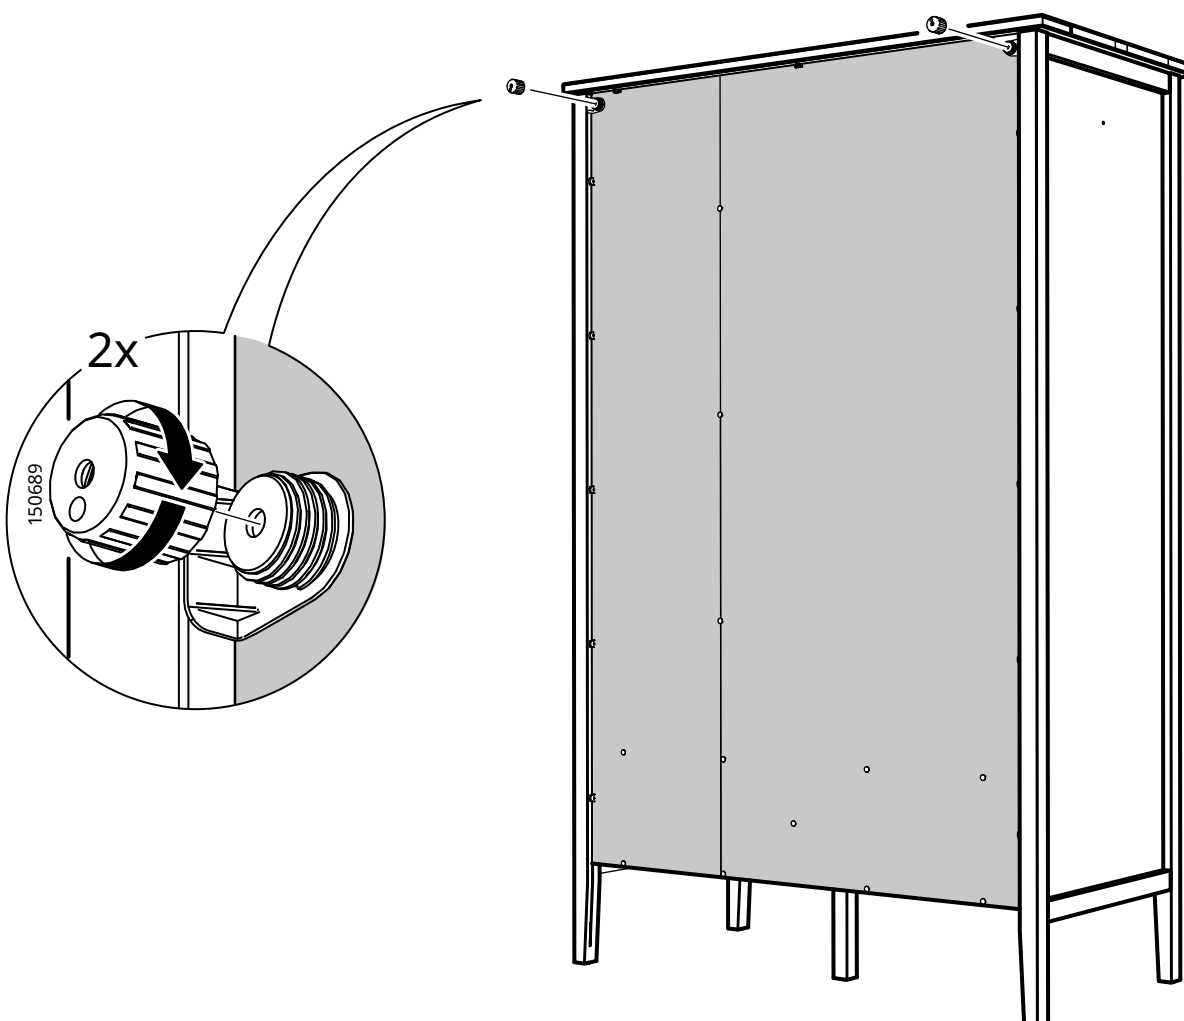 


39

    
2x

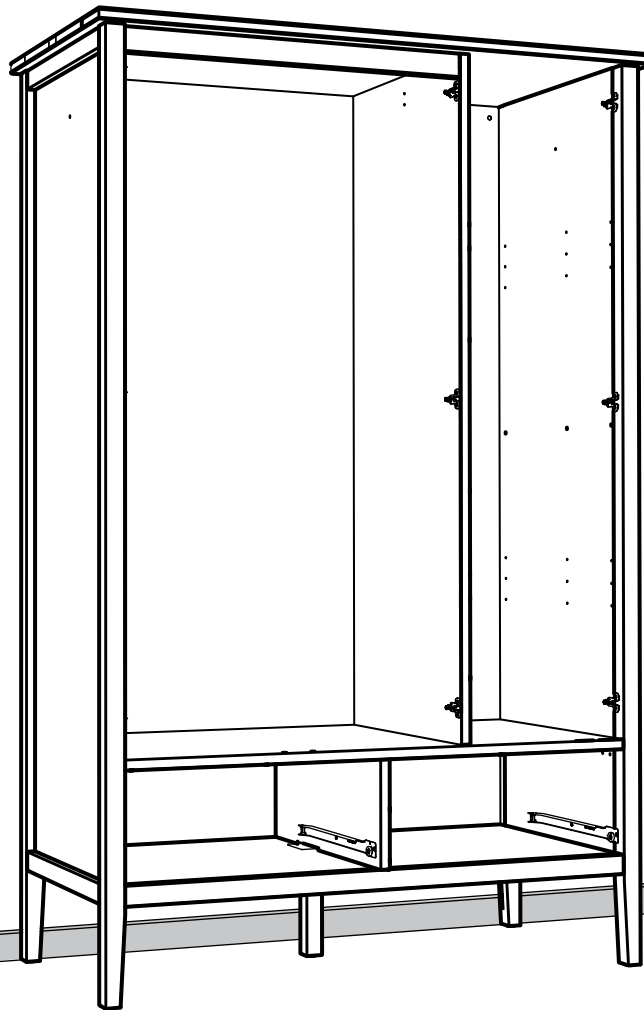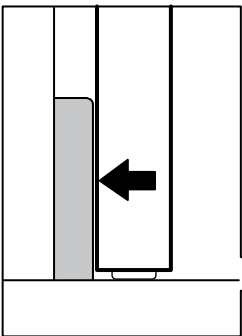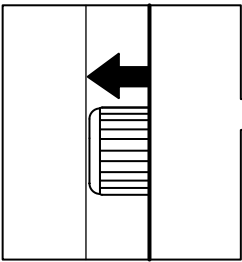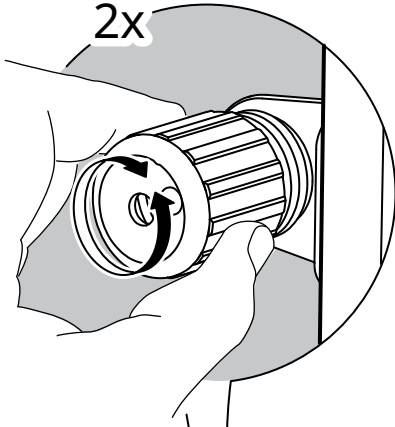

40

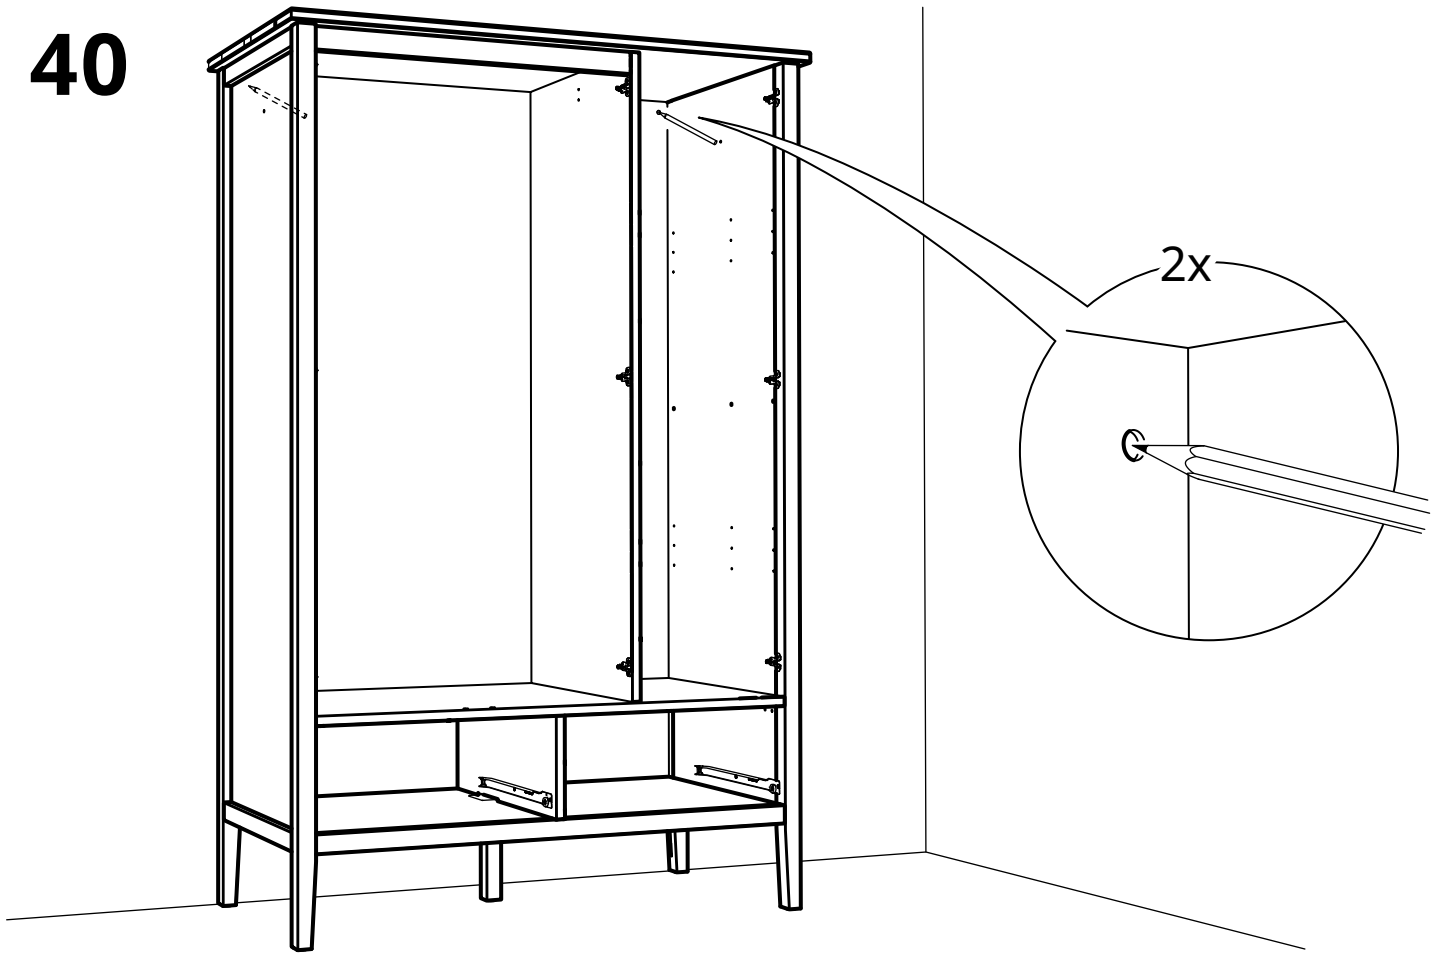 

41

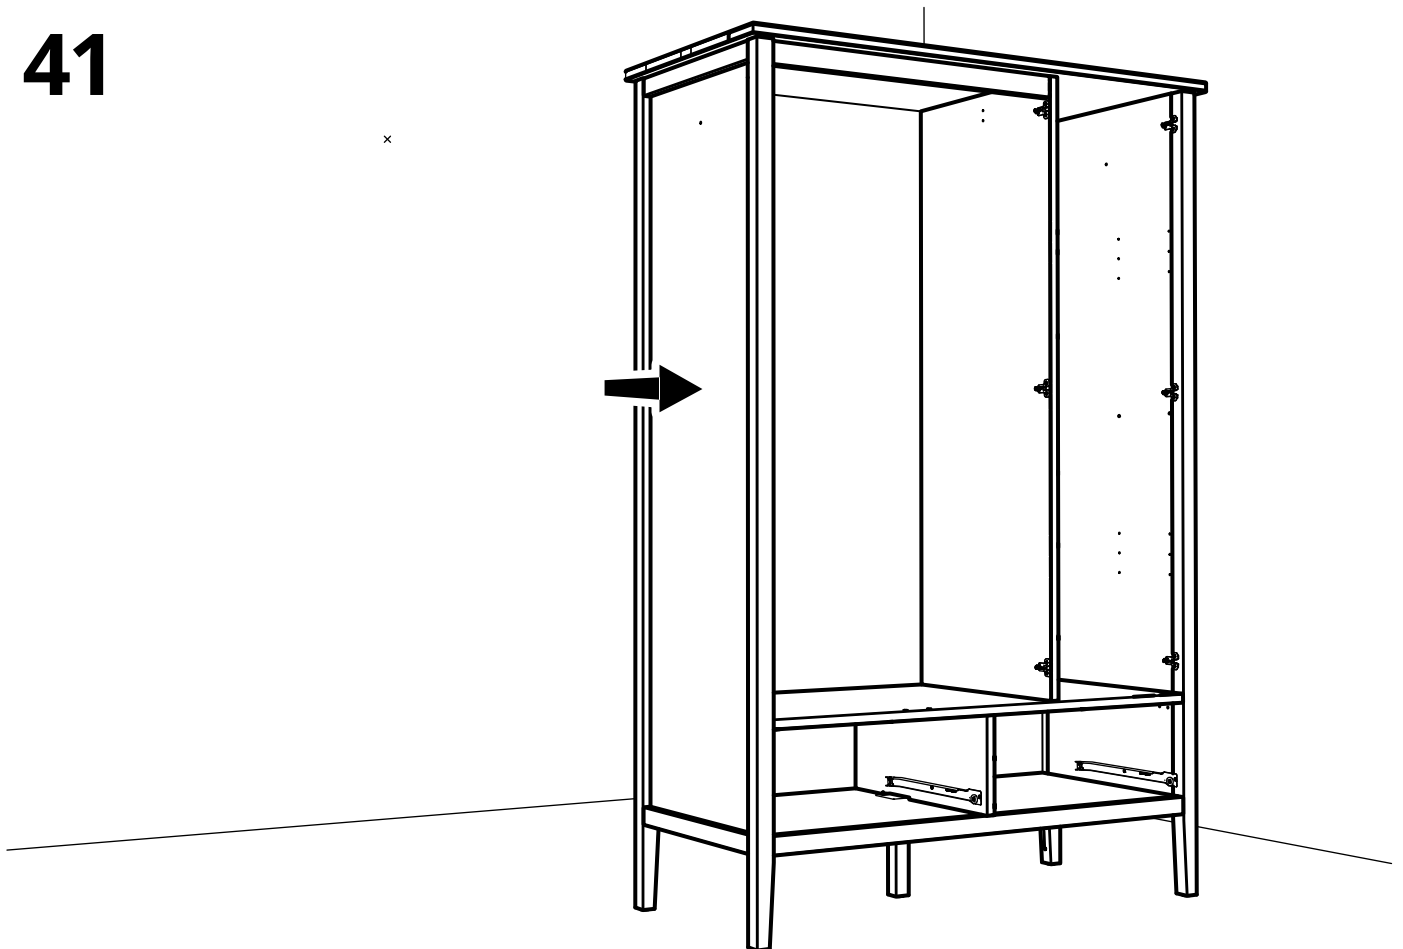 




www.IKEA.com/secure-it



 www.IKEA.cn/secure-it

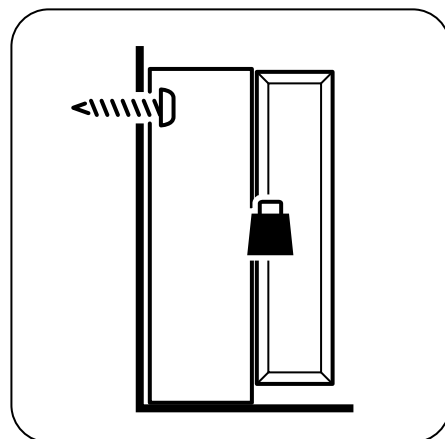

42

English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

A

Ø 8 mm
(5/16")

1

2

70 mm
(2 3/4")

3

B

Ø 8 mm
(5/16")

1

2

≈30 mm
(≈1 1/4")

3

C

 
 
Ø 3 mm
(1/8")

1


2



≈30 mm
(≈1 1/4")

3

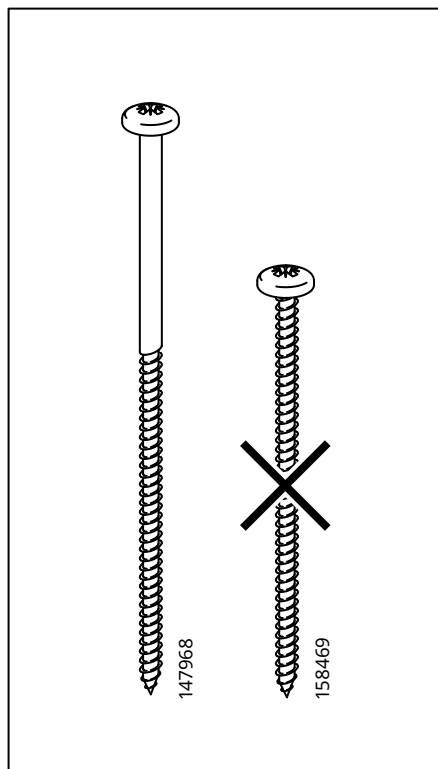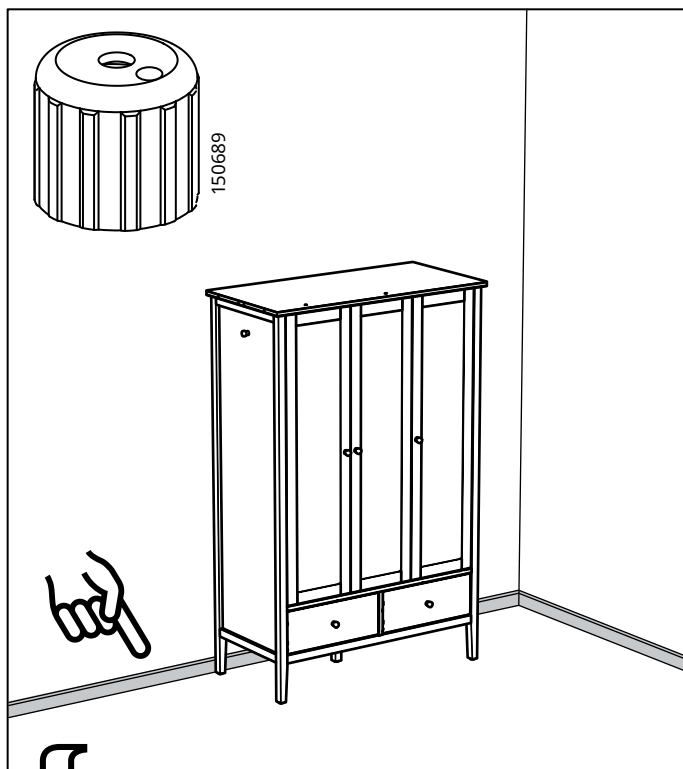


42



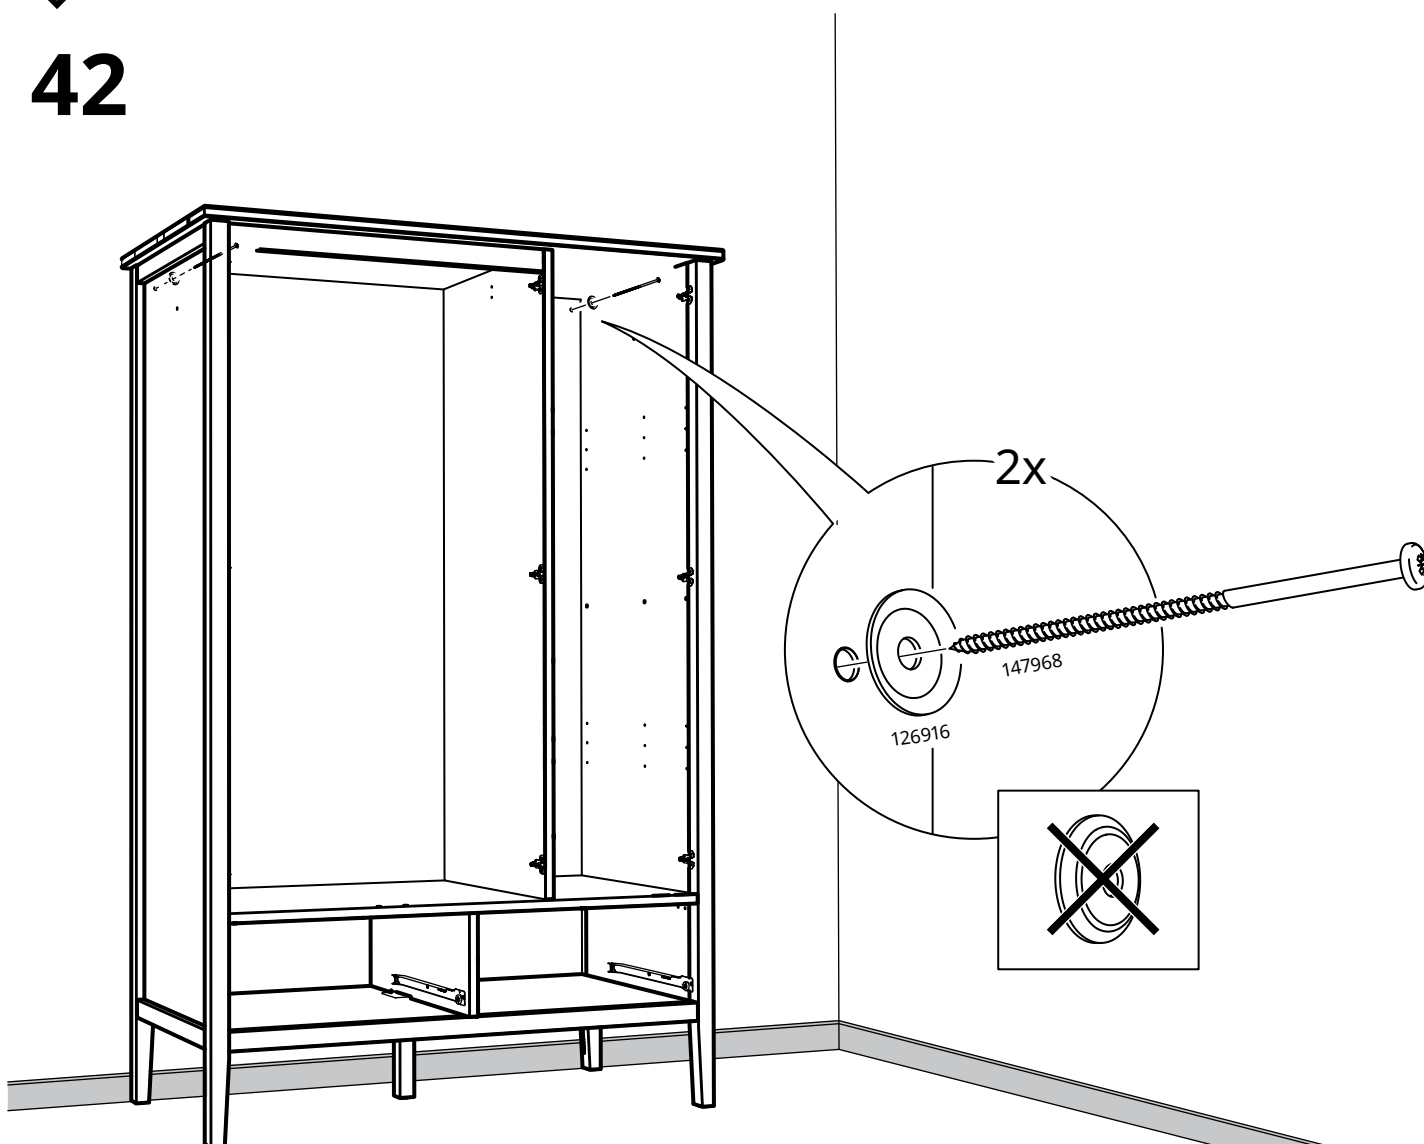 


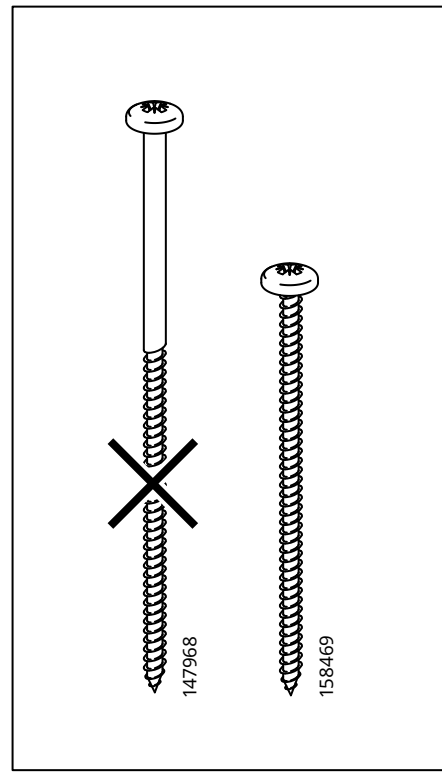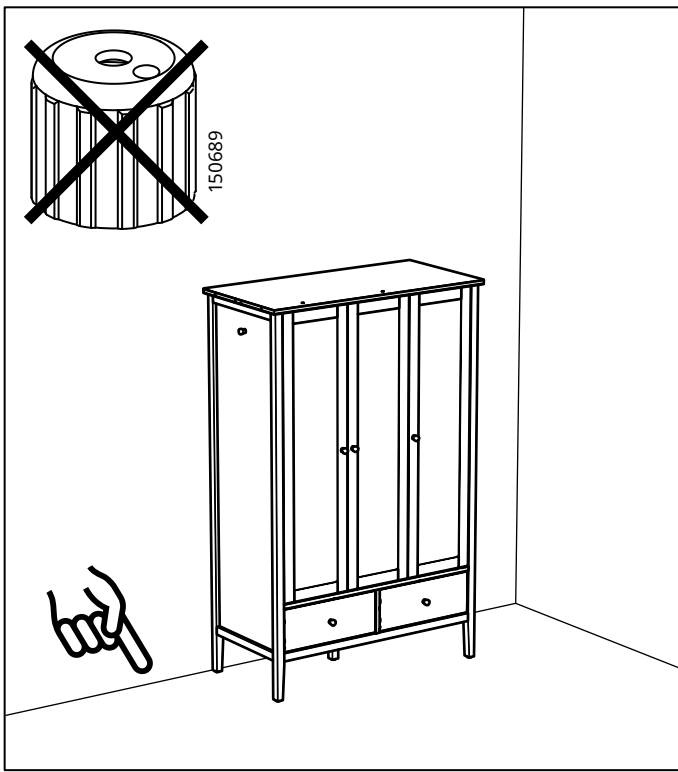  



43

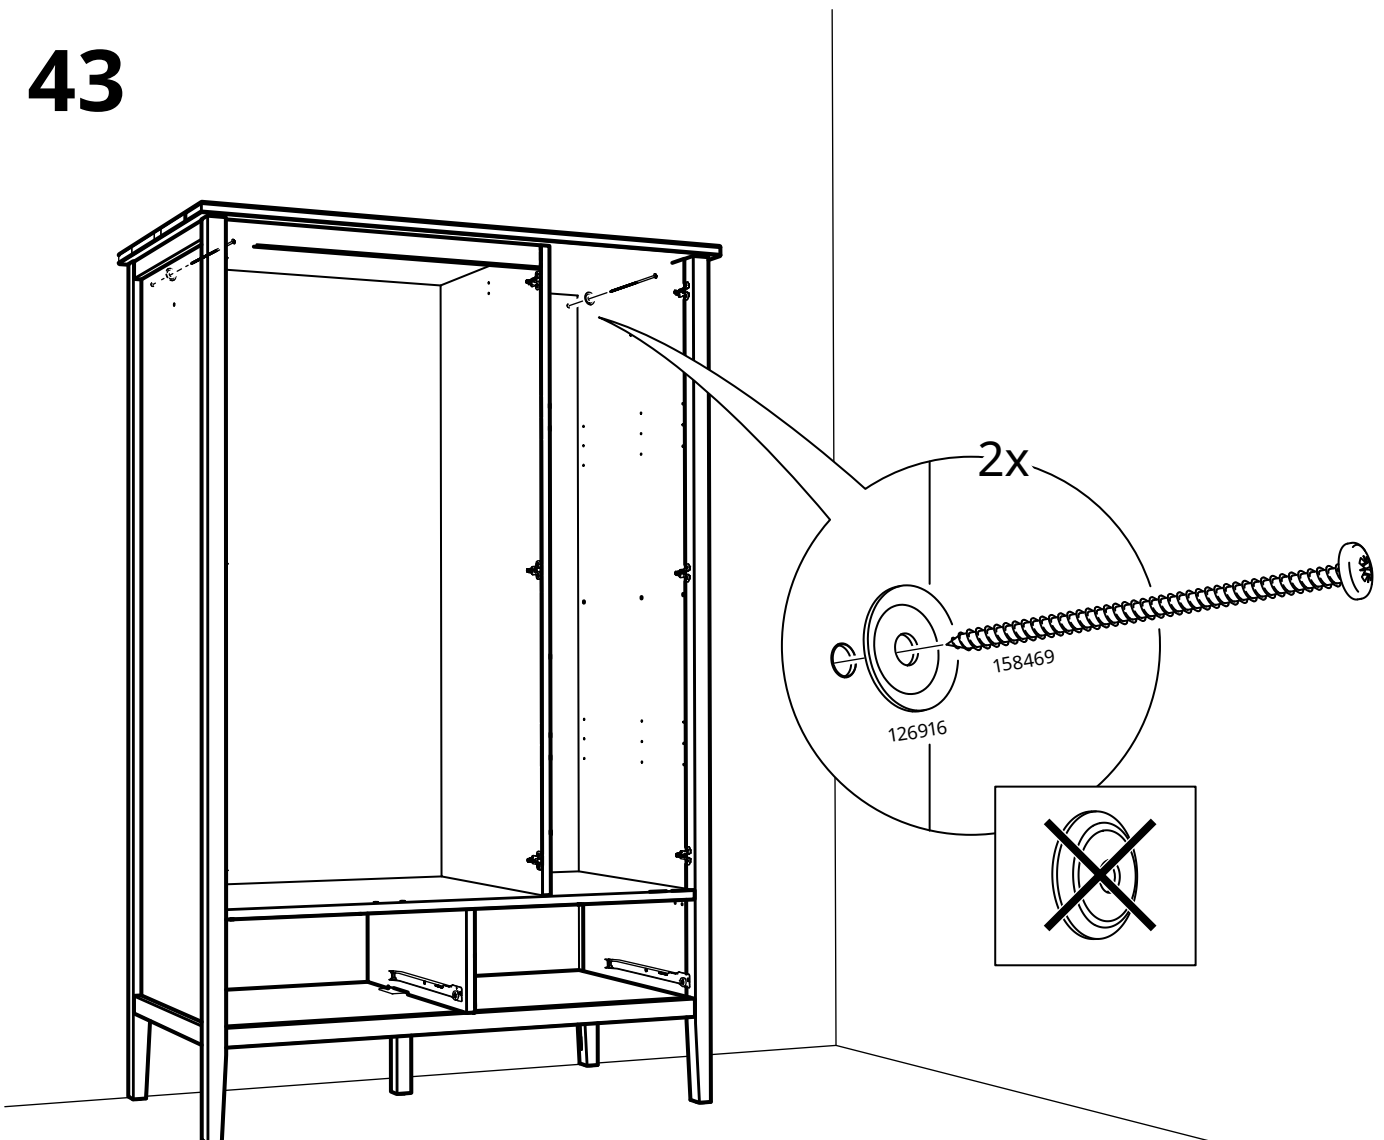 


44

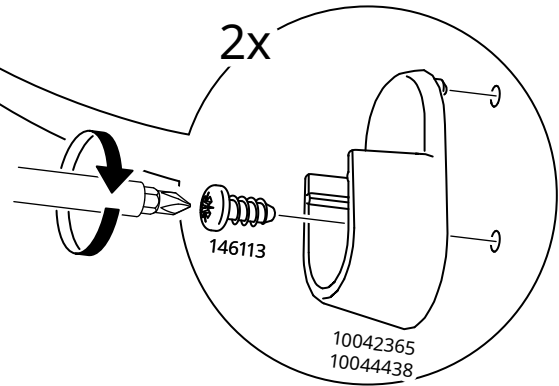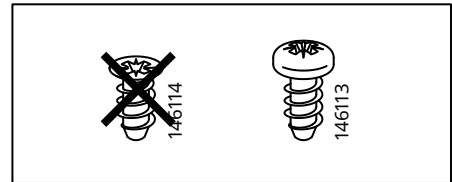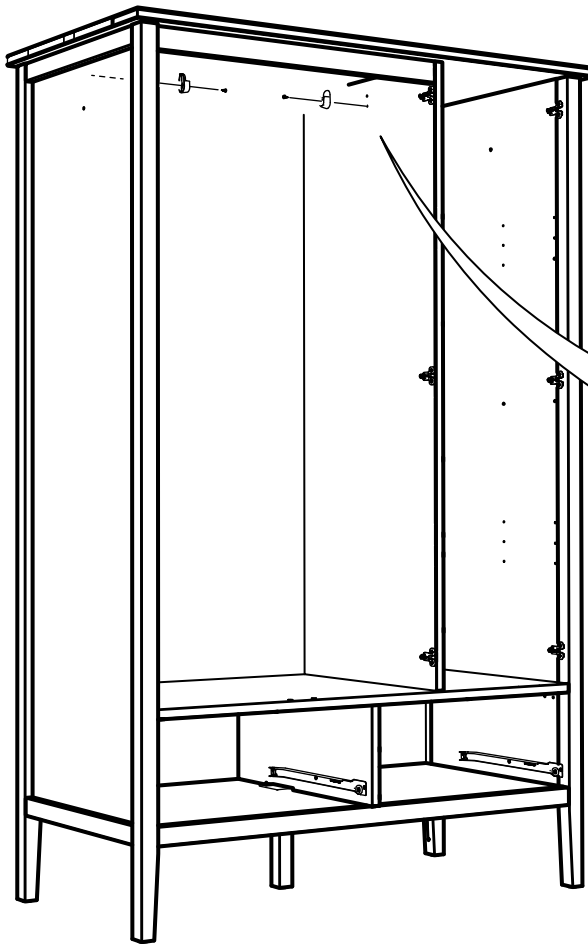   


45

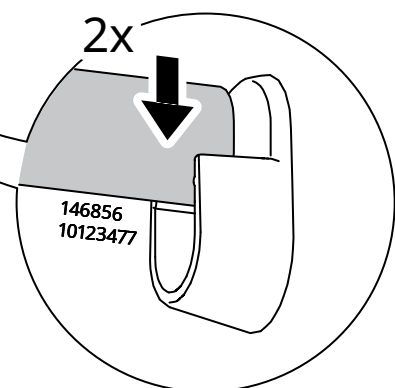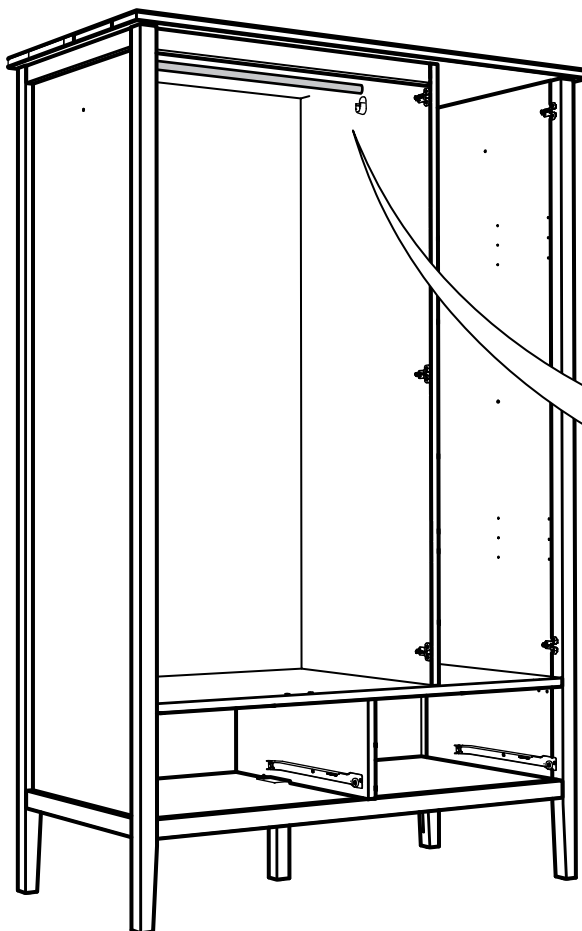  


46

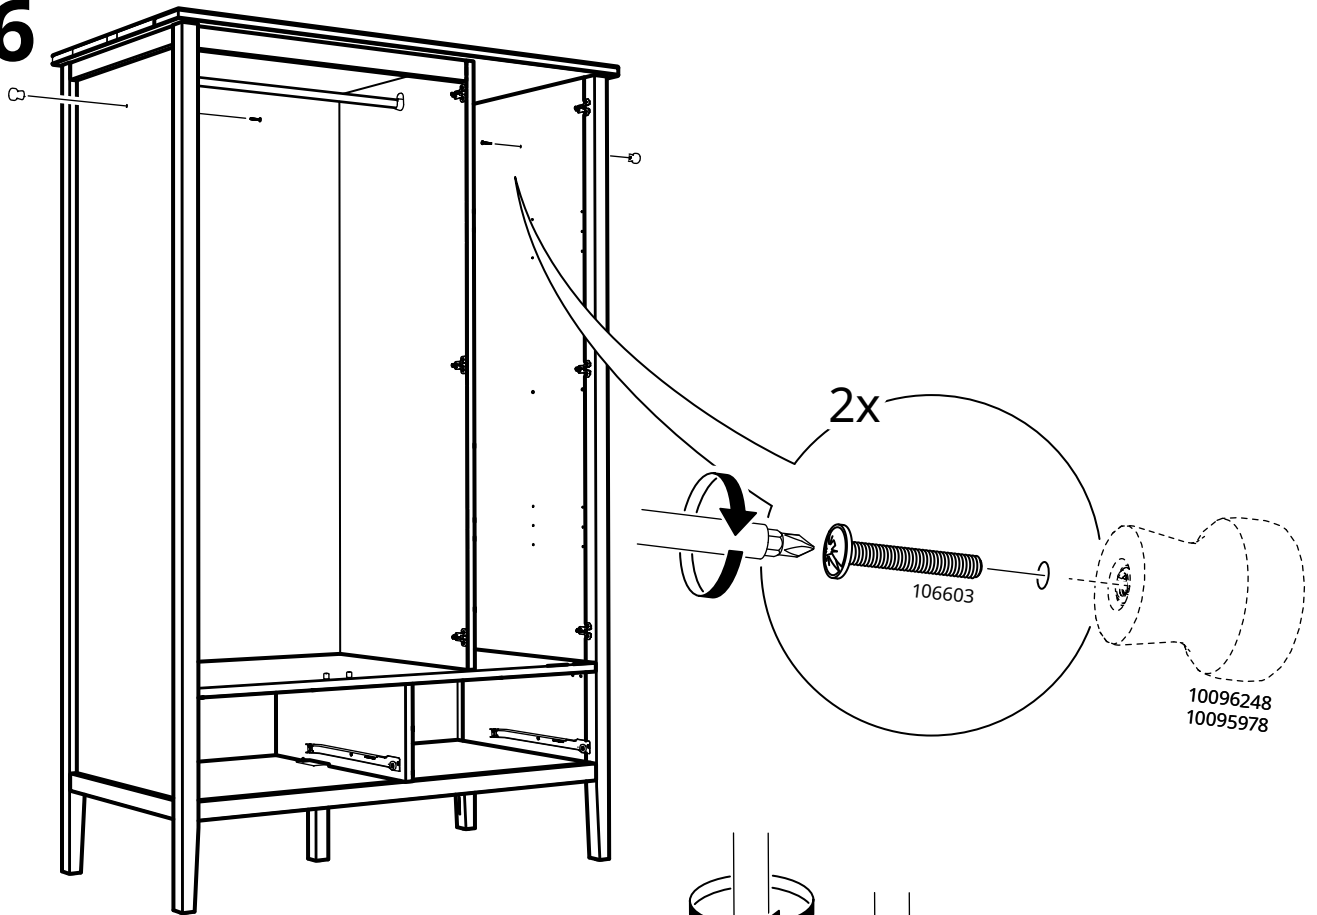 


47

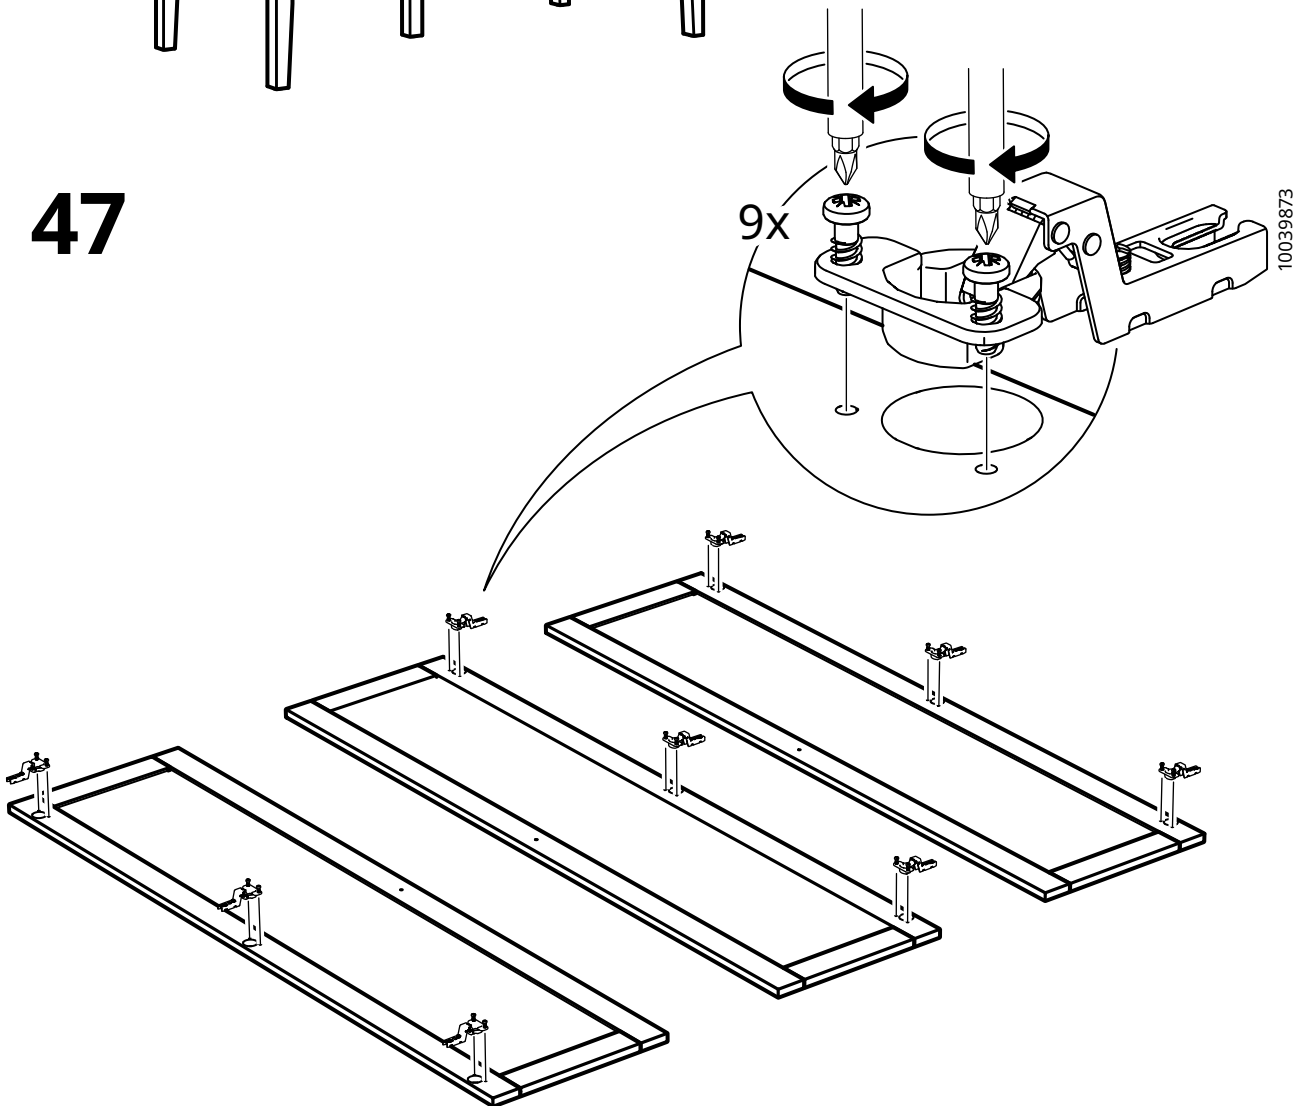 


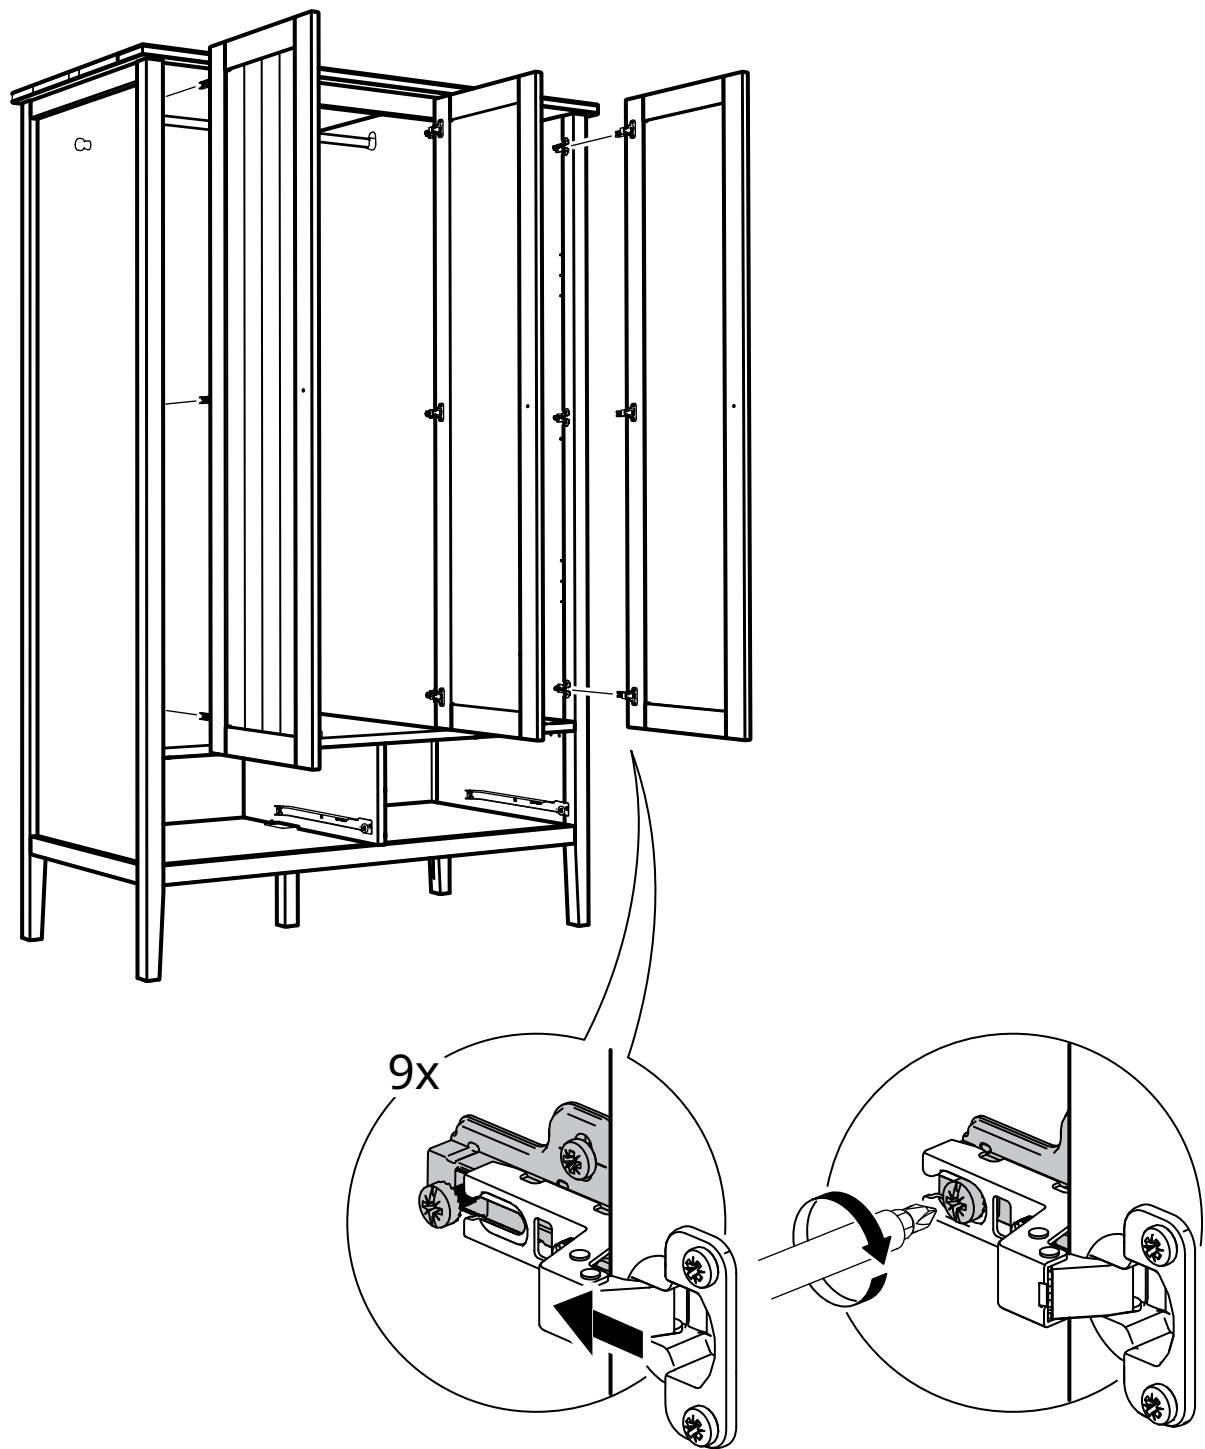 


49

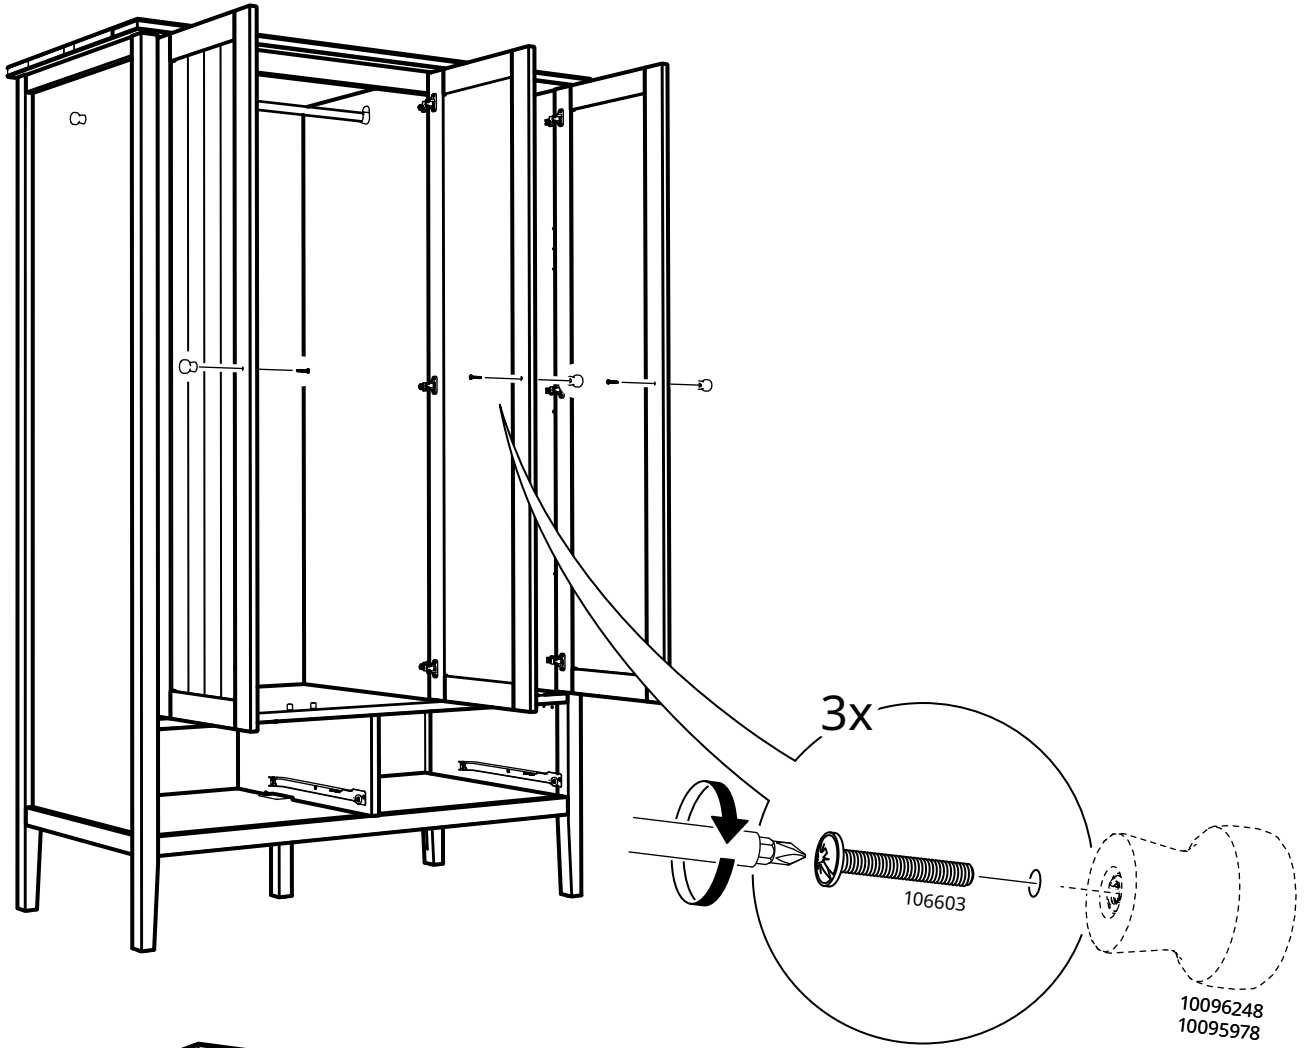 


50

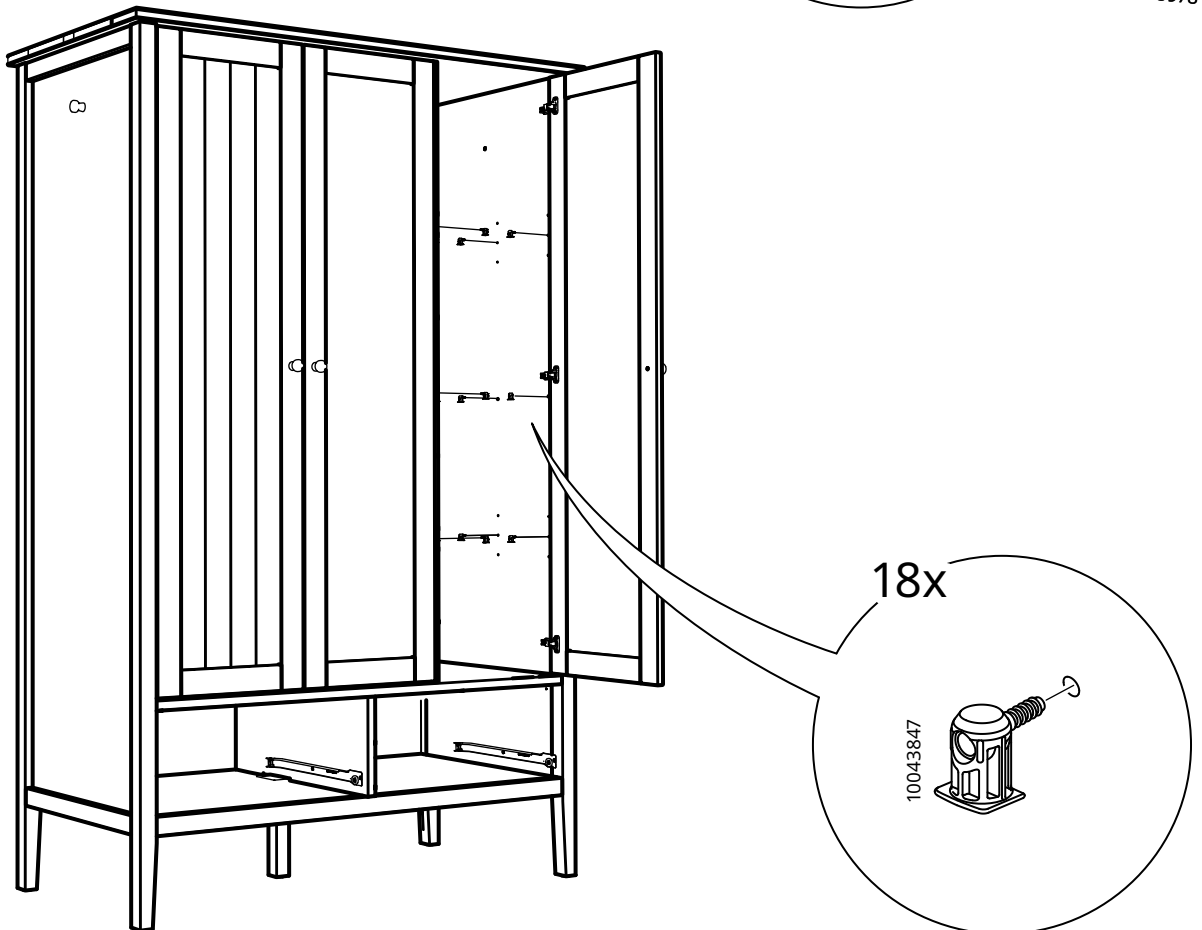 


51

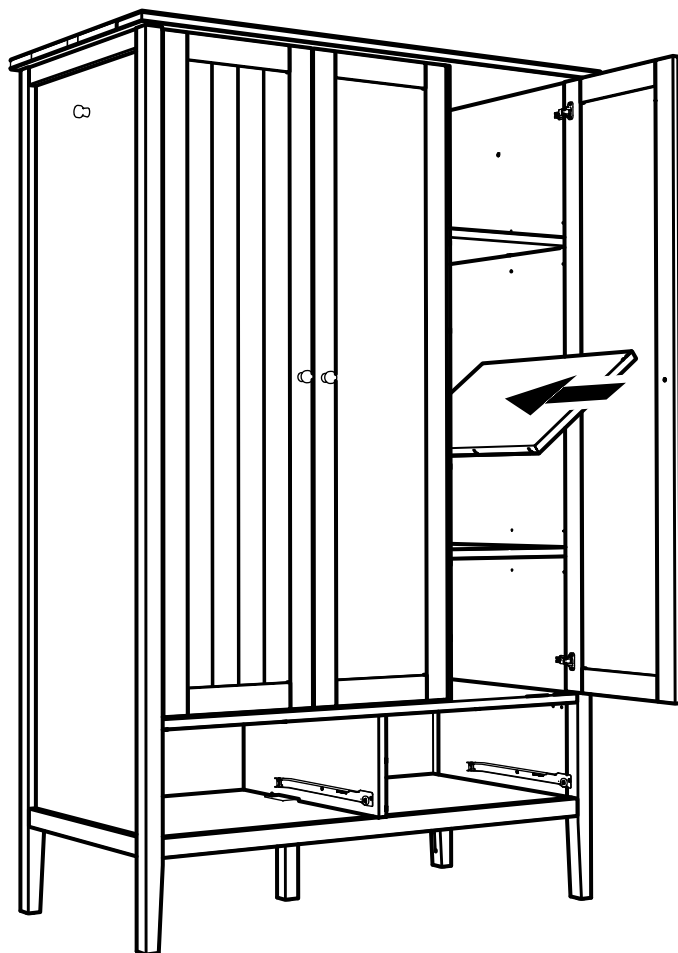 


52

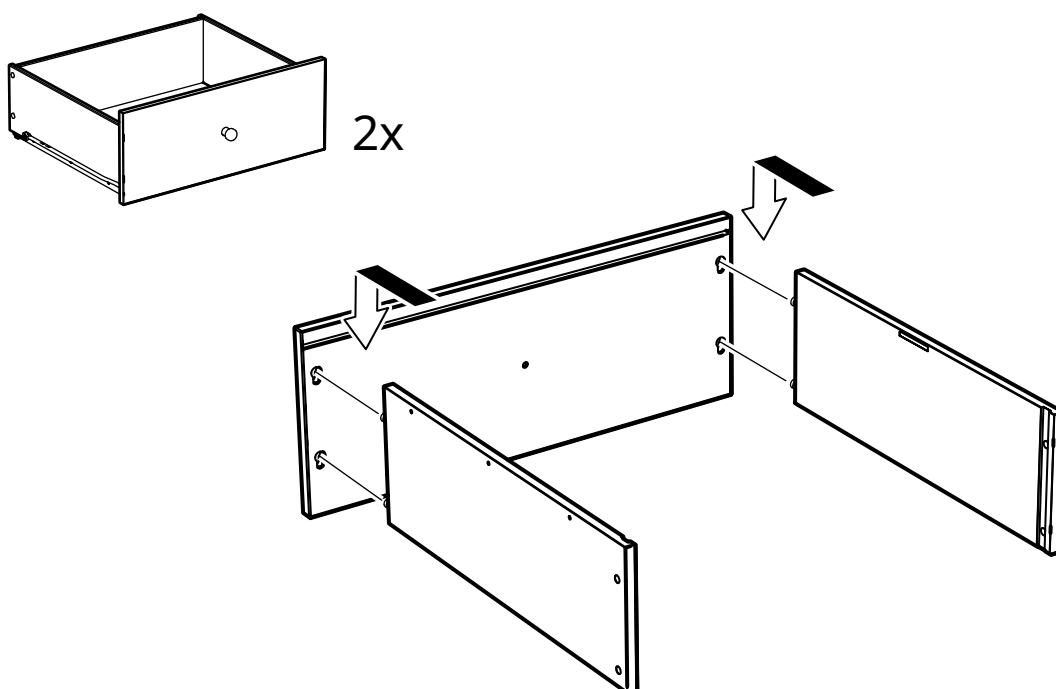 




53

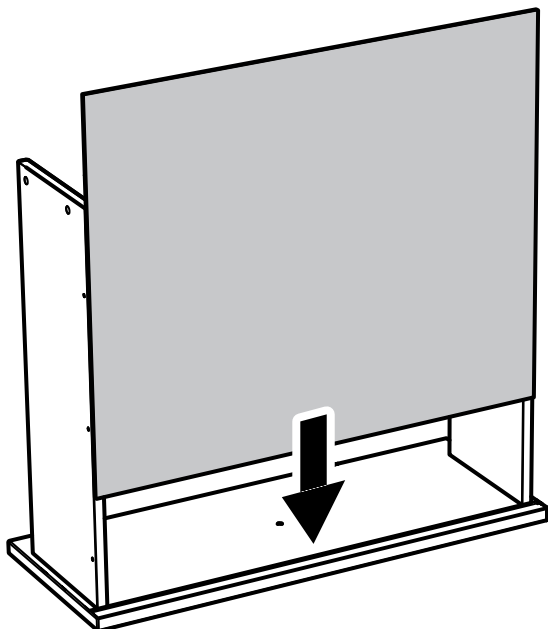 


54

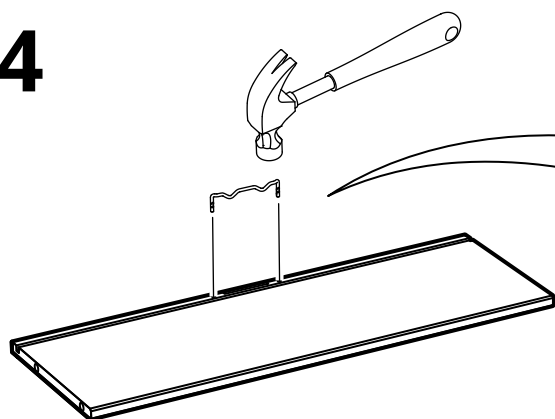 


1x

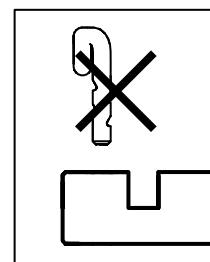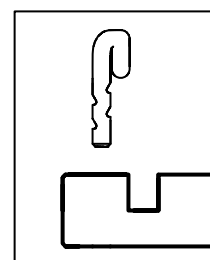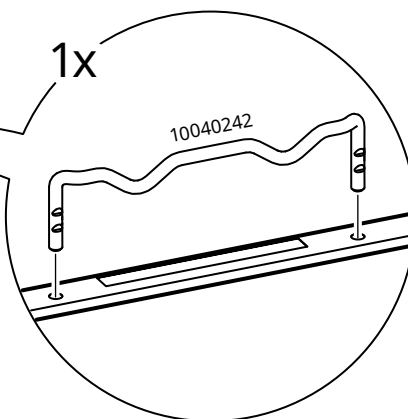   


55

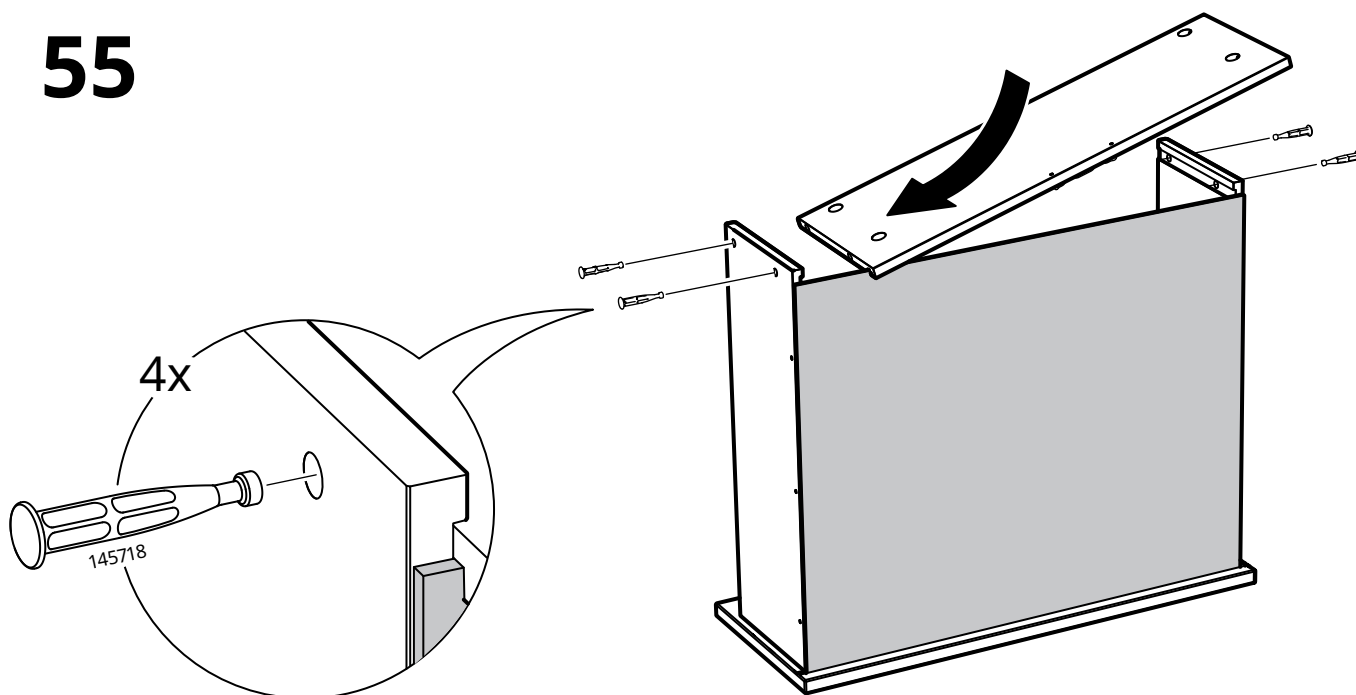 


56

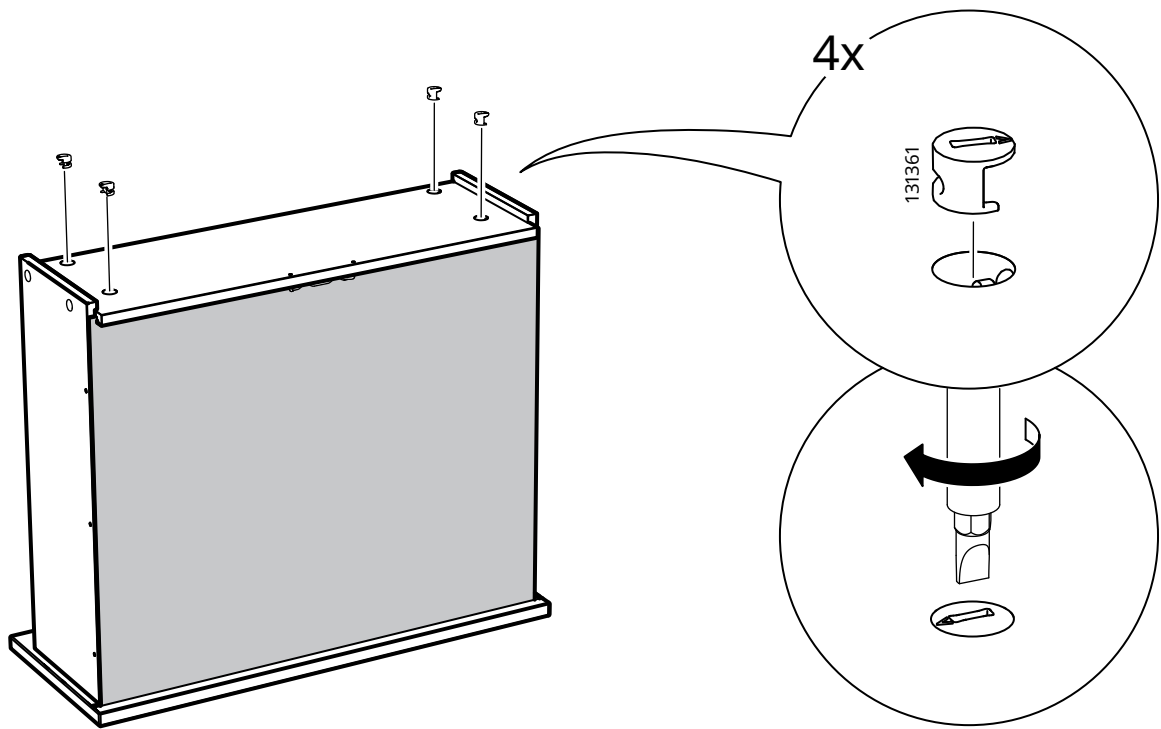 

57

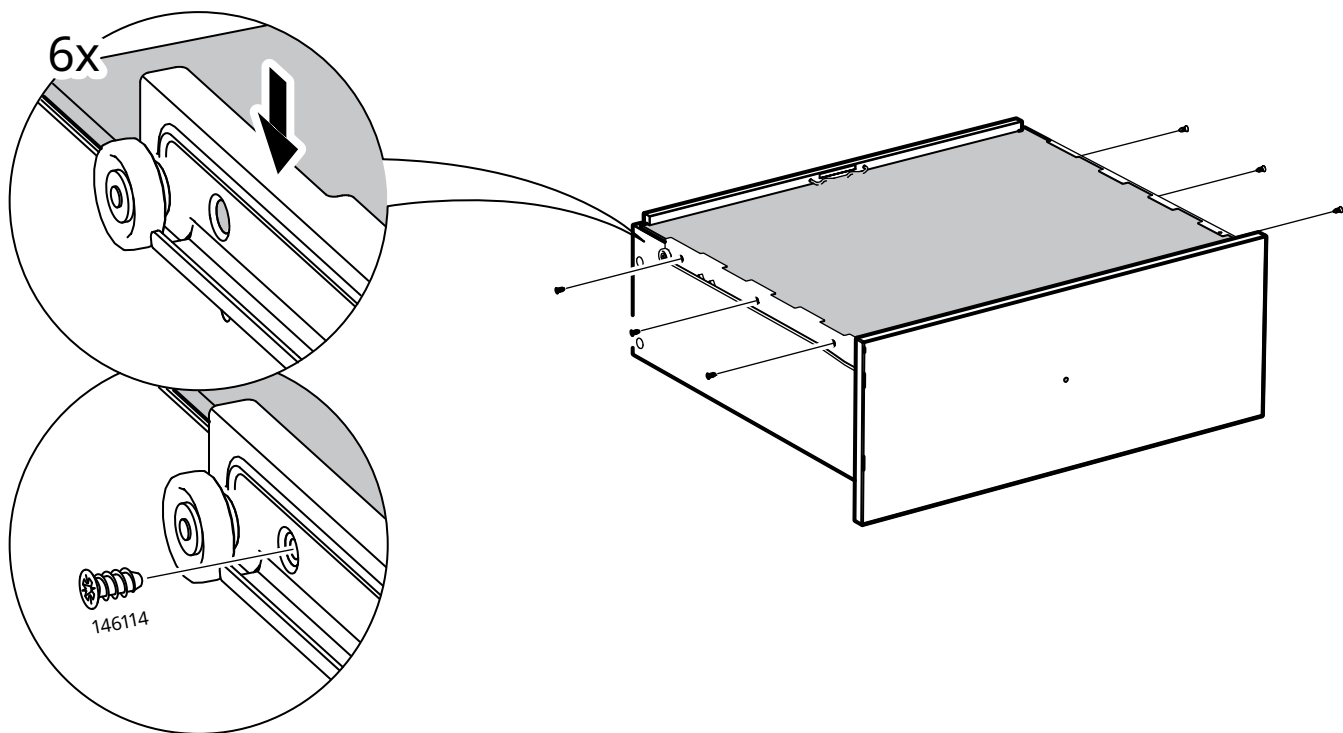 

58

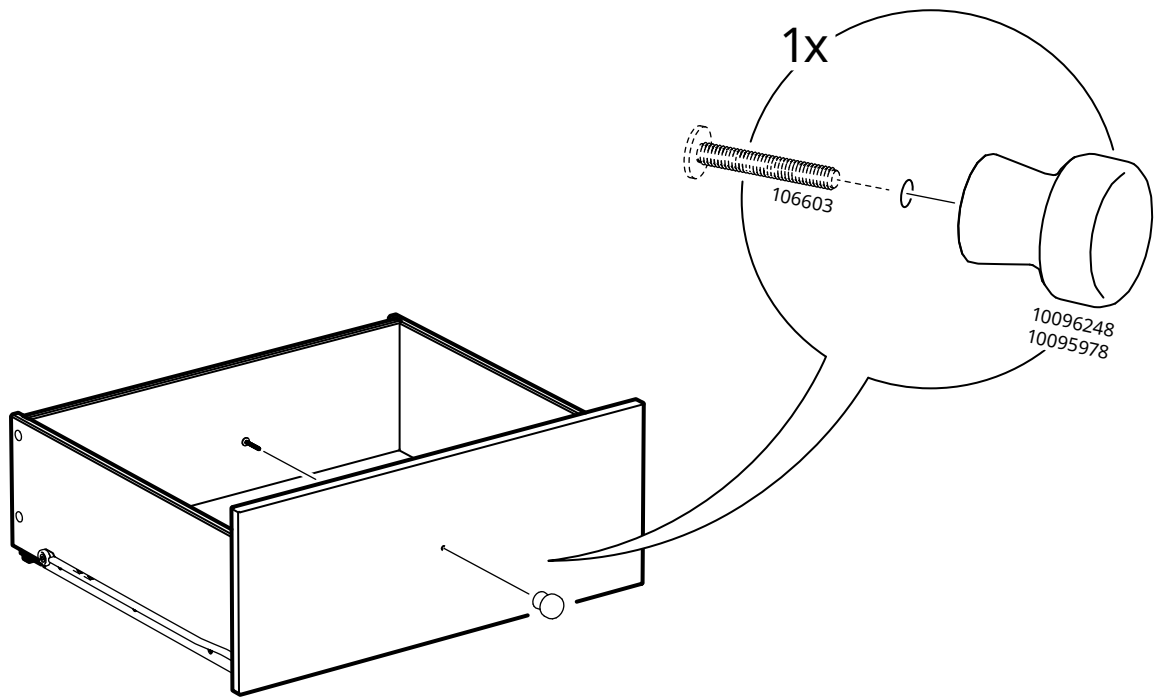 

59

