 


HAUGA

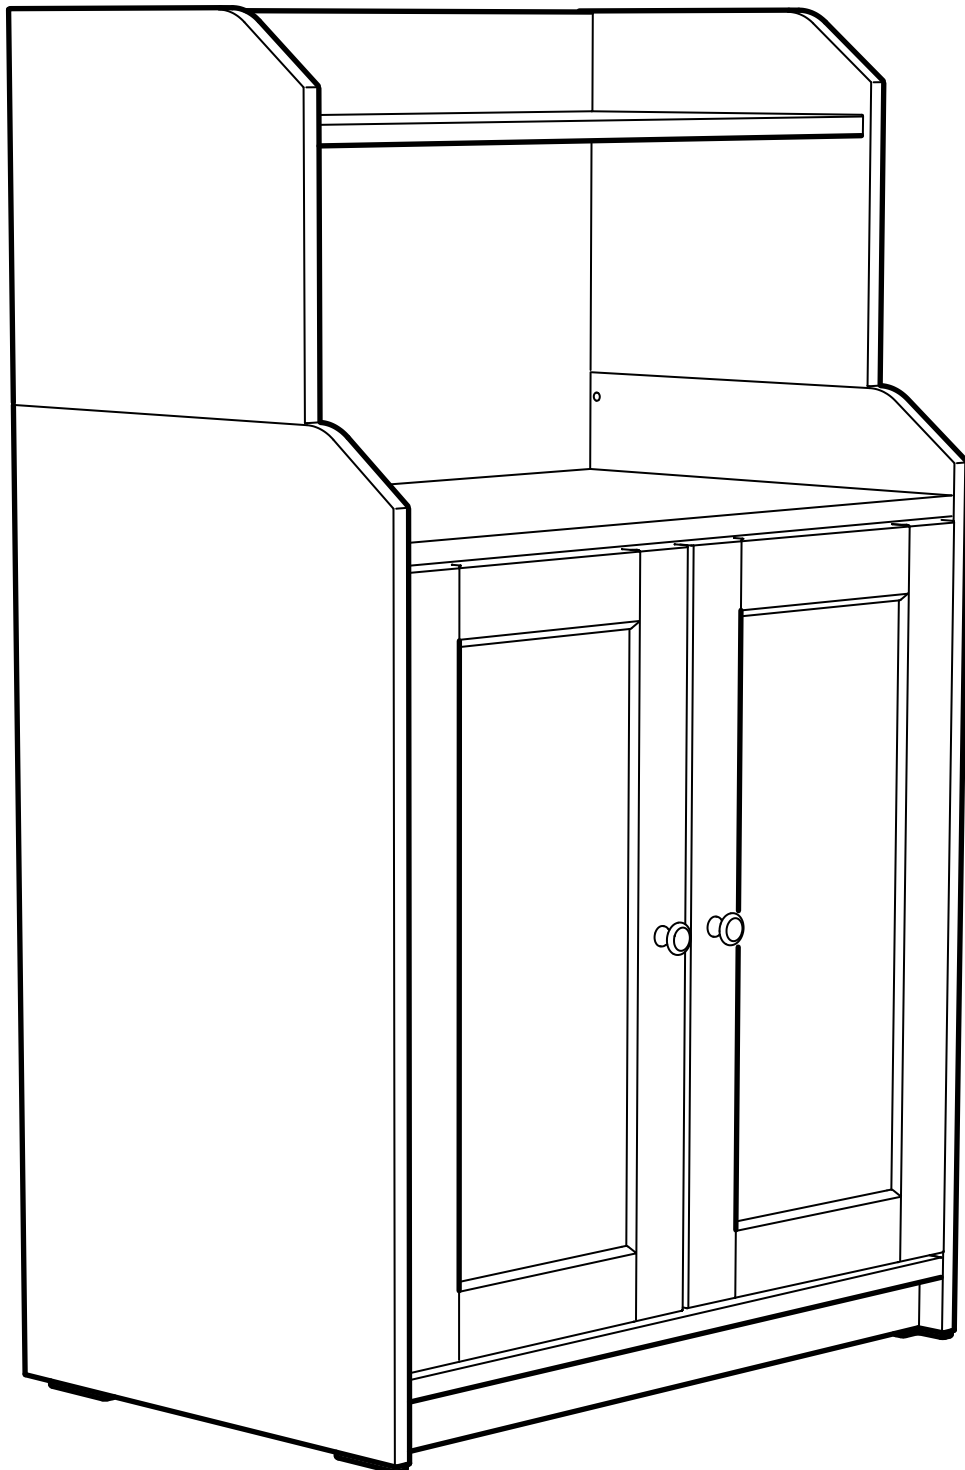

Design and Quality
IKEA of Sweden



English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

 
 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

 
 
 
 
NEVER open more than one drawer at a time.

Place heaviest items in the lowest drawers.


English

Read and follow each step of the instruction carefully.

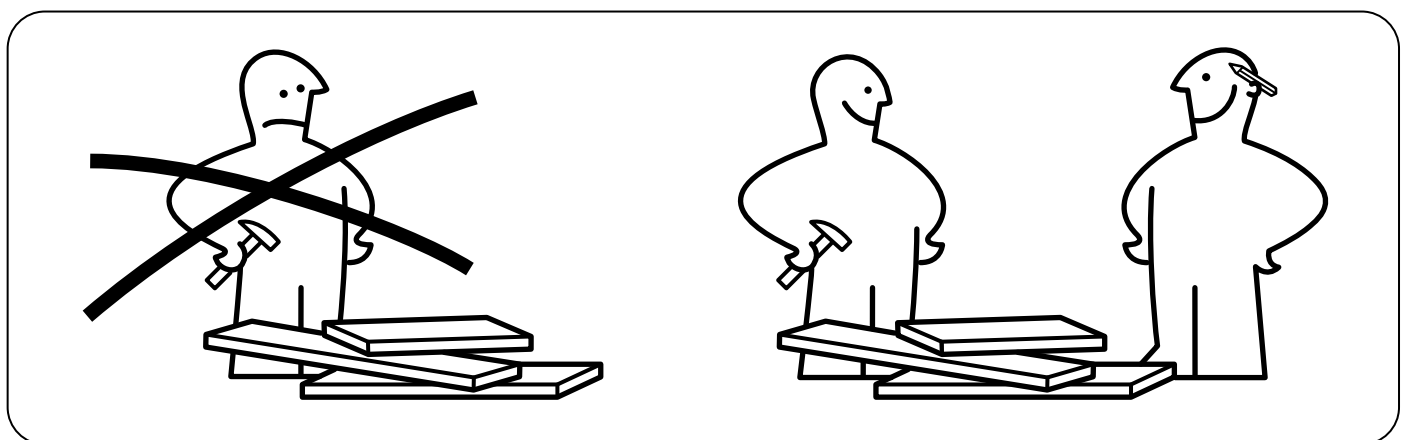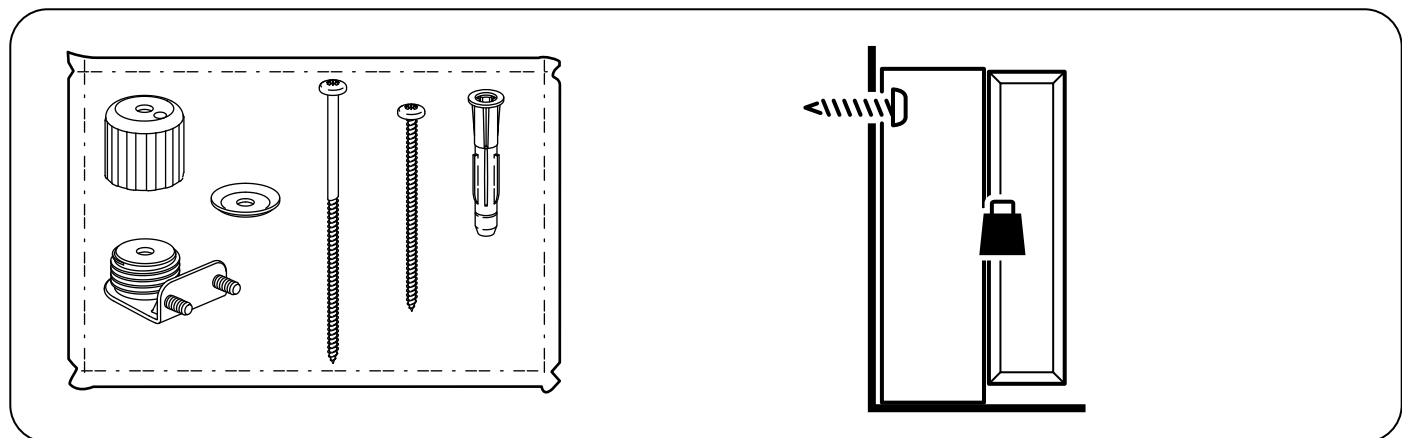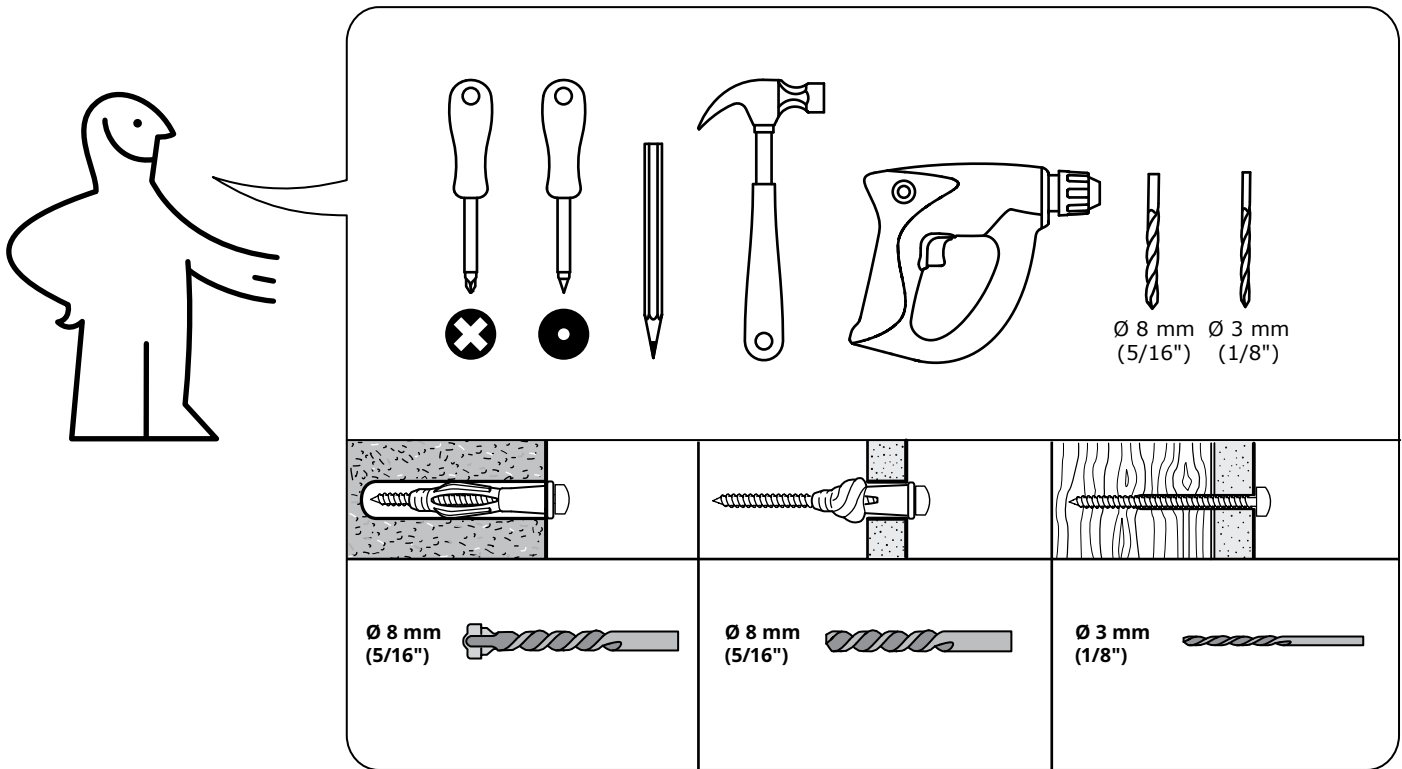

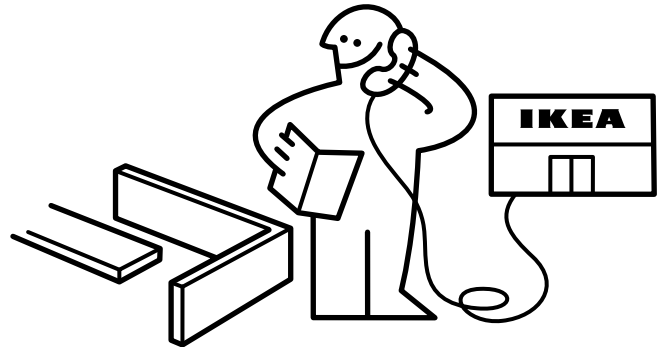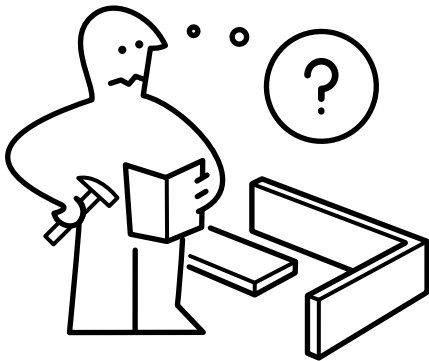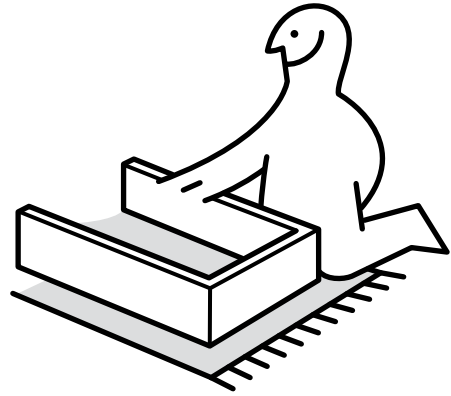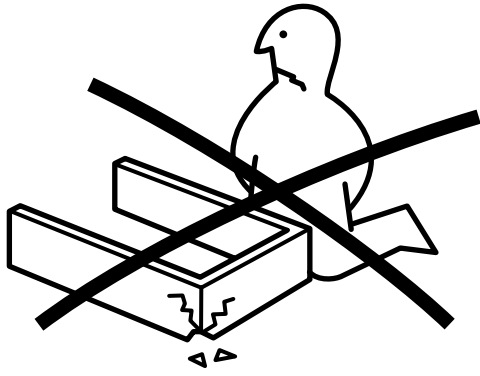

2

 


144574

8x




144575

 8x

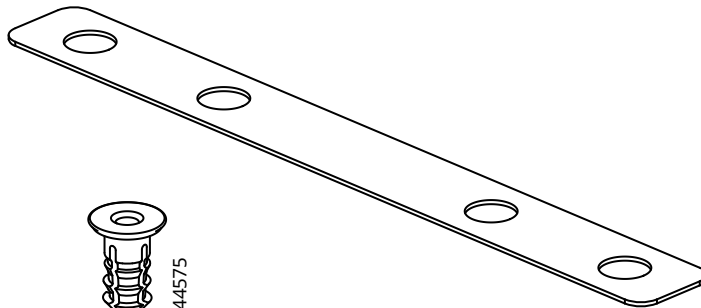


10049270

 2x

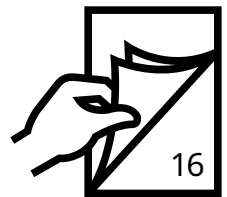


16

 3




144574
10051084

 2x

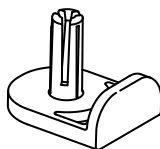


10050715
10042135
10070233

 2x

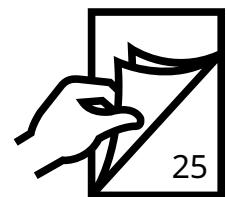


25

 1




151707

 10x



151708

 10x

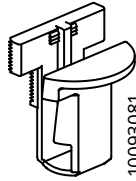


10093081

8x




10093082

 8x




101345

 5x

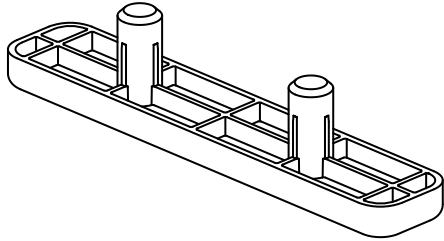

158568
153548

 2x

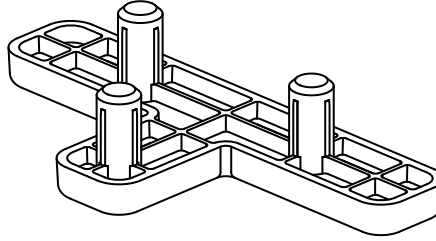


10051022
10040039

2x




120173

 4x

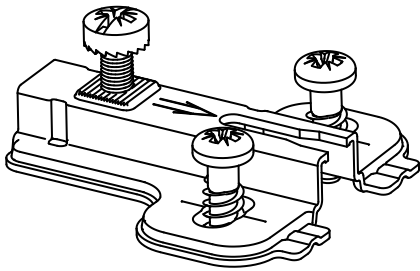


10039878

 4x

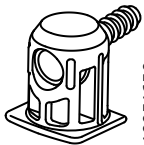

10051650
10051660

 8x

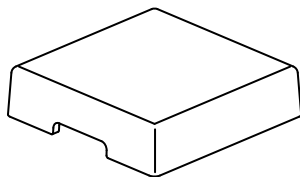


190586
133303

2x




10047146
10047130
10070195

 2x

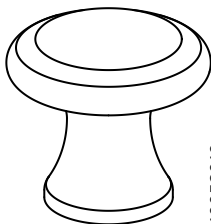

10052019

 2x




119976

2x




 9

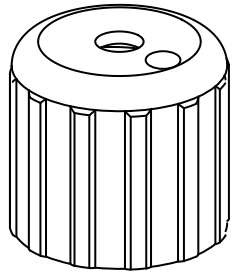


150689

 2x




126916

 2x

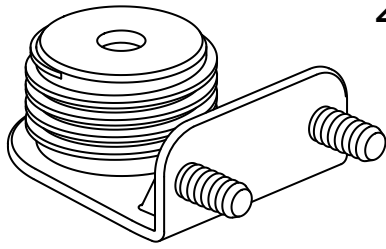


150688

 2x




147968

 2x



158469

 2x




121714

2x



 
17

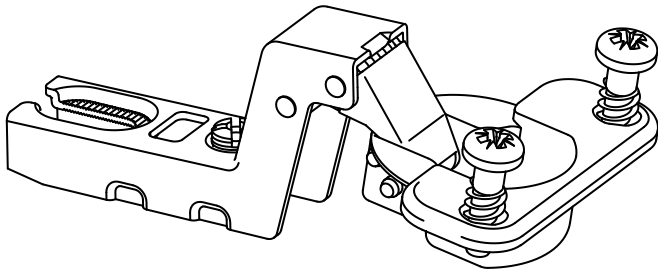


10039873

4x

 
1

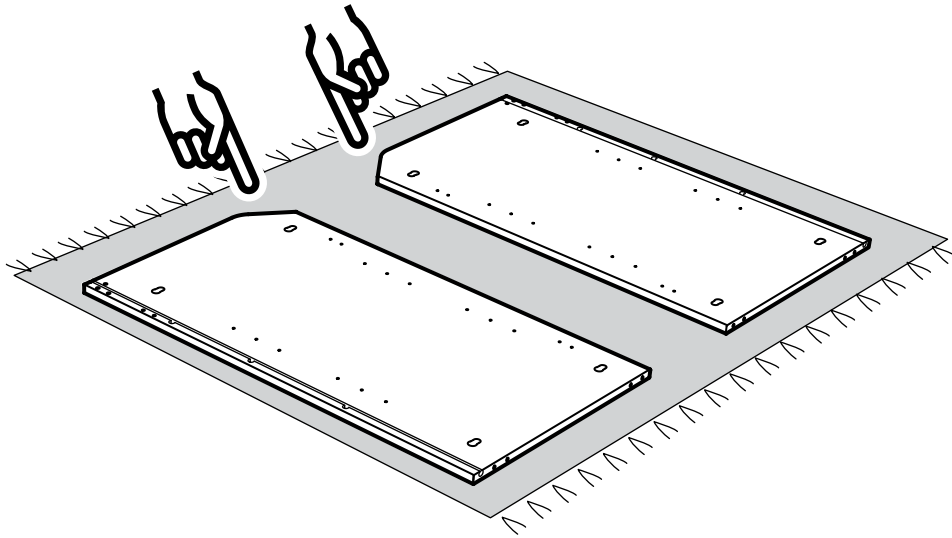


2

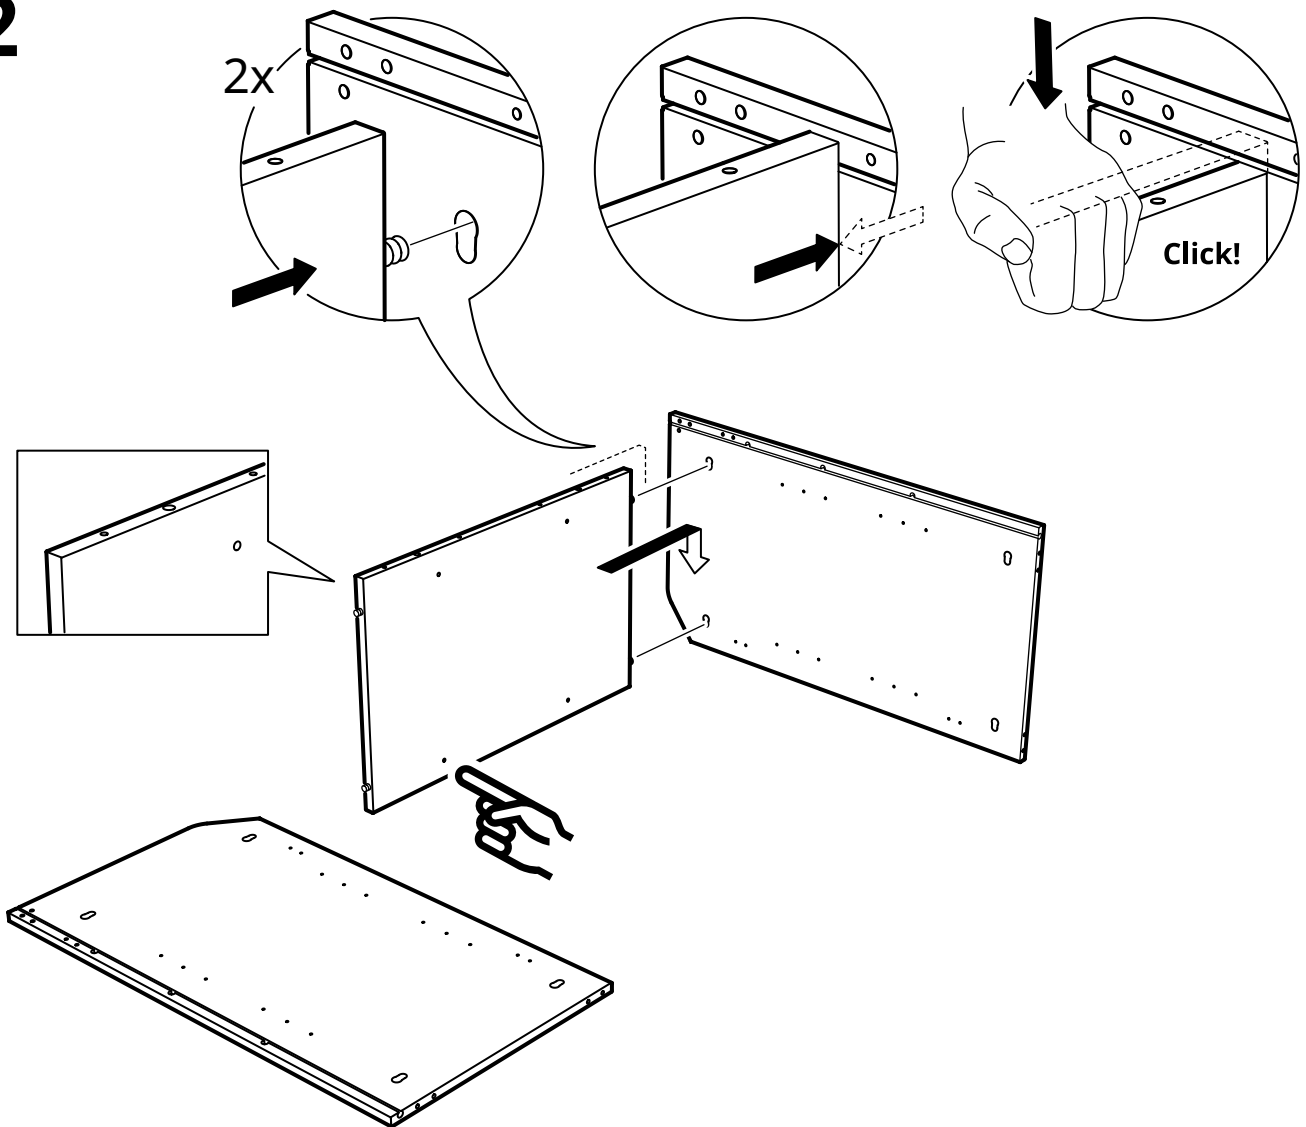 


3

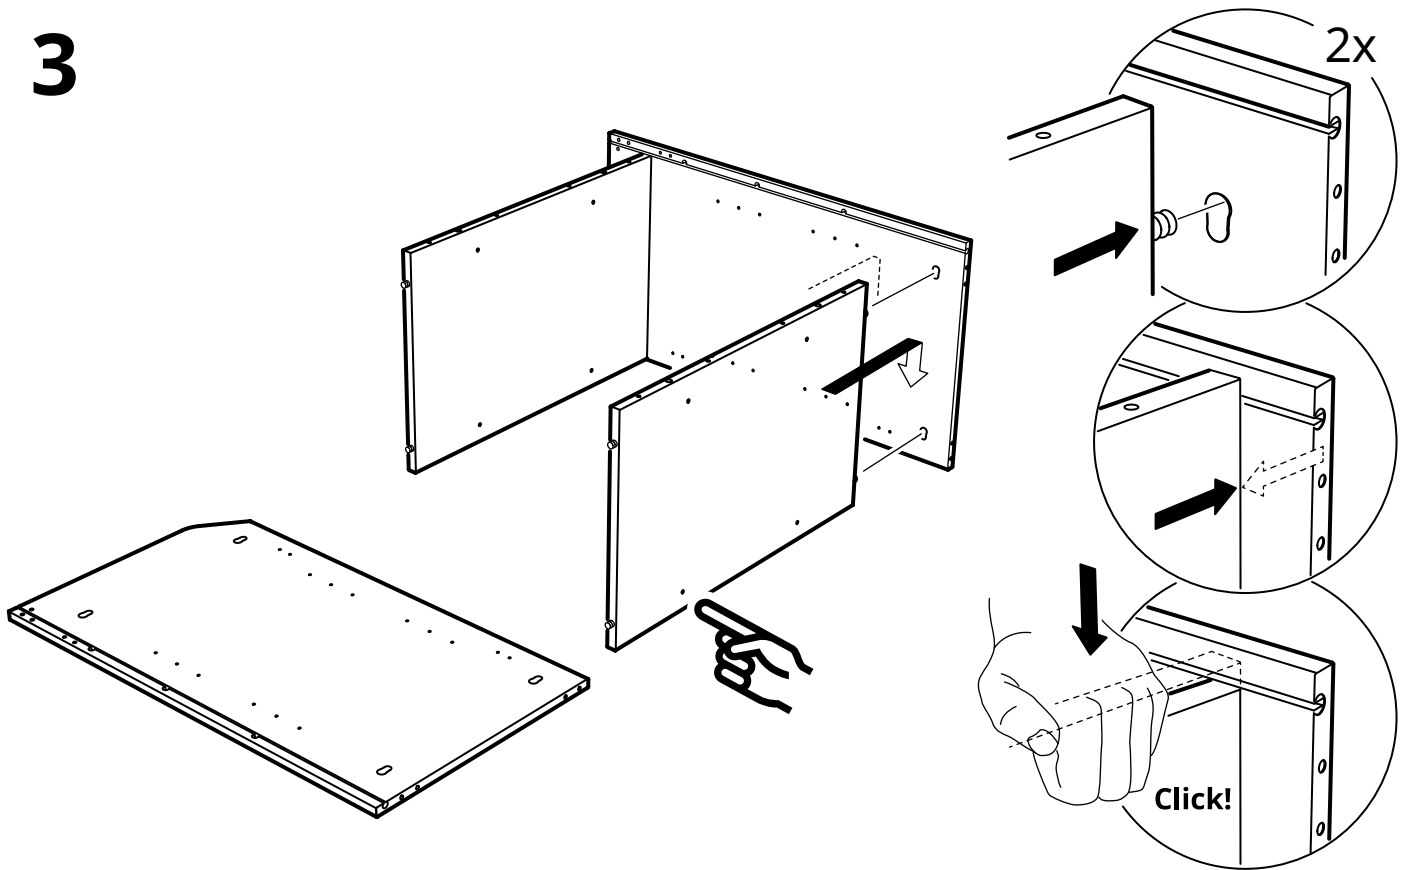 




4

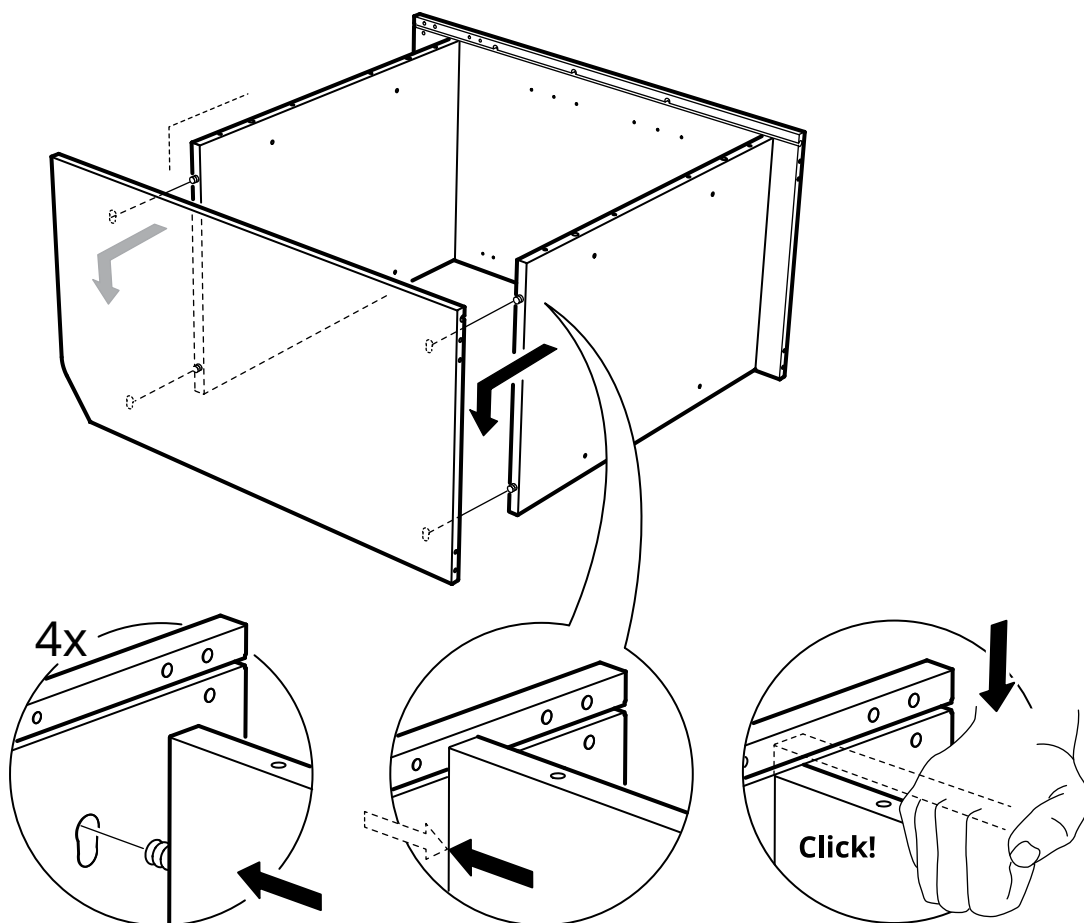 


5

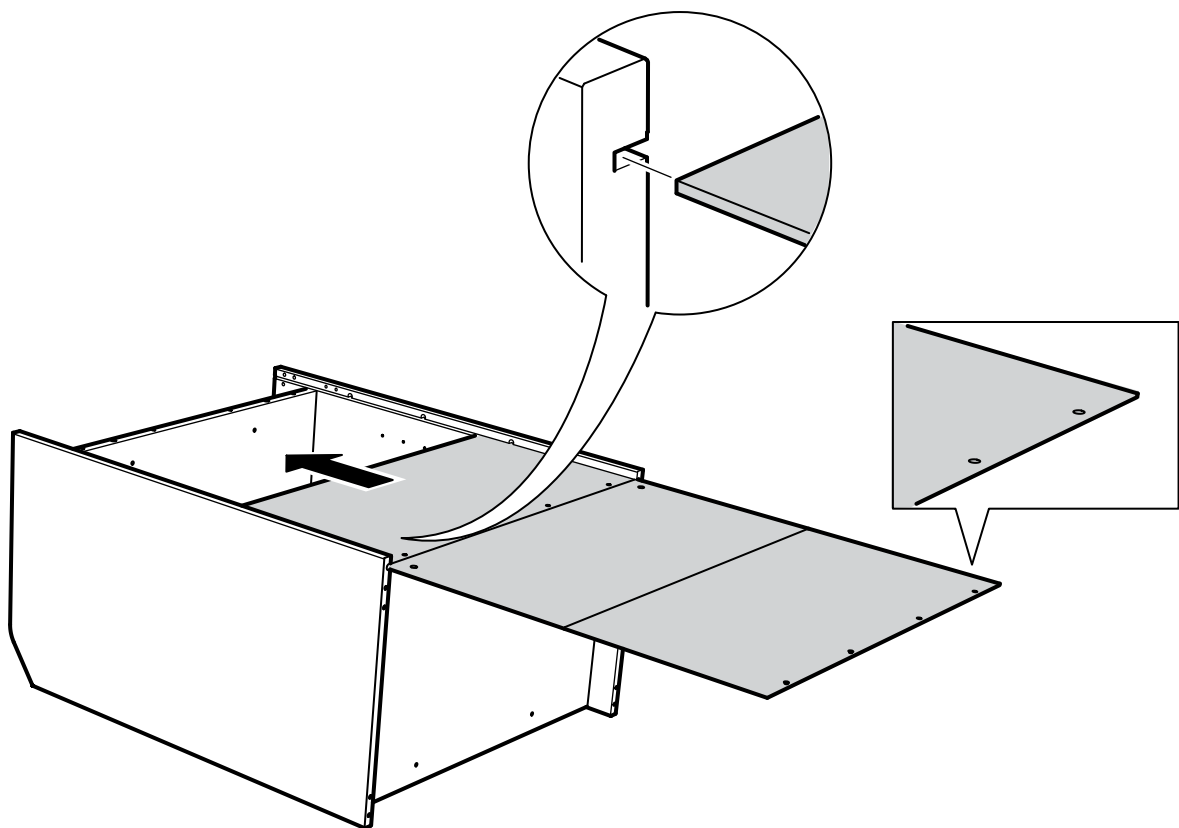 


6

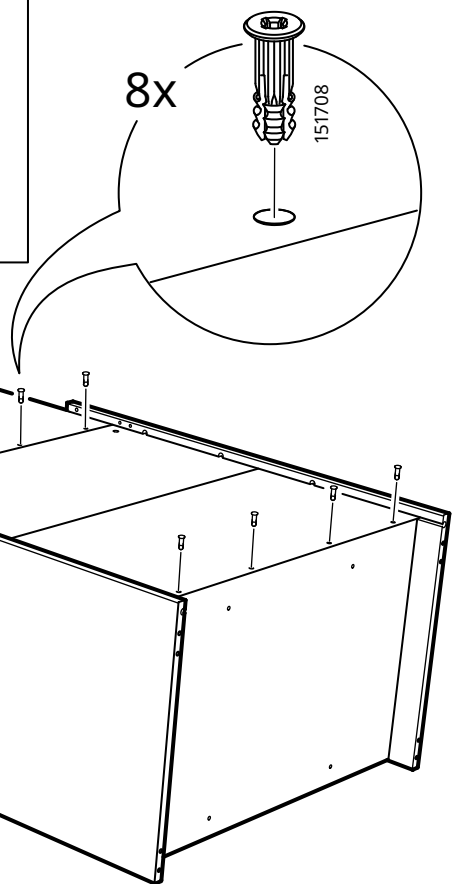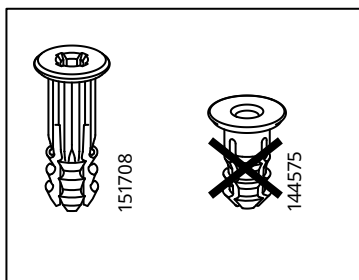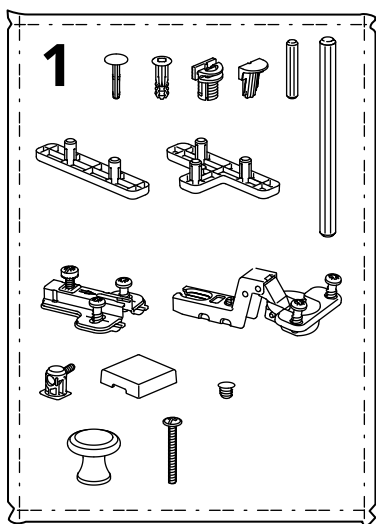   


7

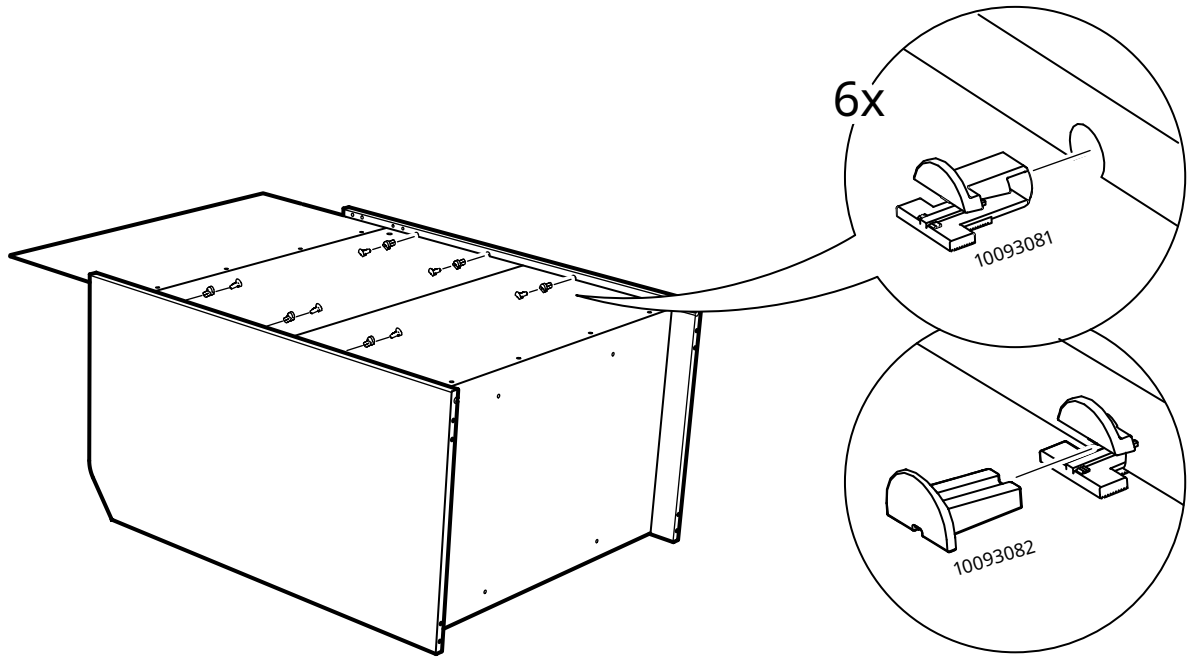 


8

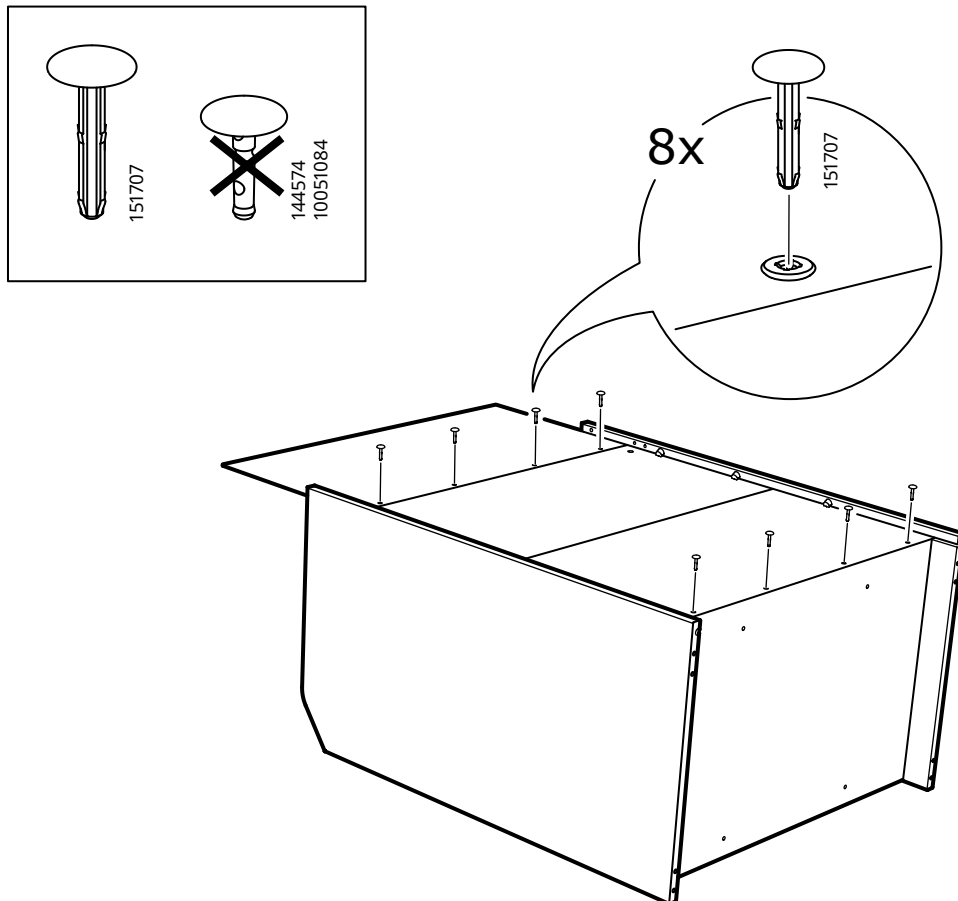 




9

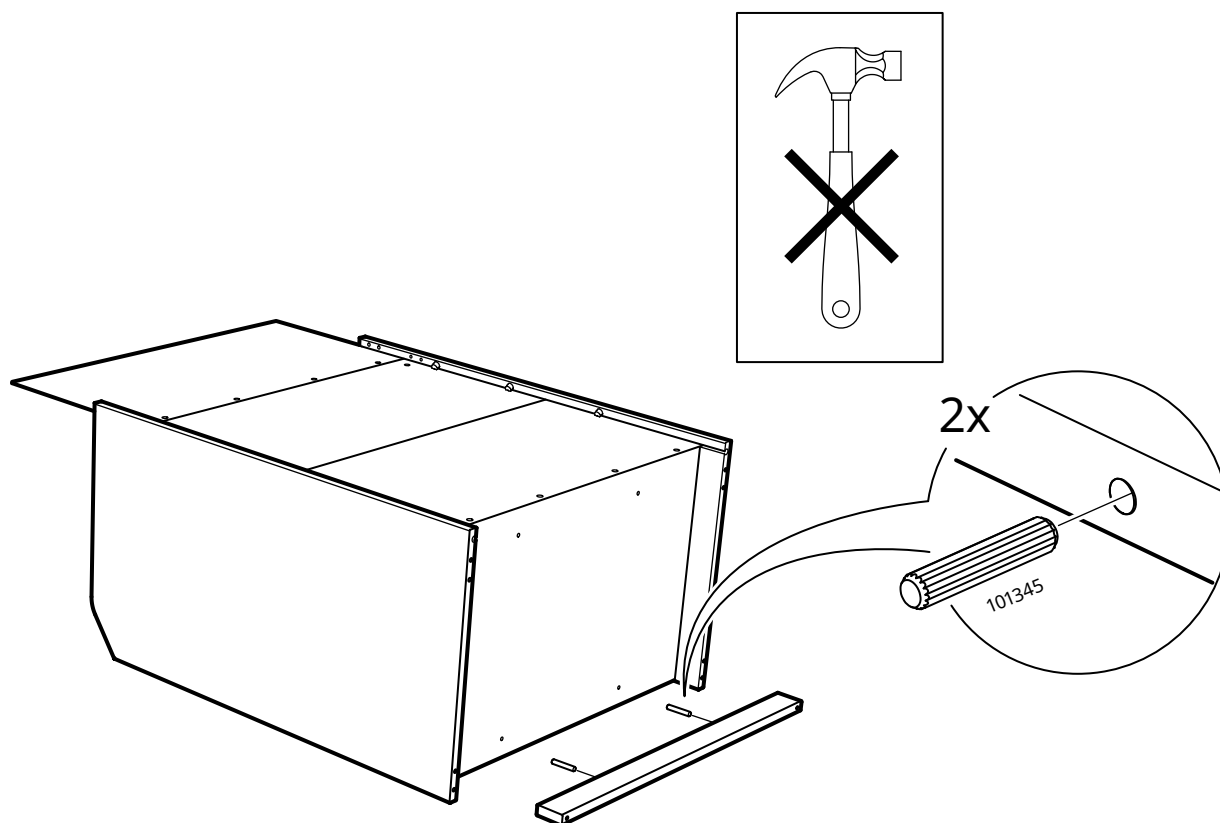 


10

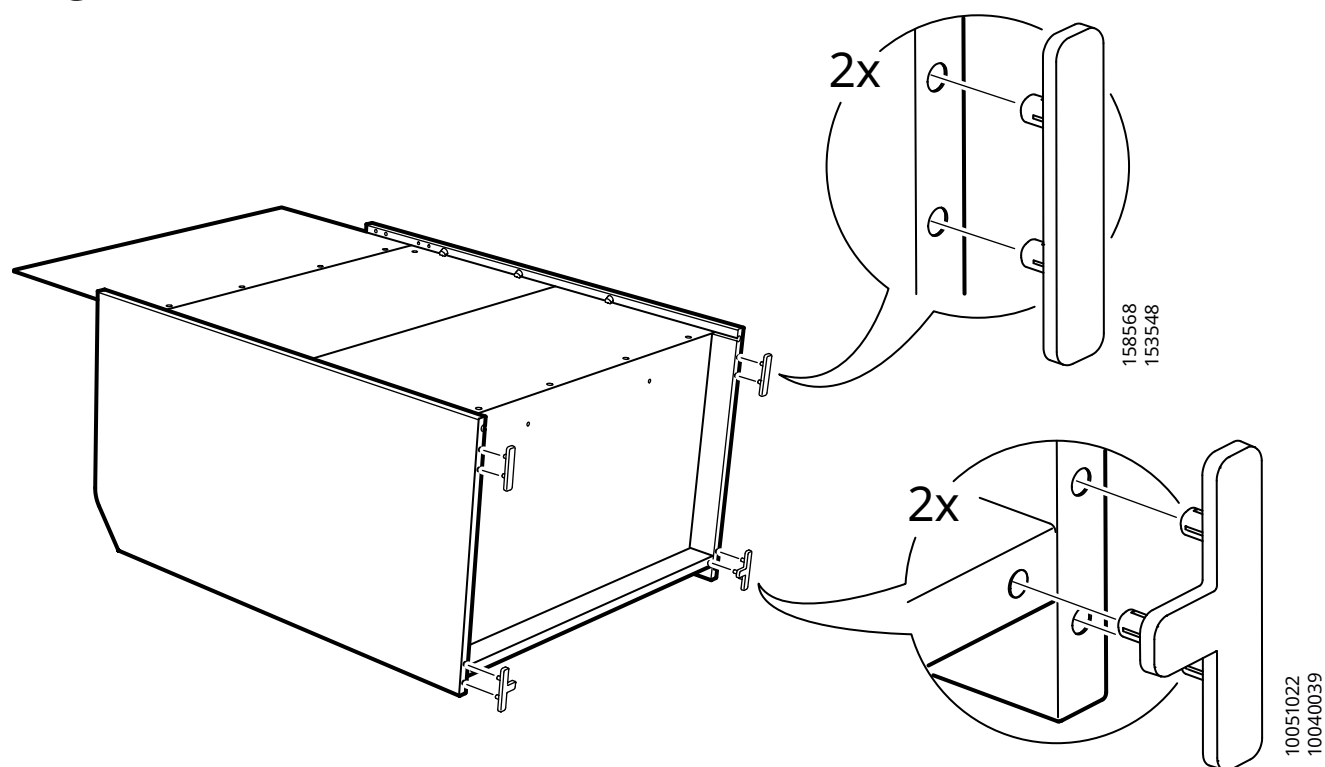 


11

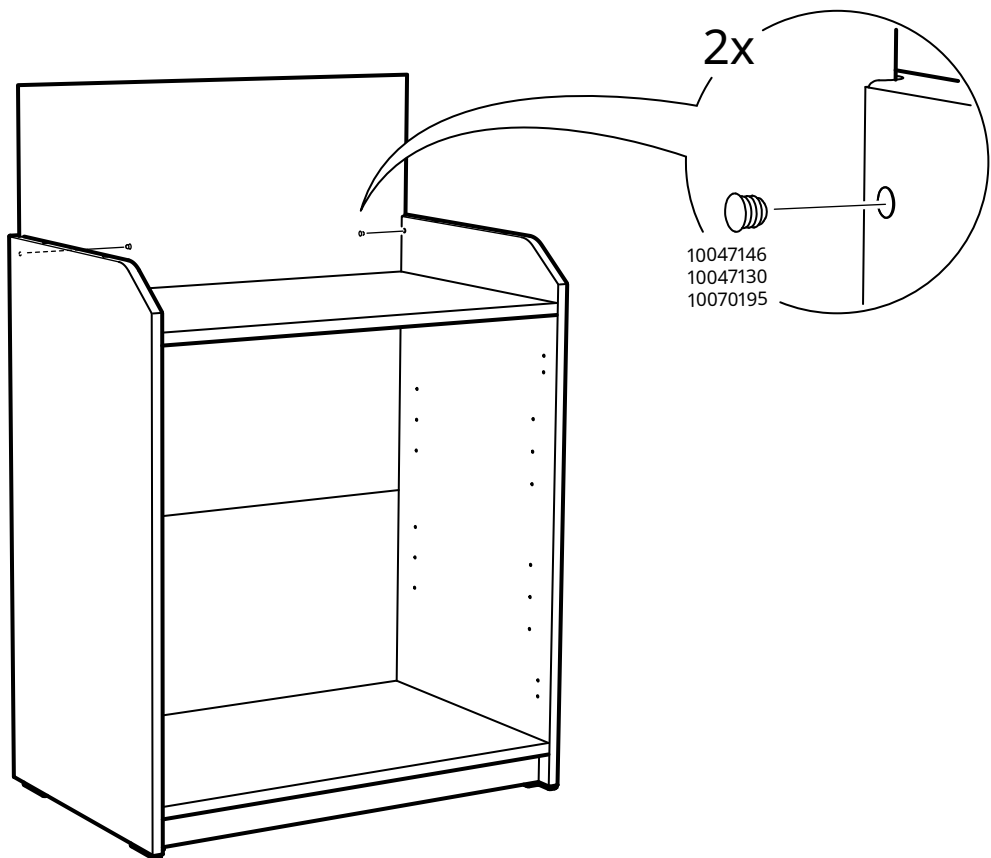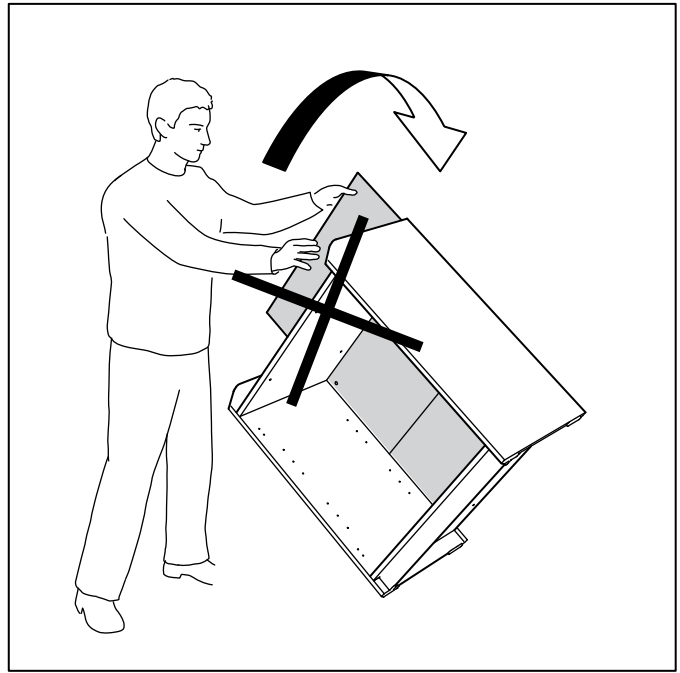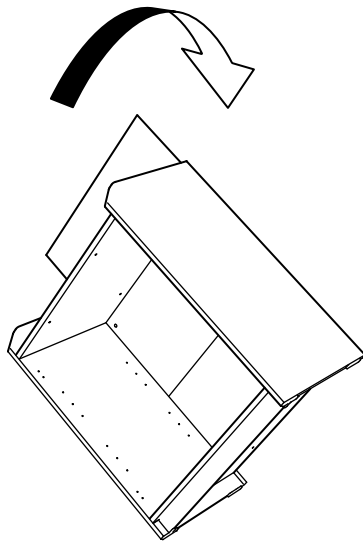   


12

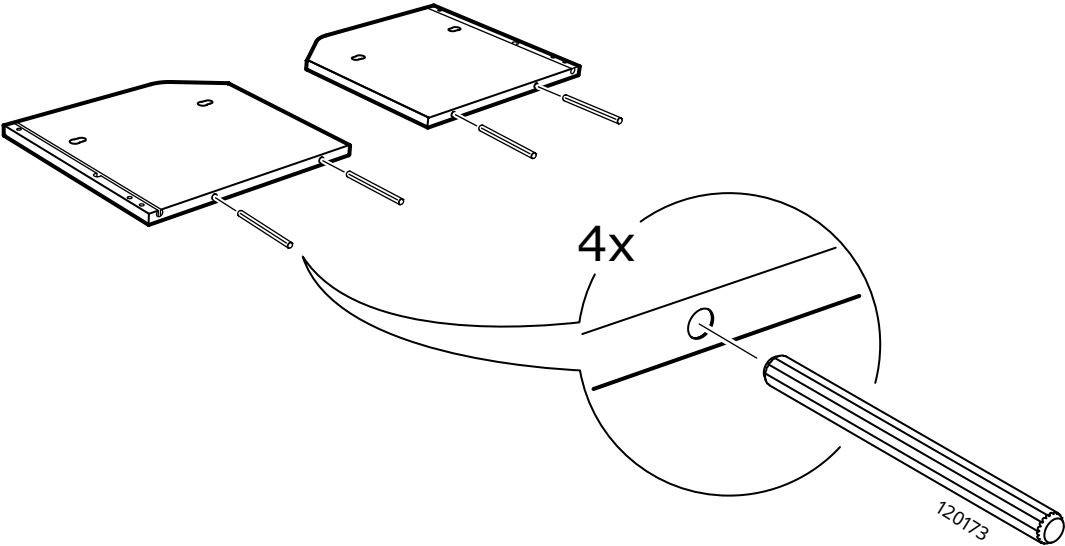 


13

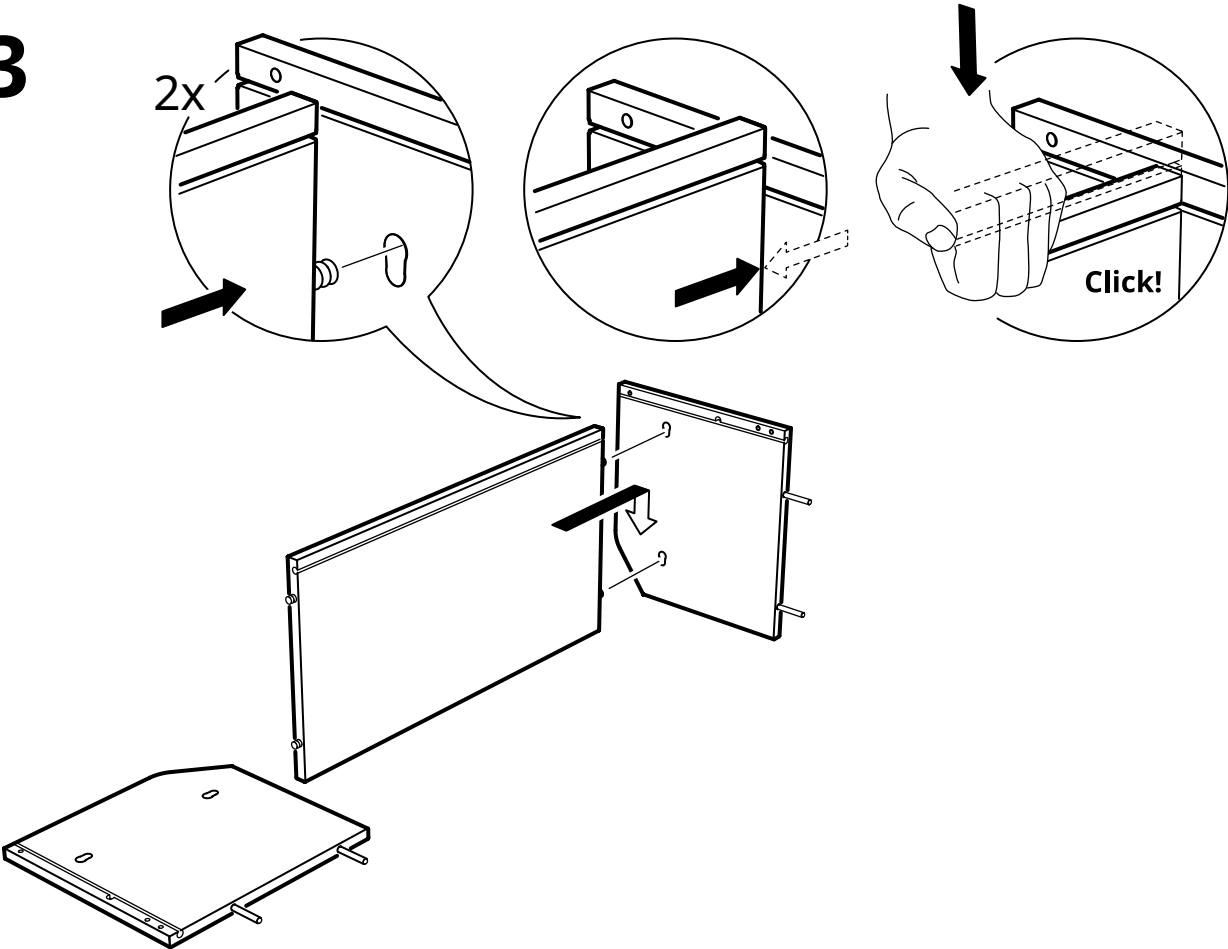 


14

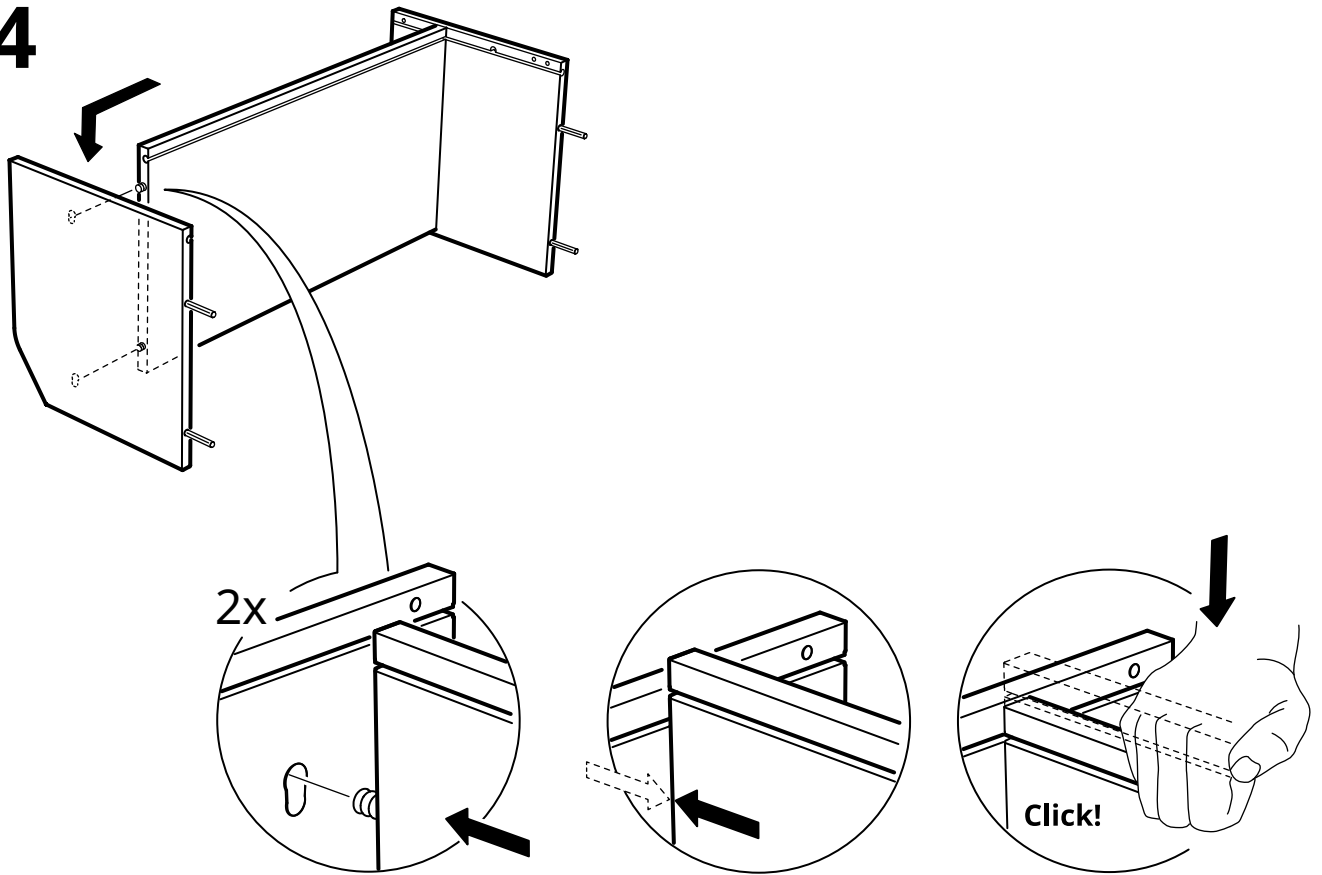 


15

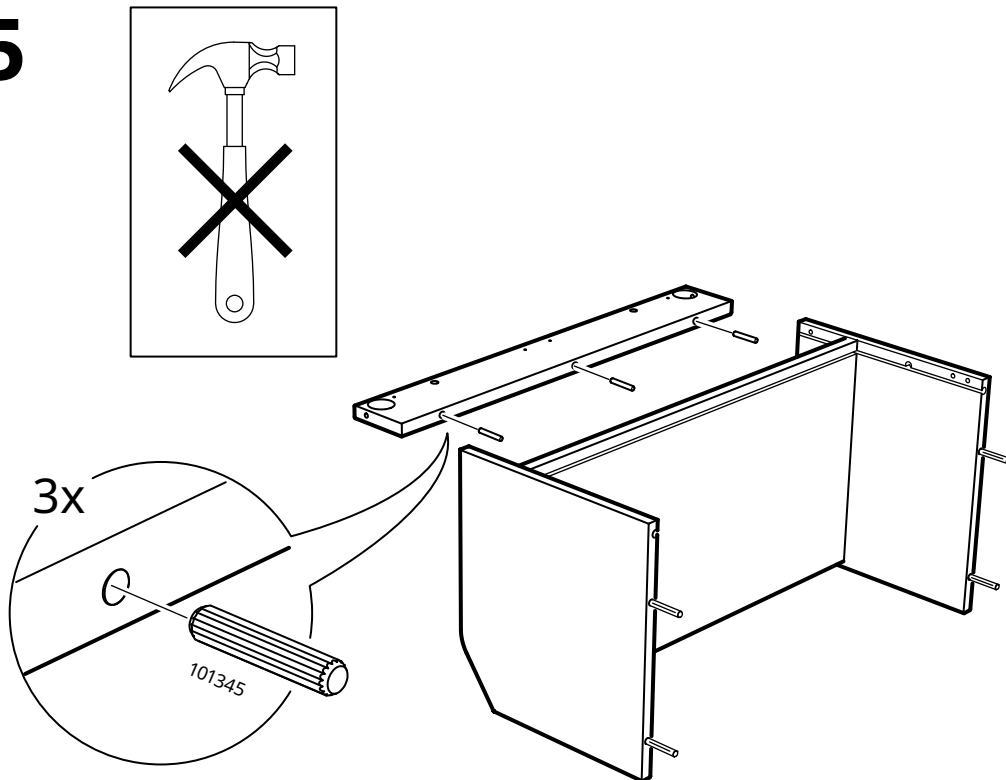 






16

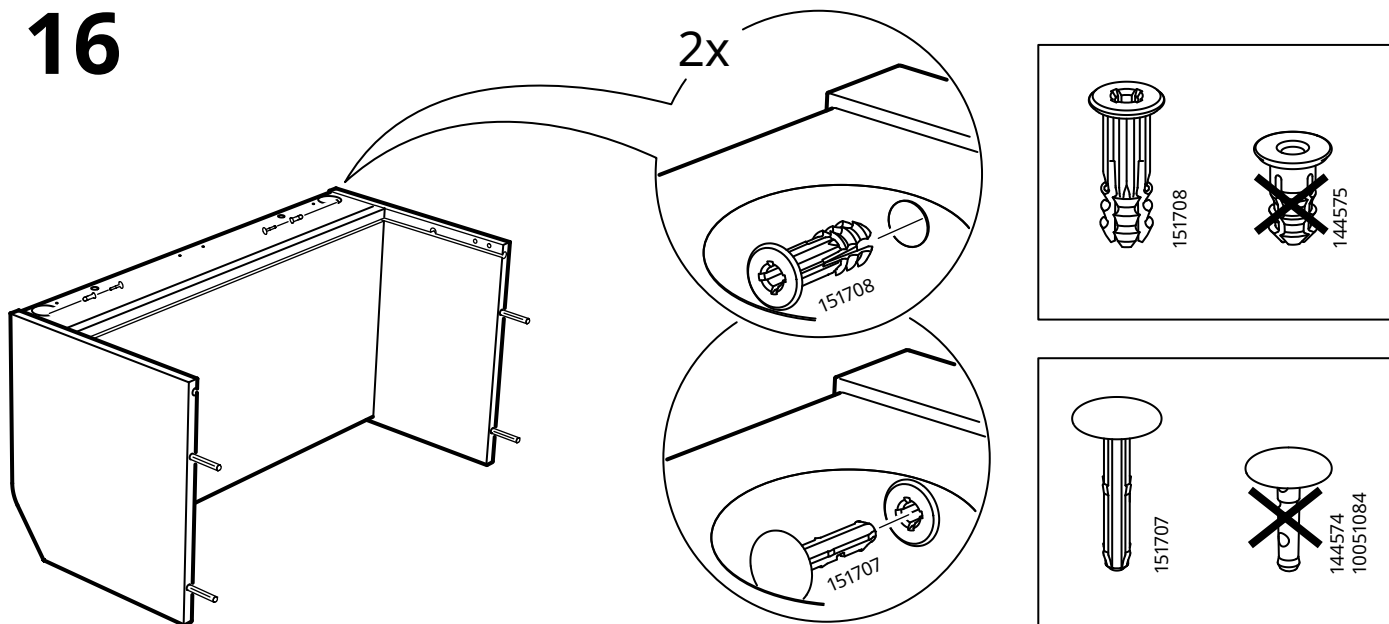 


17

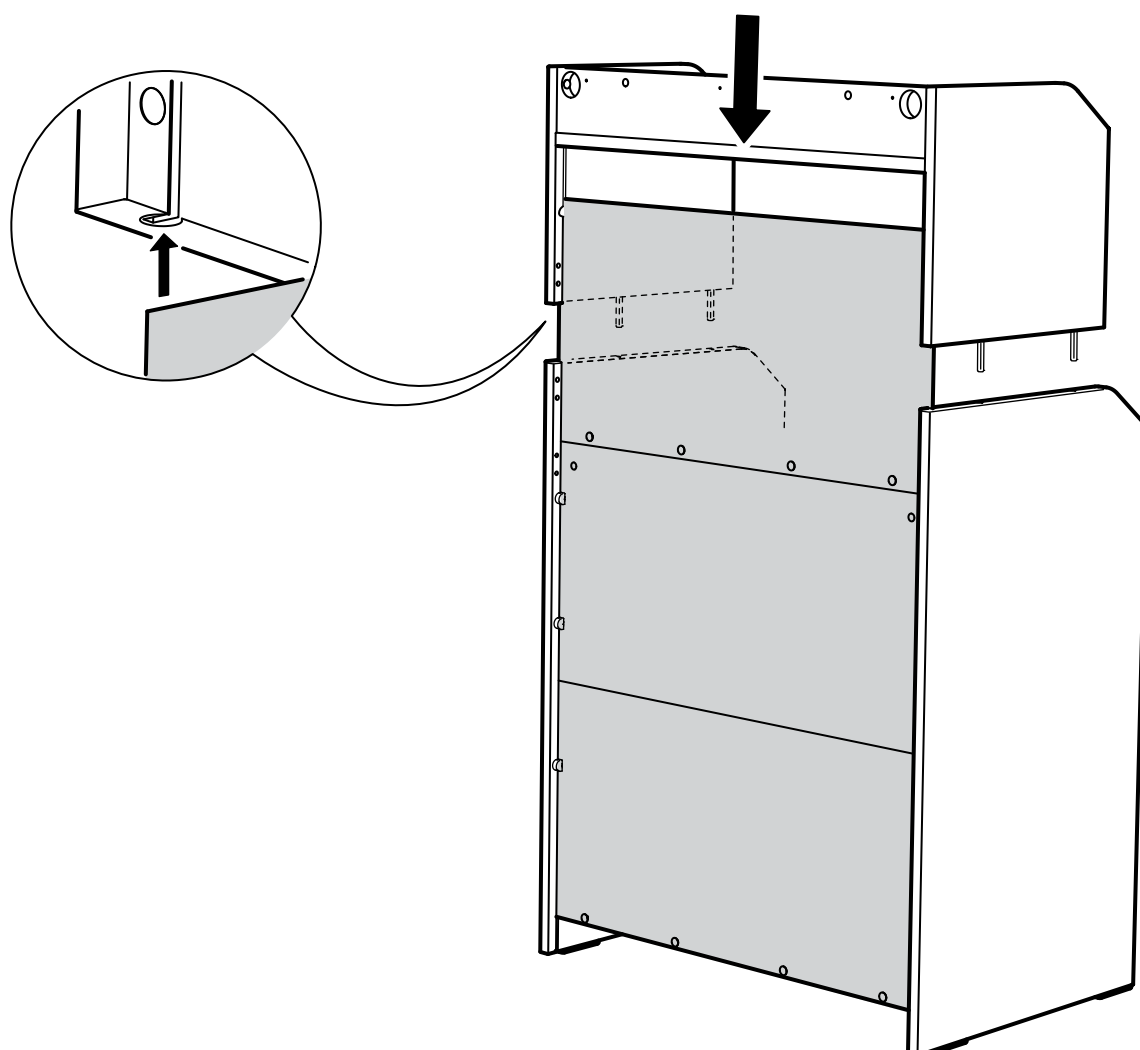 


18

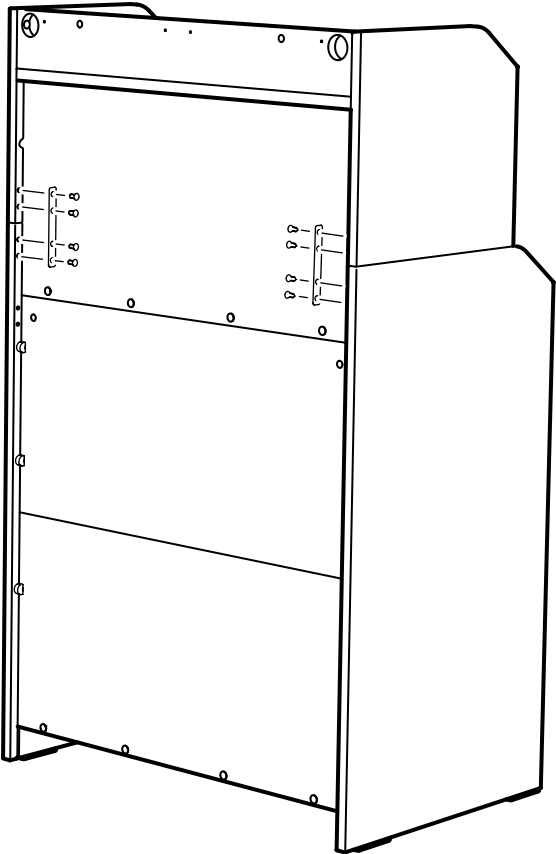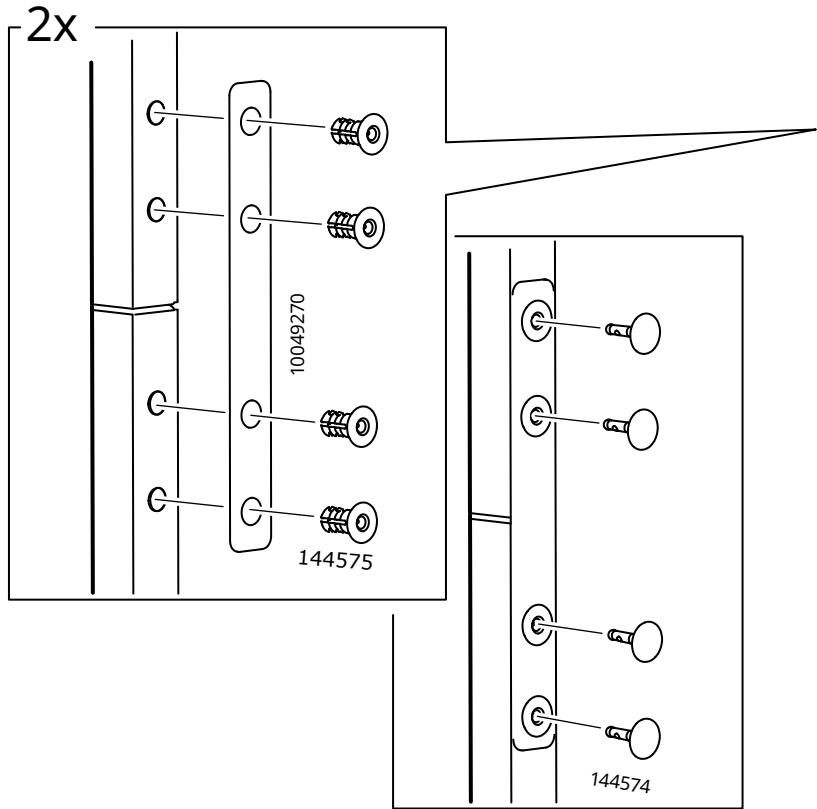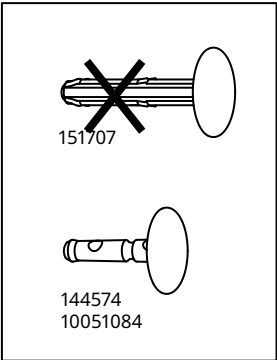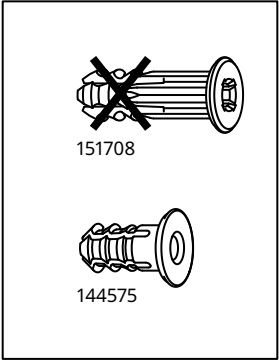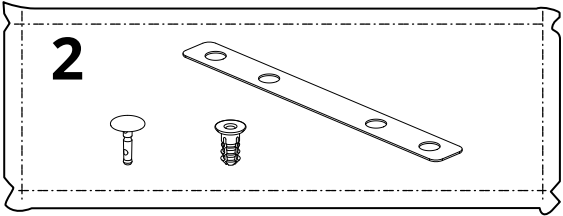     


19

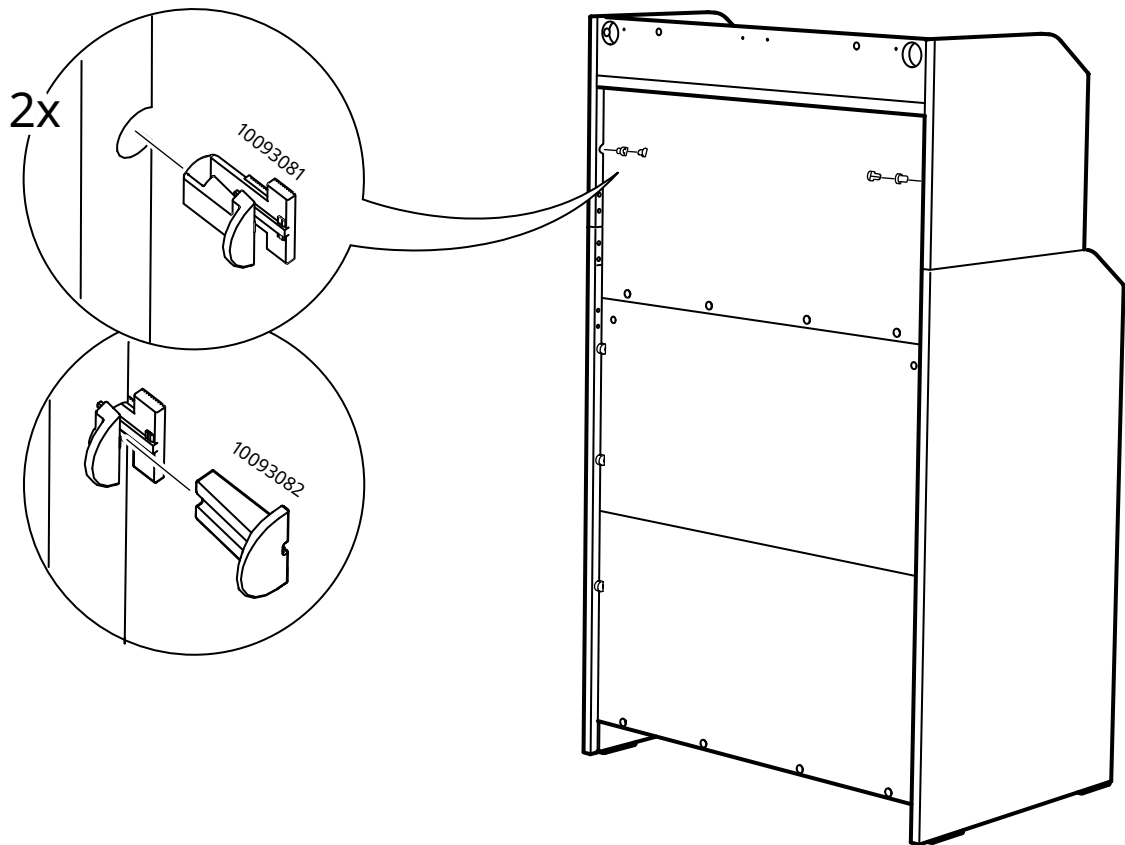 



20

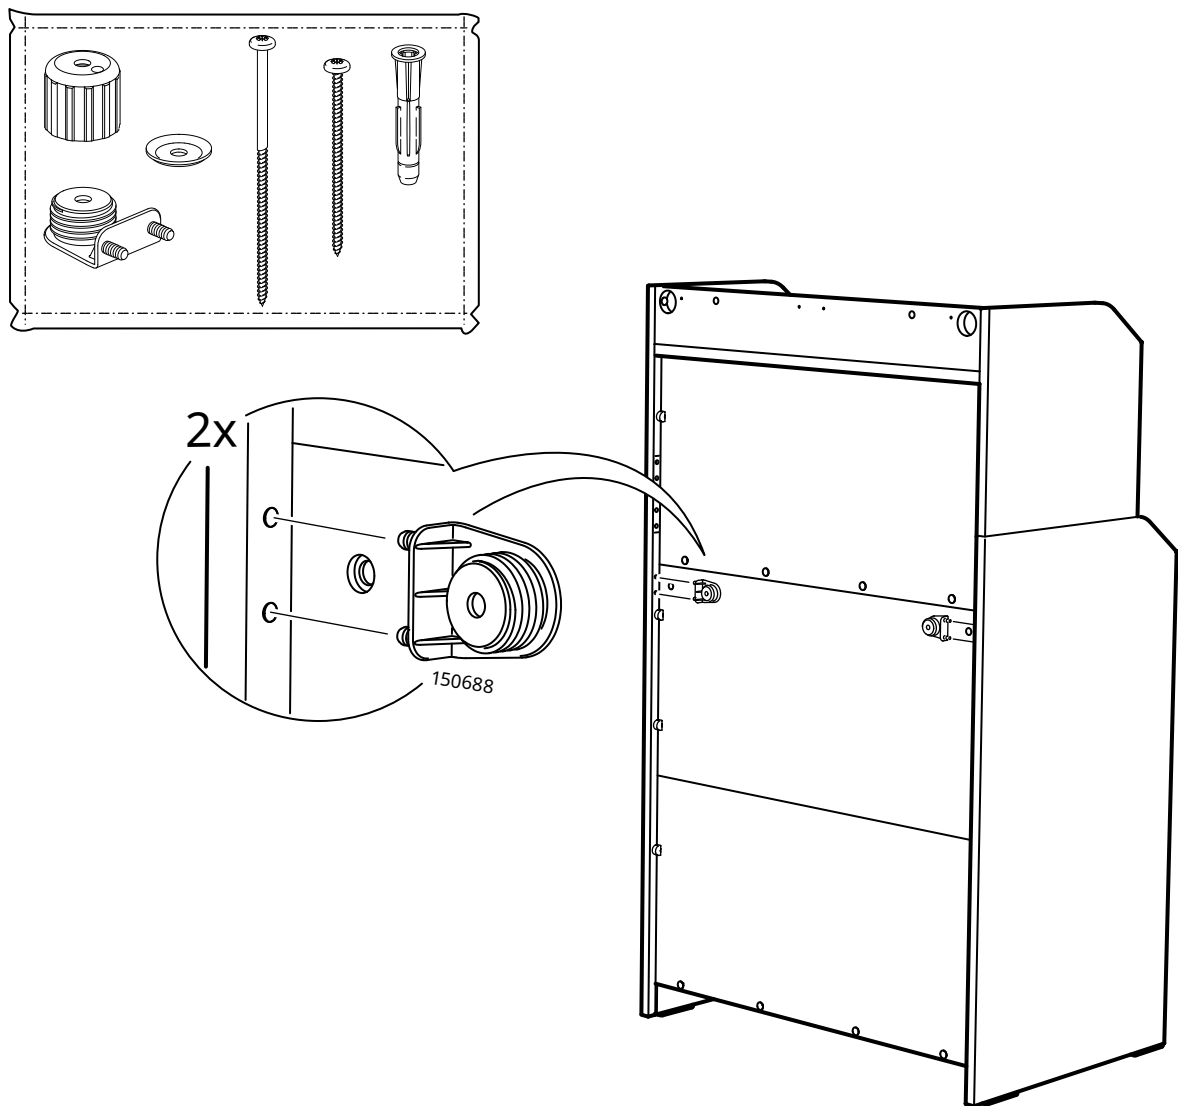 

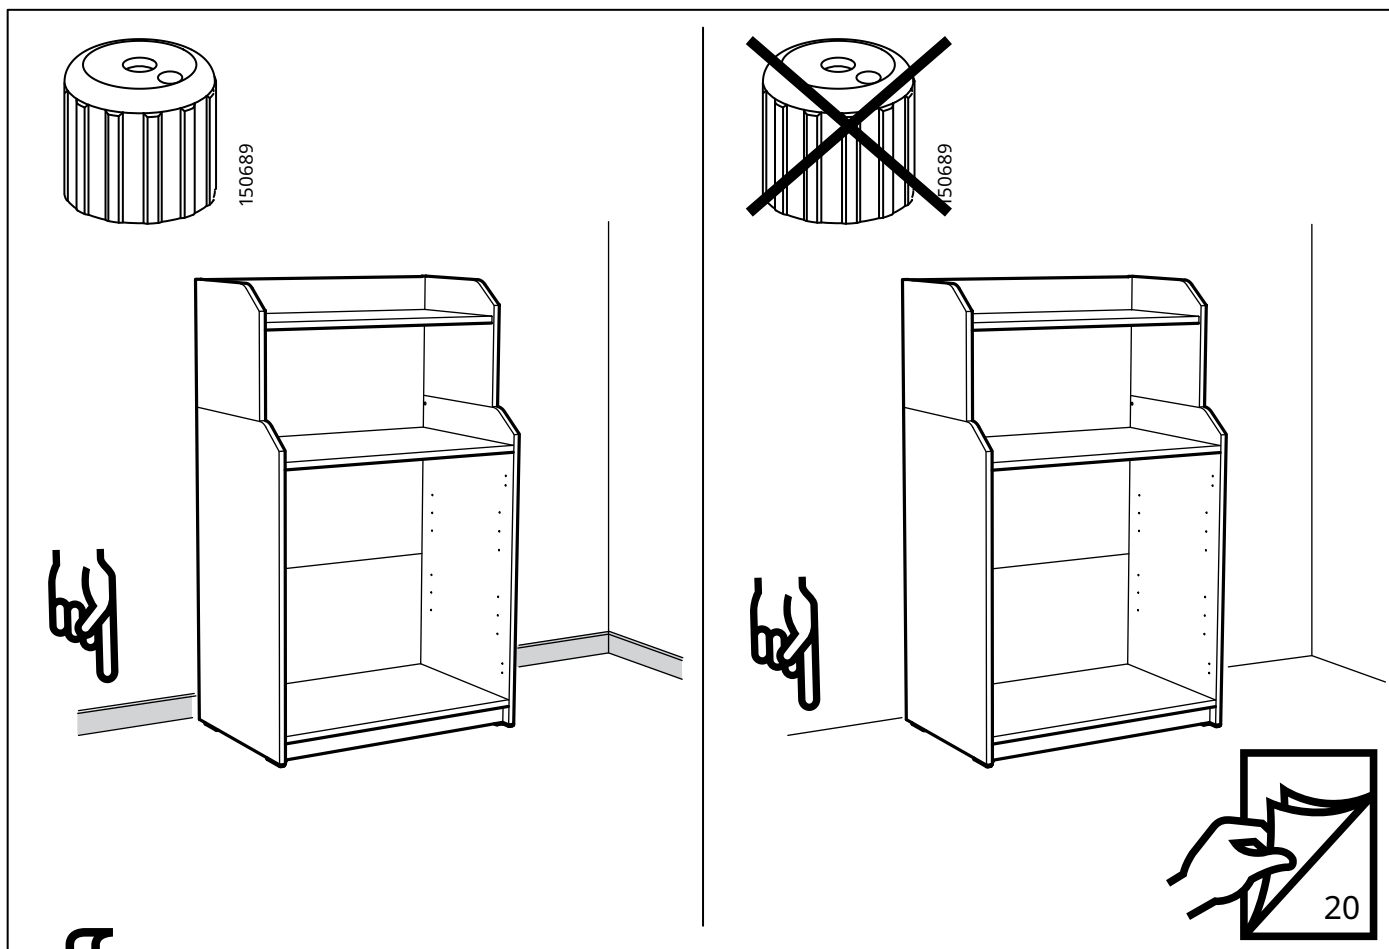 


⇕
21

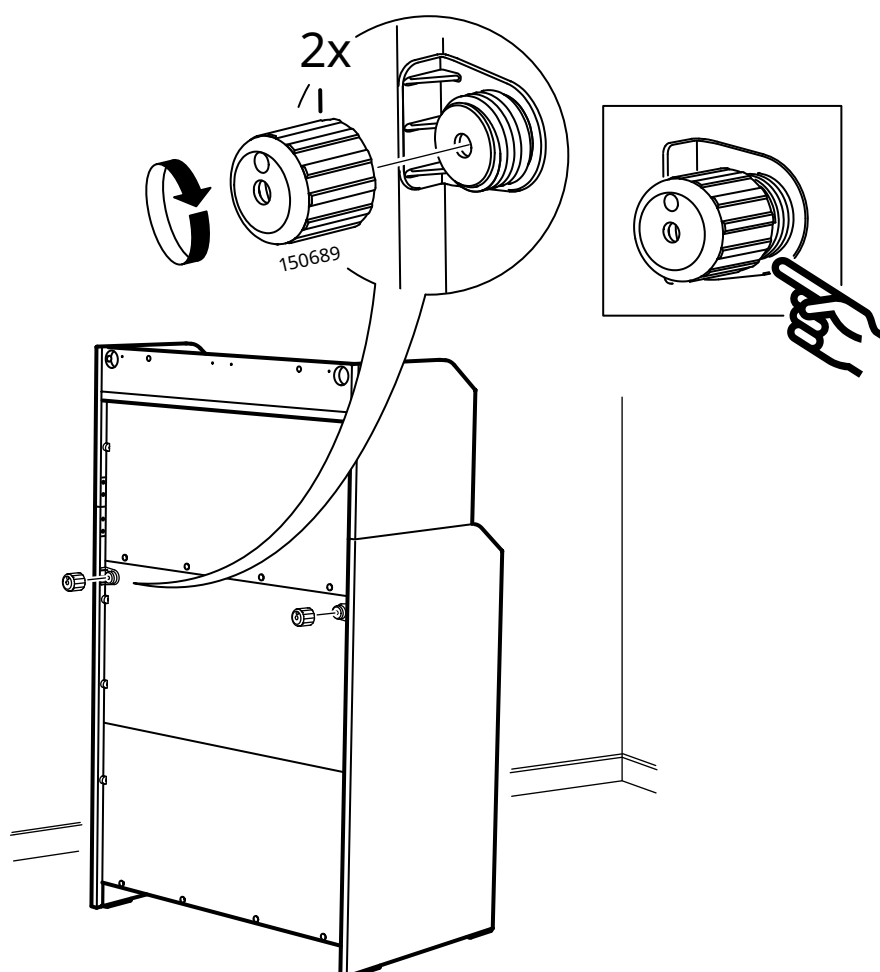 


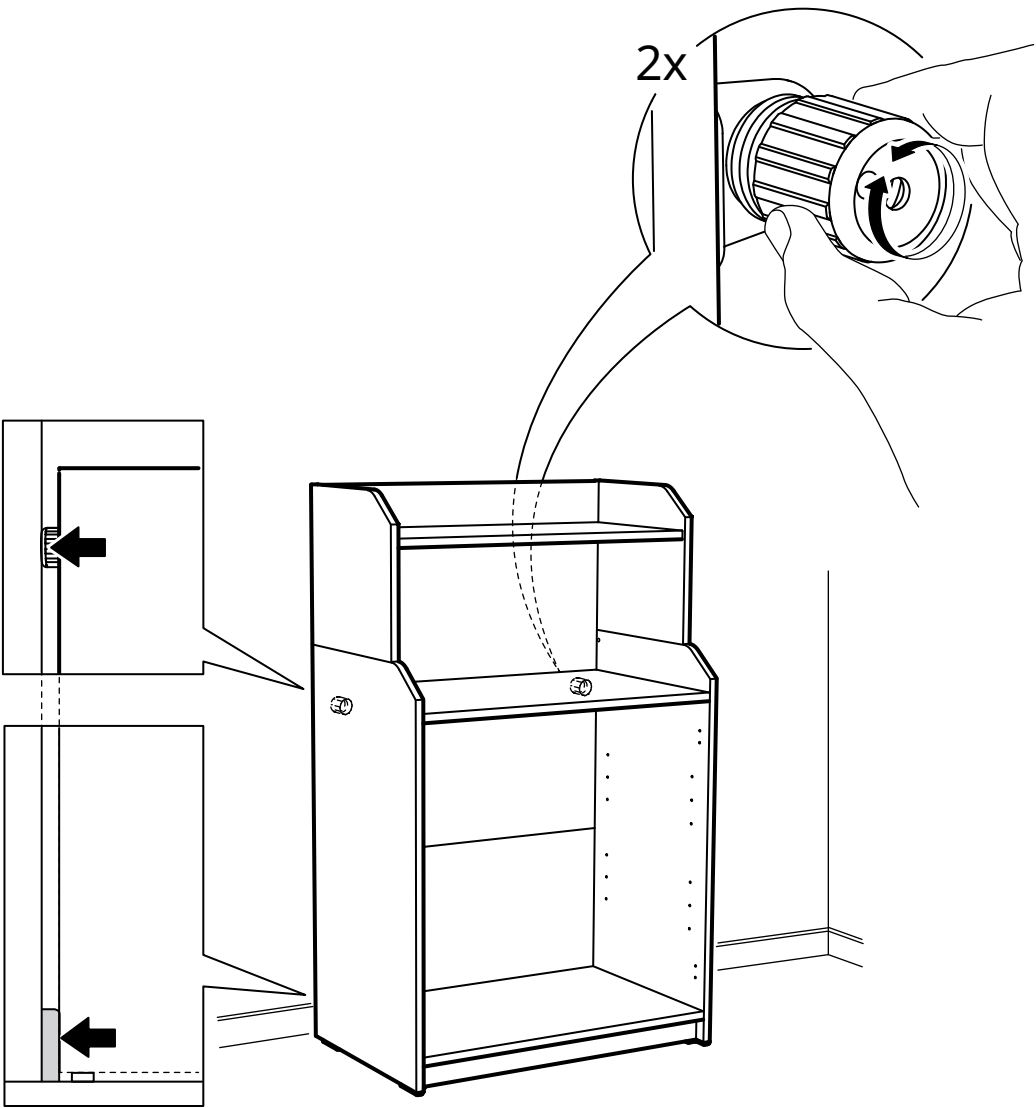 

23

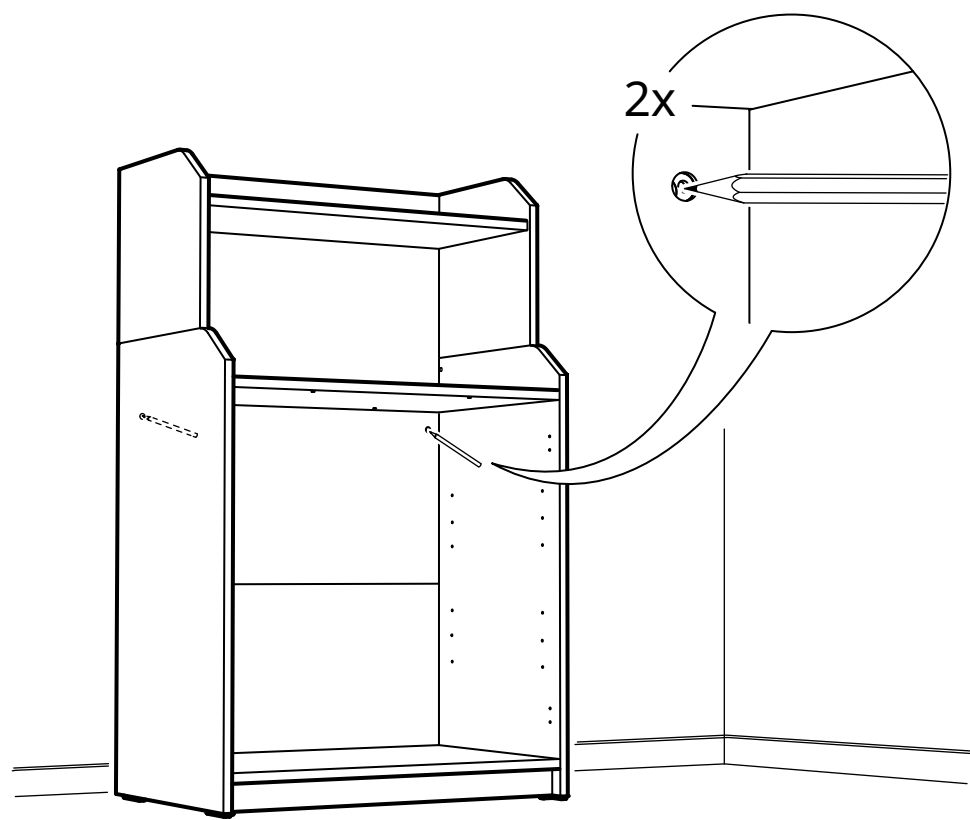 

24

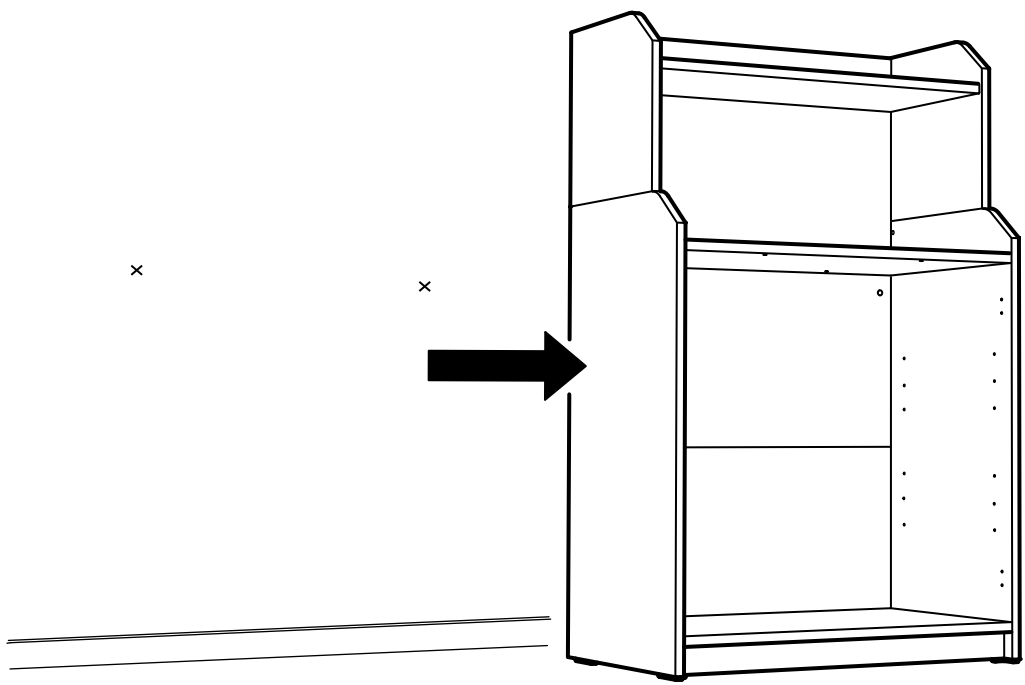 



www.IKEA.com/secure-it

 


www.IKEA.cn/secure-it


25

English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

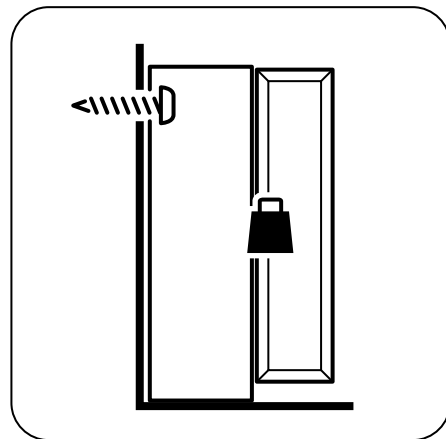


A

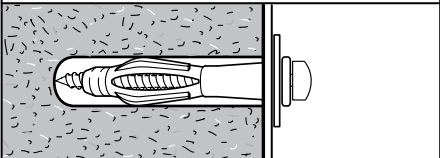 


Ø 8 mm
(5/16")



 1




2

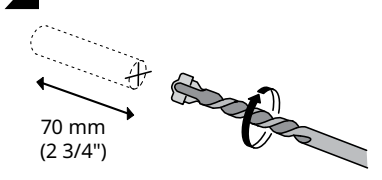 


70 mm
(2 3/4")

 3

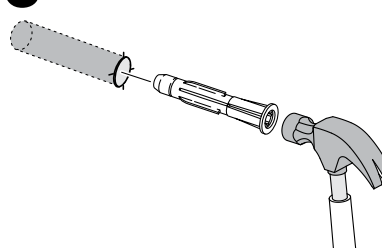


B

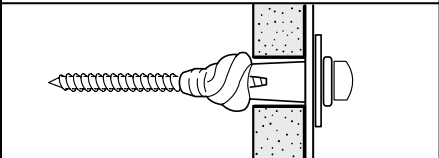 


Ø 8 mm
(5/16")



 1




2

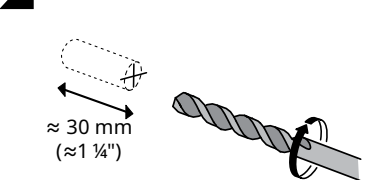 


≈ 30 mm
(≈ 1 1/4")

 3

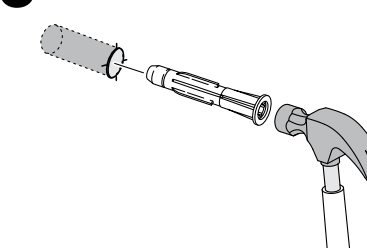


C

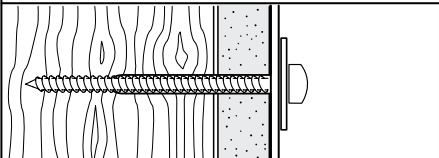 


Ø 3 mm
(1/8")



 1





2

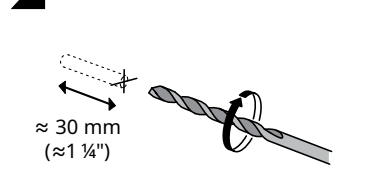 


≈ 30 mm
(≈ 1 1/4")

 
 
3



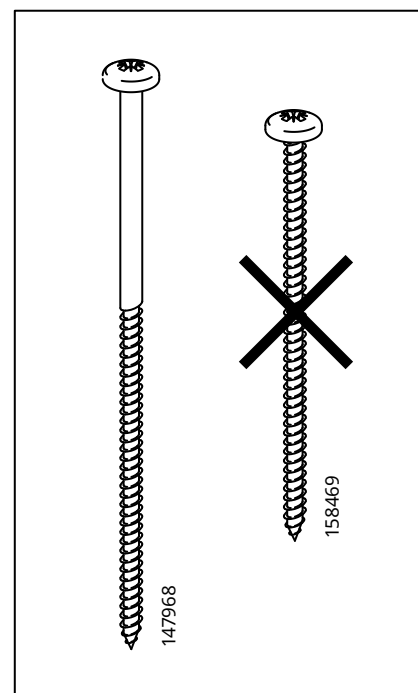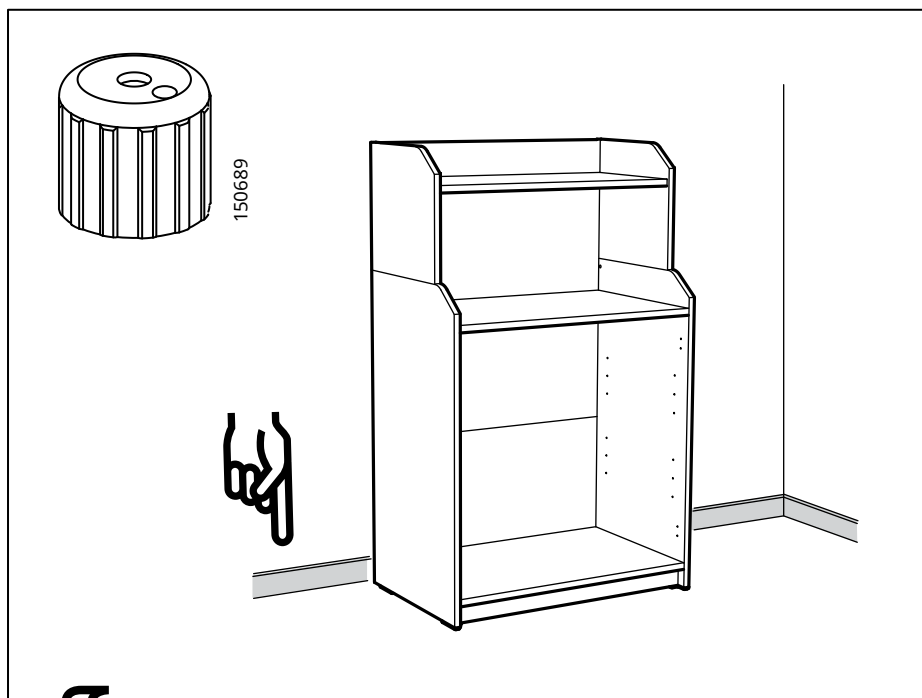


⇕
26

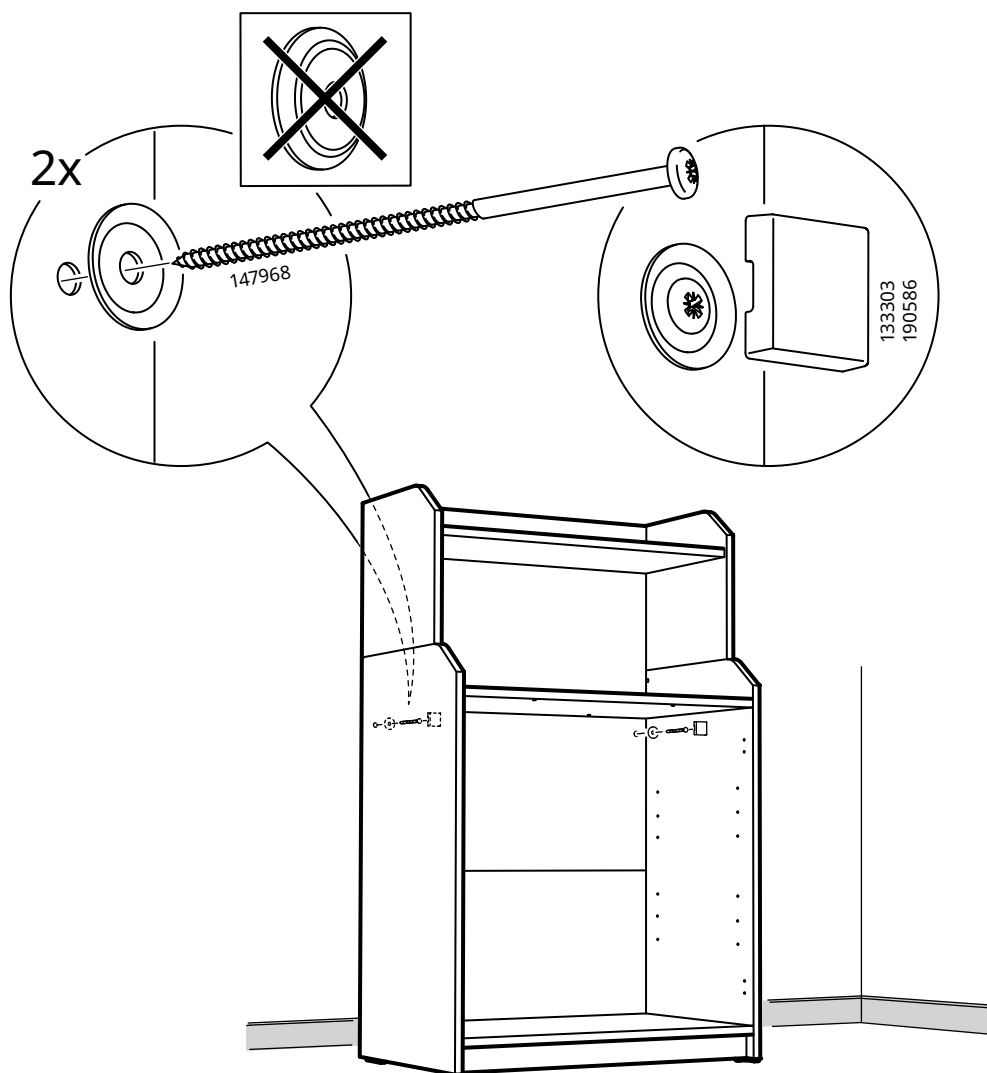 


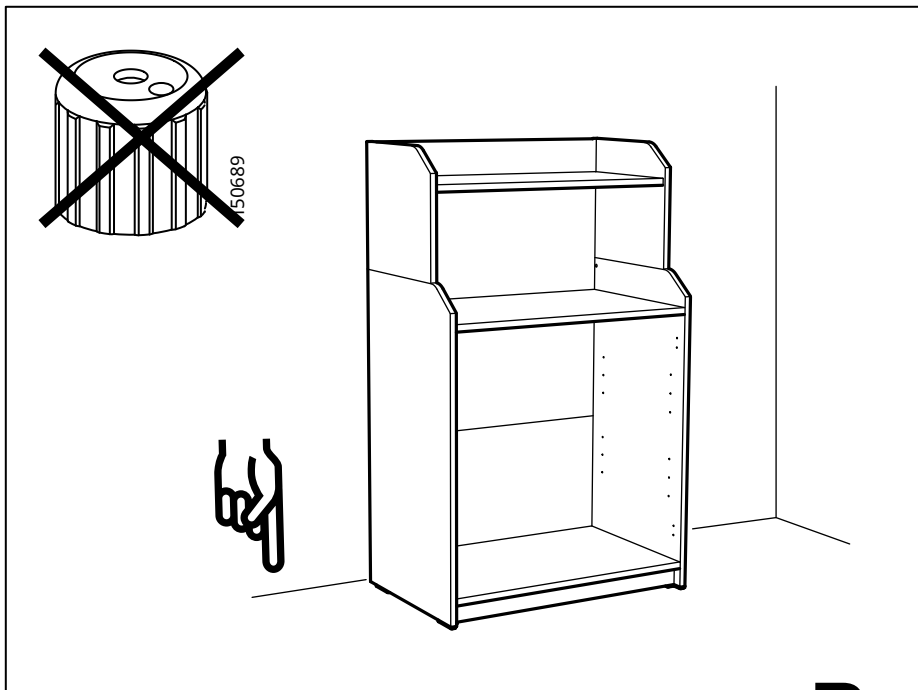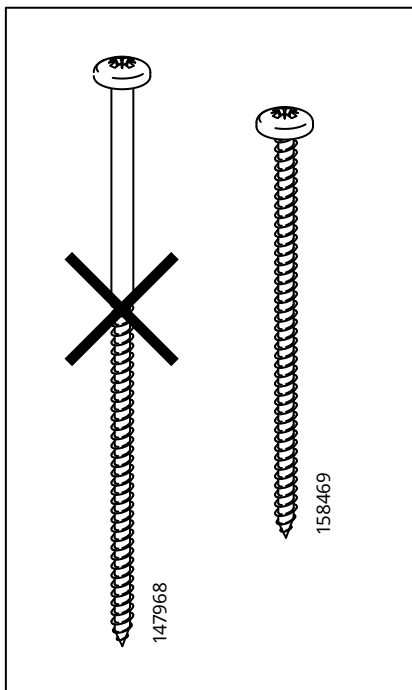  




26

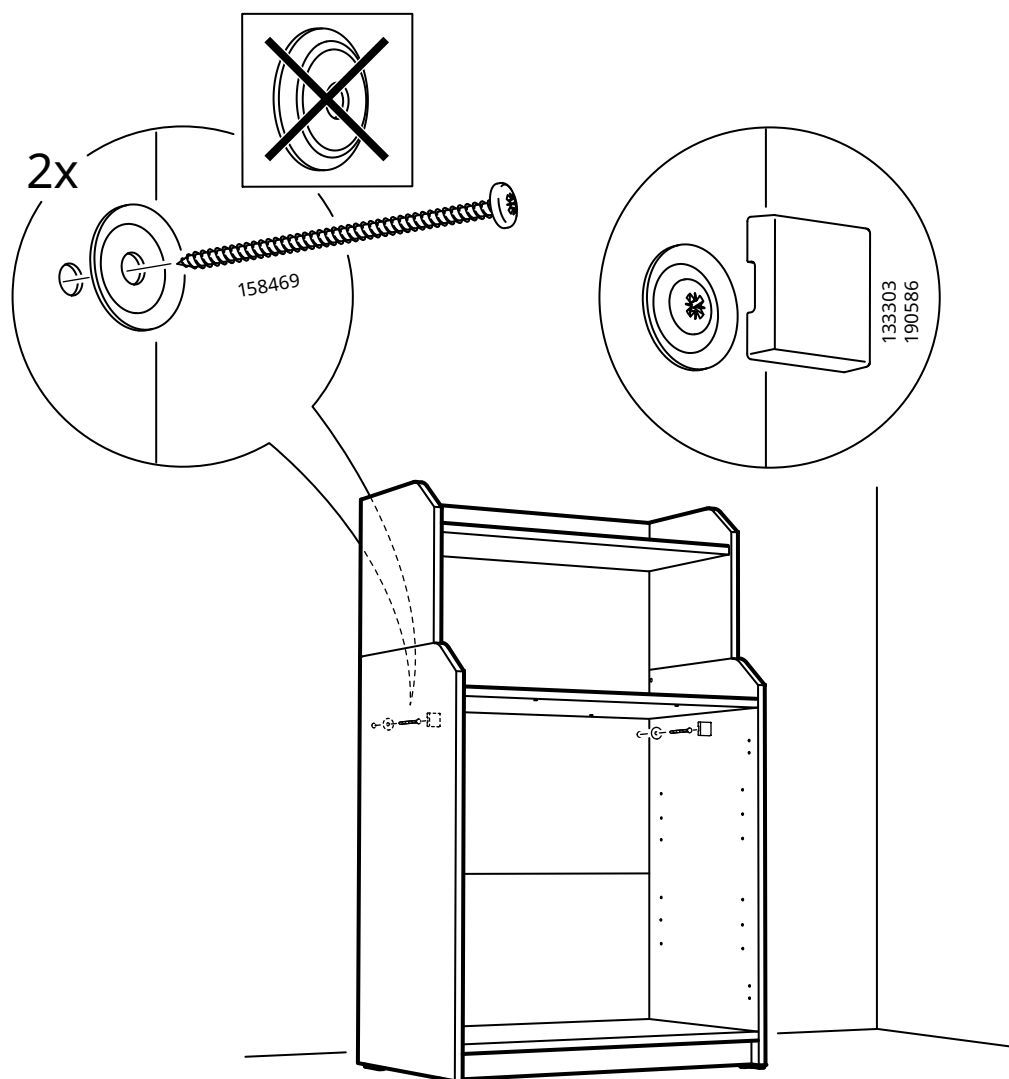 



27

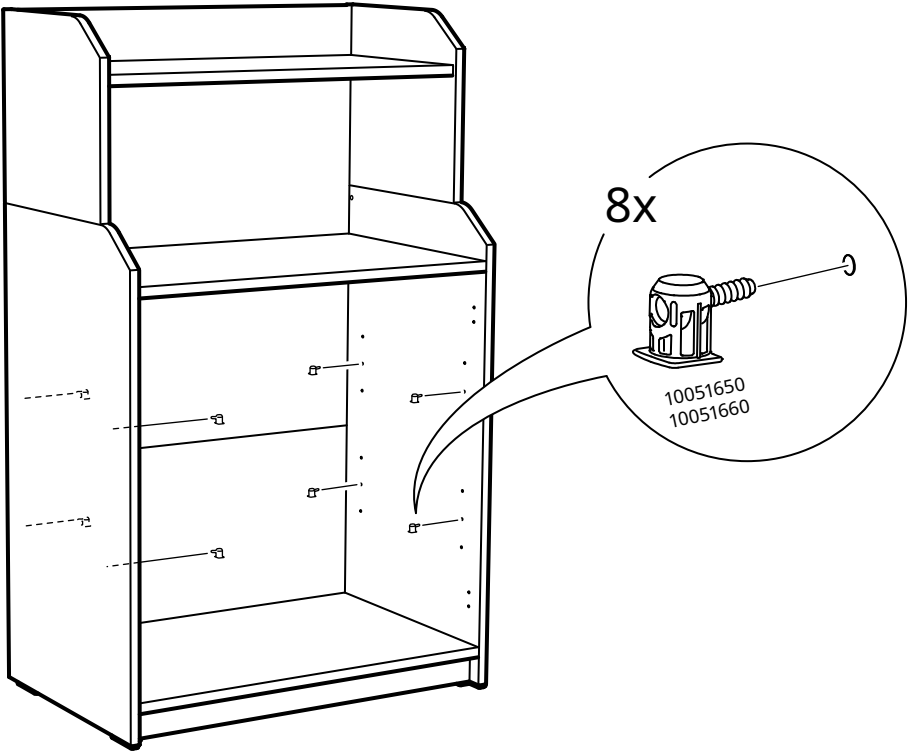 


28

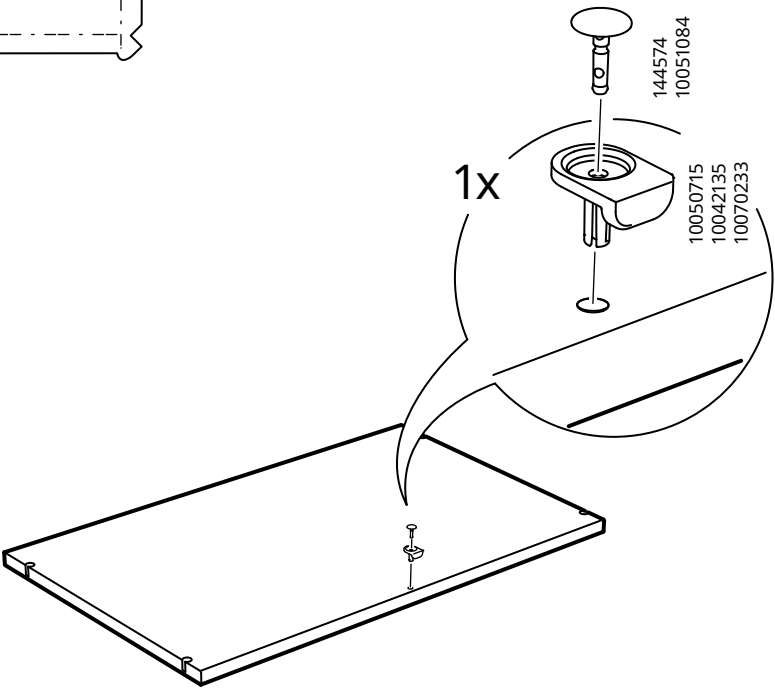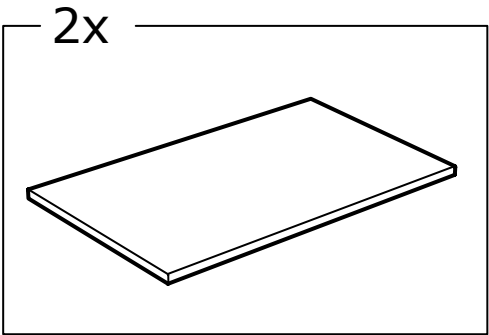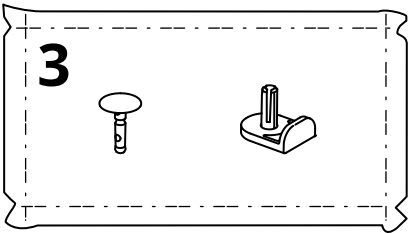   

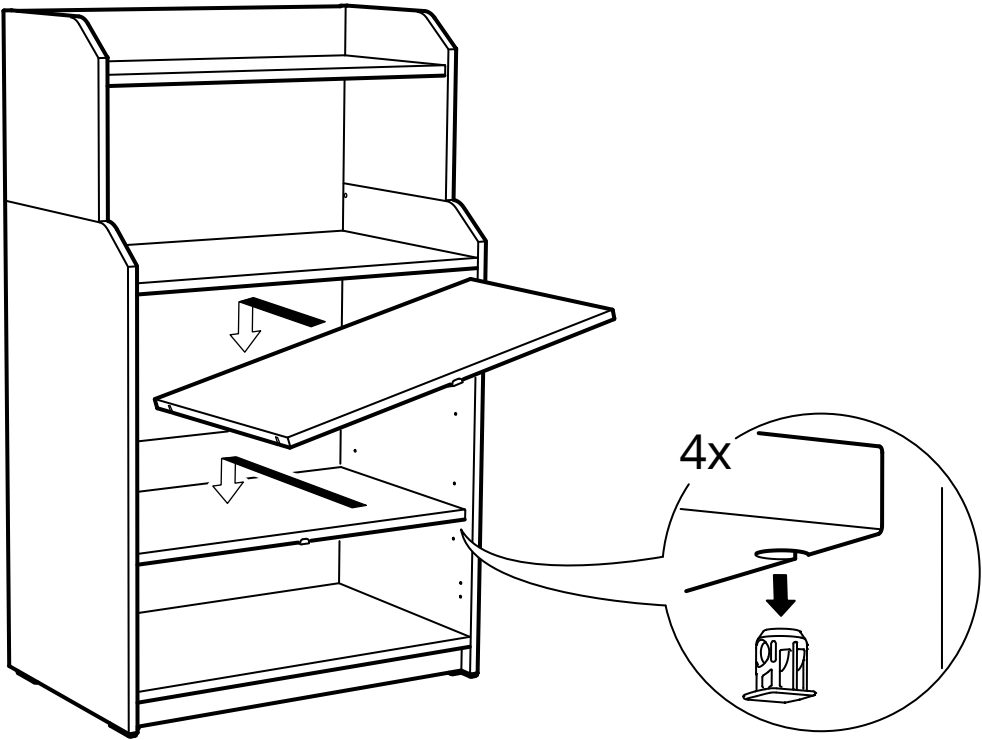 



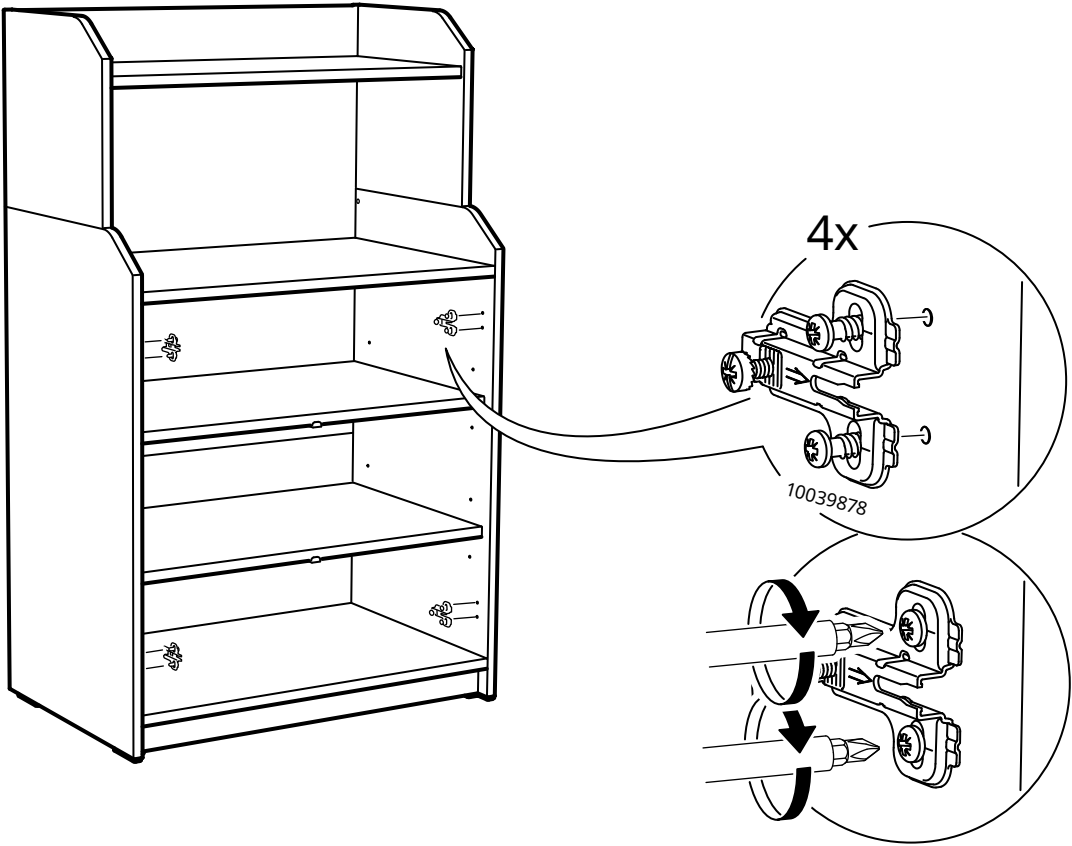 


31

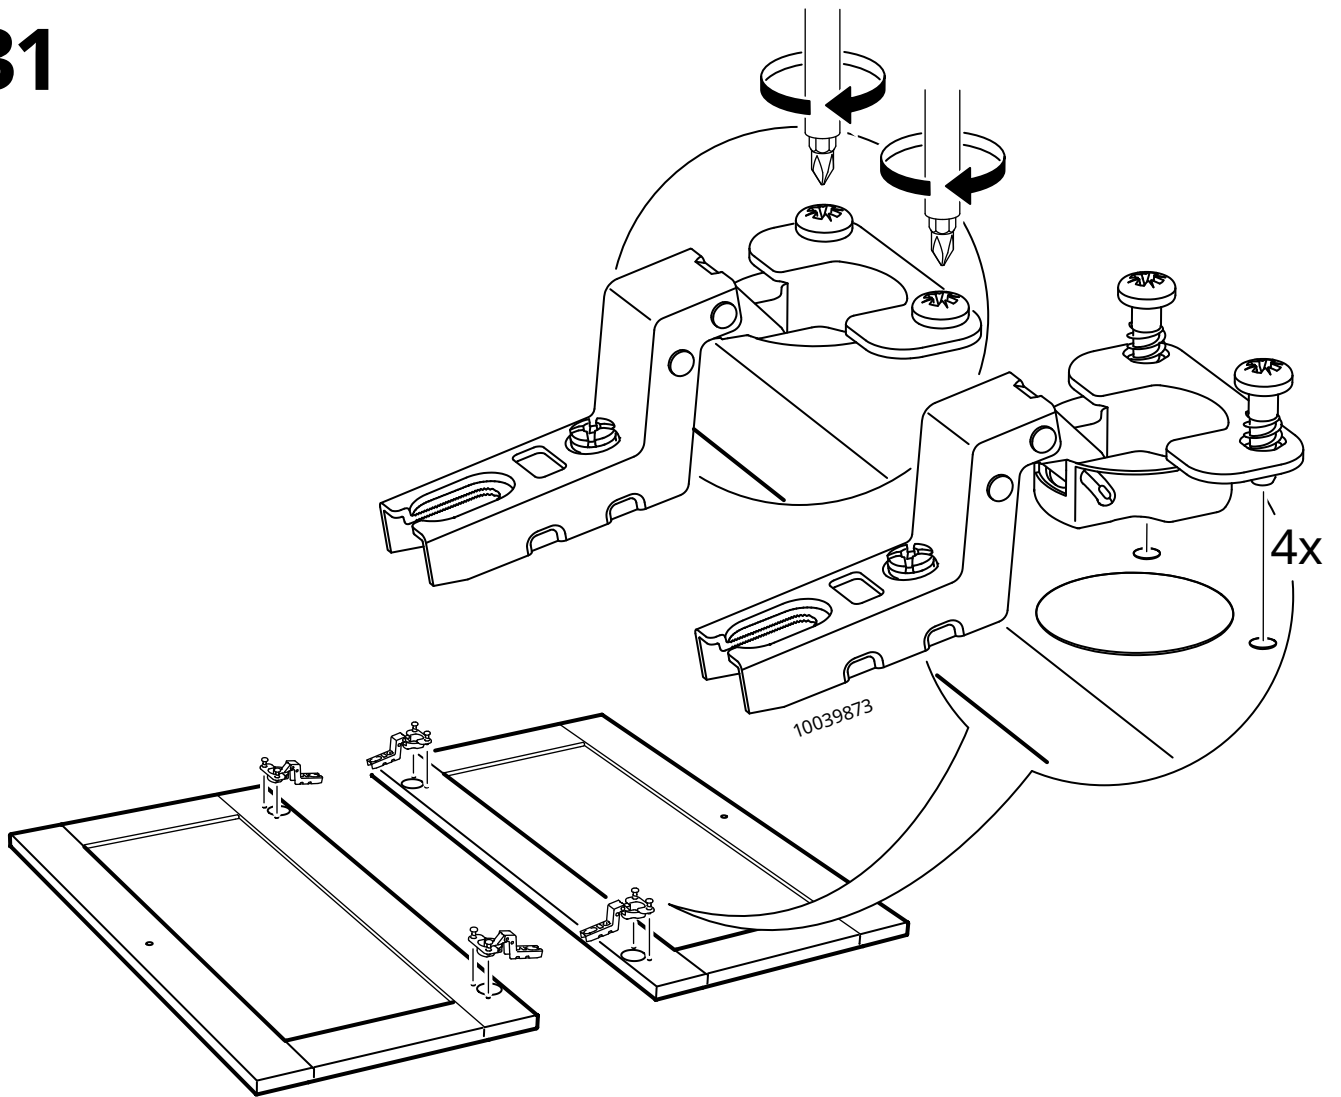 

32

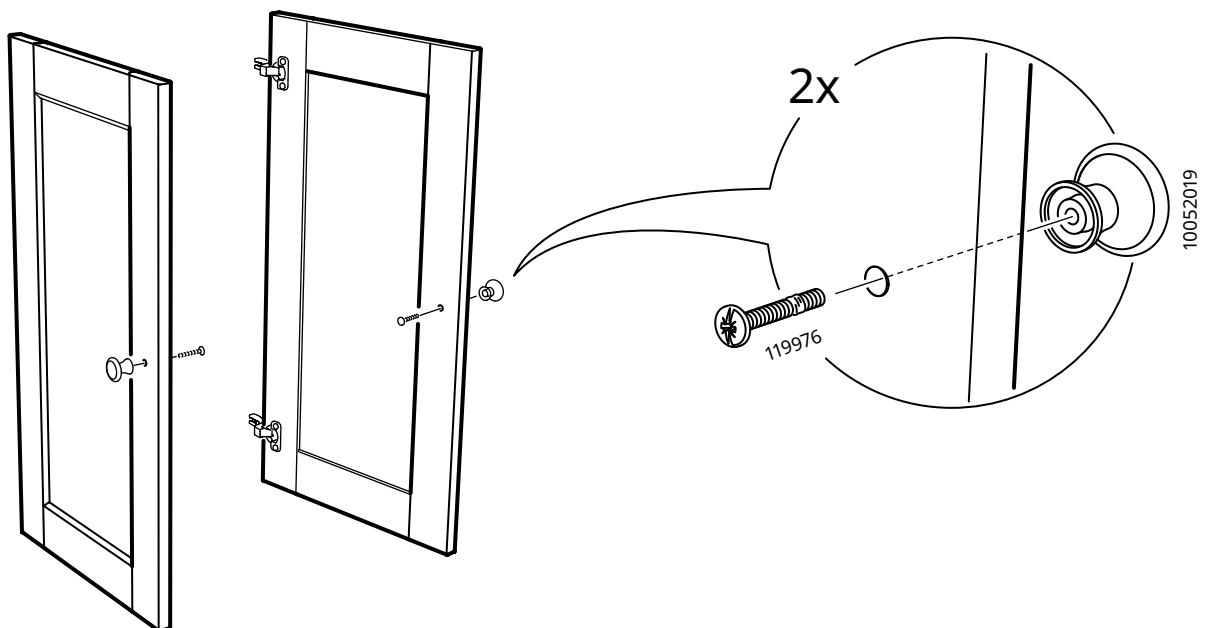 

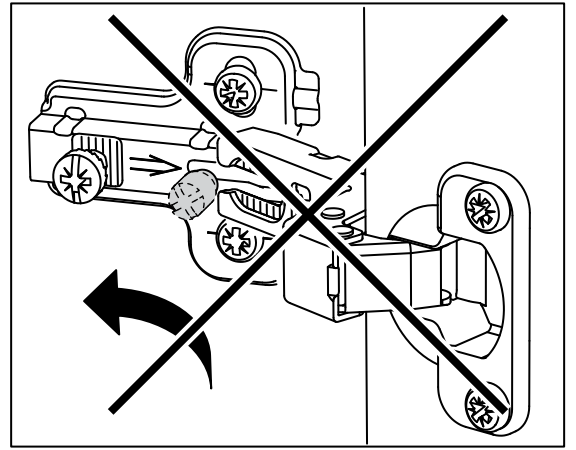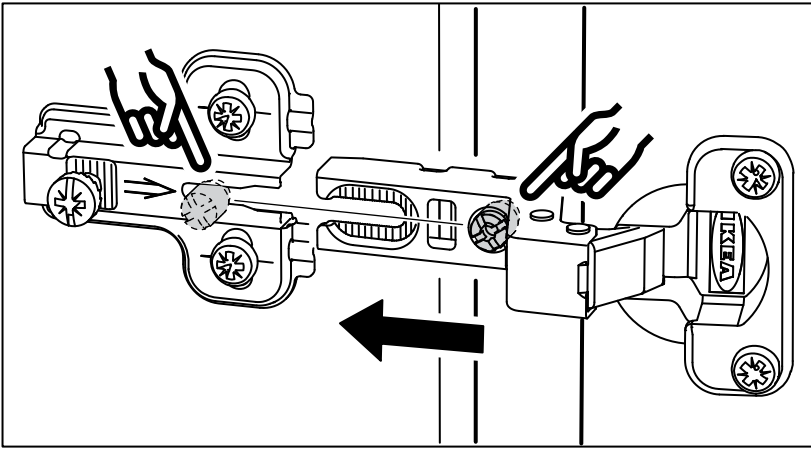  

33

