 
# HAUGA















English

## **WARNING**

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

NEVER open more than one drawer at a time.


DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.


Place heaviest items in the lowest drawers.


#### **English**


Read and follow each step of the instruction carefully.


AA-2585610-1

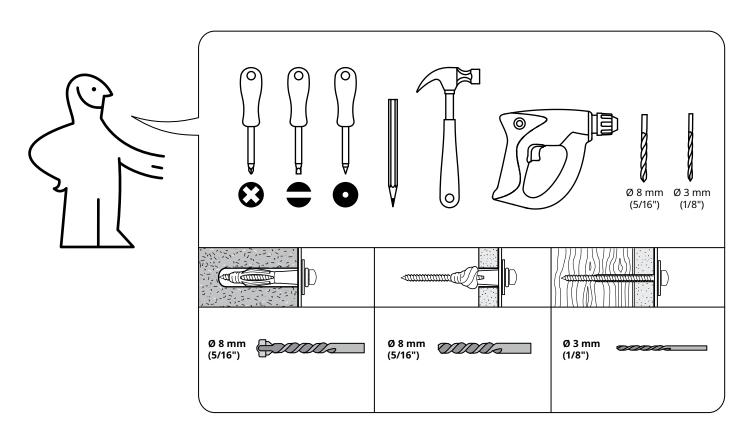


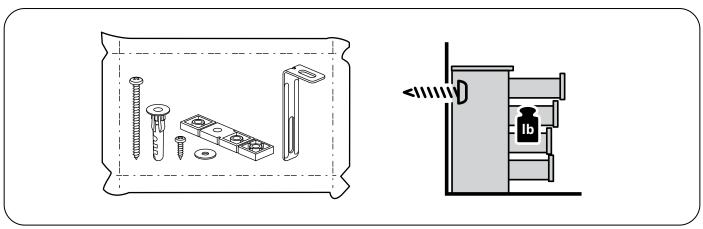


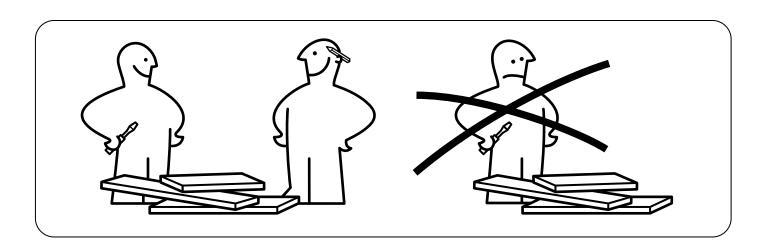


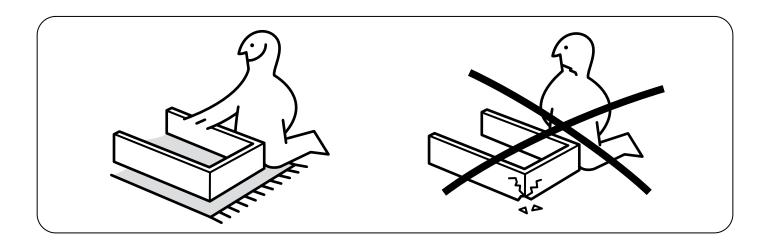


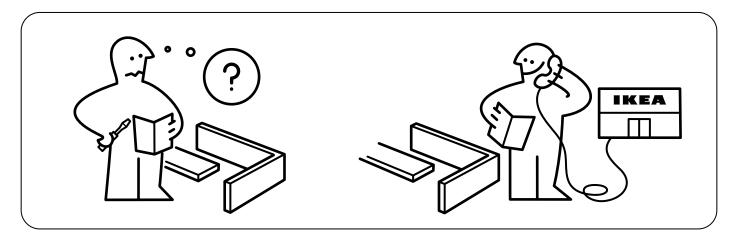


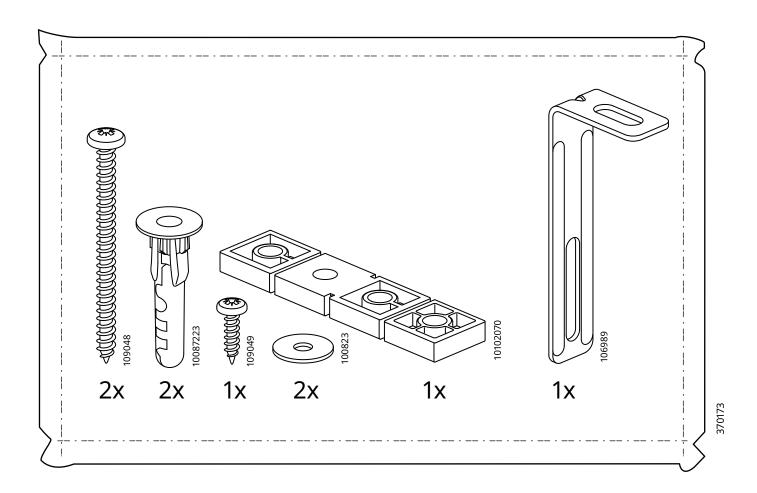

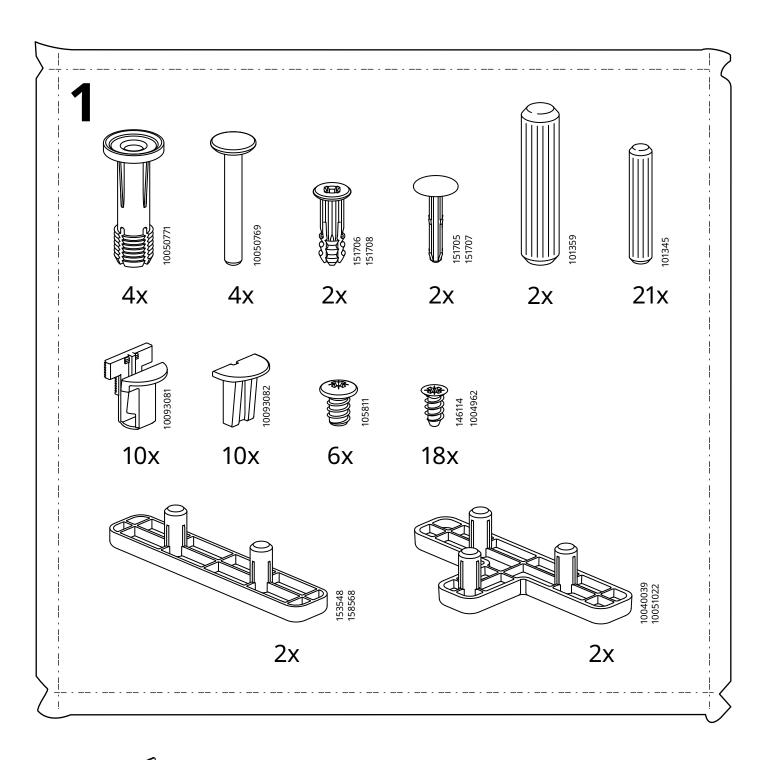


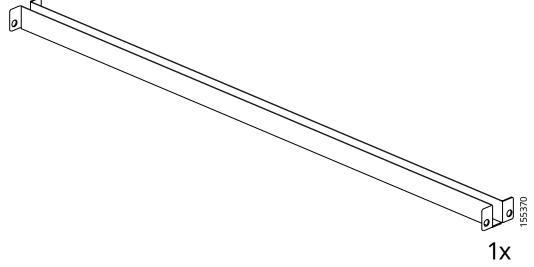


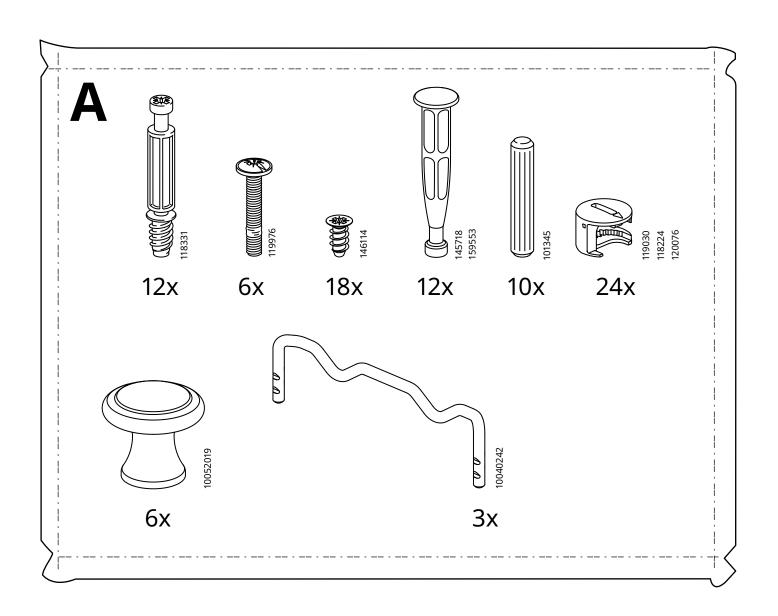


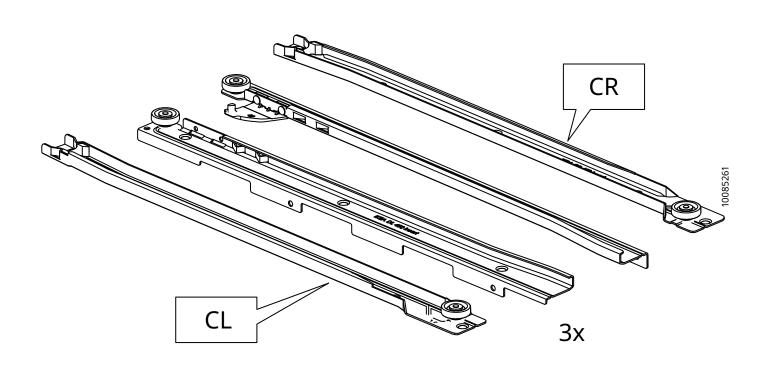





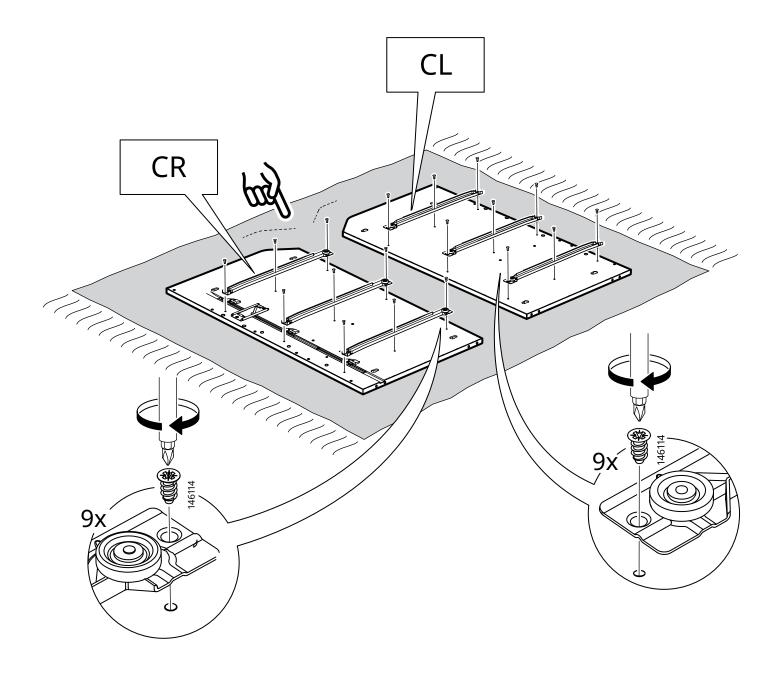


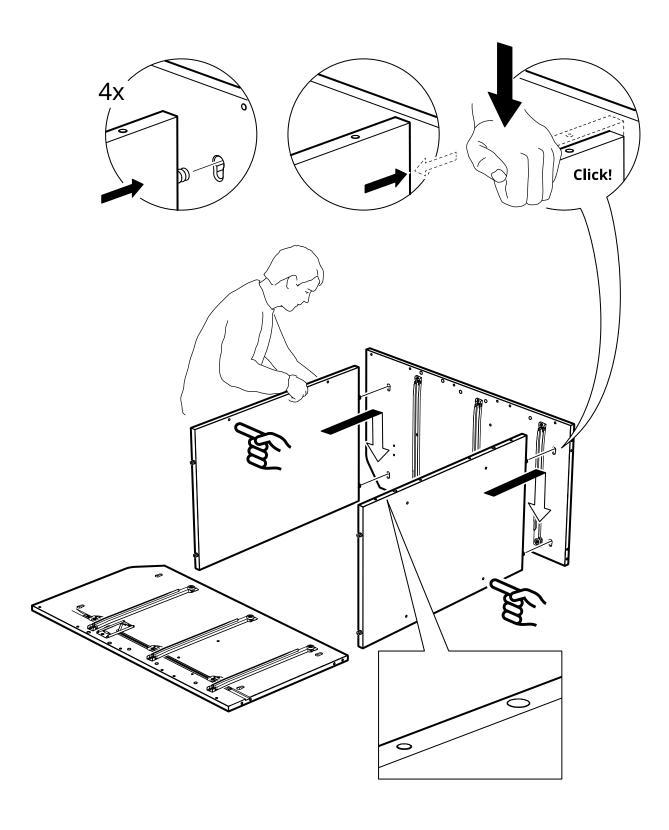


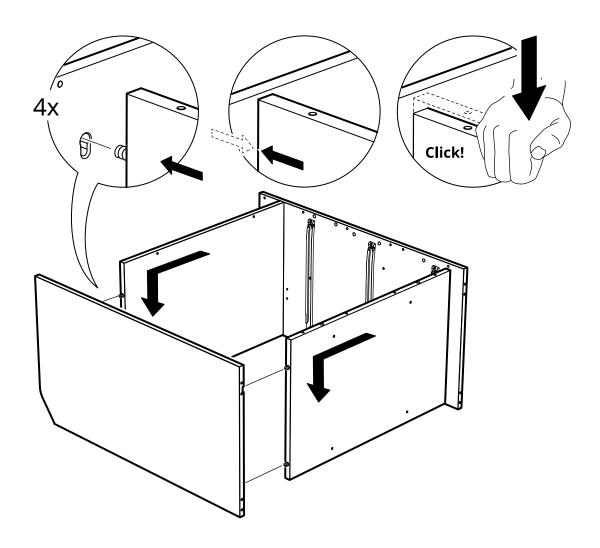


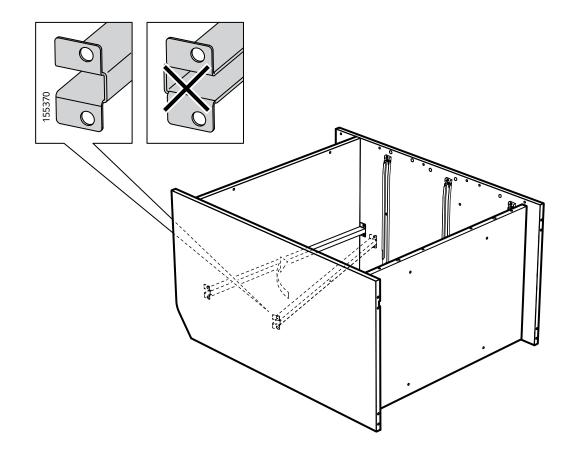

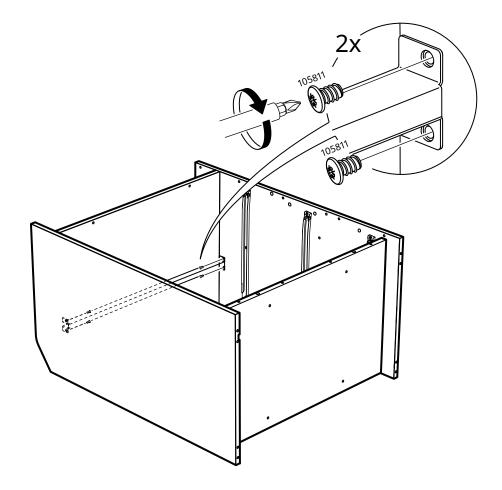


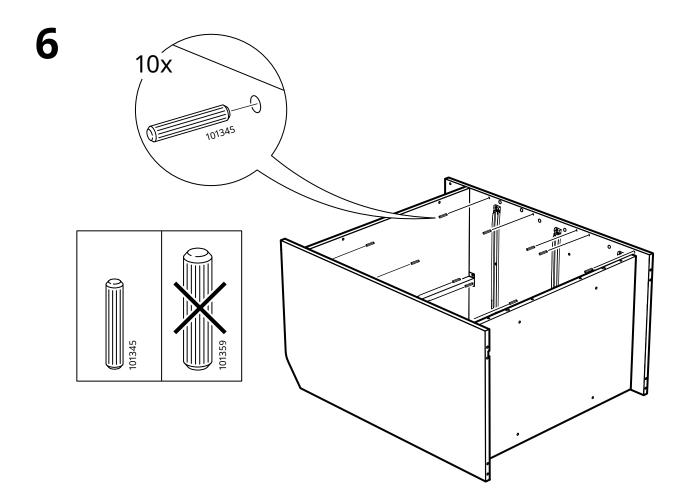


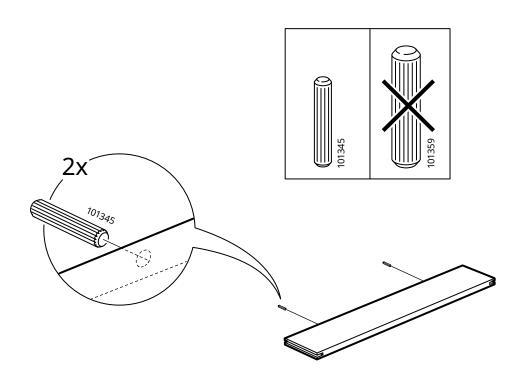


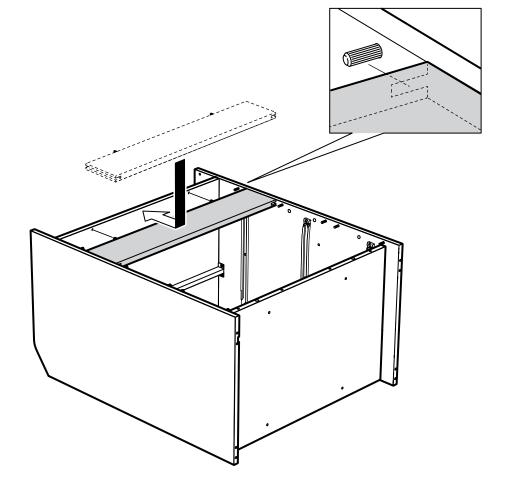





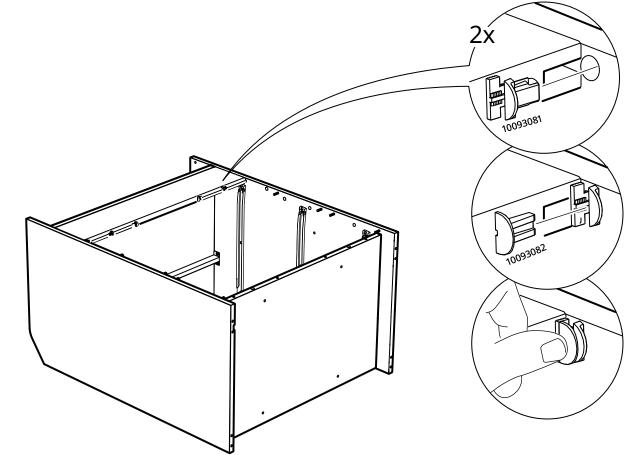


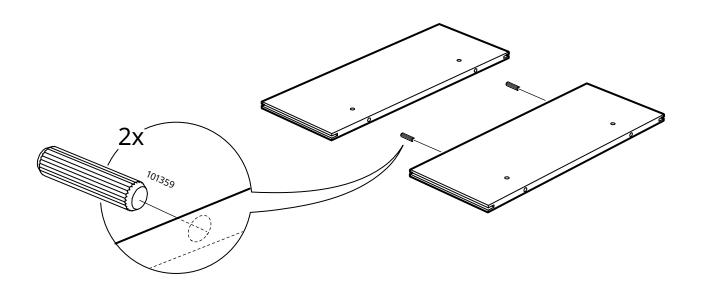


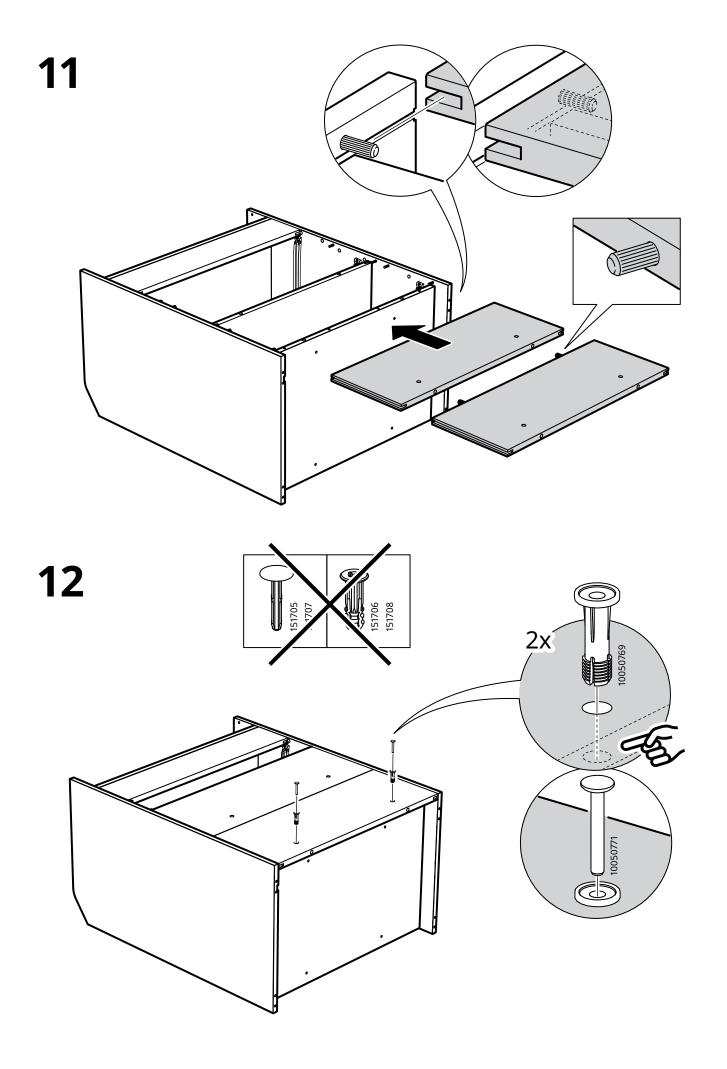


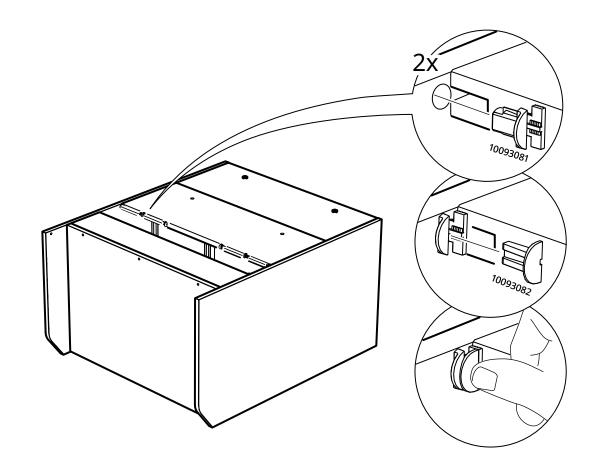


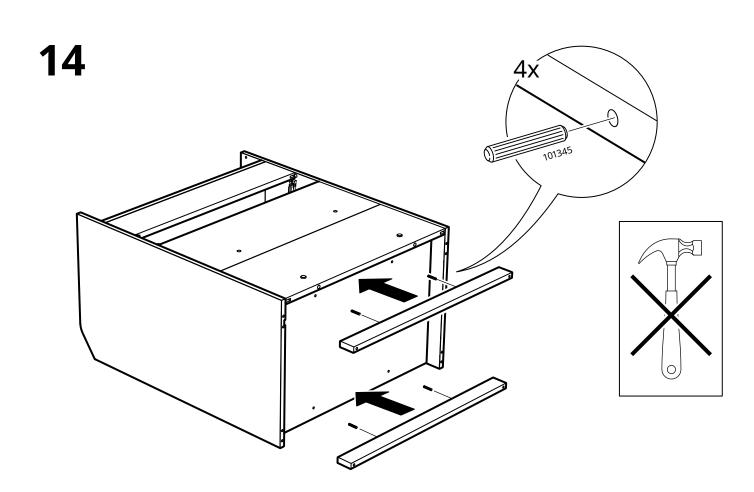


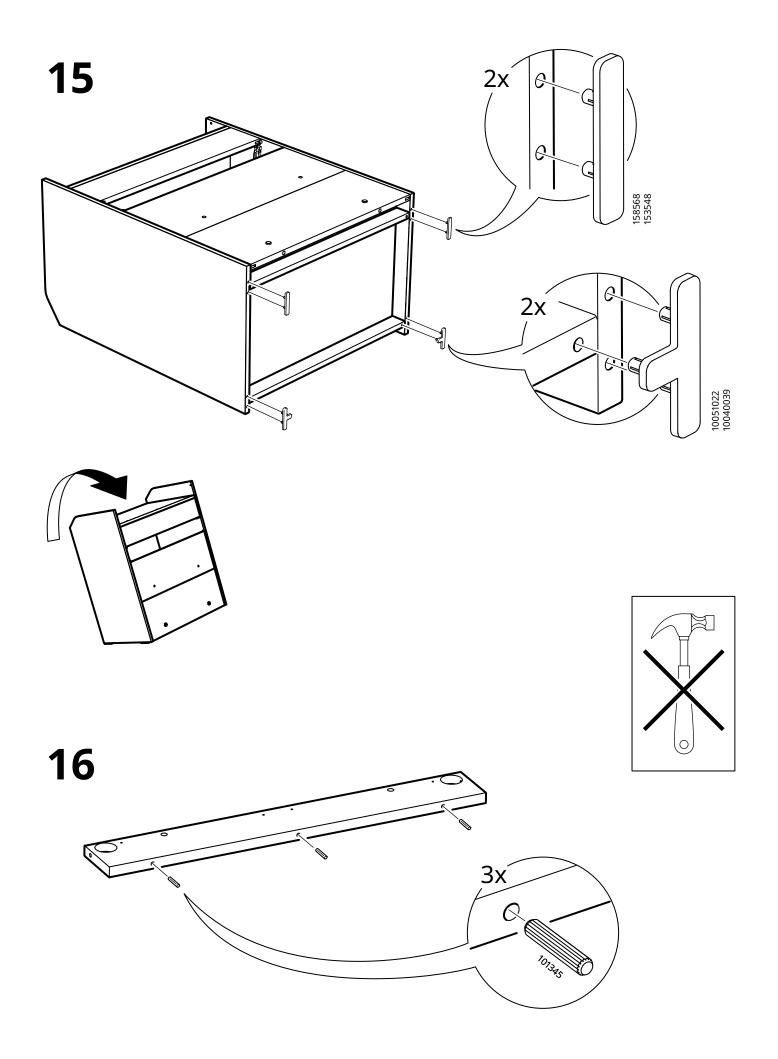


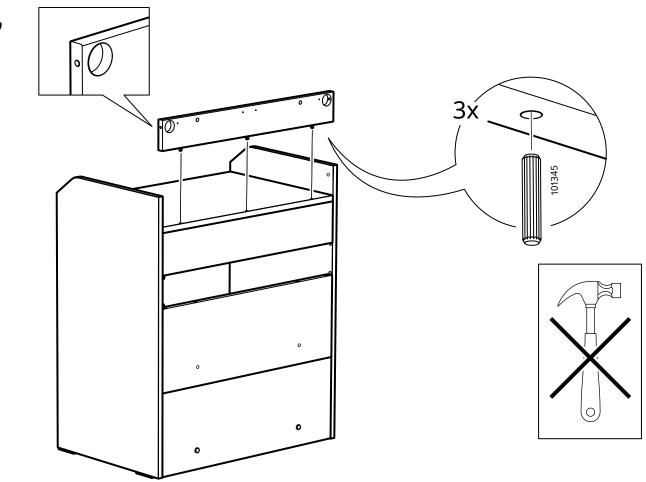


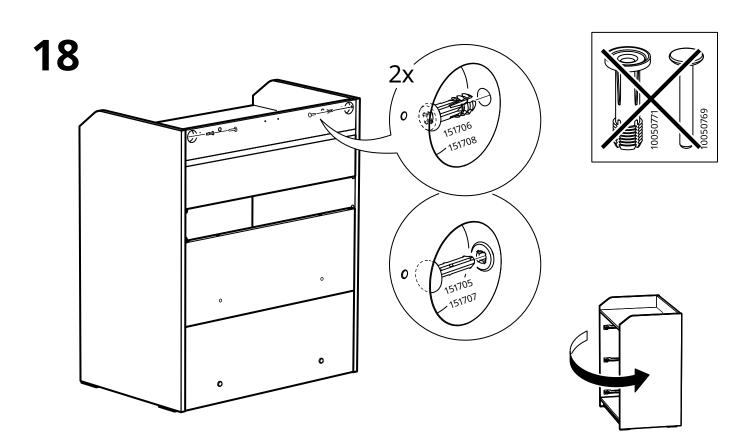


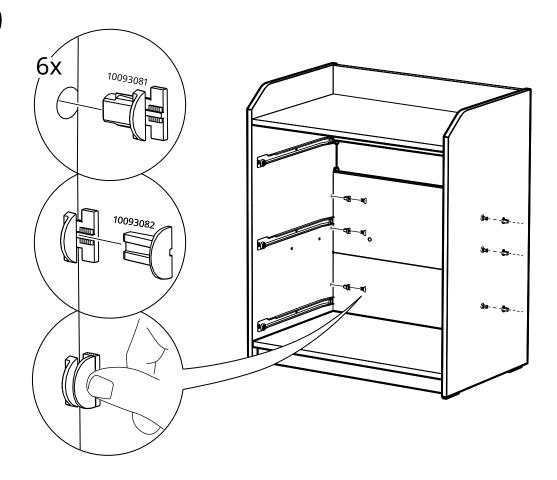


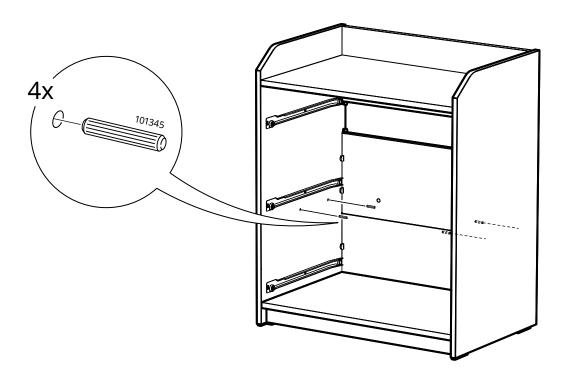


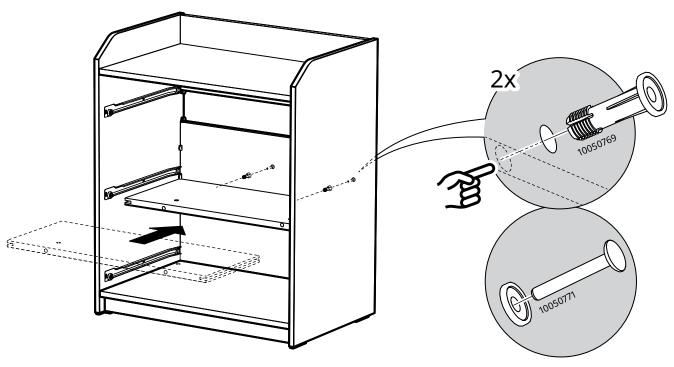


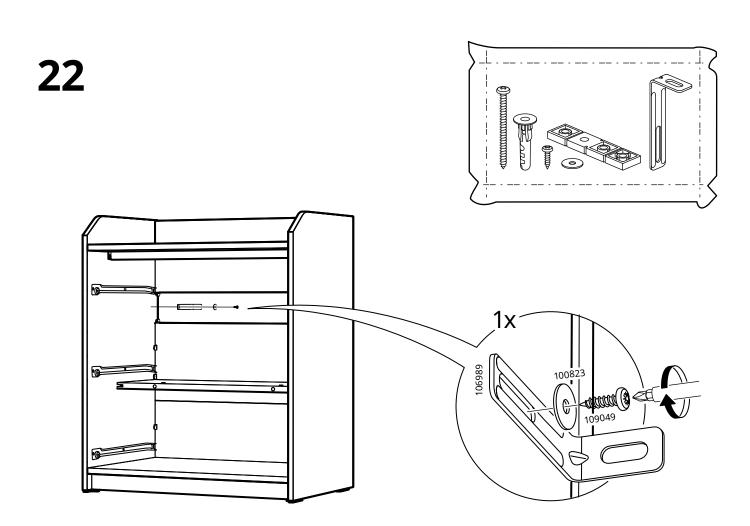

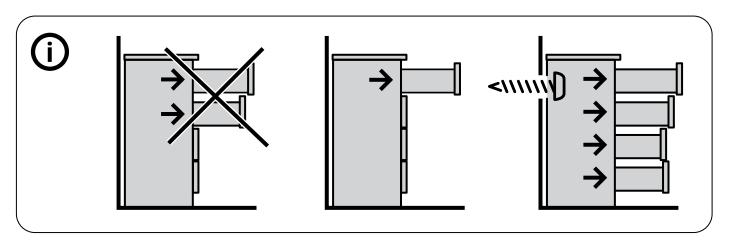


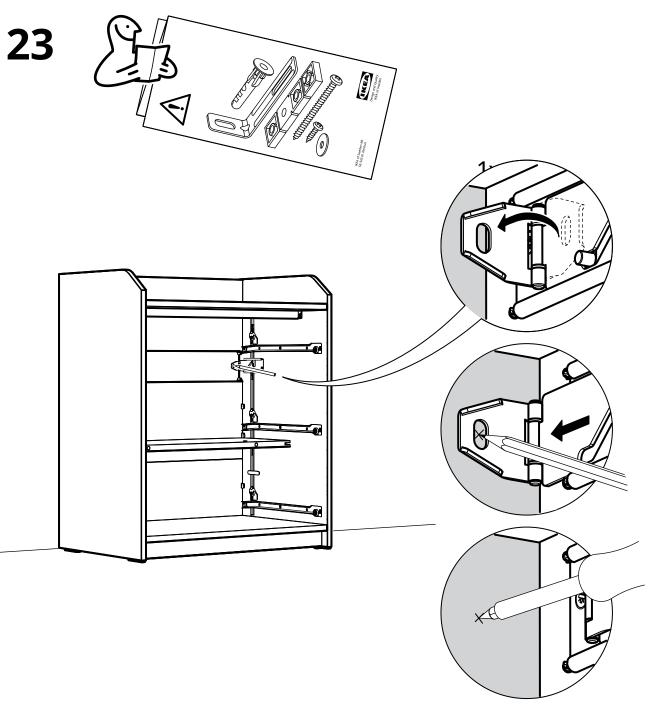

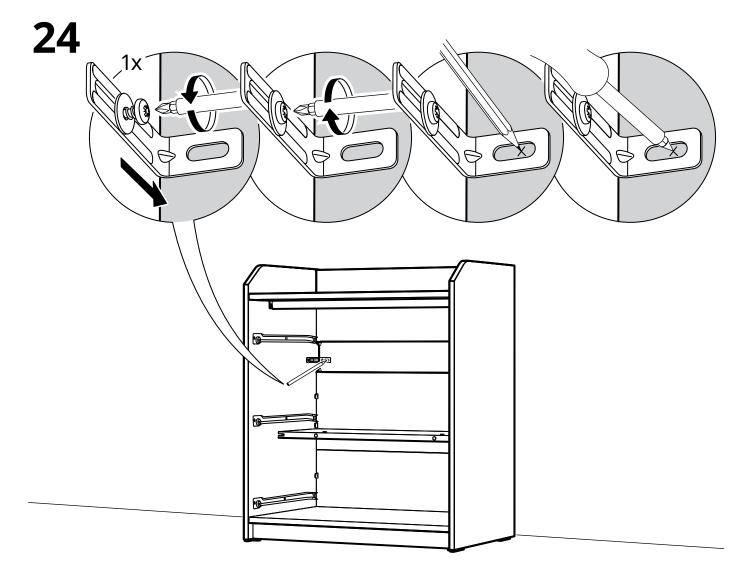

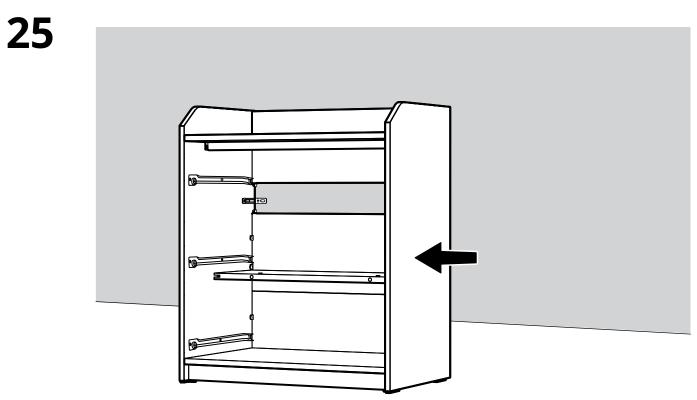





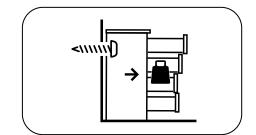



### English


The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

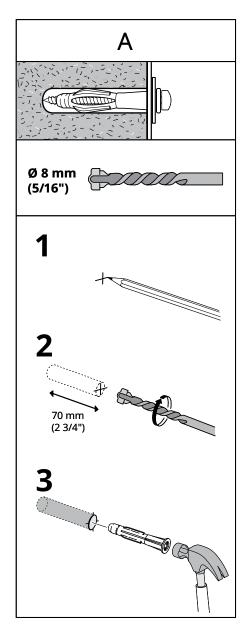


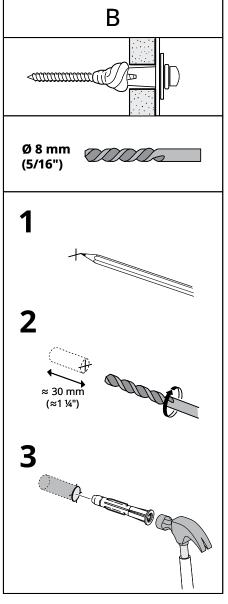


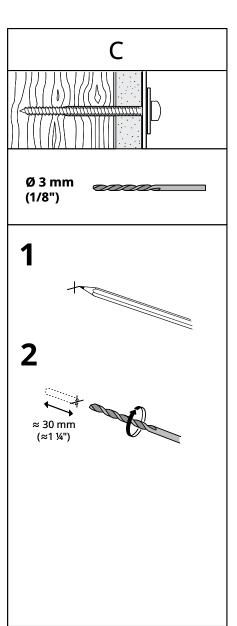


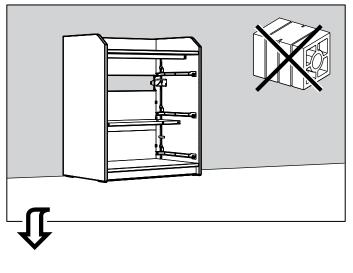


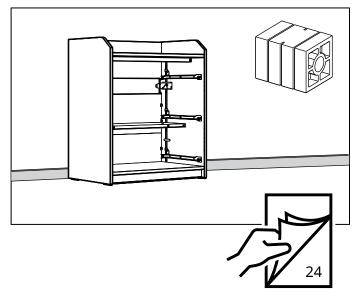


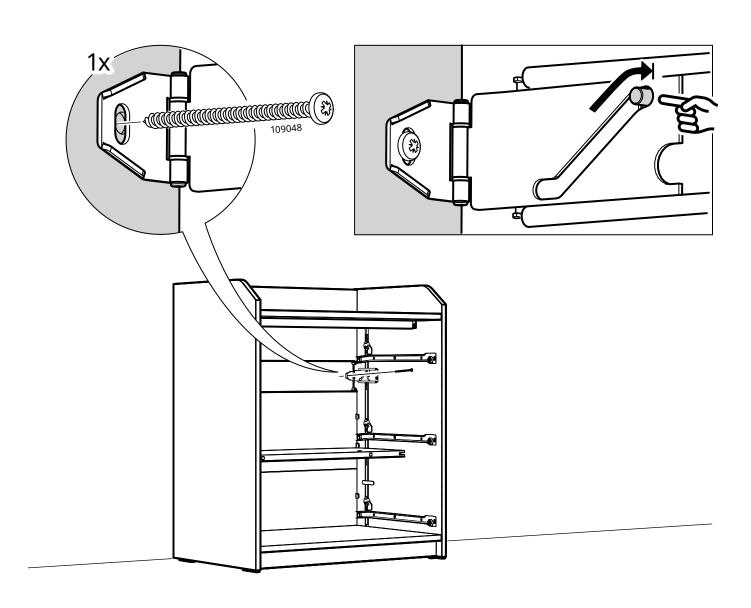

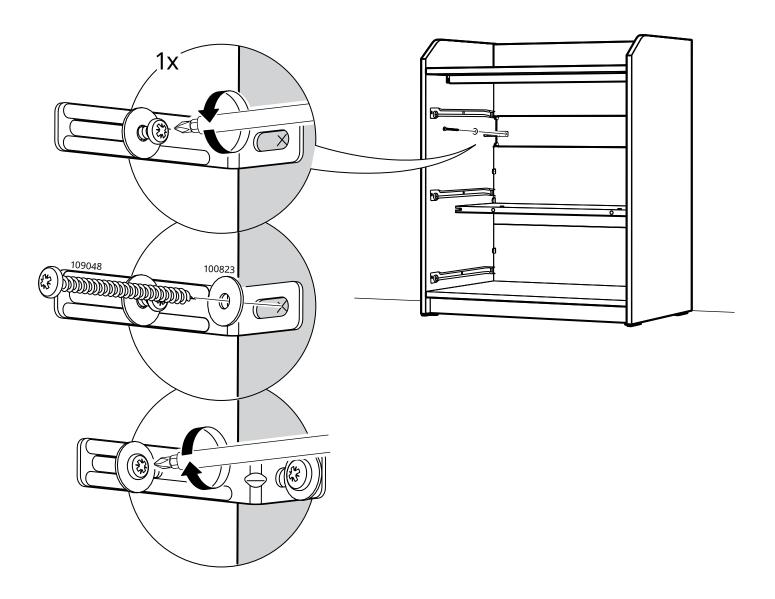


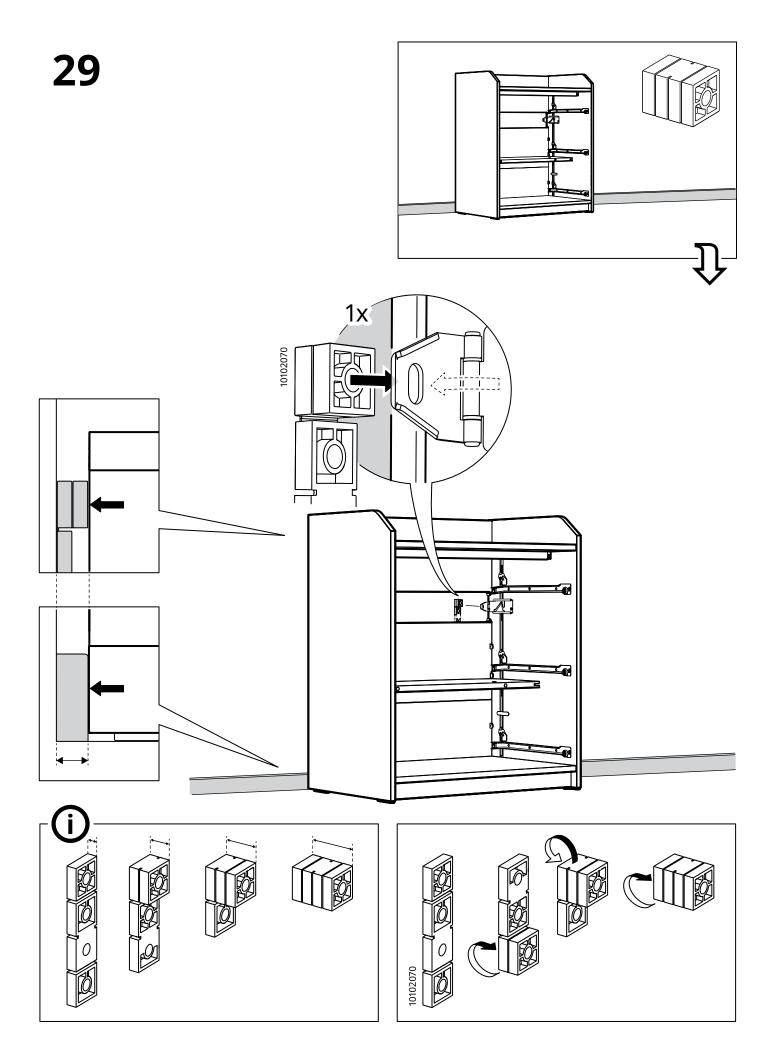


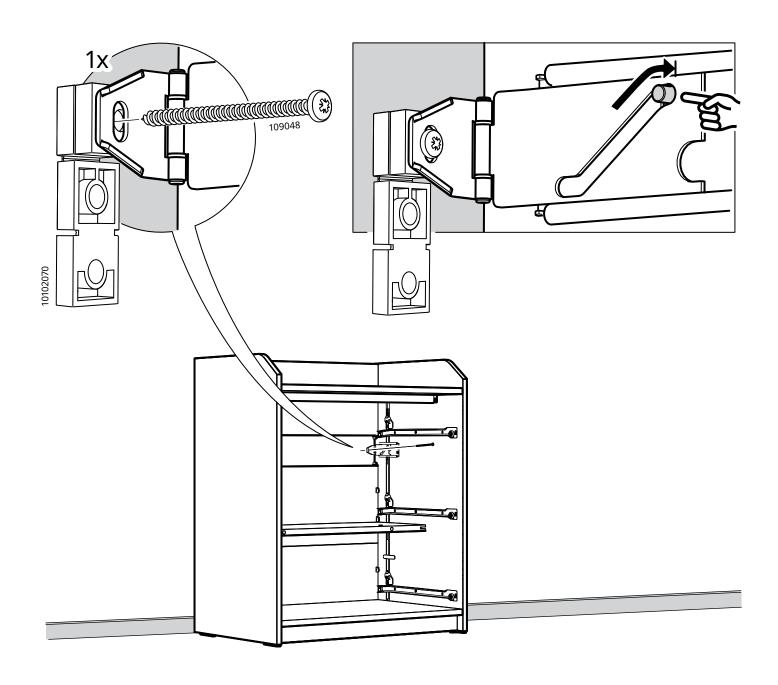

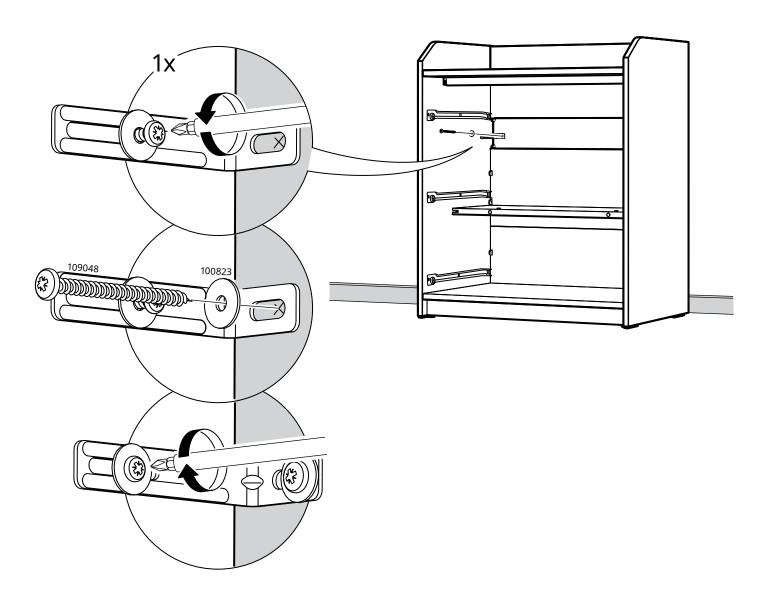



26 AA-2585610-1

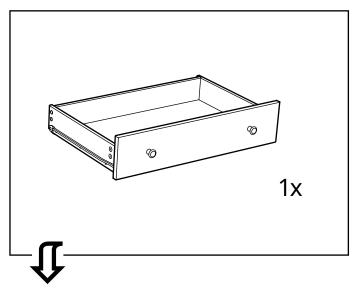


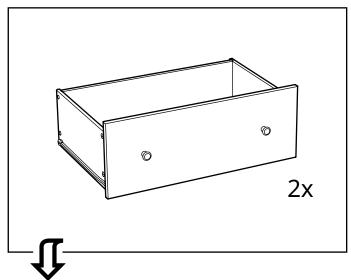





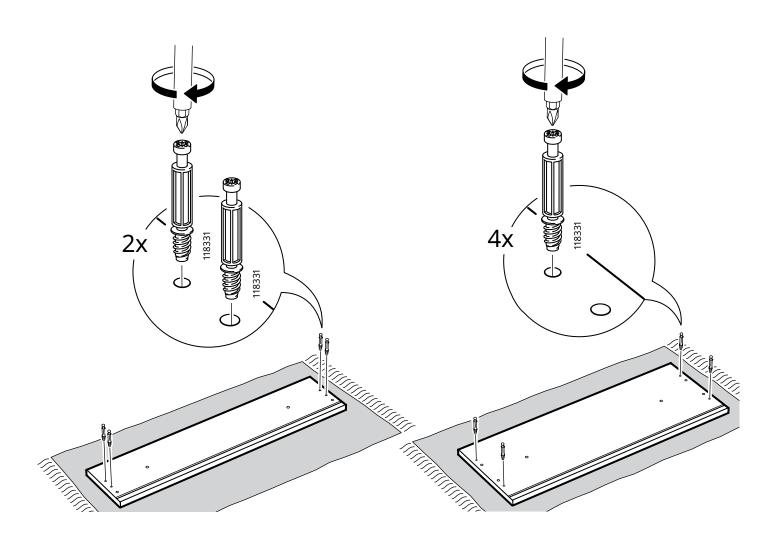


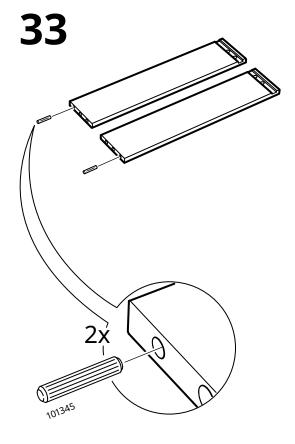


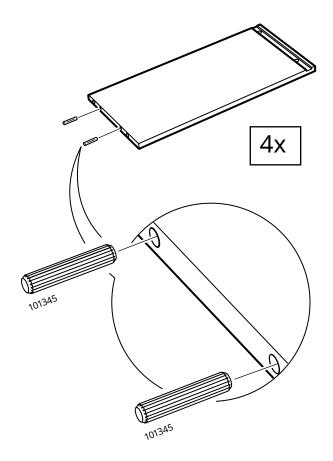


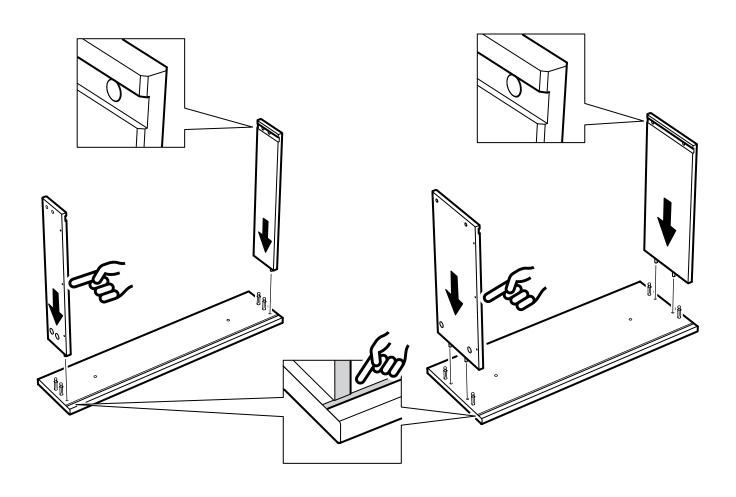


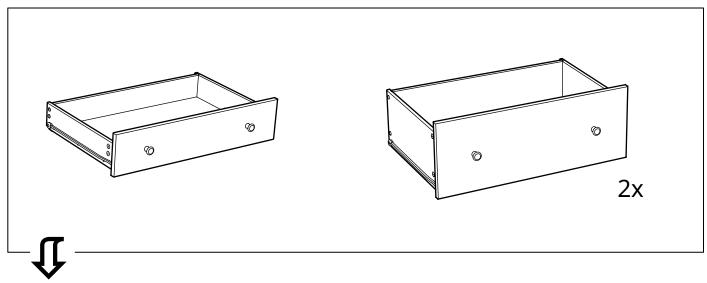


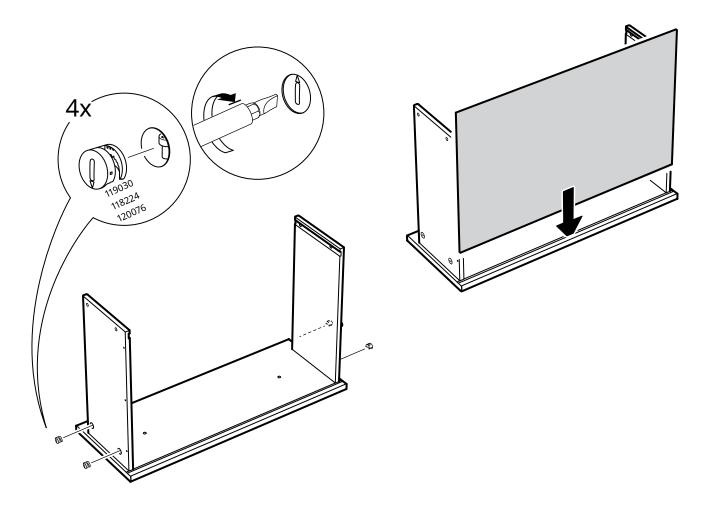


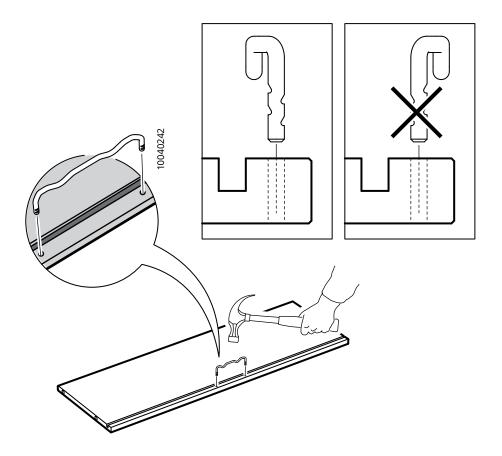


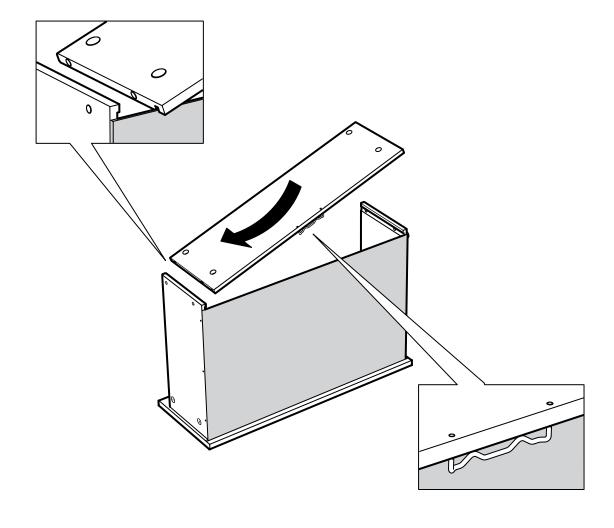


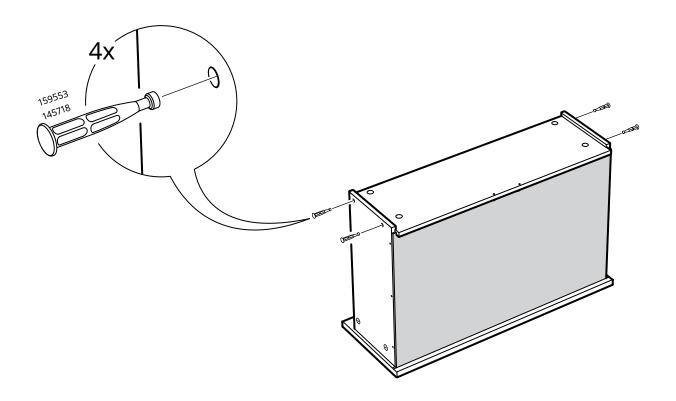

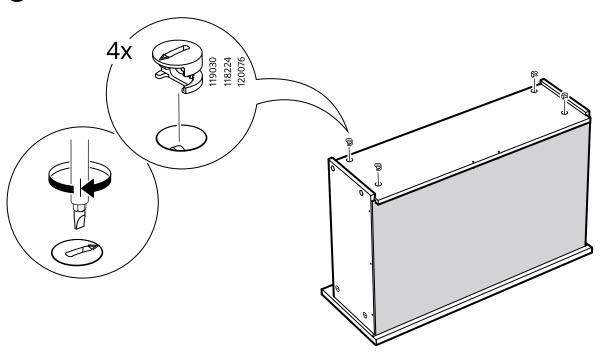

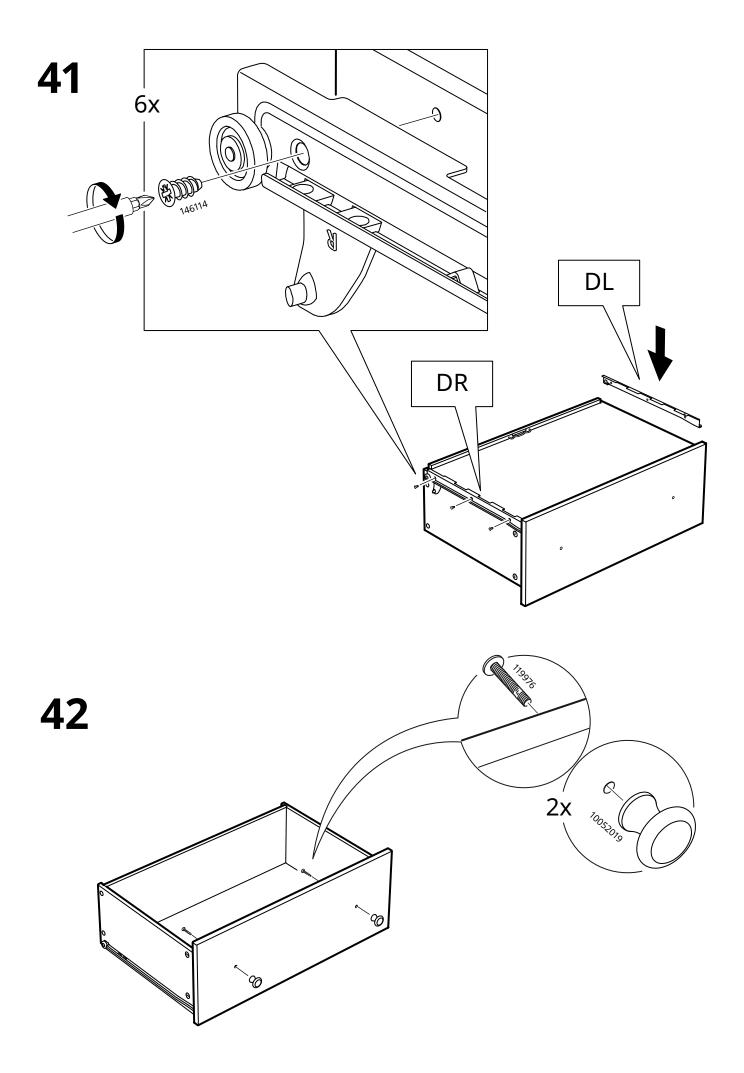

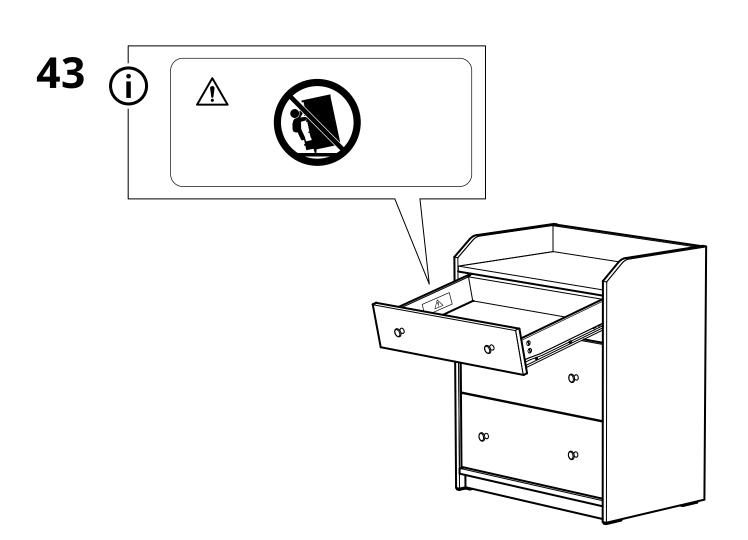

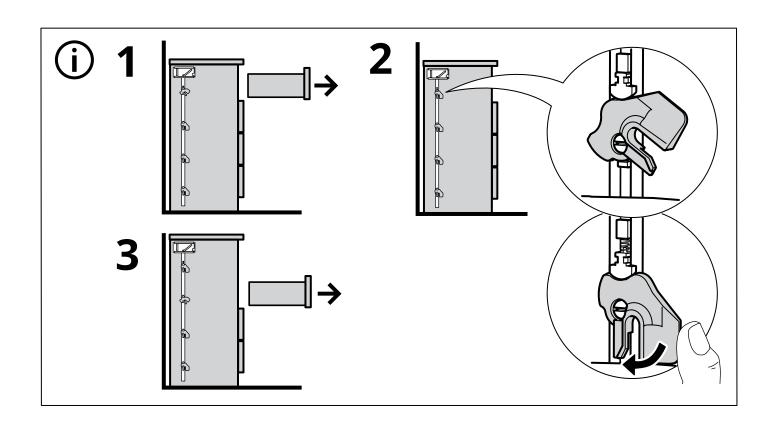

34 AA-2585610-1