 
 


HAUGA

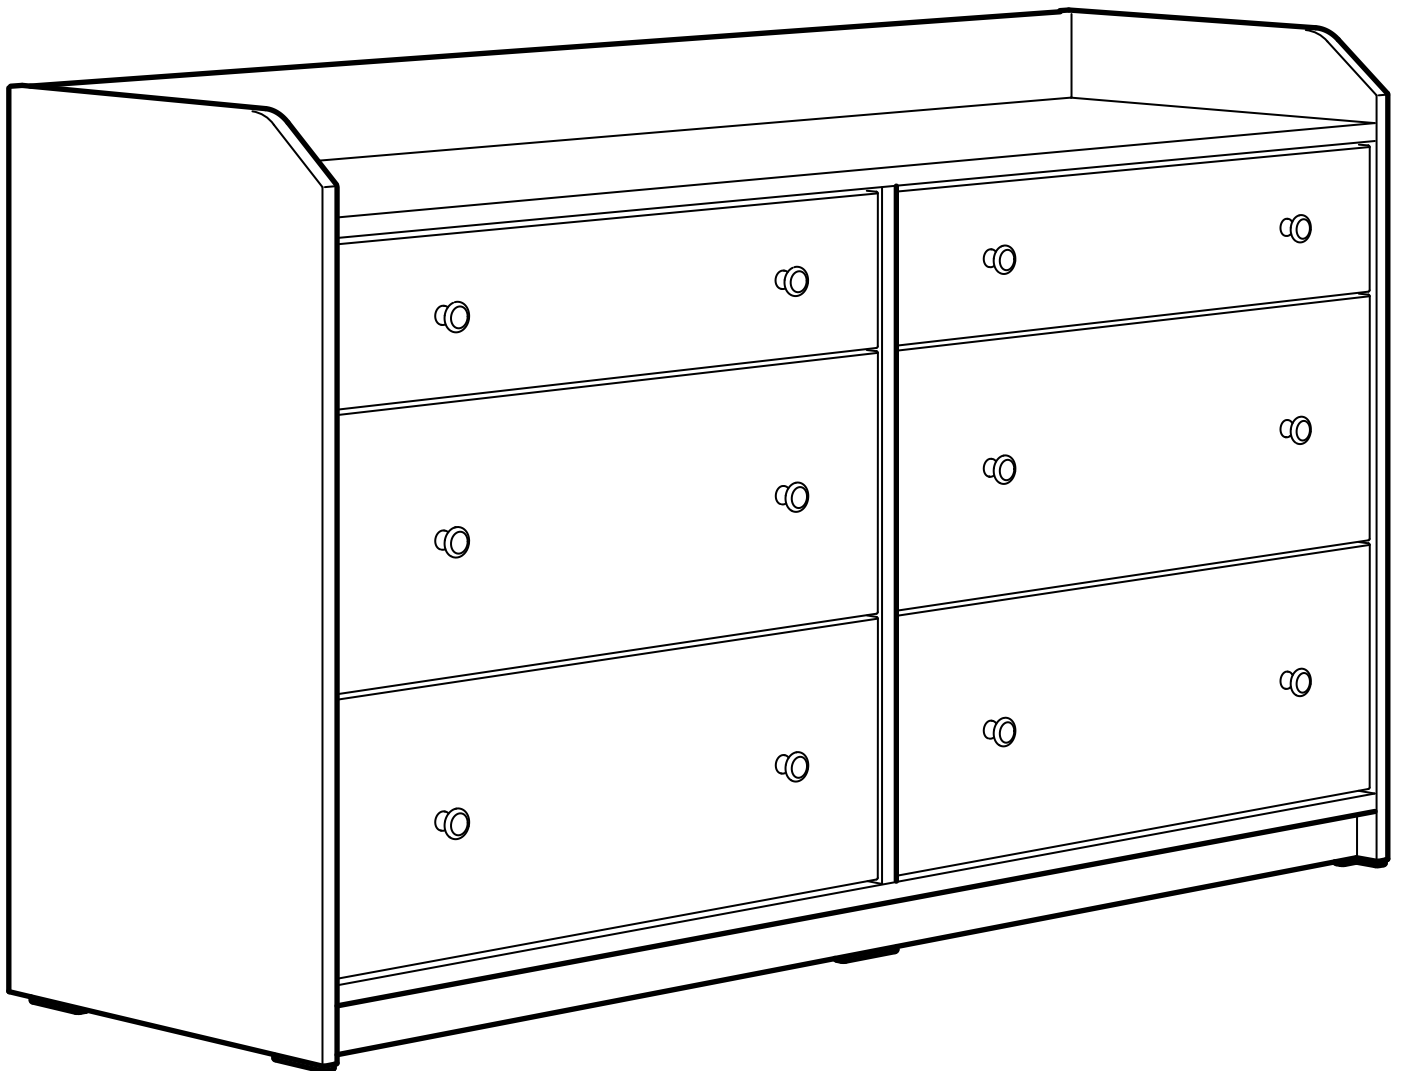

Design and Quality
IKEA of Sweden

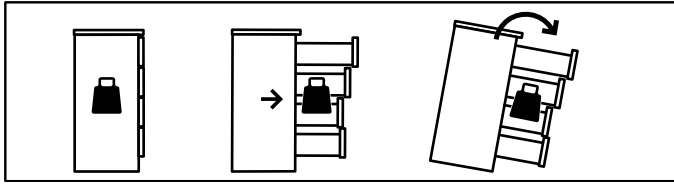

English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

 
 
 
 
 
 
NEVER open more than one drawer at a time.

 
 
 
 
DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.

Place heaviest items in the lowest drawers.

English

Read and follow each step of the instruction carefully.

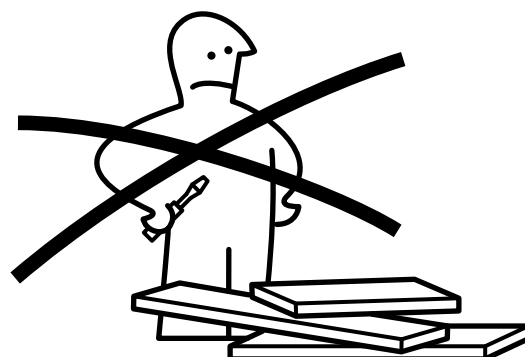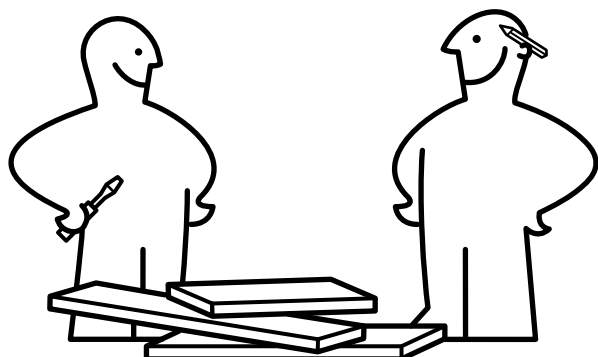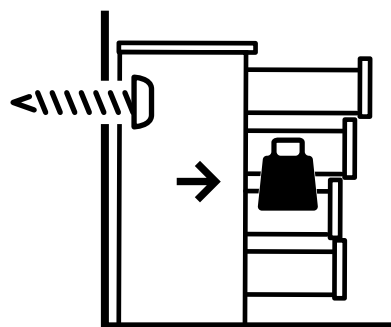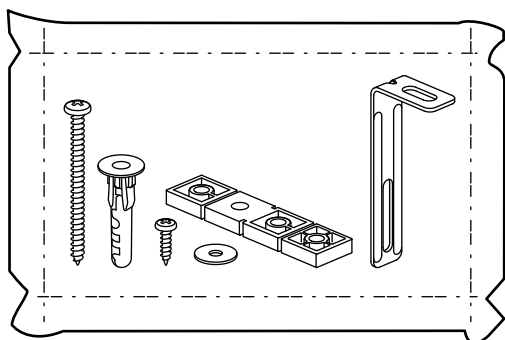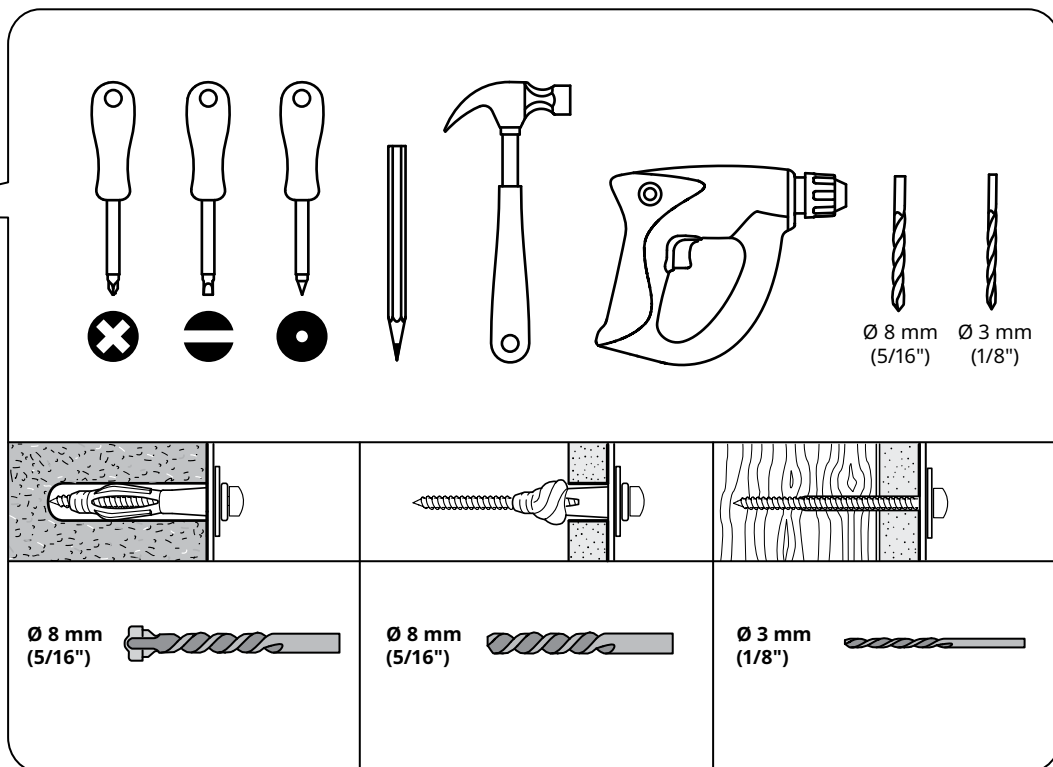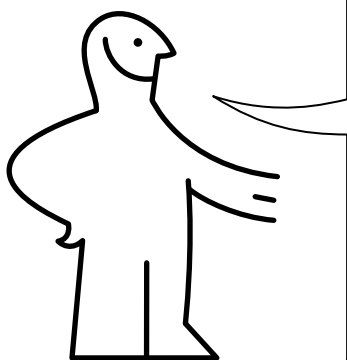

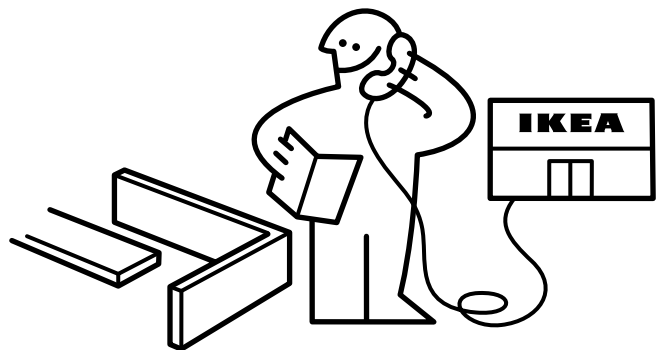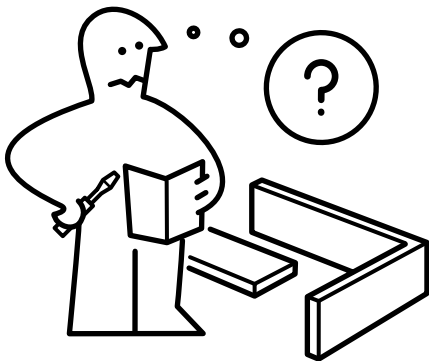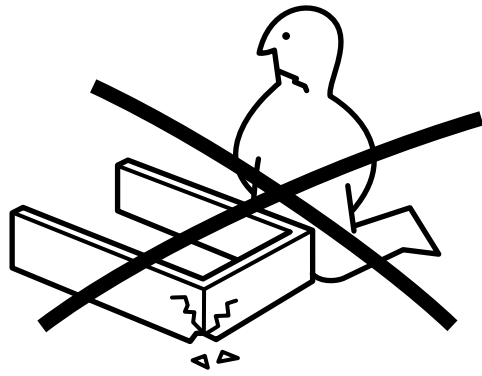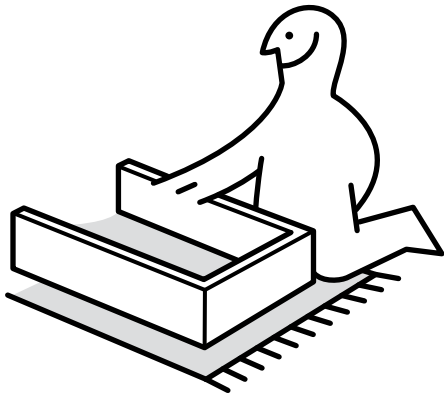


1



101345

 
14x



151706

151708

 
14x



151705

151707

 14x

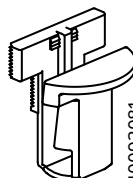

10093081

6x



10093082

6x



 
105811

8x



146114


36x

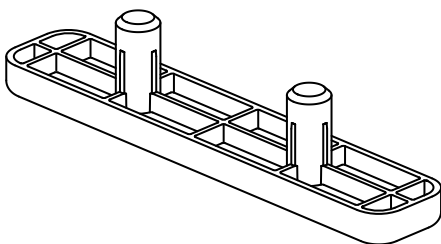

153548

158568

 2x

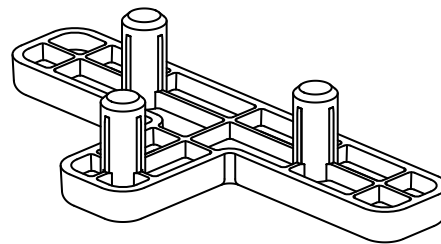


10040039


10051022

4x

 A




24x

 

12x



 
36x




24x



 
20x

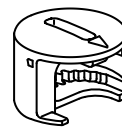


48x

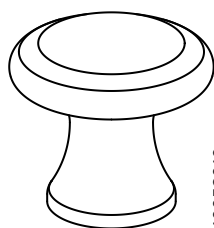 


12x

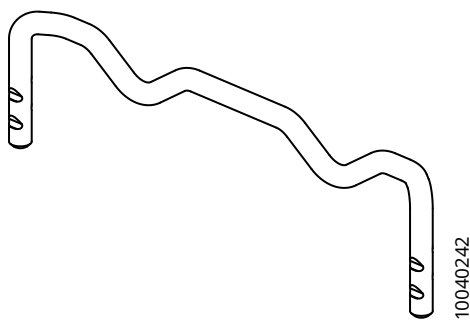 


6x

 


2x

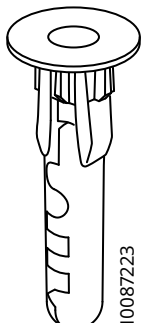 


2x

 



1x

 

2x

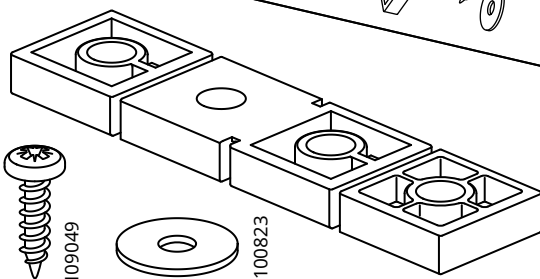 


1x

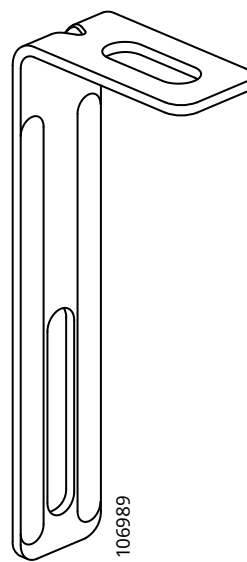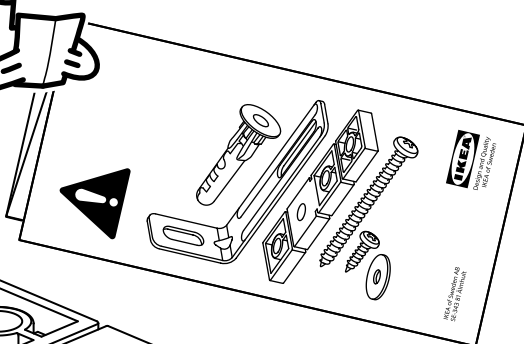  


1x

 
370172

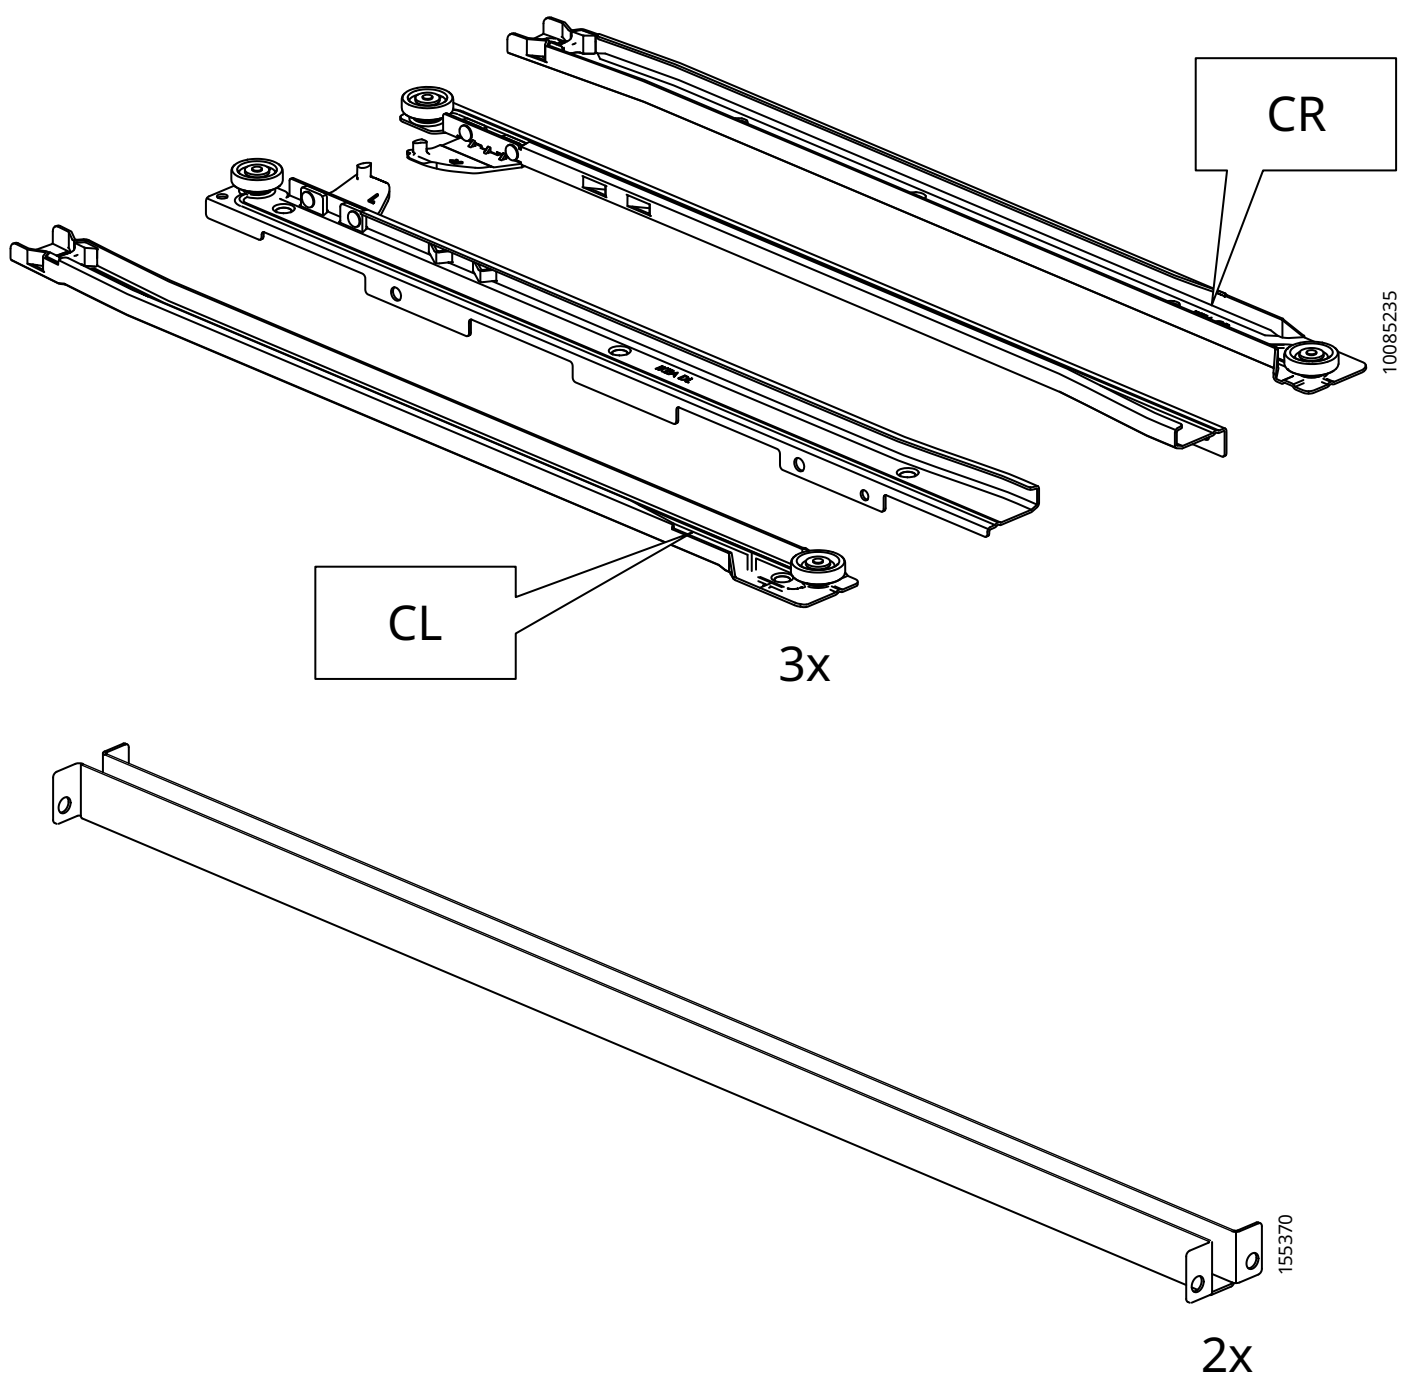


1

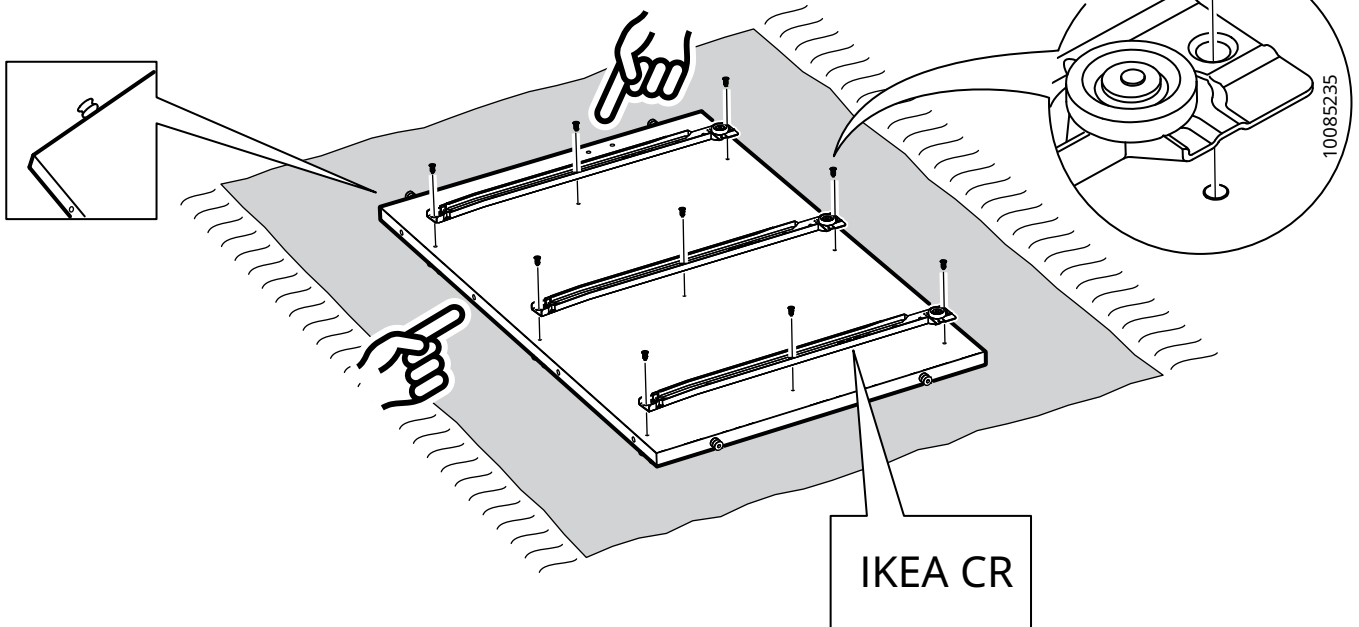 


2

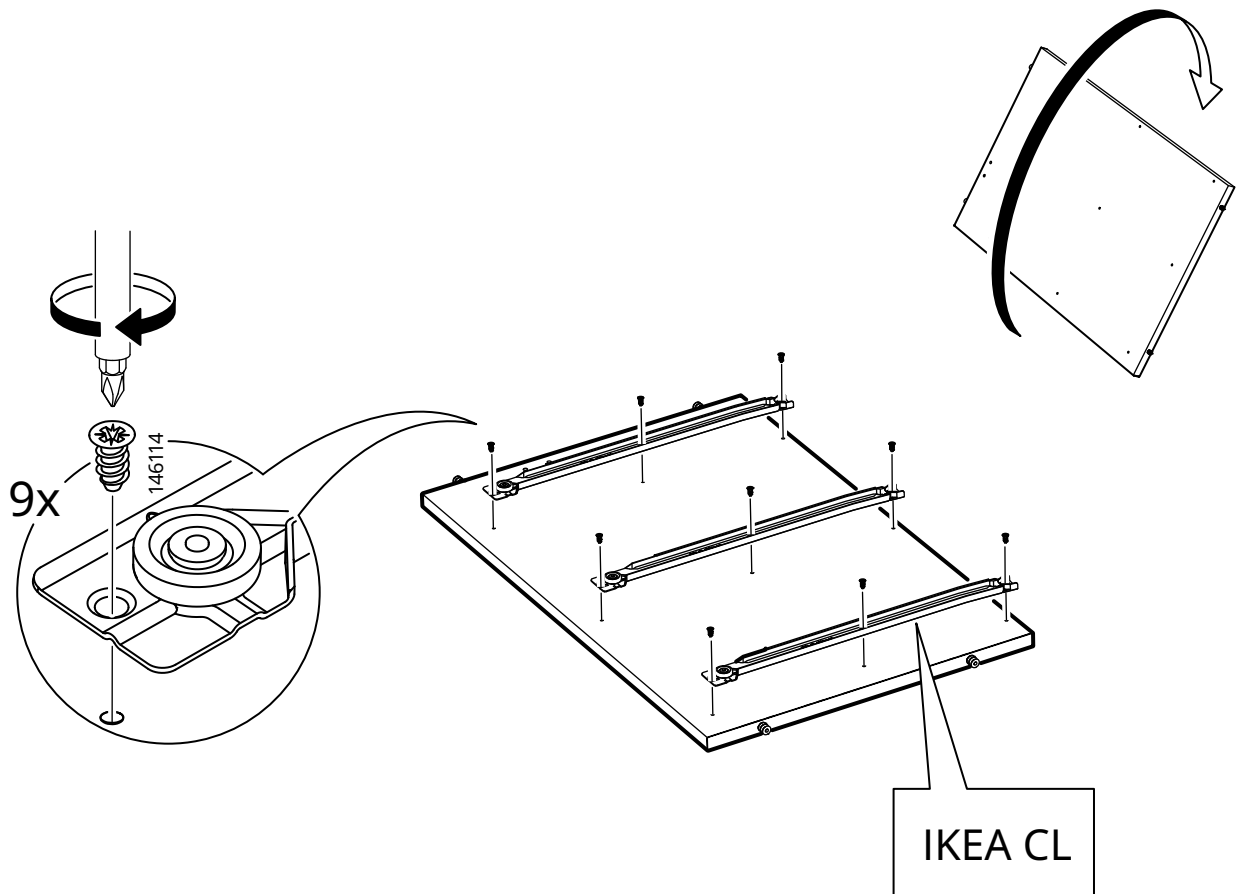 


3

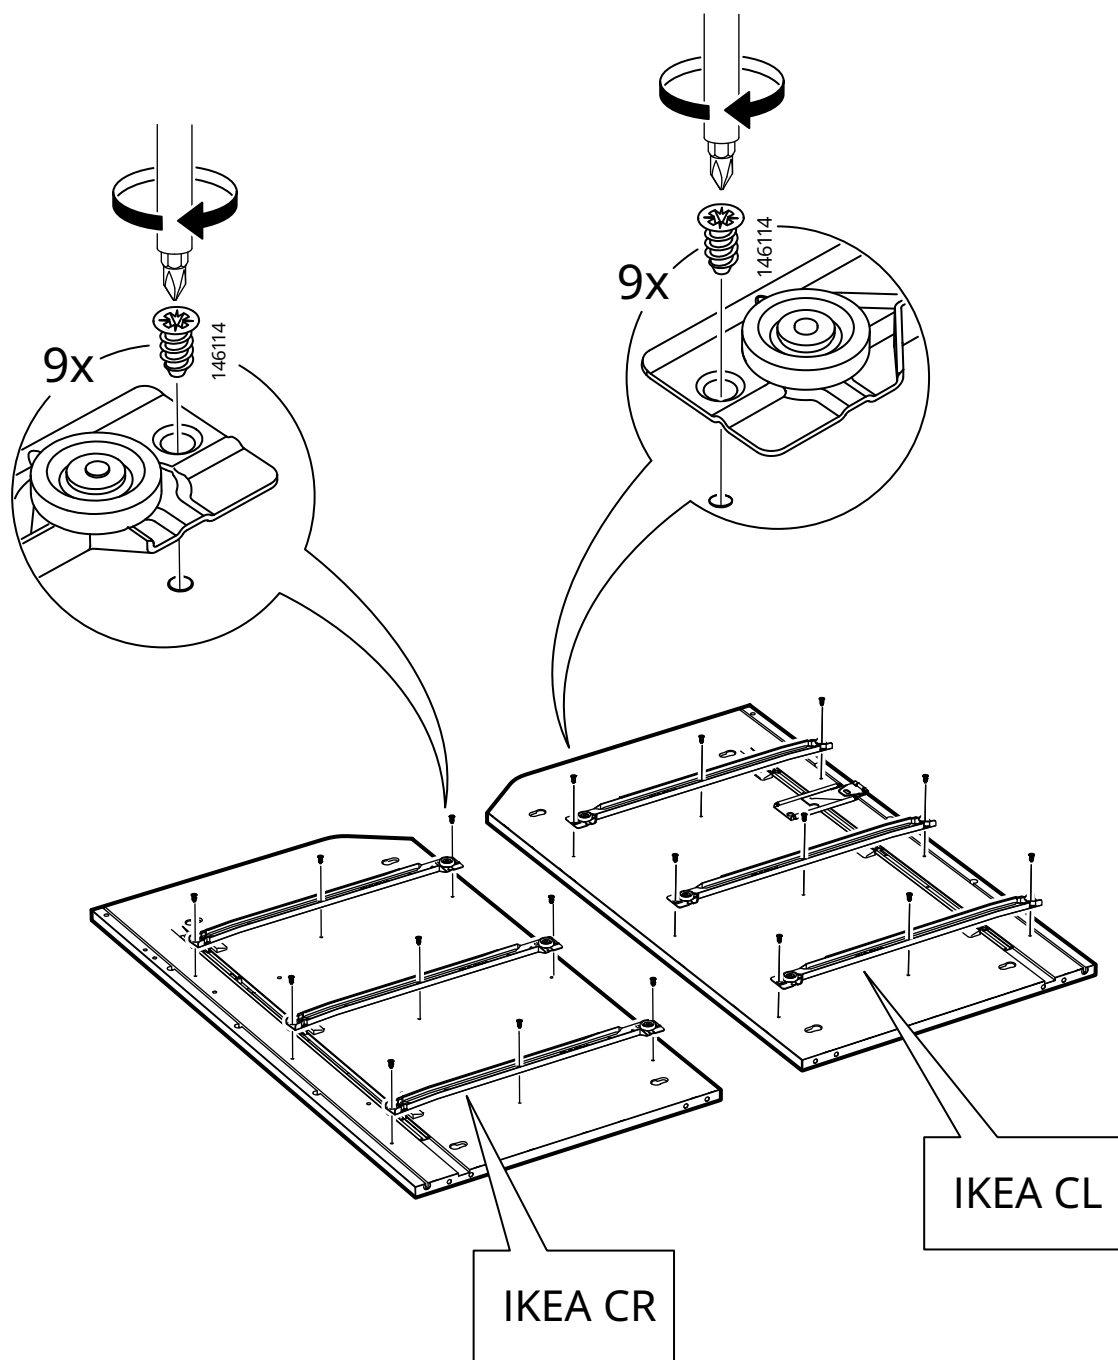 


4

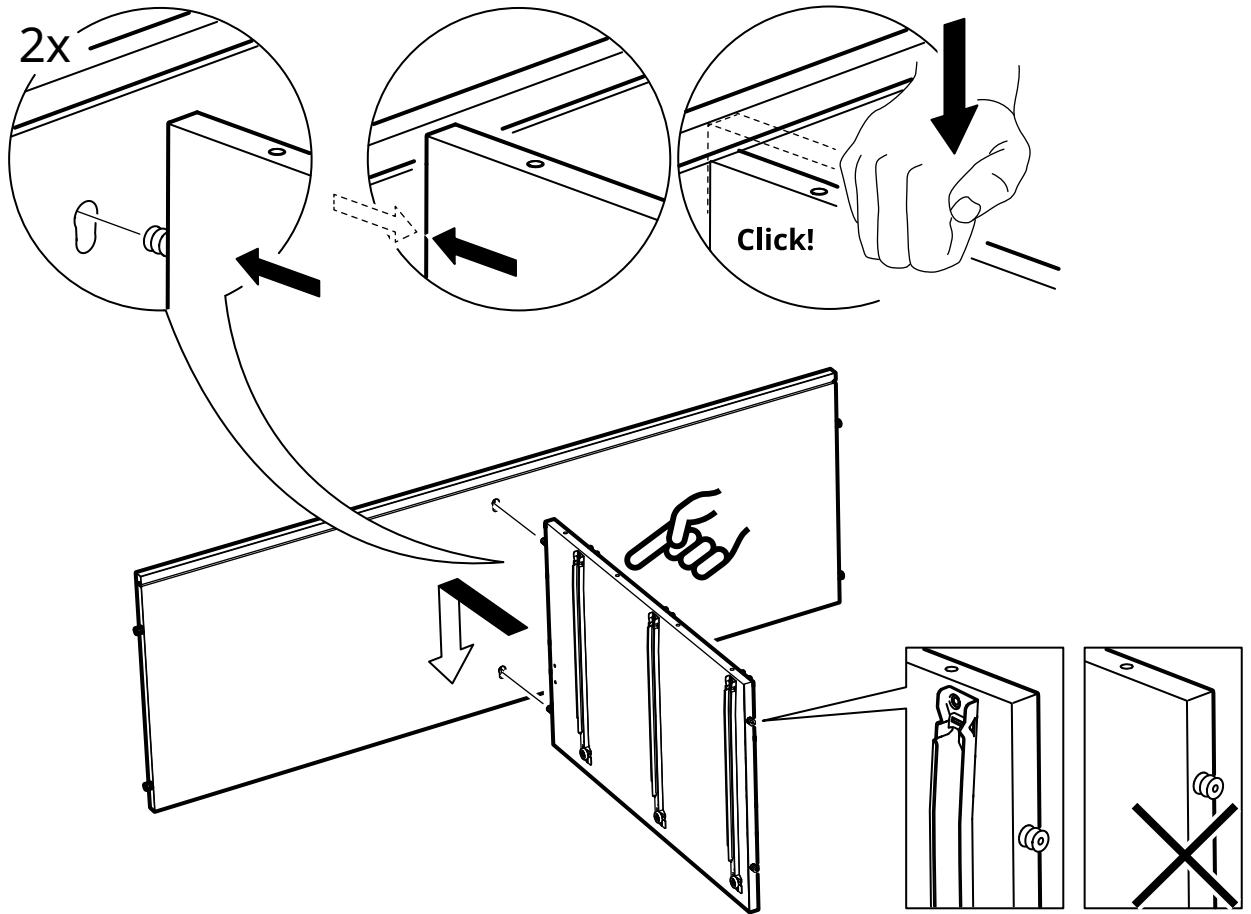 


5

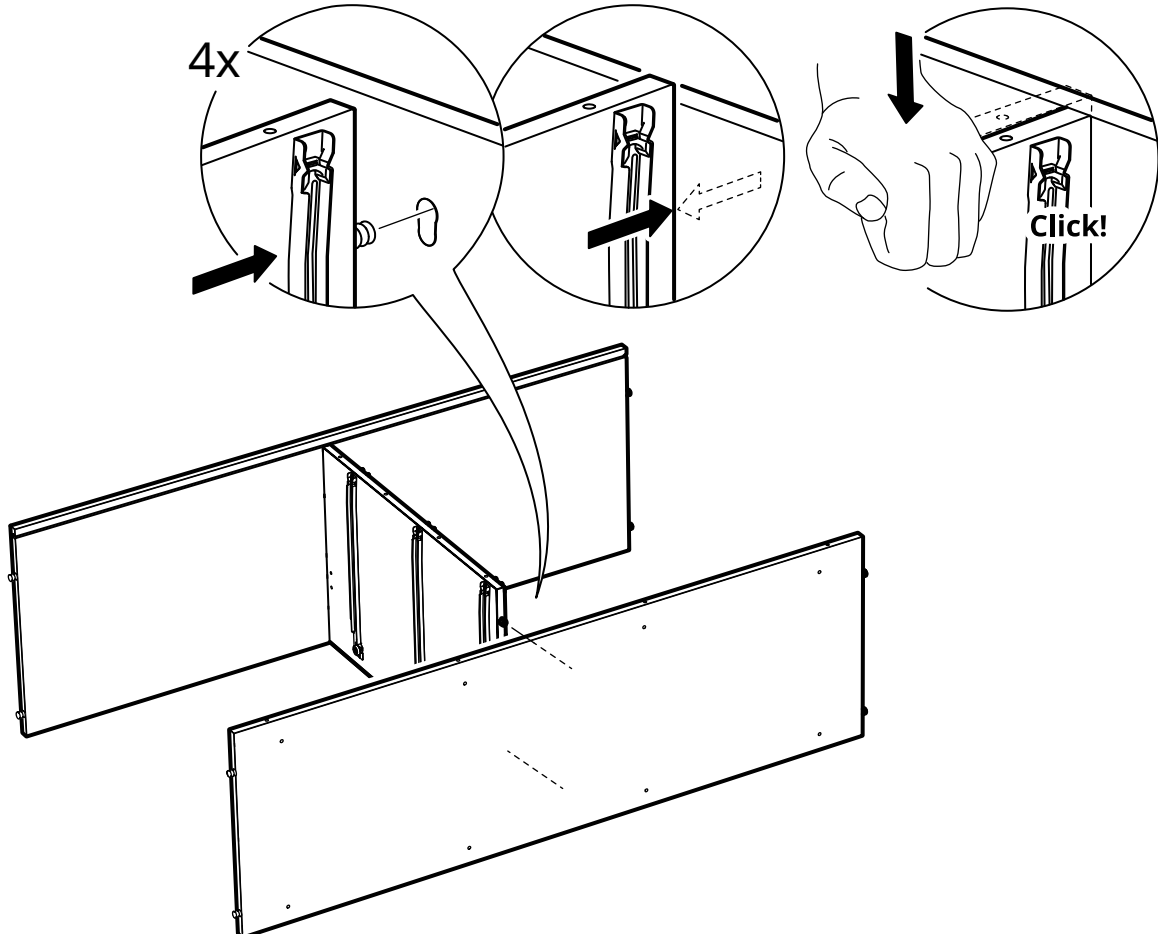 


6

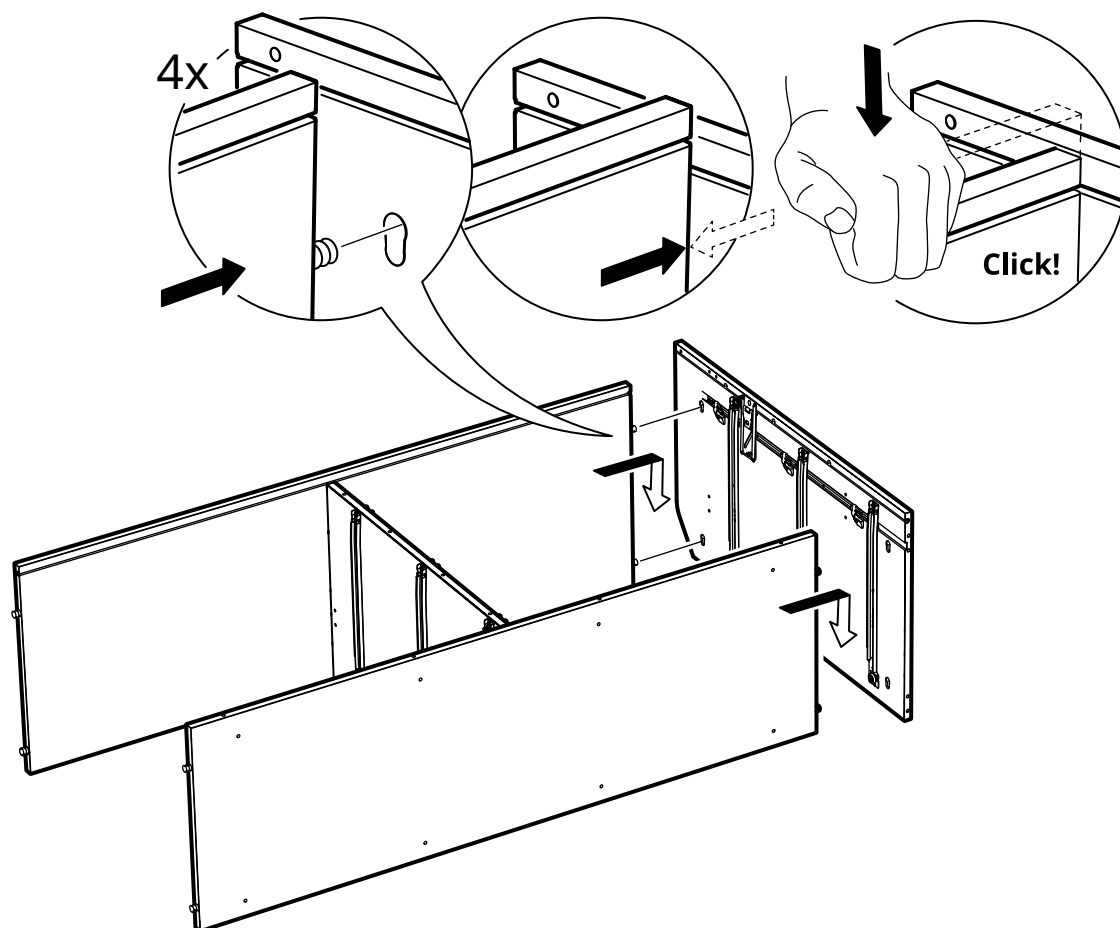 


7

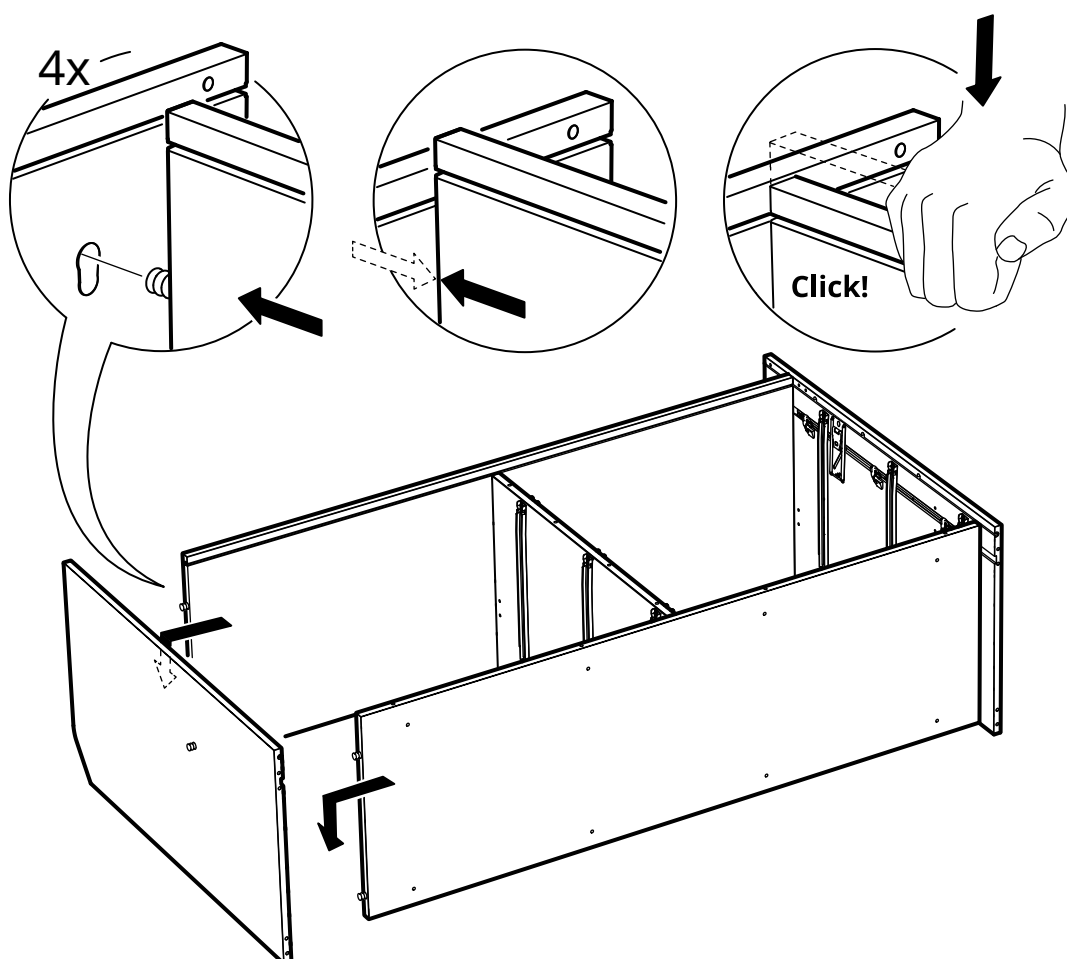 


8

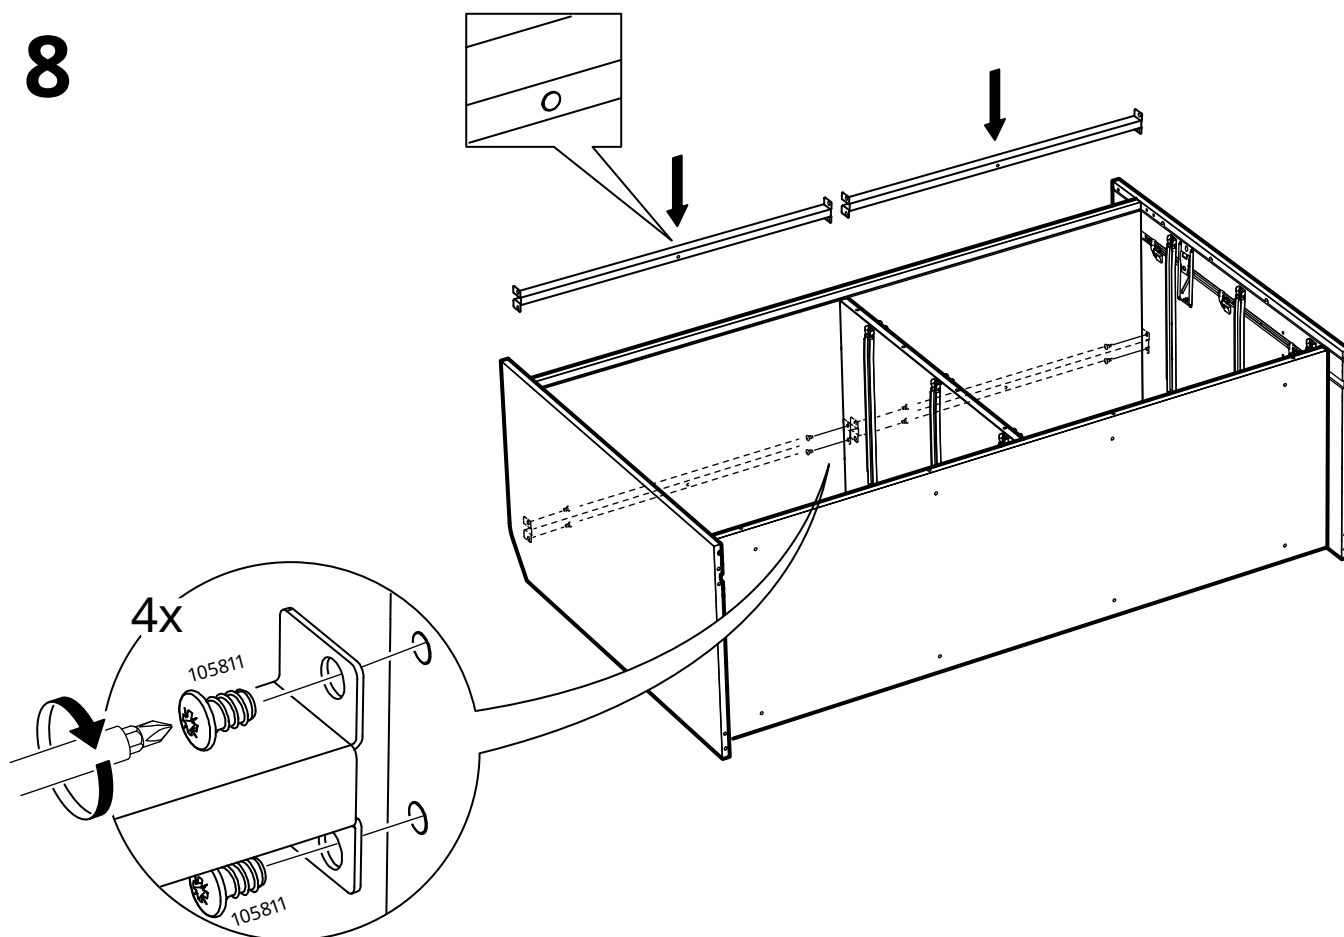 


9

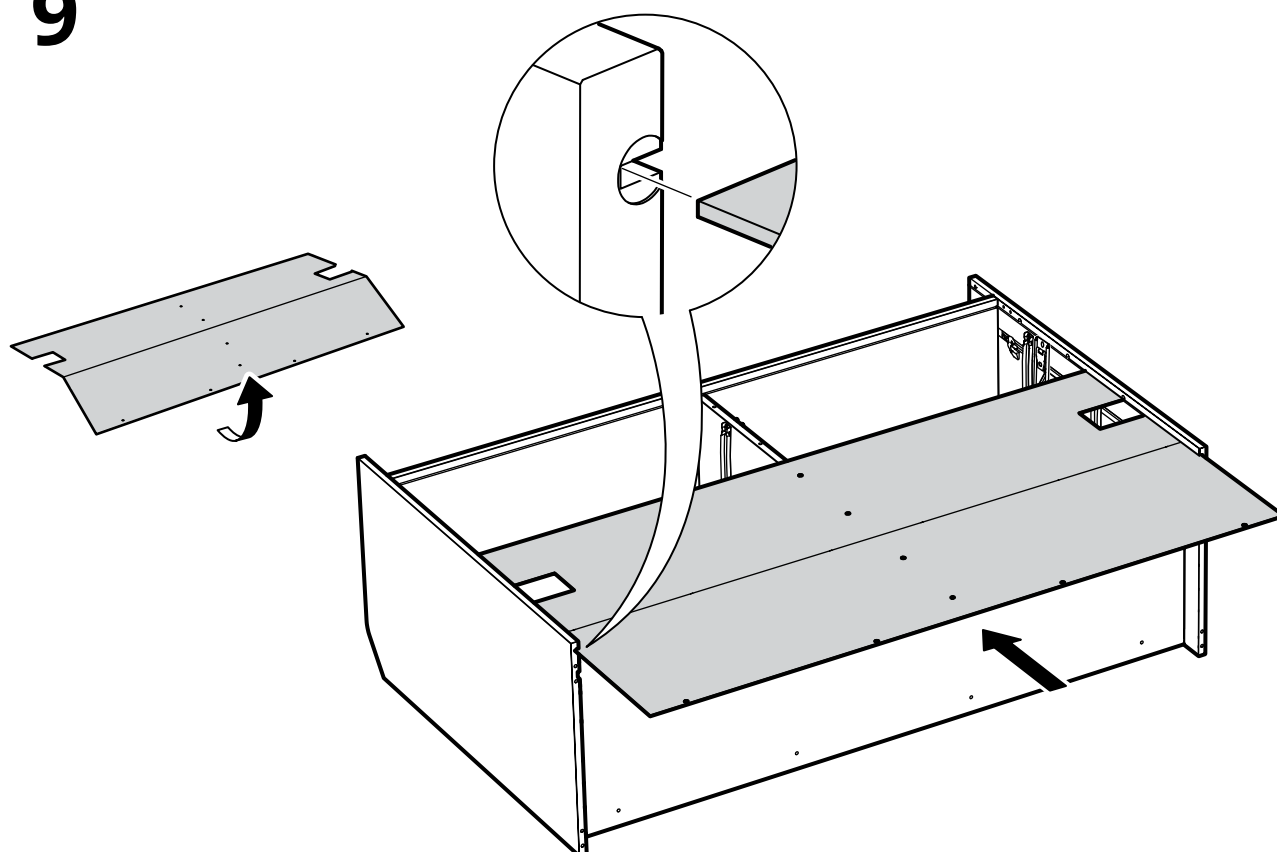 


10

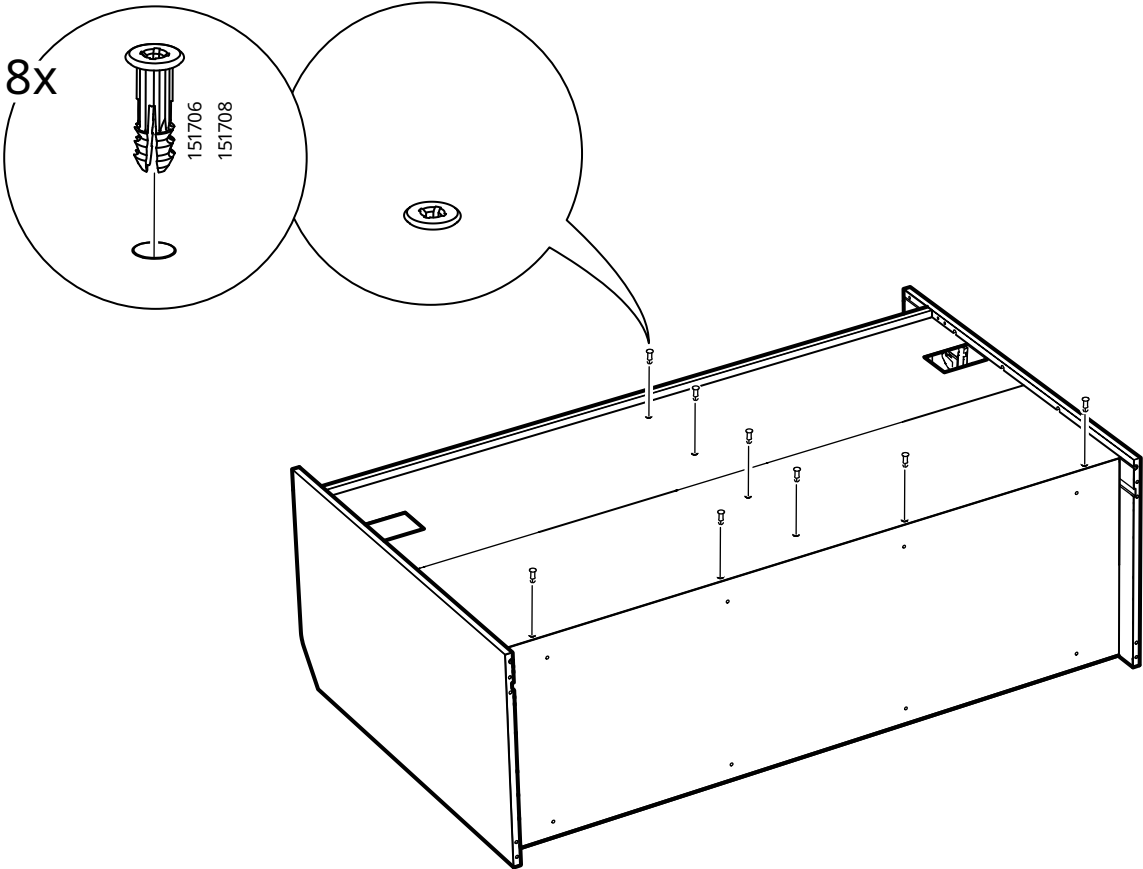 


11

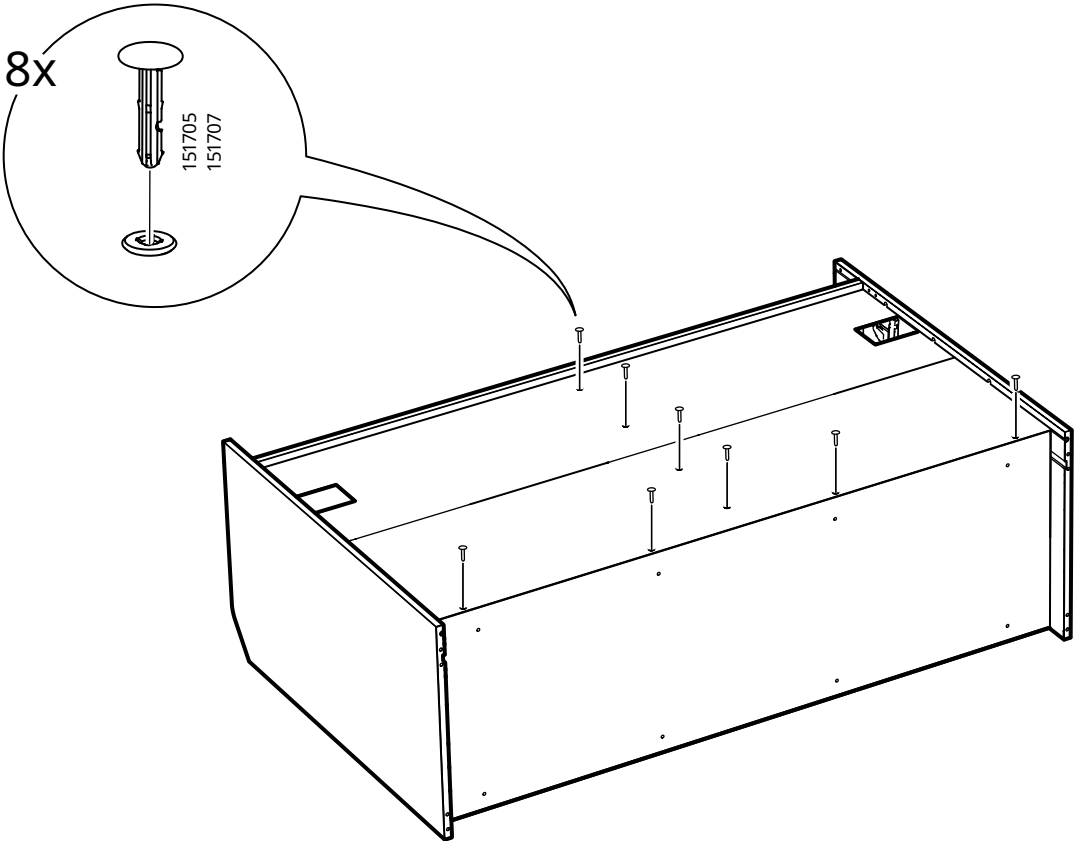 


12

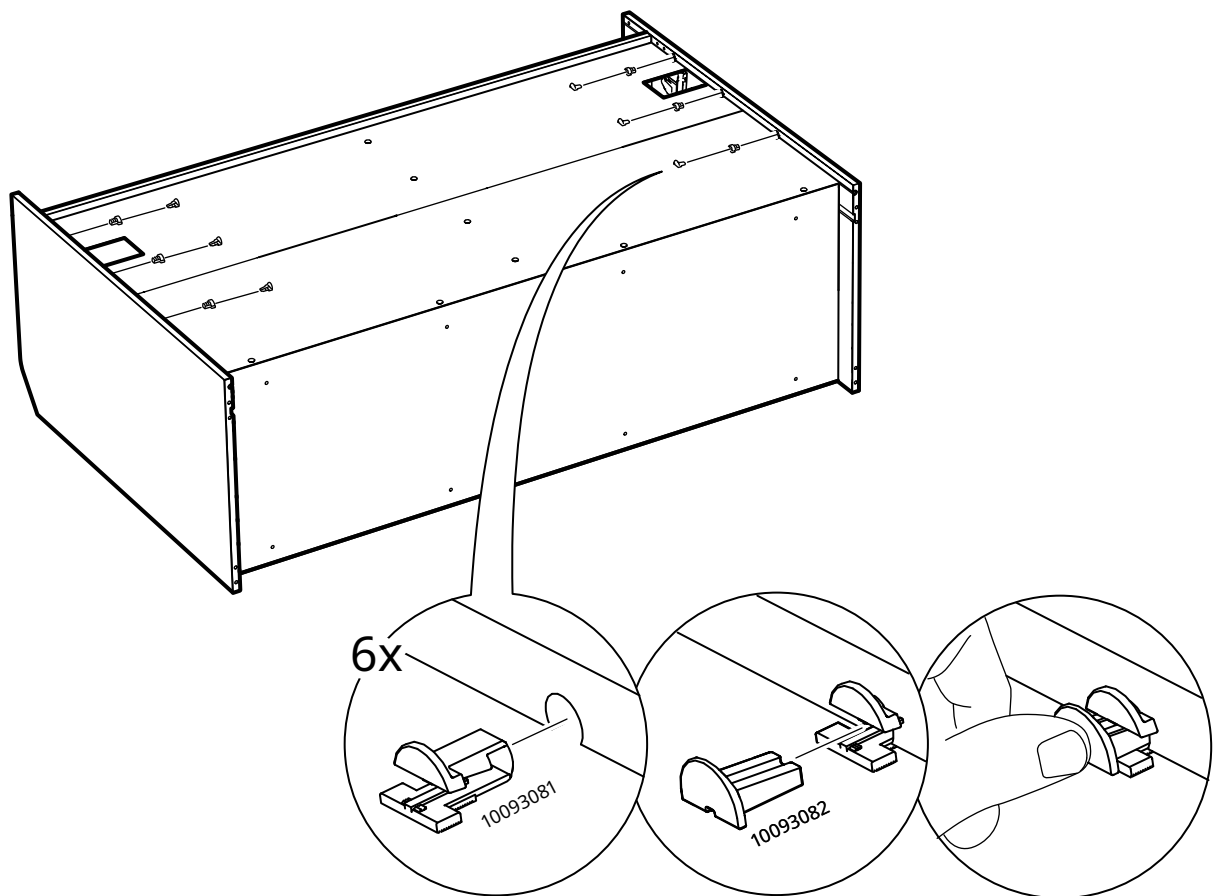 


13

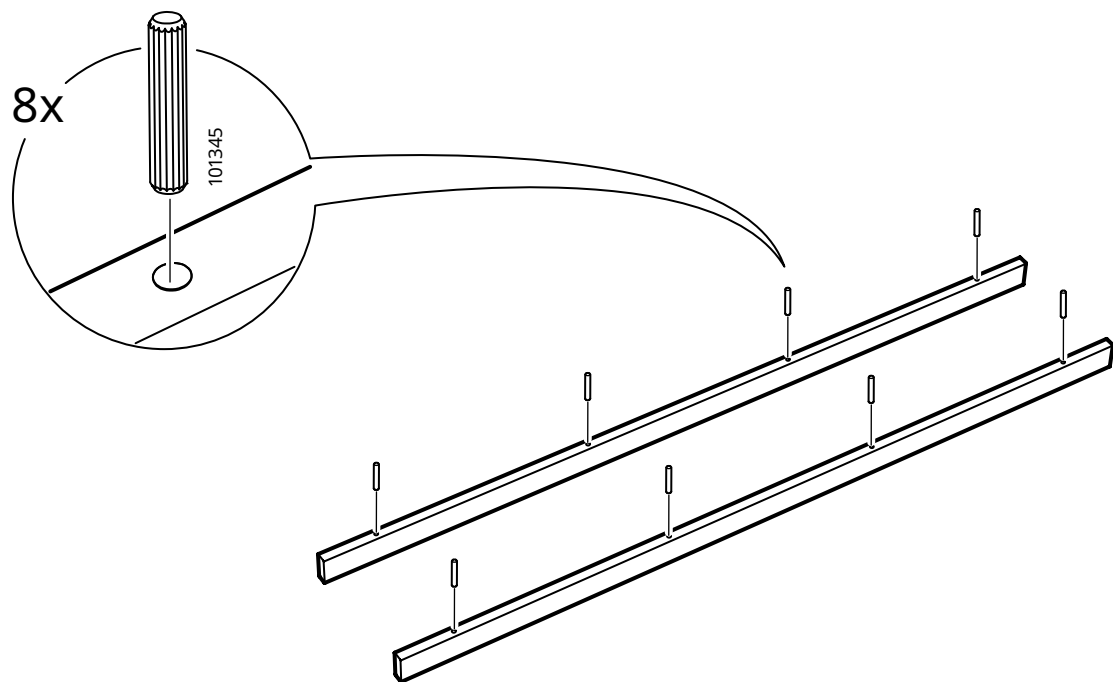 


14

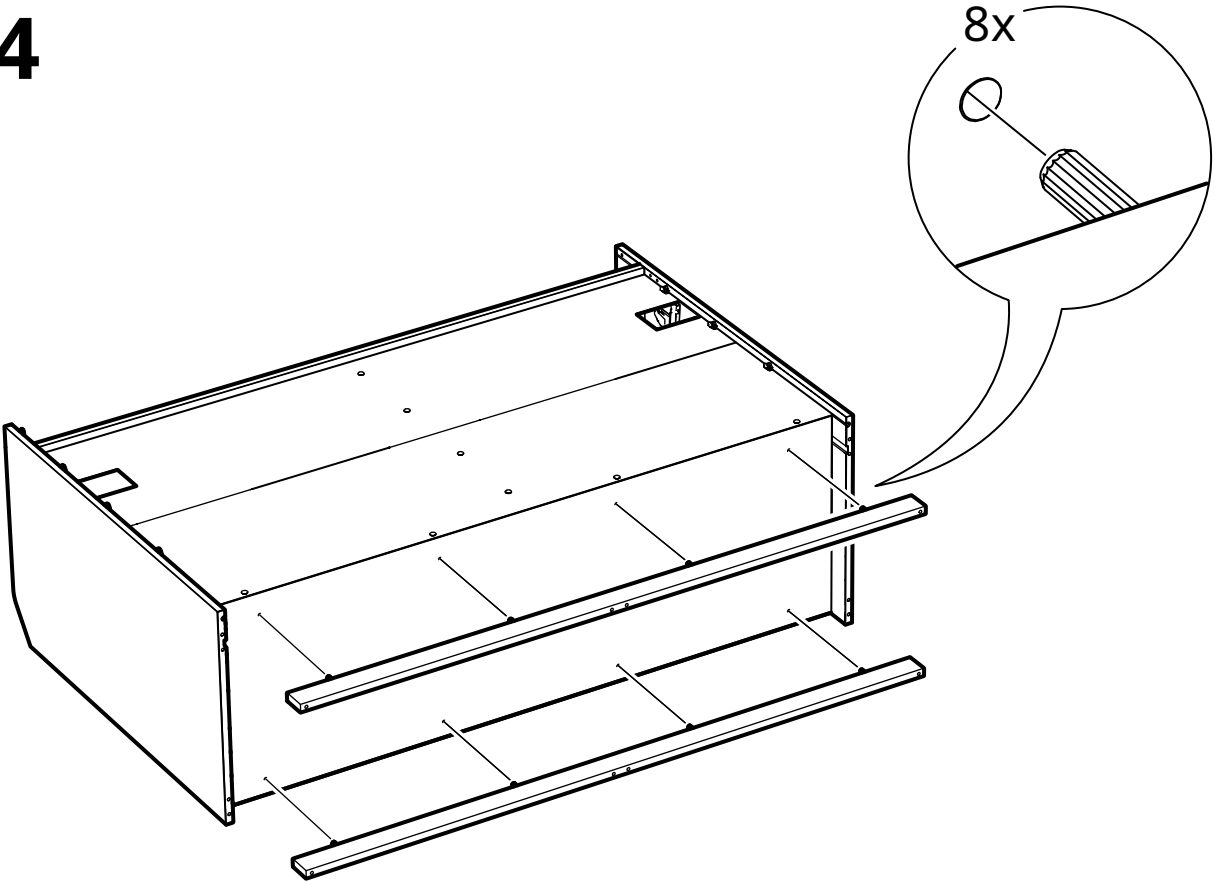 


15



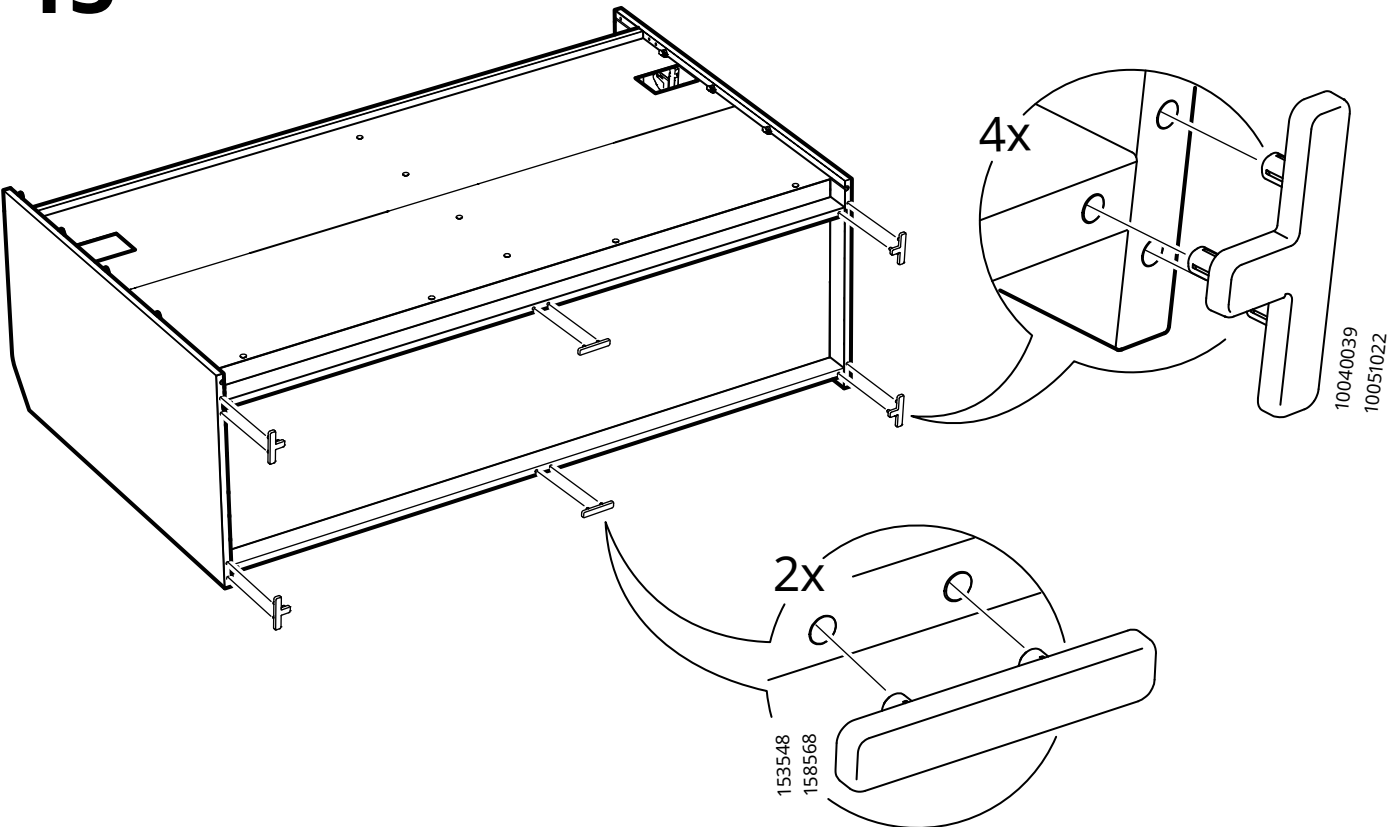 


16





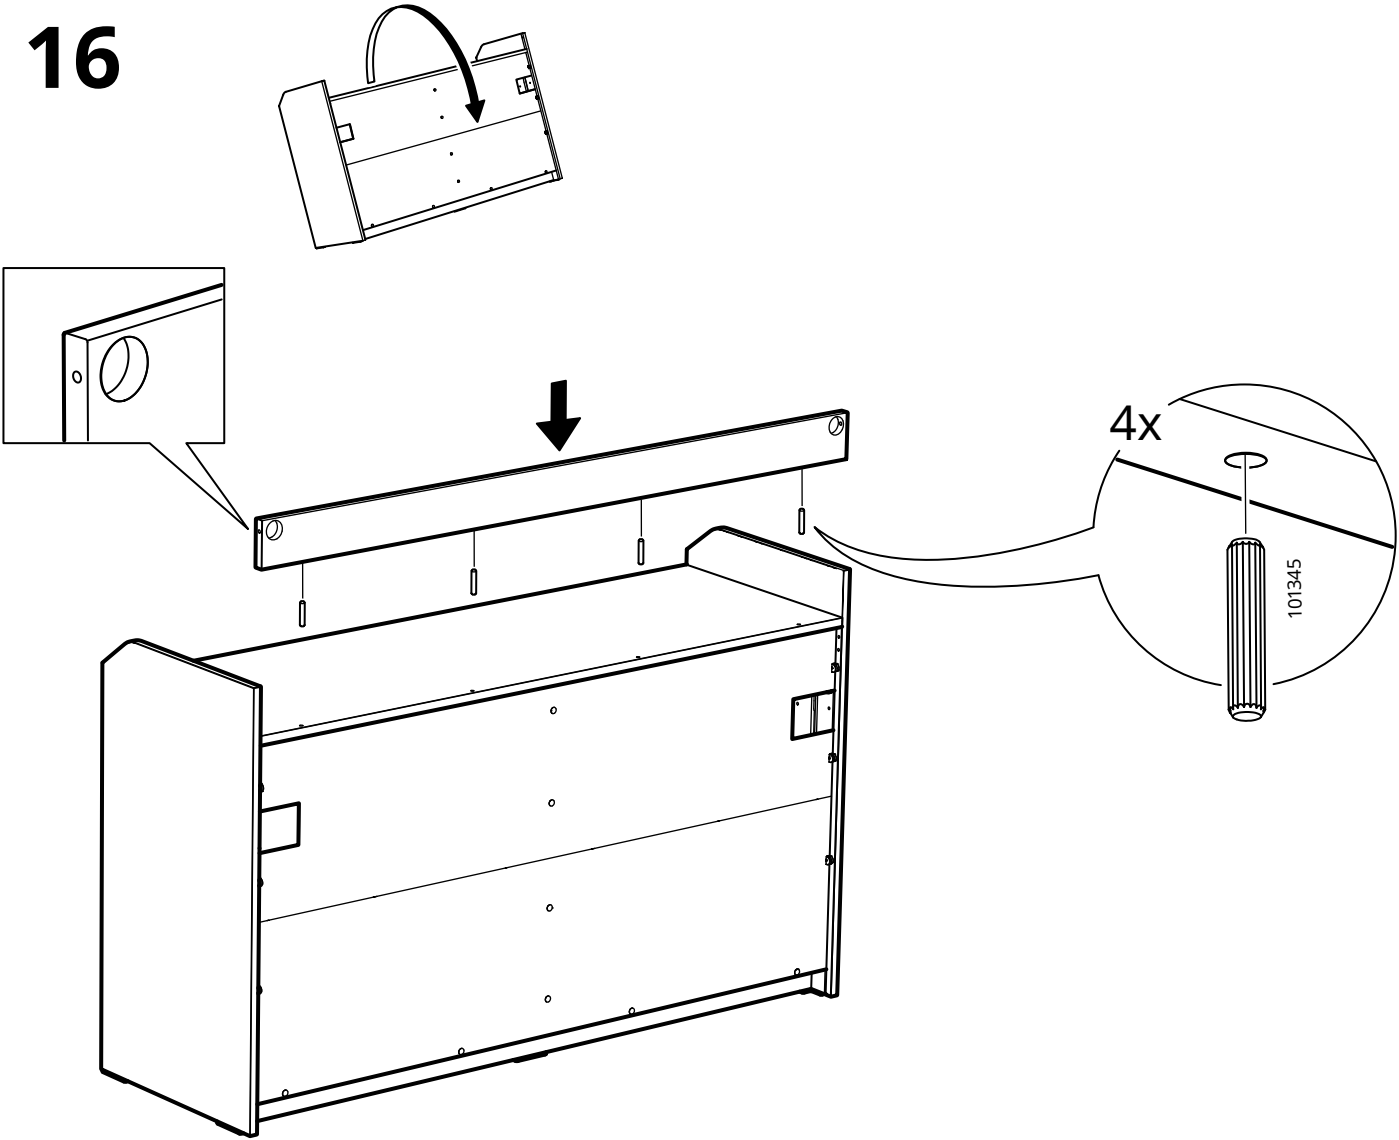 



17

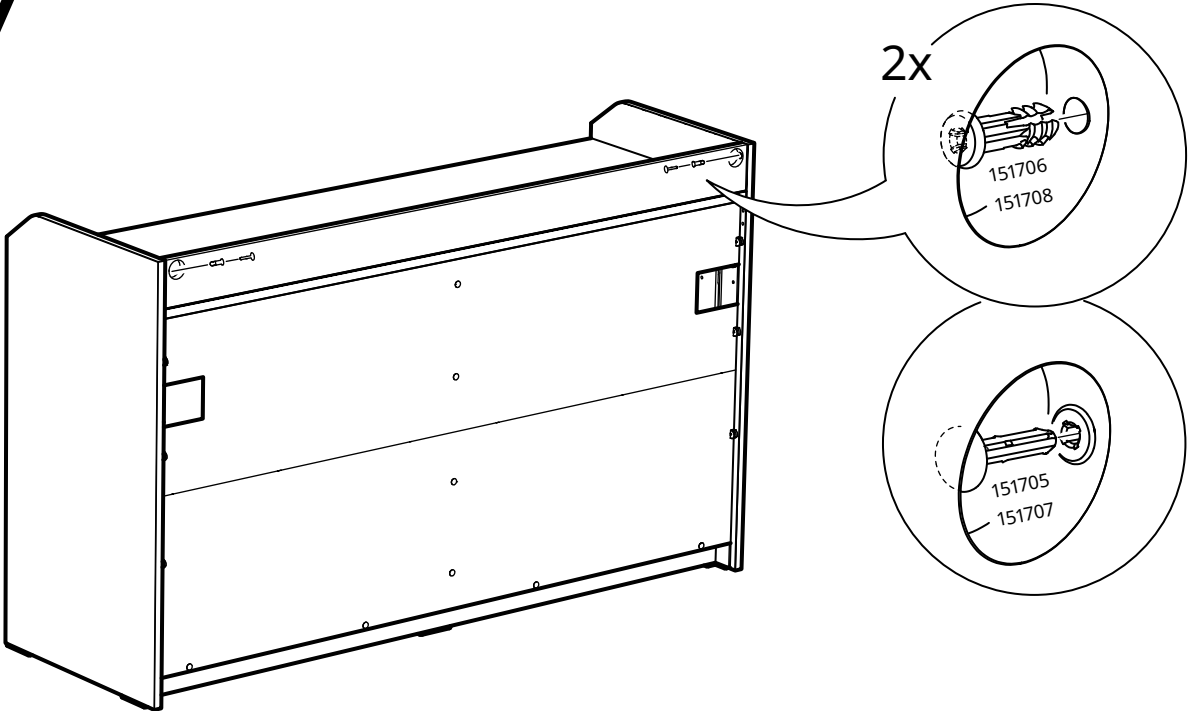 

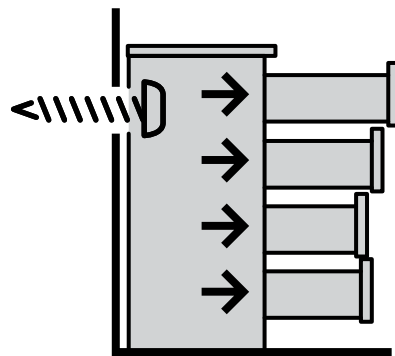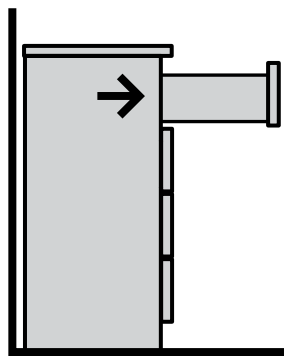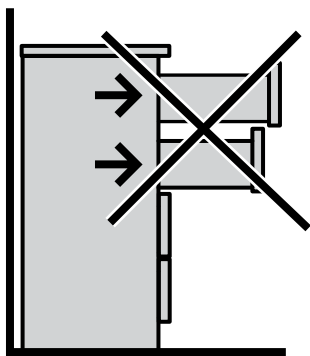   

18

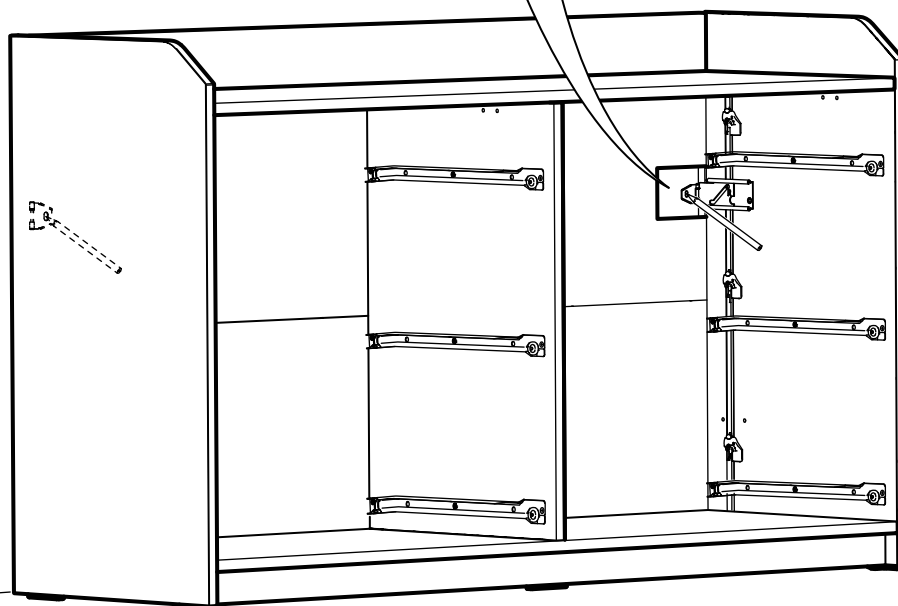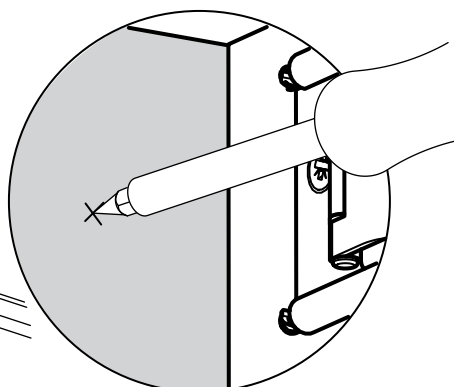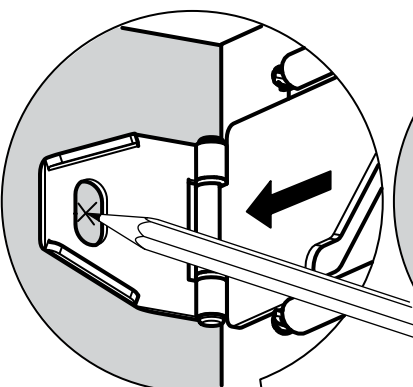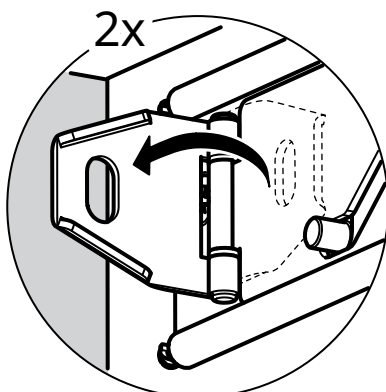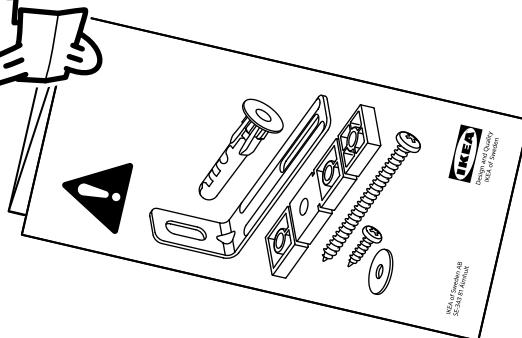     

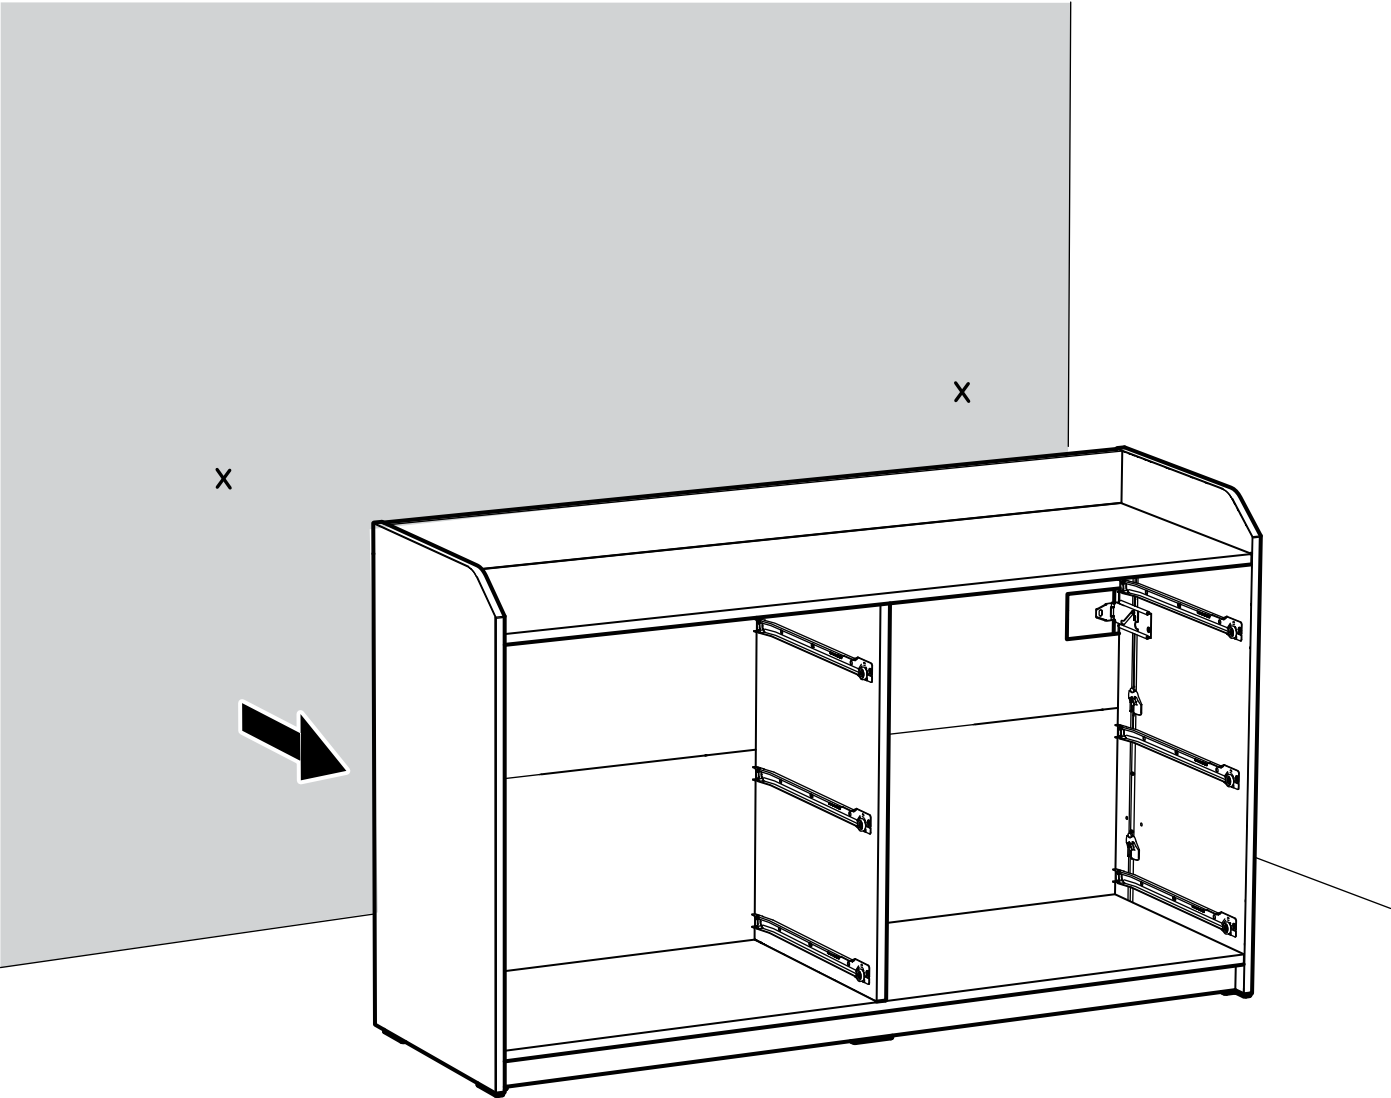 




www.IKEA.com/secure-it



 www.IKEA.cn/secure-it

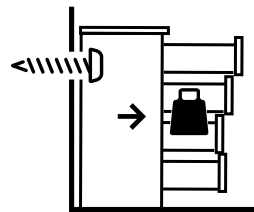

20

 
 
English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.




A
Ø 8 mm (5/16")
1
2
3





B
Ø 8 mm (5/16")
1
2
3


C
Ø 3 mm (1/8")
1
2
3

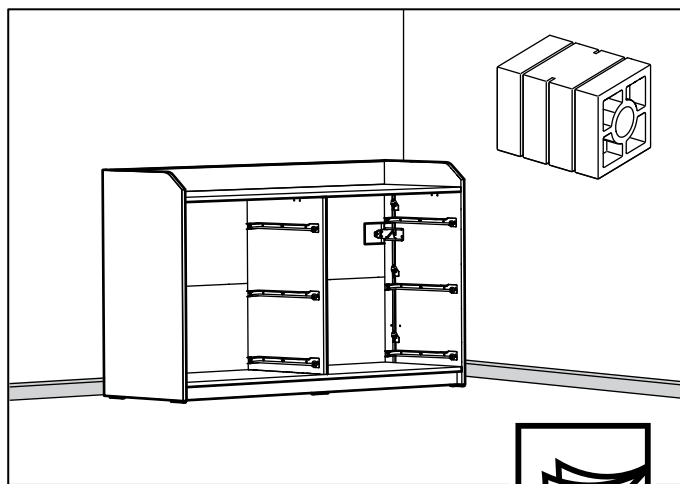
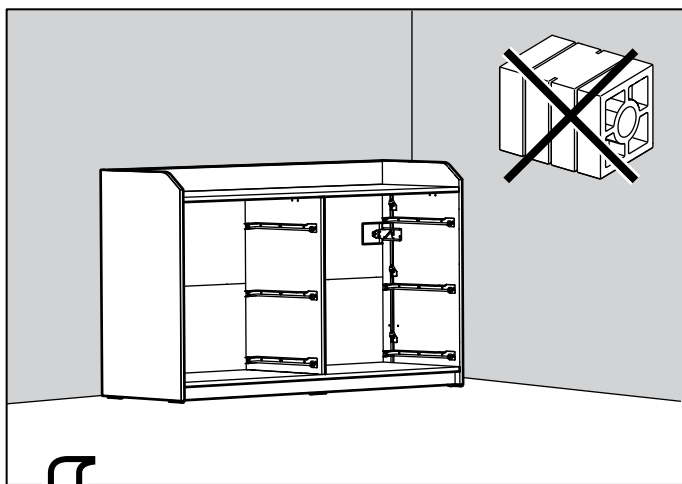


21

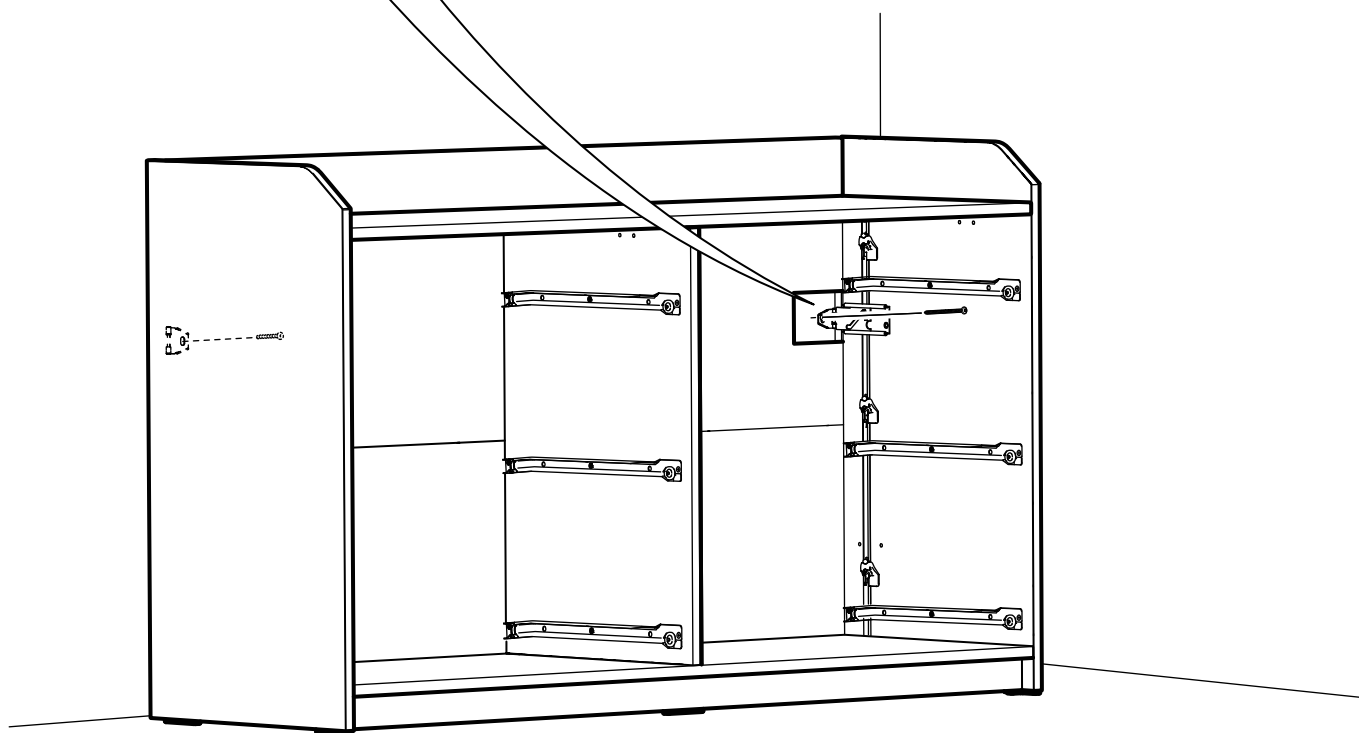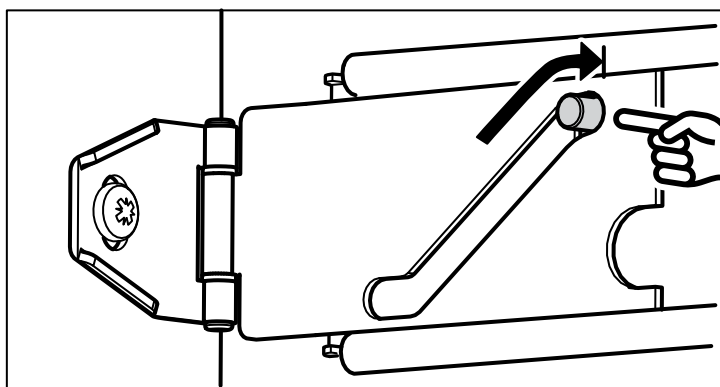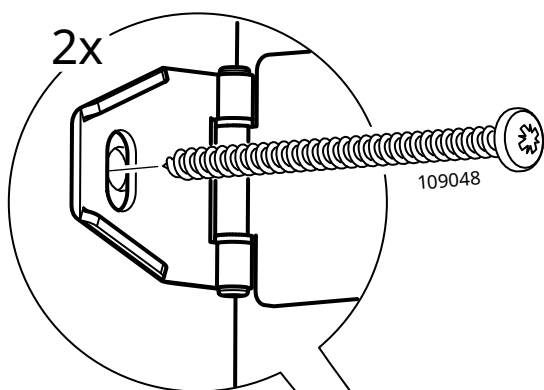   


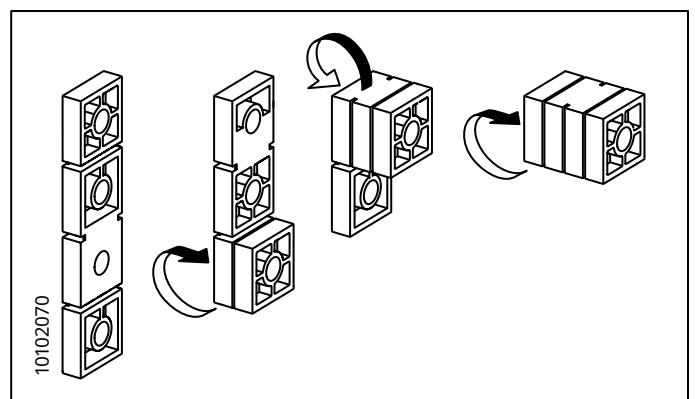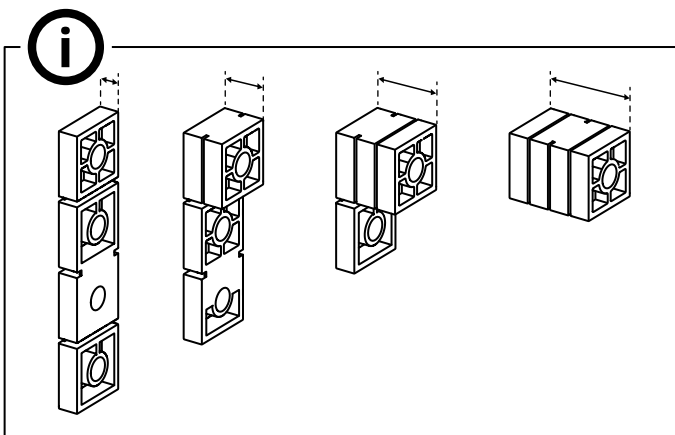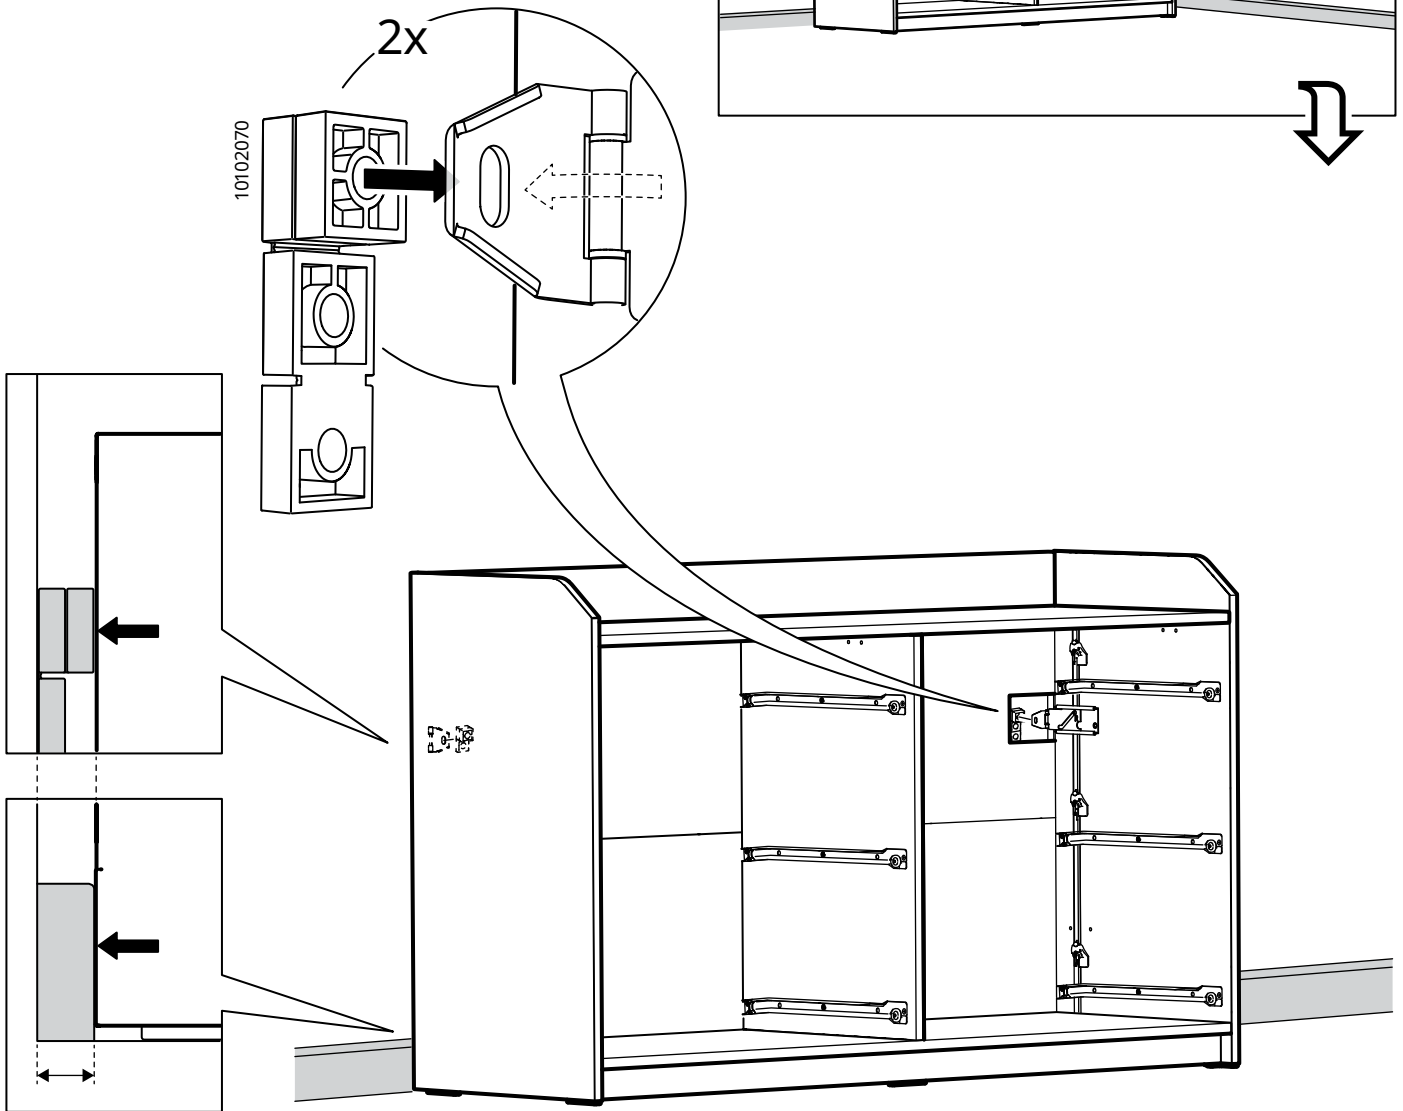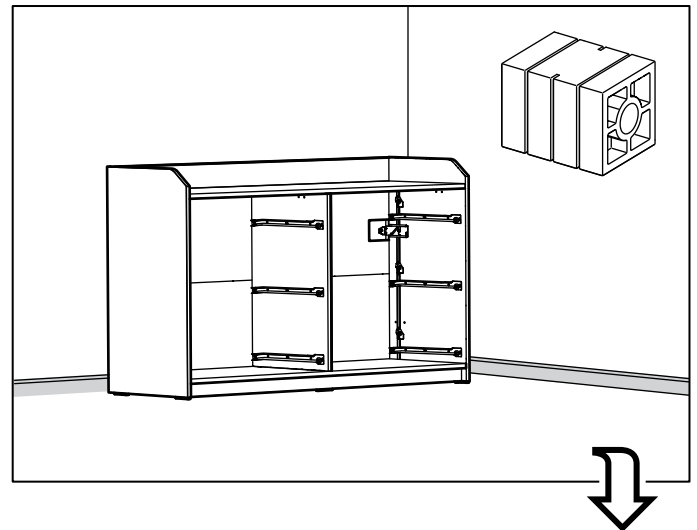    

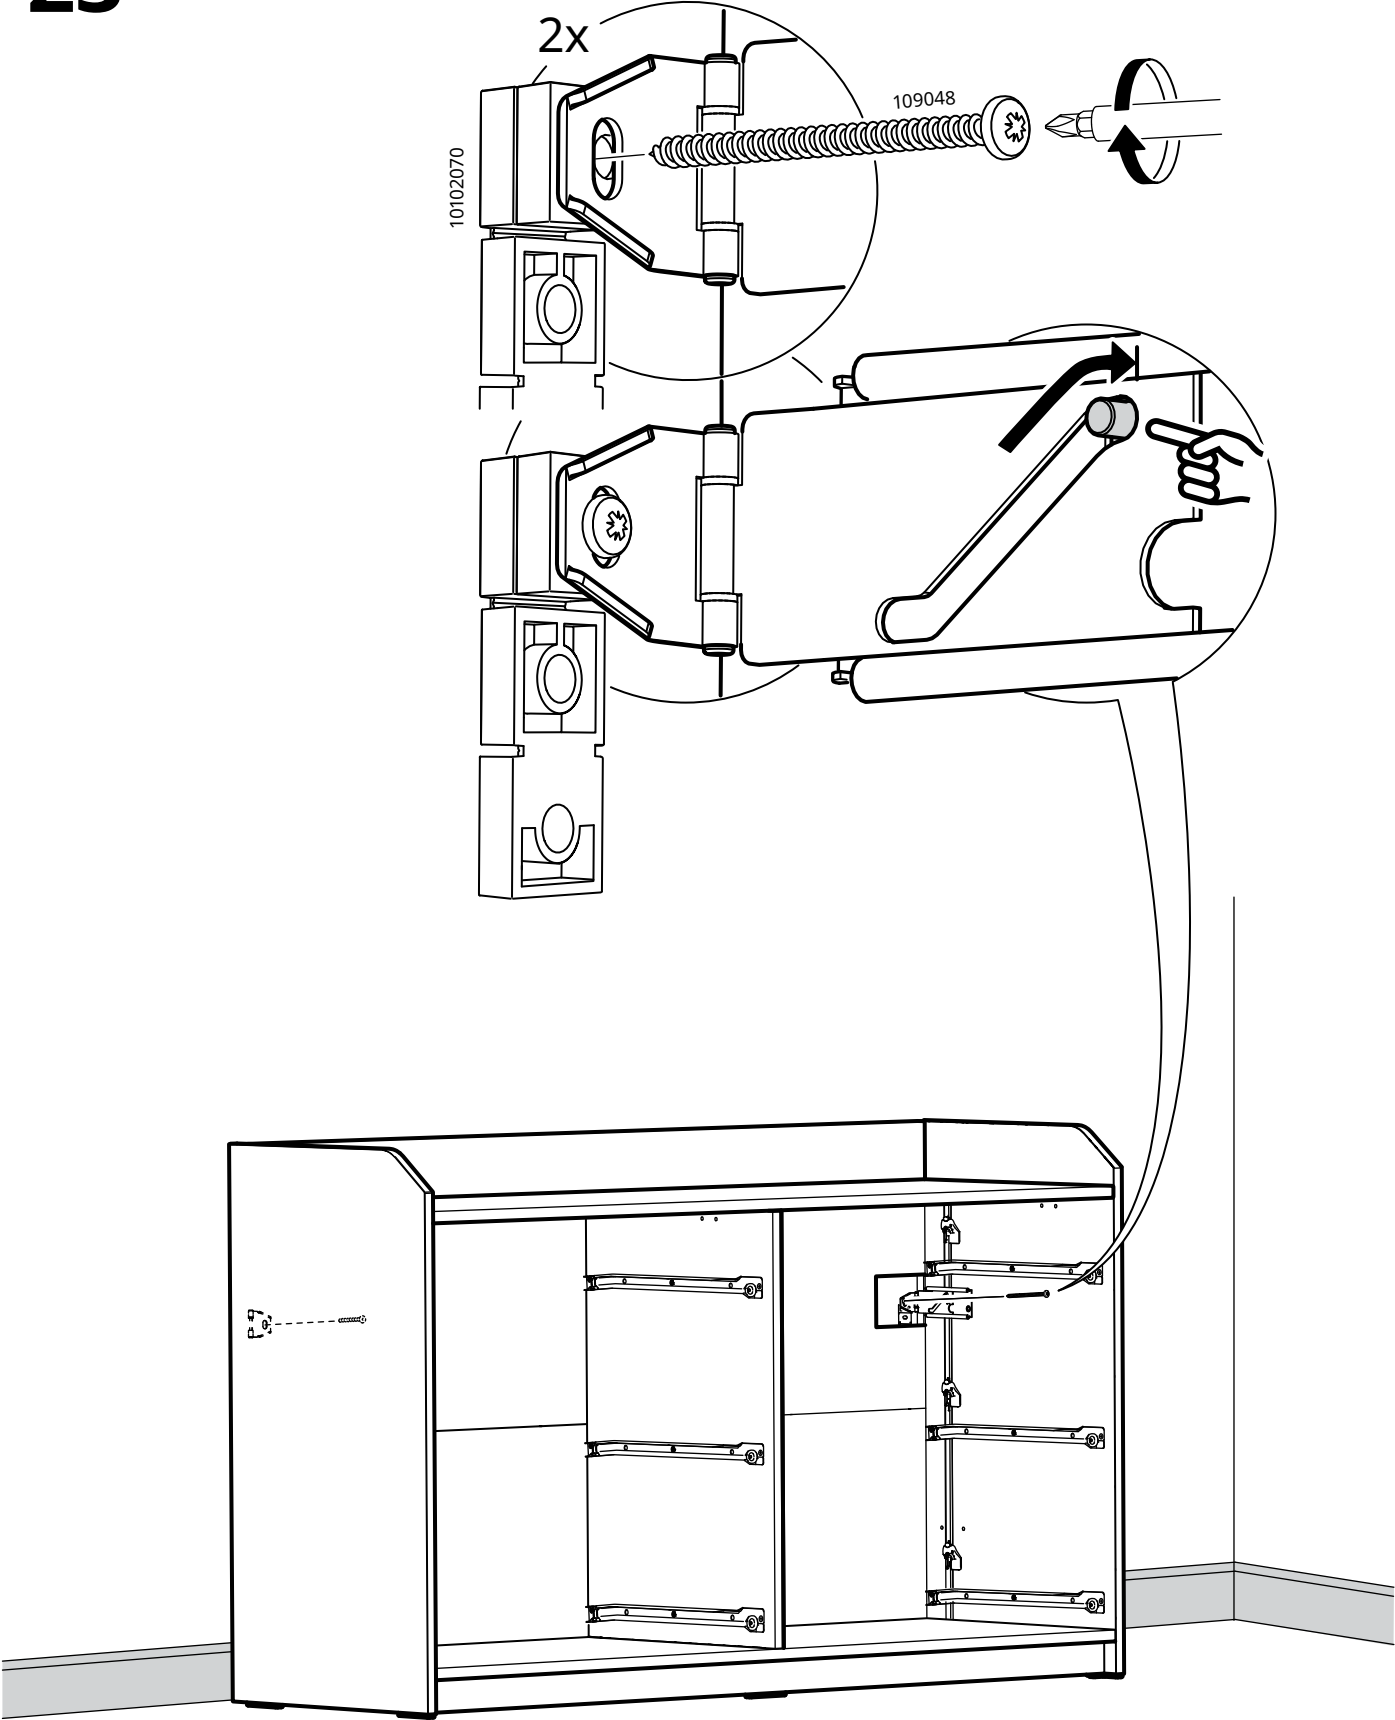 


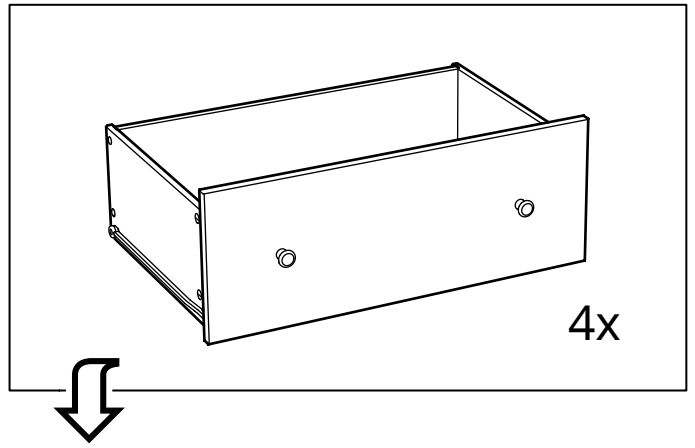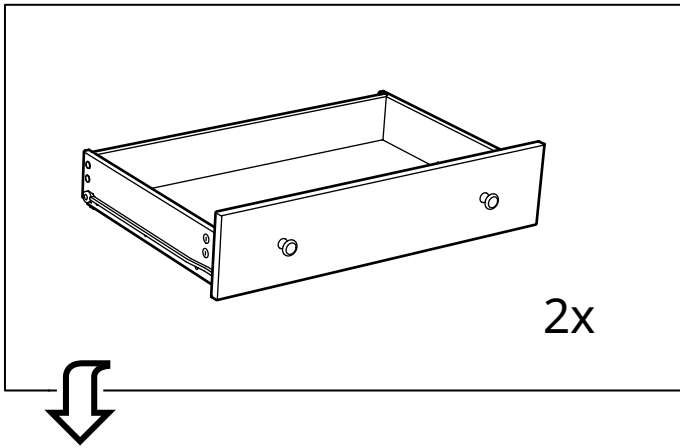  


24

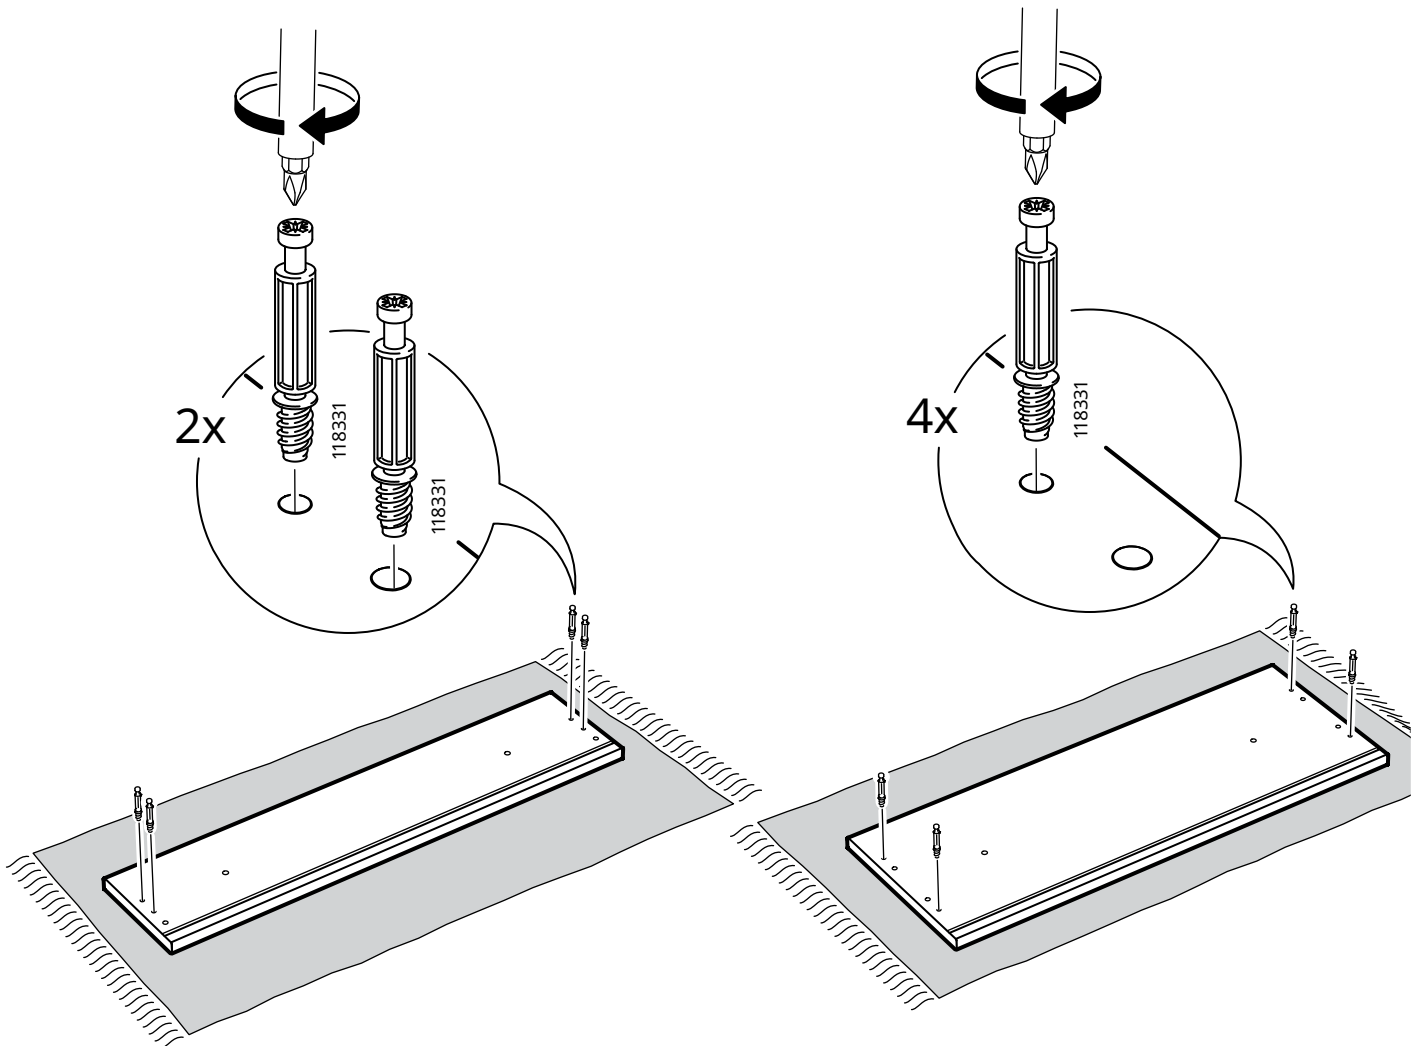 


25


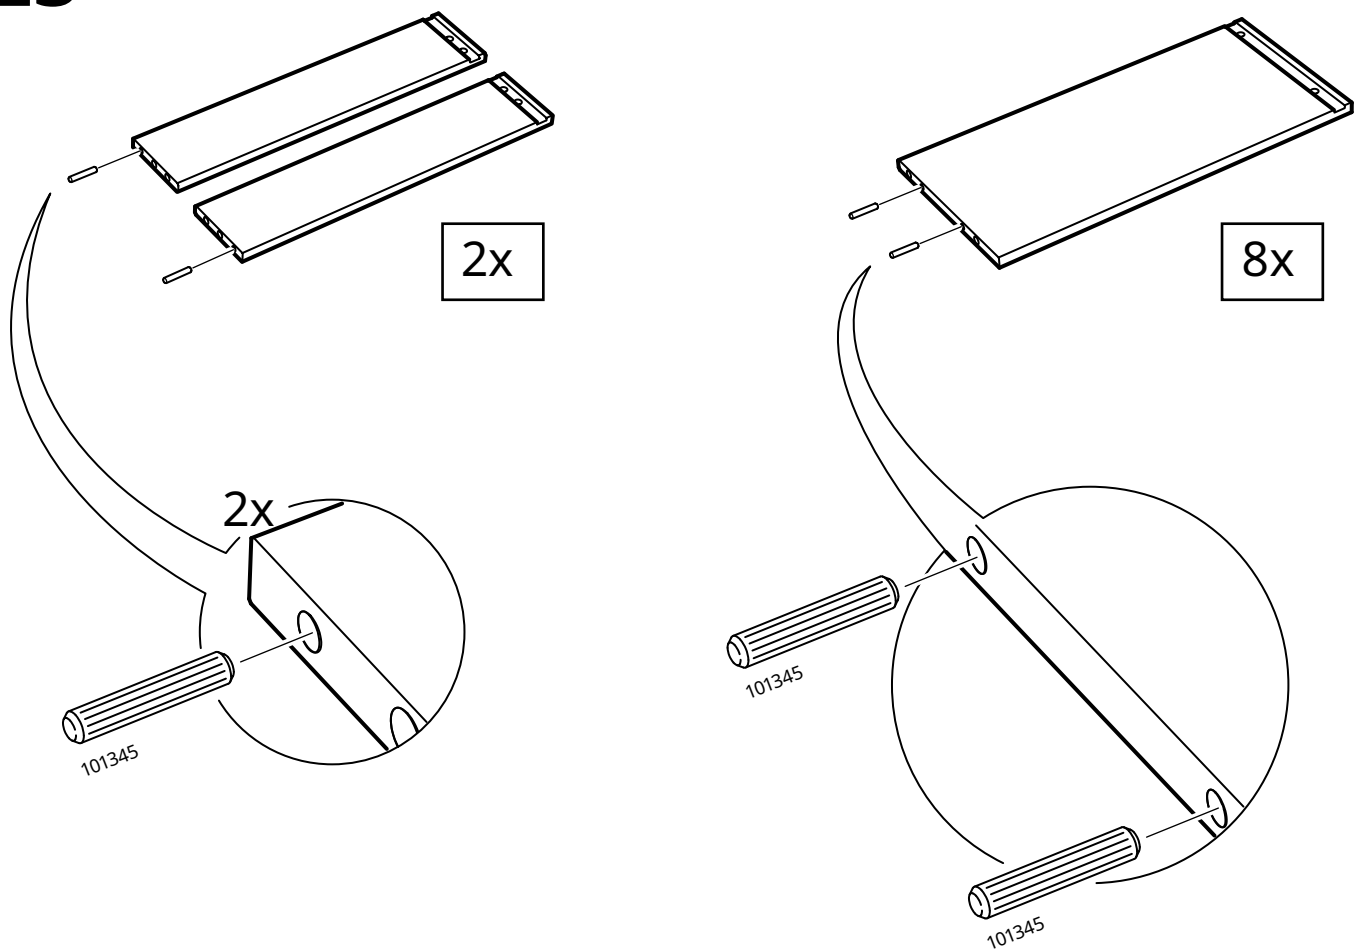 


26

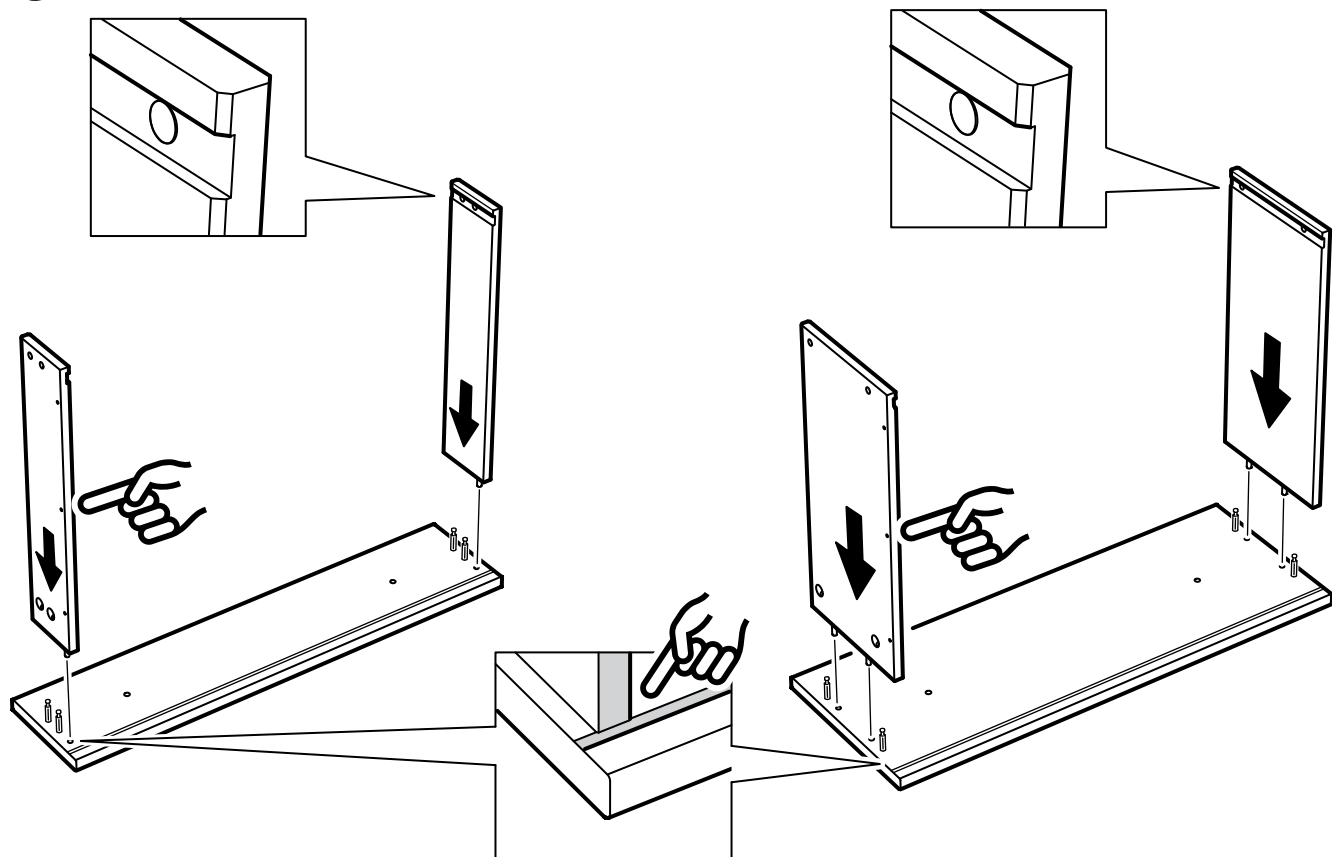 


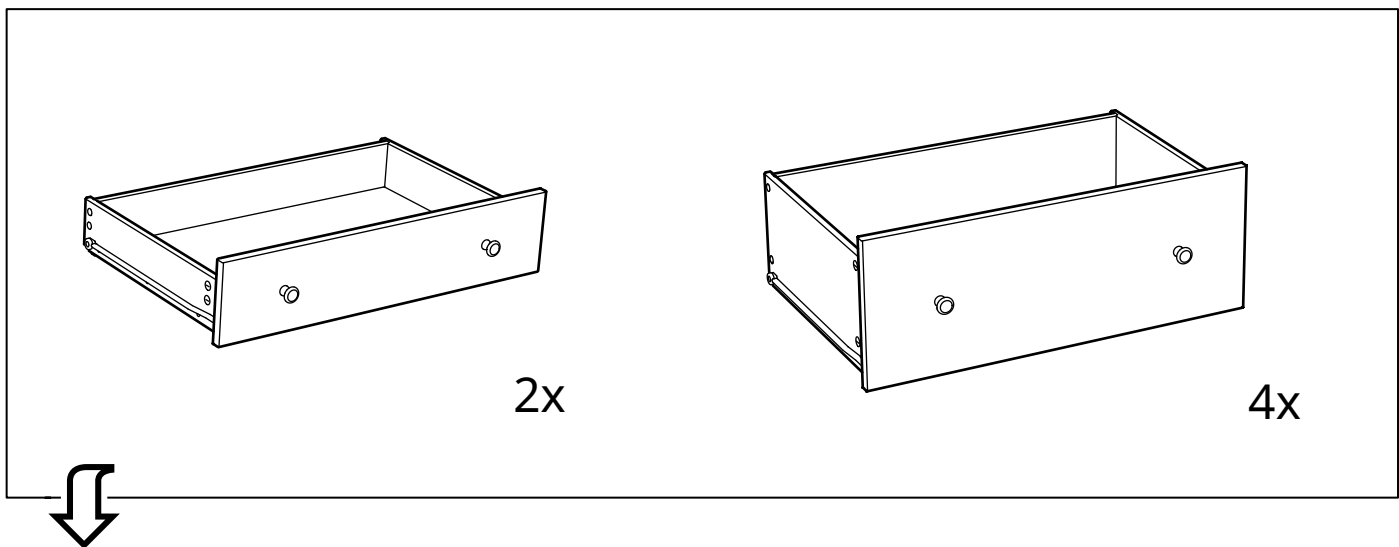 


28

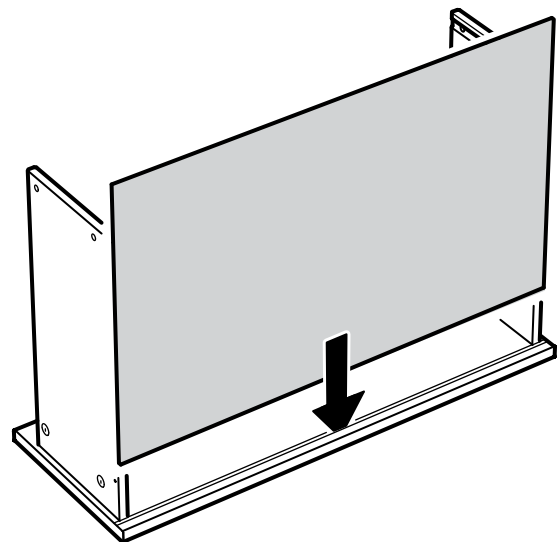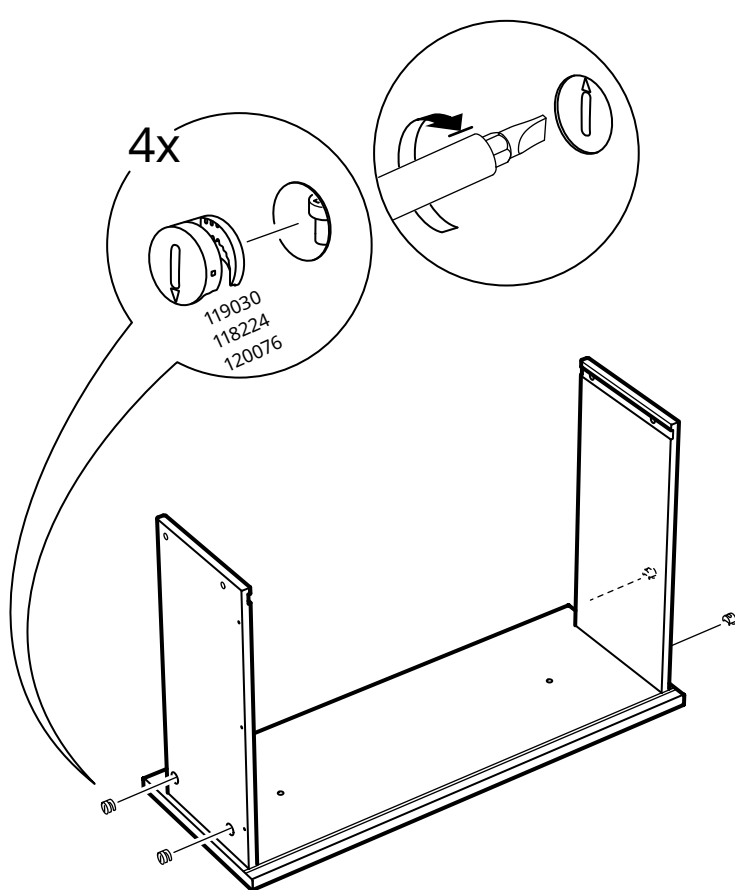  


29

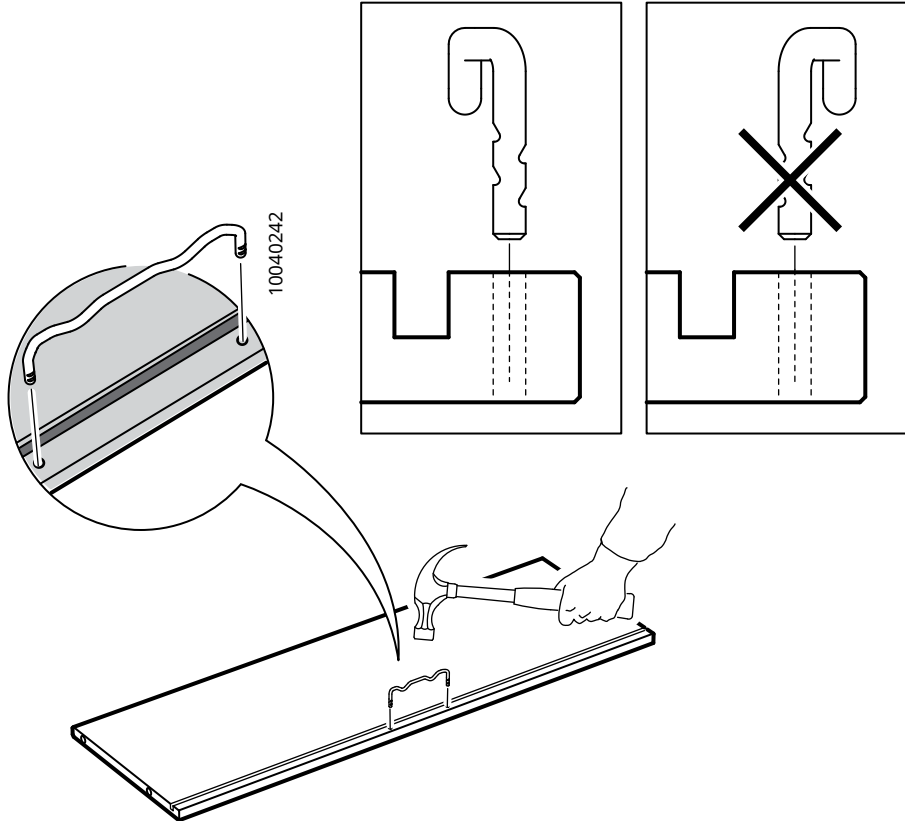 


30

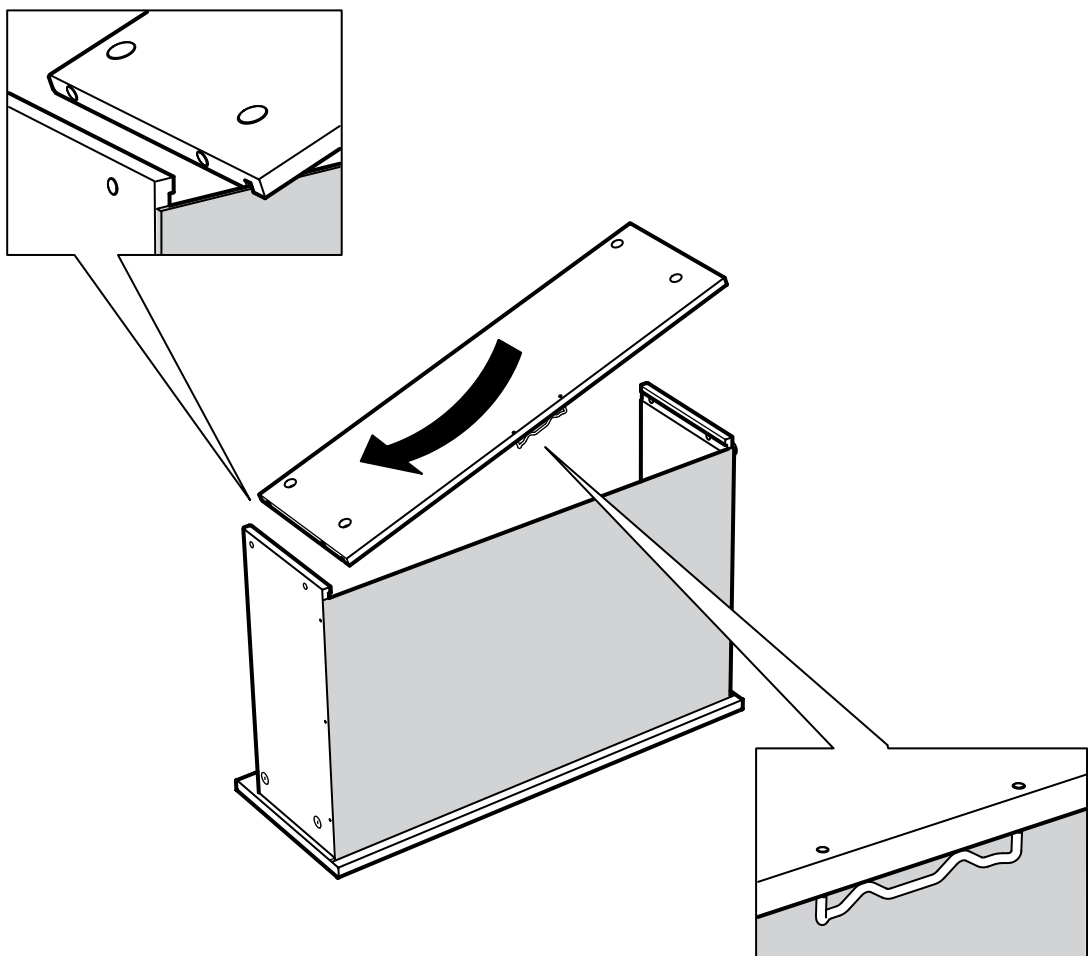 


31

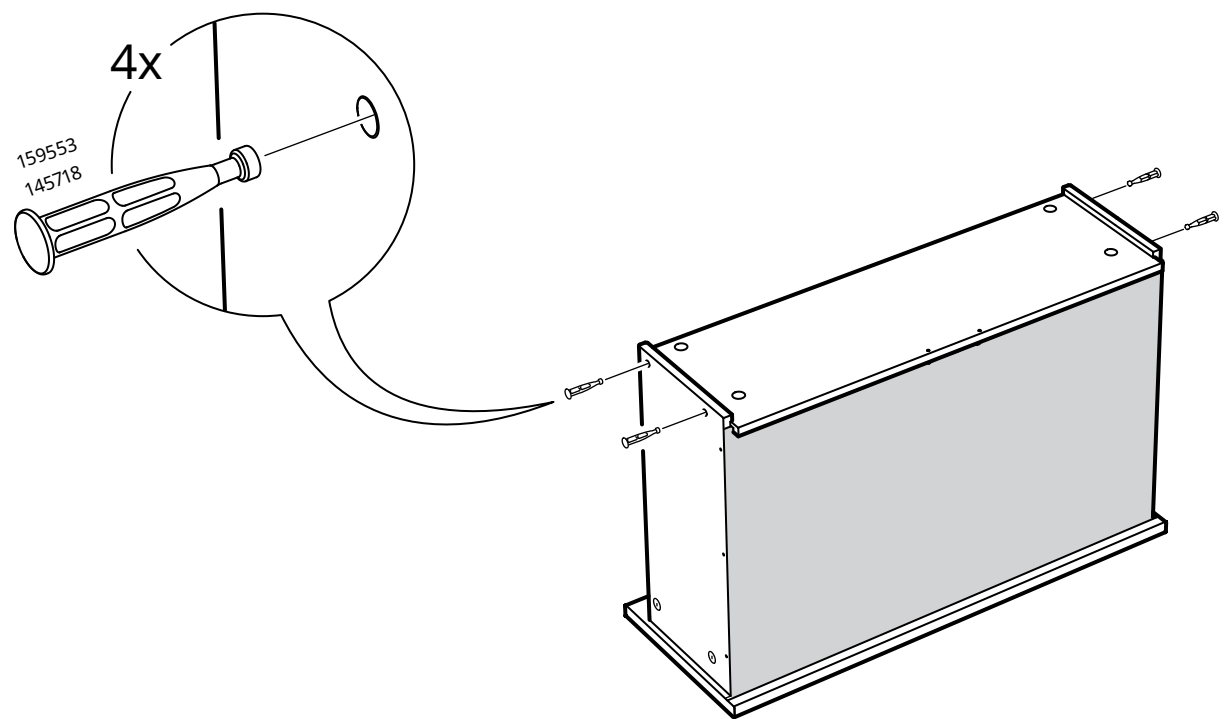 


32

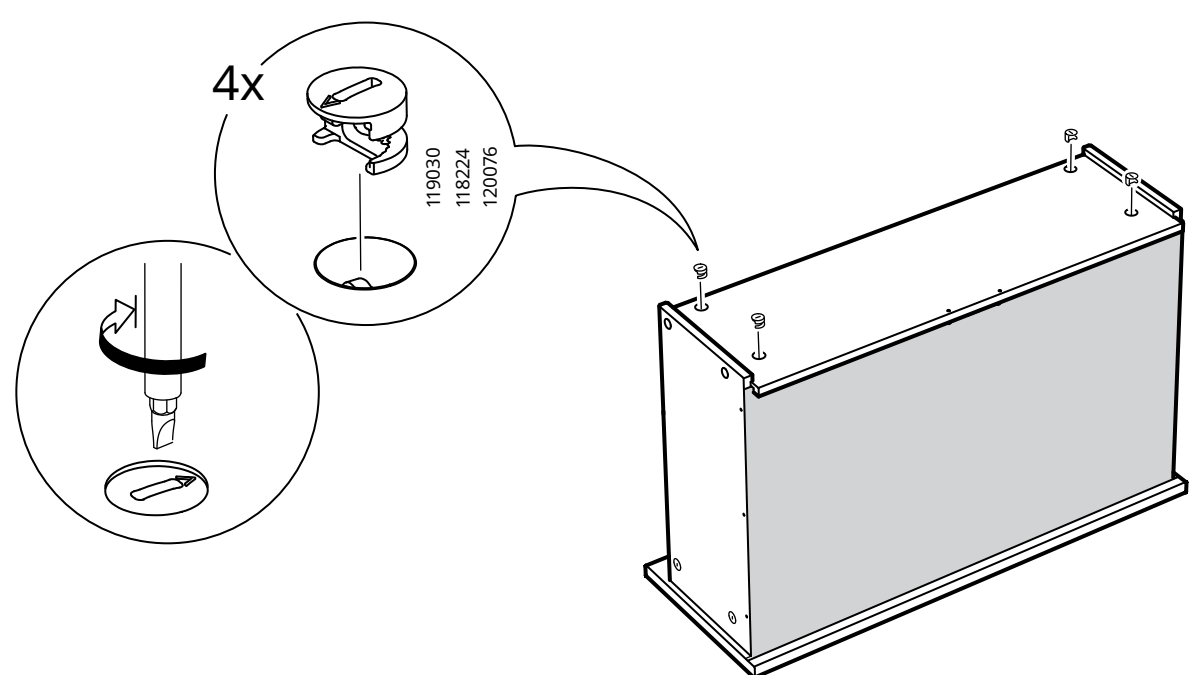 



33

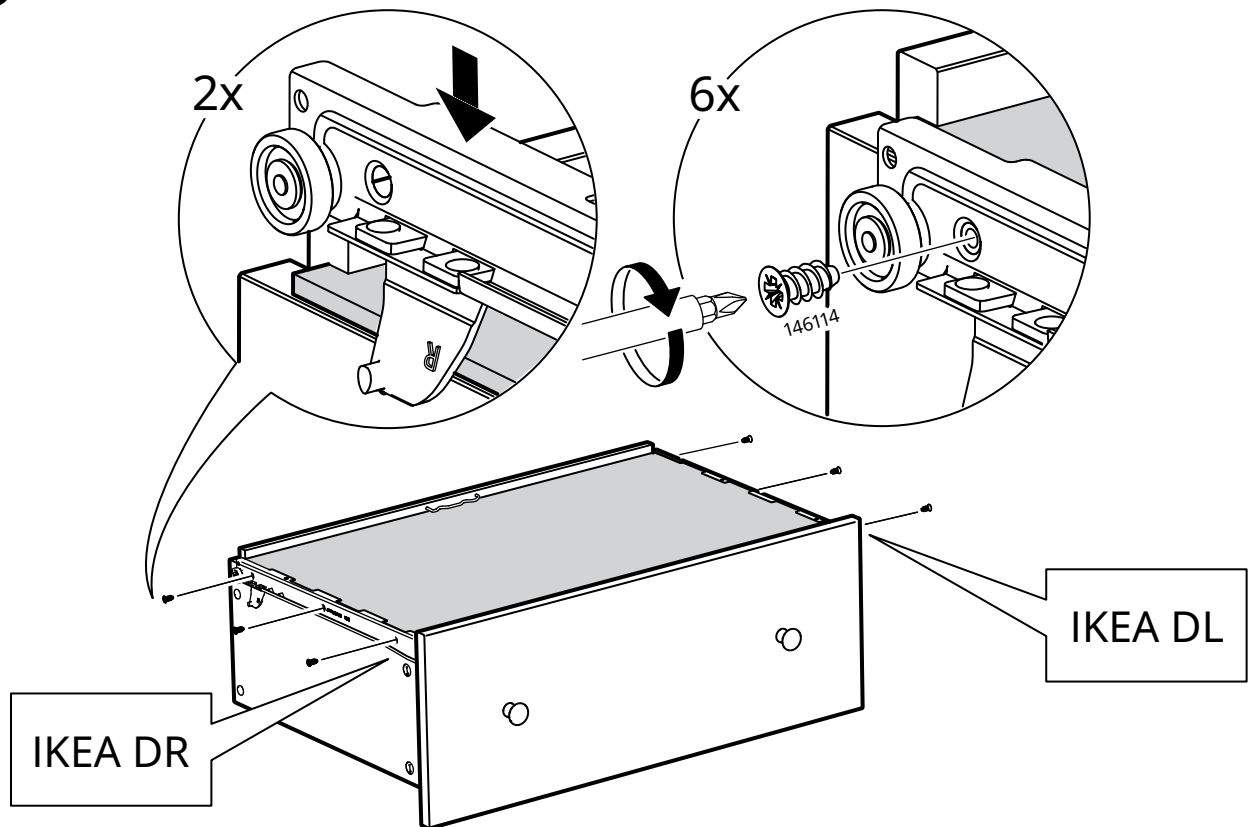 


34

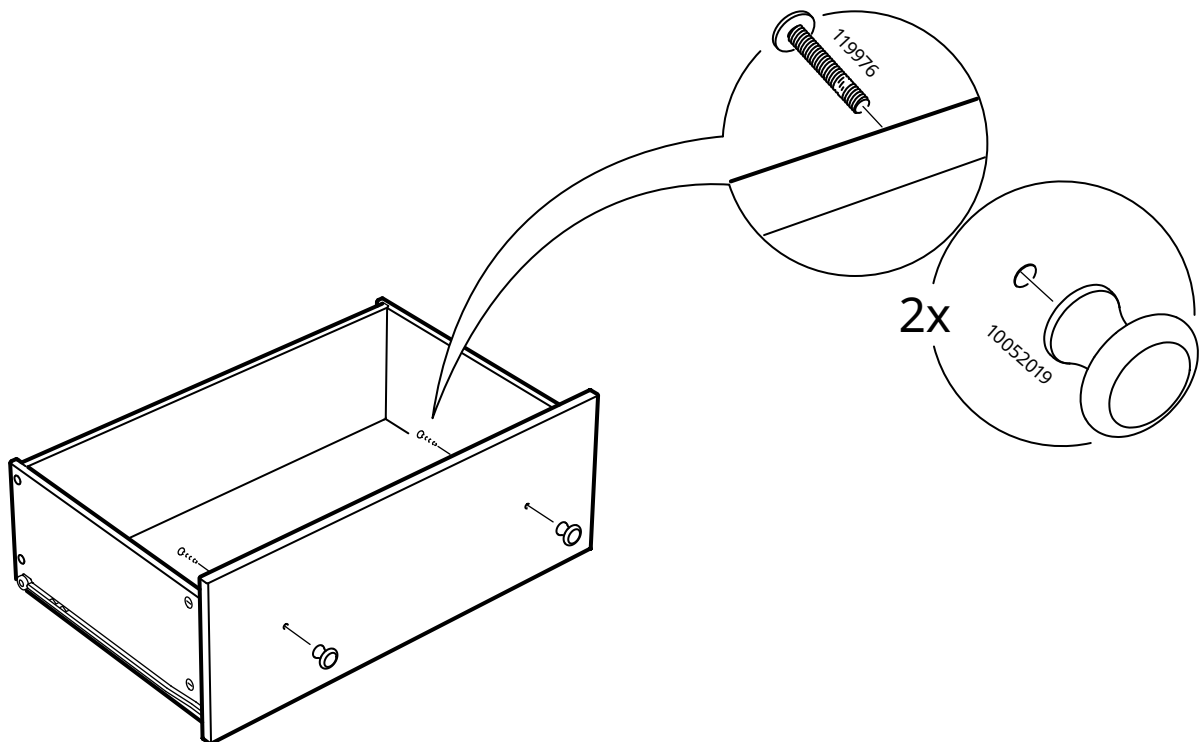 

35

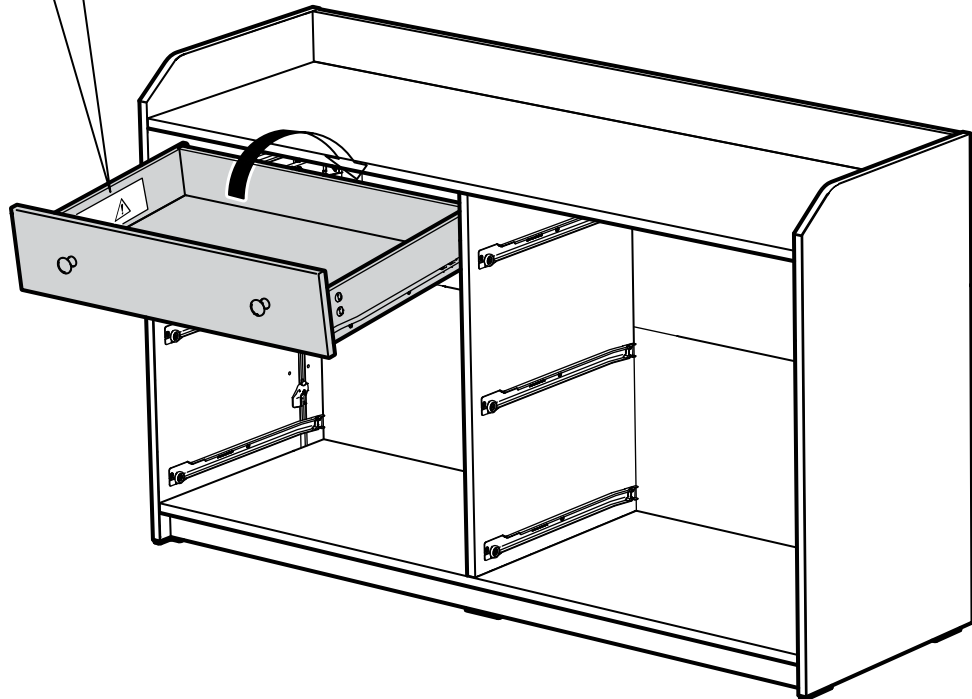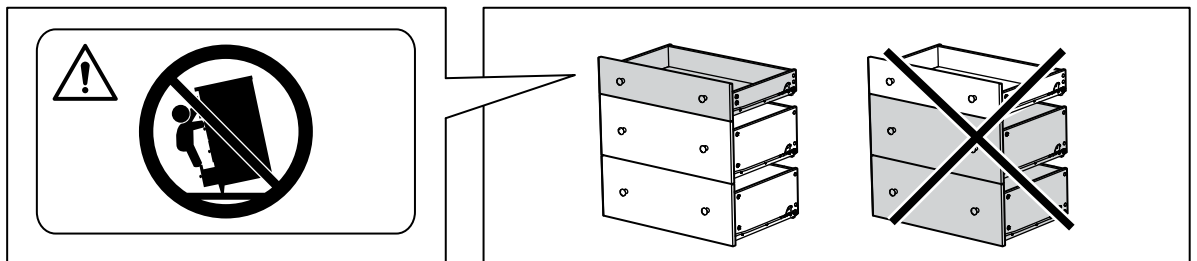  


36

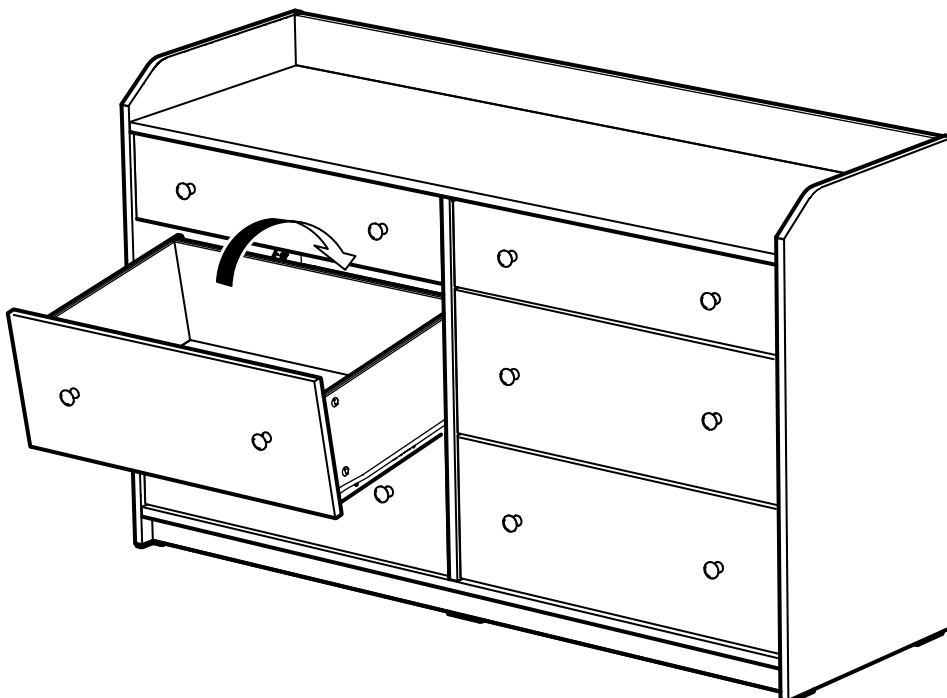 




1

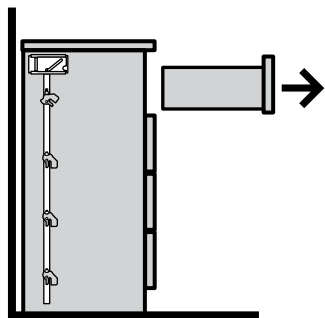 

2

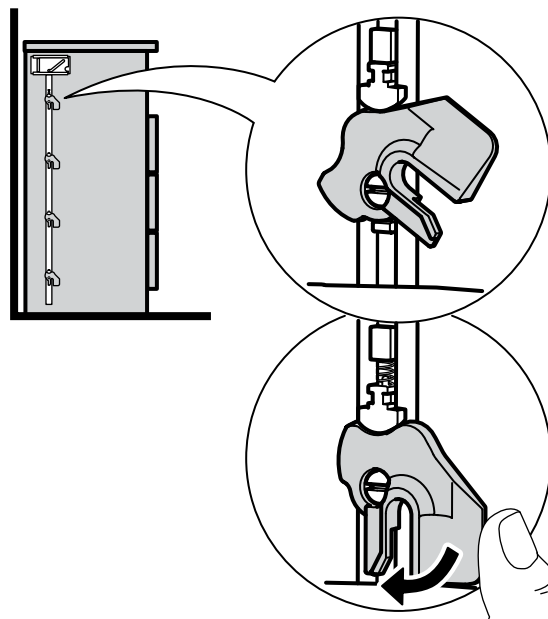 

3

