 
 


HAUGA

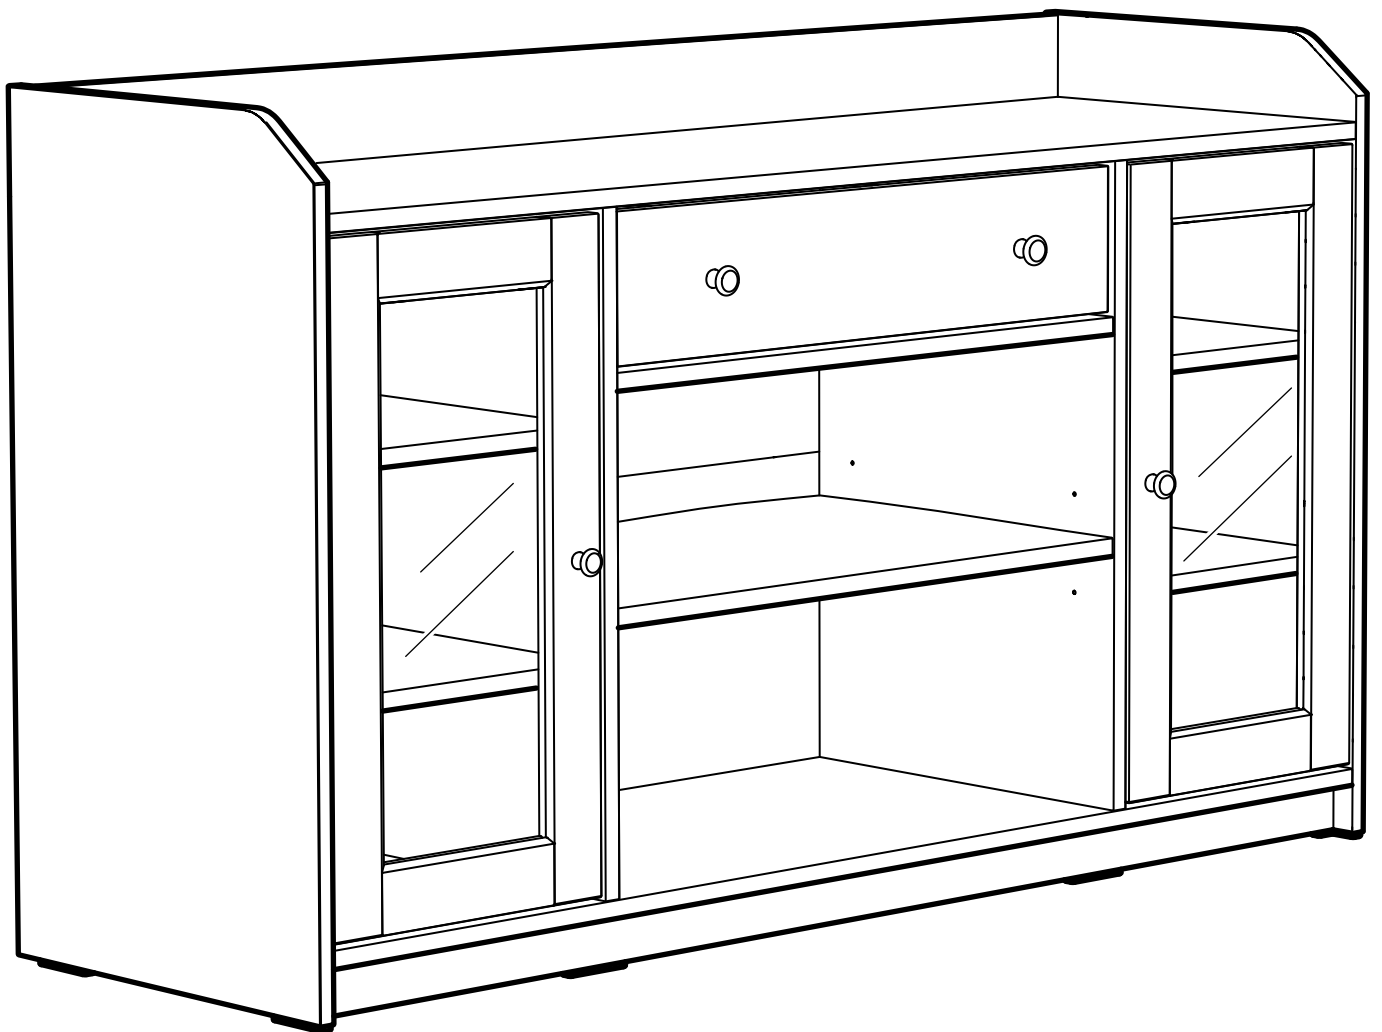

Design and Quality
IKEA of Sweden

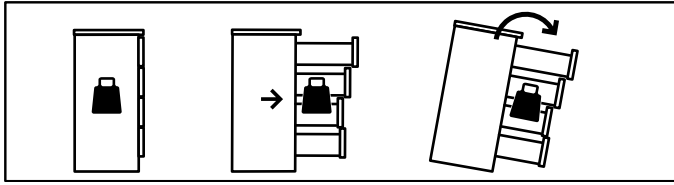

English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

 
 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.


 
 

NEVER open more than one drawer at a time.

Place heaviest items in the lowest drawers.


English

Read and follow each step of the instruction carefully.

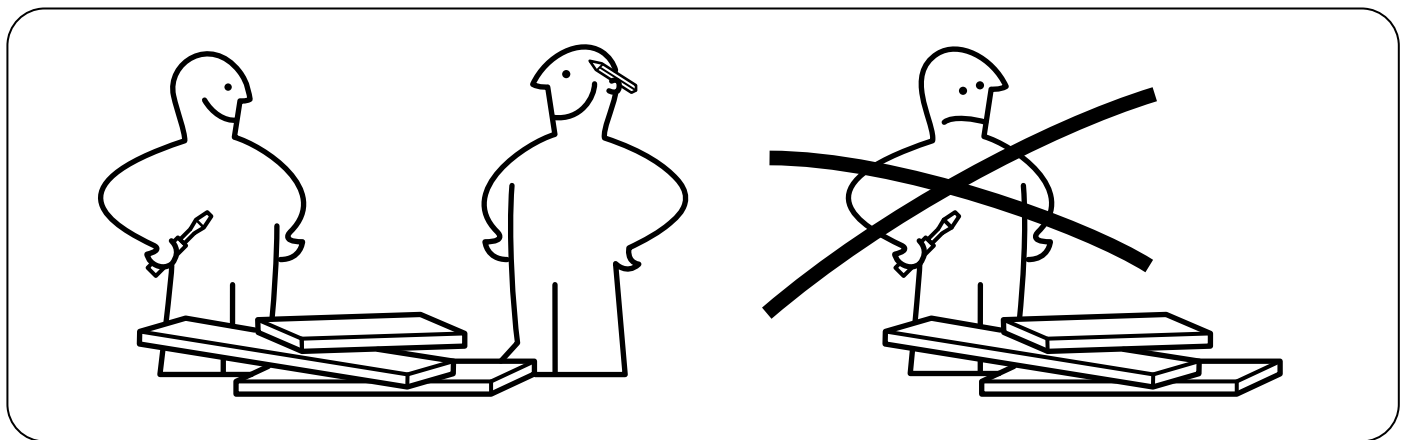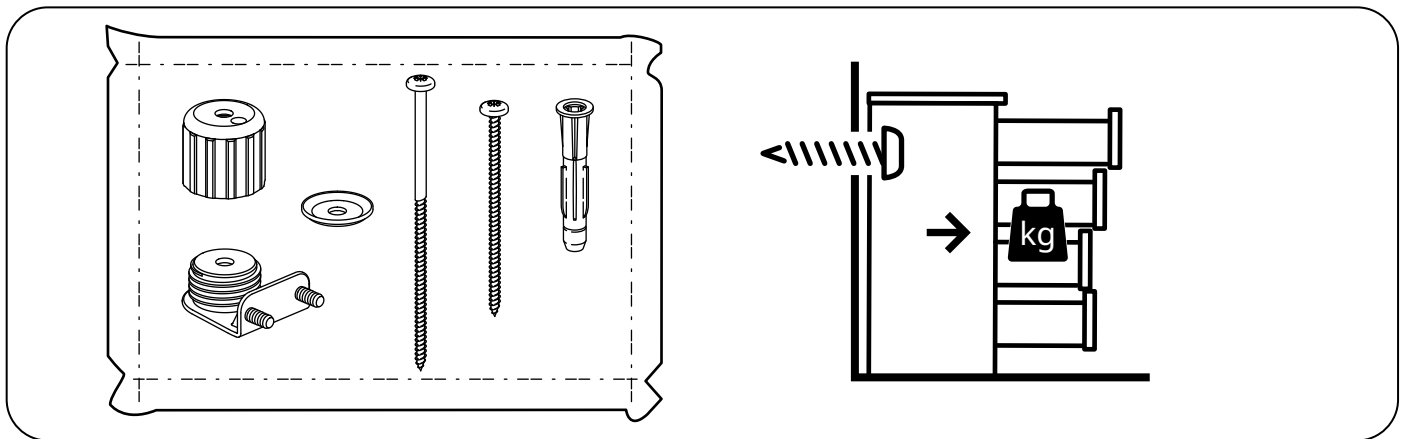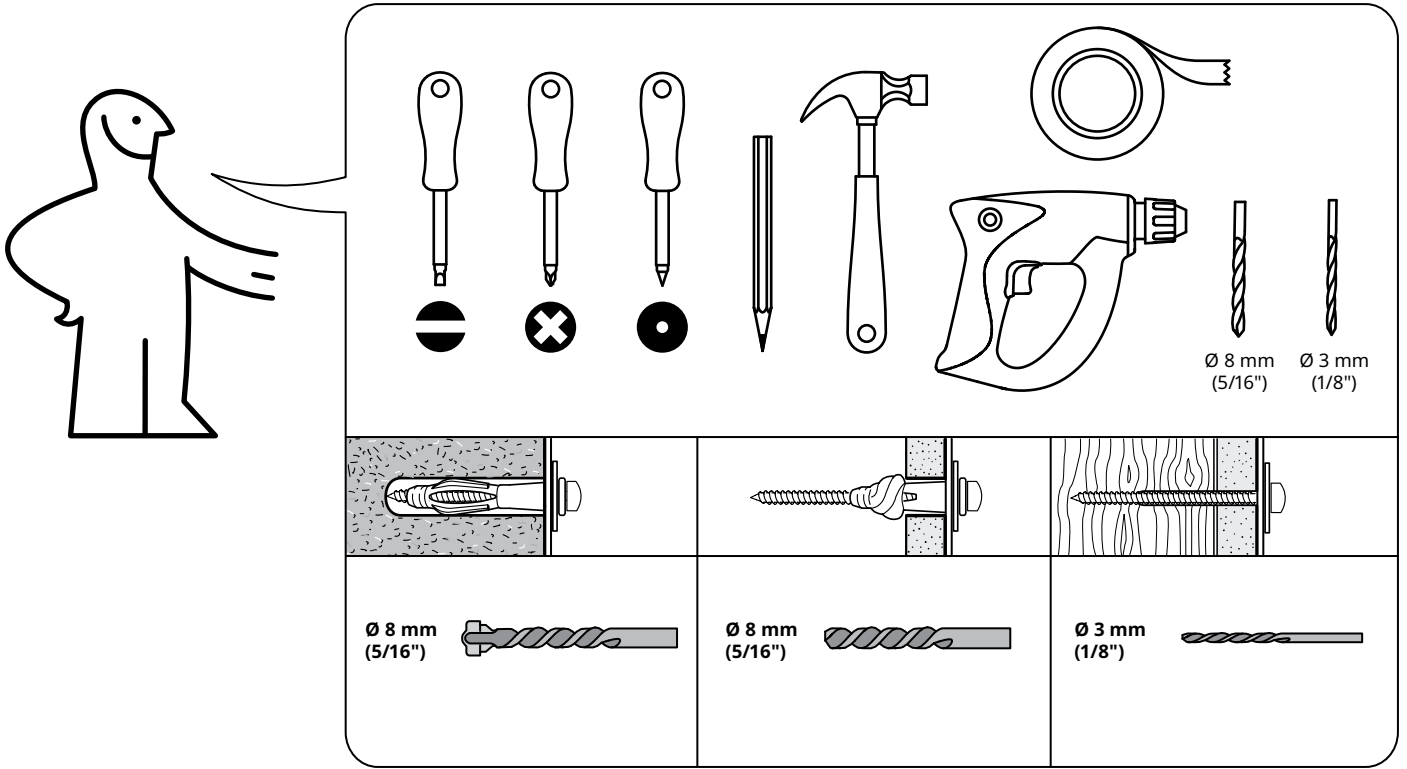

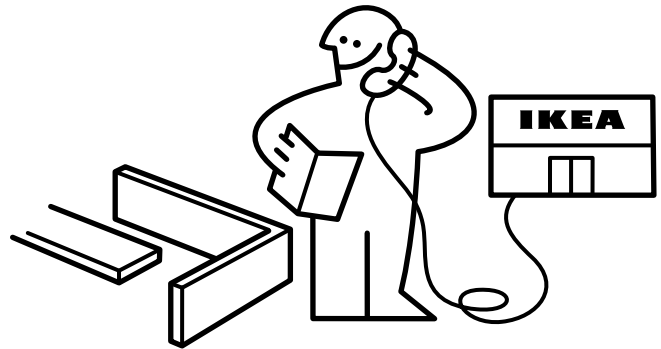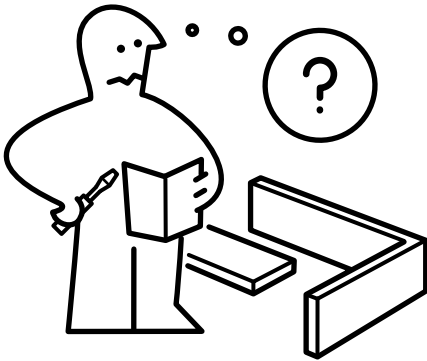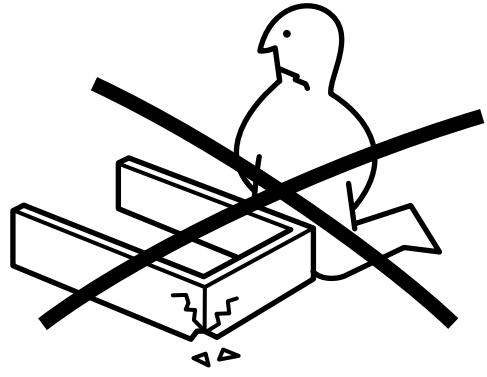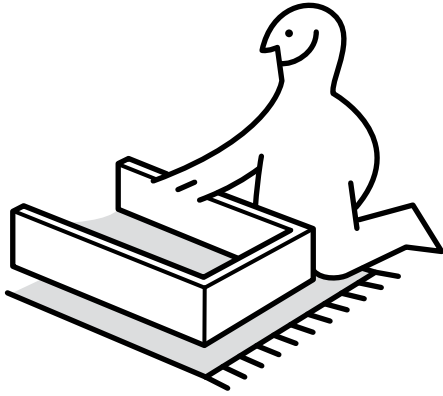

2

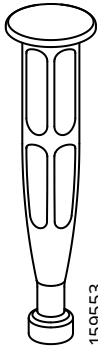


159553
145718

4x



118331

4x

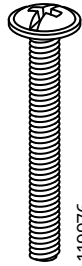


119976

2x



101345

6x

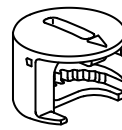


119030
118224
120076

8x




146114

6x

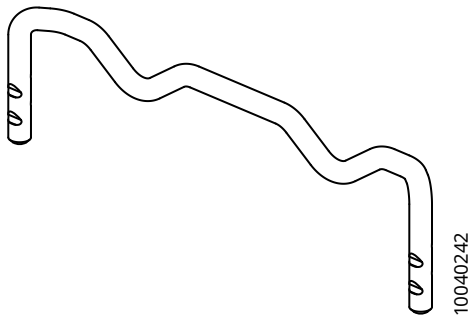

10040242


1x

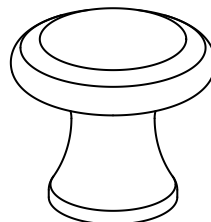

10052019


2x

 1




119976

 2x



101345

 16x

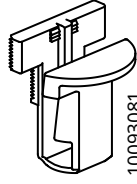


10093081

6x




10093082

 6x




151707

 14x



151708

 14x



144574

4x



 
146114

6x




105811

4x

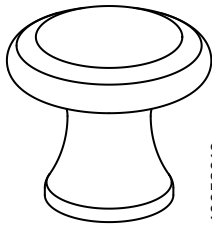

10052019

 2x

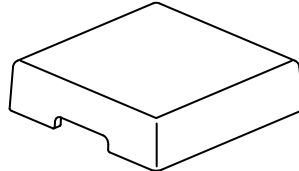

133303

190586

 
2x



10051650

10051660

20x

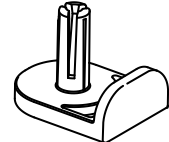


10050715

10042135

10070233

 
4x

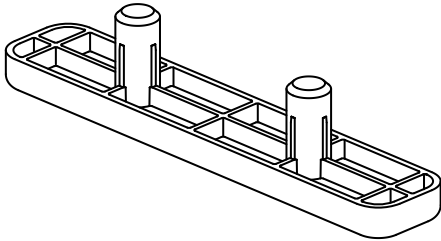

153548

158568

 
4x

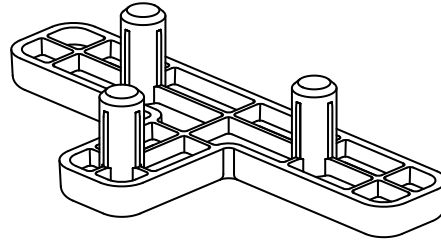

10051022


10040039

4x

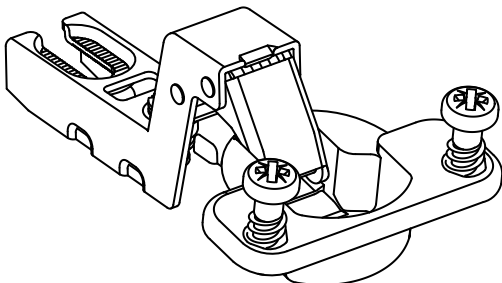



10039873

 4x

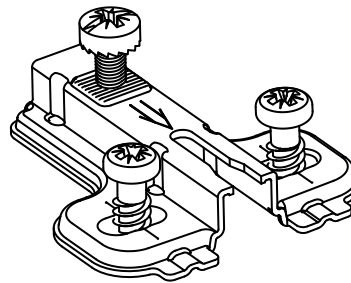


10039878

  
4x

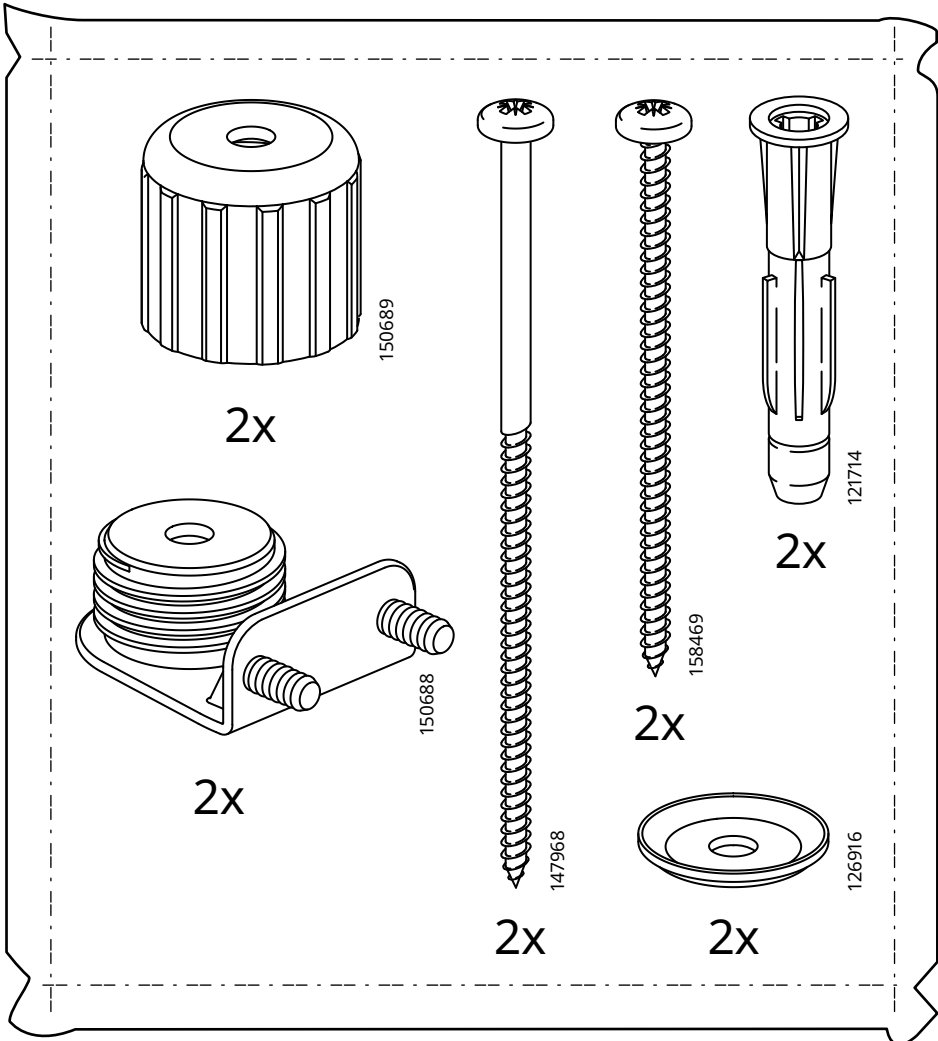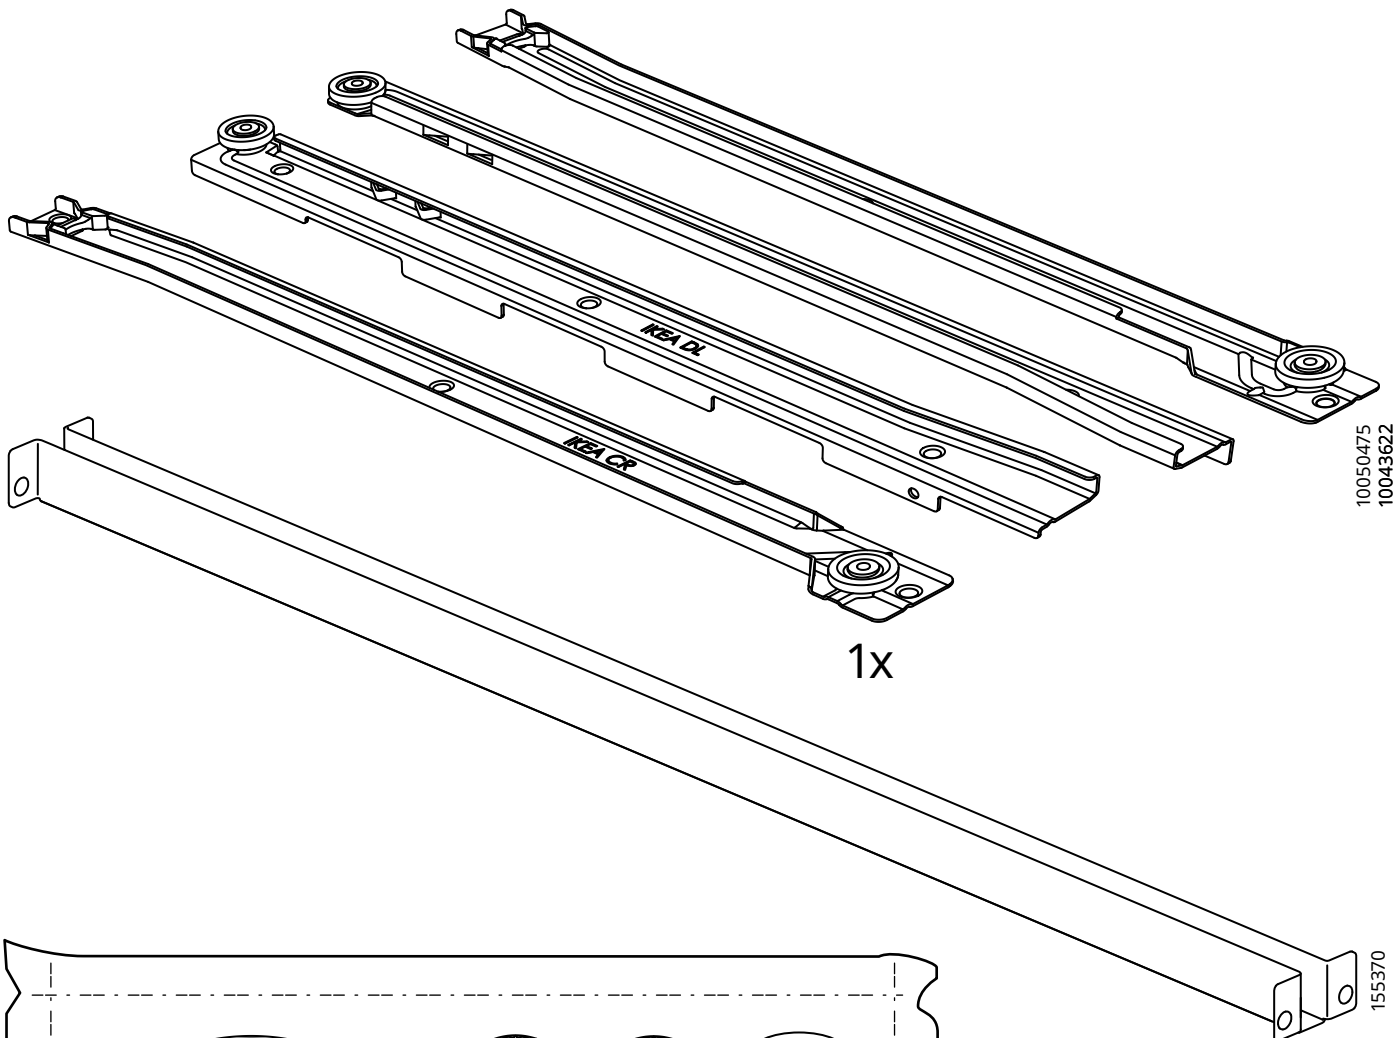


1

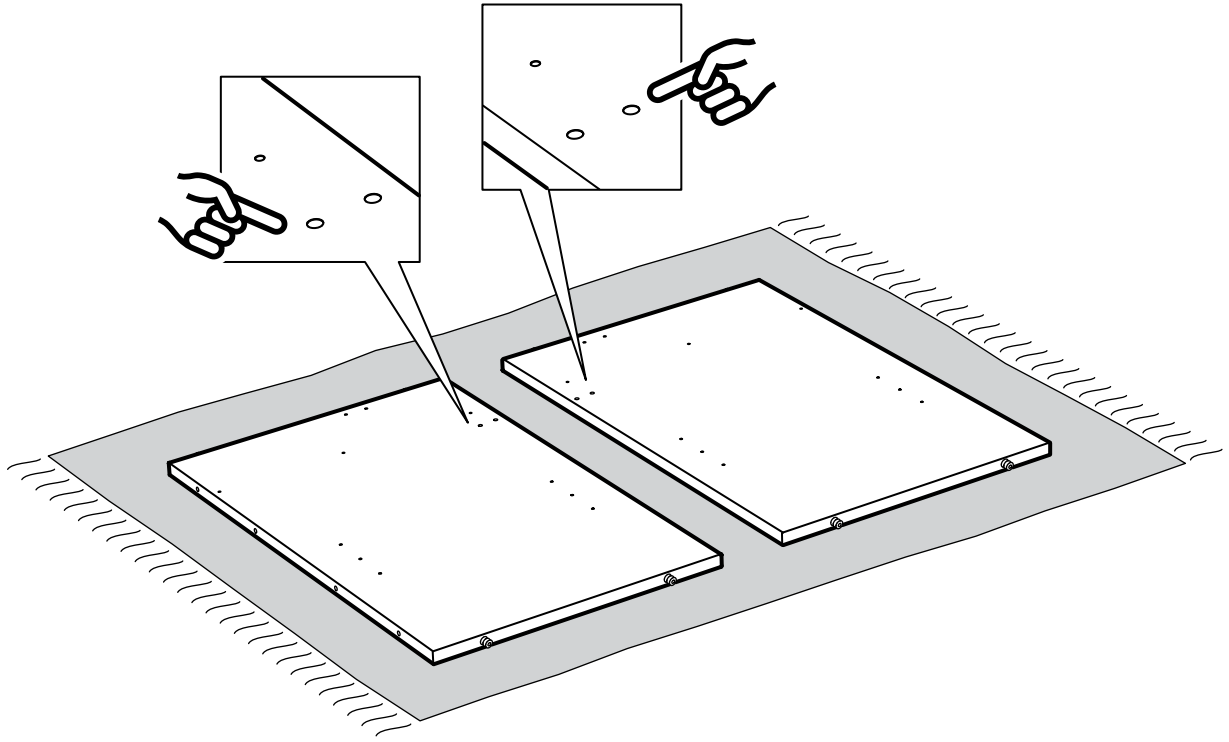 


2

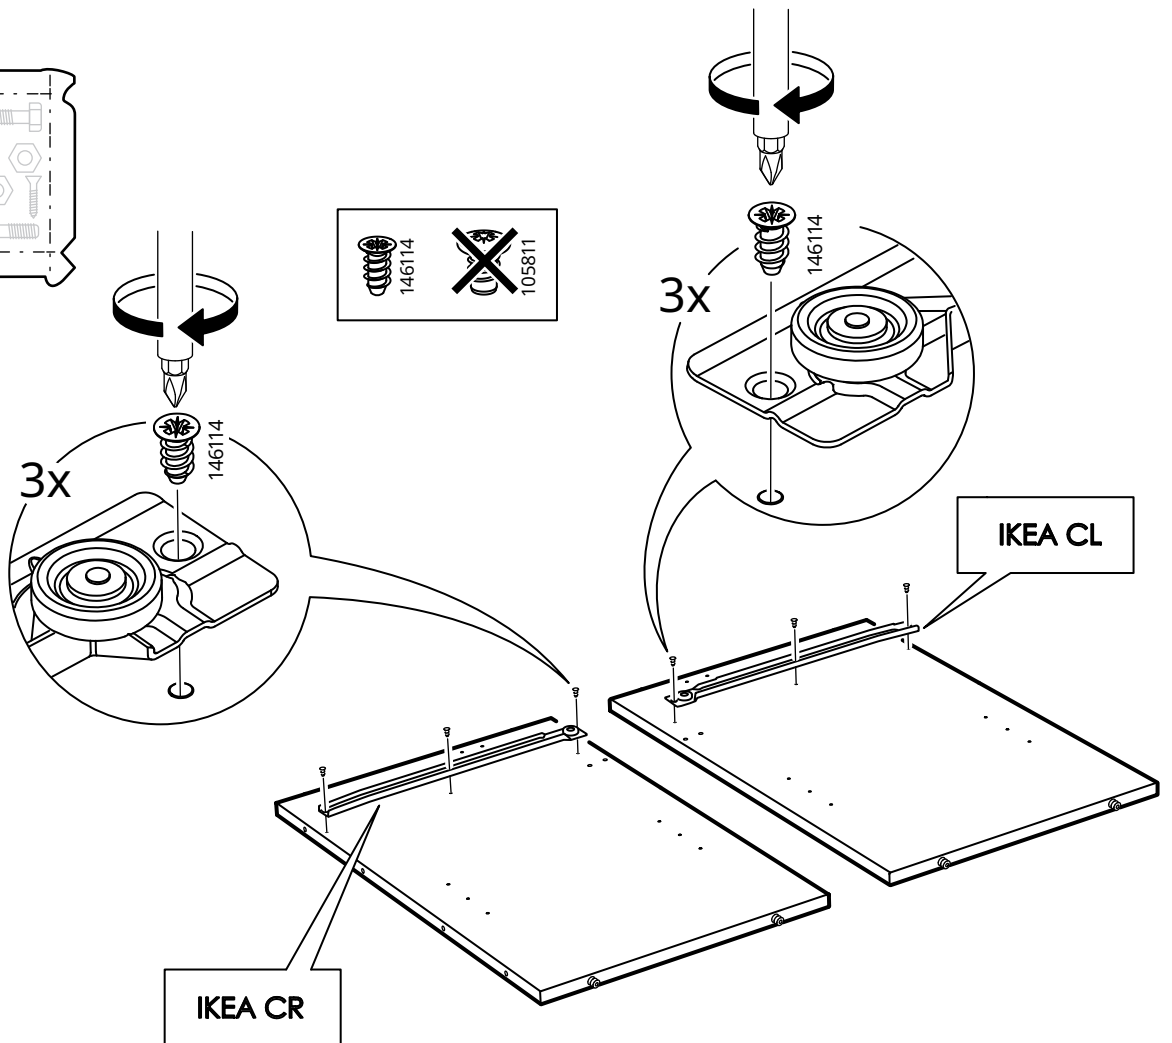 


3

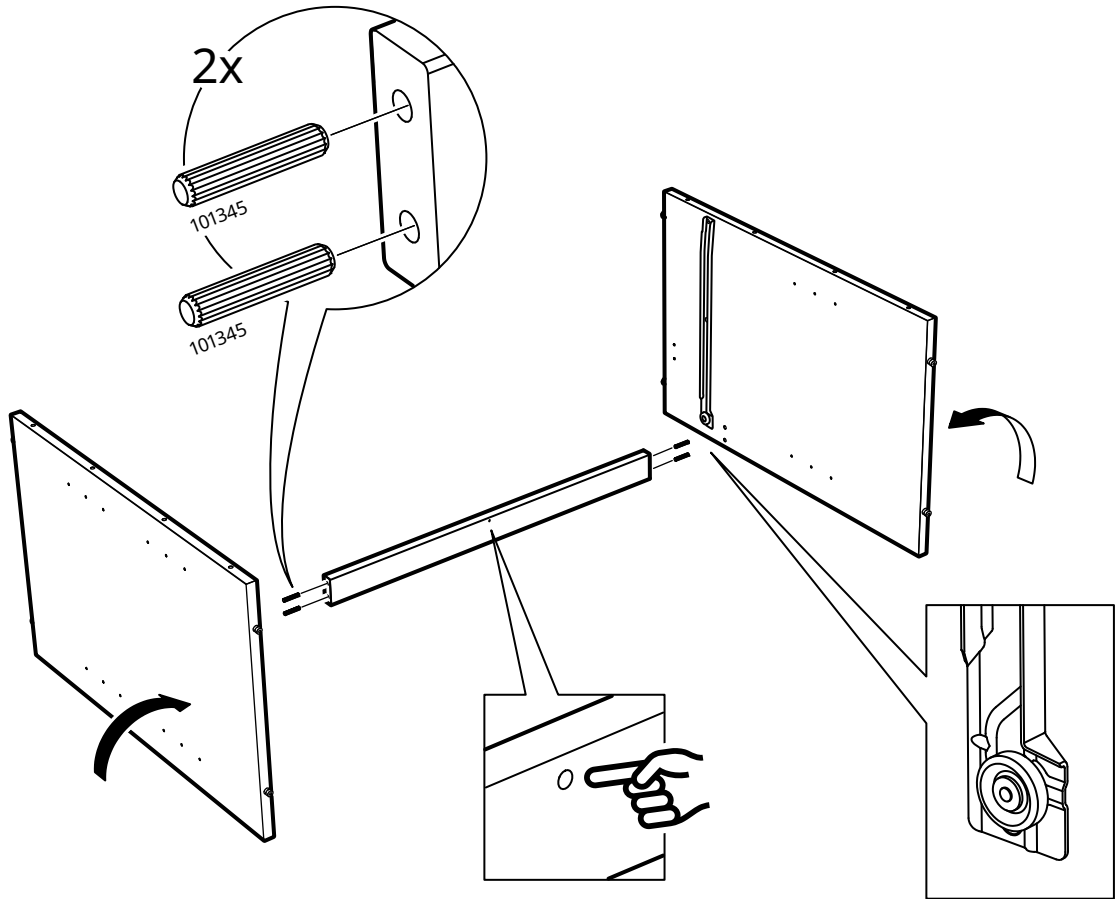


4

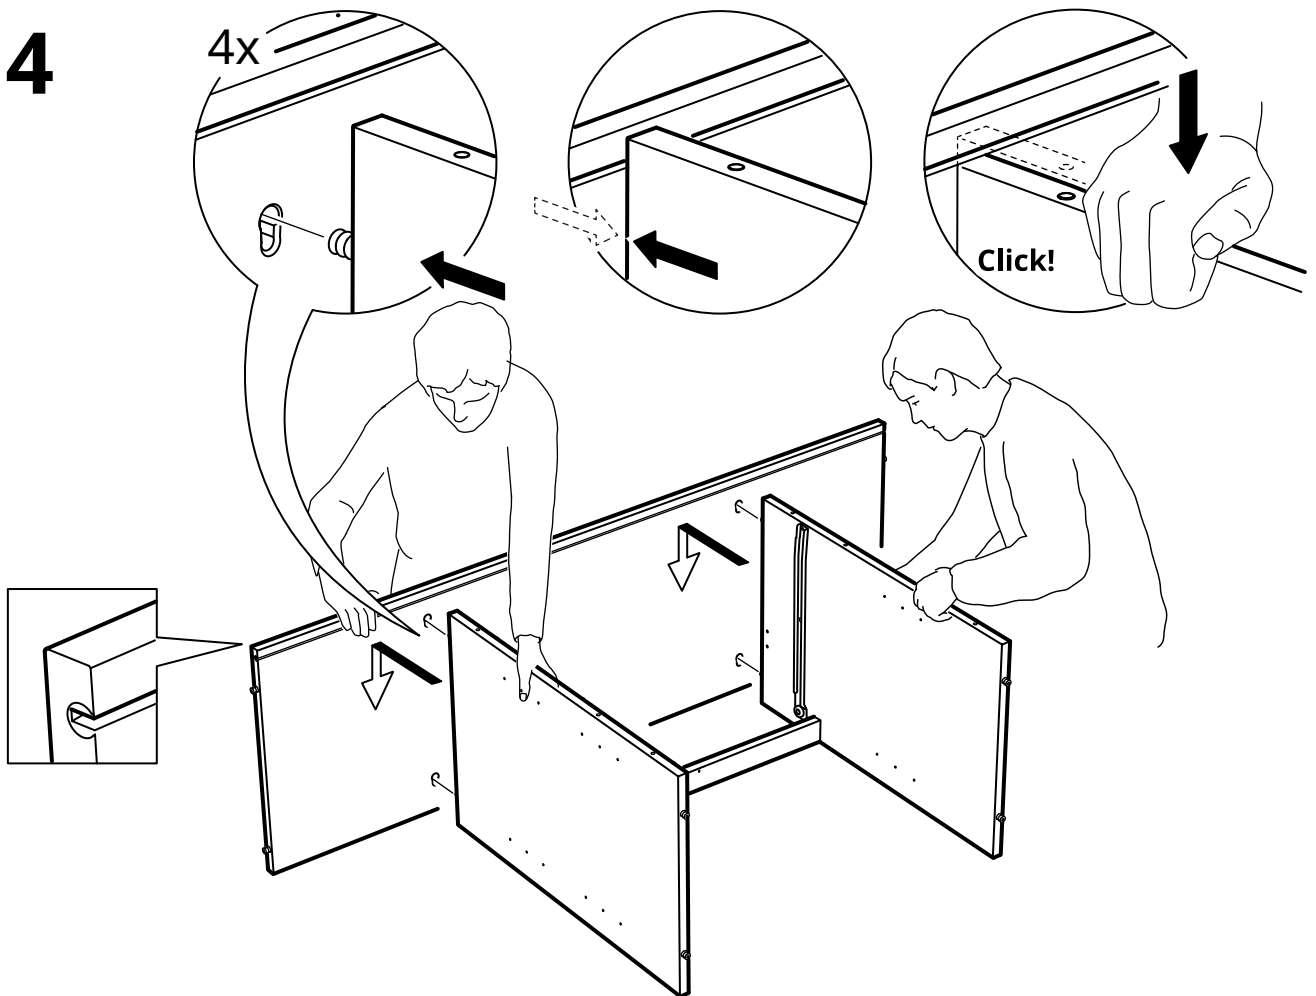


5

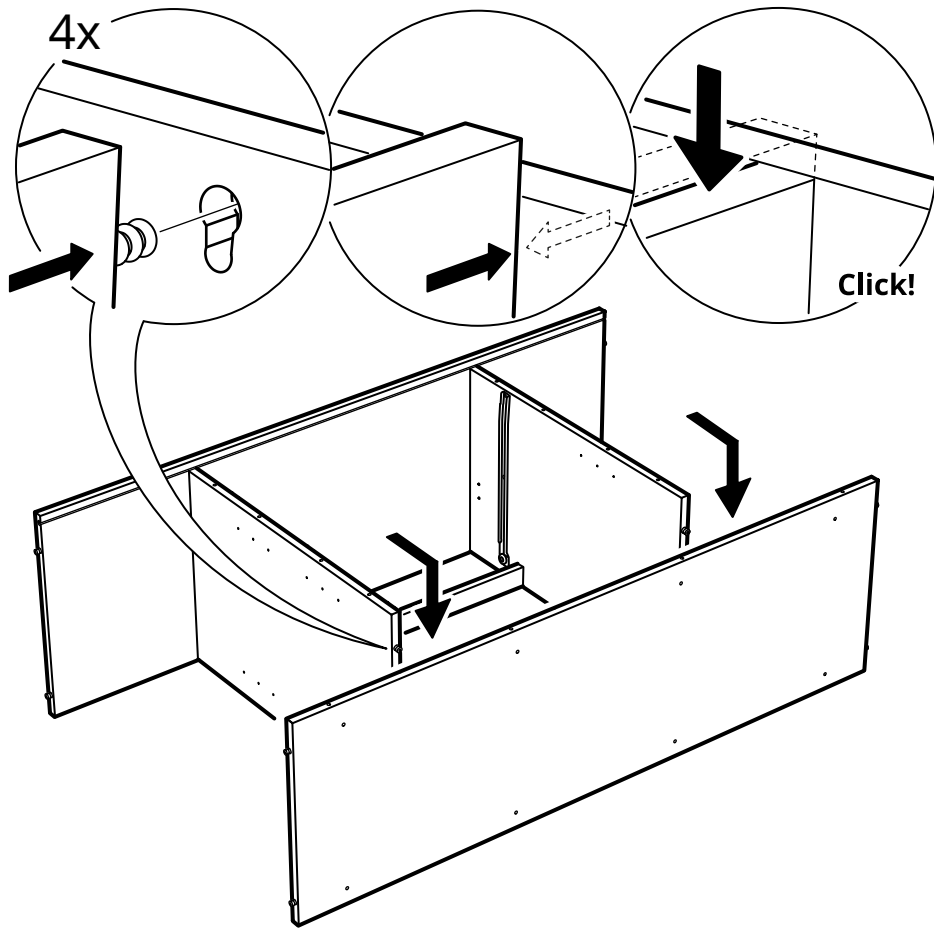 


6

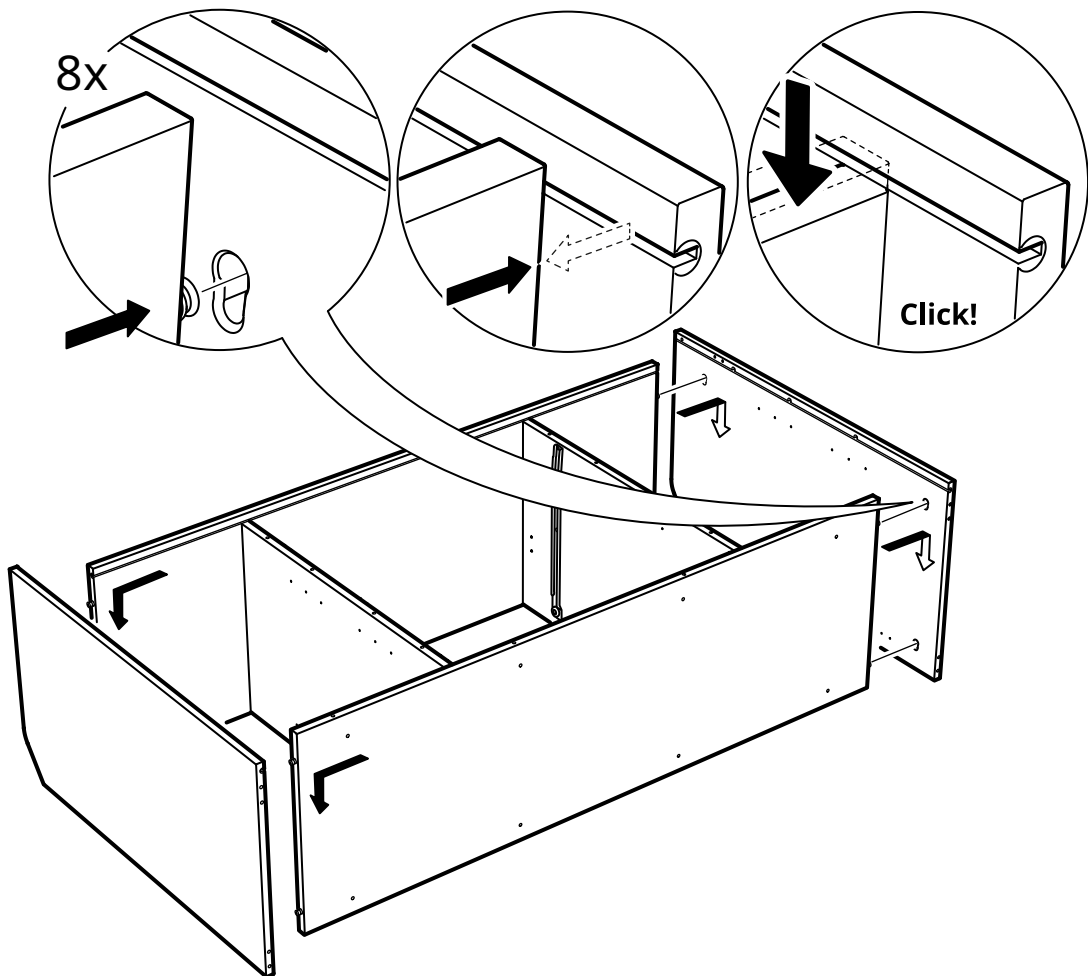 


7

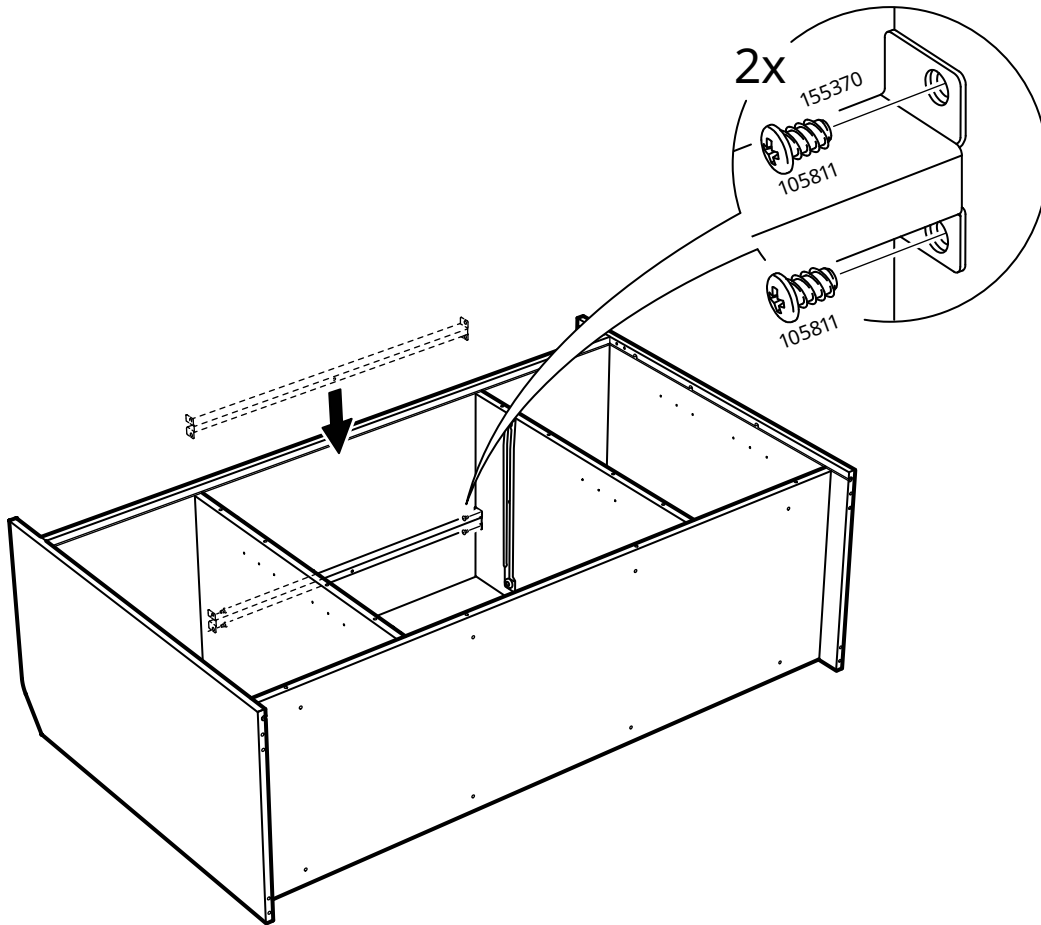 


8

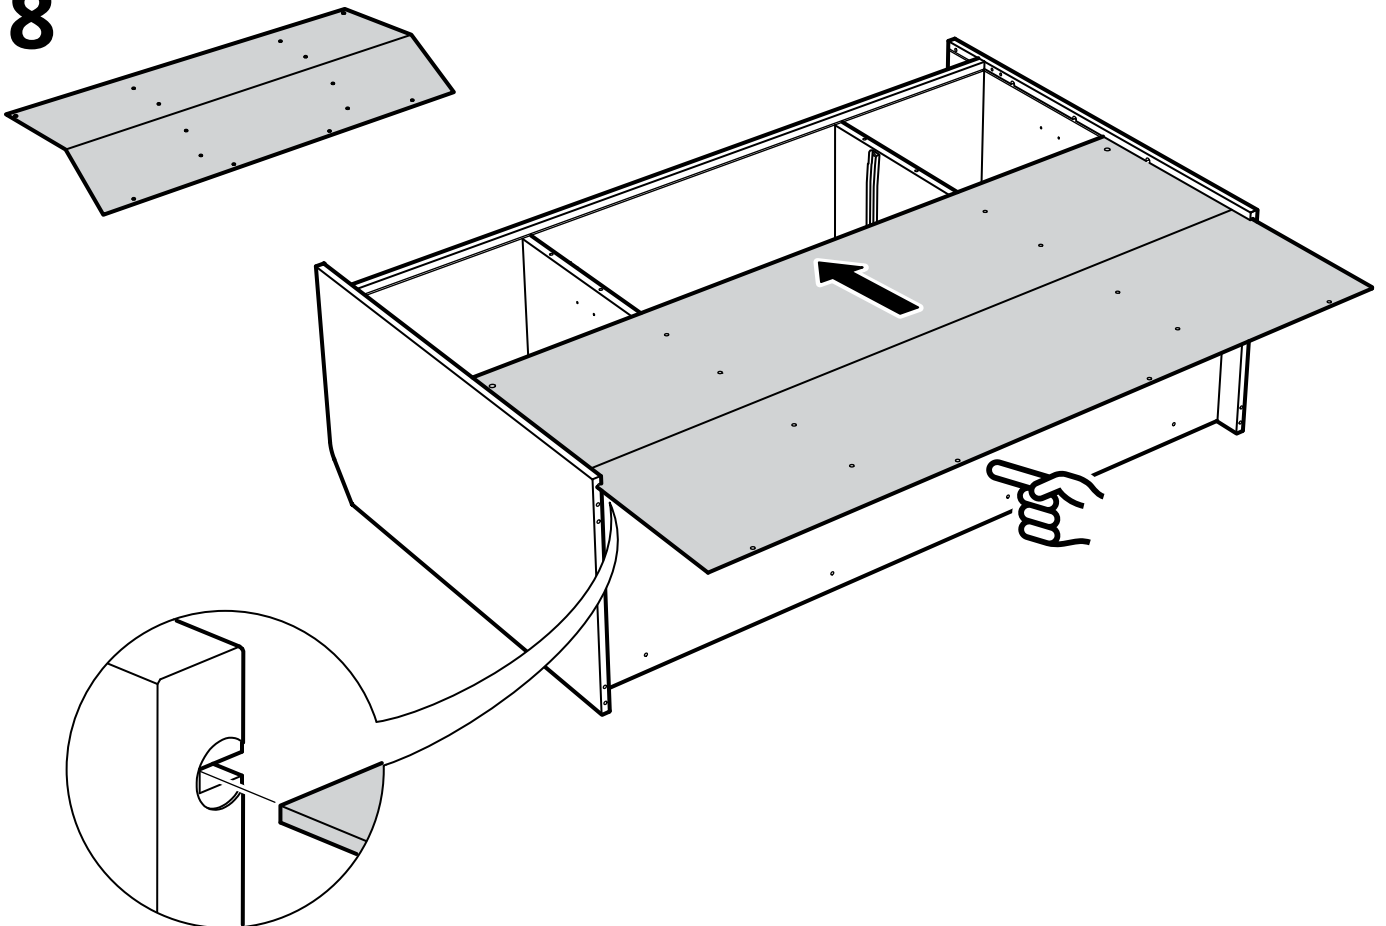


9

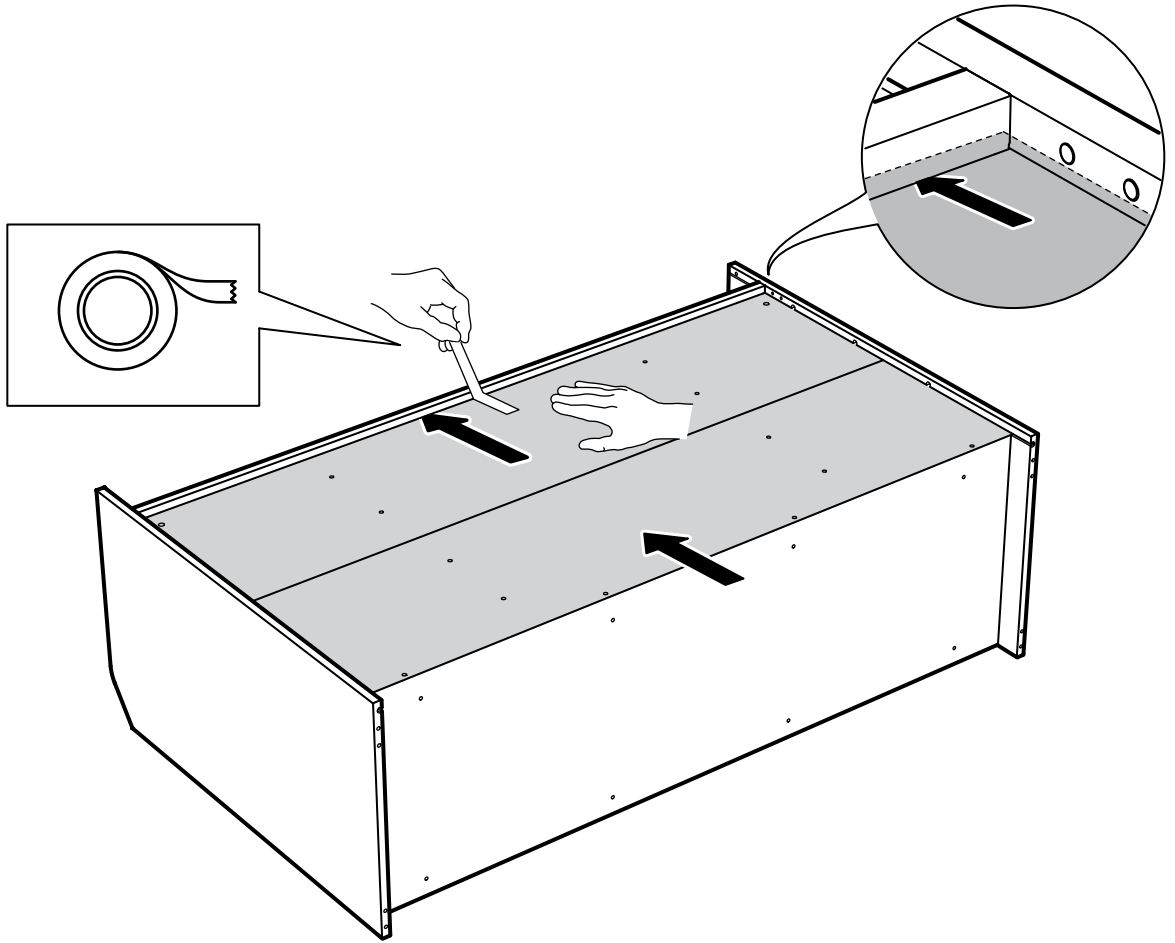


10

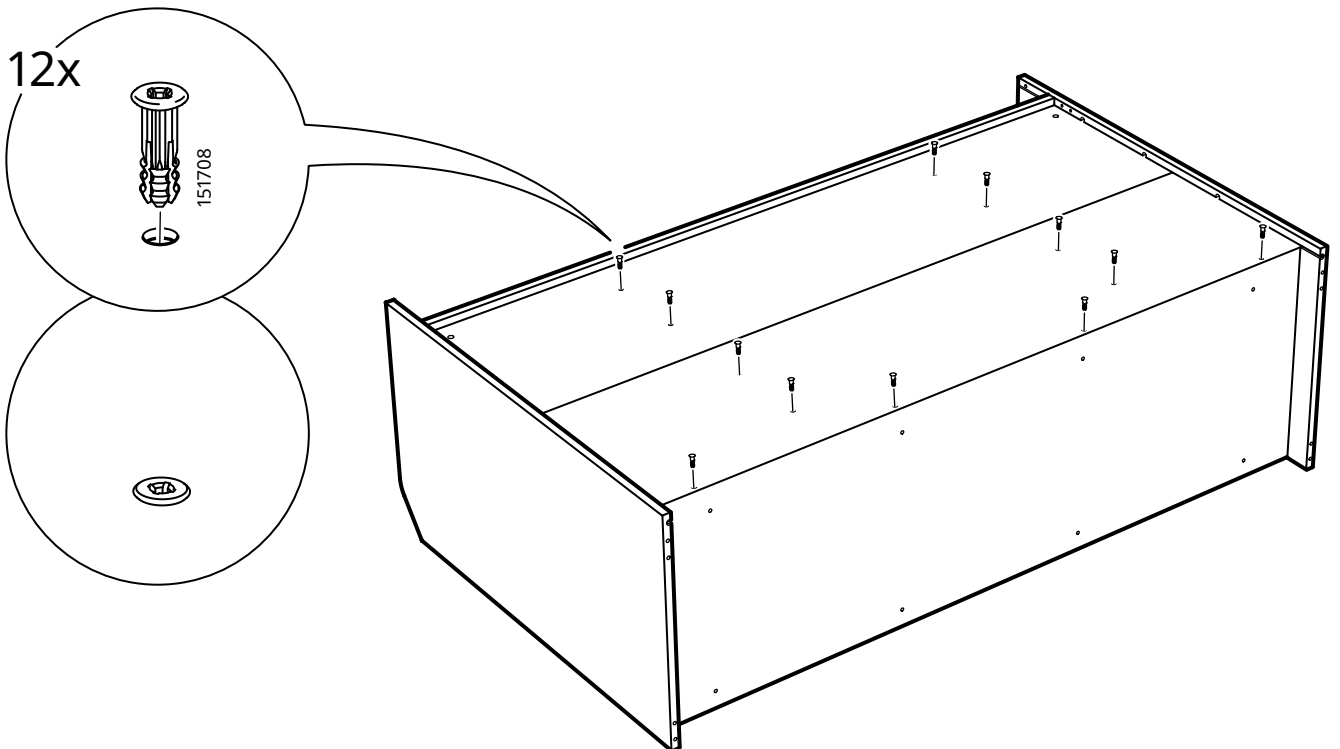


11

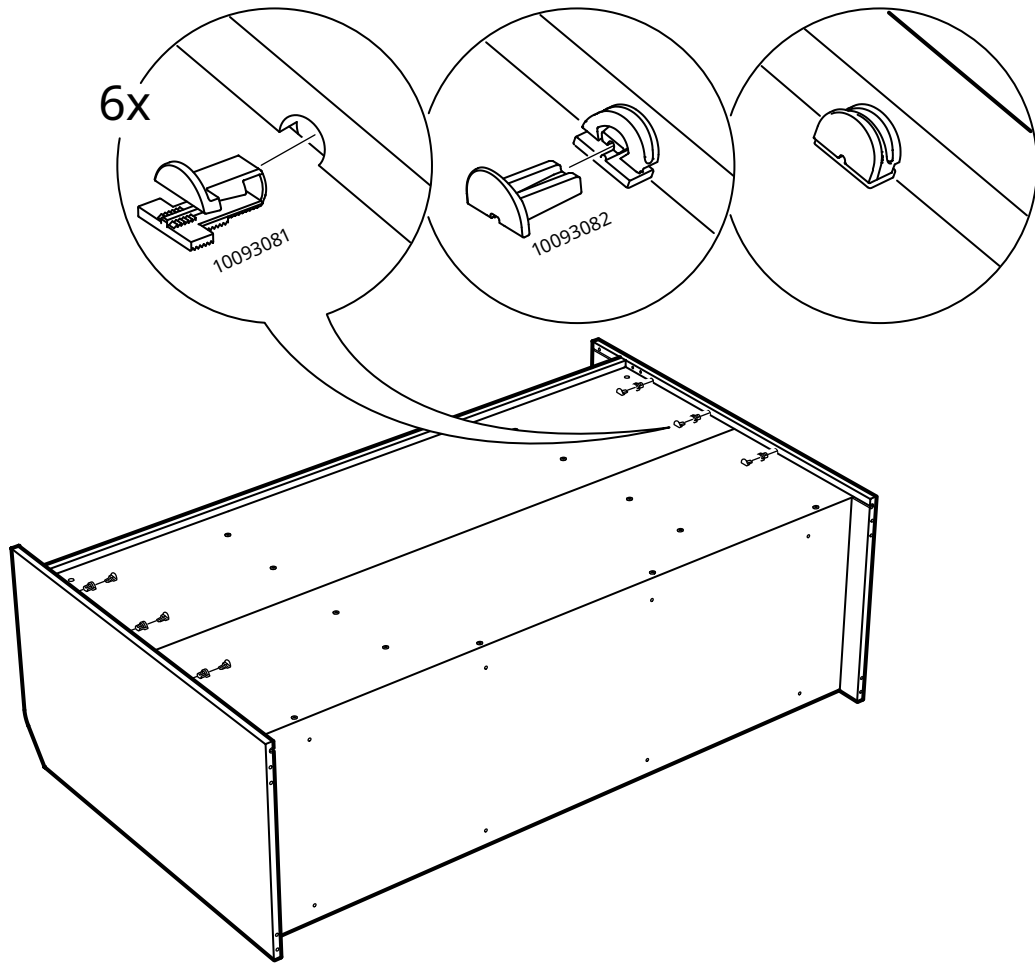



12

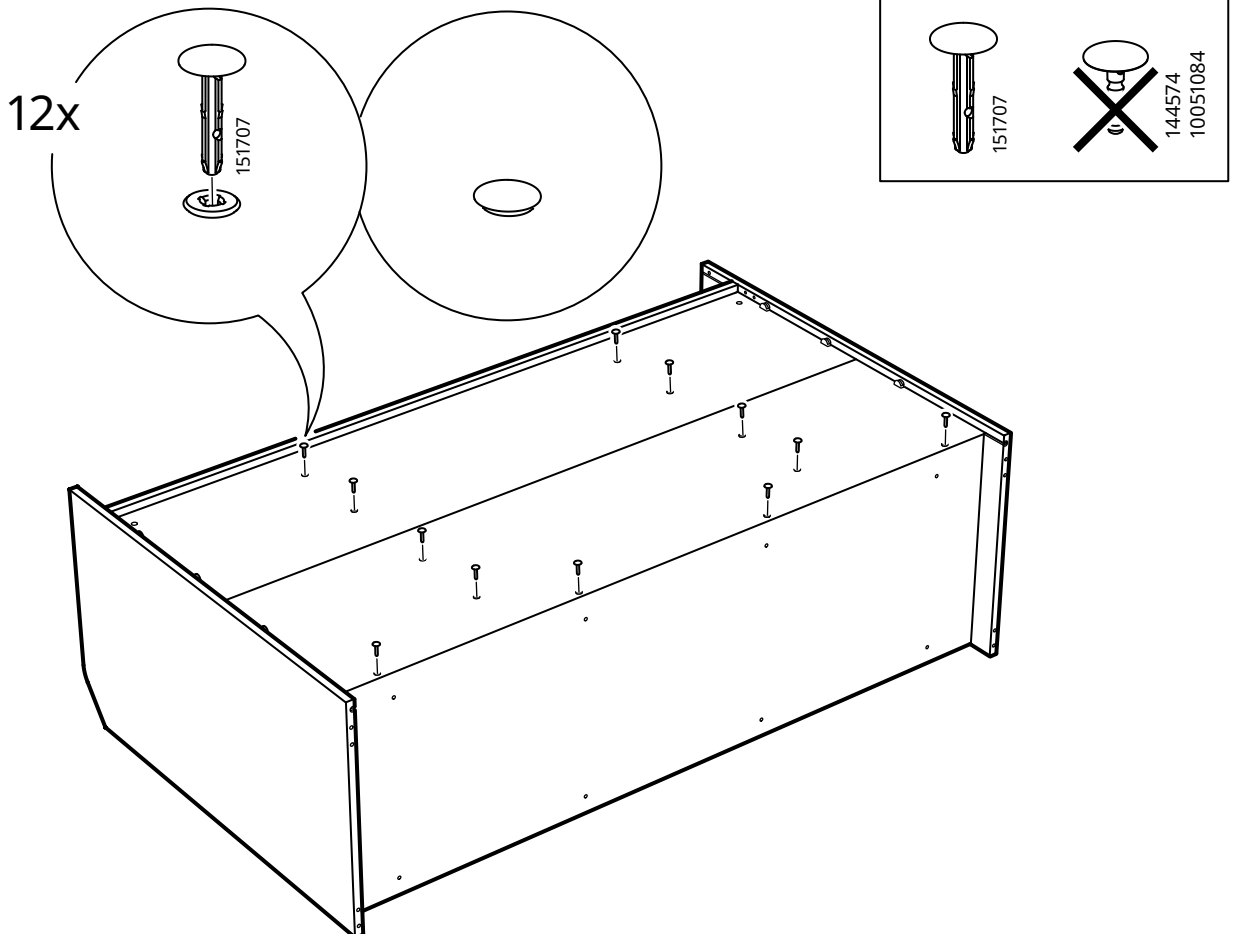


13

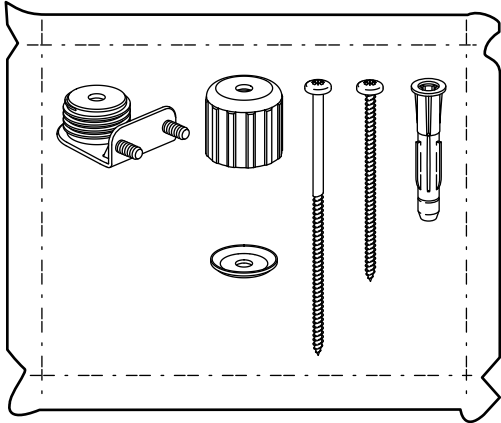 


327495

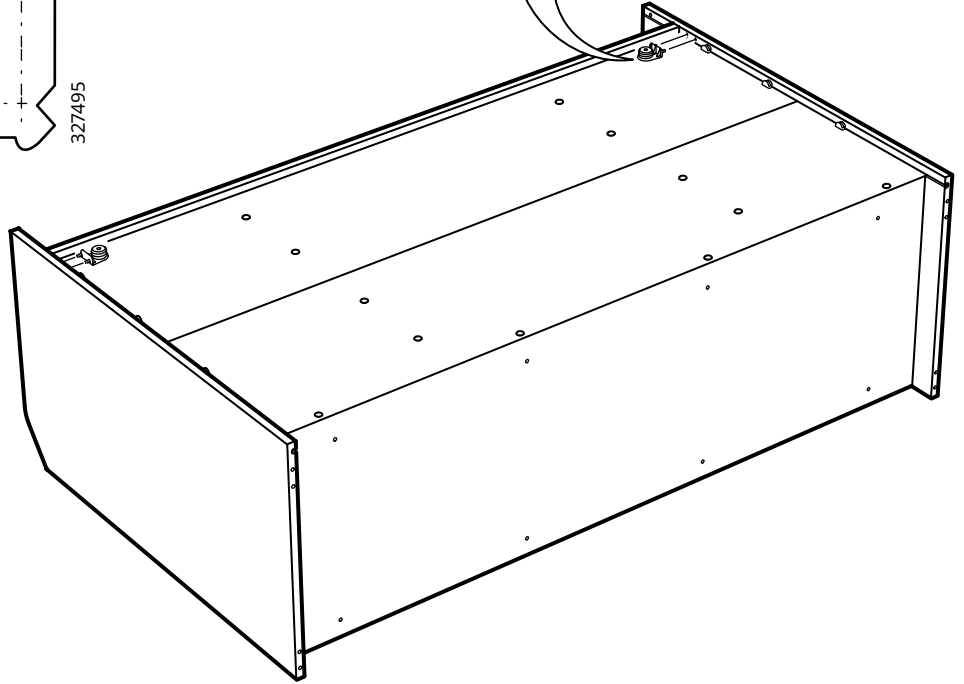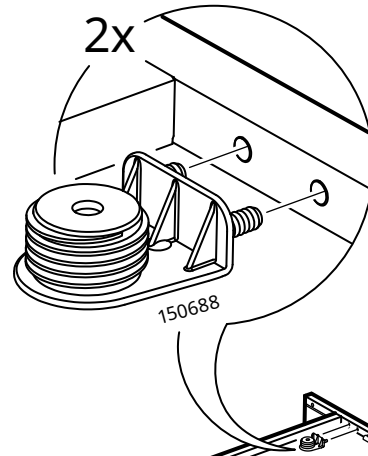  


14

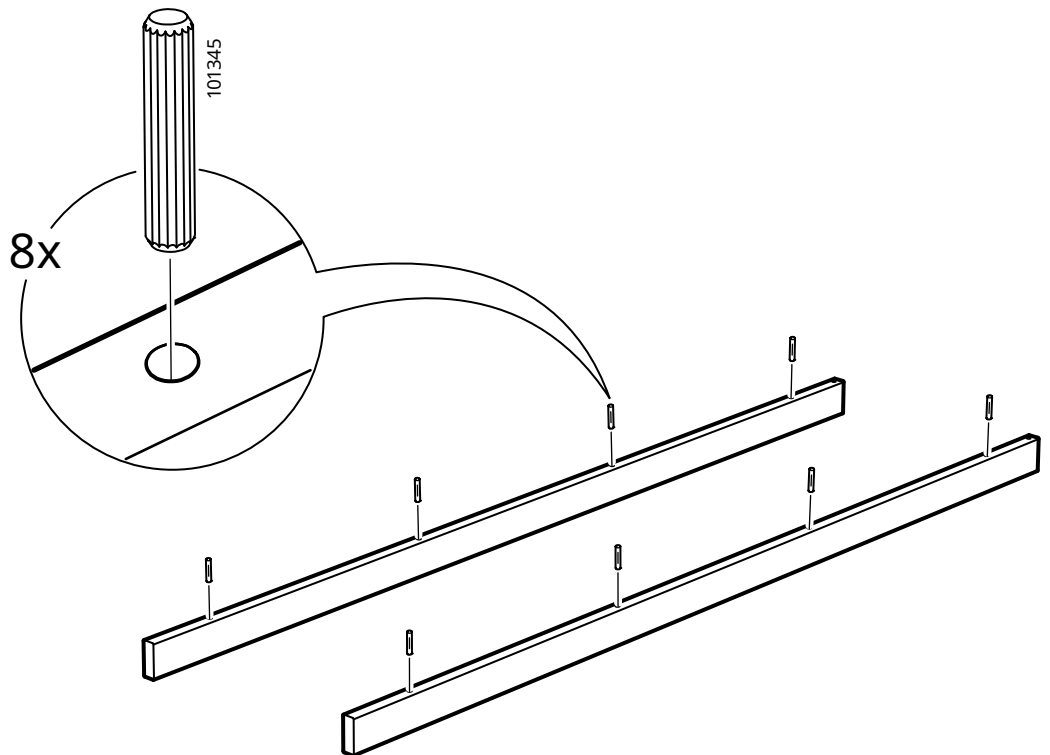 






15

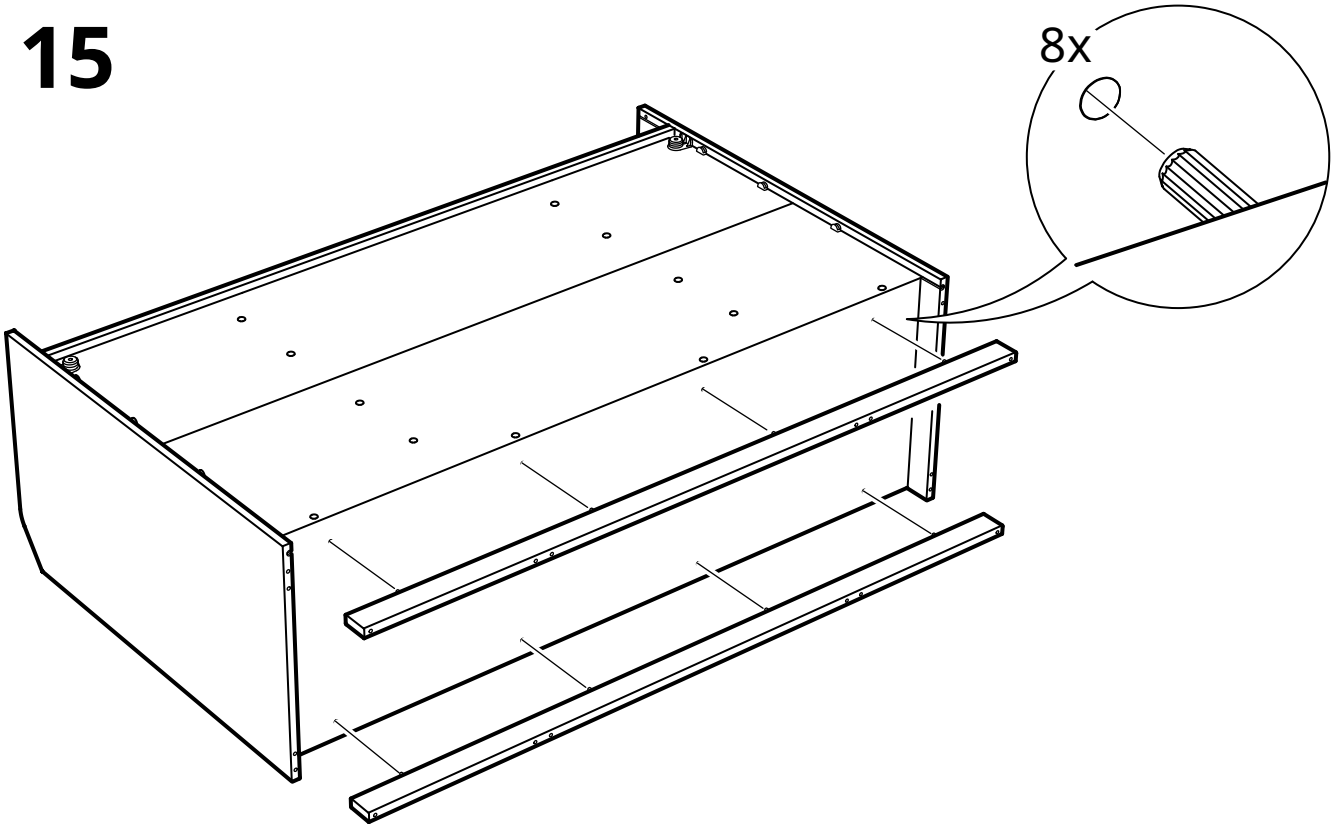





16


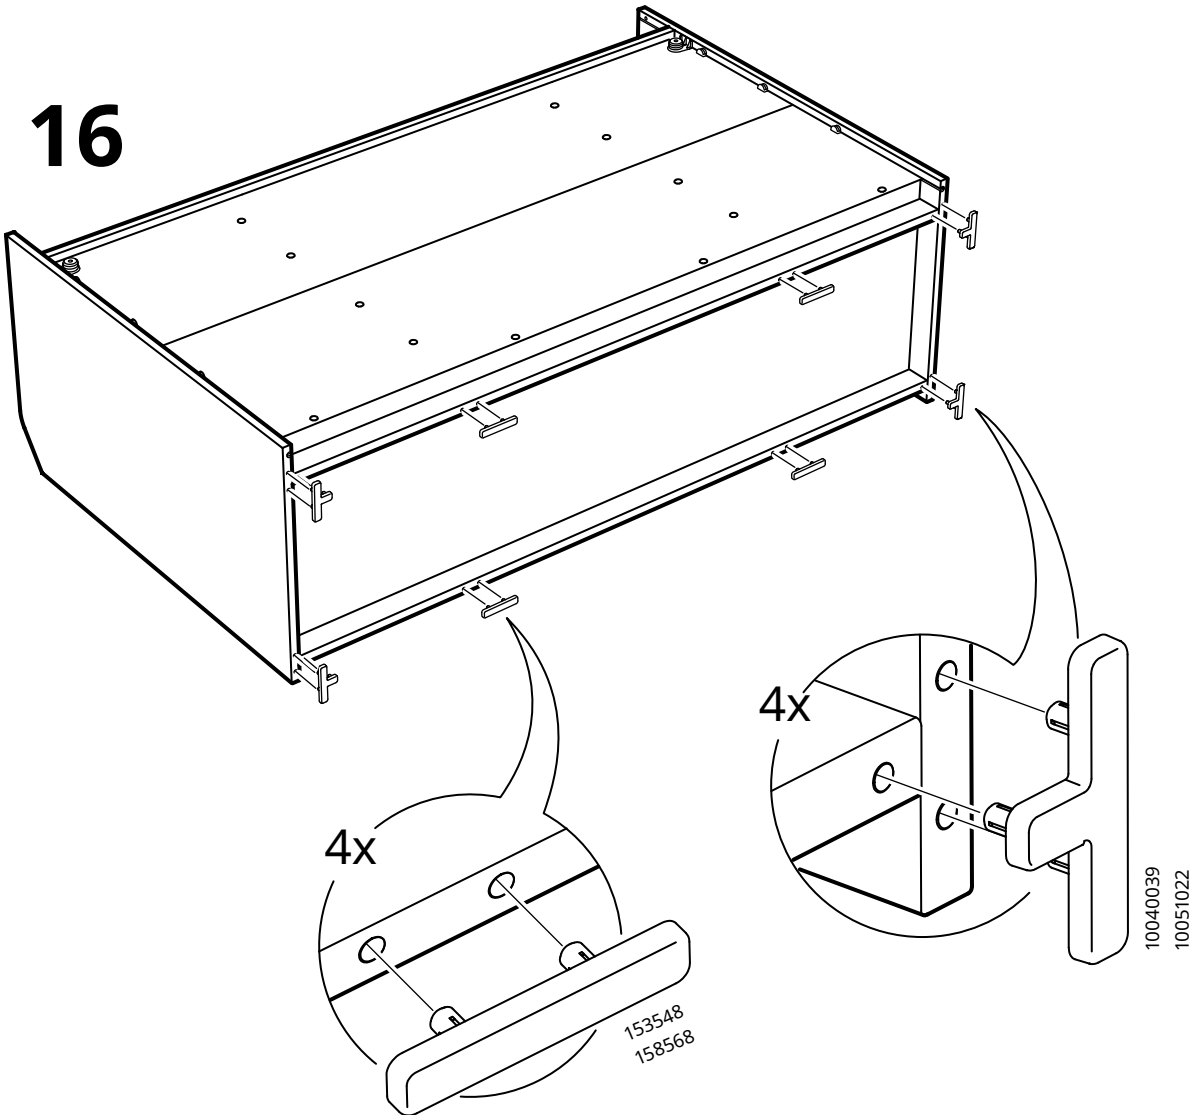


17

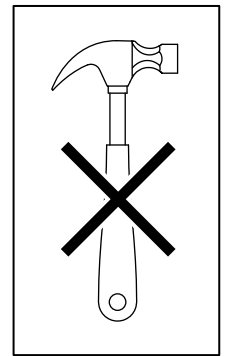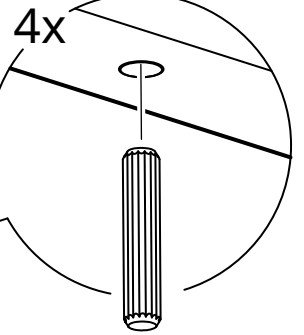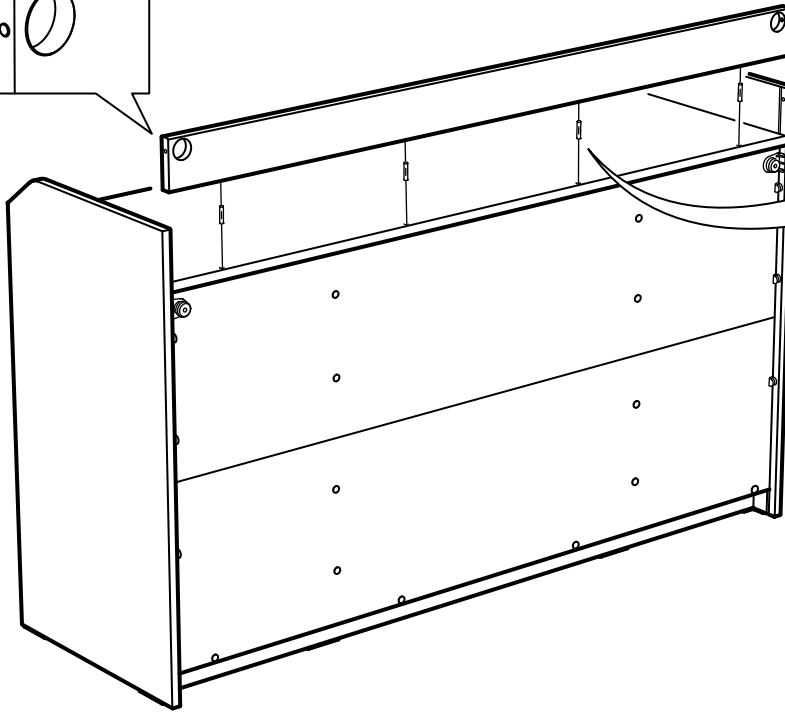   
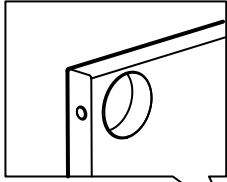 
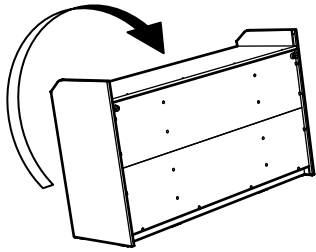 


18

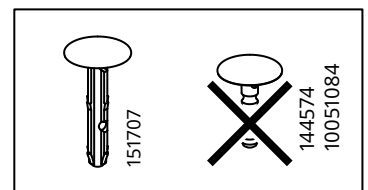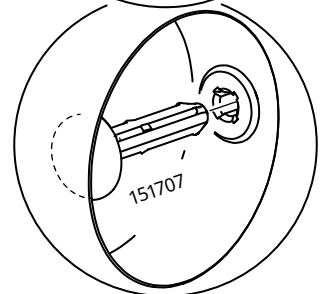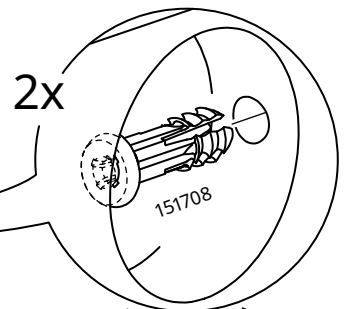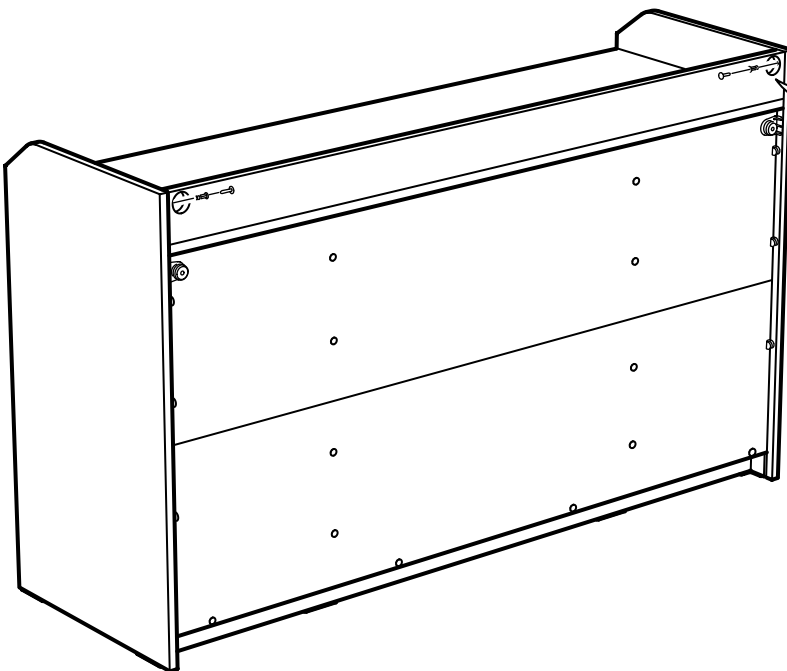    


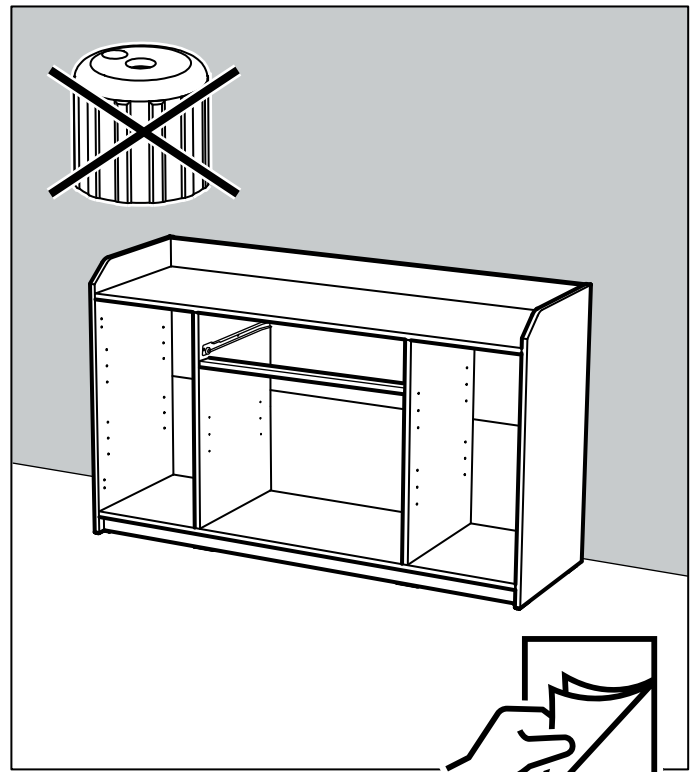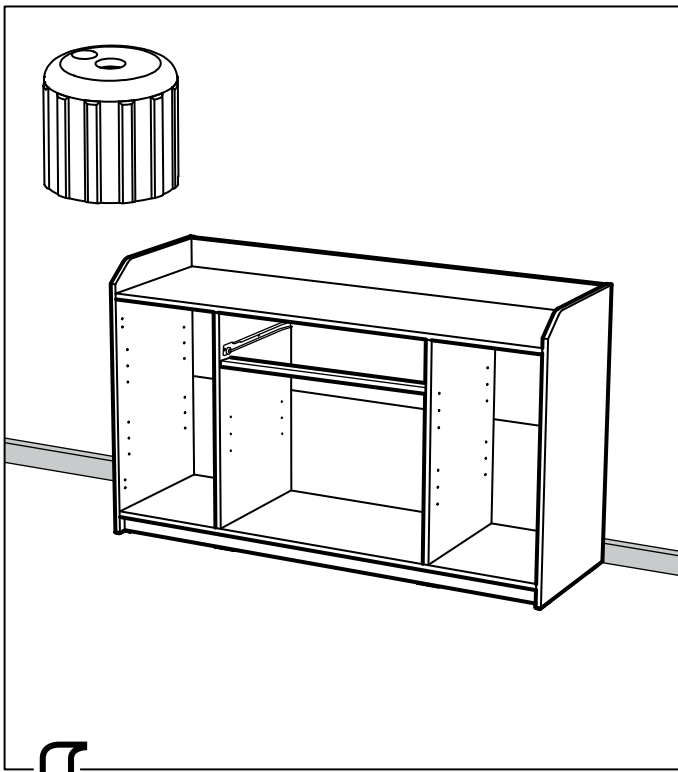


19

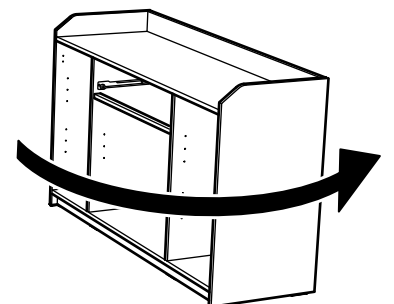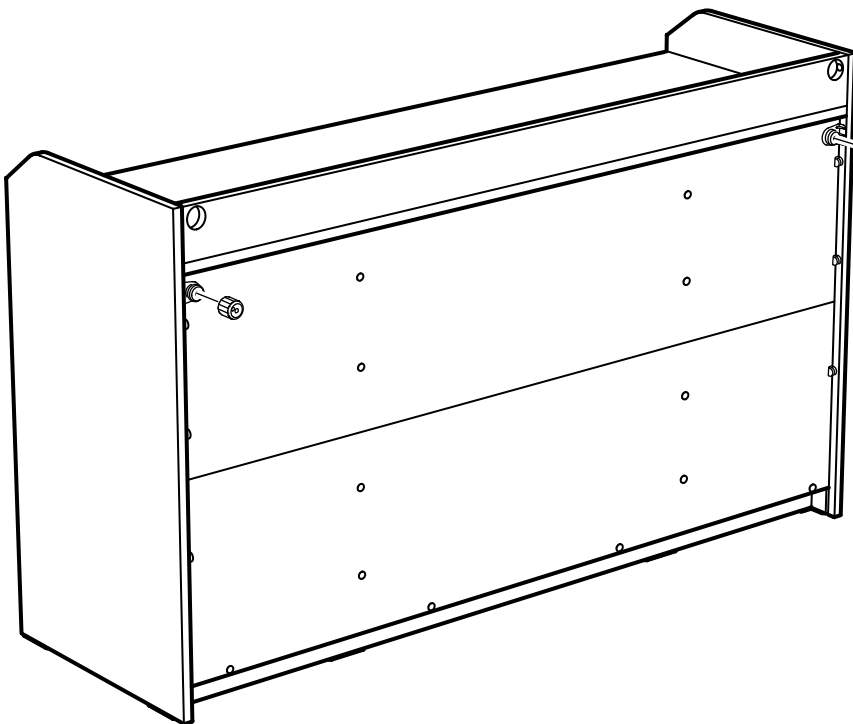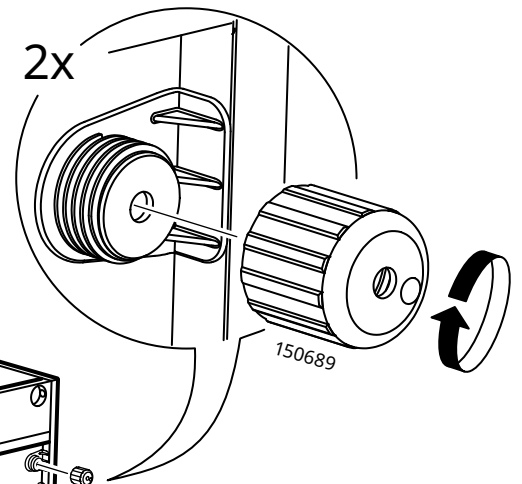 


20

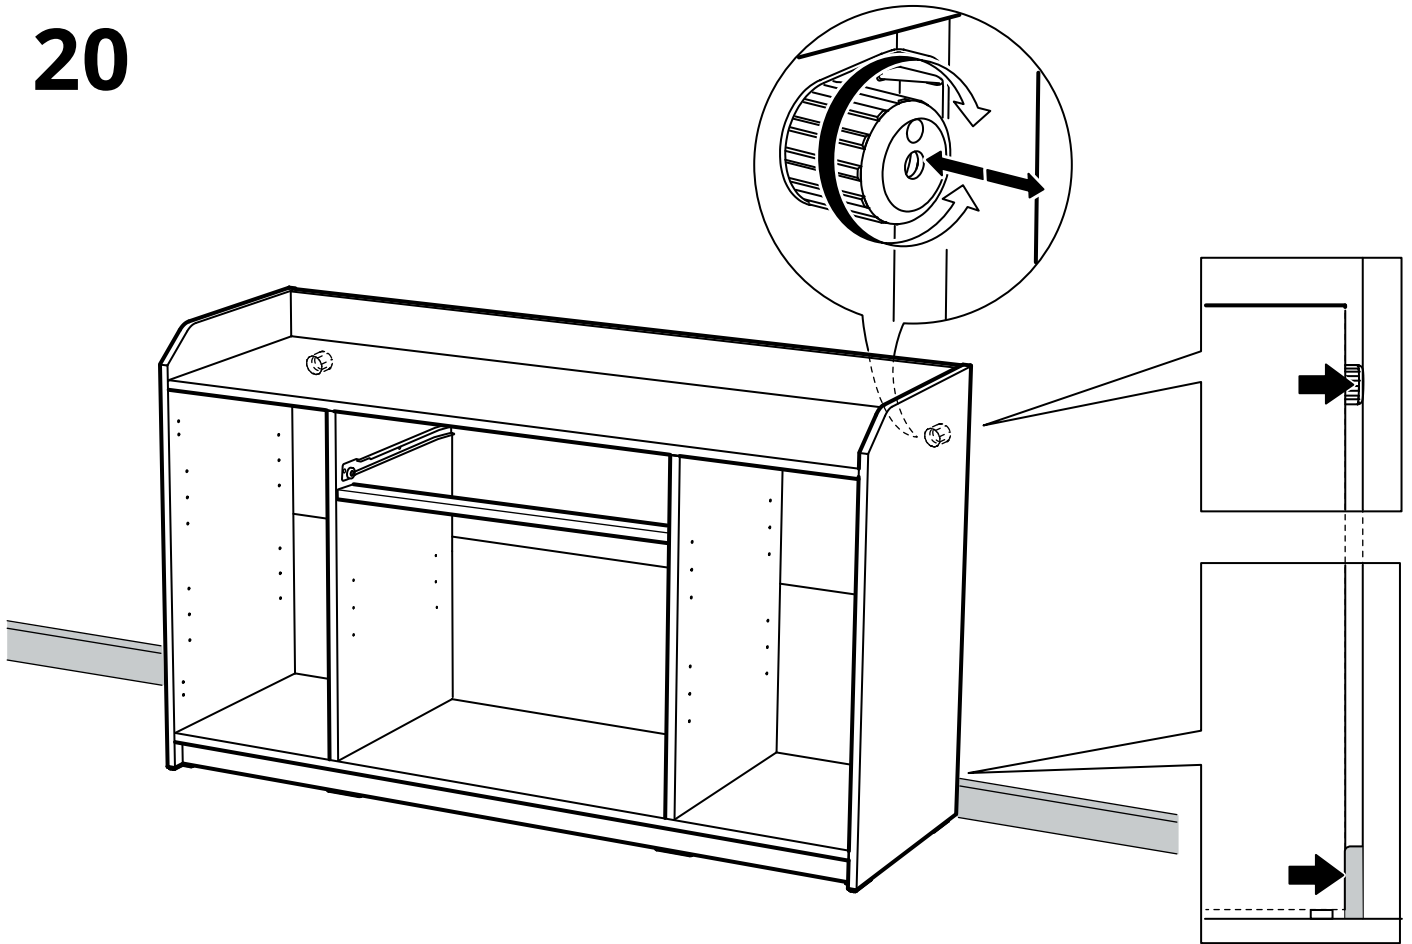


21

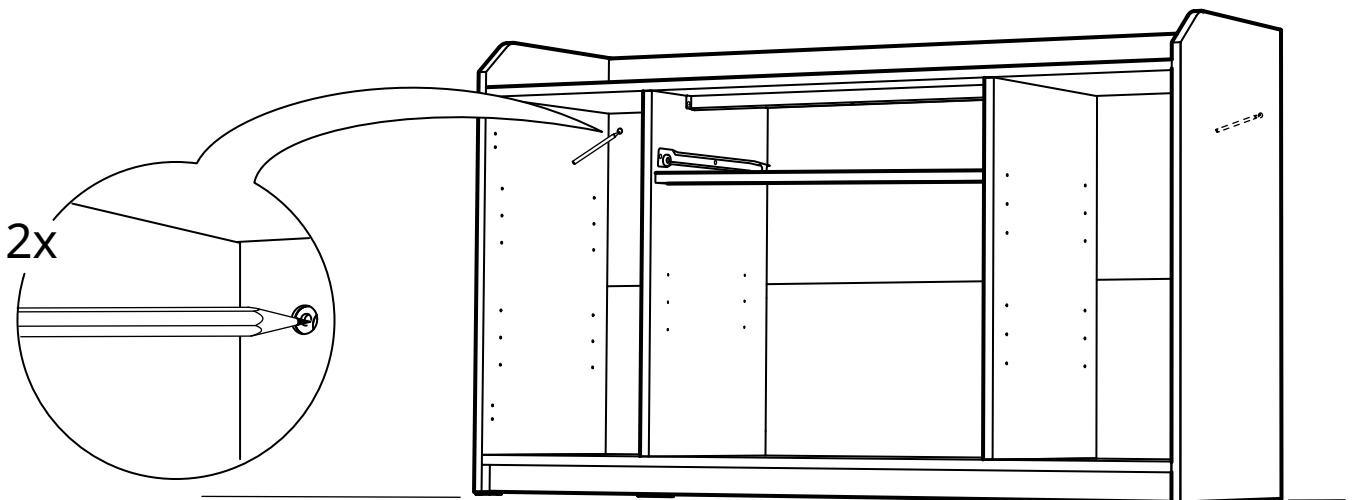

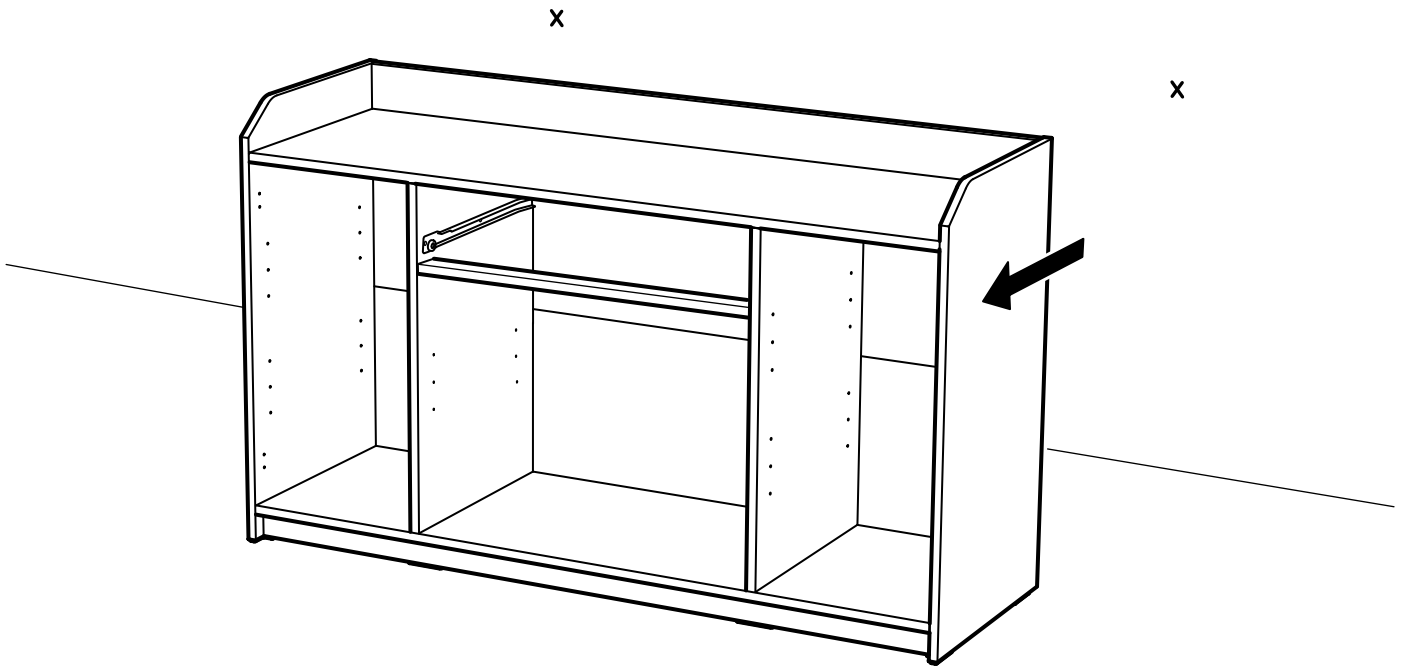 





www.IKEA.com/secure-it

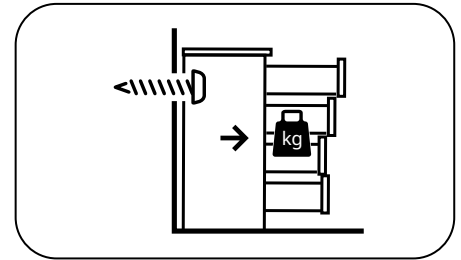 


English



The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

A	B	C
<p>Ø 8 mm (5/16")</p>	<p>Ø 8 mm (5/16")</p>	<p>Ø 3 mm (1/8")</p>
<p>1</p> <p>2</p> <p>≈ 70 mm (≈ 2 3/4")</p> <p>3</p>	<p>1</p> <p>2</p> <p>≈ 30 mm (≈ 1 1/4")</p> <p>3</p>	<p>1</p> <p>2</p> <p>≈ 30 mm (≈ 1 1/4")</p>

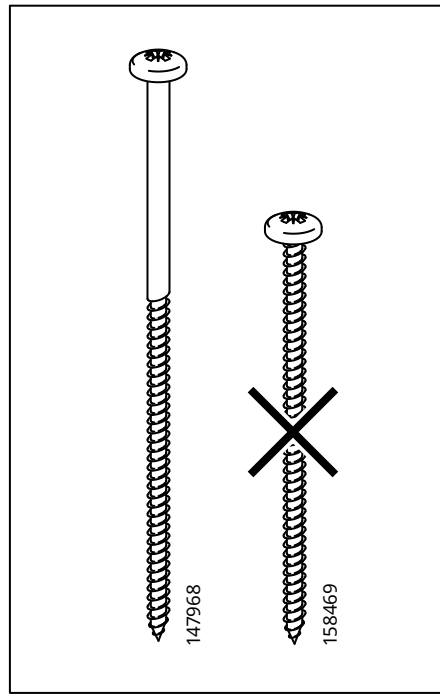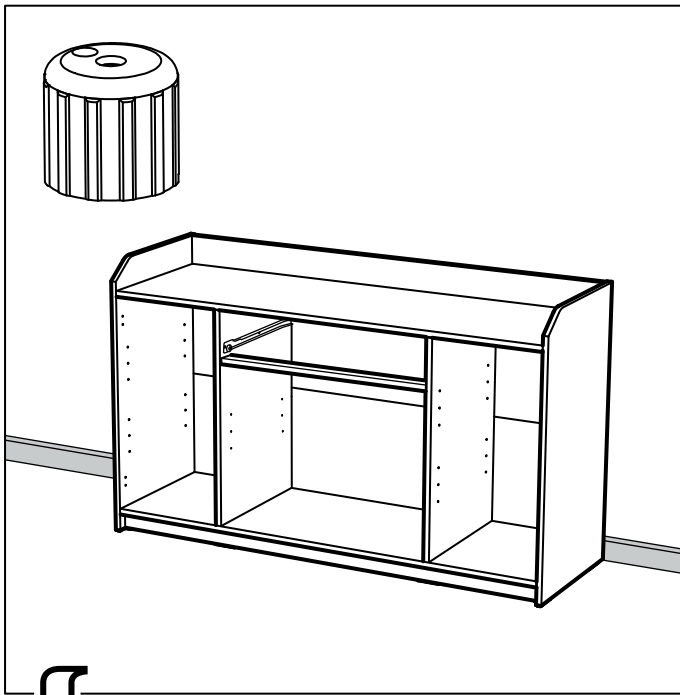


23

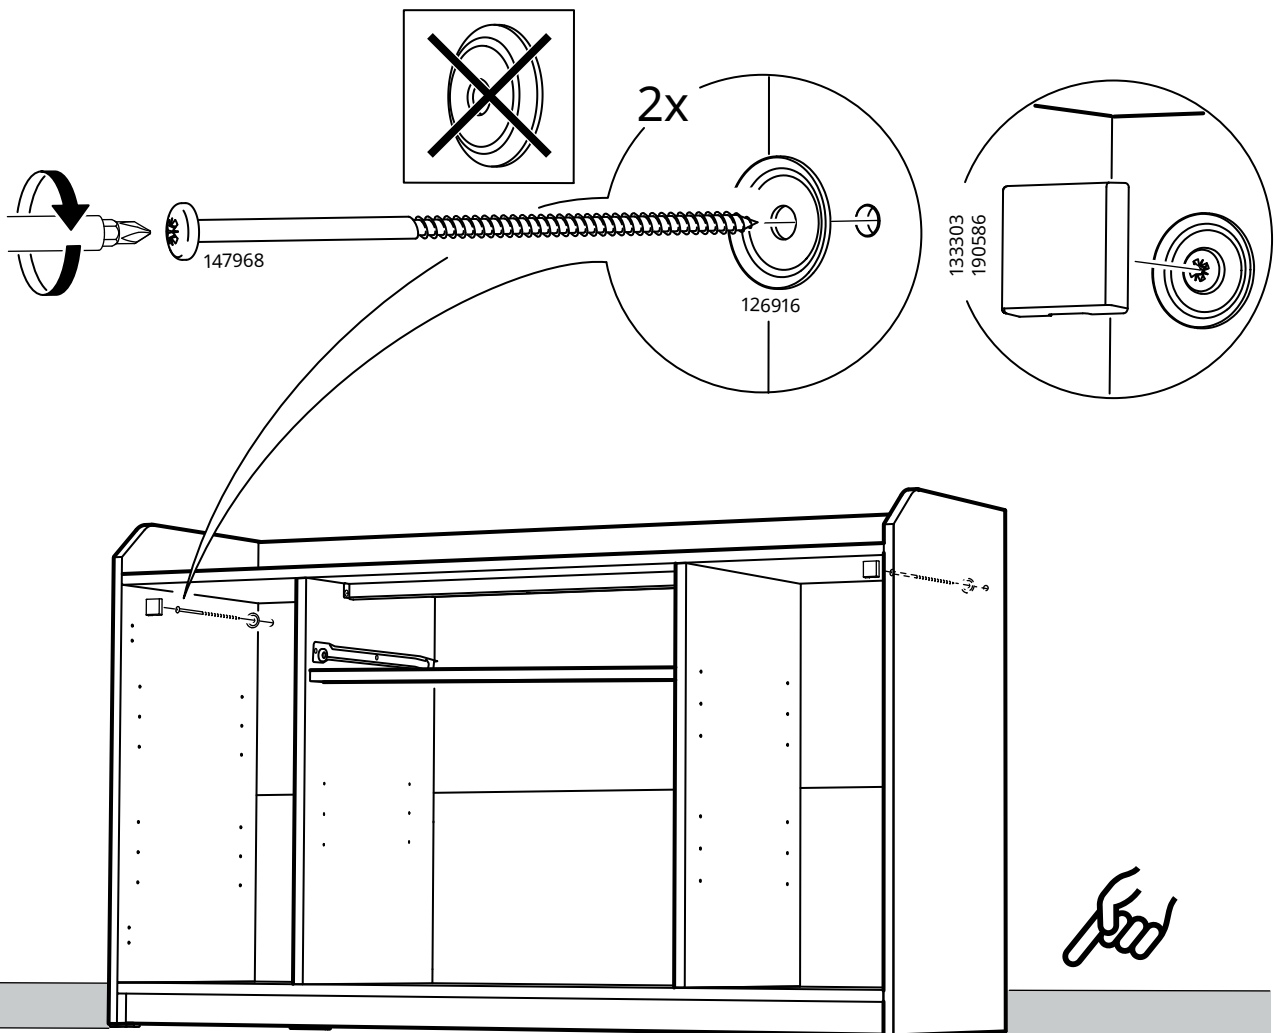

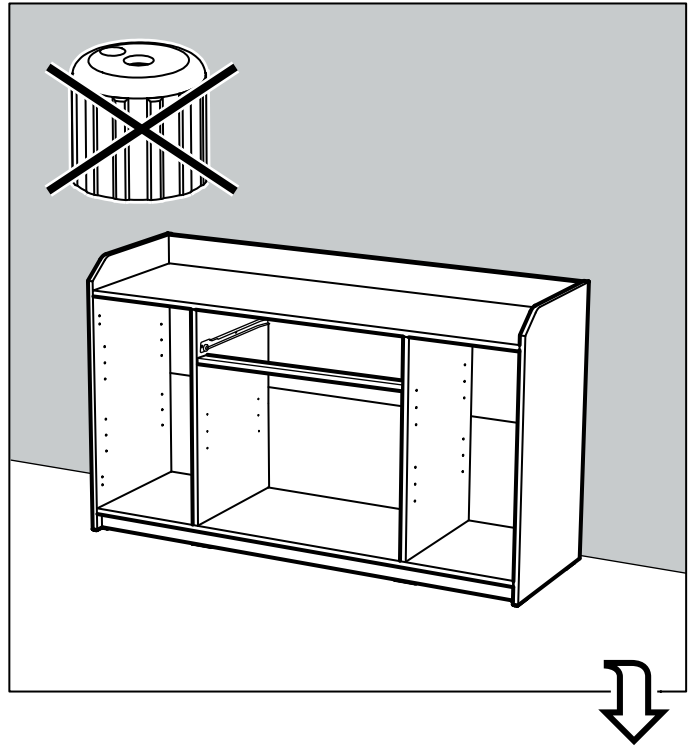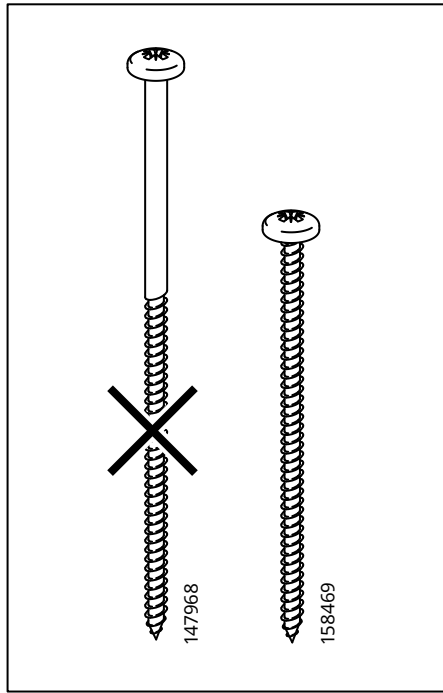


24


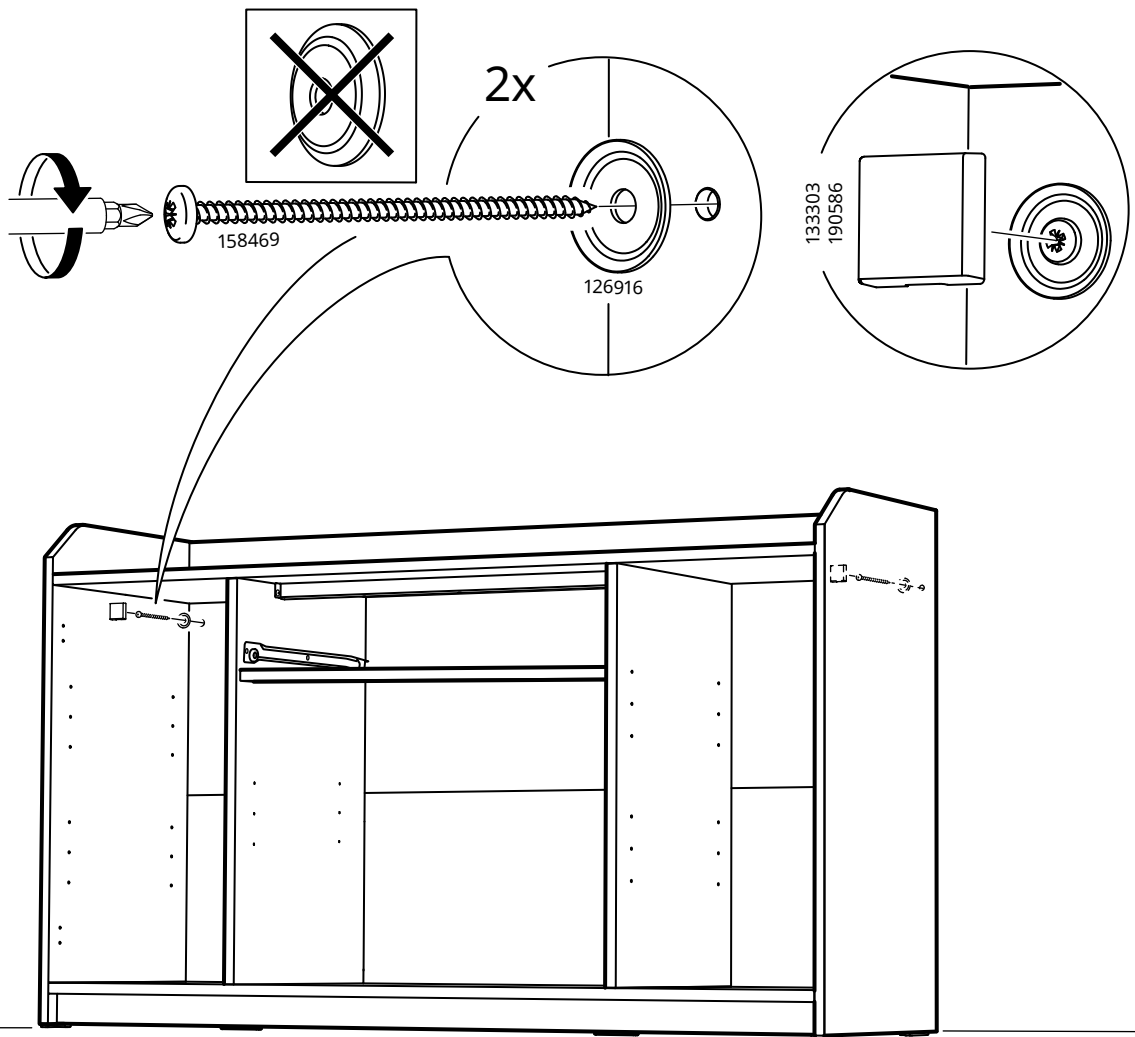 


25




20x

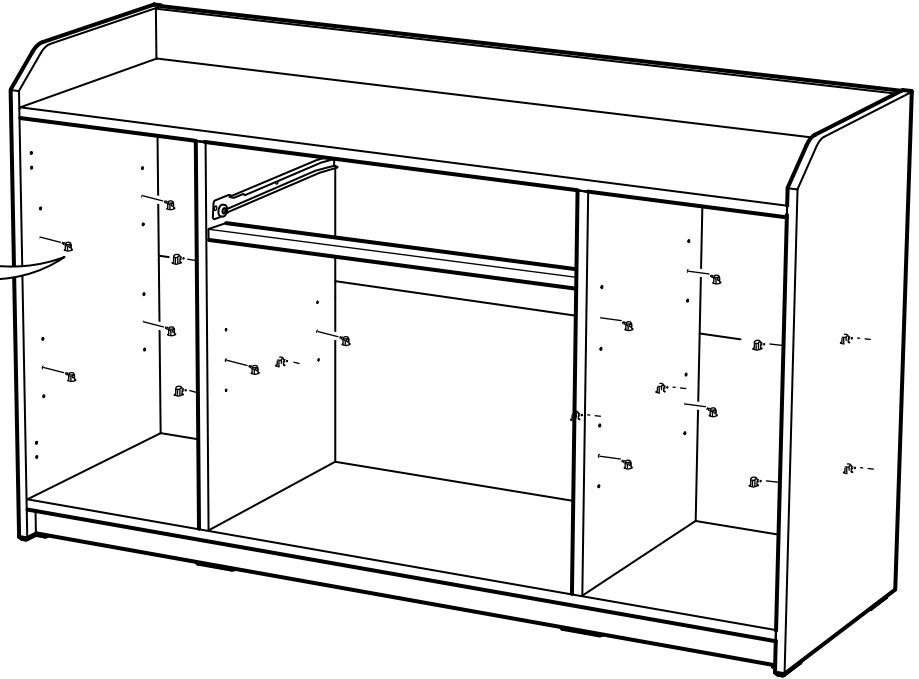


26

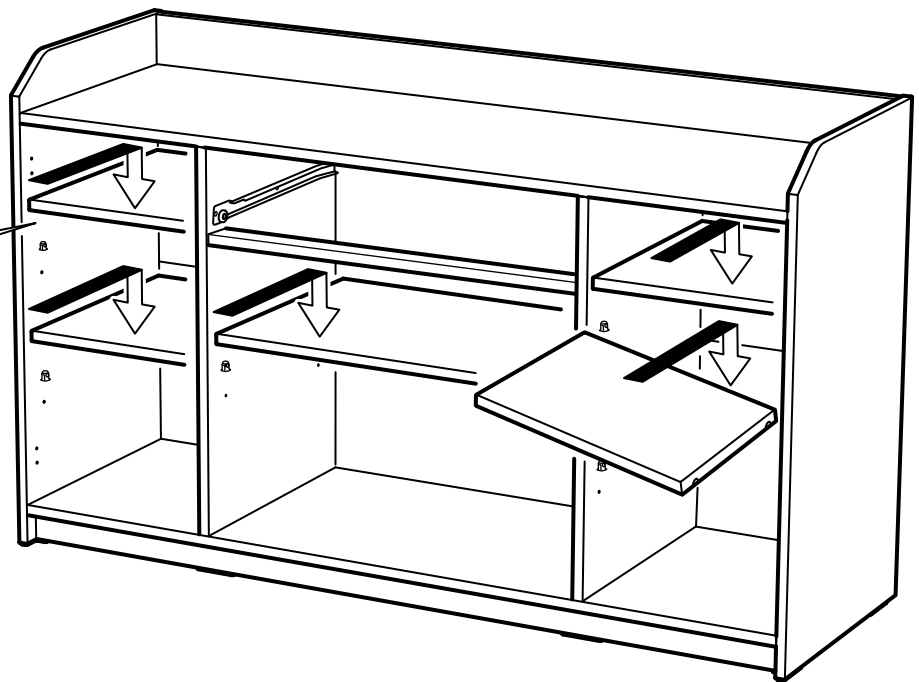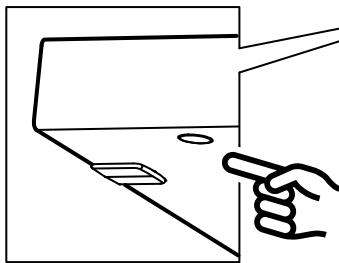


27

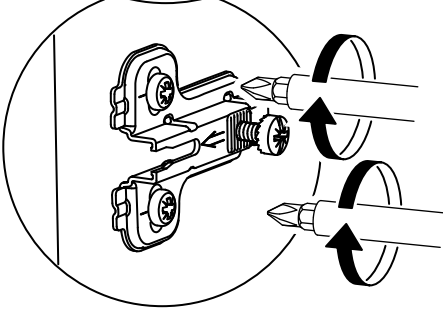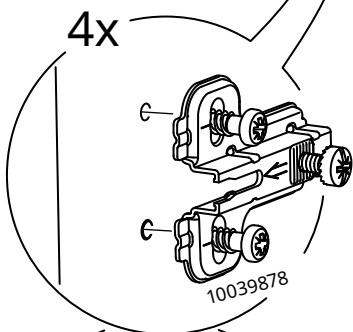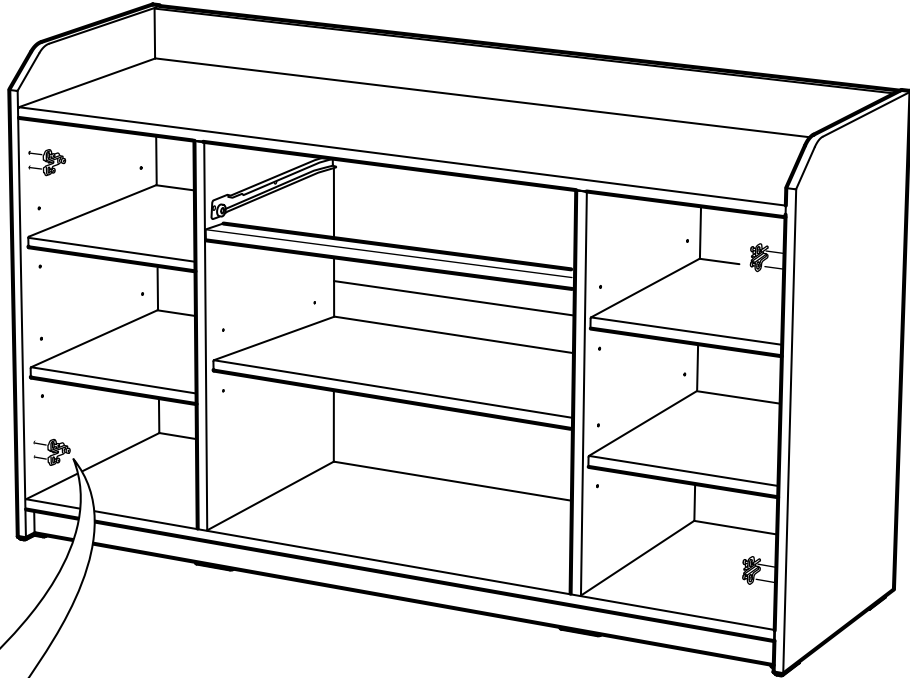   




28

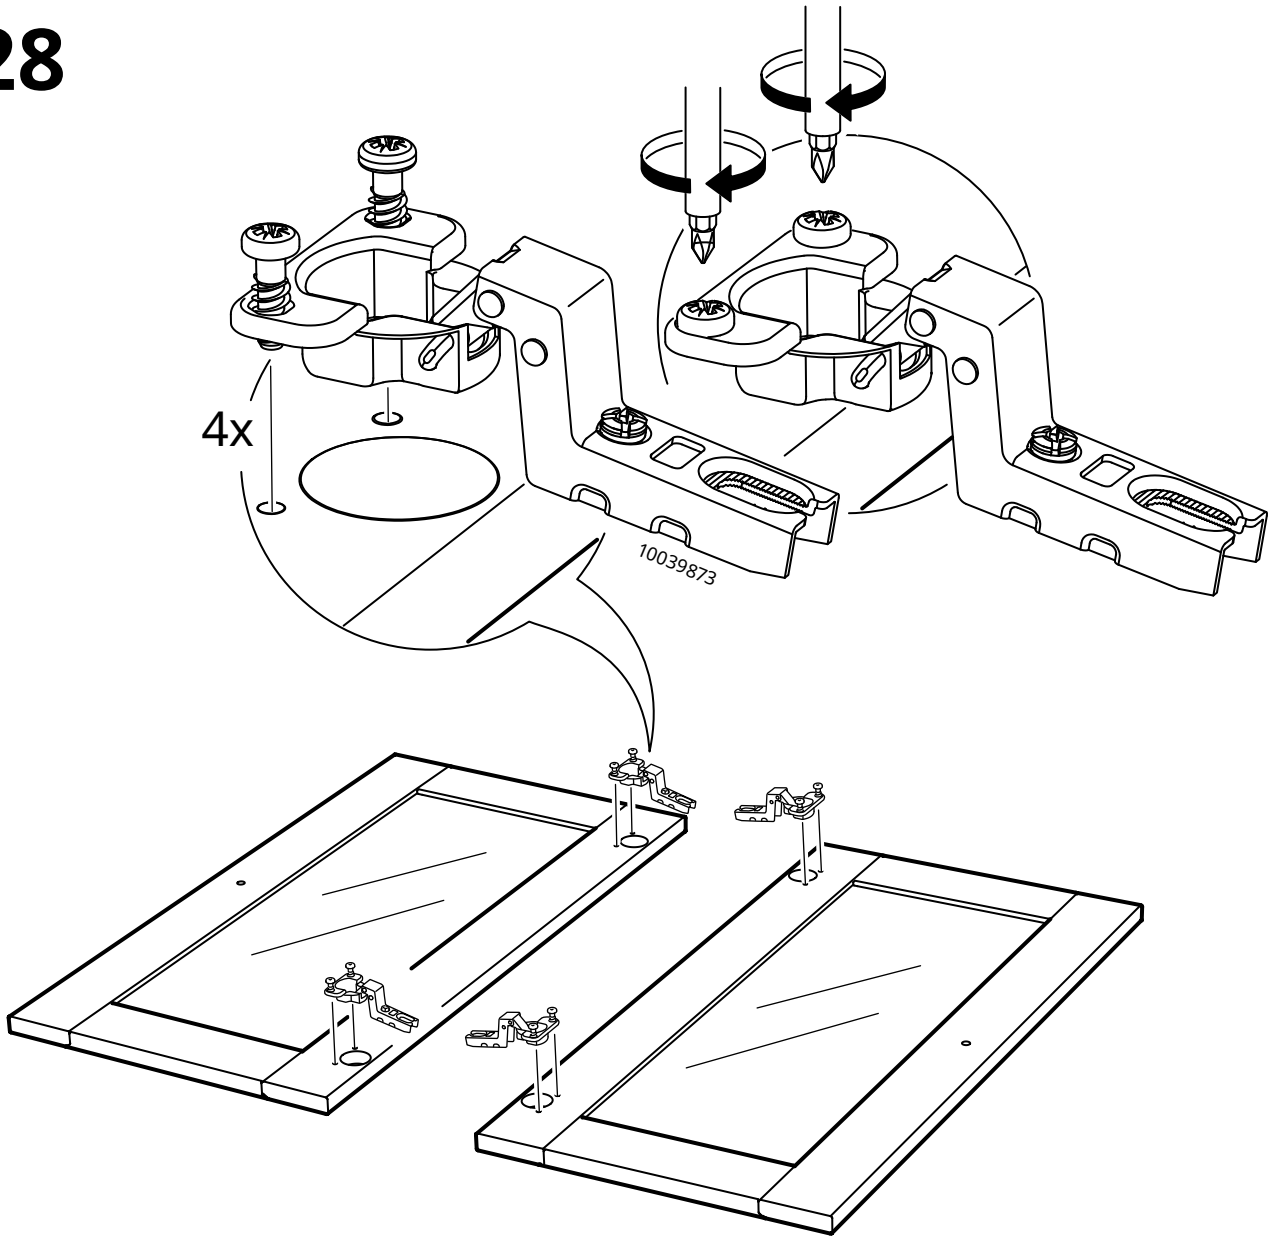


29

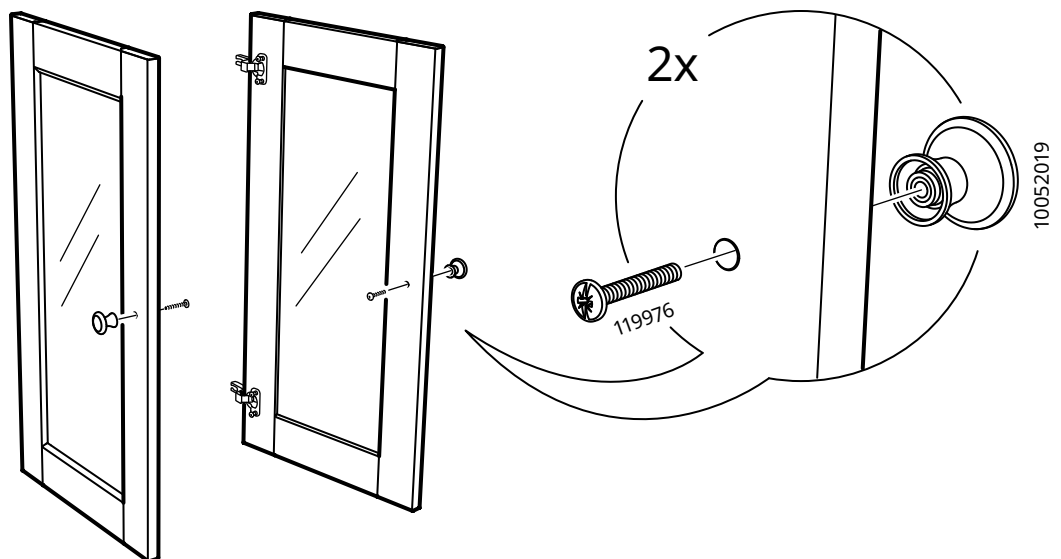 


30

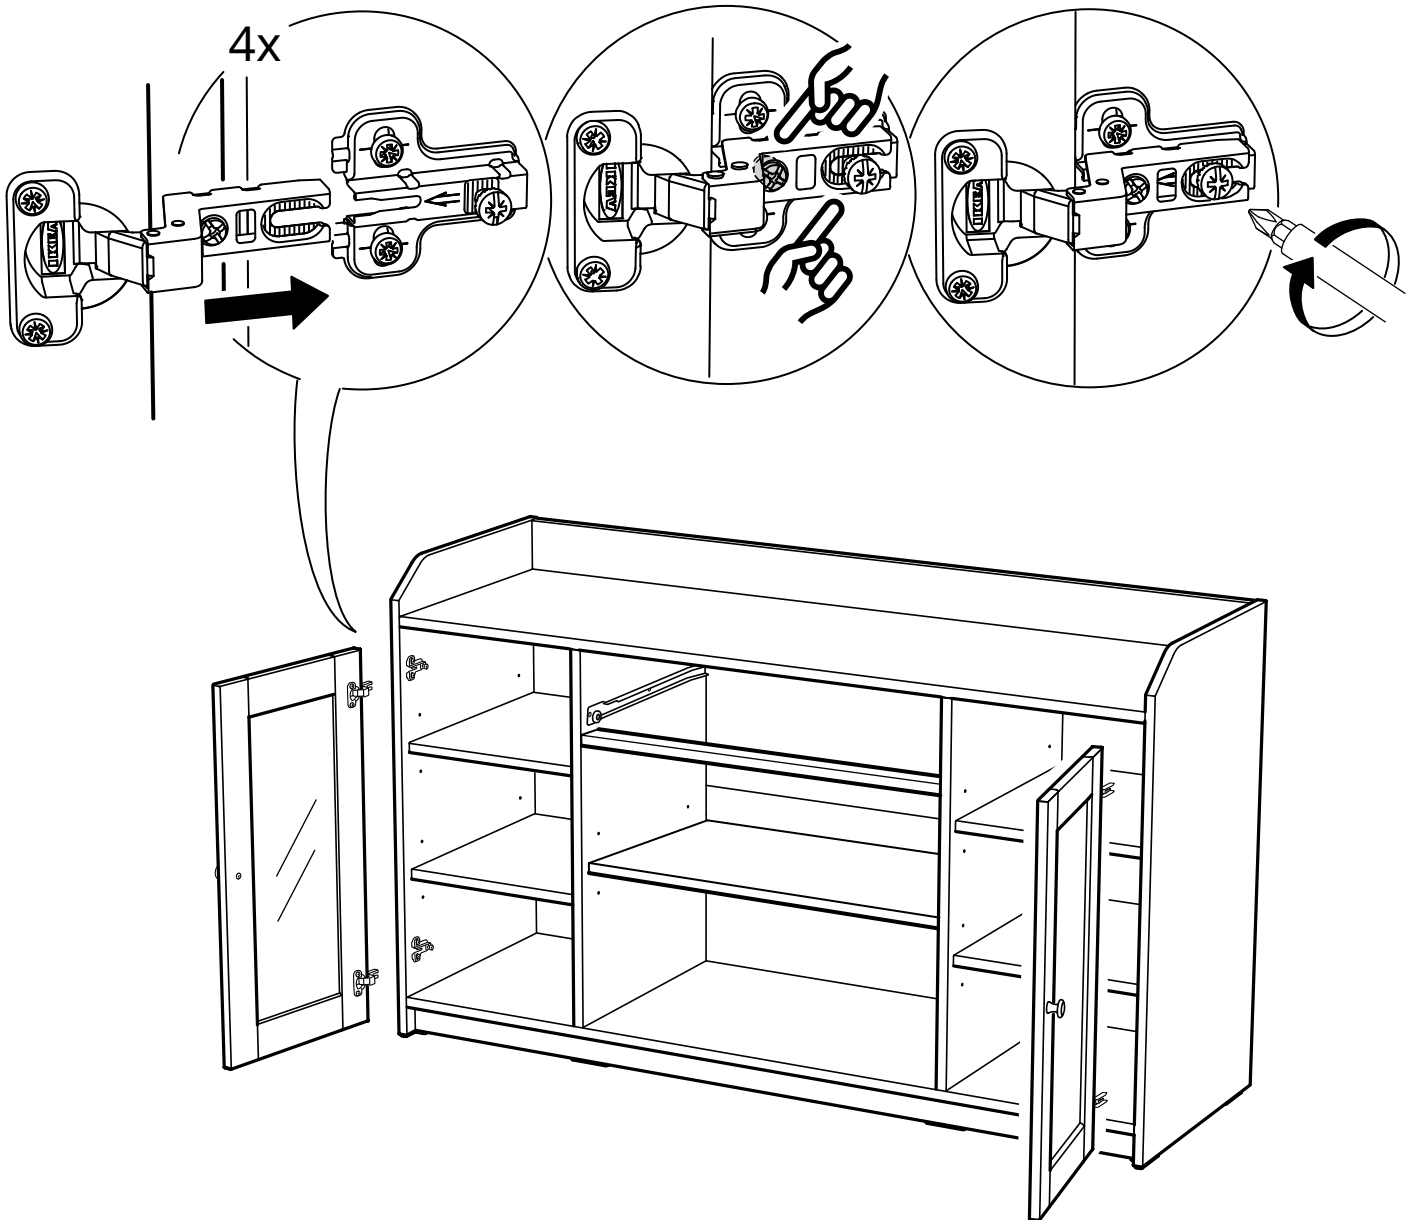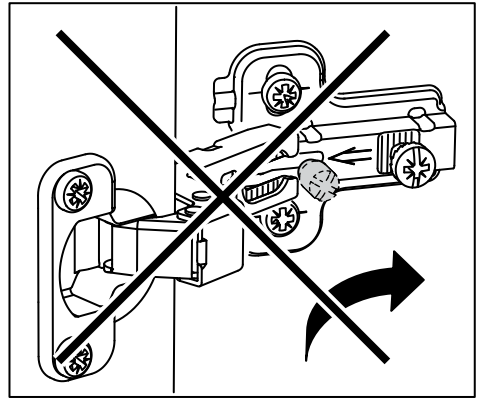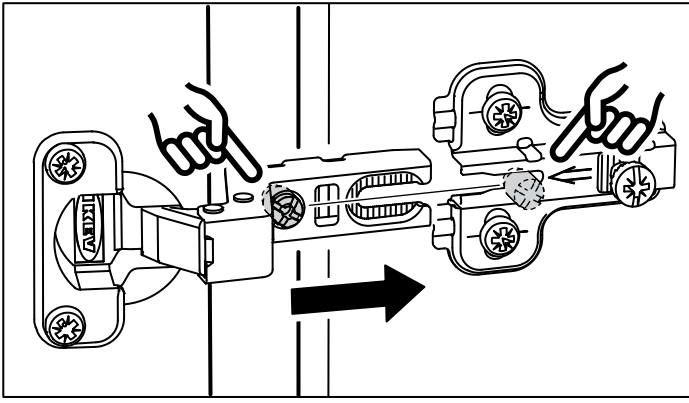 

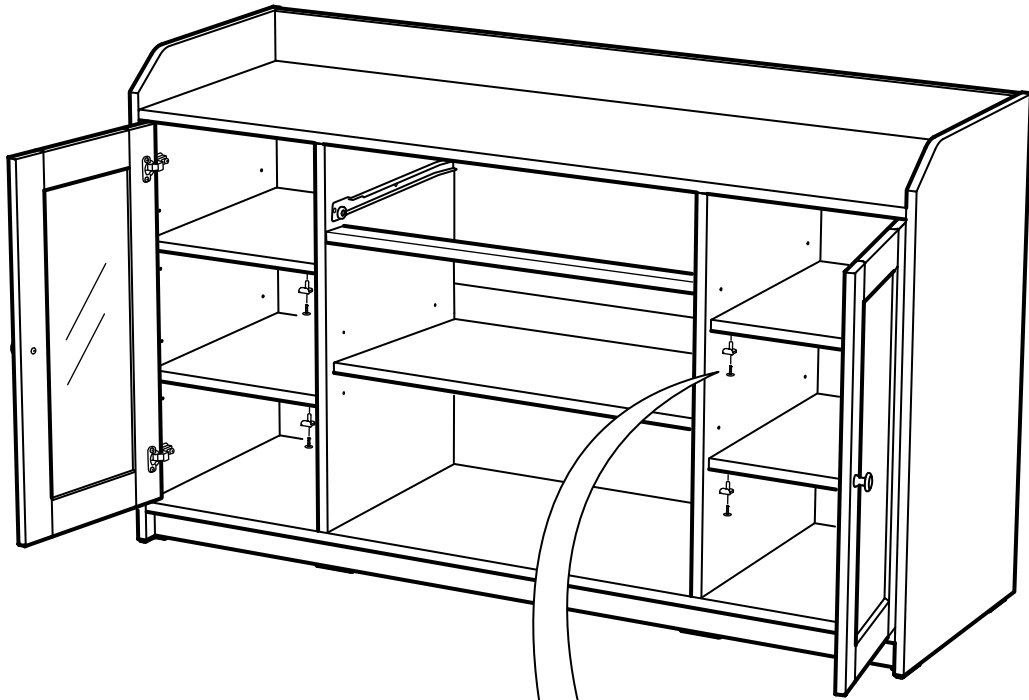


4x

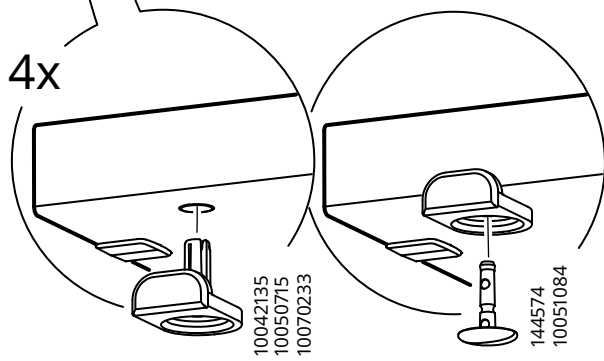 


10042135
10050715
10070233

 
144574
10051084

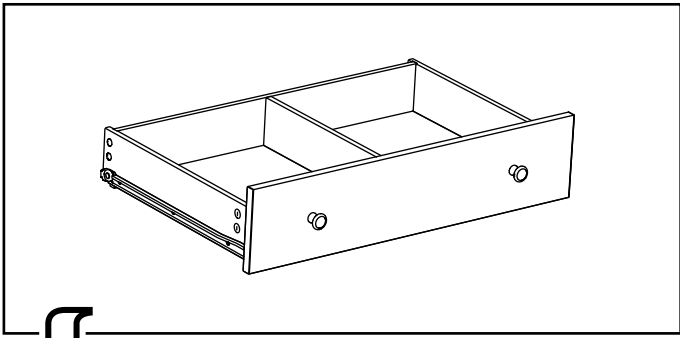


32

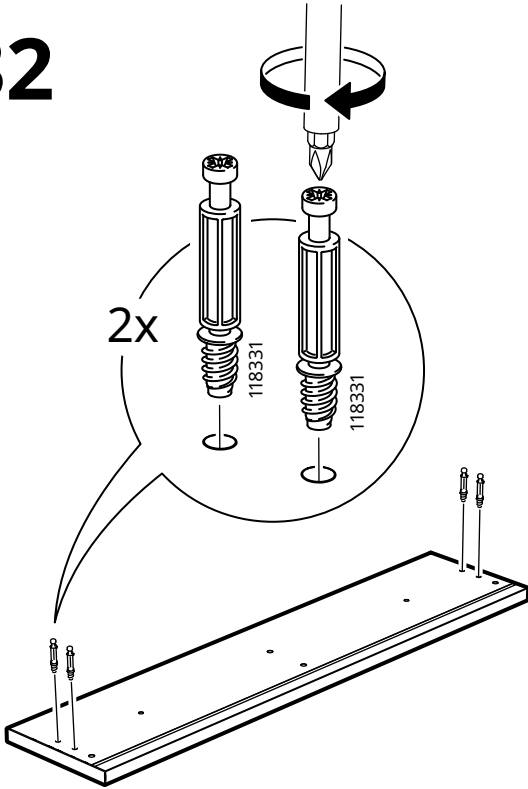 


33

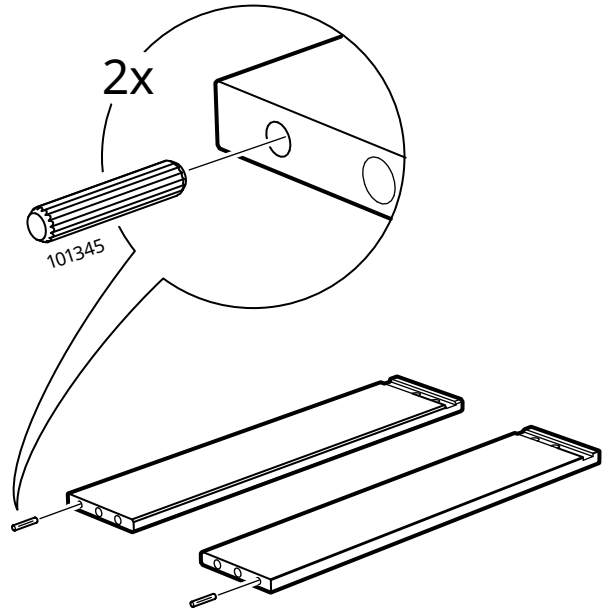 


34

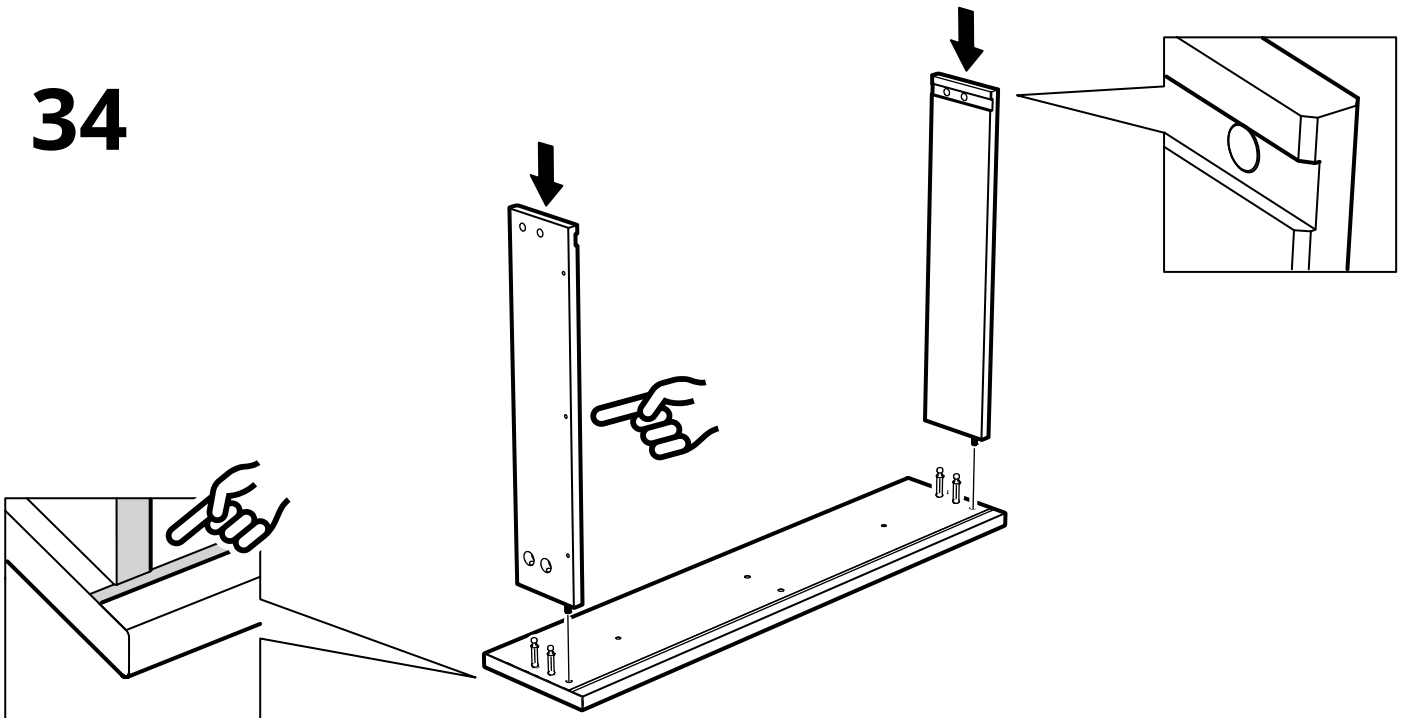 


35

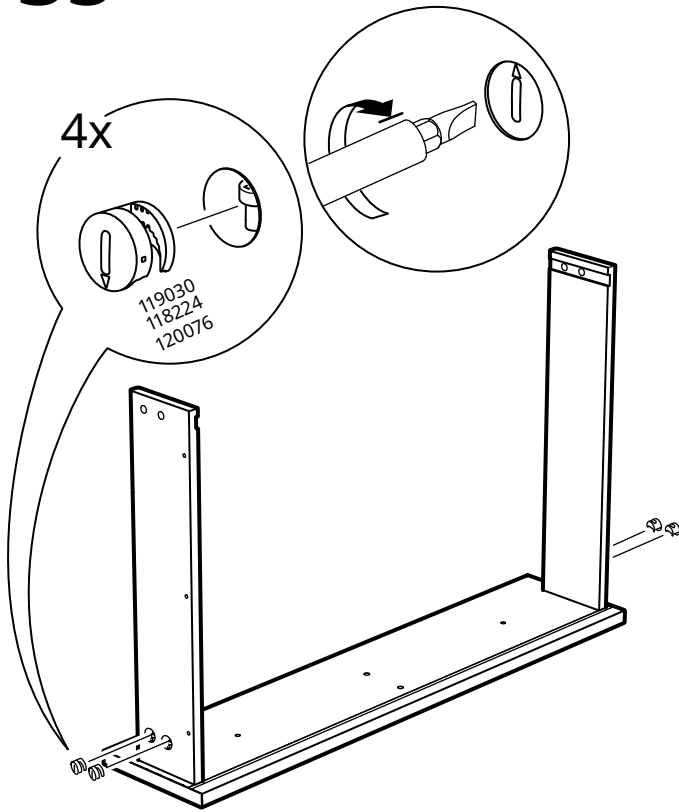 


36

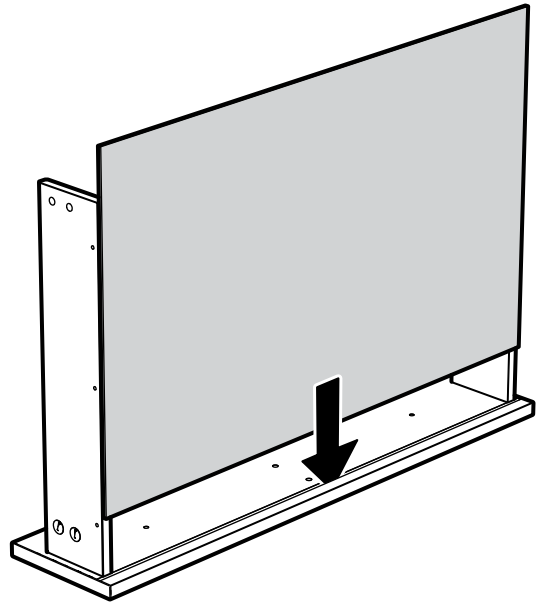 



37

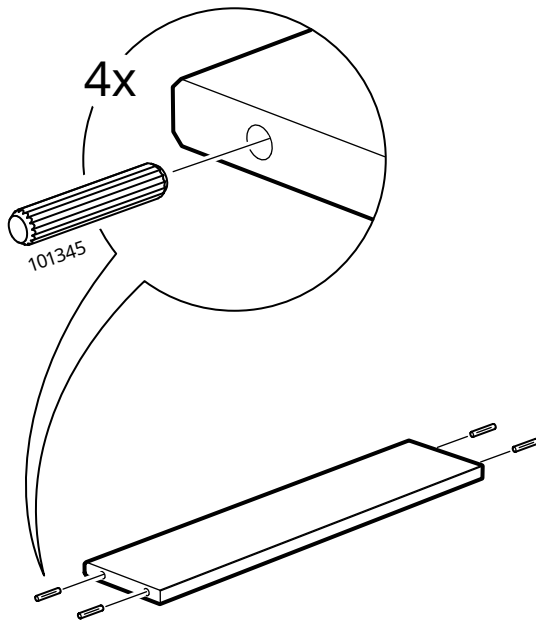 


38

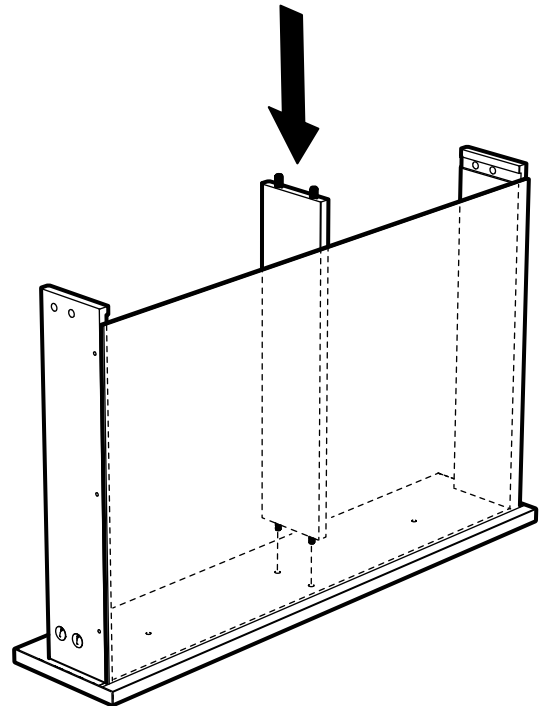 


39

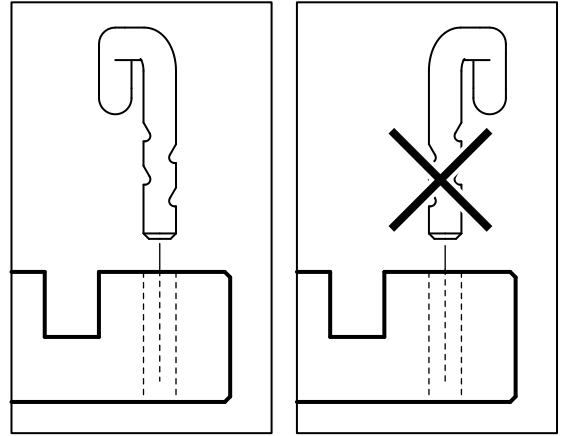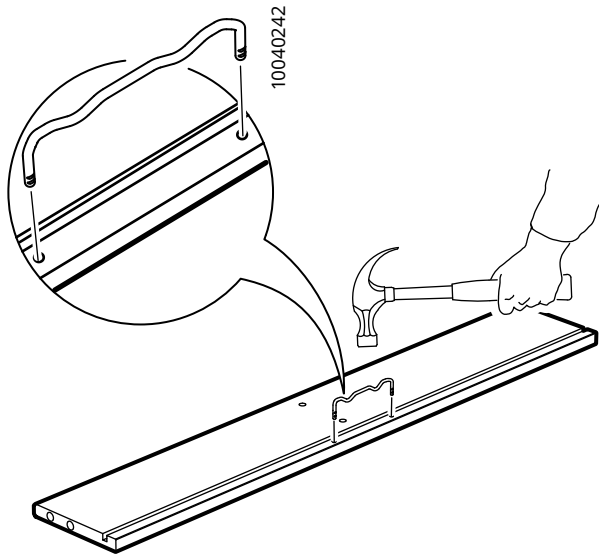  


40

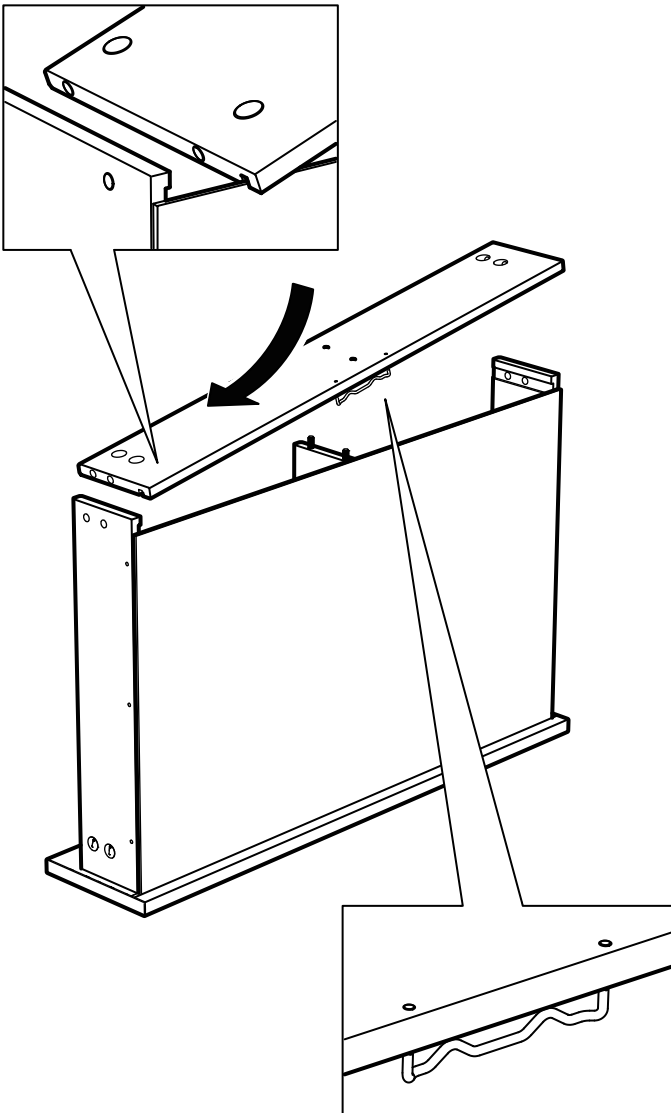 


41

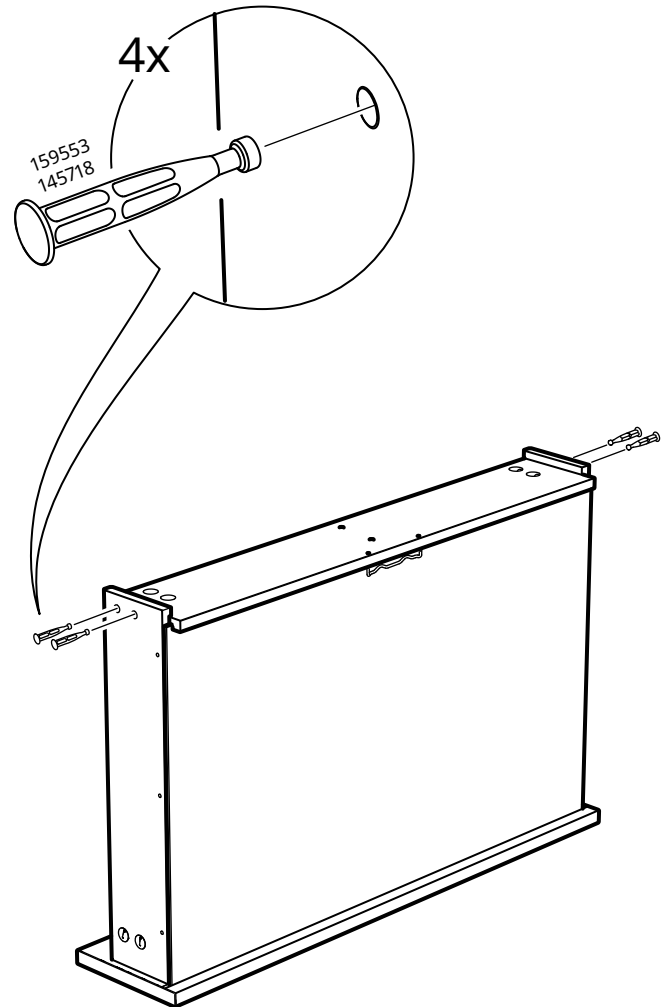 


42

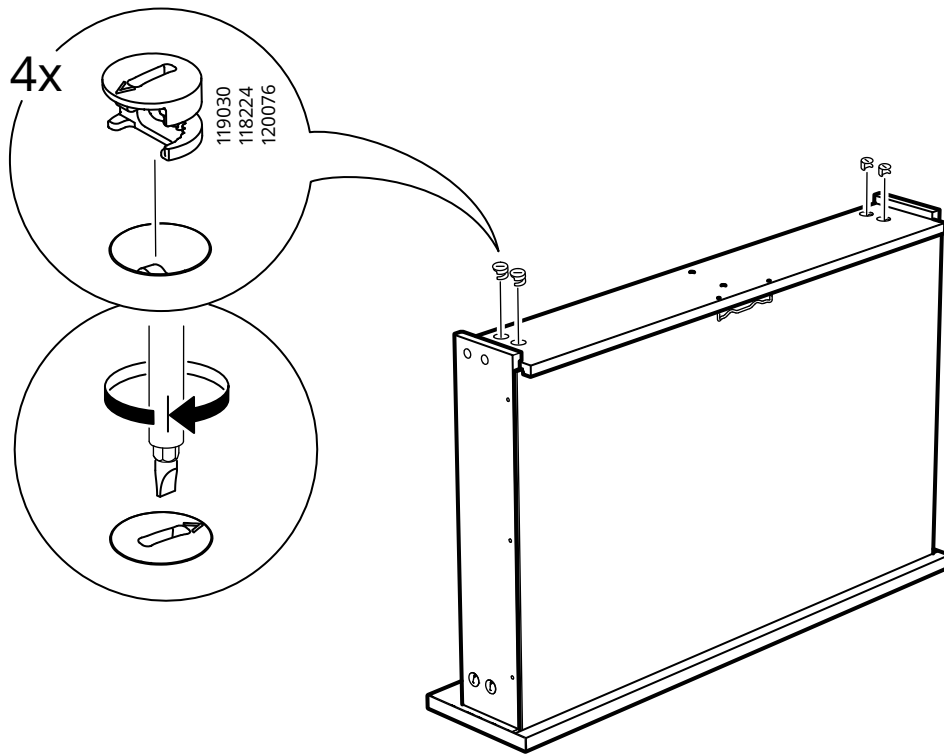 

43

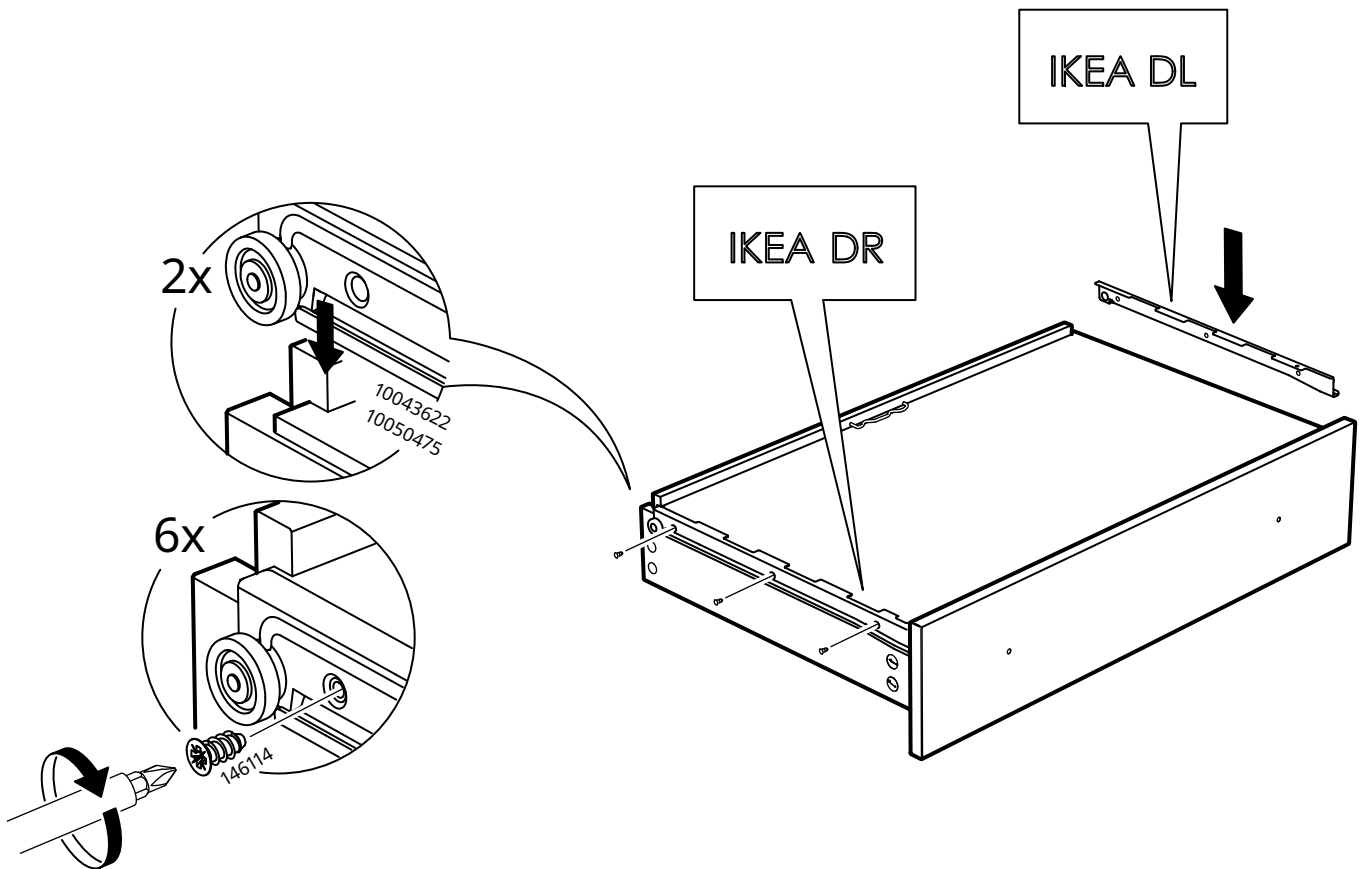 

44

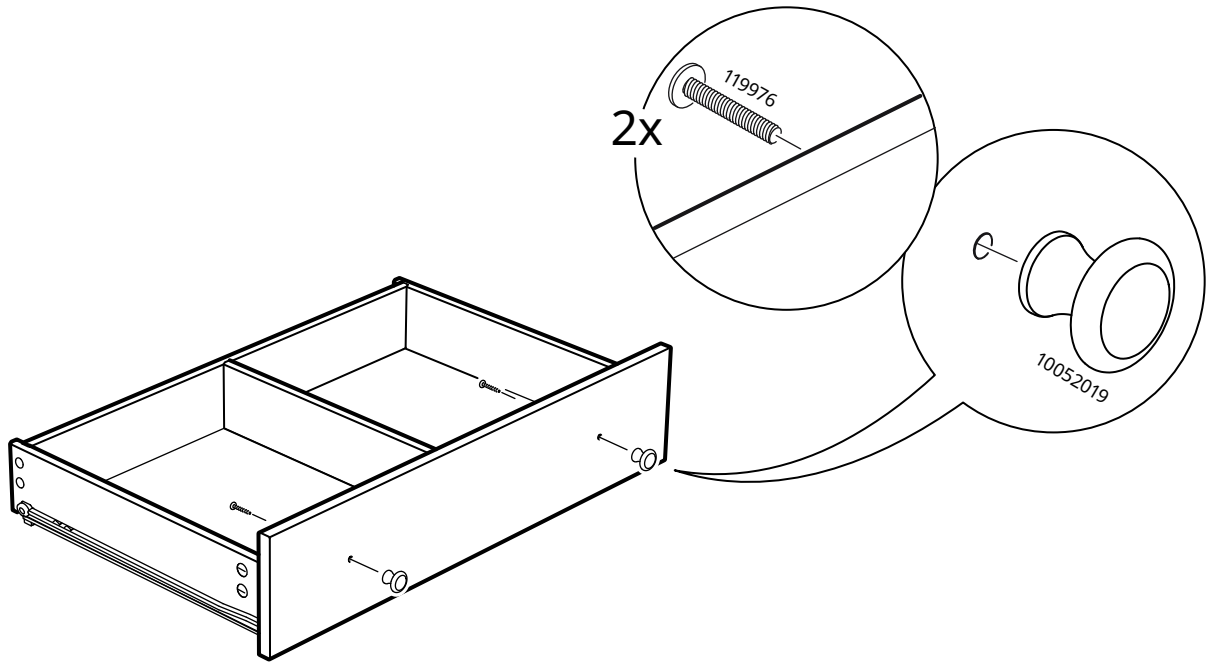 

45

