 
 
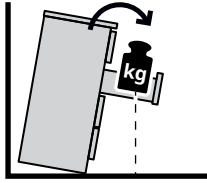 


HAVSTA

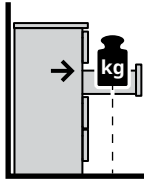

Design and Quality
IKEA of Sweden



English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

 
 
 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

 
 
 
 
 
NEVER open more than one drawer at a time.

Place heaviest items in the lowest drawers.

English

Read and follow each step of the instruction carefully.

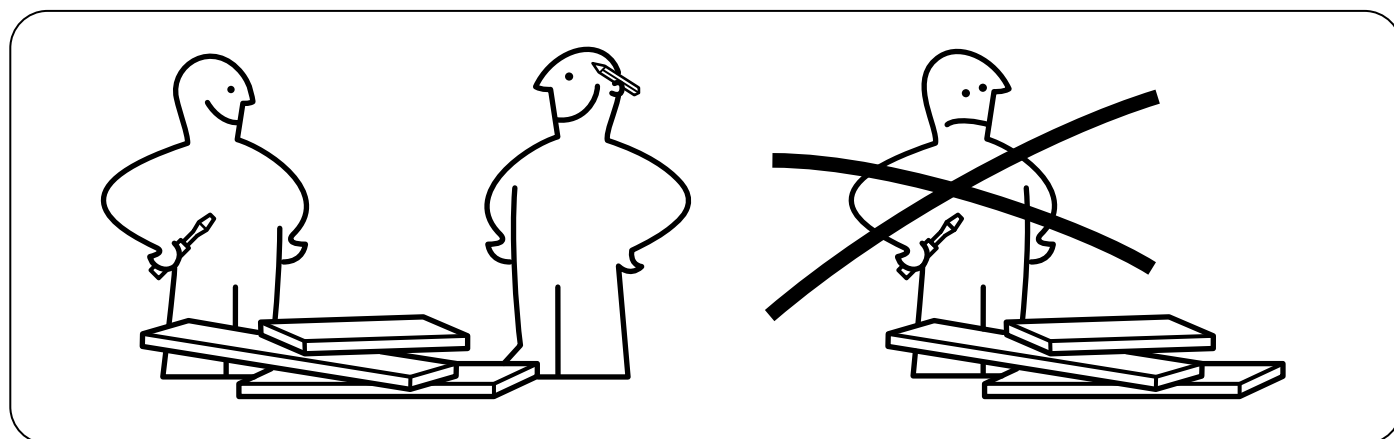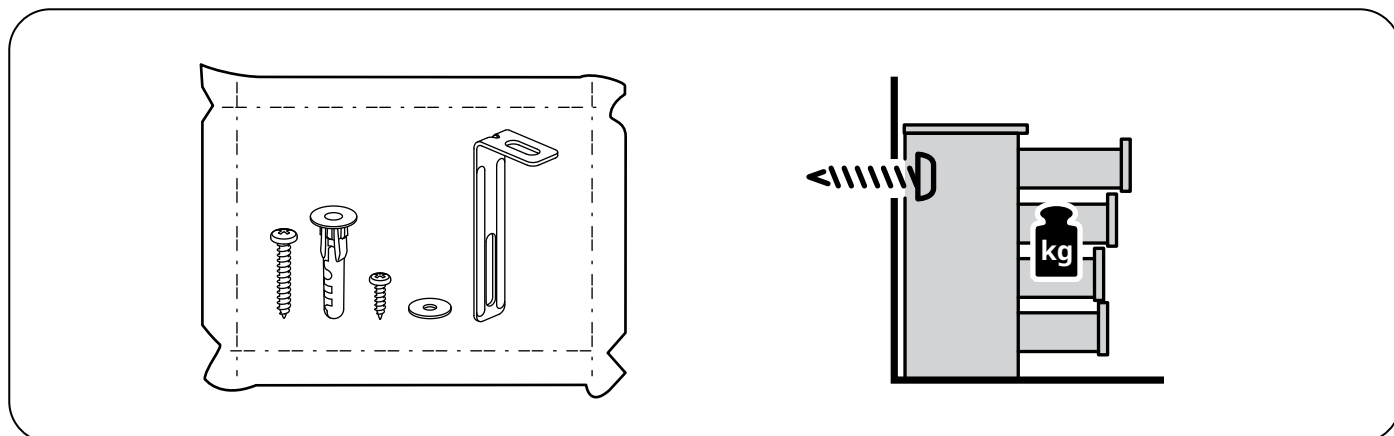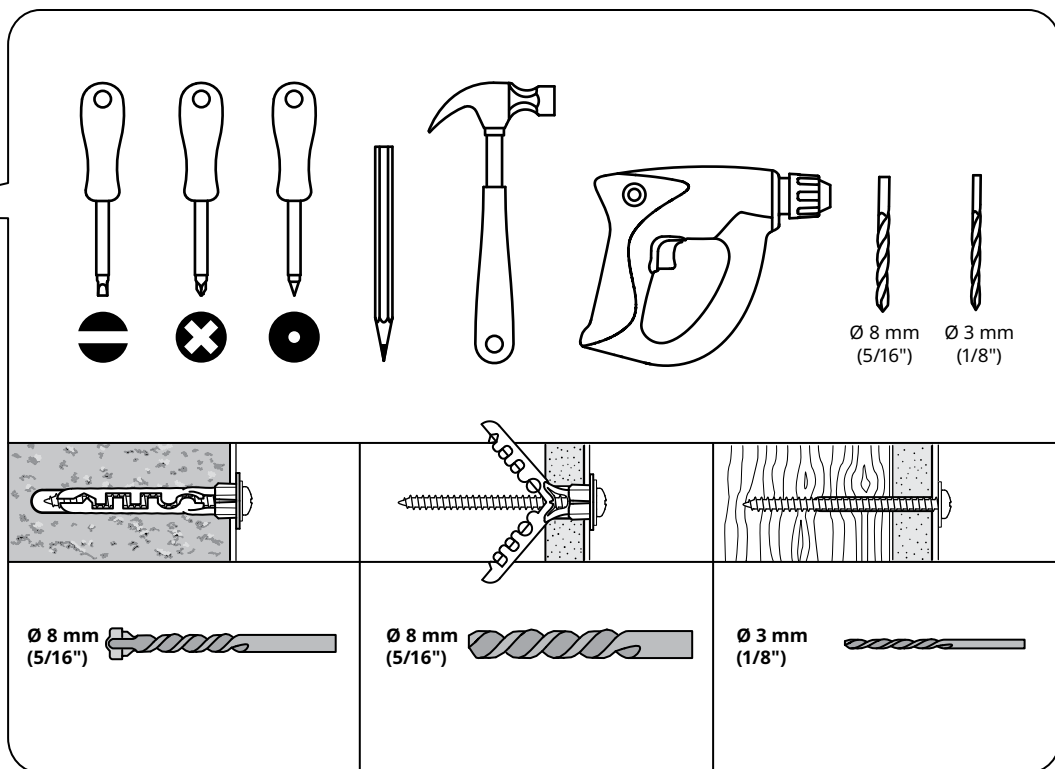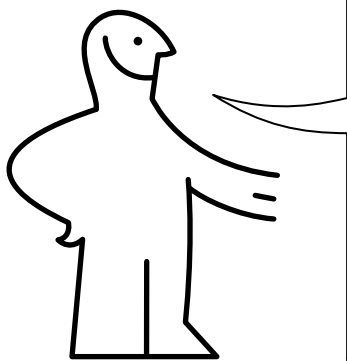


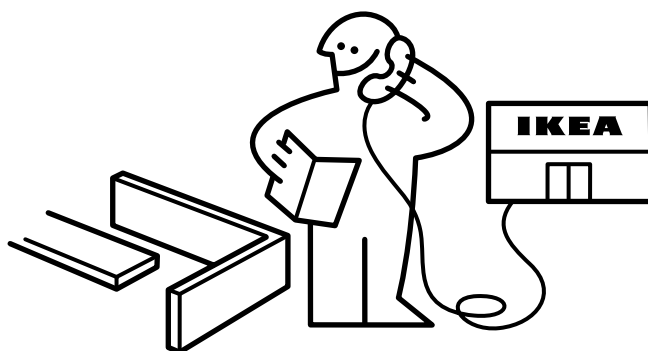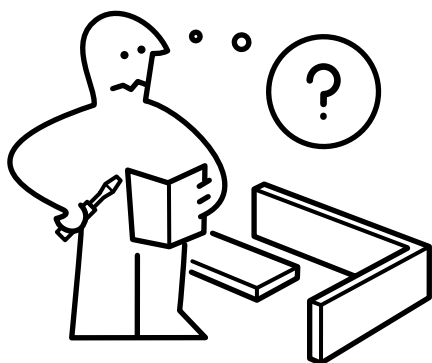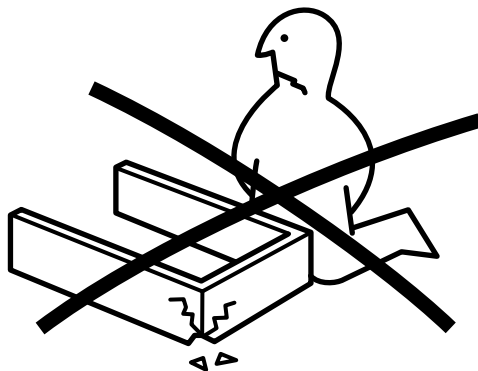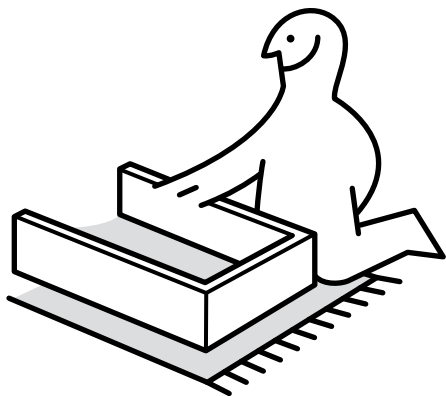


2x



 
2x



2x

 


4x

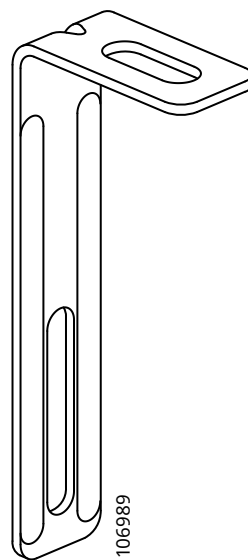 

2x

371505

 
1



3x



 18x

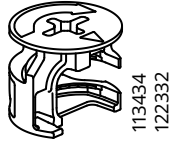

18x



15x



12x

 


4x

2




8x

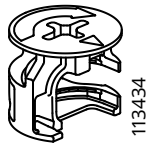

8x



 
8x




8x



 
8x

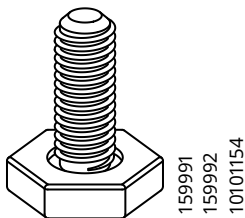

2x

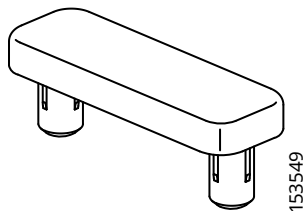 

2x

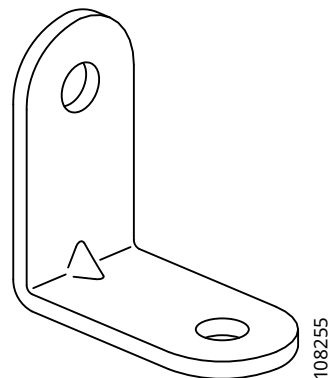 


4x

3




194867

 6x




10091382

 6x




123492

 12x

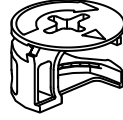


110630

 12x




10095420

 12x

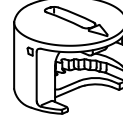


119030

 12x




101345

 10x

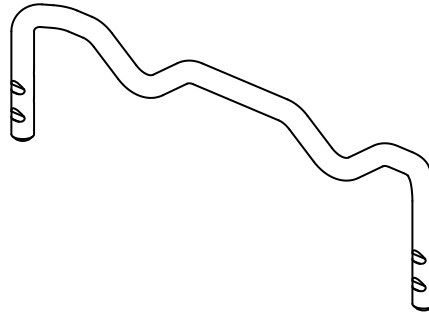

10040242

 6x

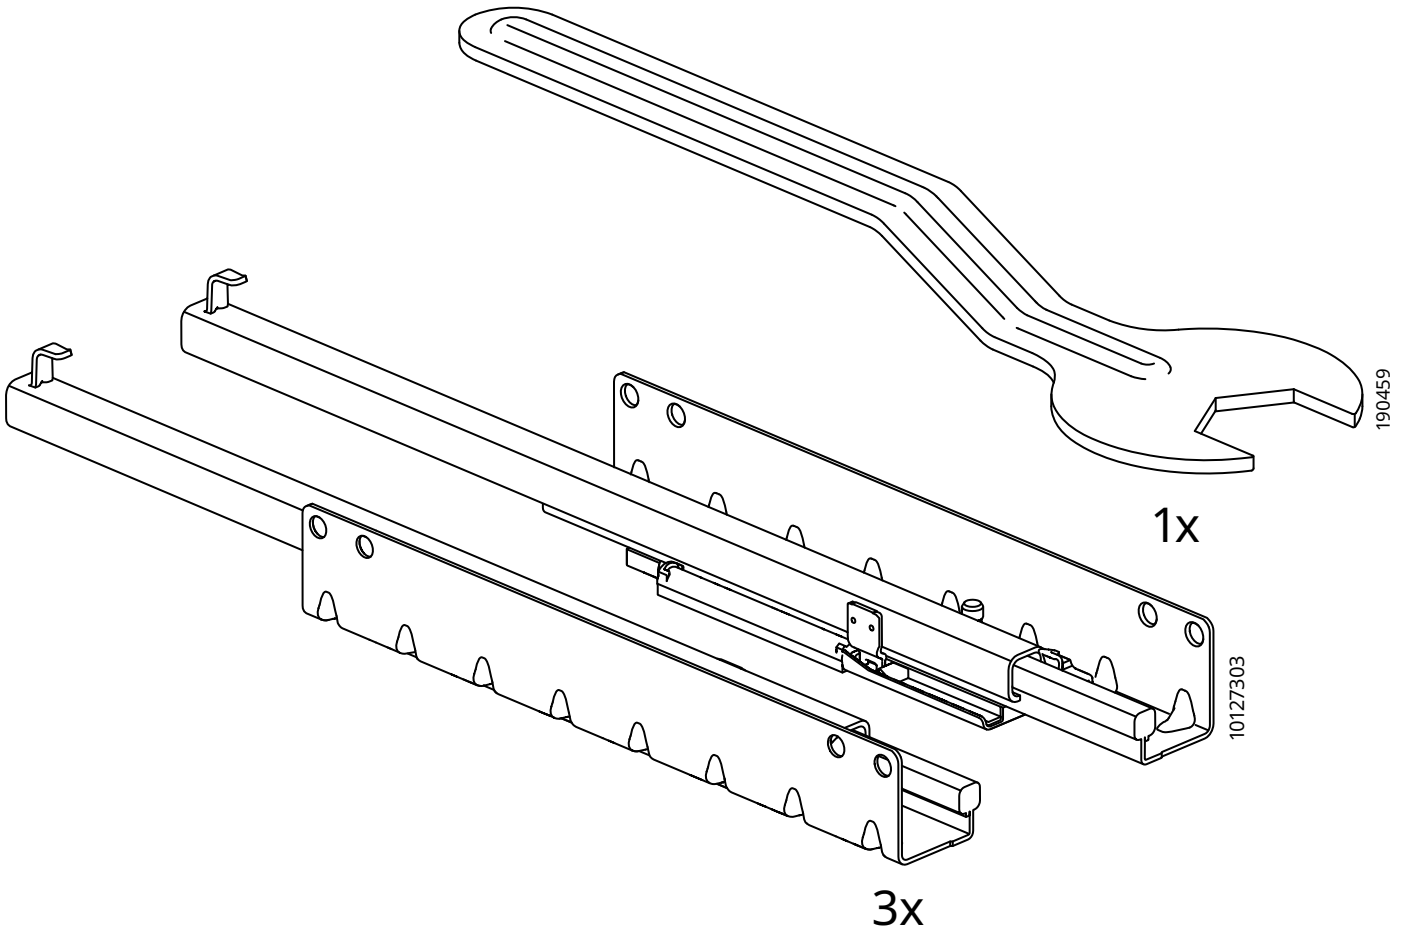


190459

1x


10127303

3x

 
1

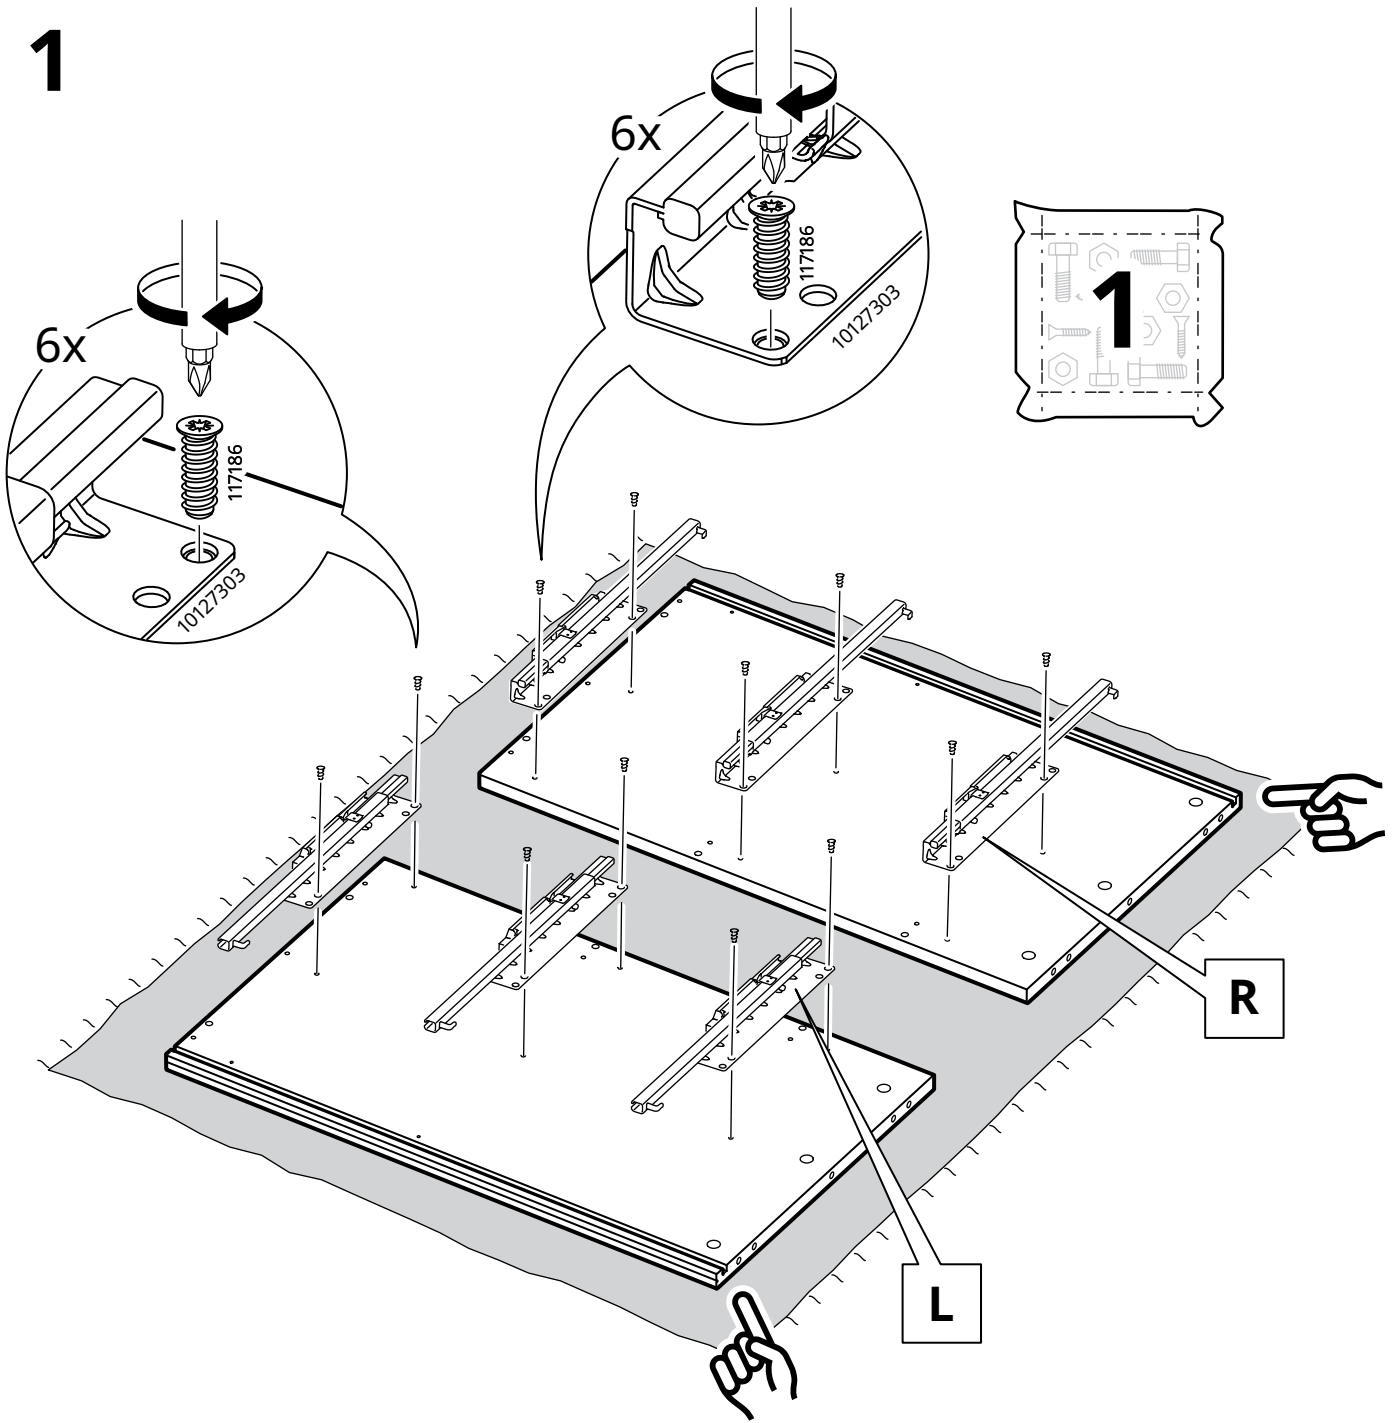


2

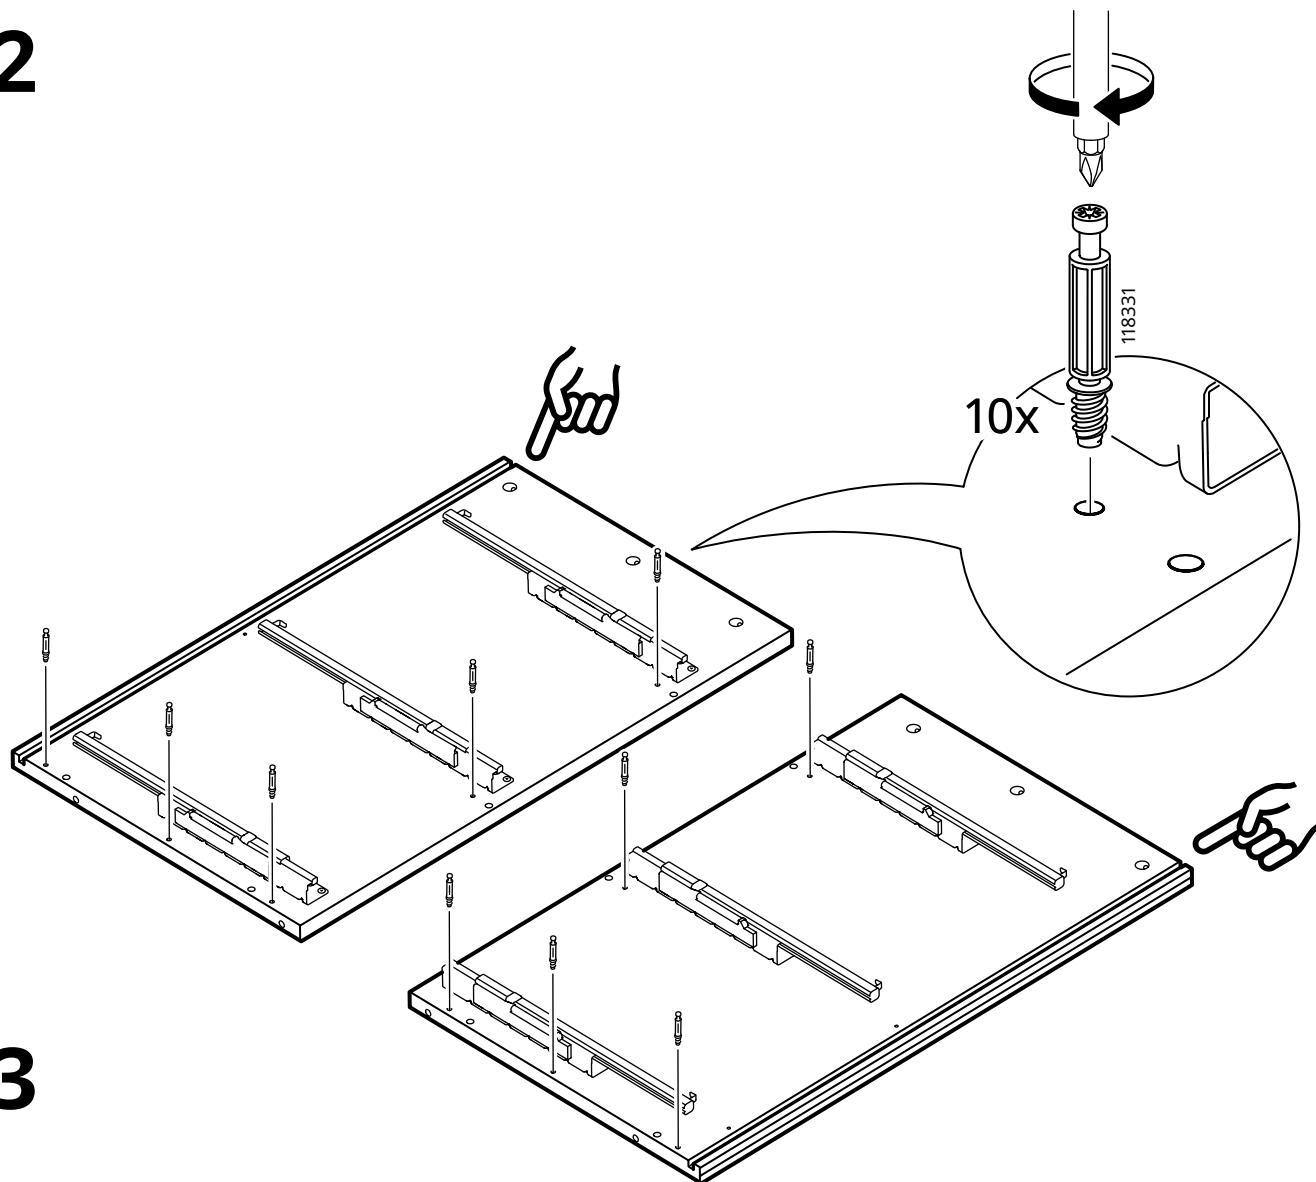 


3

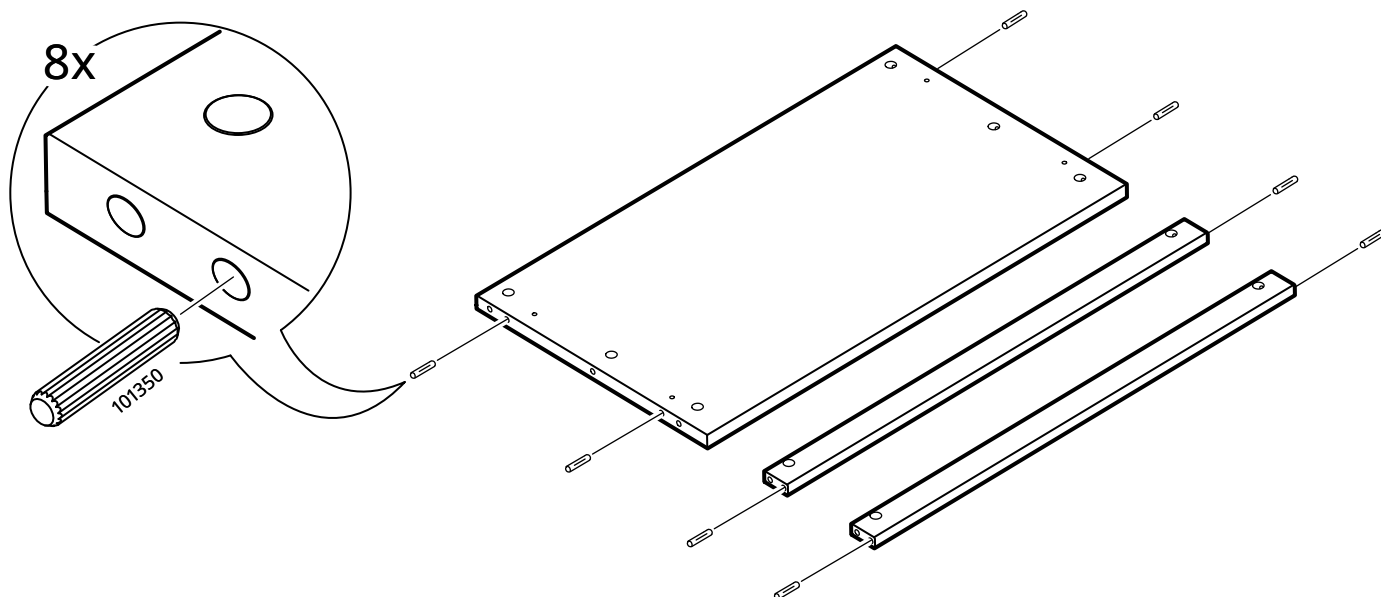 


4

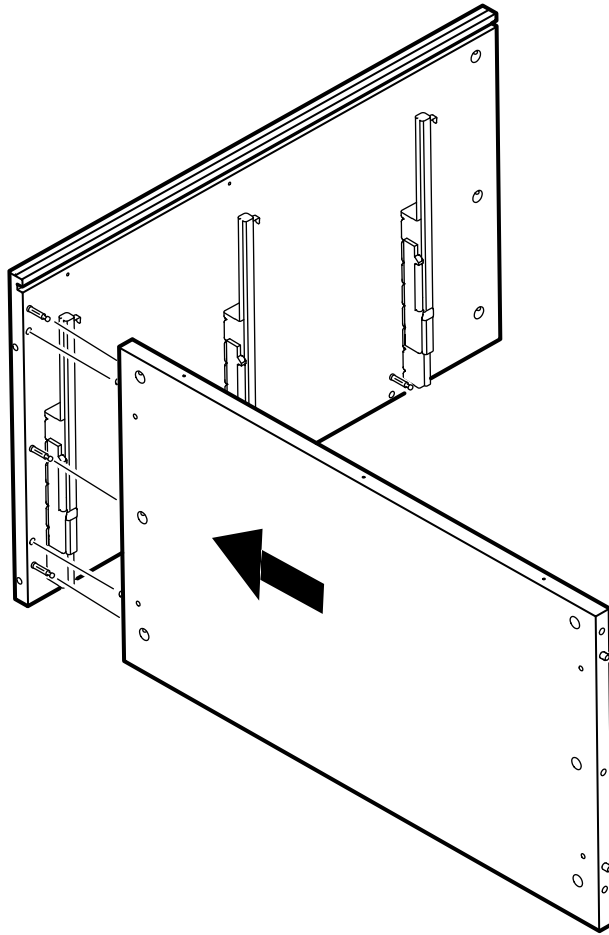 


5

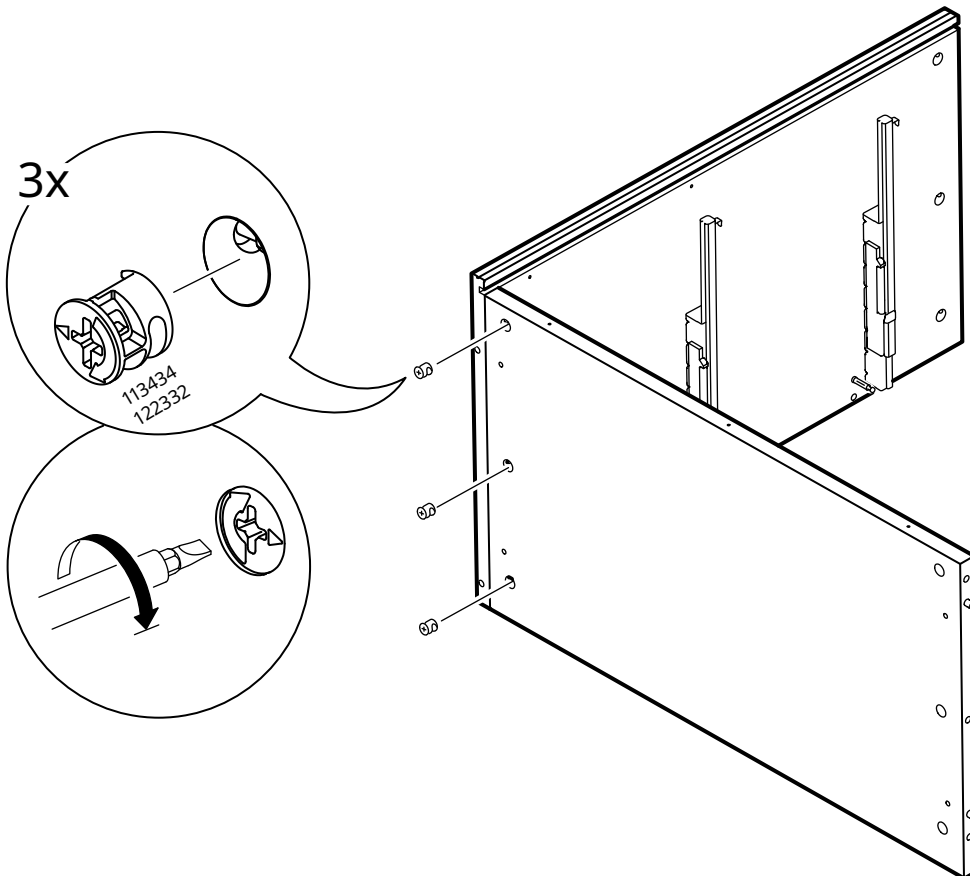 


6

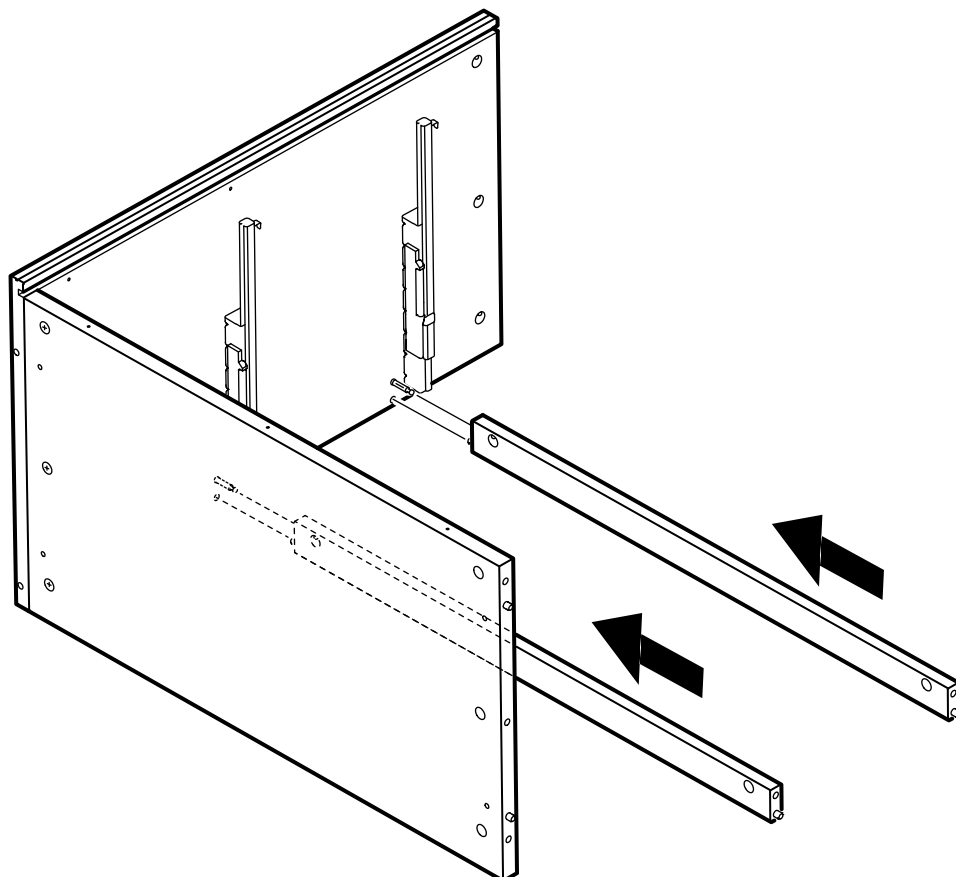 


7

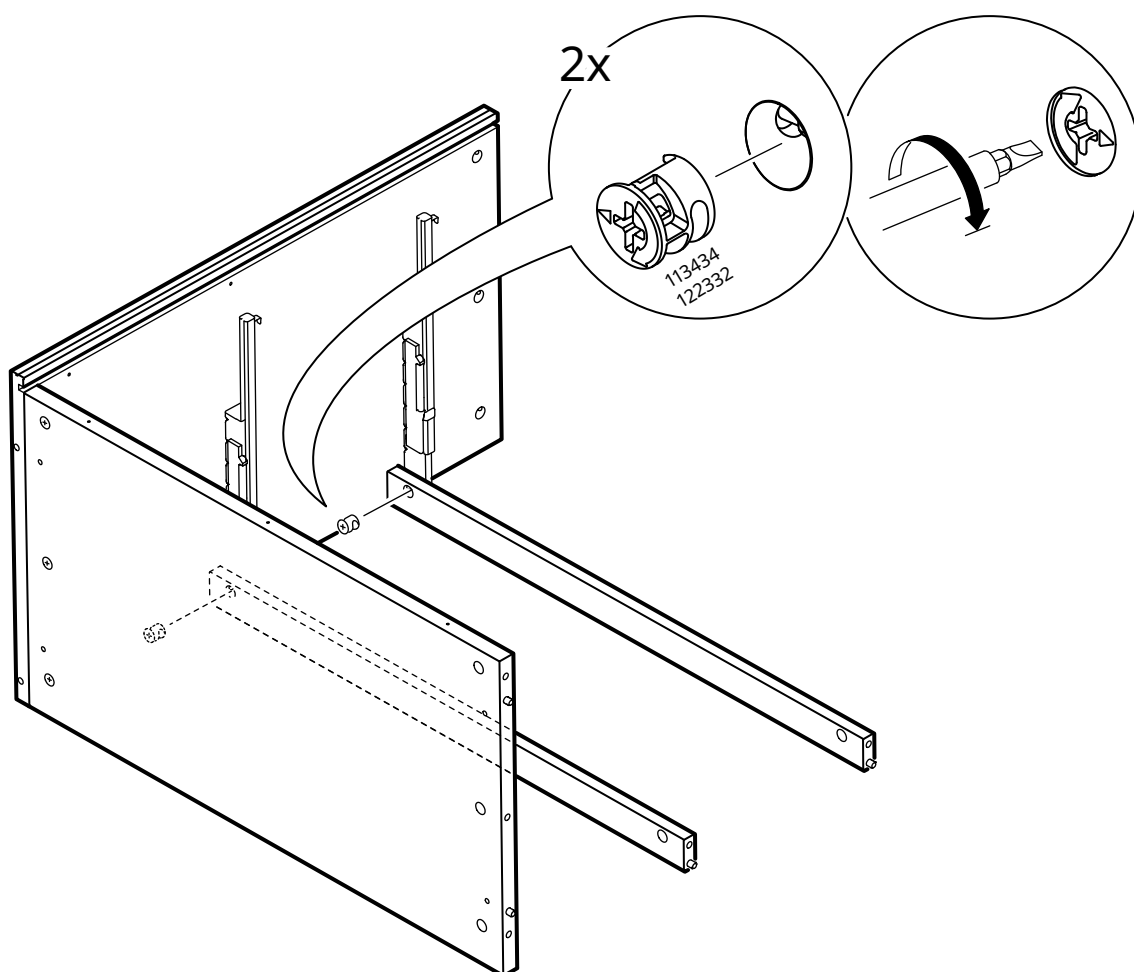 


8

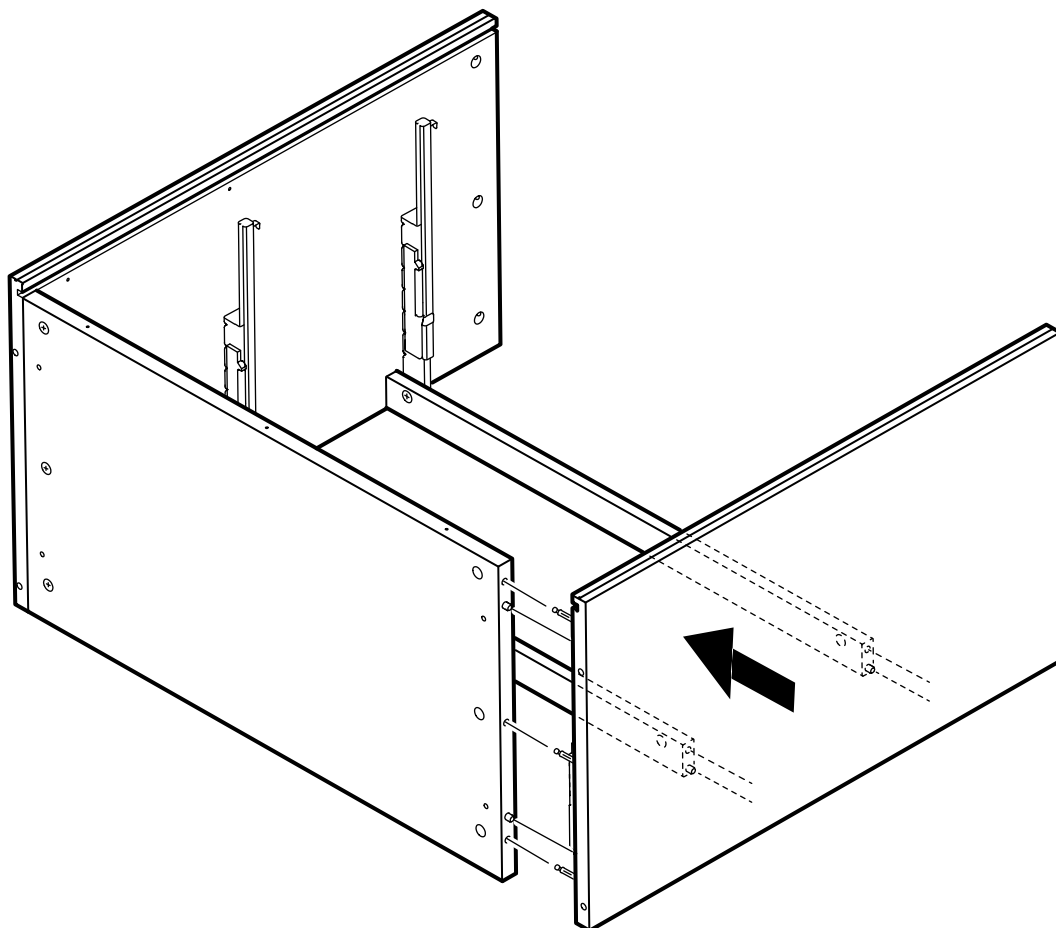 


9

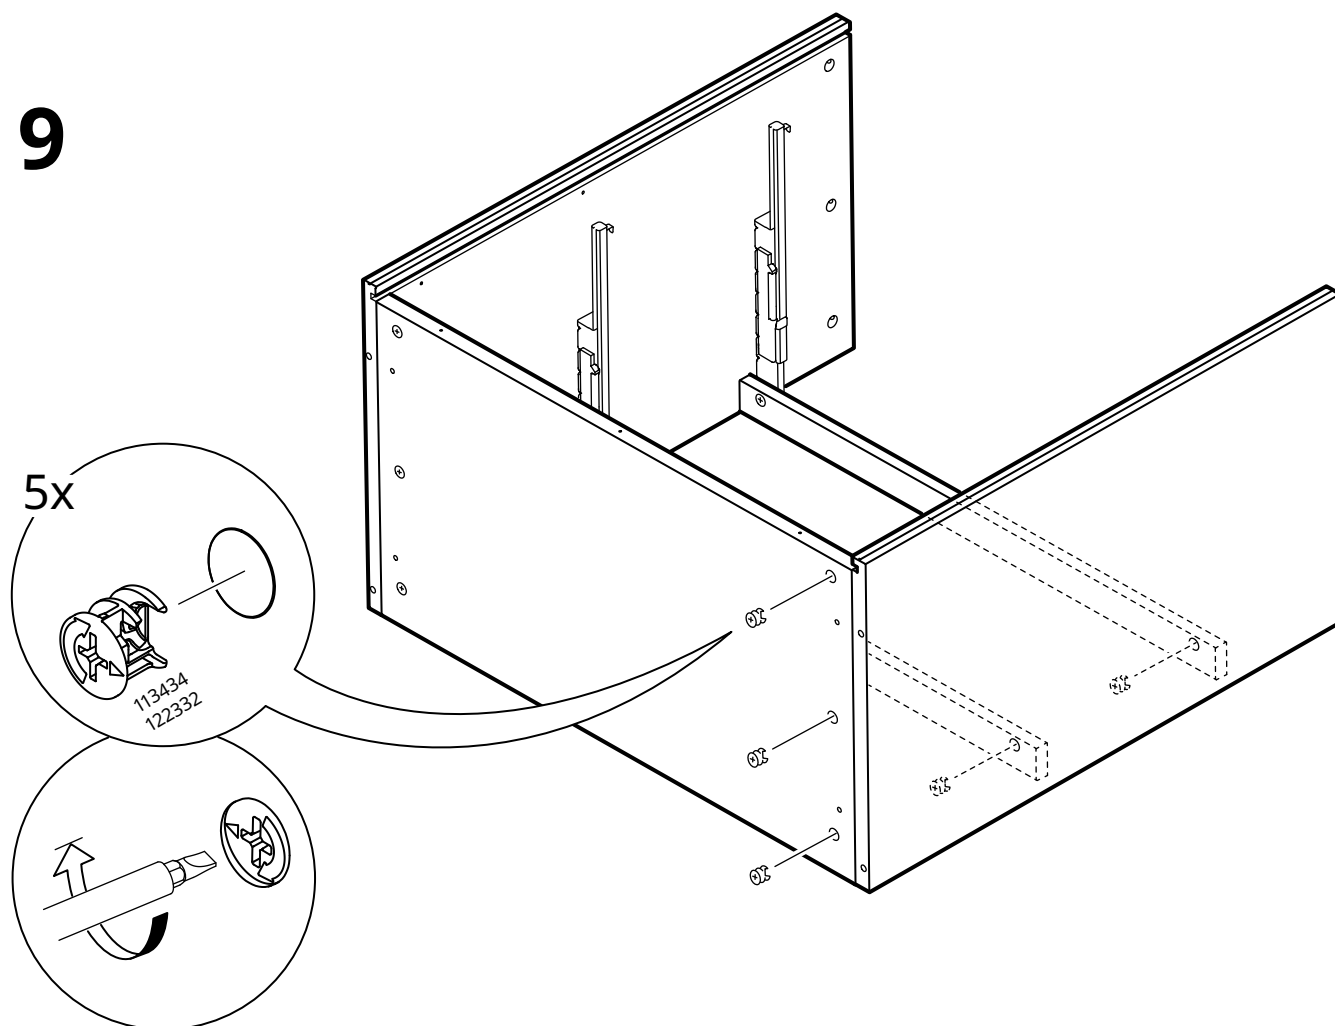 


10

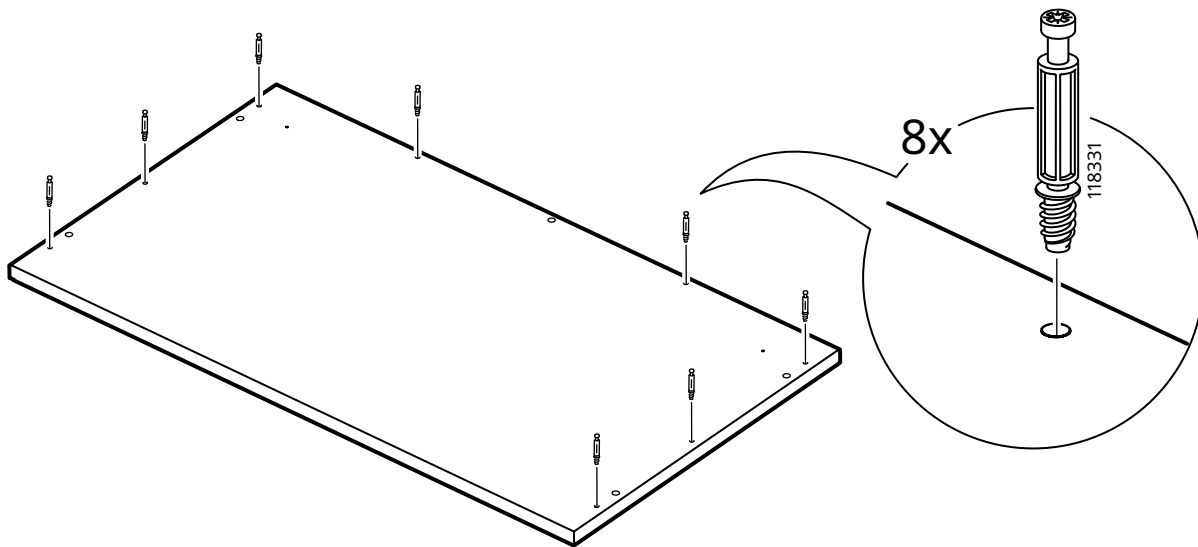 


11

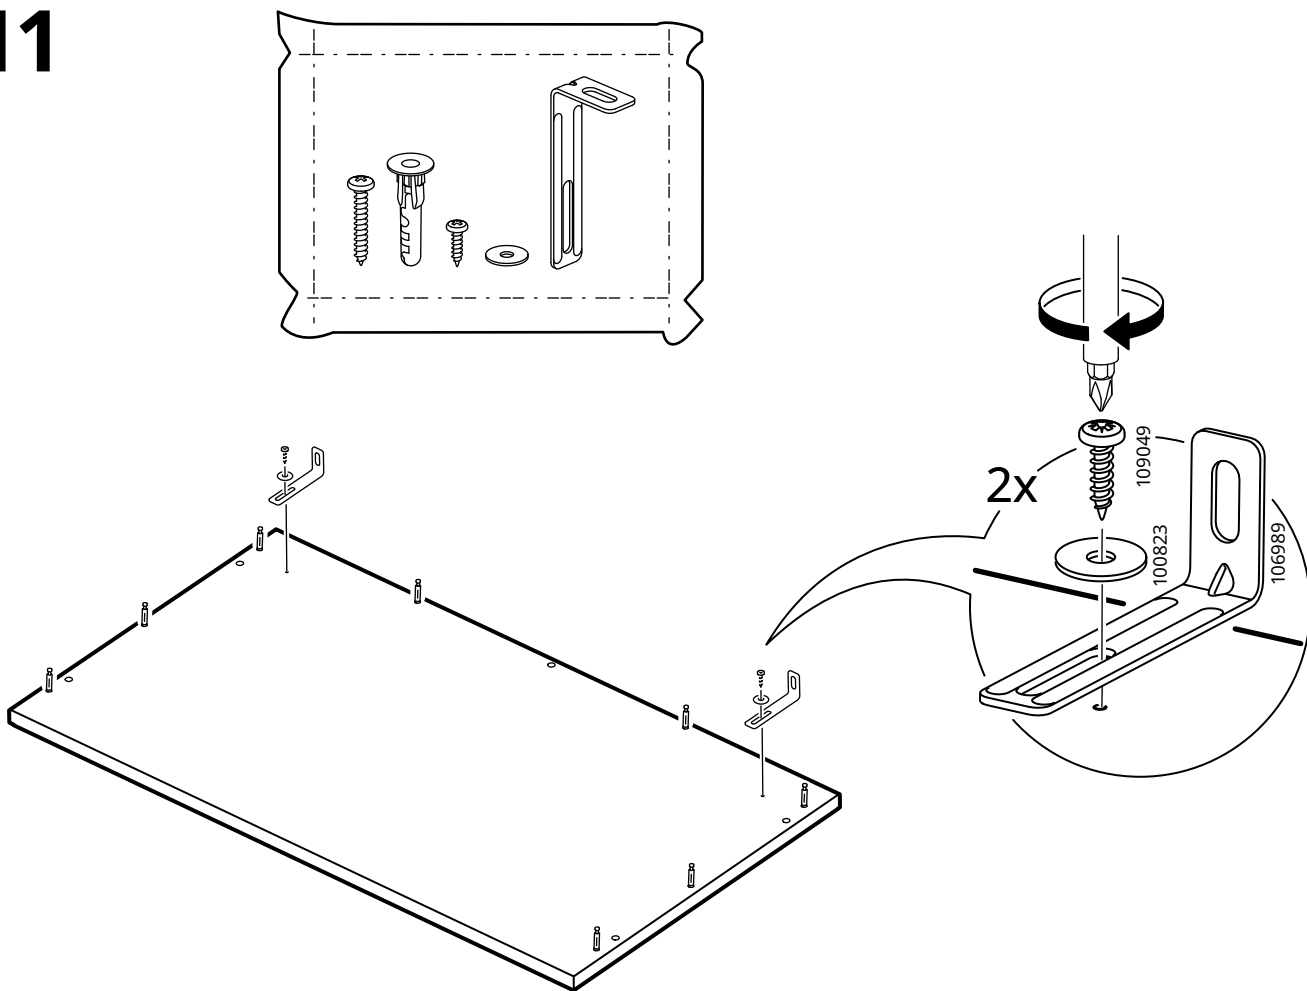 


12

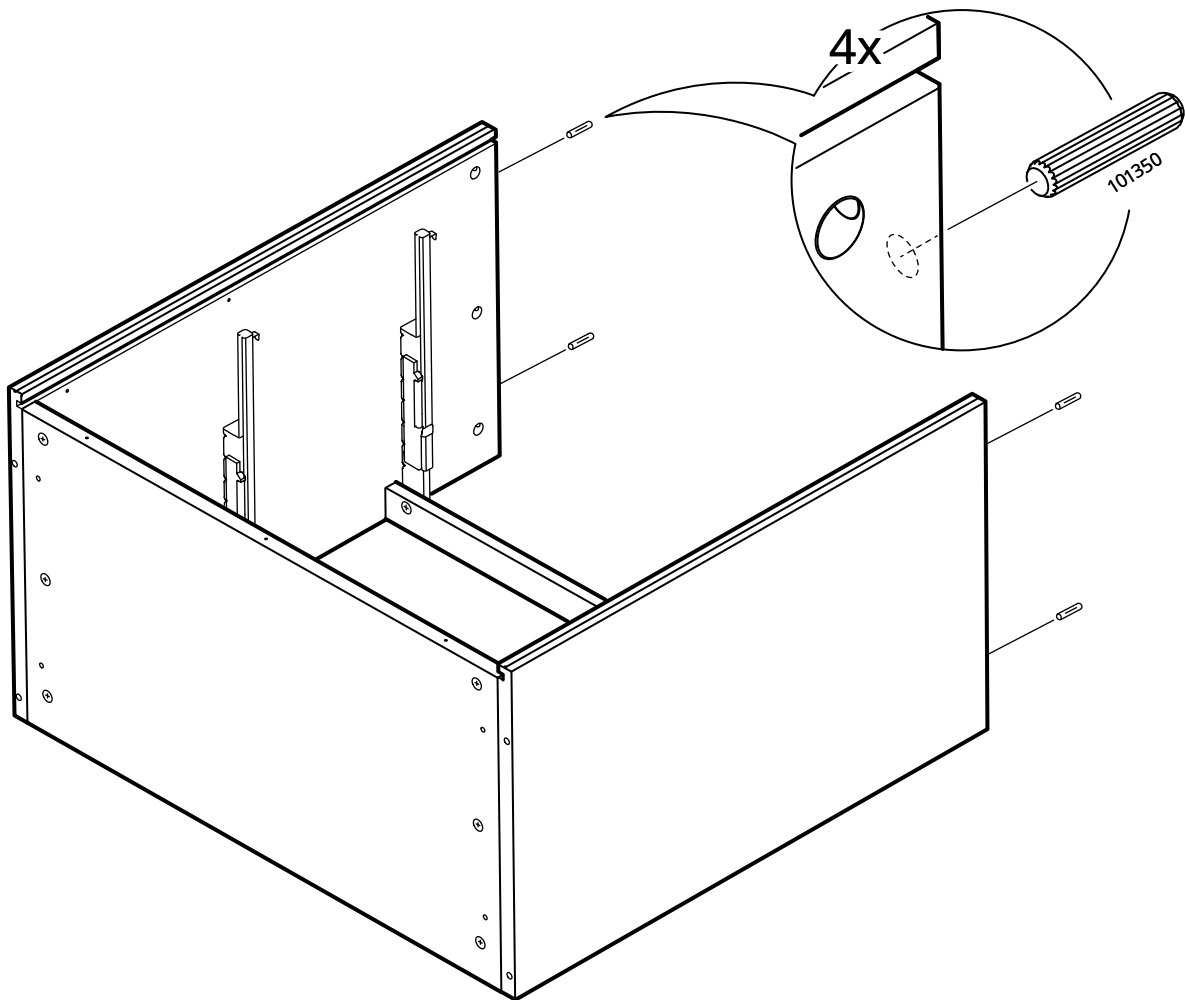 


13

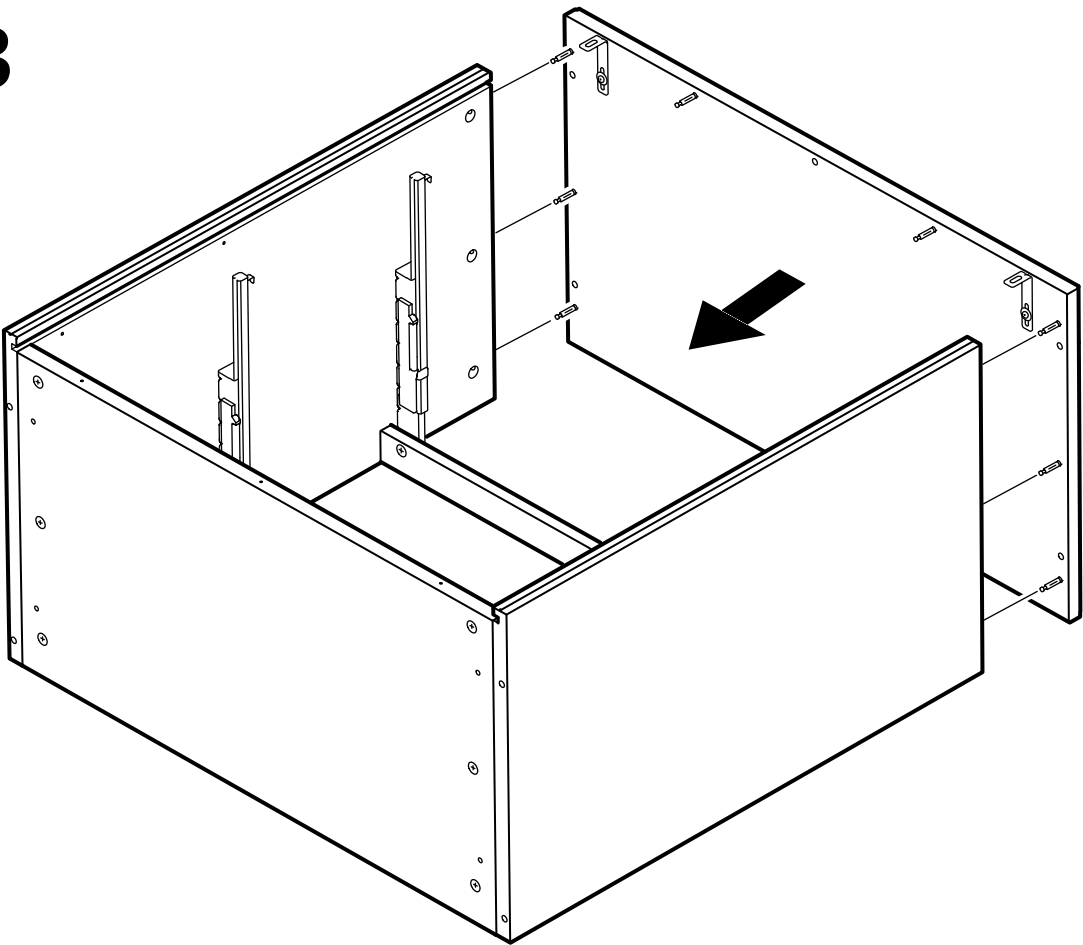 


14

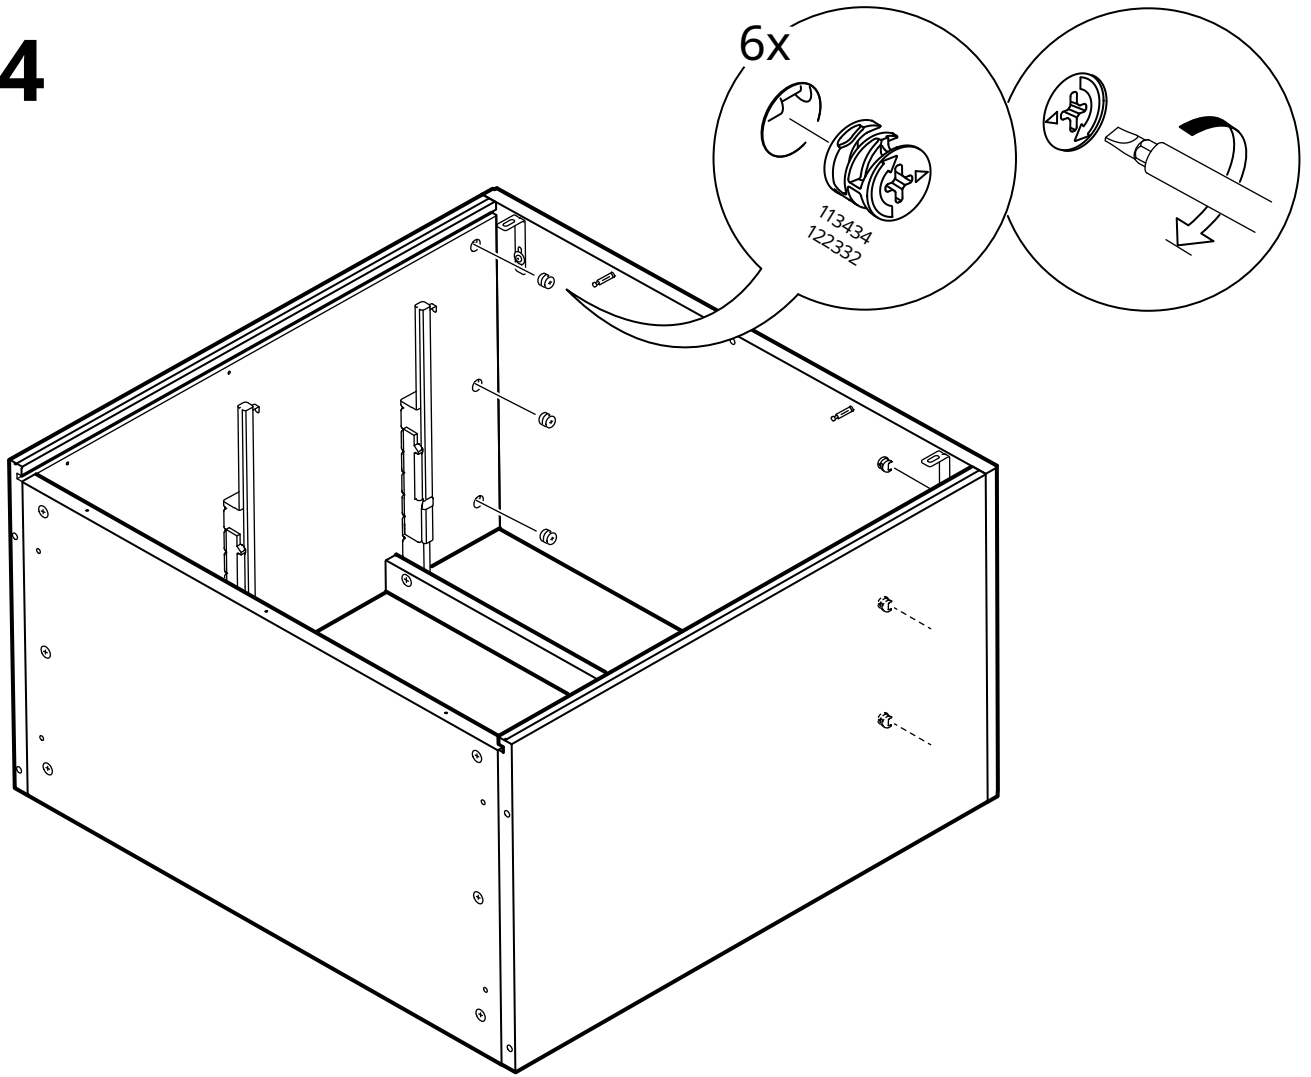 


15

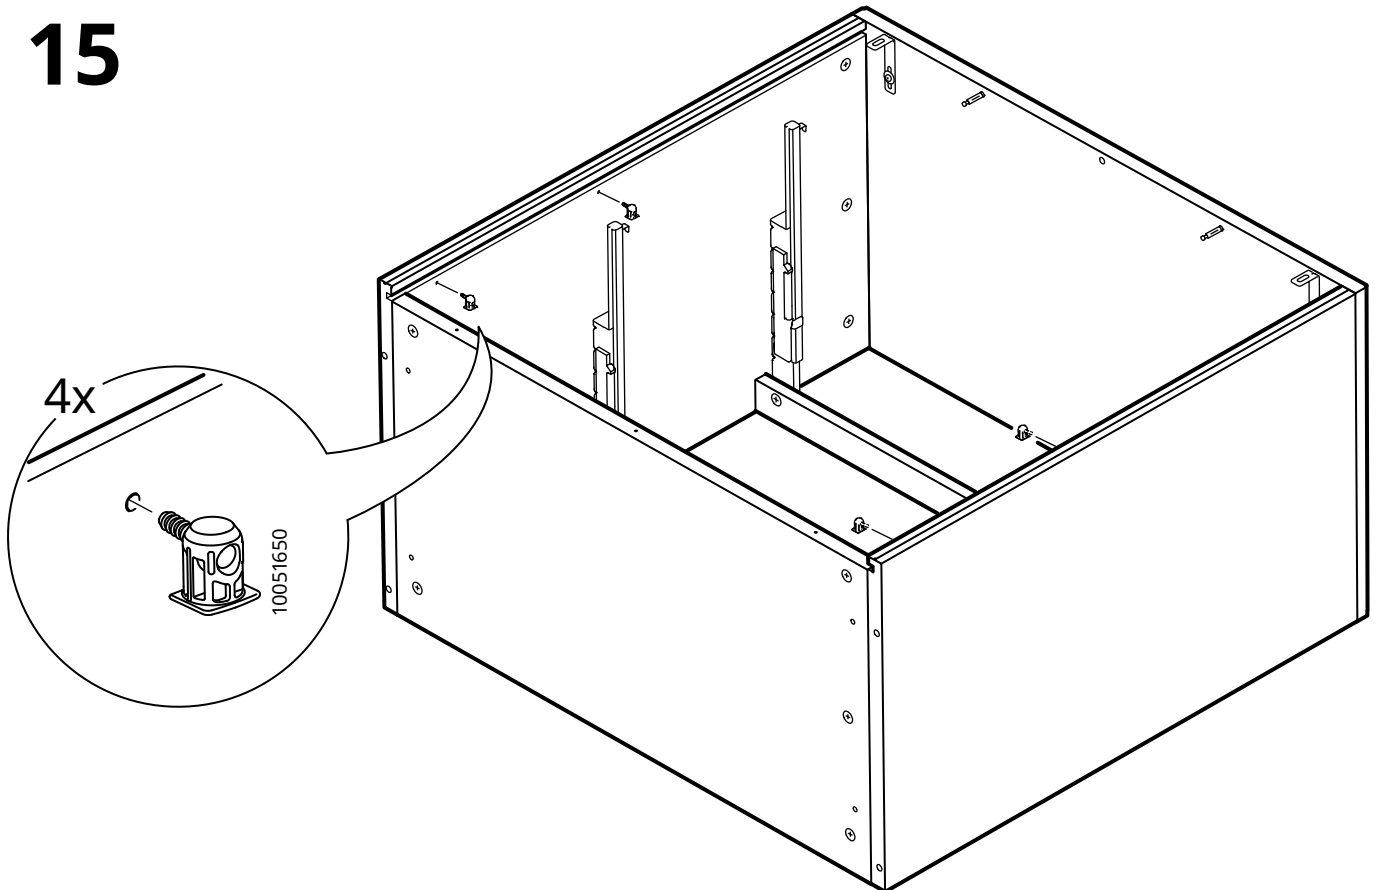 


16

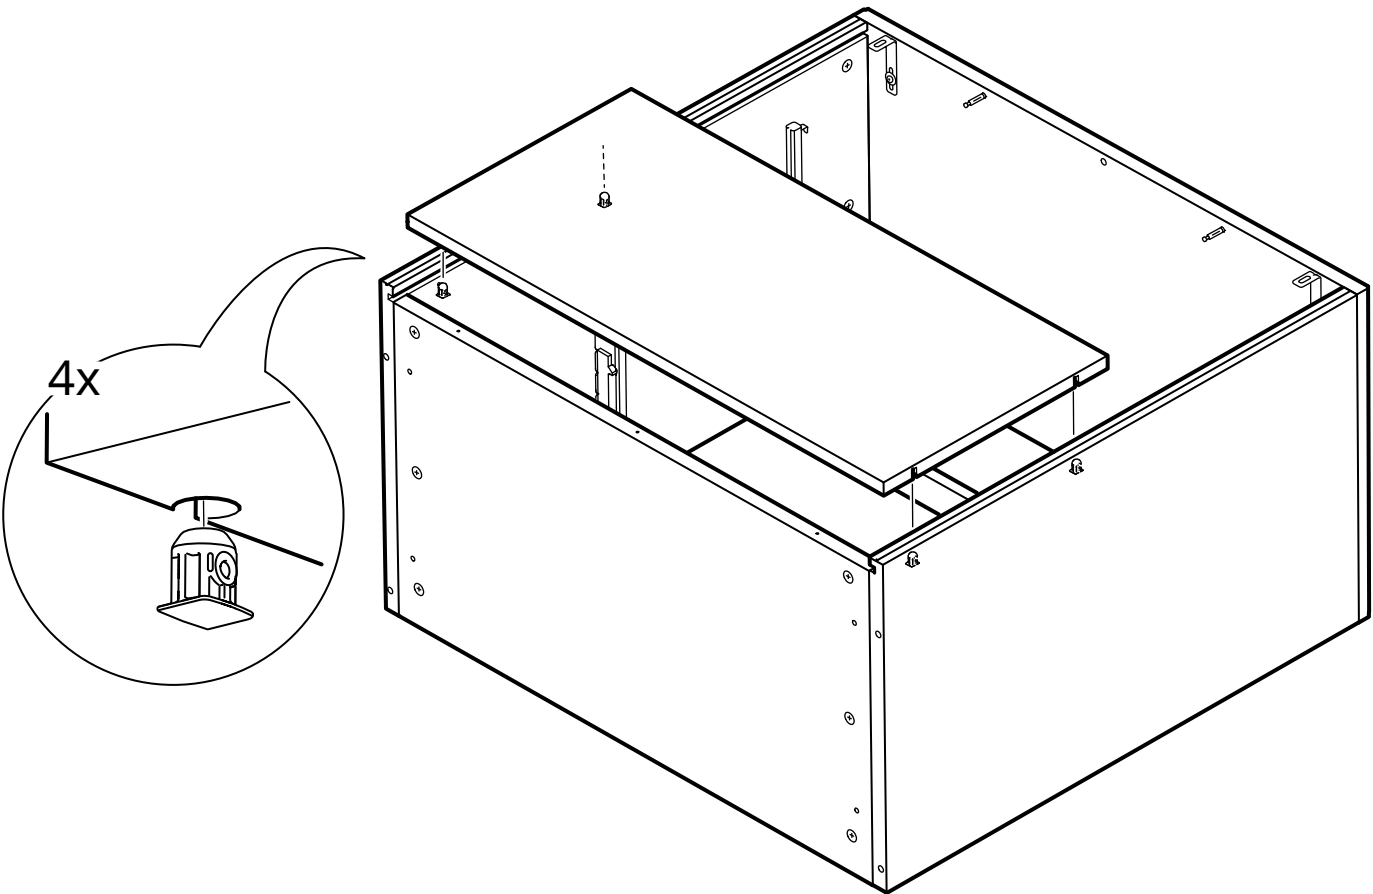 


17

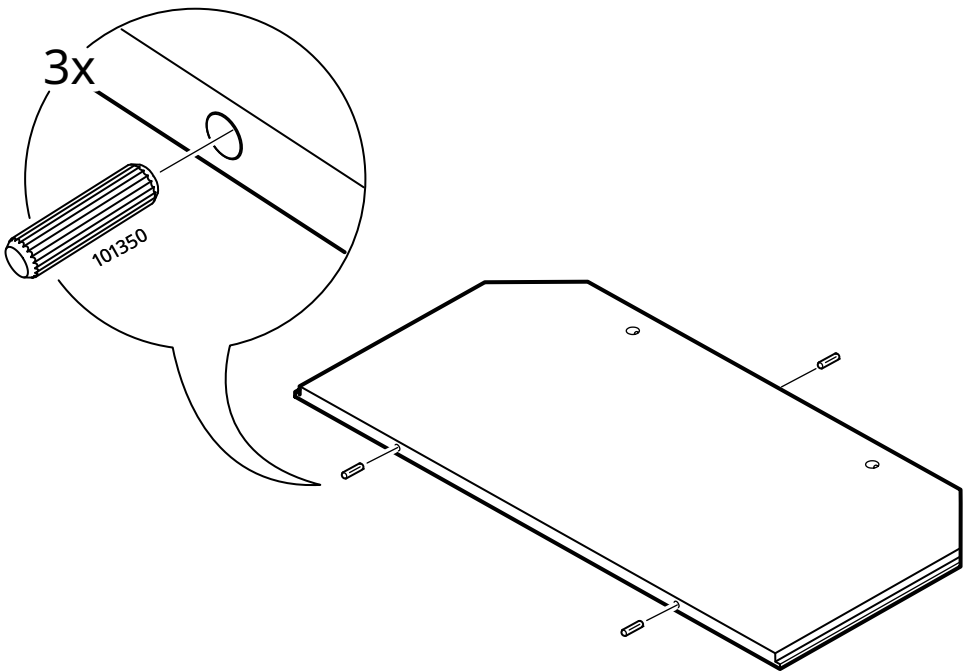 


18

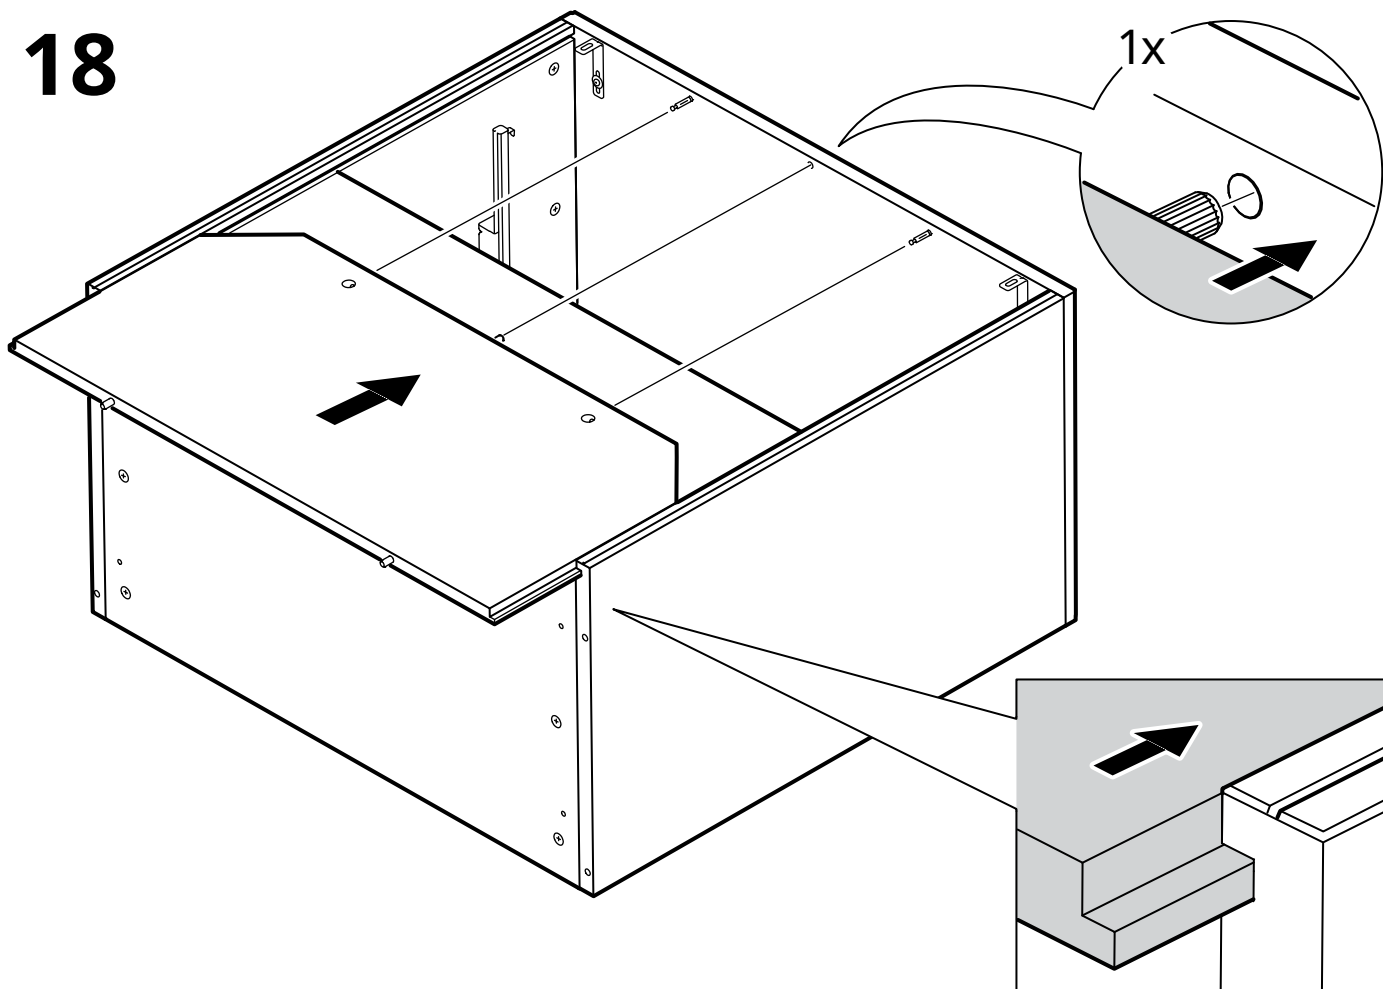 


19

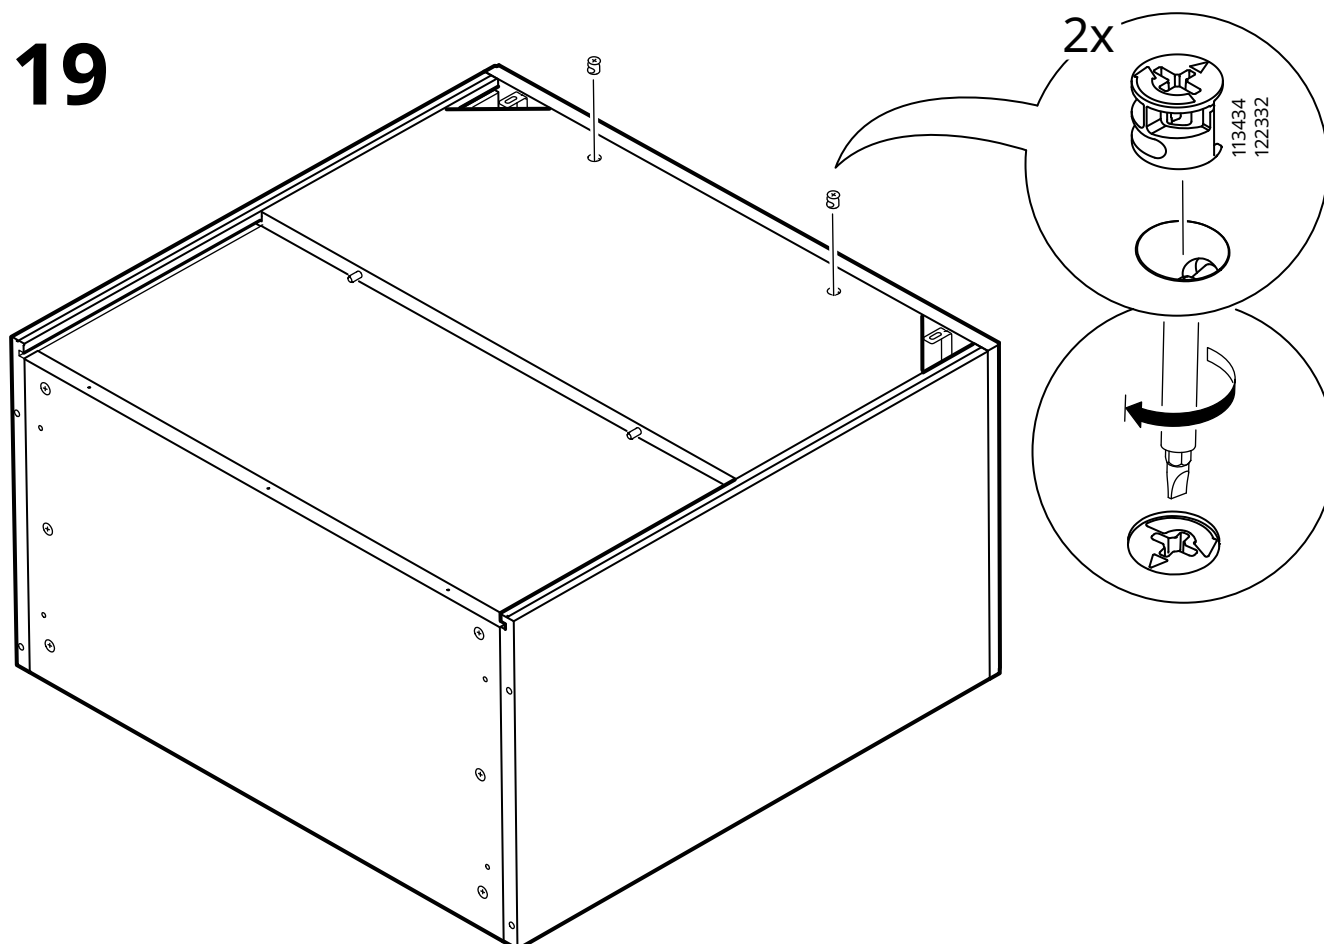 


20

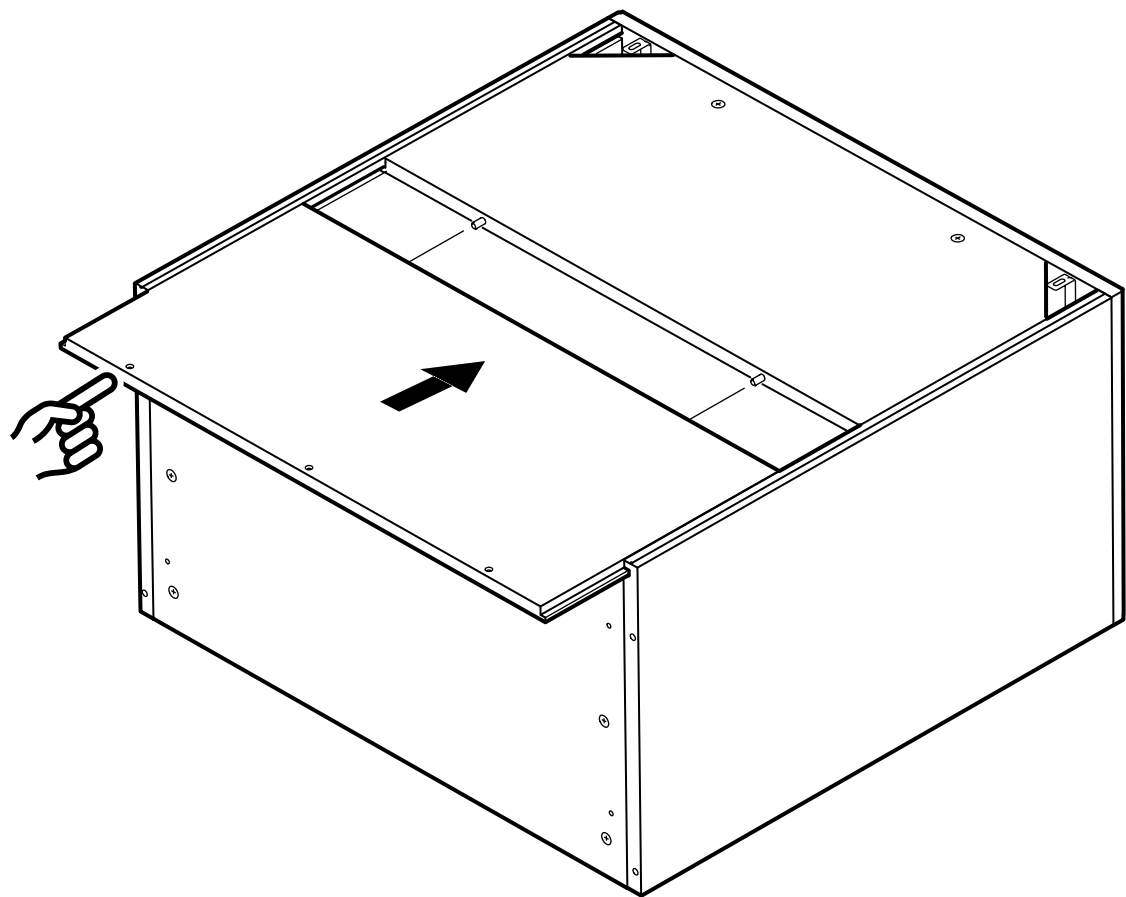 


21

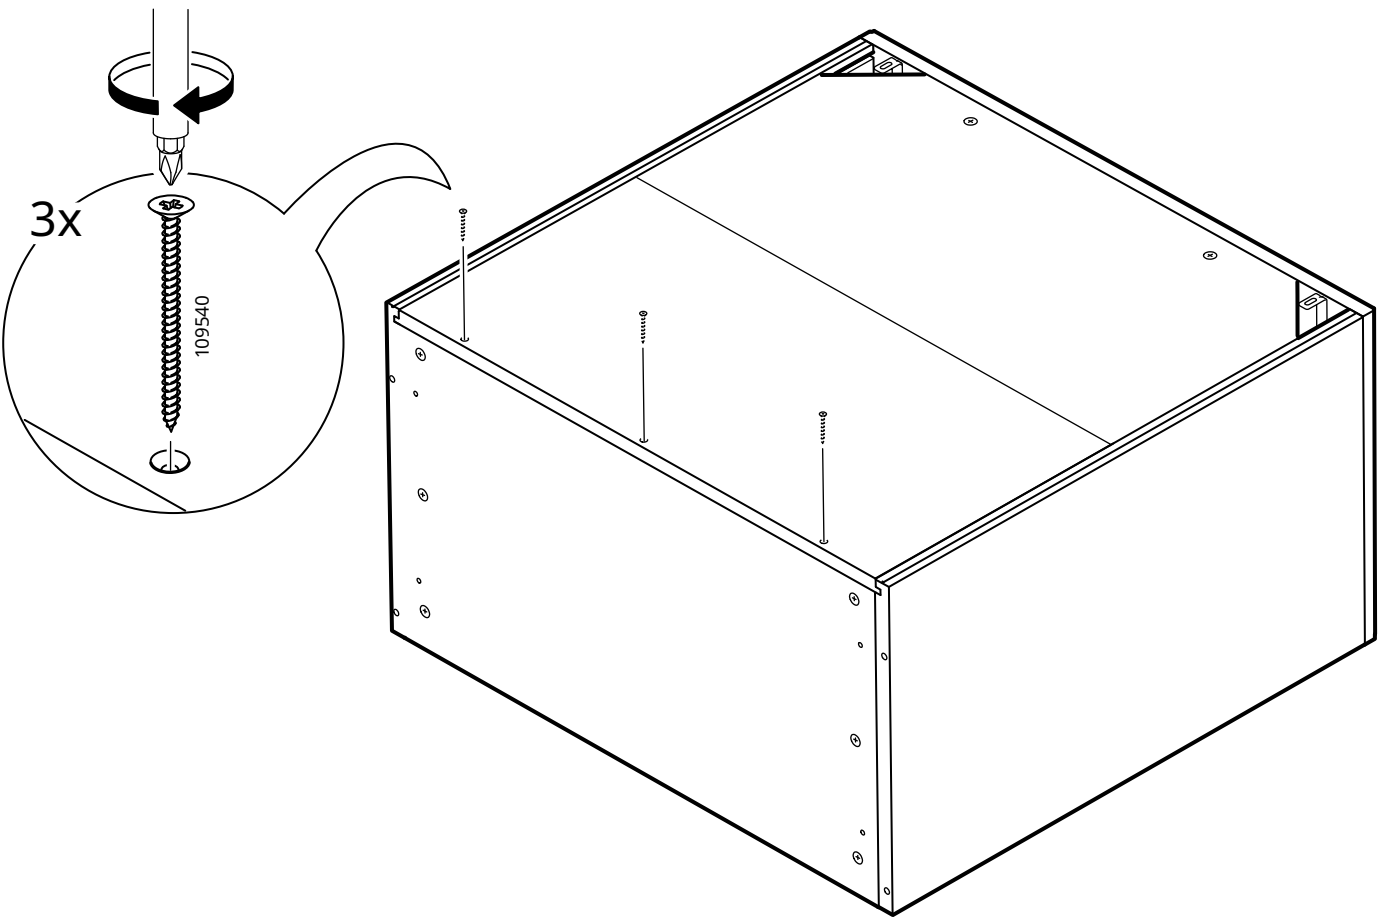 


22

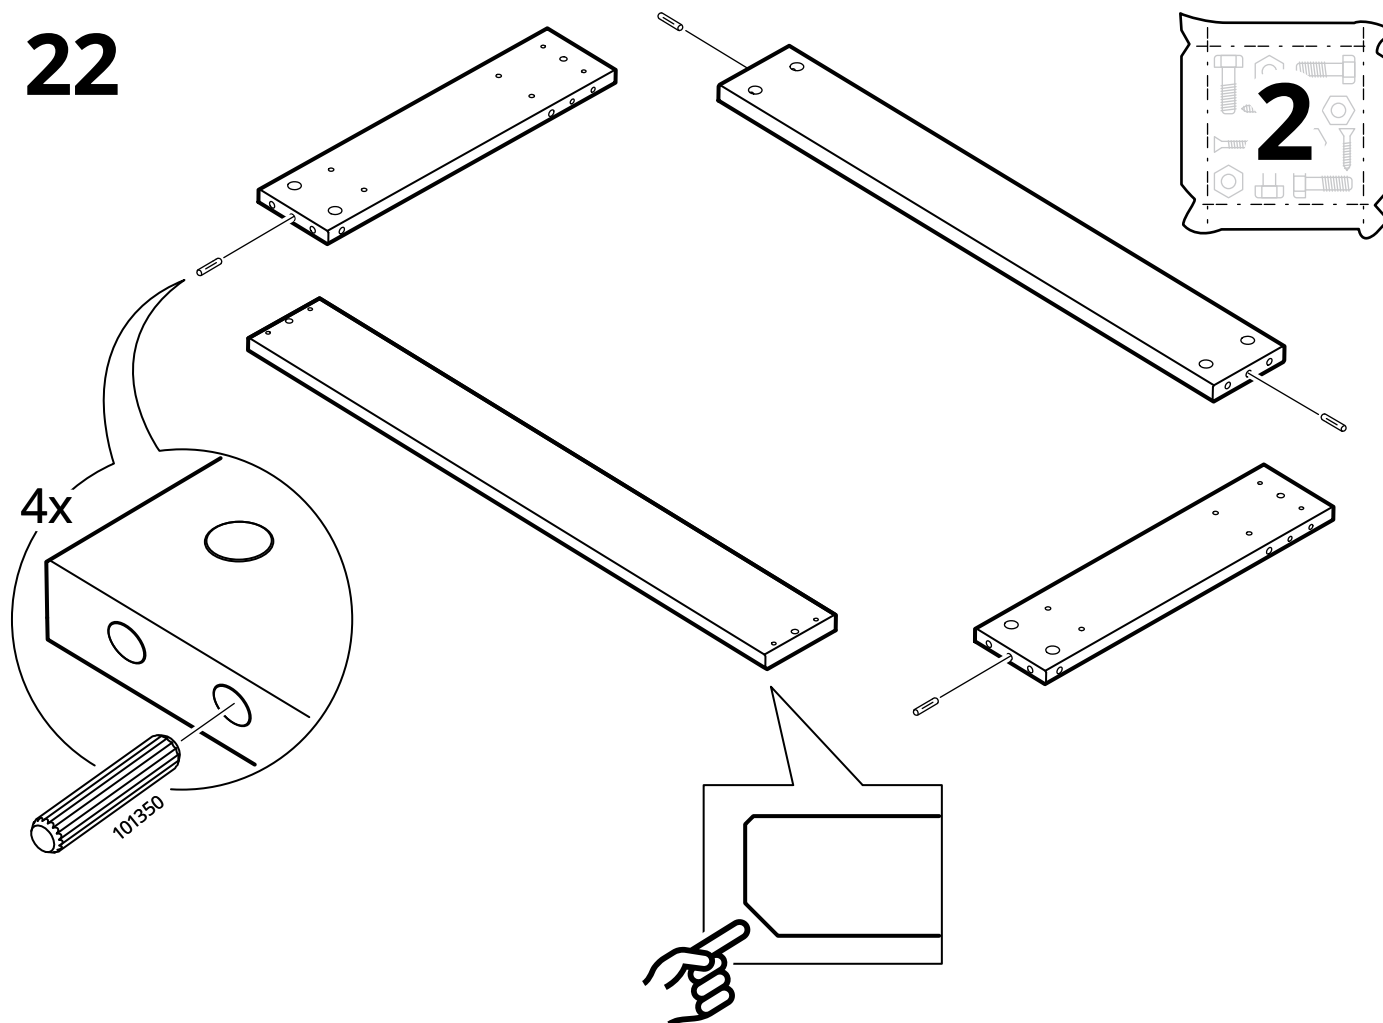 


23

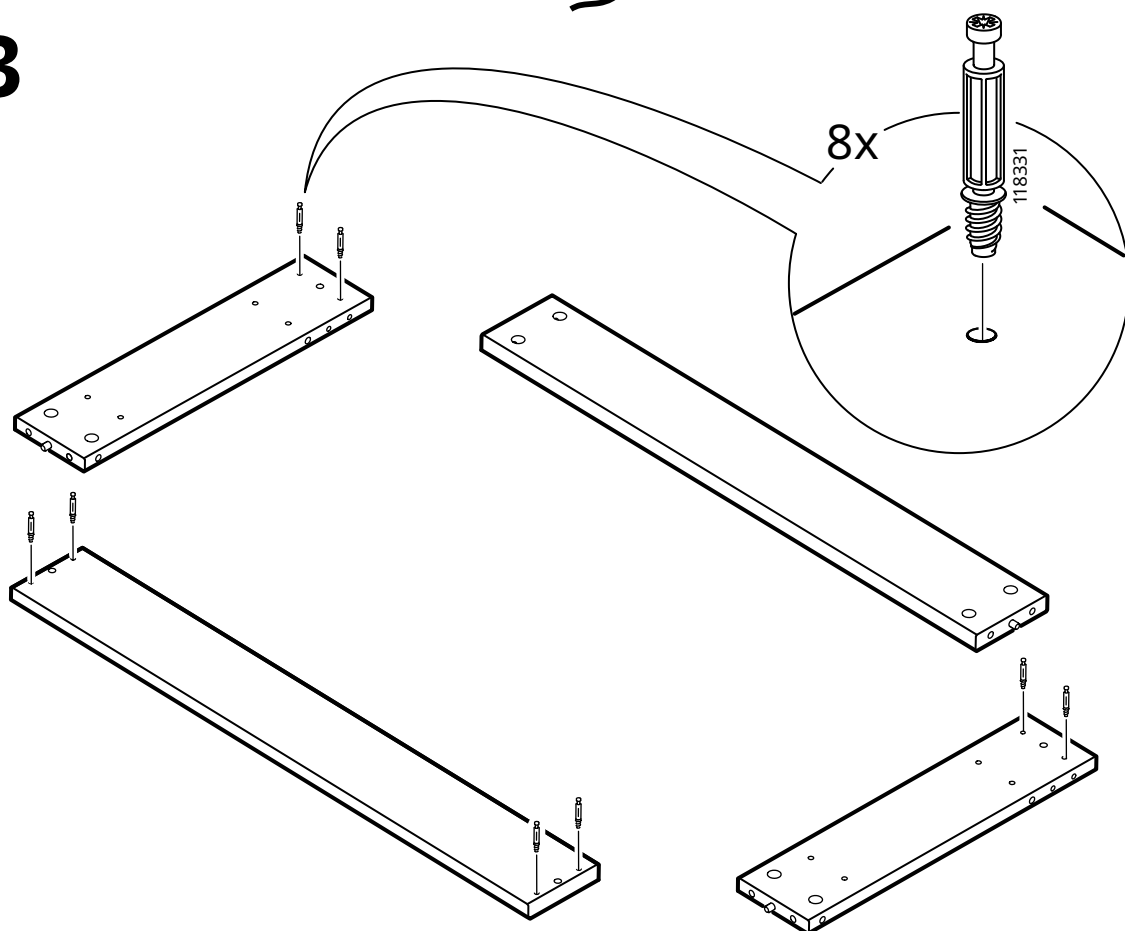 


24

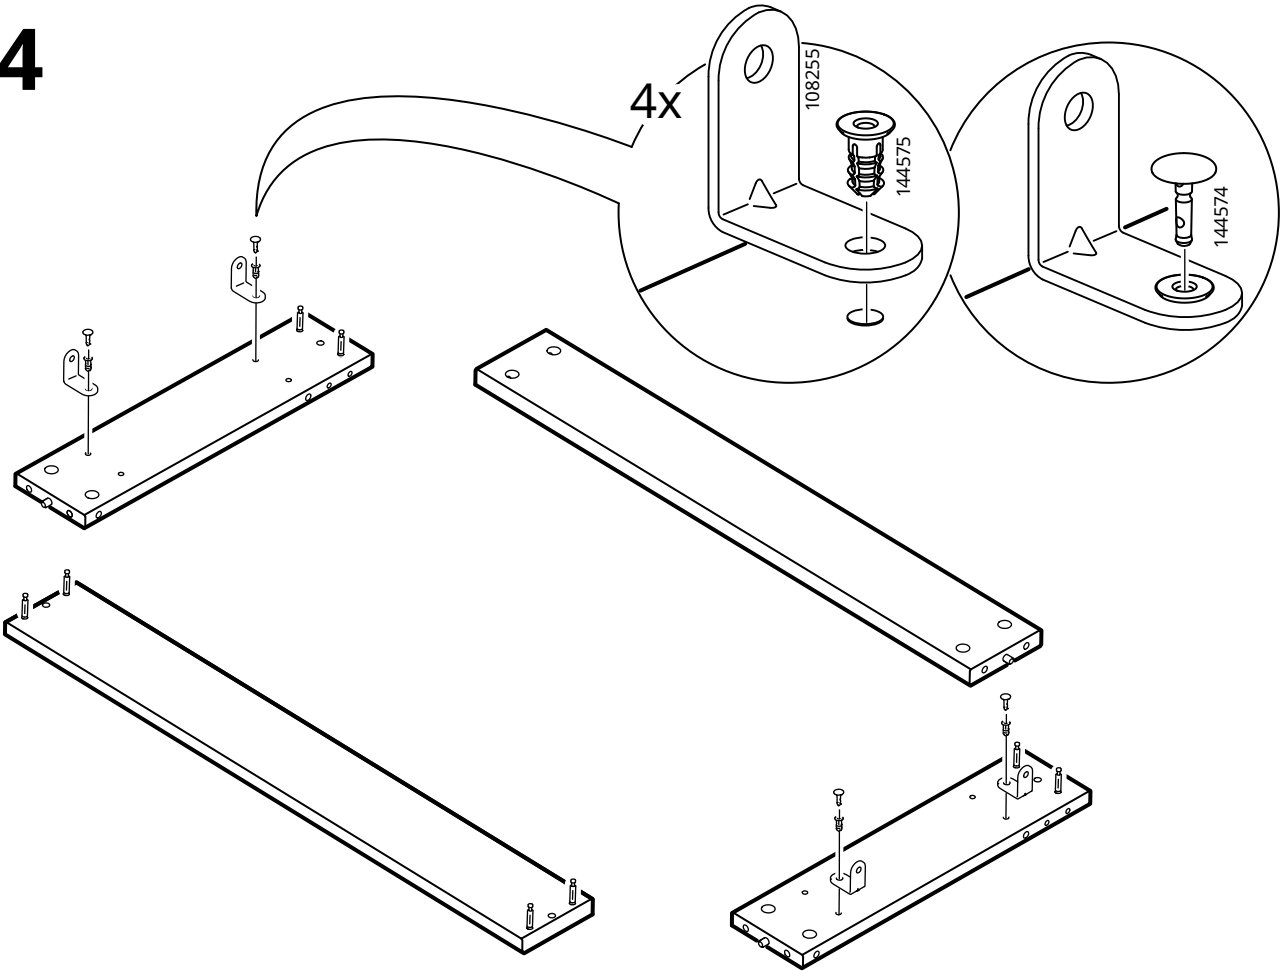 


25

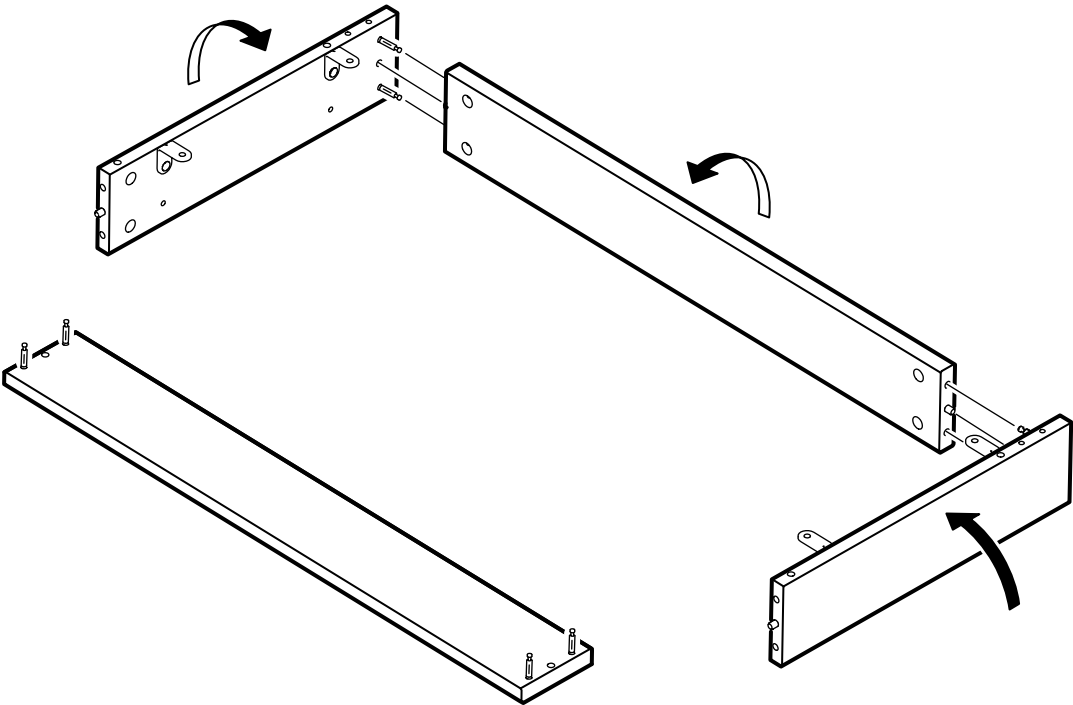 


26

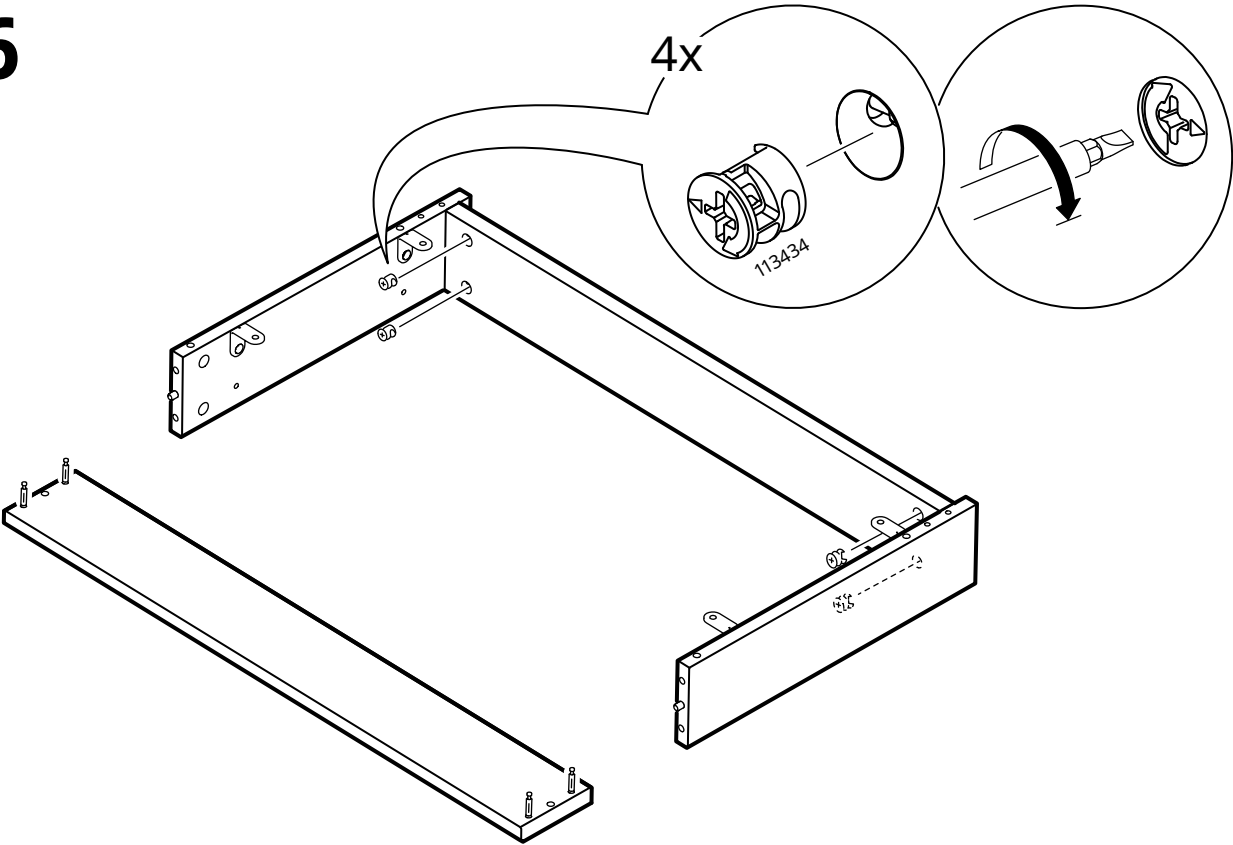 


27

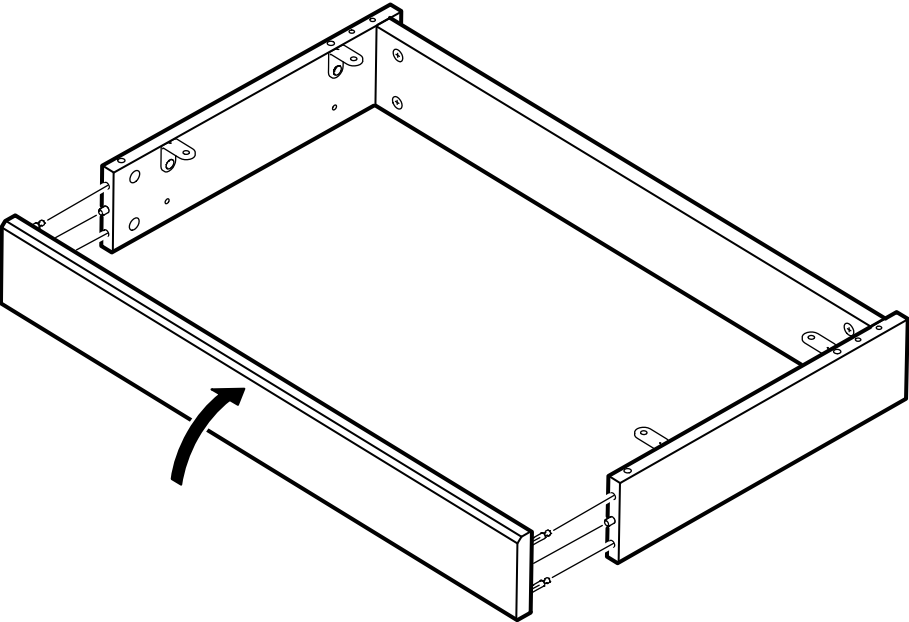 


28


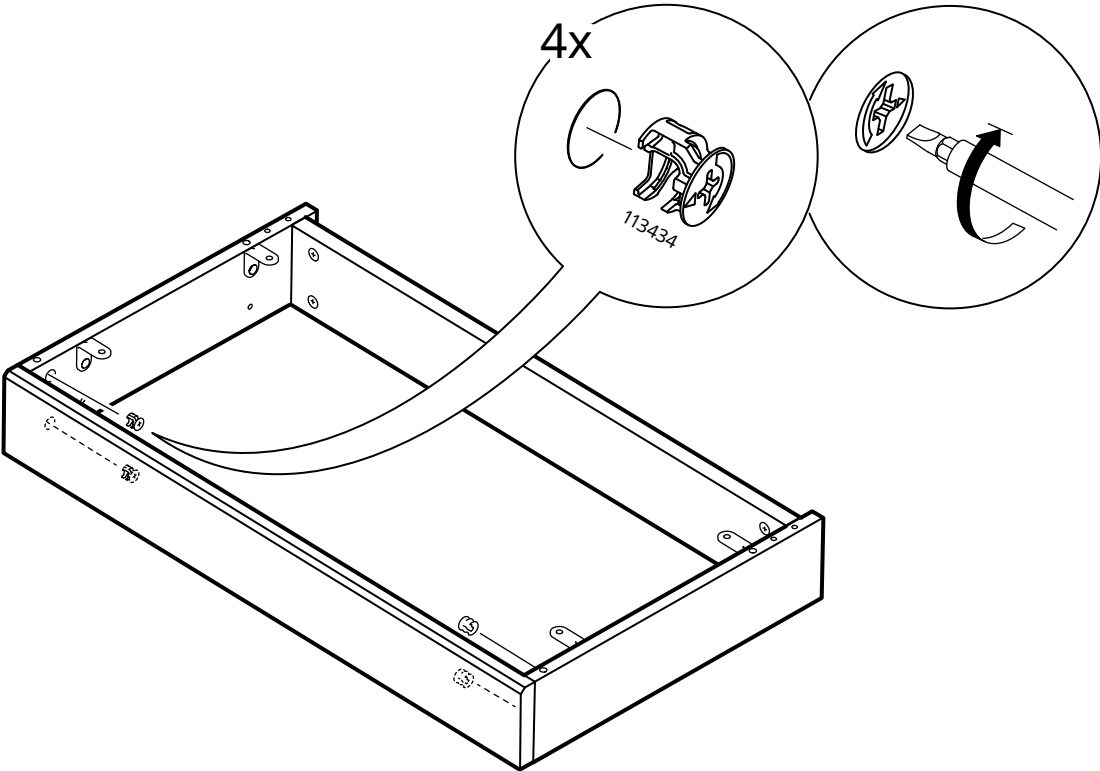 


29

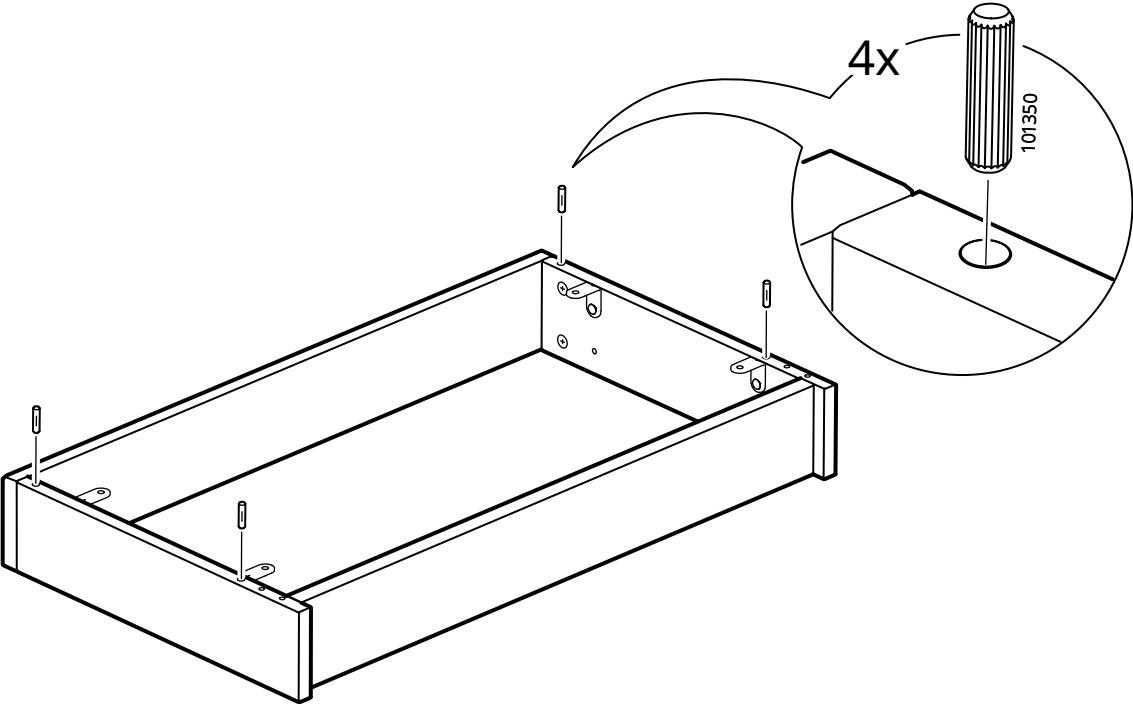 


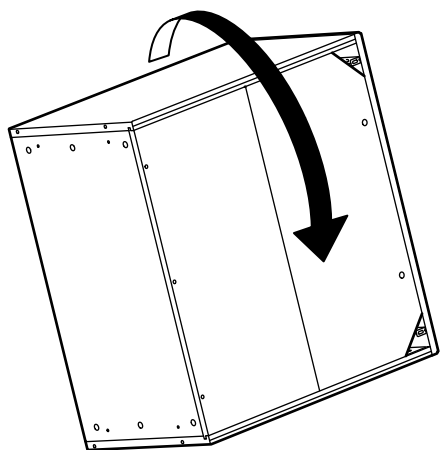 


30

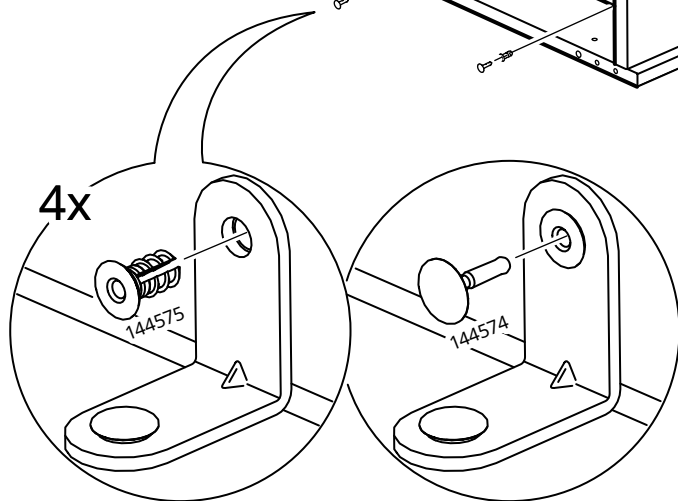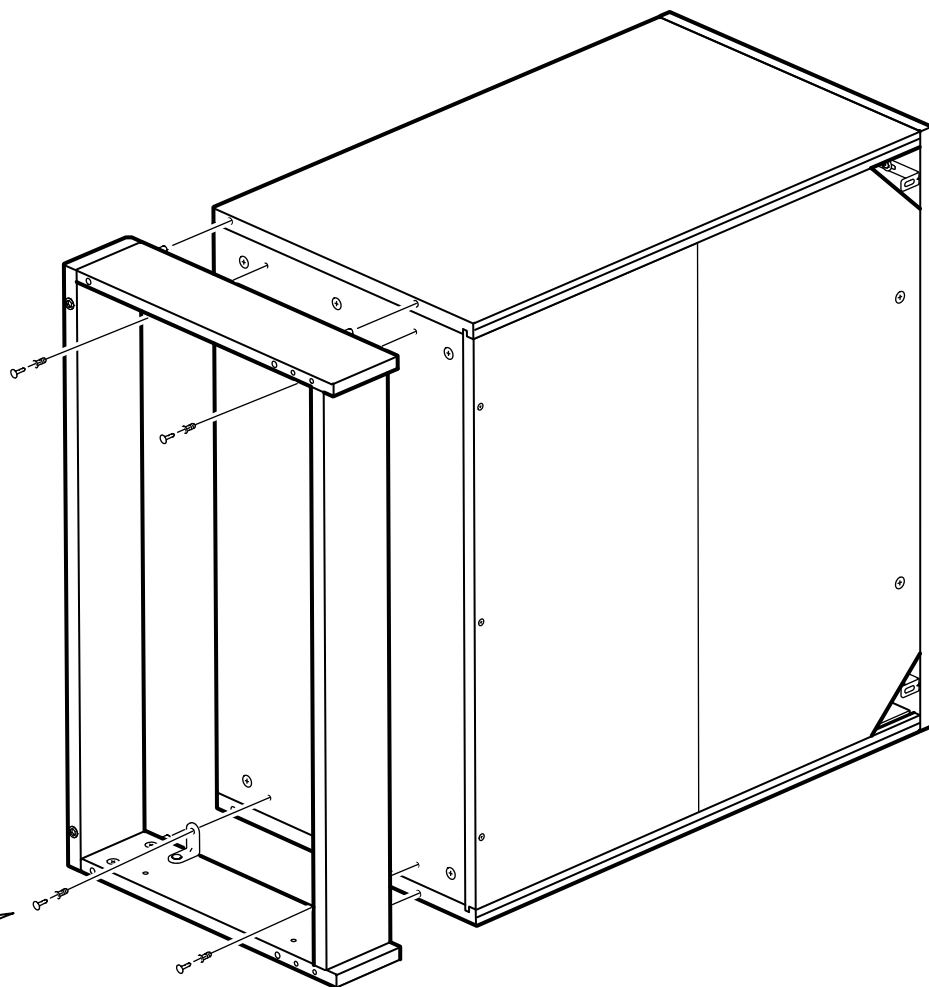  


31


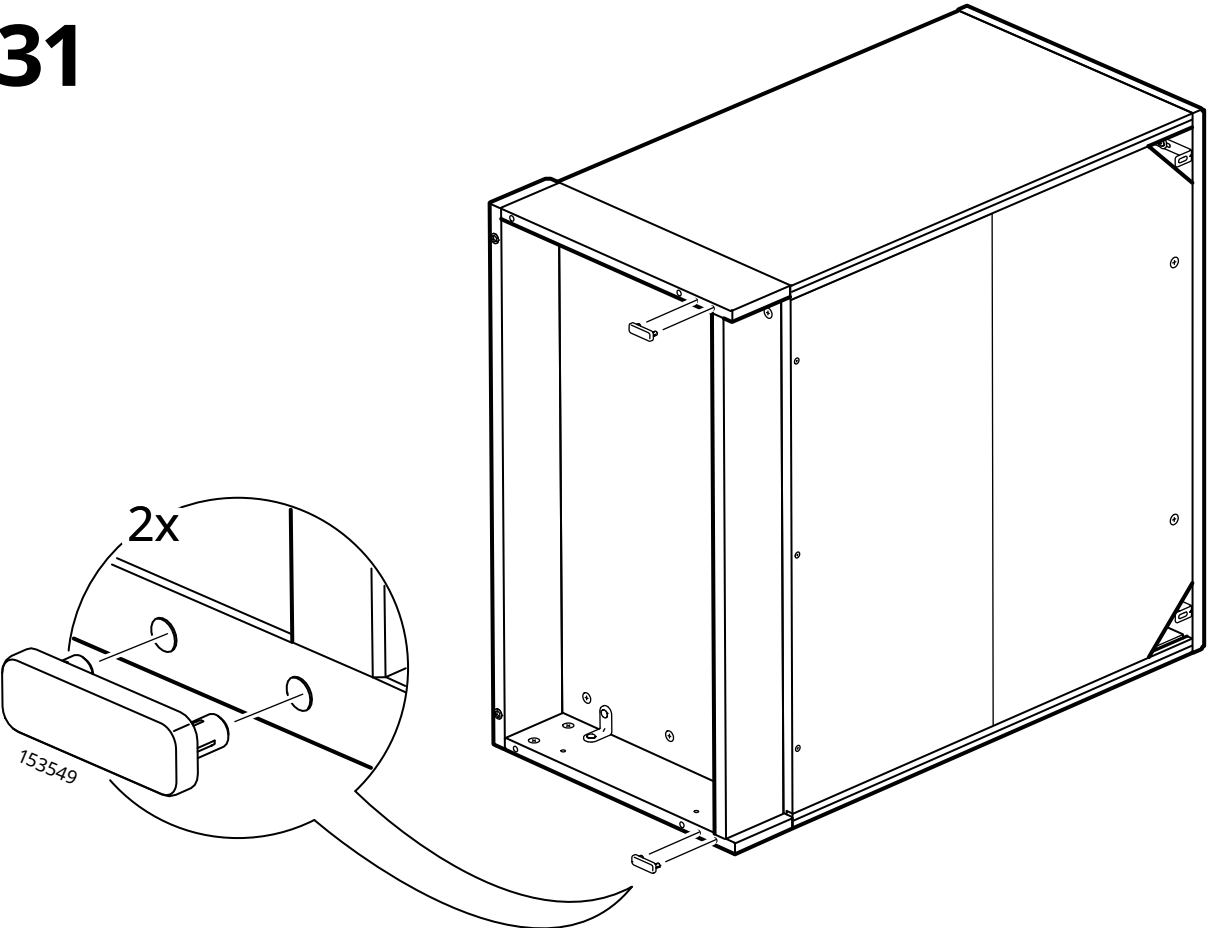 


32

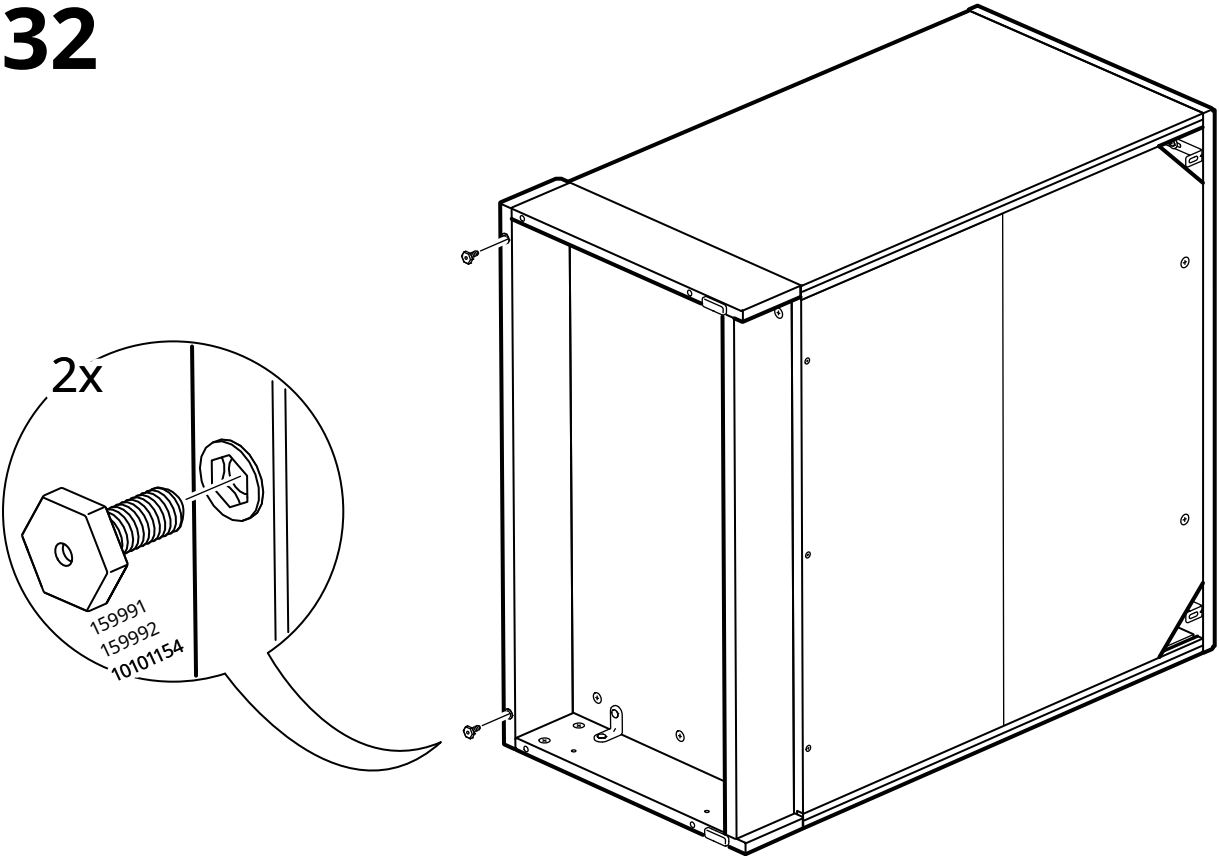 


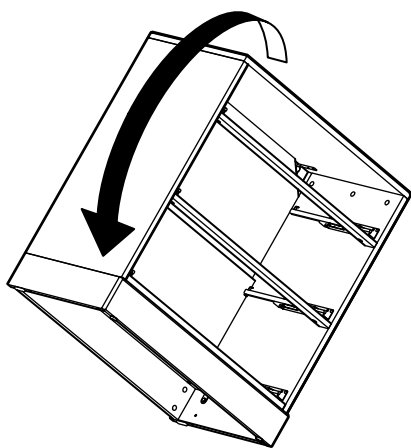 


33

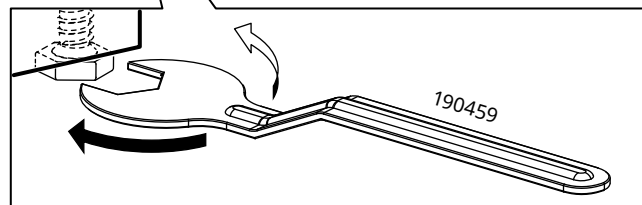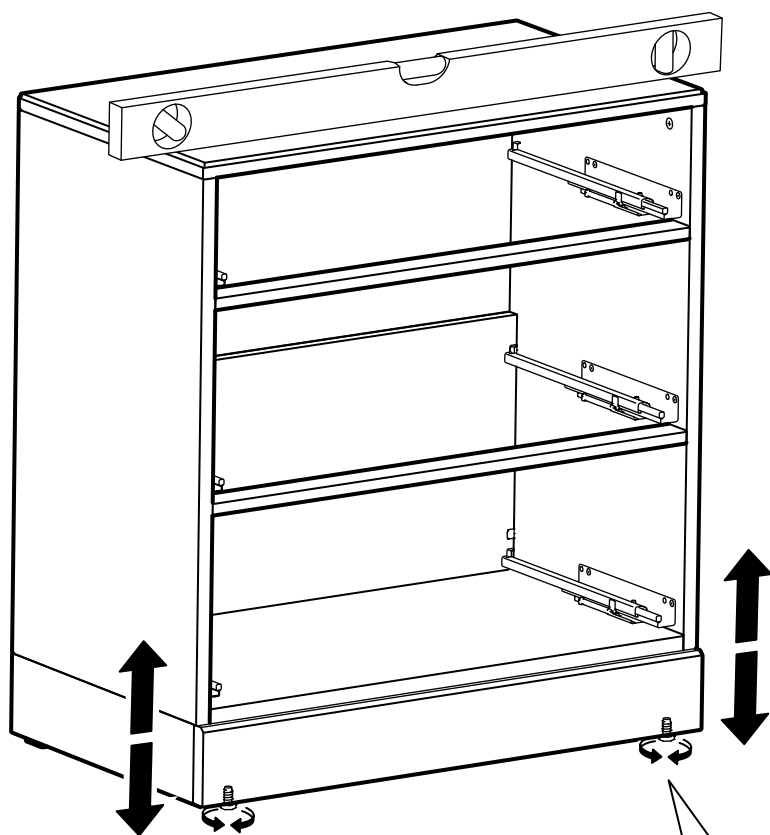  

34

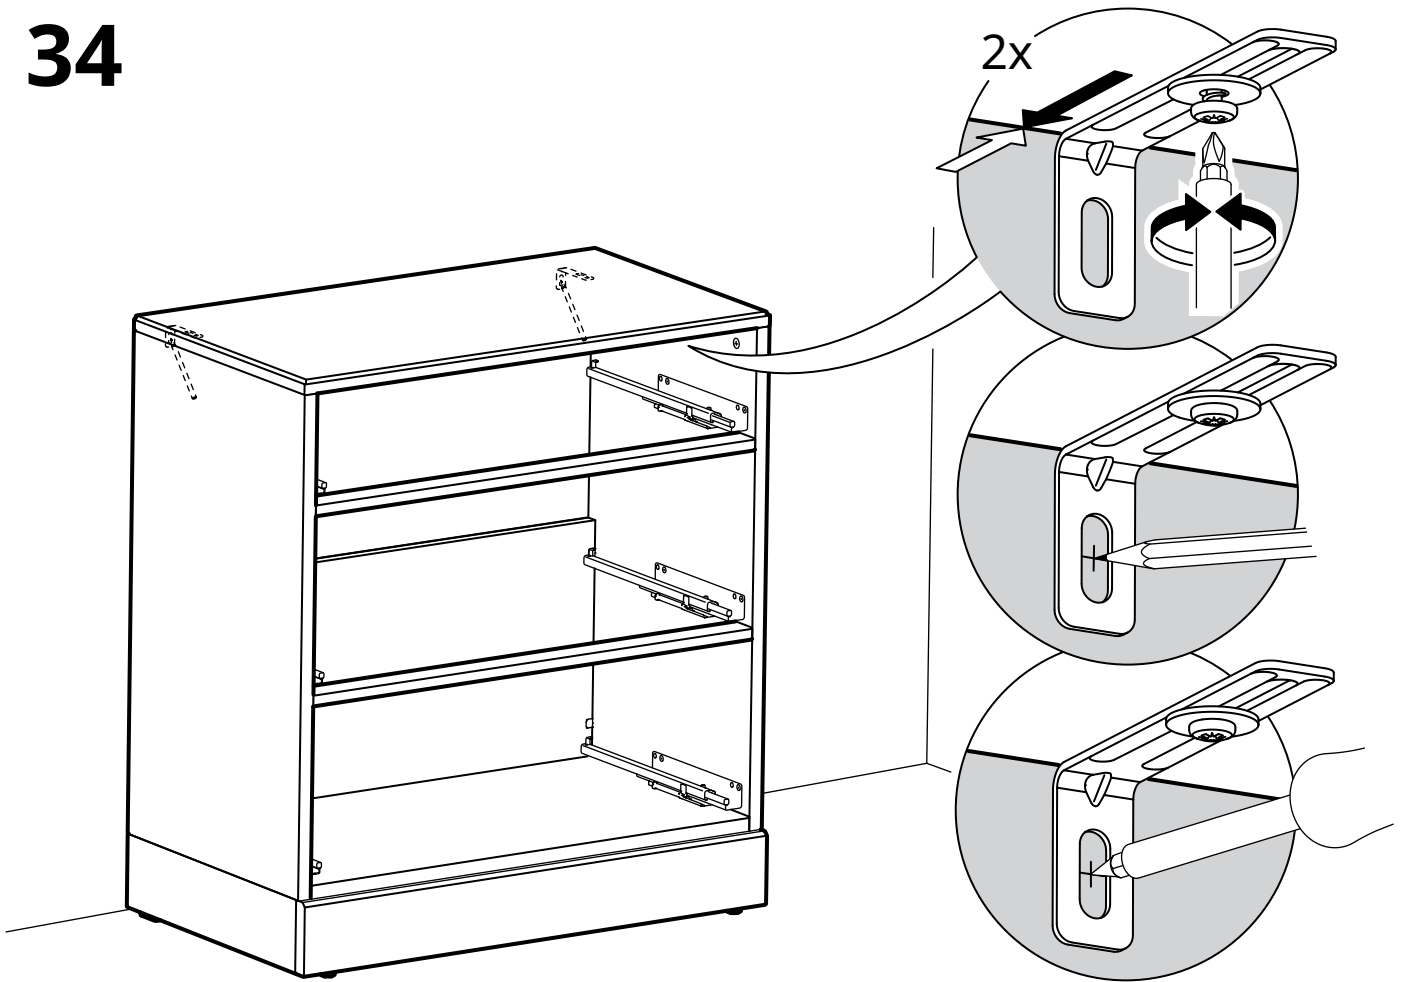 

35

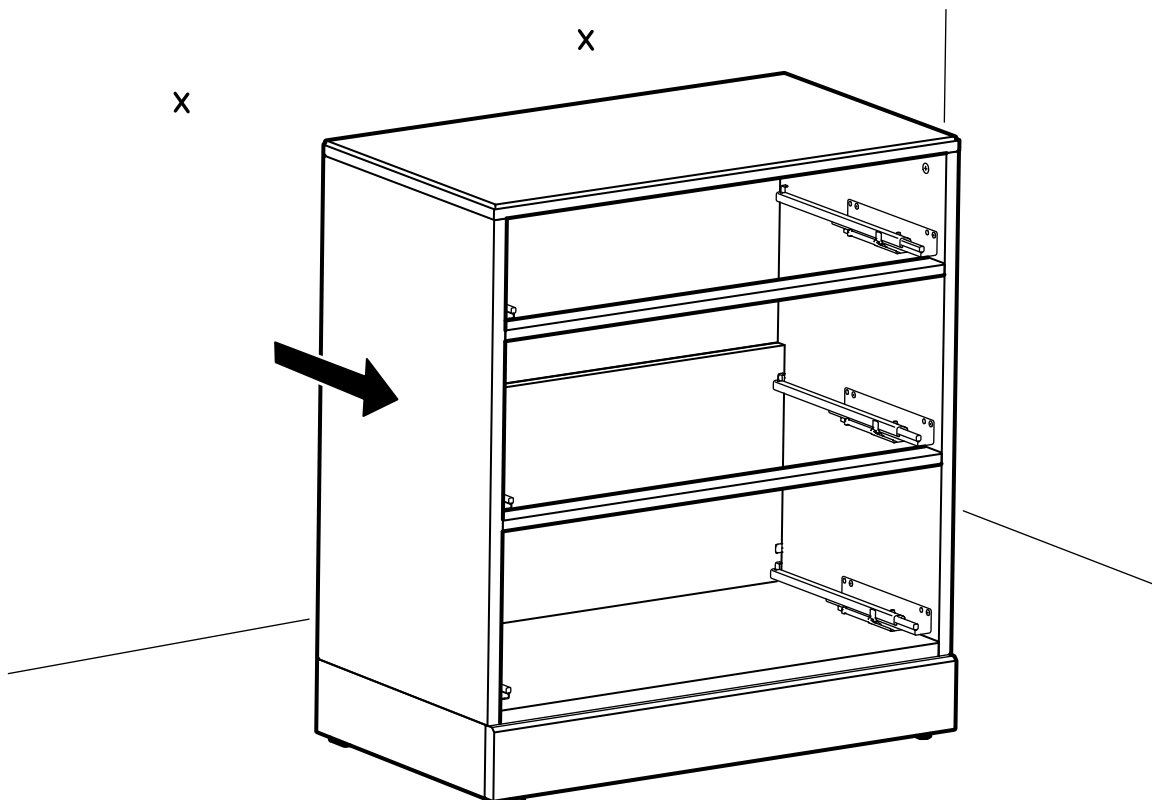 




www.IKEA.com/secure-it





 
www.IKEA.cn/secure-it

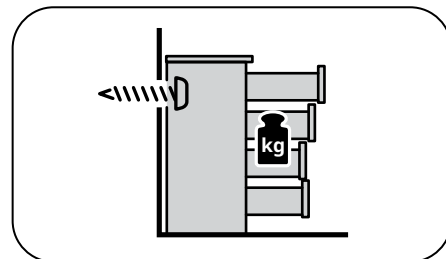



36

English

    
 
The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

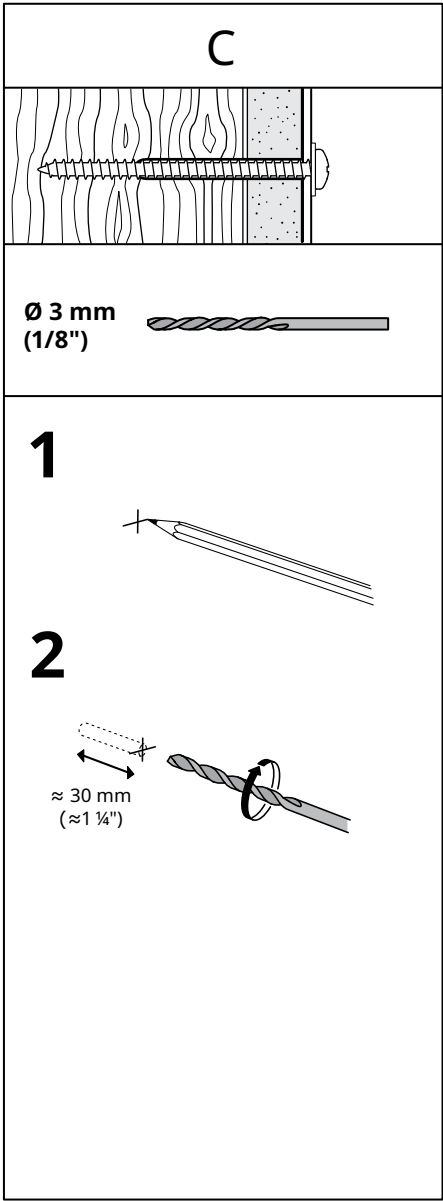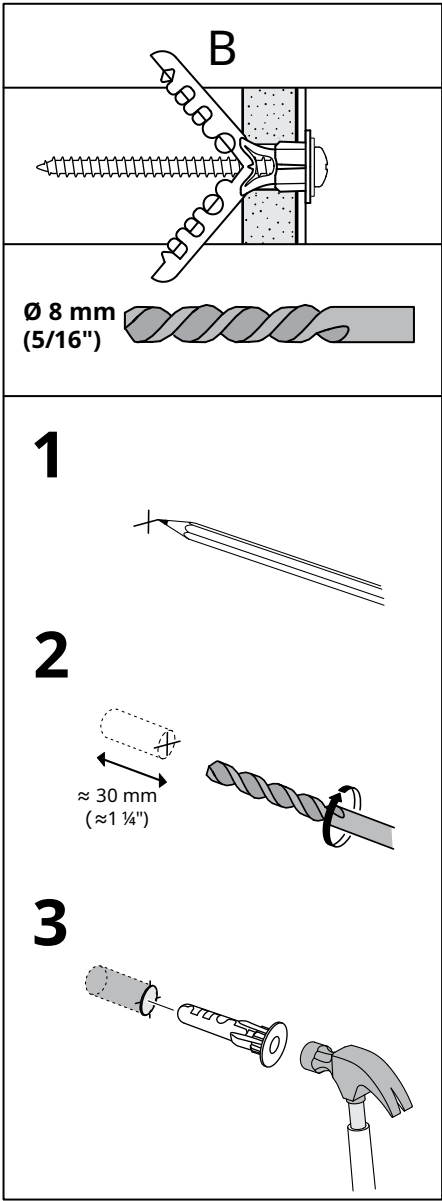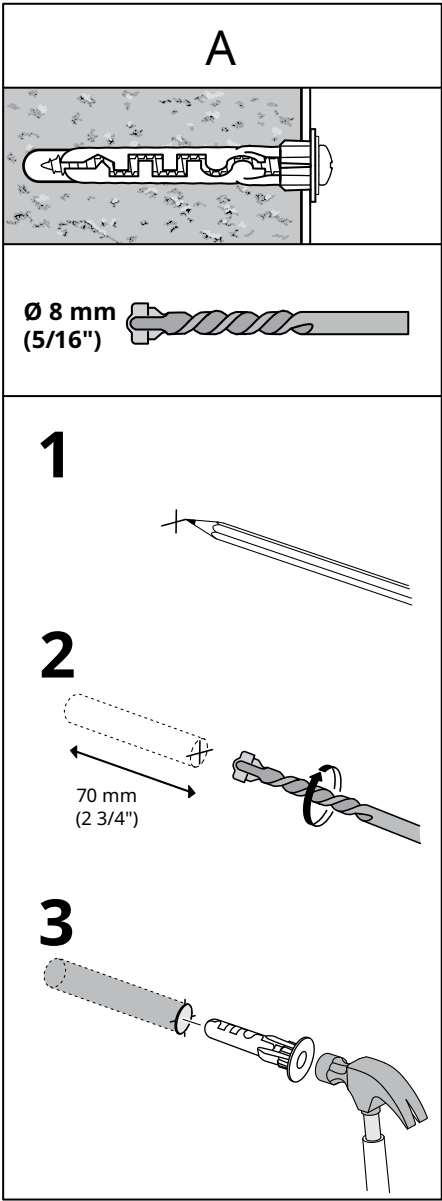

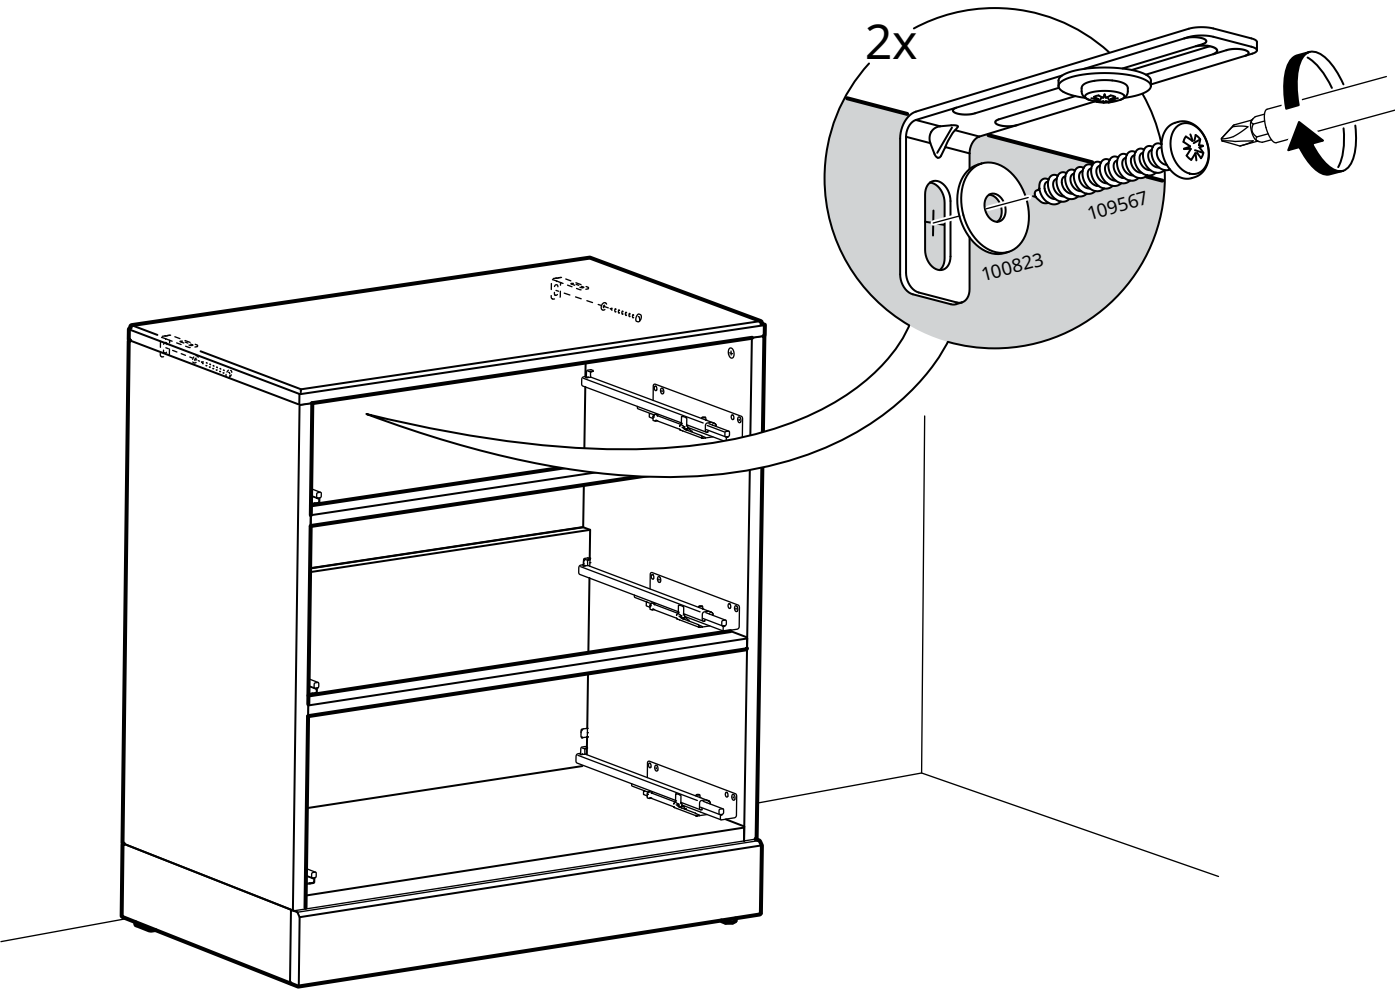



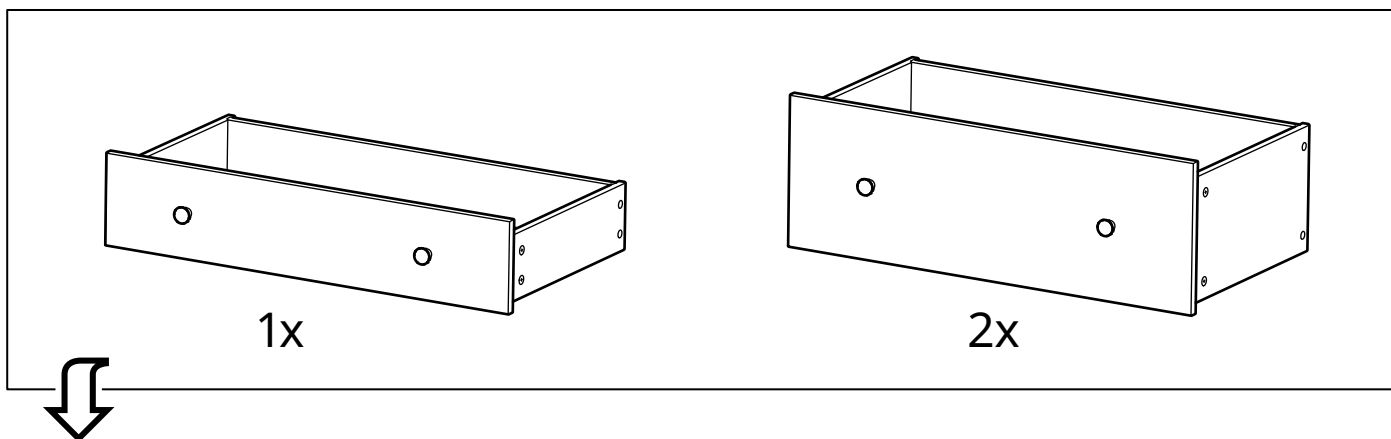


38

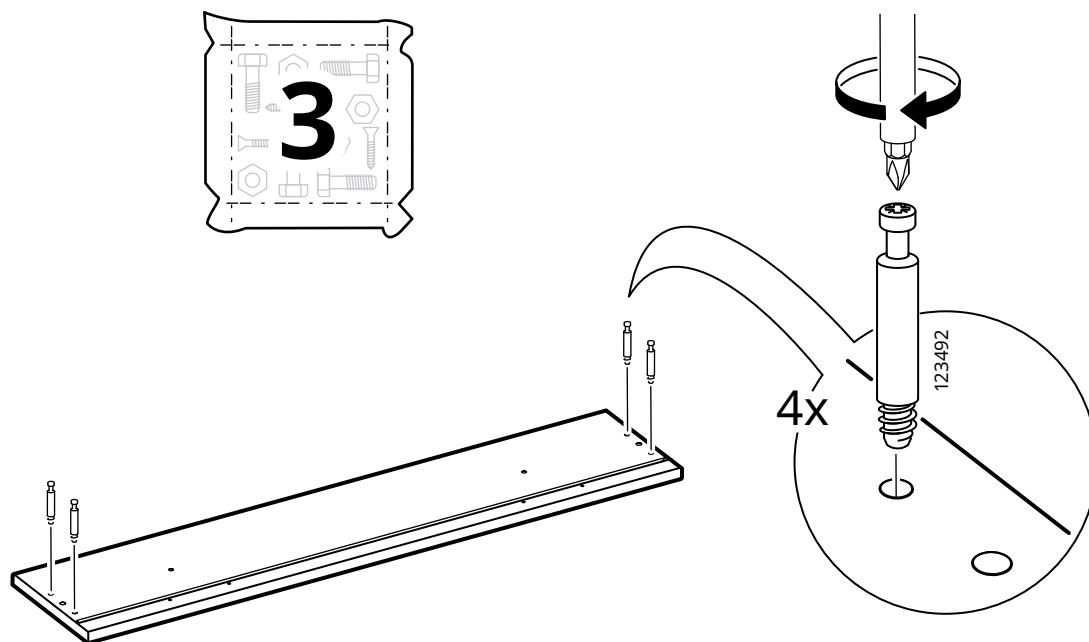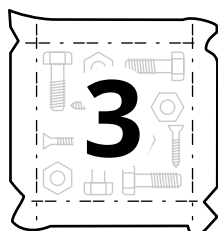  


39

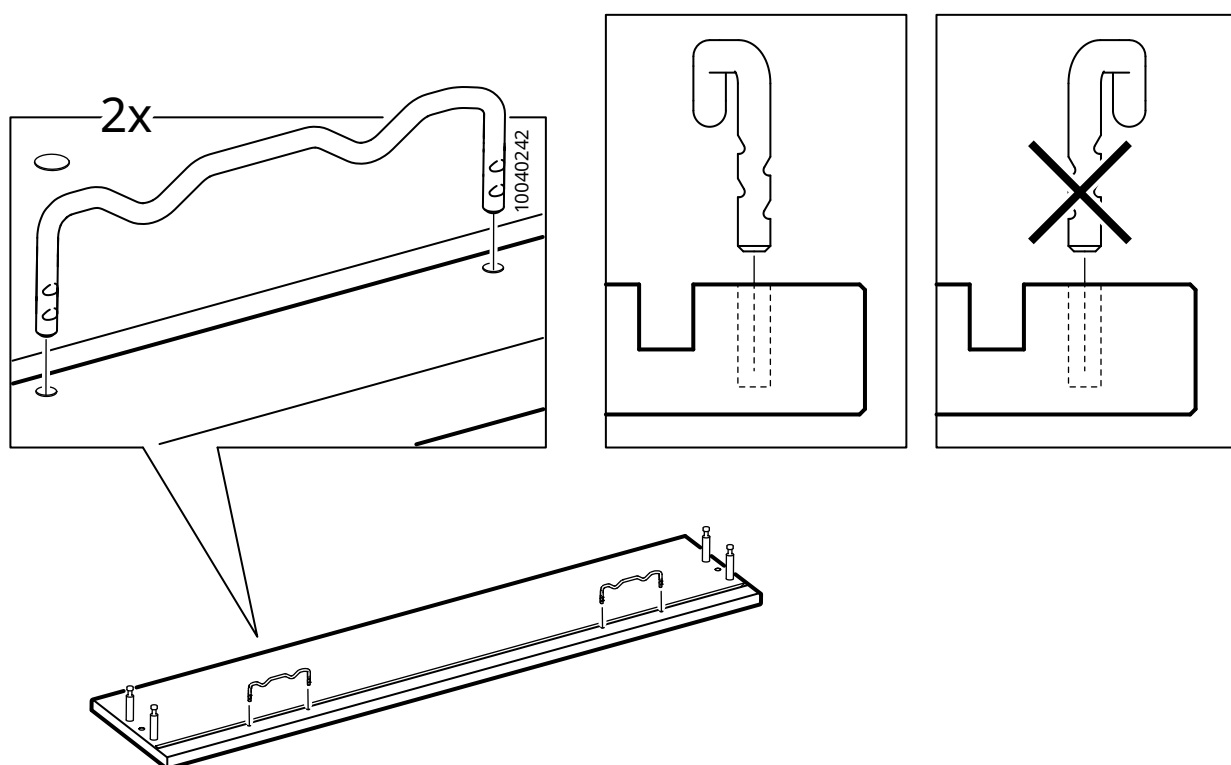 


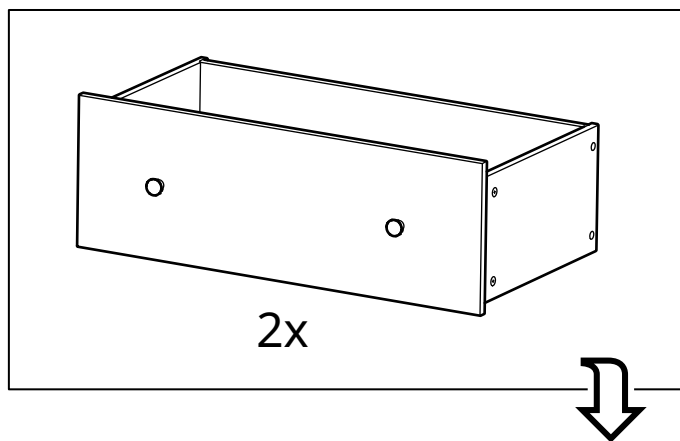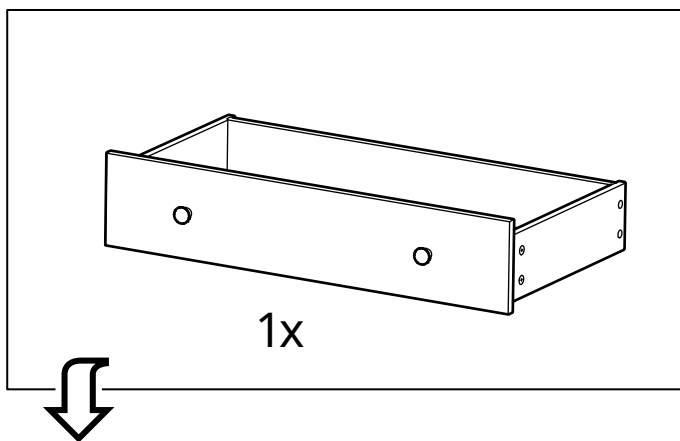  


40

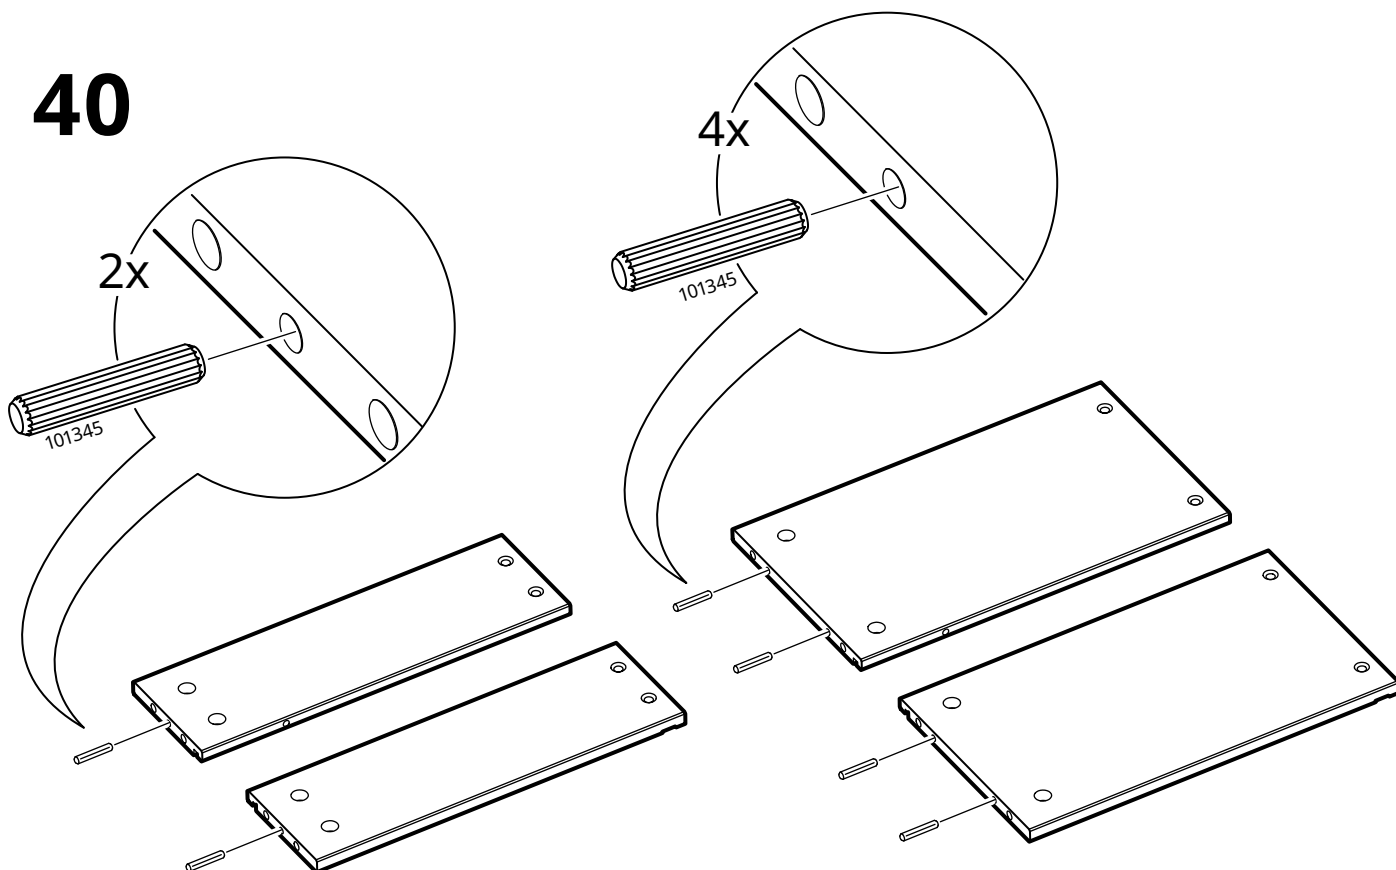 


41

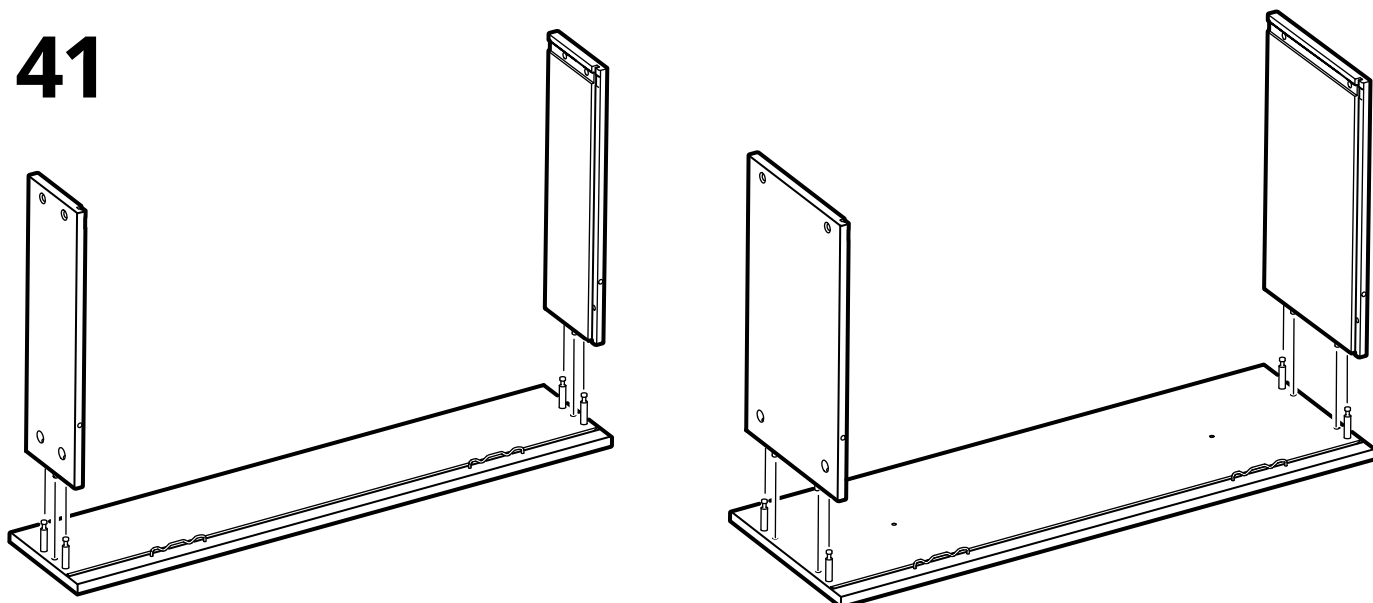 


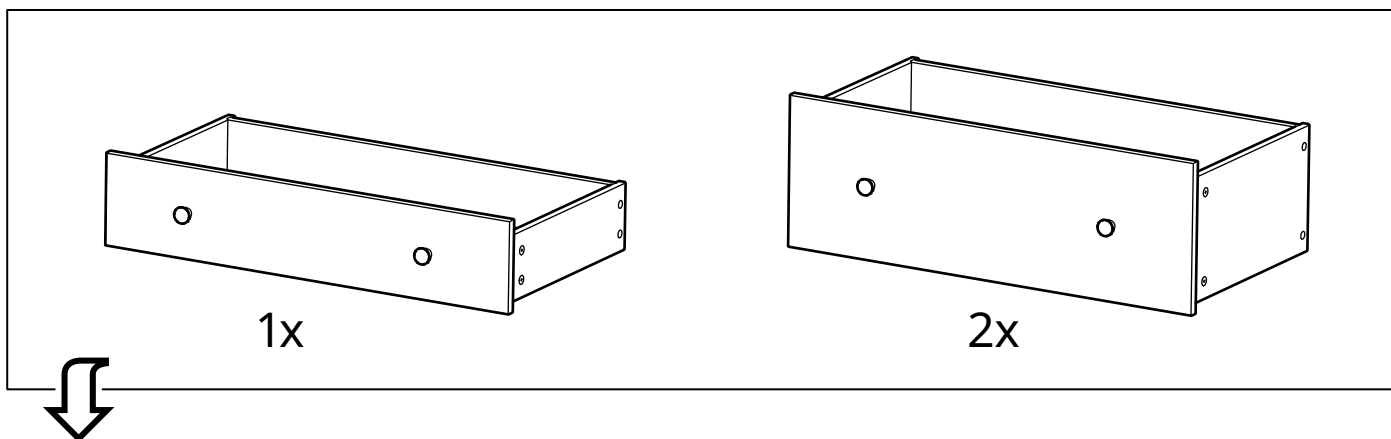 


42

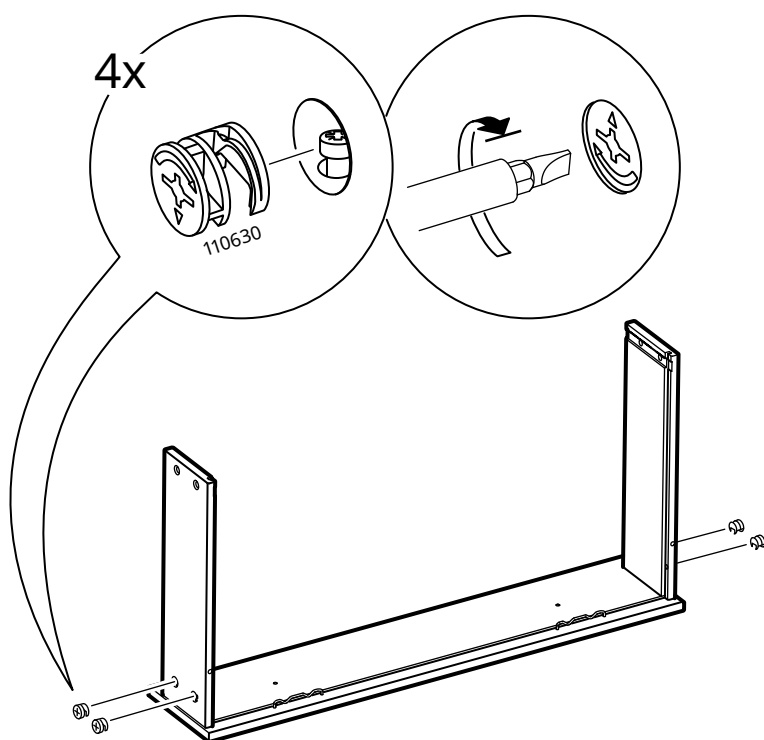 


43

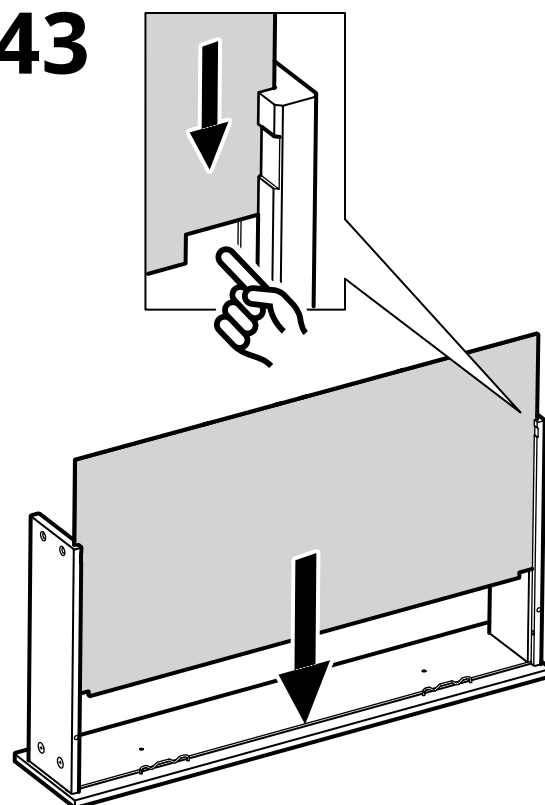 


44

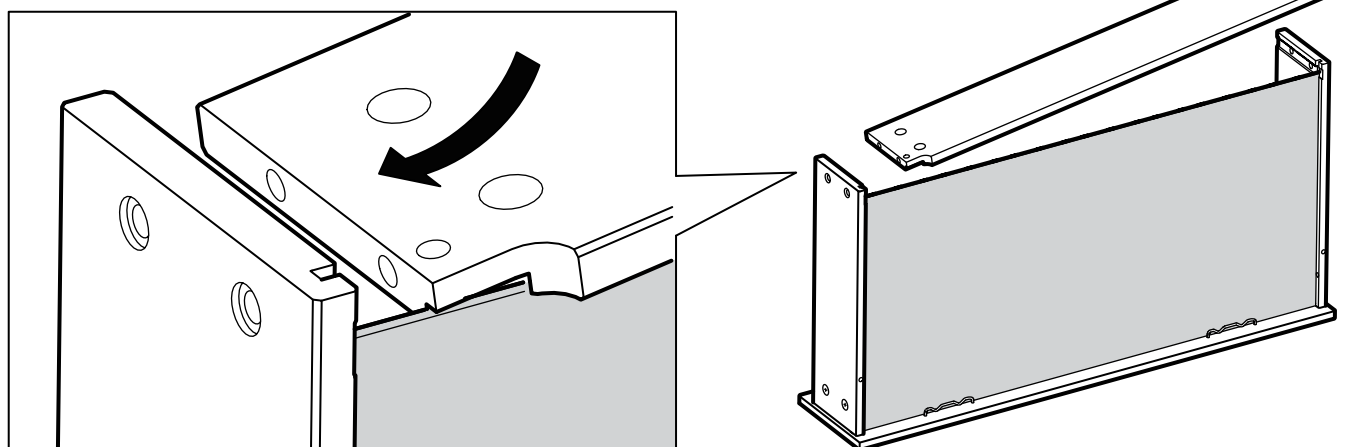 


45

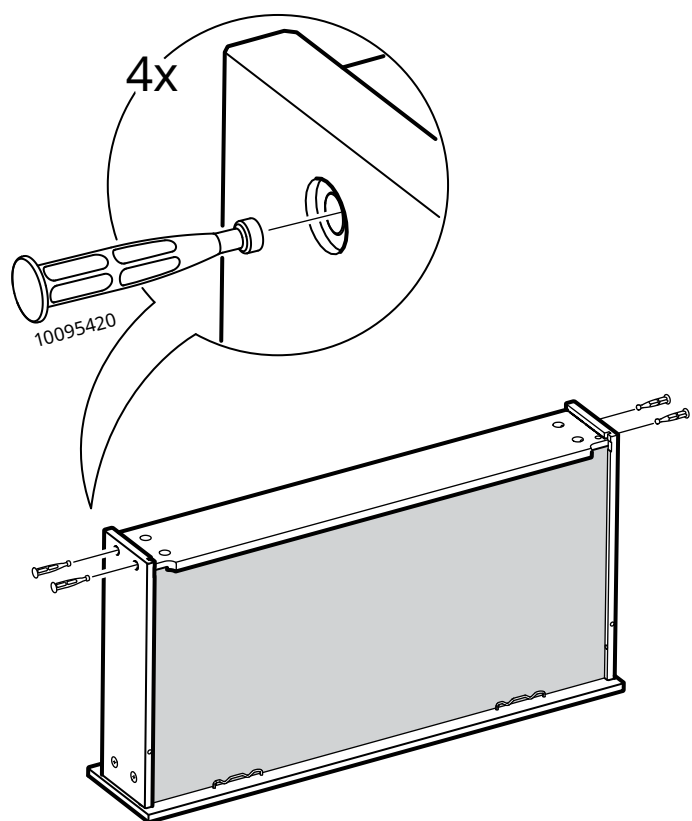 


46

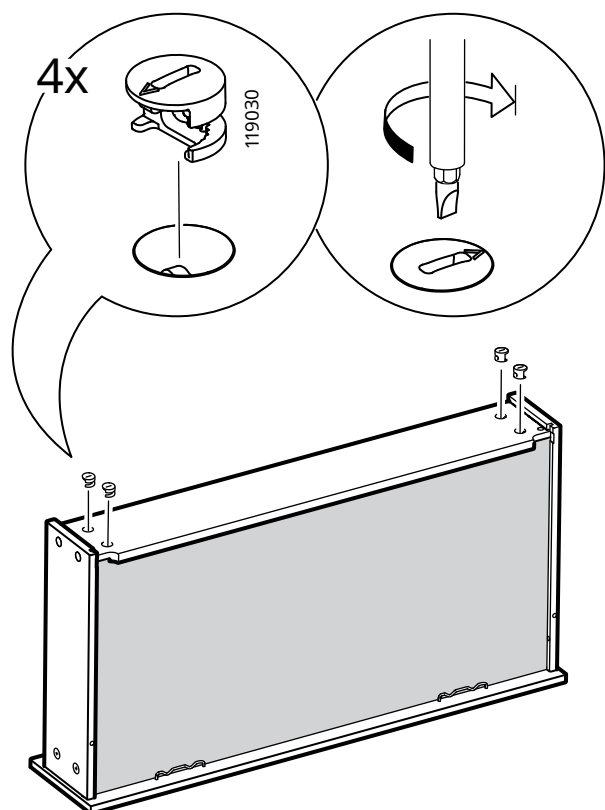 


47

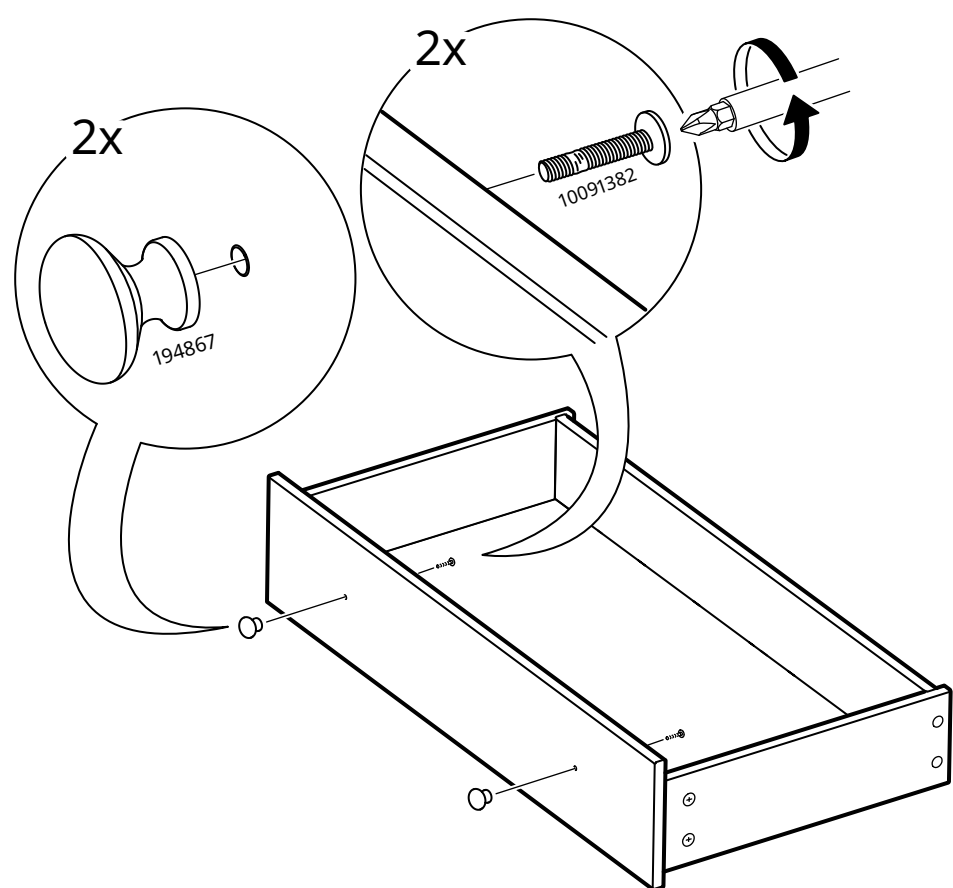 


48

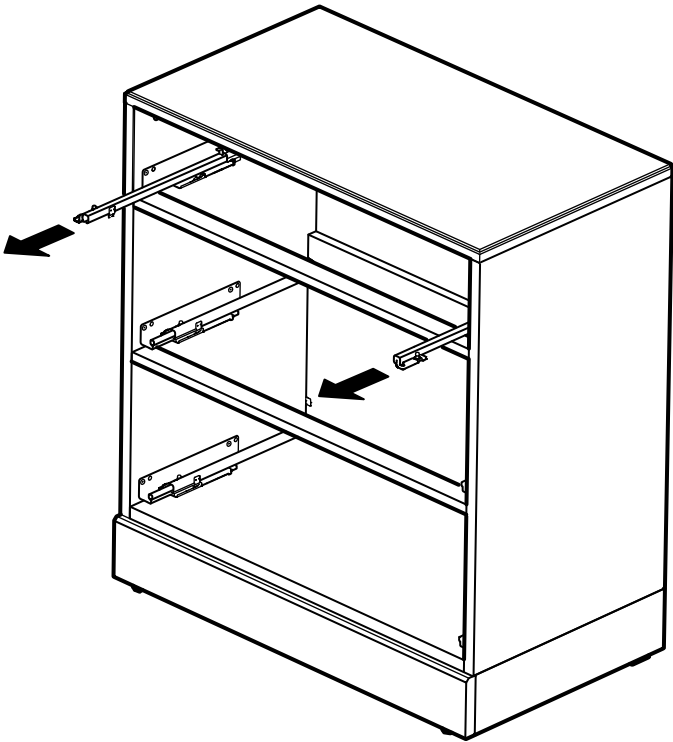 


49

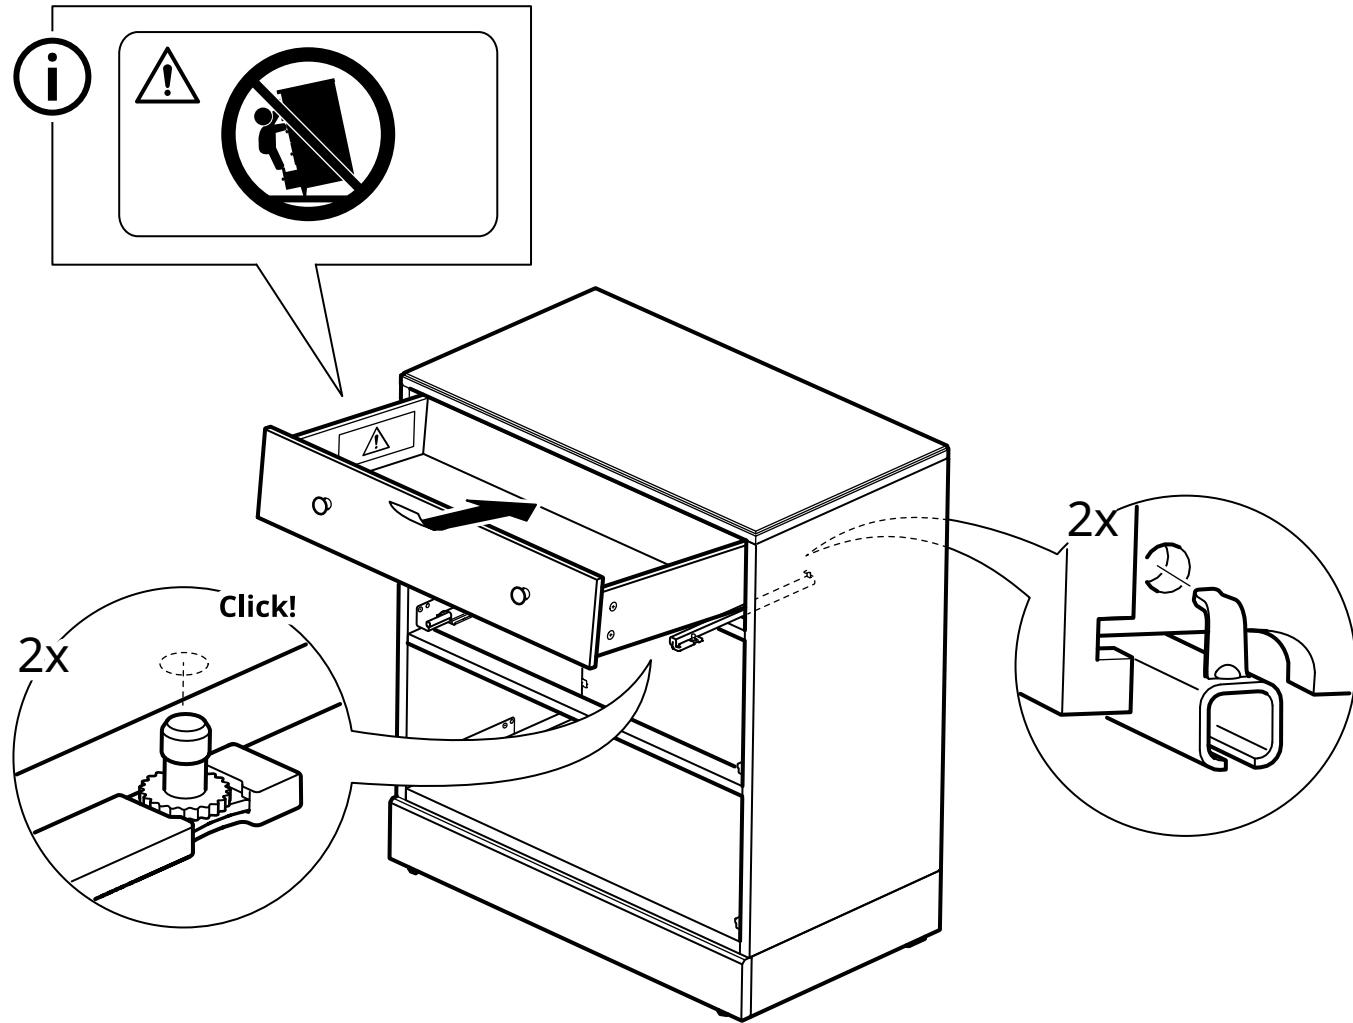 


50

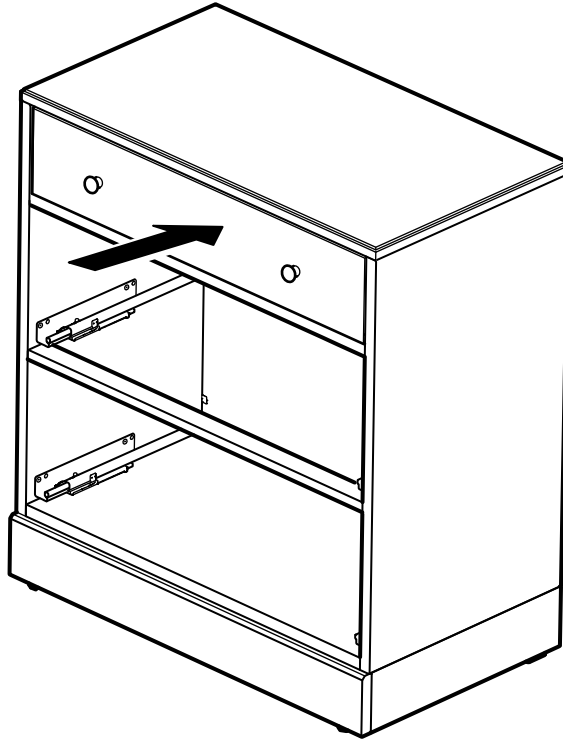 

51

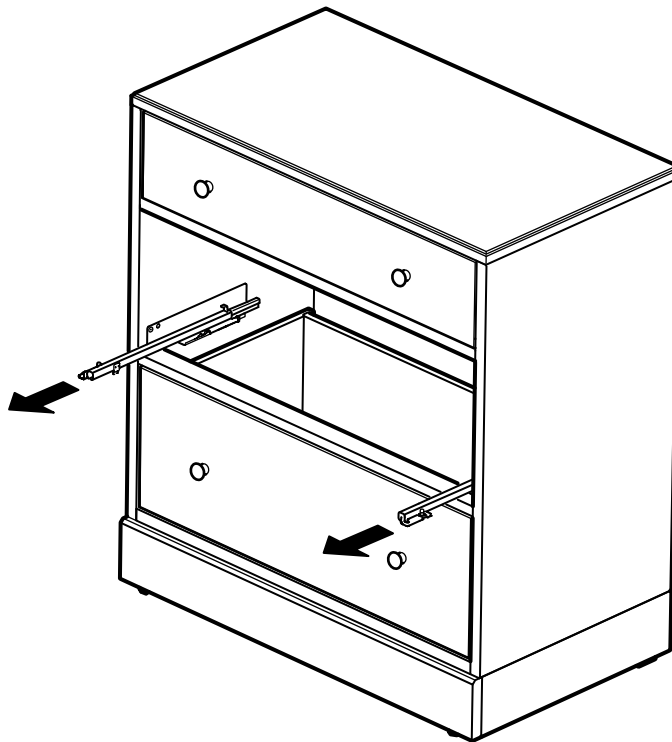 

52

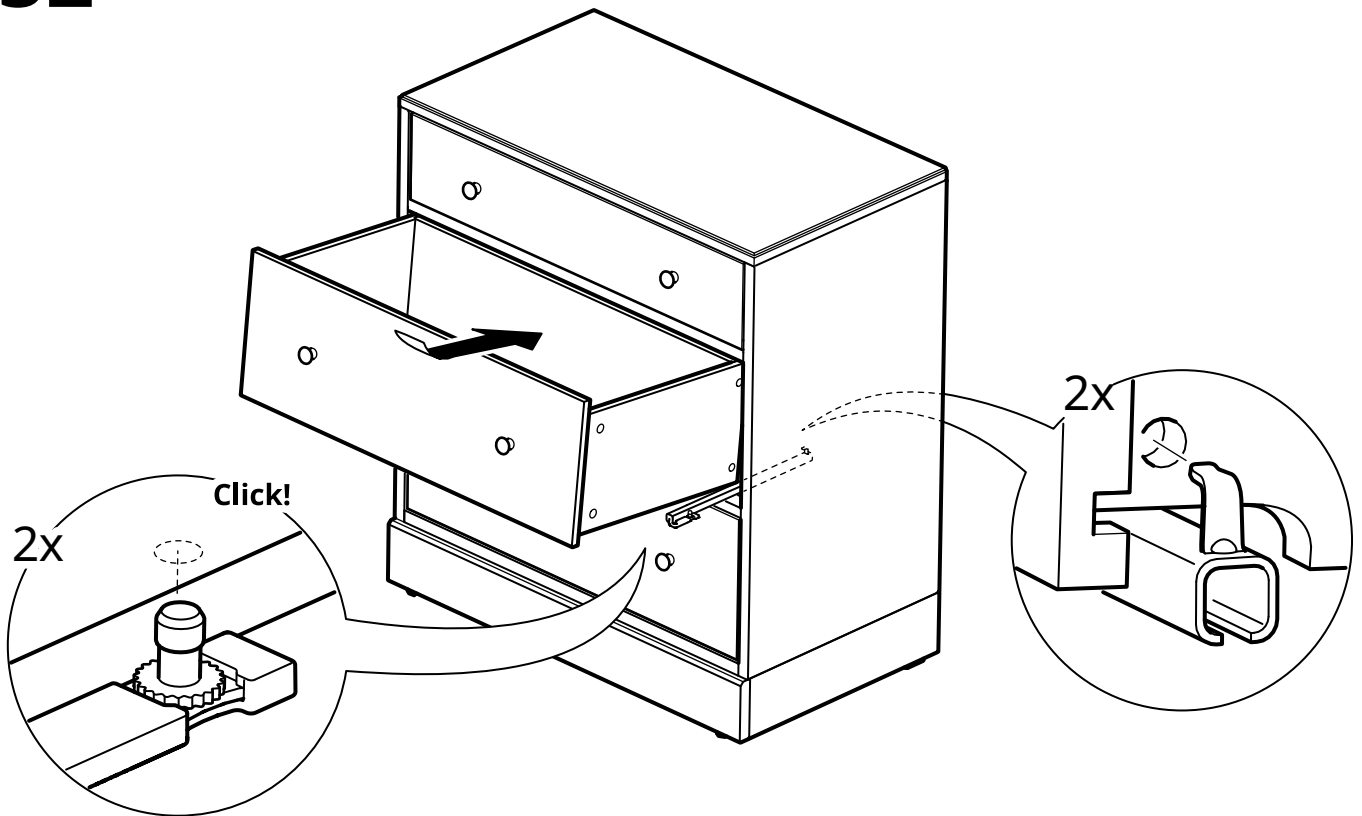 

53

