 
 
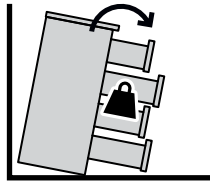 


HAVSTA

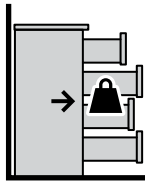

Design and Quality
IKEA of Sweden



English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

 
 
 
 
 
NEVER open more than one drawer at a time.

Place heaviest items in the lowest drawers.


English

Read and follow each step of the instruction carefully.

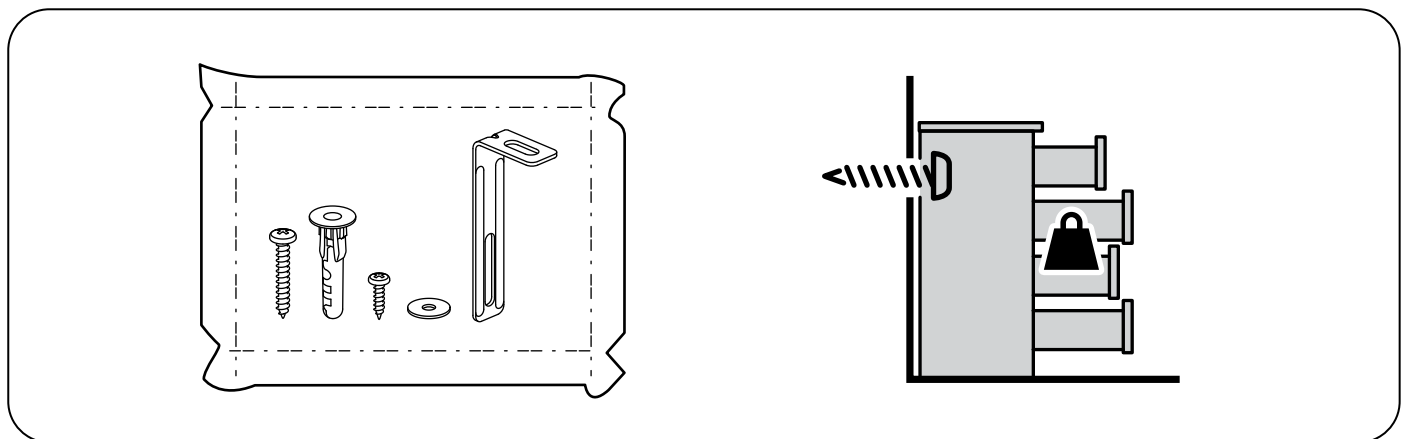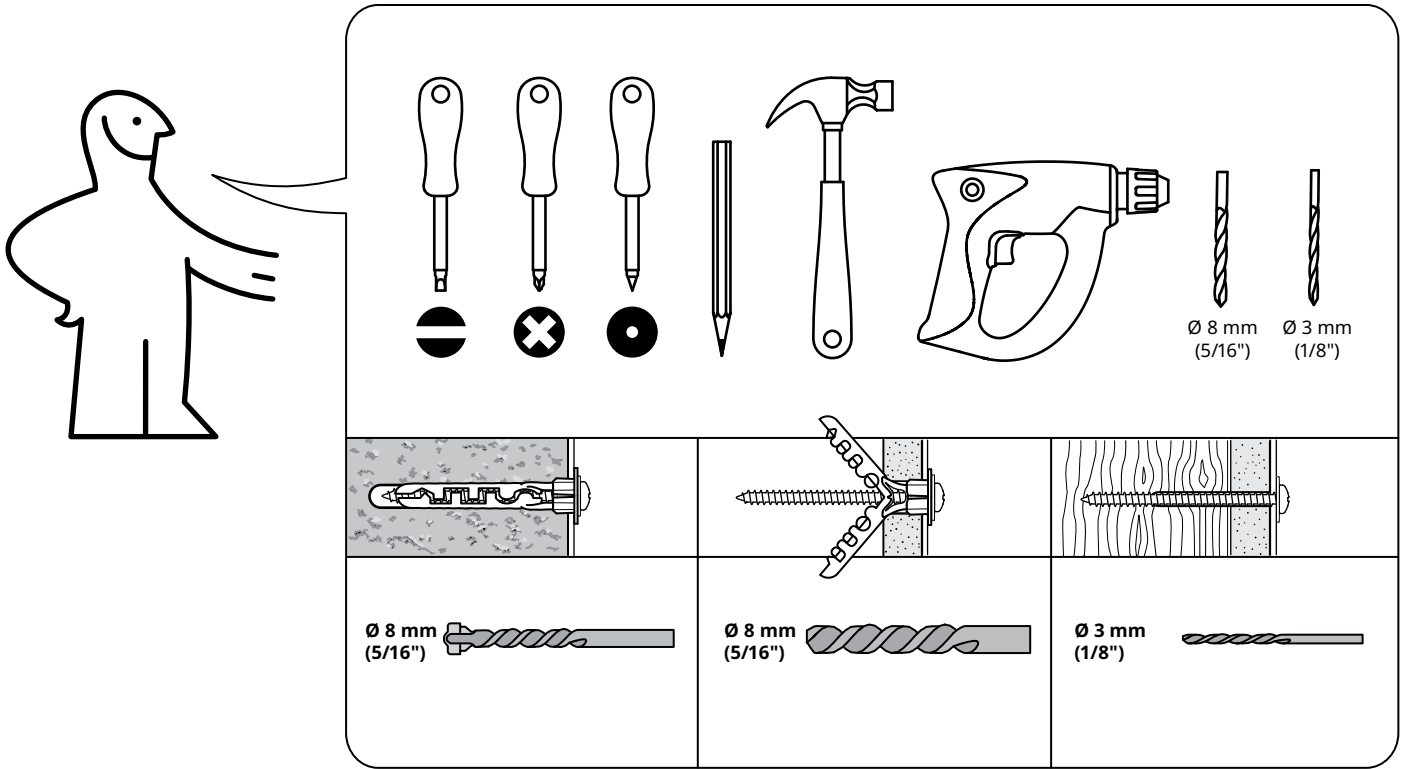


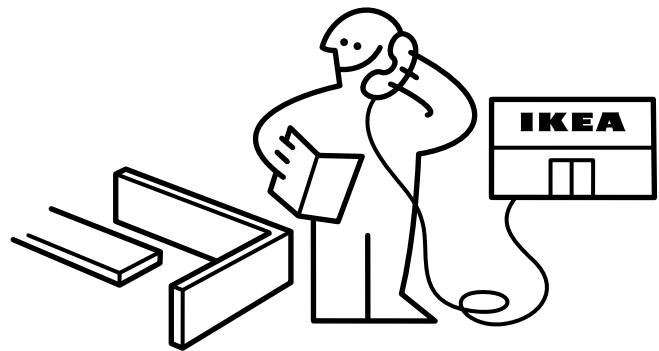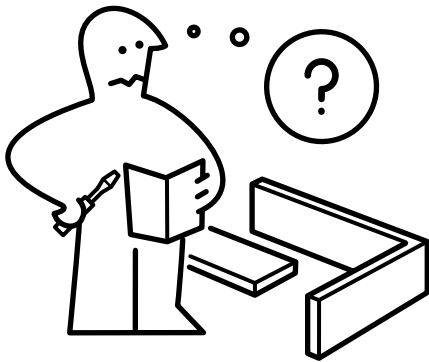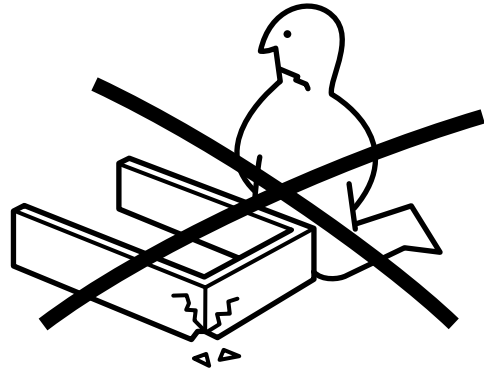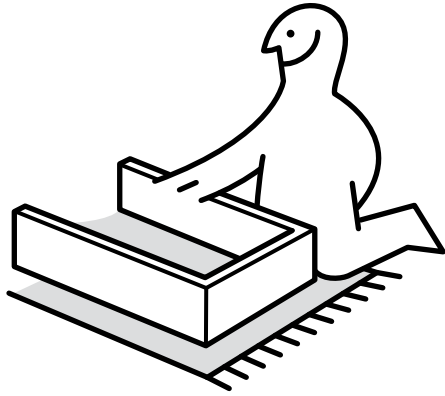


2x

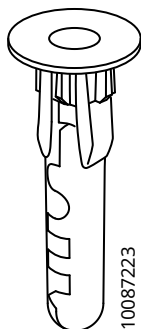 


2x

 

2x

 


4x

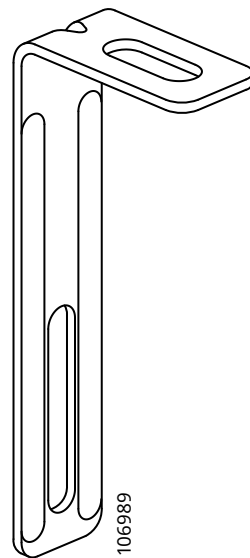 


2x

 
1



2x

 

7x

 

4x



21x



 
25x



24x




24x

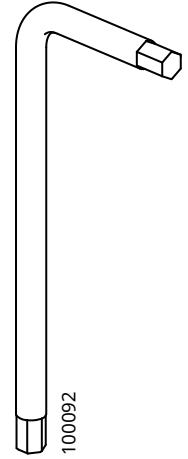

1x

 2




8x



8x



 
8x




10x



 
10x

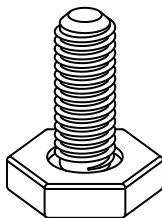

2x

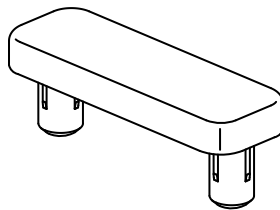 

2x

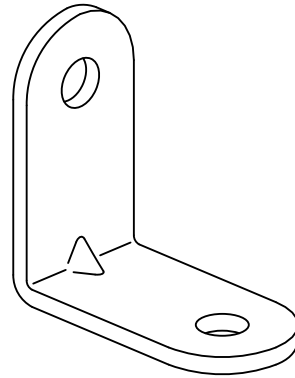 


5x

3




194867

 6x



10091382

 6x




123492

24x




110630

 24x




10095420

 24x

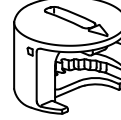


119030

 24x




101345

 20x

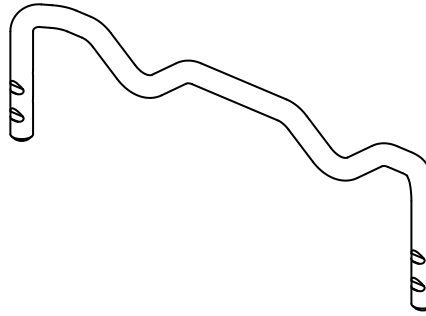


10040242

 12x

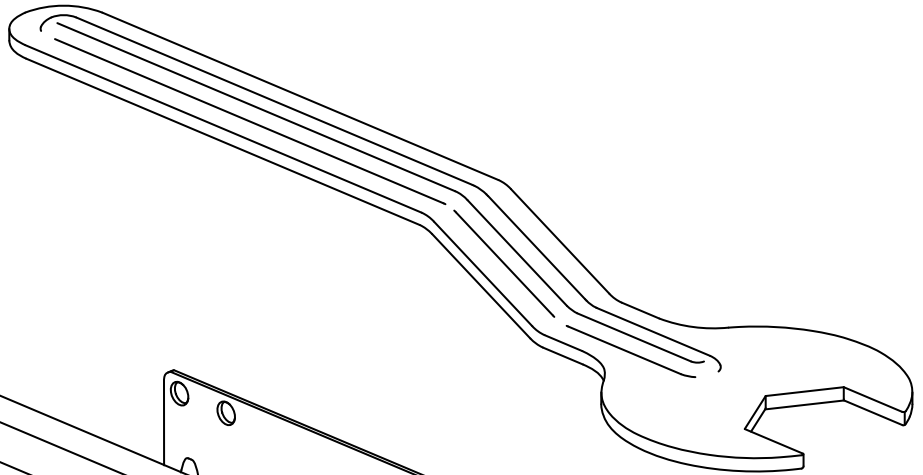



190459

 1x

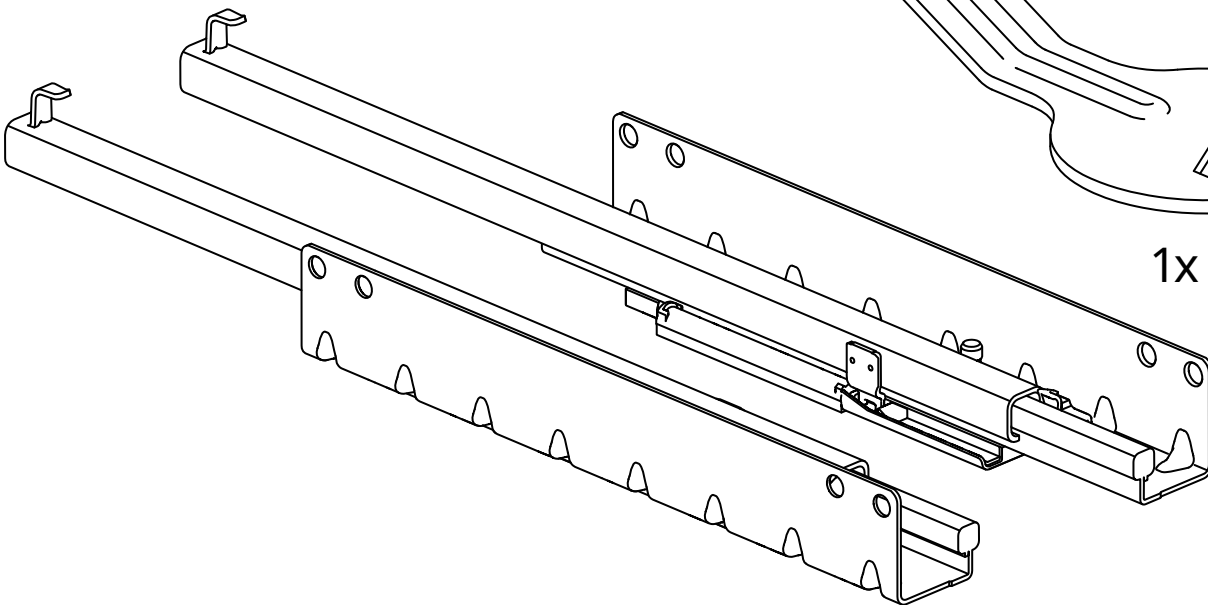


10127303

  
6x

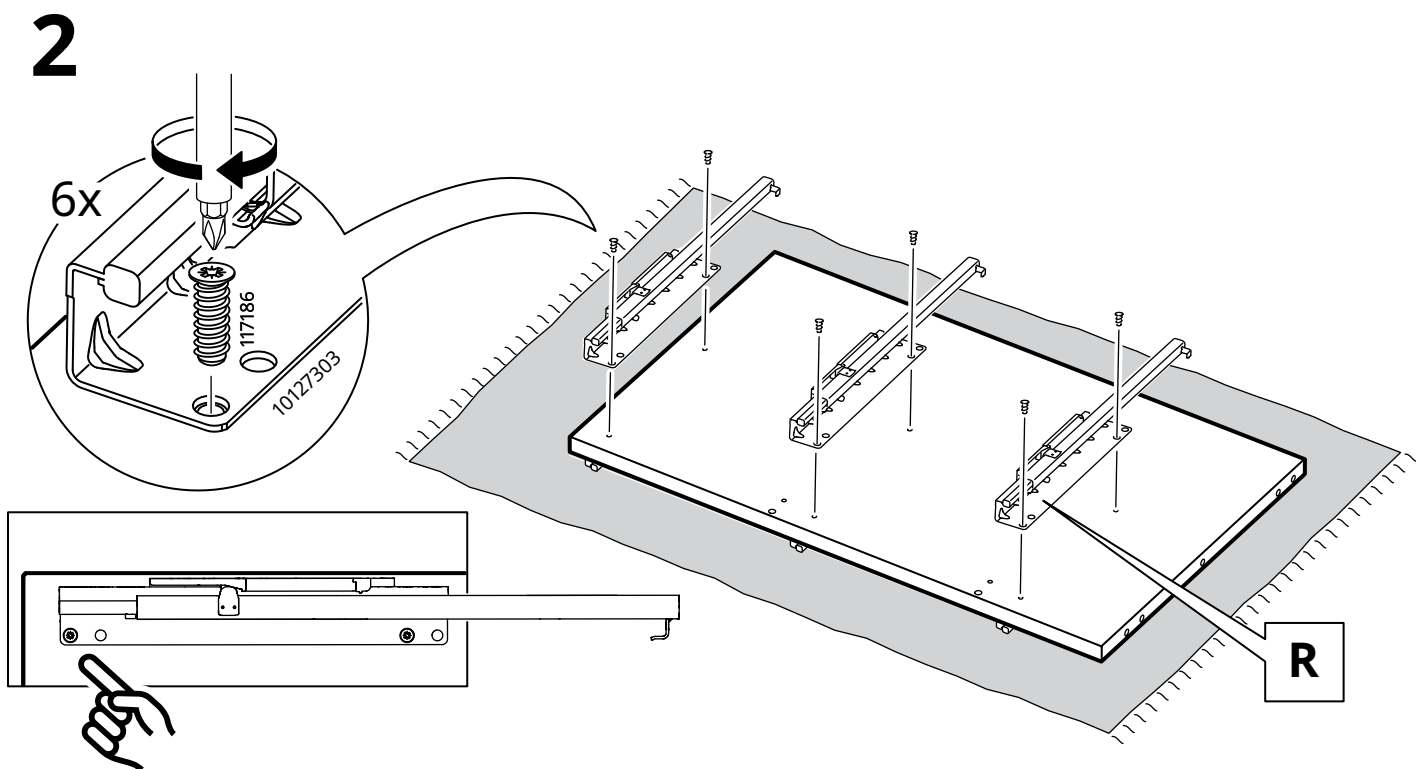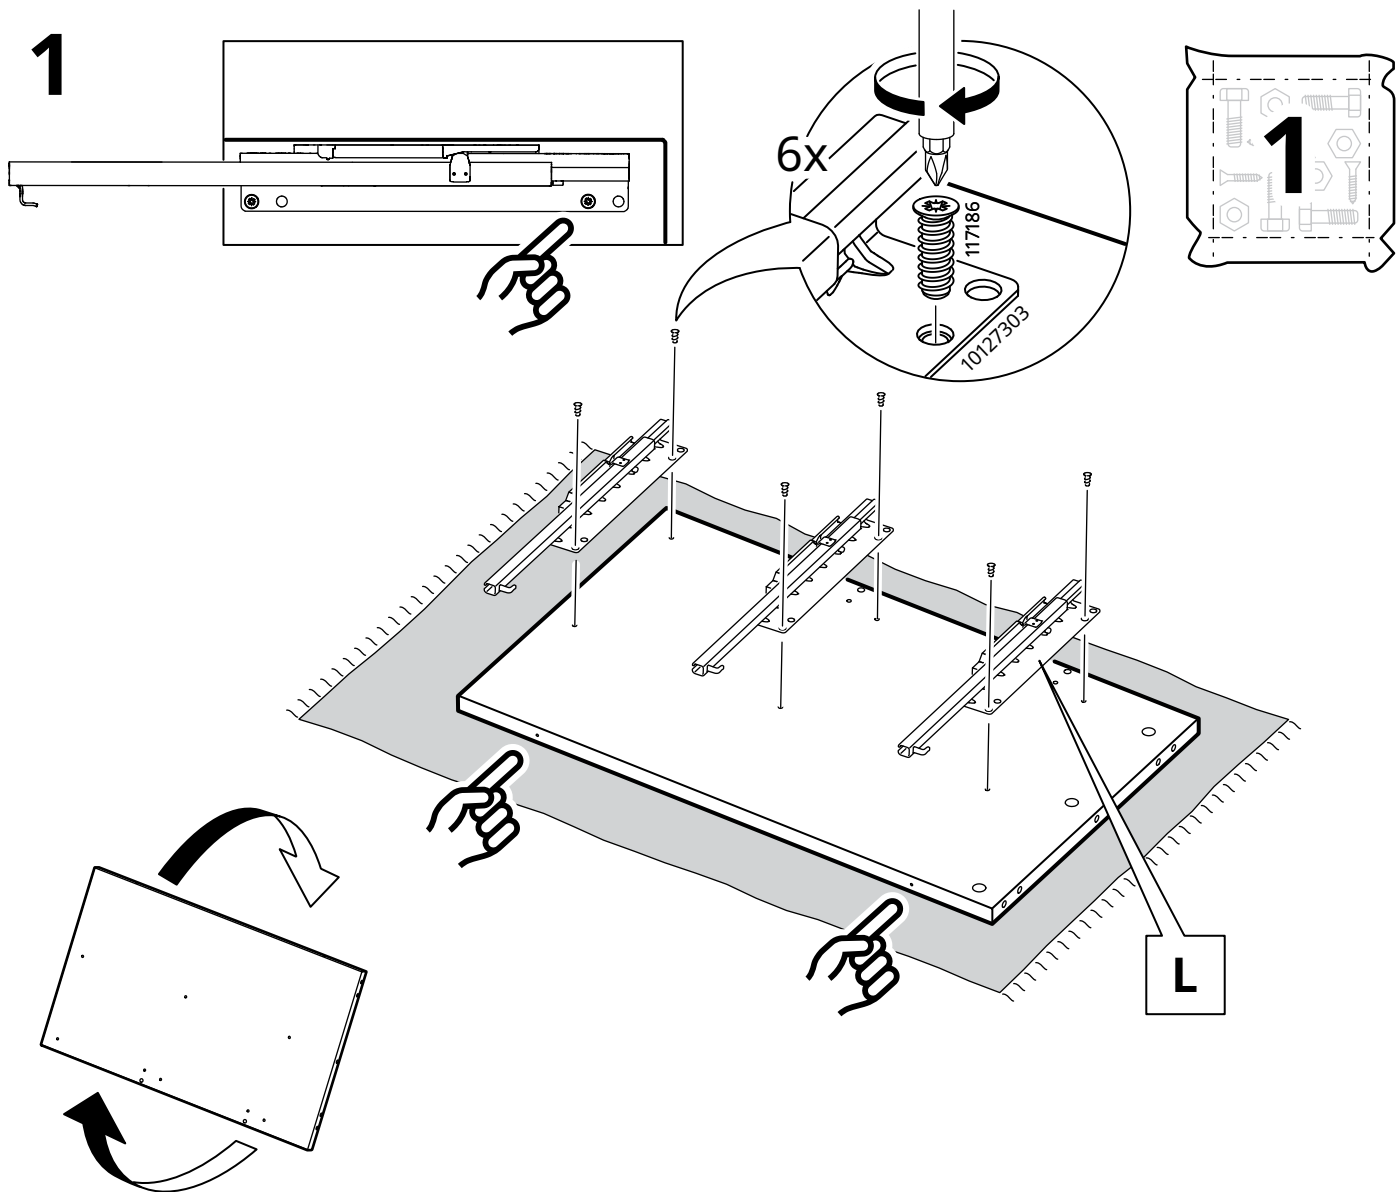


3

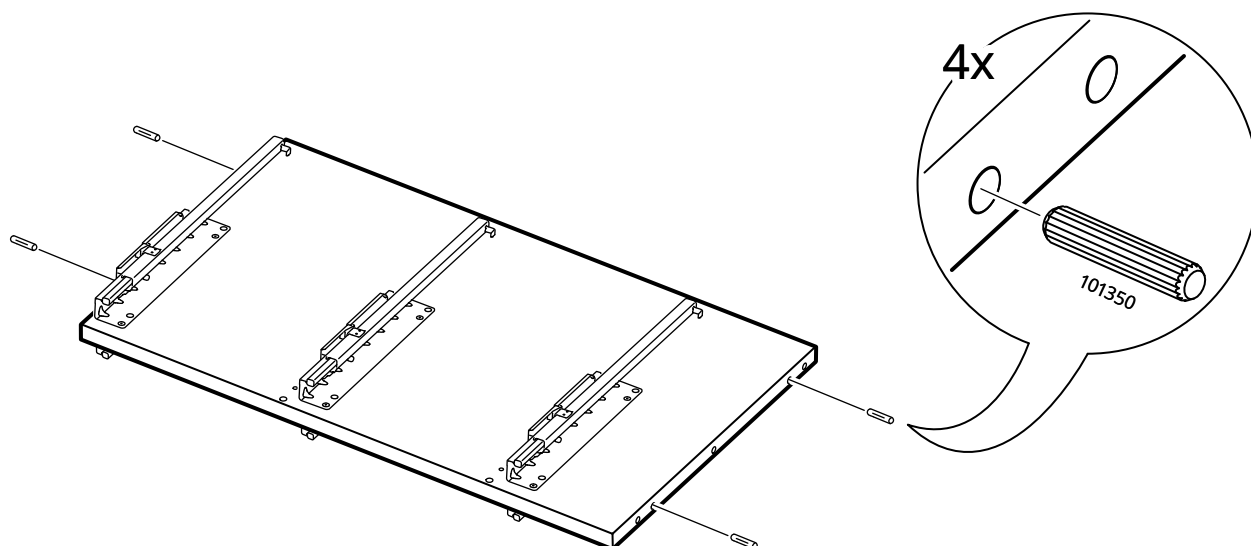 


4

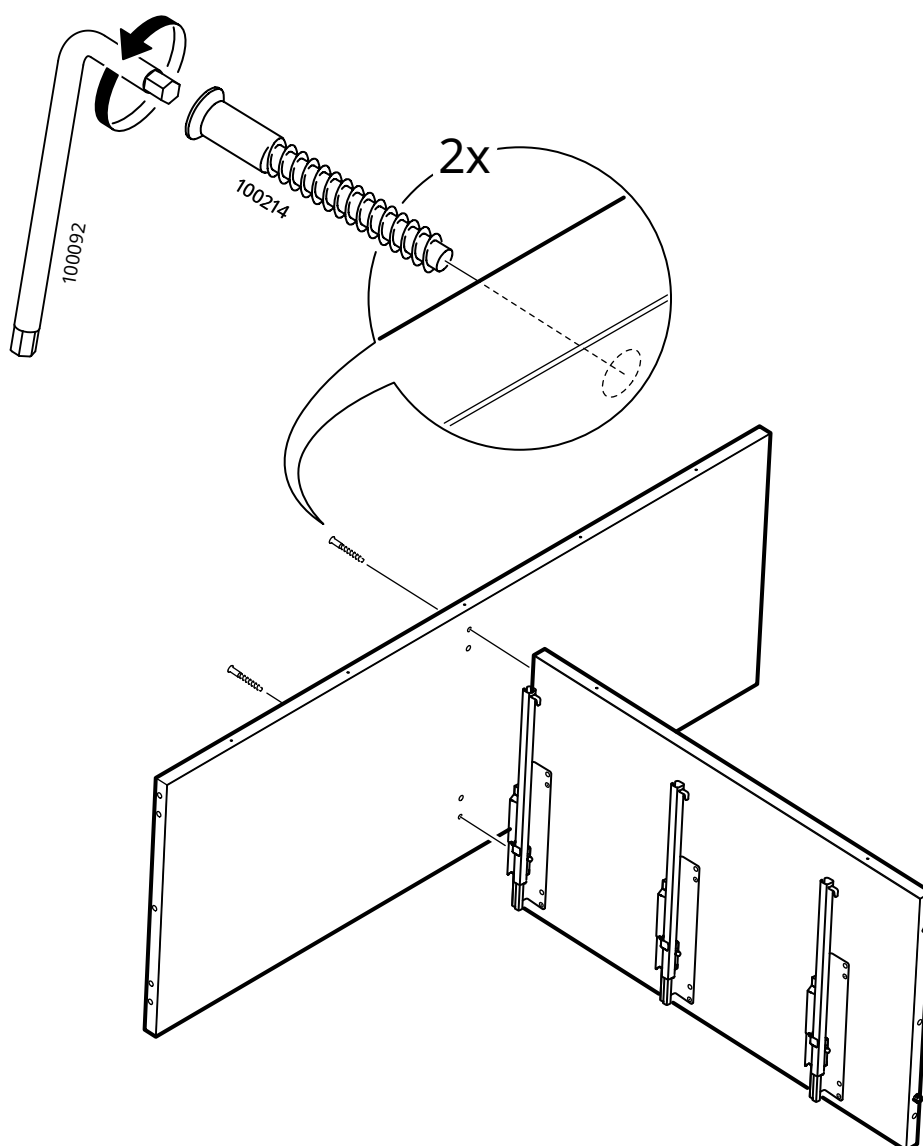 


5

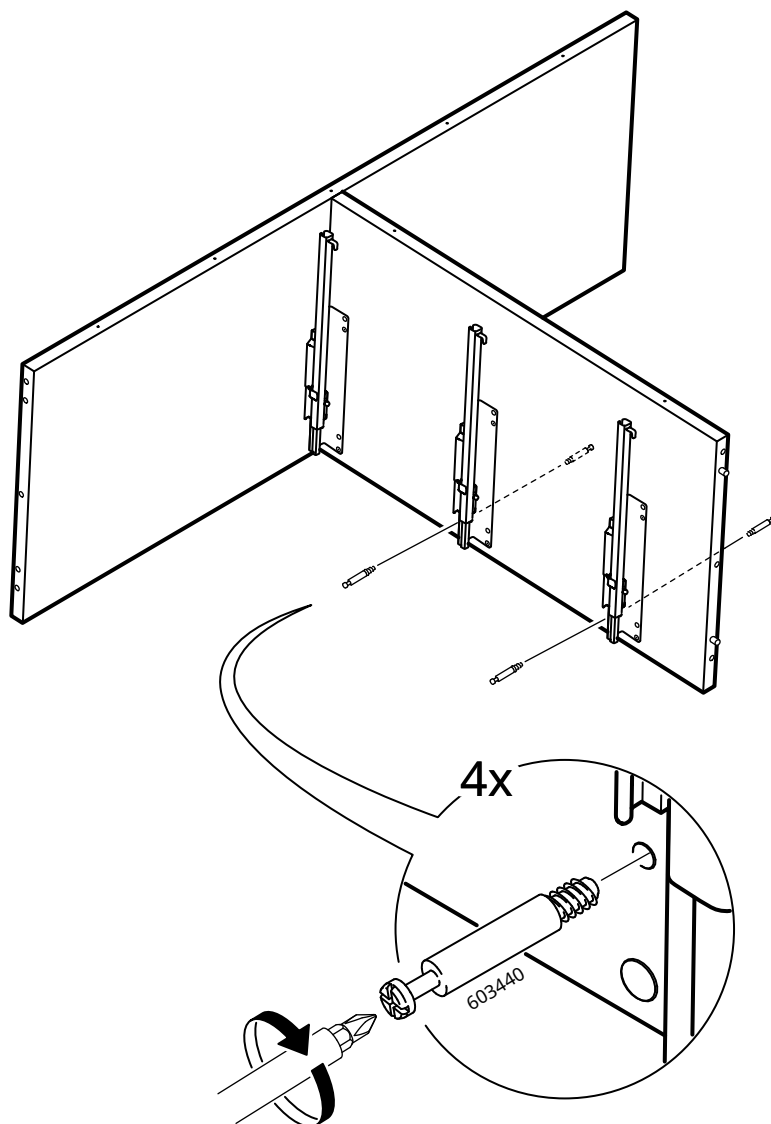 


6

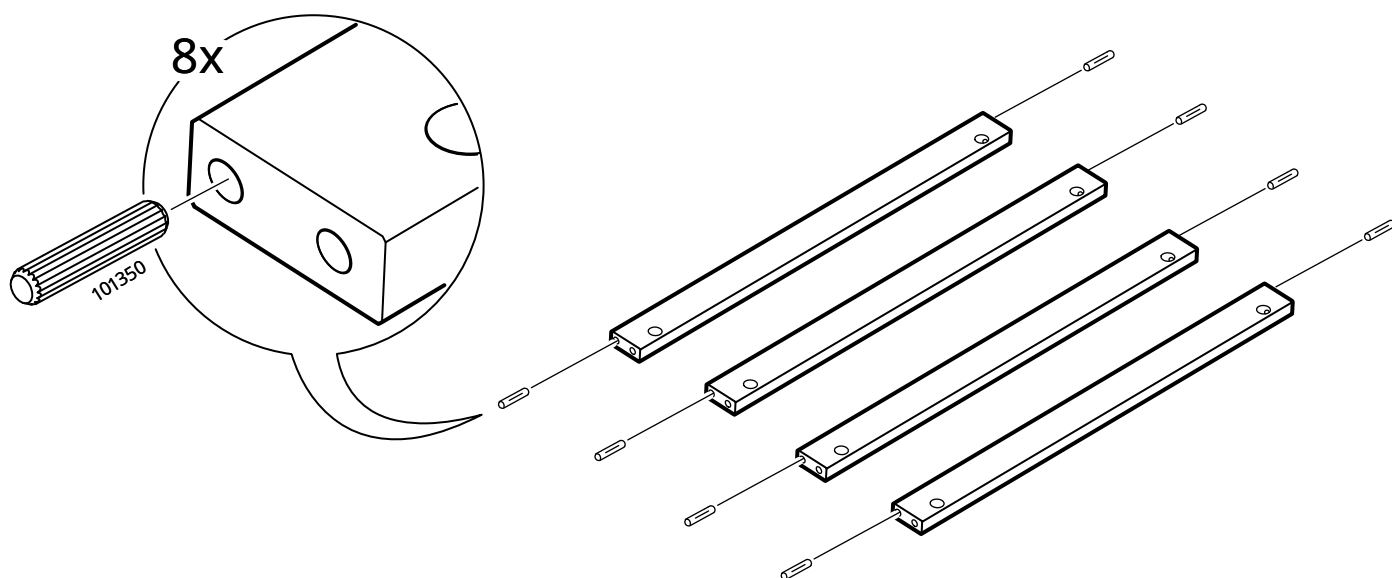 


7

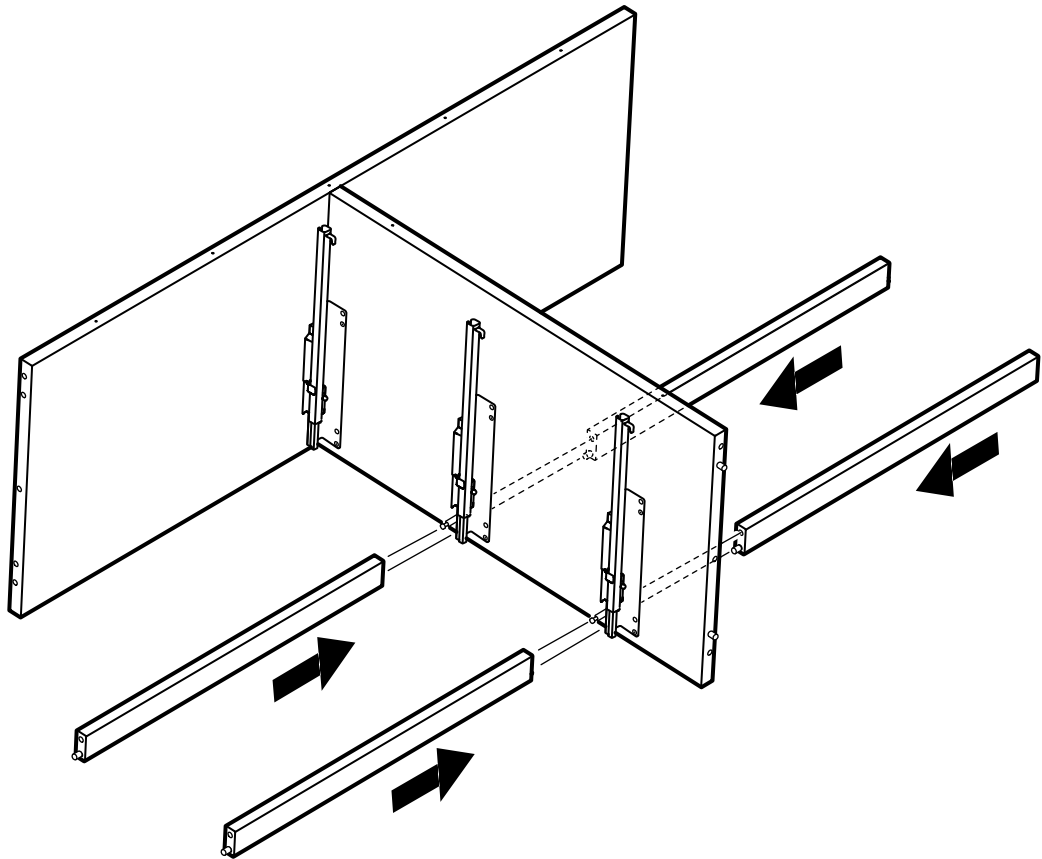 


8

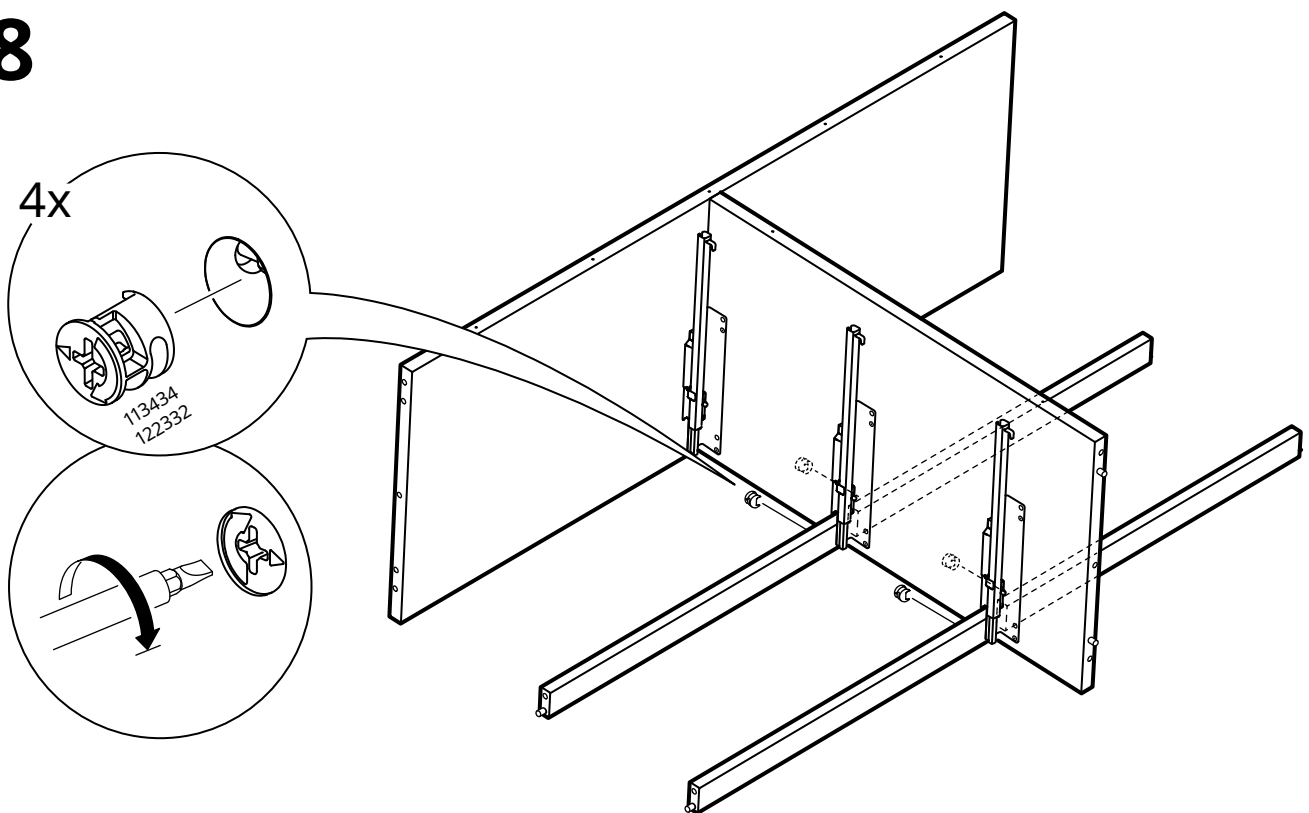 


9

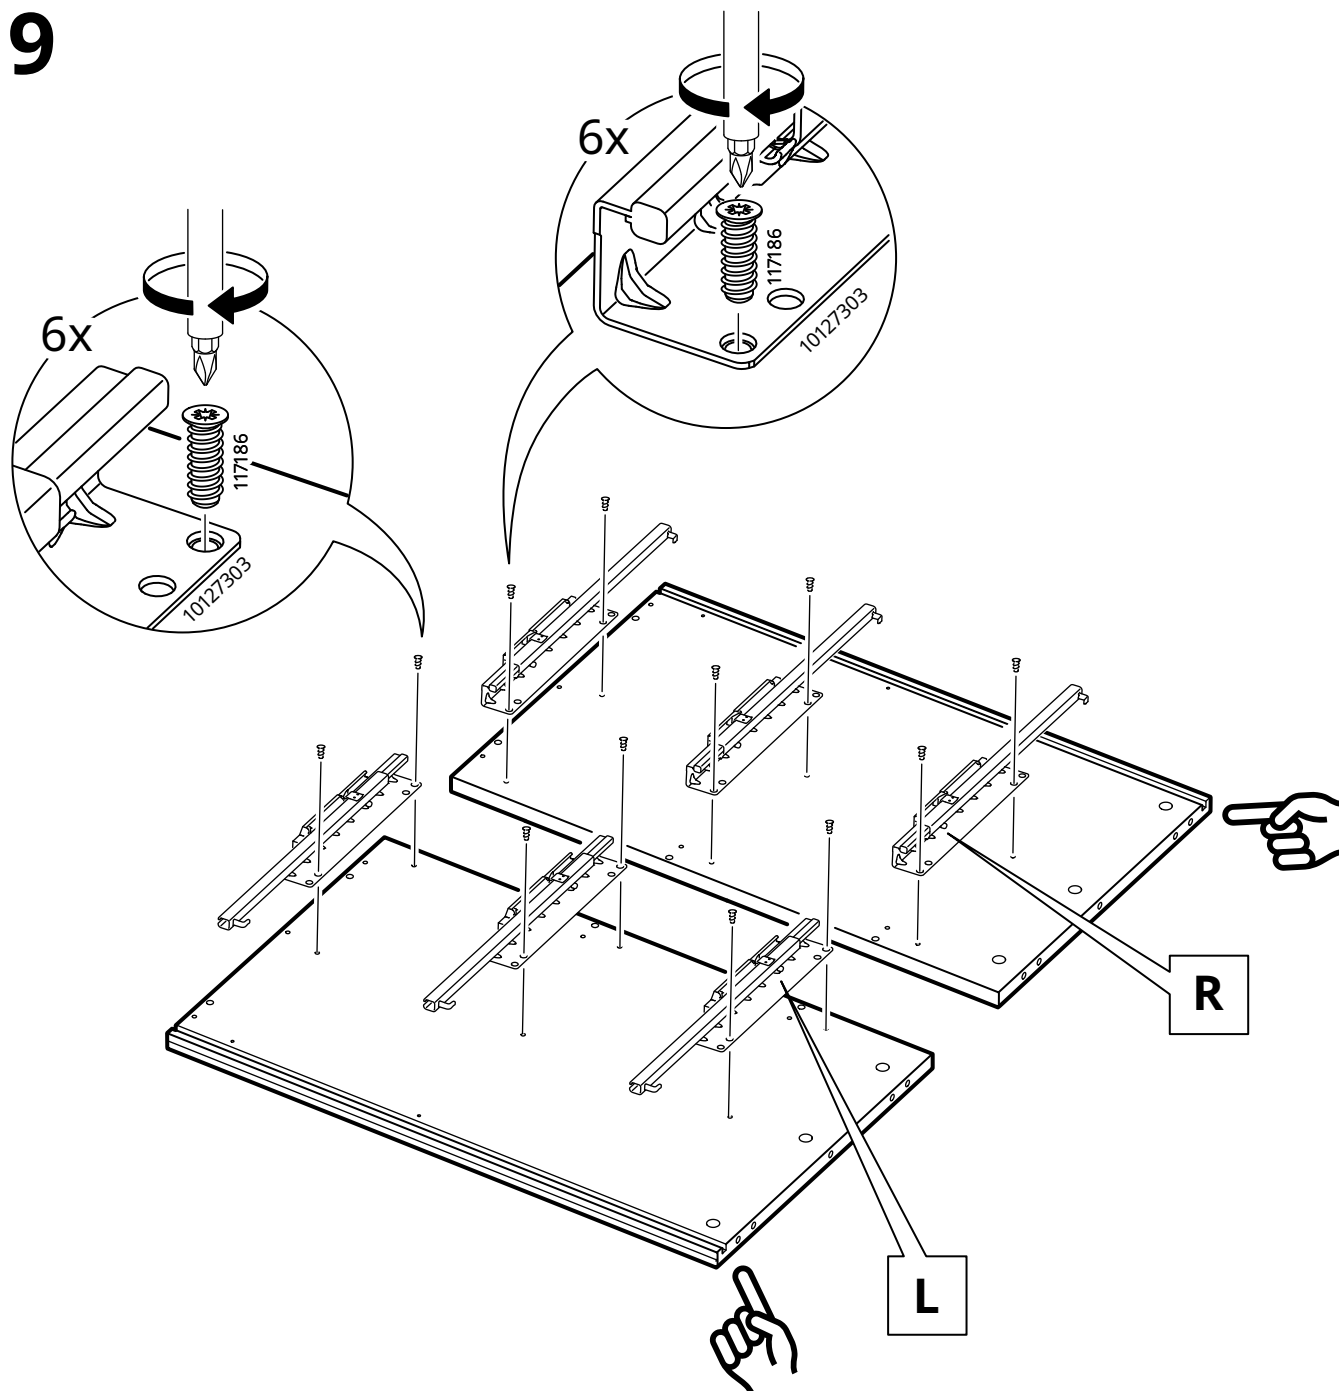 


10

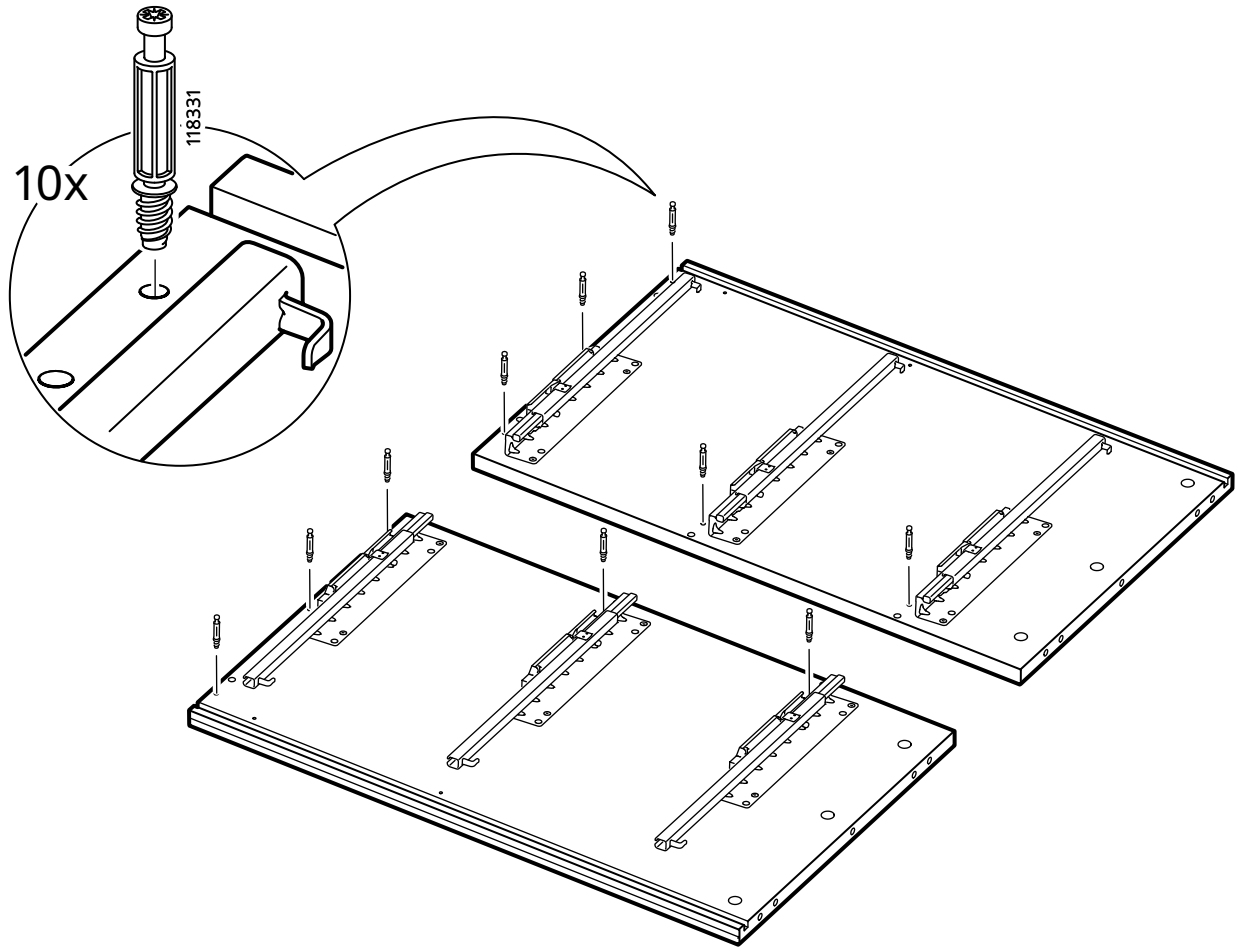 


11

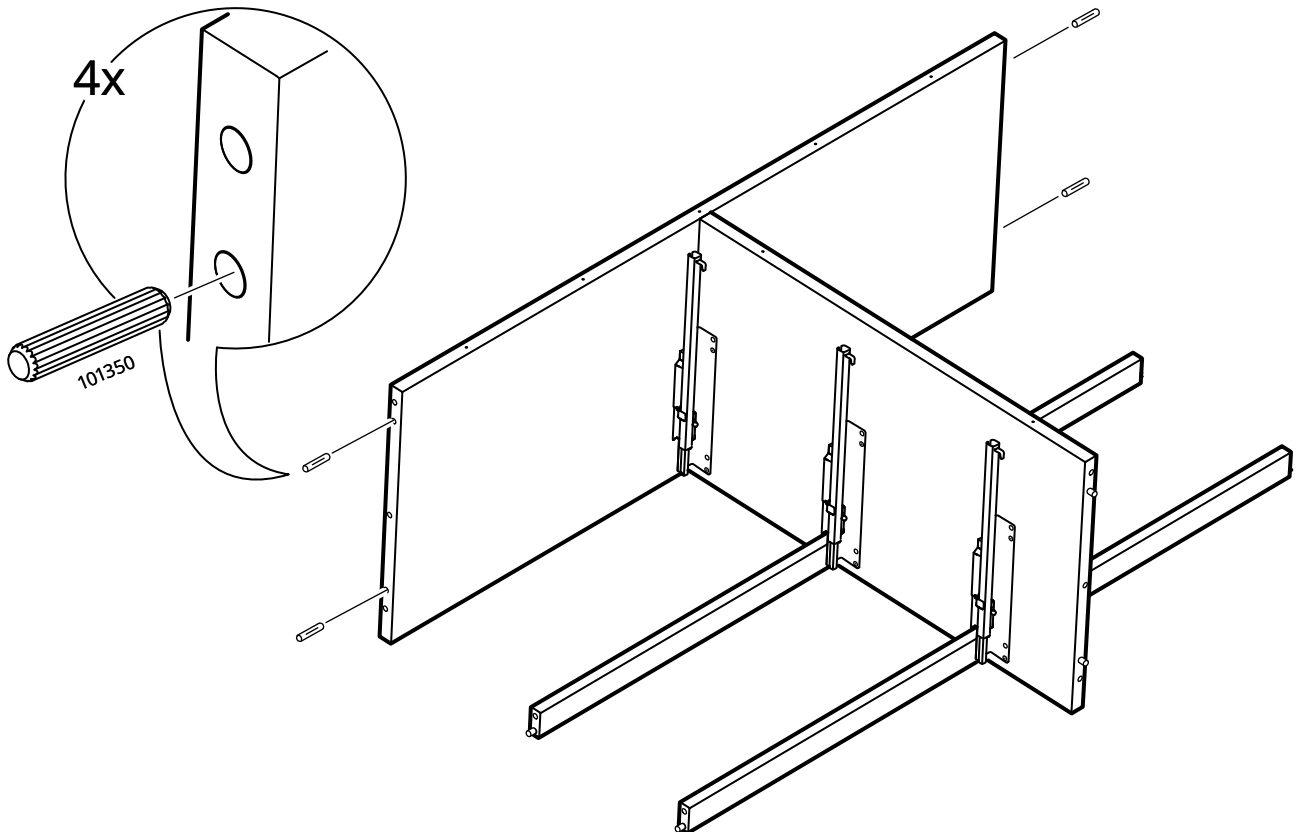 


12

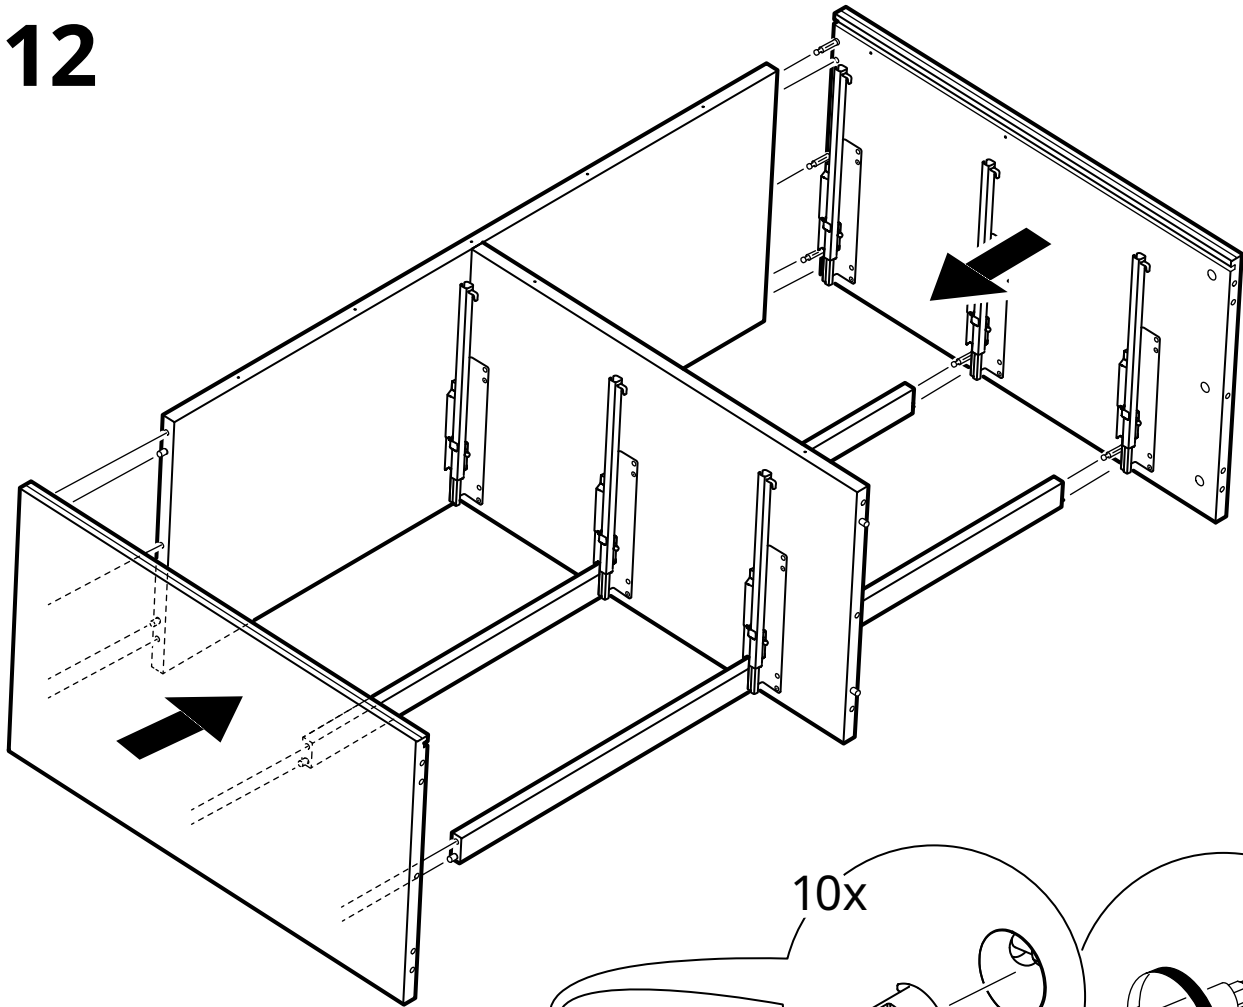 


13


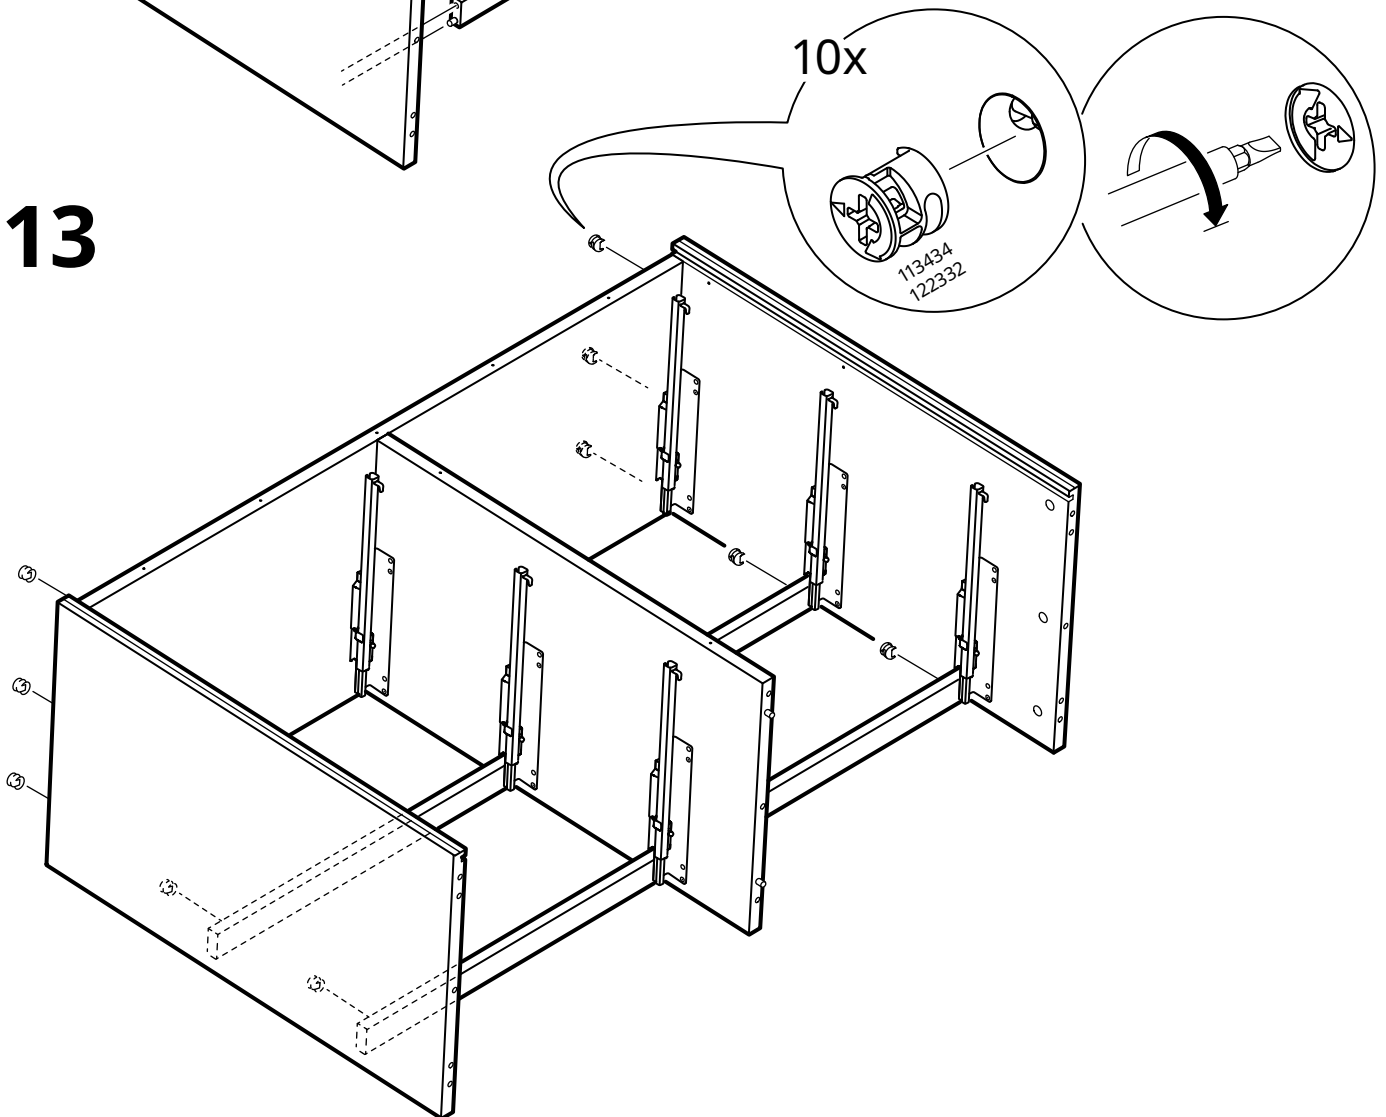 


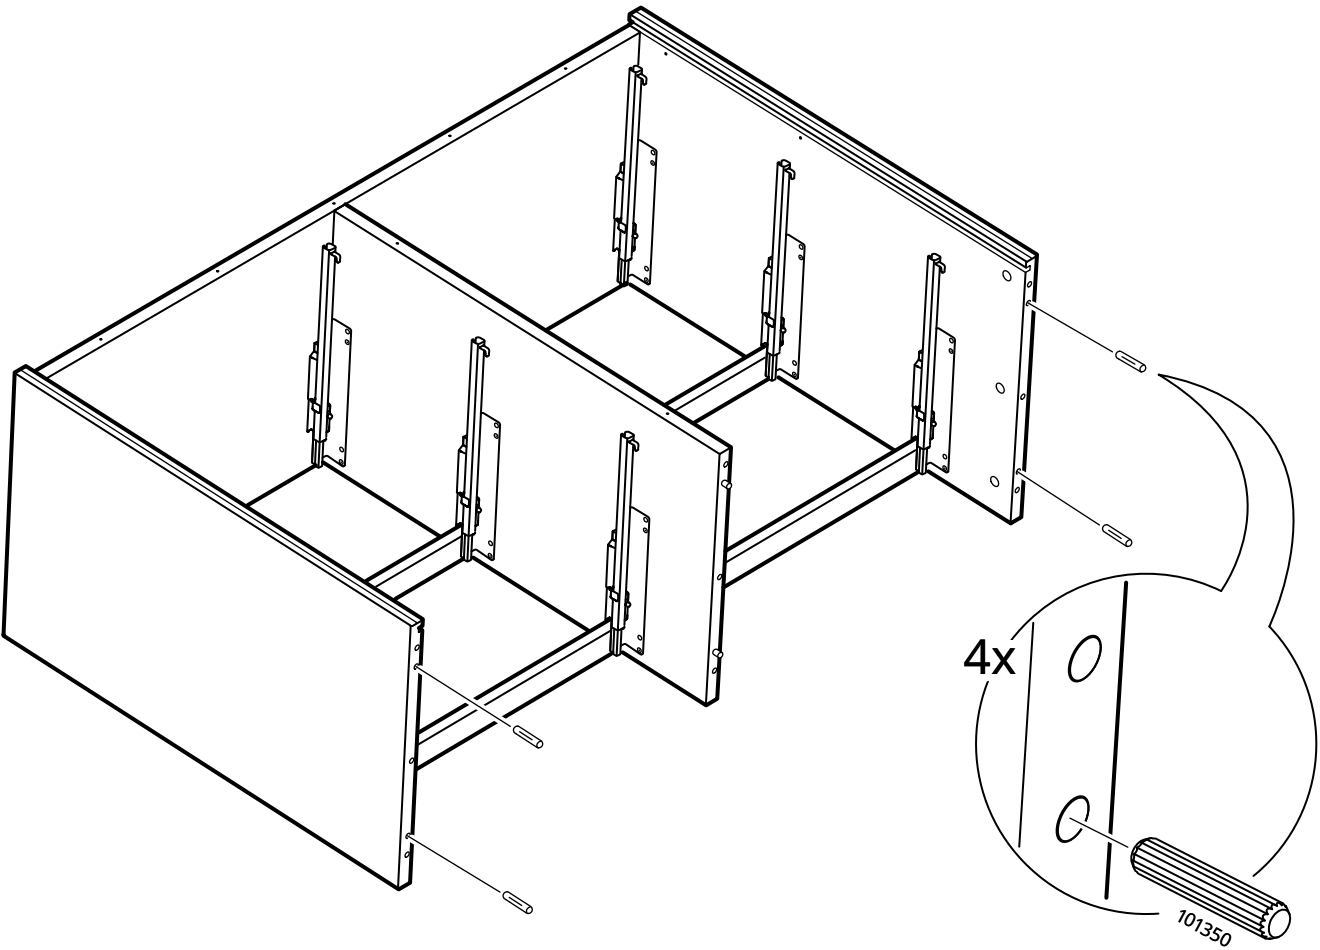 


15

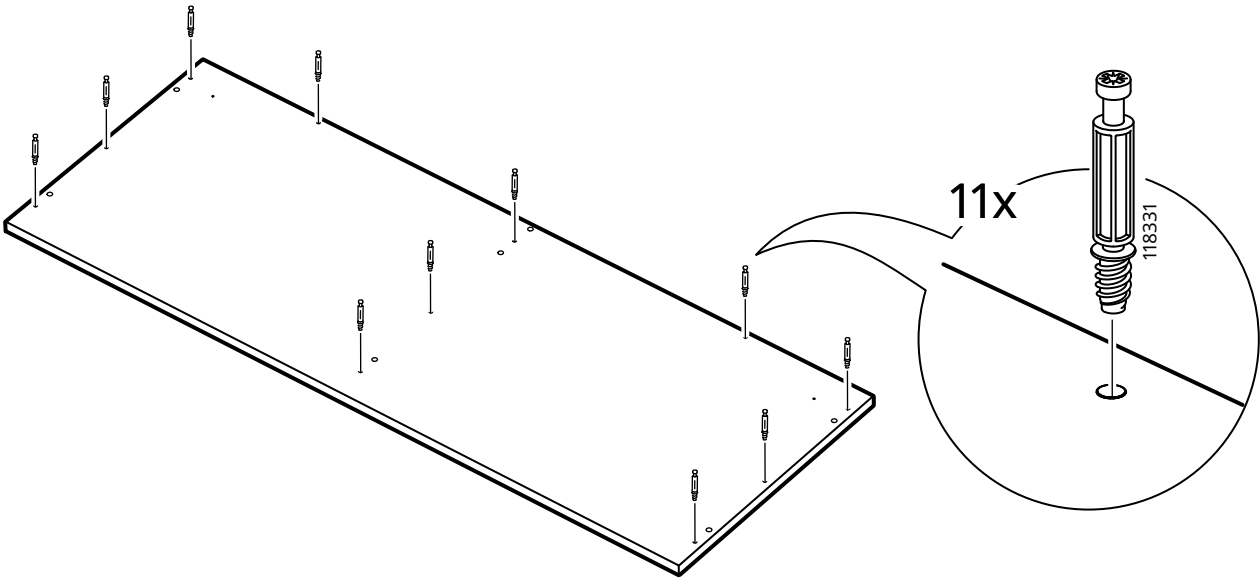 


16

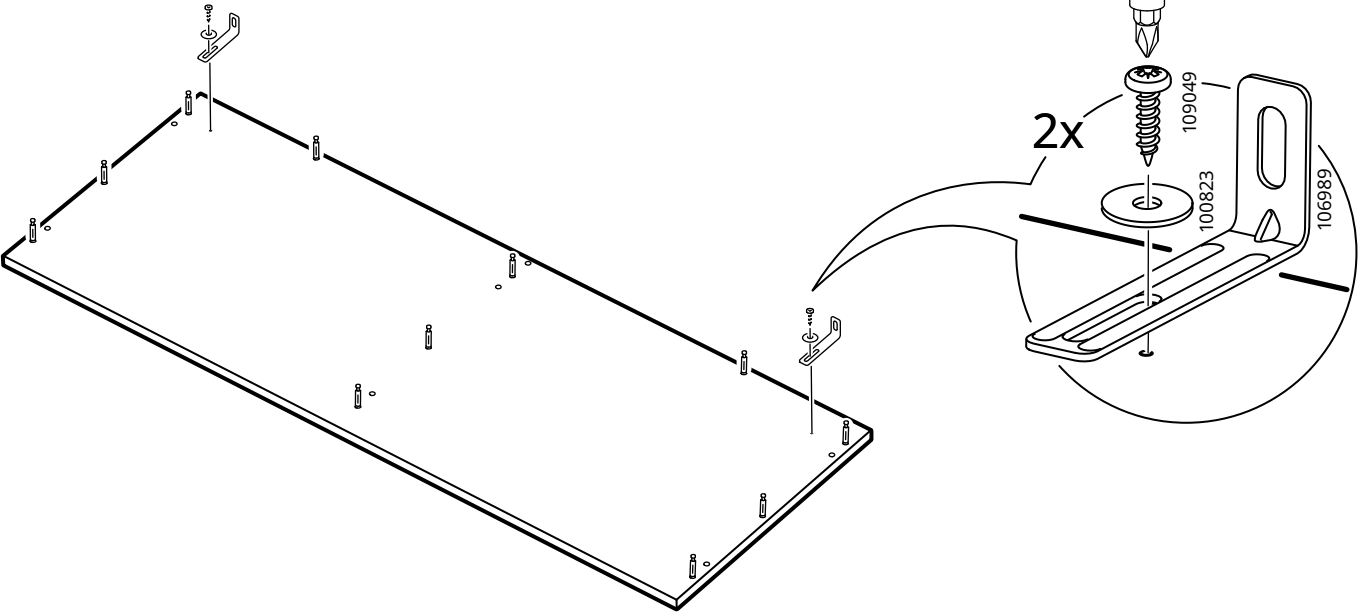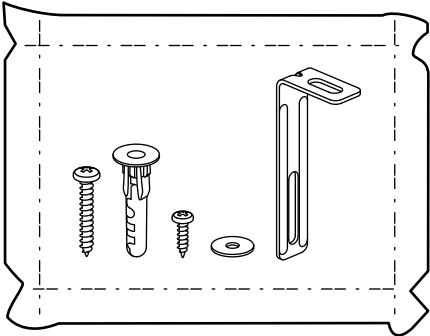  


17

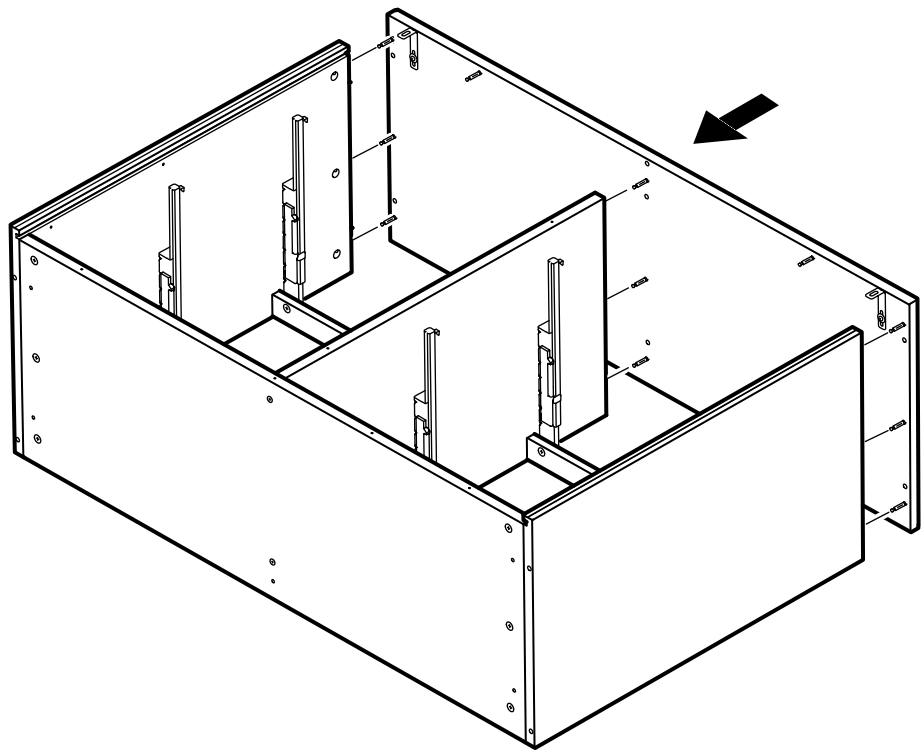 


18

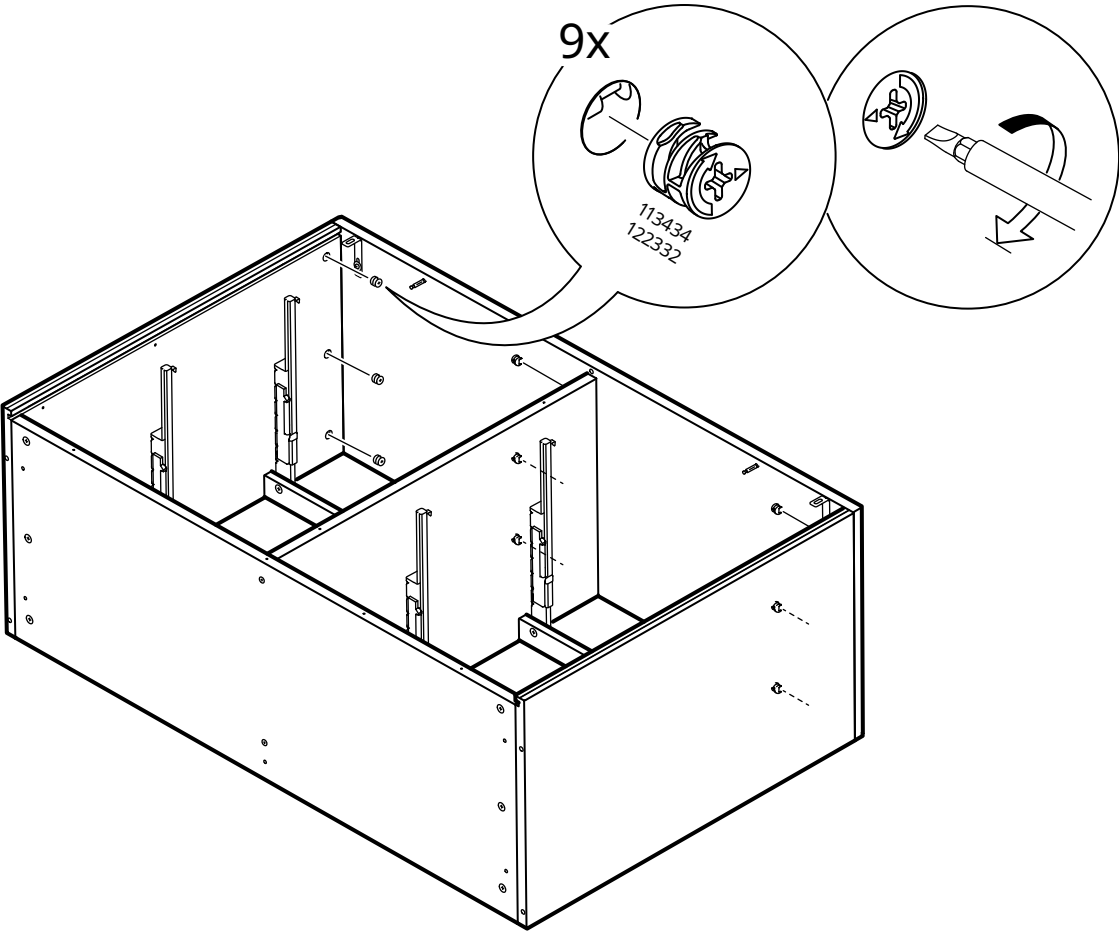 


19

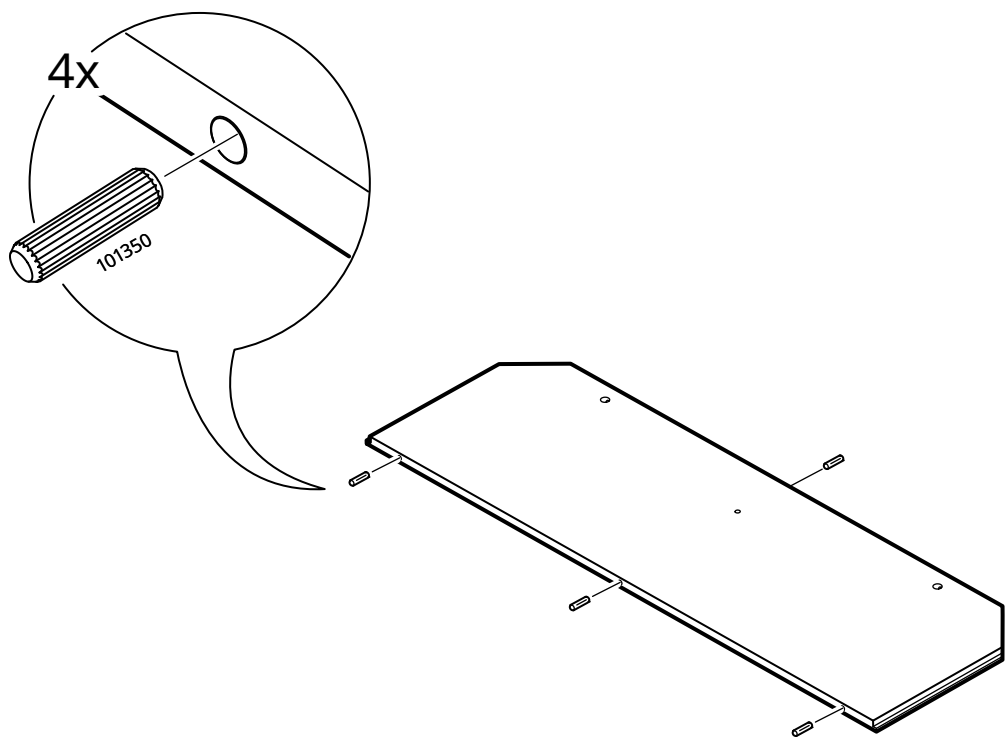 


20

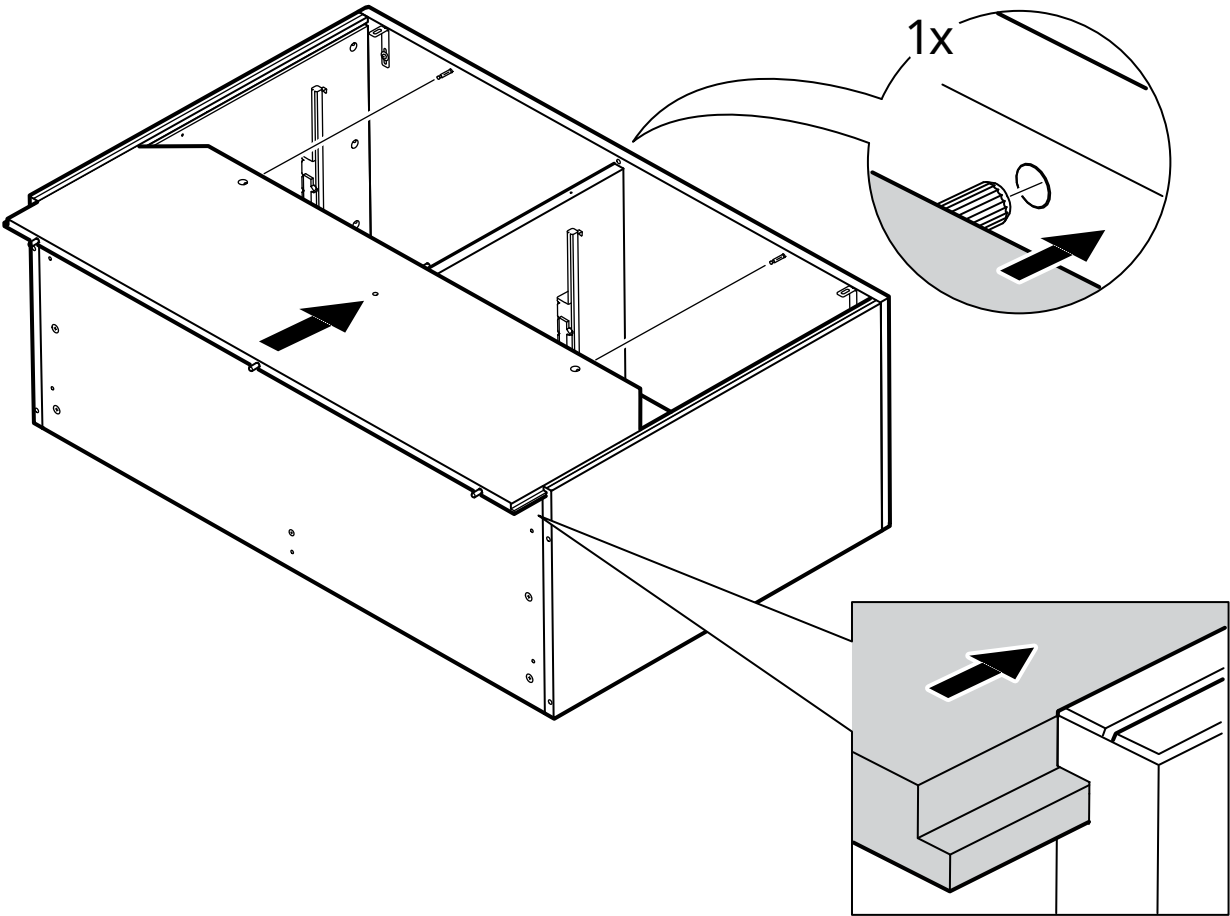 


21

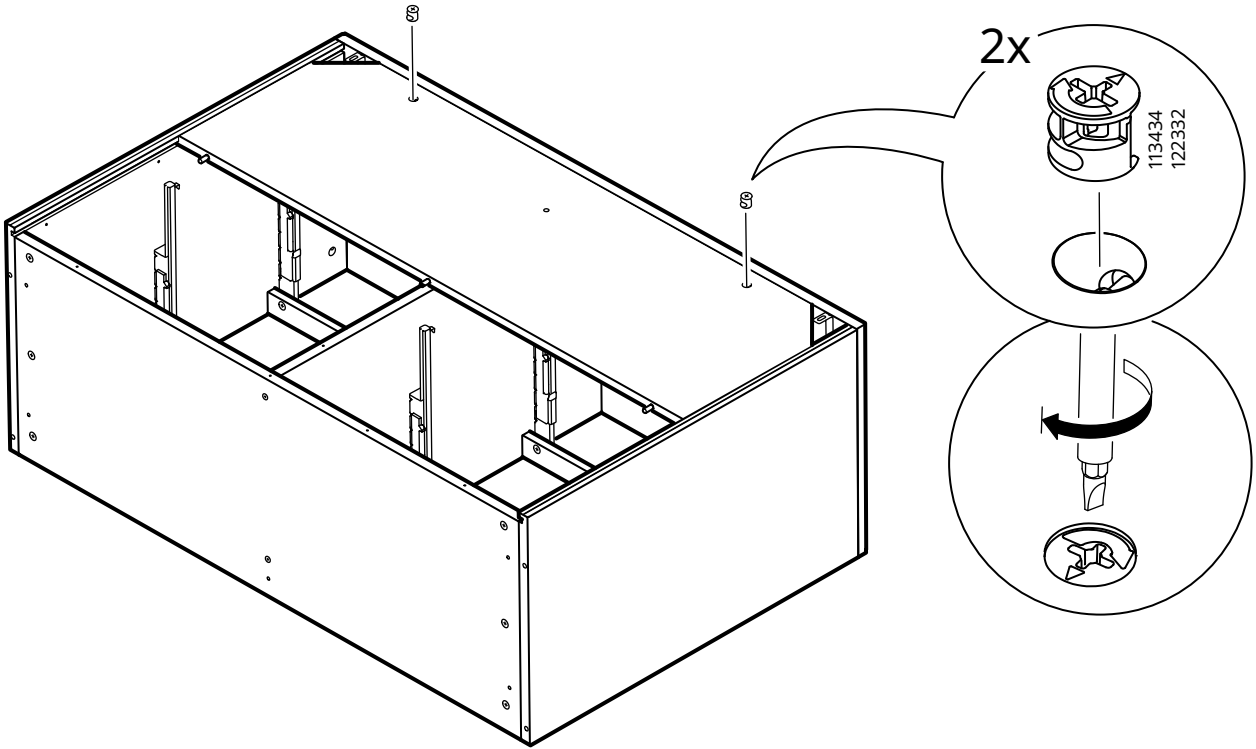 


22

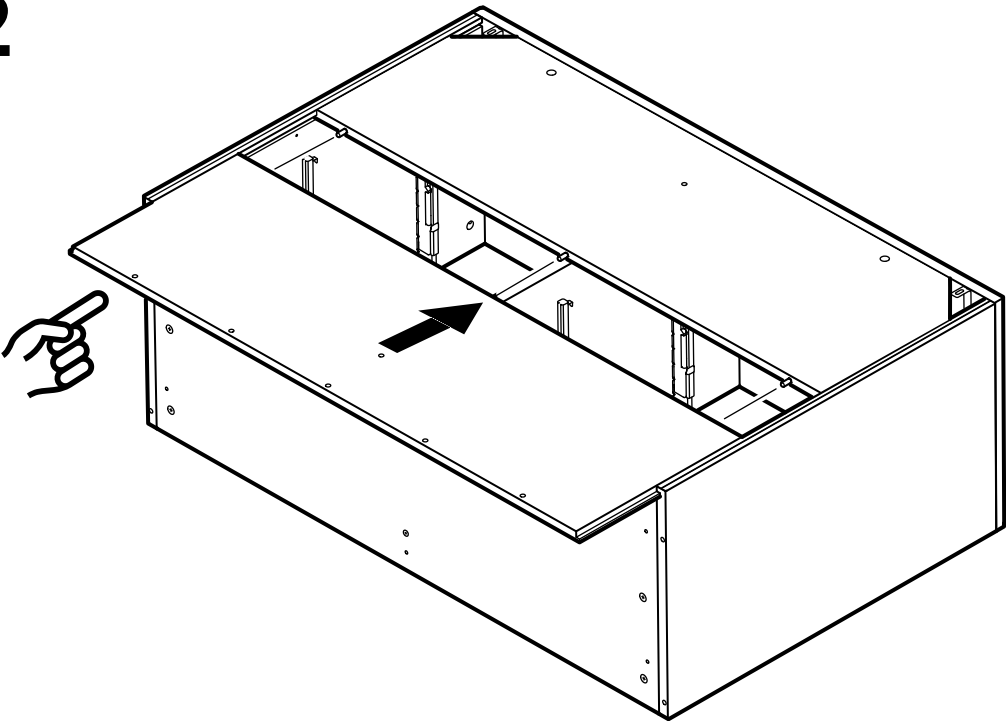 


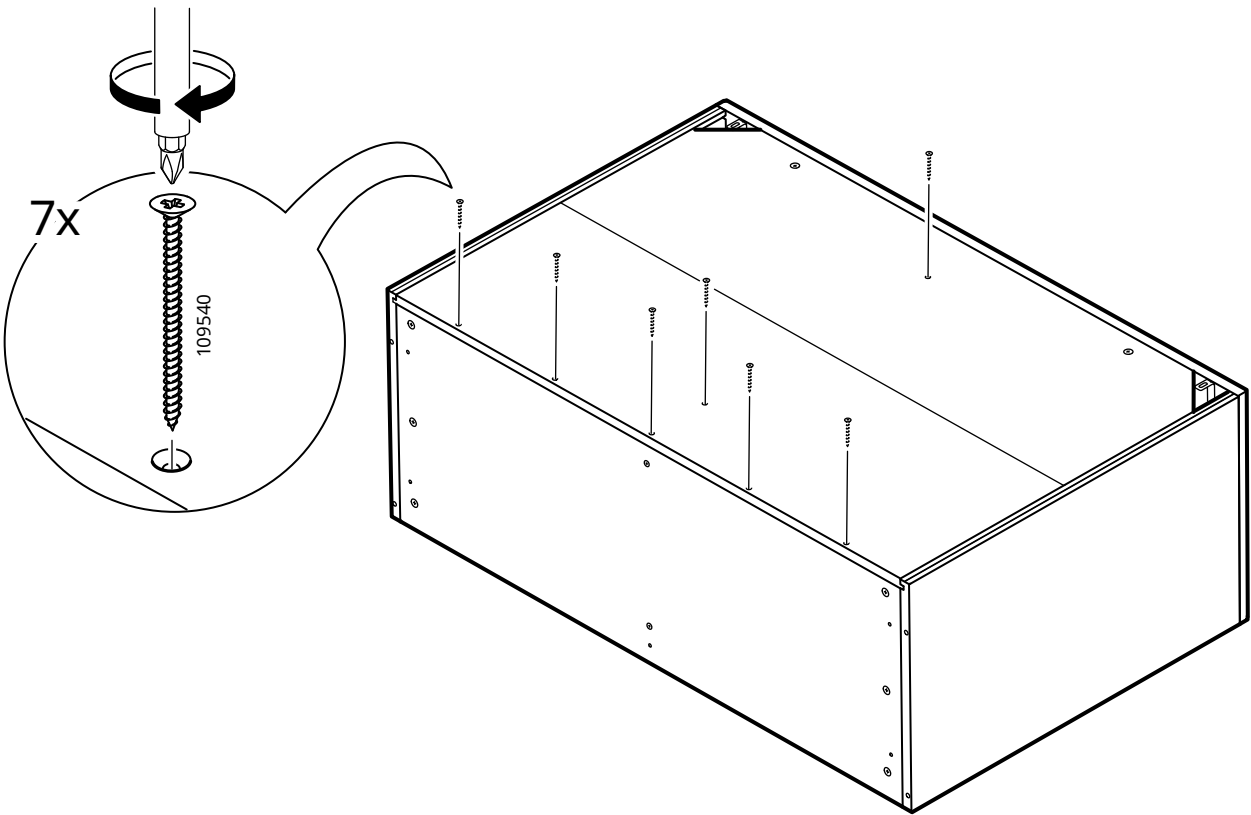 


24

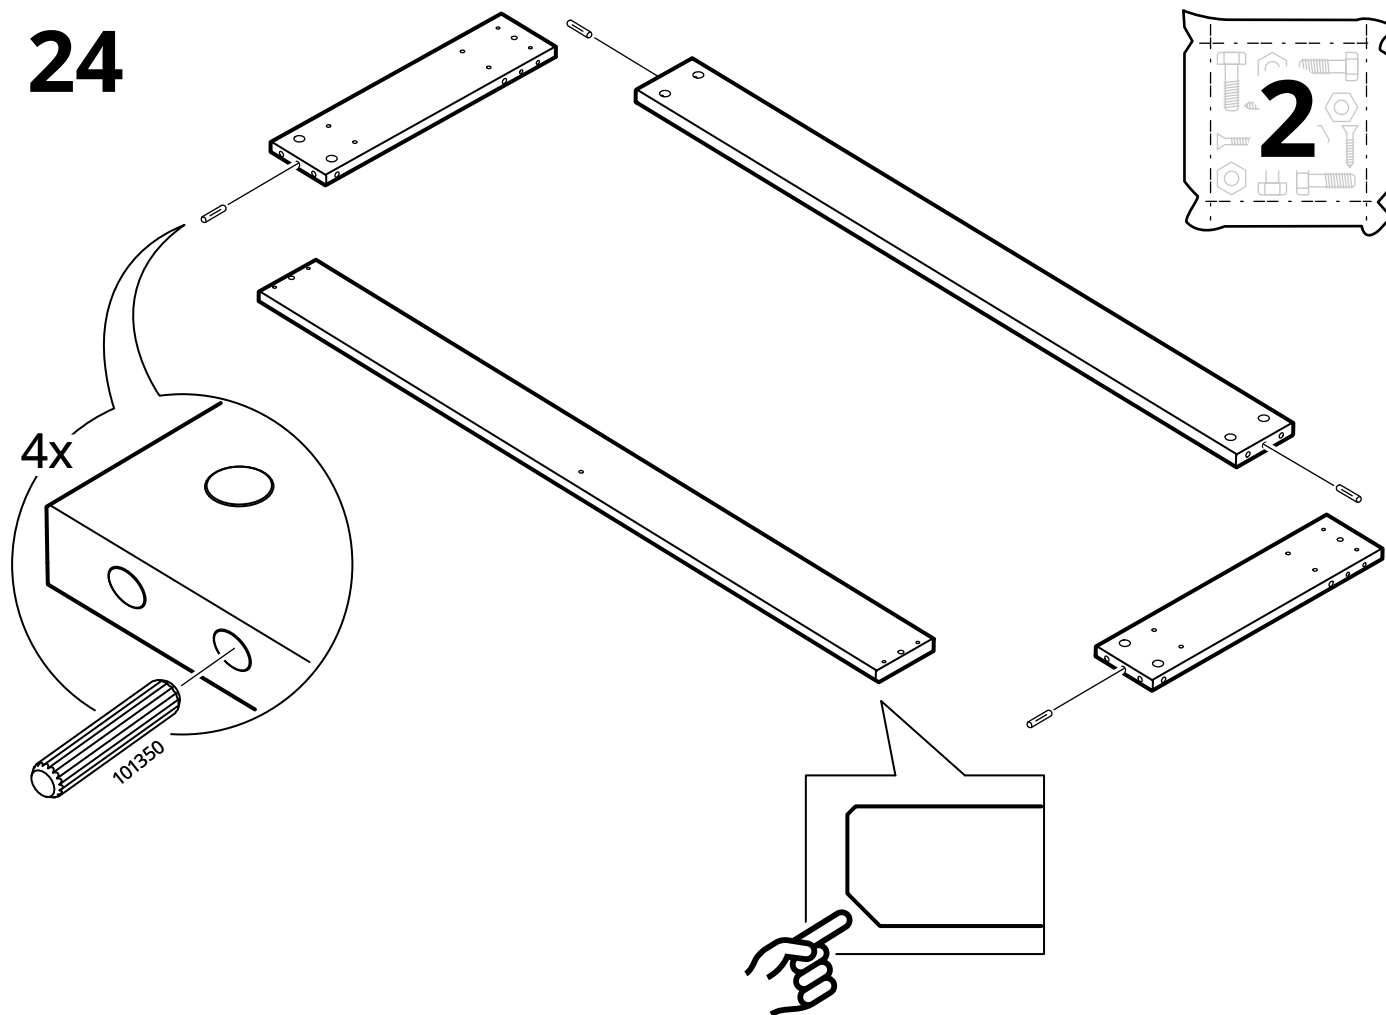 


25

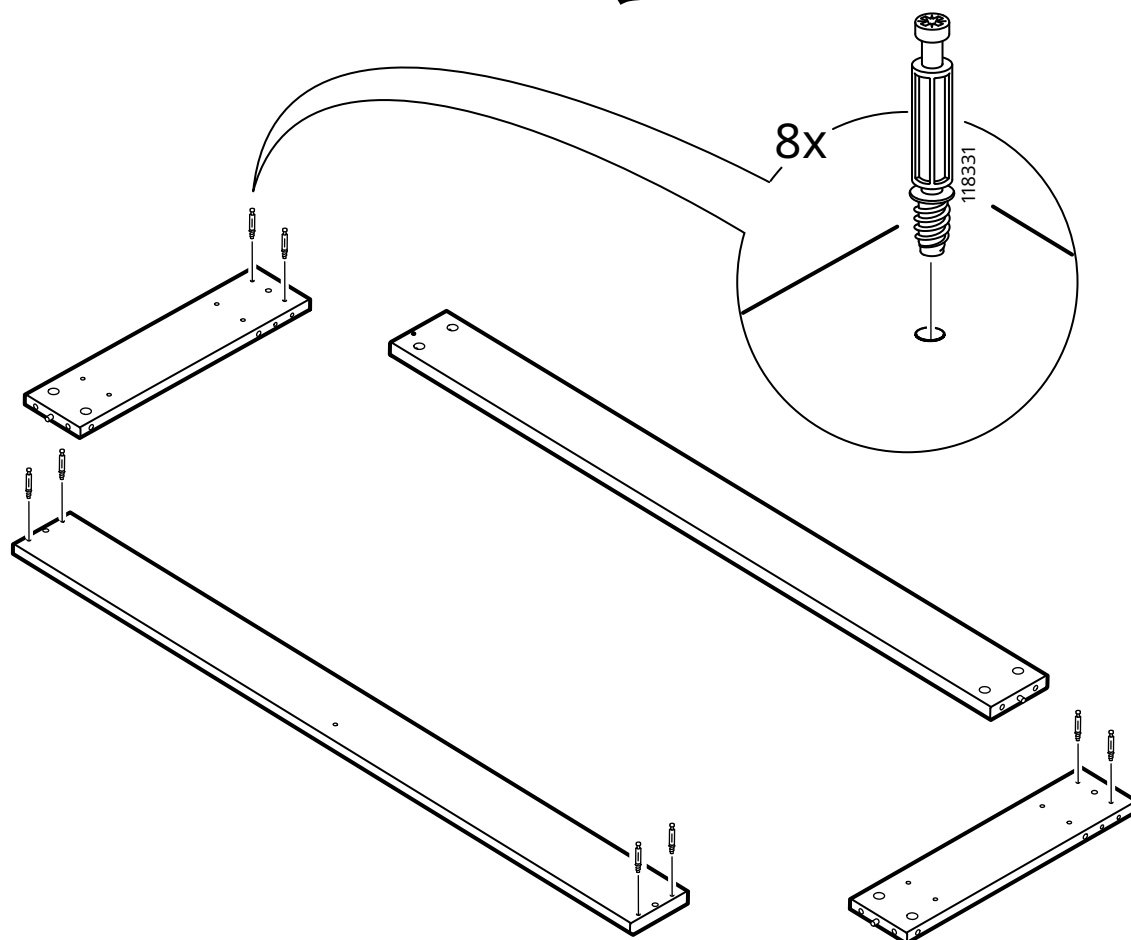 


26

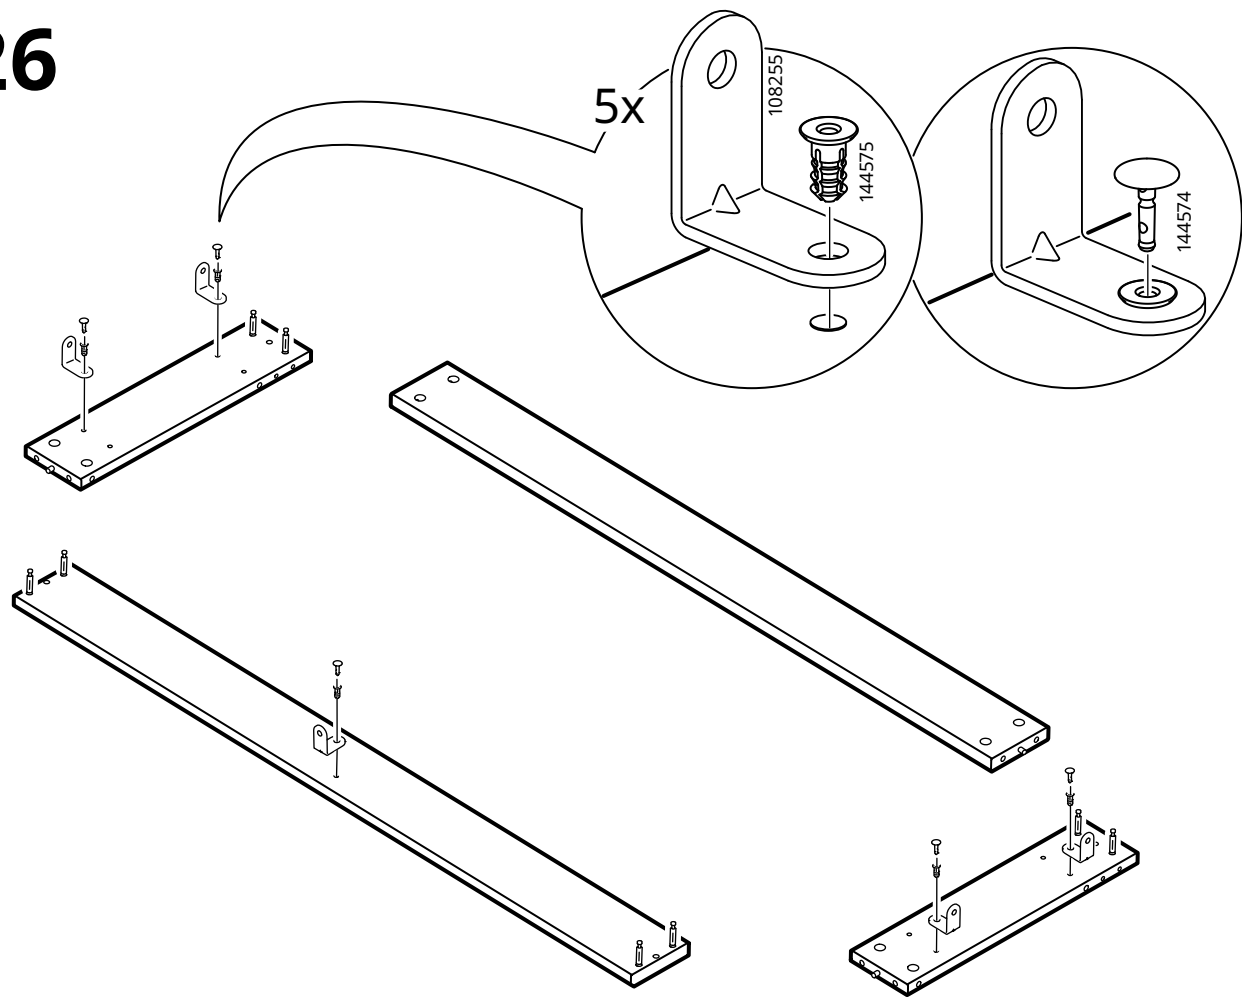 


27

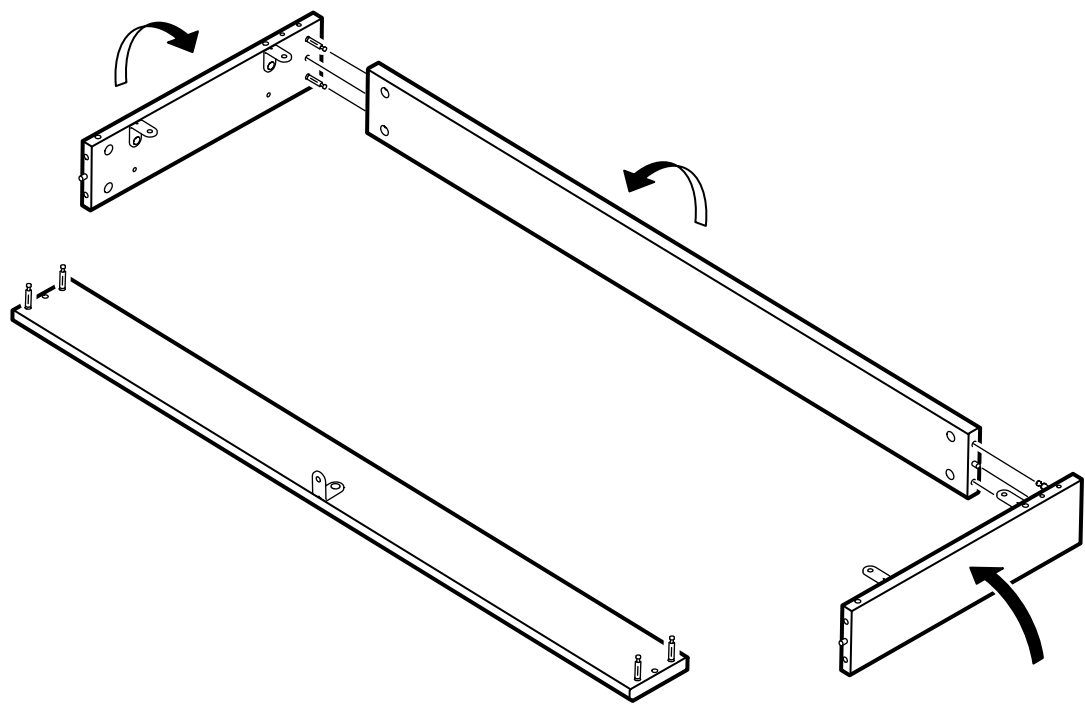 


28

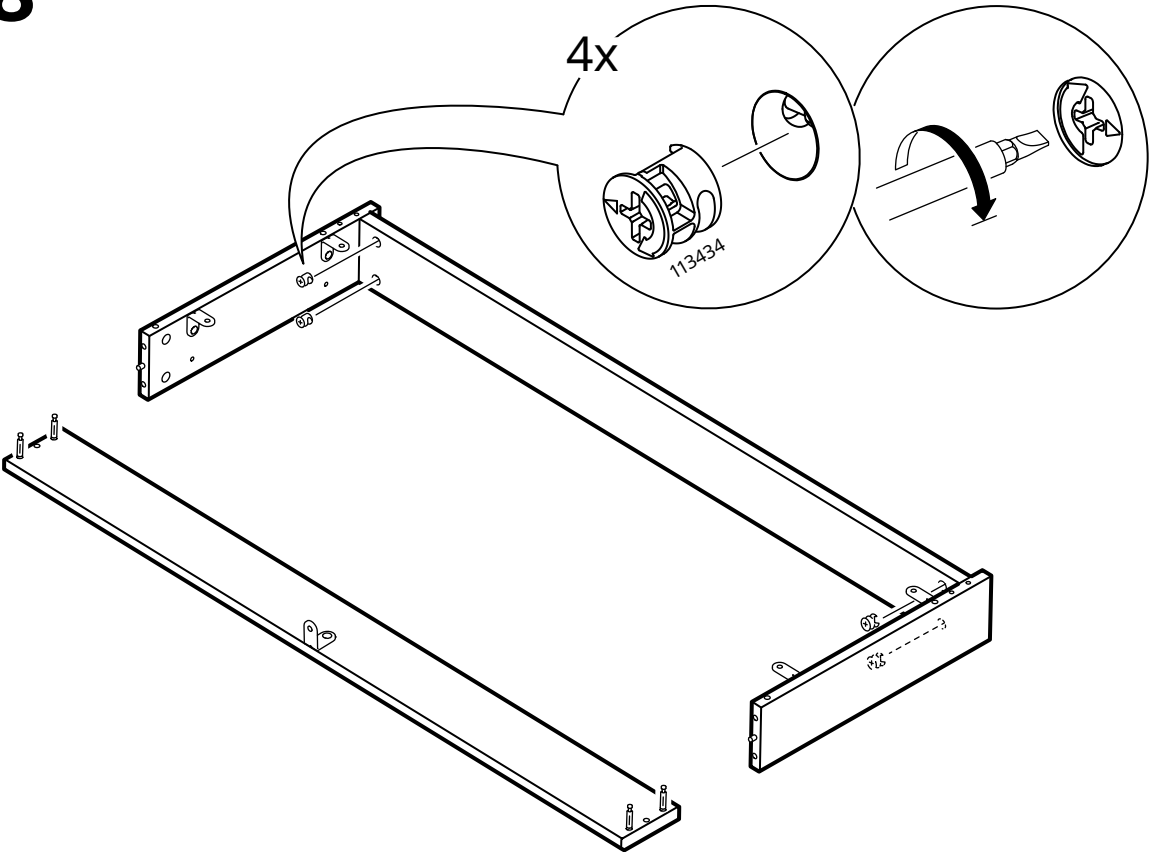 


29

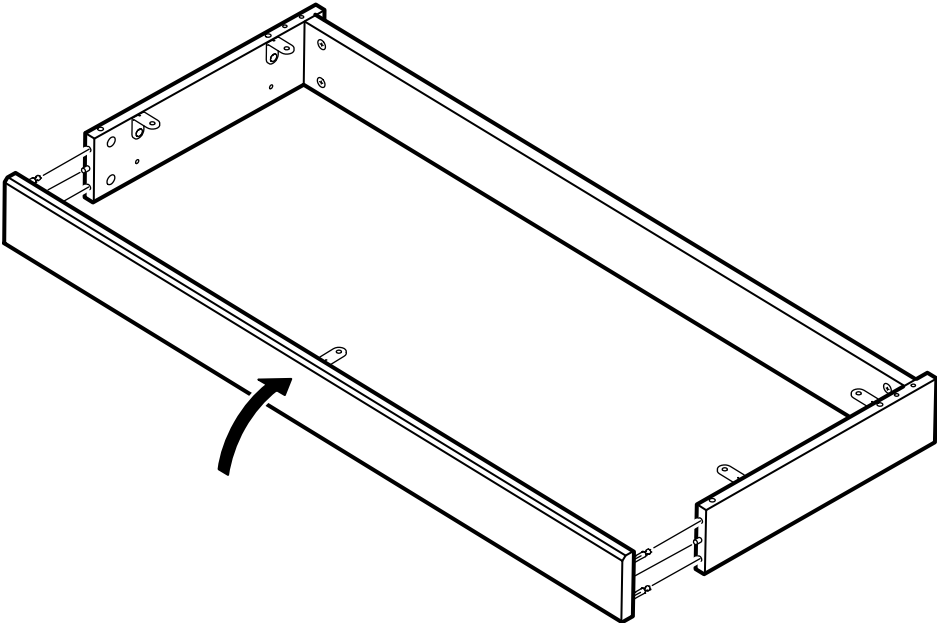 


30


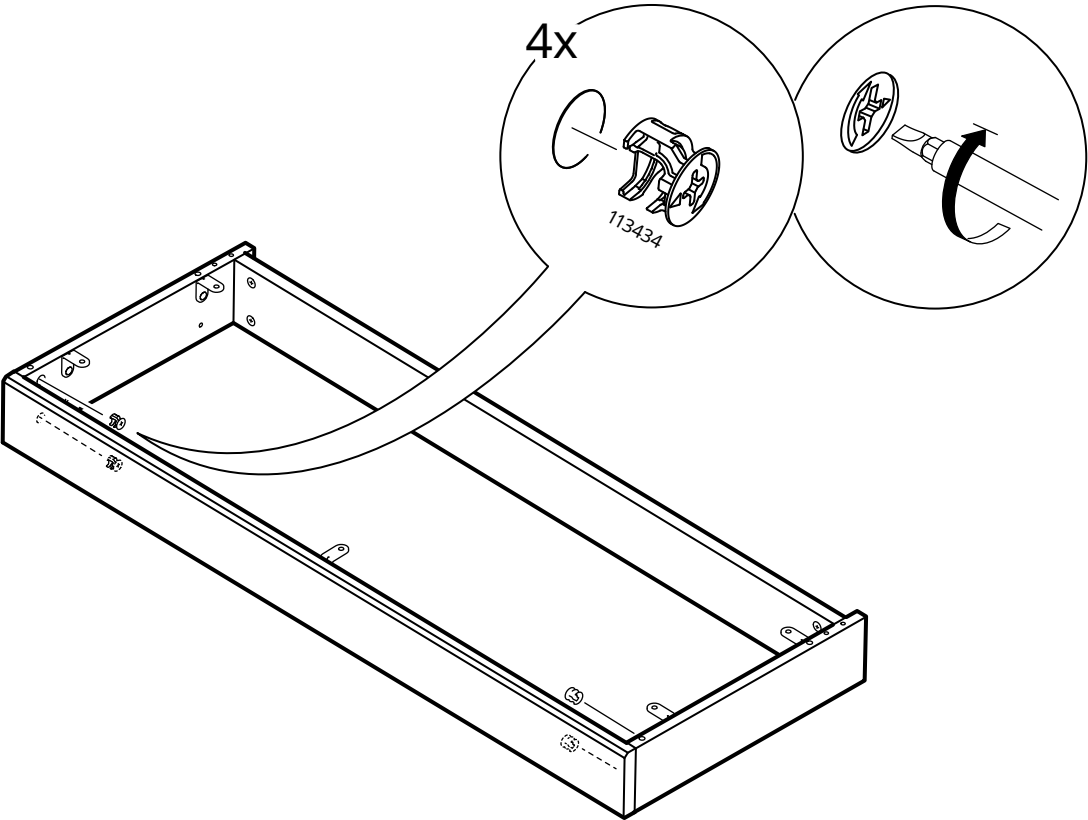 


31

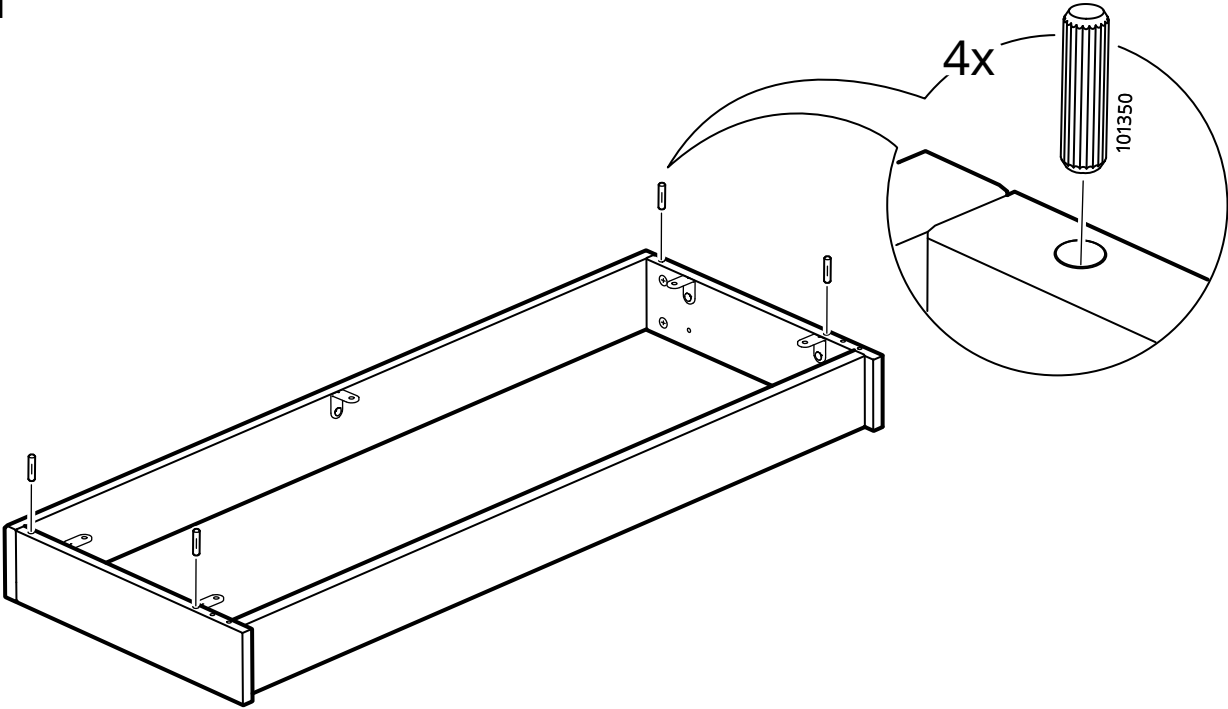 


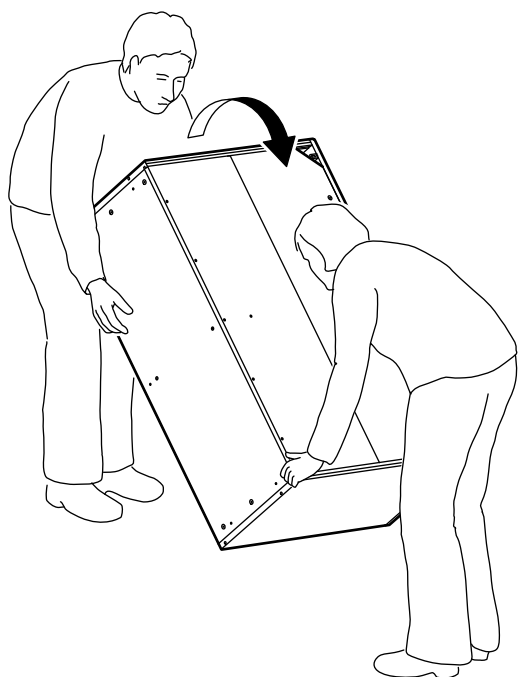 


32

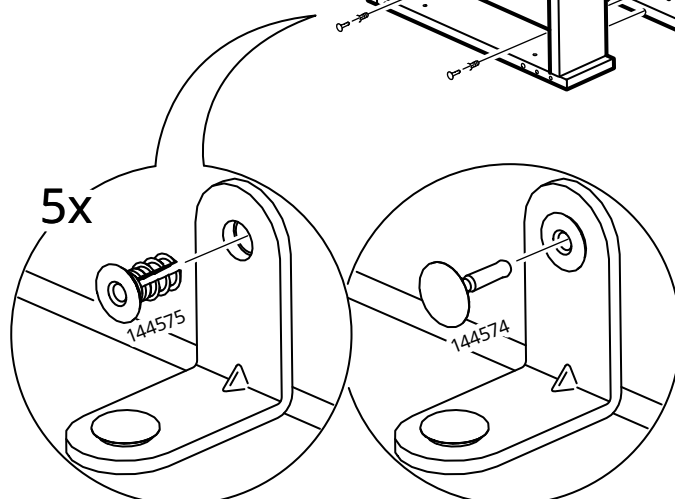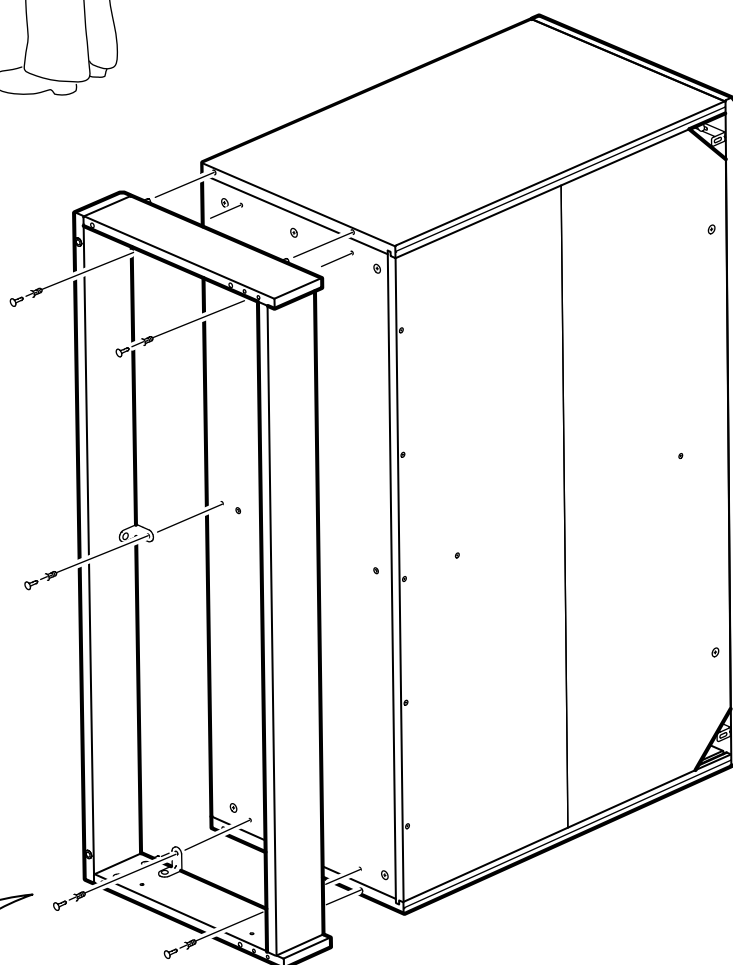  


33


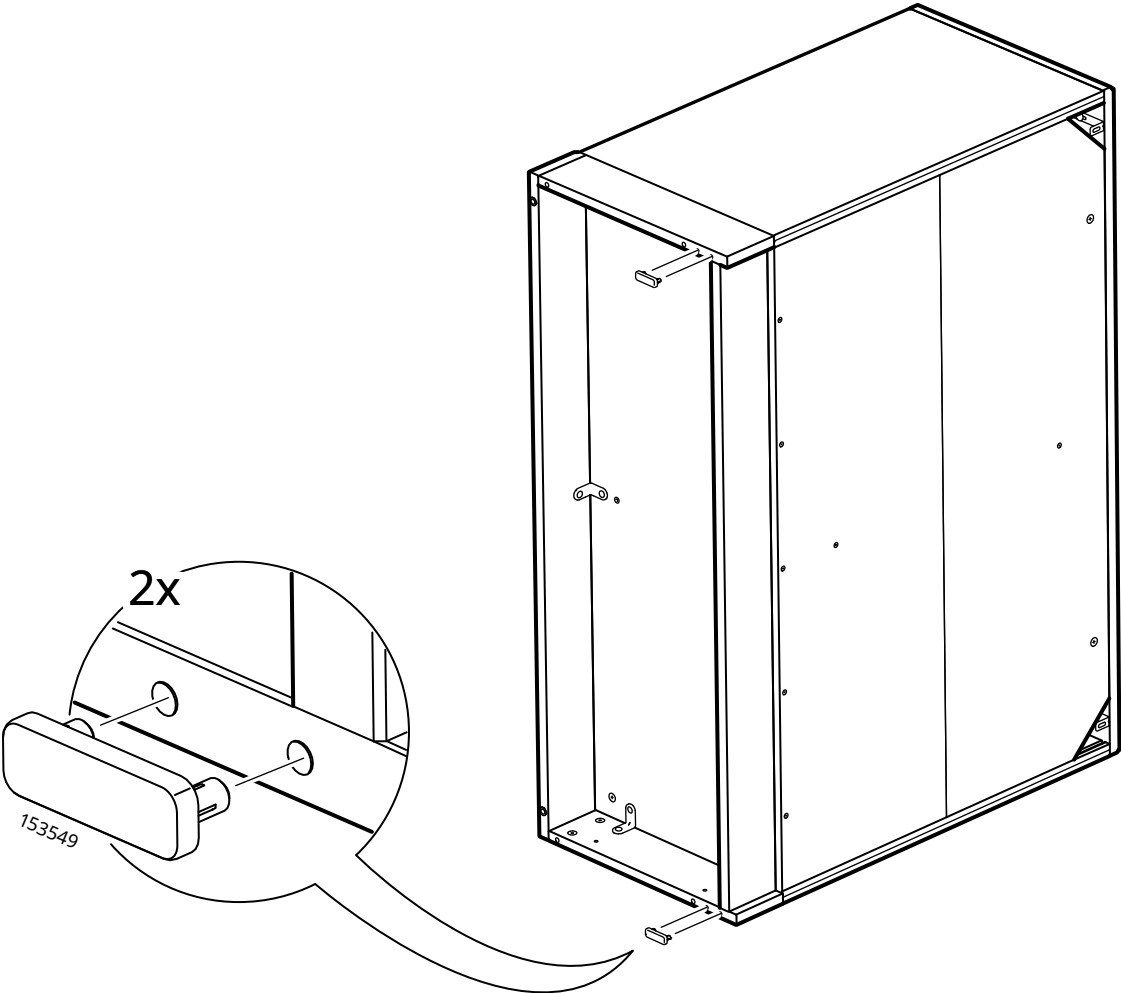 


34

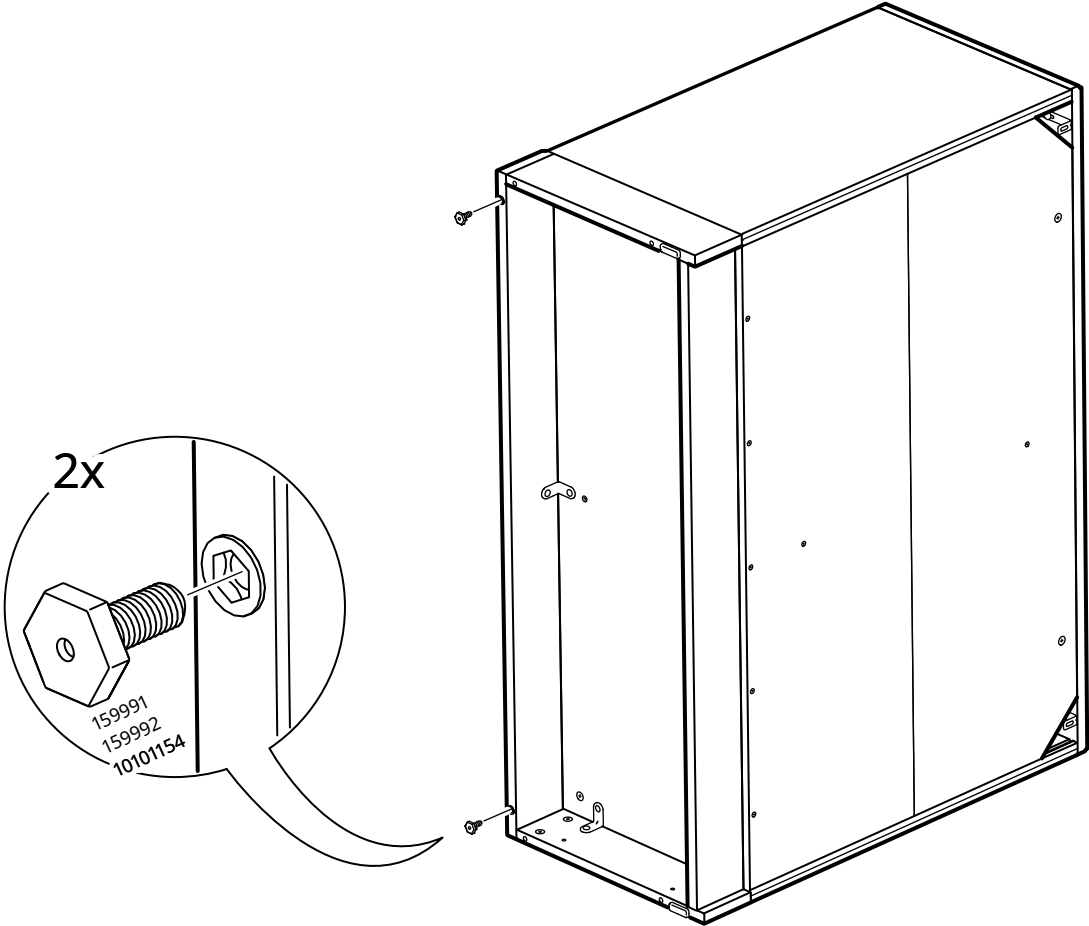 


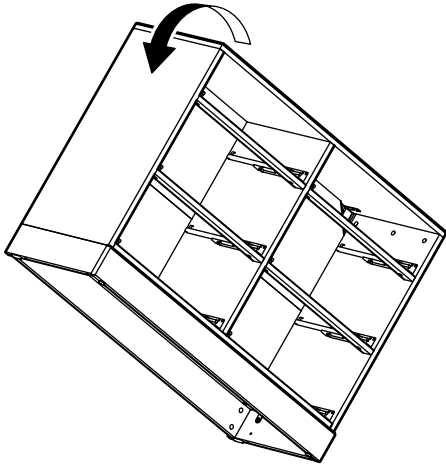 

35

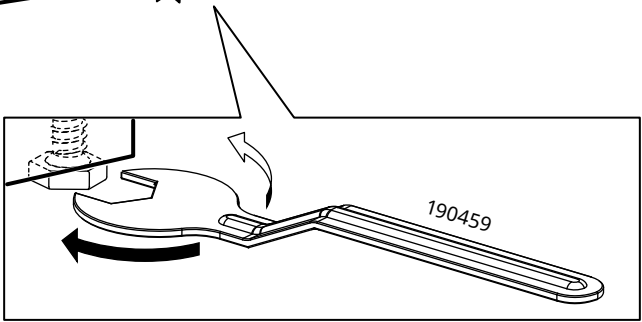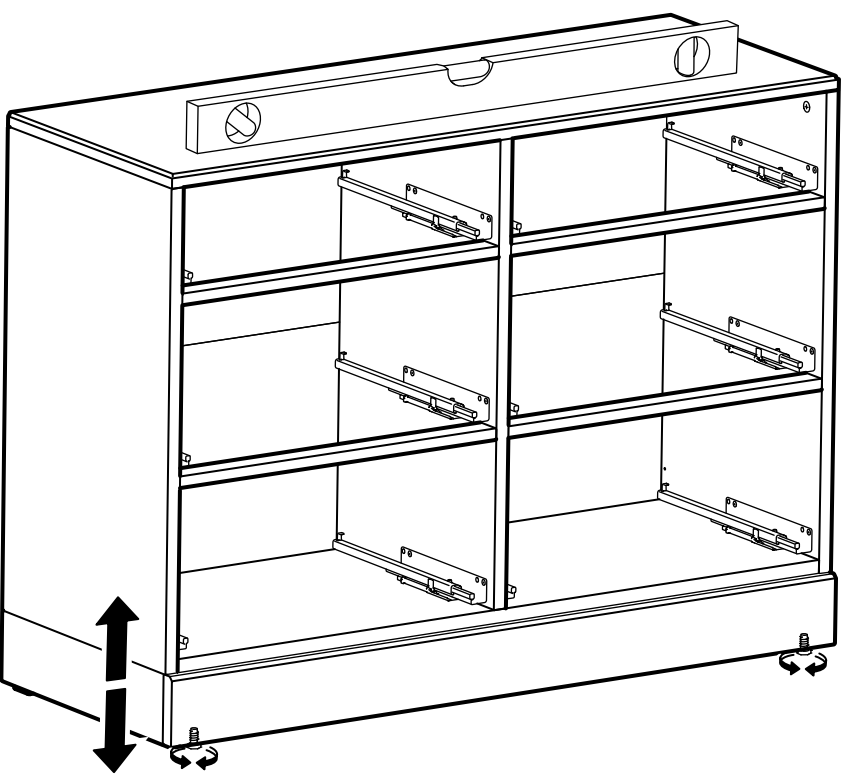  


36

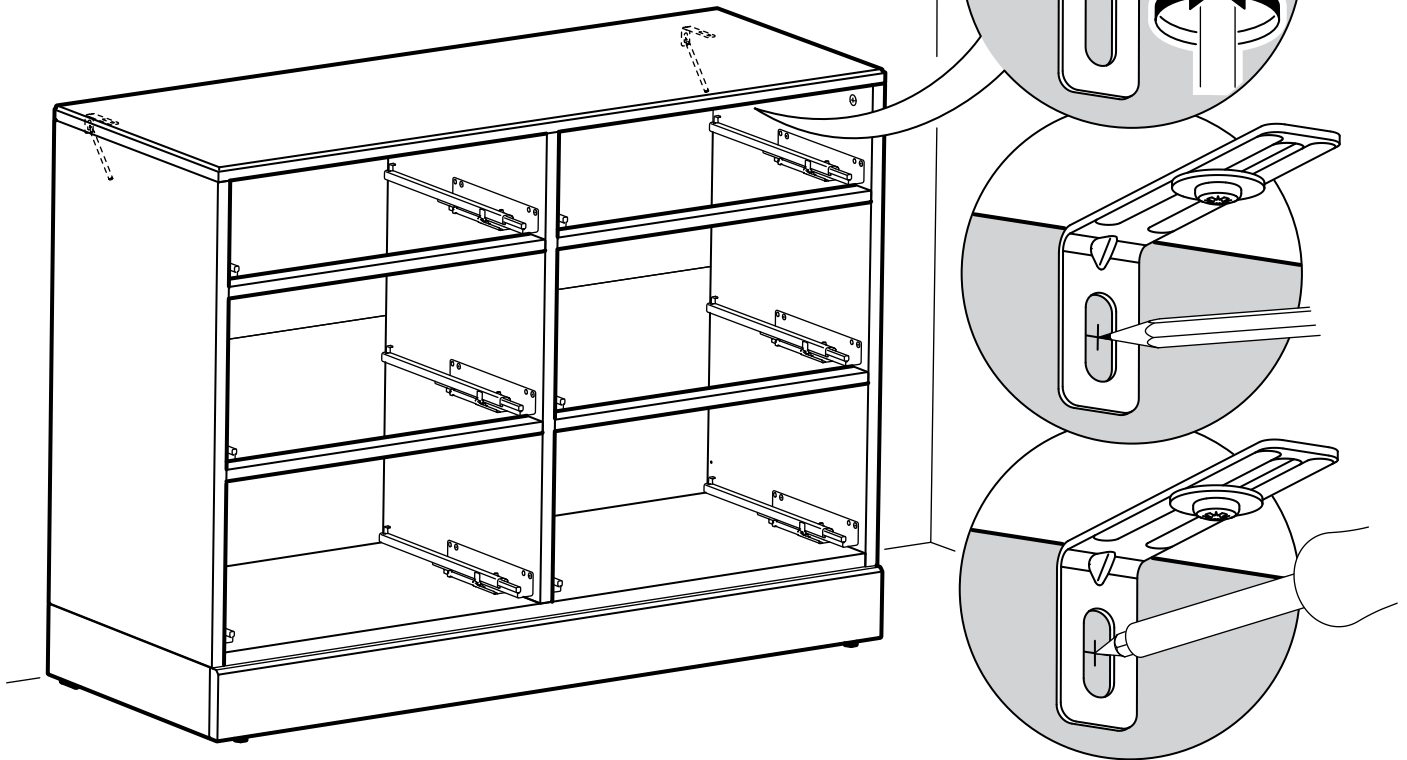 

37

x

 x

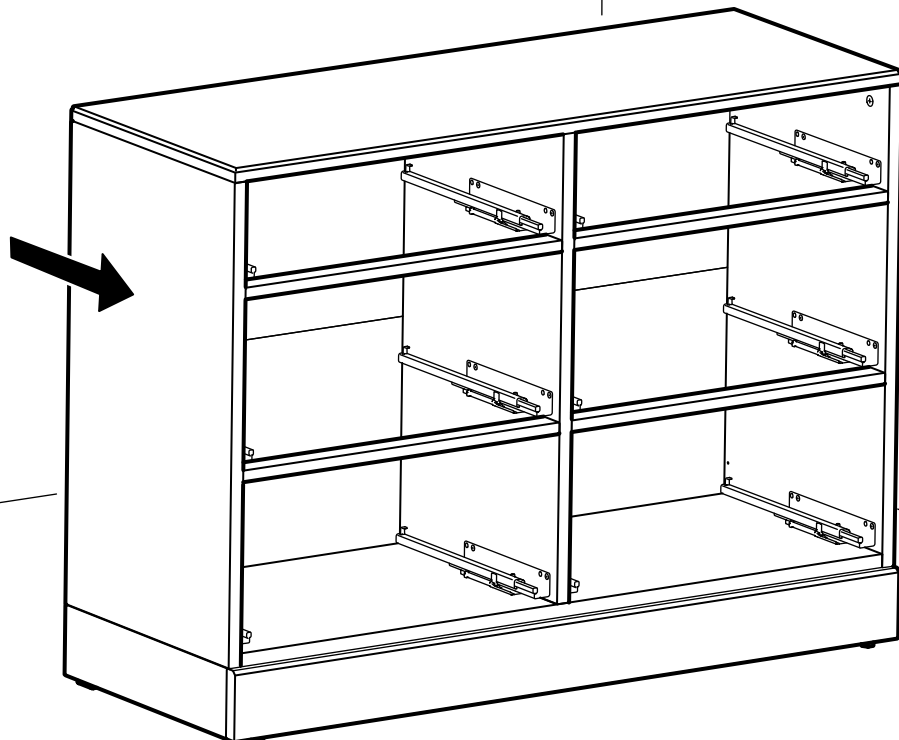




www.IKEA.com/secure-it





 
www.IKEA.cn/secure-it

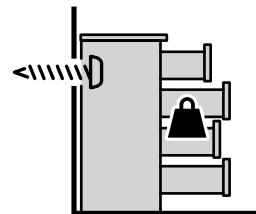



38

English

     
The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

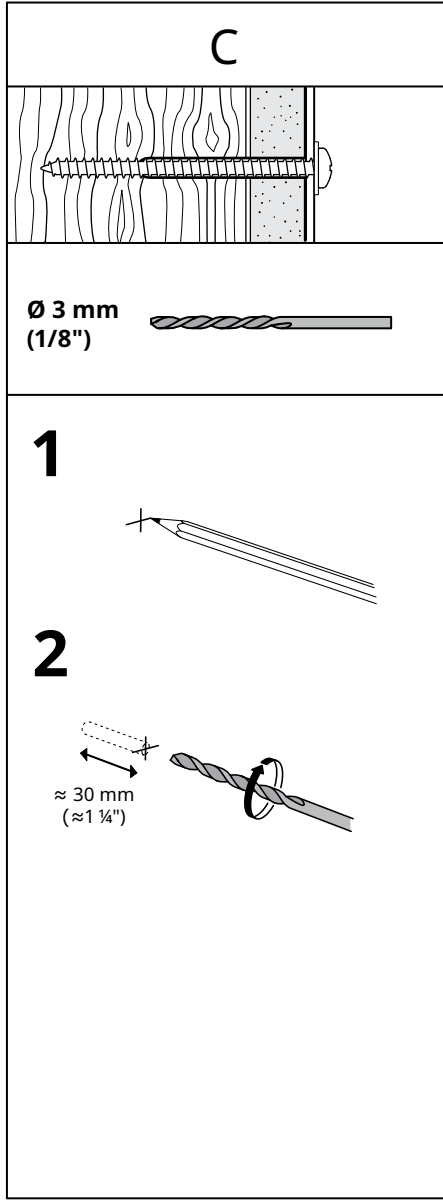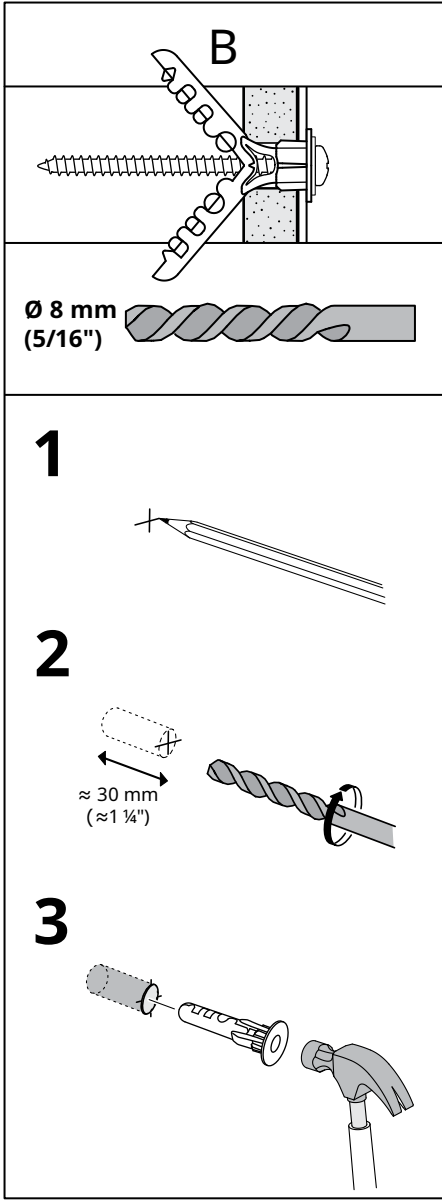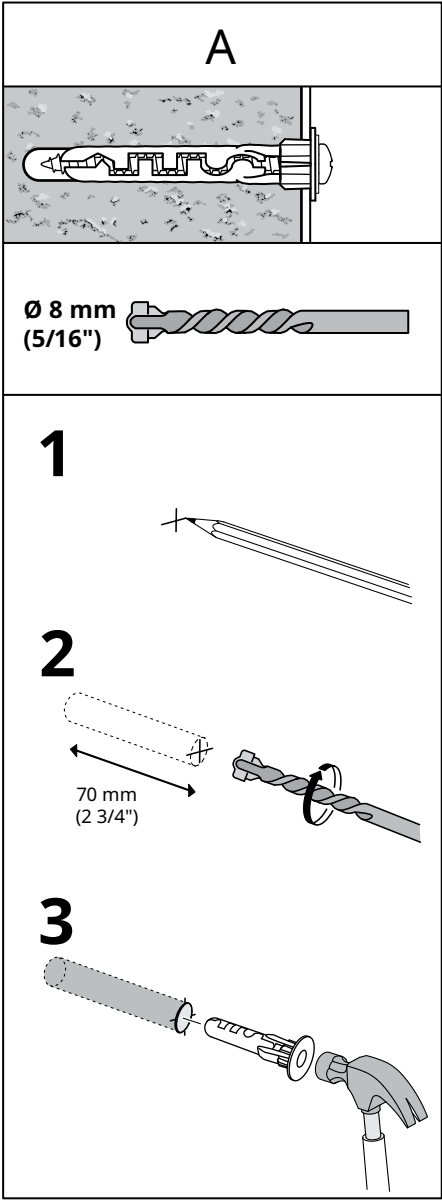

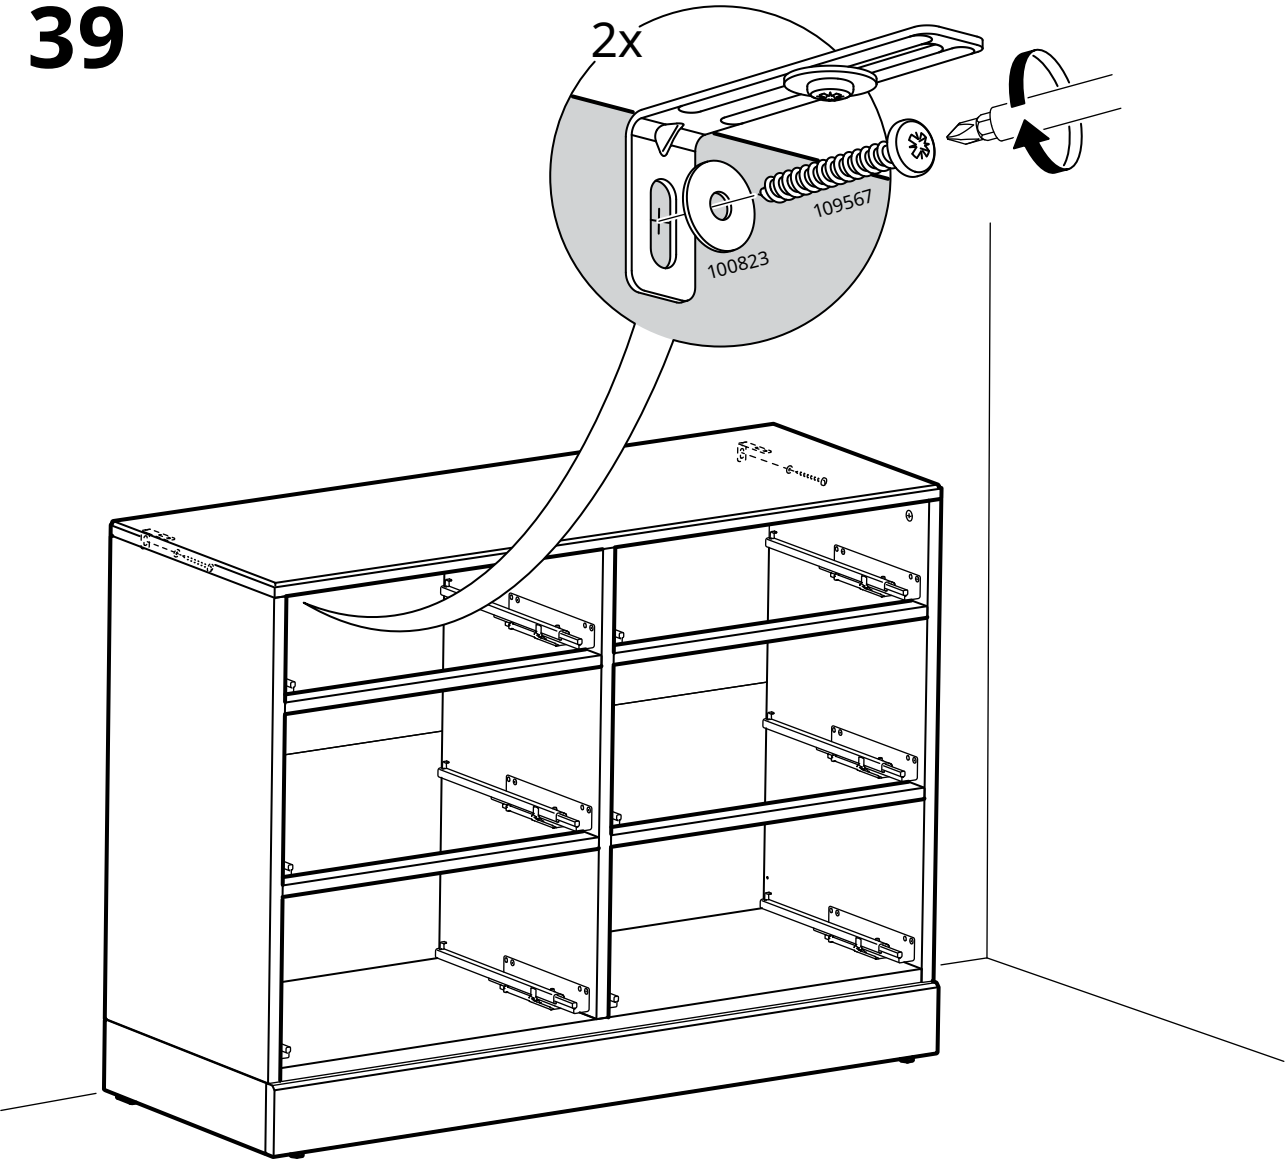



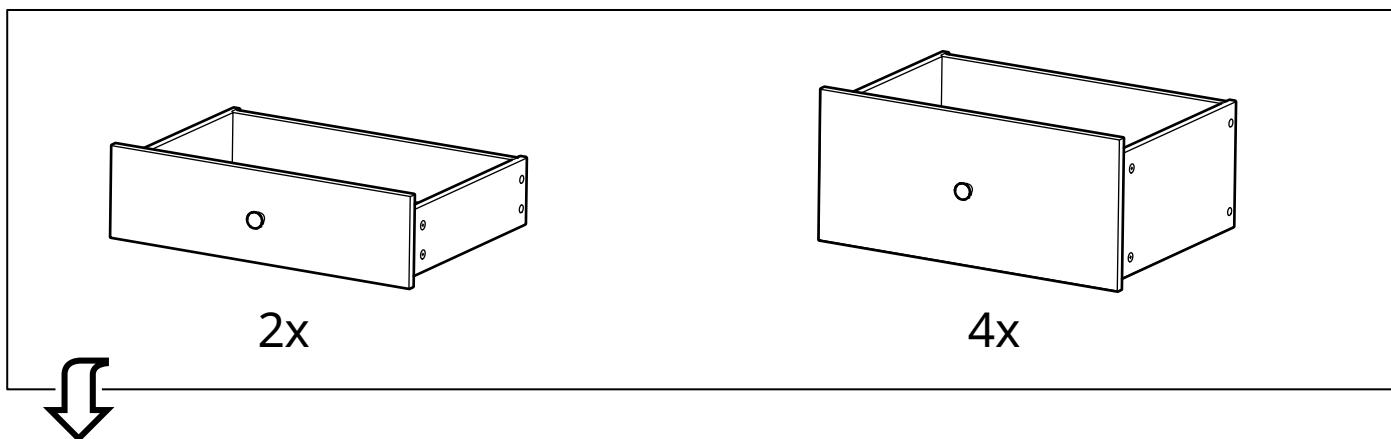


40

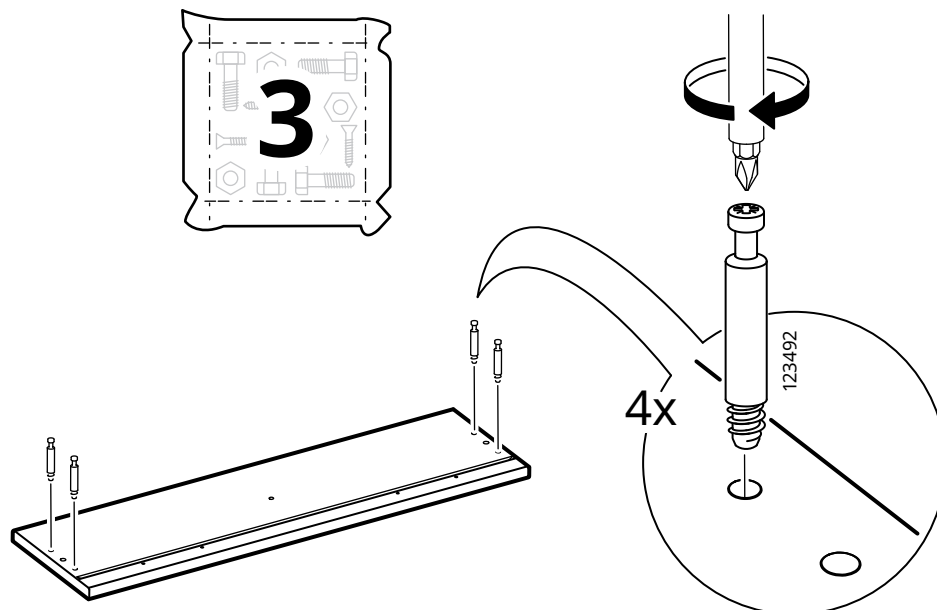 


41


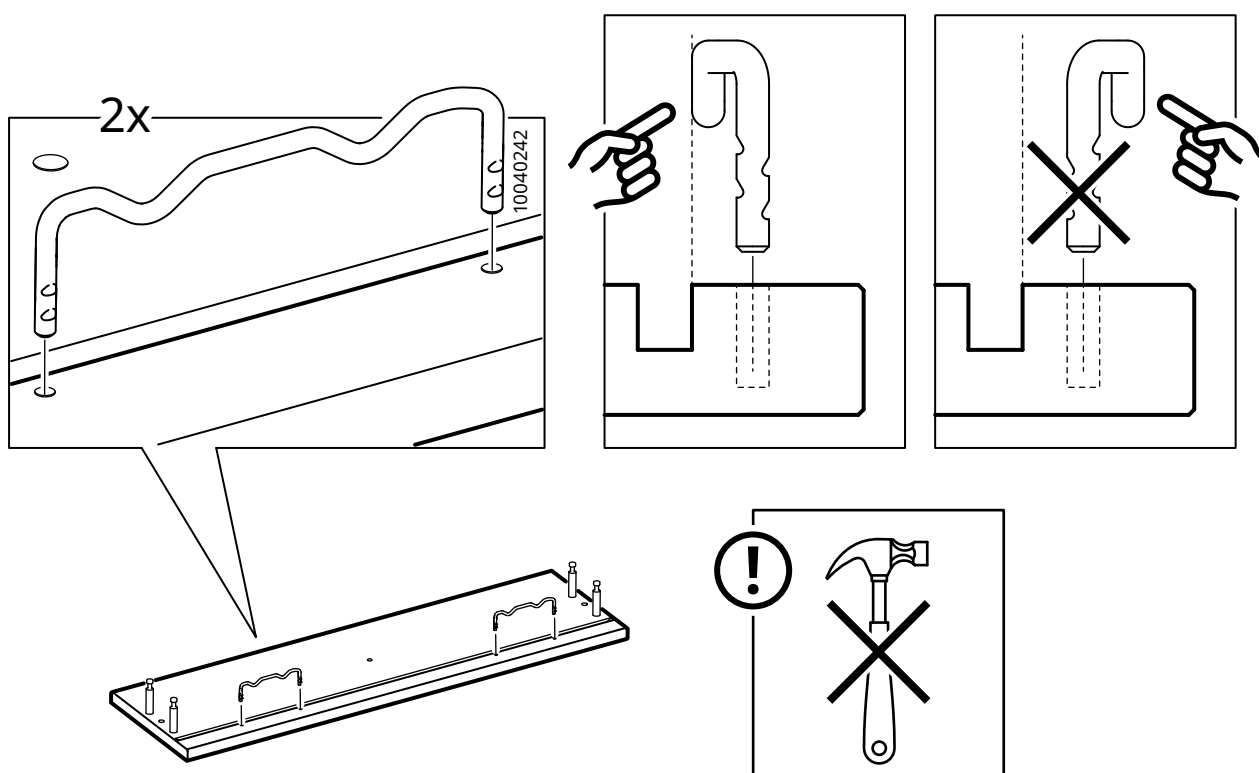 


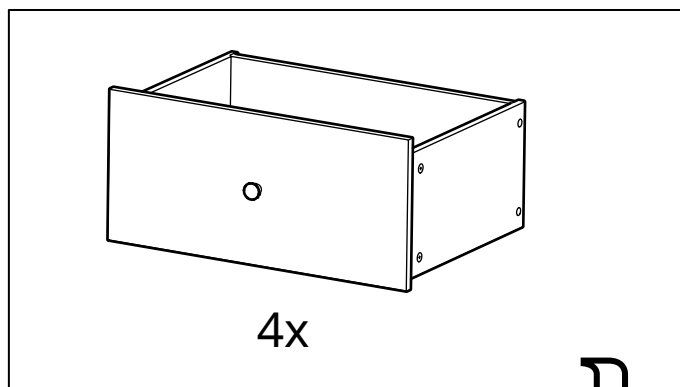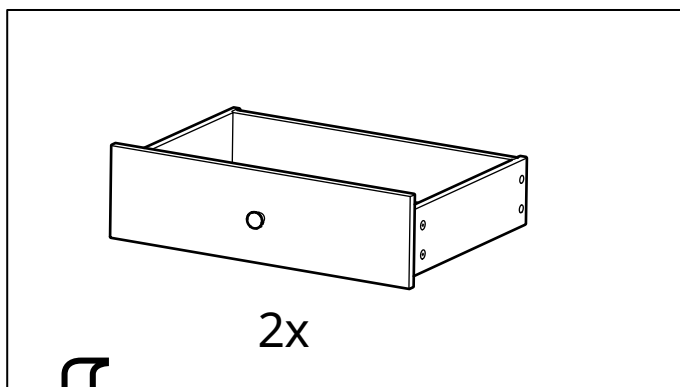  


42

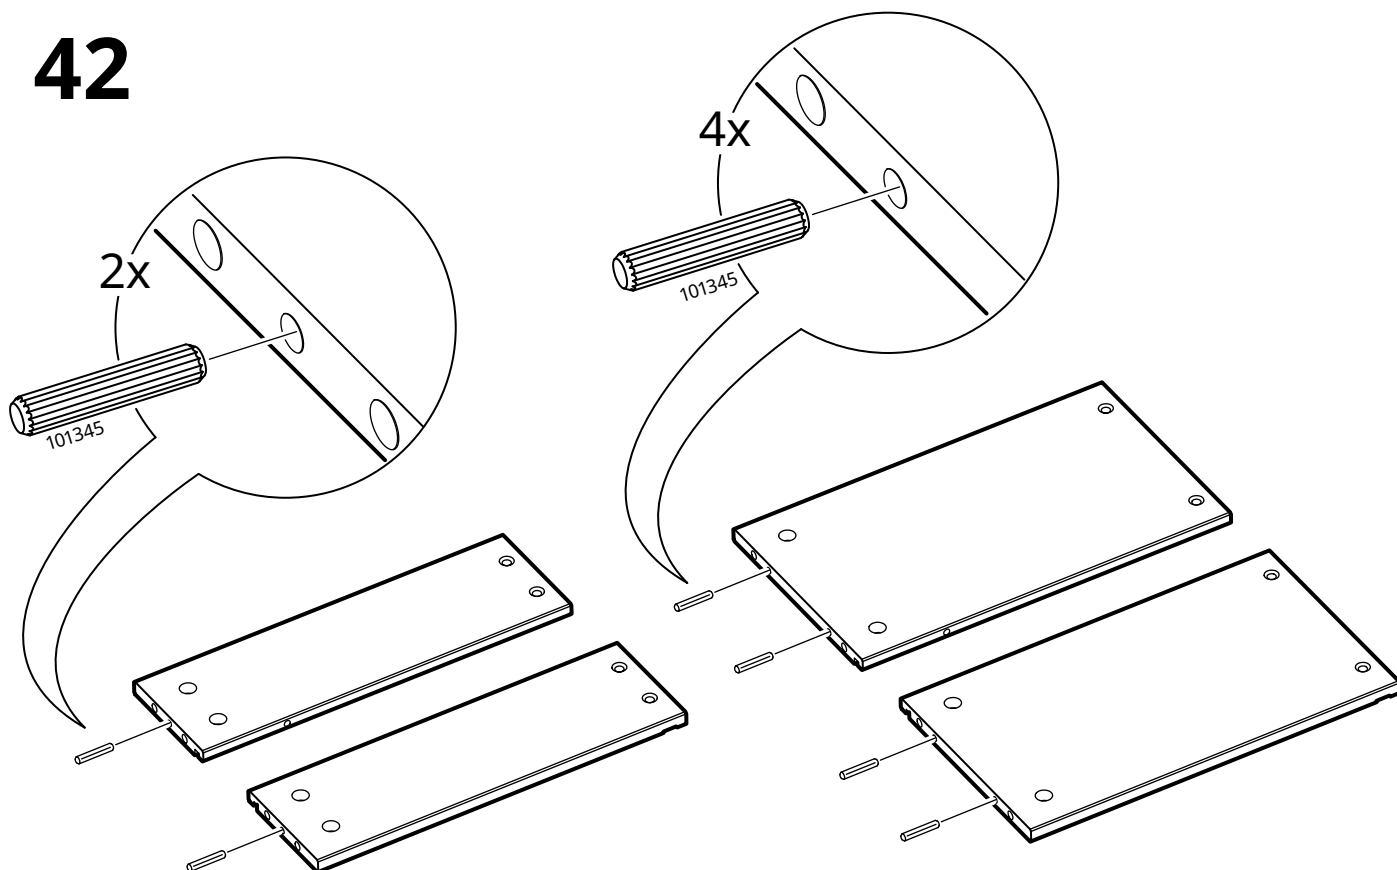 


43

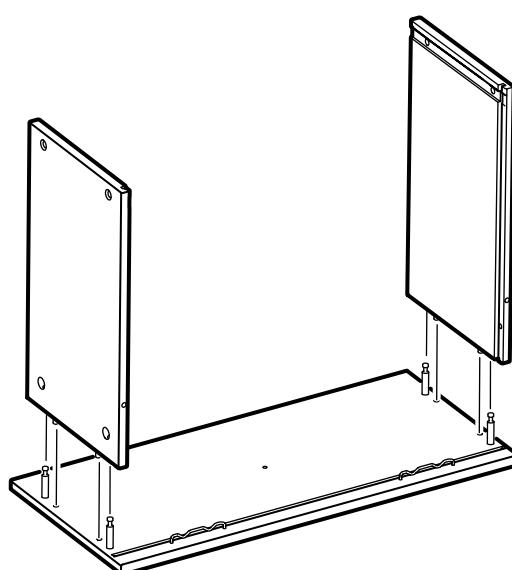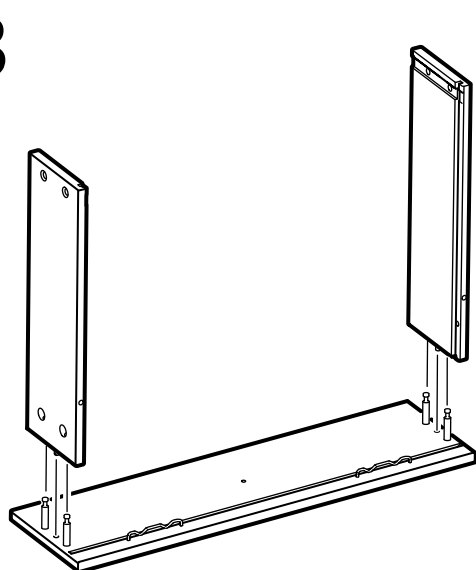  


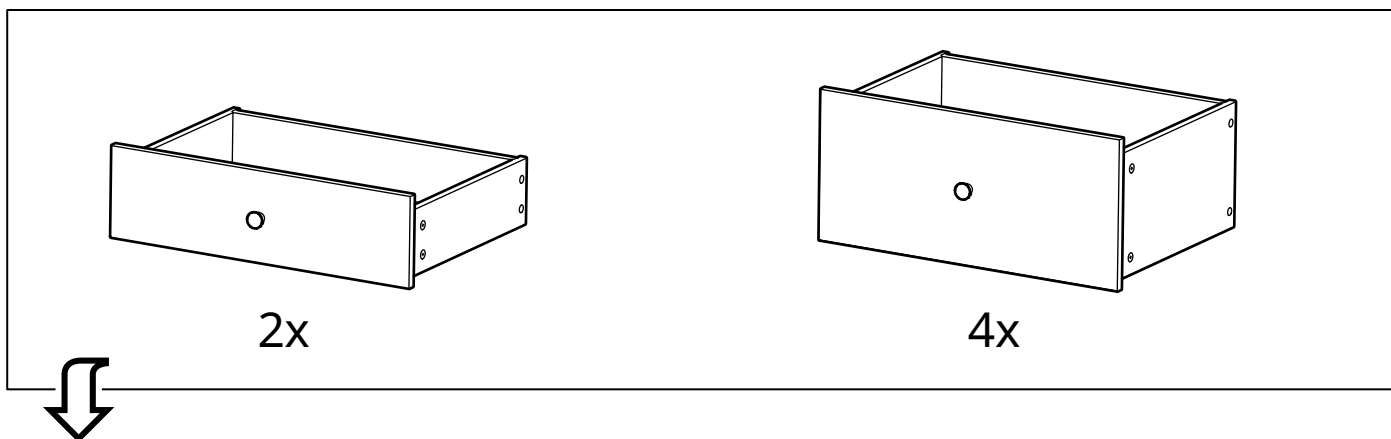 


44

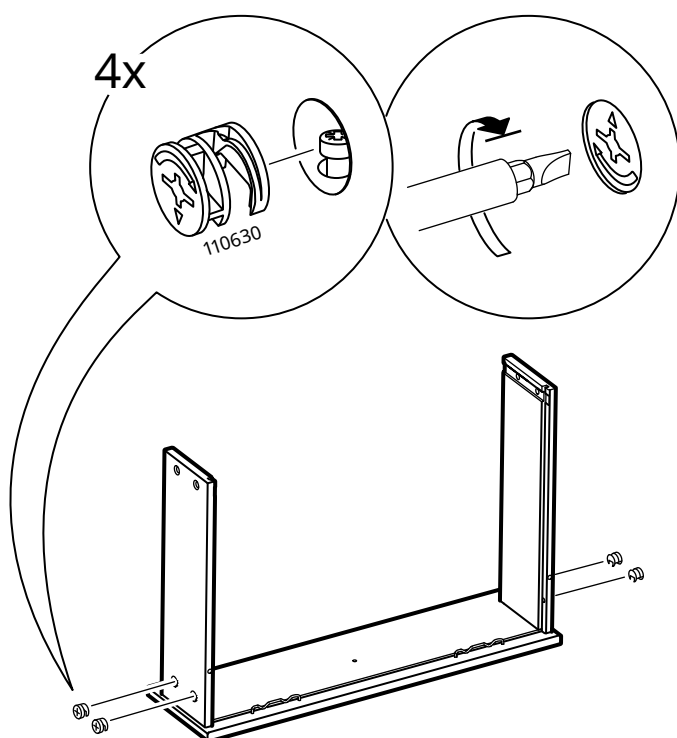 


45

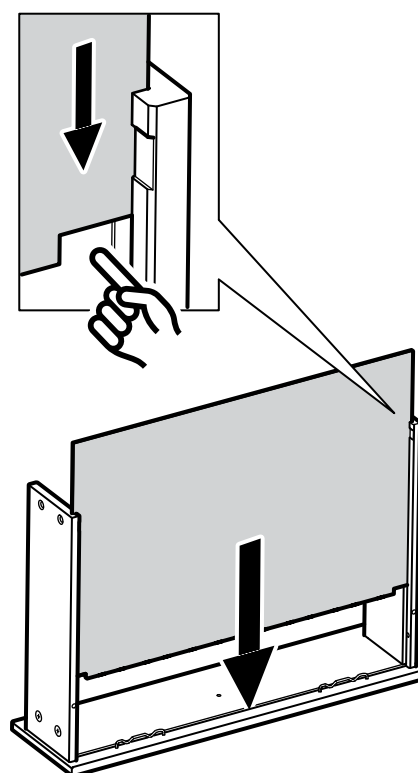 


46

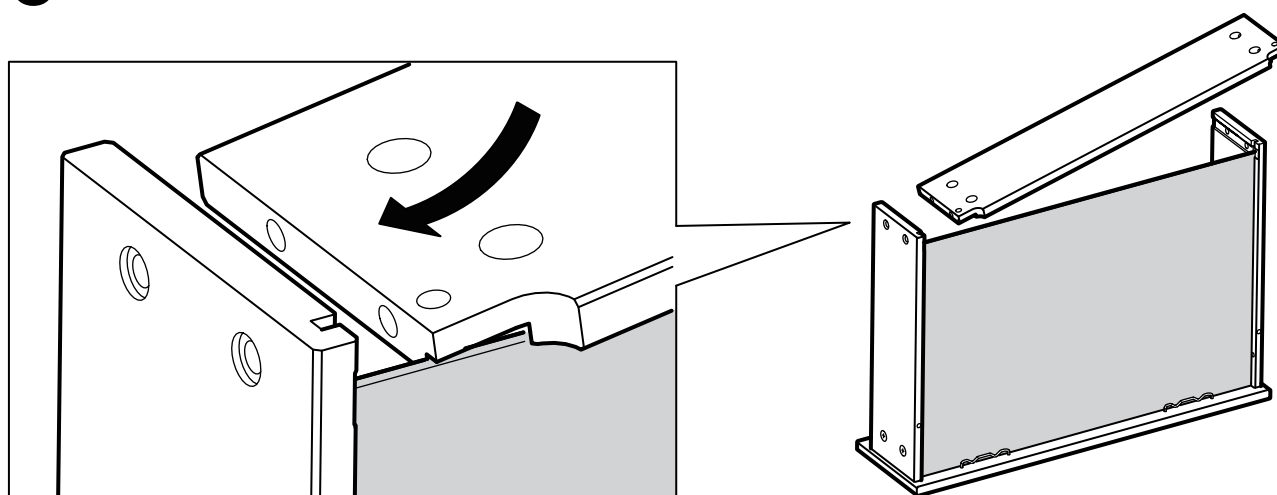 


47

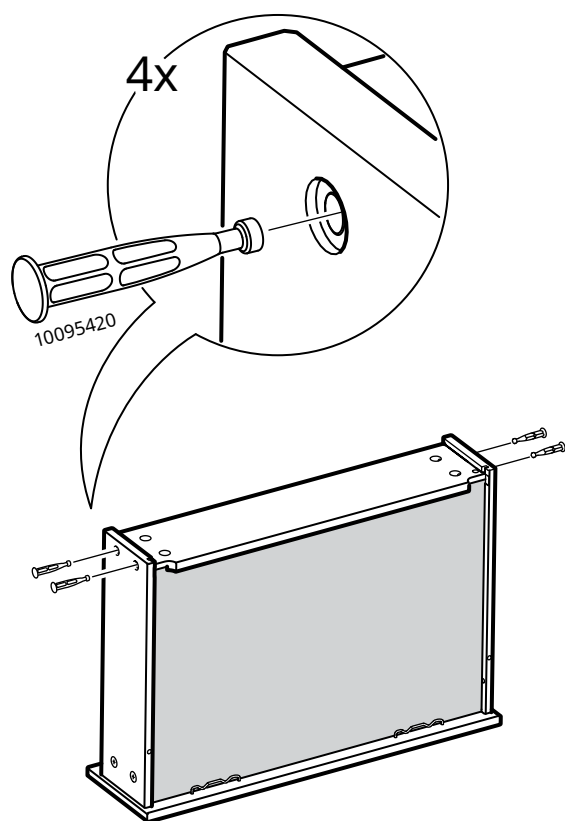 


48

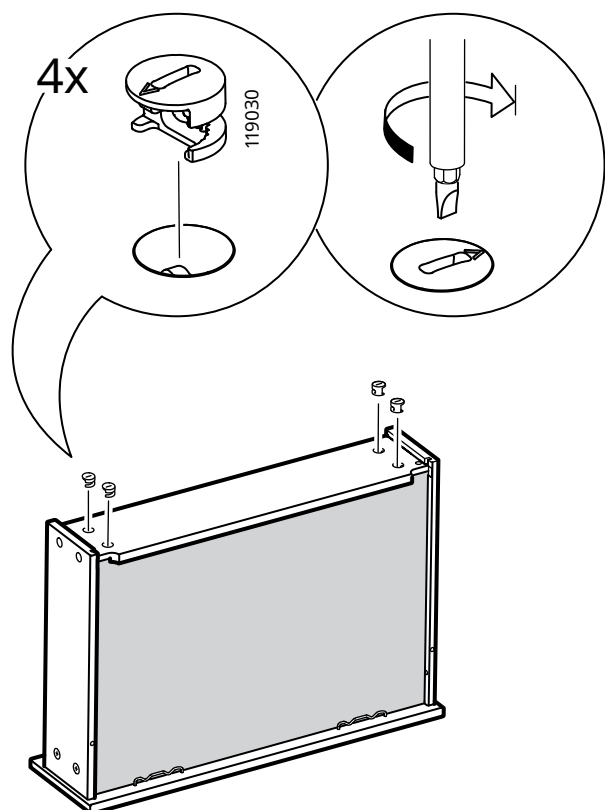 


49

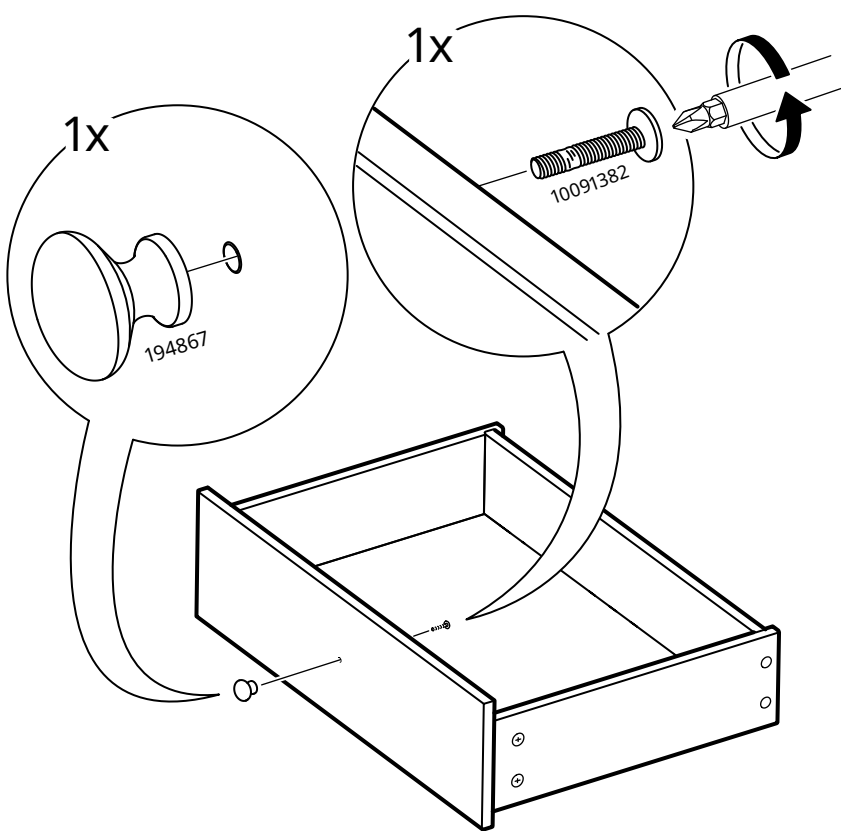 


50

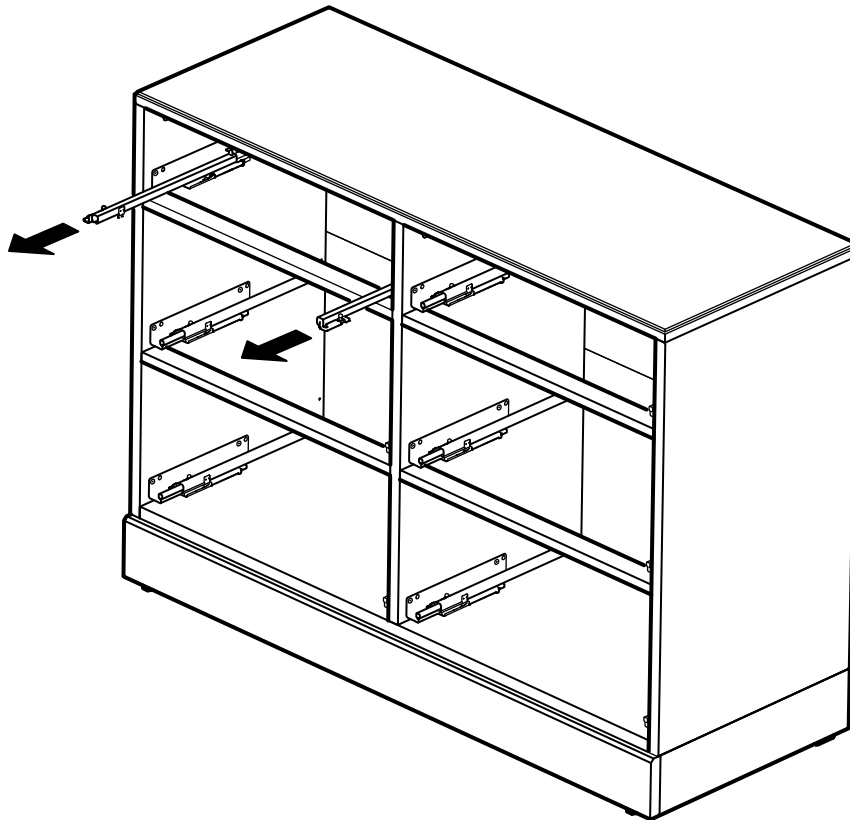 


51

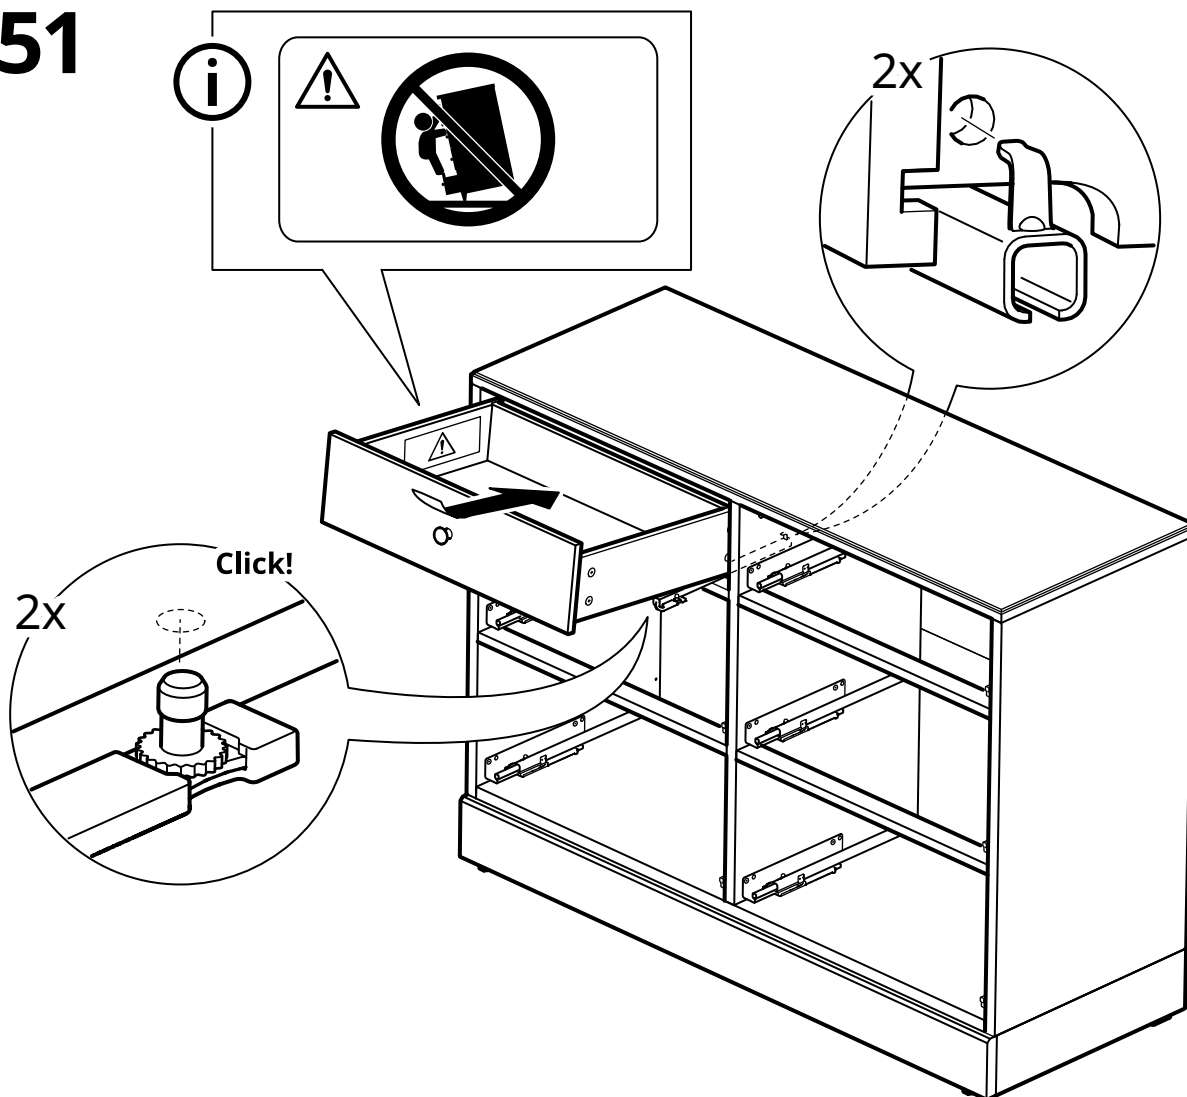 


52

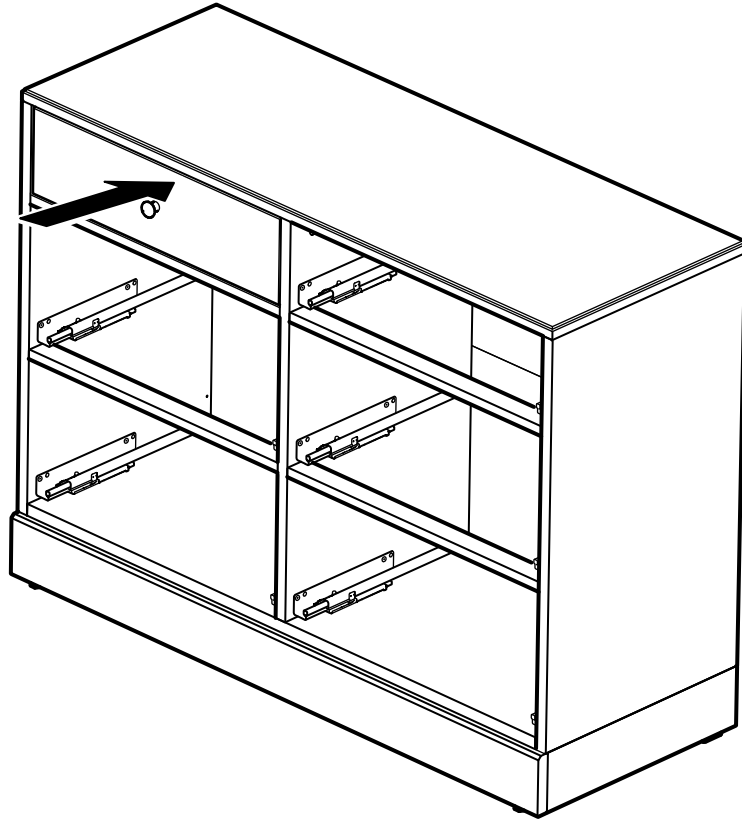 

53

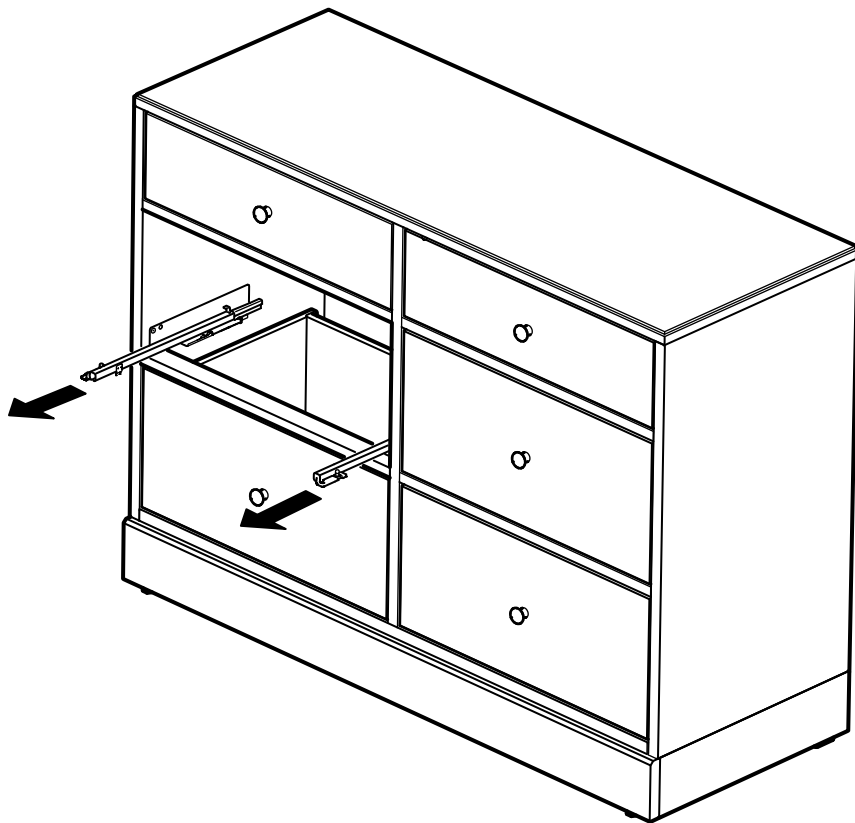 

54

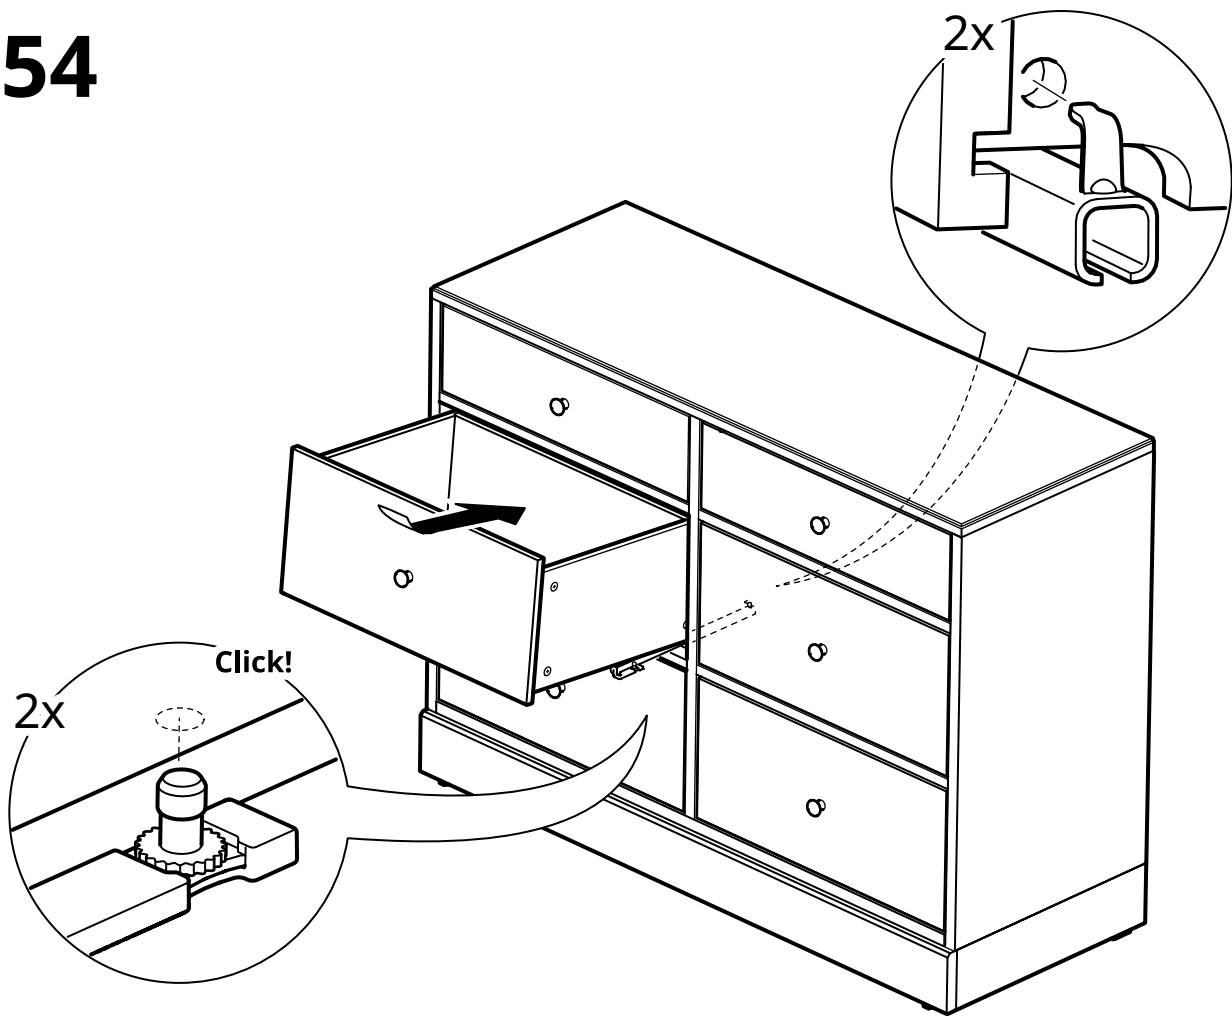 

55

