 


IDANÄS

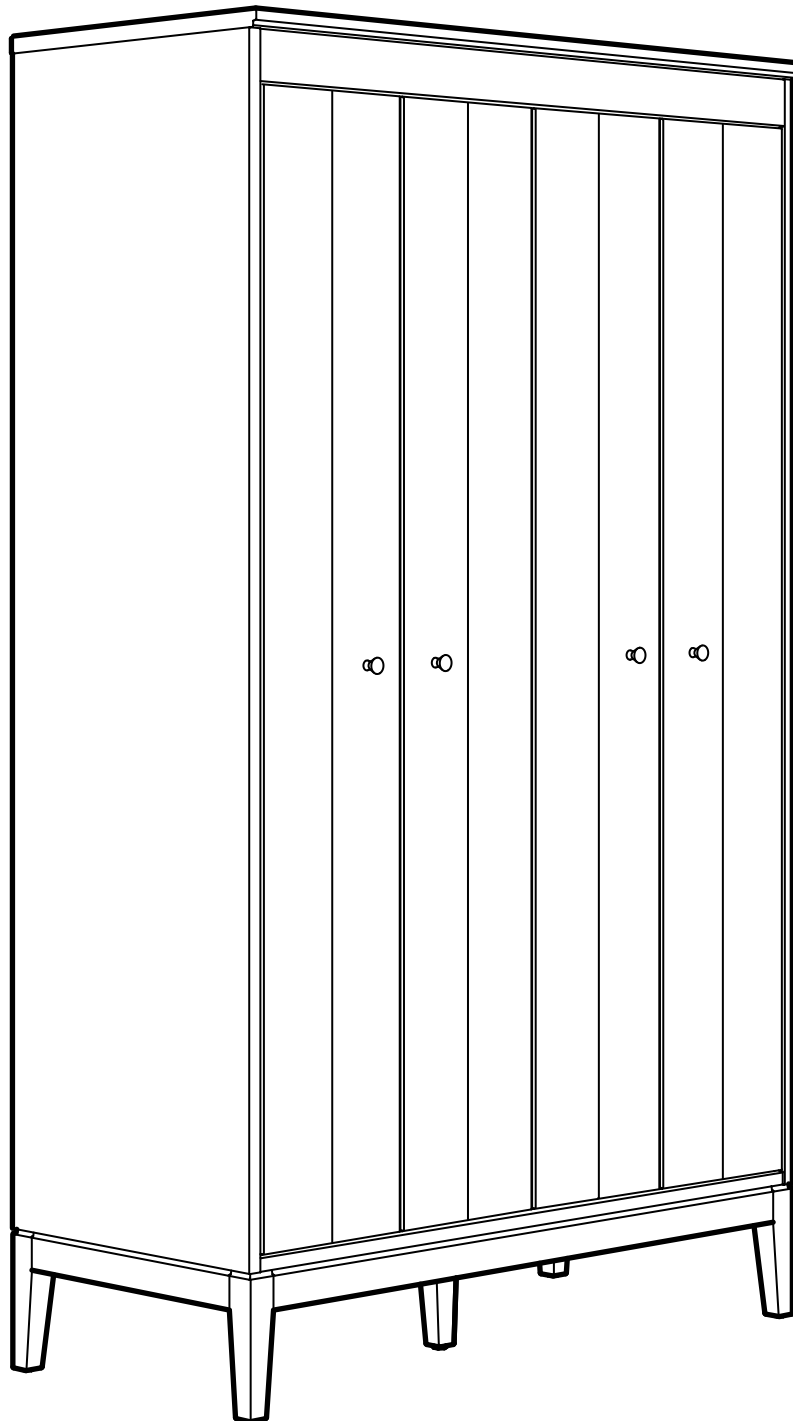

Design and Quality
IKEA of Sweden



English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

 
 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

 
 
 
 
NEVER open more than one drawer at a time.

Place heaviest items in the lowest drawers.


English

Read and follow each step of the instruction carefully.

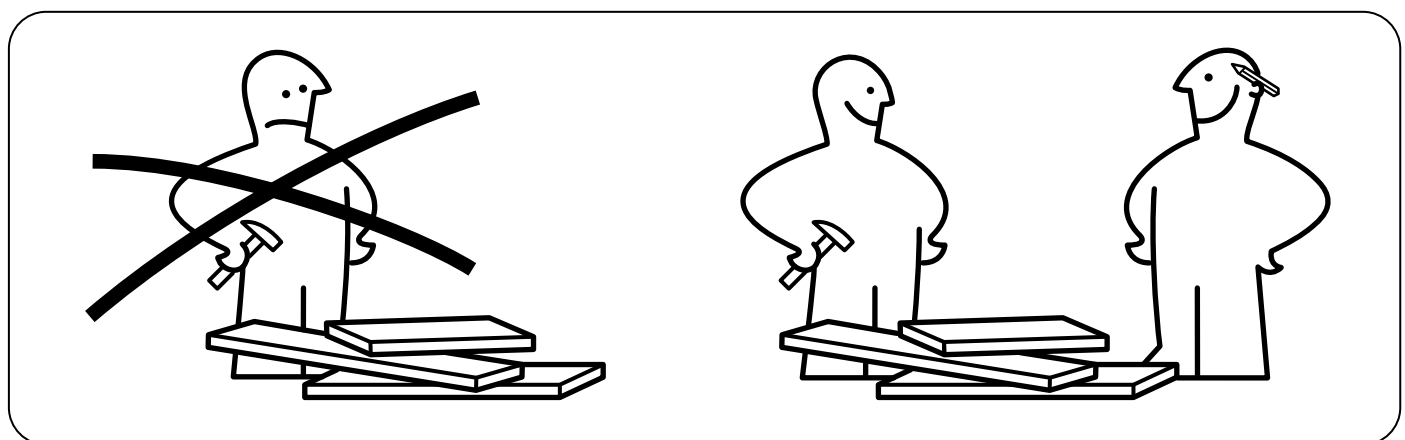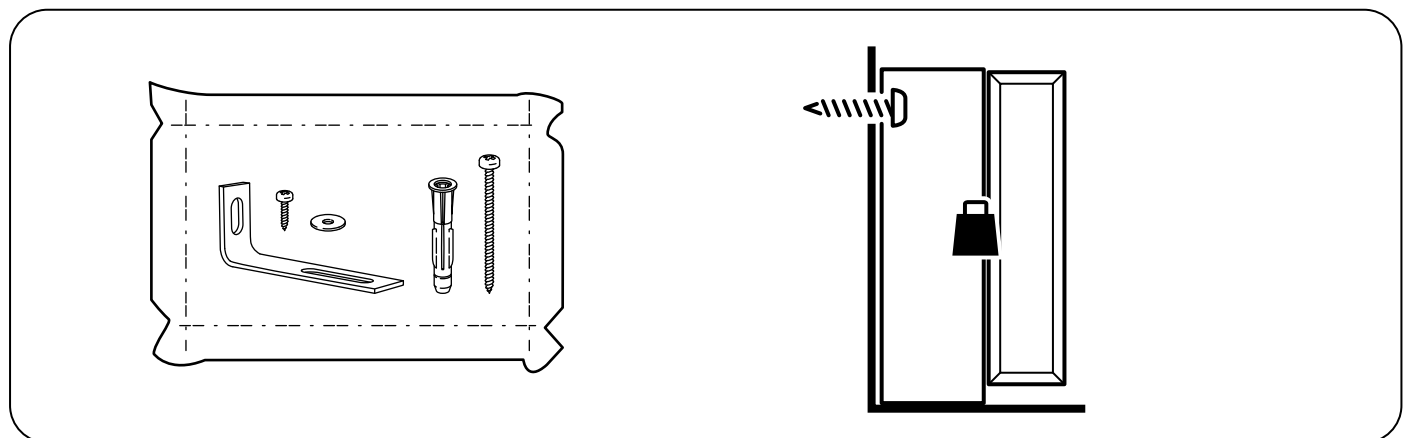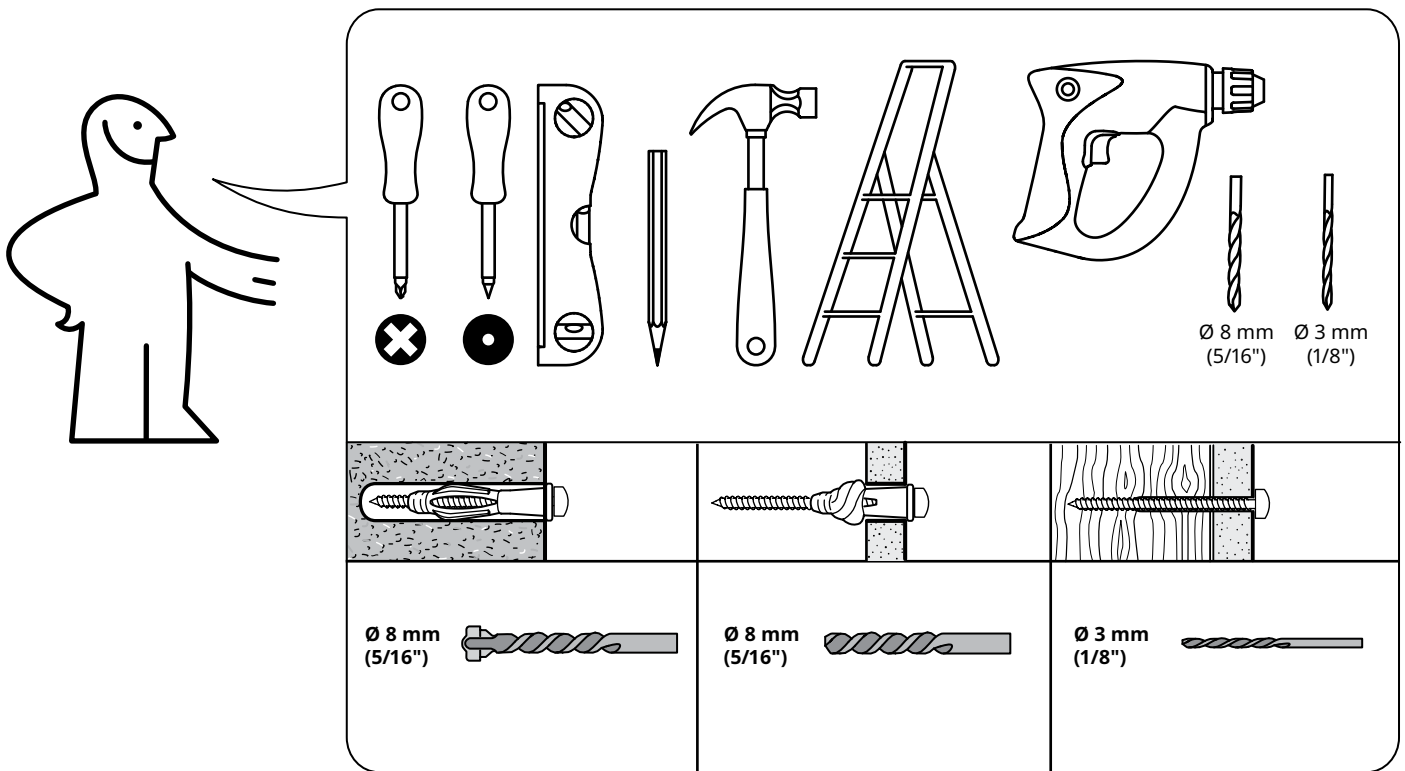

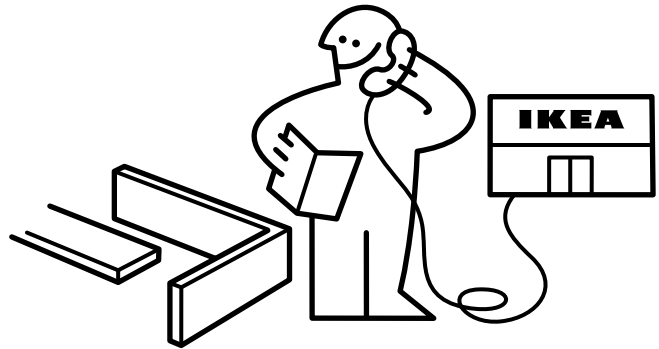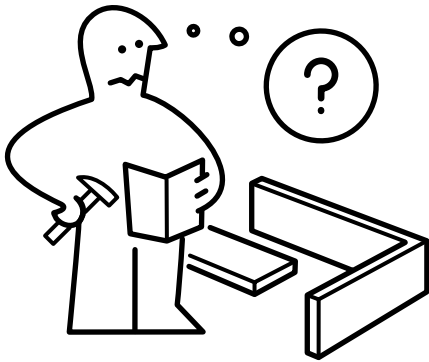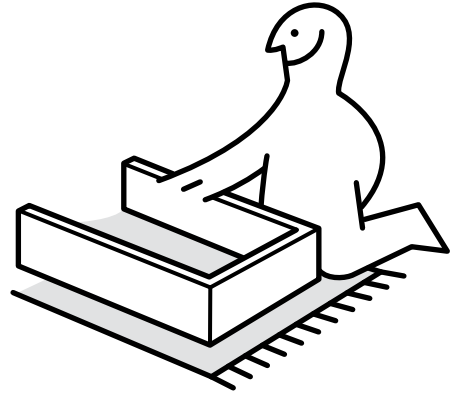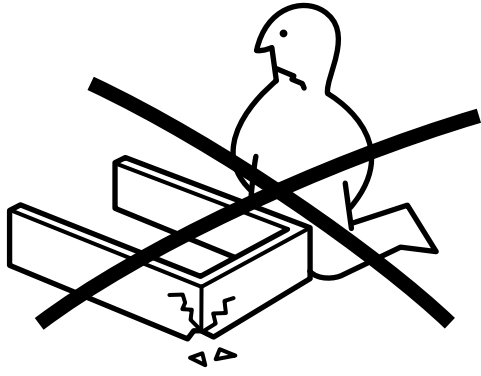


1

 


151705

 7x




151706

 7x

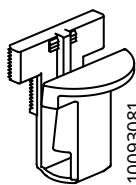


10093081

 10x

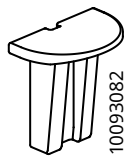

10093082

 10x

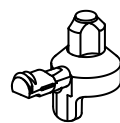


131372

12x




100347

 8x

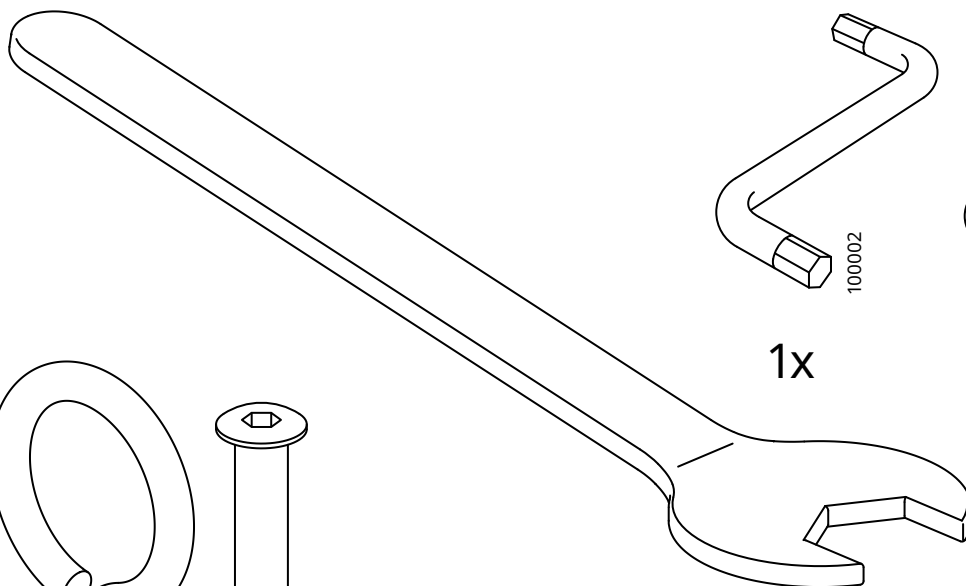


131398

 1x

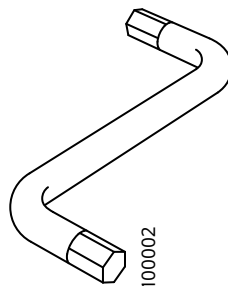


100002

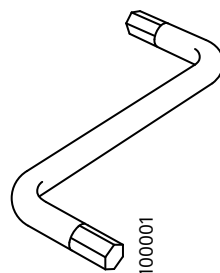 


100001

 1x

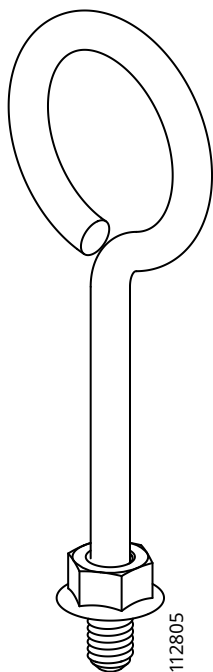


112805

 2x




10093458

 4x




100214

 1x




101352

 9x

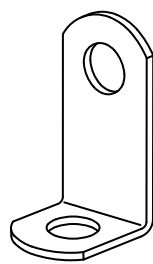


102553

 4x

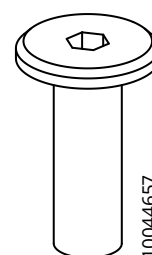

10044657

 
2x

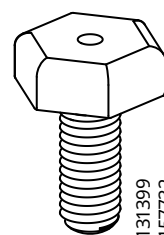

131399
157732


5x

 1x

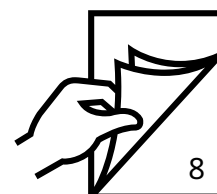


8

 
2

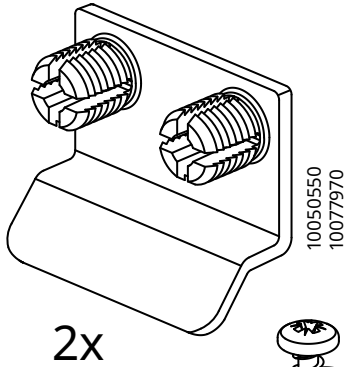


2x

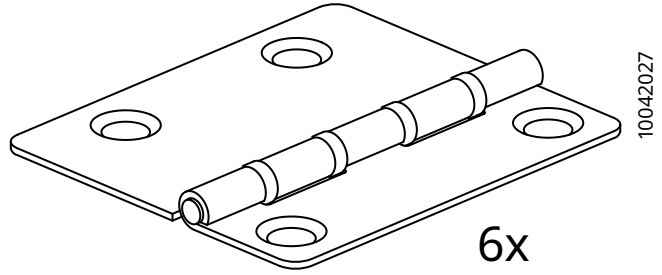 


6x

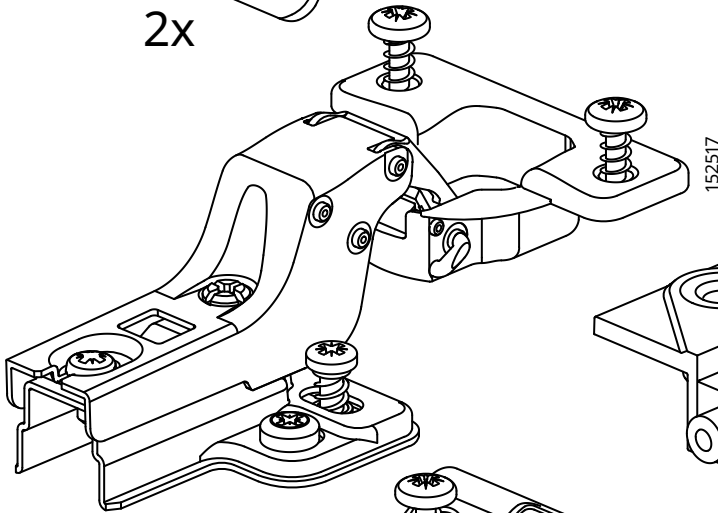 


4x

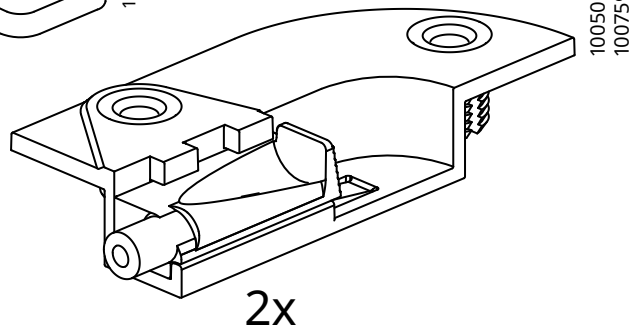 


2x

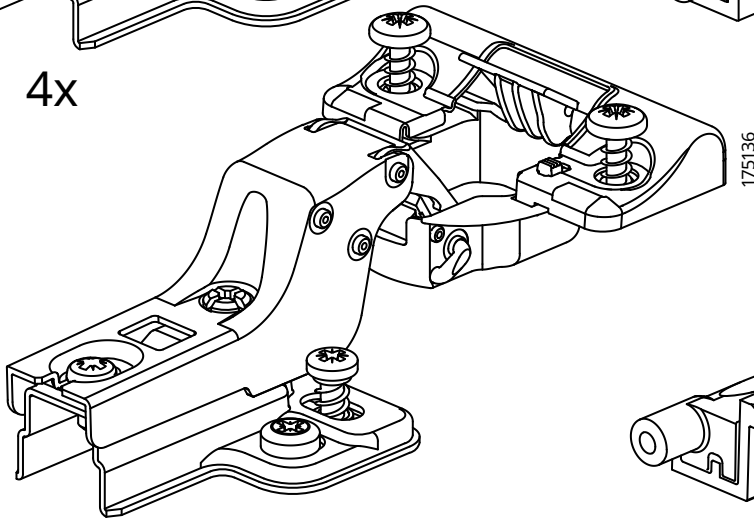 


2x

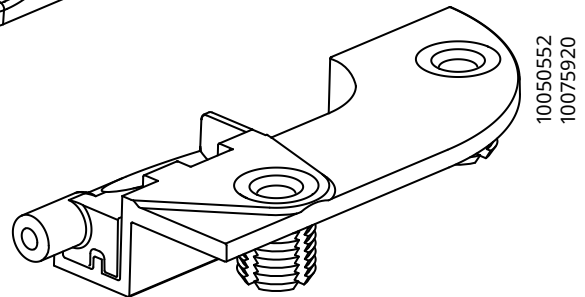 

2x

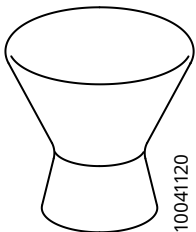 


4x

 


4x



 12x




20x

 


20x




  24x


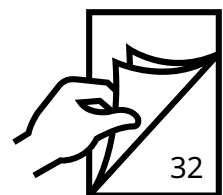


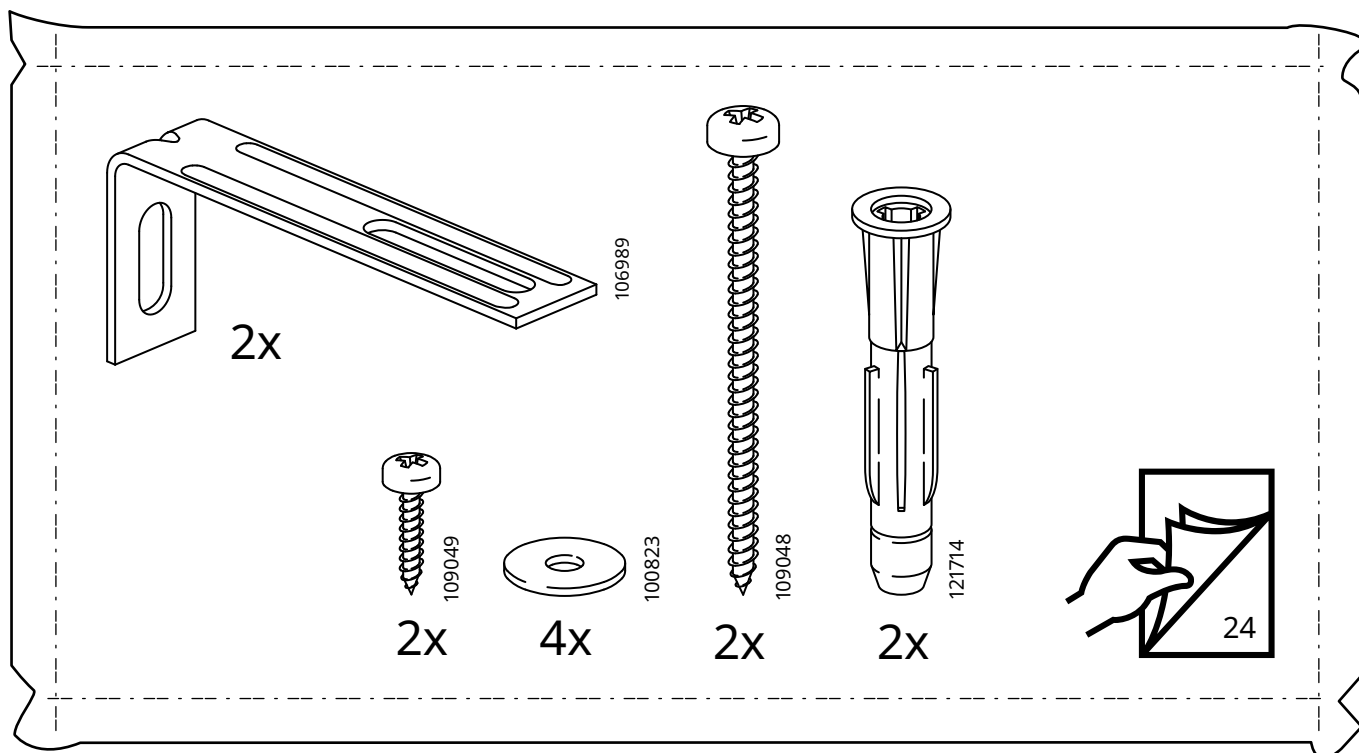


326949

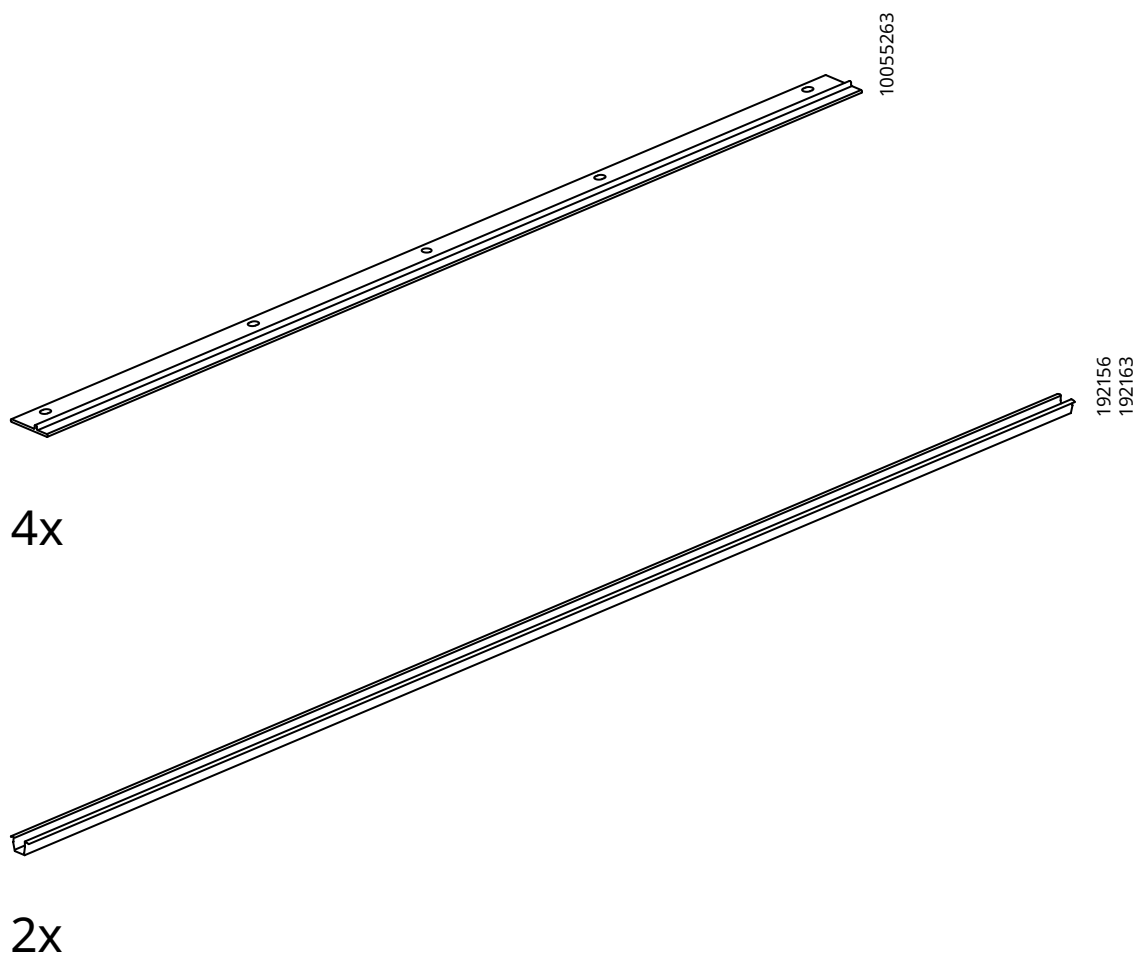 


1

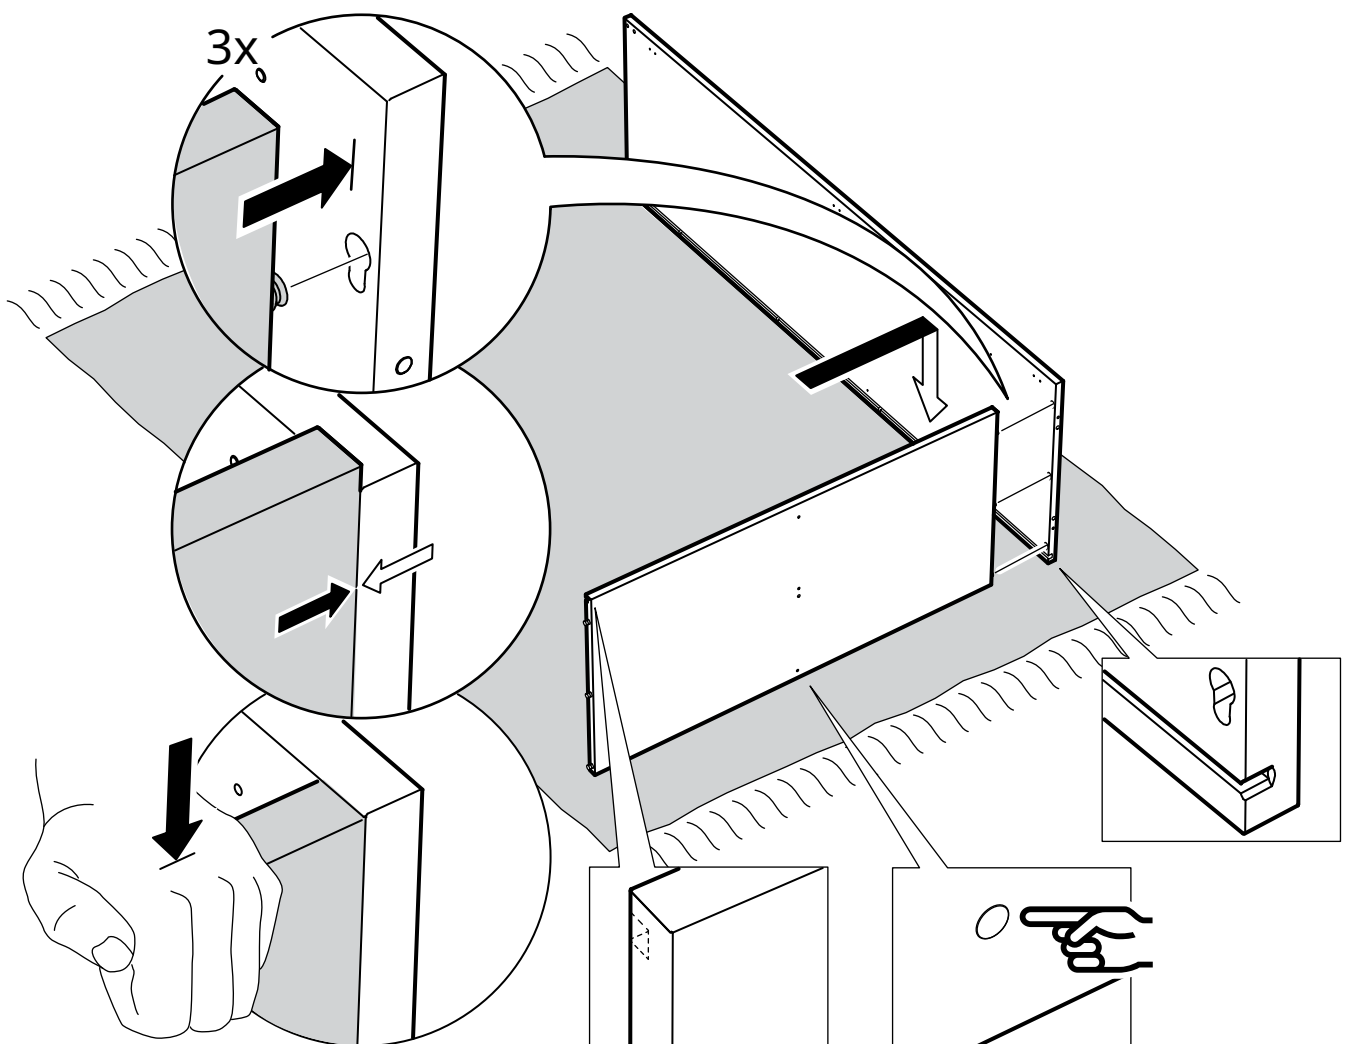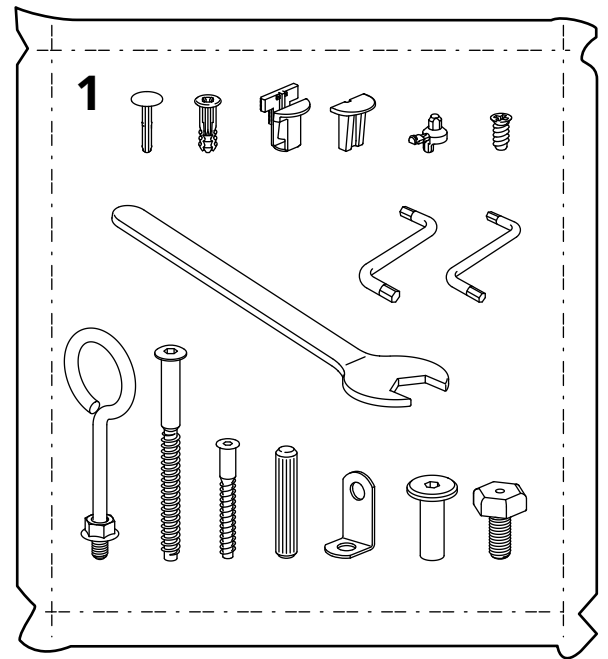  


2

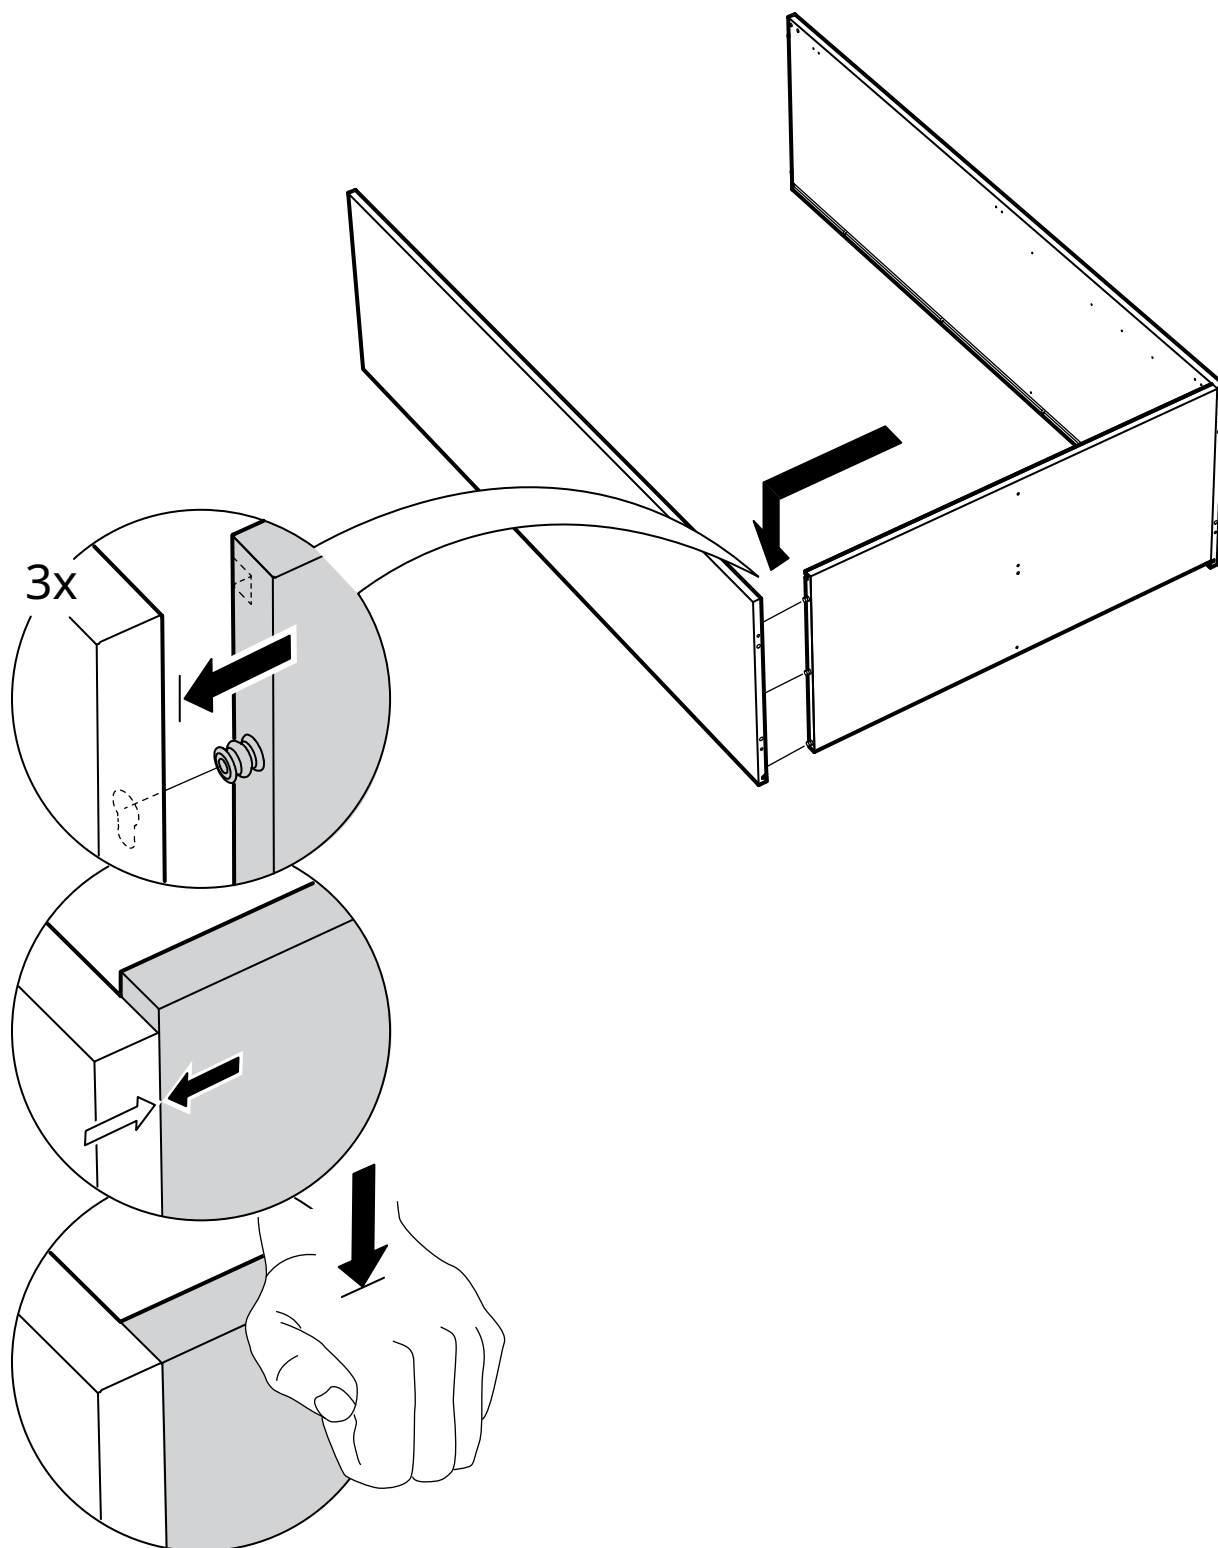 


3

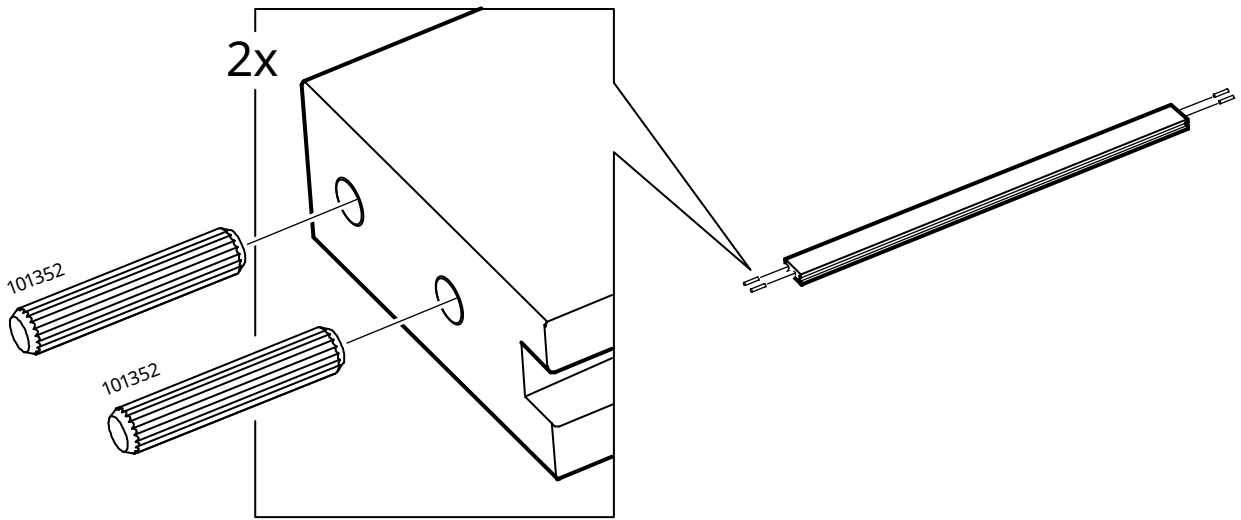 


4

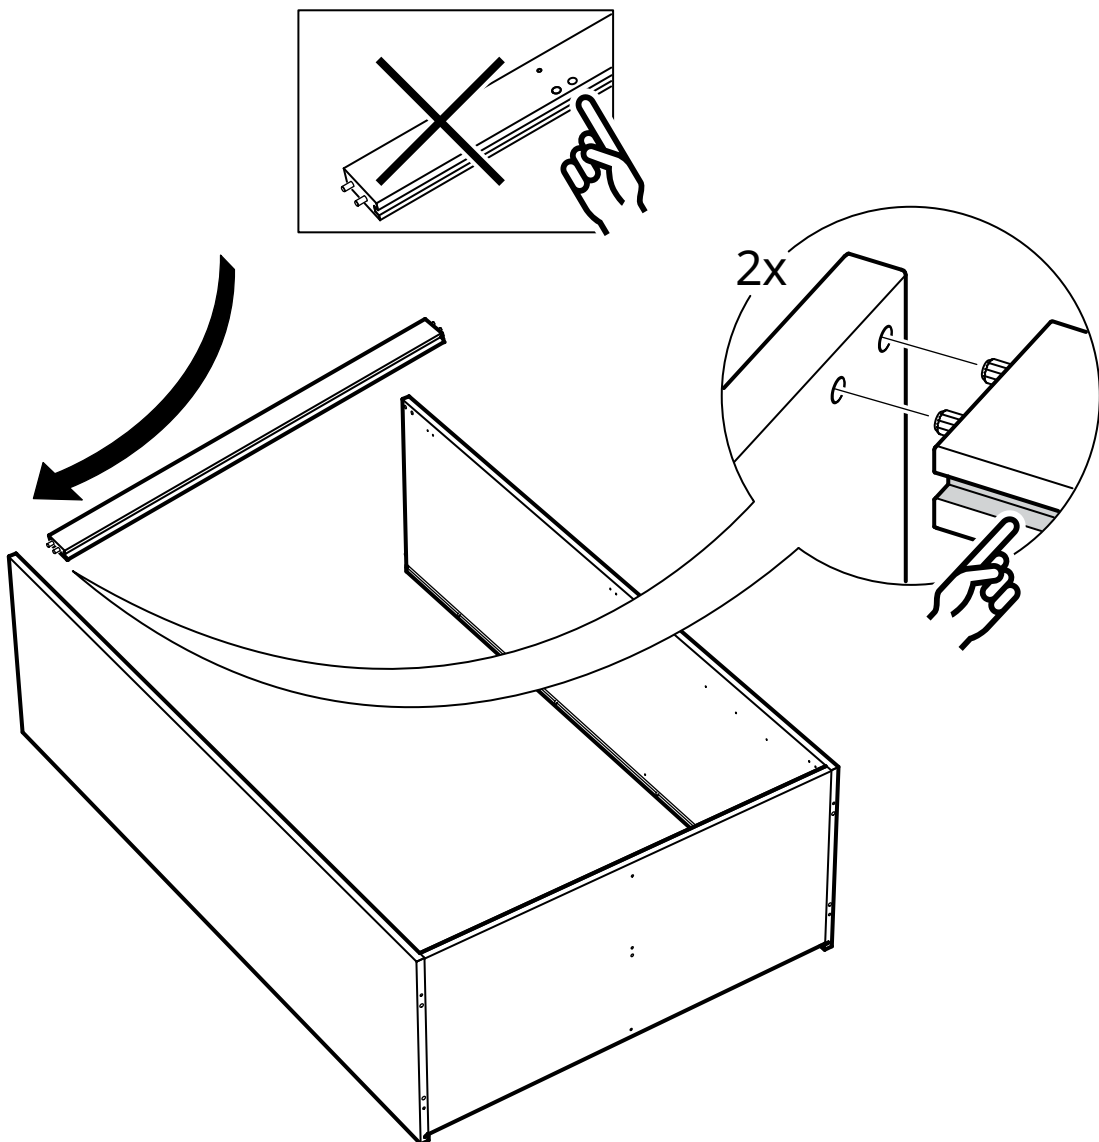 


5

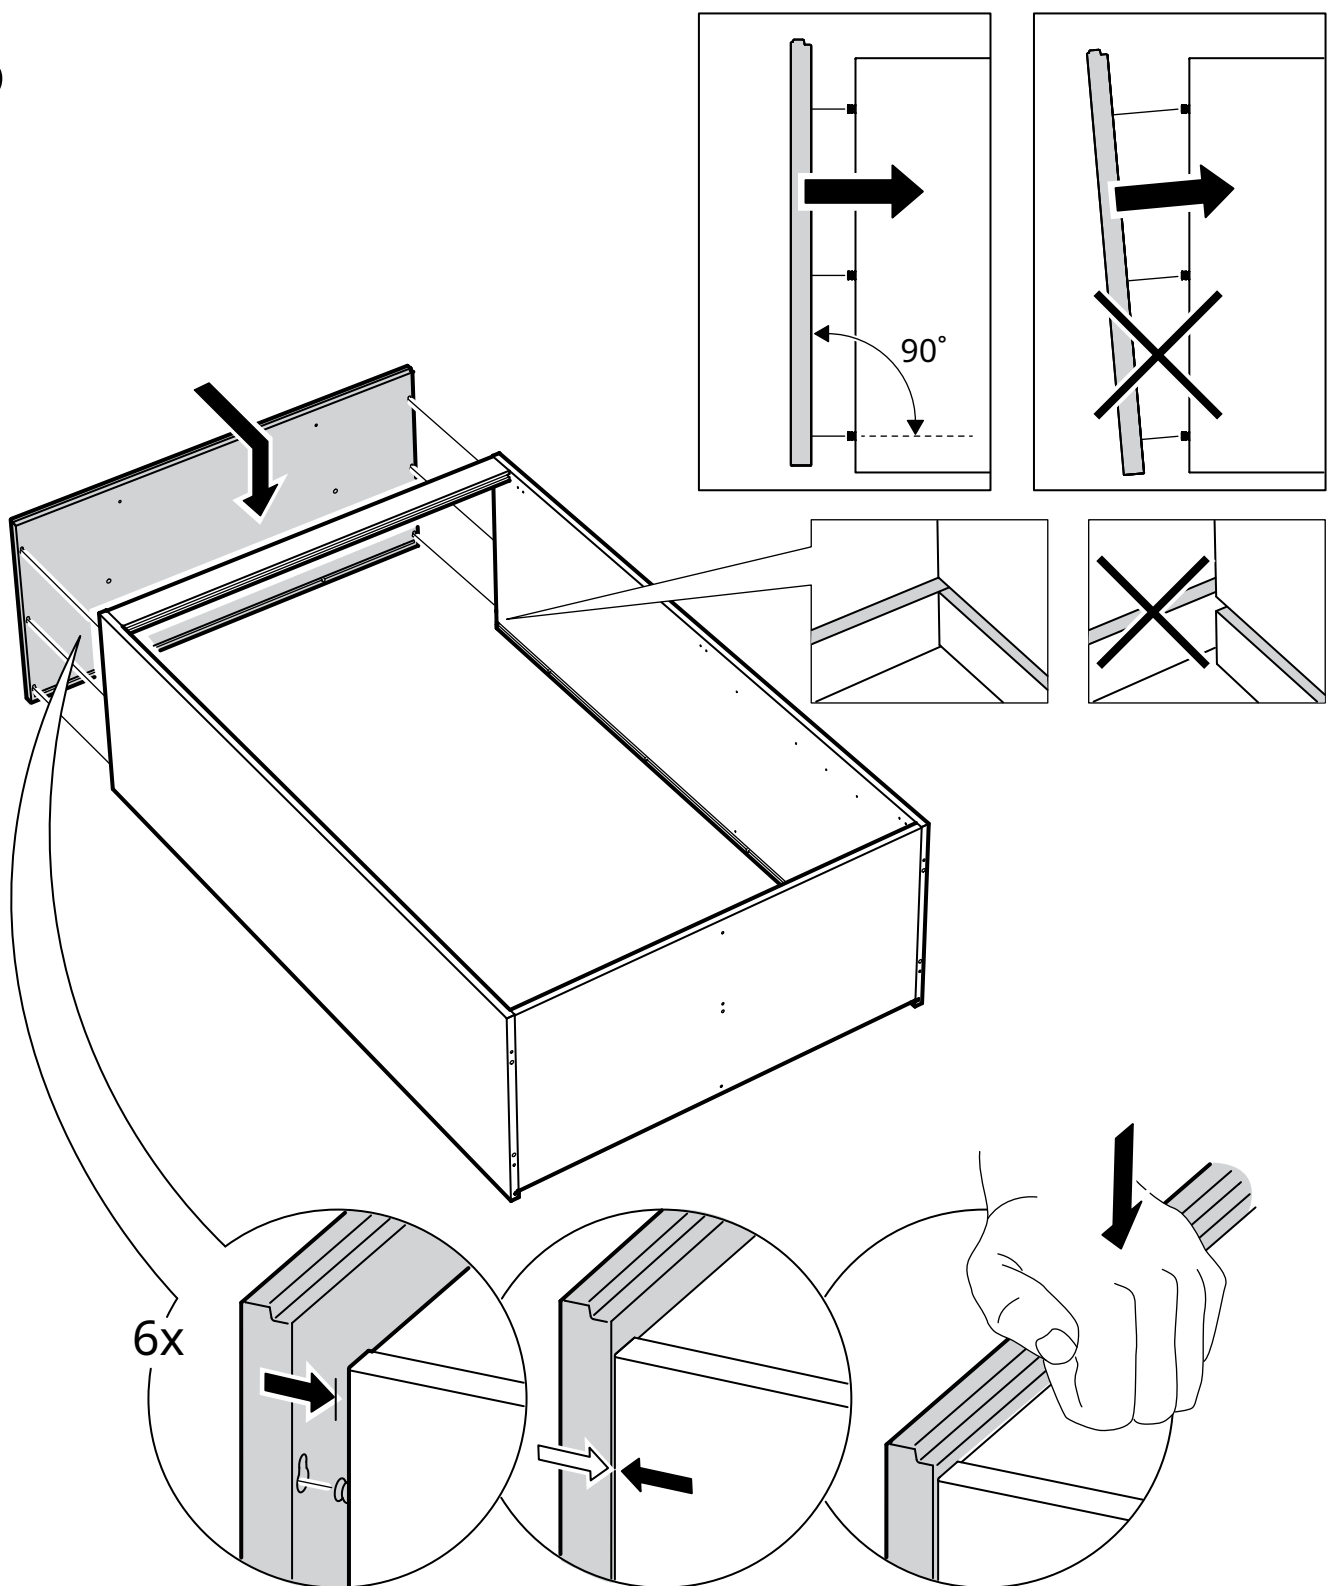 


6

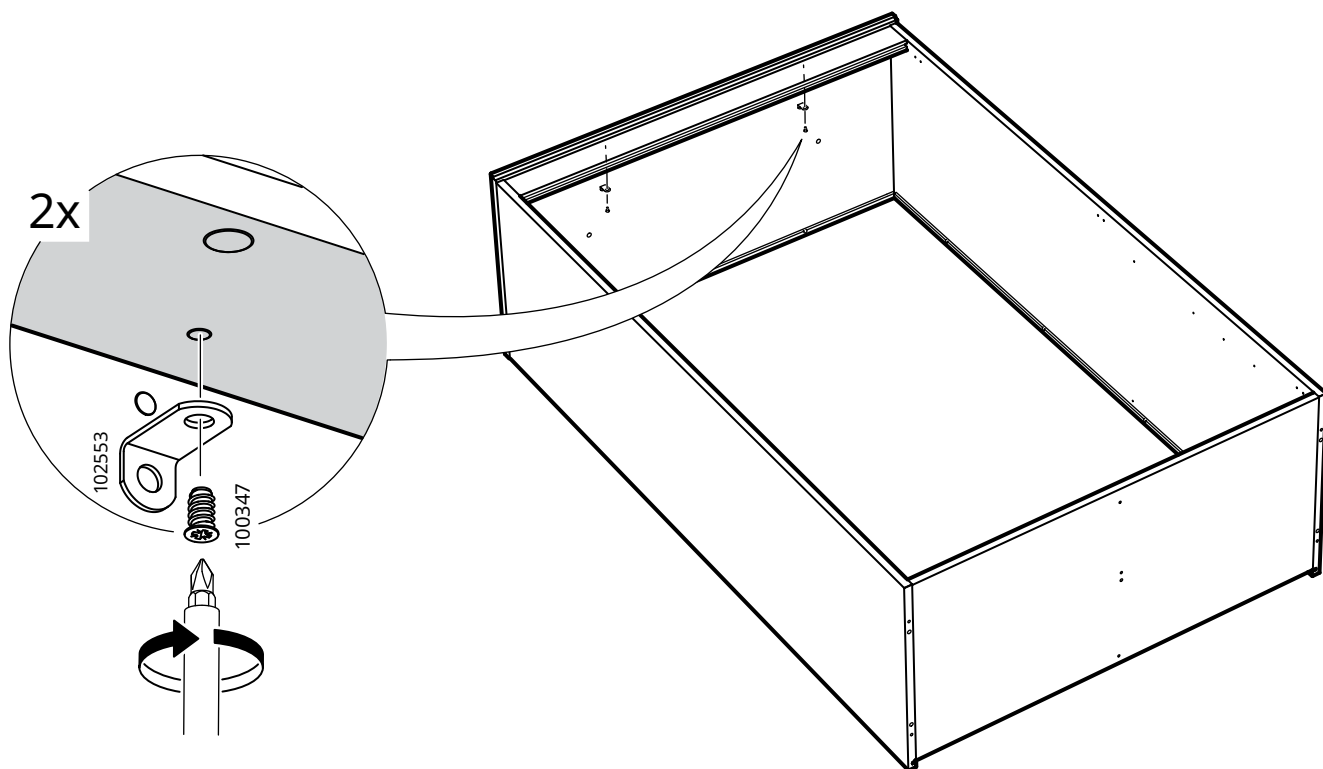 


7

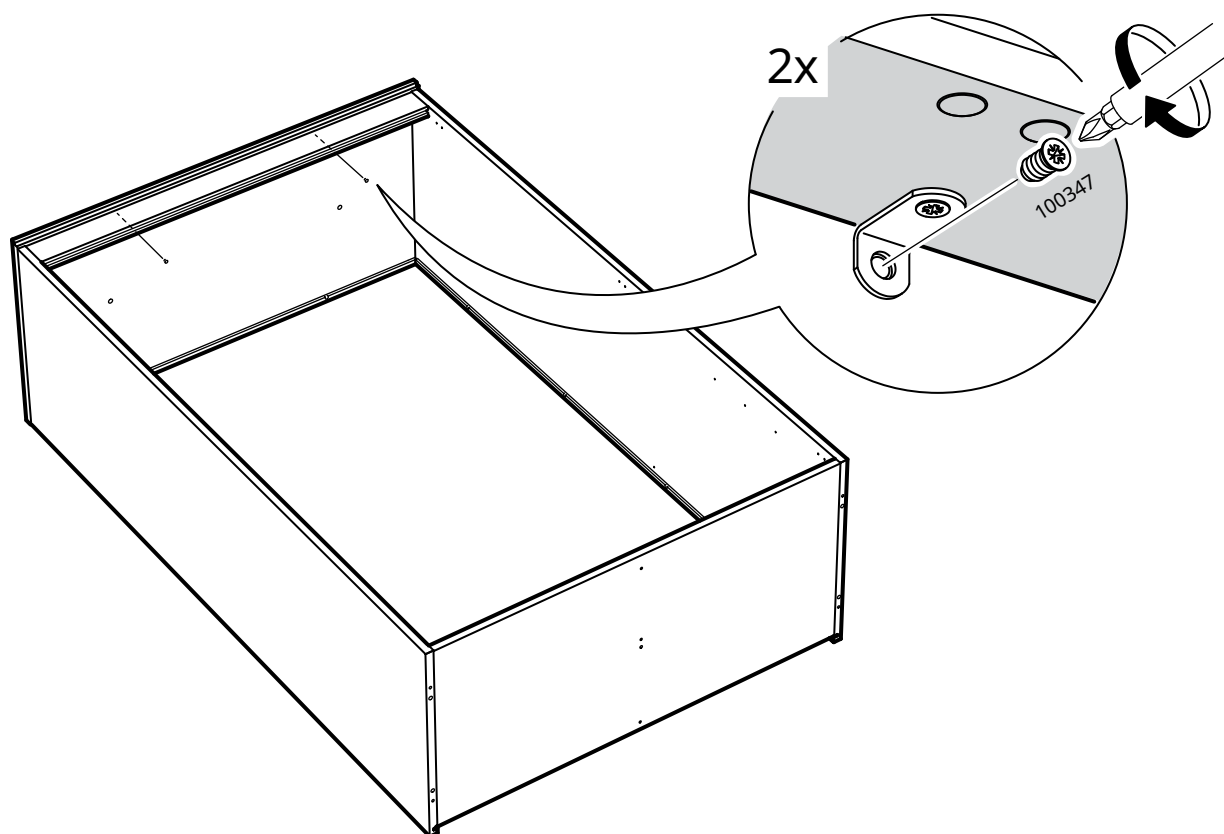 


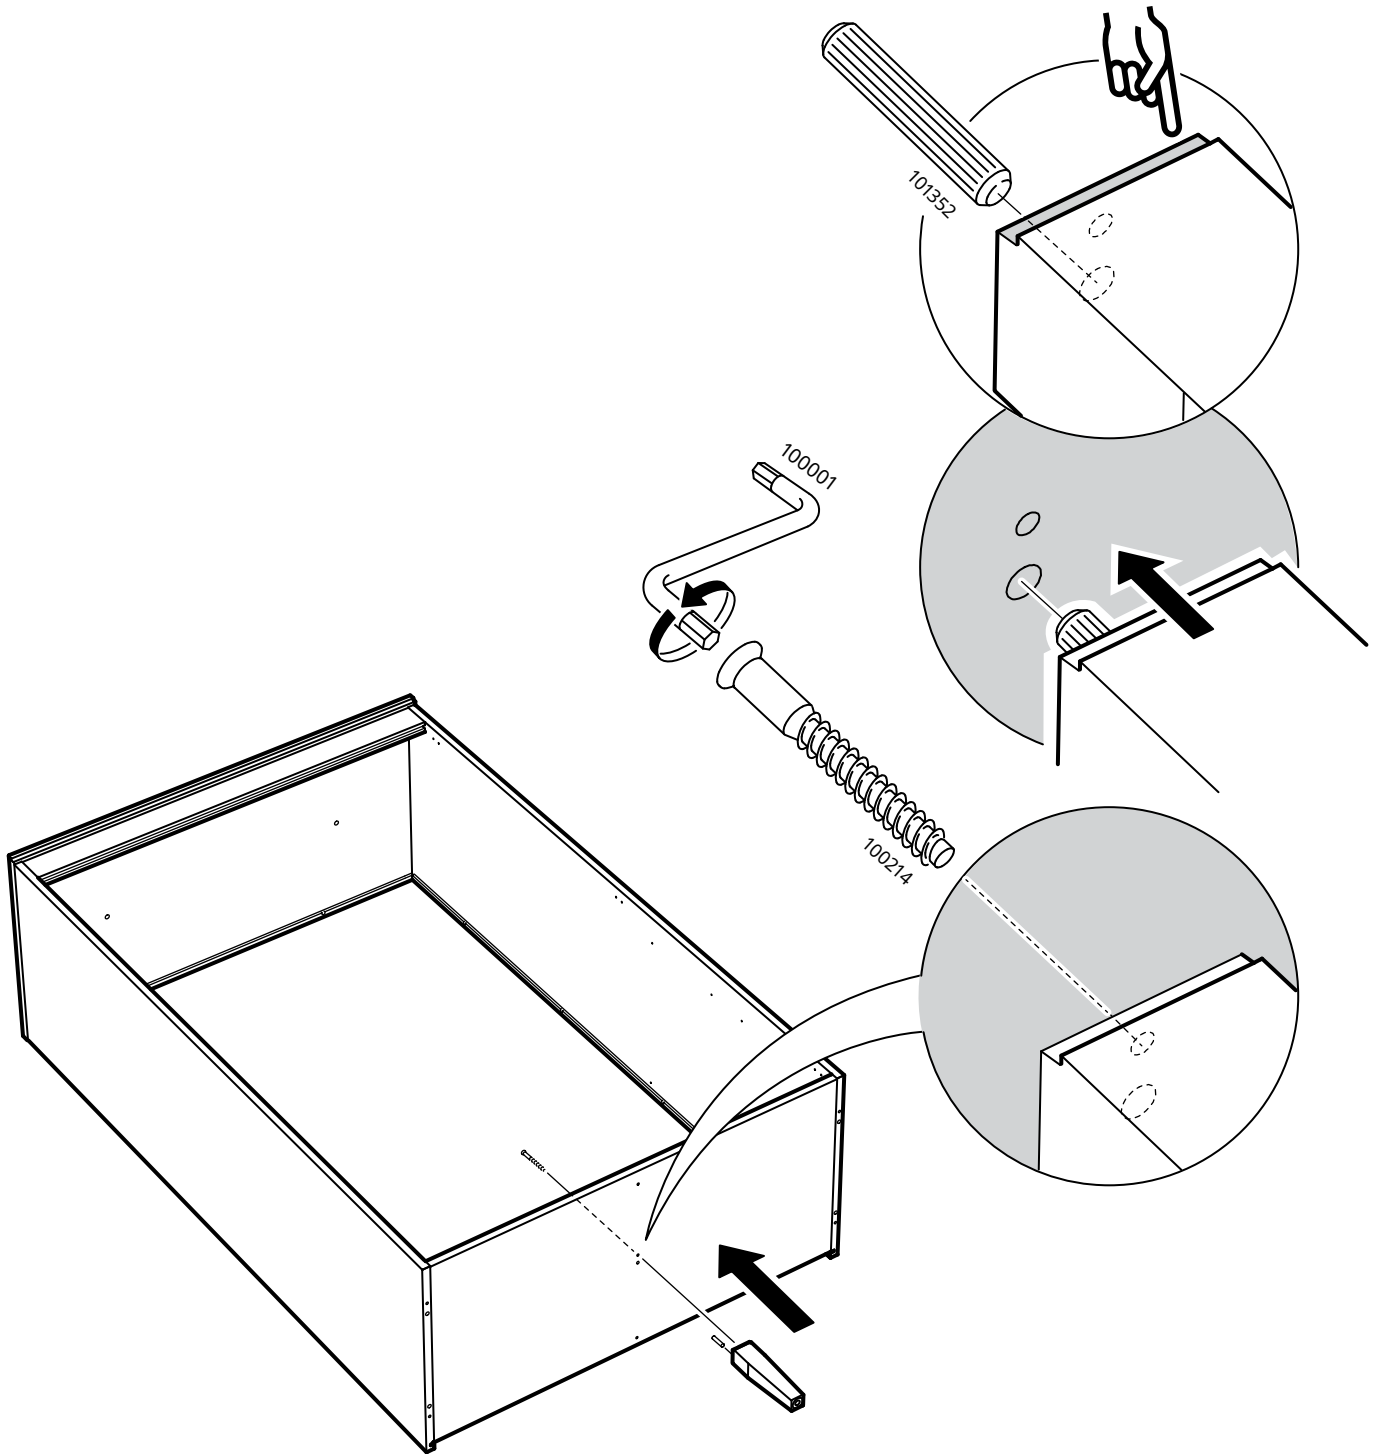 


9

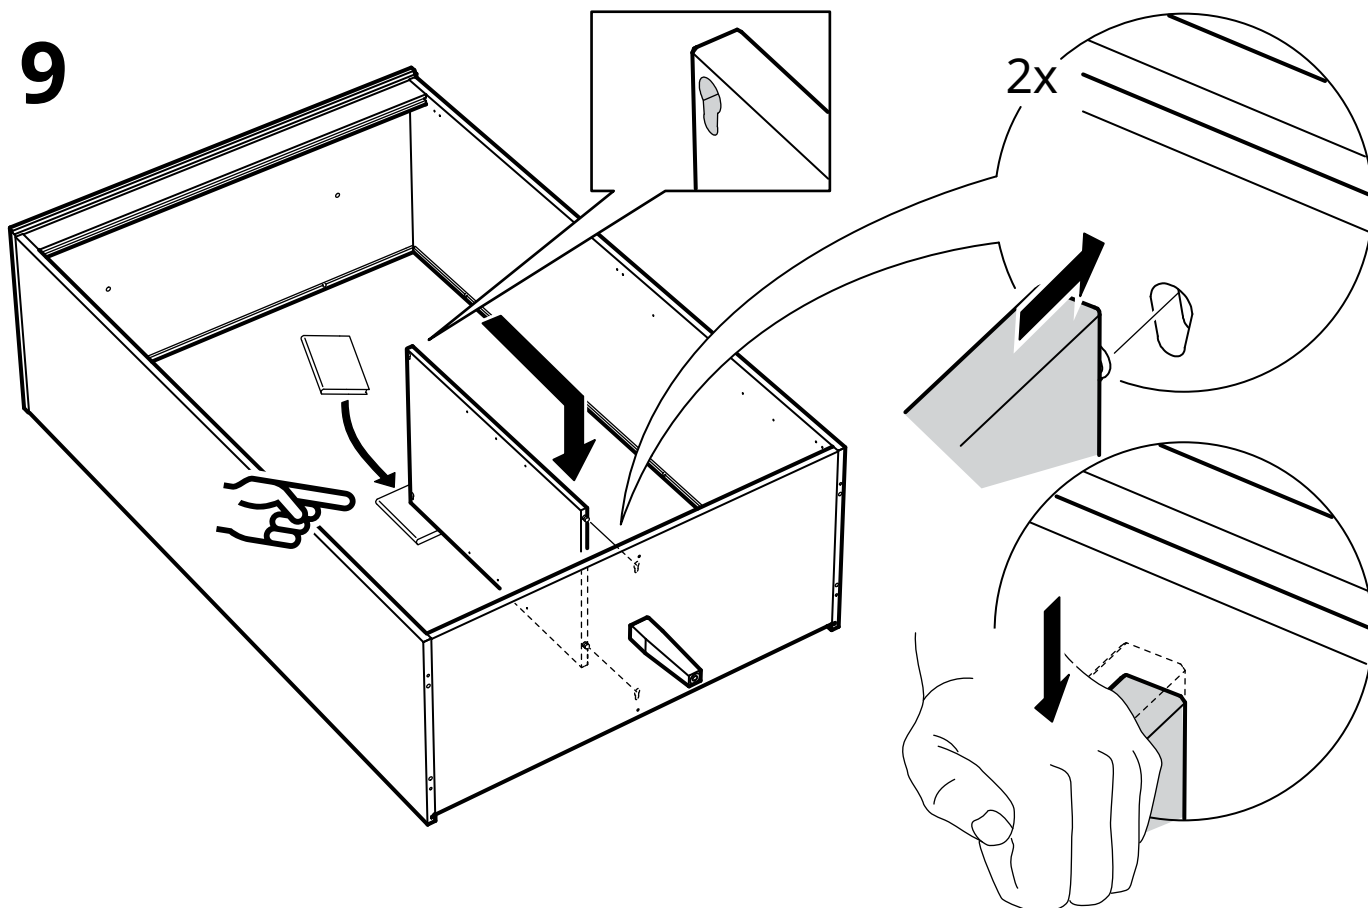 


10

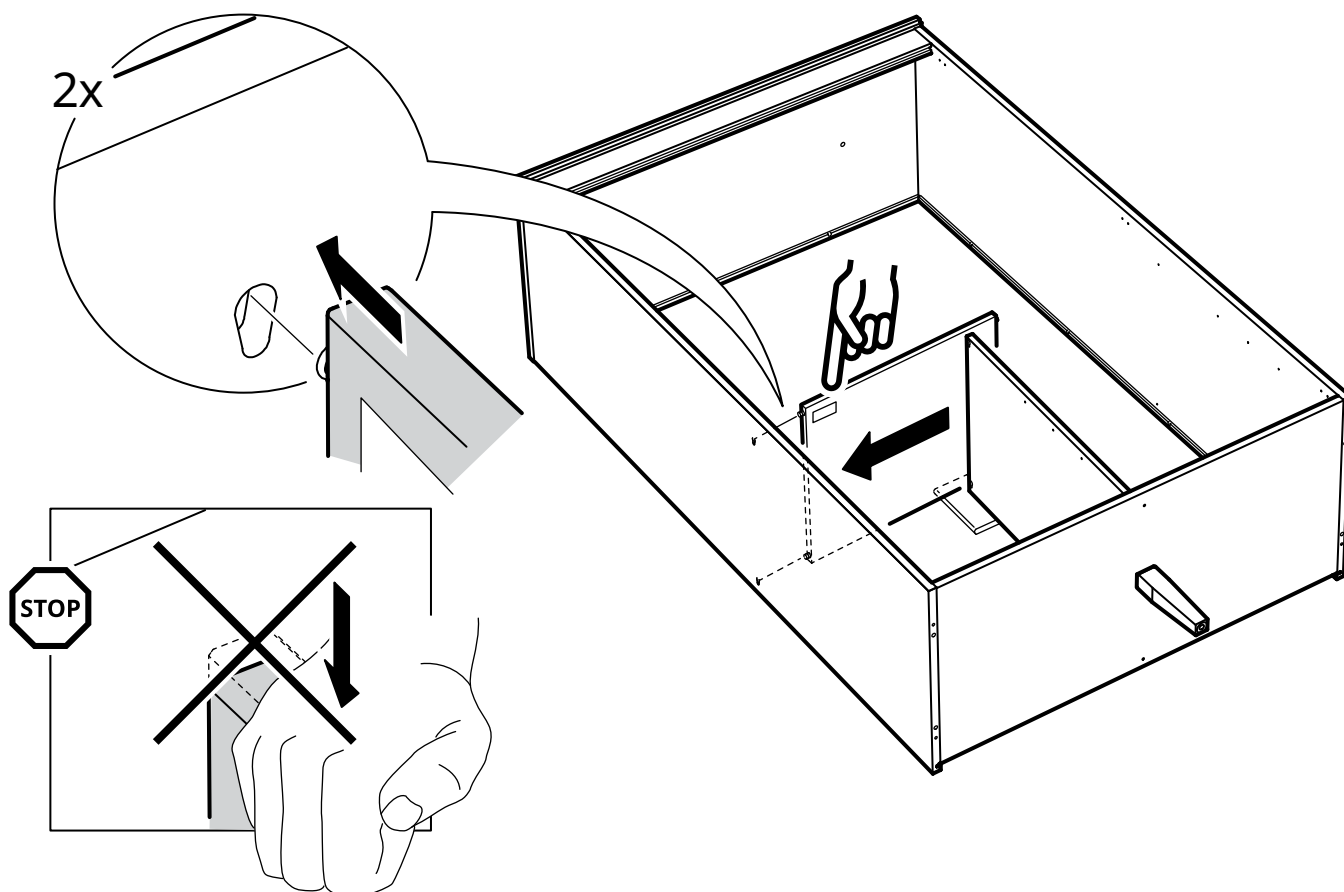 


11

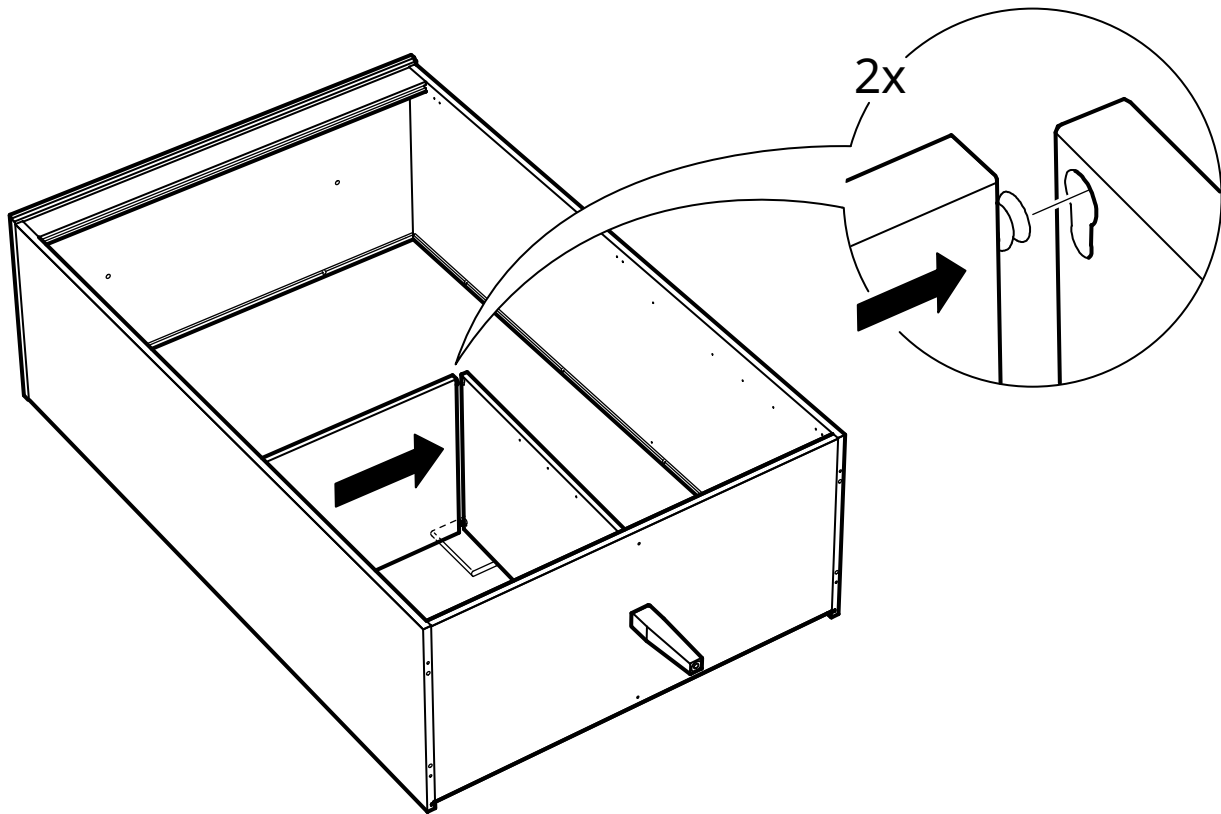 


12

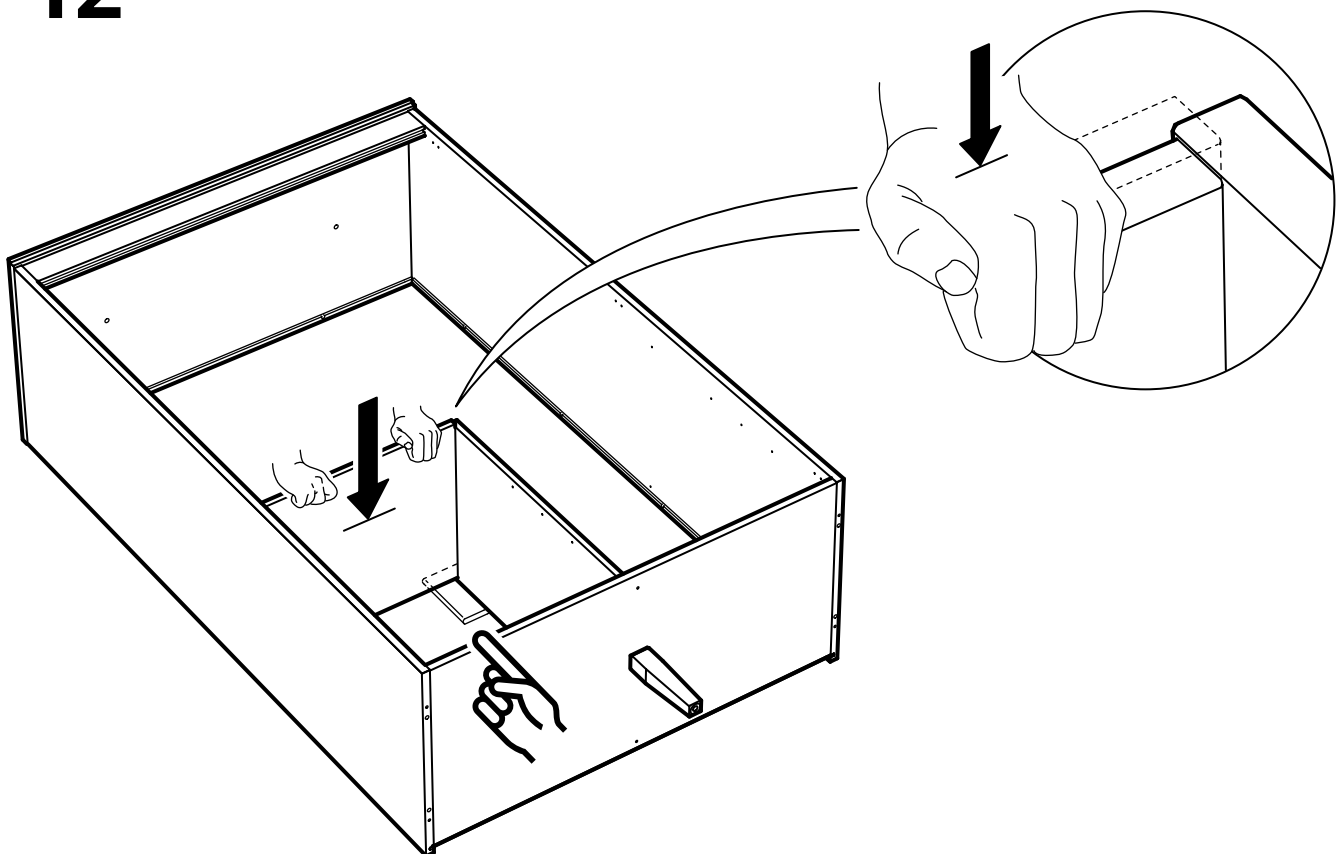 


13

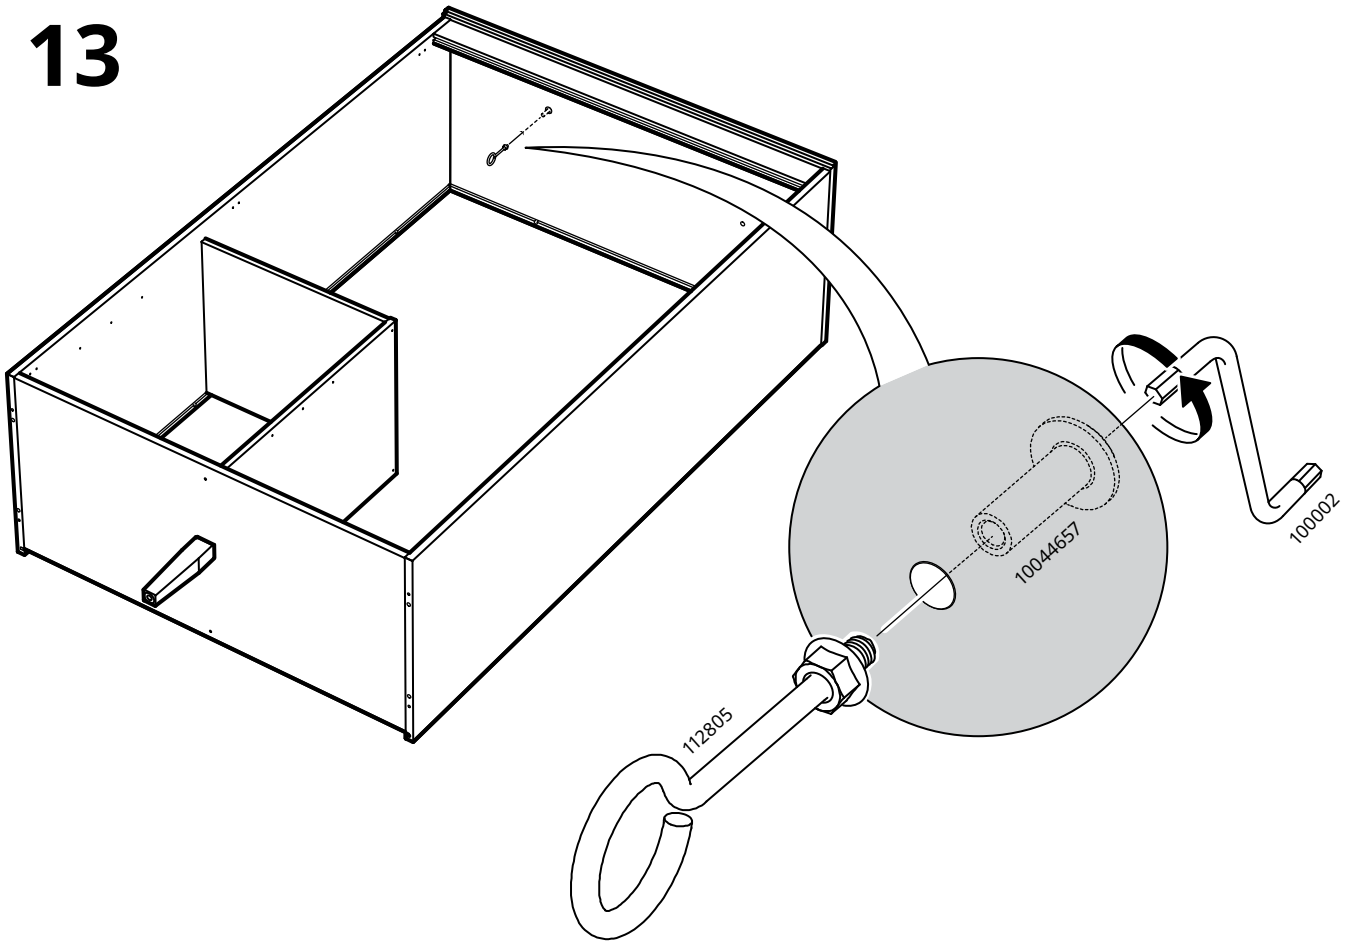 


14

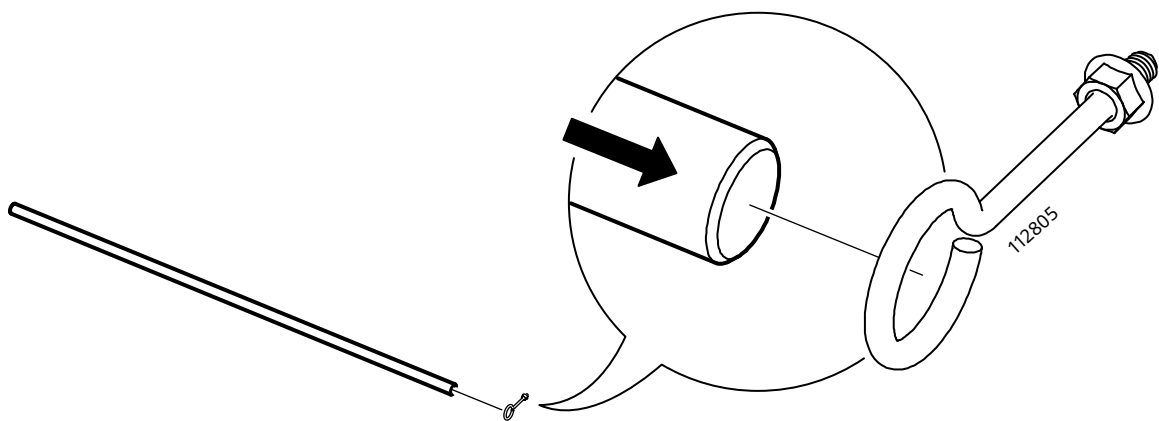 


15

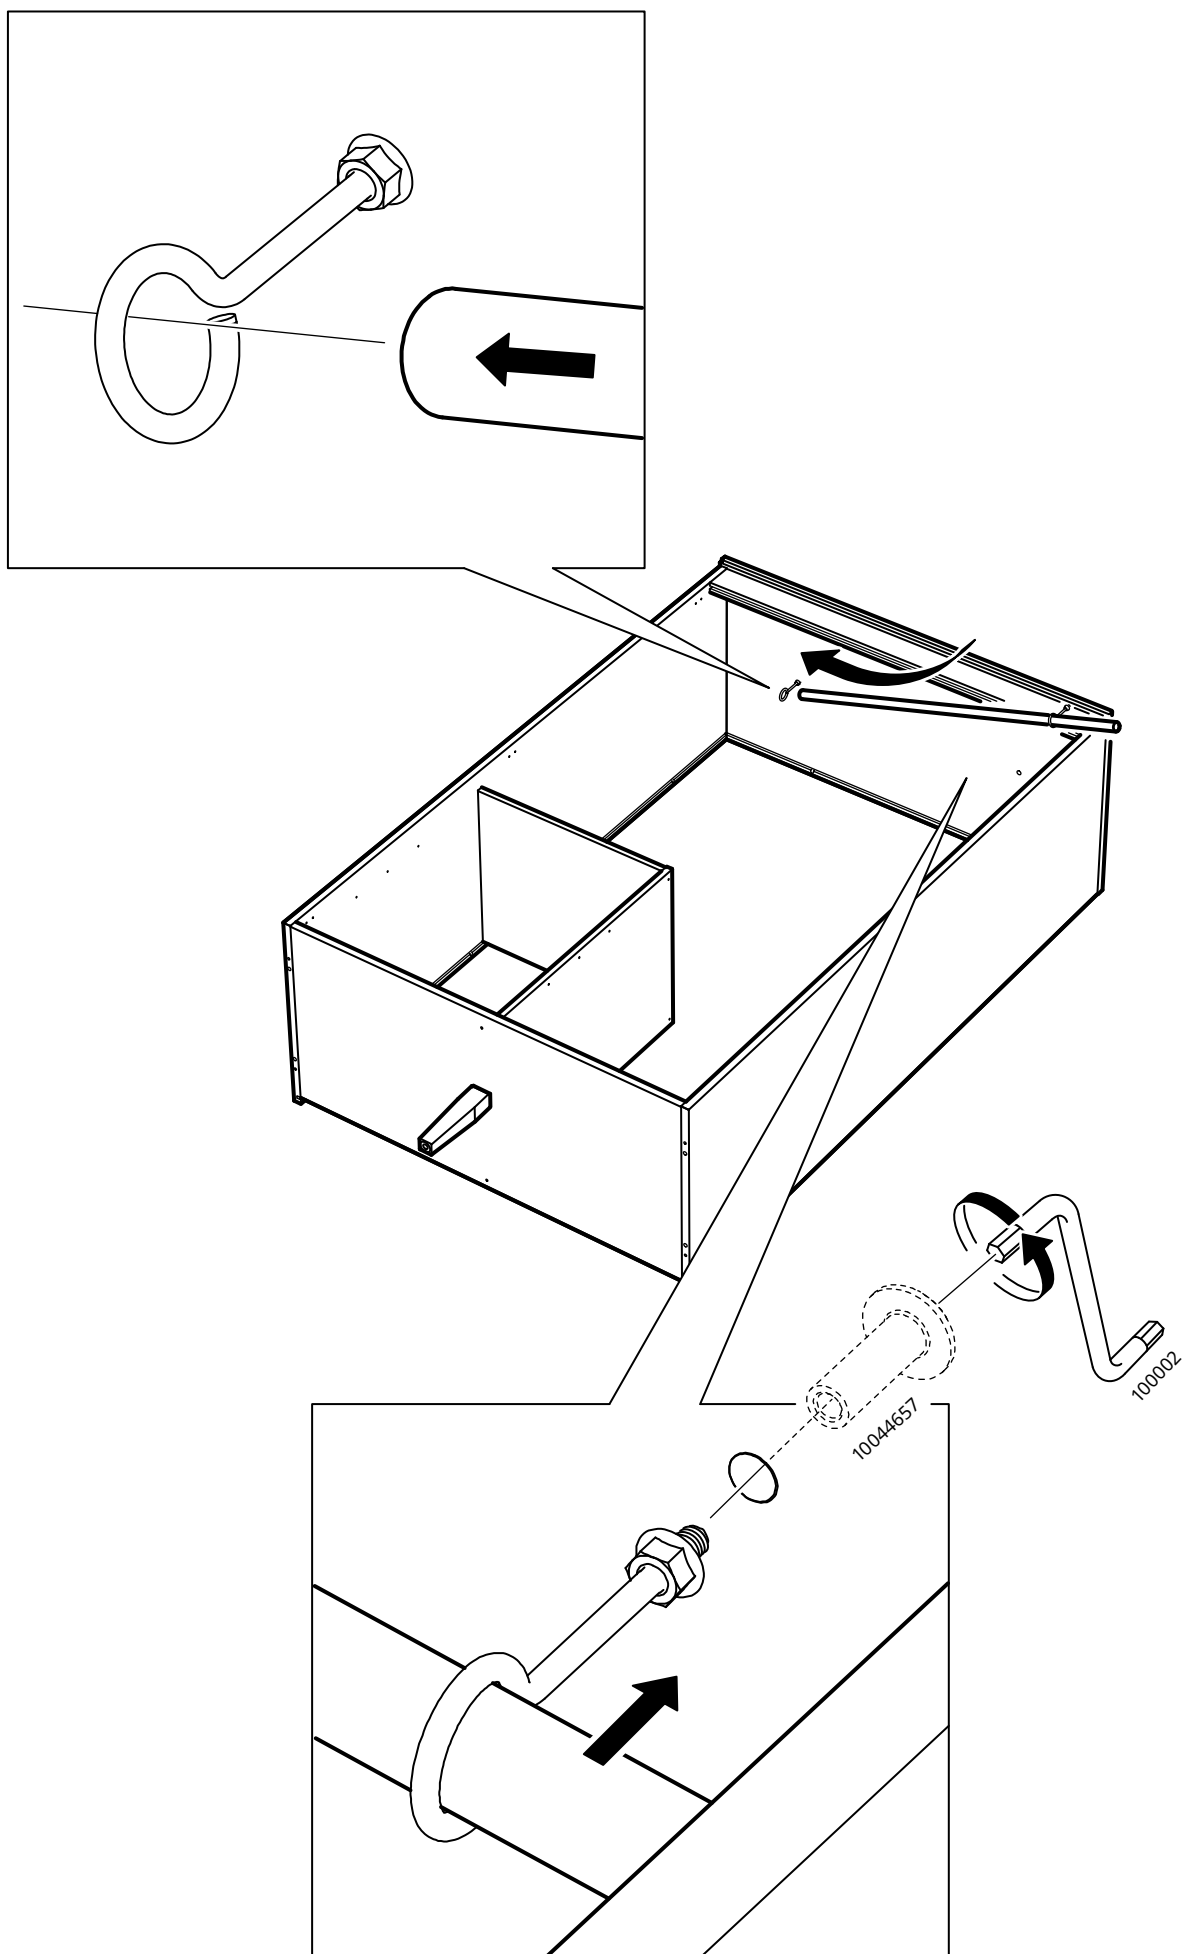 


16

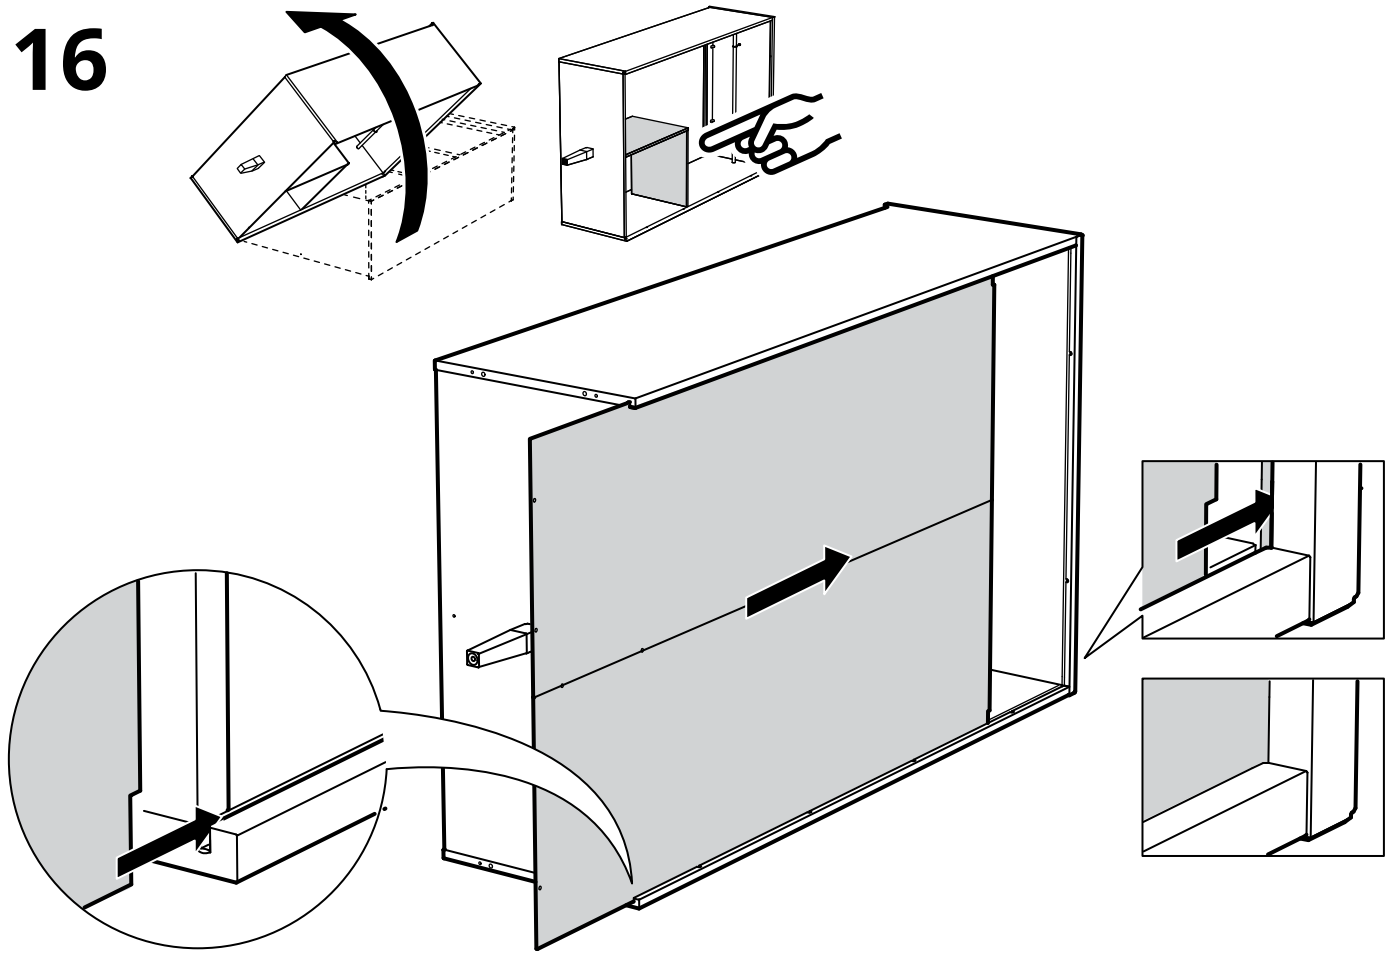 


17

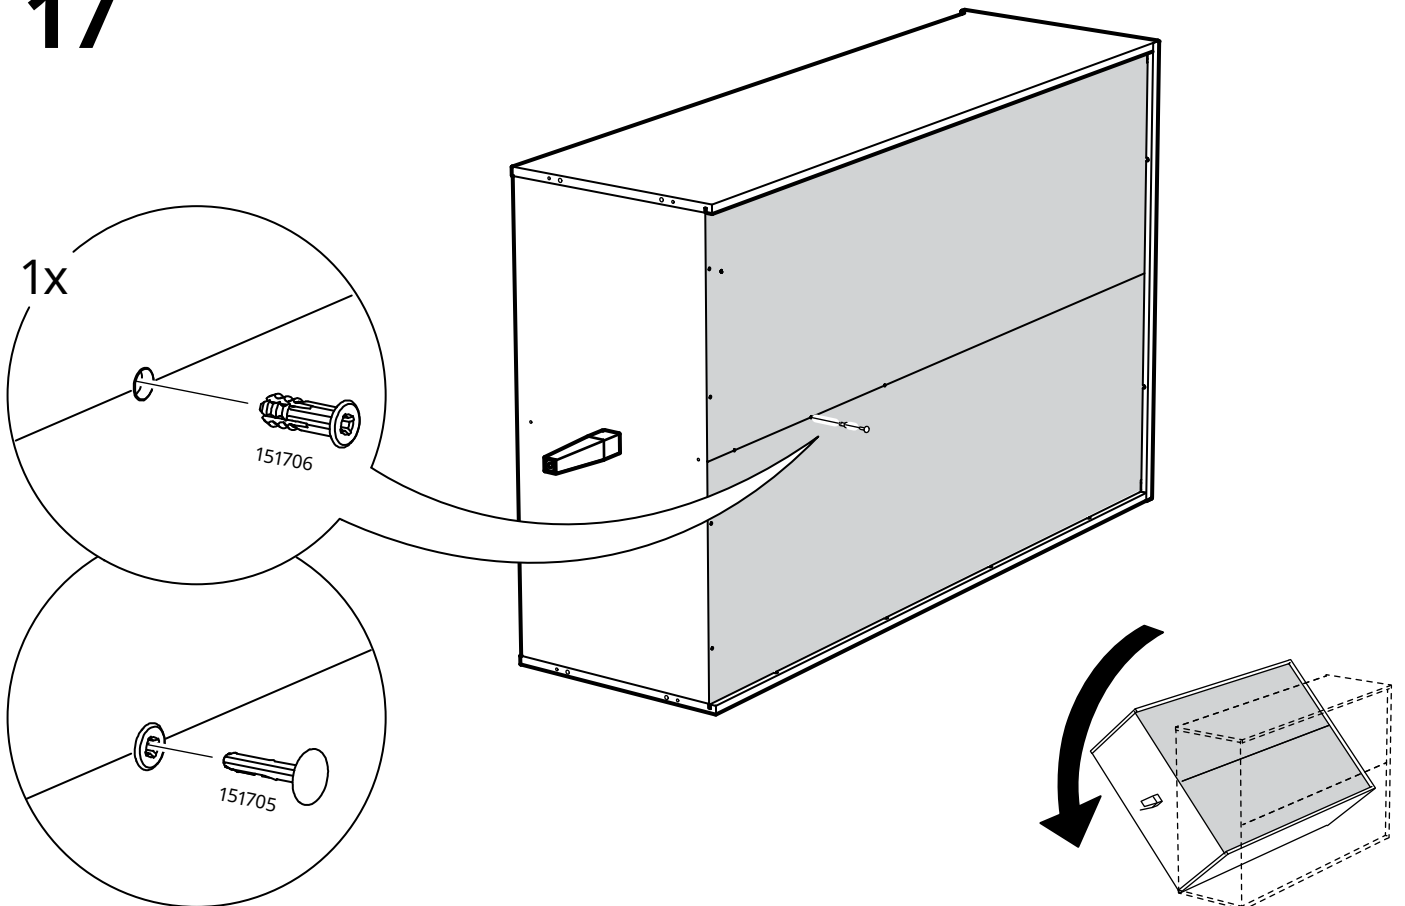 


18

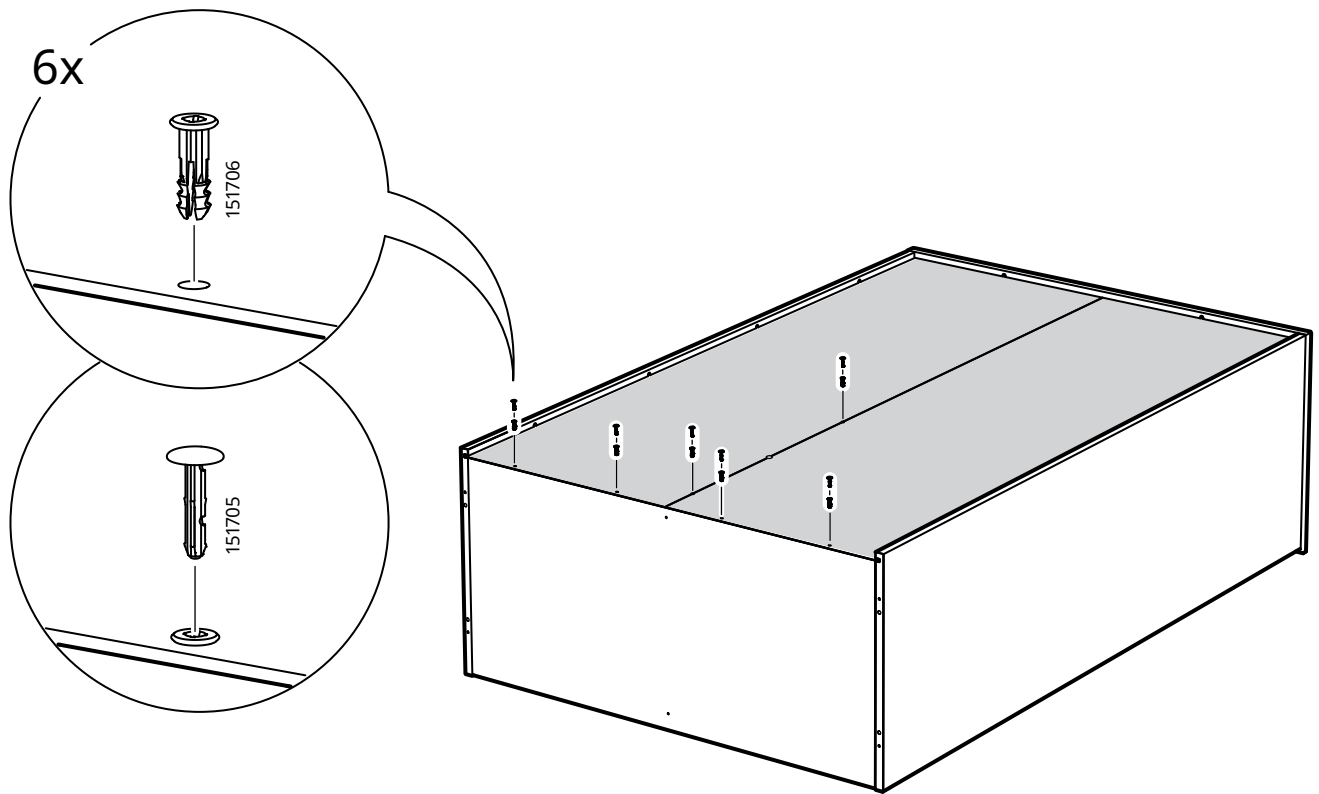 


19

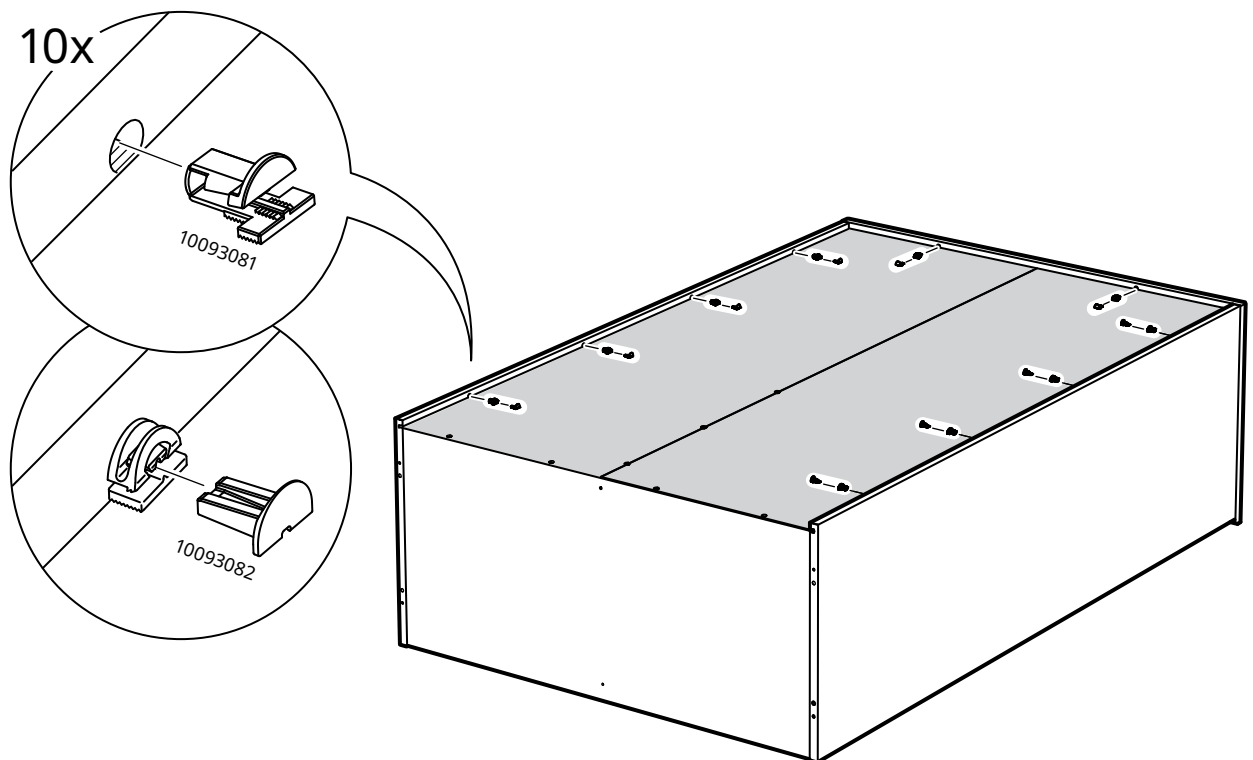 


20

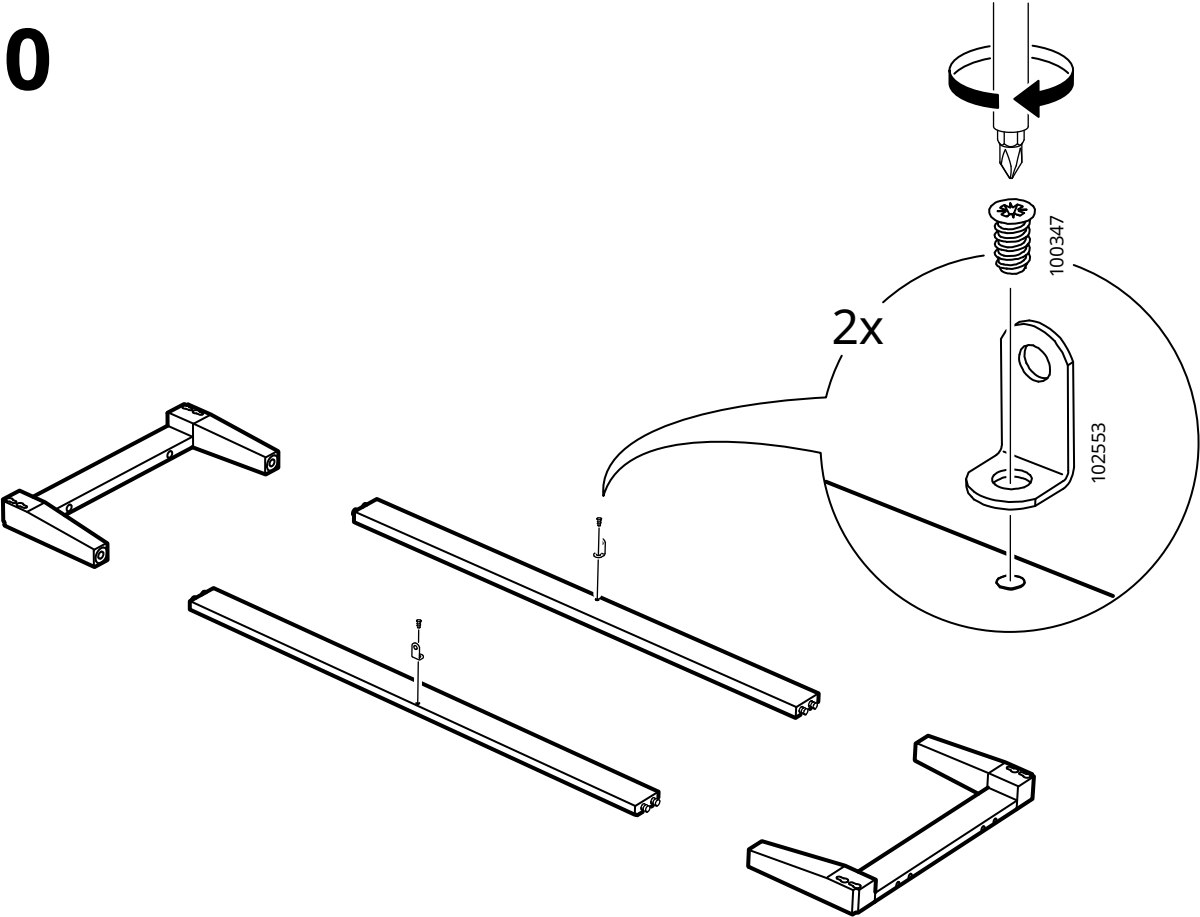 


21

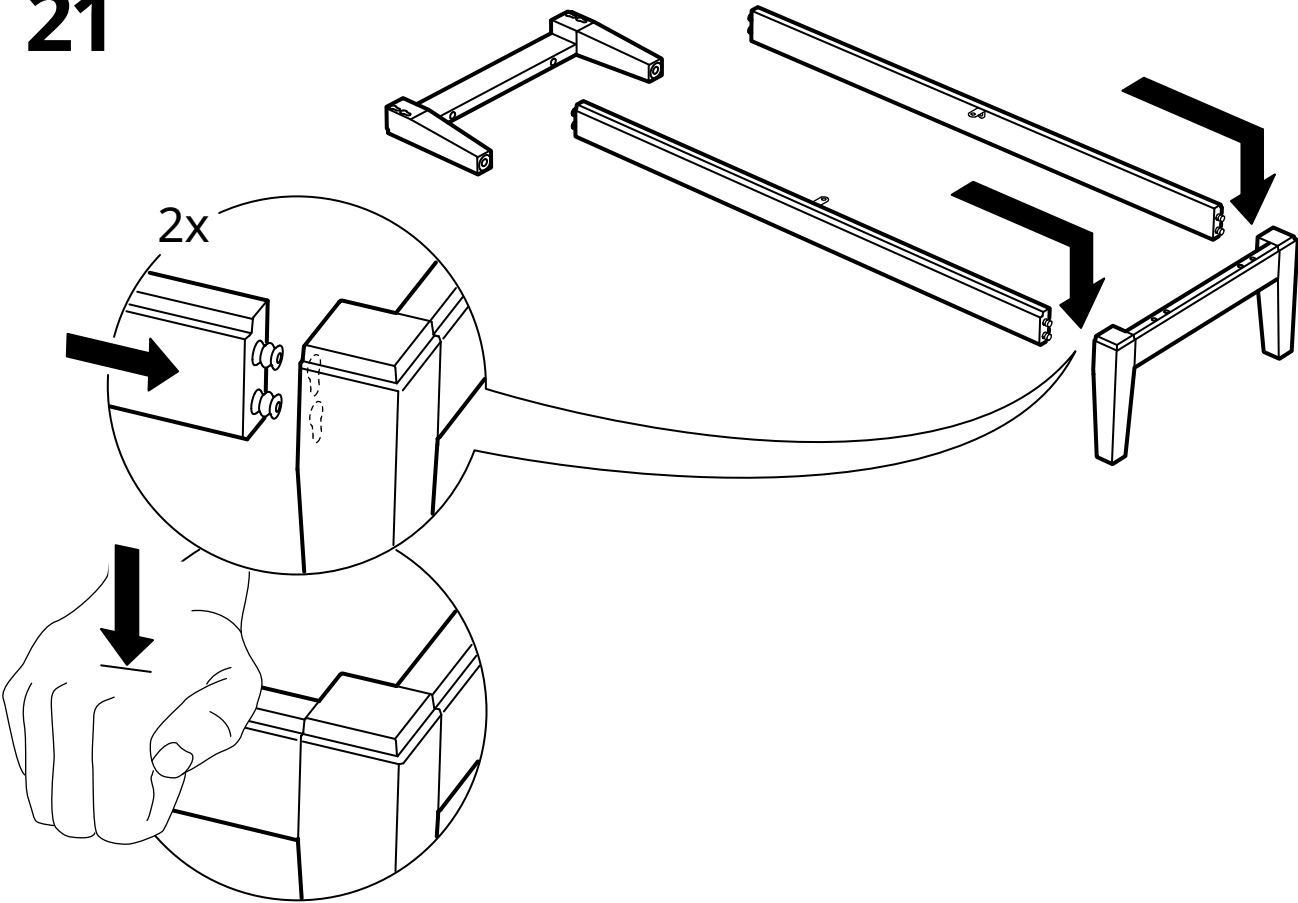 


22

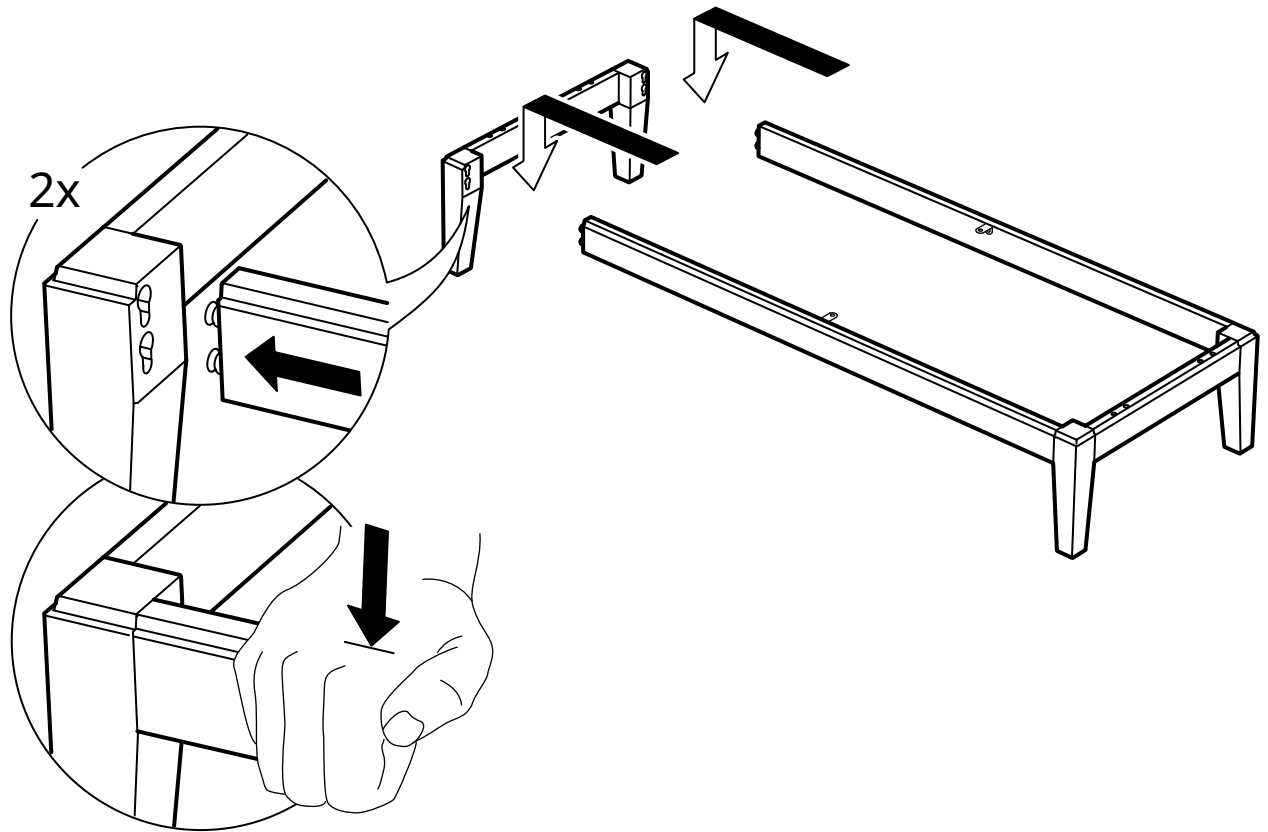 


23

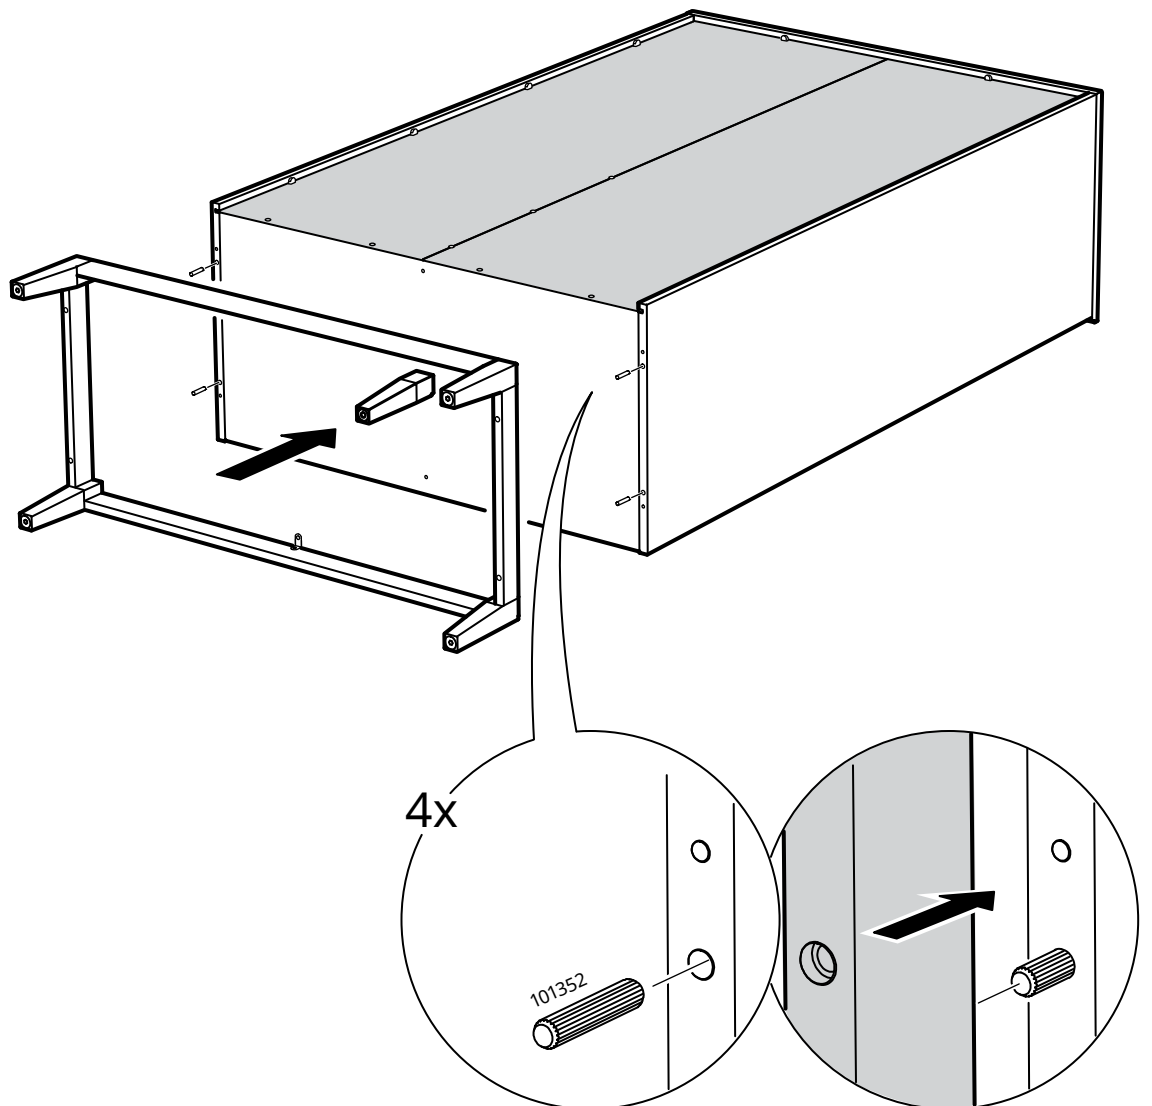 




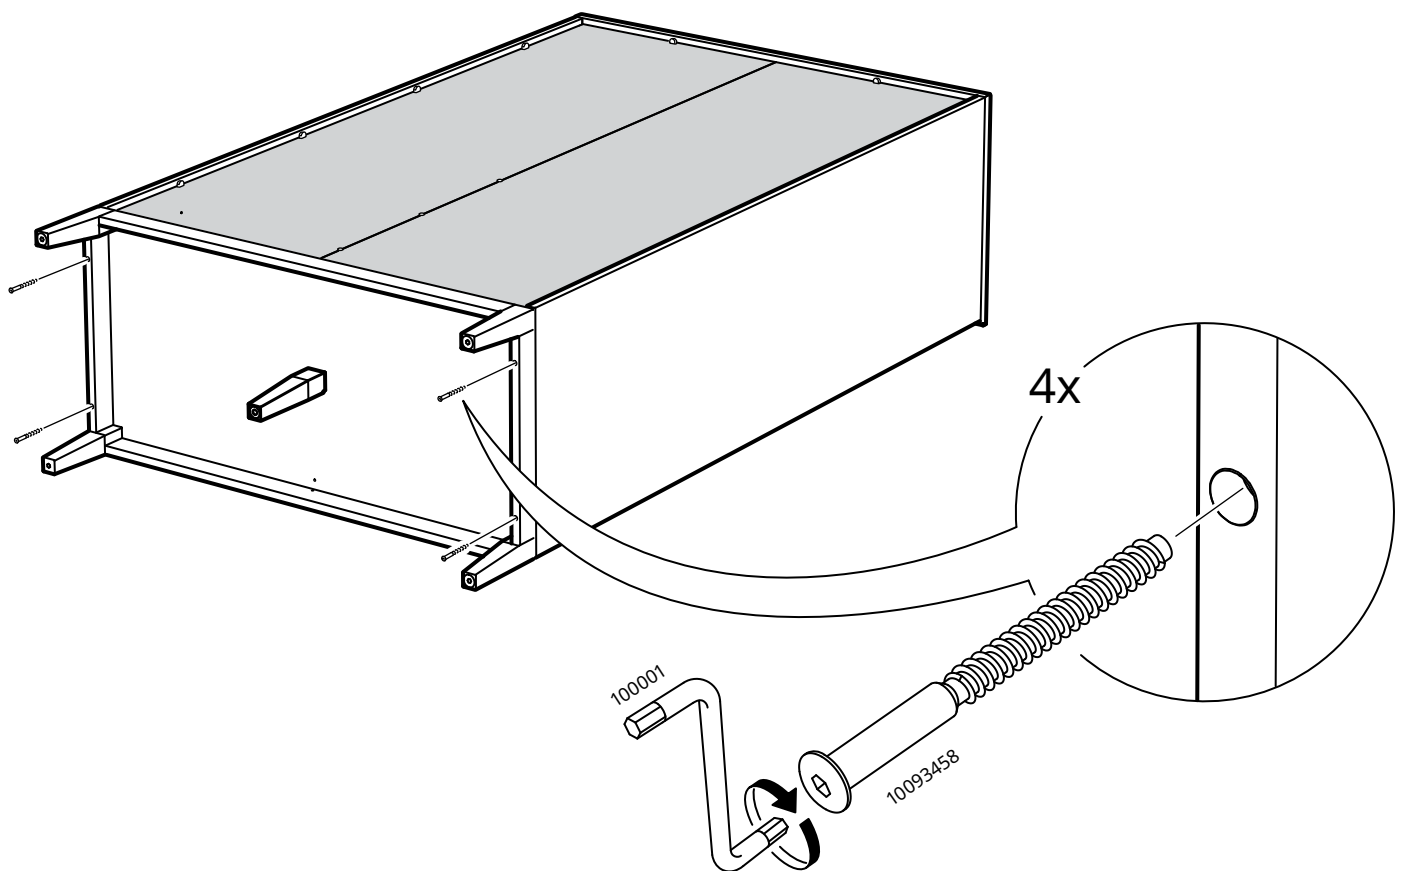 




25

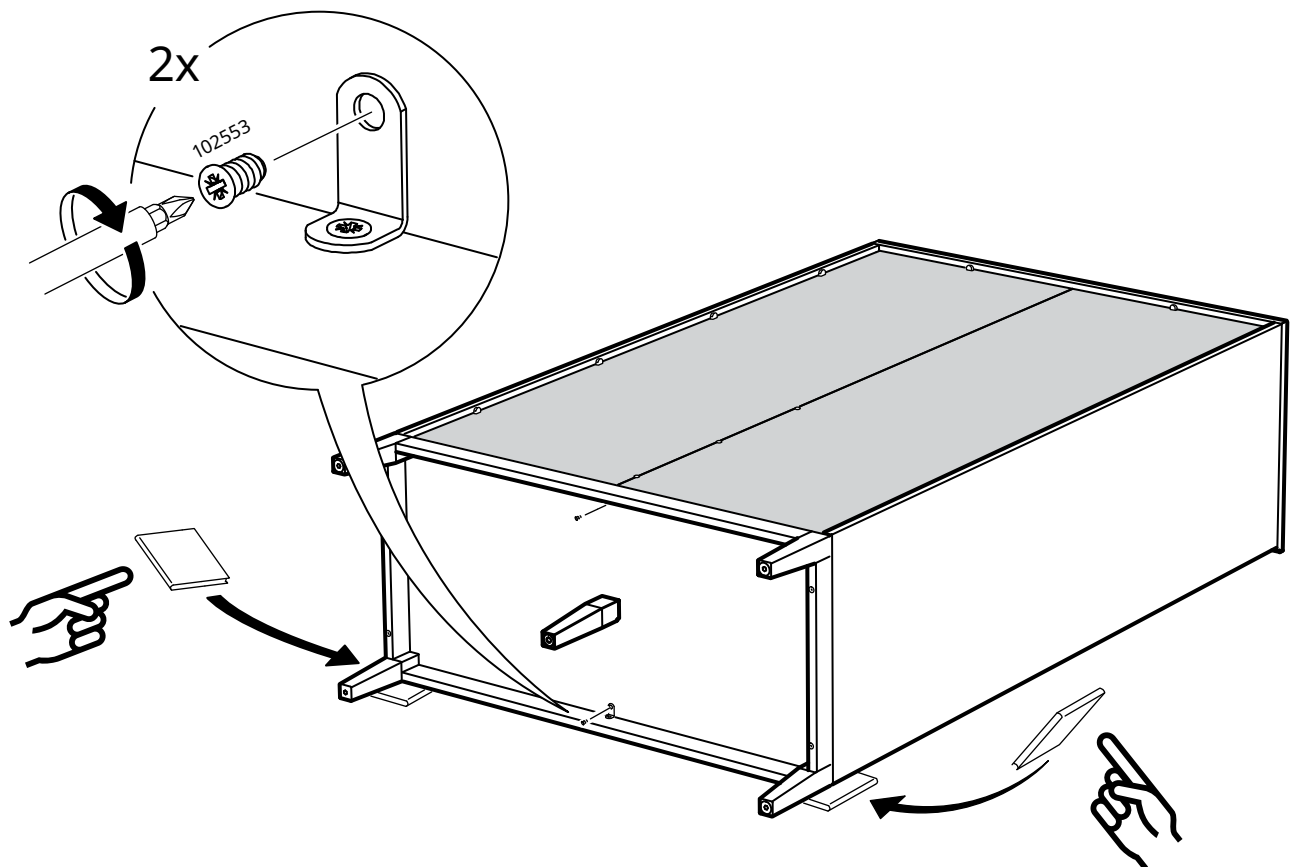 




26

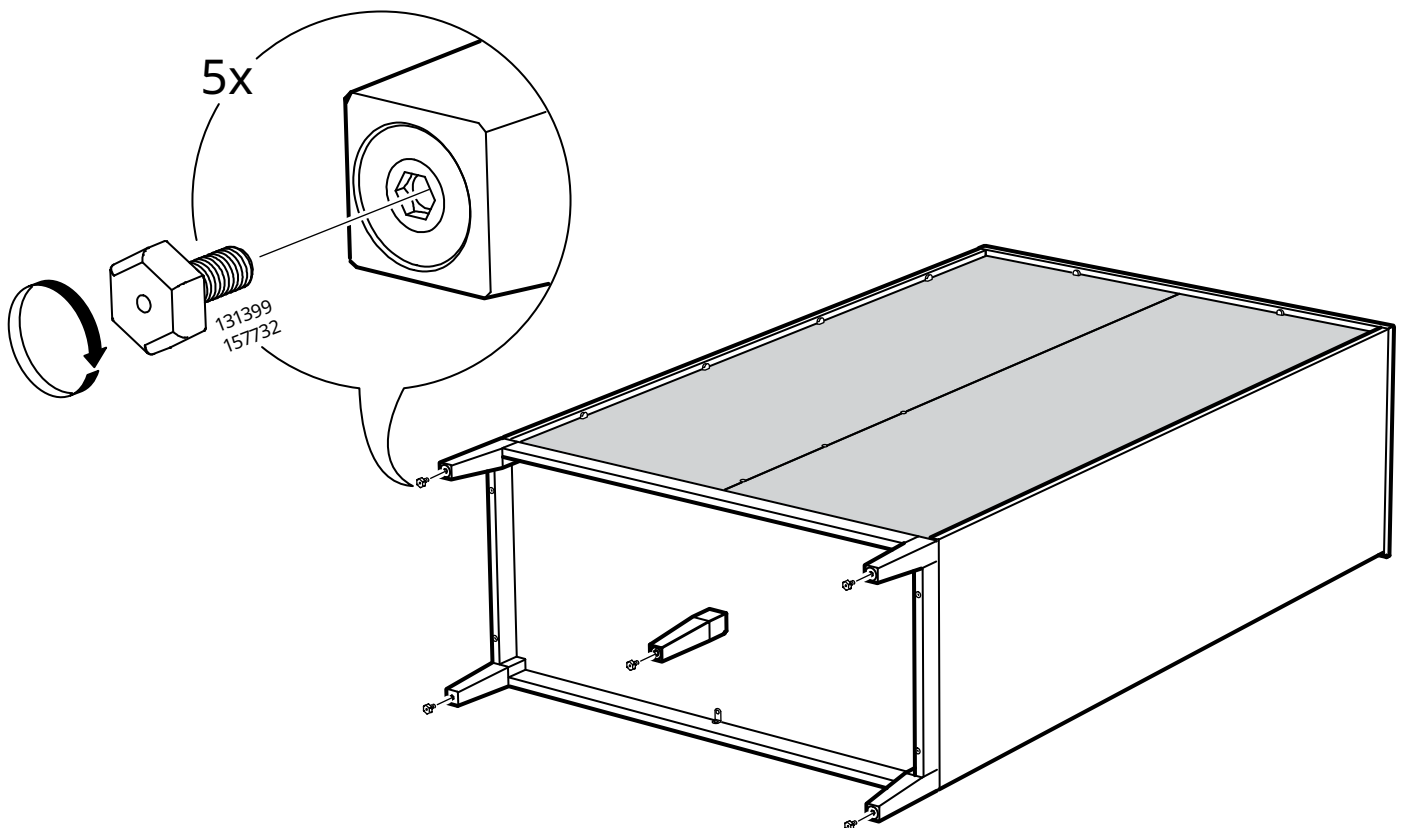 


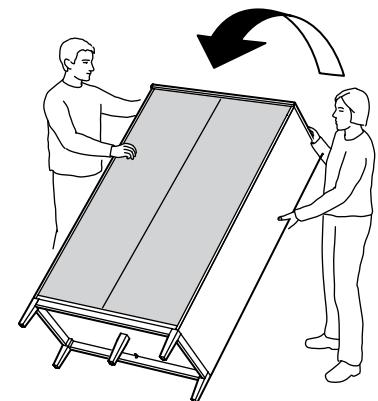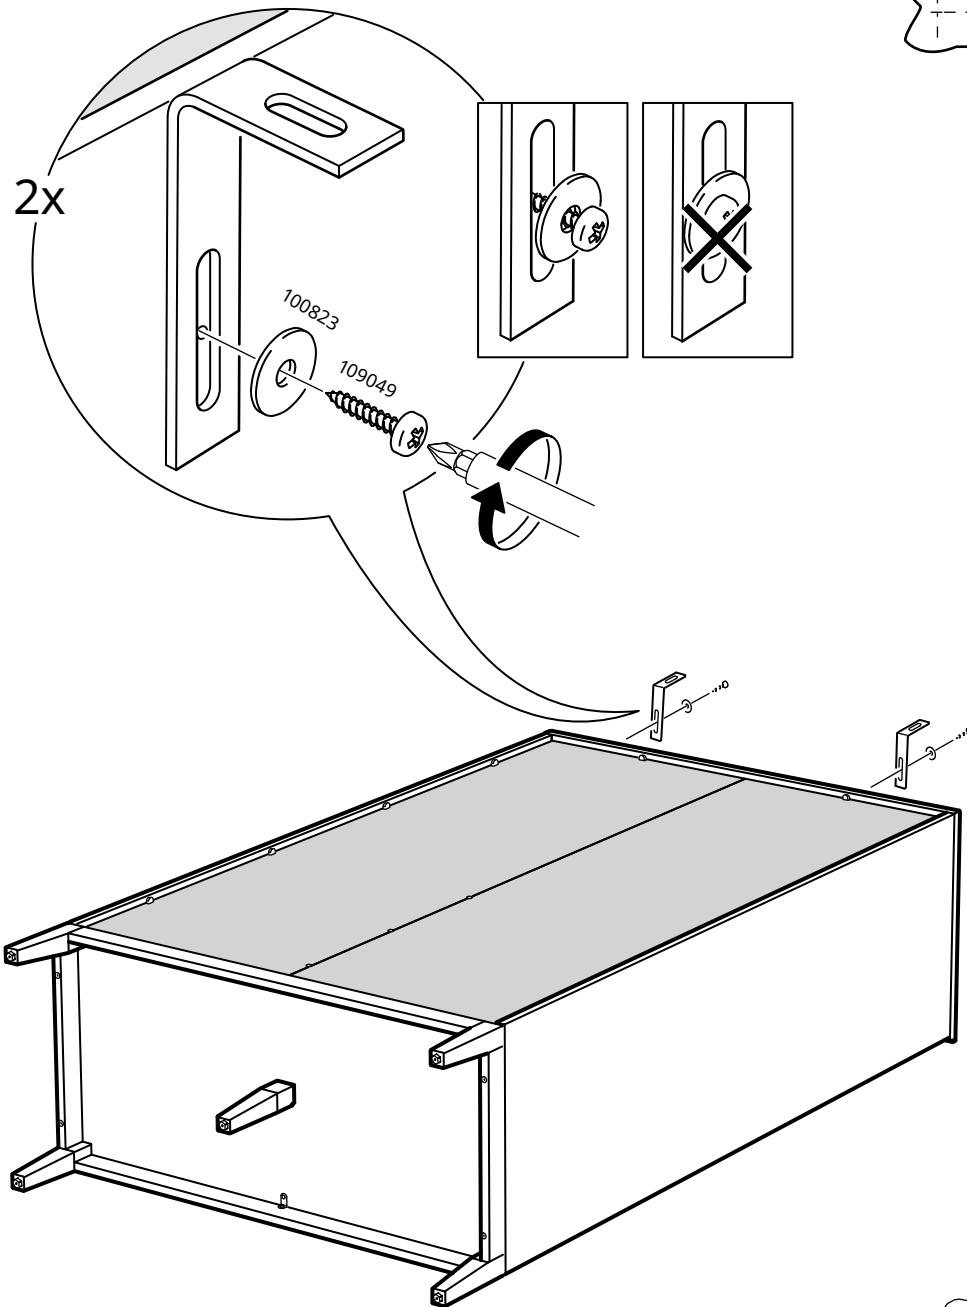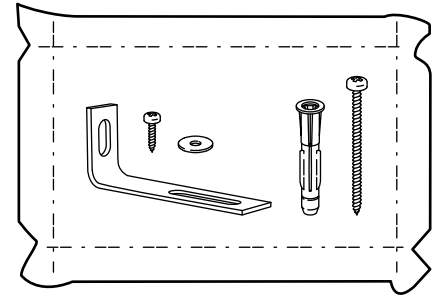   

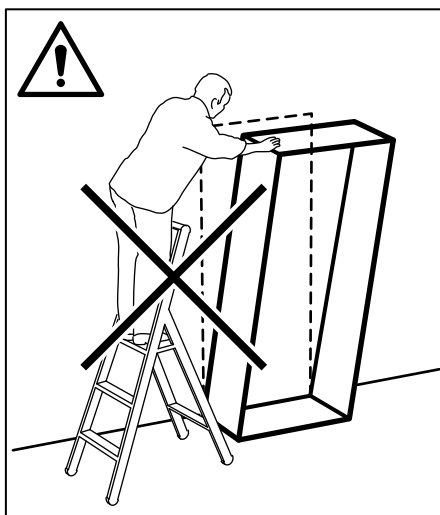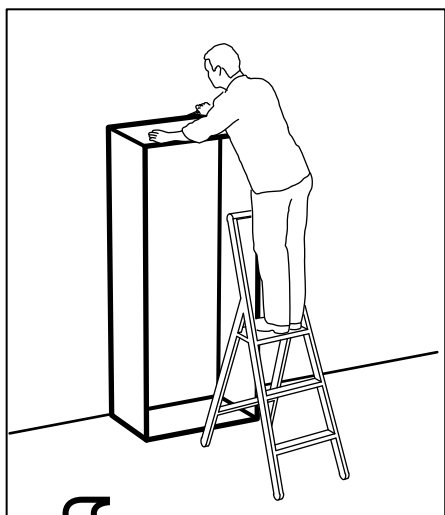  

28

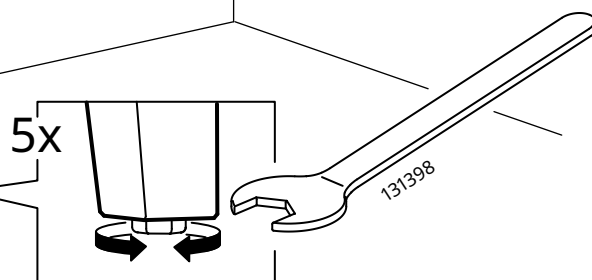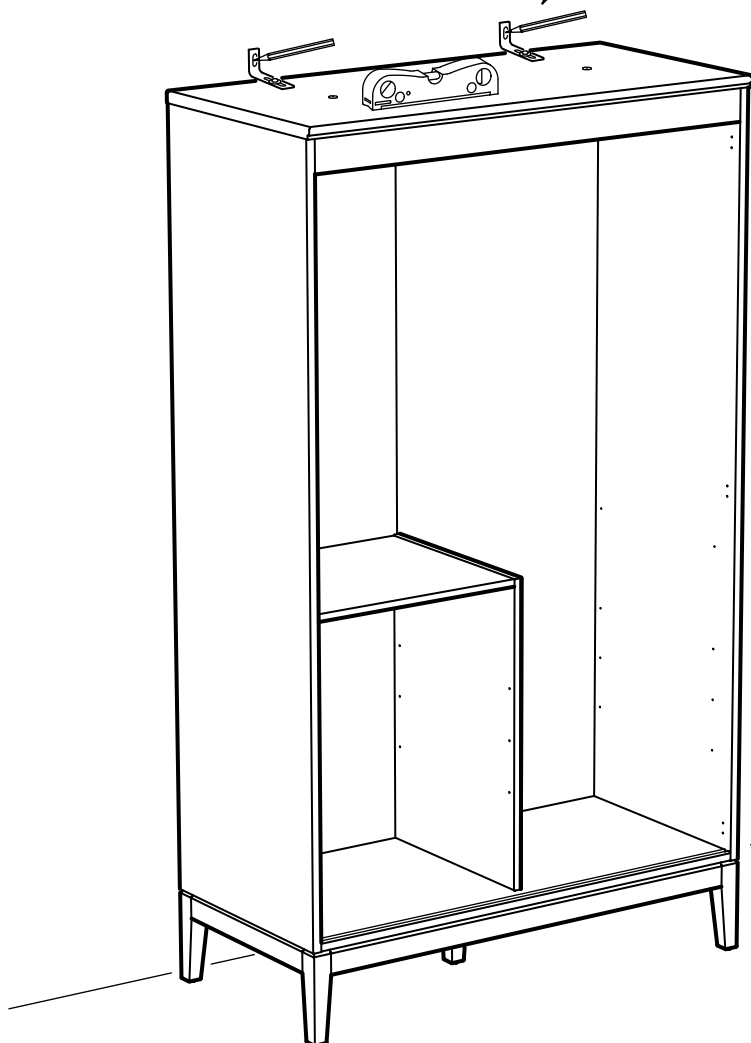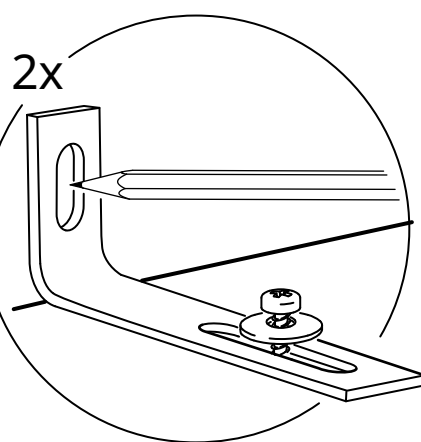   

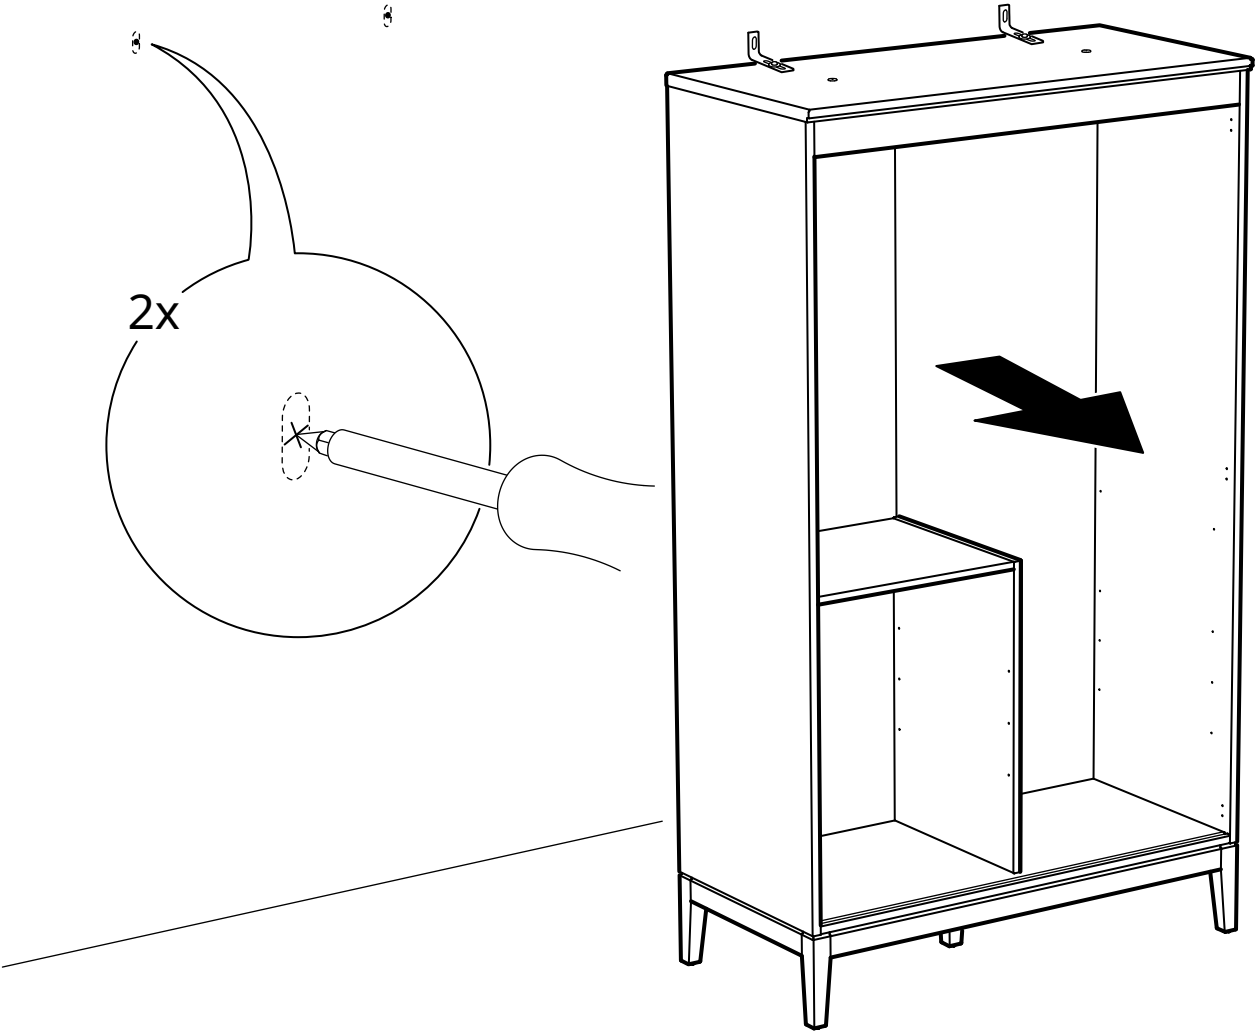 




www.IKEA.com/secure-it



 
www.IKEA.cn/secure-it

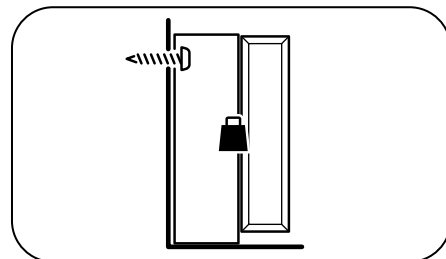

English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

 
A

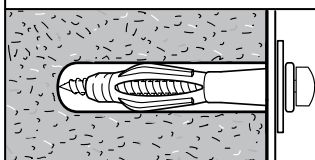


Ø 8 mm
(5/16")



 
1




2

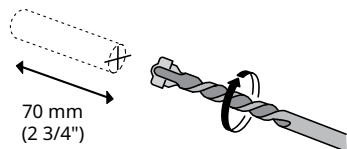 

3

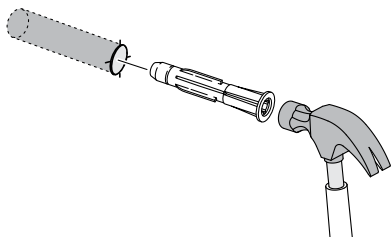 


B

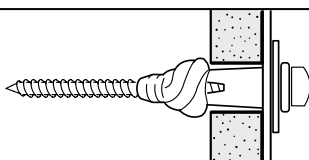 


Ø 8 mm
(5/16")



 
1




2

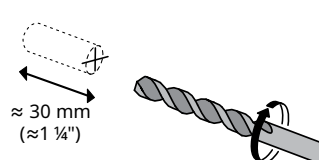 

3

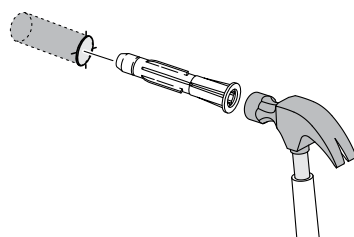 


C

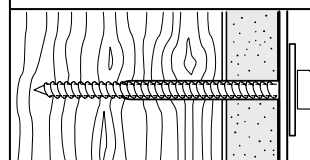 


Ø 3 mm
(1/8")




 1




2

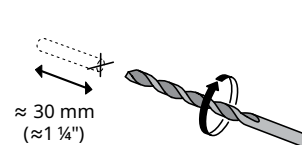 


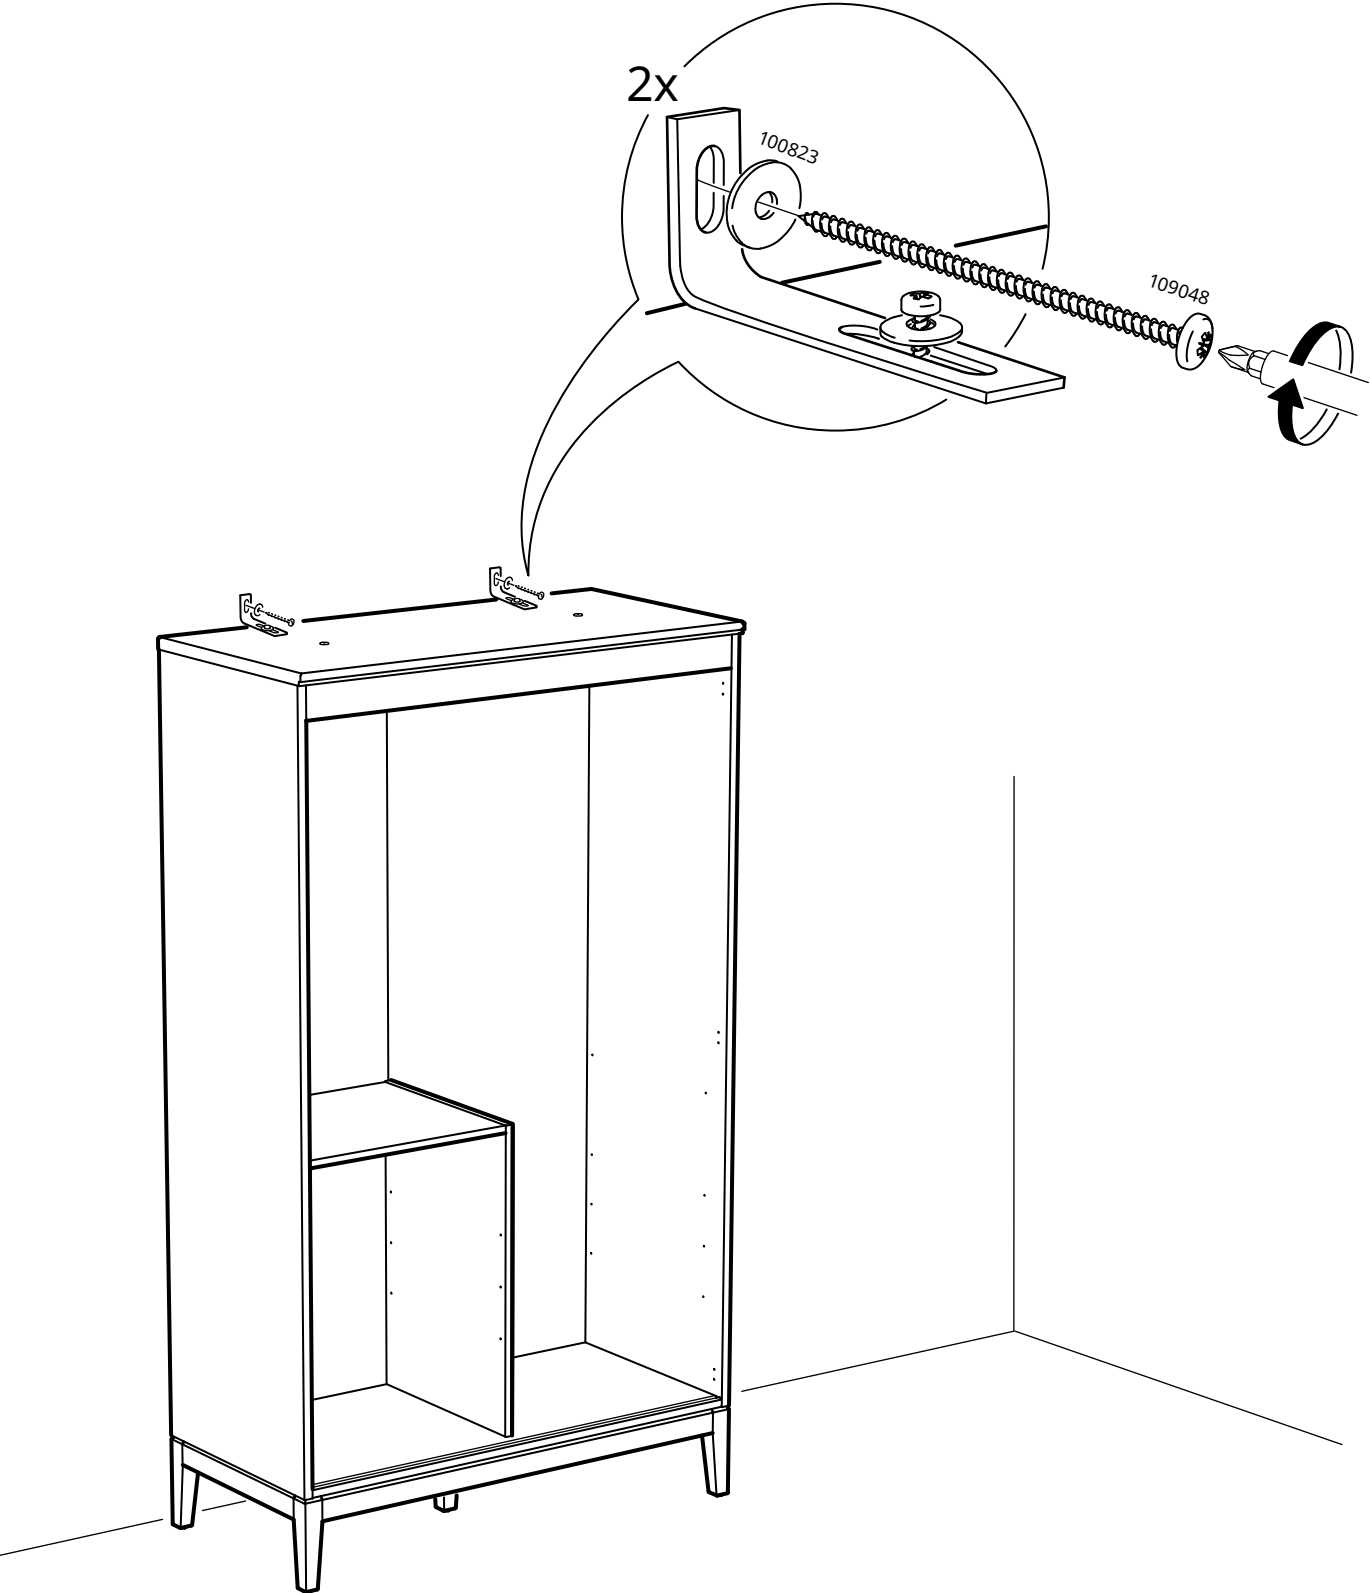 


31

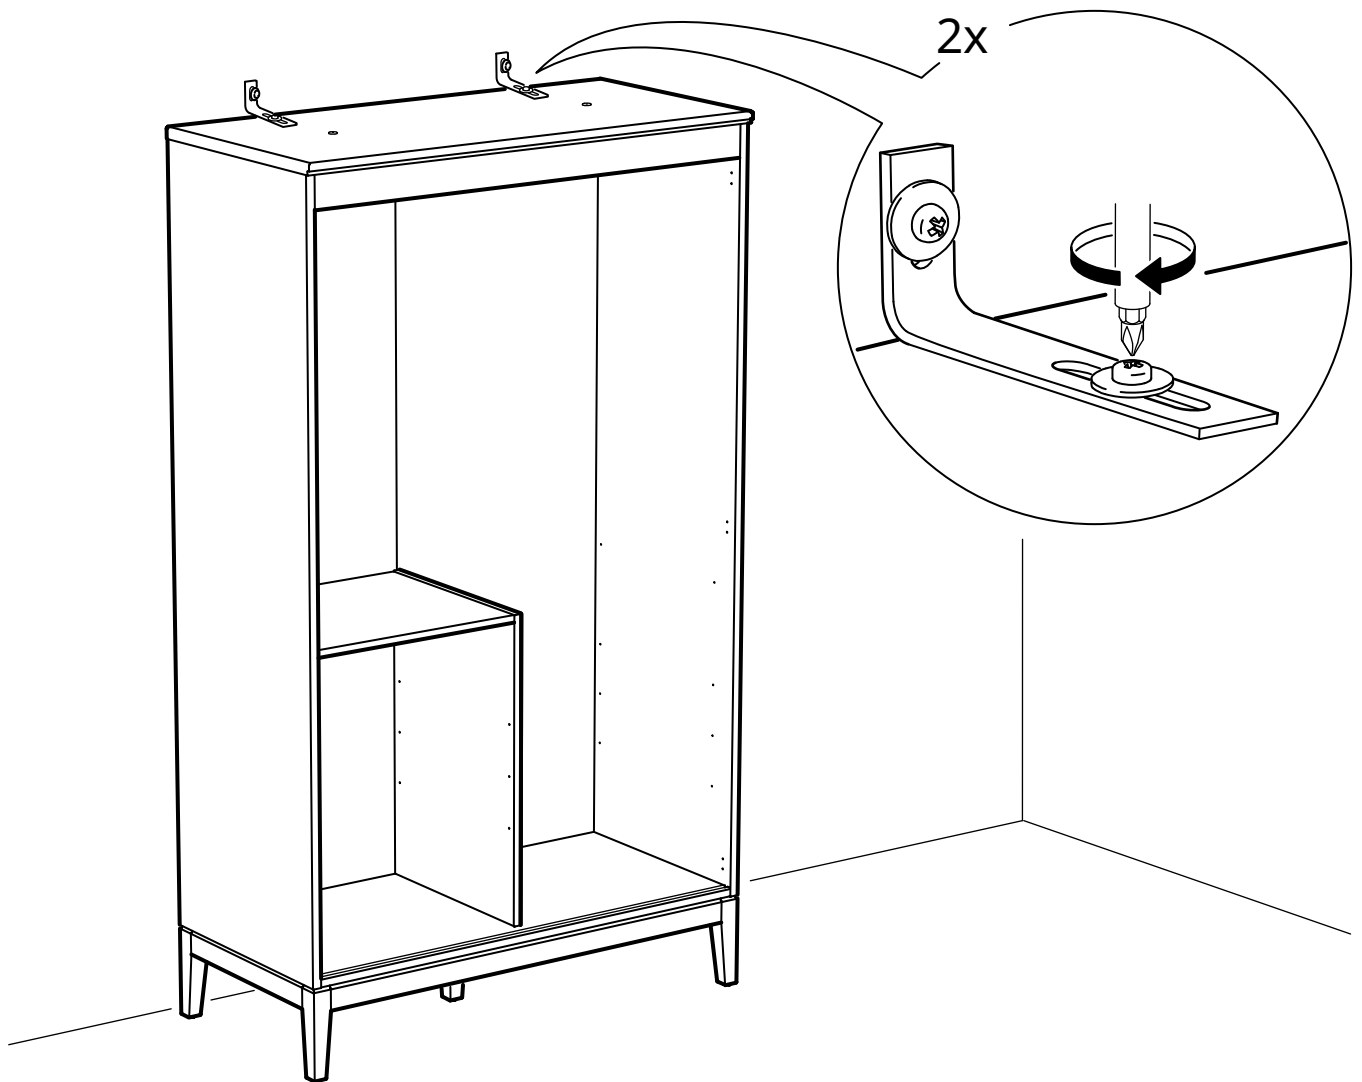 




32

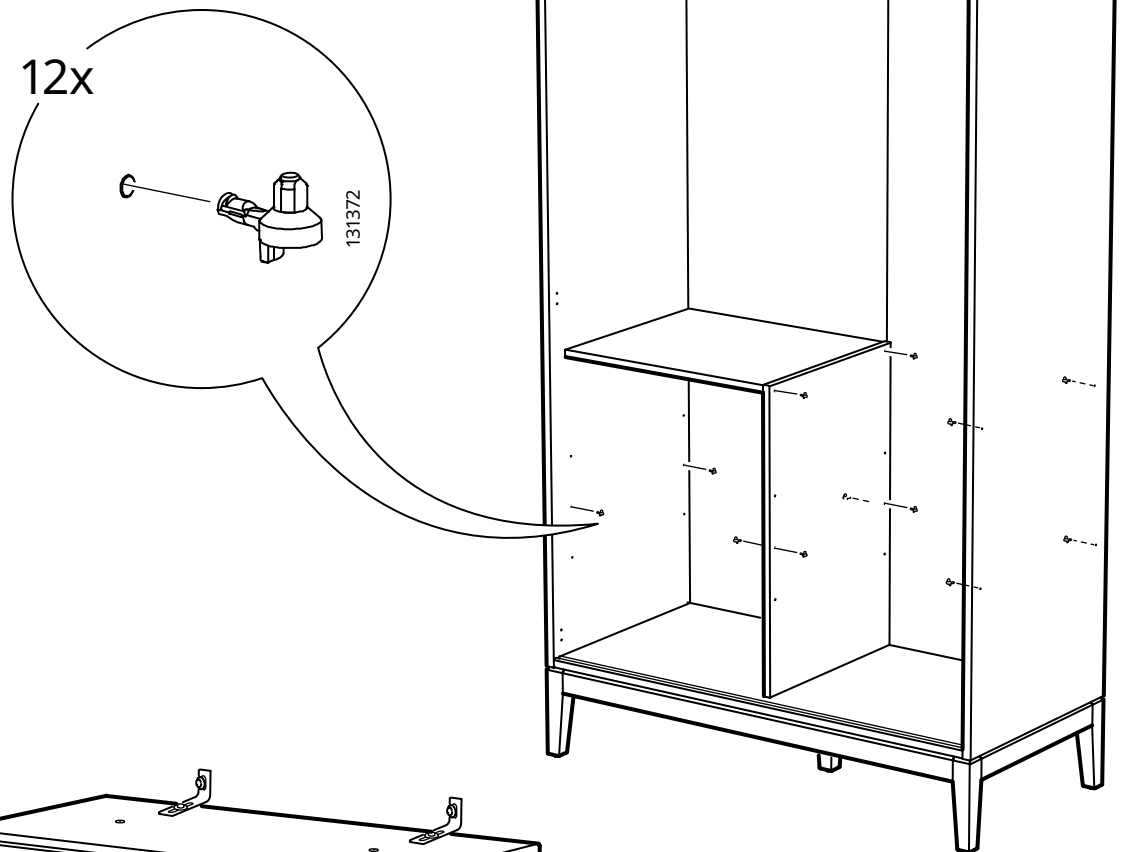 


33

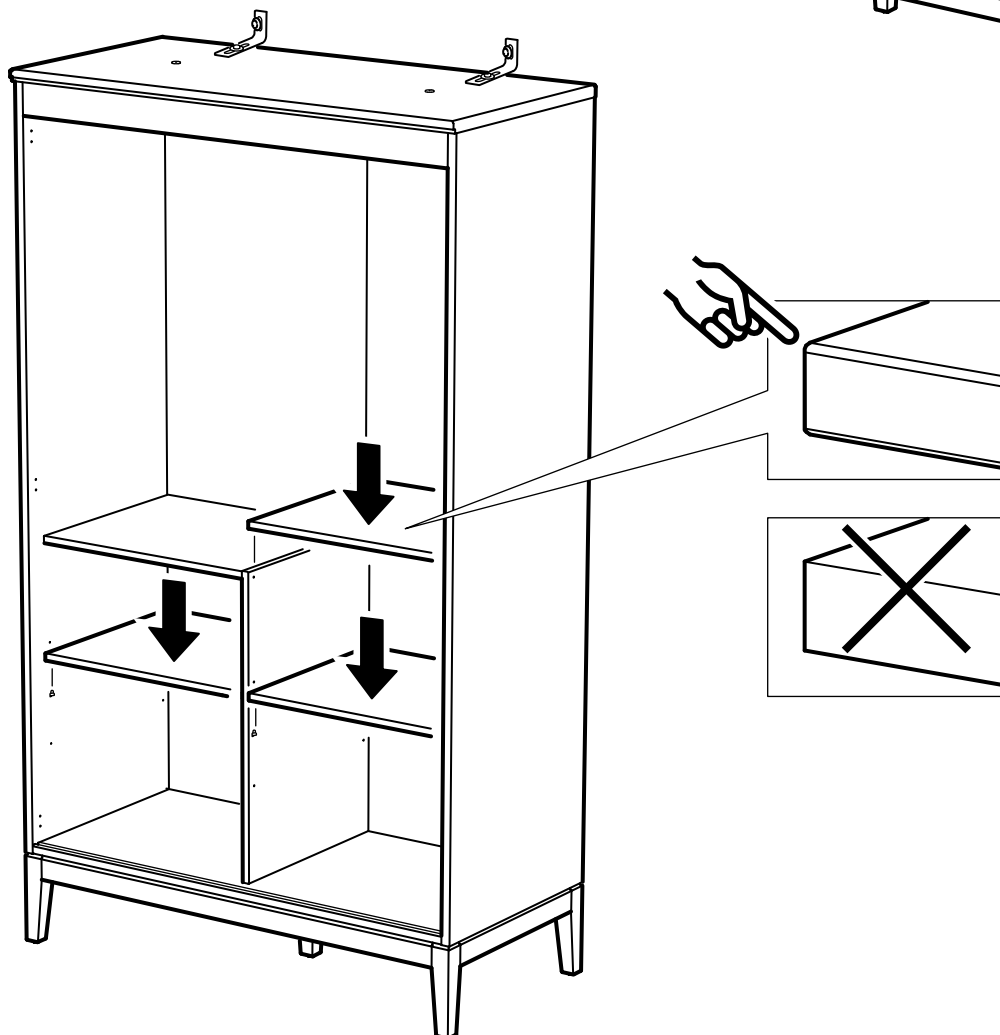 

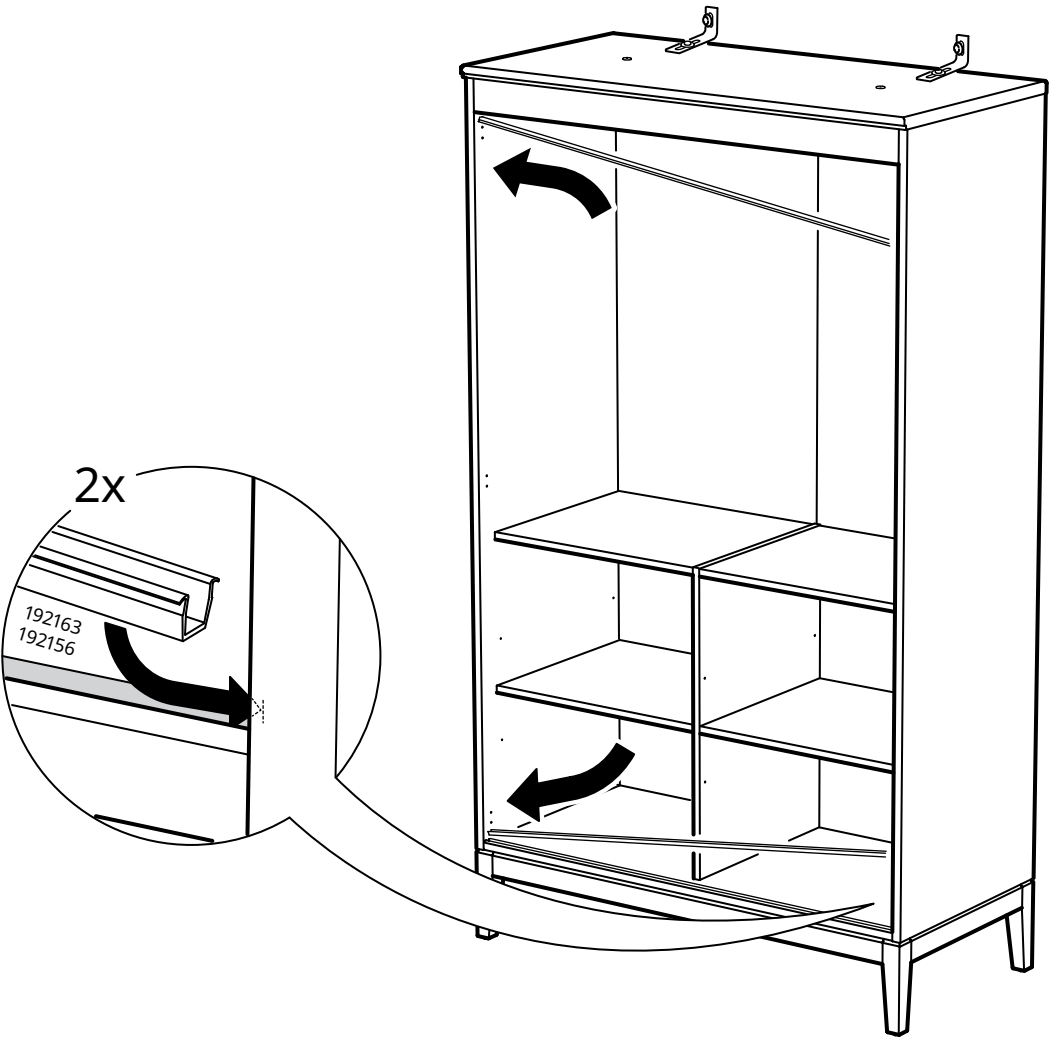 


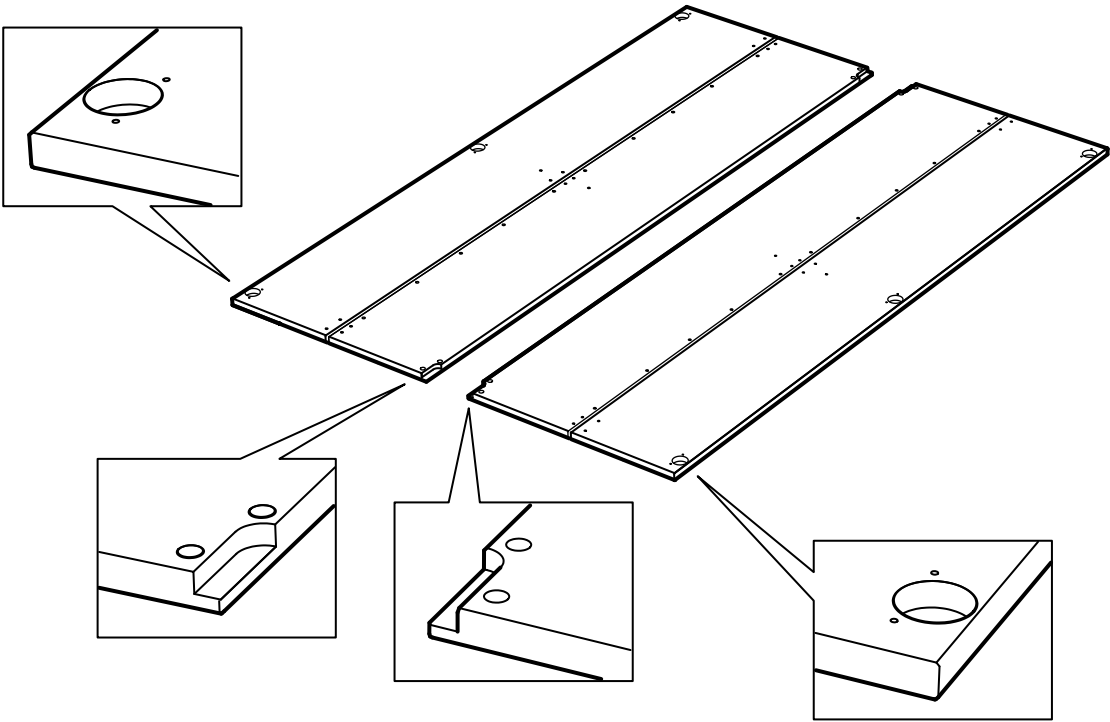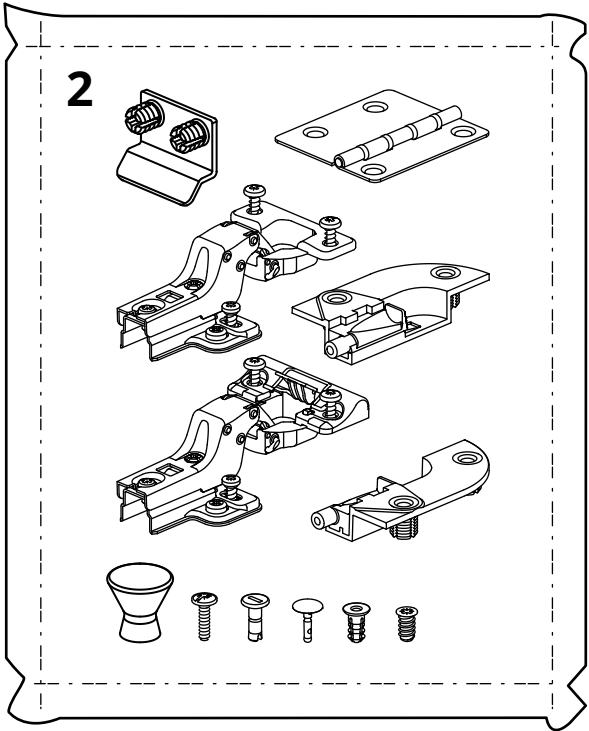  


36

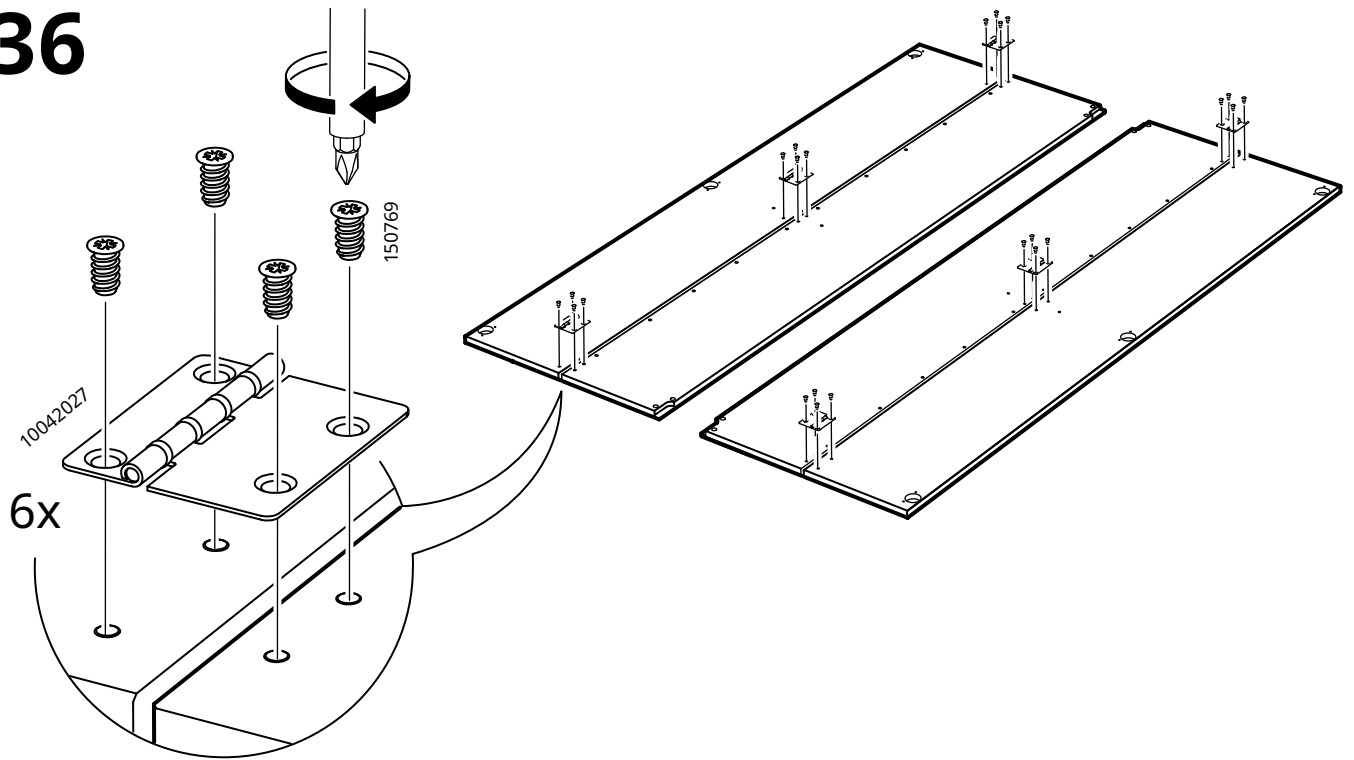 


37

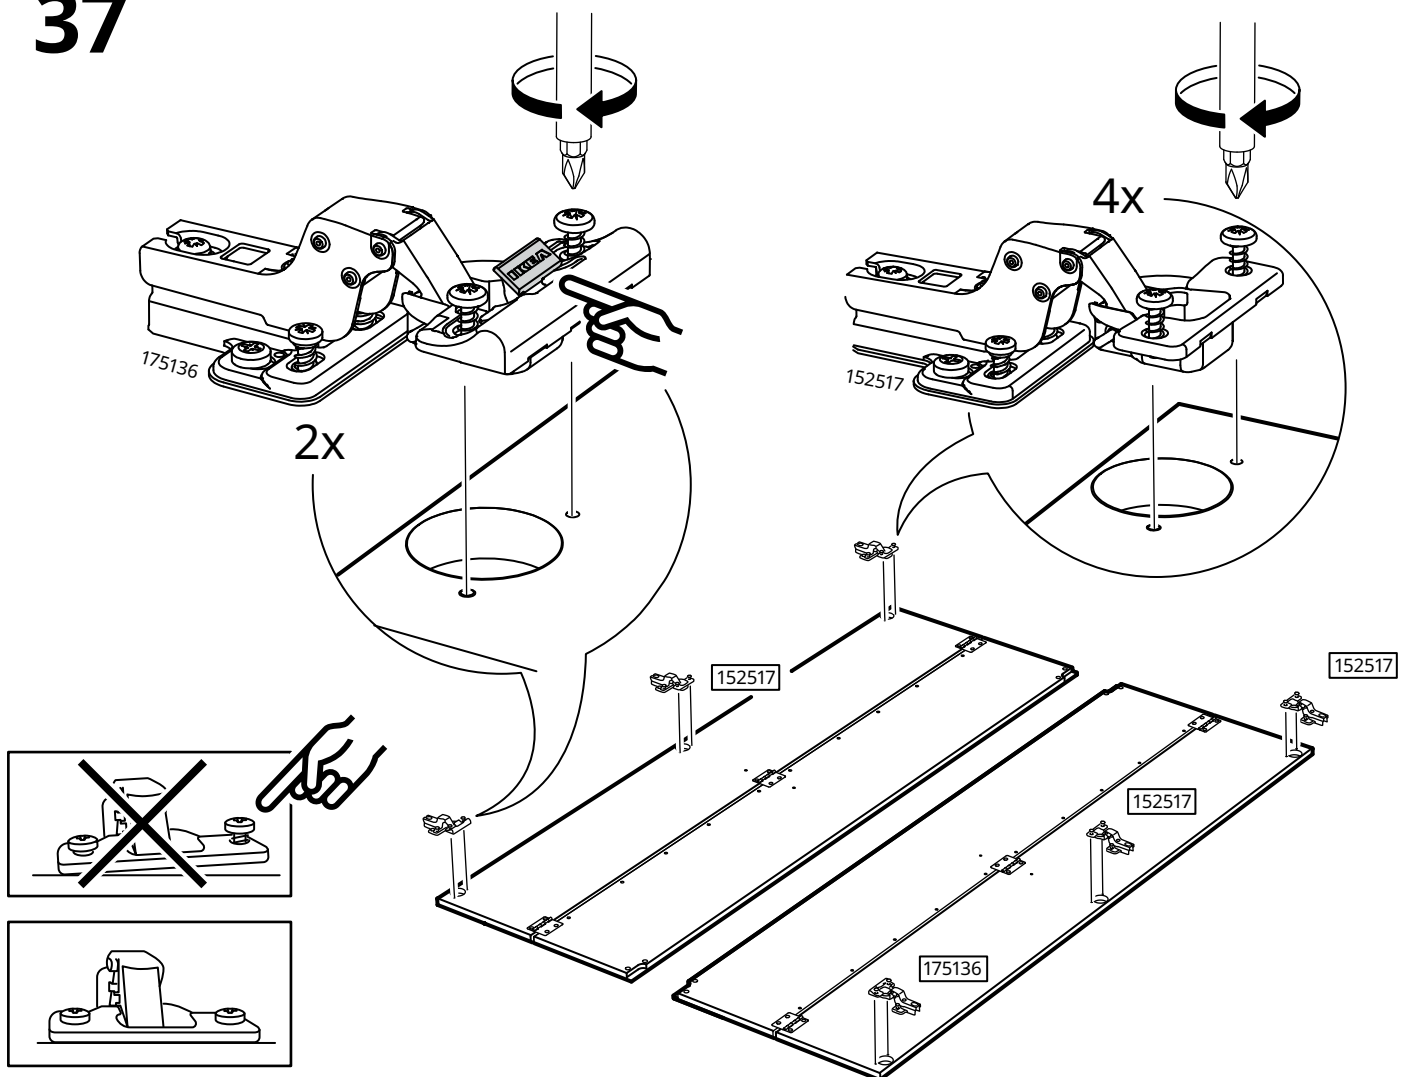 


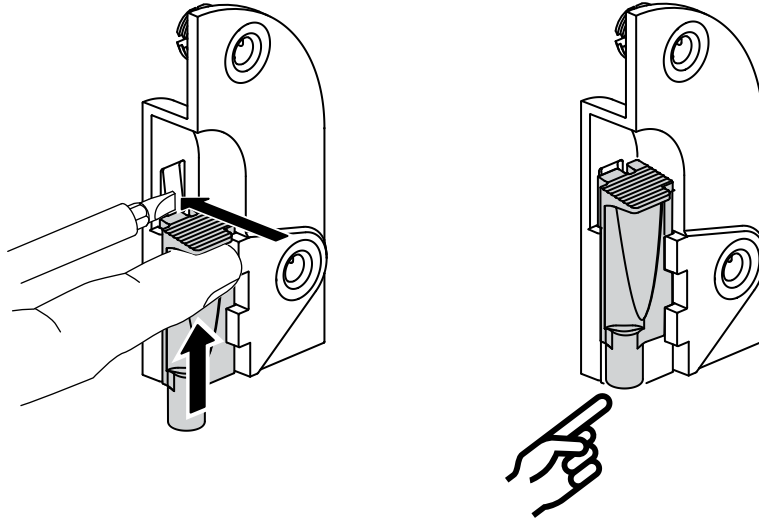 


38

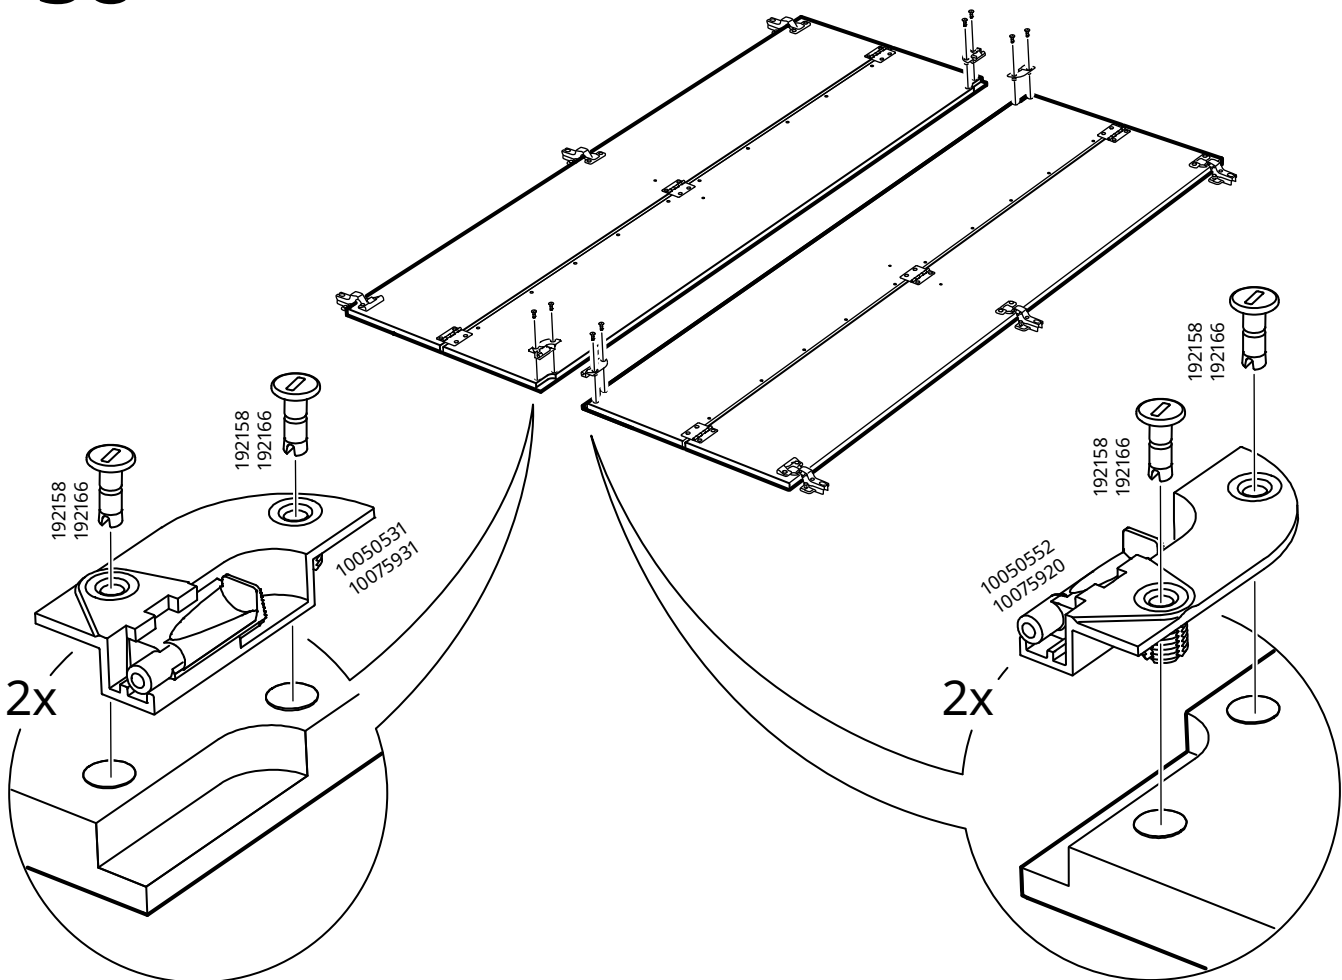 



39

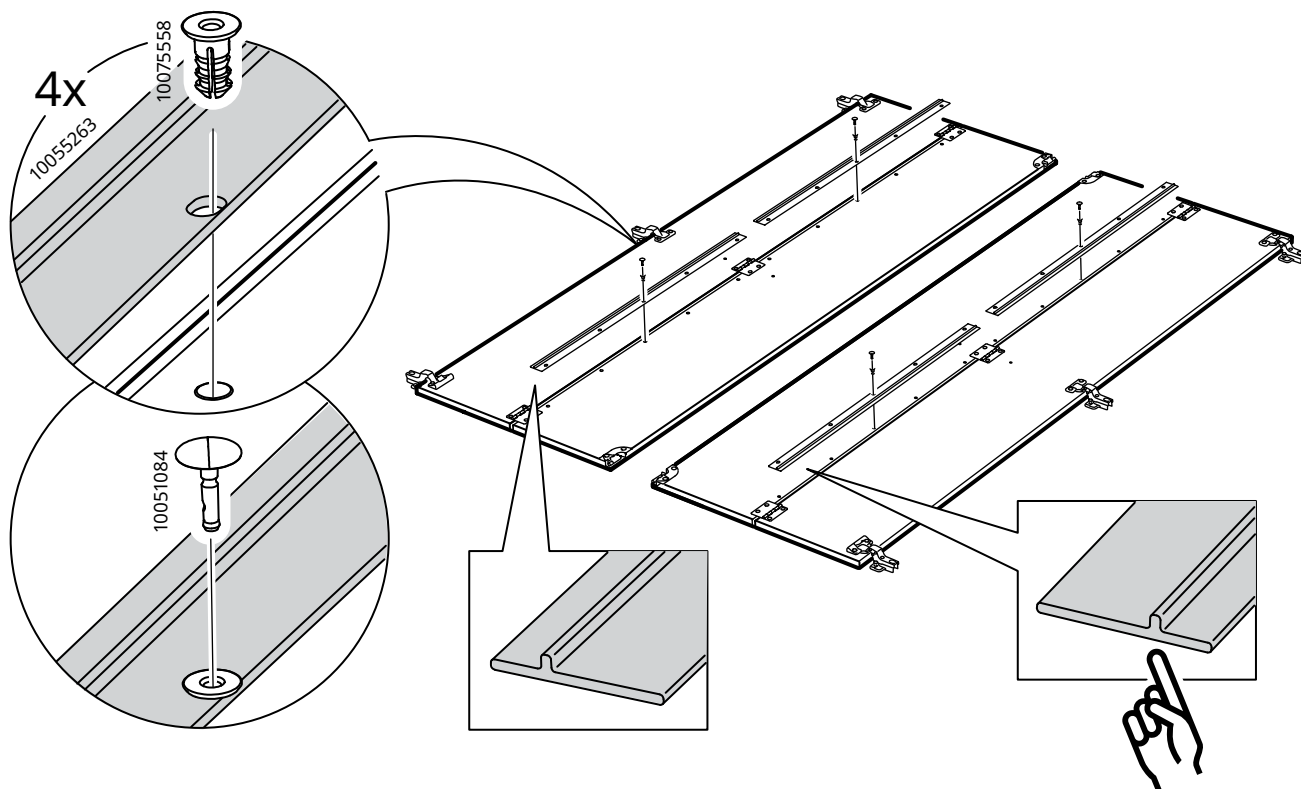 


40

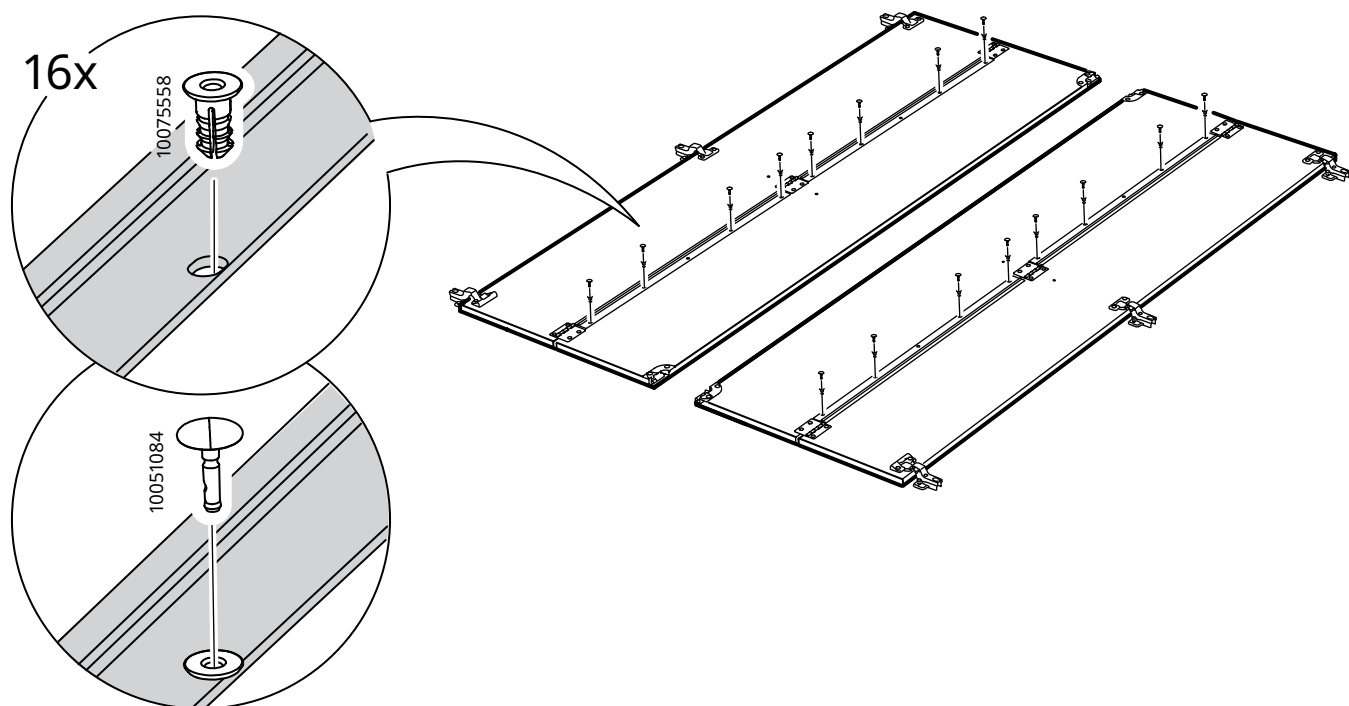 

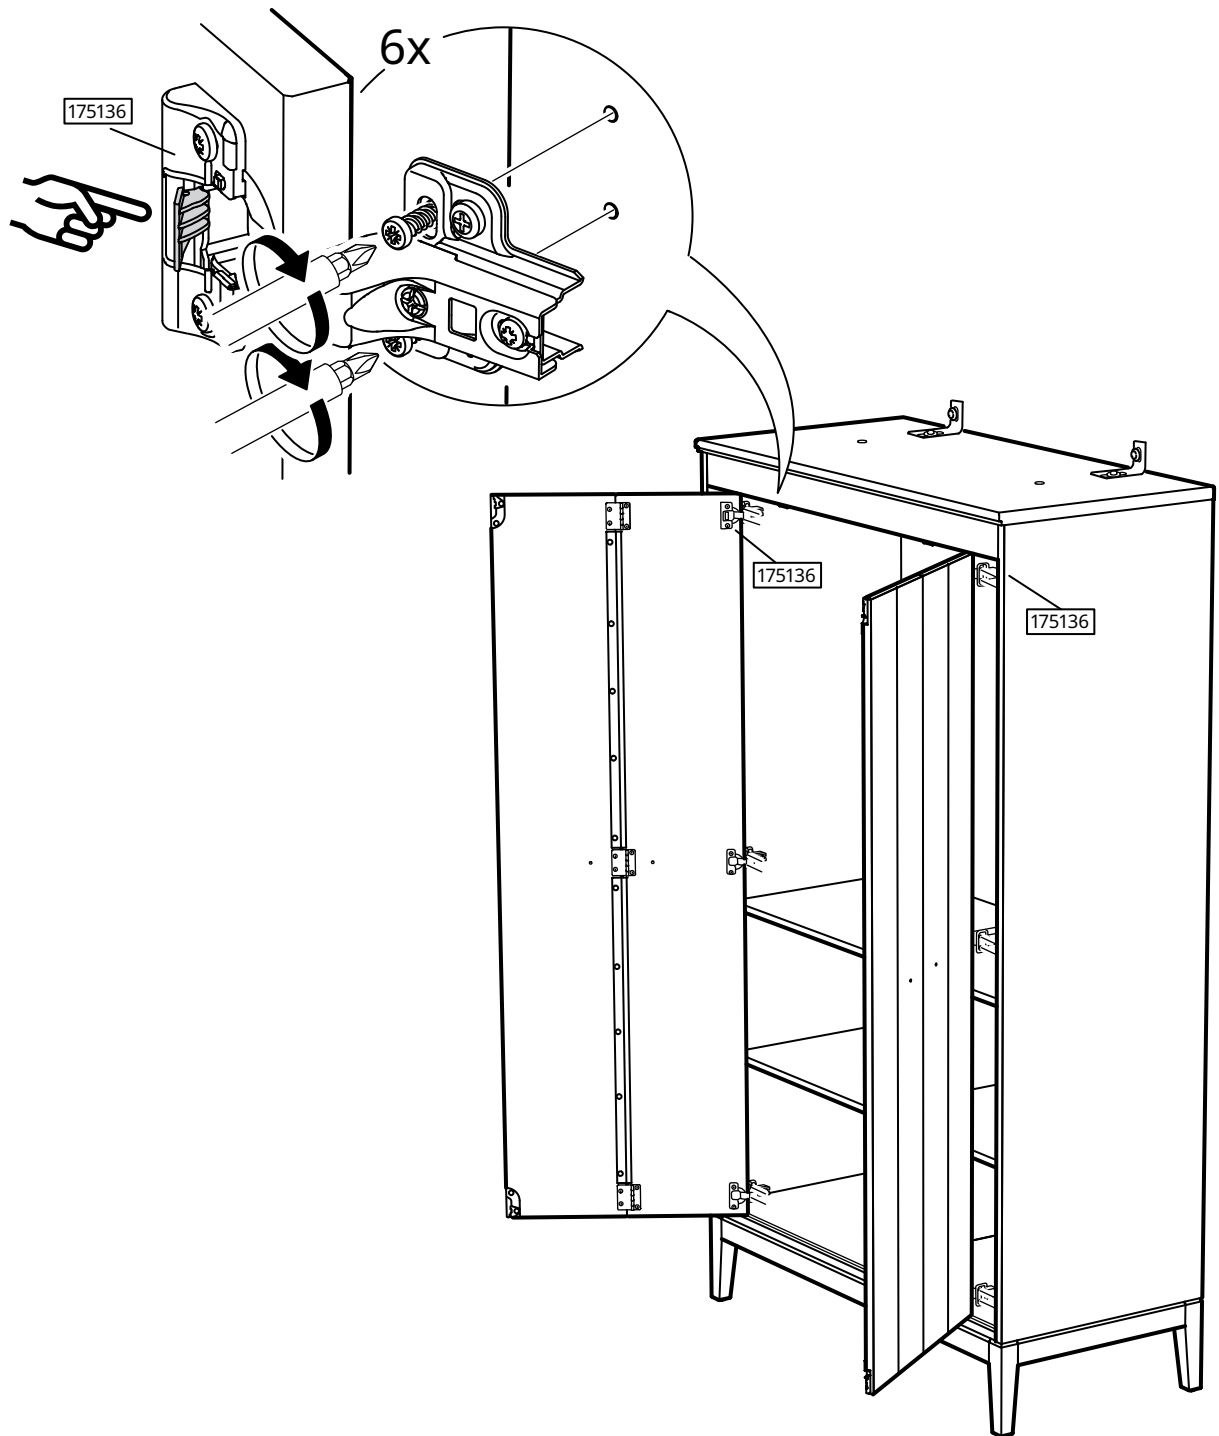 

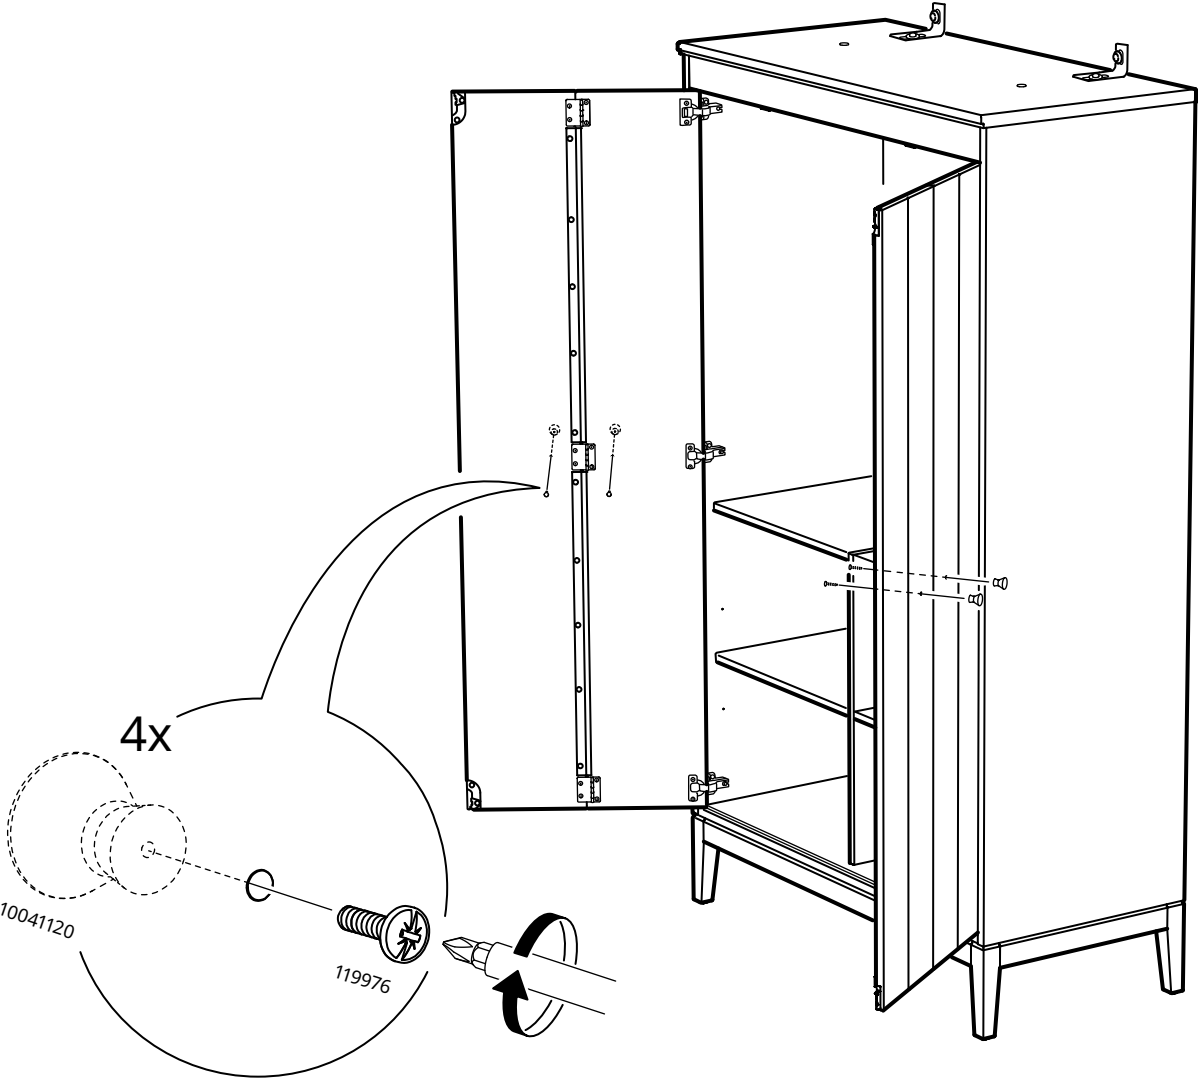 

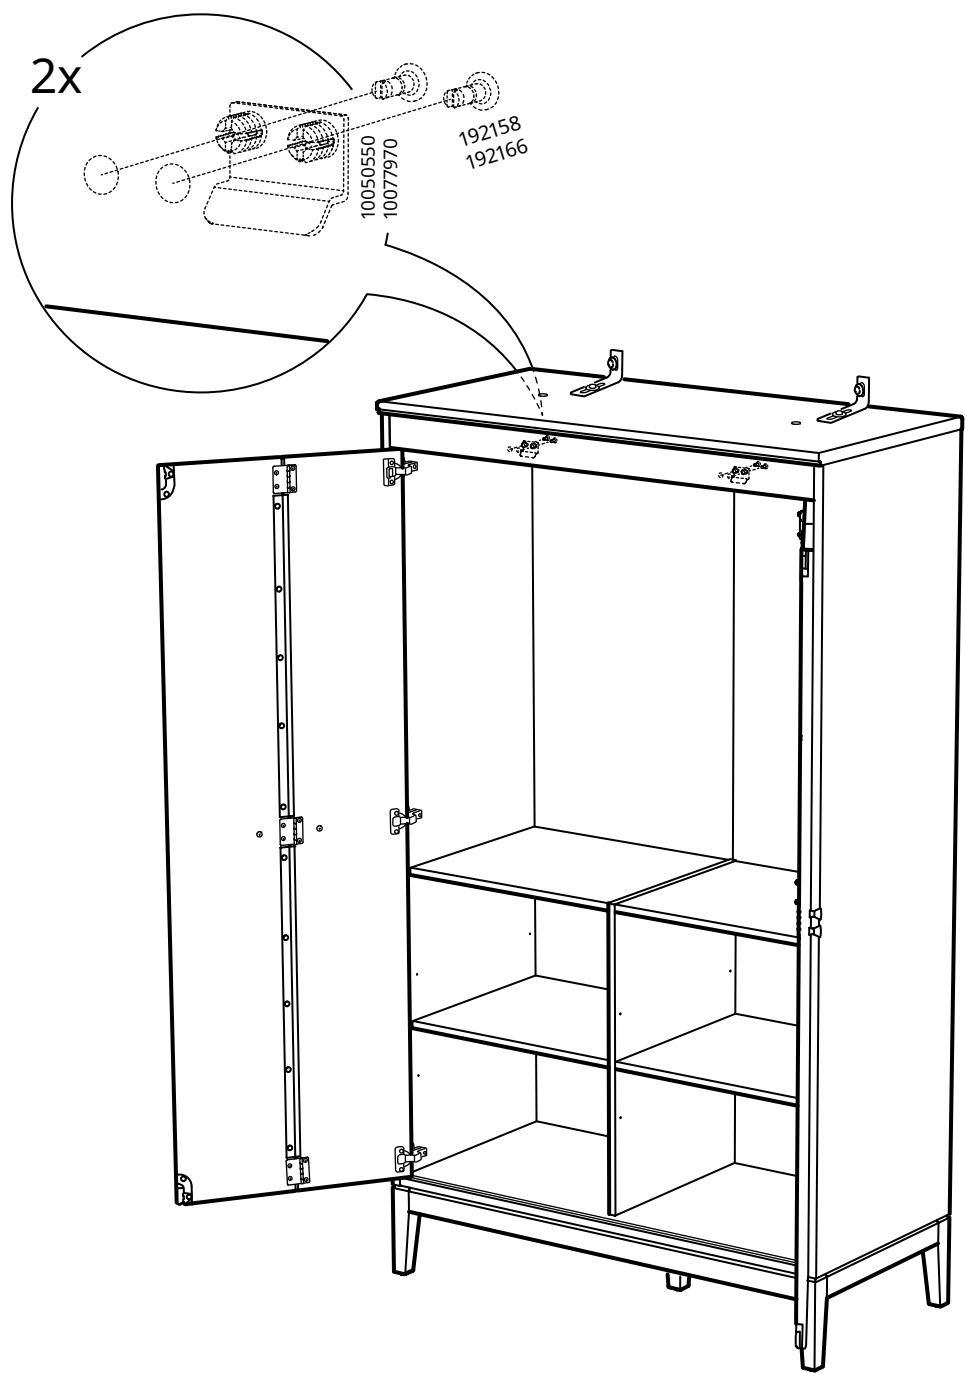 

44

