







1

1

English

WARNING

Children have died from furniture tipover.To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

NEVER open more than one drawer at a time.

Place heaviest items in the lowest drawers.

Enalis

Read and follow each step of the instruction carefully.

AA-2581330-1 © Inter IKEA Systems B.V. 2024 2025-01-09