
## KRÖNIKÖR

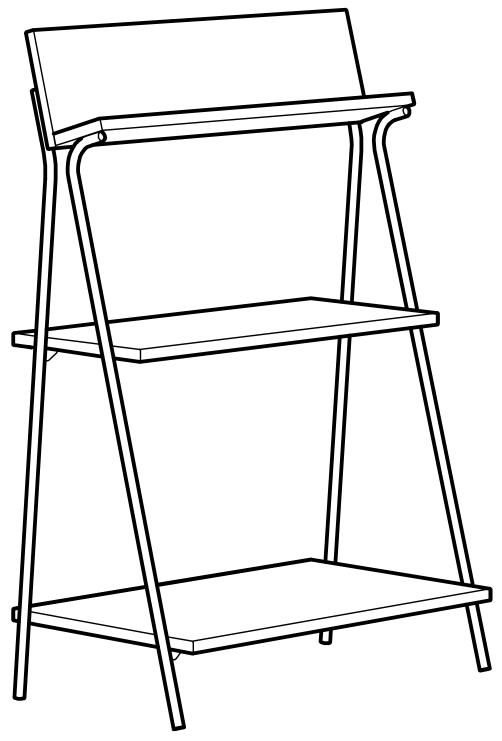









## English

## **WARNING**

Children have died from furniture tipover.To reduce the risk of furniture tipover:

Always anchor your furniture with an anti-tip device.

NEVER put a TV on this product.

NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

NEVER open more than one drawer at a time.

Place heaviest items in the lowest drawers.

## English

Read and follow each step of the instruction carefully.

