
# LACK

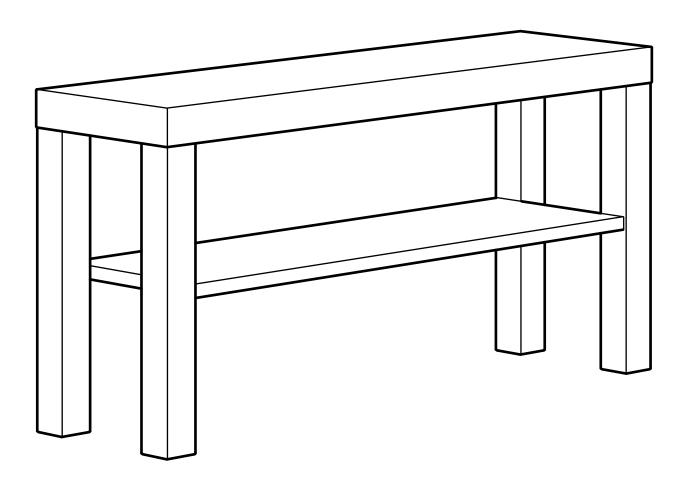







#### English

#### **WARNING**

Children have died from furniture tipover.To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

ALWAYS secure your television with an anchor device.

#### **English**

Read and follow each step of the instruction carefully.

AA-2581729-1

