

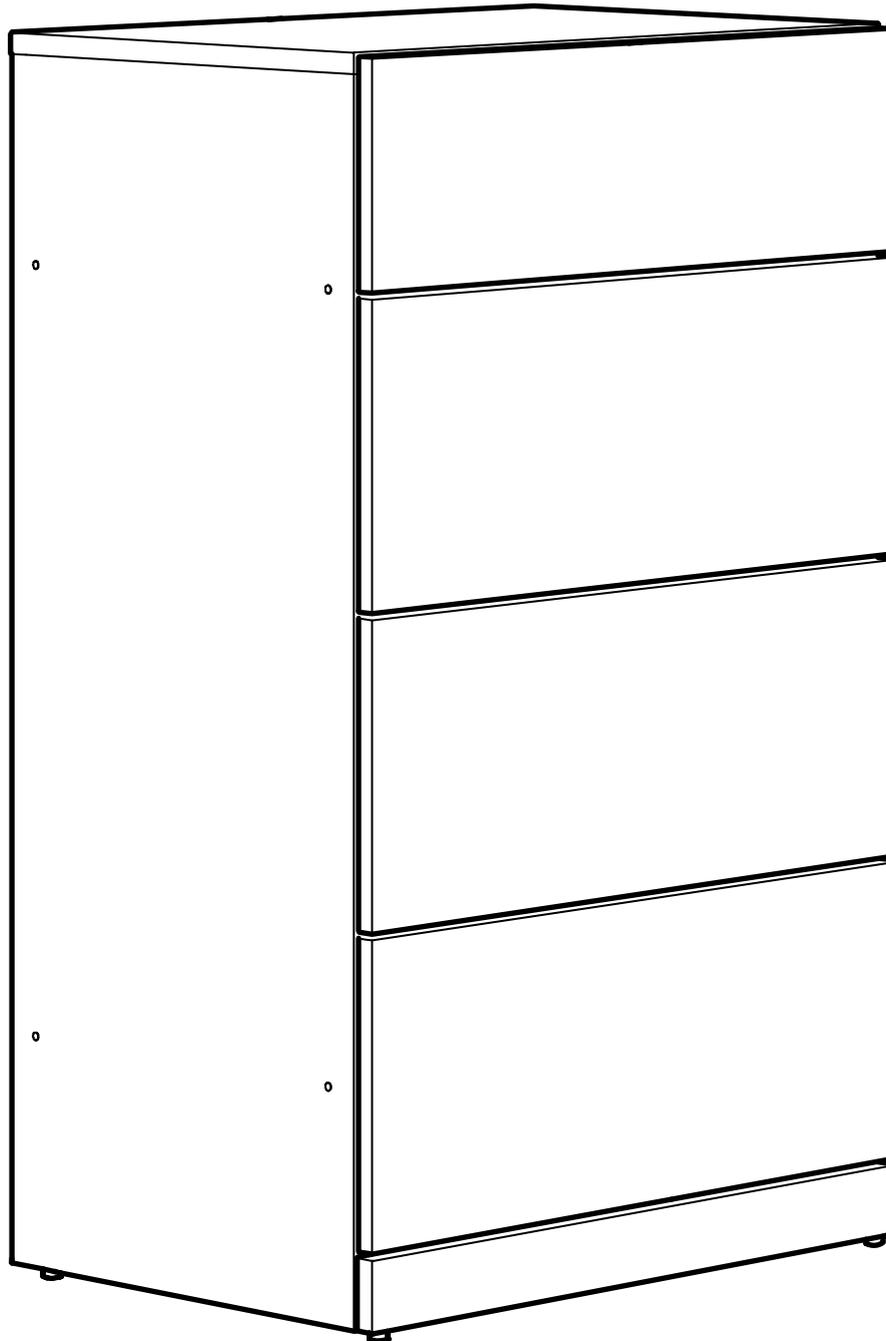
 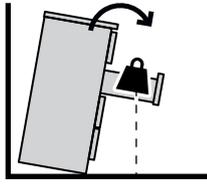


LASTARE

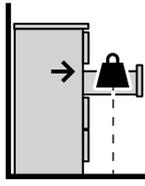

Design and Quality
IKEA of Sweden



English

WARNING!

Children have died from furniture tipover.

To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.





NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

NEVER open more than one drawer at a time.

DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.





Place heaviest items in the lowest drawers.


Read and follow each step of the instruction carefully.

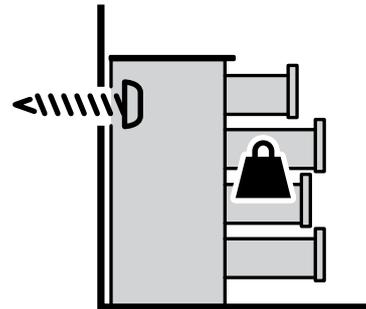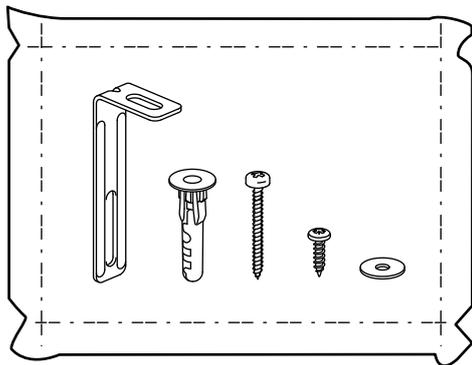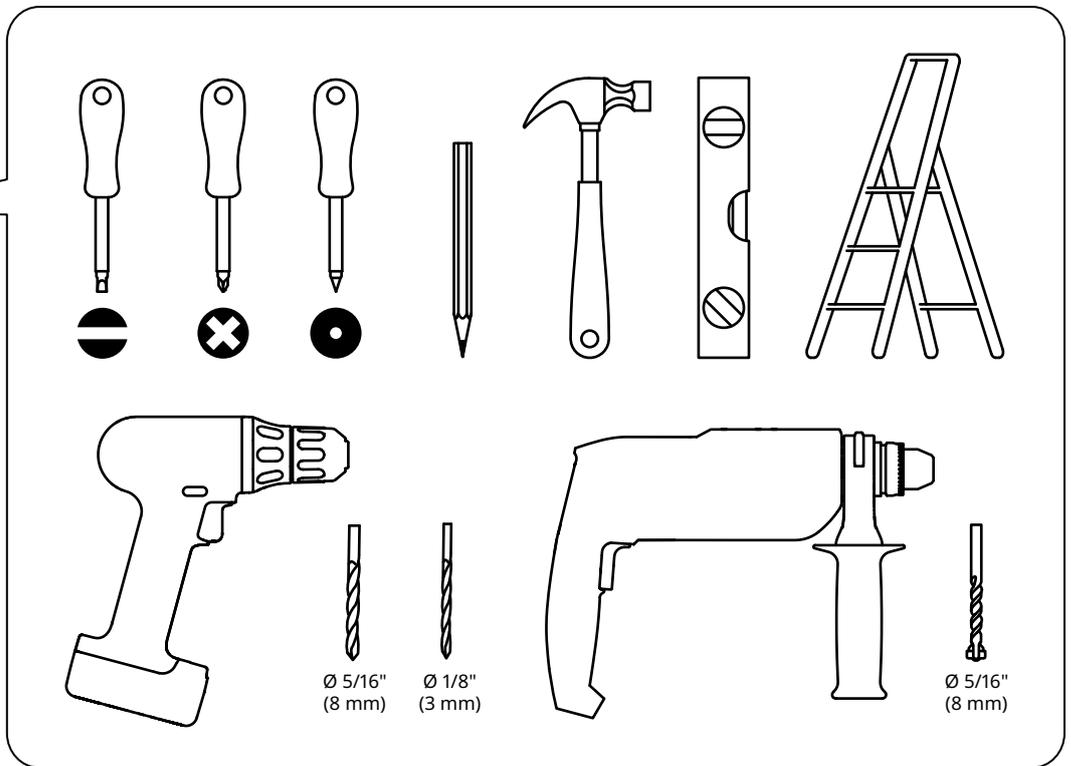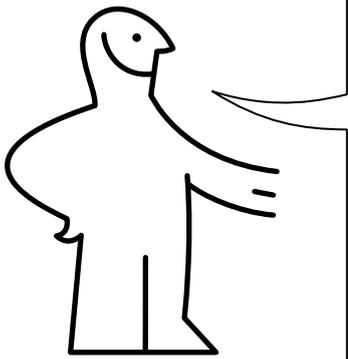

www.IKEA.com/secure-it


	A	B	C
	Ø 5/16" (8 mm)	Ø 5/16" (8 mm)	Ø 1/8" (3 mm)

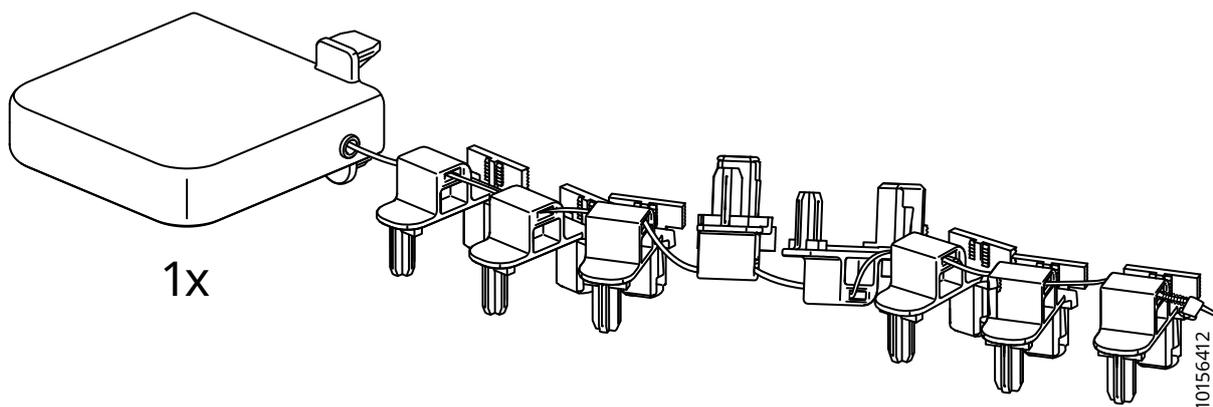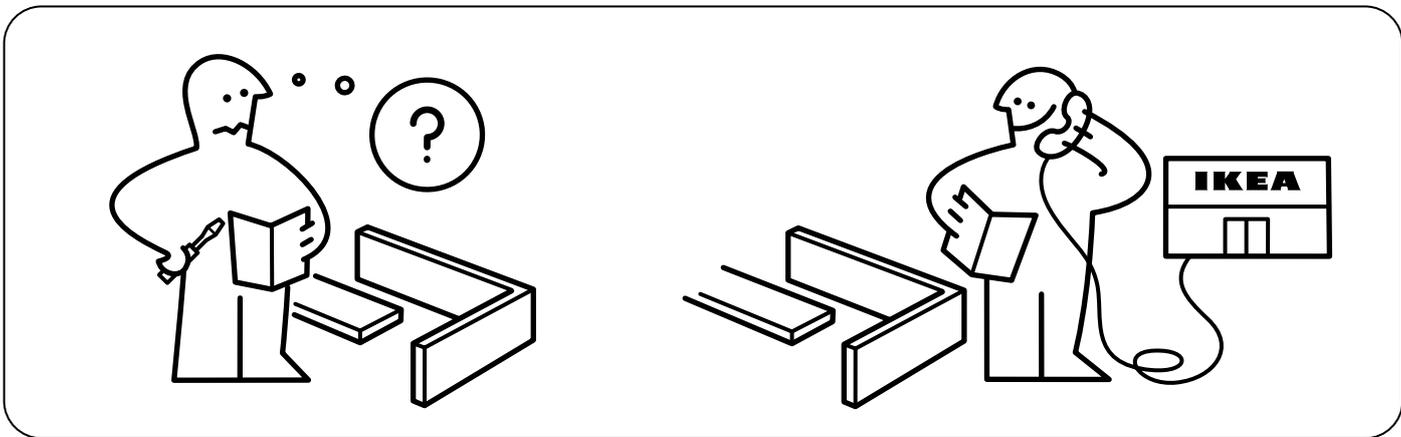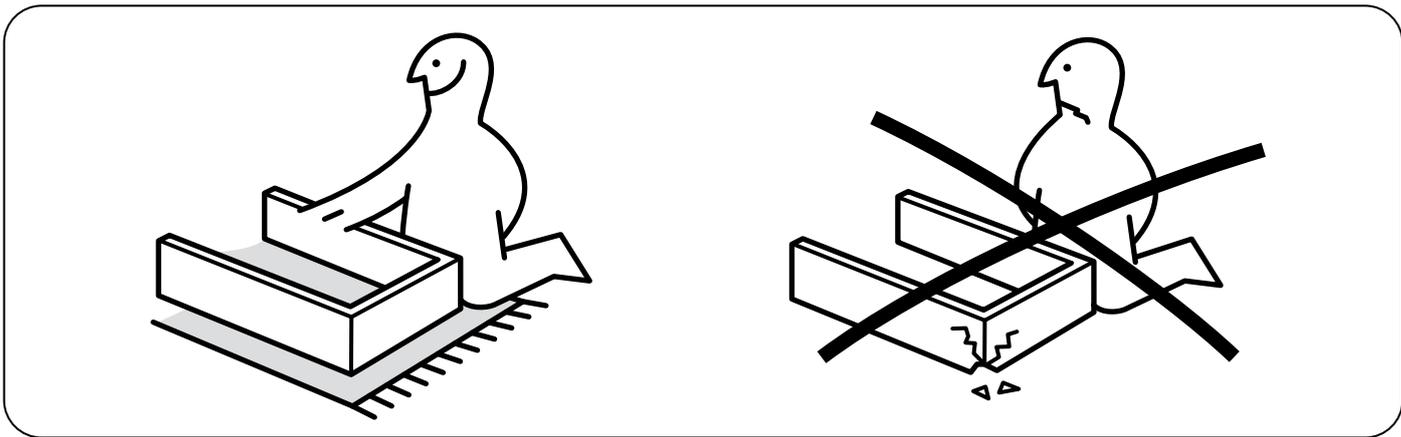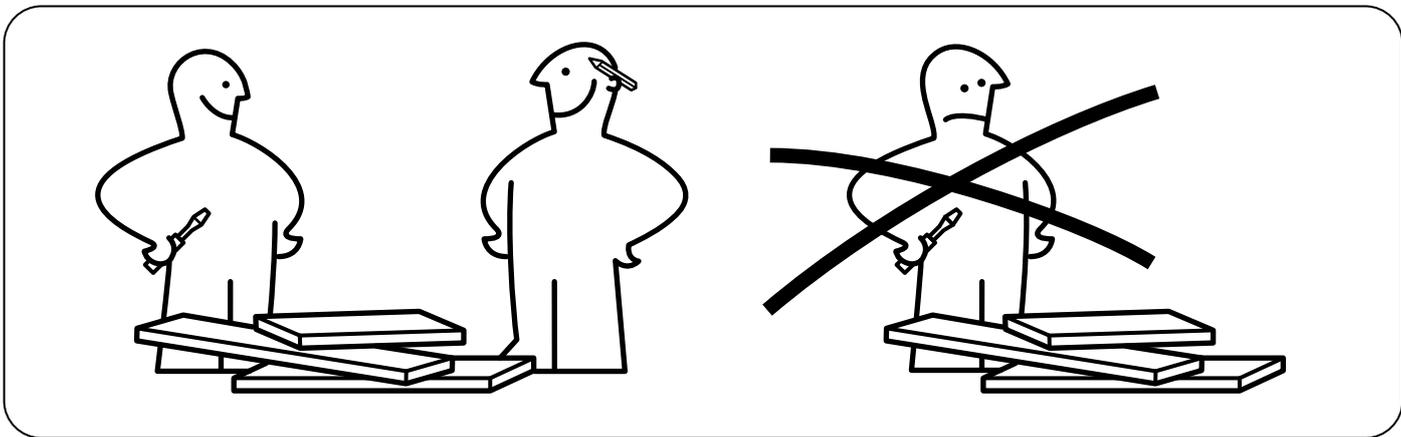

 


145718

 16x




118331

 4x



130449

 16x




10124042

2x



109538

 2x




155669

12x



100359

 3x



10048881

26x



146114

24x




101345

4x



10093082

15x

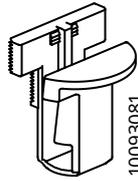


10093081

7x



101449

4x

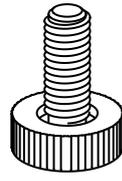

195312

4x



119252

4x




119030

32x




115339

8x

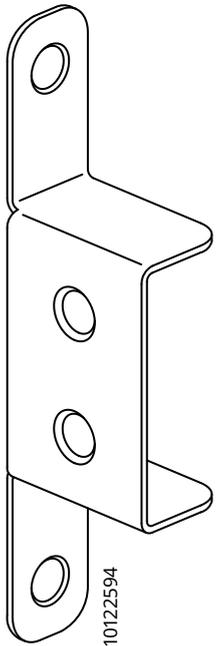


10122594

1x

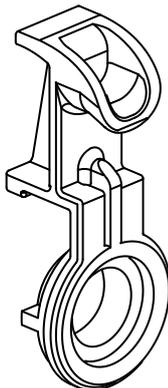


10133139

4x

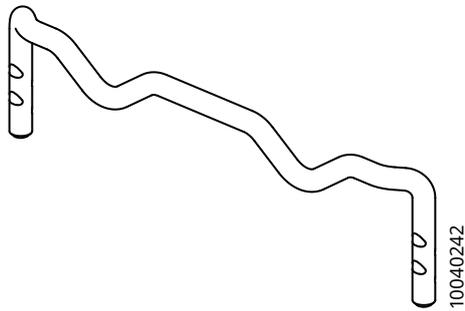


10040242

4x

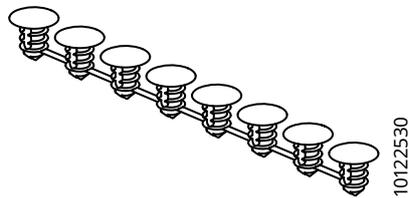

10122530

1x

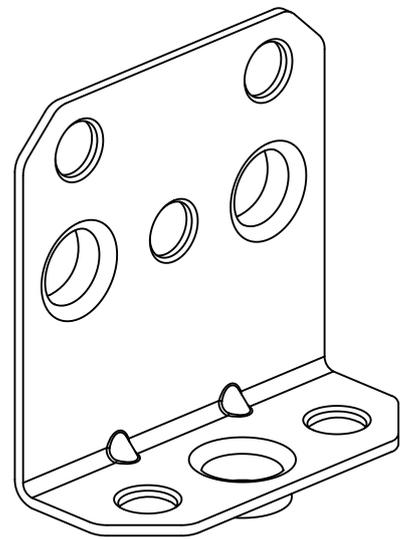



10038685


2x



10127151


2x

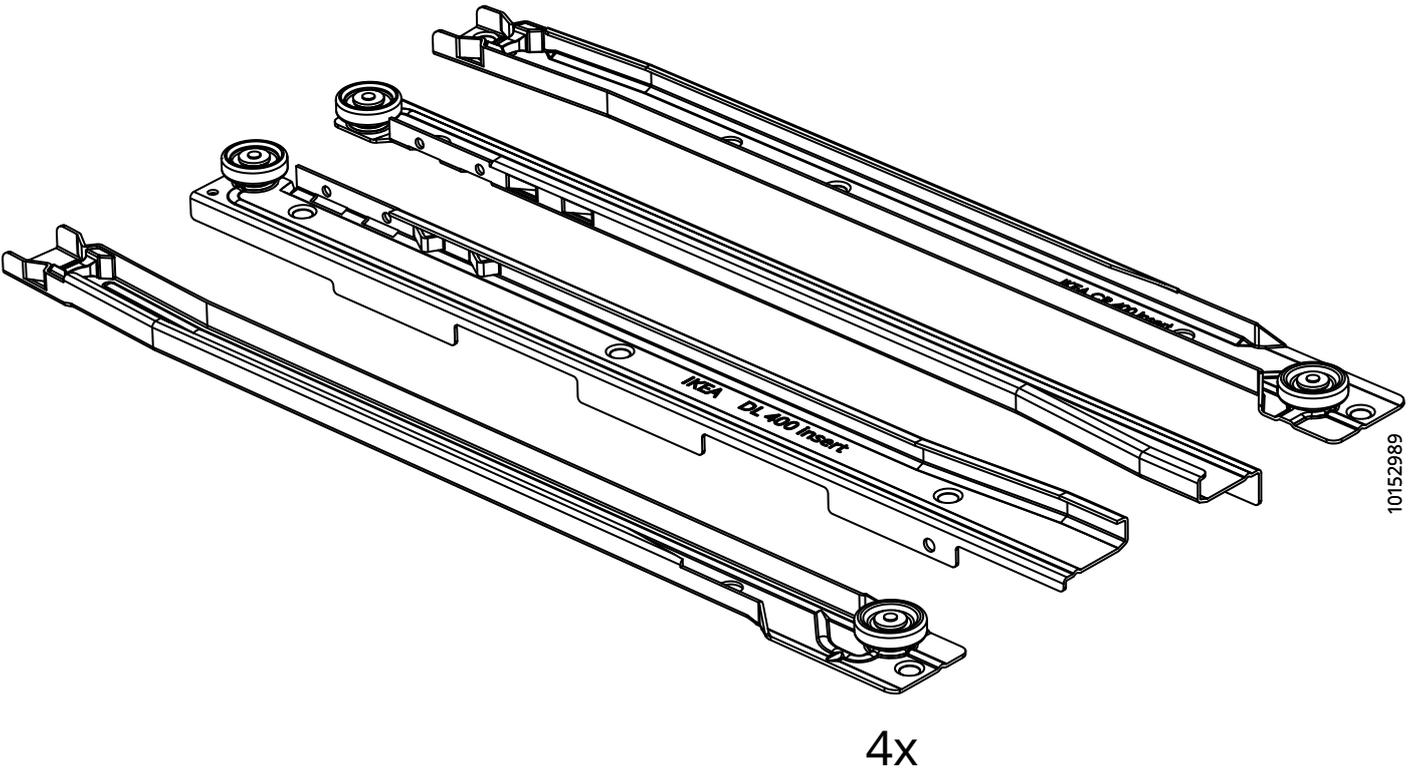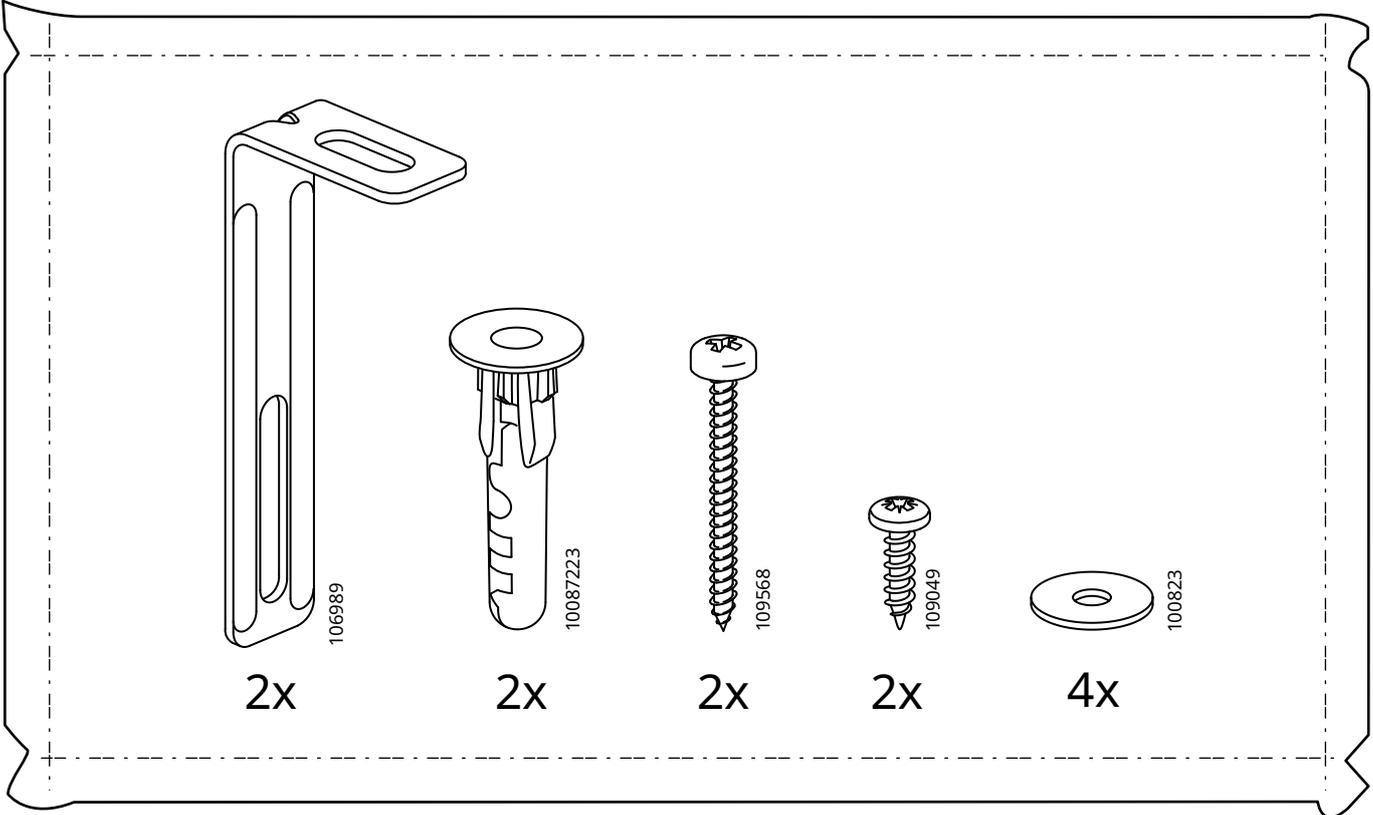

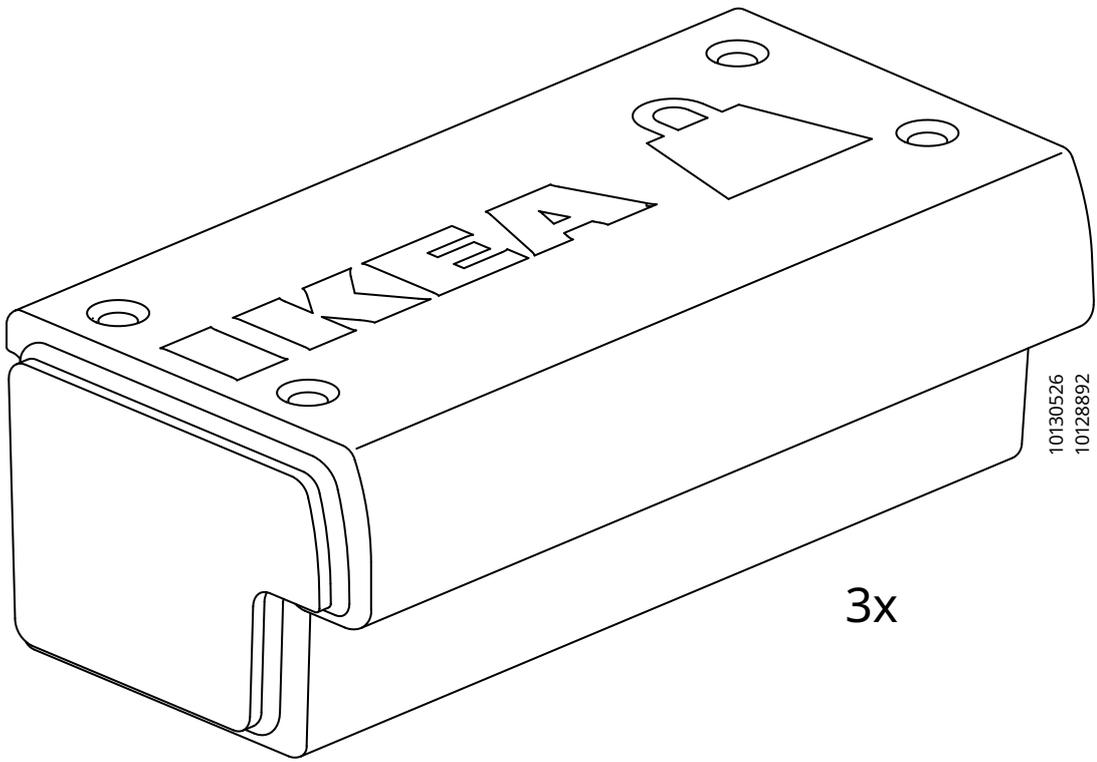


10130526
10128892

3x

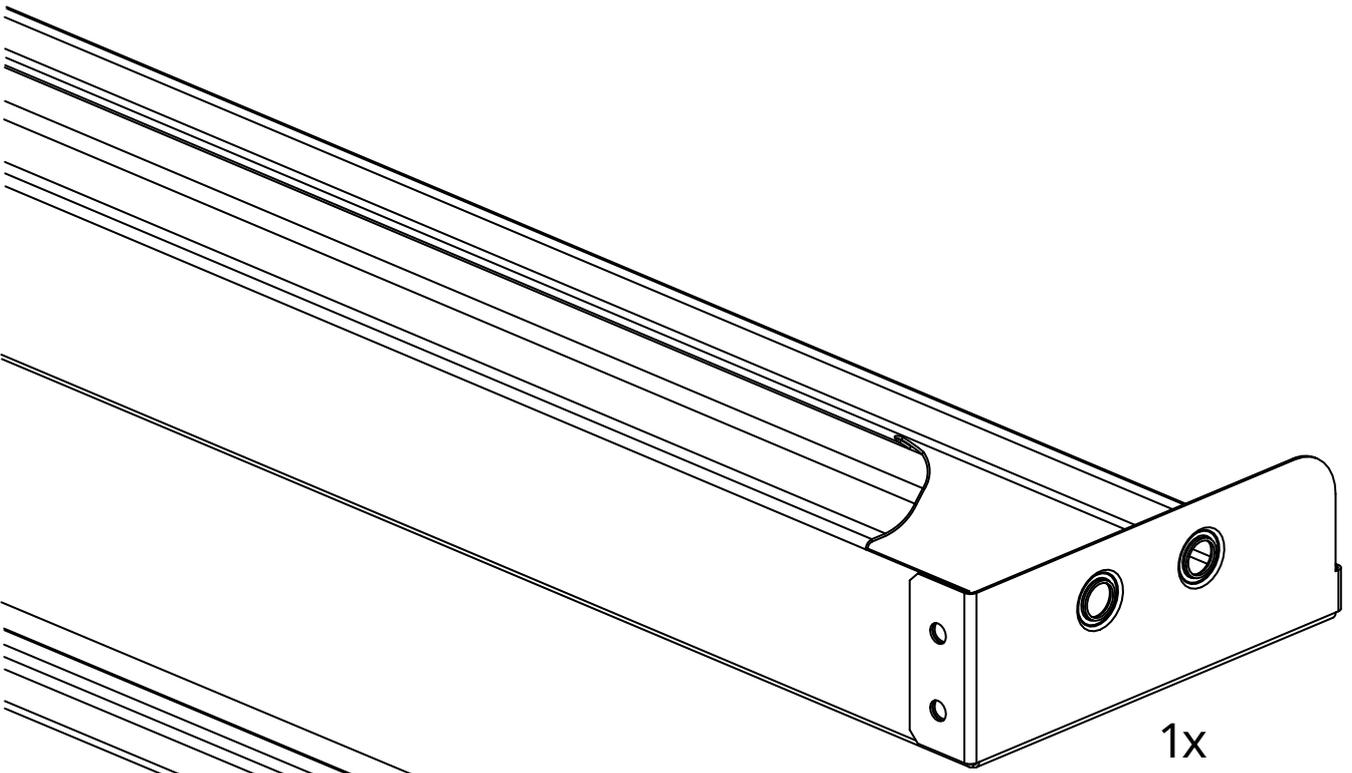




10127696
10119463

1x

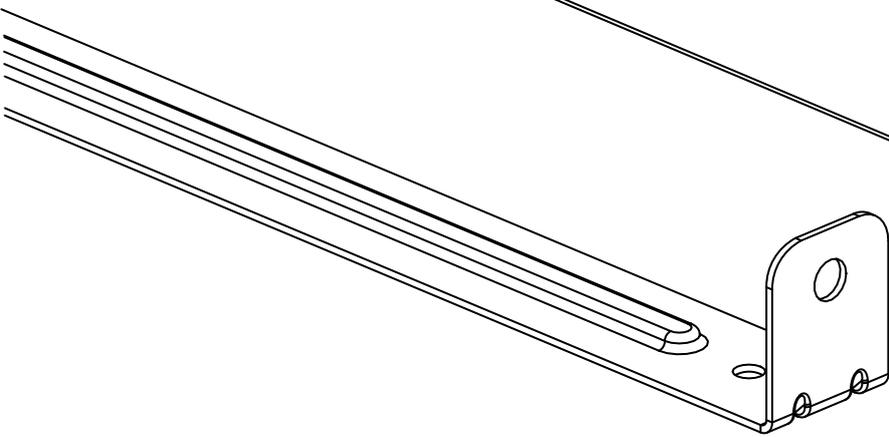


10123365
10123376


1x

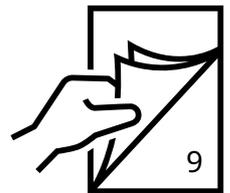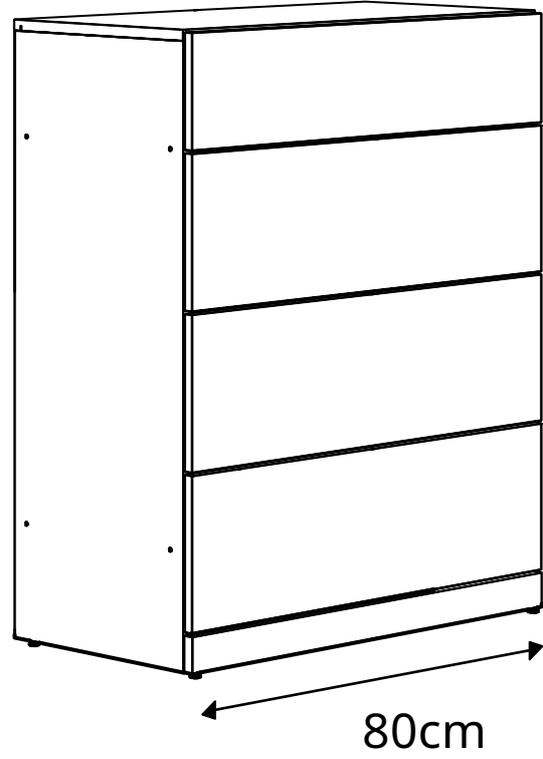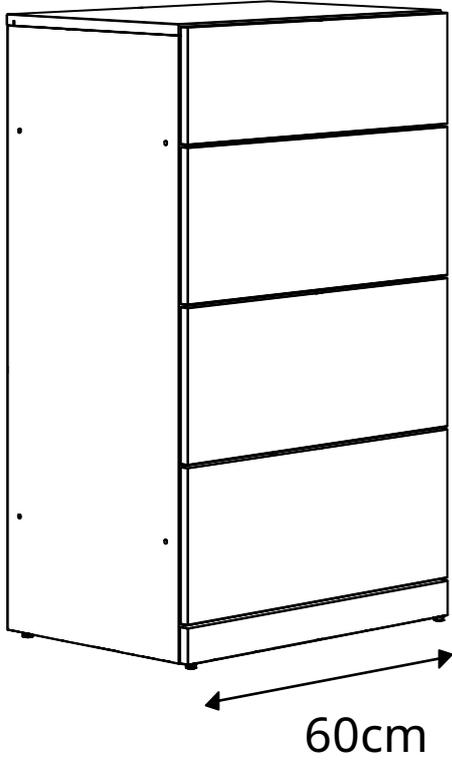


1

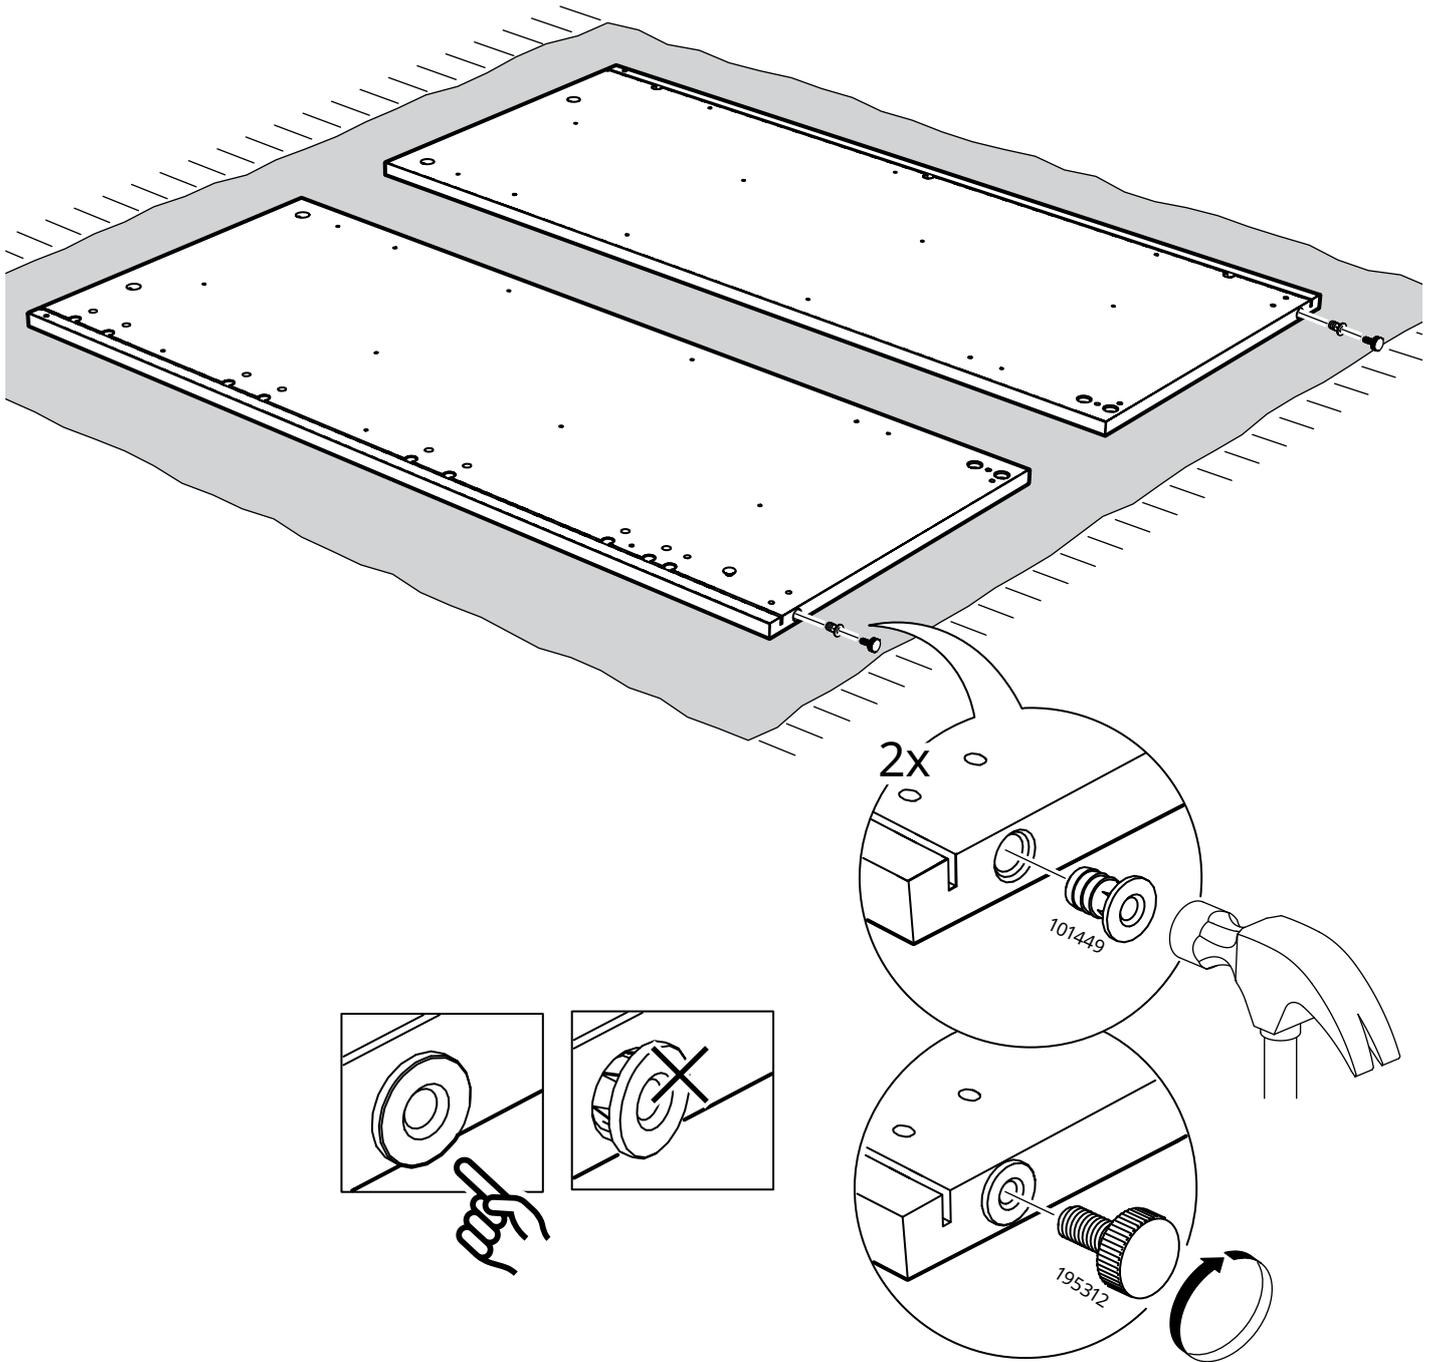


2

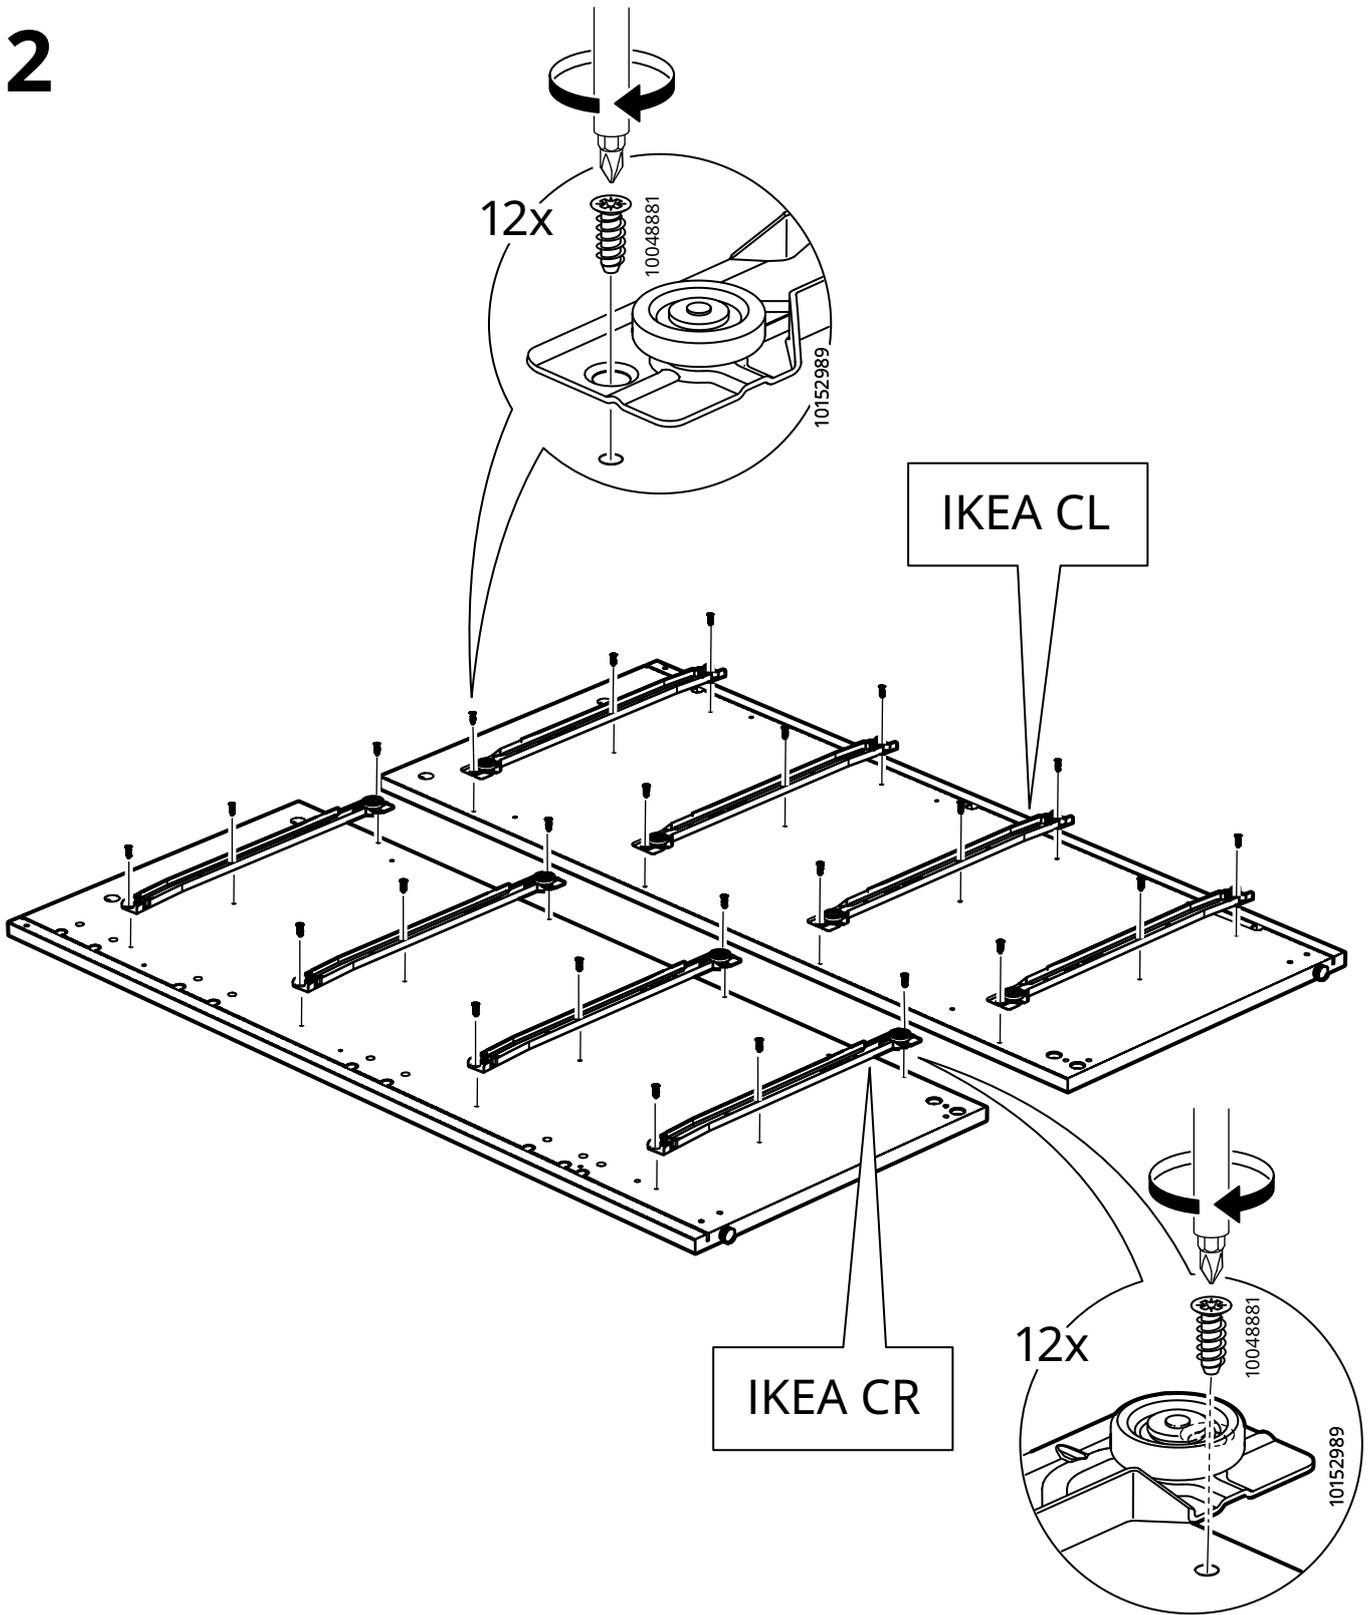


3

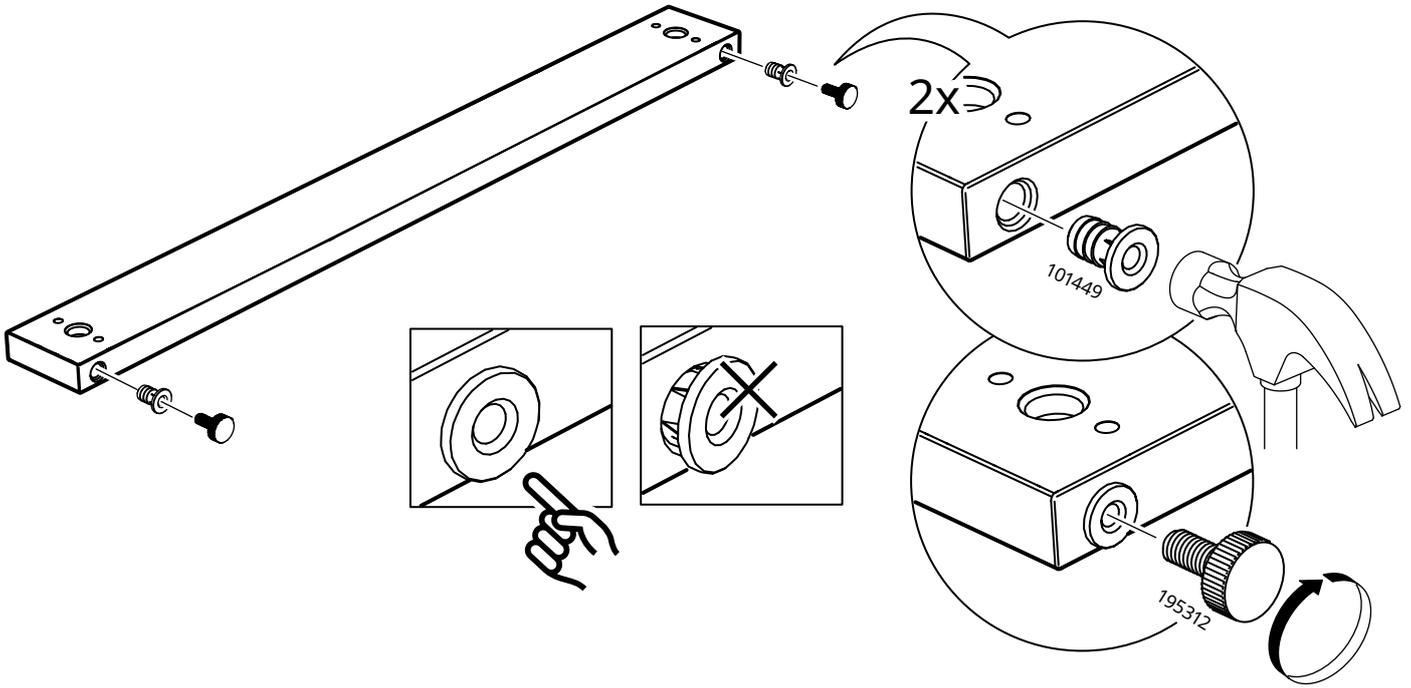


4

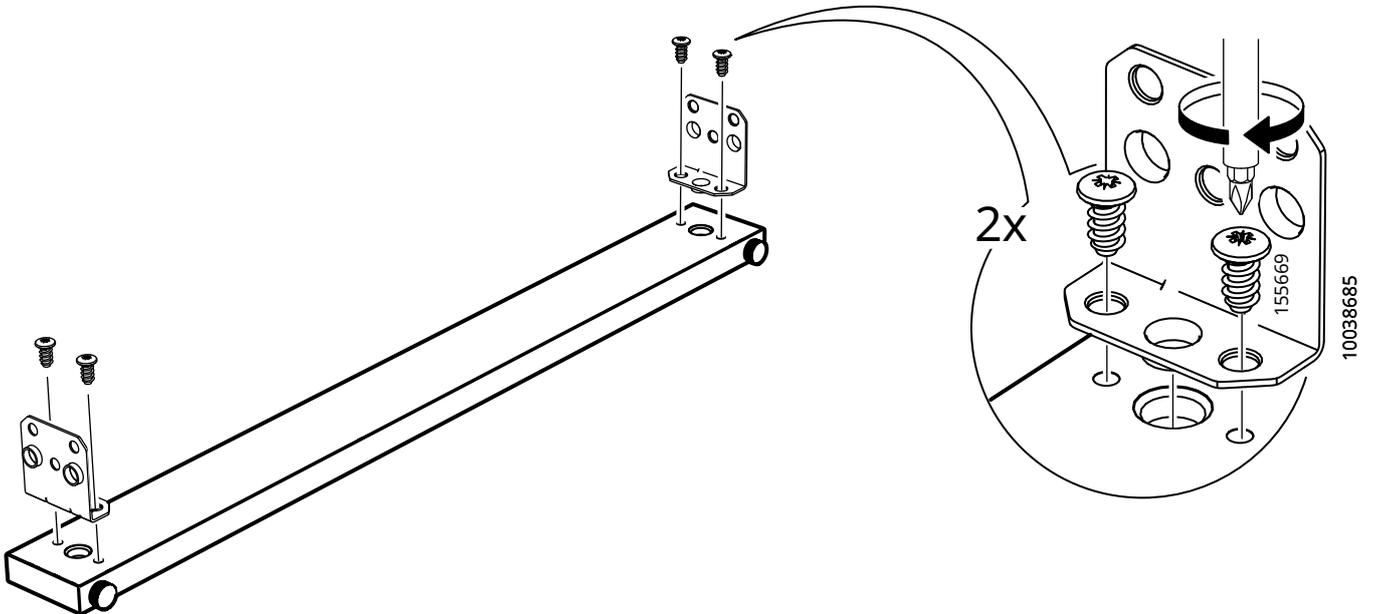




5

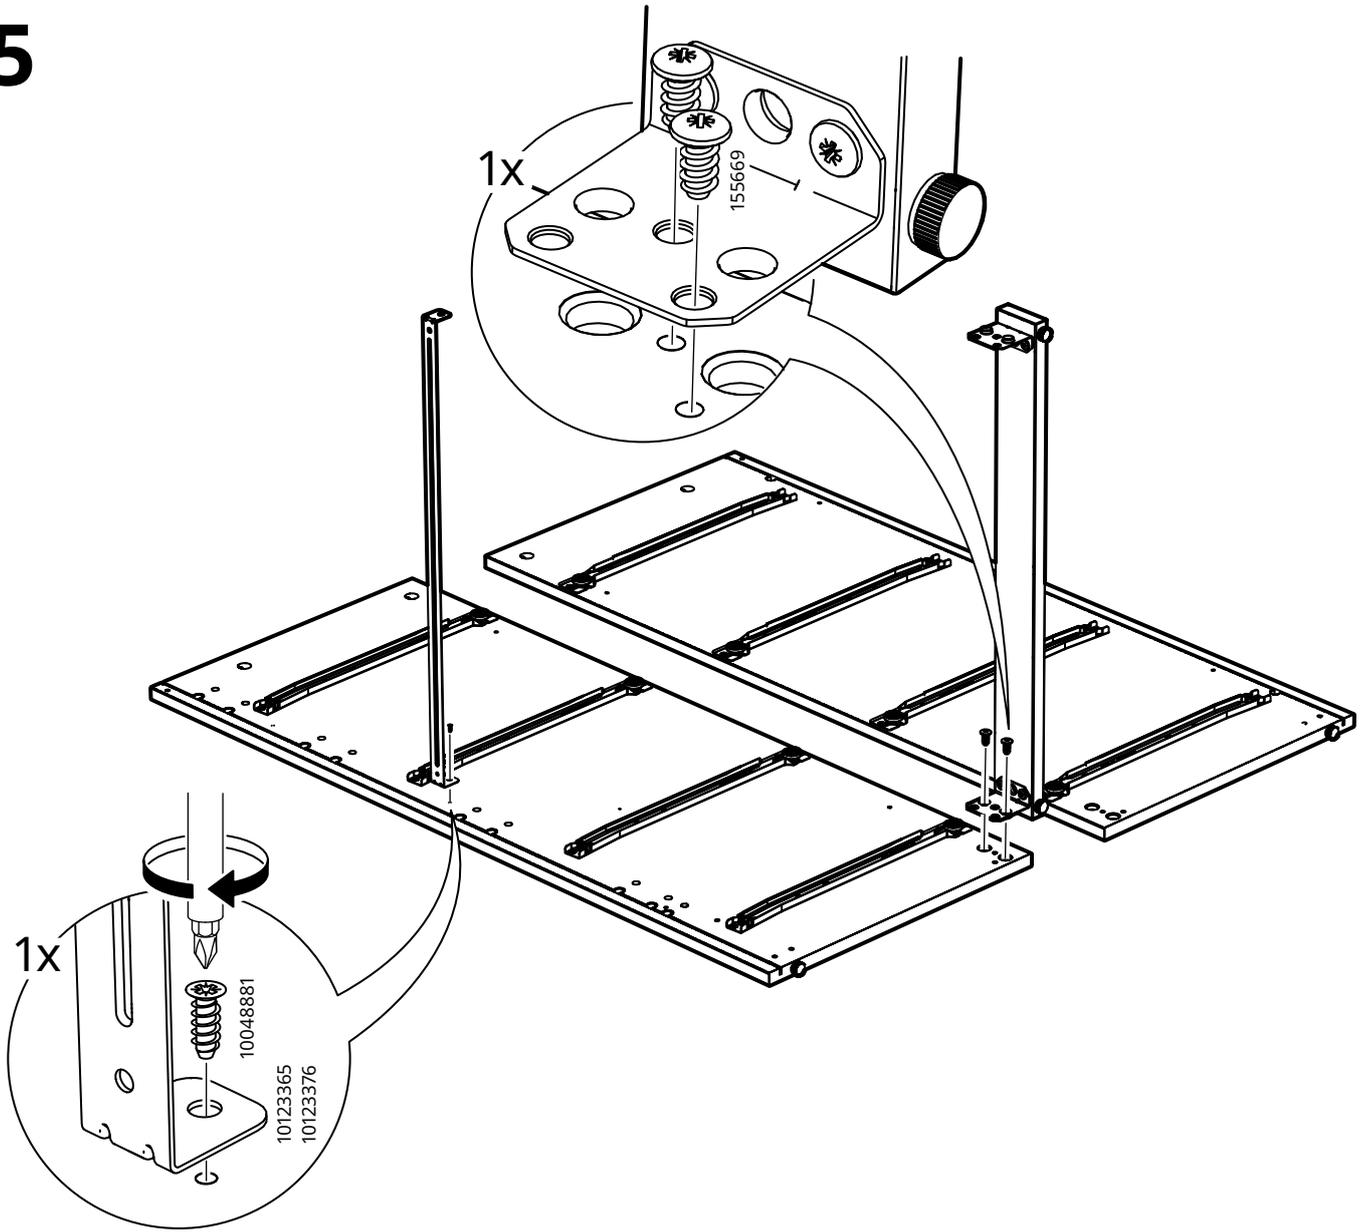



6

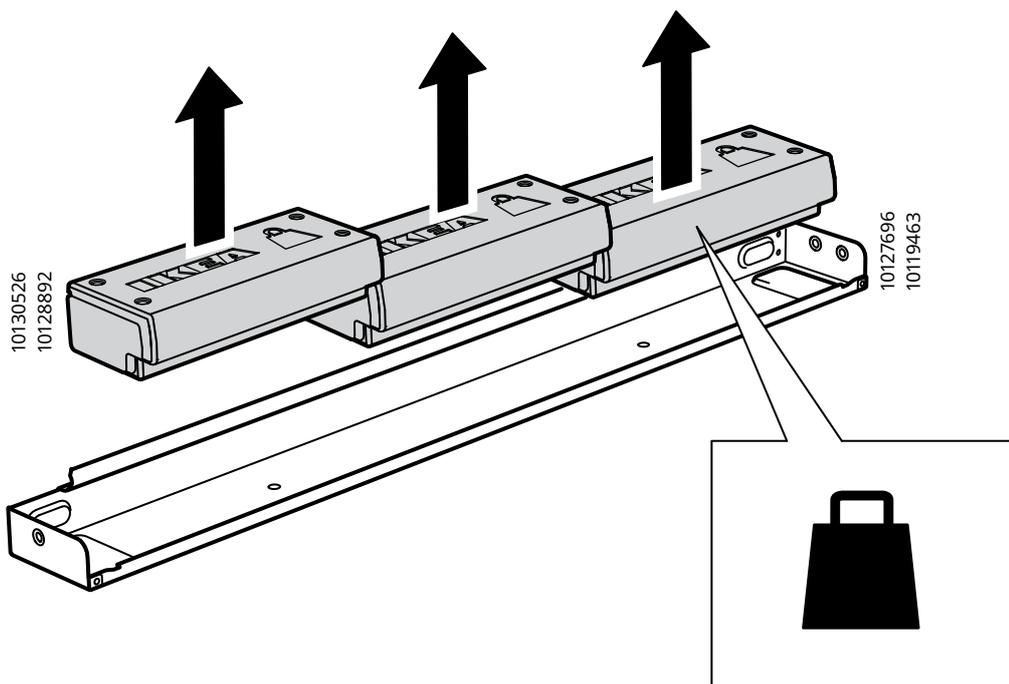


7

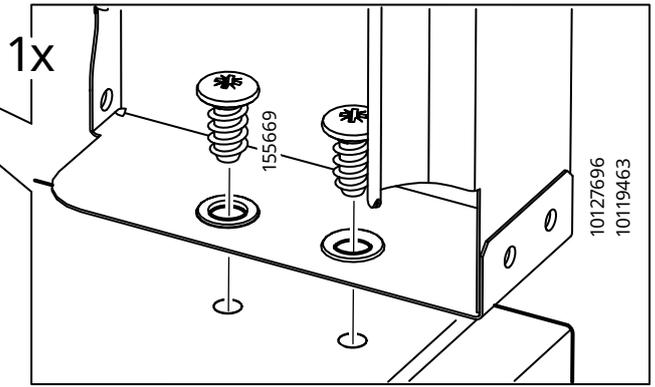
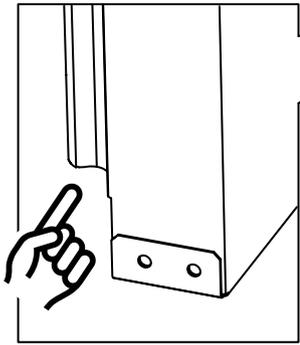
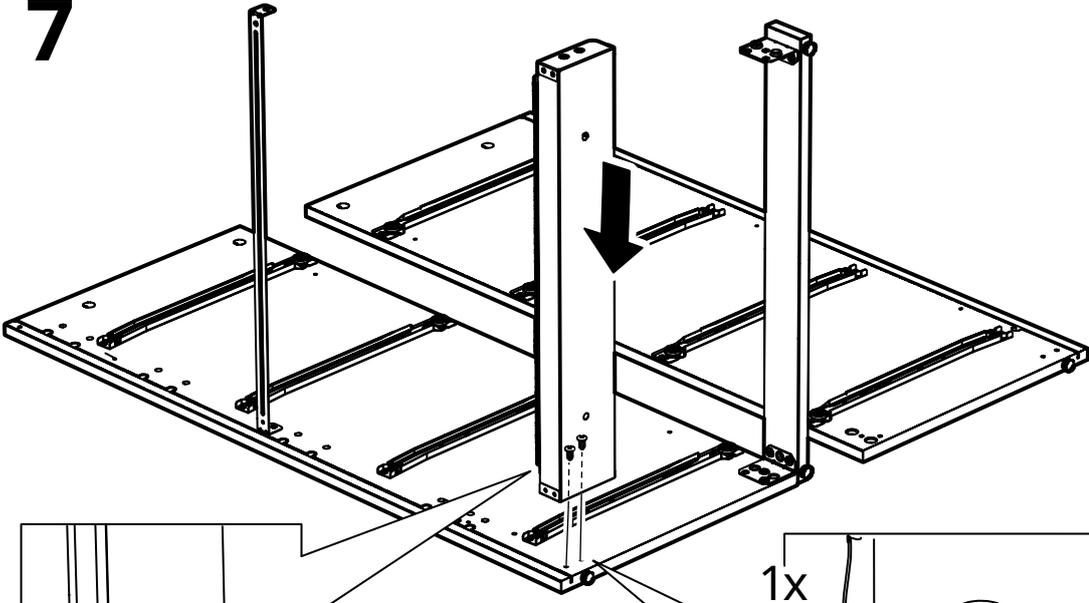







8

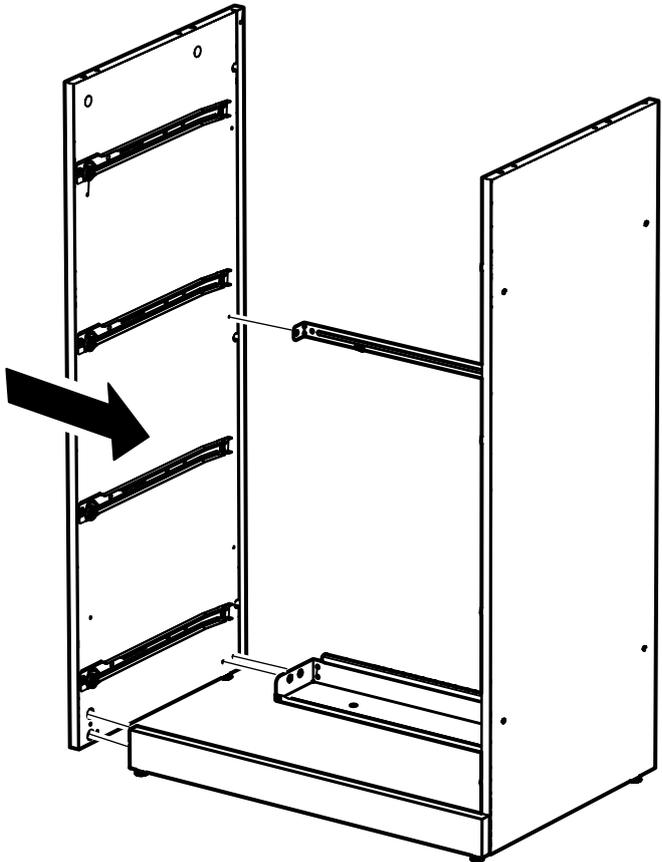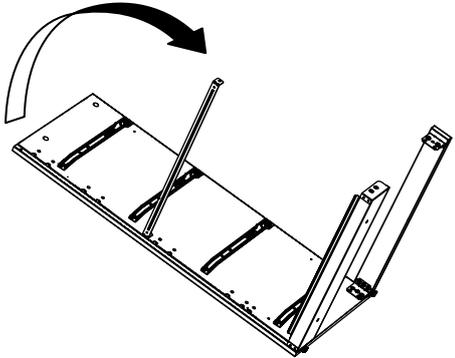

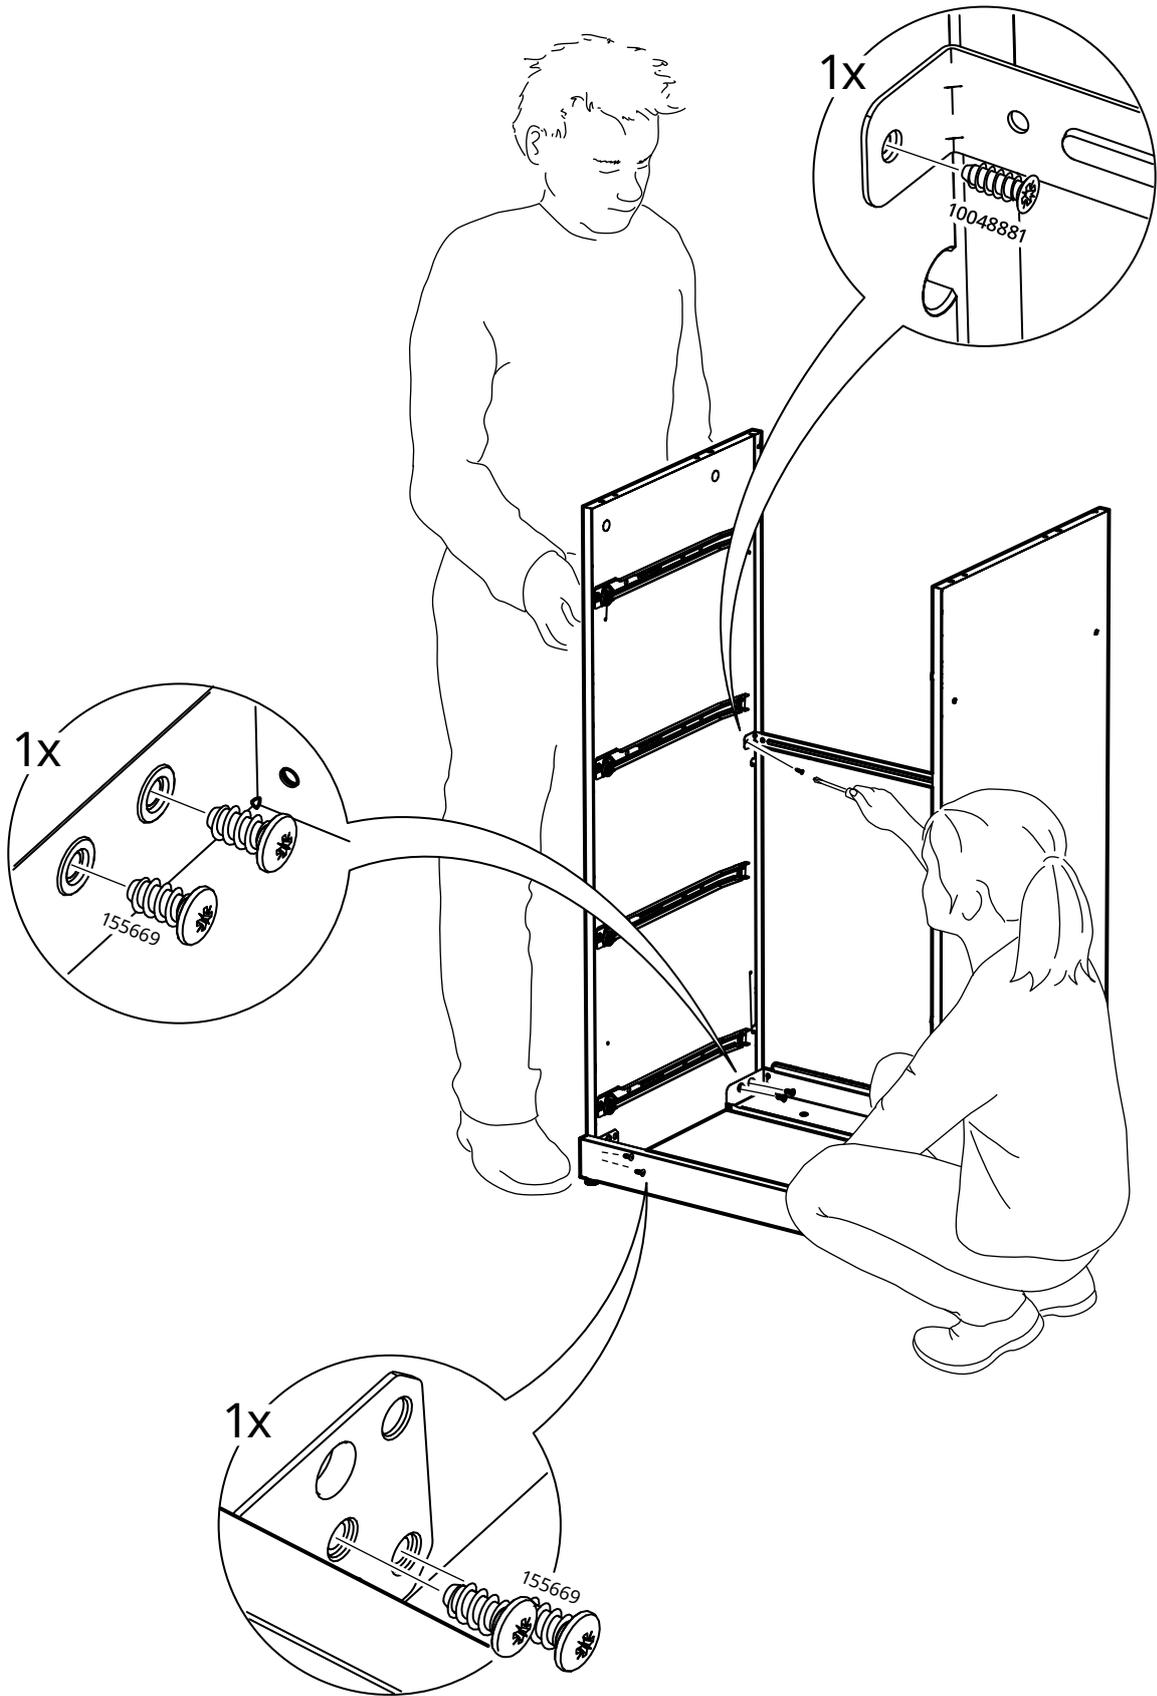


10

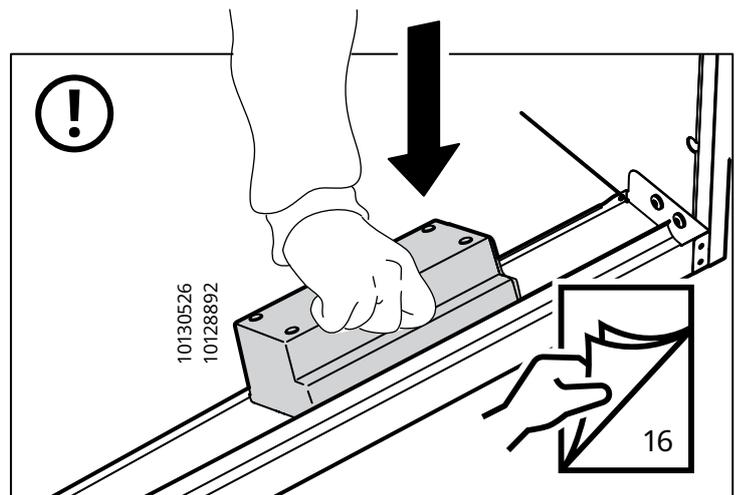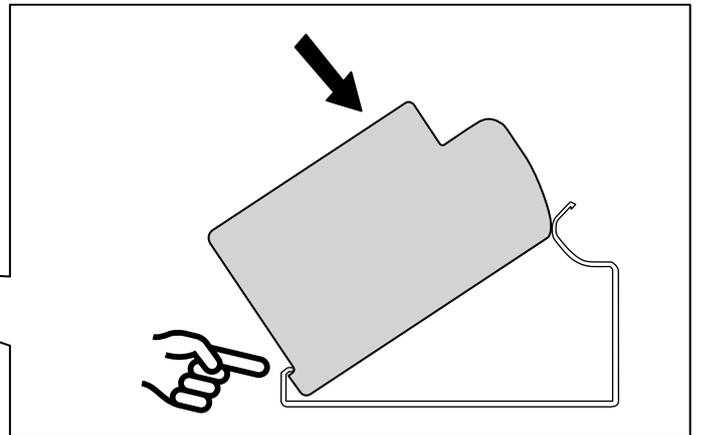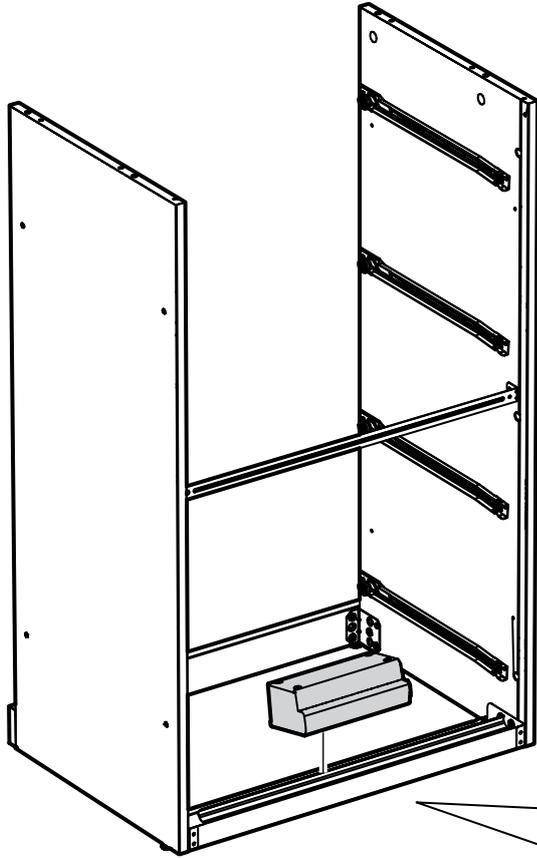


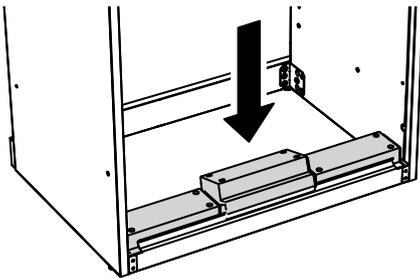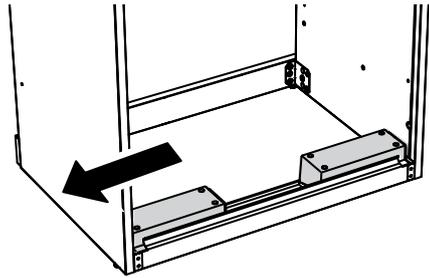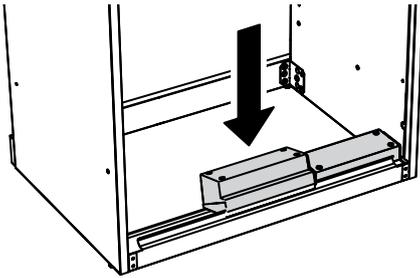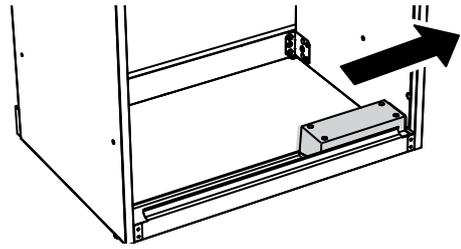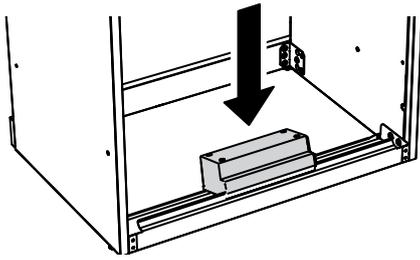


11

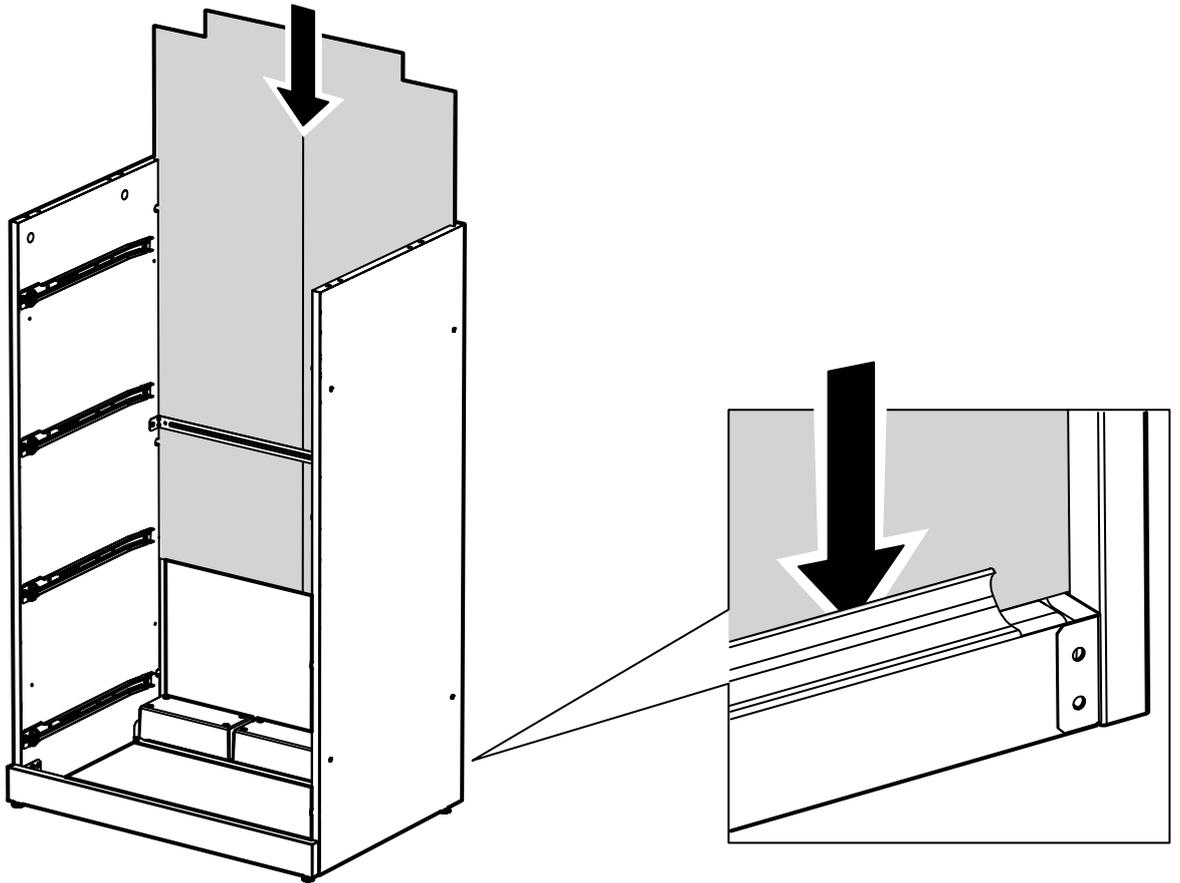


12

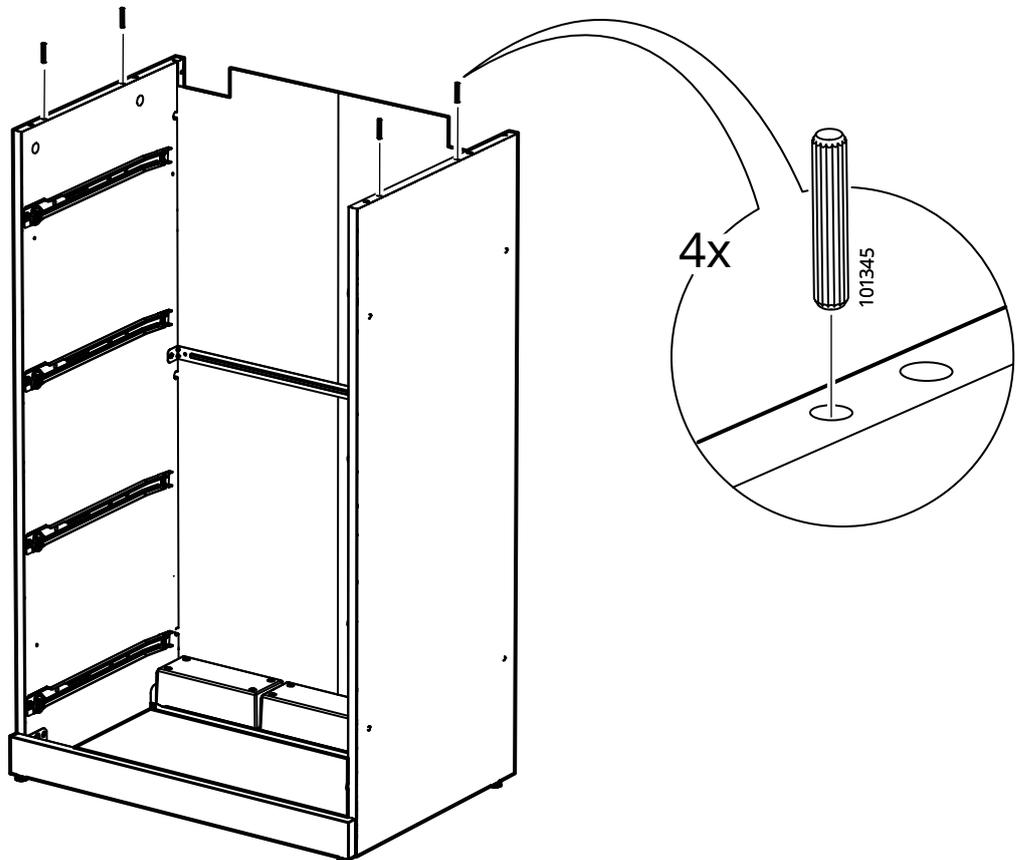


13

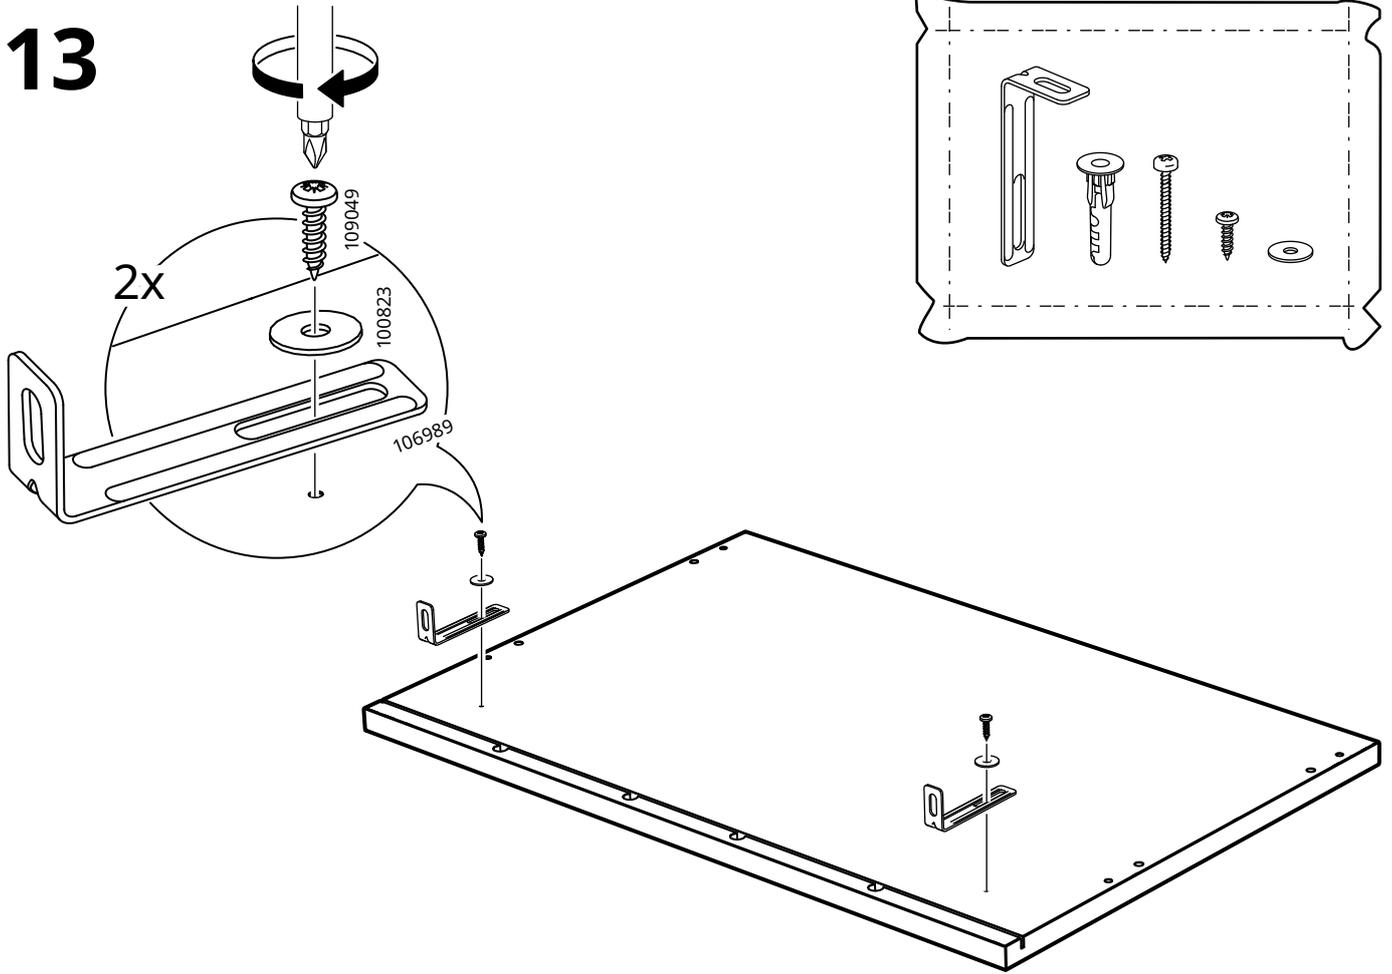



14

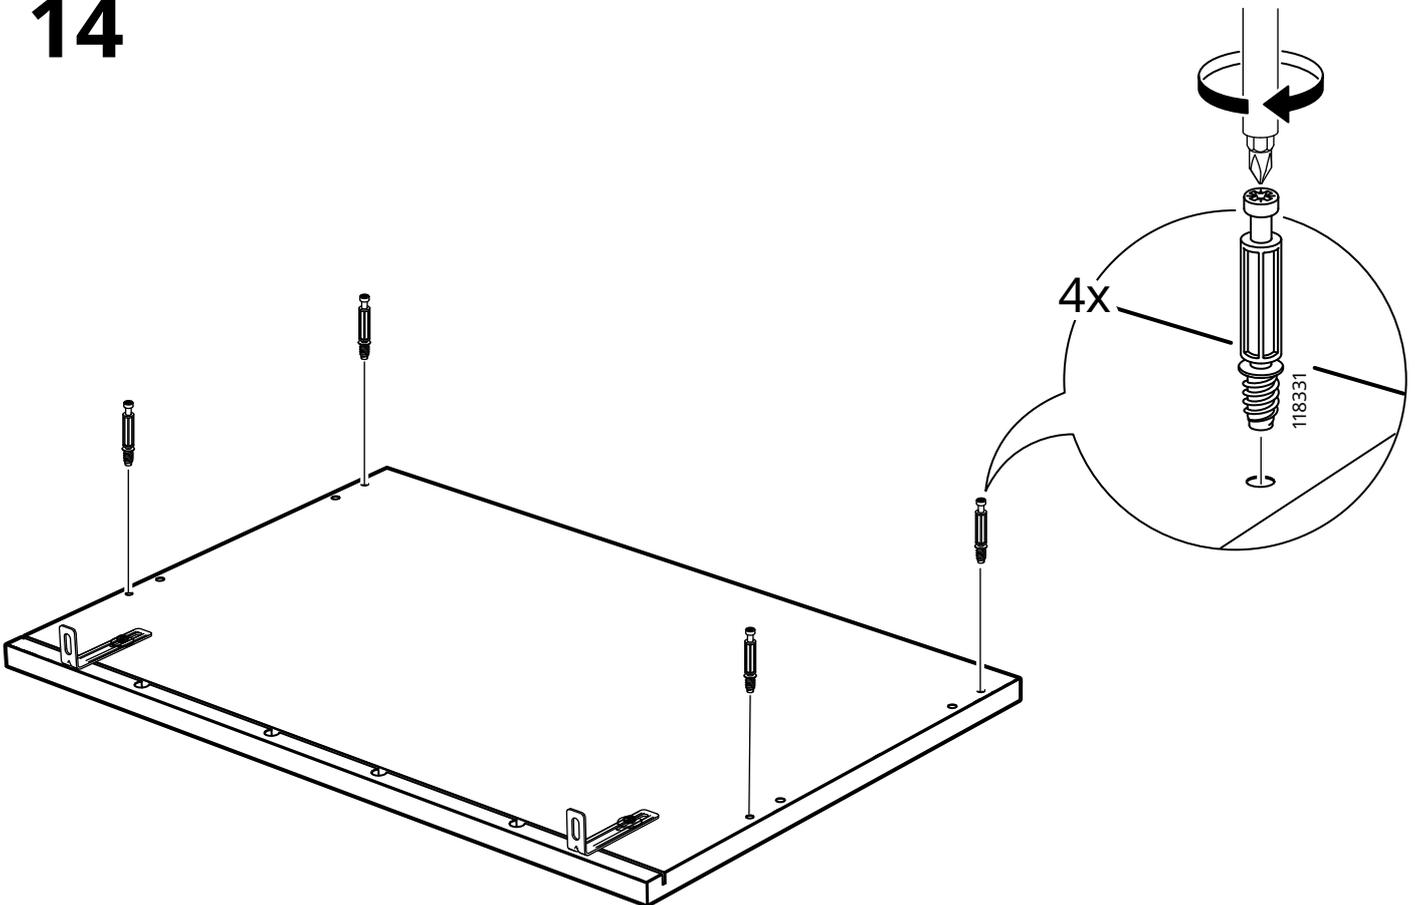



15

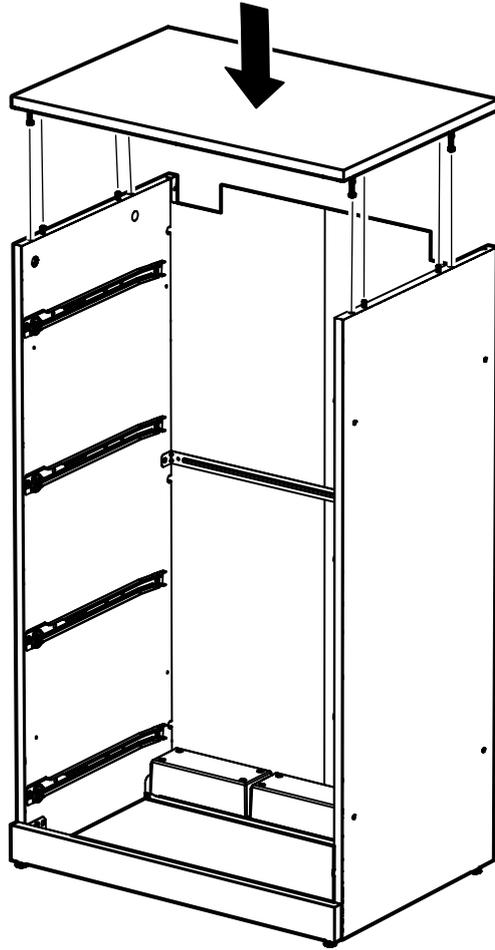


16

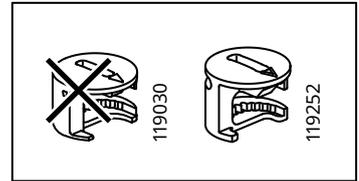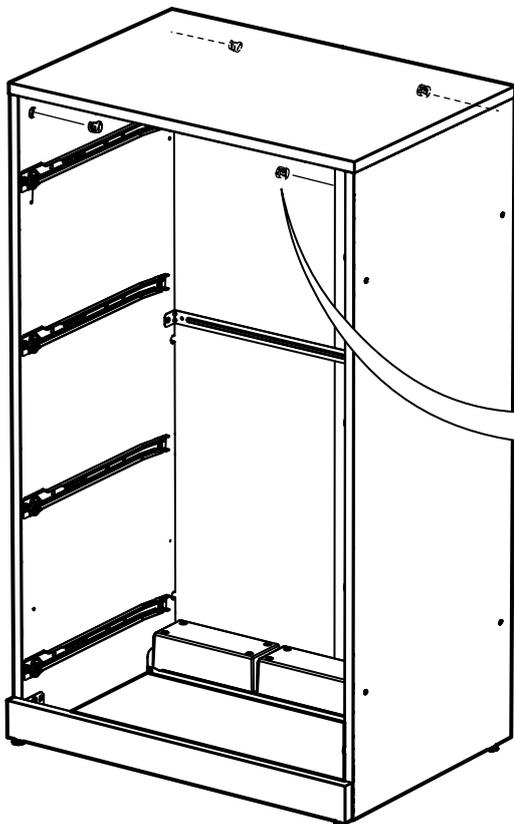


4x

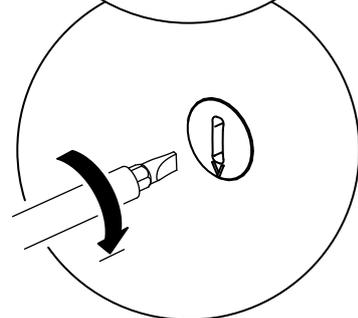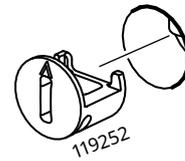



17

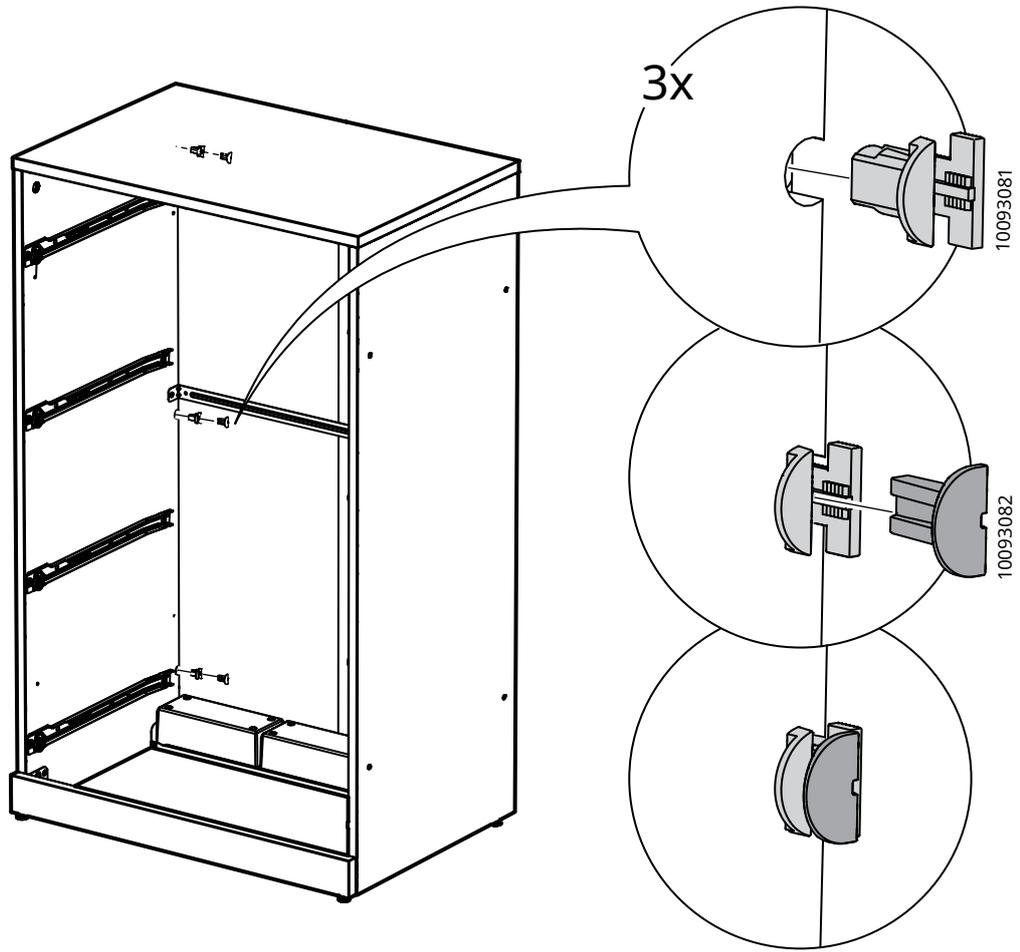


18

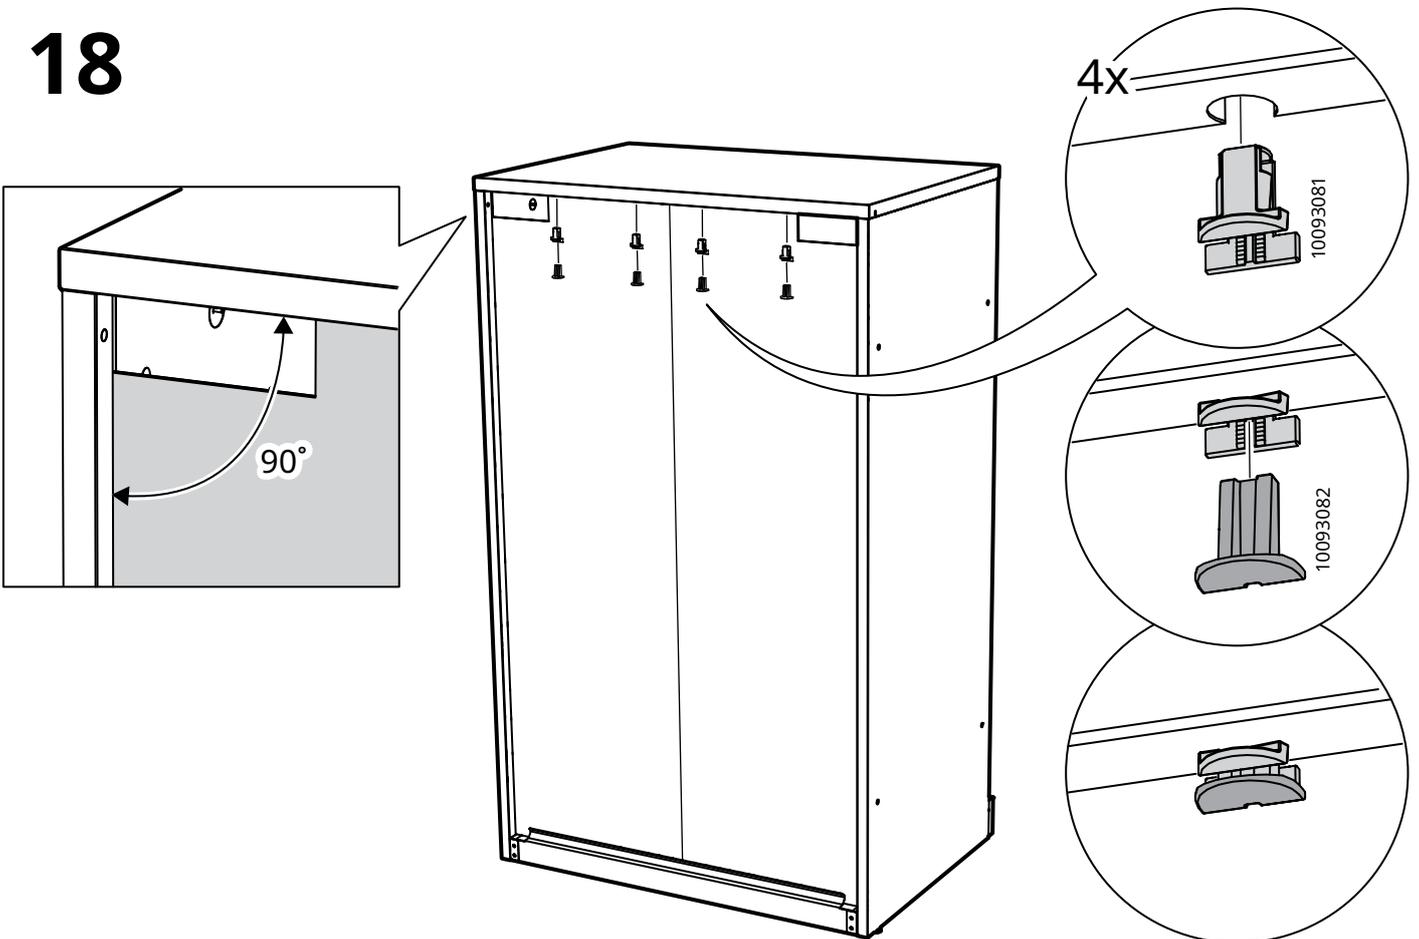


19

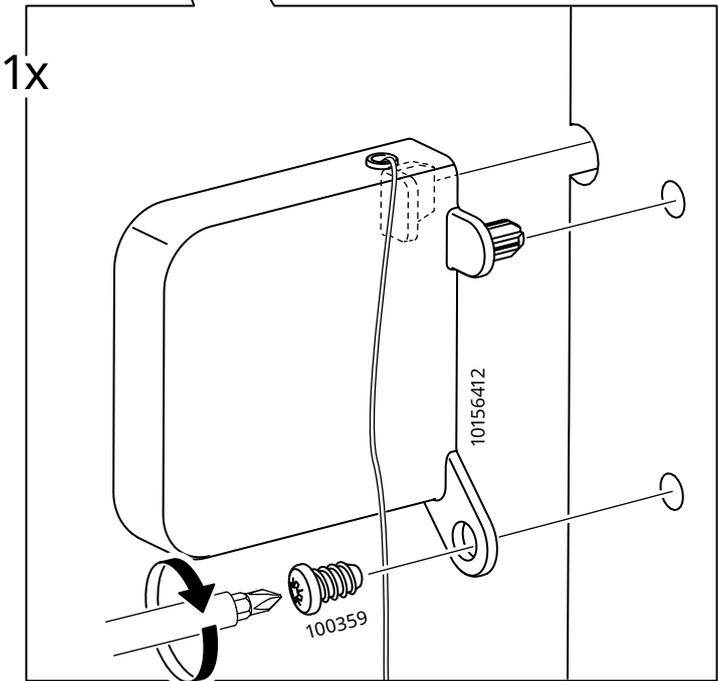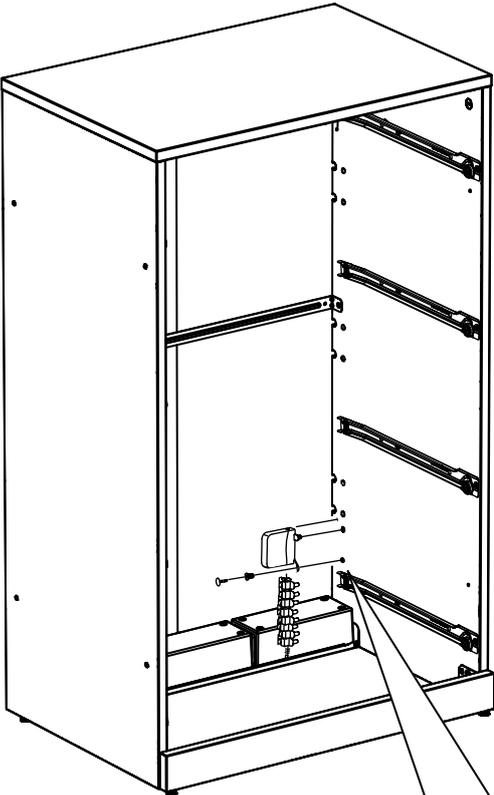


20


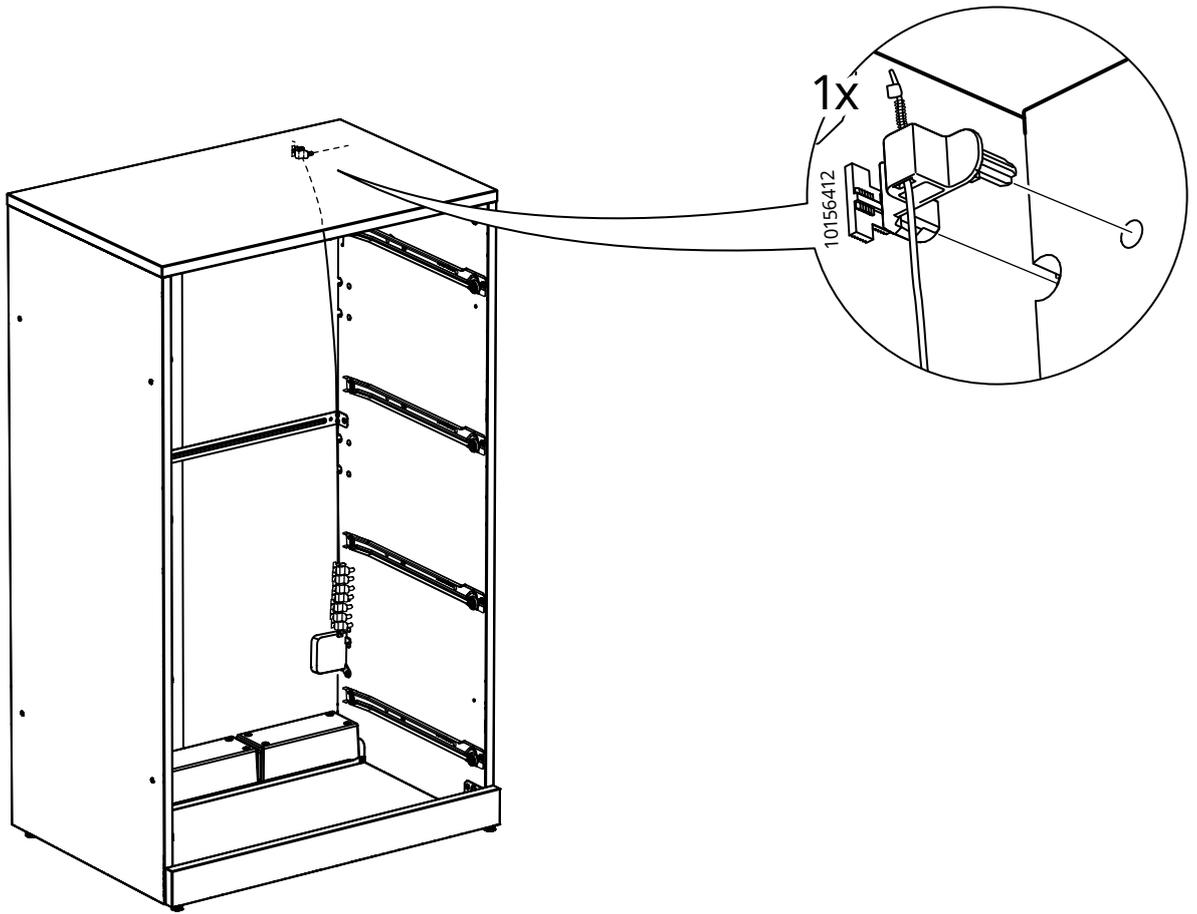




21


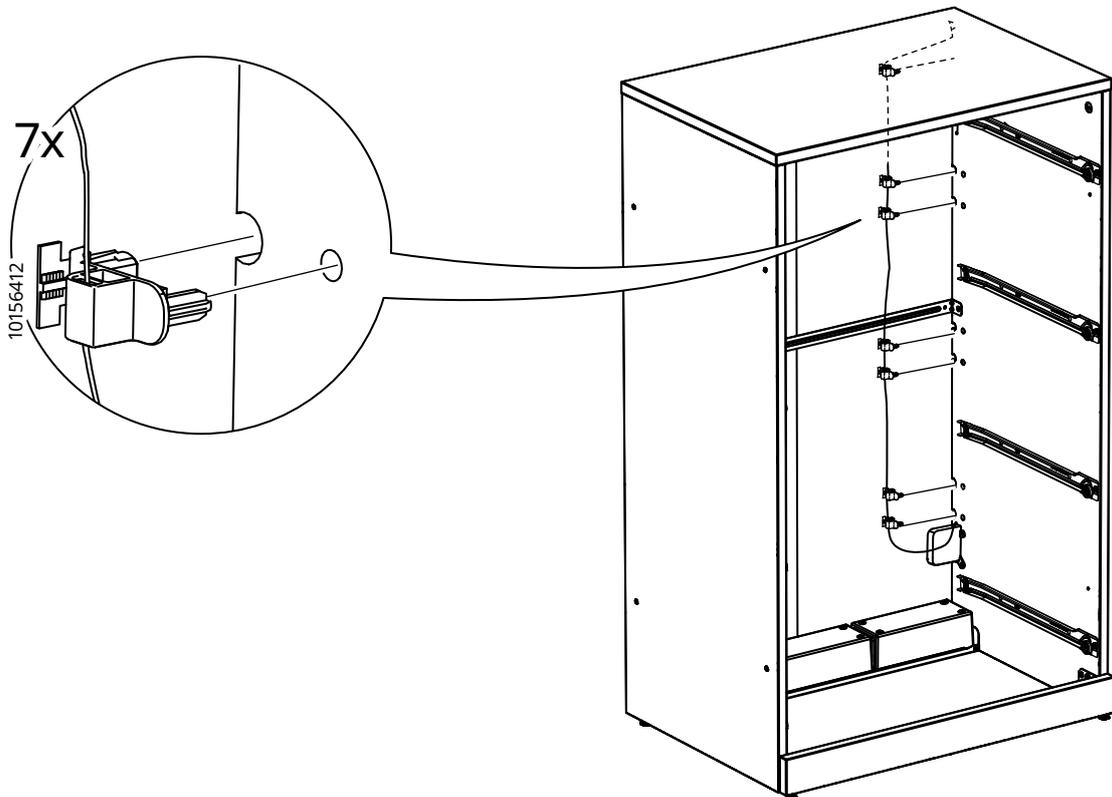


22

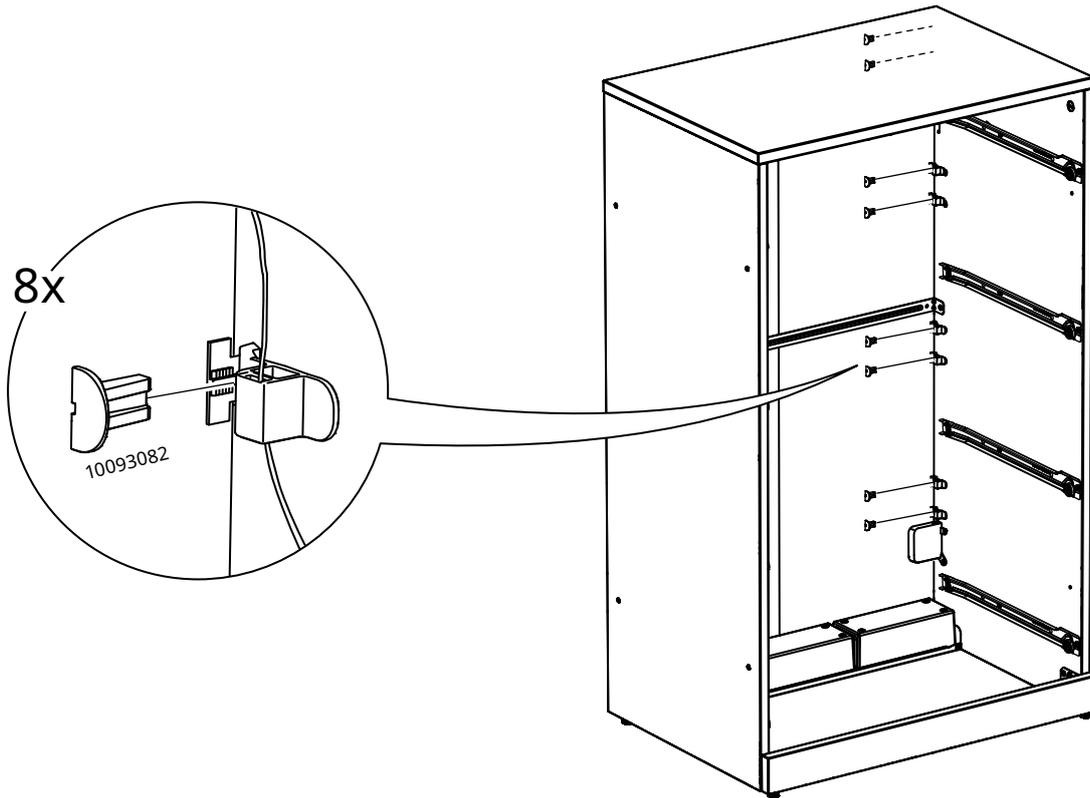


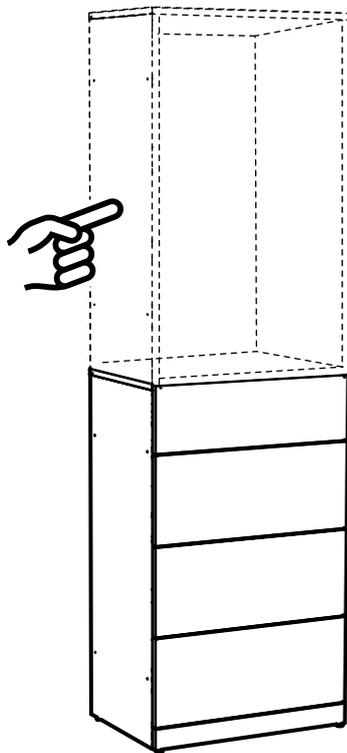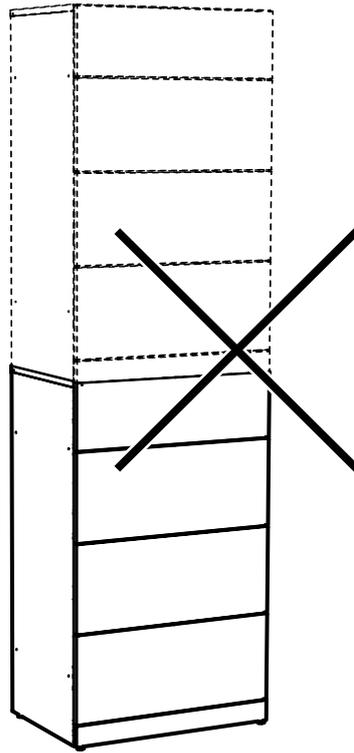

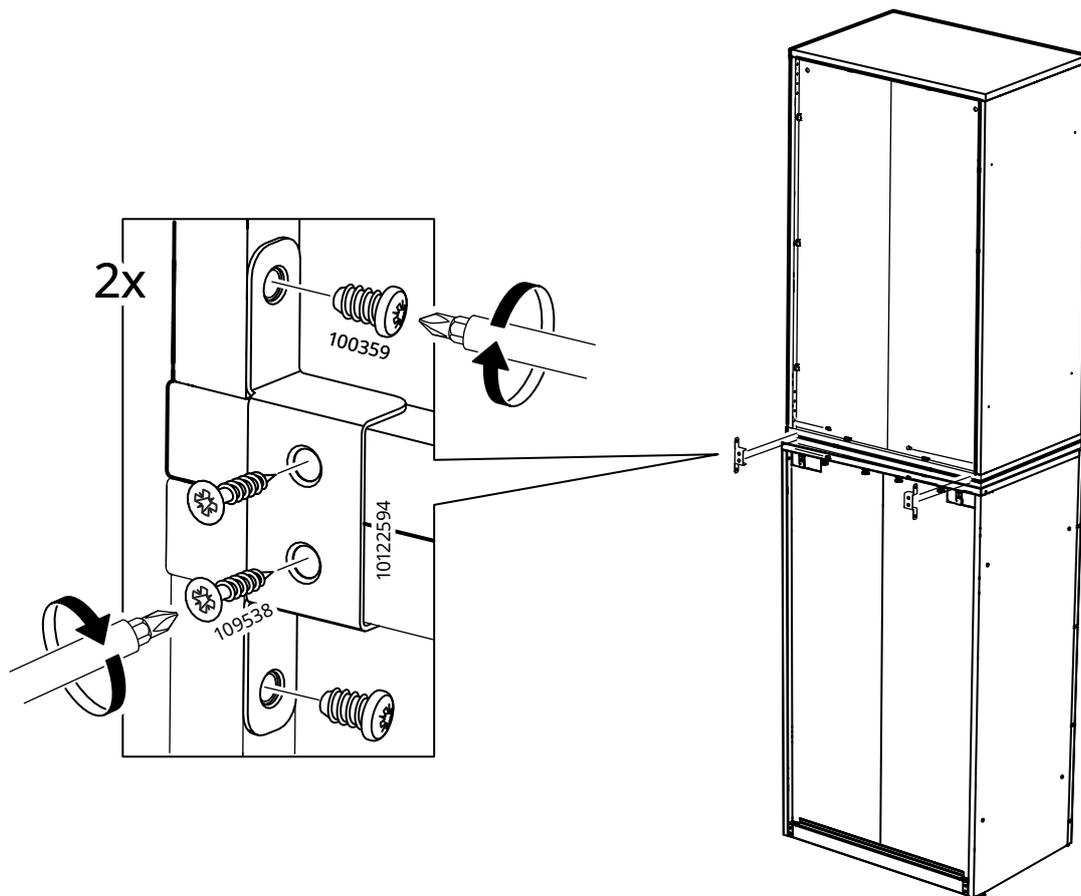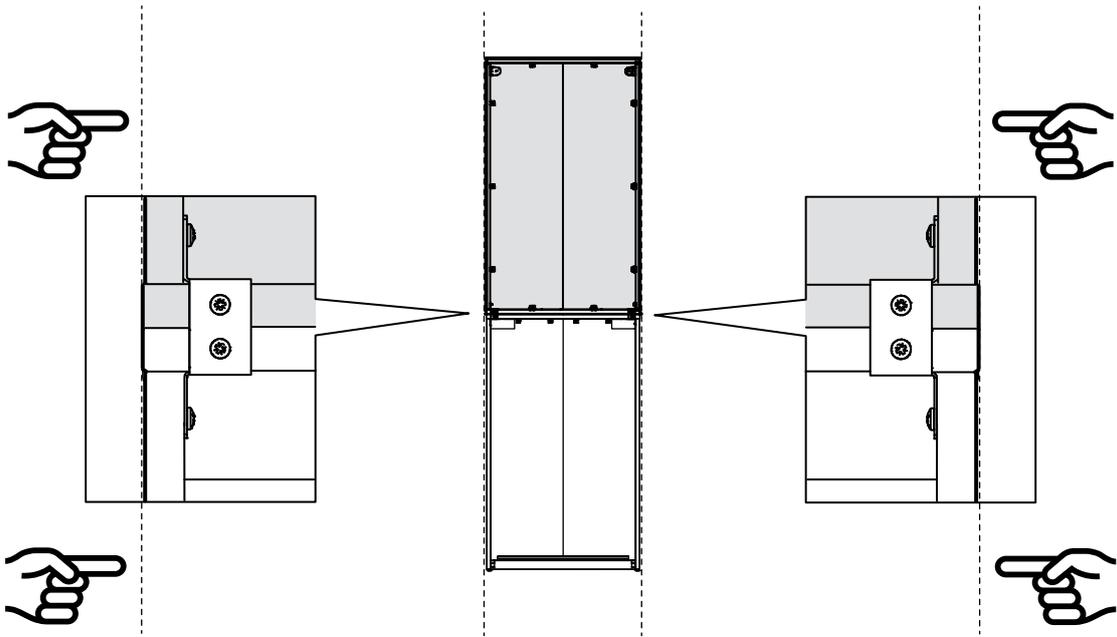


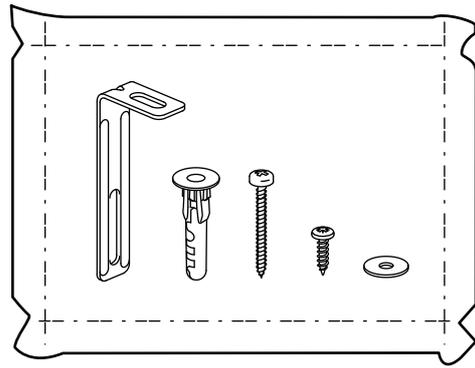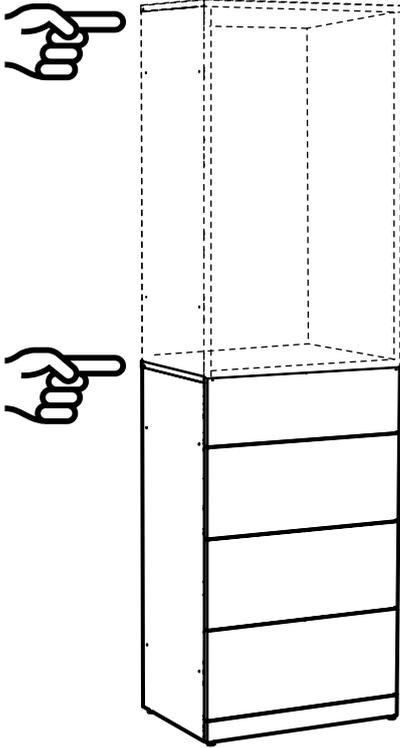


23

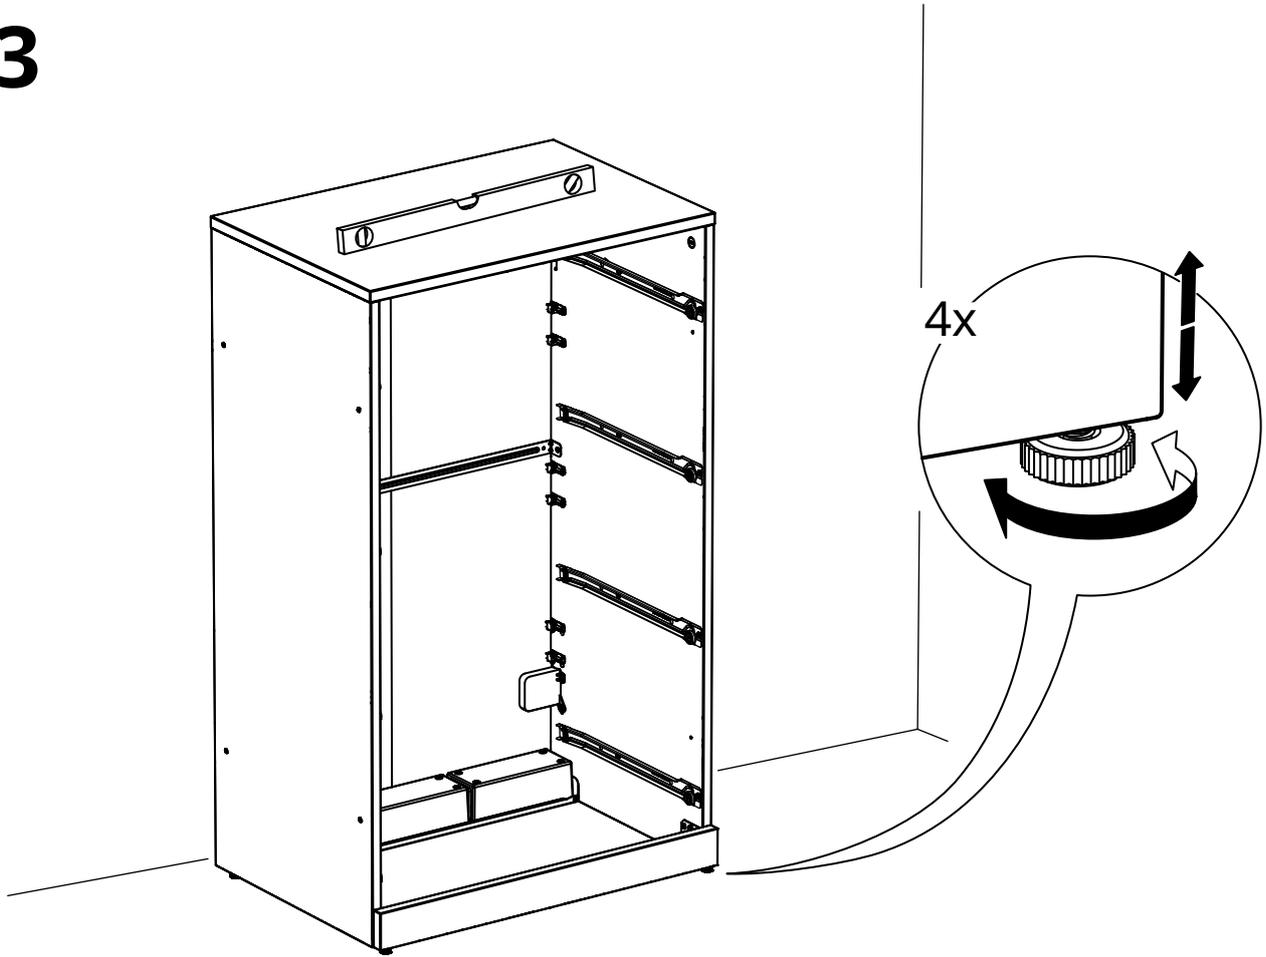

24

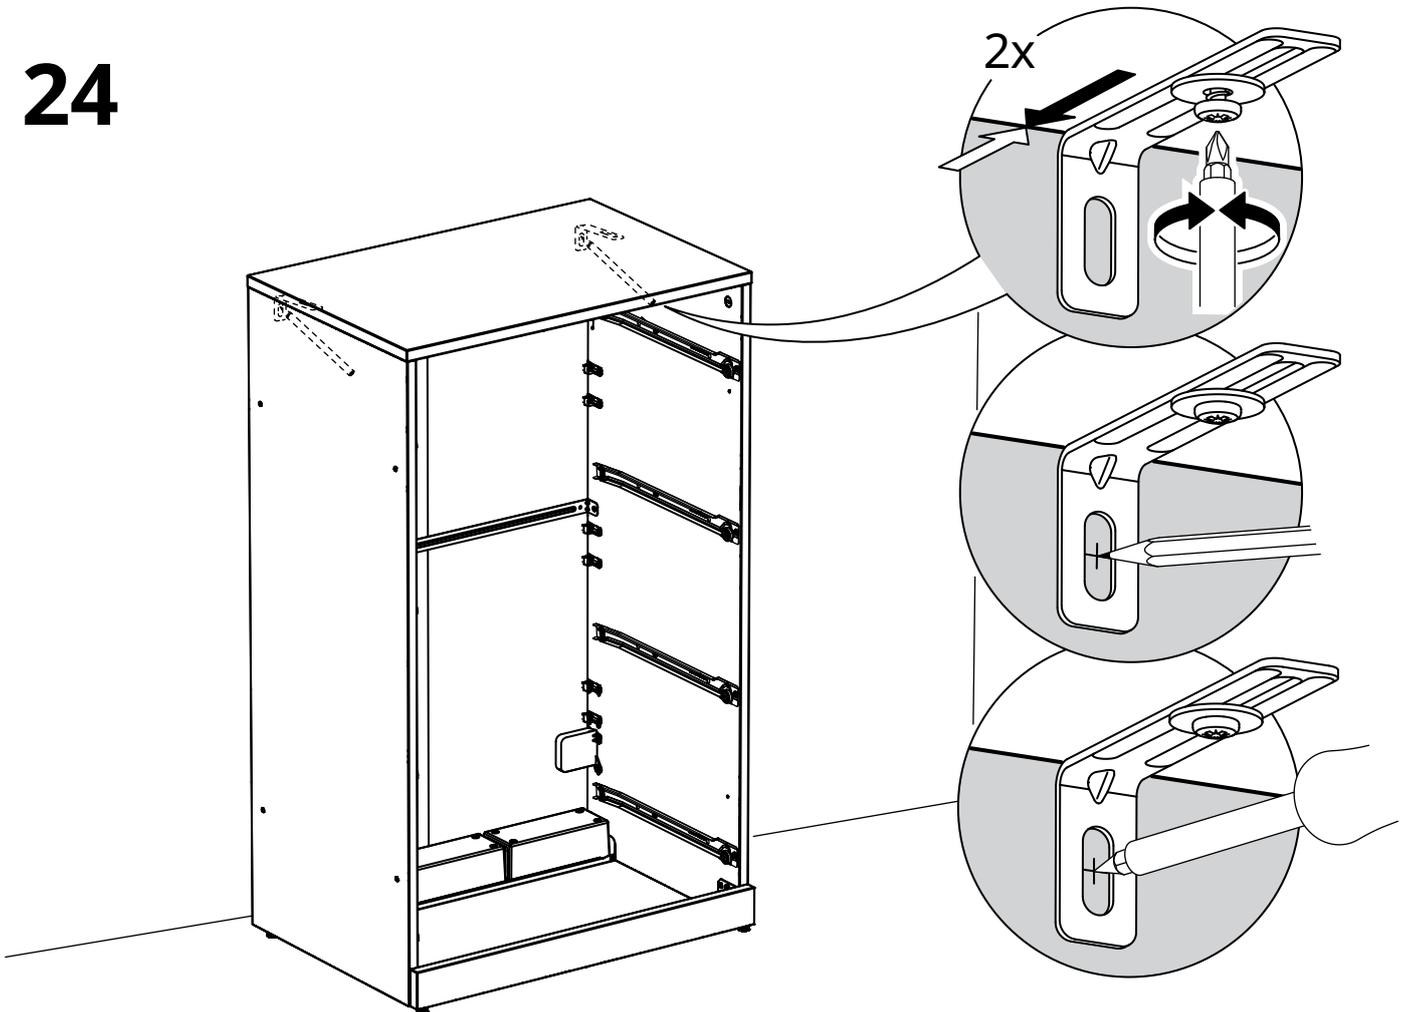

25

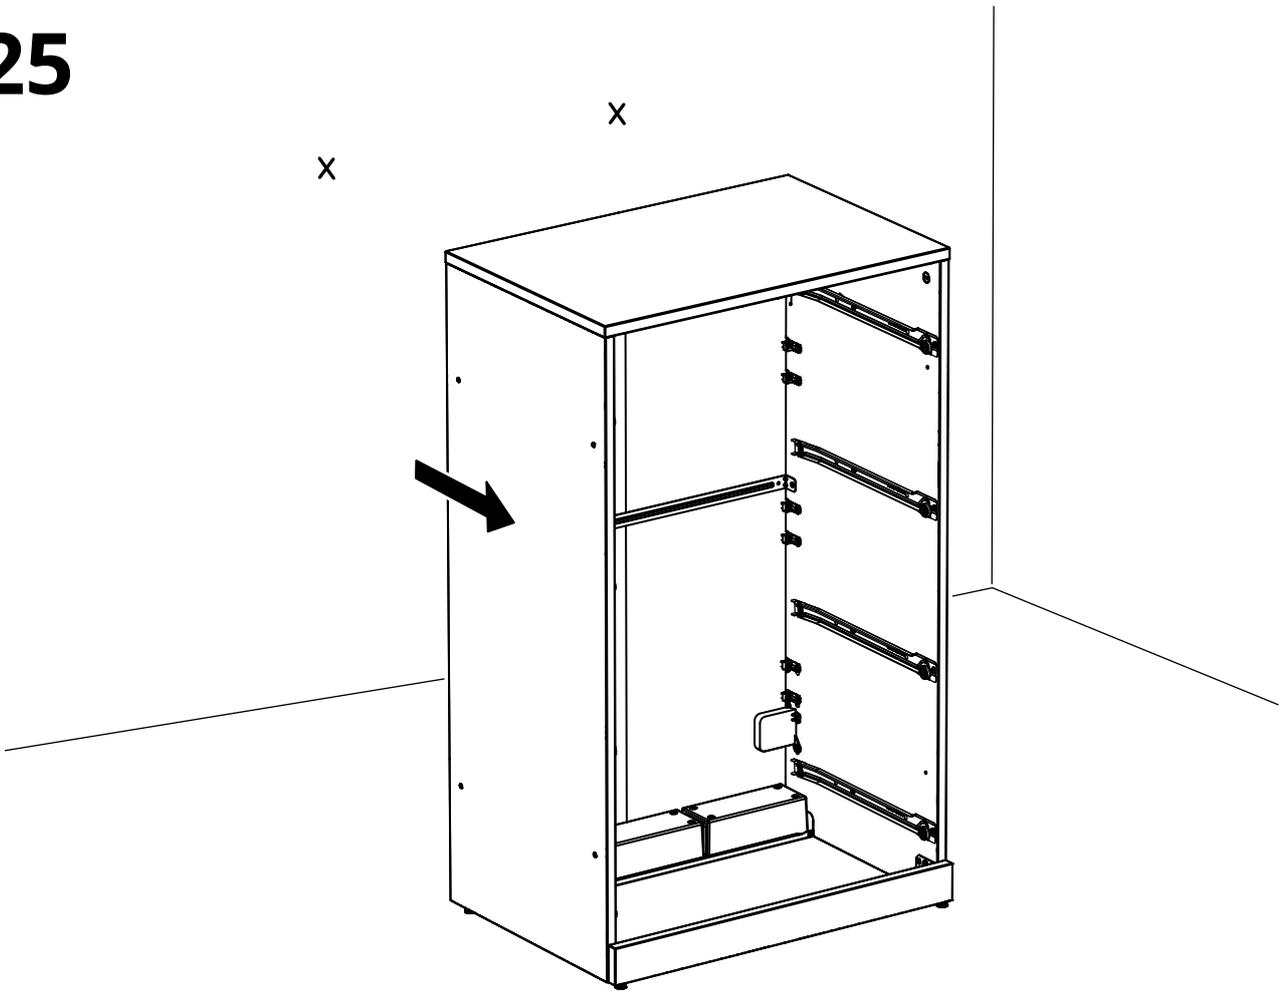




www.IKEA.com/secure-it



www.IKEA.cn/secure-it

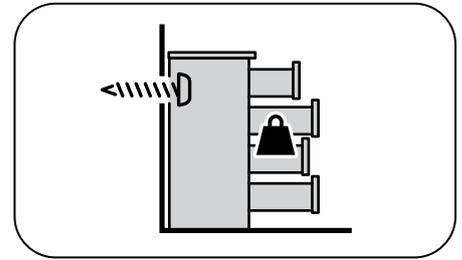

26

English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

A

Ø 8 mm (5/16")

1

70 mm (2 3/4")

2

30

B

Ø 8 mm (5/16")

1

≈ 30 mm (≈ 1 1/4")

2

31


C

Ø 3 mm (1/8")

1


≈ 30 mm (≈ 1 1/4")

33


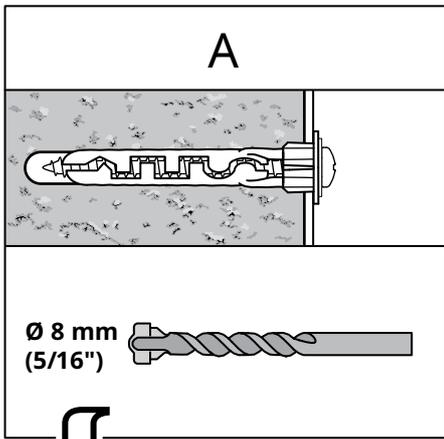





27

x


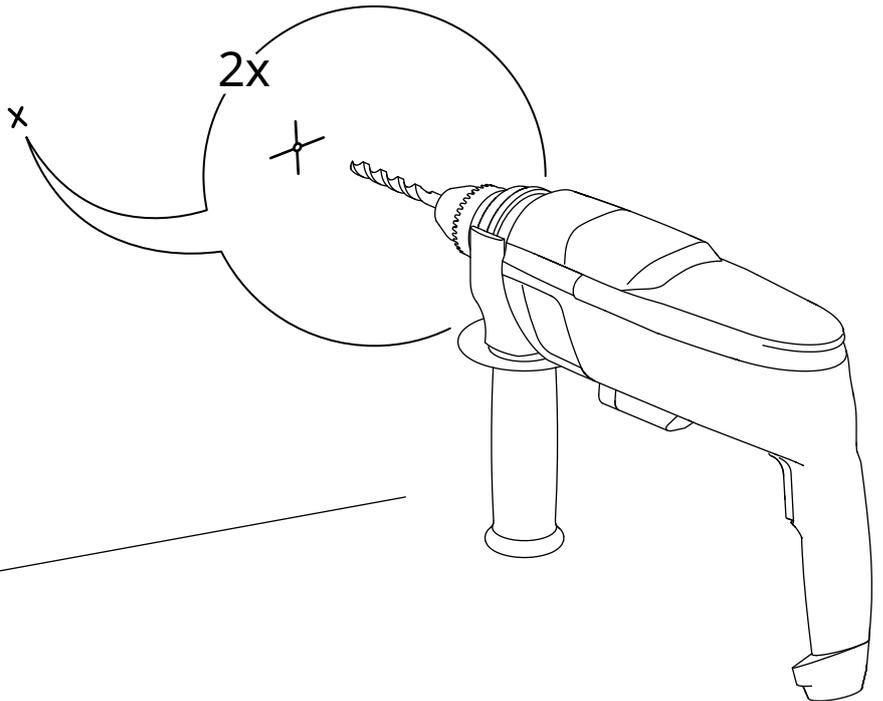



28

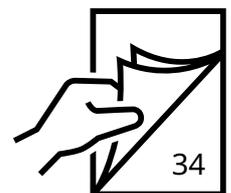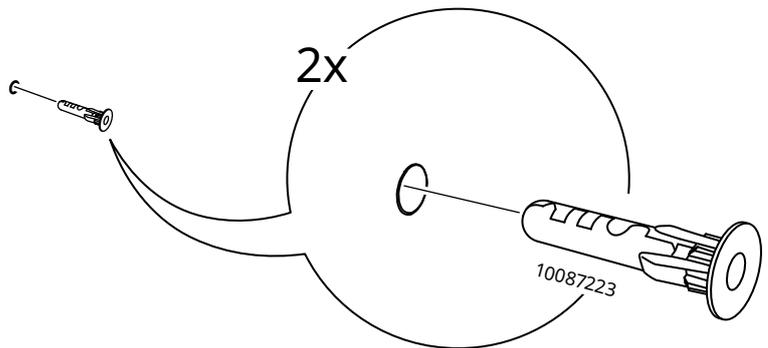

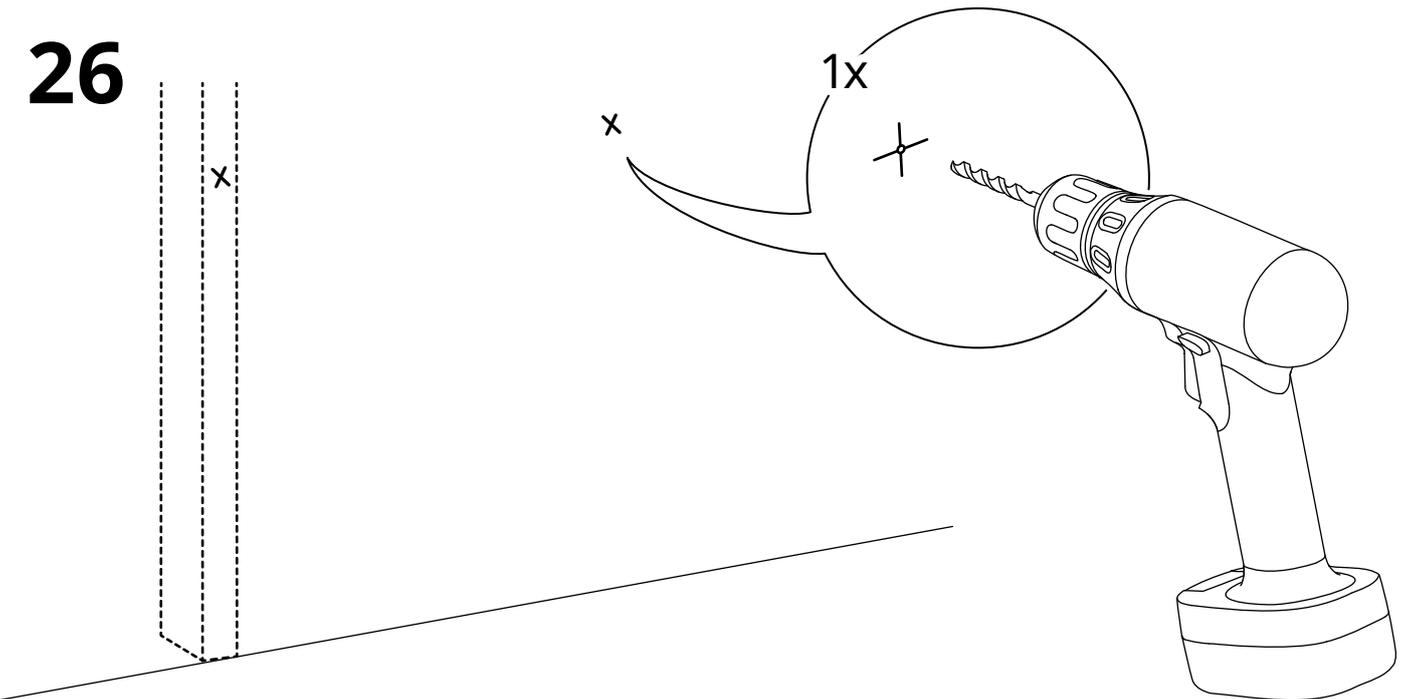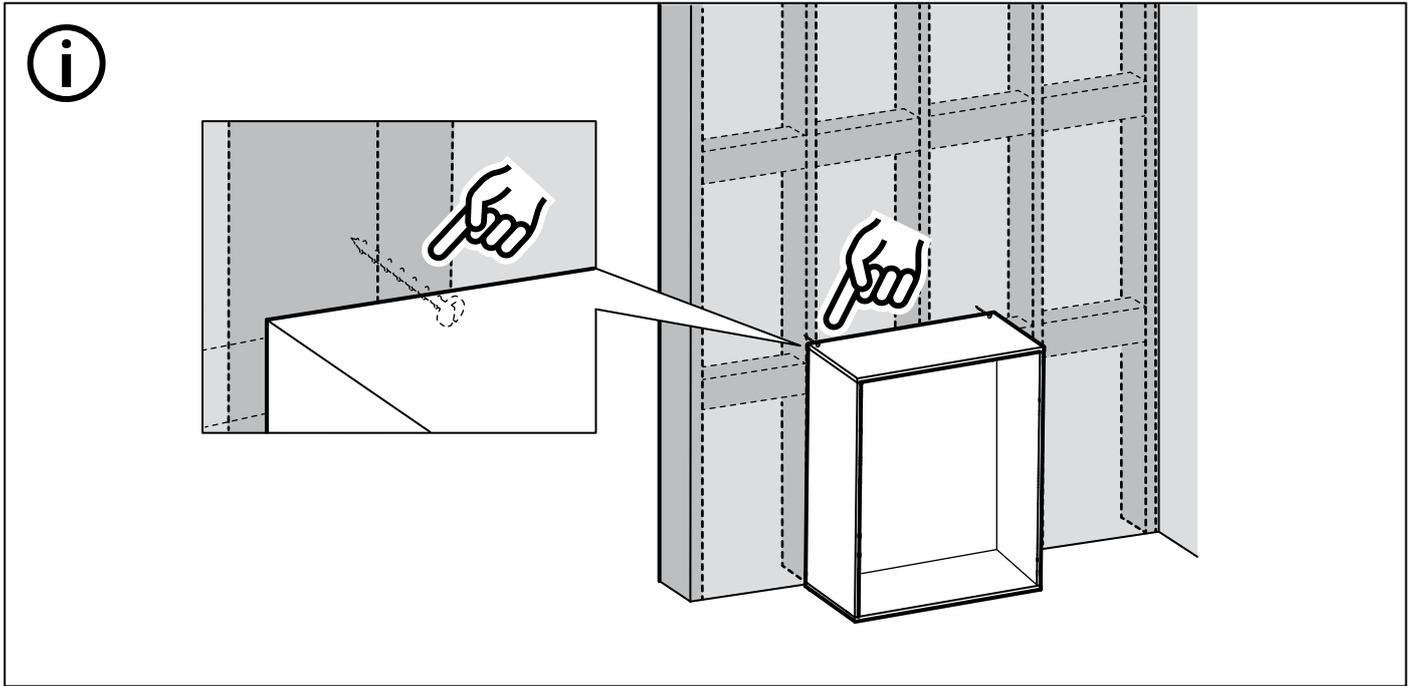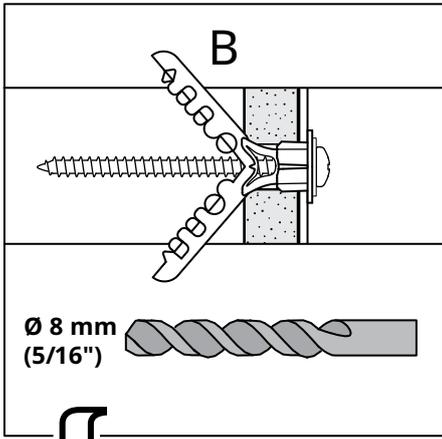


27

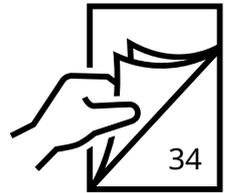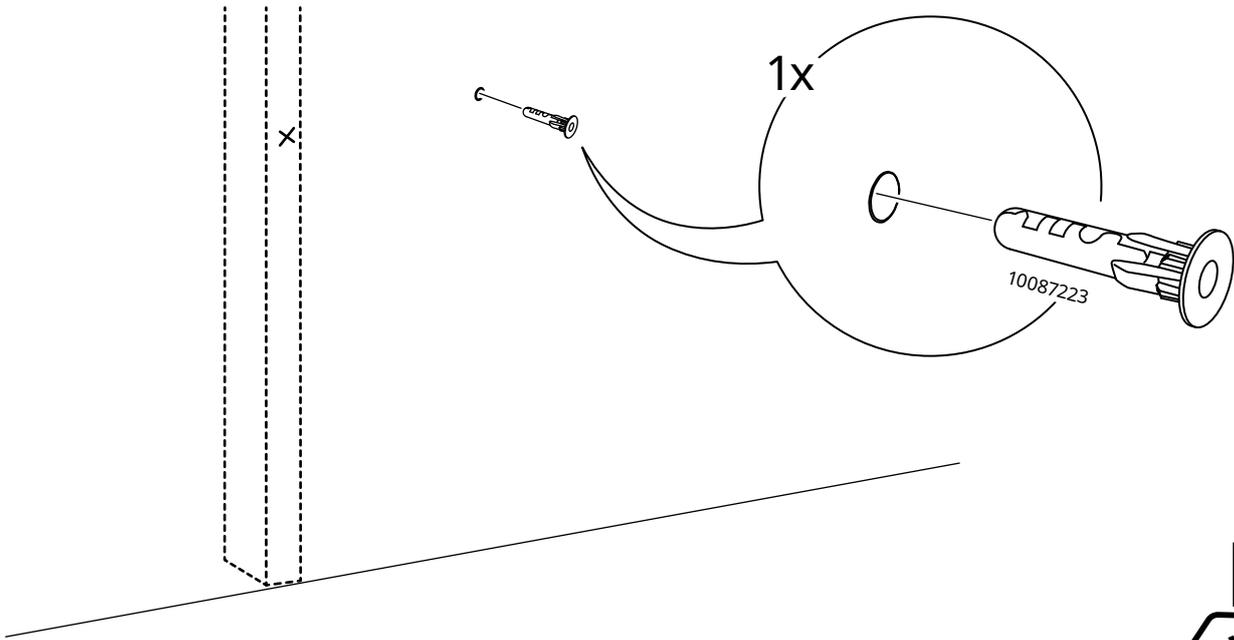


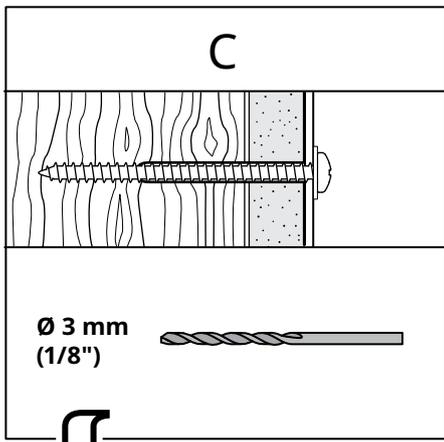










26


x

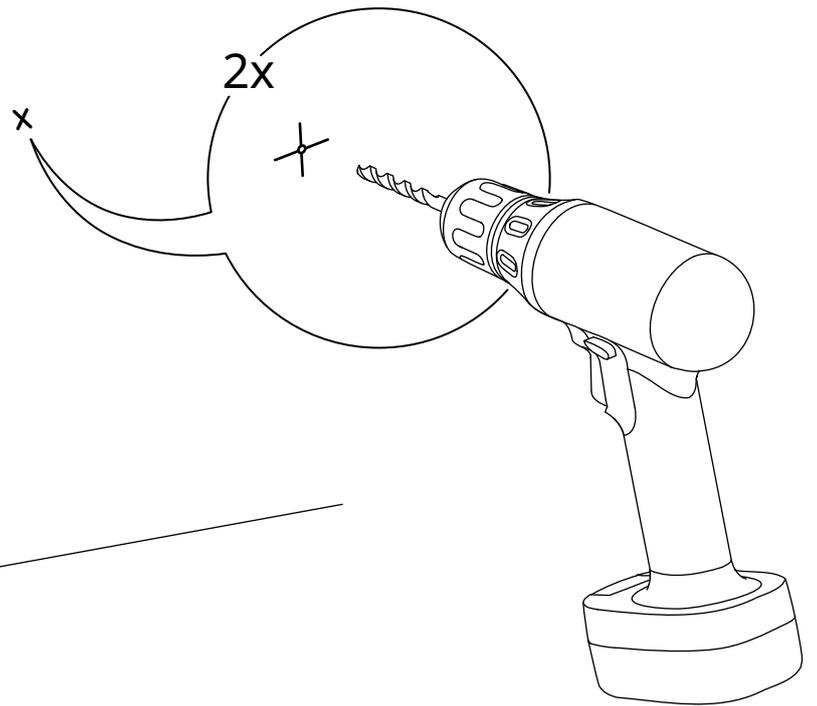


29

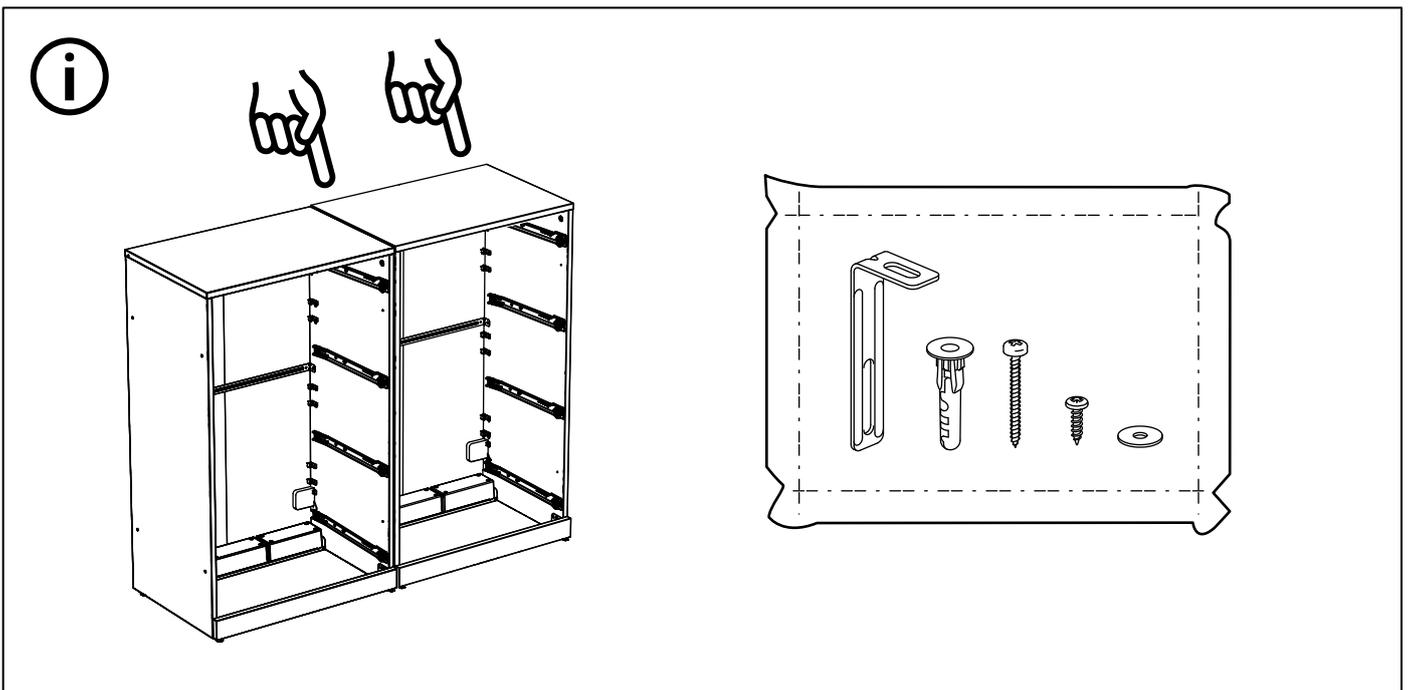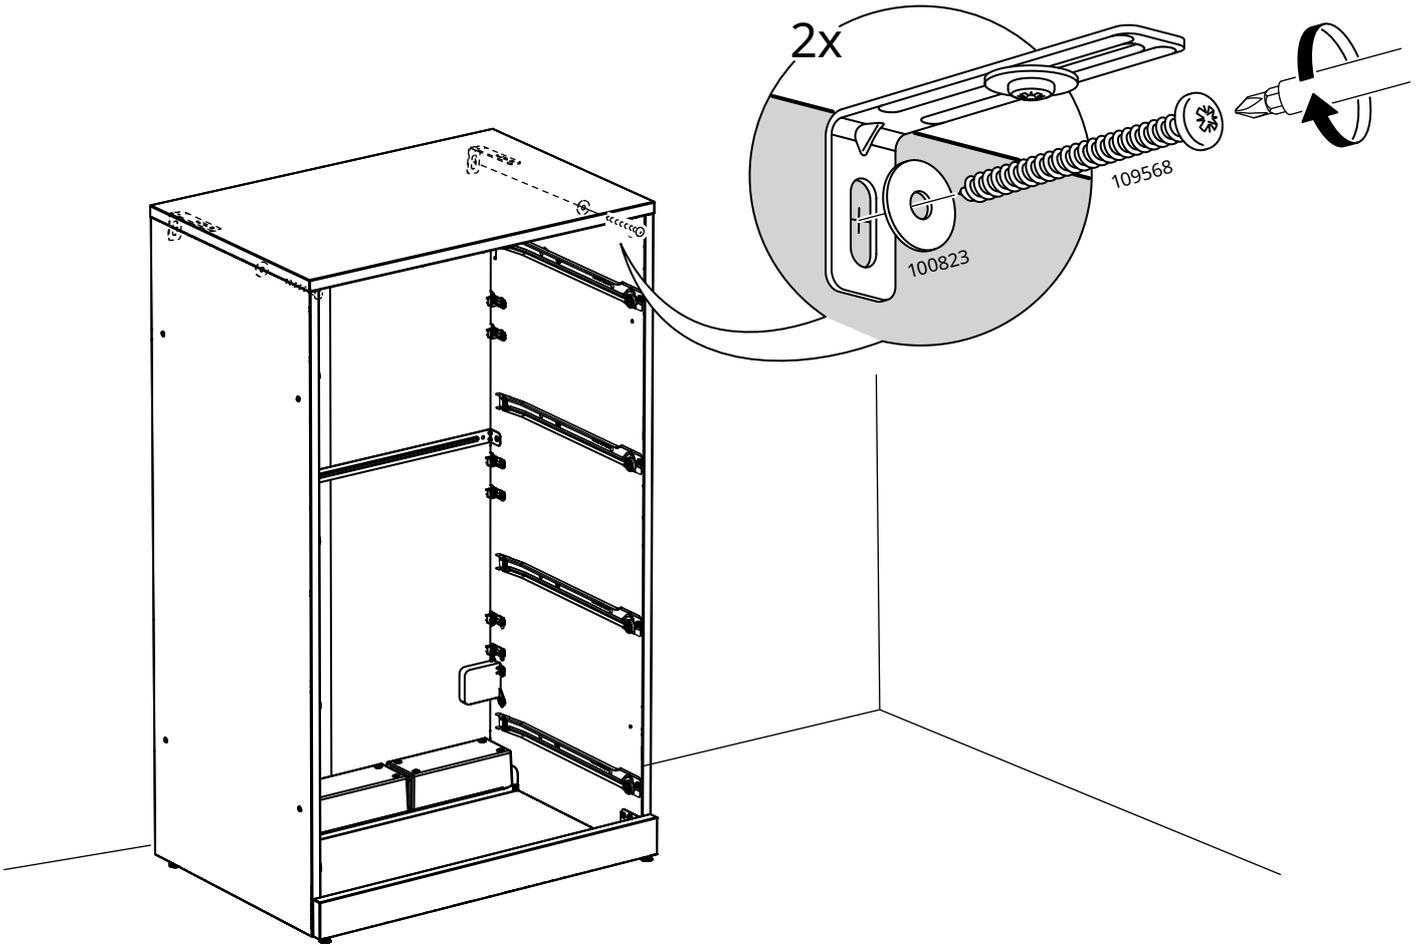

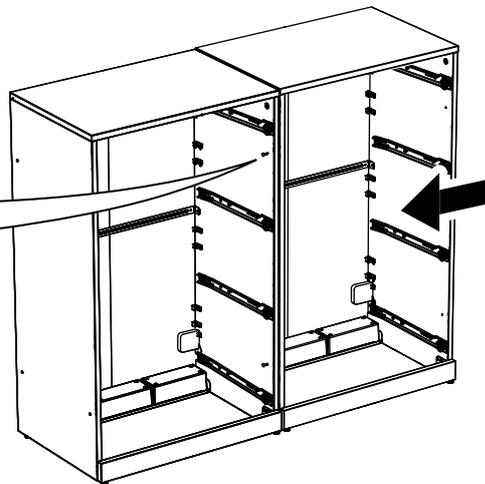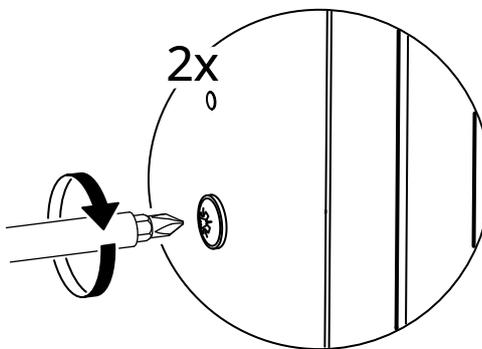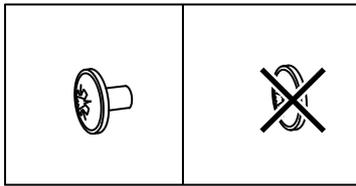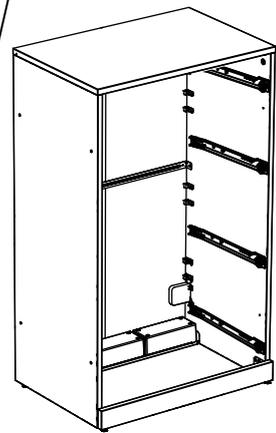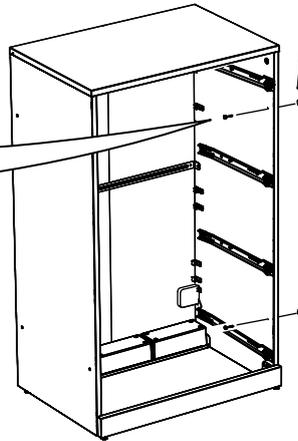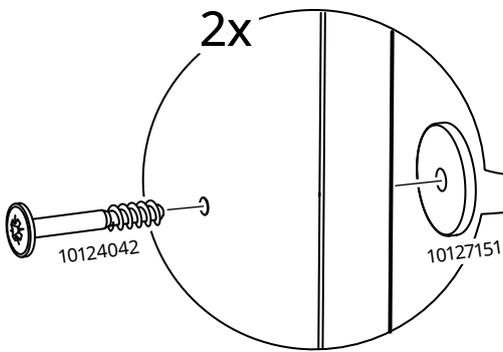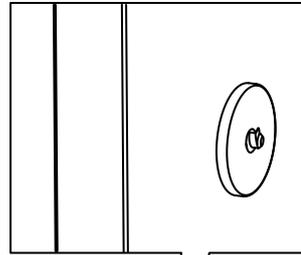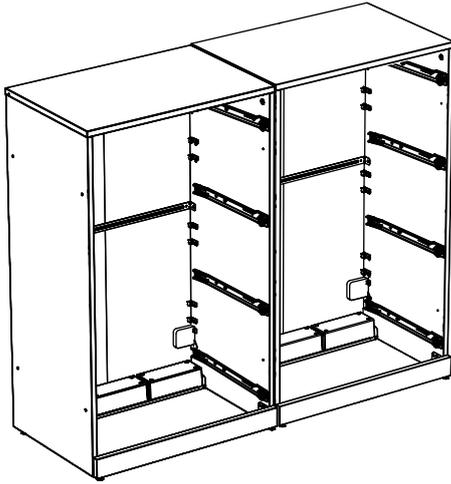


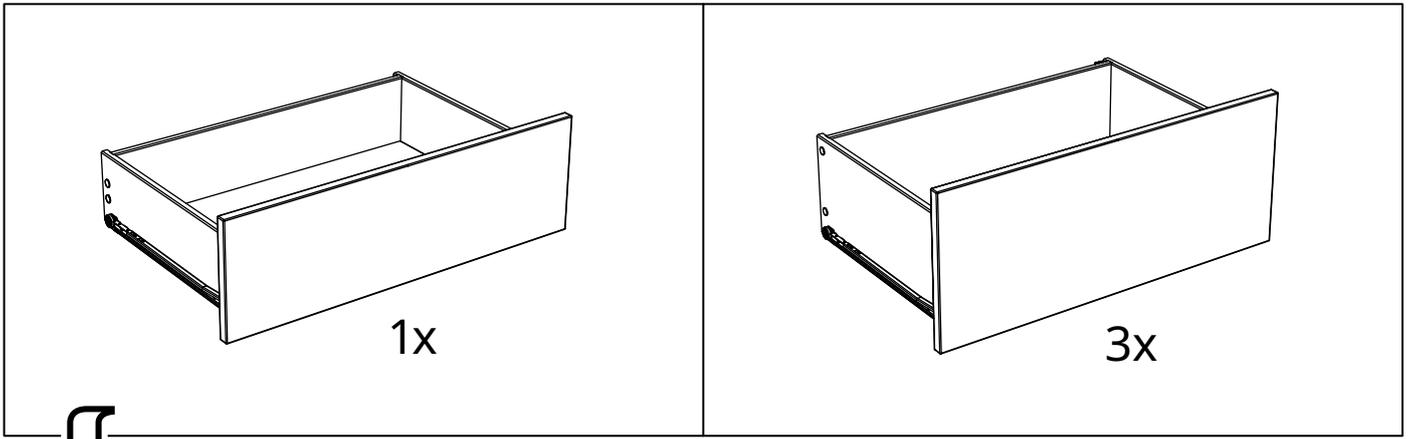


30

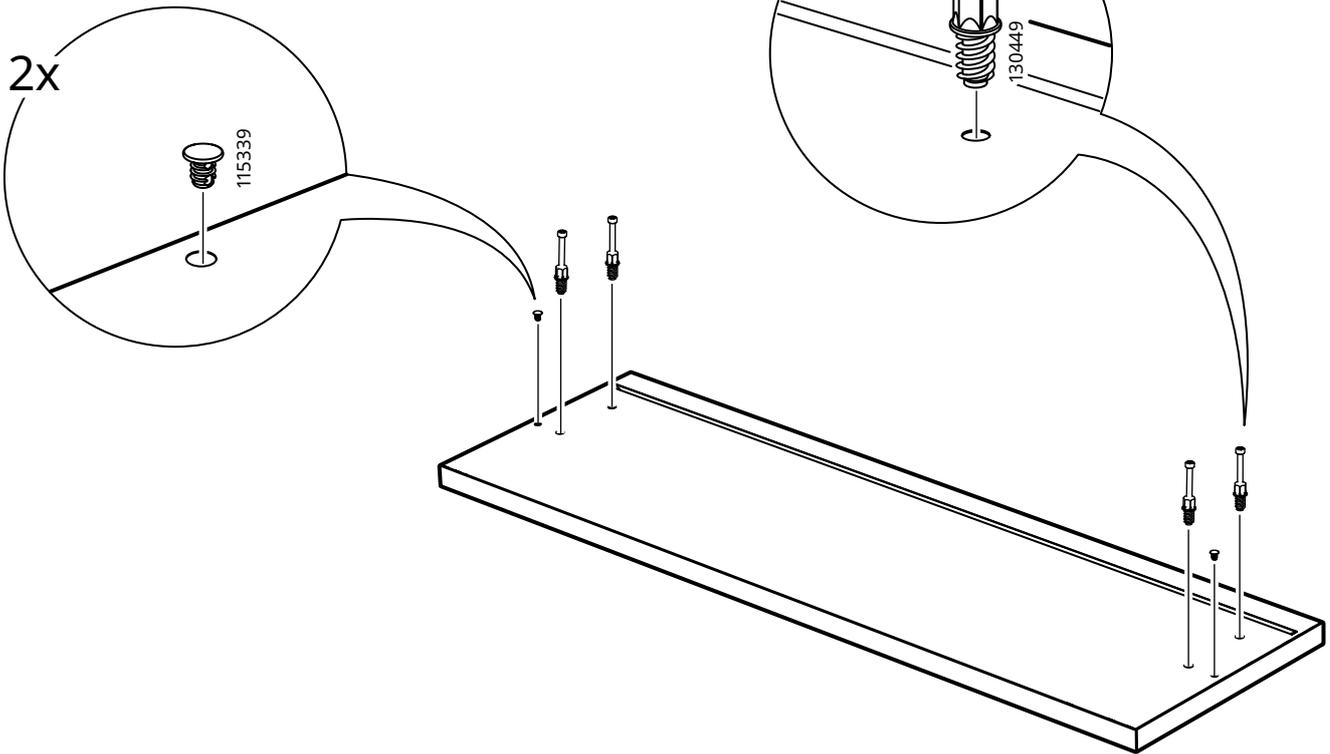


31

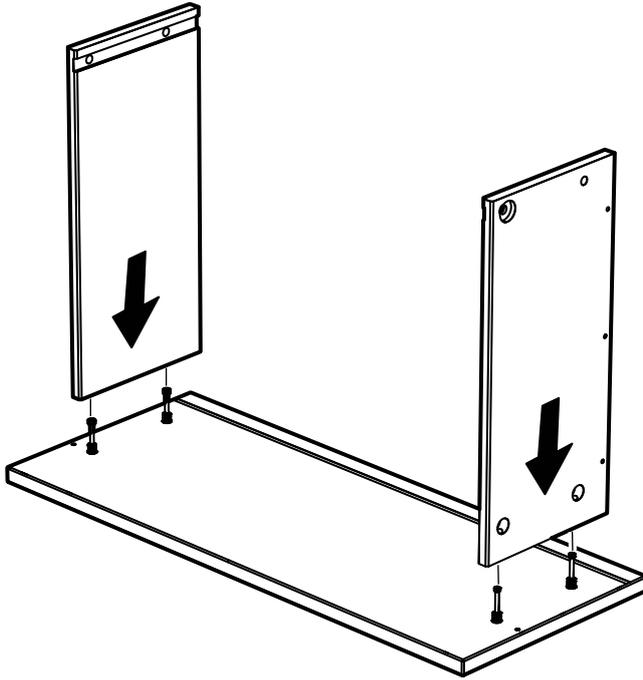




32

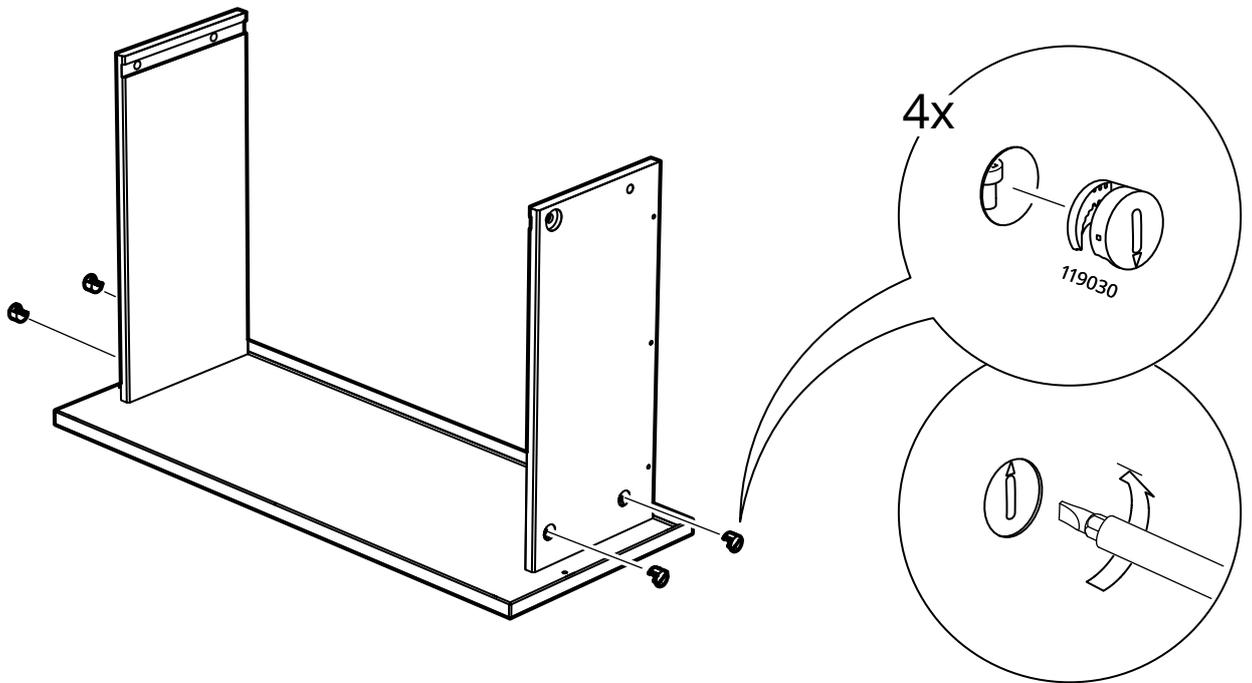


33

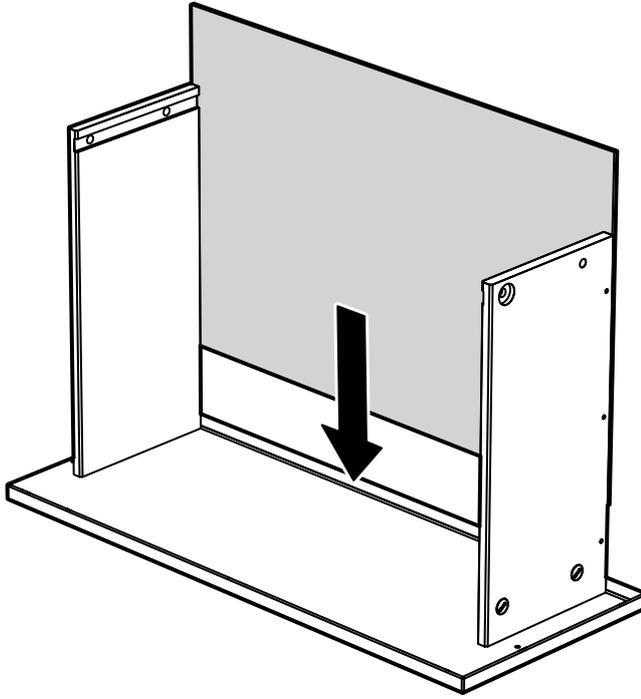


34

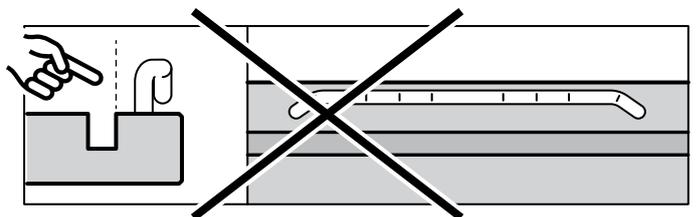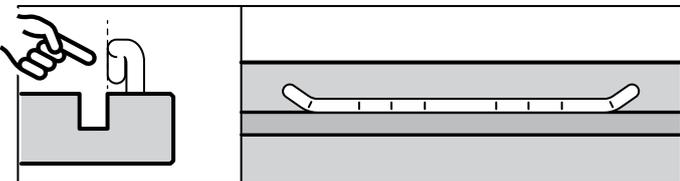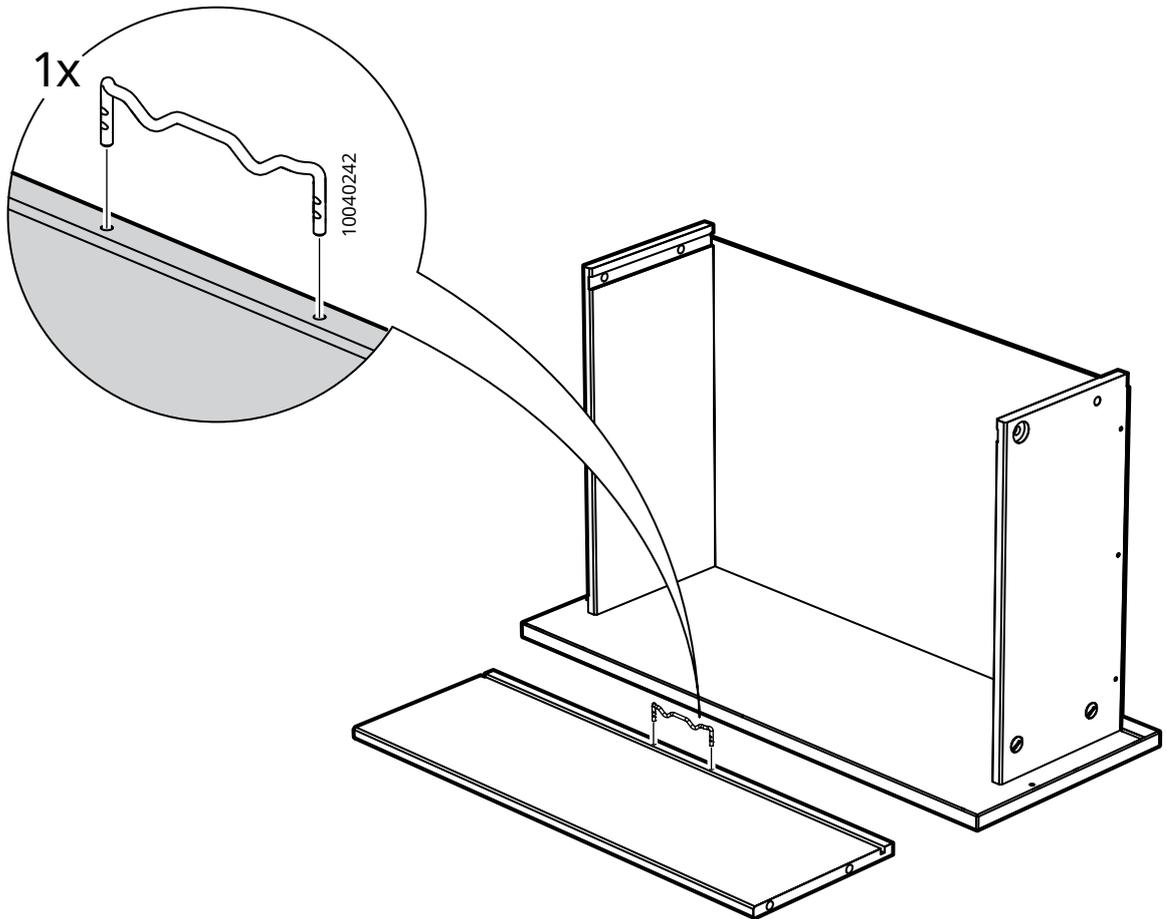


35

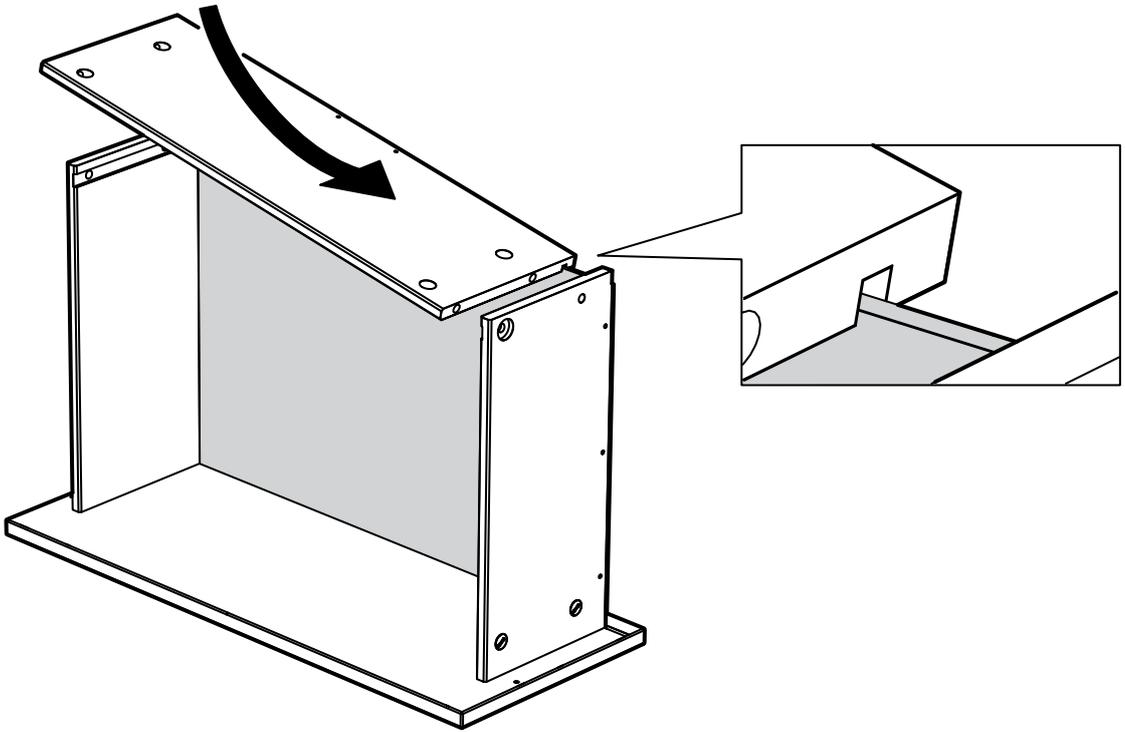


36


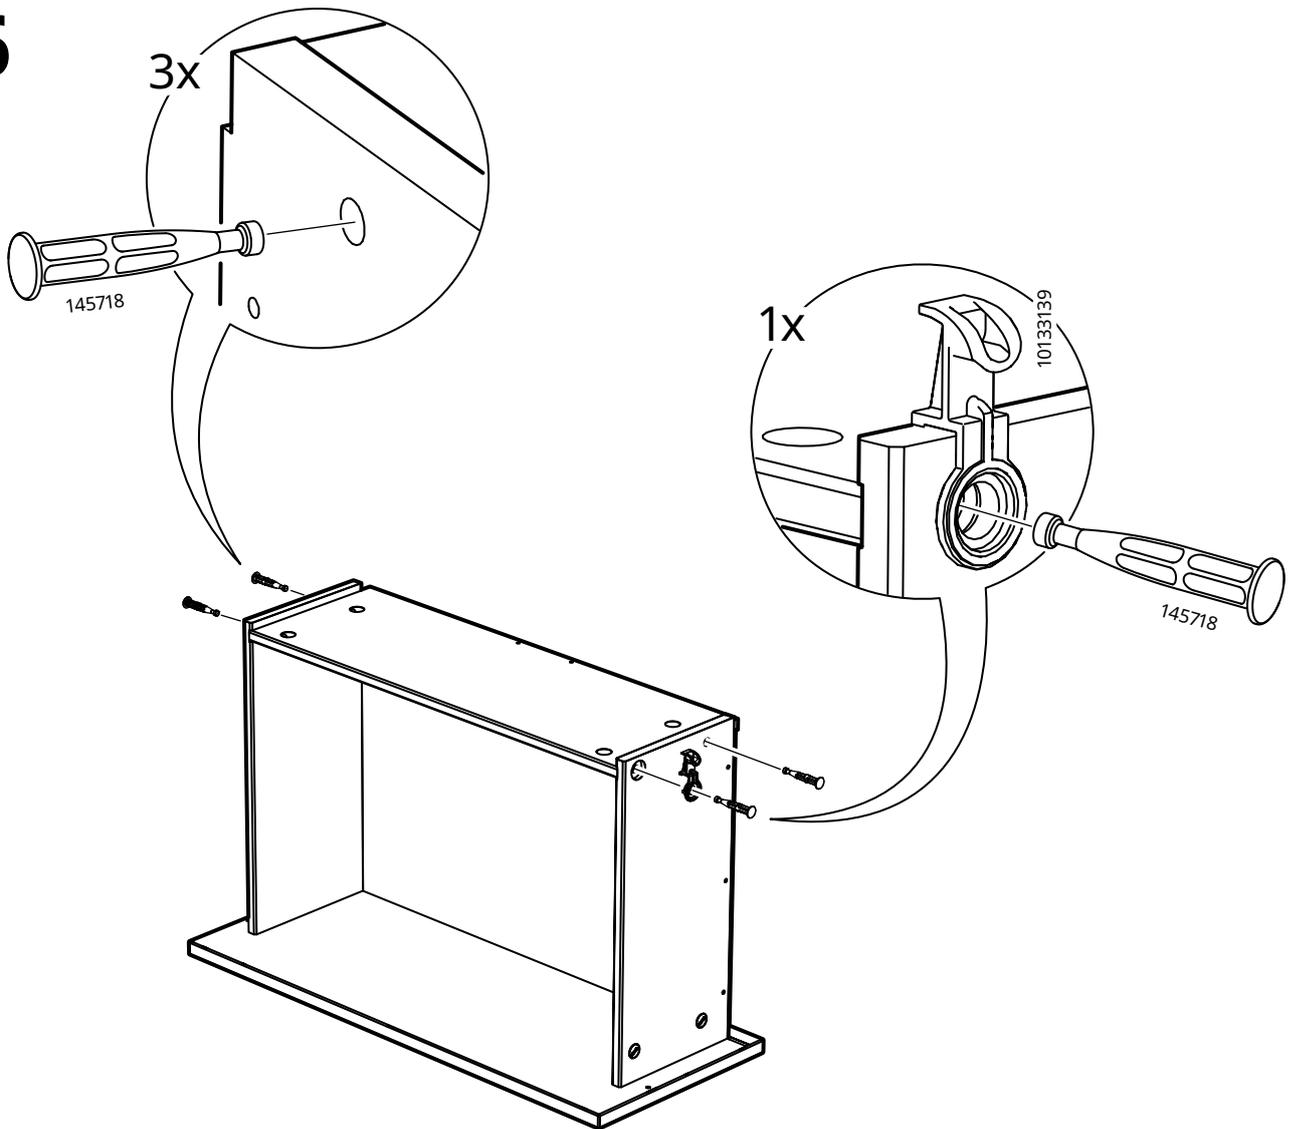


37

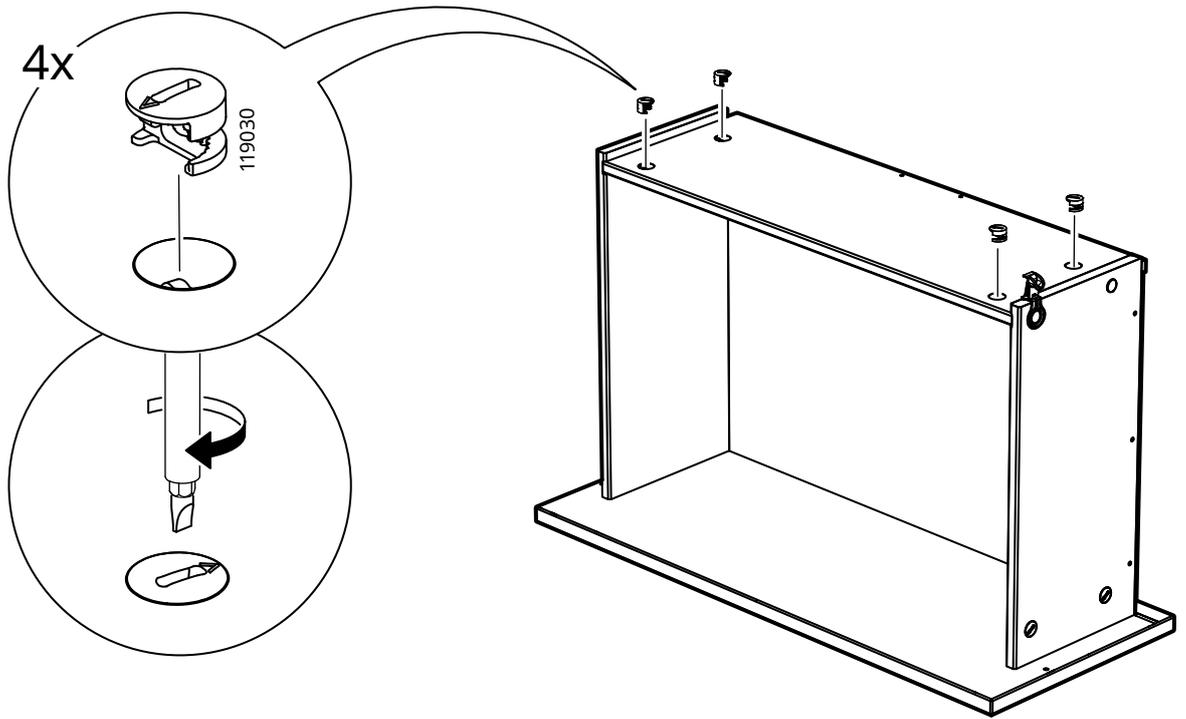


38


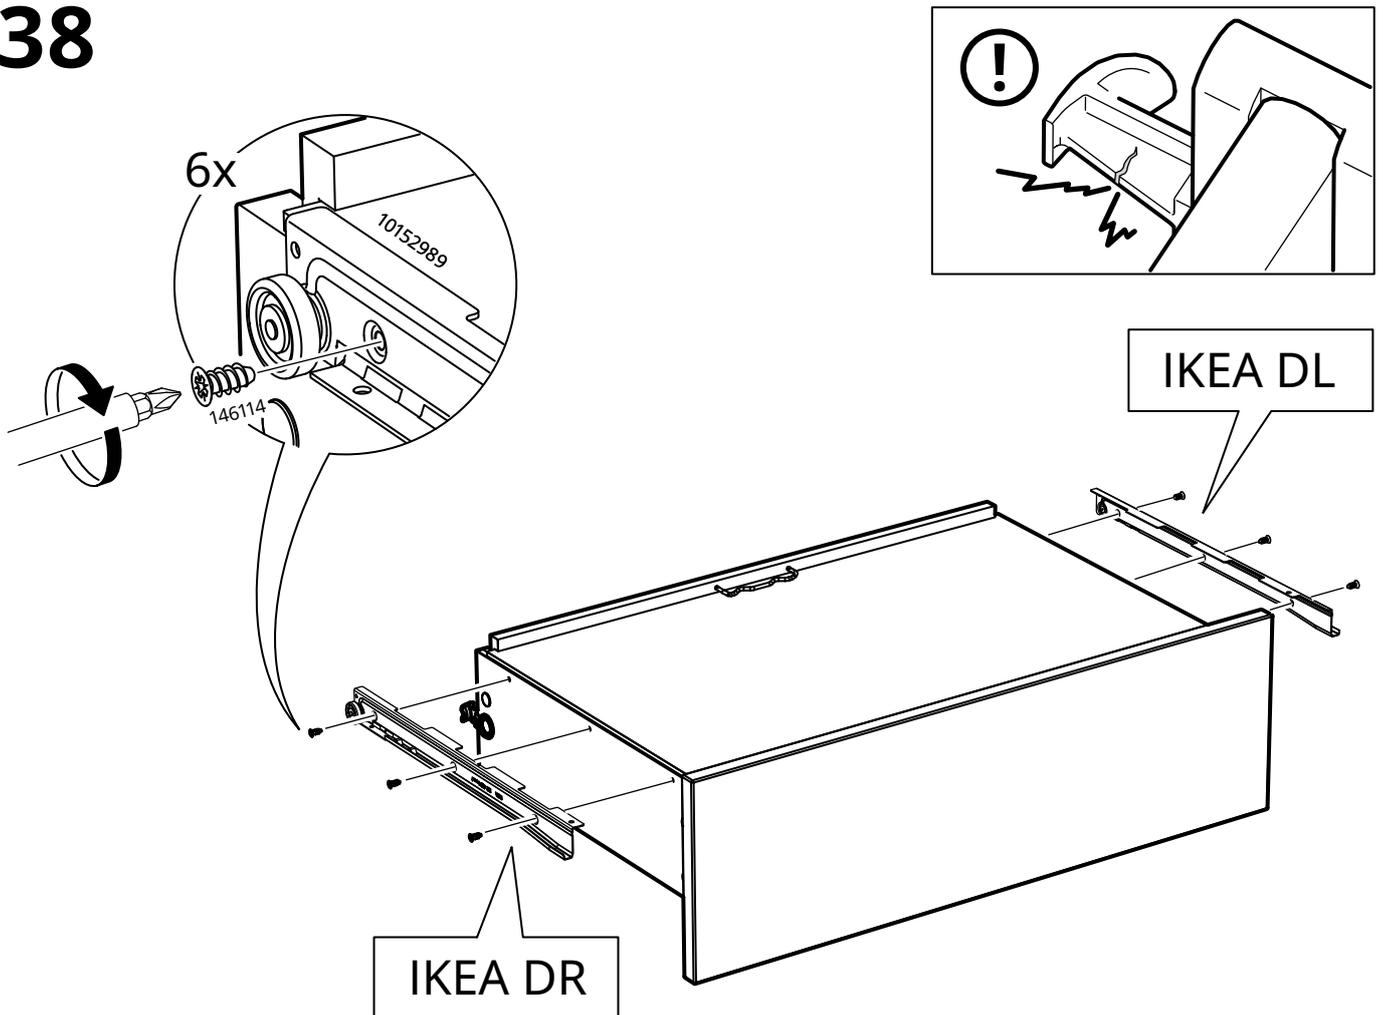


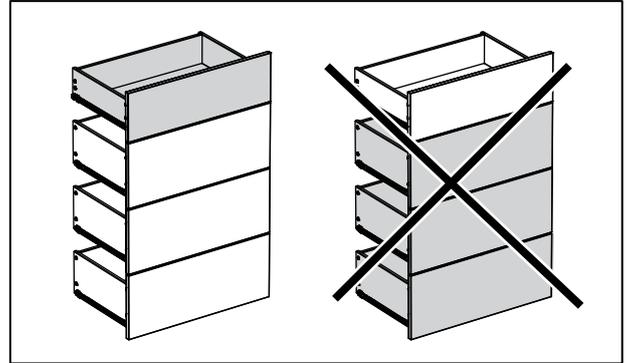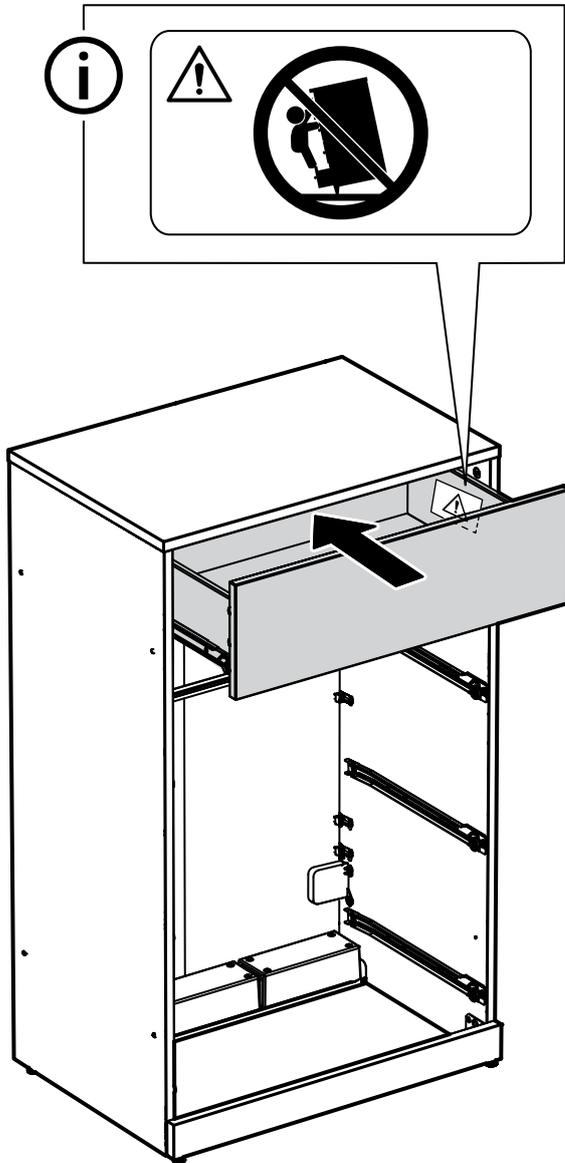



40

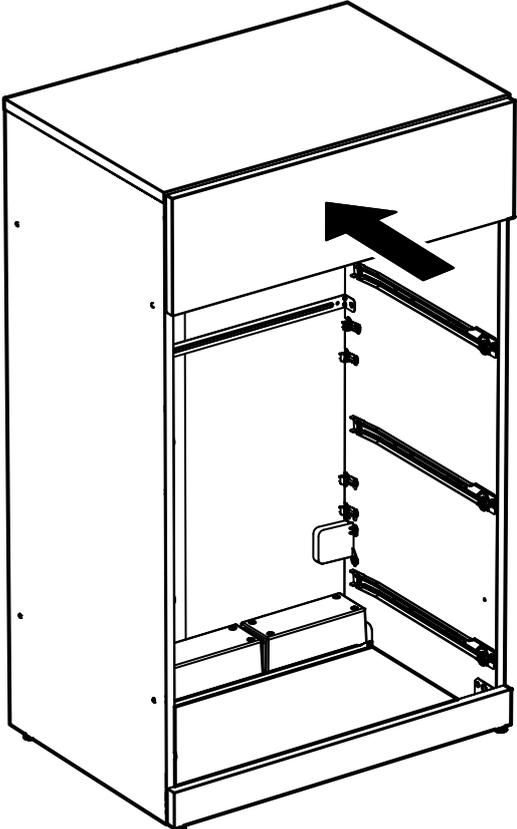

41

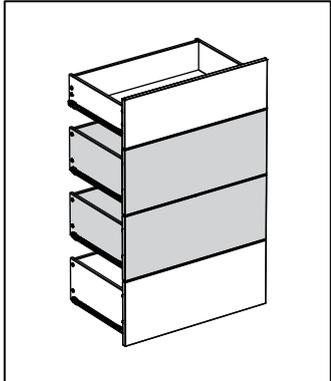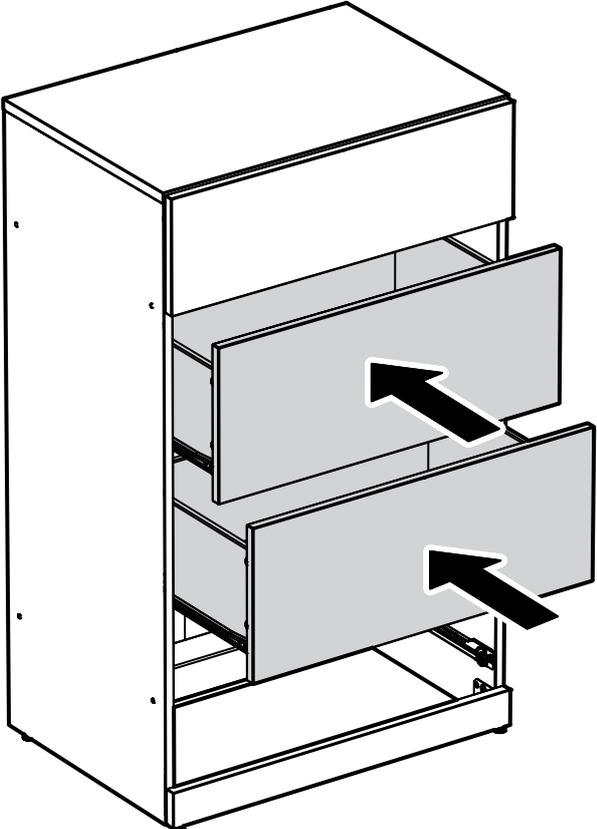

42

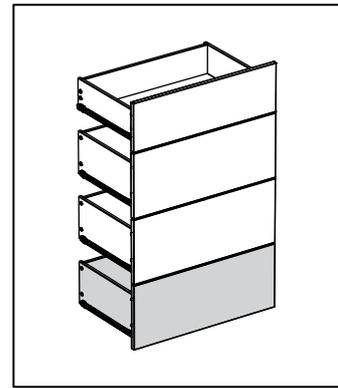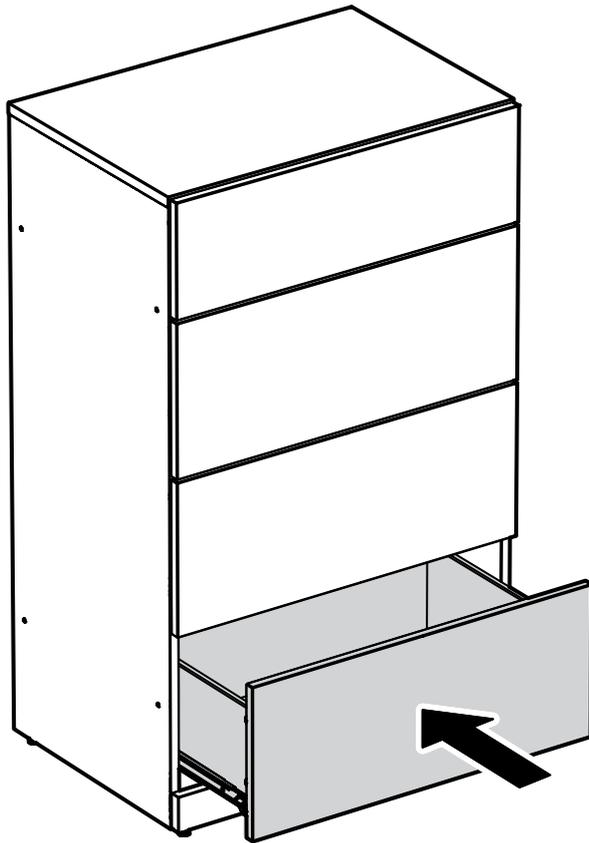

43

