 
 
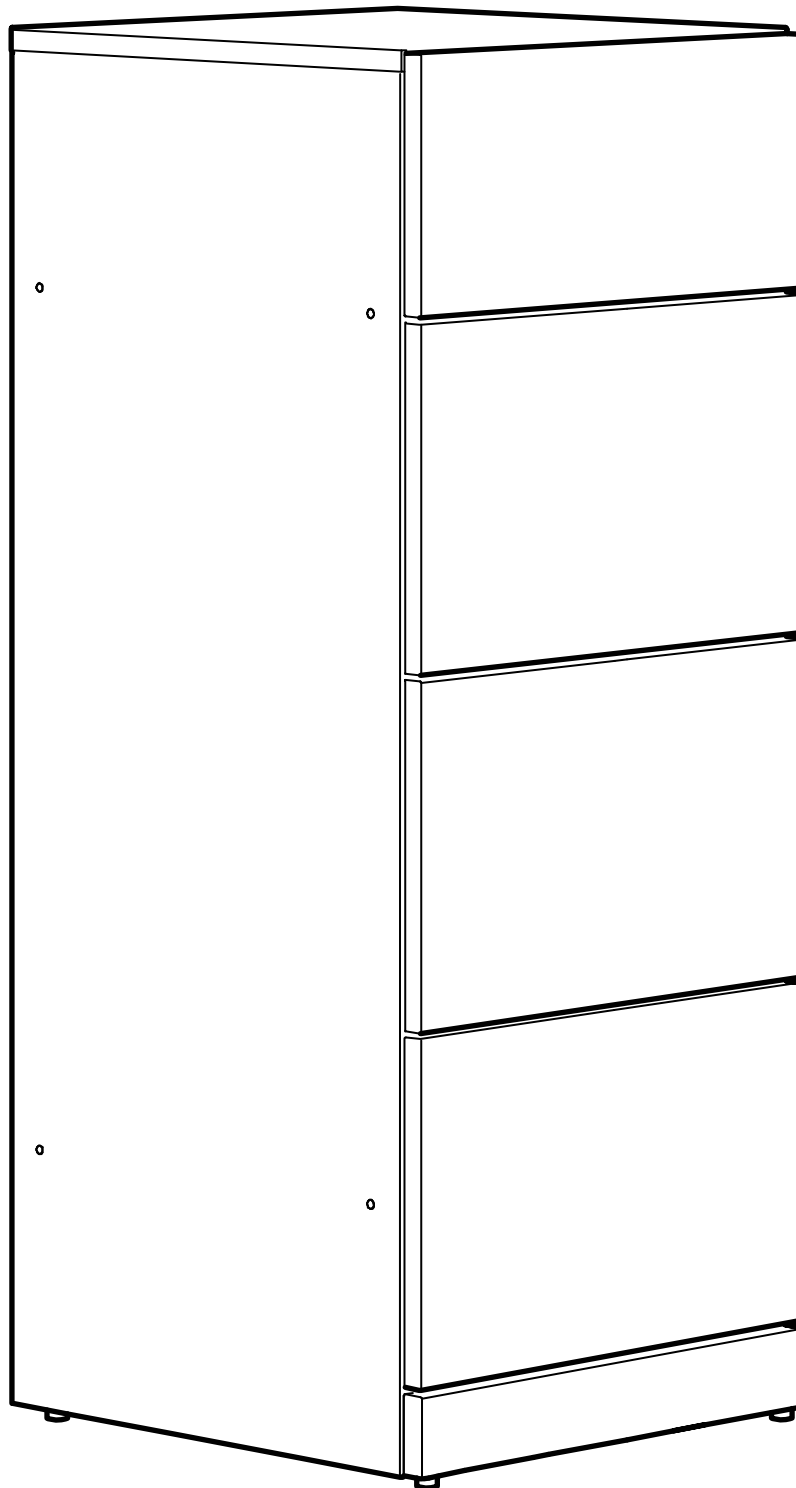 
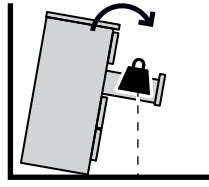 


LASTARE

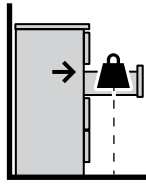

Design and Quality
IKEA of Sweden



English

WARNING!

Children have died from furniture tipover.

To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.


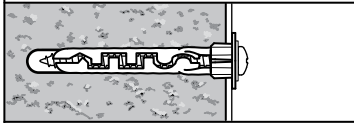 
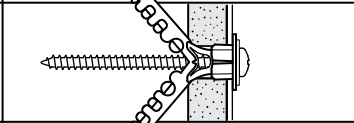 
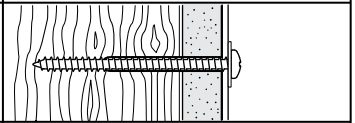 



NEVER open more than one drawer at a time.





DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.


Place heaviest items in the lowest drawers.

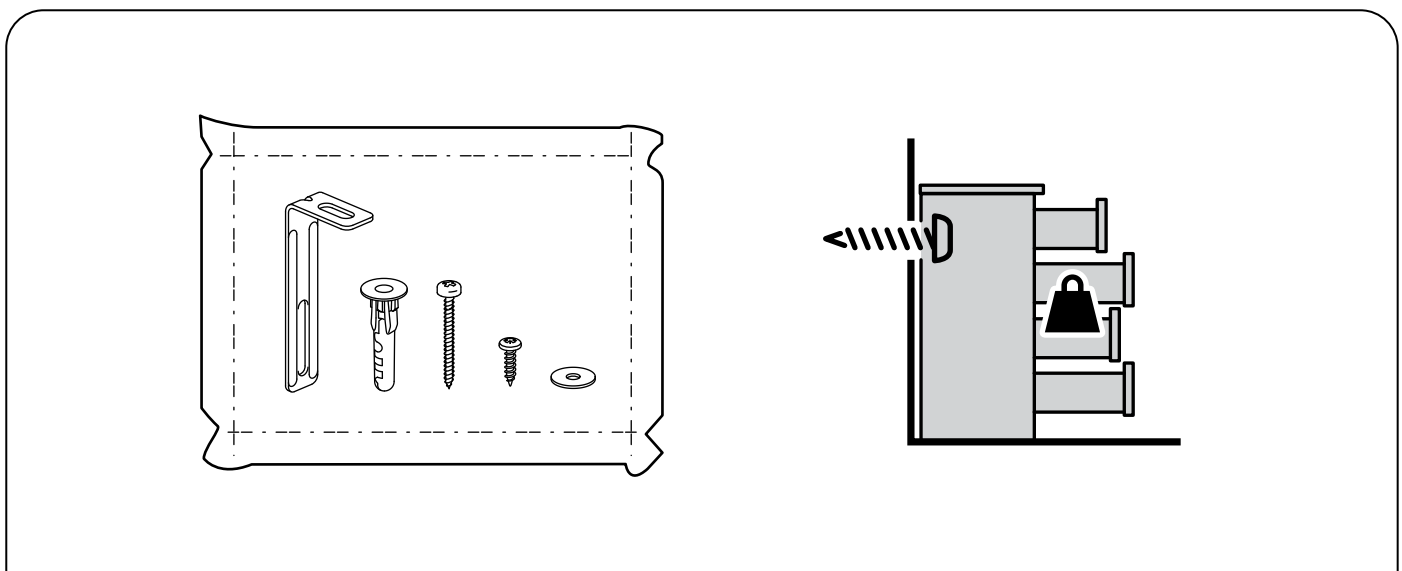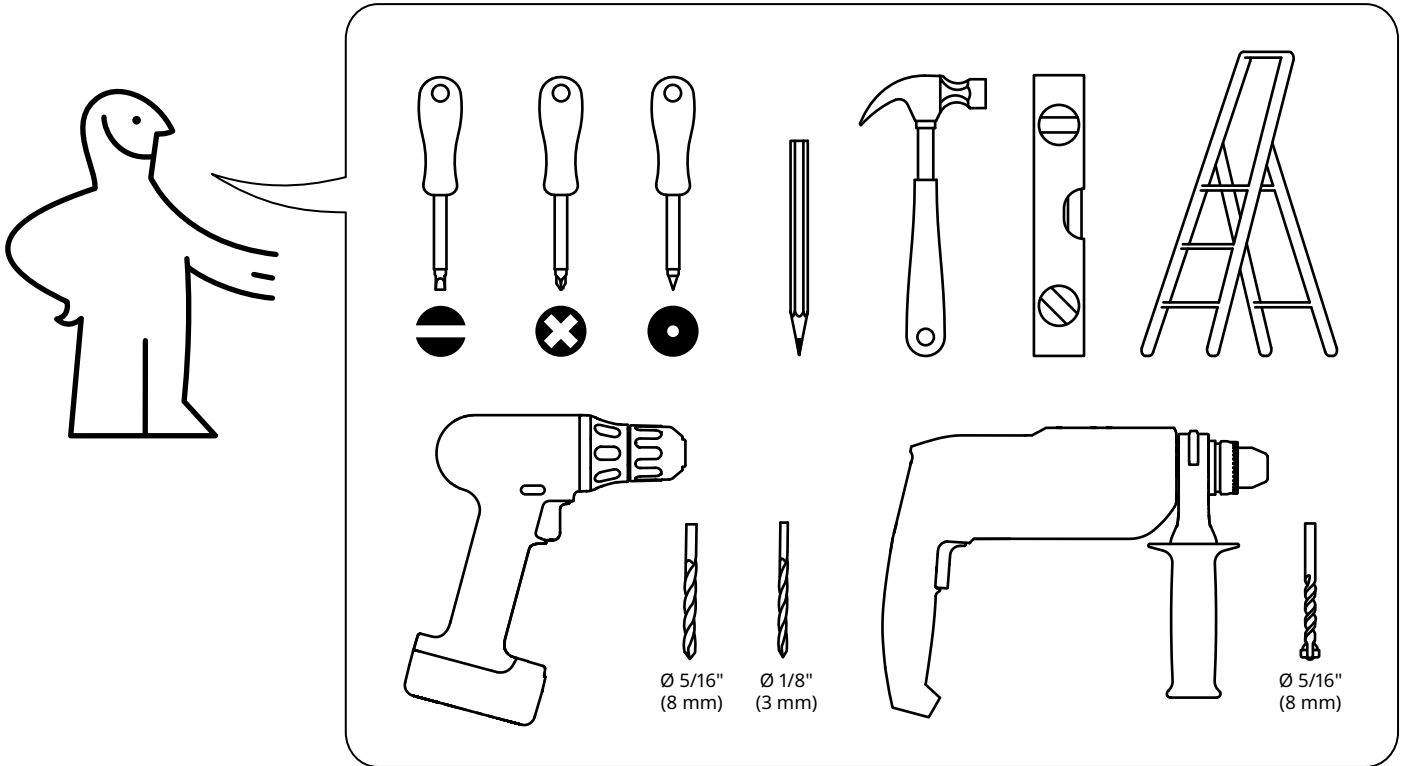 Read and follow each step of the instruction carefully.




	A	B	C
			
www.IKEA.com/secure-it	$\varnothing 8 \text{ mm}$ (5/16") 	$\varnothing 8 \text{ mm}$ (5/16") 	$\varnothing 3 \text{ mm}$ (1/8") 

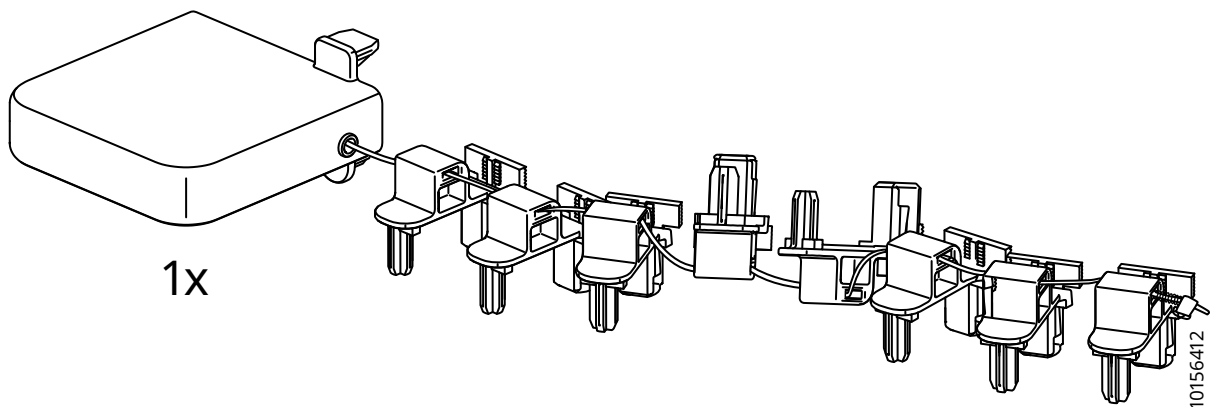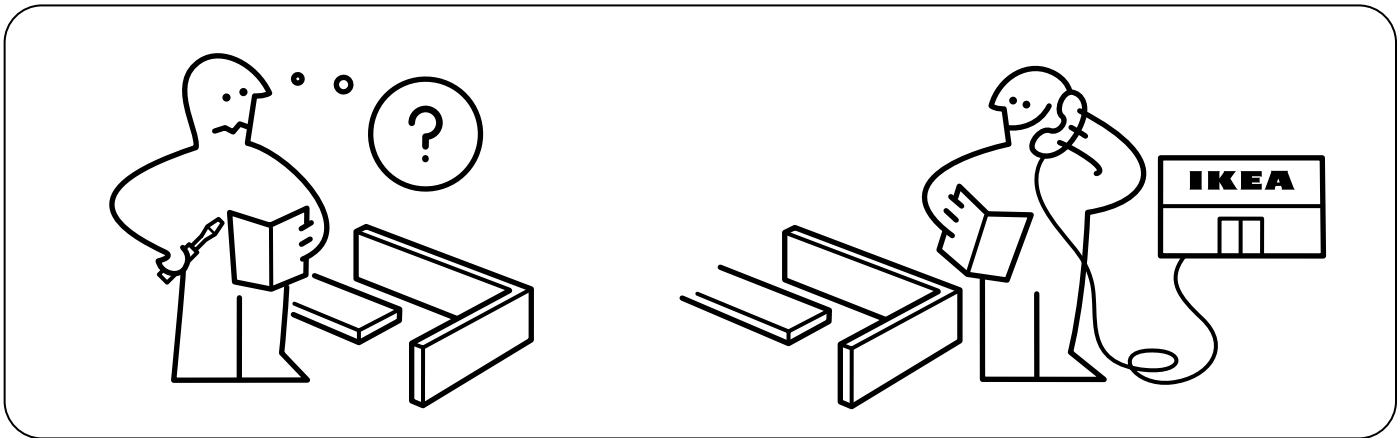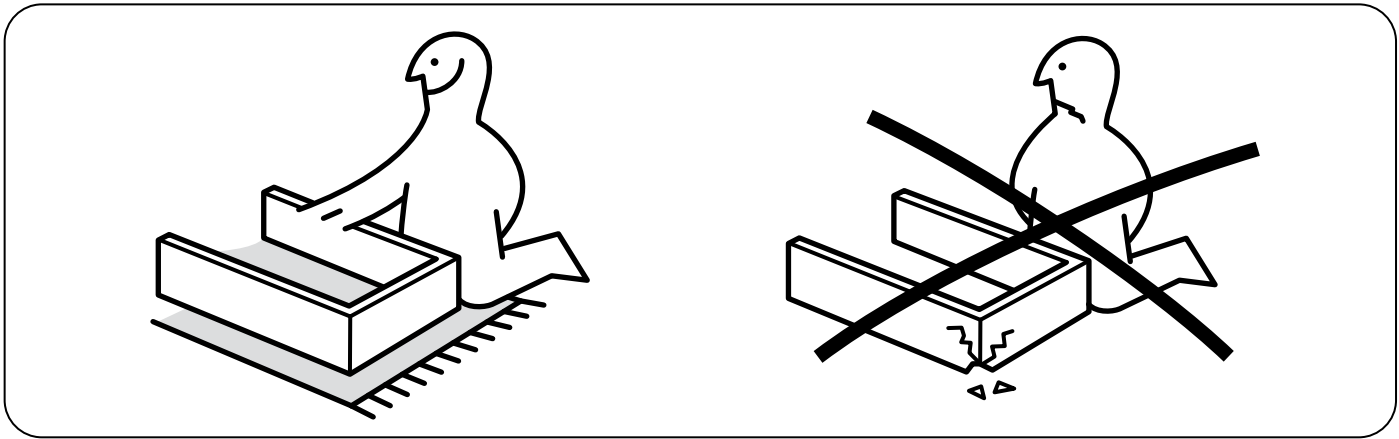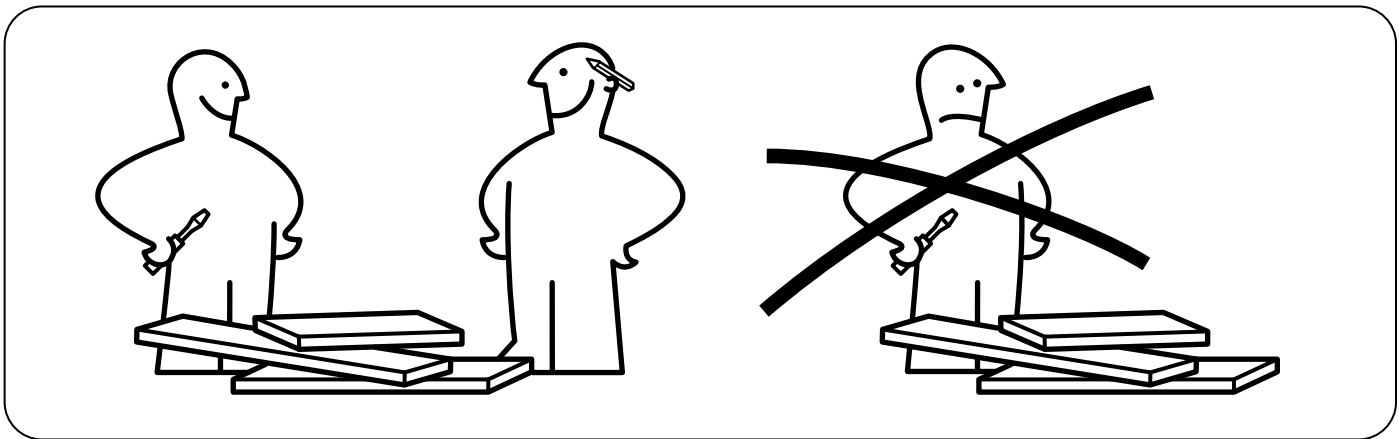    

 


145718

 16x



118331

 10x




130449

16x




101345

 20x




109060

 2x




10124042

 2x



109538

 2x



155669

8x



100359

3x



10048881

24x



146114

24x



 
10093082

8x



119252

10x

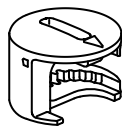


119030

32x



115339

 8x




10127151

2x




101449

 4x

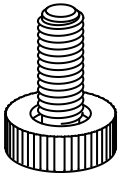


195312

 4x

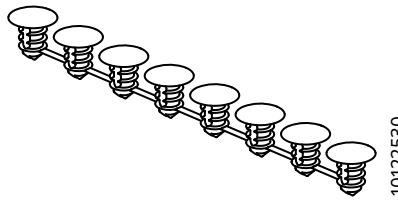


10122530

 1x

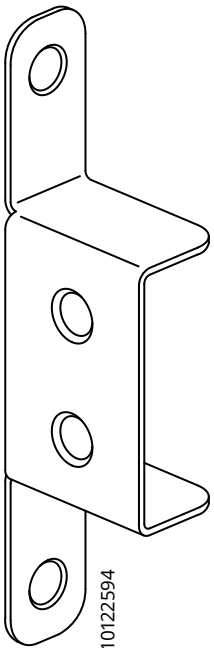


10122594

 1x

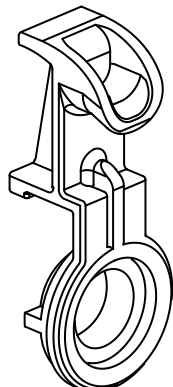



10133139

 4x



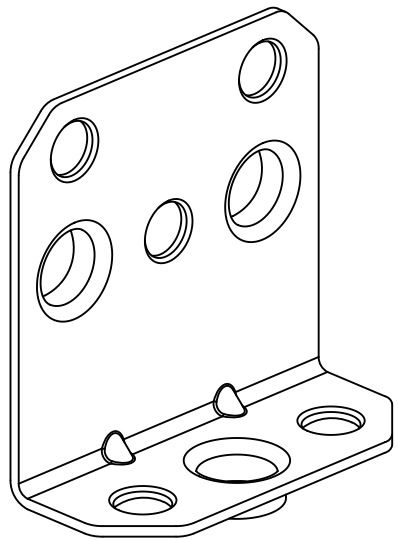


10038685


 
 
2x

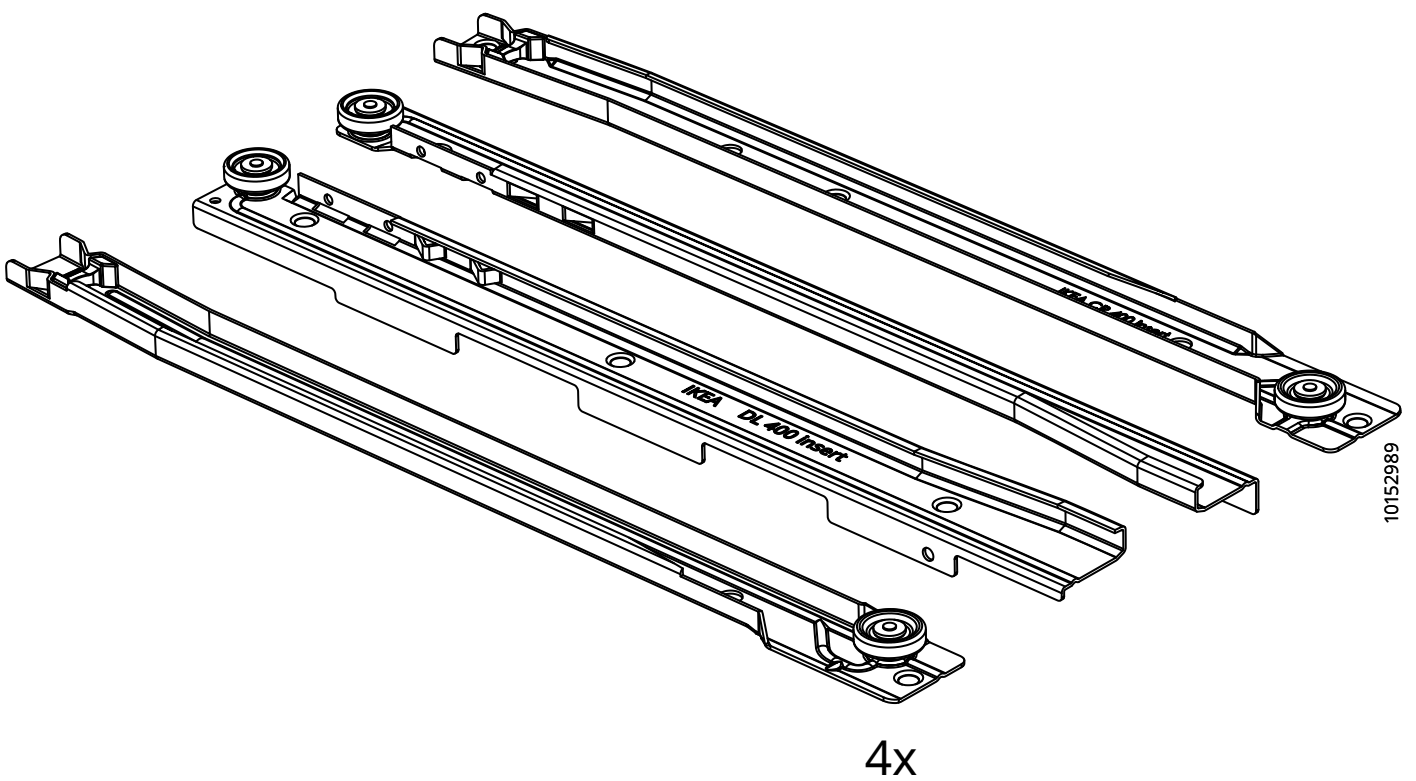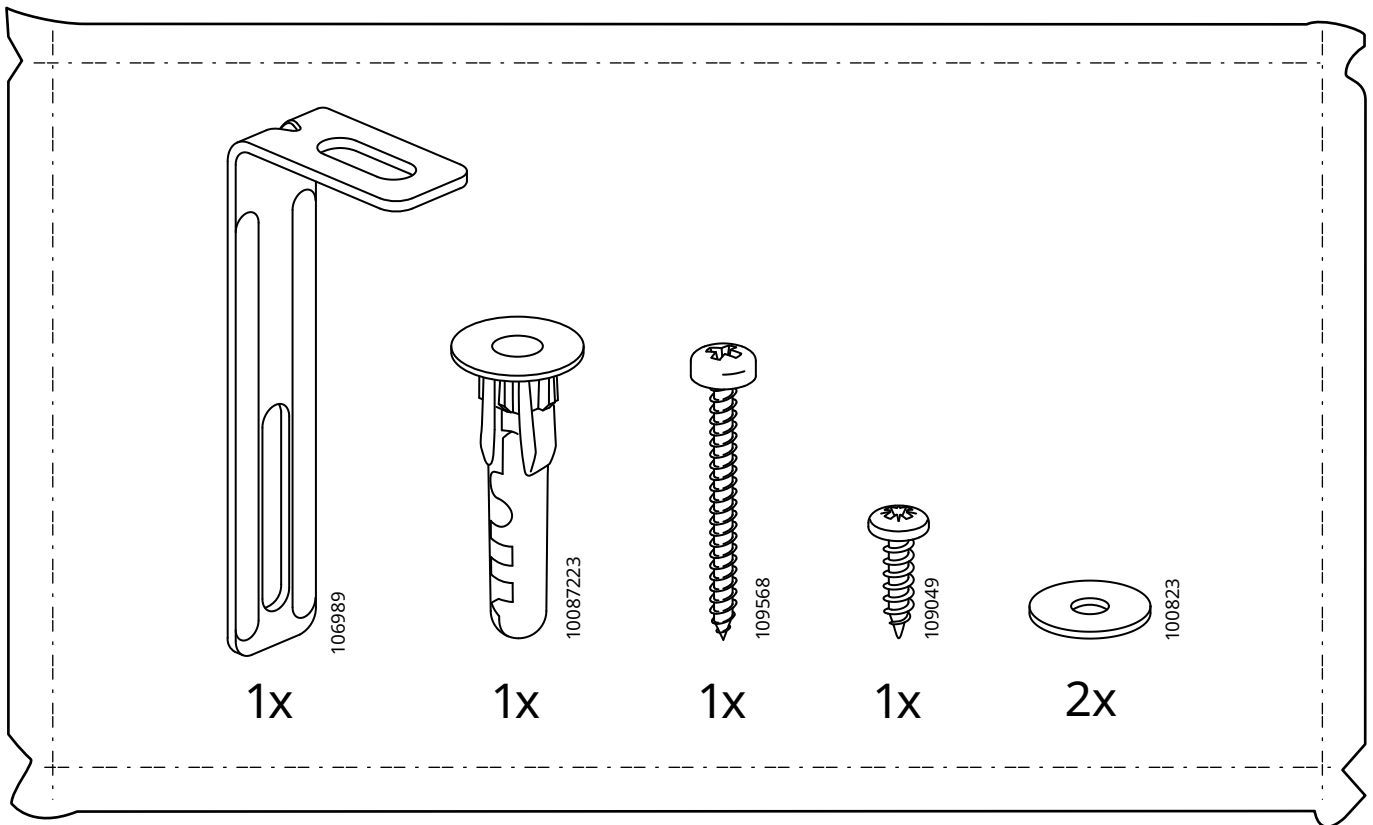


1

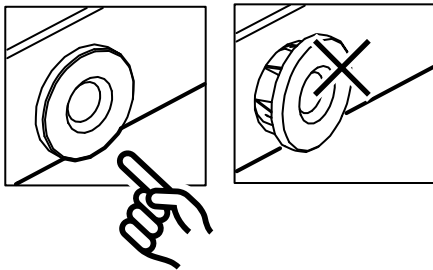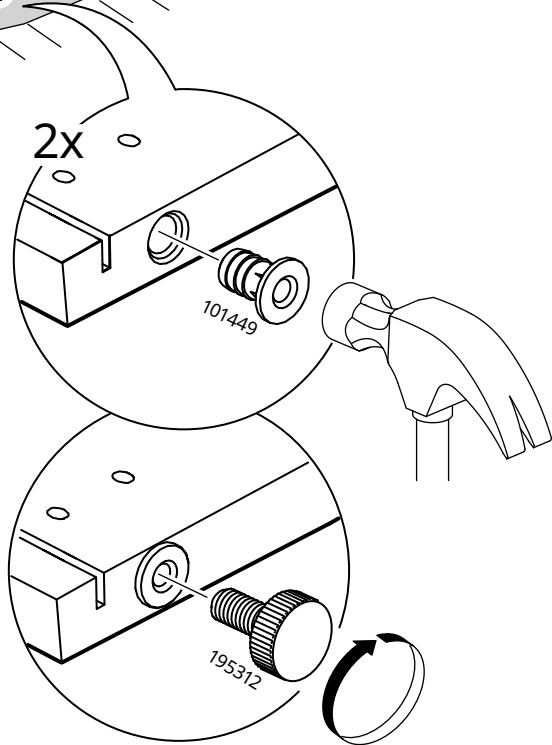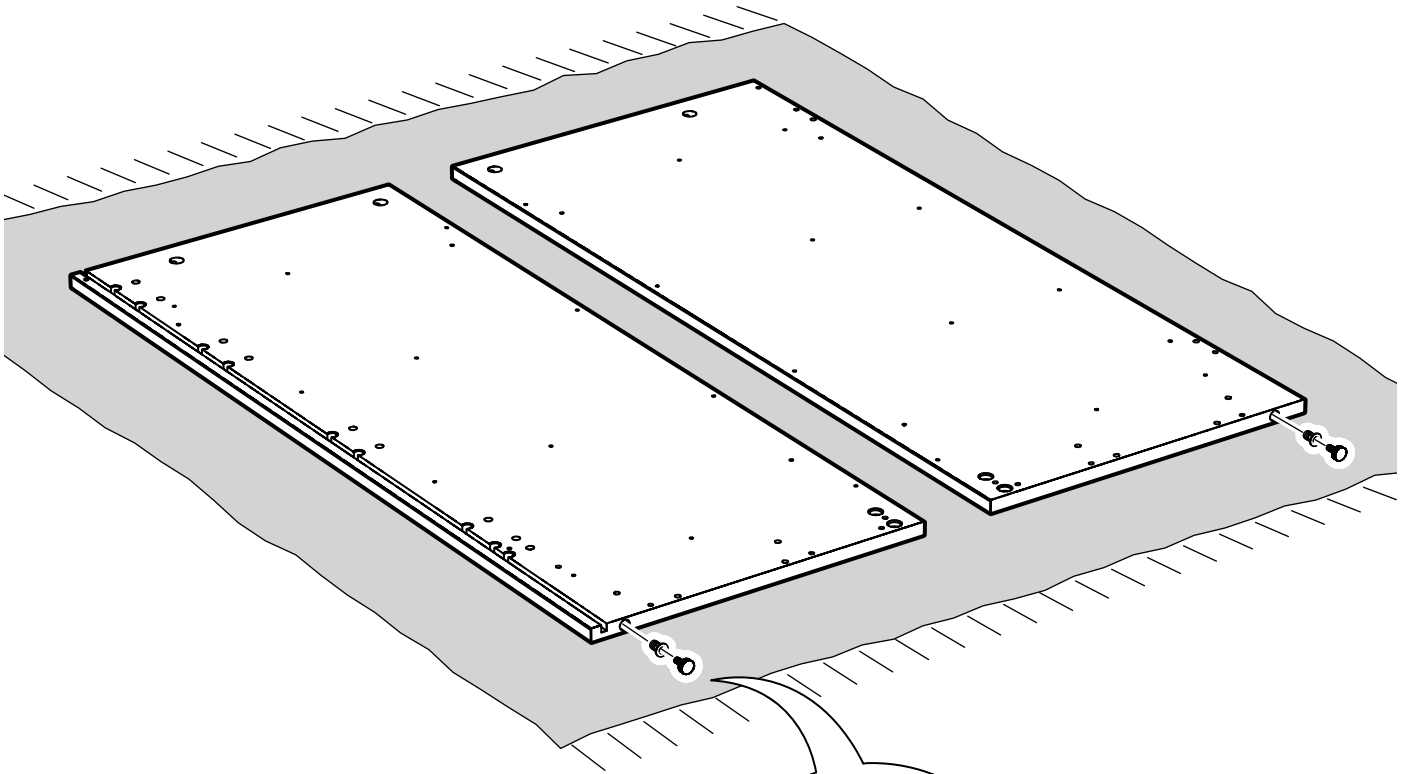   


2

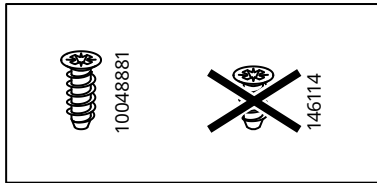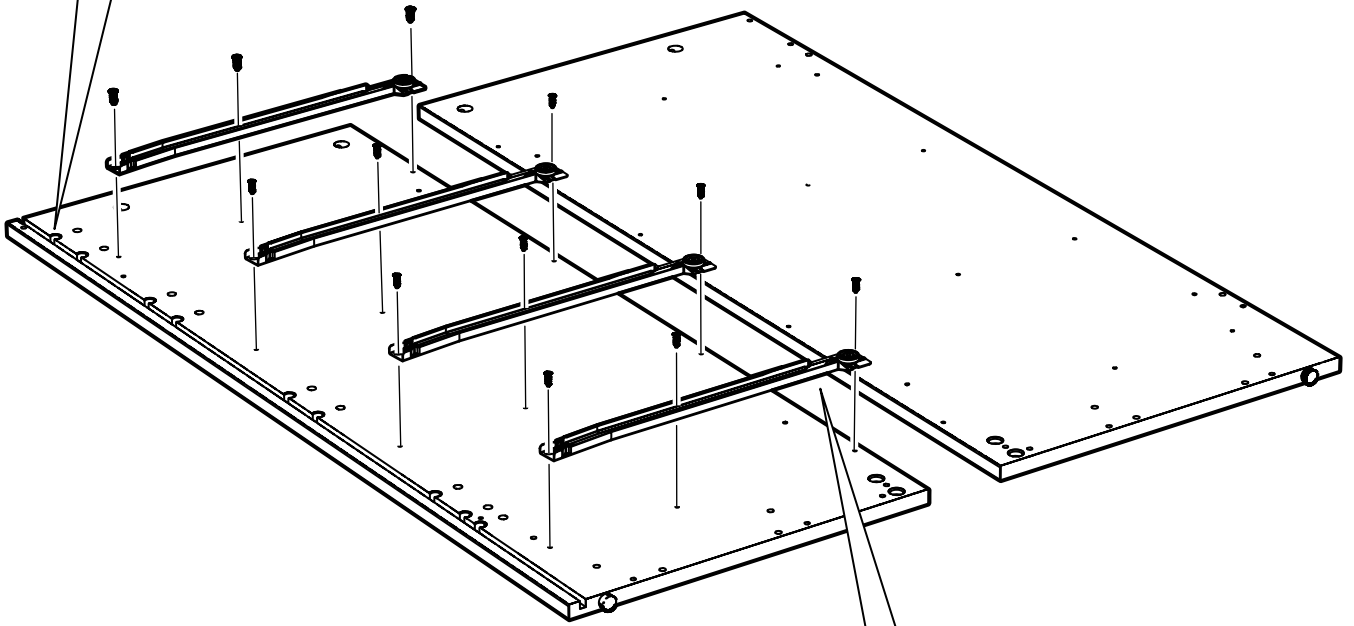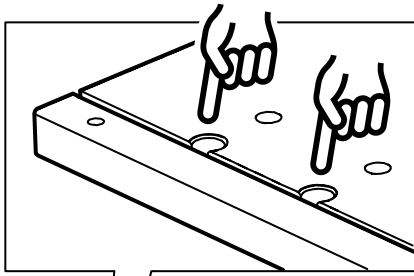   


4x

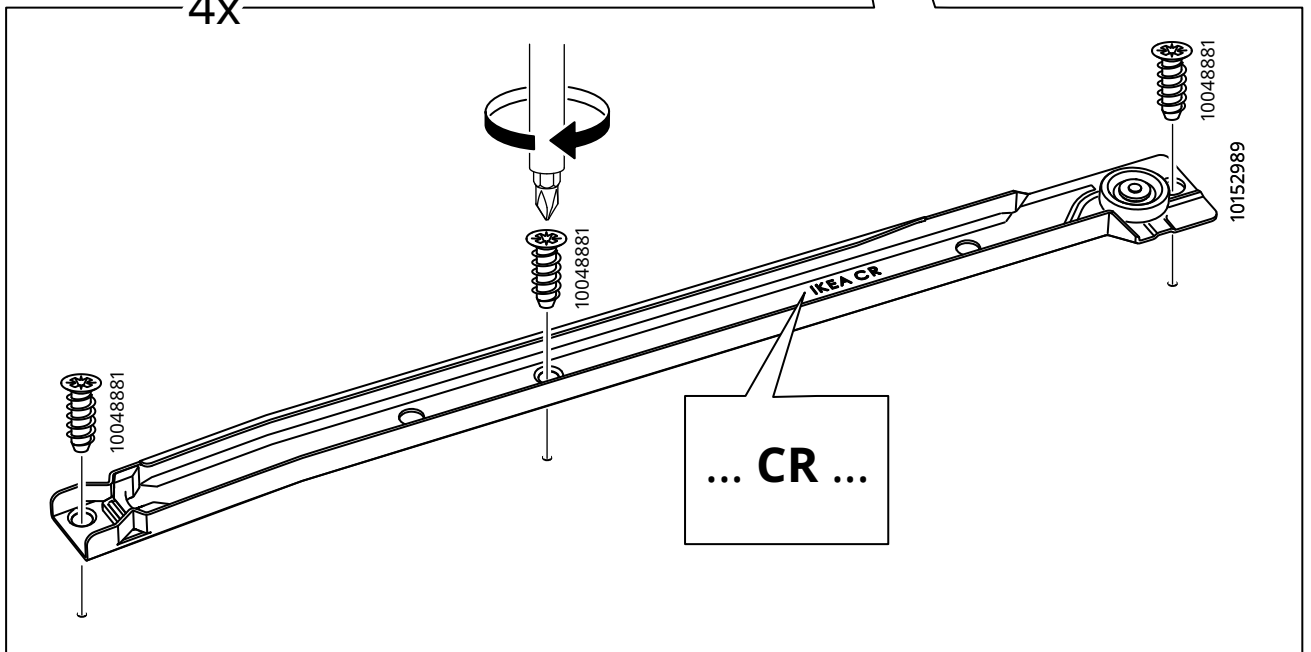 


4

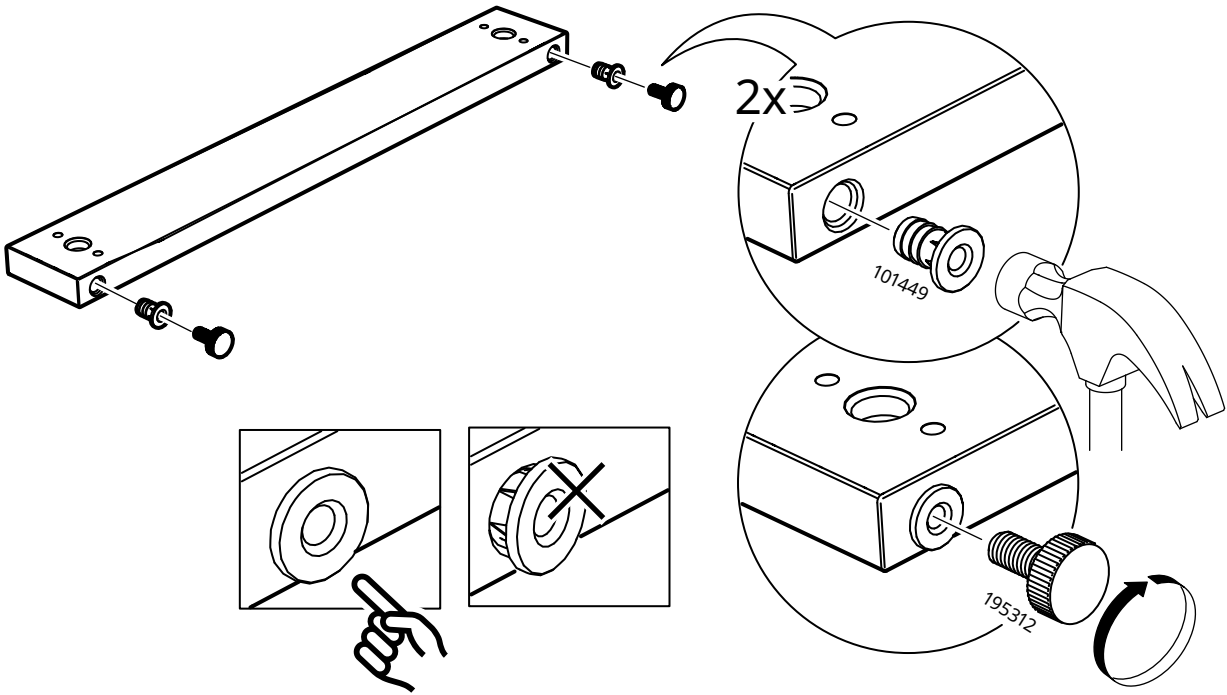 


5

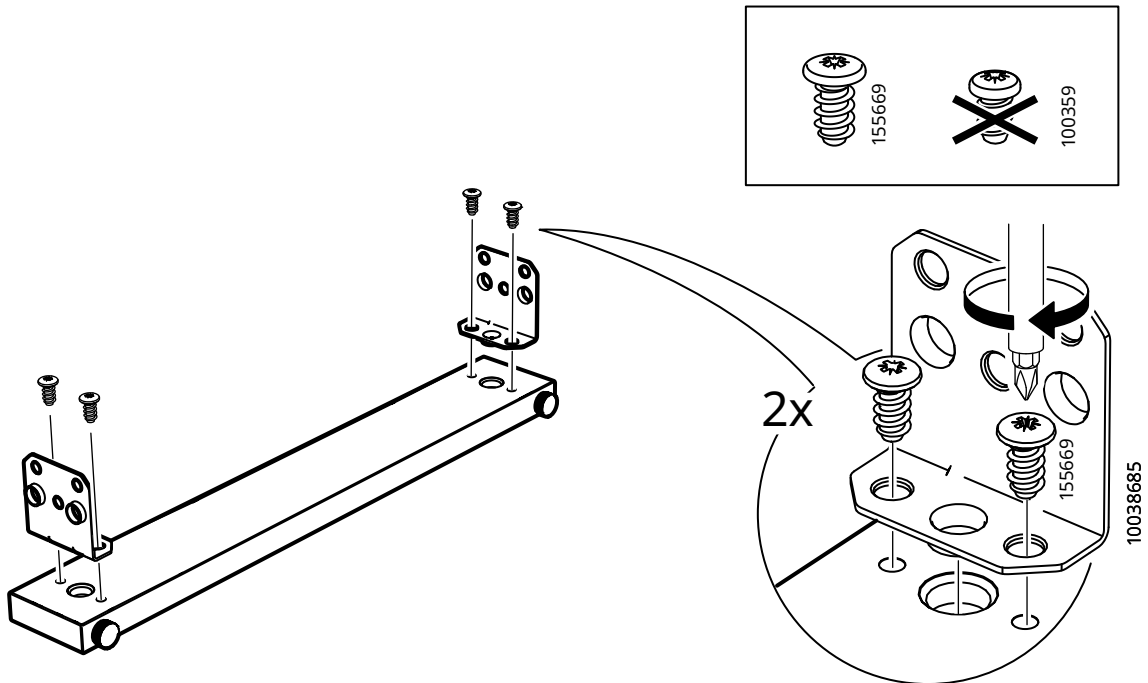 


6

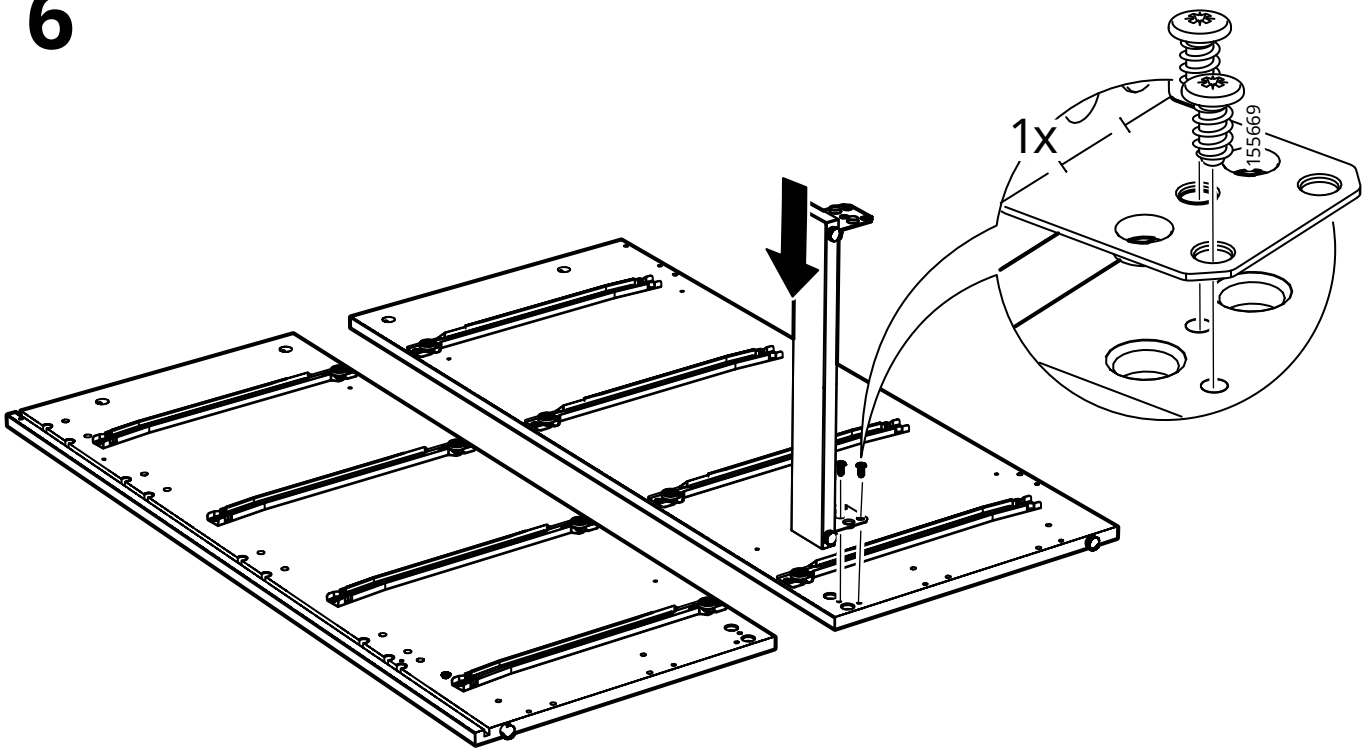 


7

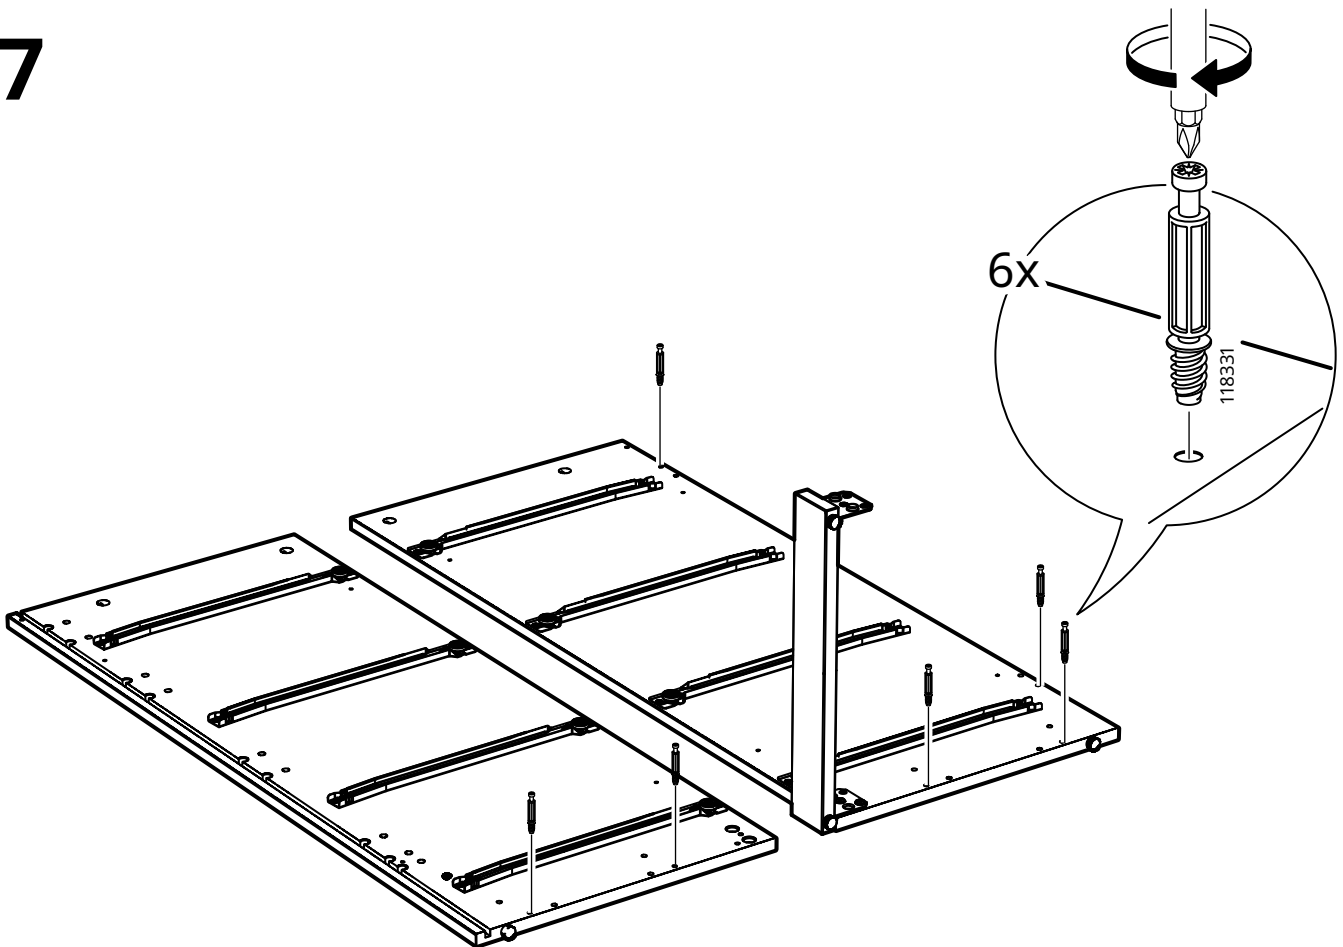 




8

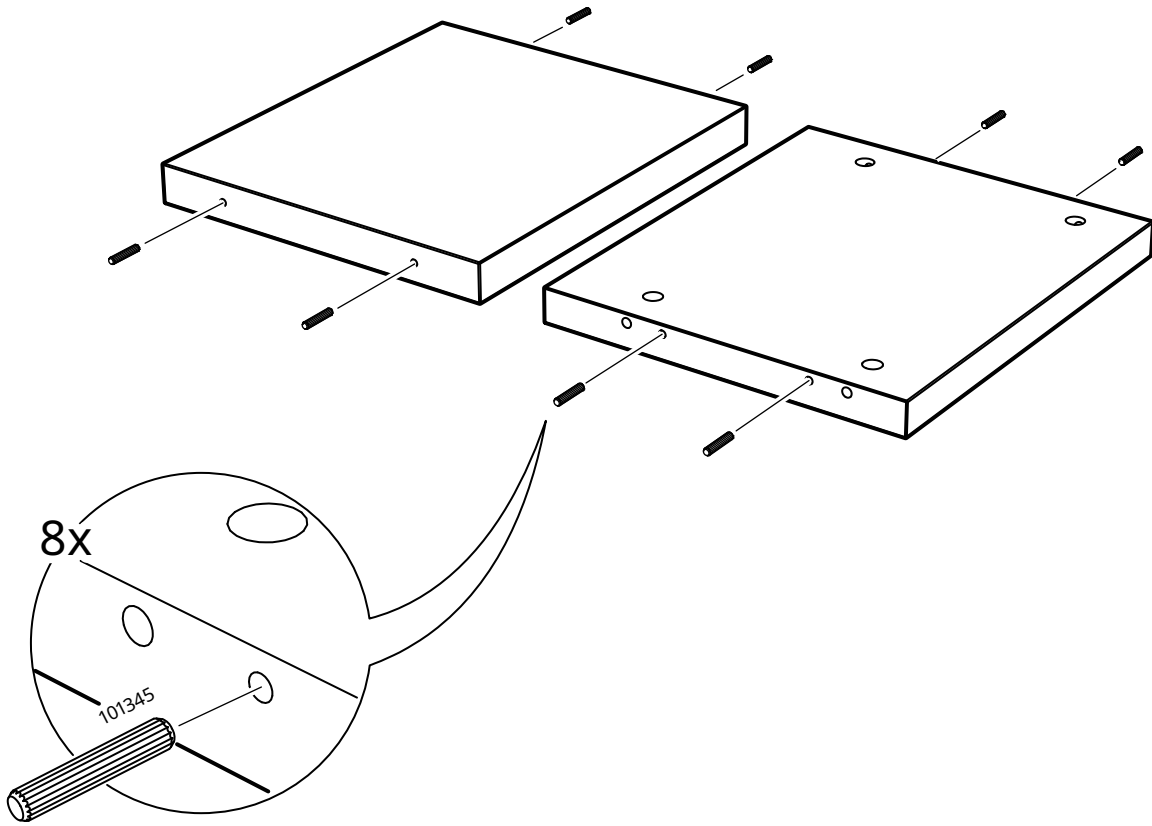 



9

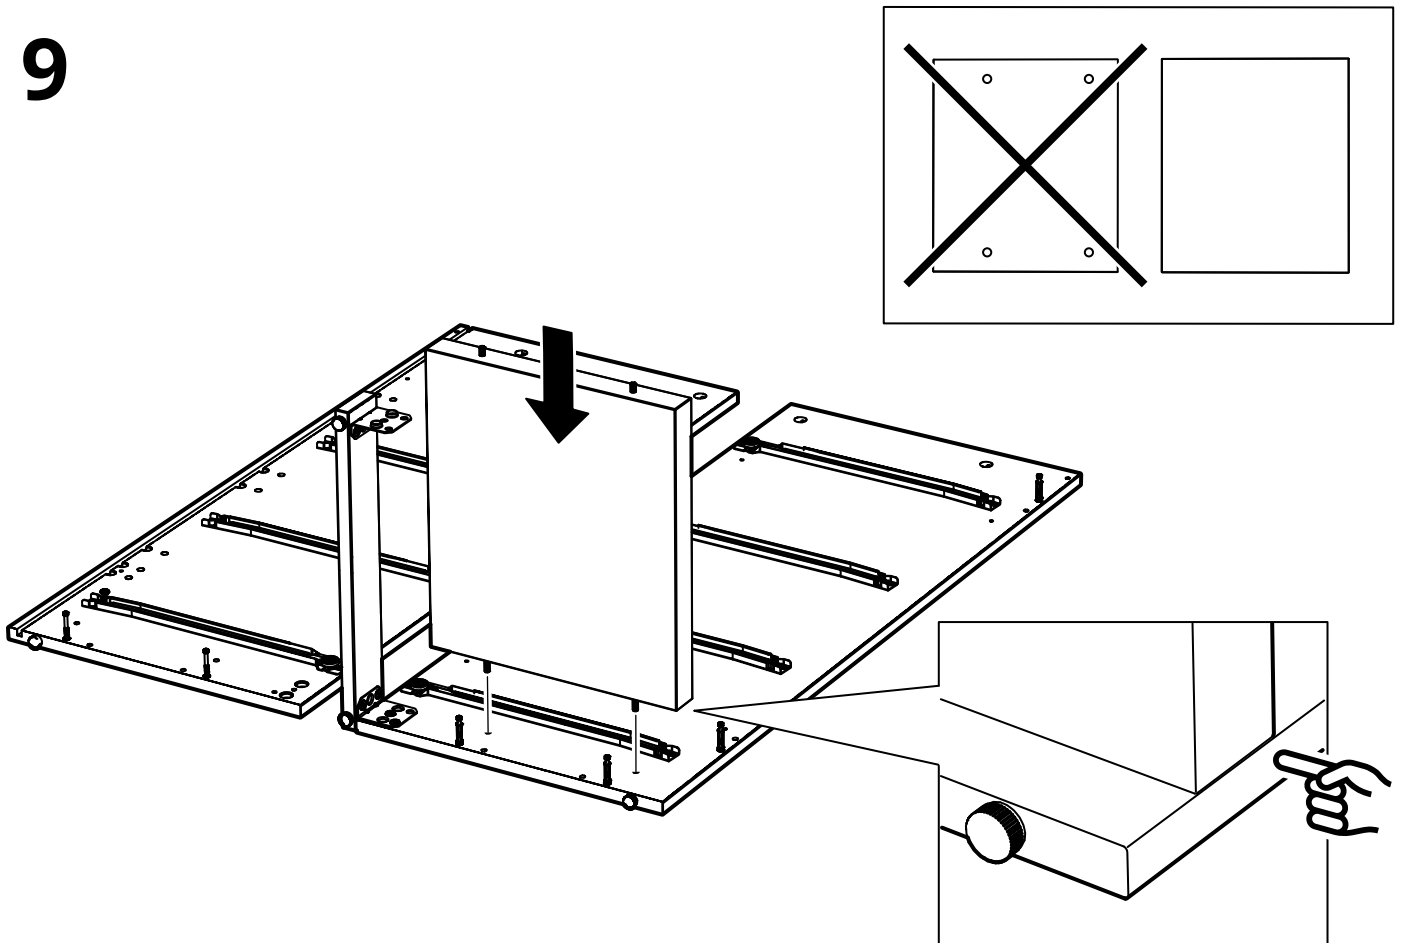 


10

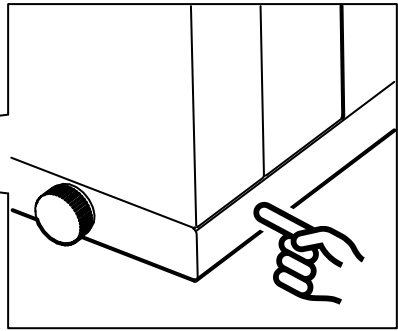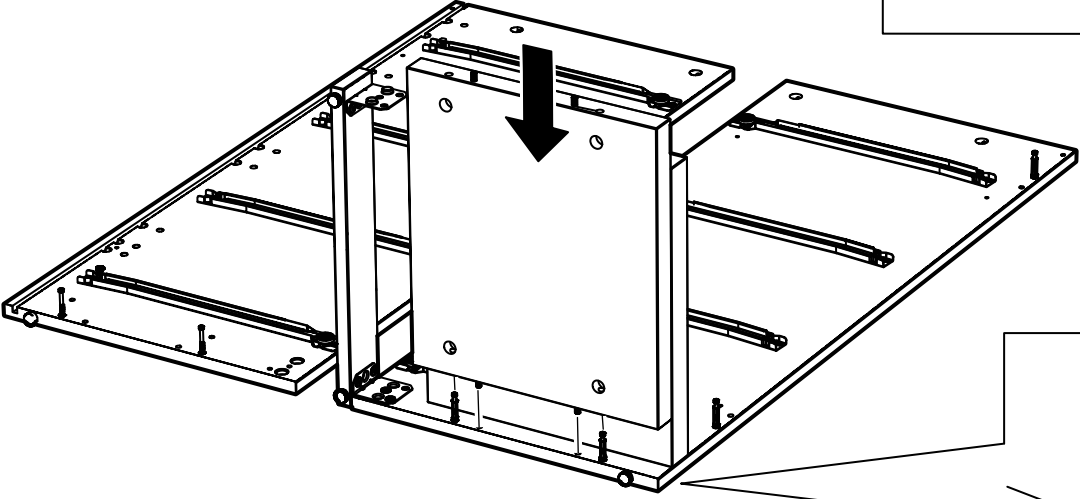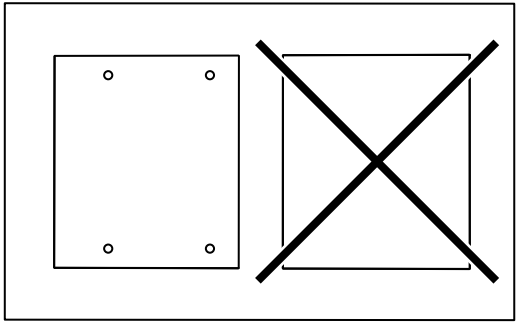   


11

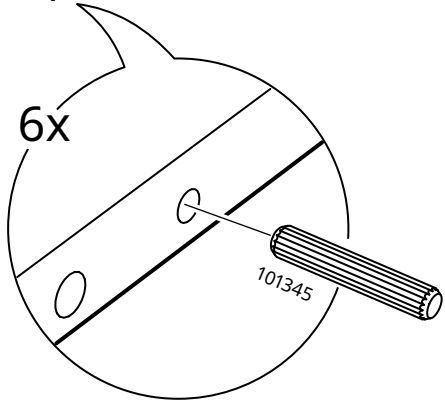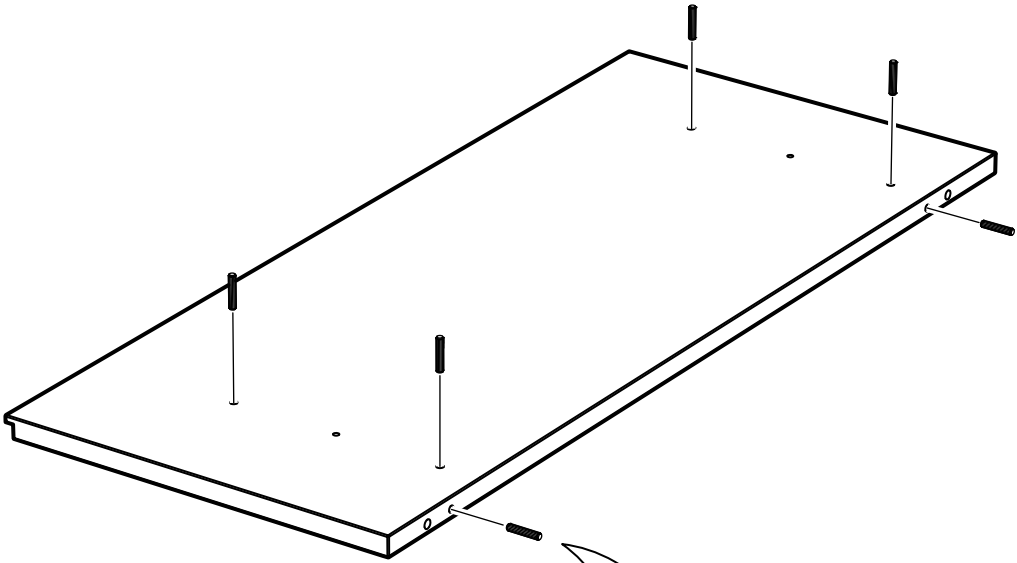  


12

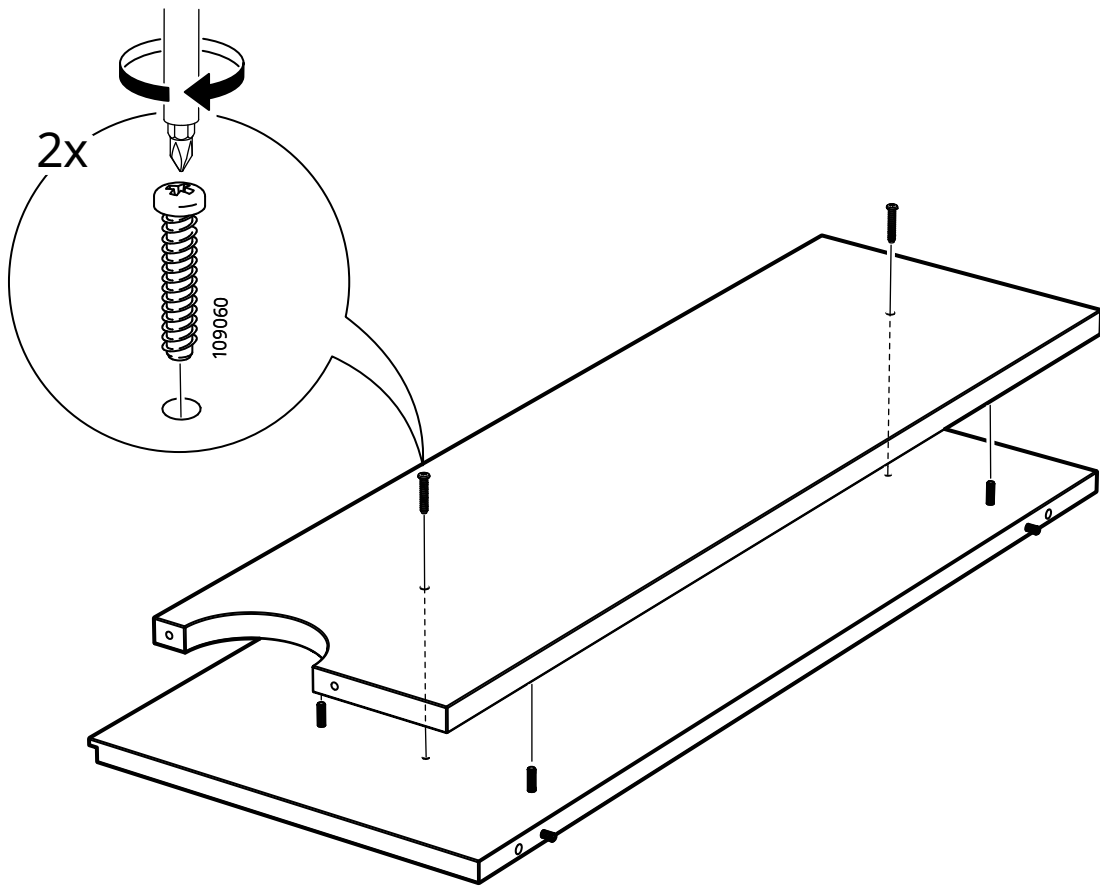 


13

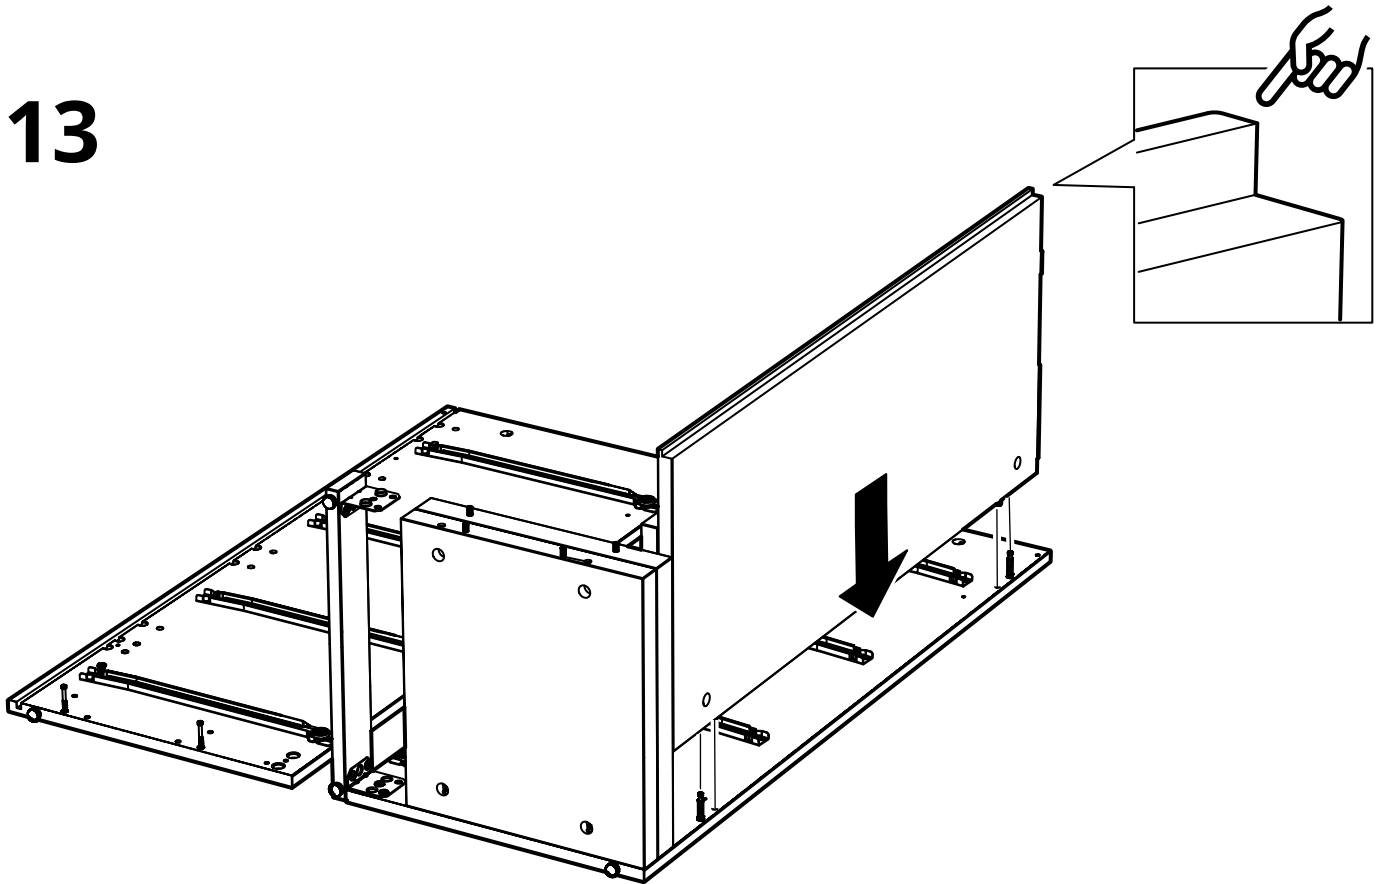 


14

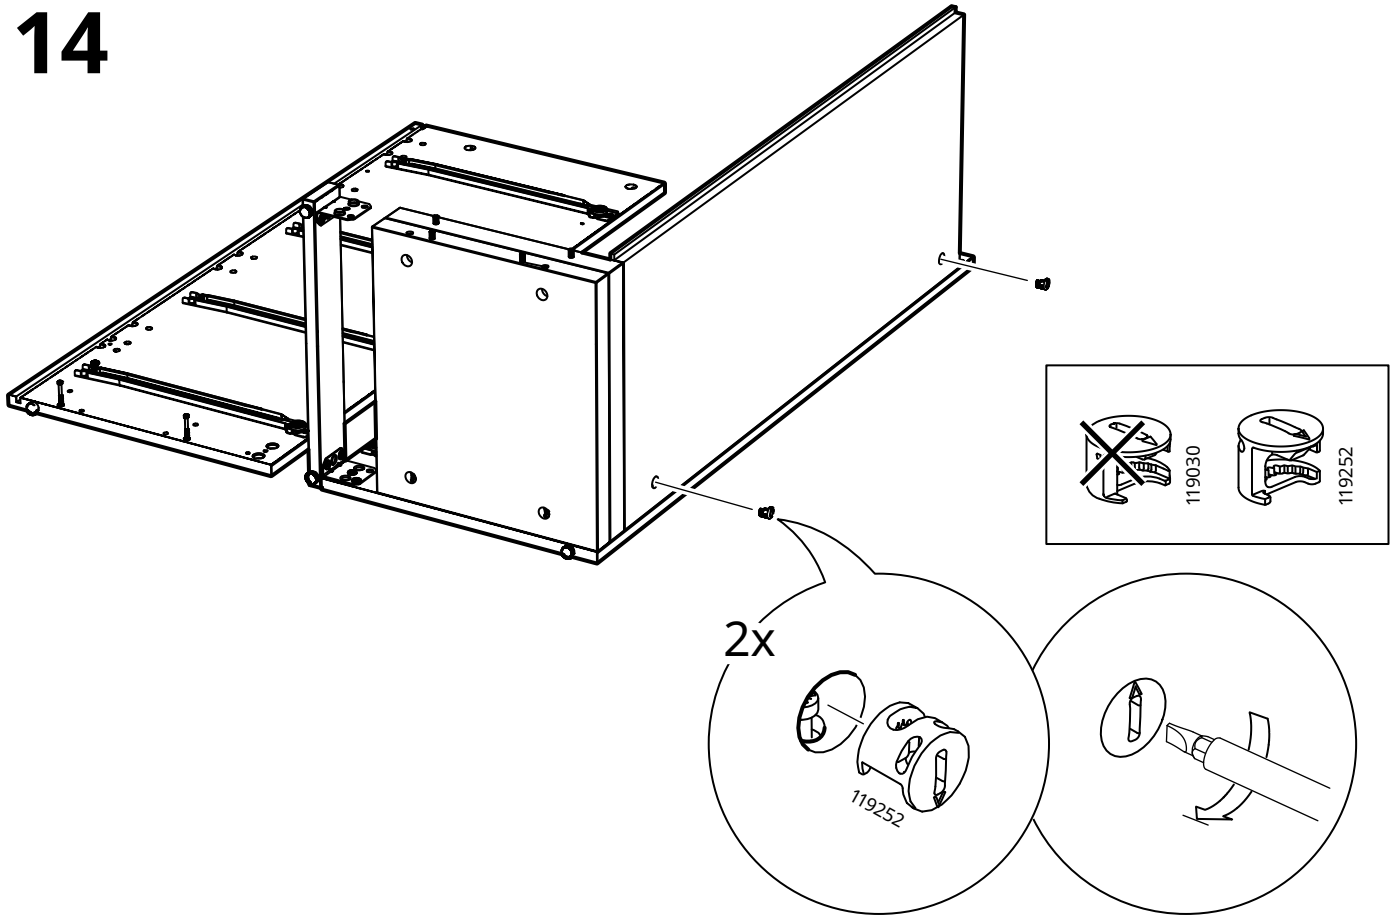 


15

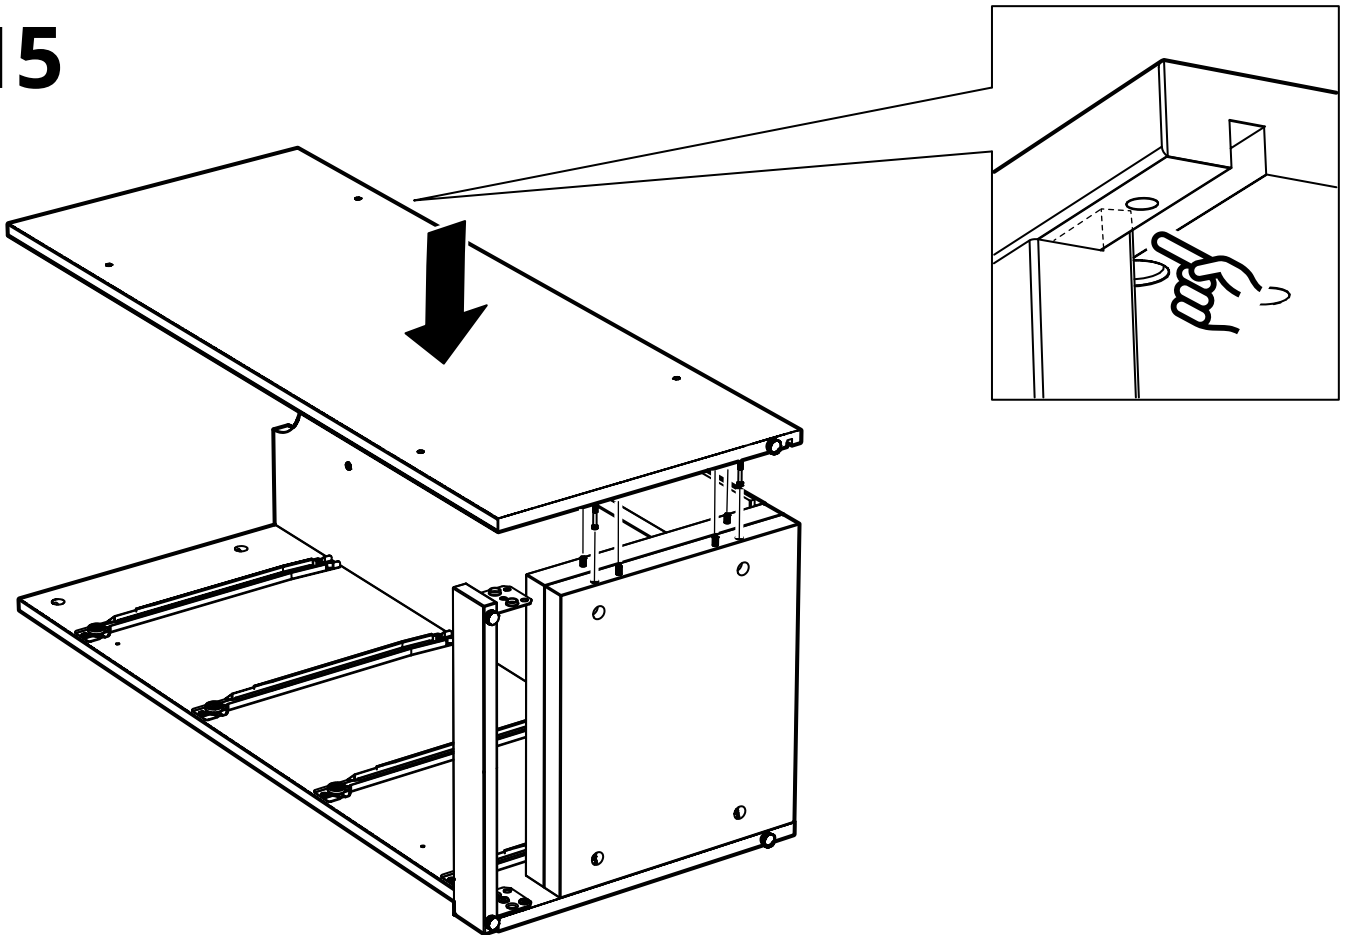 


16

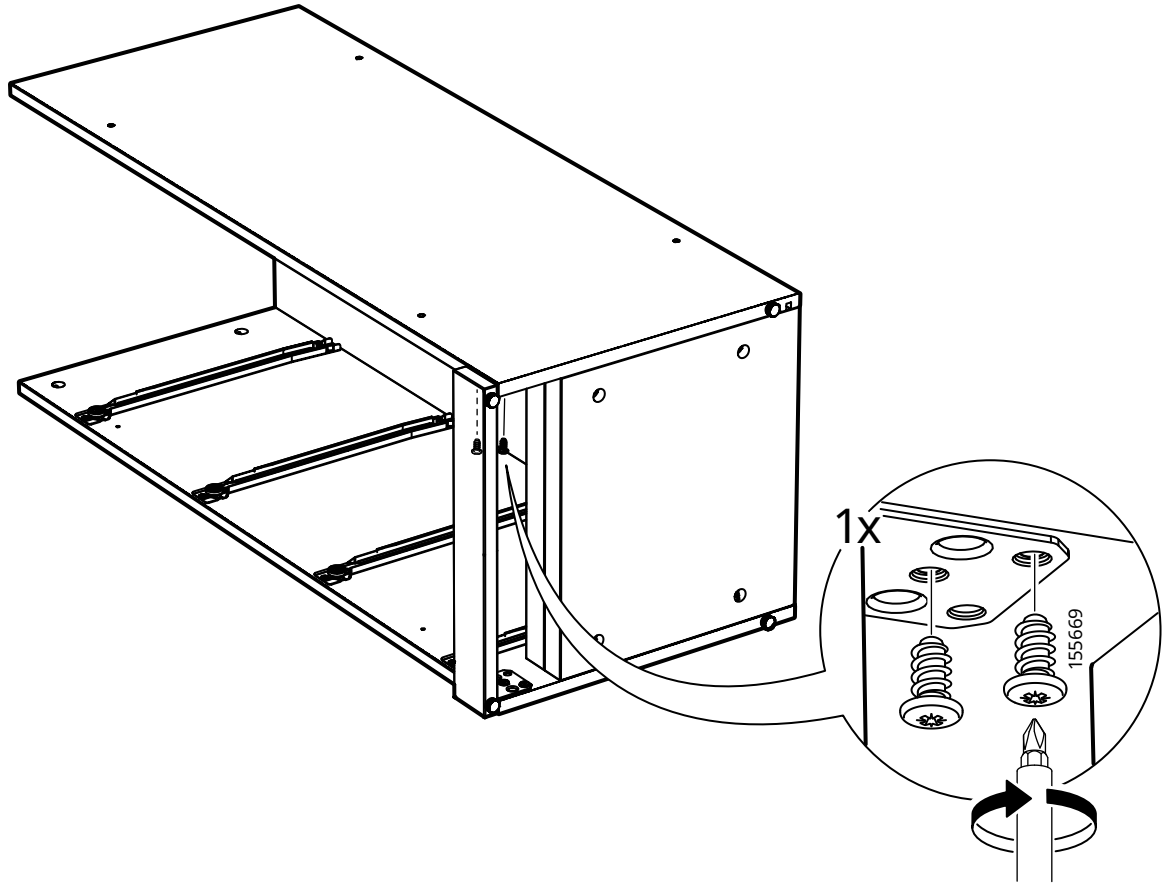 


17

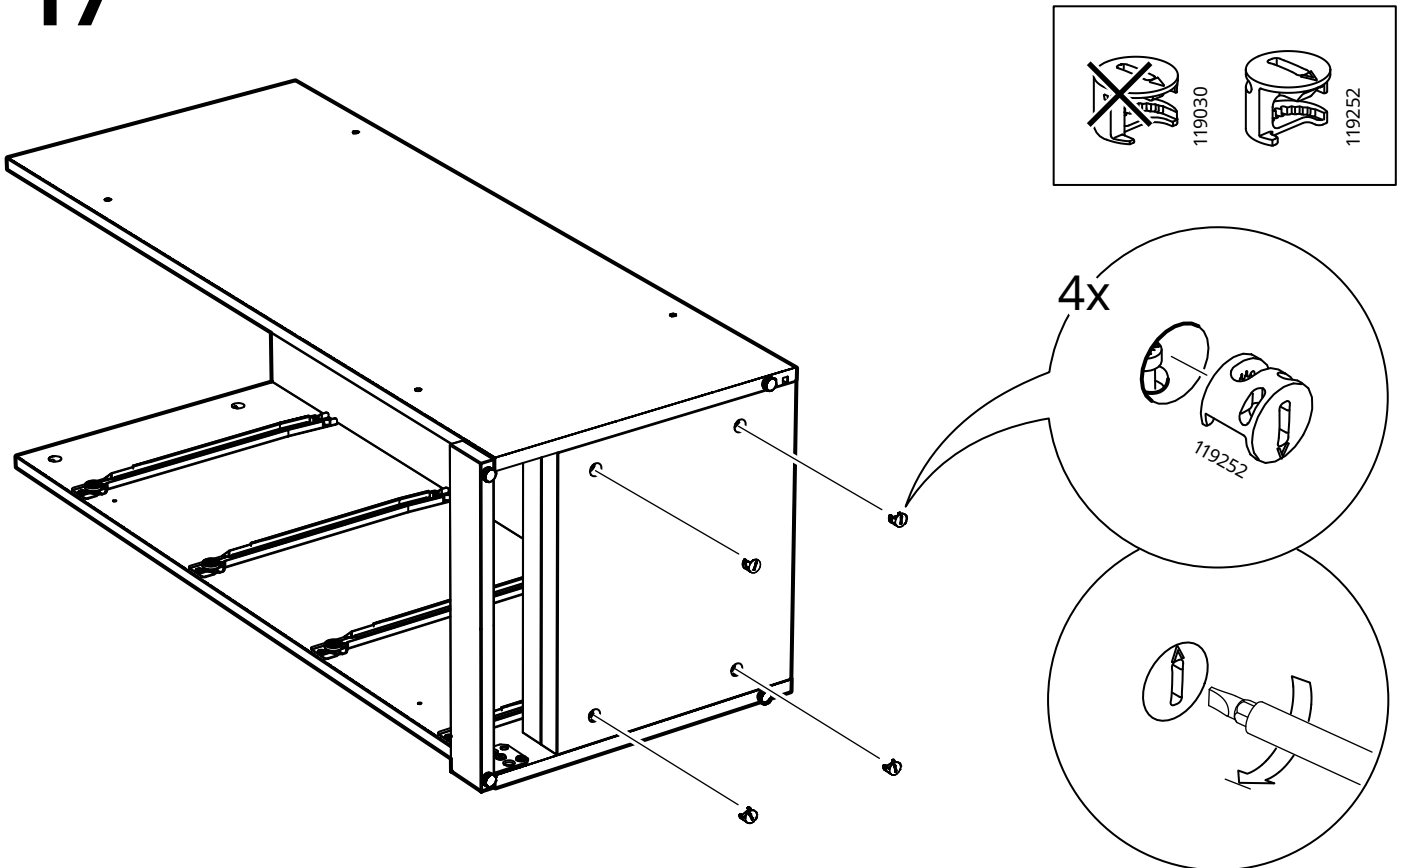 


18

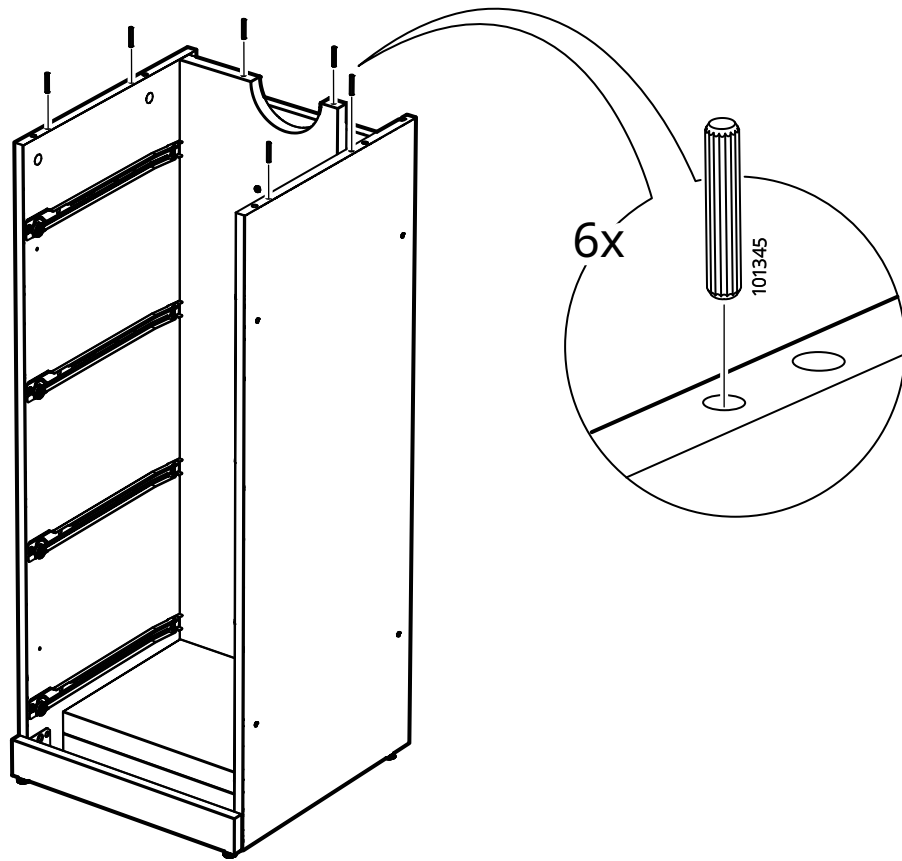 


19

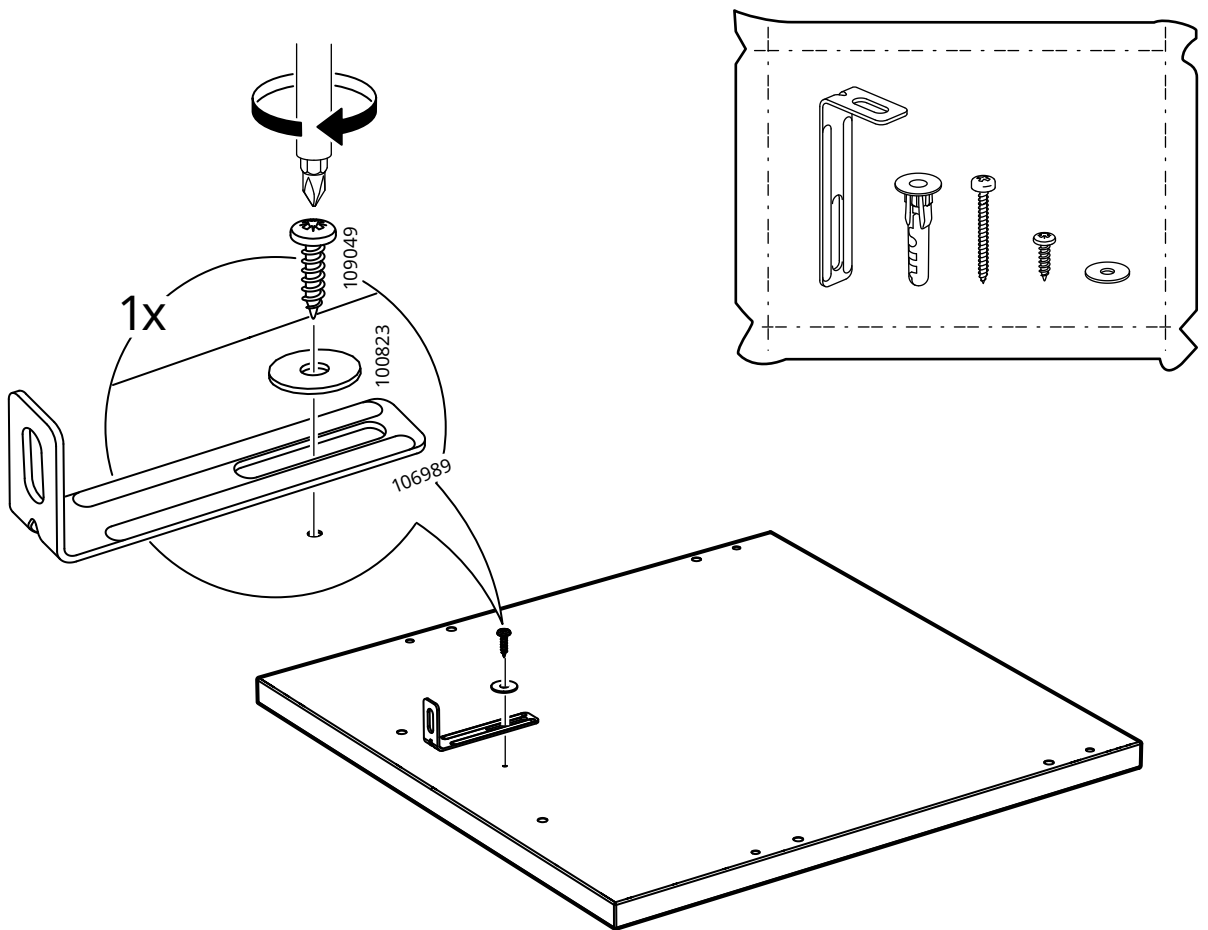 



20

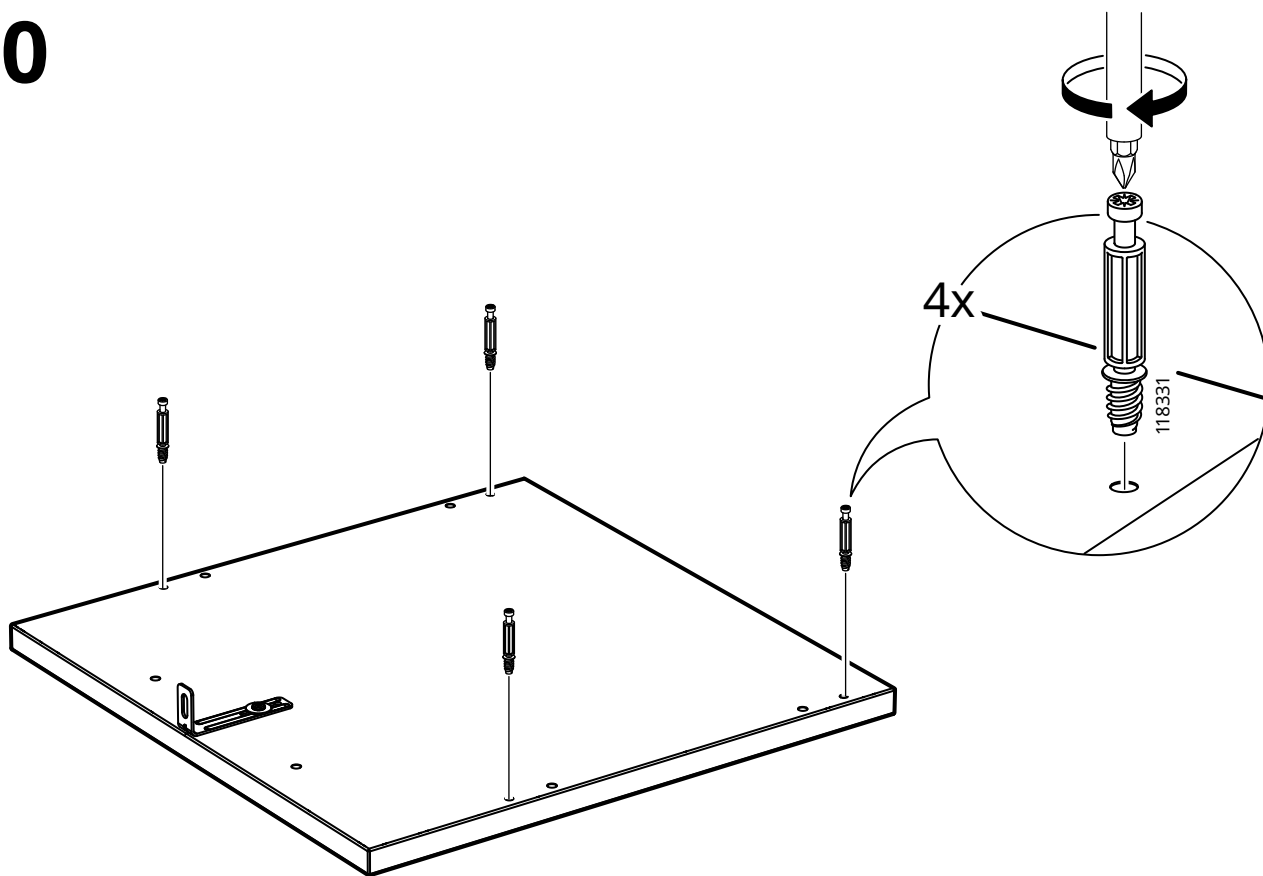 


21

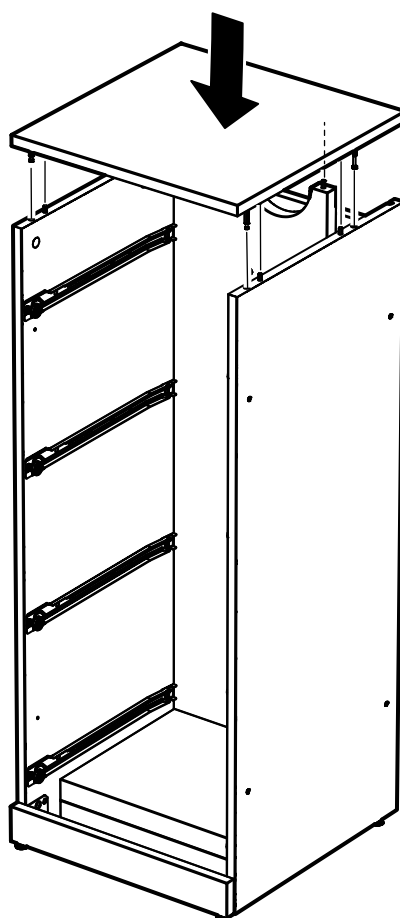 

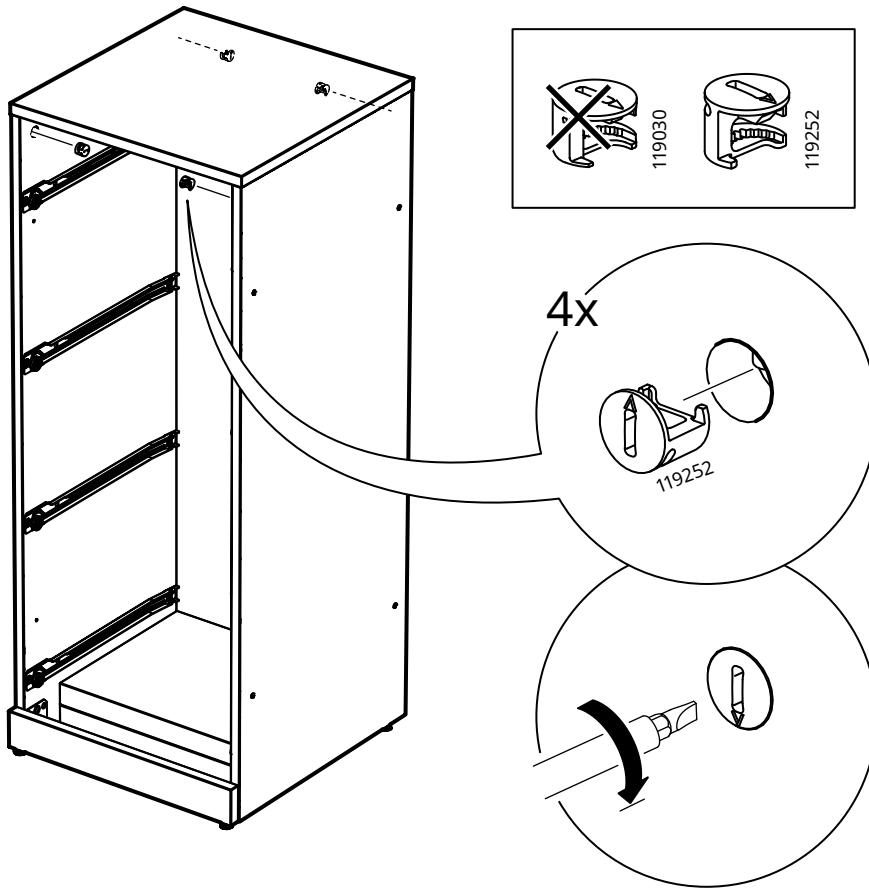 


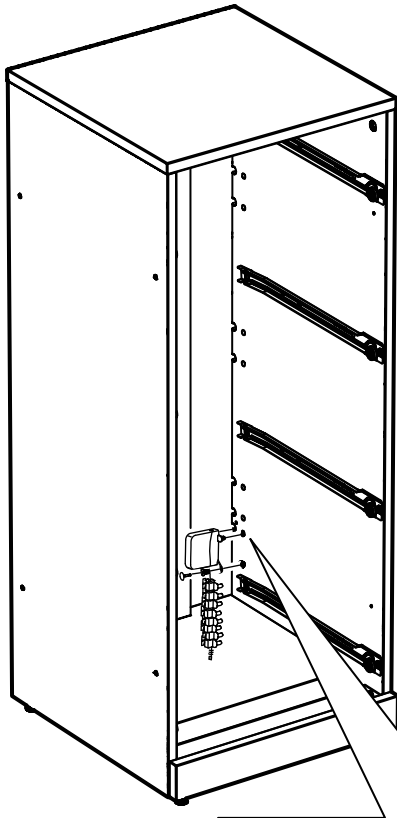 


1x

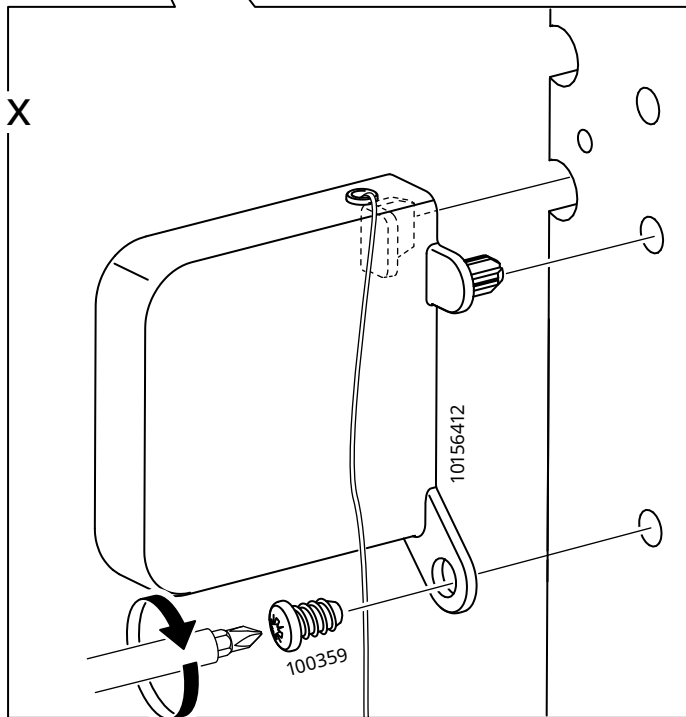 



24





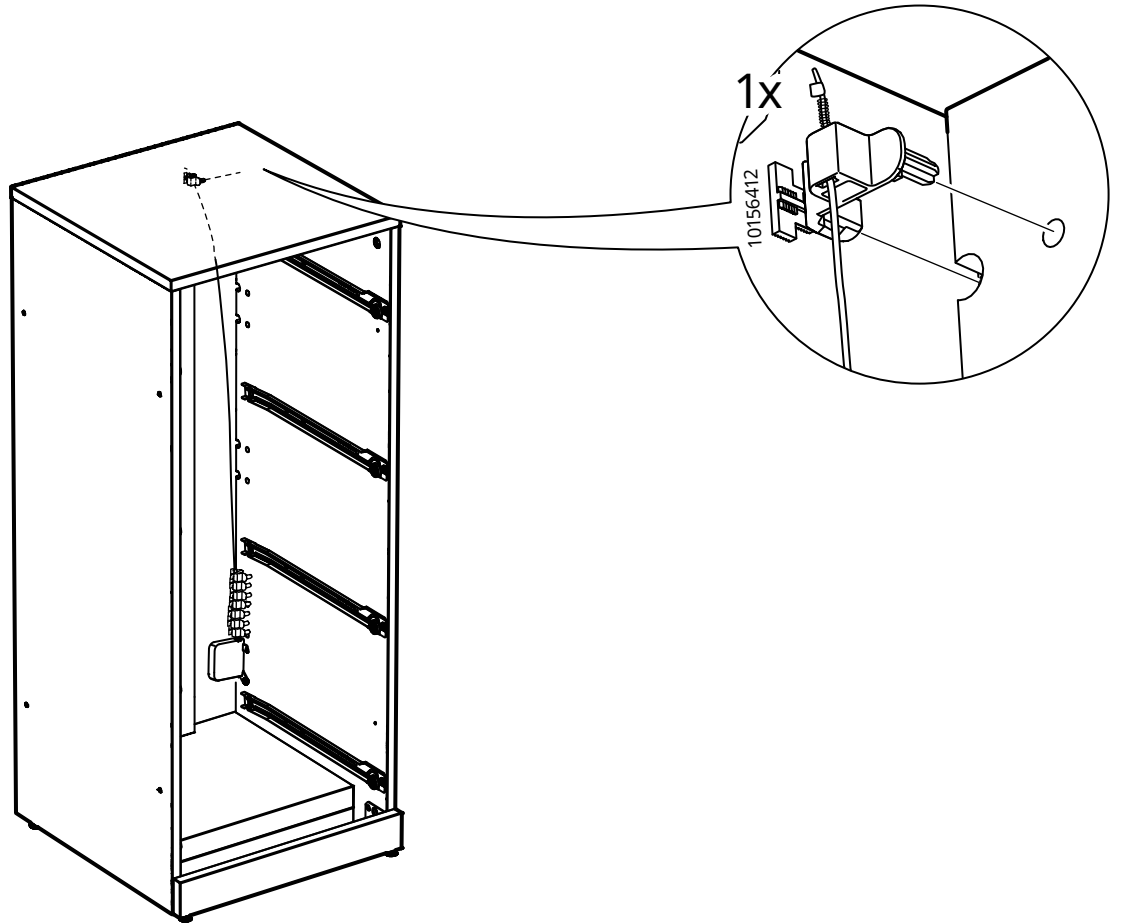 


25


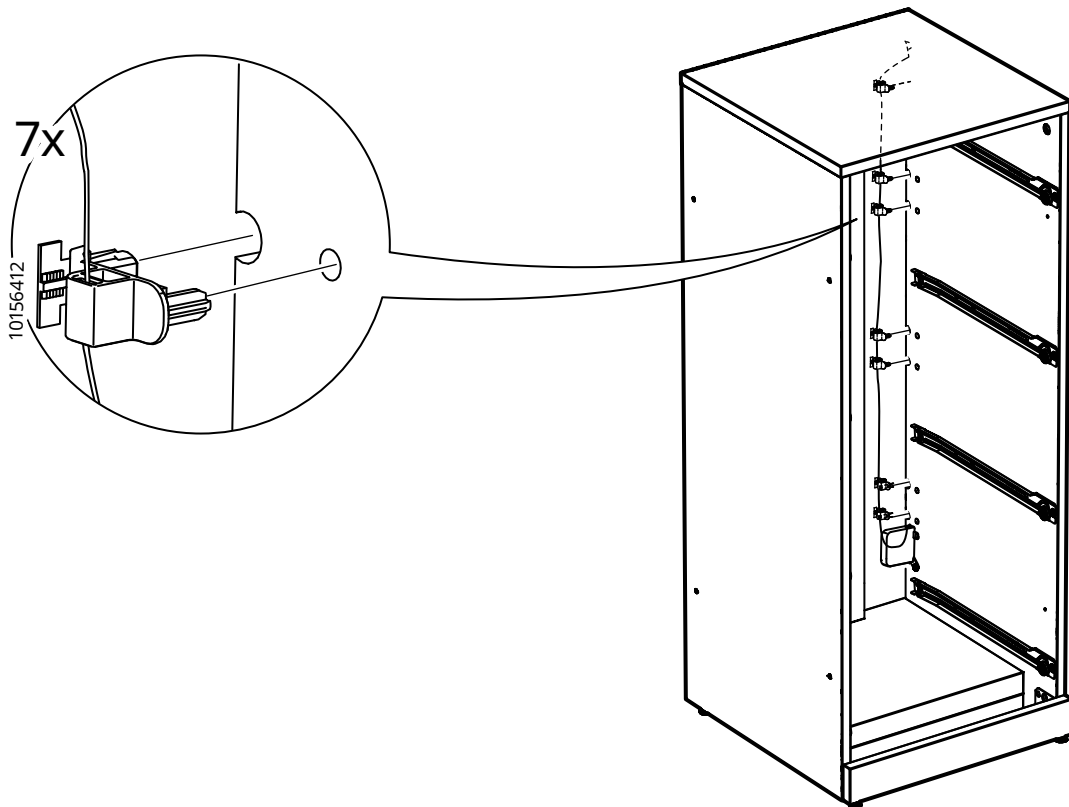 



26

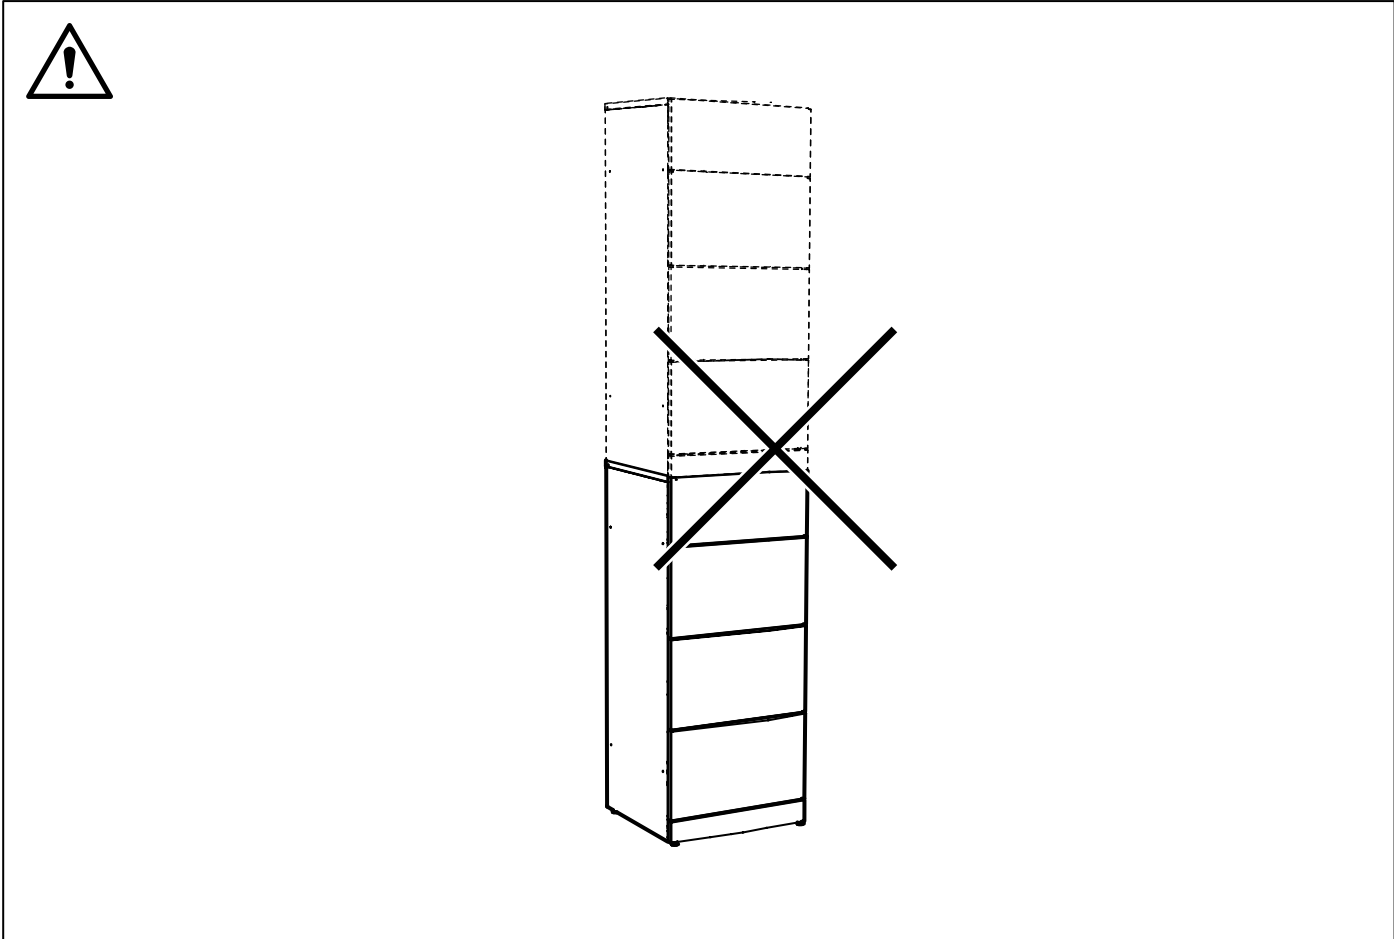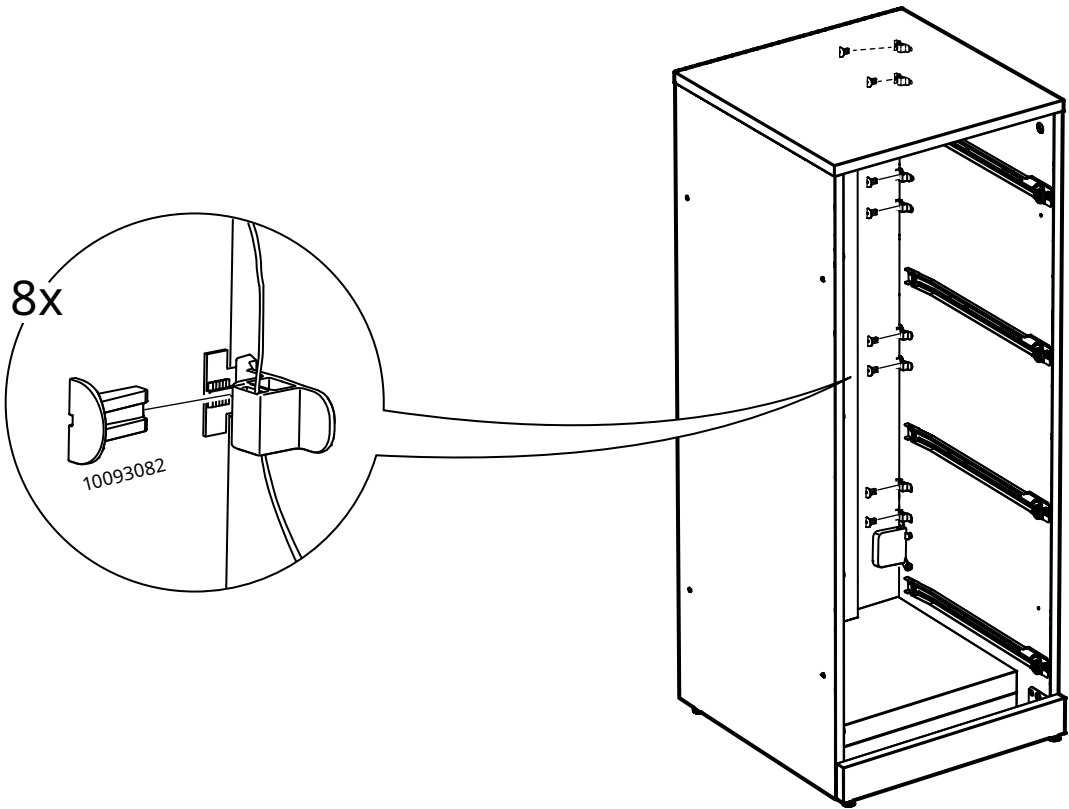  


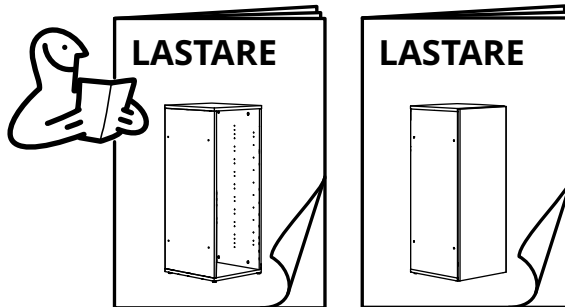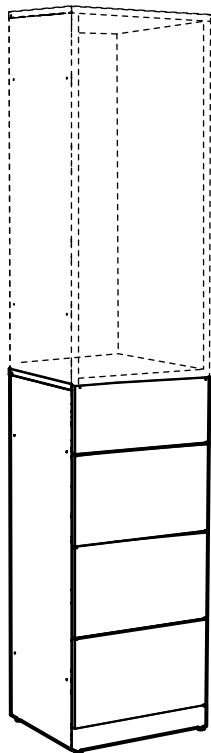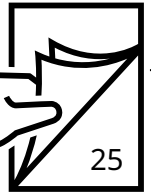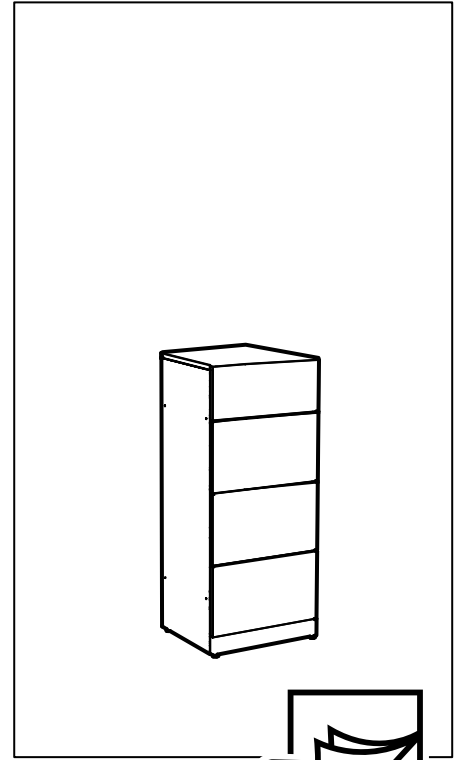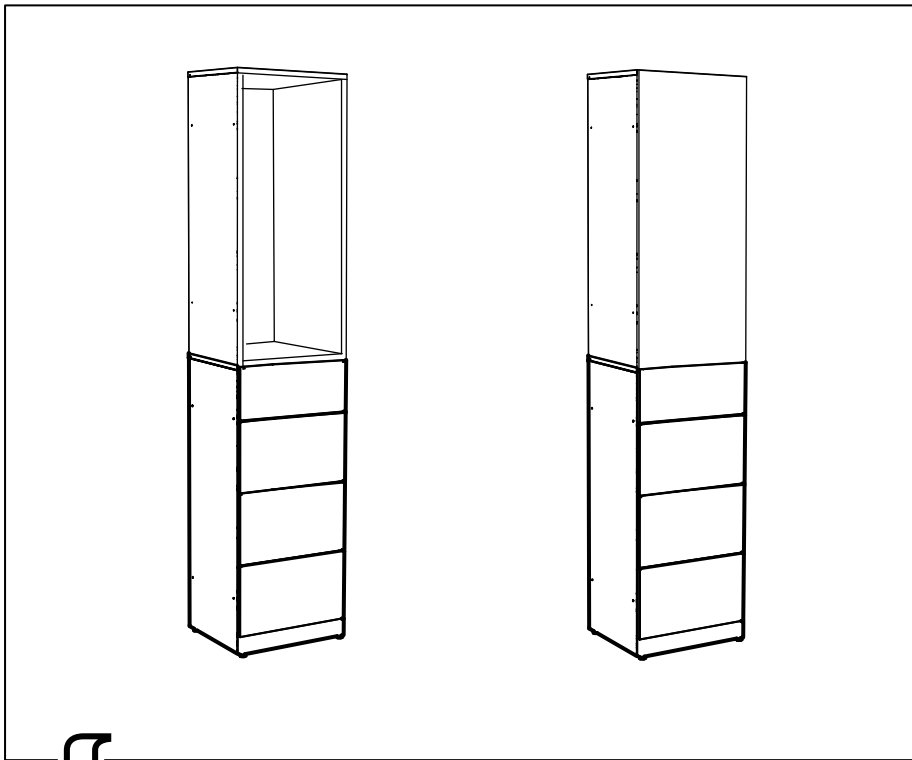     


27

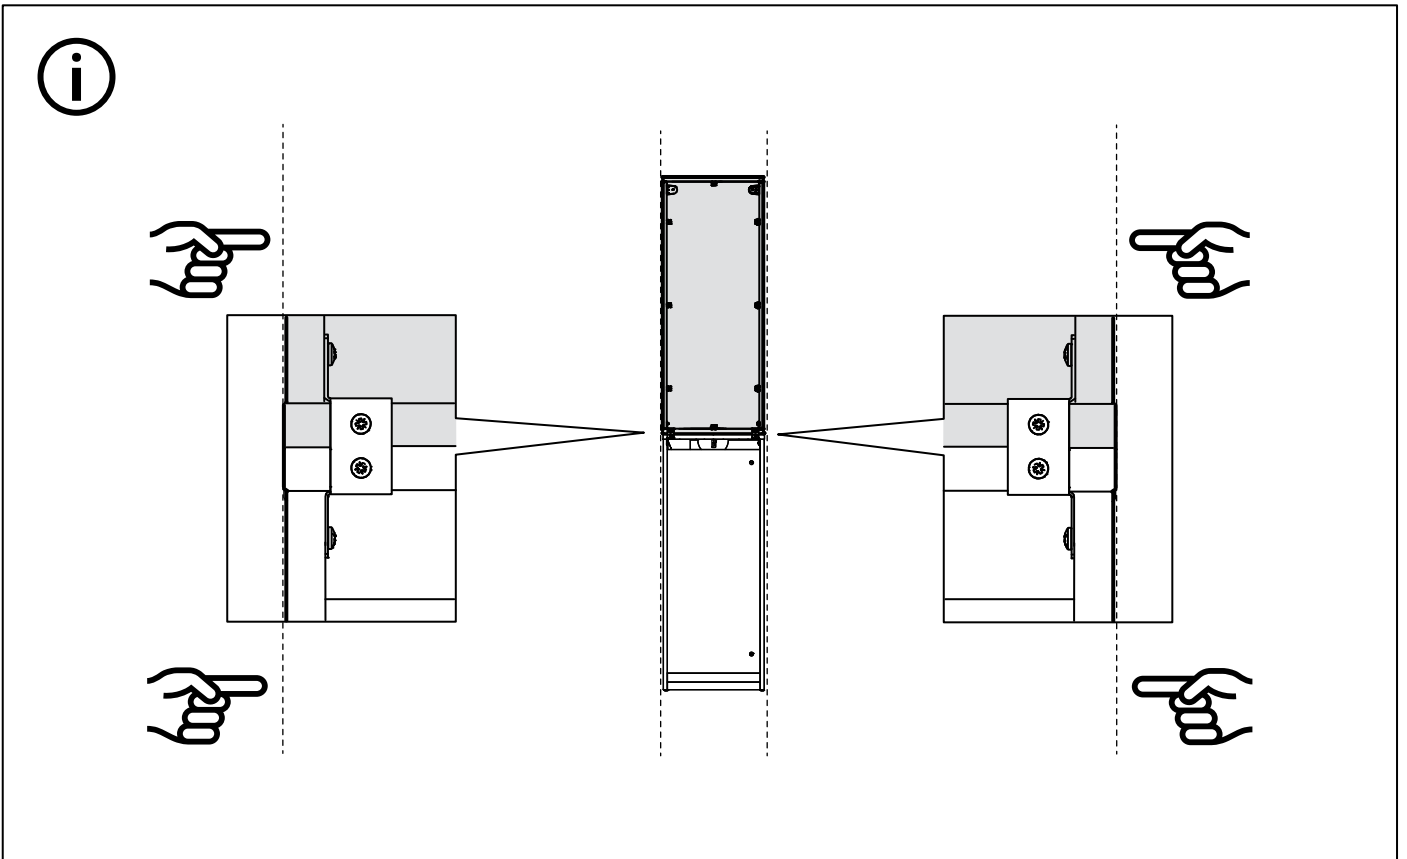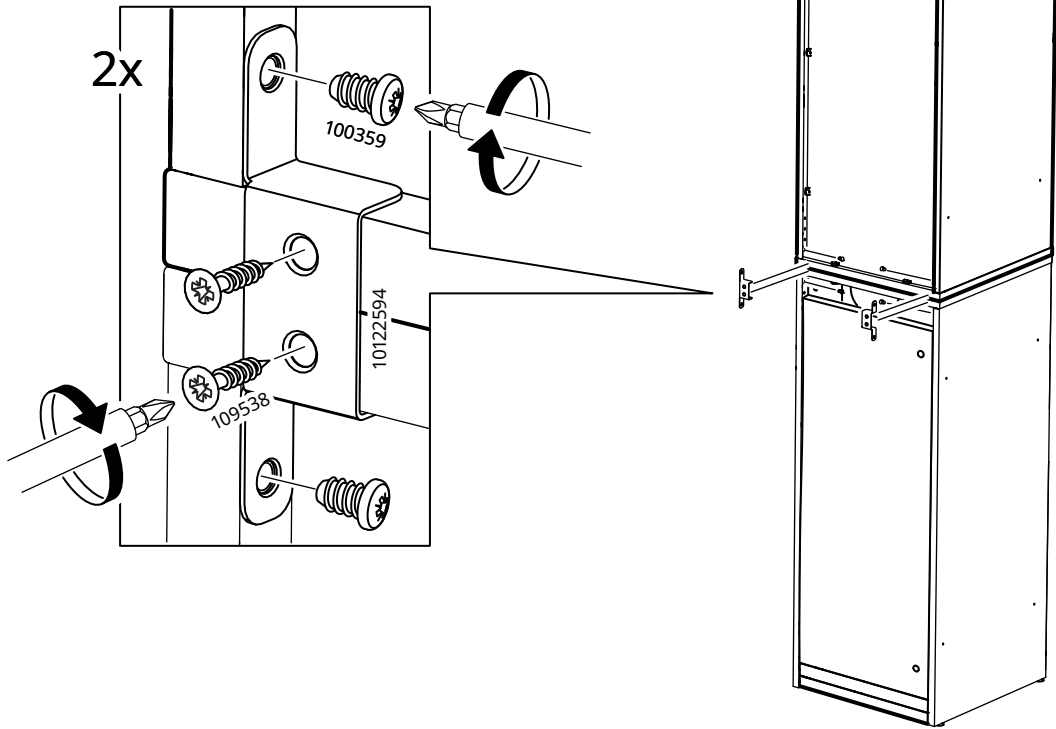  

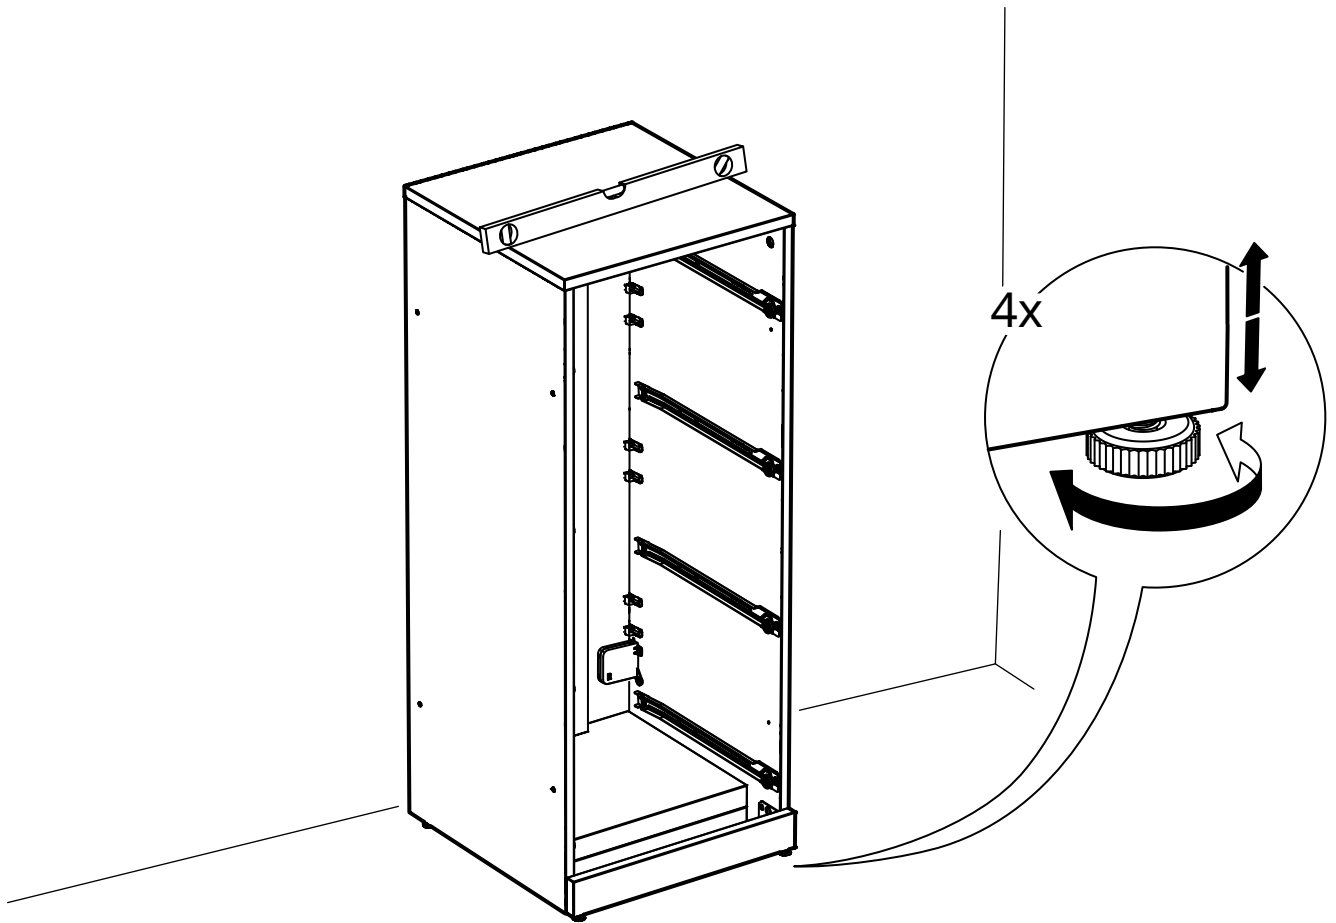 


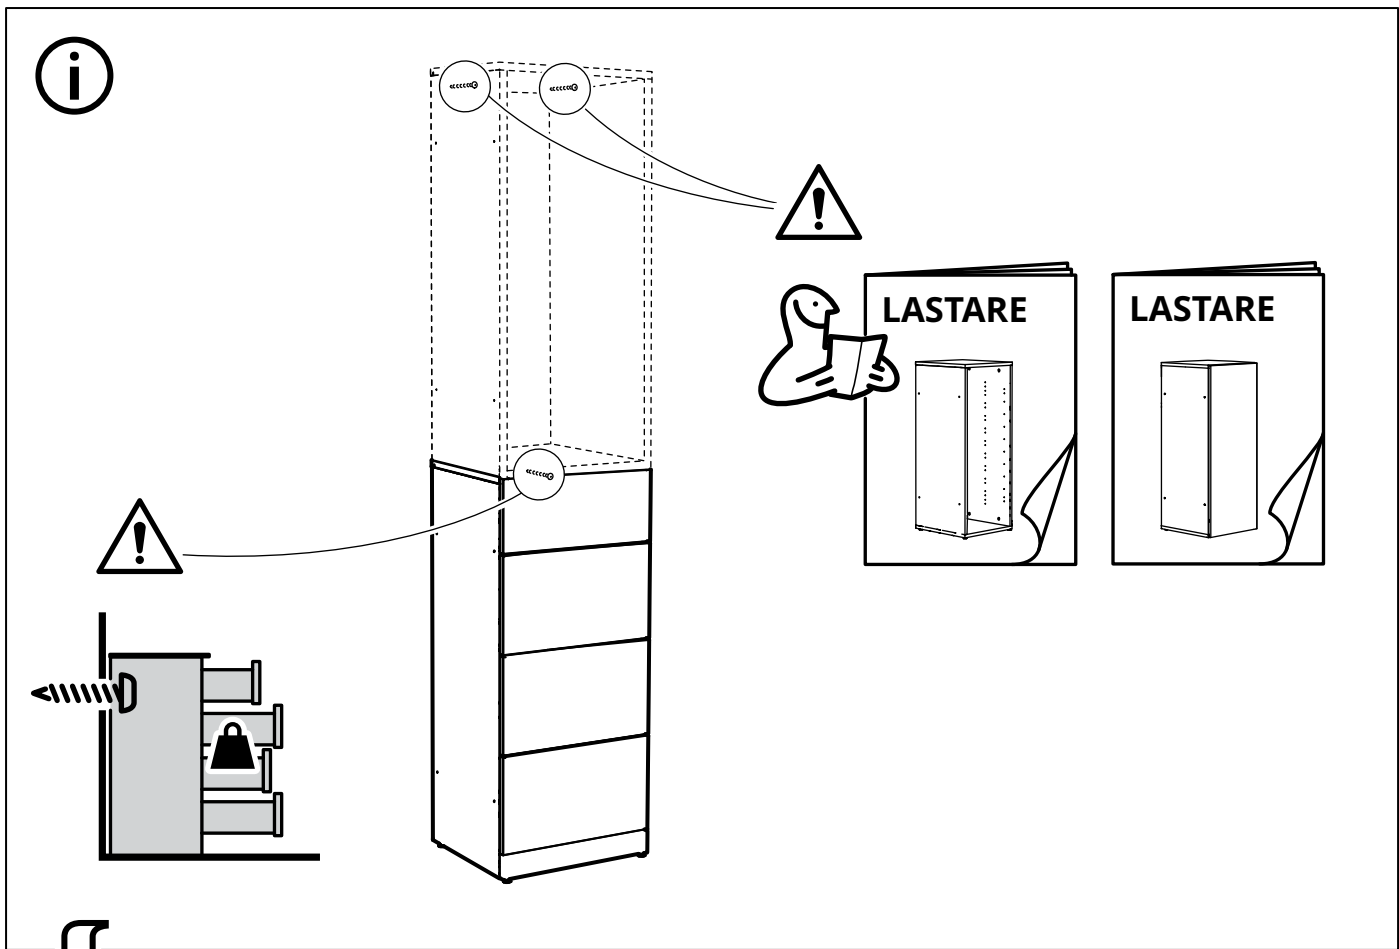 

29

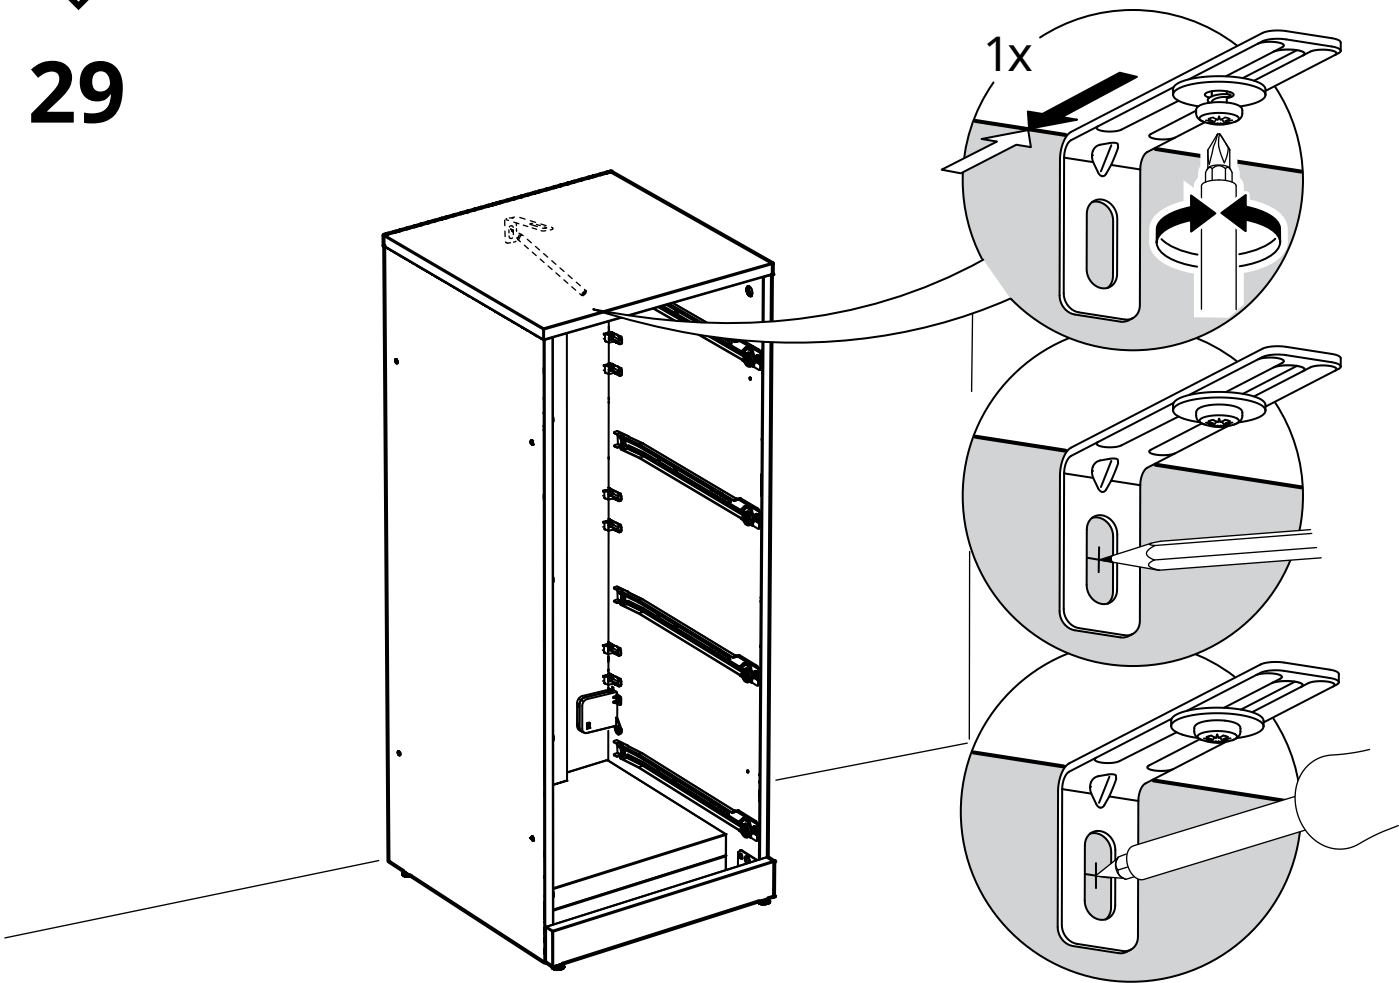 


30

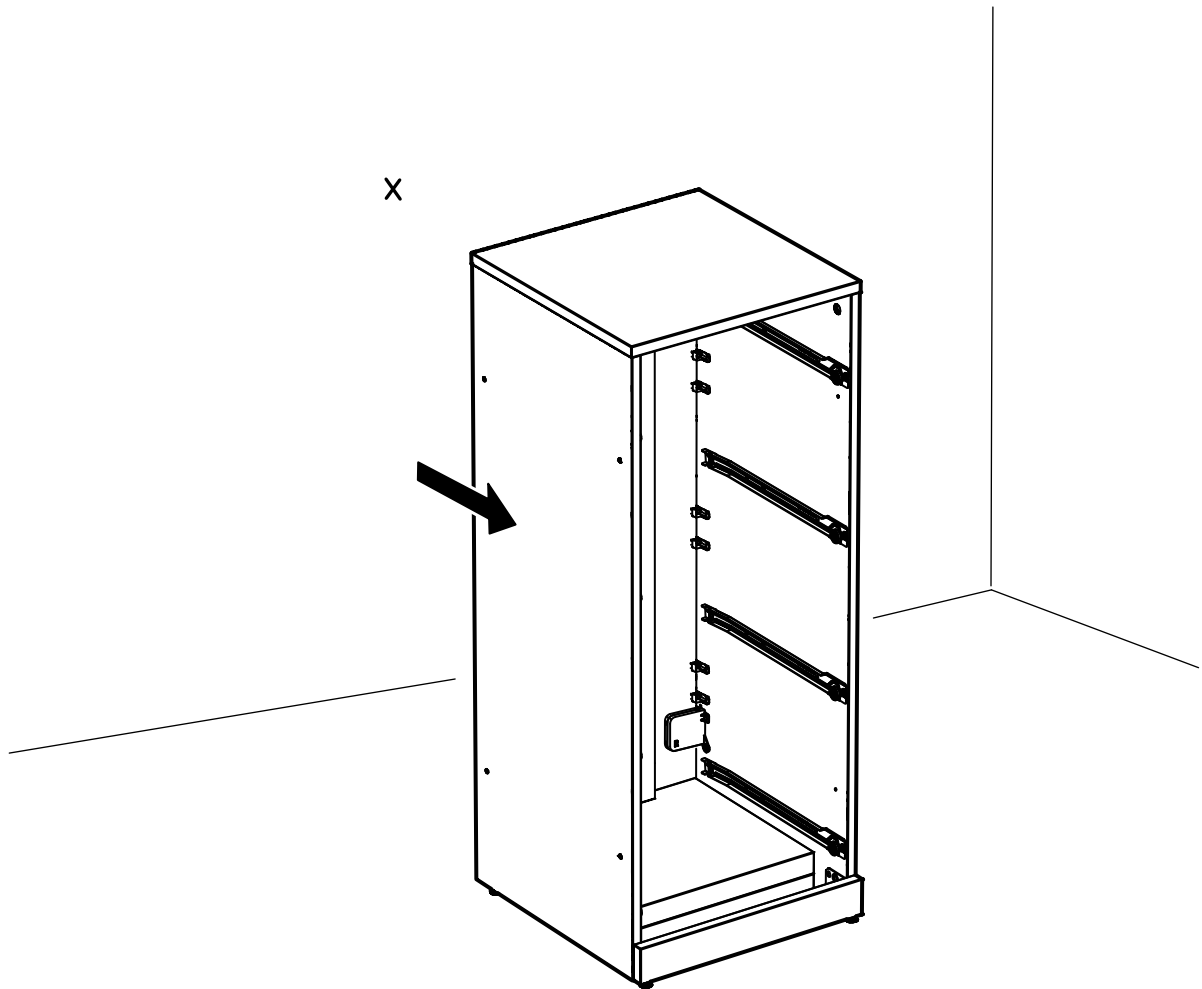 




www.IKEA.com/secure-it

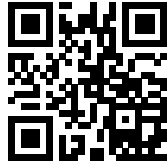 

www.IKEA.cn/secure-it

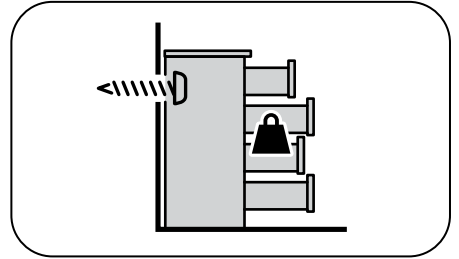 

31

English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

A

Ø 8 mm (5/16")

1

70 mm (2 3/4")

2

29

B

Ø 8 mm (5/16")

1

≈ 30 mm (≈ 1 1/4")

2

30

 
C

Ø 3 mm (1/8")


1

≈ 30 mm (≈ 1 1/4")



31

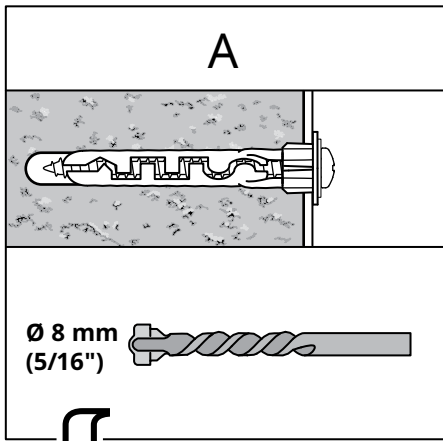


32

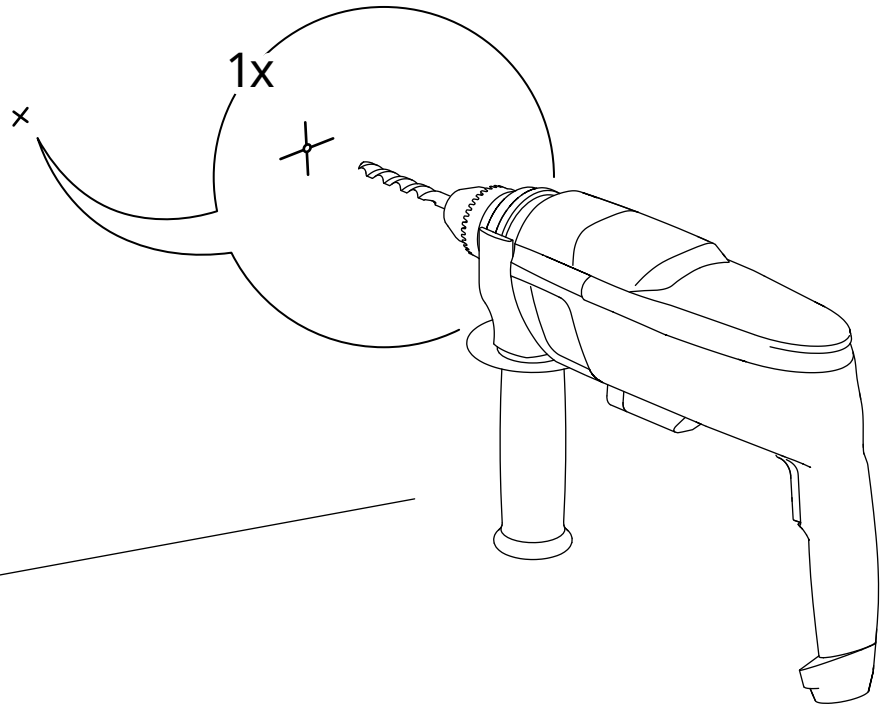 


33

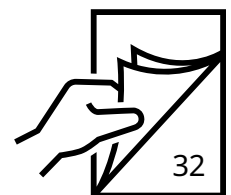 
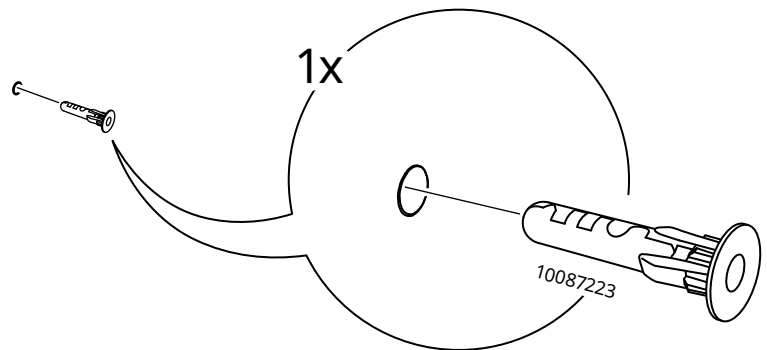 


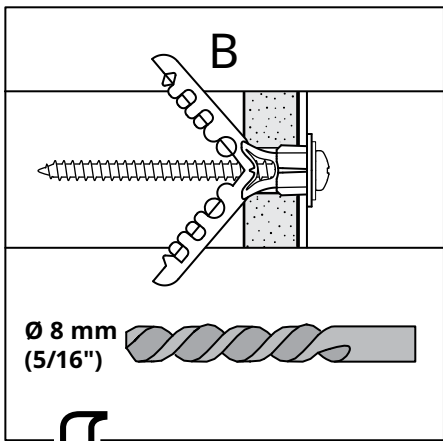 


32

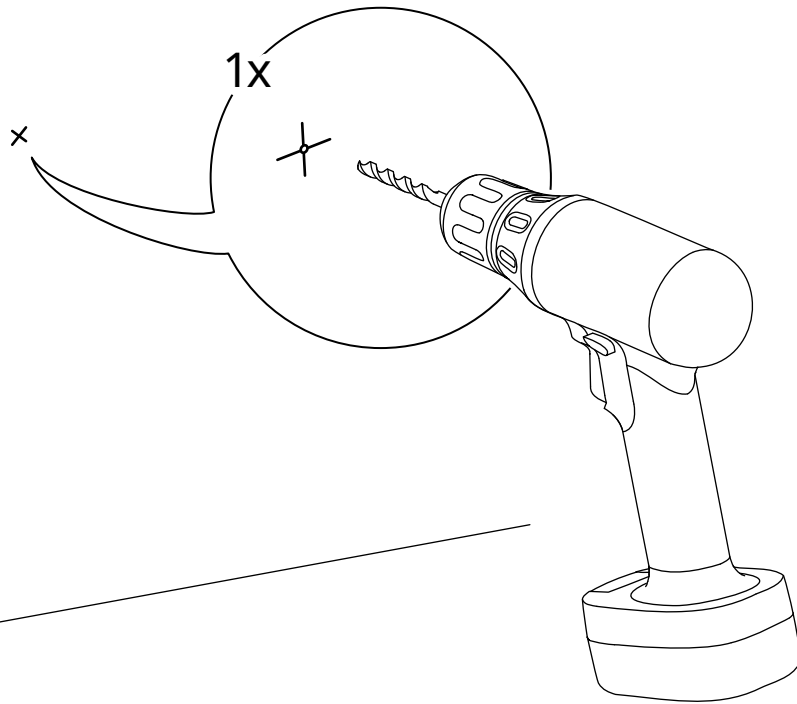 


33

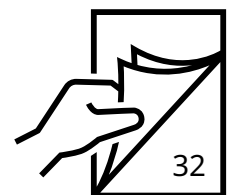 
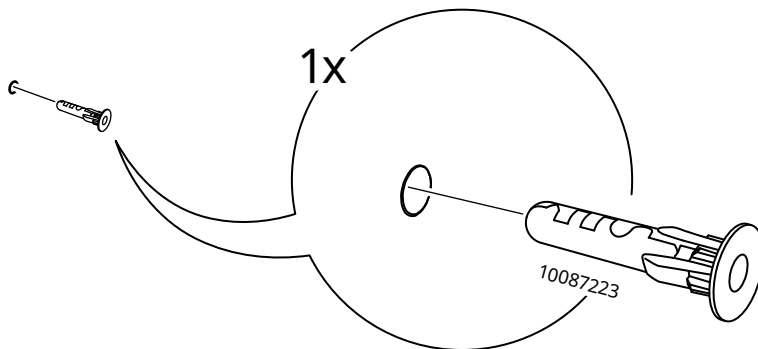 




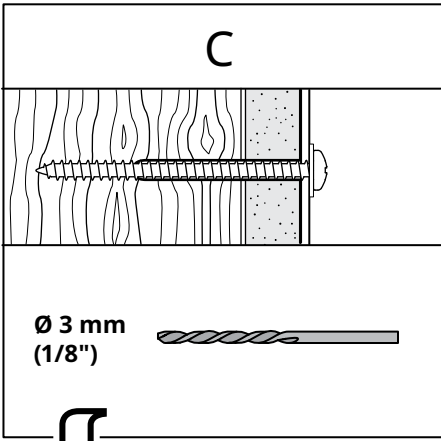 



32

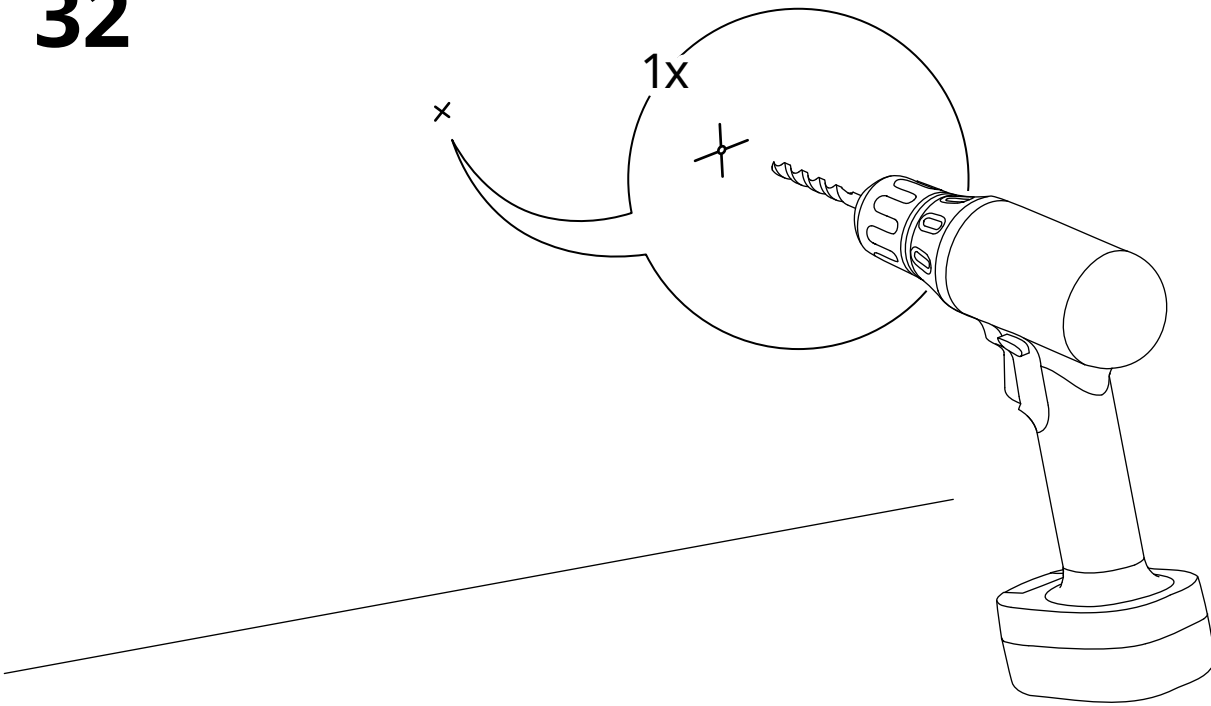 


34

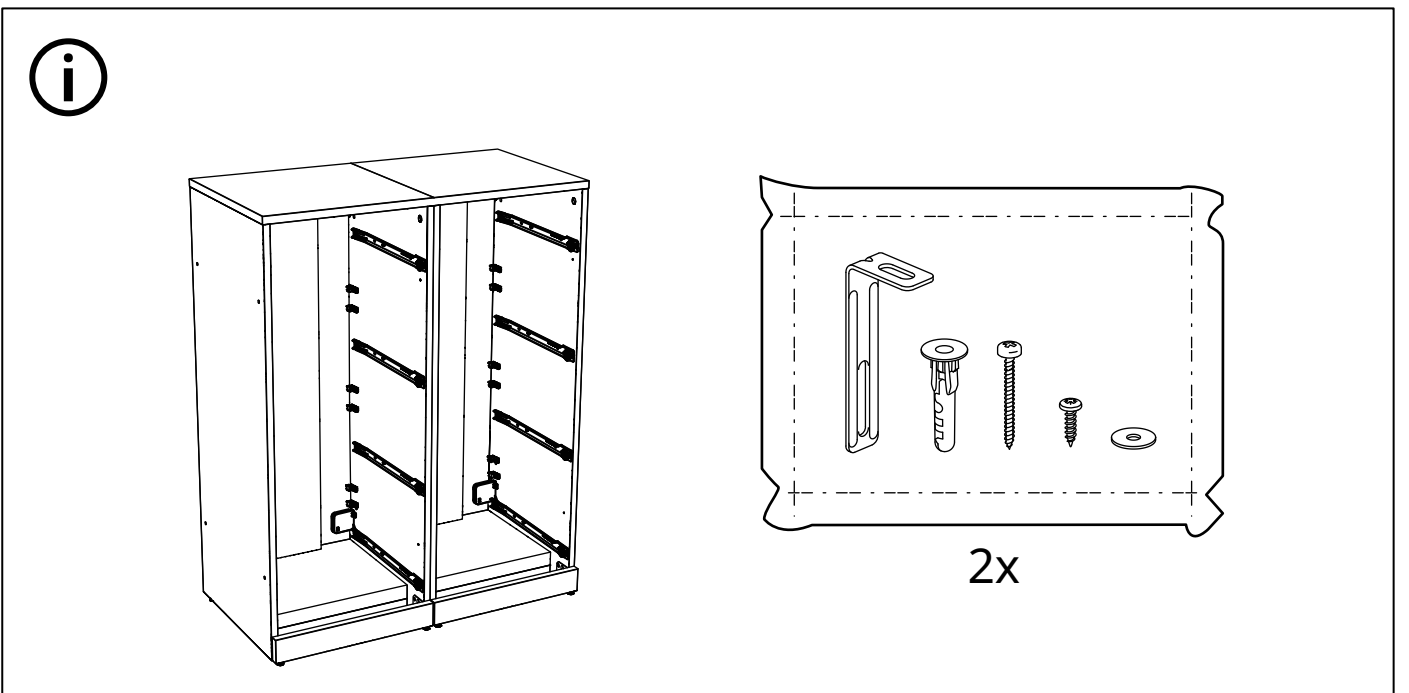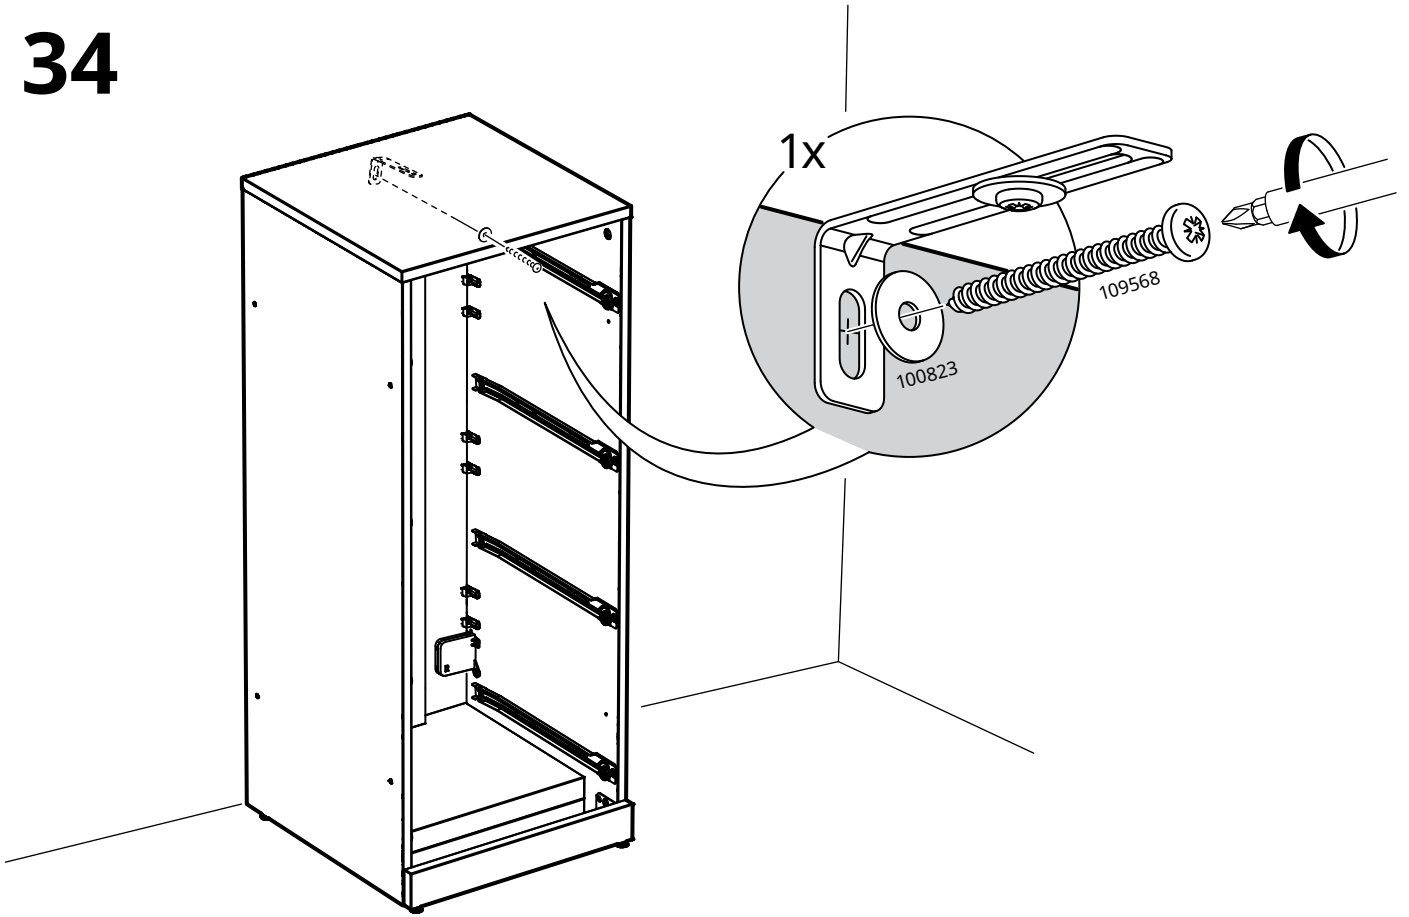  

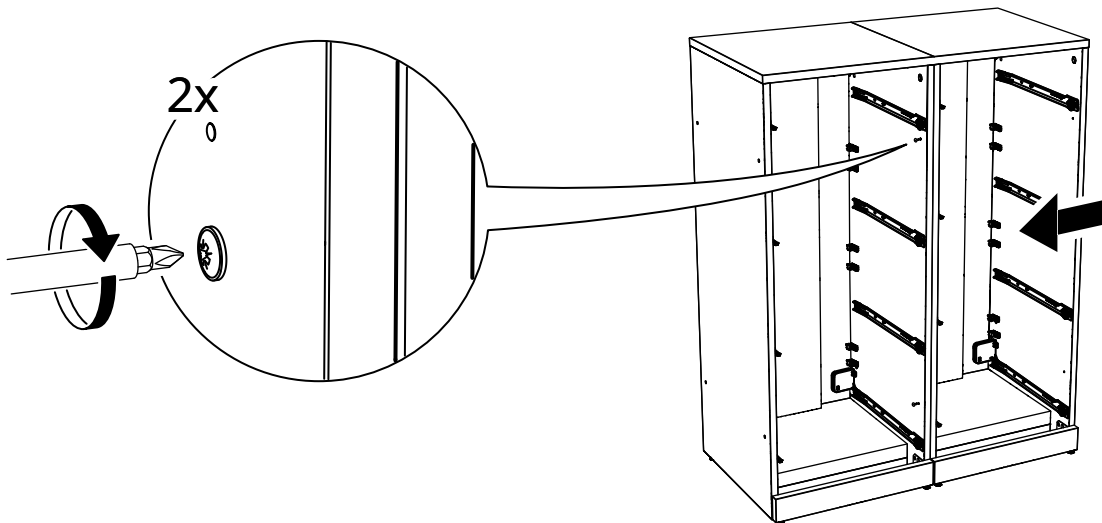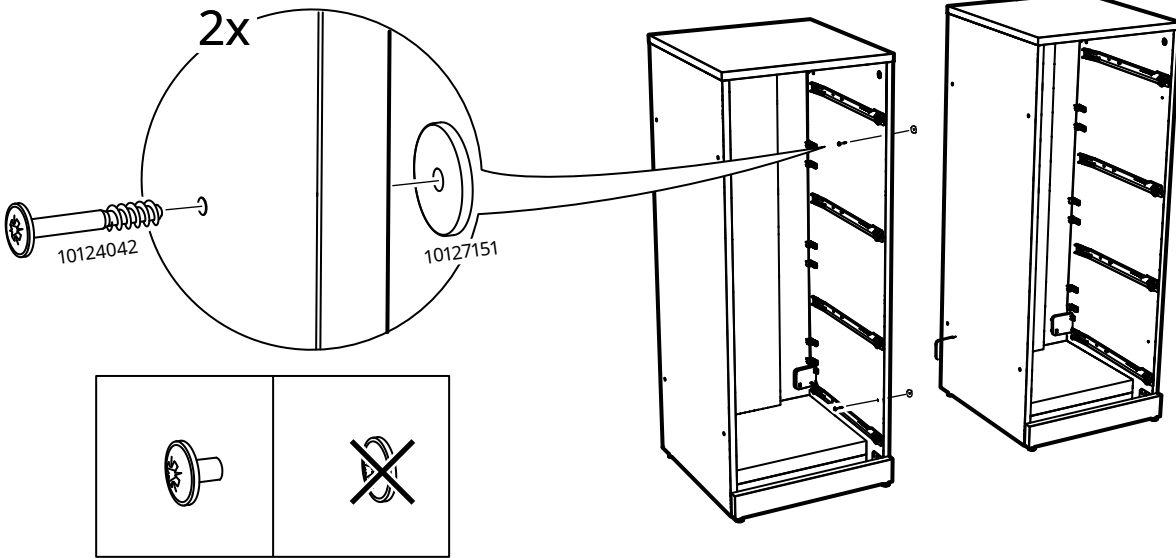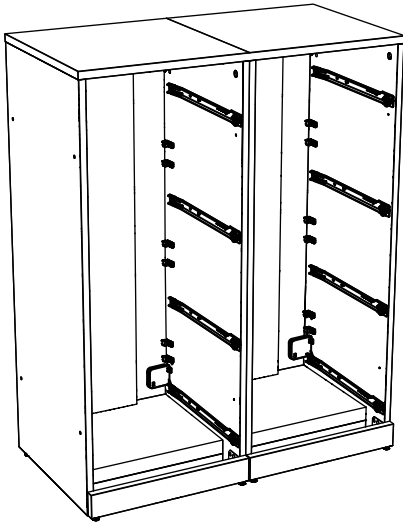   


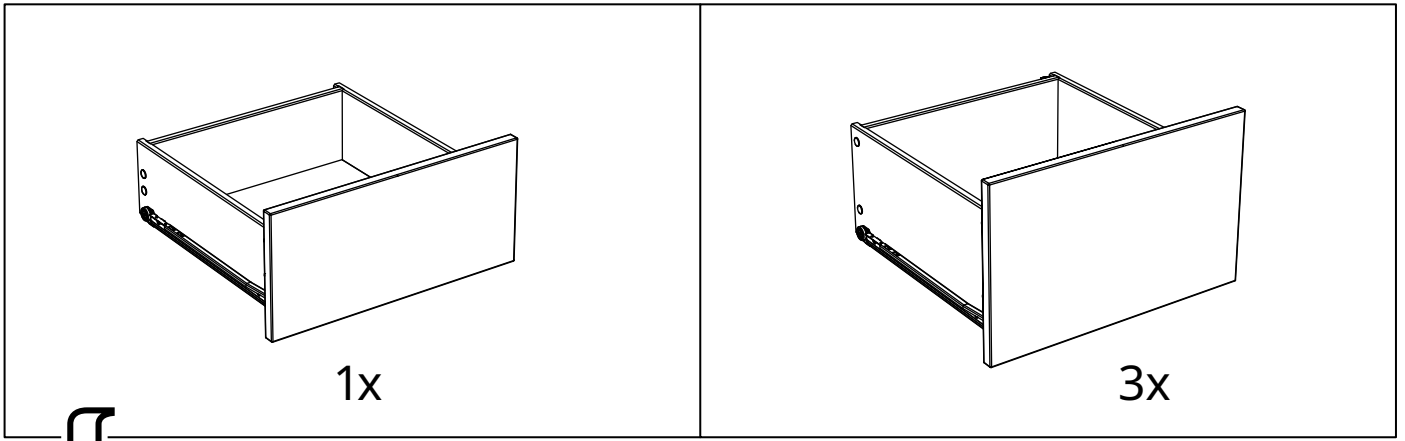 


35

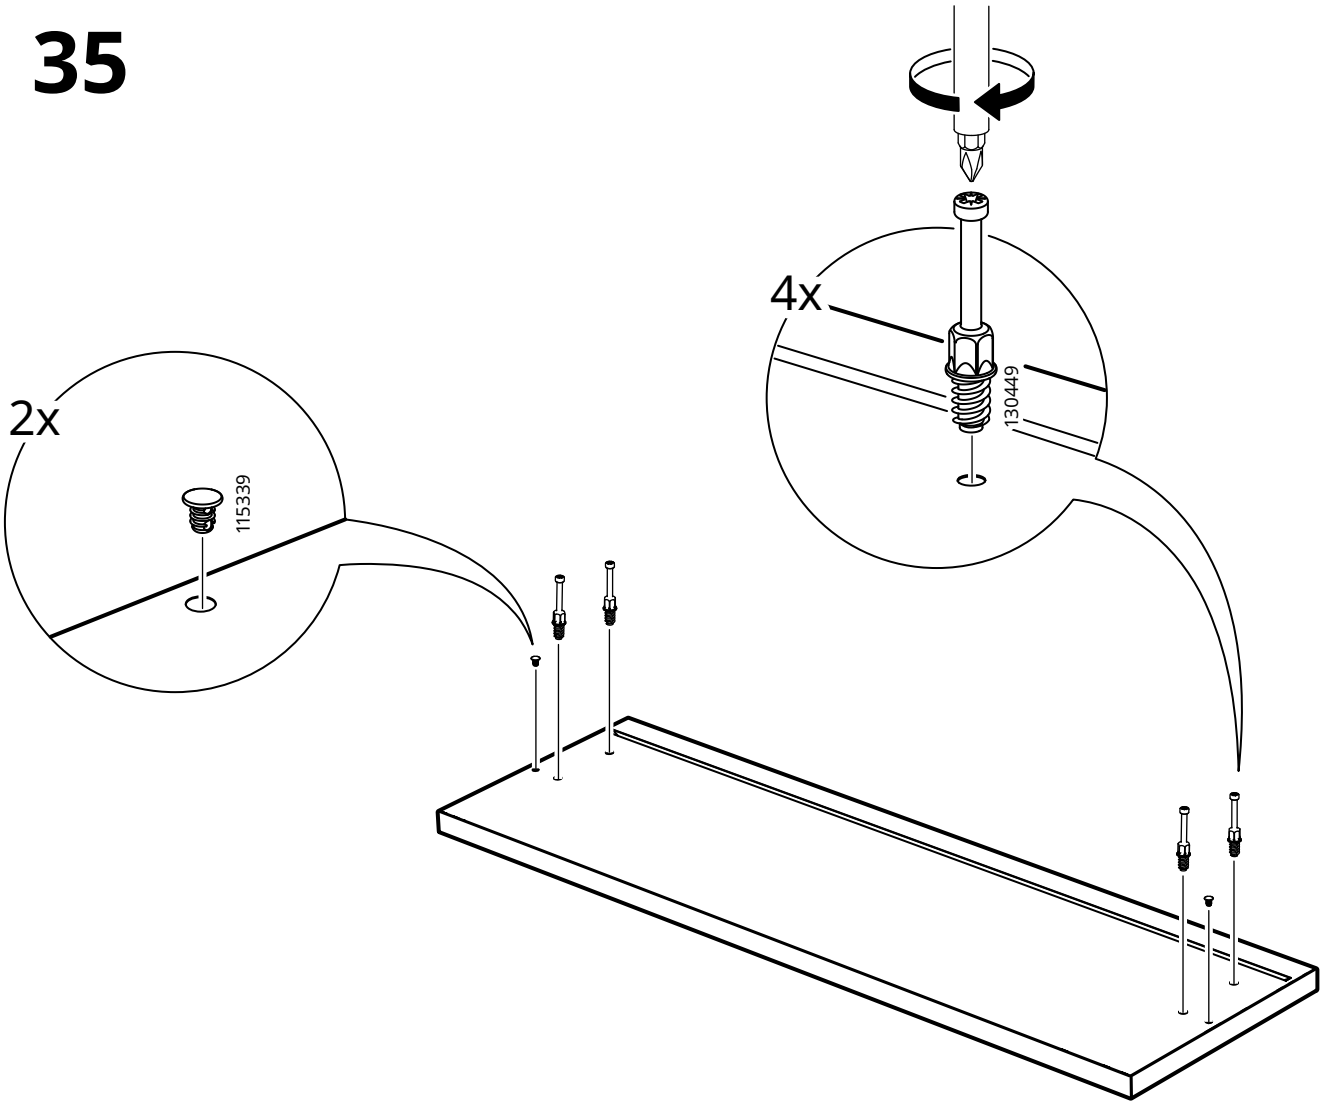 


36

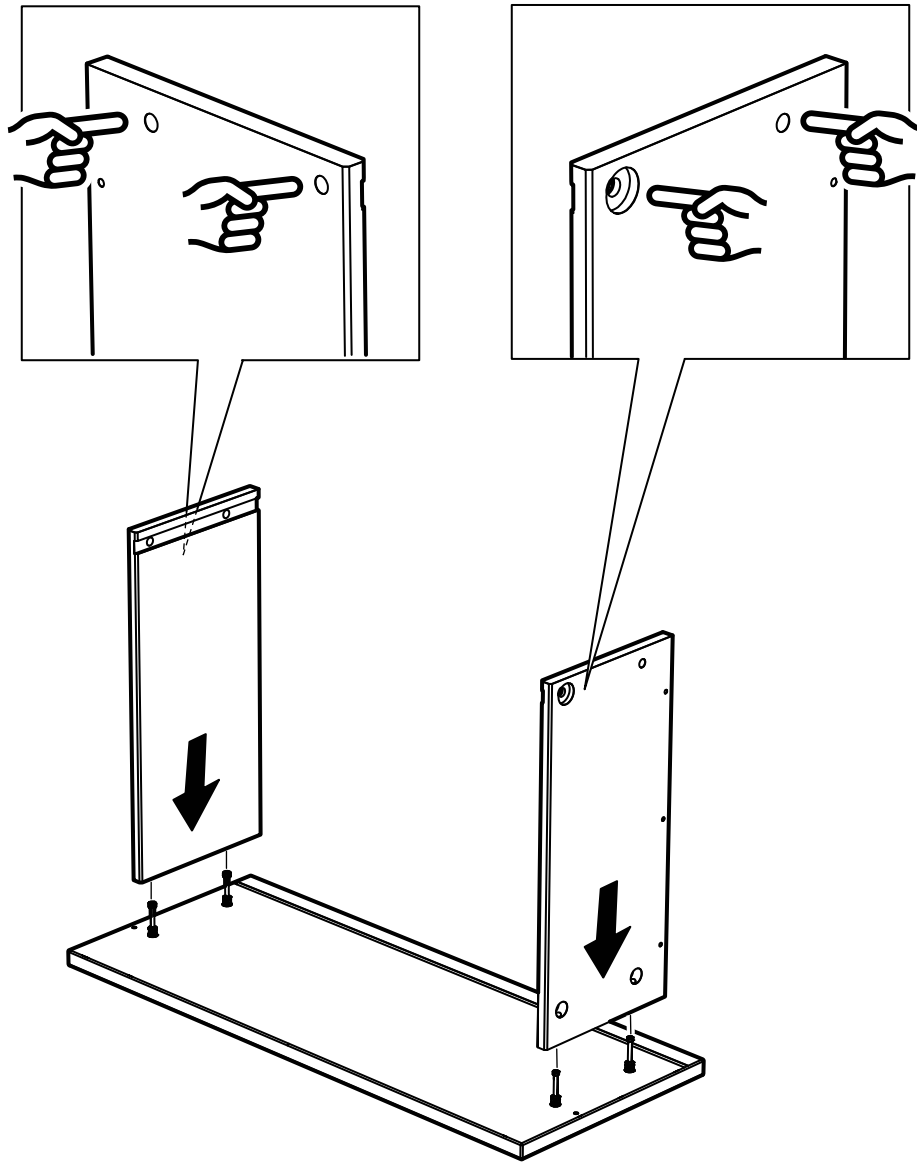 


37

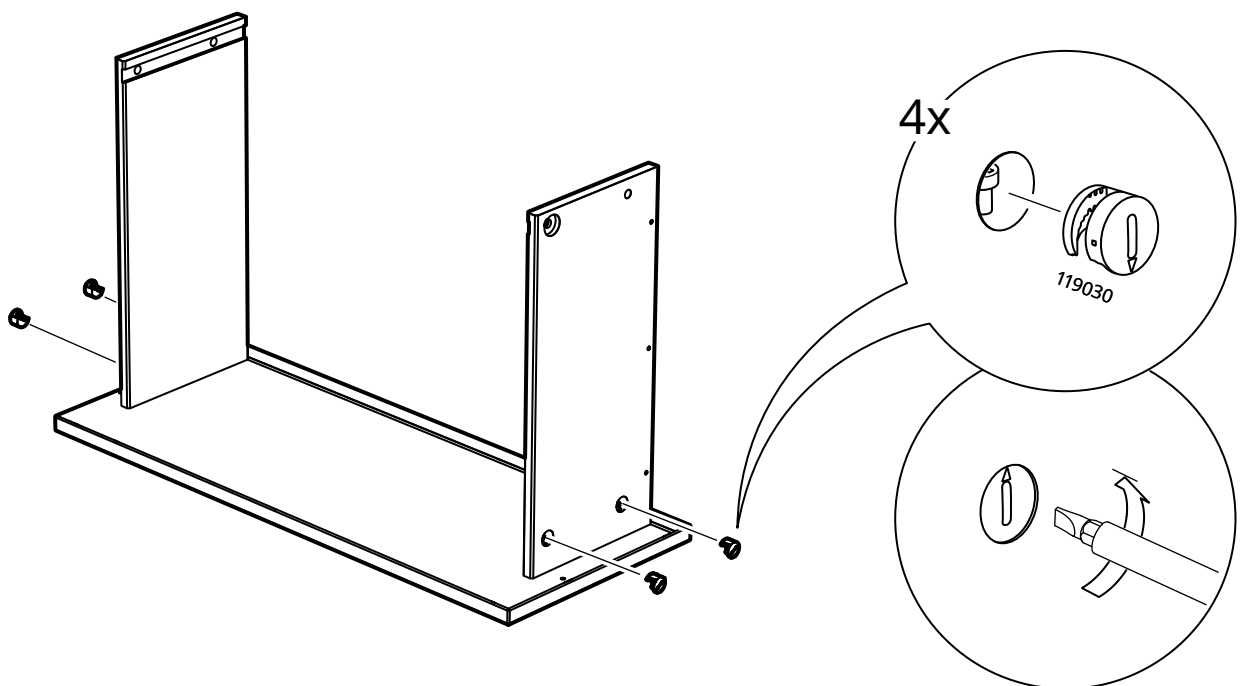 

38

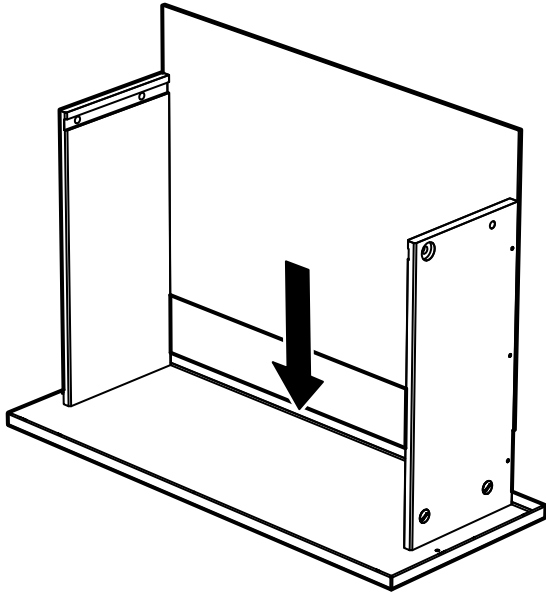 


39

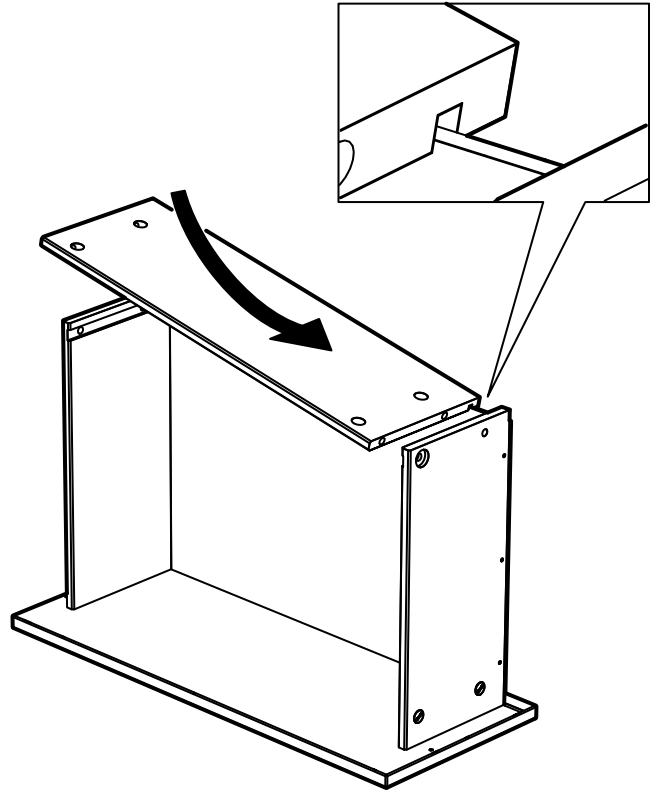 


40

 
3x

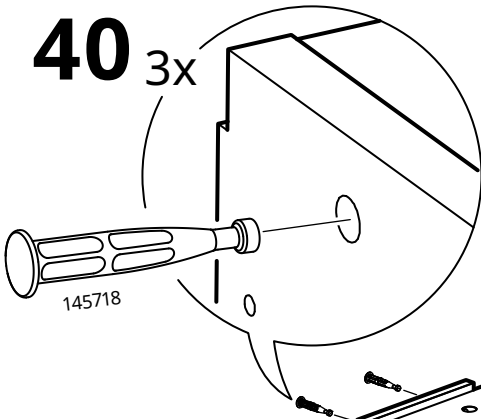


1x

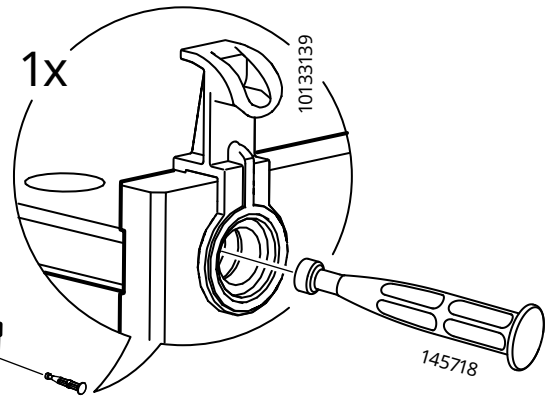 



41

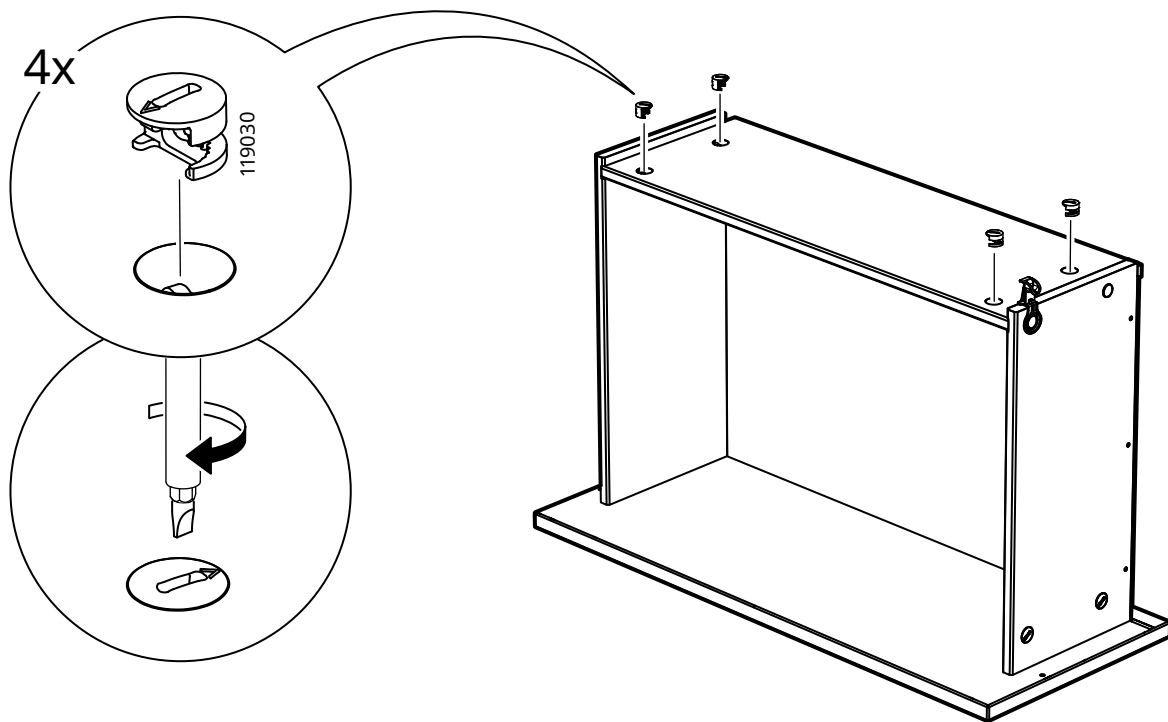 


42

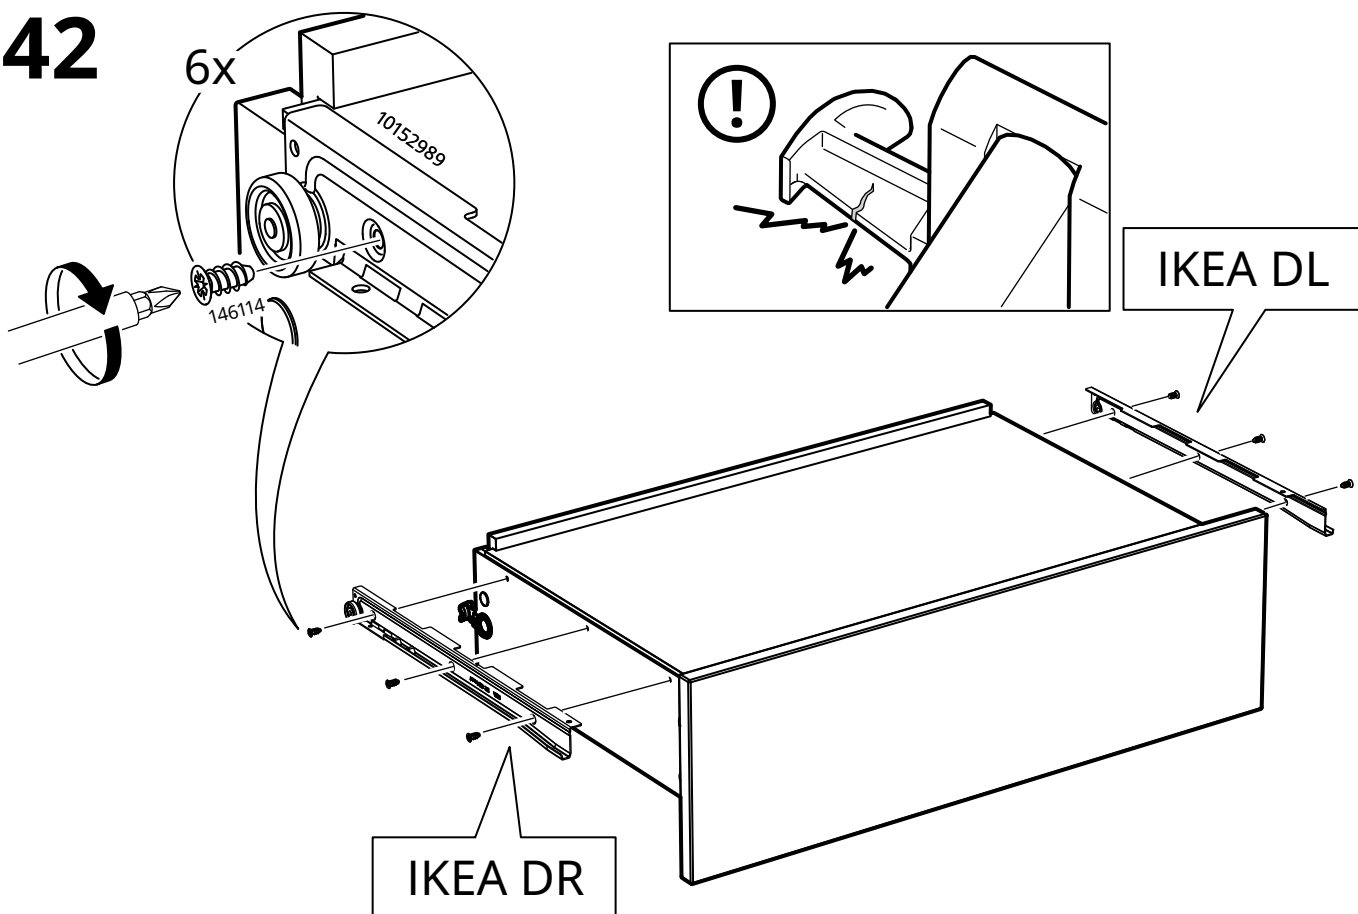 



43

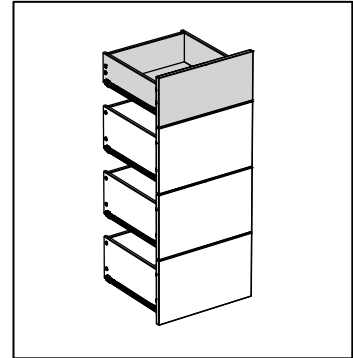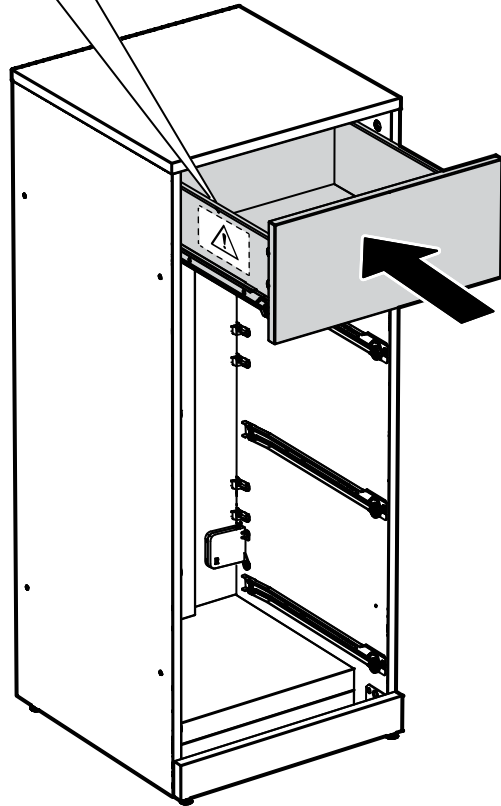  



44

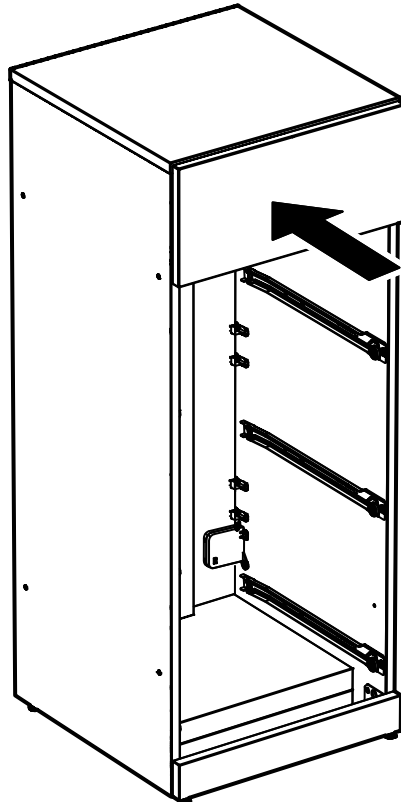 

45

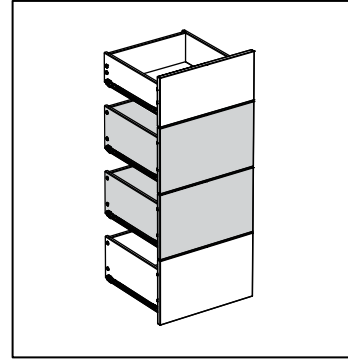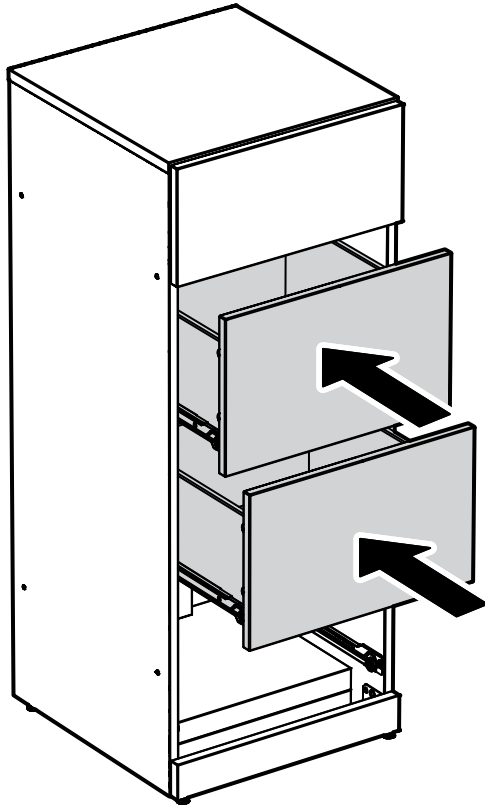  

46

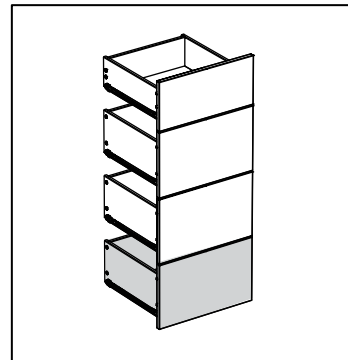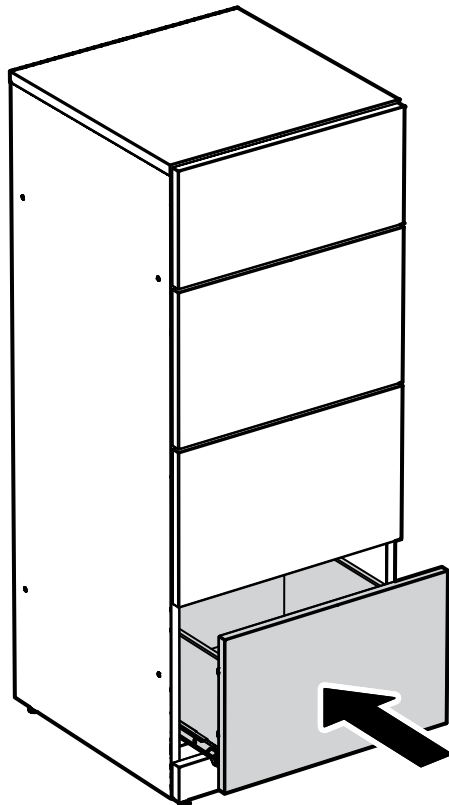  

47

