


LASTARE

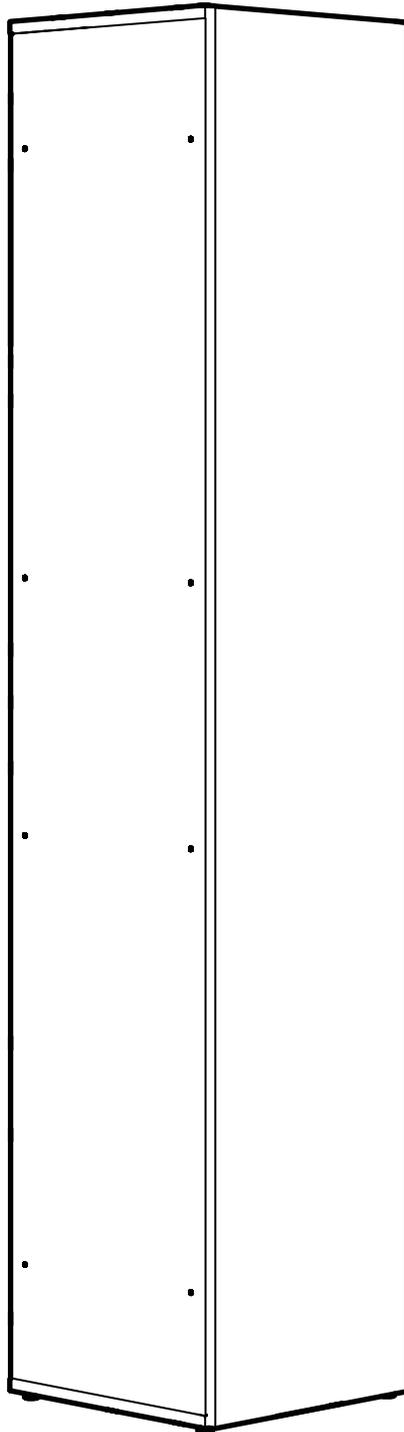

Design and Quality
IKEA of Sweden



English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.



NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

 
 
 
NEVER open more than one drawer at a time.




Place heaviest items in the lowest drawers.


English

Read and follow each step of the instruction carefully.

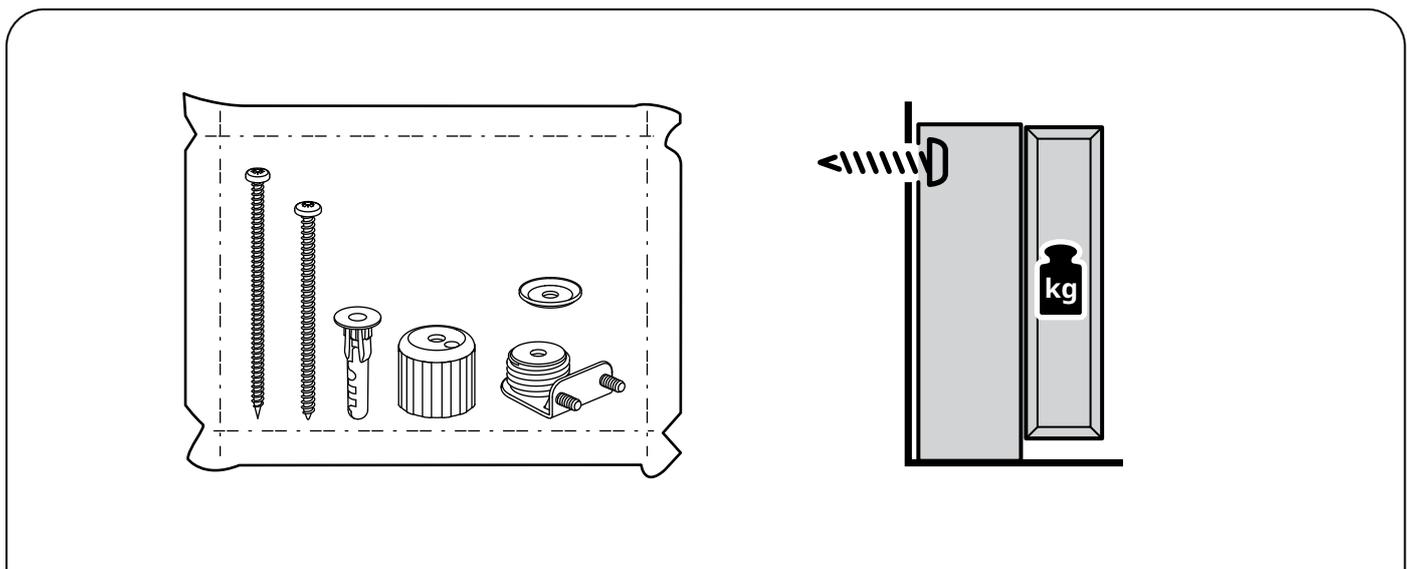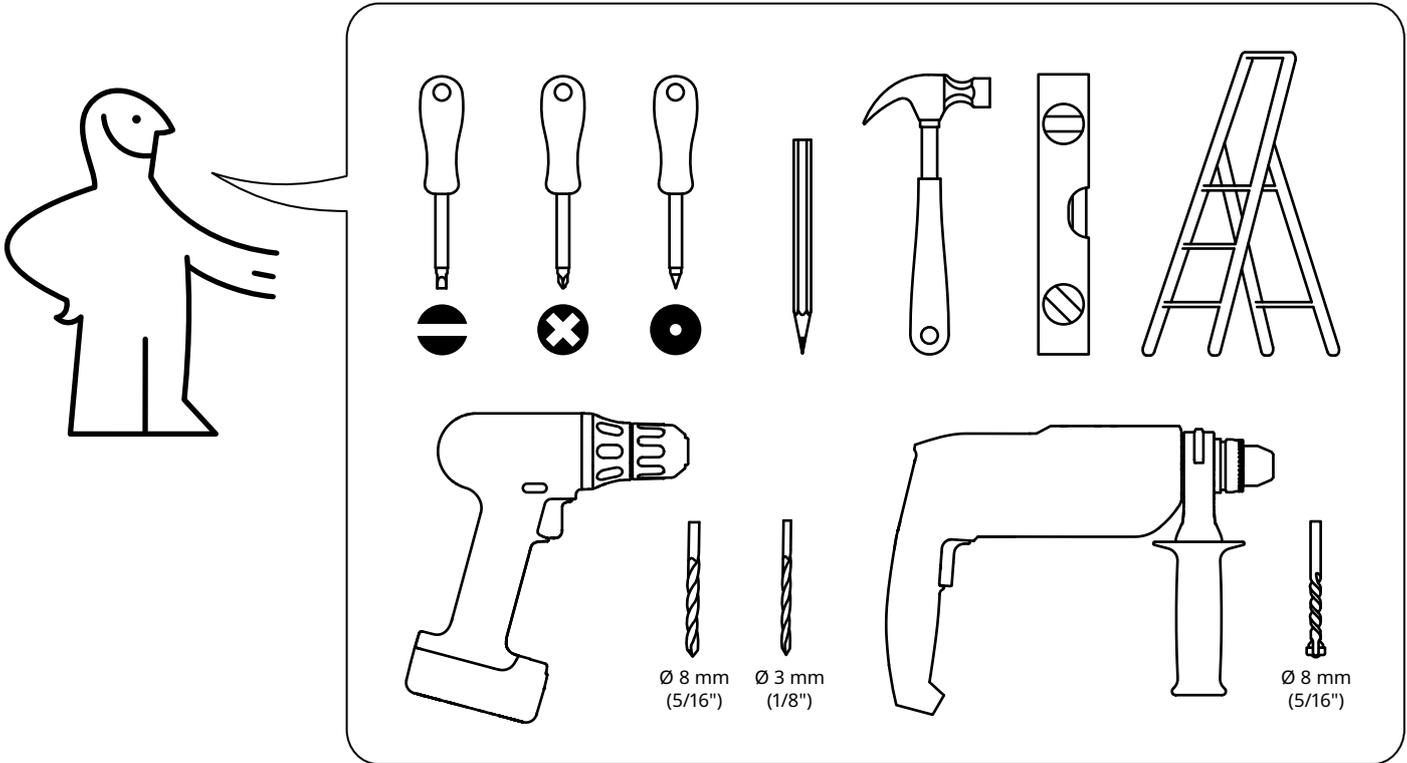


	A	B	C
 <p data-bbox="135 1758 386 1787">www.IKEA.com/secure-it</p>			
	<p data-bbox="454 1758 534 1803">$\text{Ø } 8 \text{ mm (5/16")}$</p> 	<p data-bbox="805 1758 885 1803">$\text{Ø } 8 \text{ mm (5/16")}$</p> 	<p data-bbox="1157 1758 1236 1803">$\text{Ø } 3 \text{ mm (1/8")}$</p> 

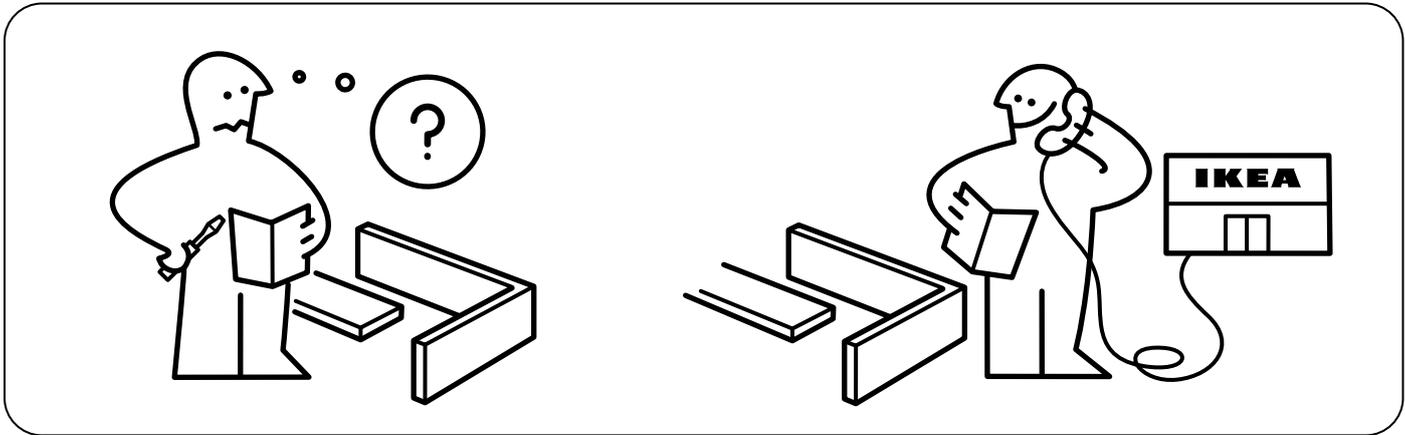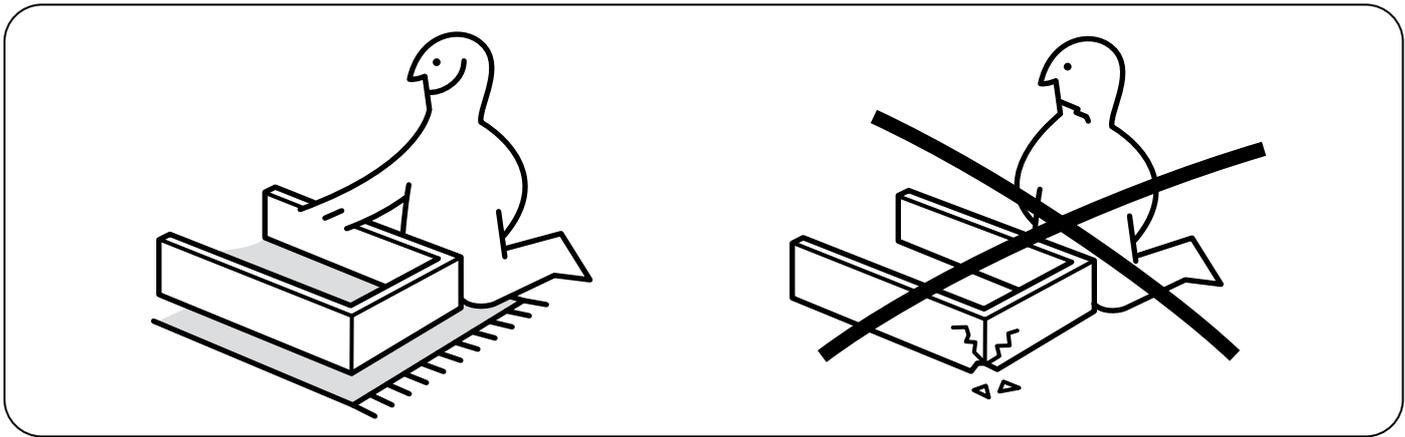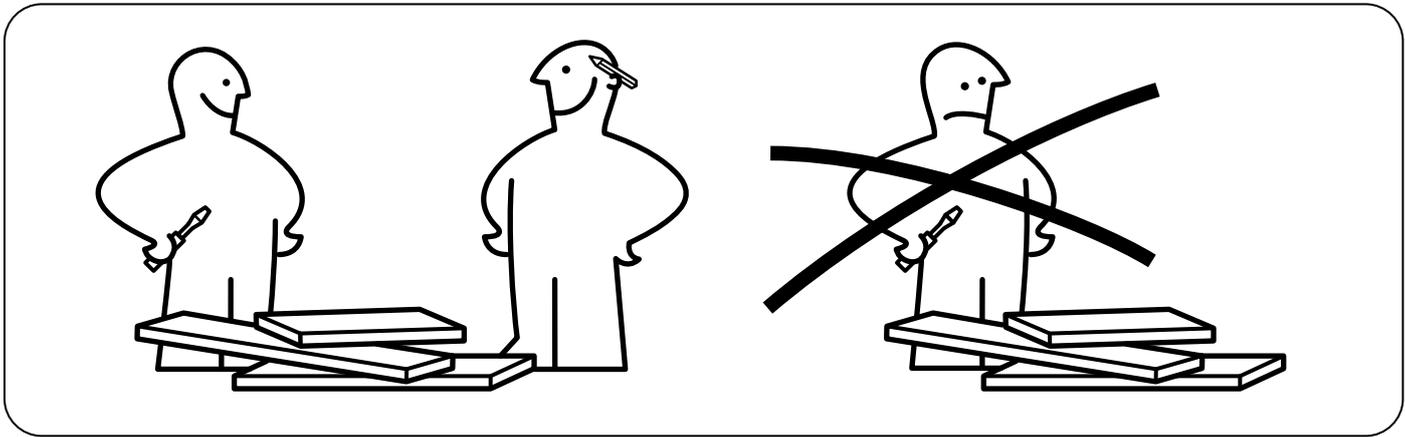

 


100214

 8x



10124042

4x

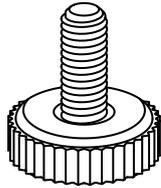

10127224

4x




101449

4x



115339

2x

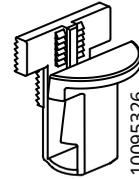


10095326

16x



10095315

16x

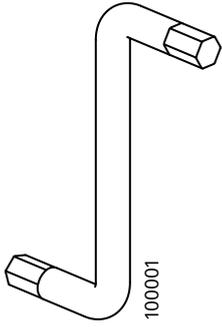


100001

1x




101345

8x

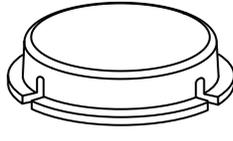


10005905

 2x




10127151

4x

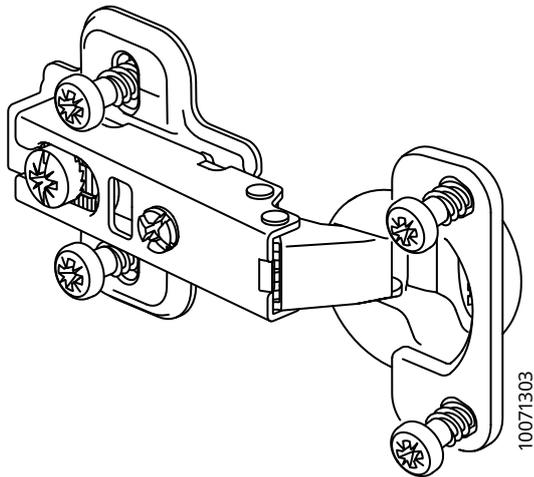


10071303

3x

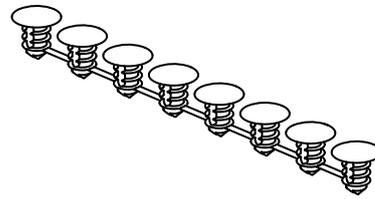


10122530

 2x




10116098

 2x




10116097

2x

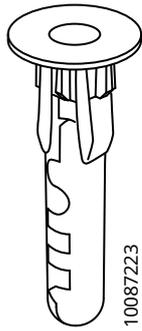


10087223

2x

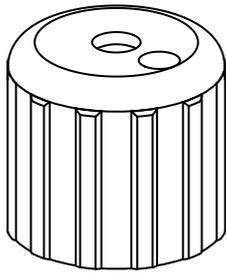


150689

 2x



126916



2x

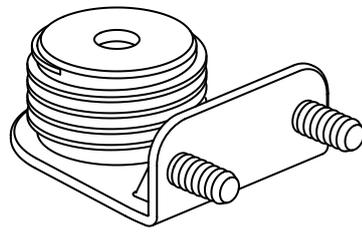


150688

2x


1

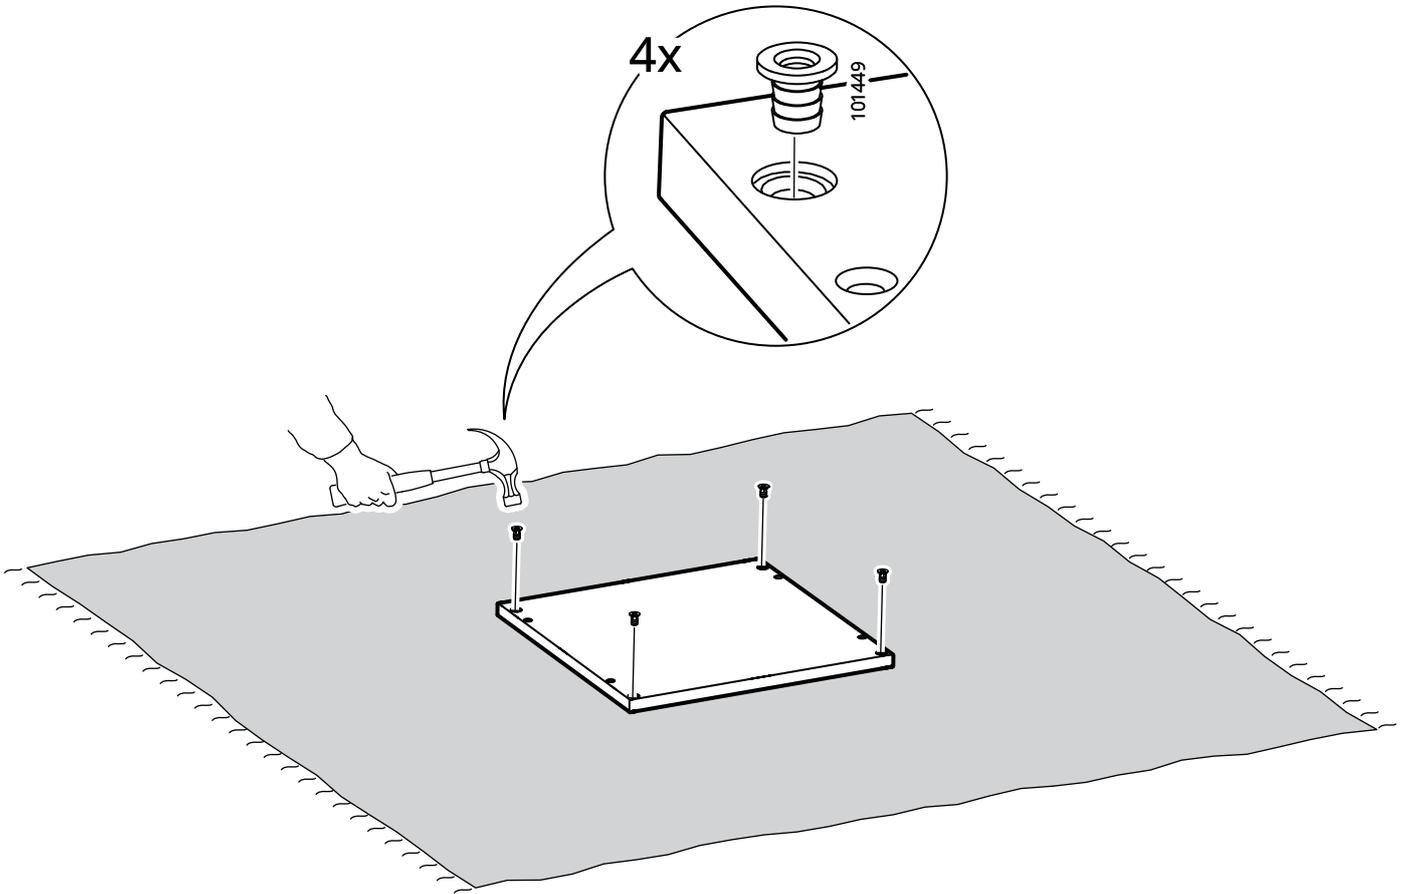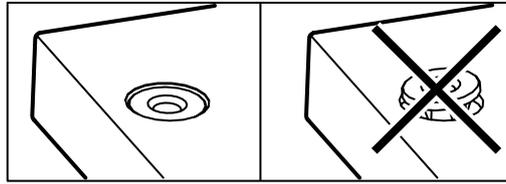


2

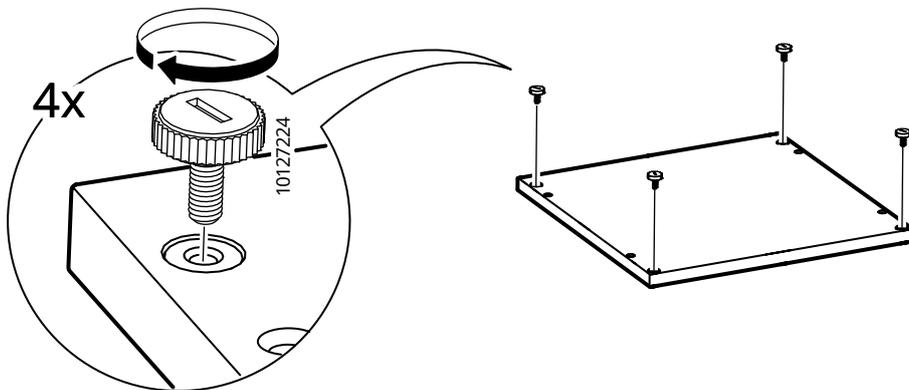


3

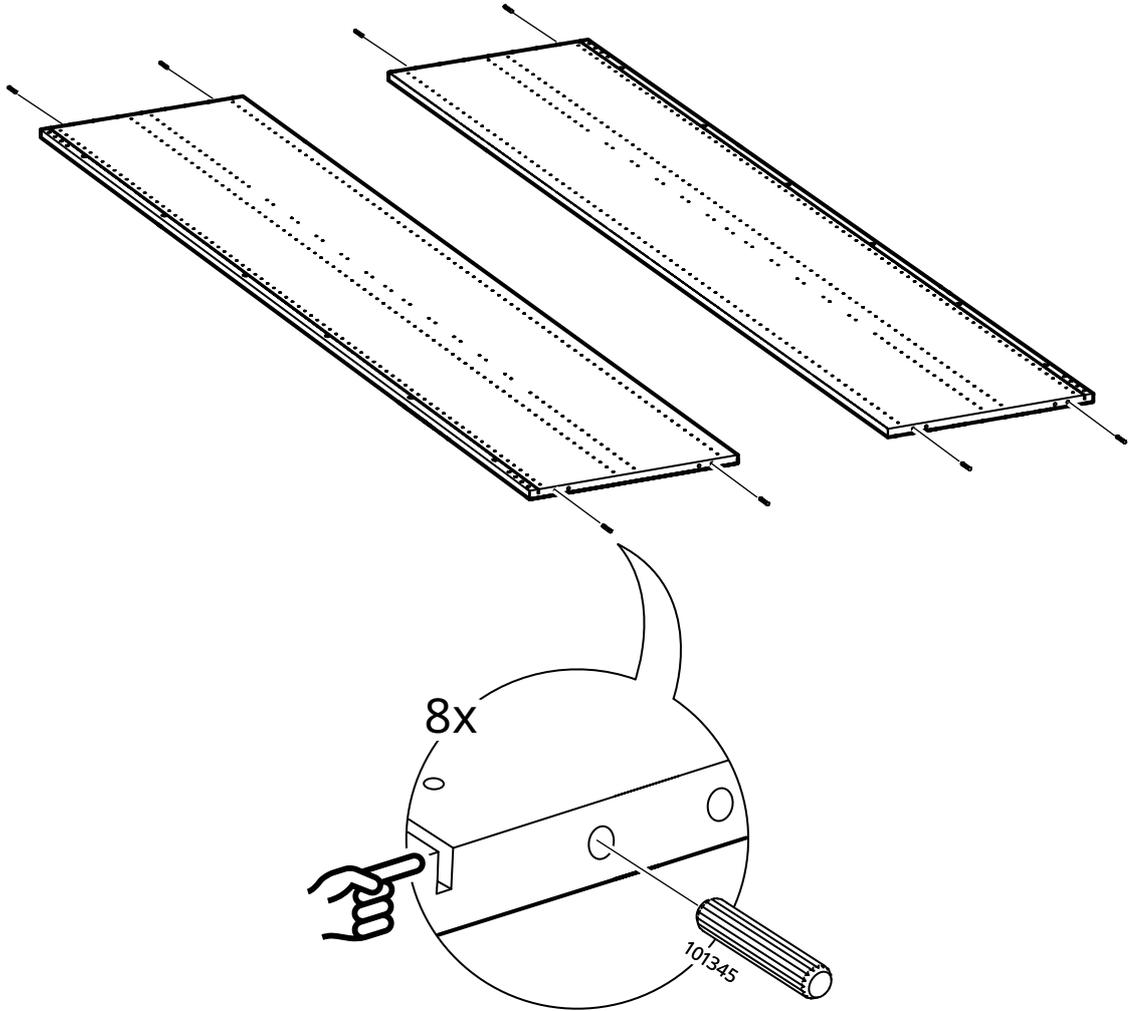


4

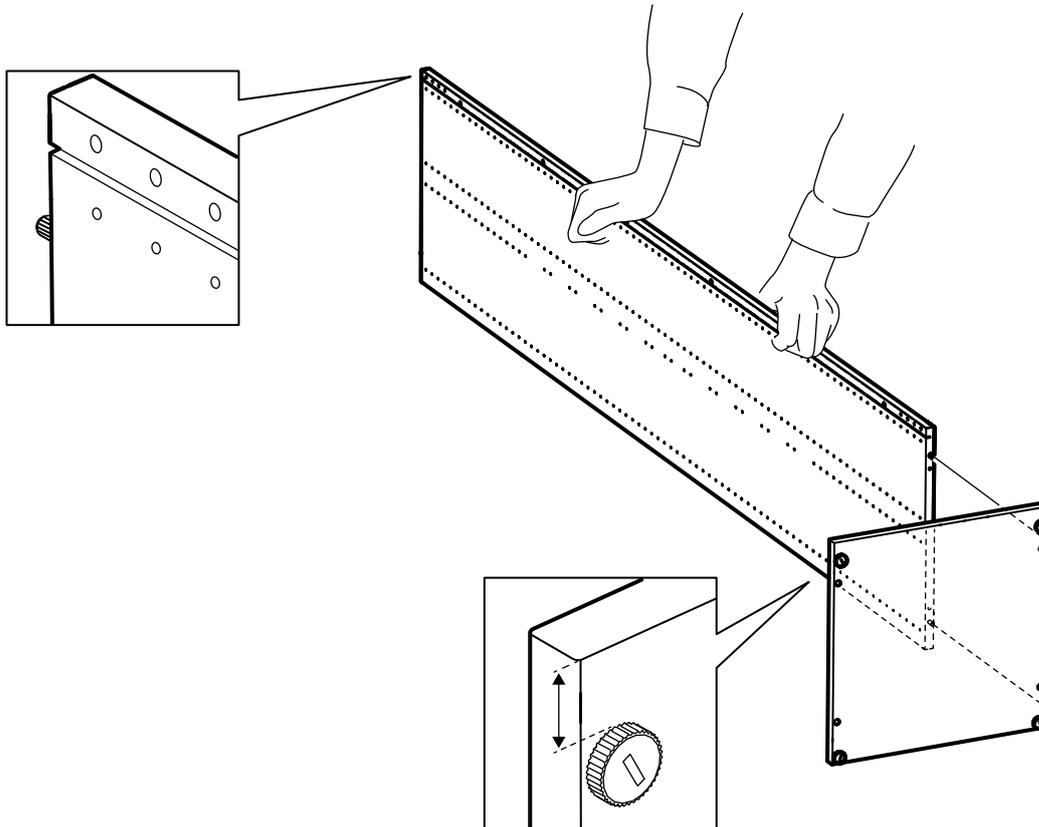




5

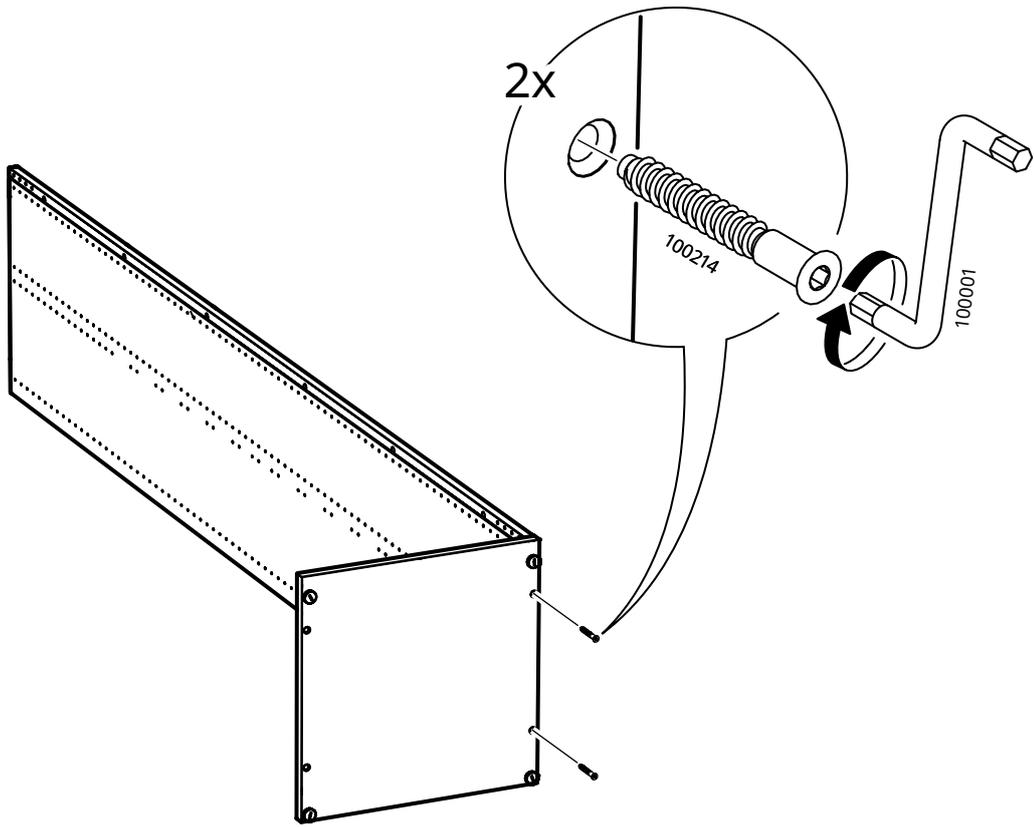


6

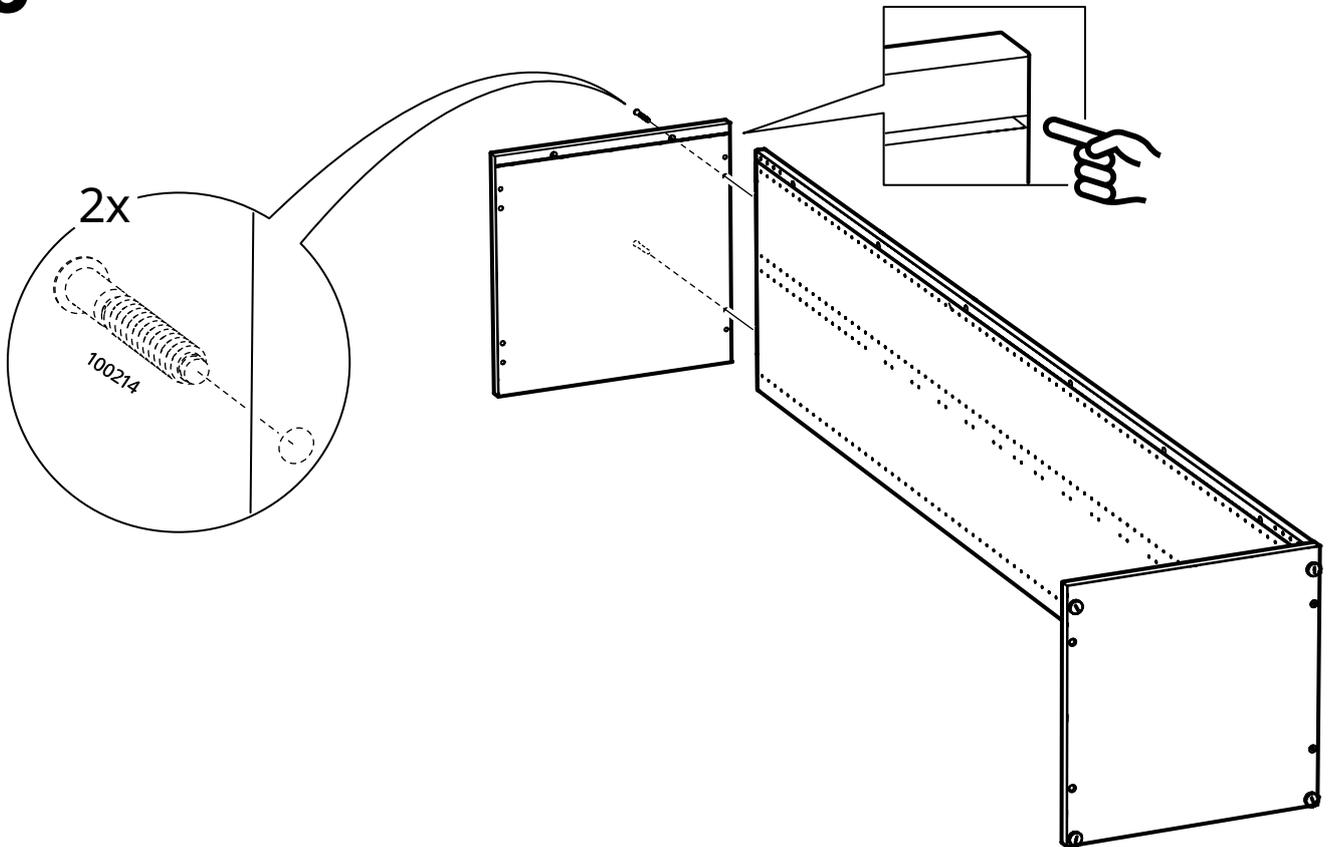


7

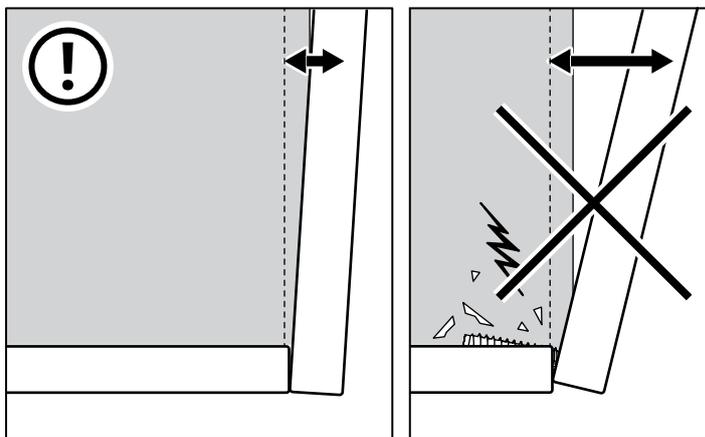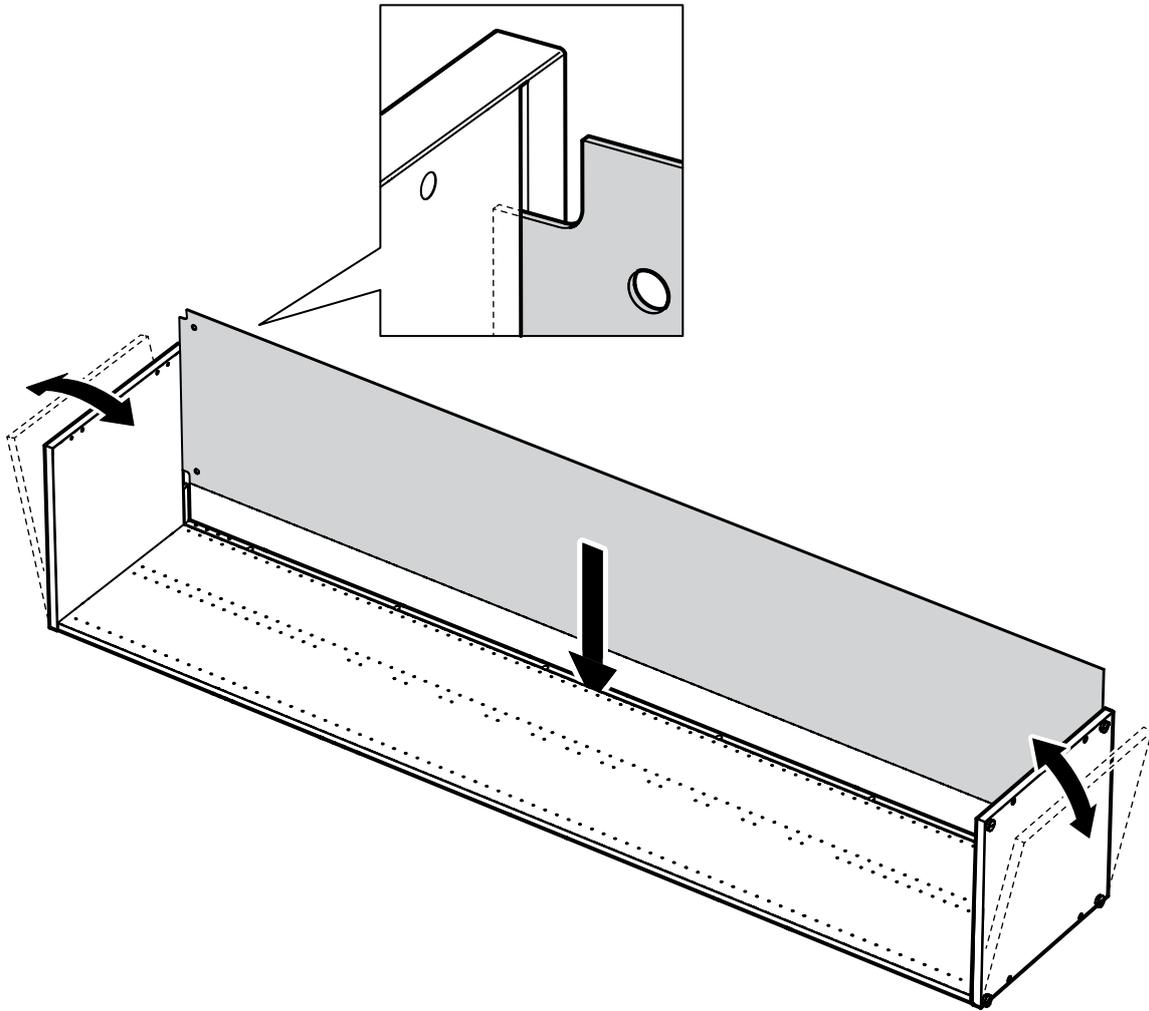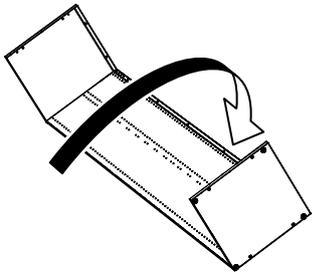


8

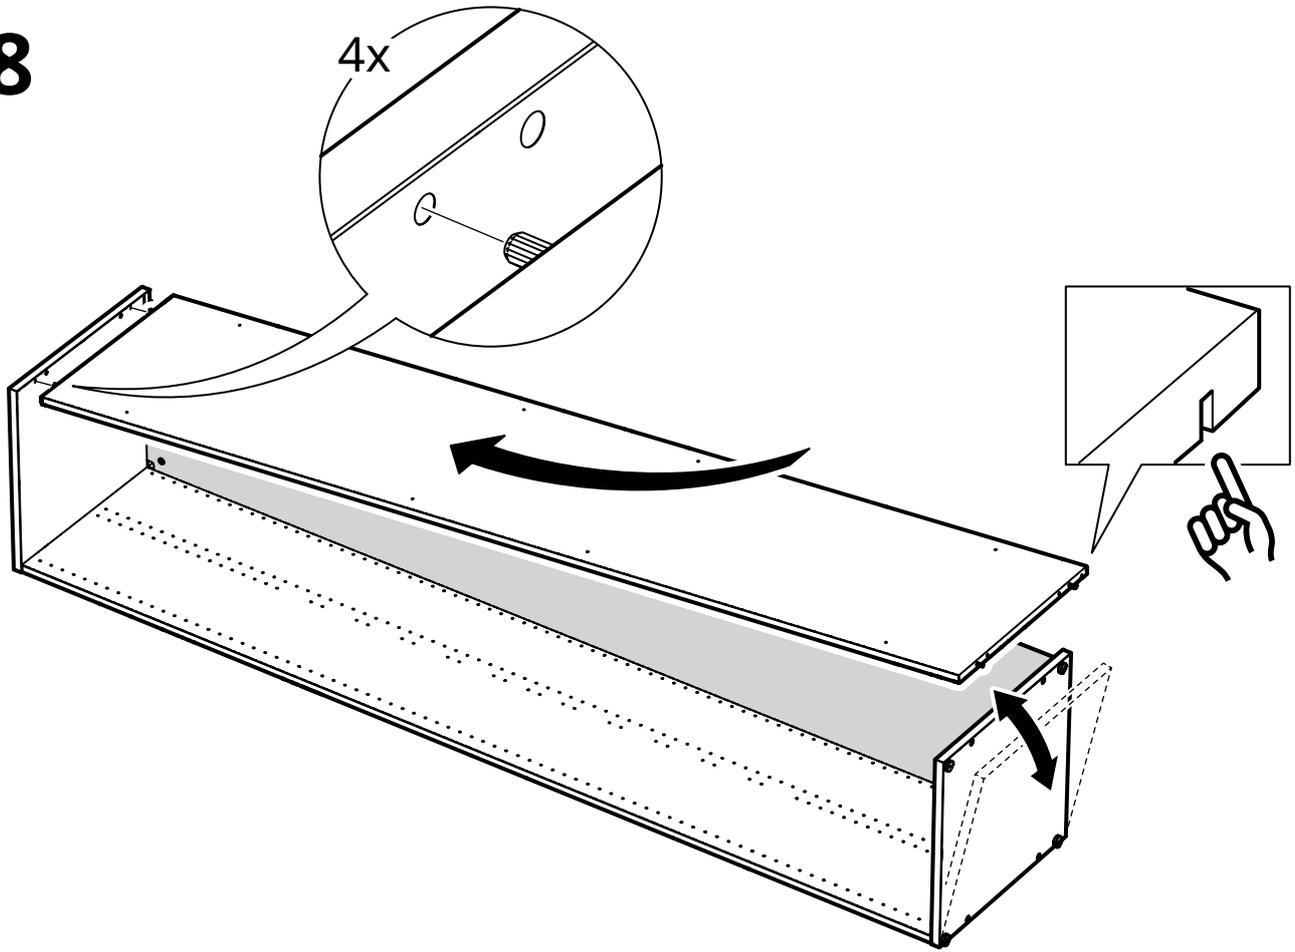


9


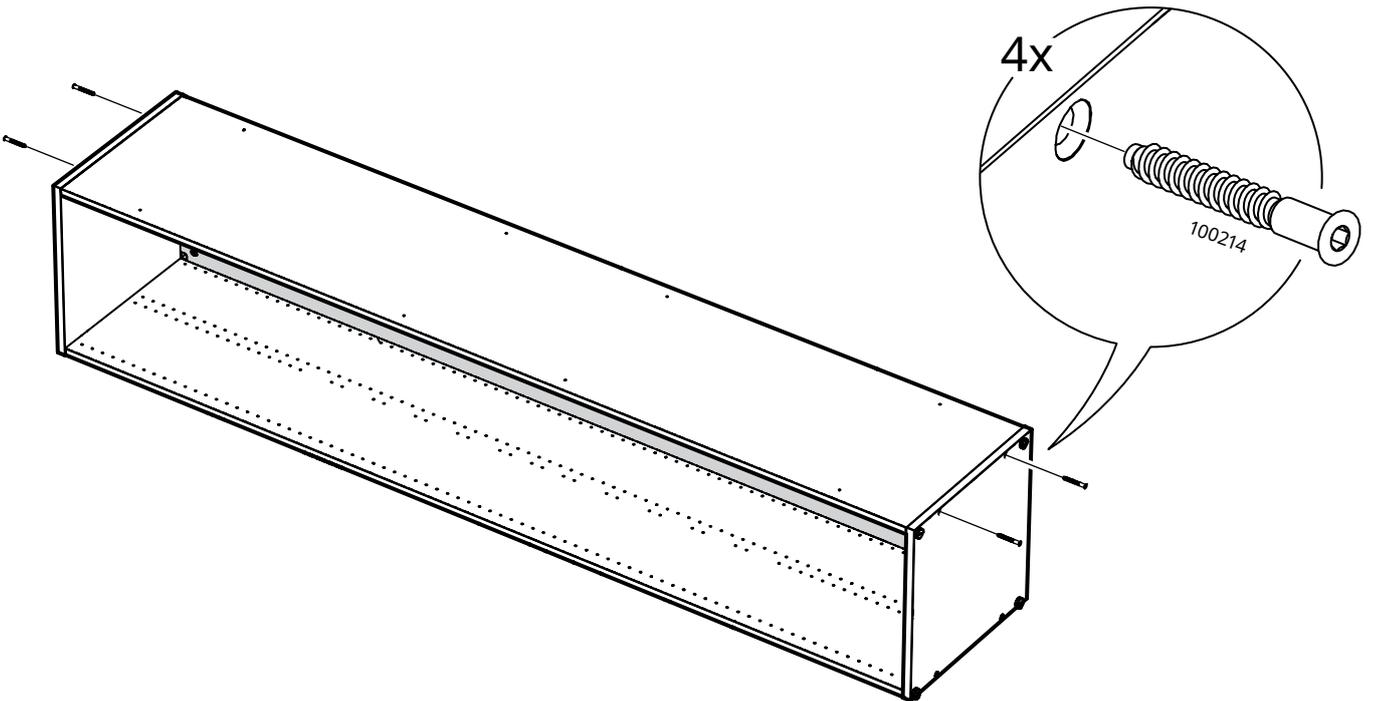


10

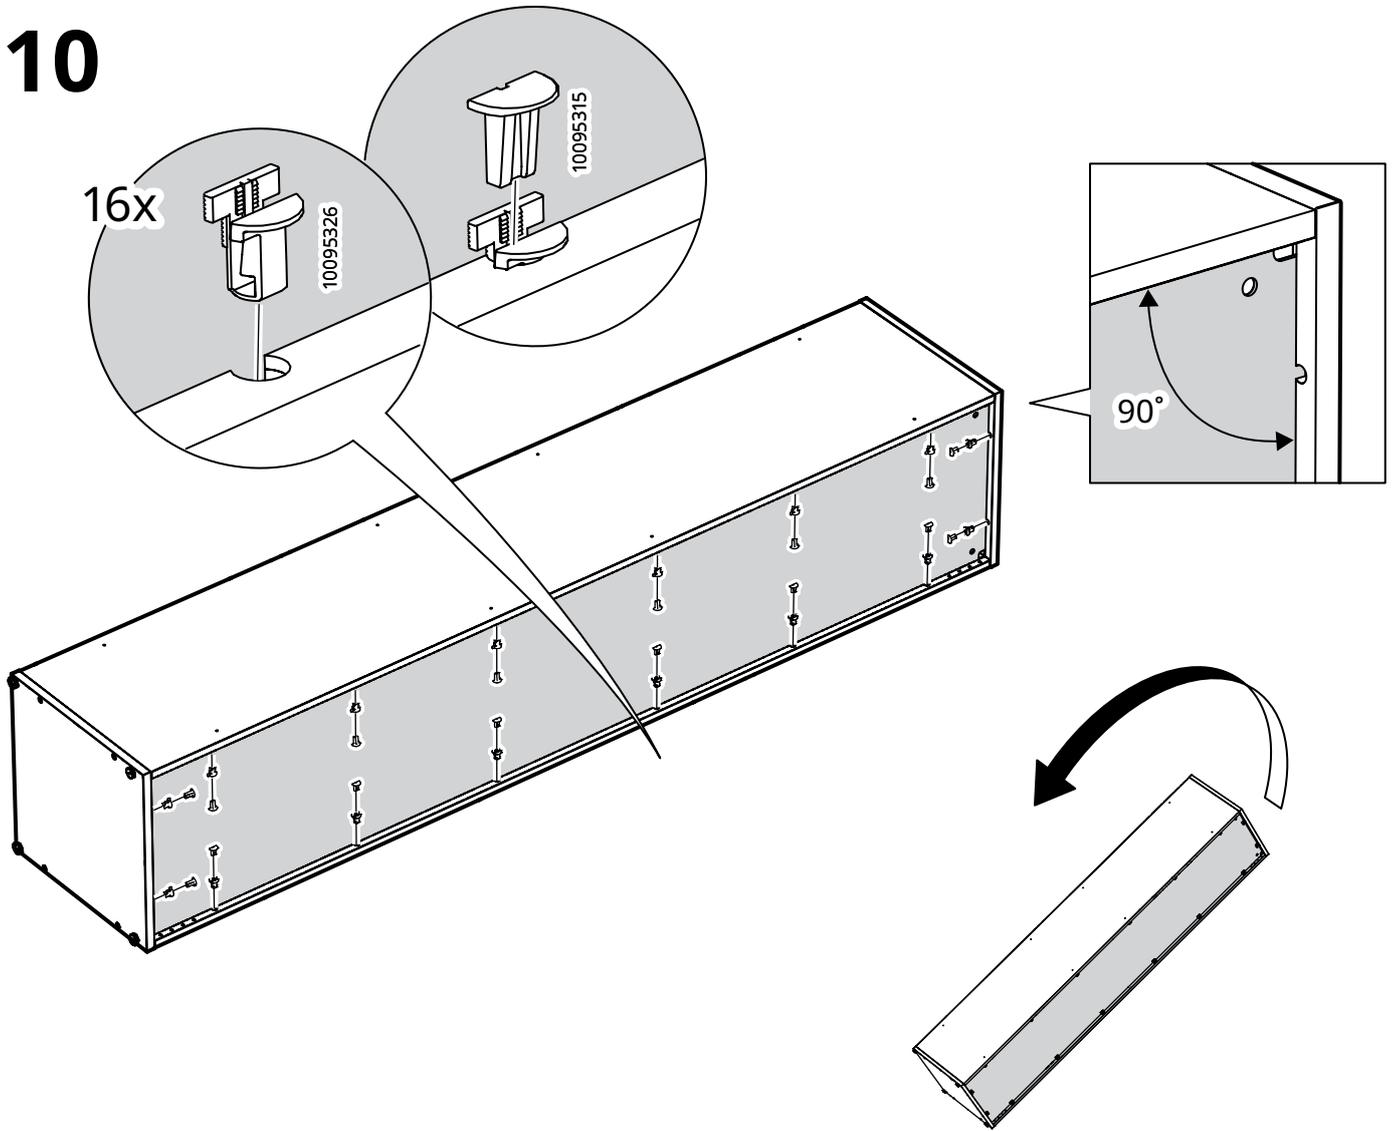


11

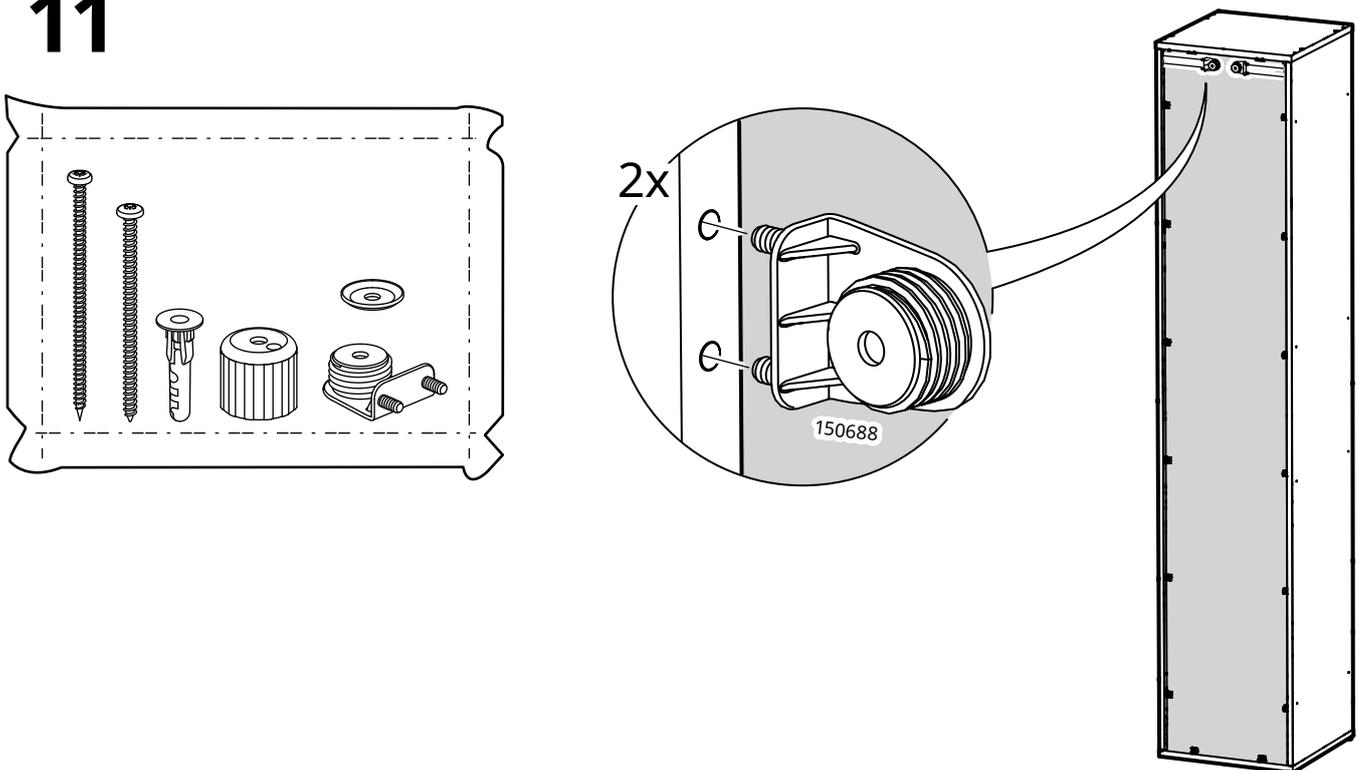


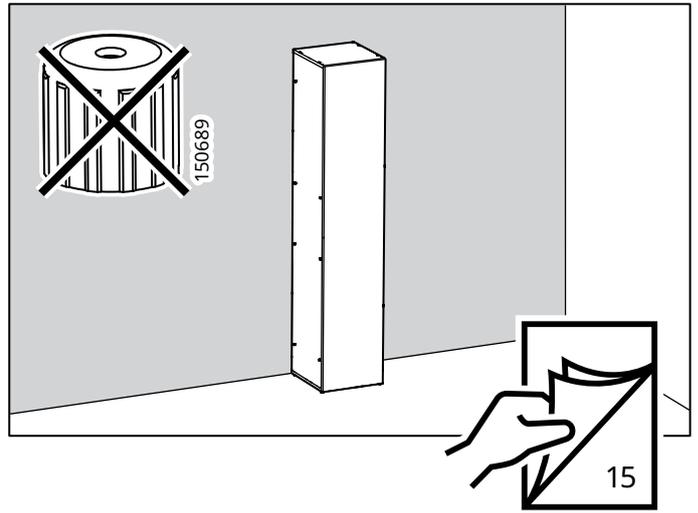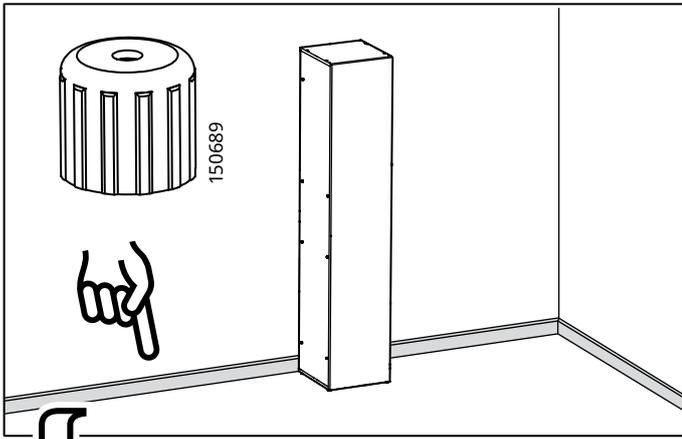


12


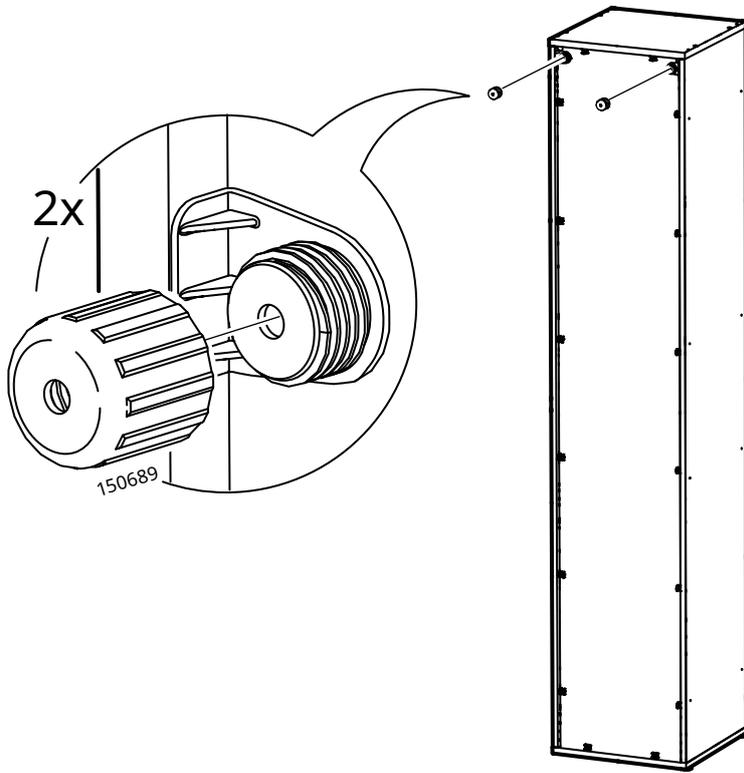


13

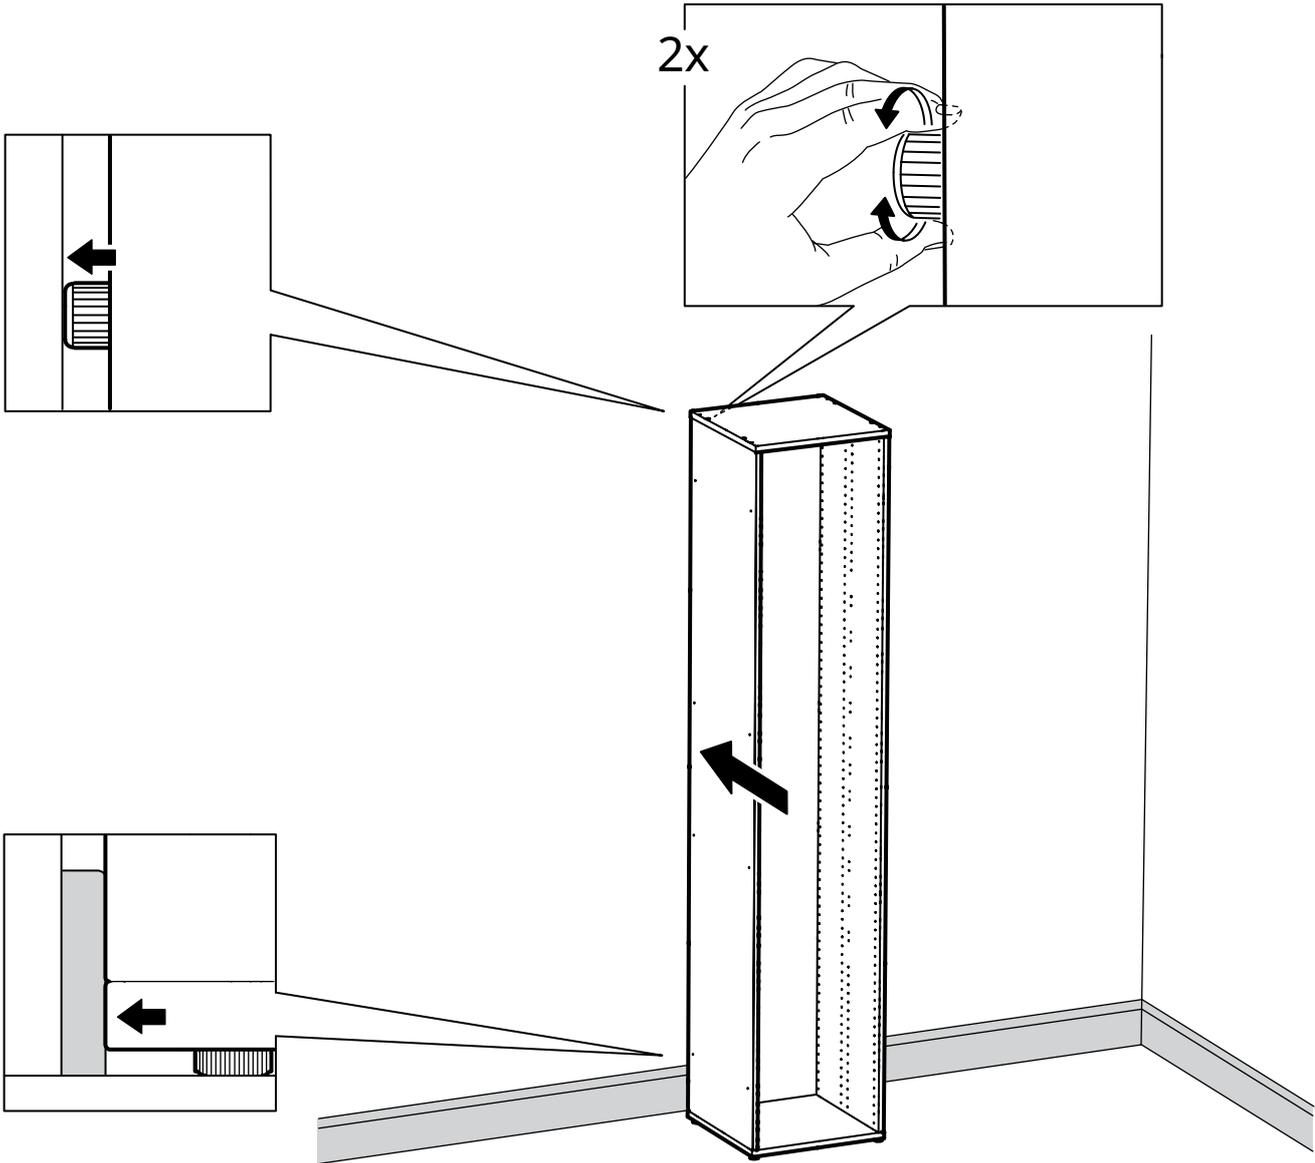


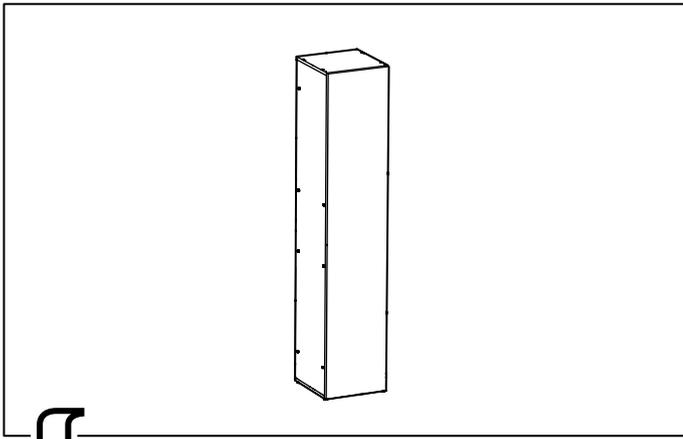

14

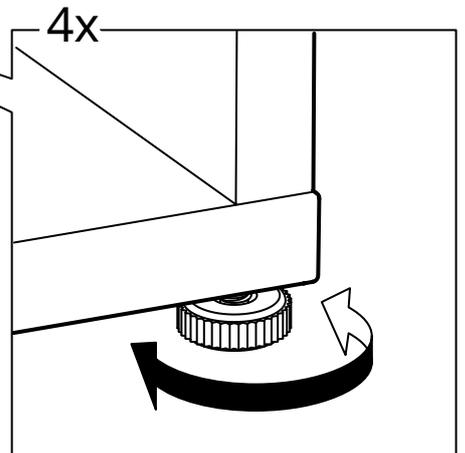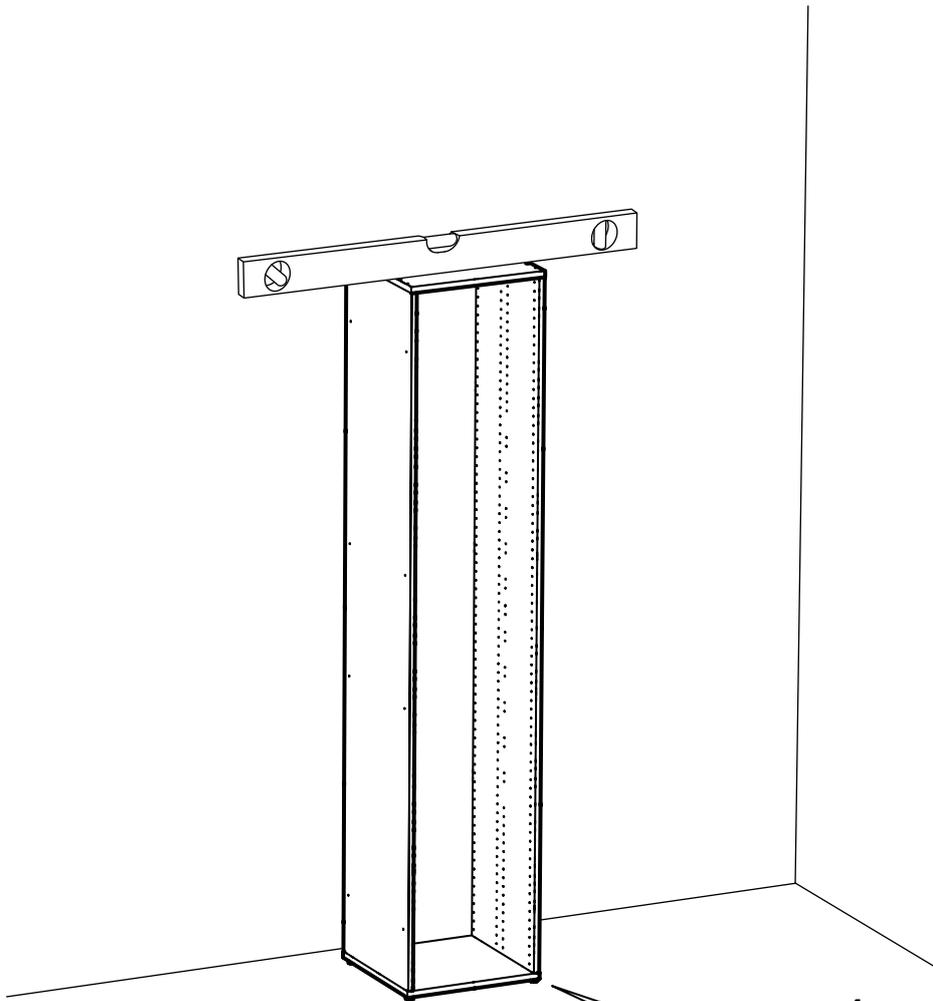


15

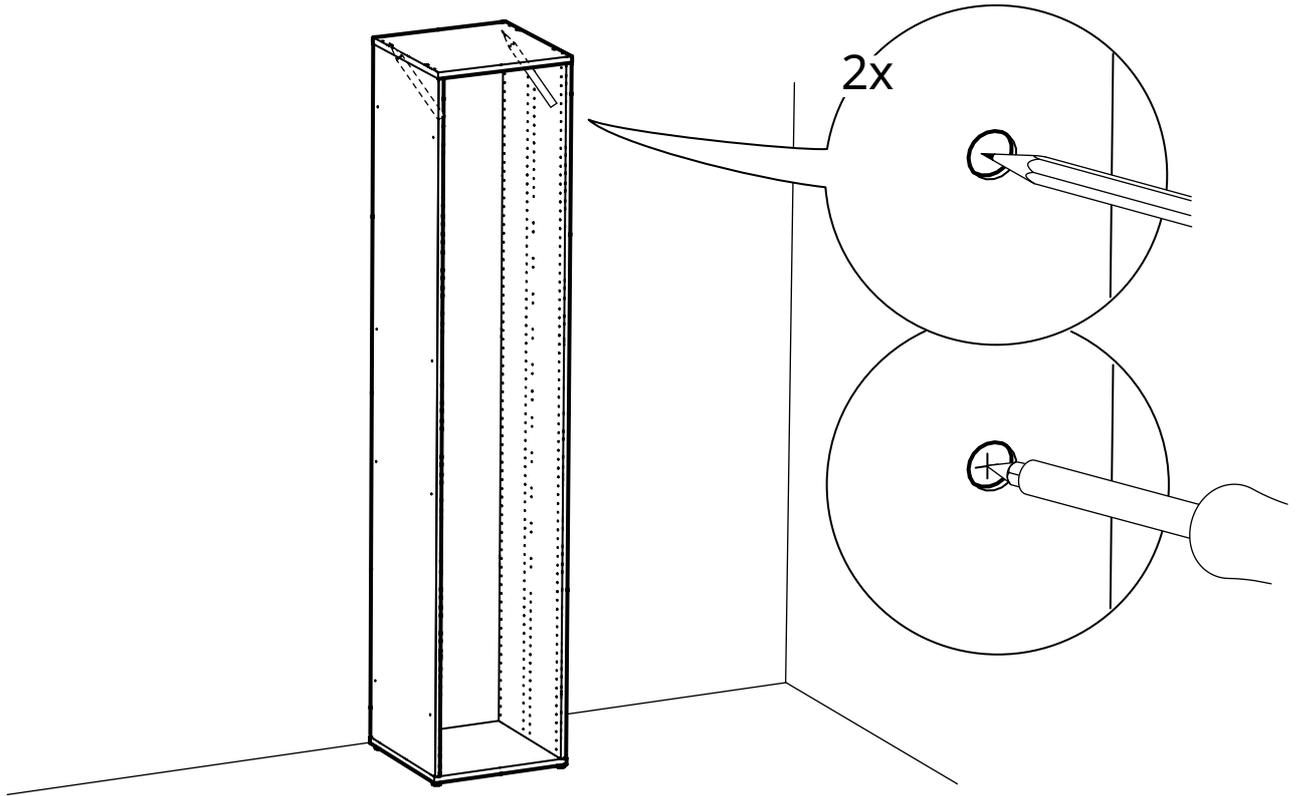

16

x x

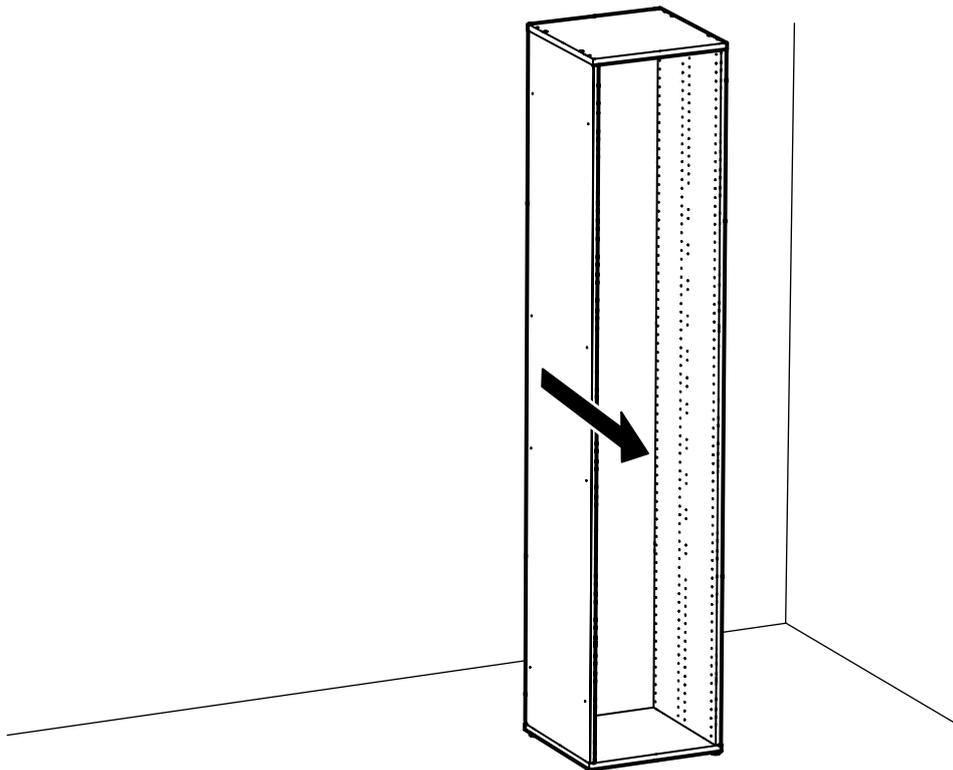




www.IKEA.com/secure-it



www.IKEA.cn/secure-it

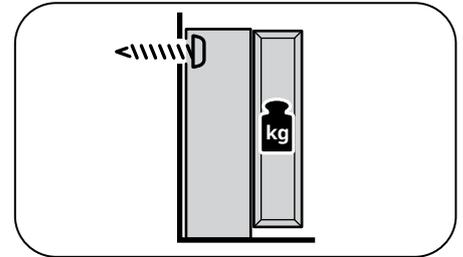

17

English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

A

Ø 8 mm (5/16")

1

70 mm (2 3/4")

2

18

B

Ø 8 mm (5/16")

1

≈ 30 mm (≈ 1 1/4")

2

19


C

Ø 3 mm (1/8")


1

≈ 30 mm (≈ 1 1/4")



21


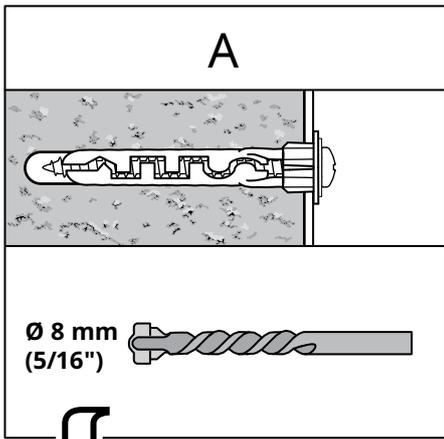


↕
18

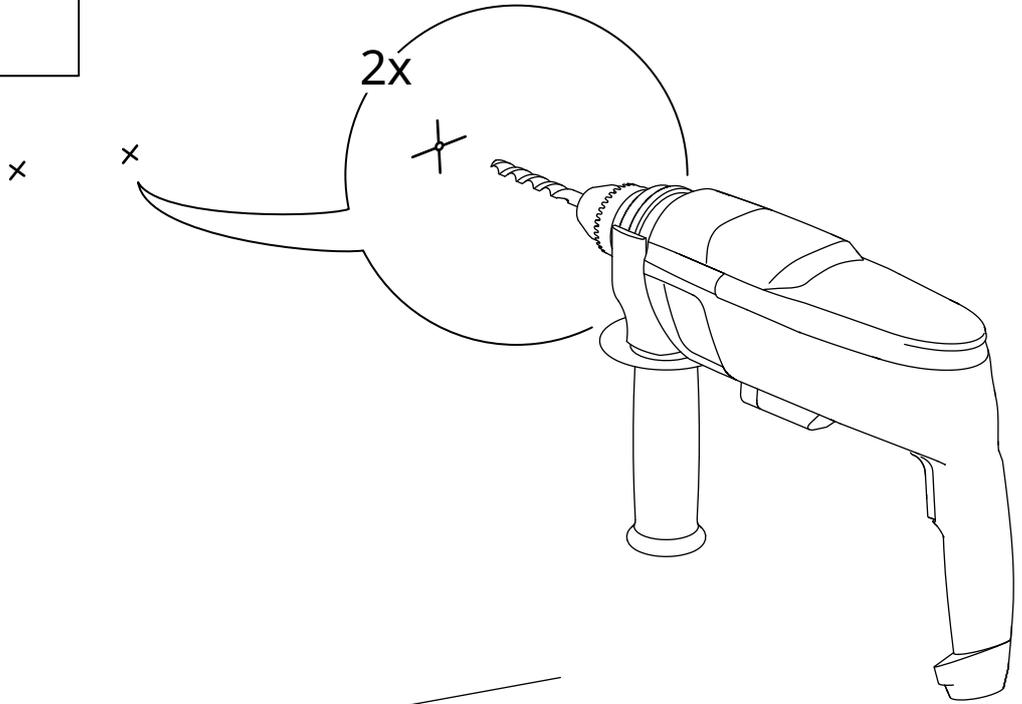


19

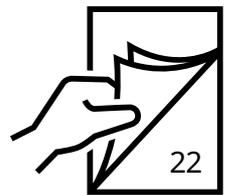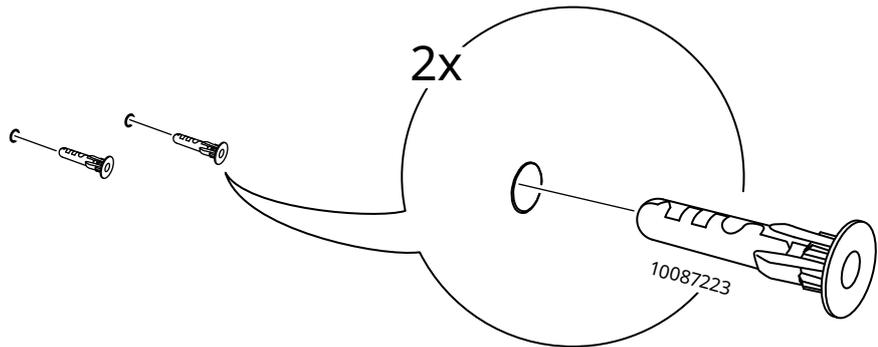


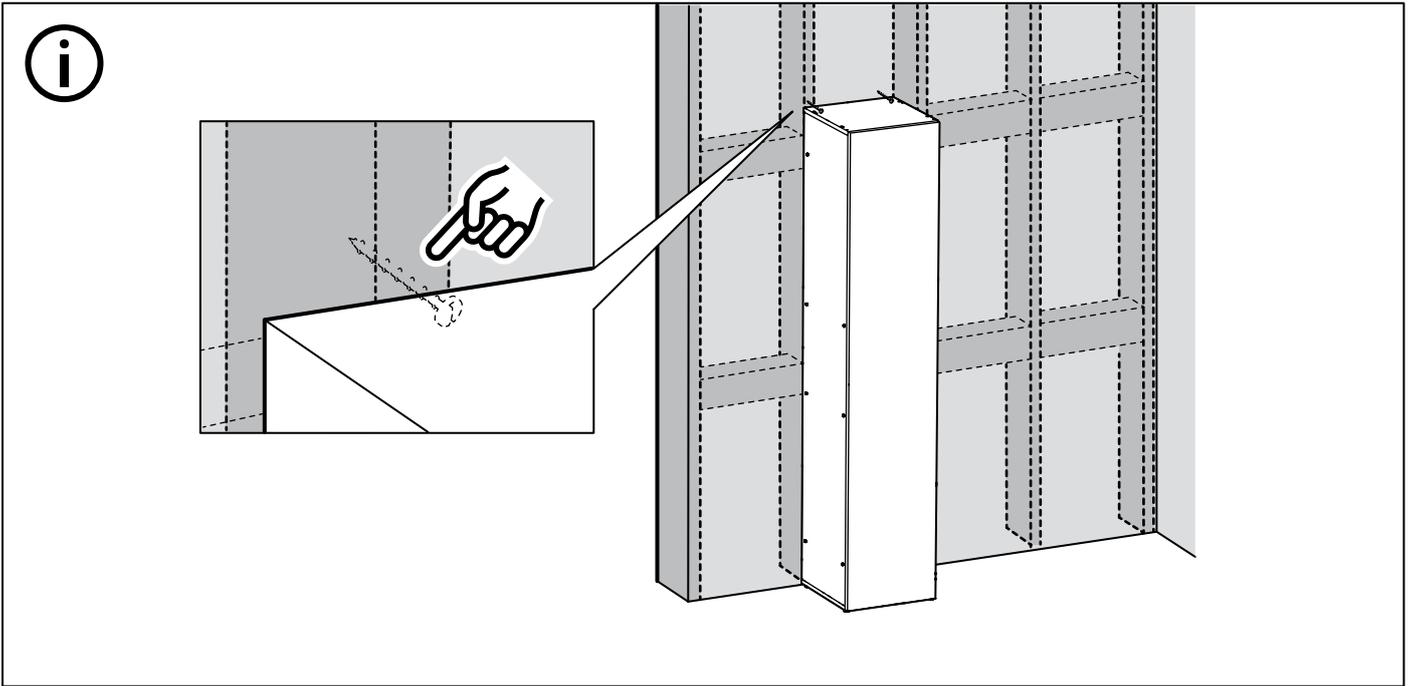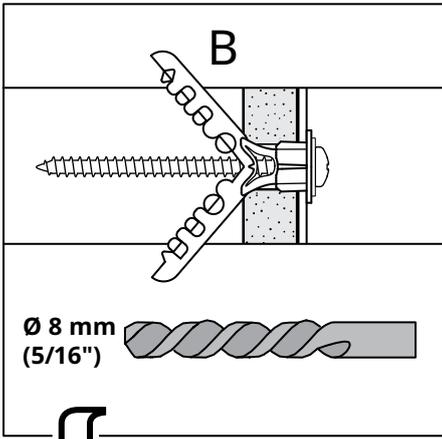


17

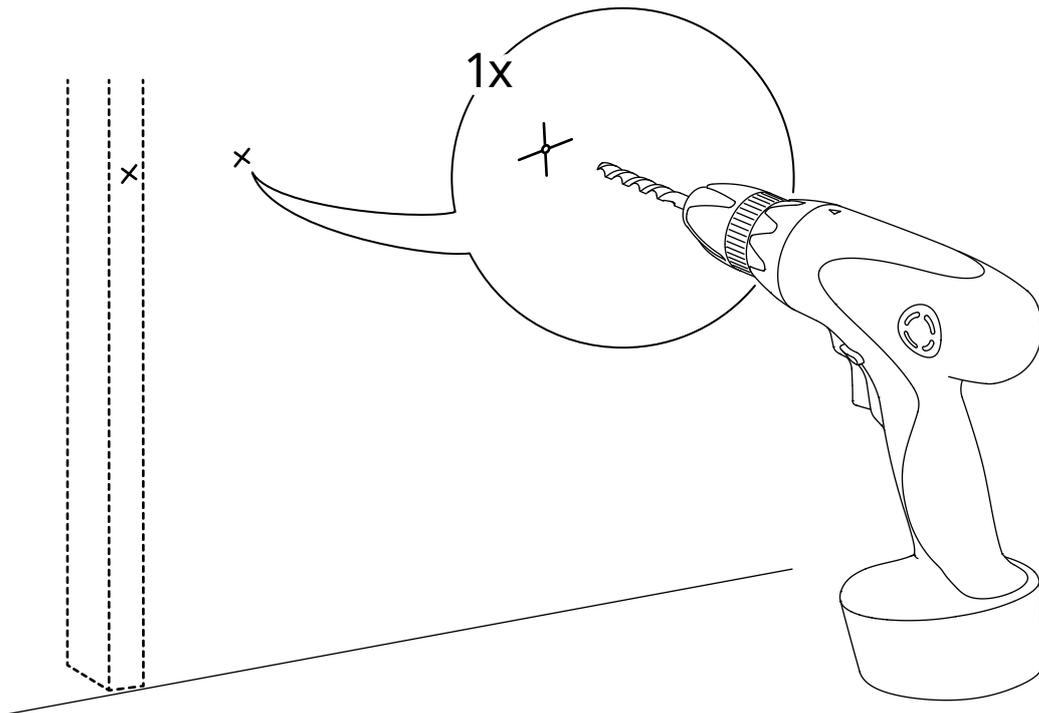




18

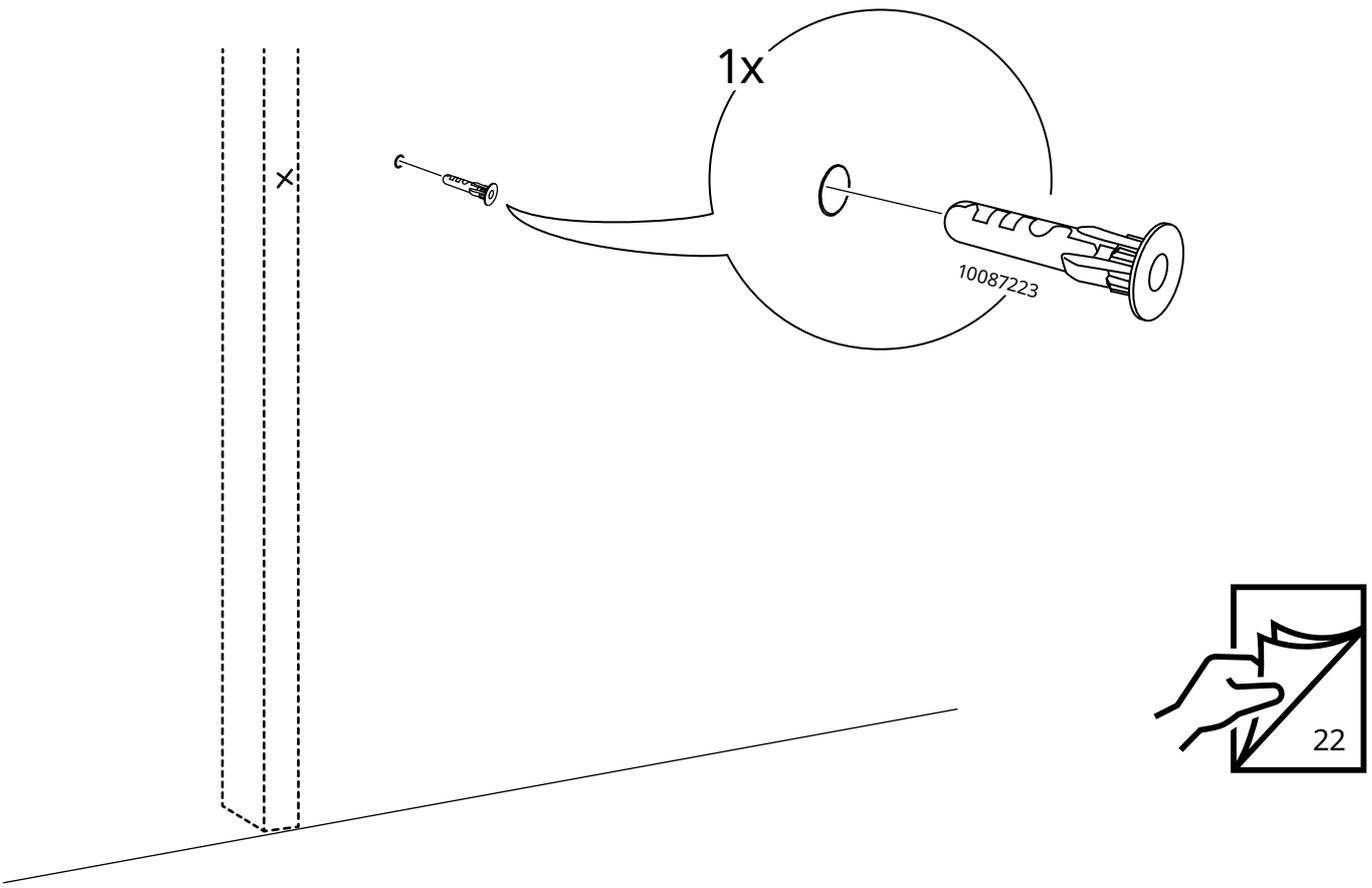





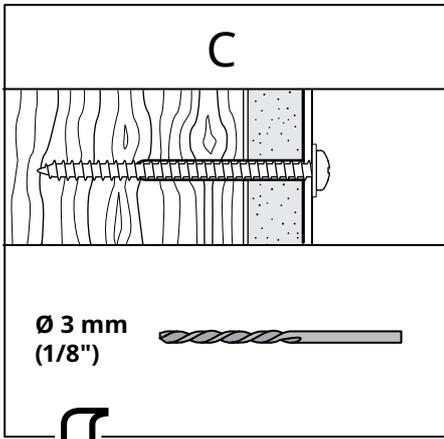




17

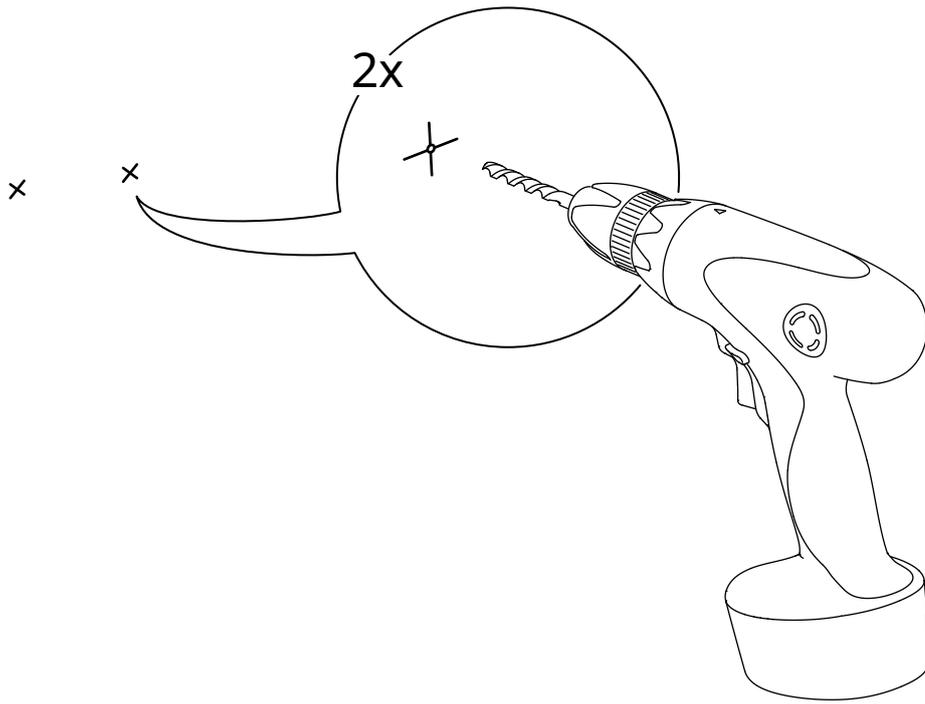




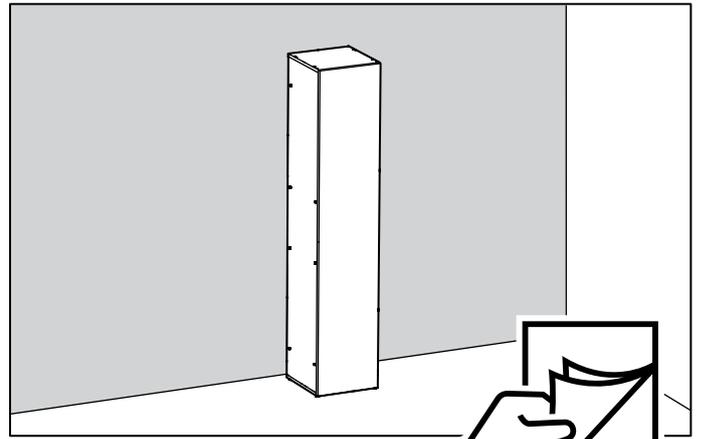
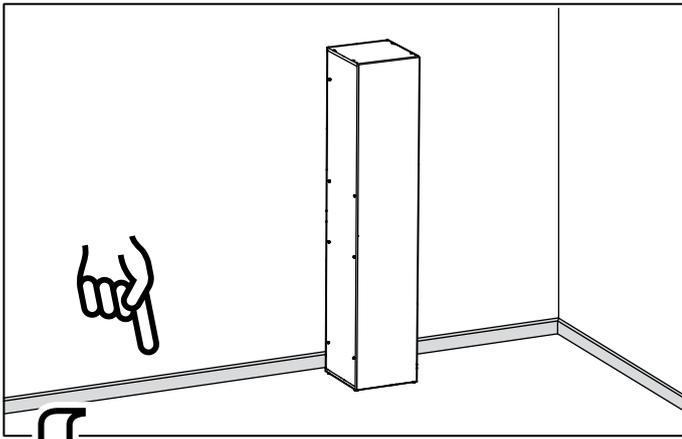



20

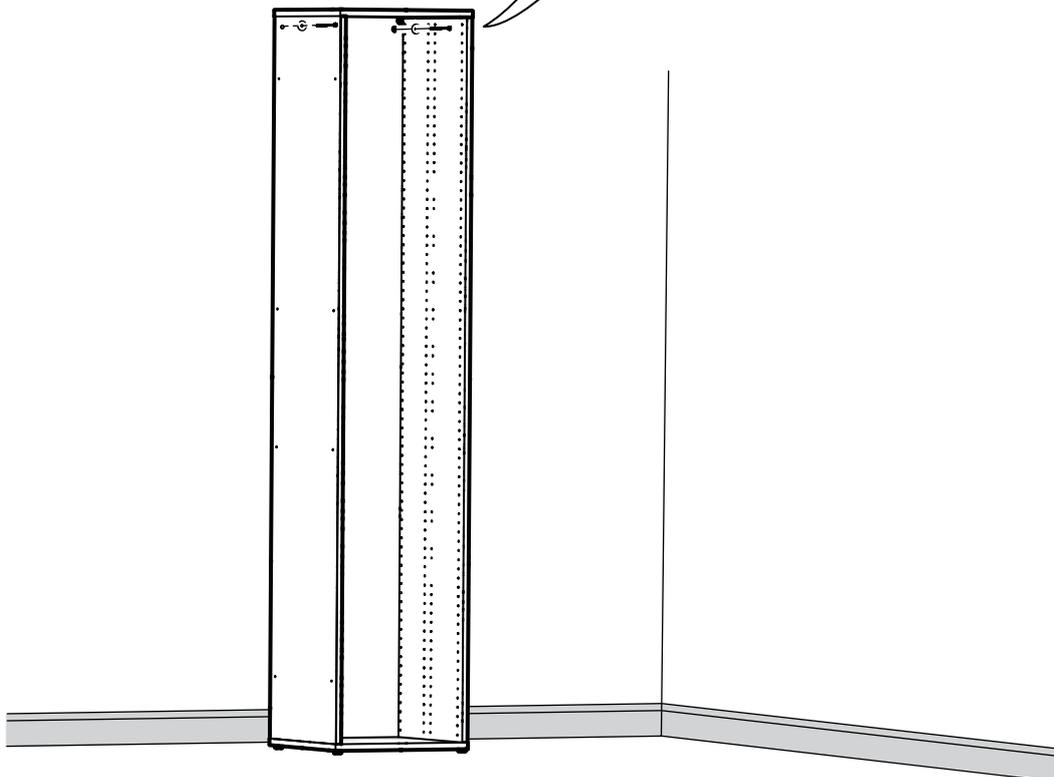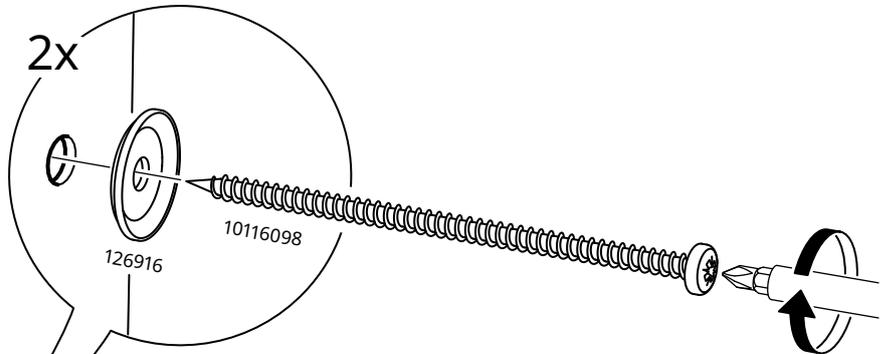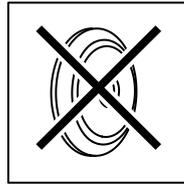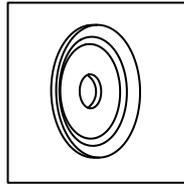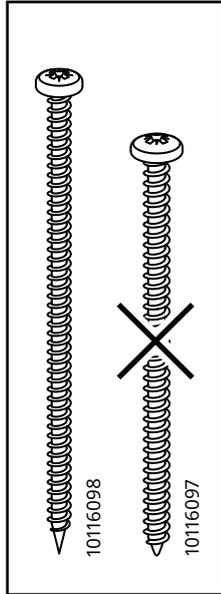

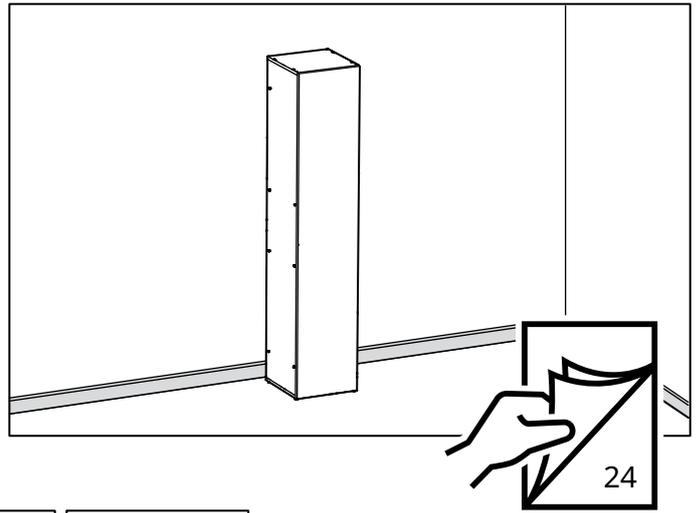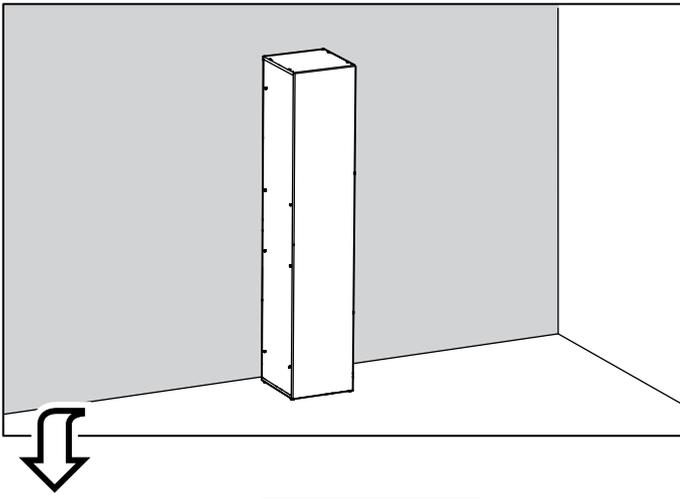








19

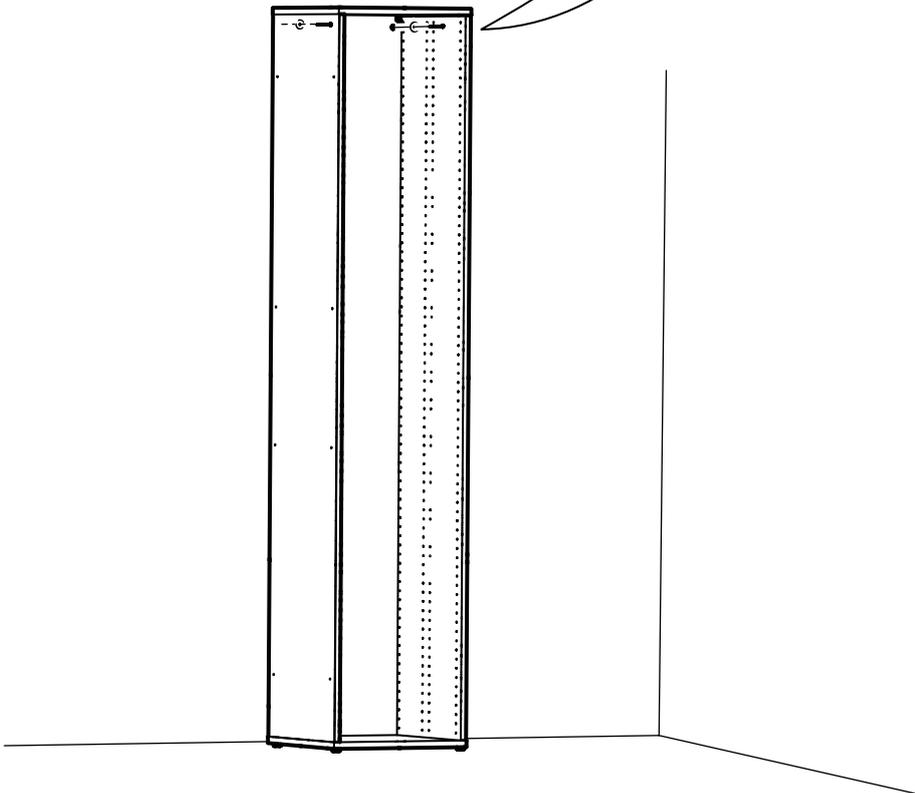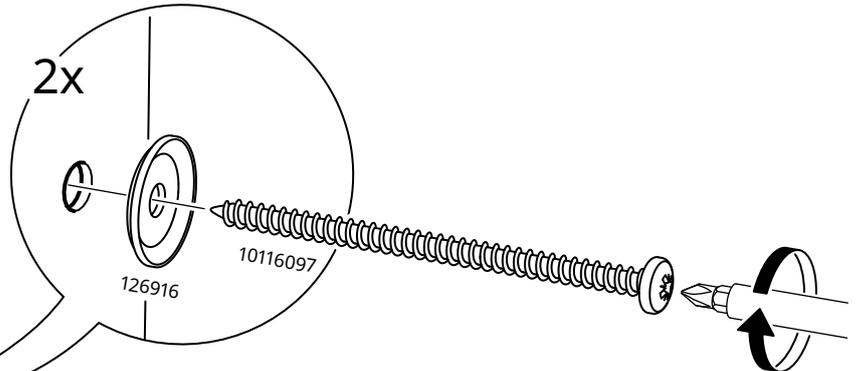
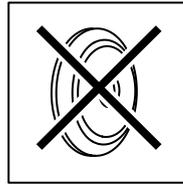
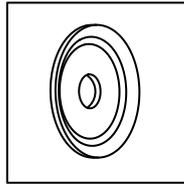
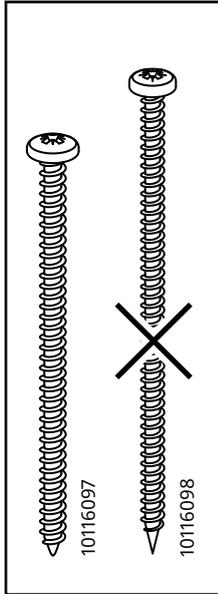


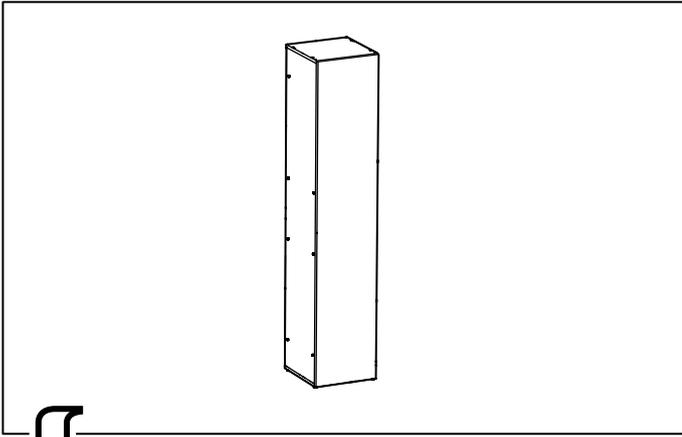


21

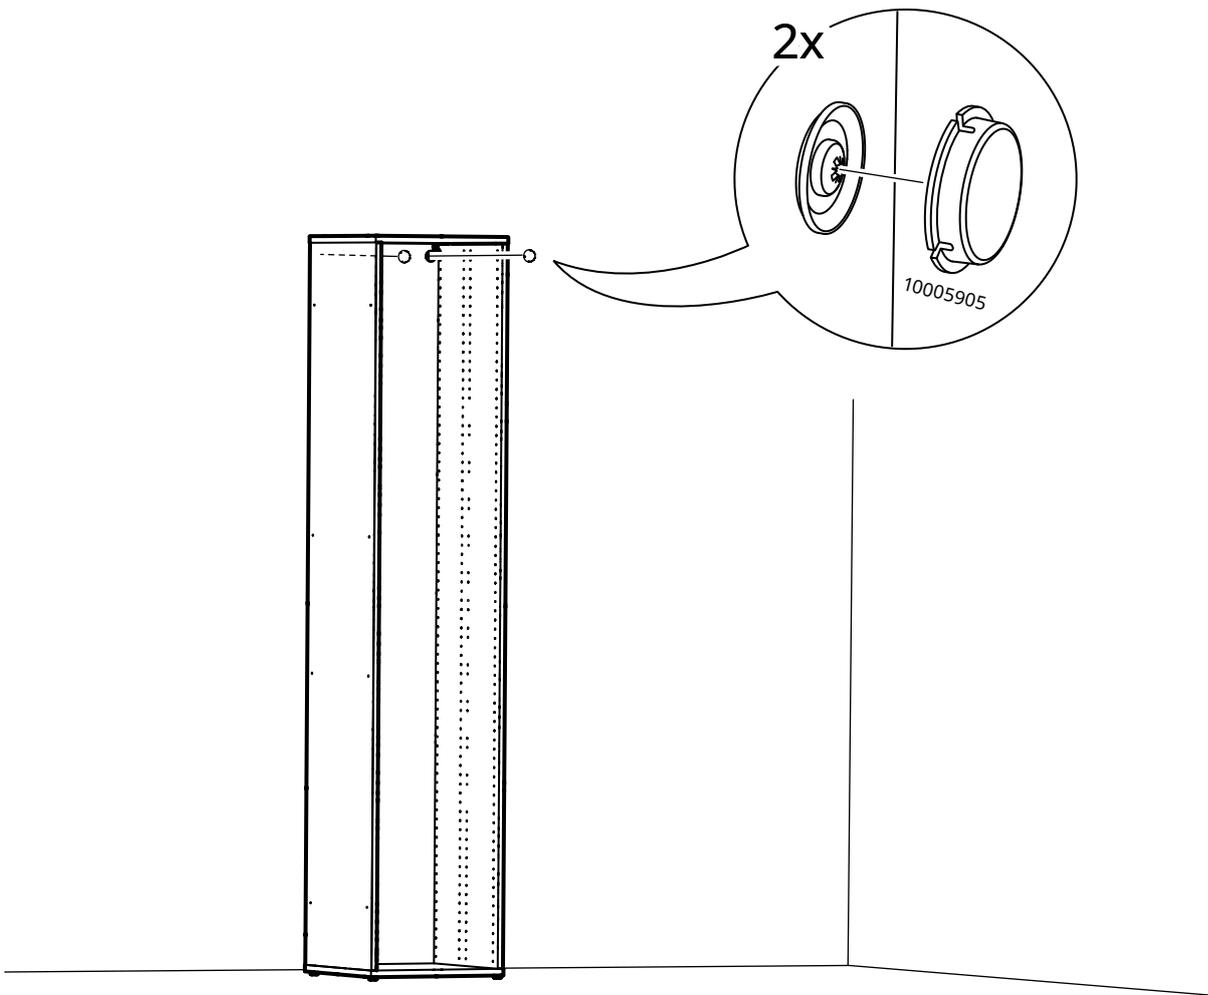

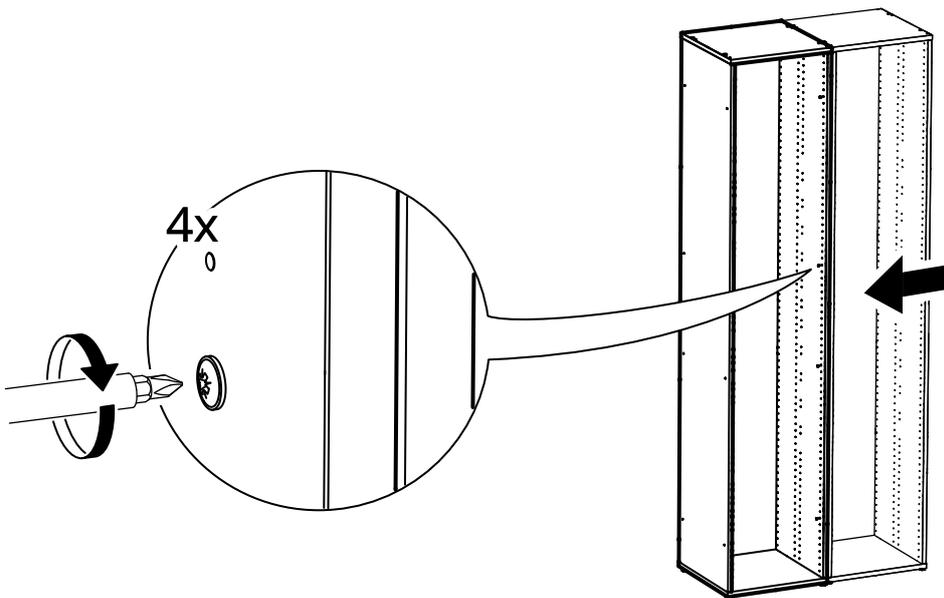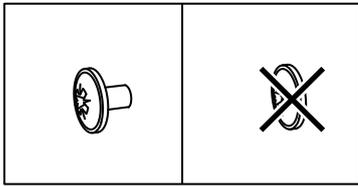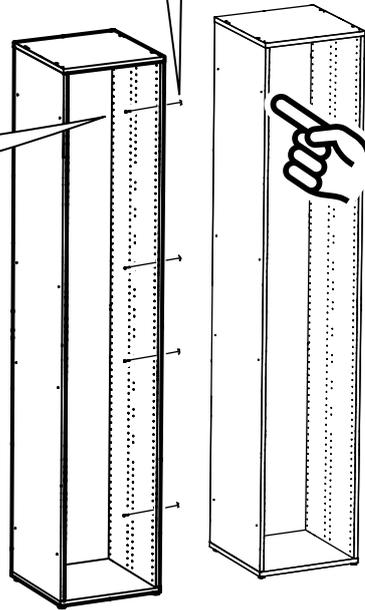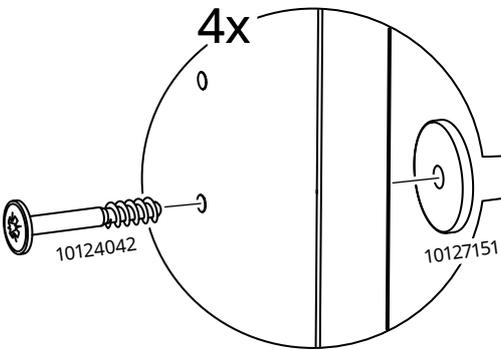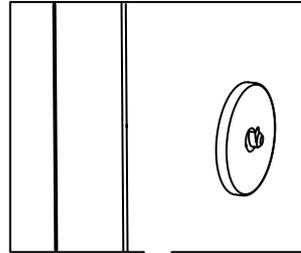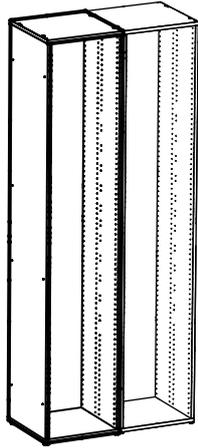


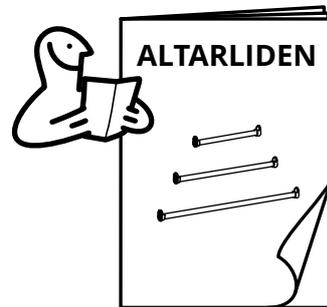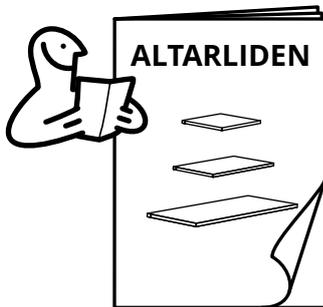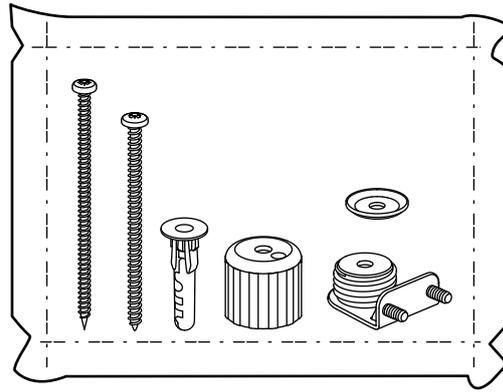
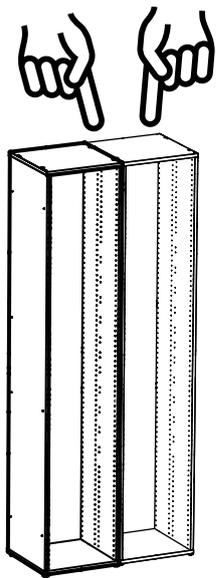


22


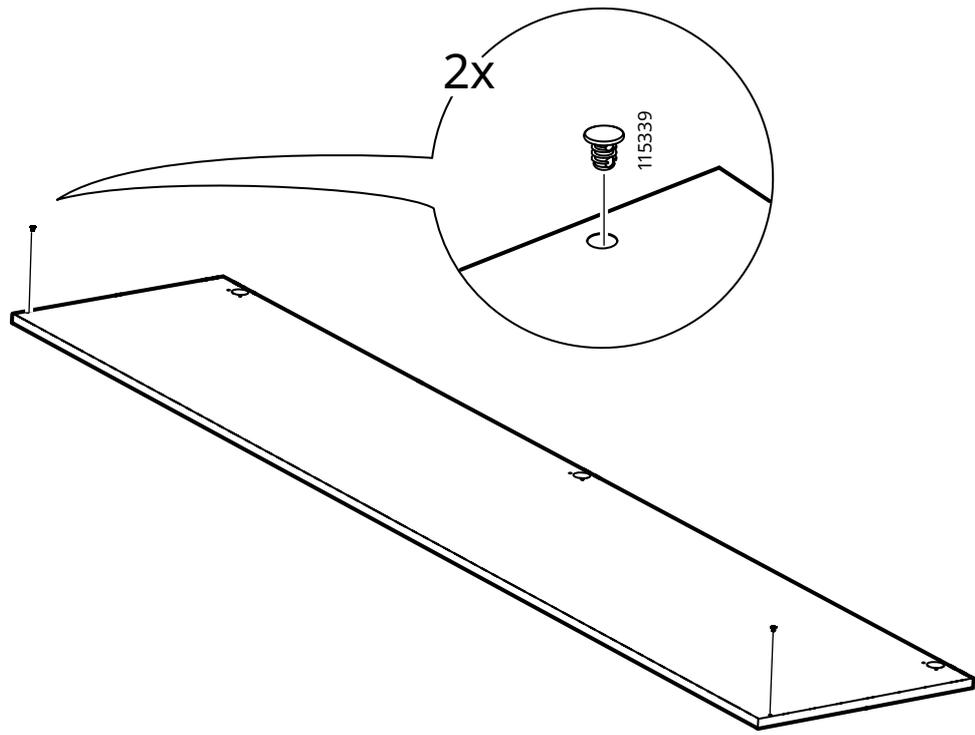








23

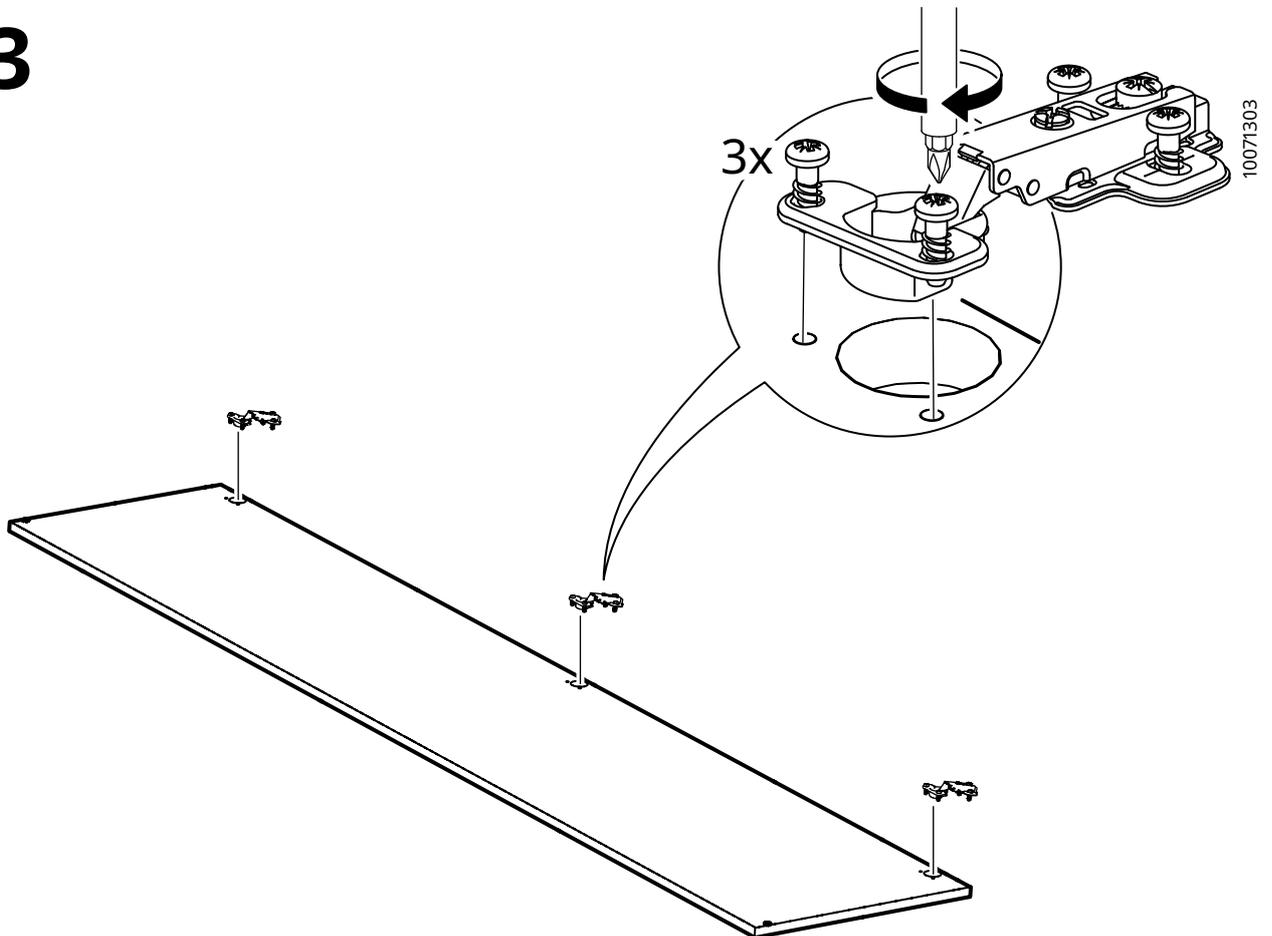

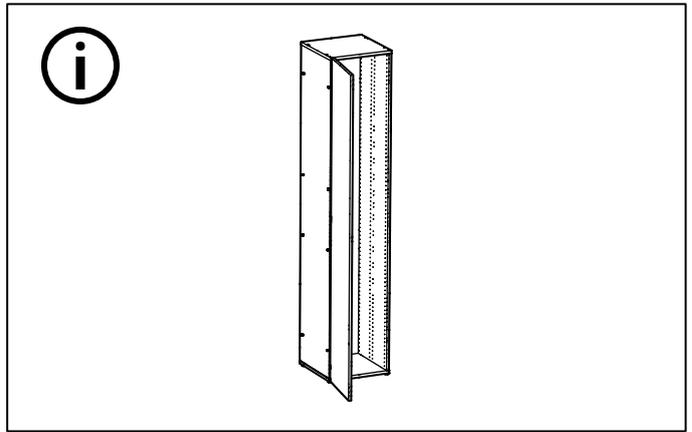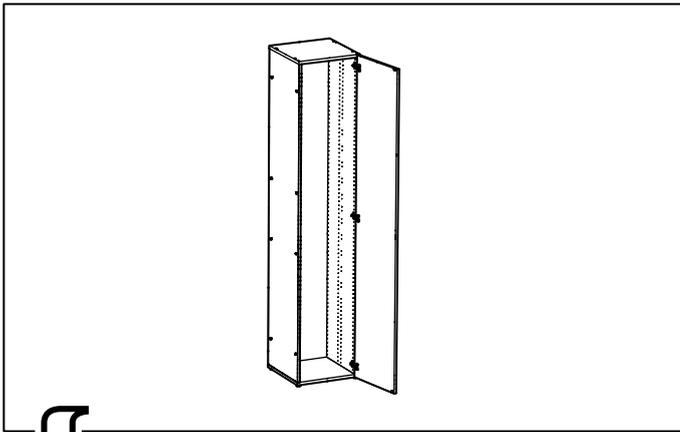

24

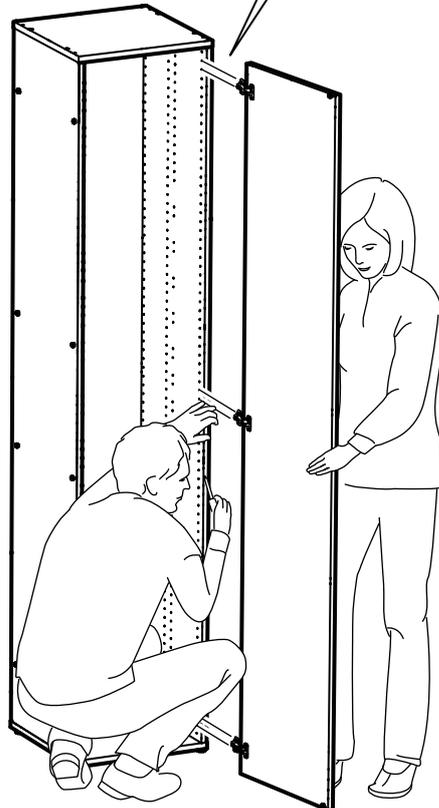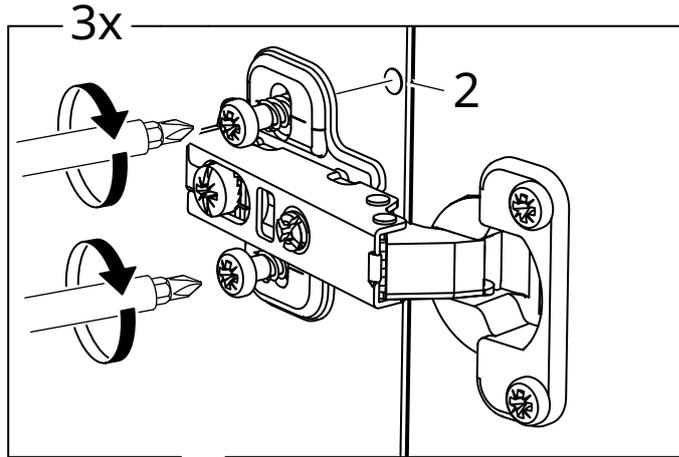

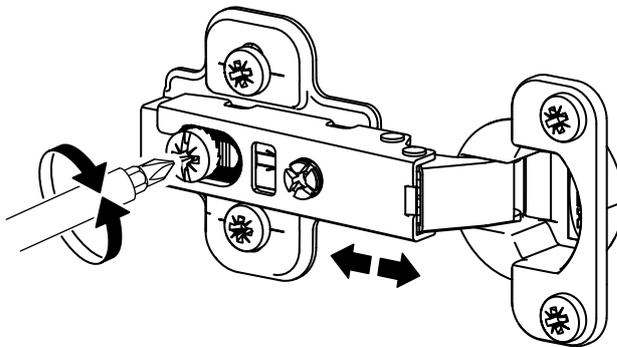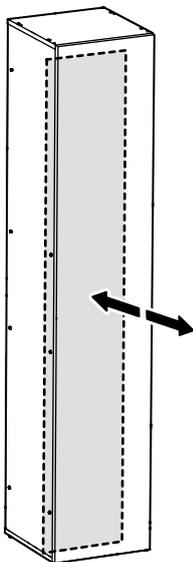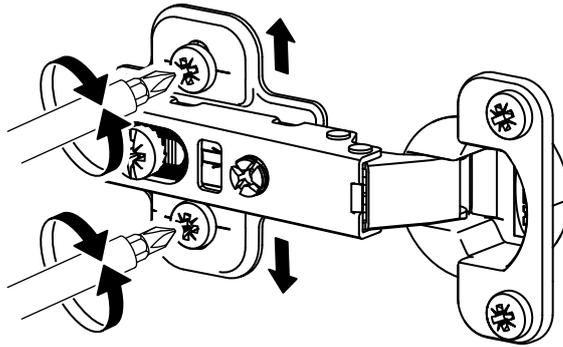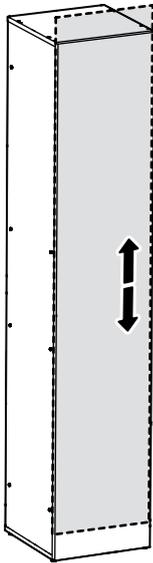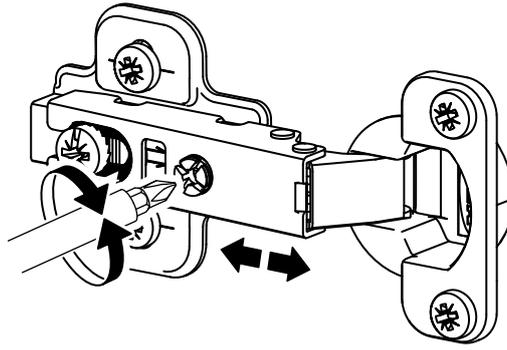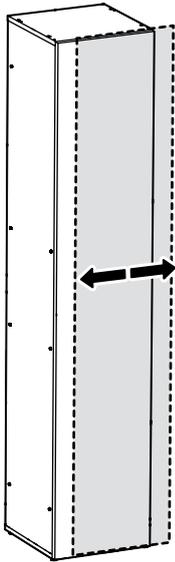

25

