 
 
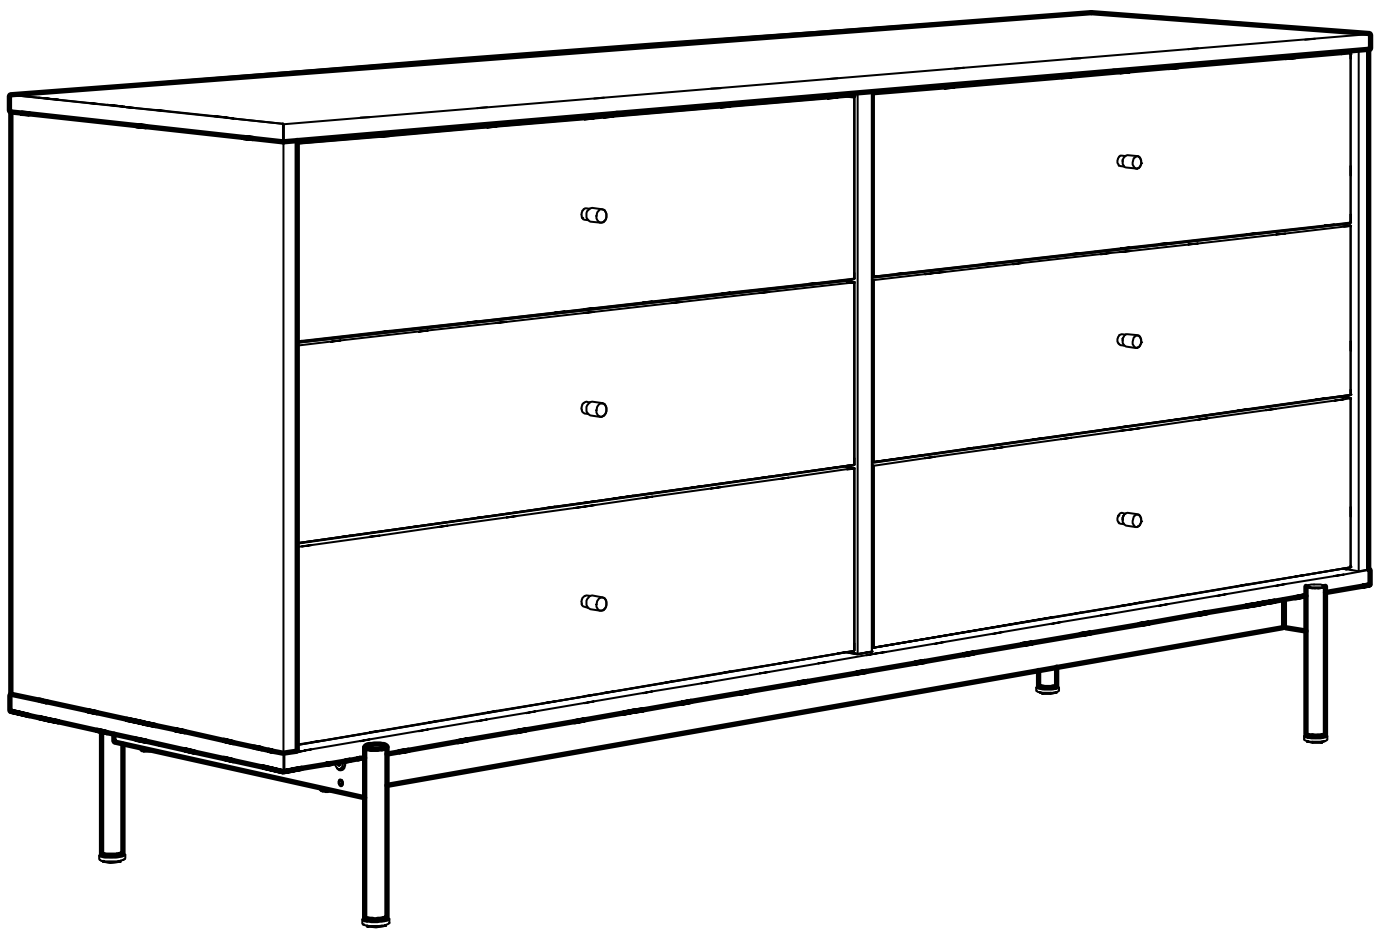 
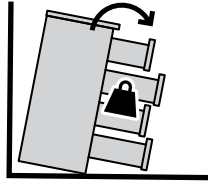 


RÅDMANSÖ

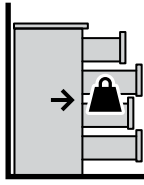

Design and Quality
IKEA of Sweden



English

WARNING

Children have died from furniture tipover.

To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.


 

 
 
 

NEVER open more than one drawer at a time.




Place heaviest items in the lowest drawers.


English

Read and follow each step of the instruction carefully.

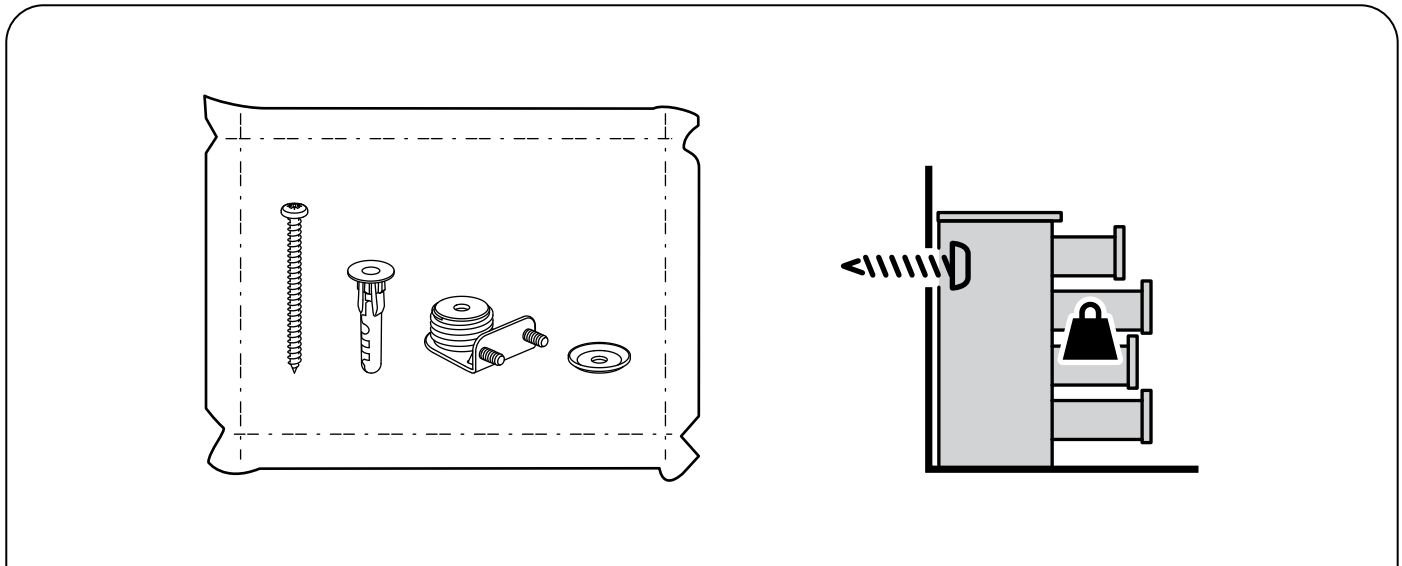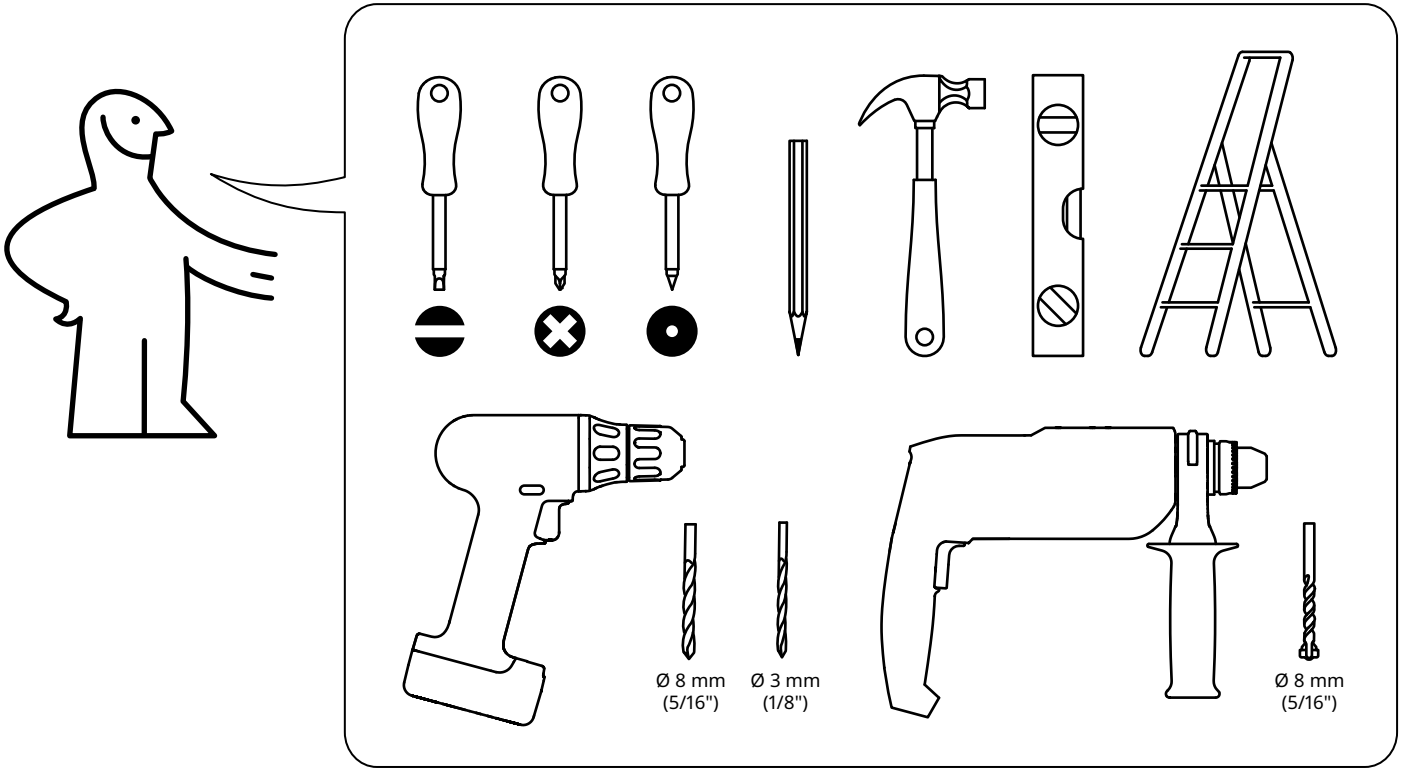


	A	B	C
			
<p>www.IKEA.com/secure-it</p>	<p>Ø 8 mm (5/16")</p> 	<p>Ø 8 mm (5/16")</p> 	<p>Ø 3 mm (1/8")</p> 

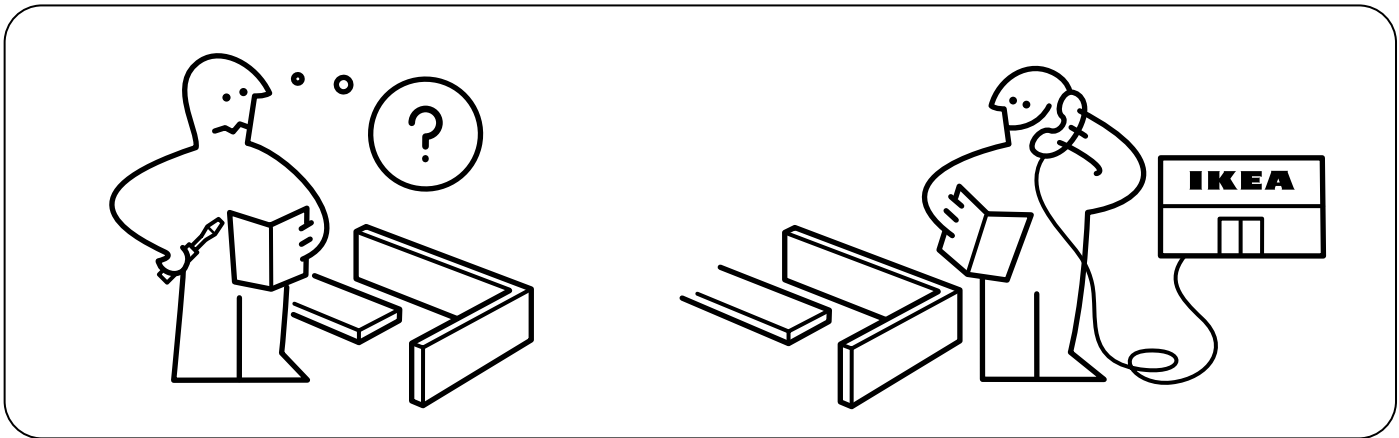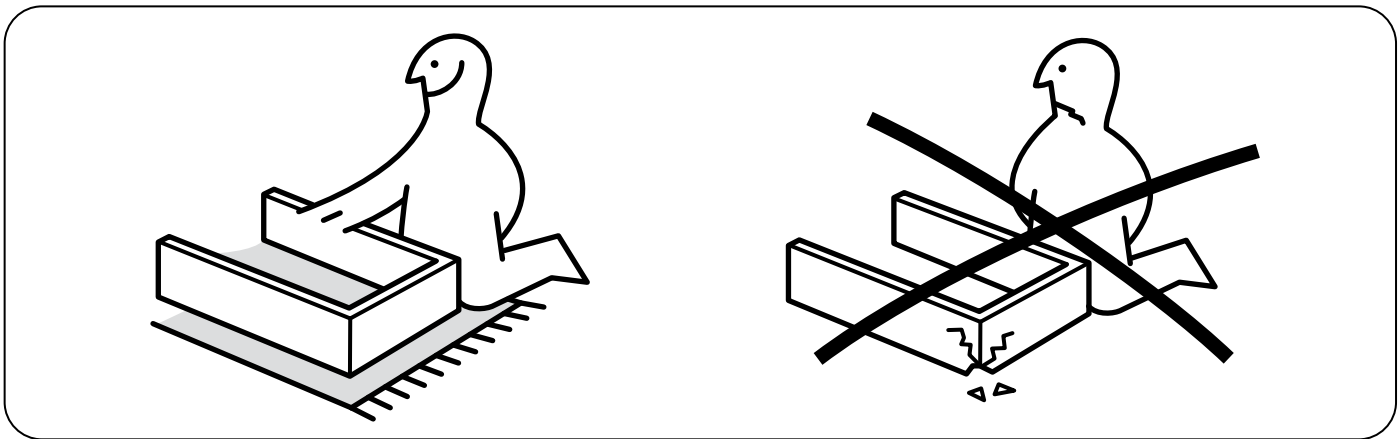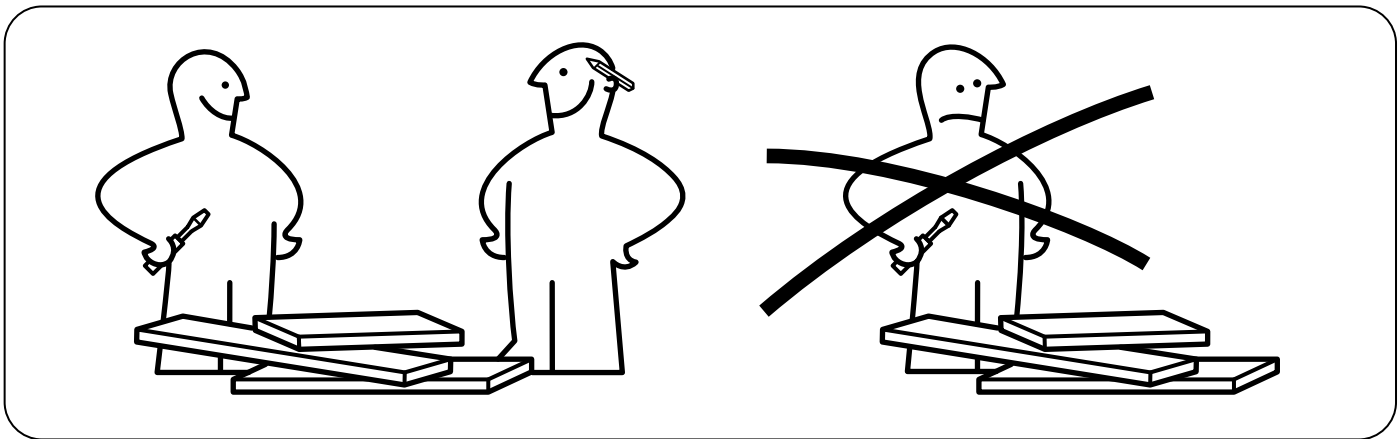   


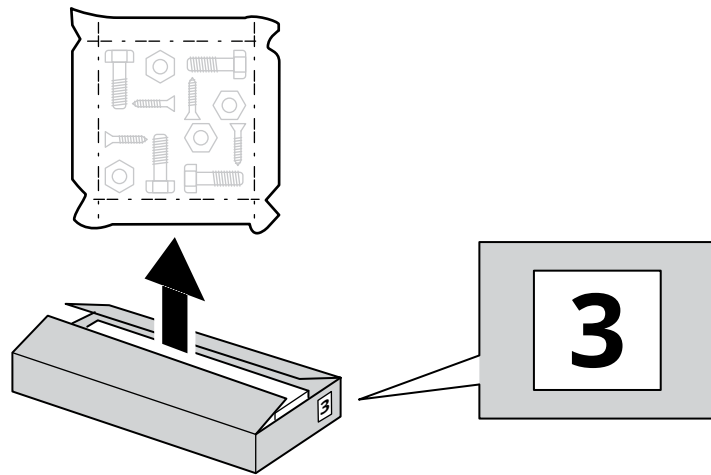 


1

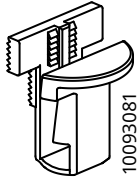 

8x

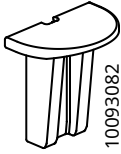 

8x

 

6x



 
6x



8x




36x

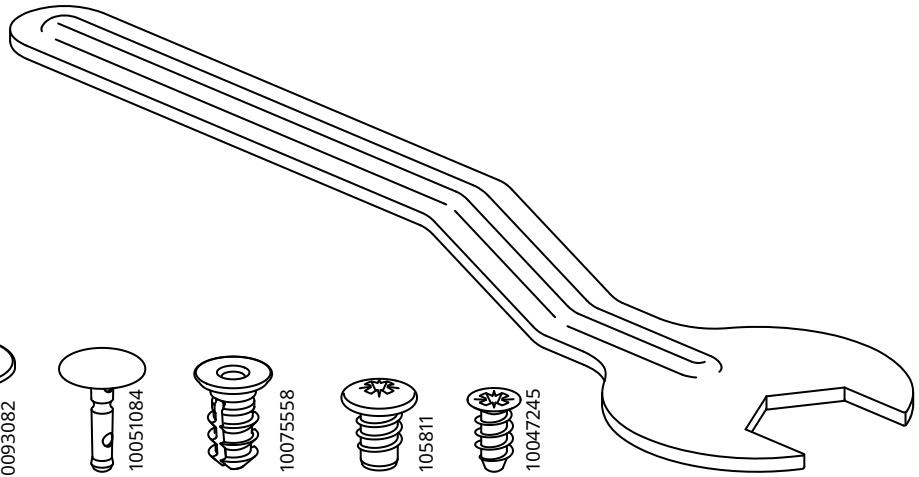


190459

 
1x




2x

 


4x

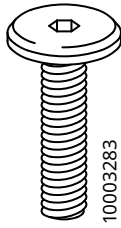 


4x

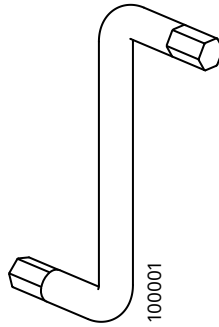 


1x

 

4x

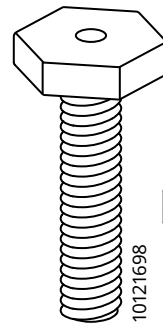 


4x

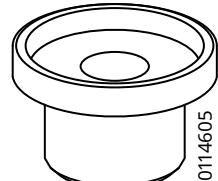 


4x

 
2



24x

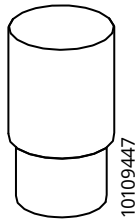 

6x

 


6x



24x





 
36x

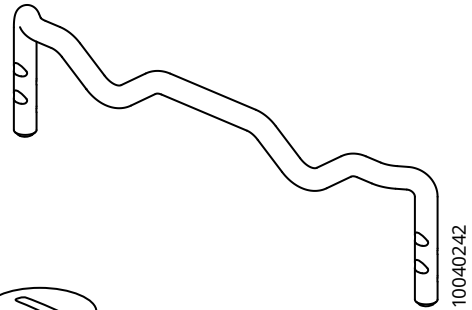


10040242

   6x

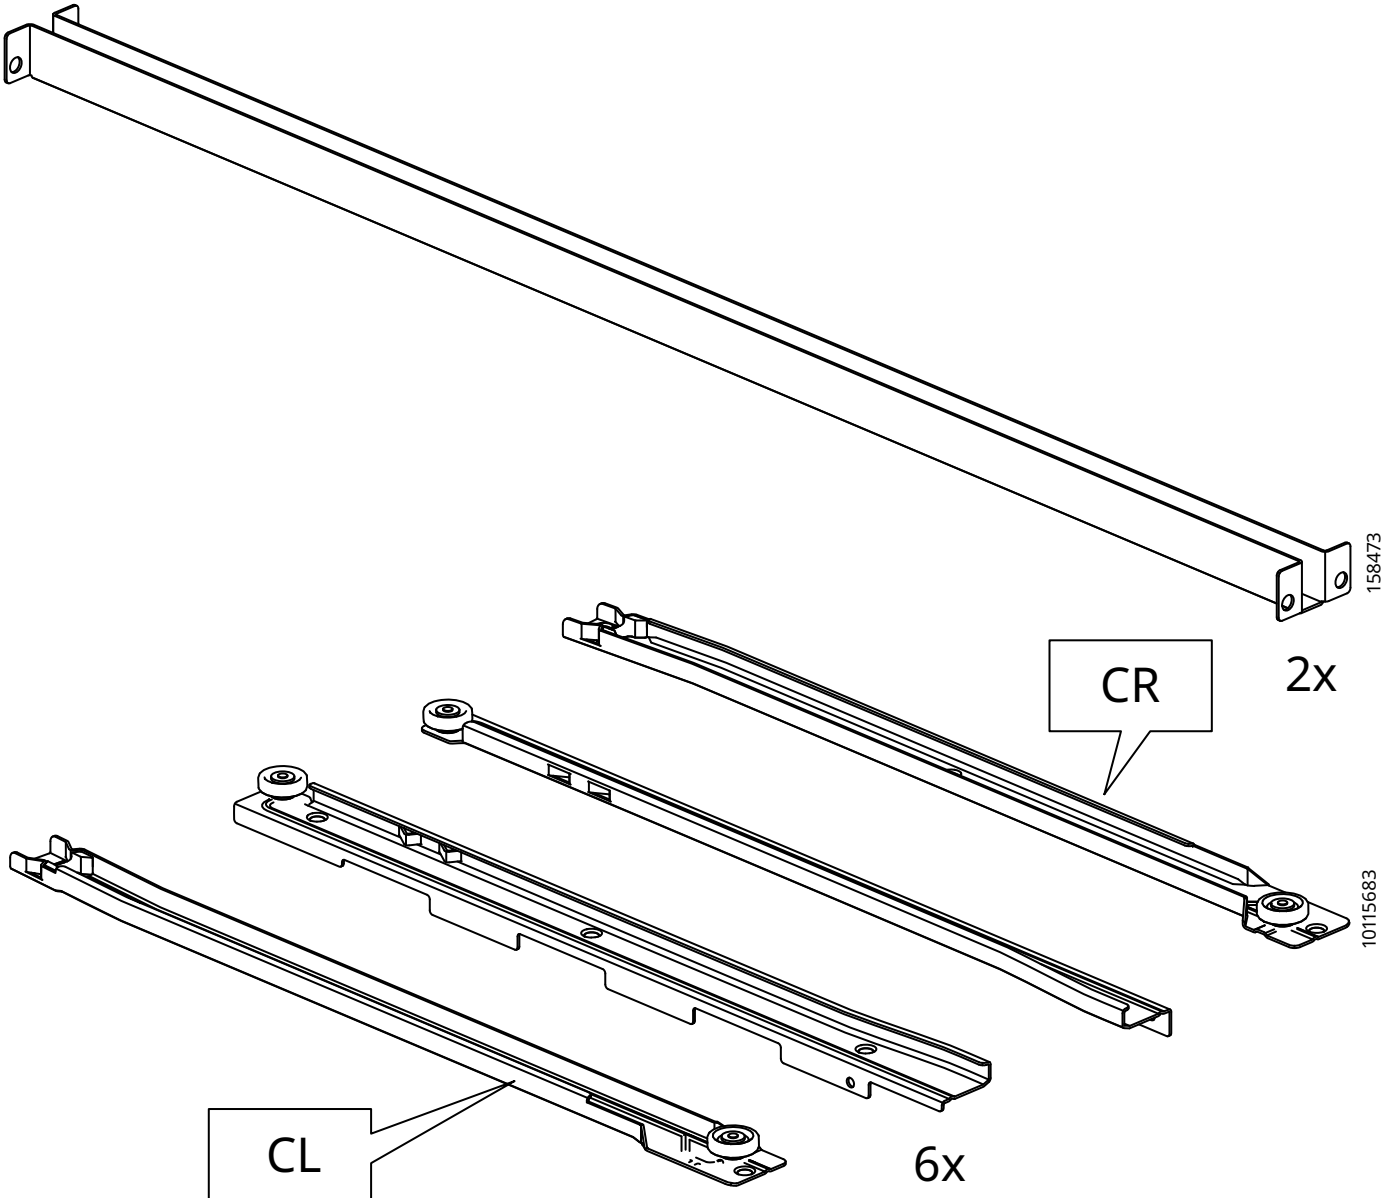
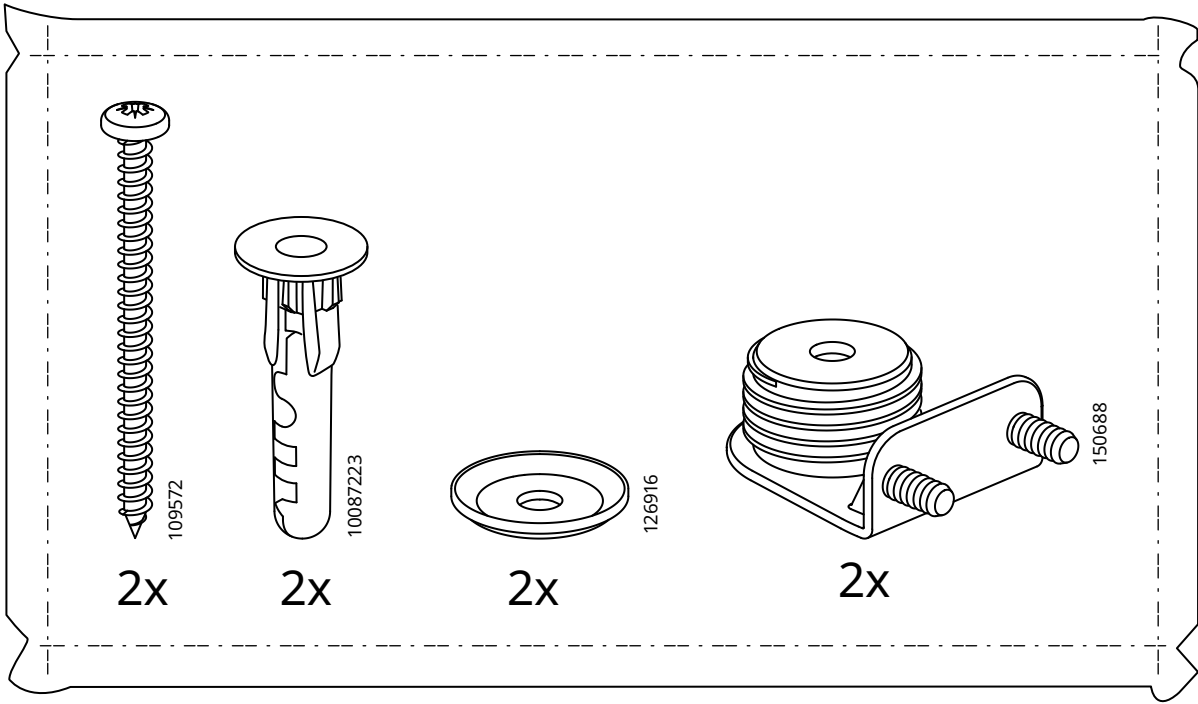


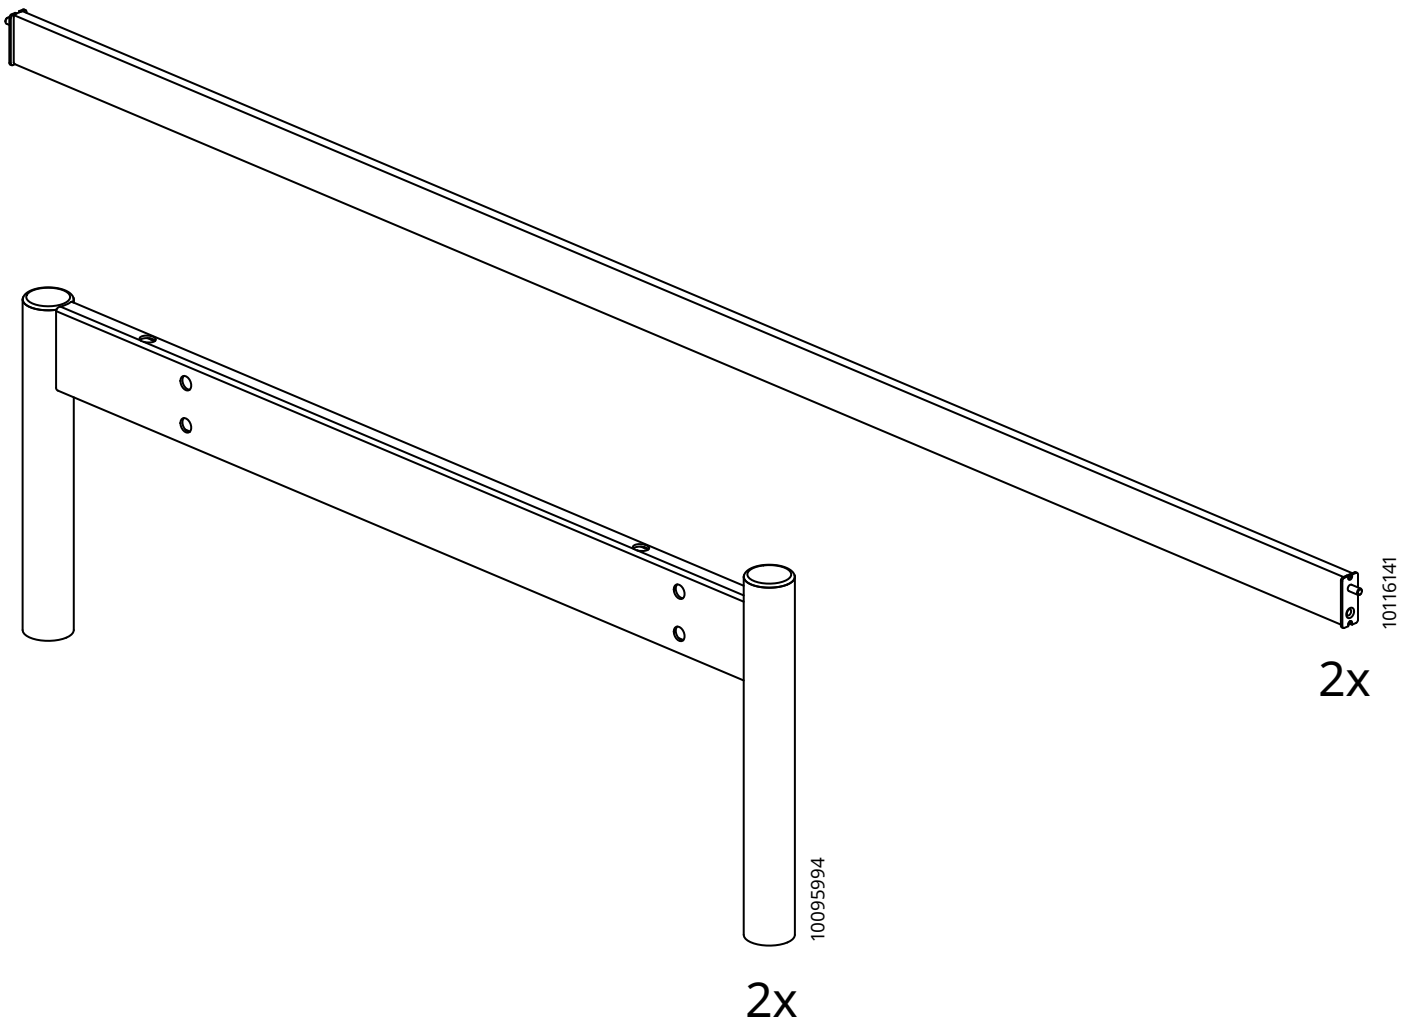


1

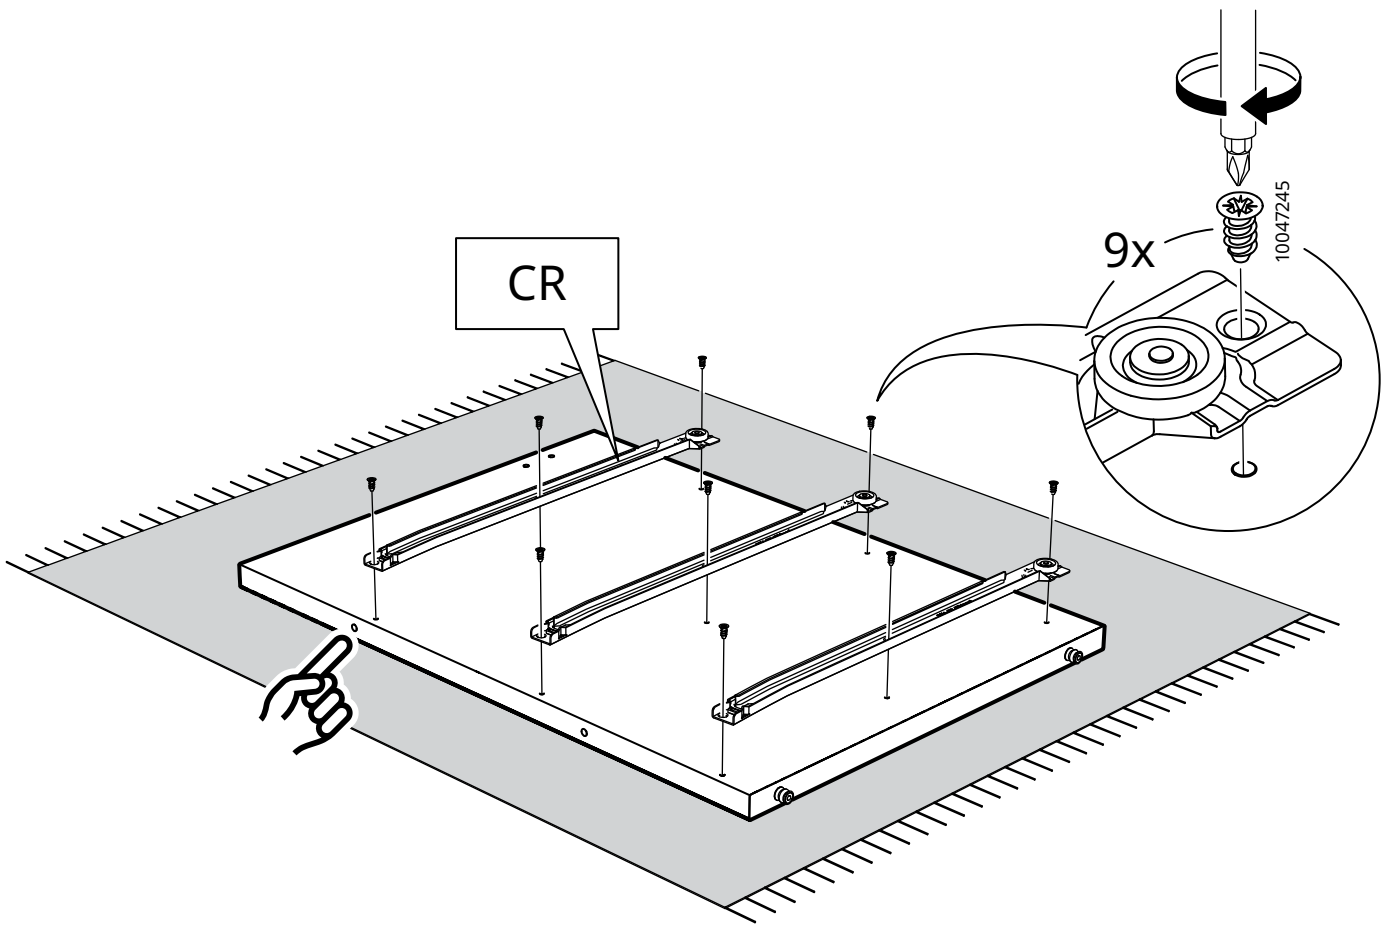 


2

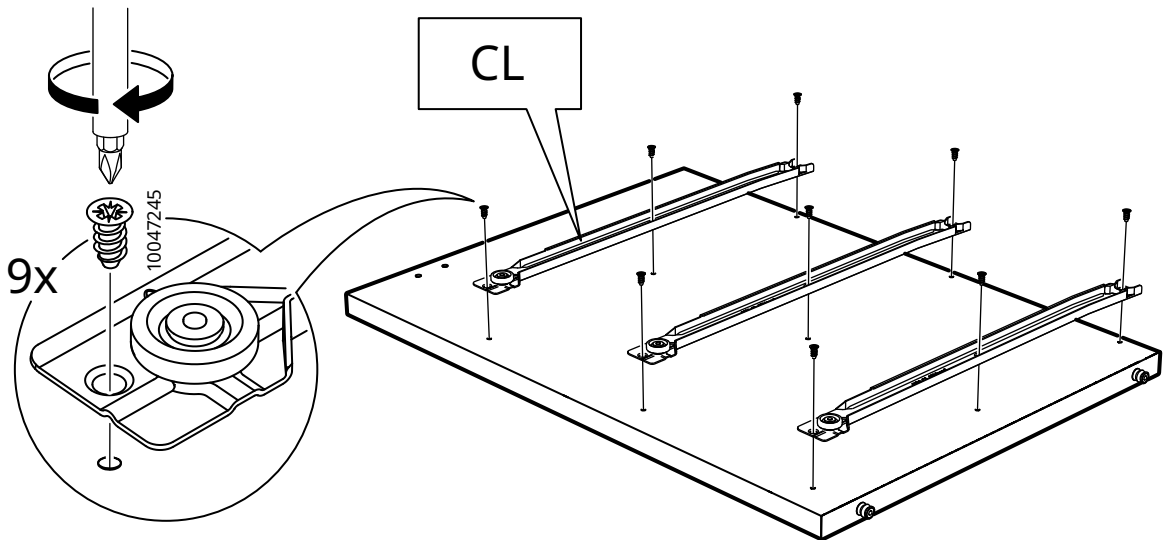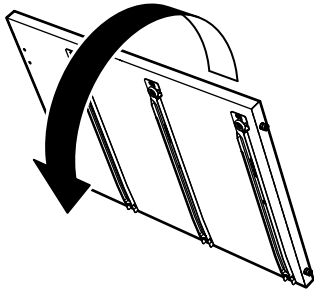  


3

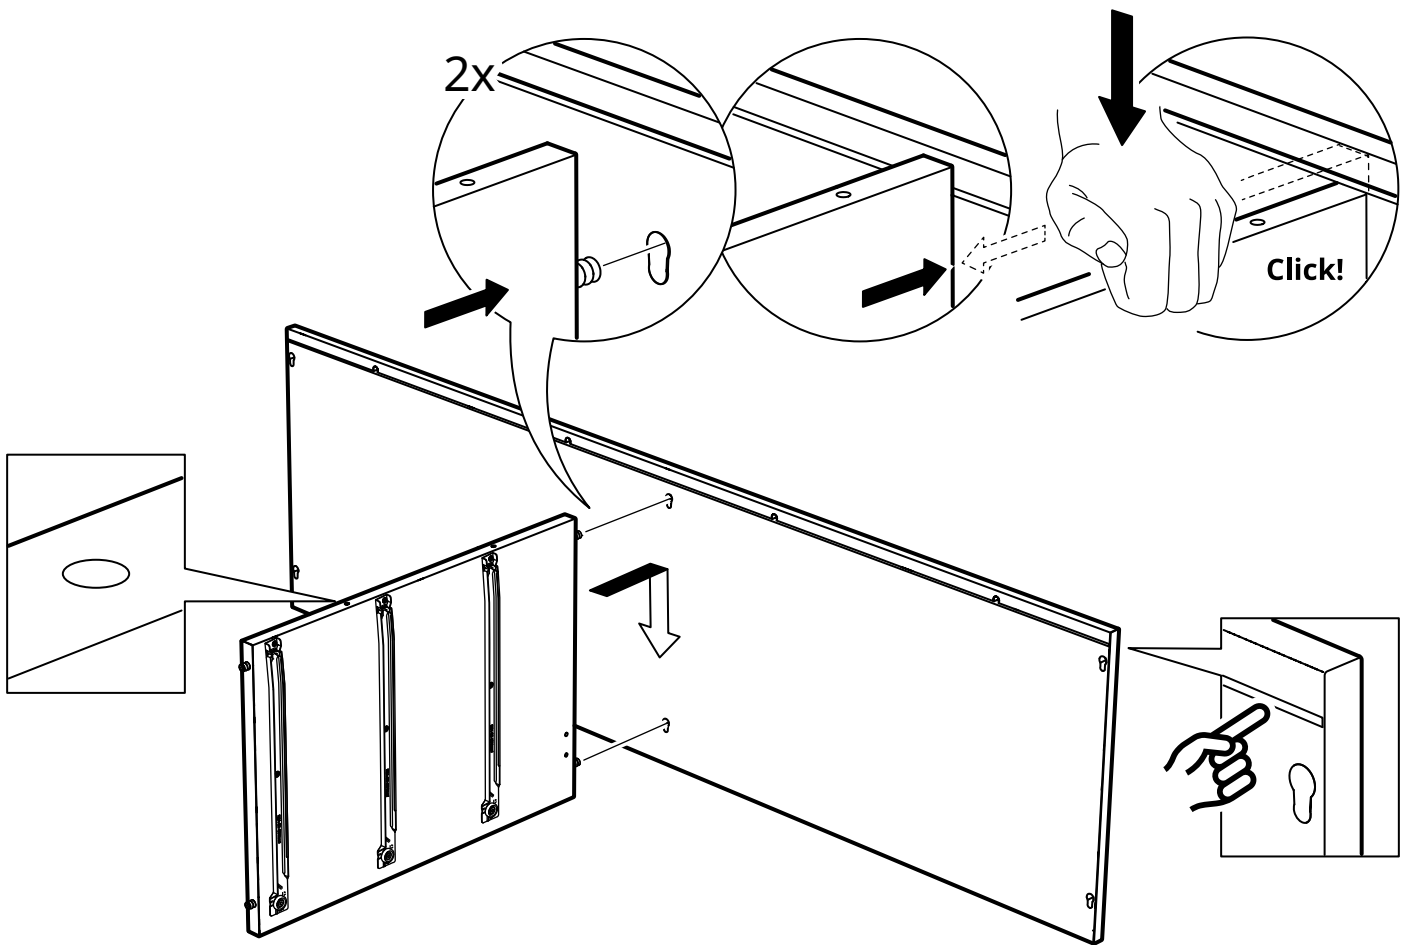 


4

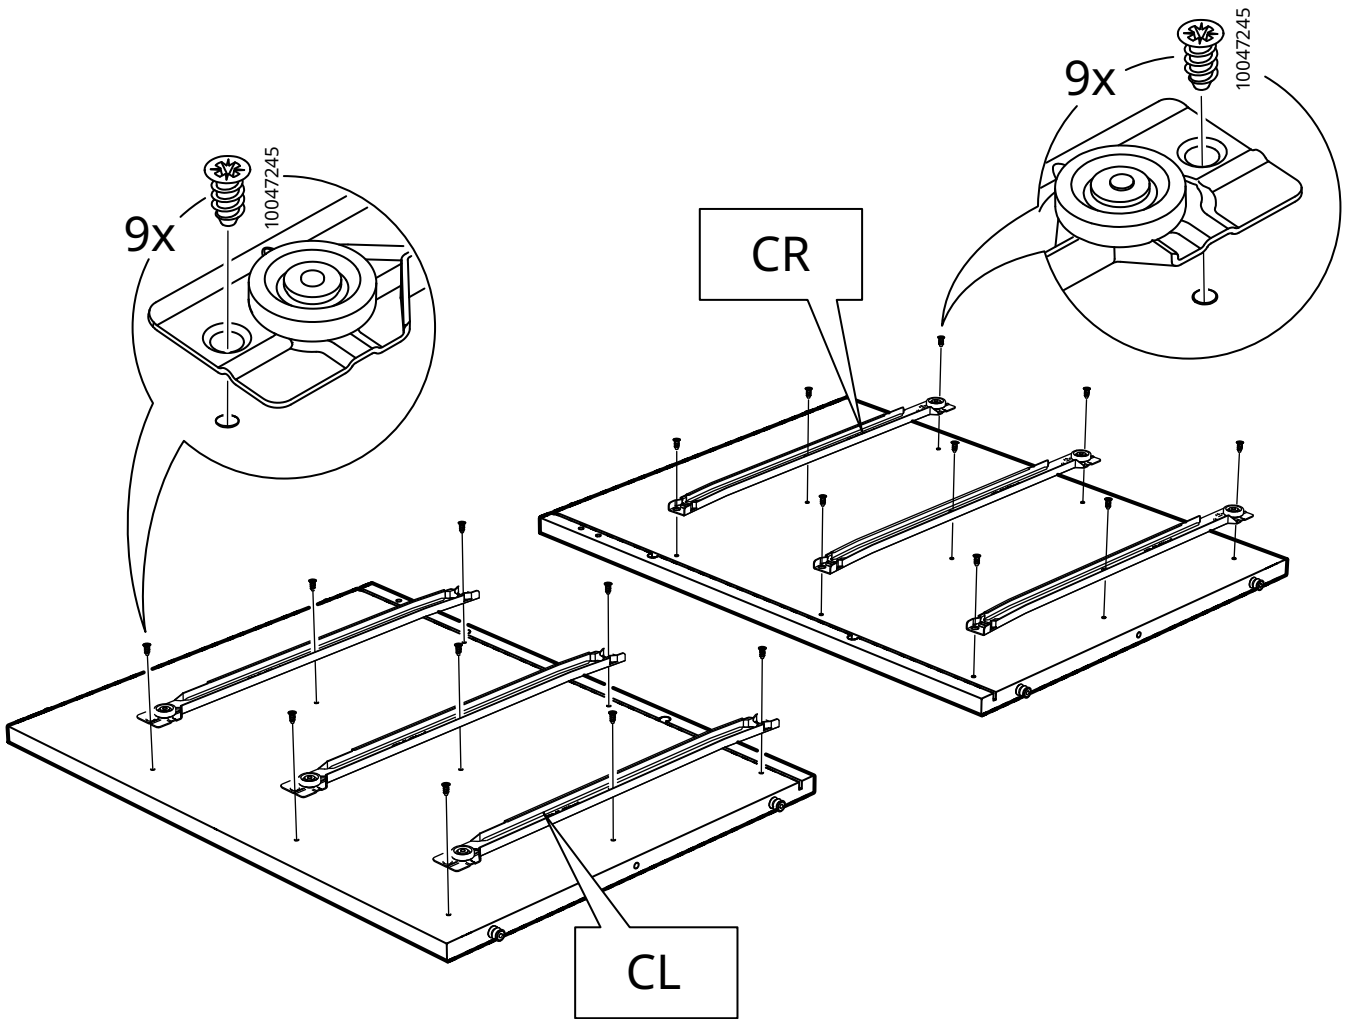 


5

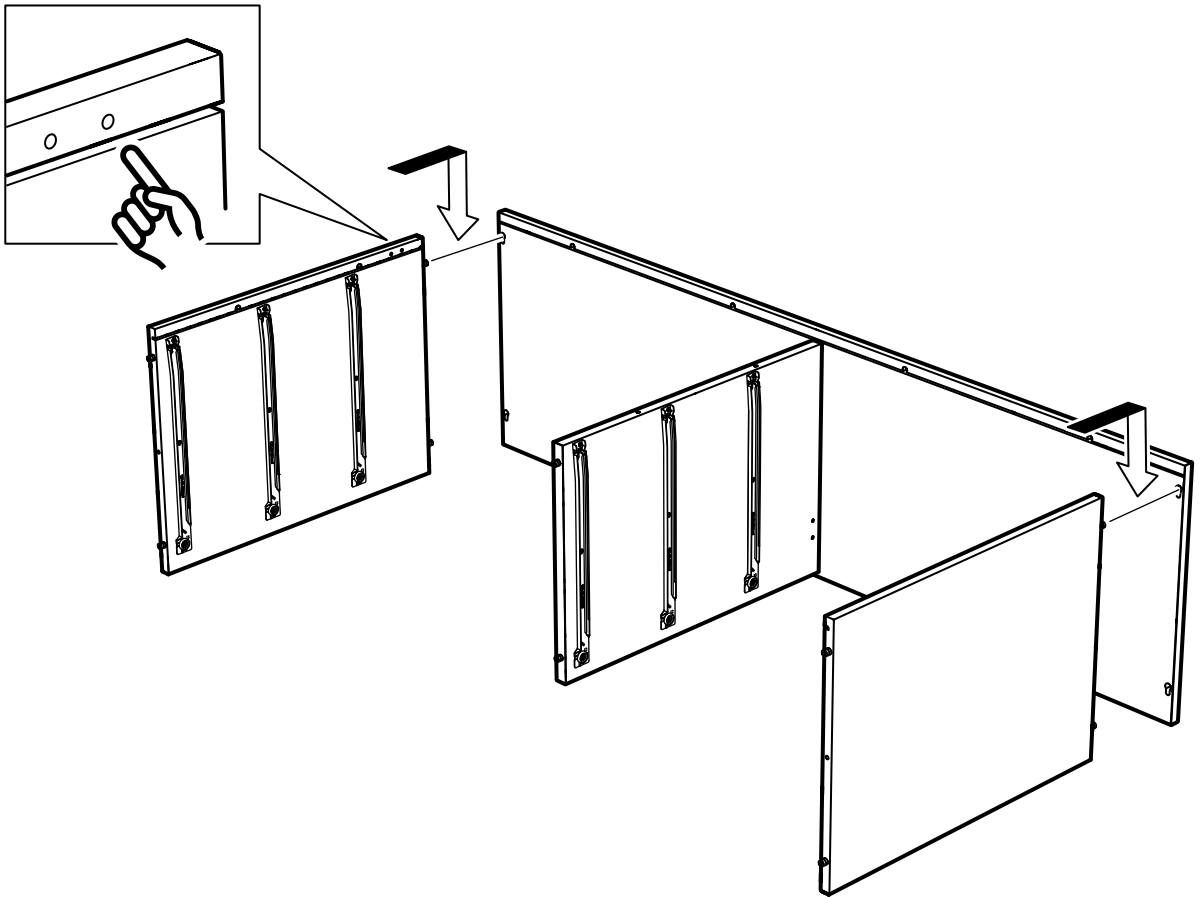 


6

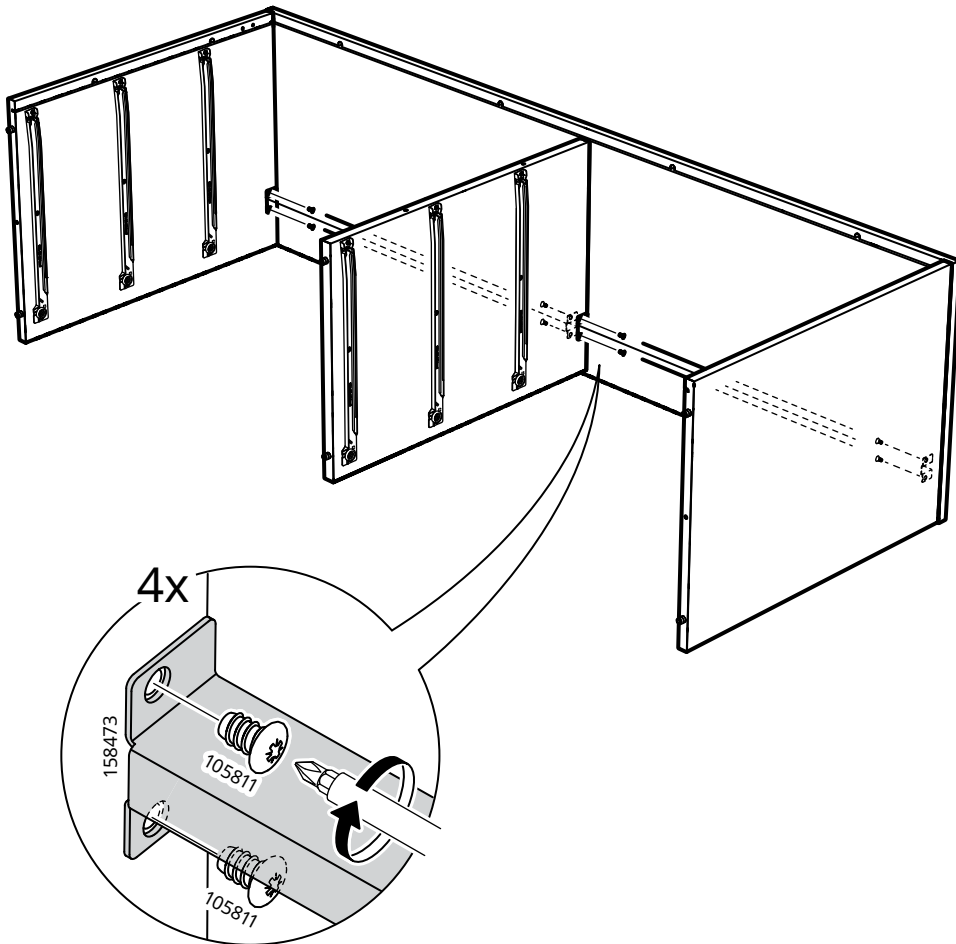 


7

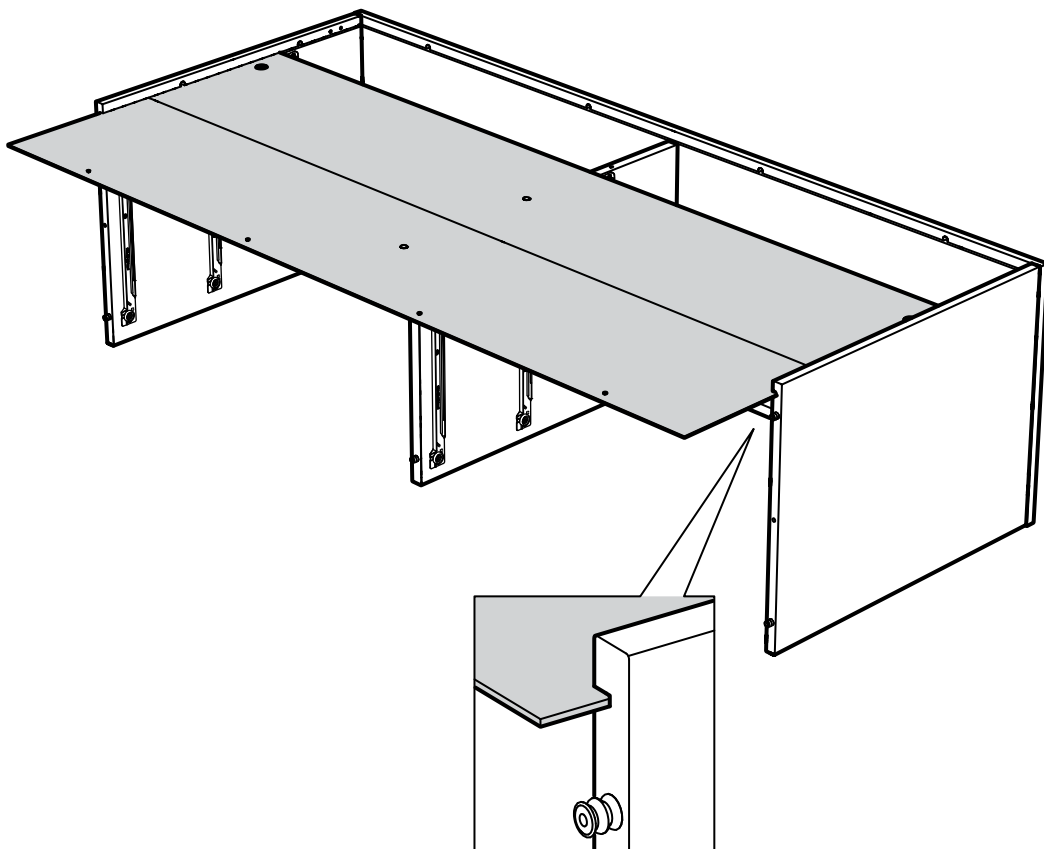 


8

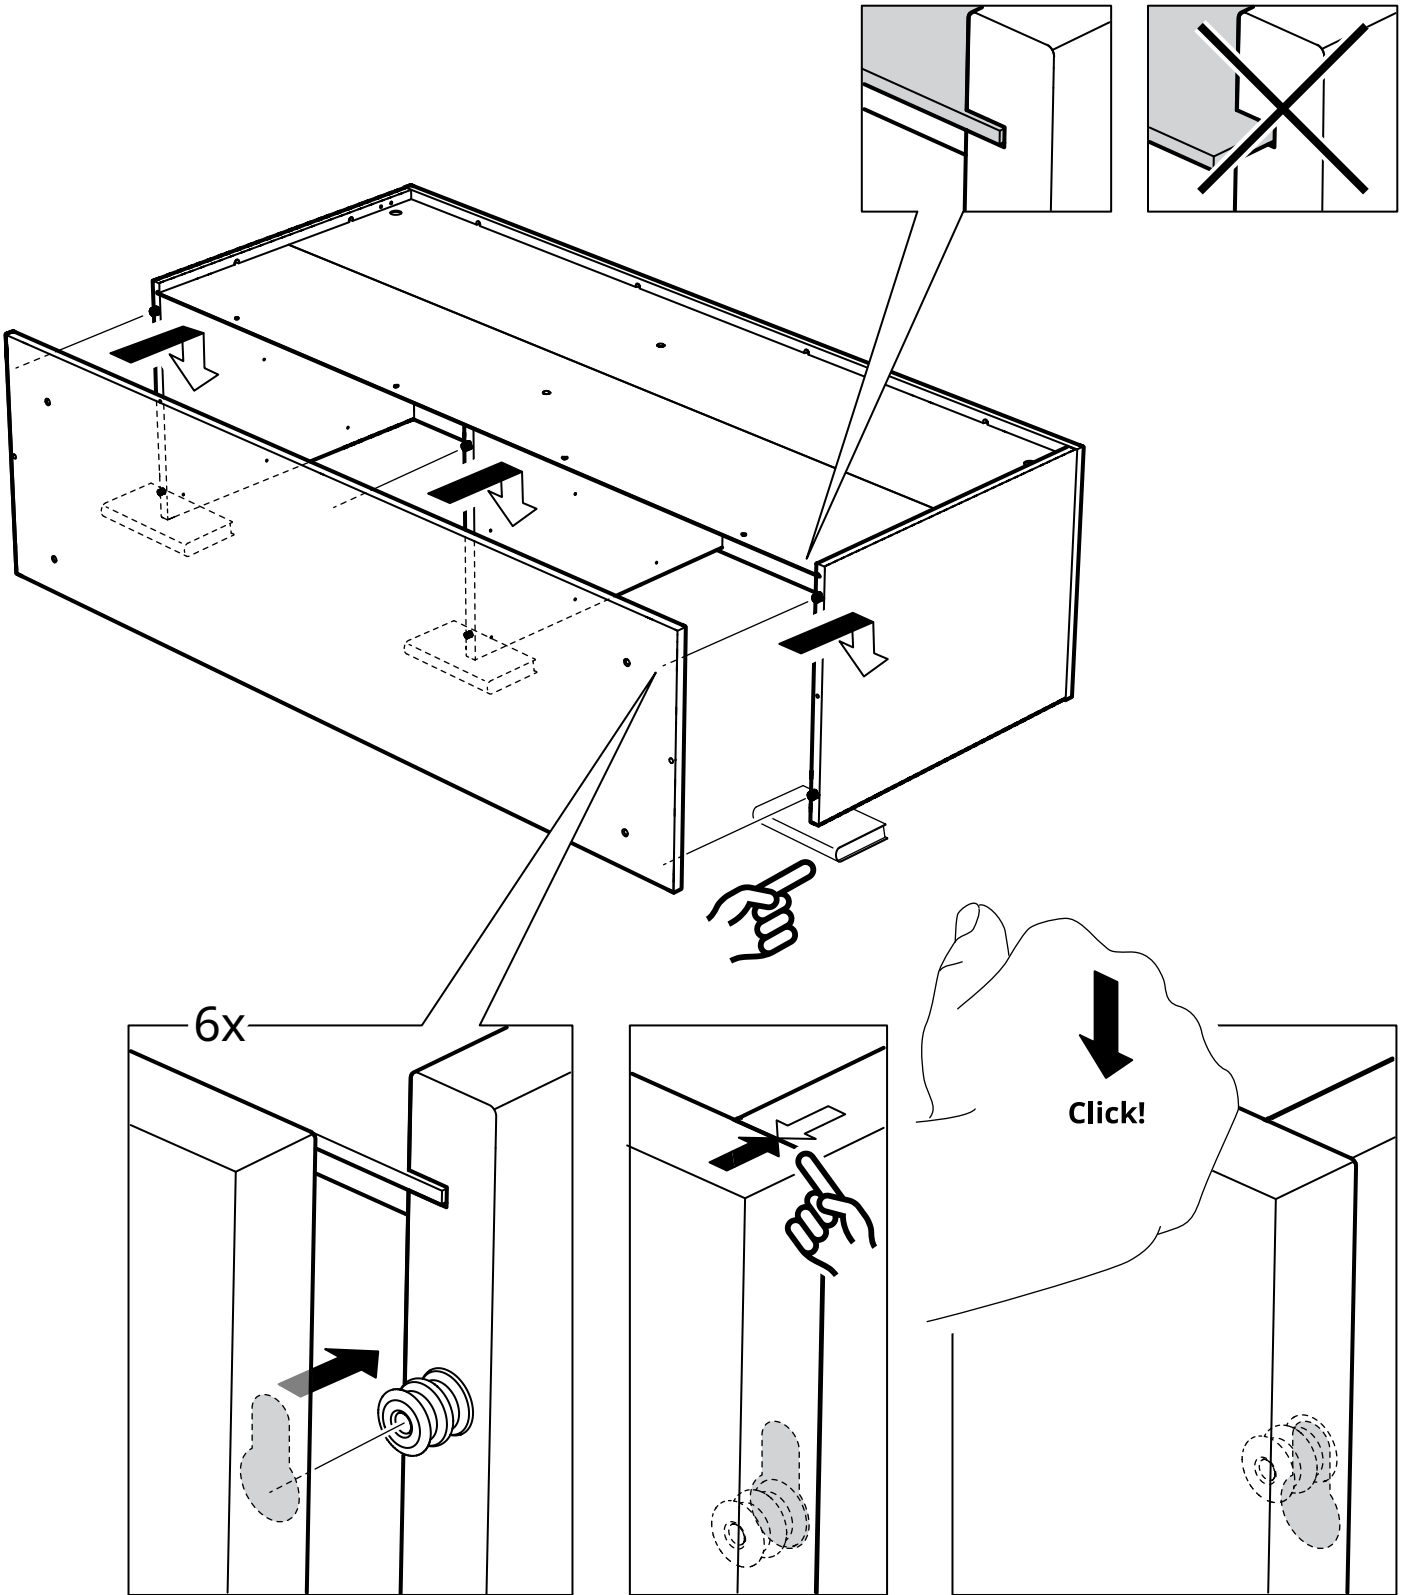 




9

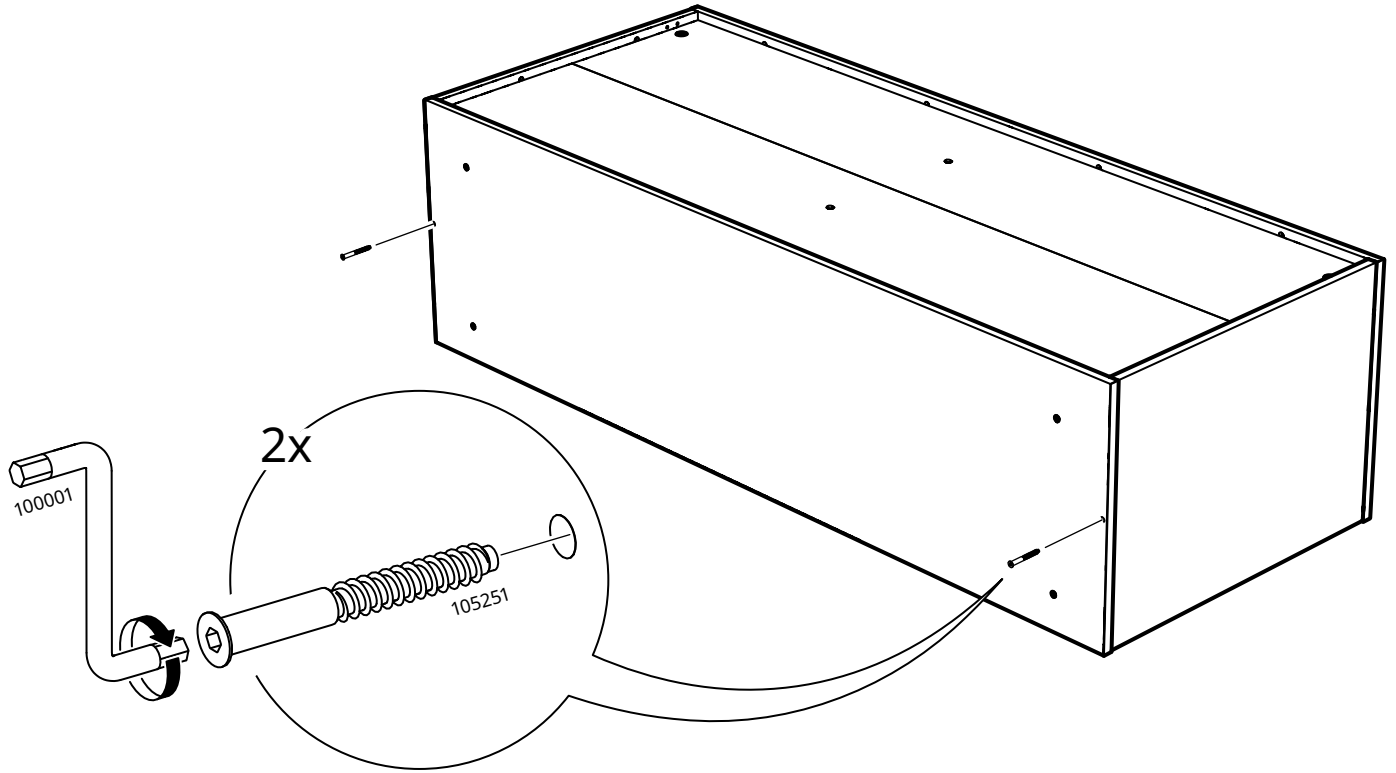 




10

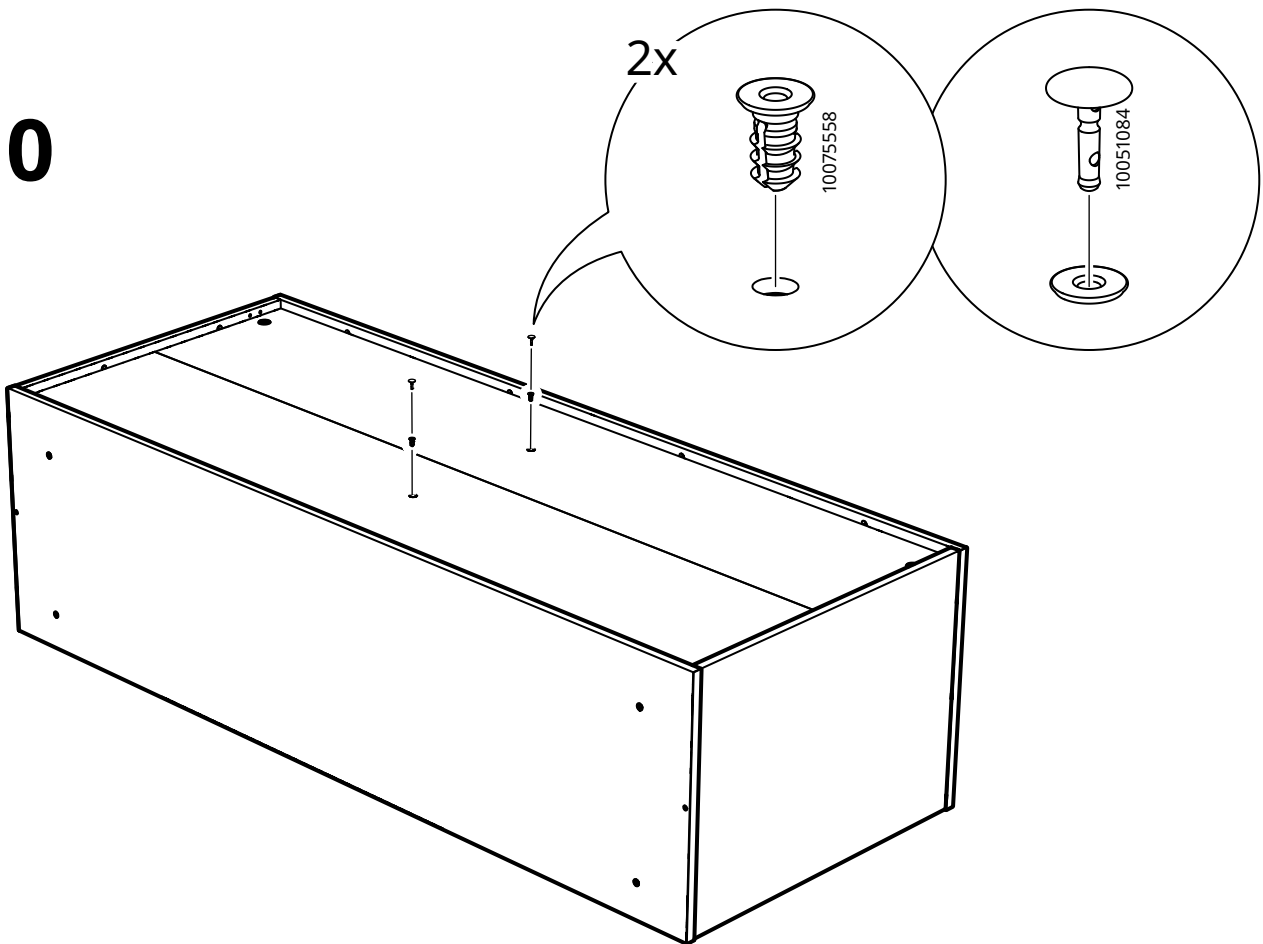 



11

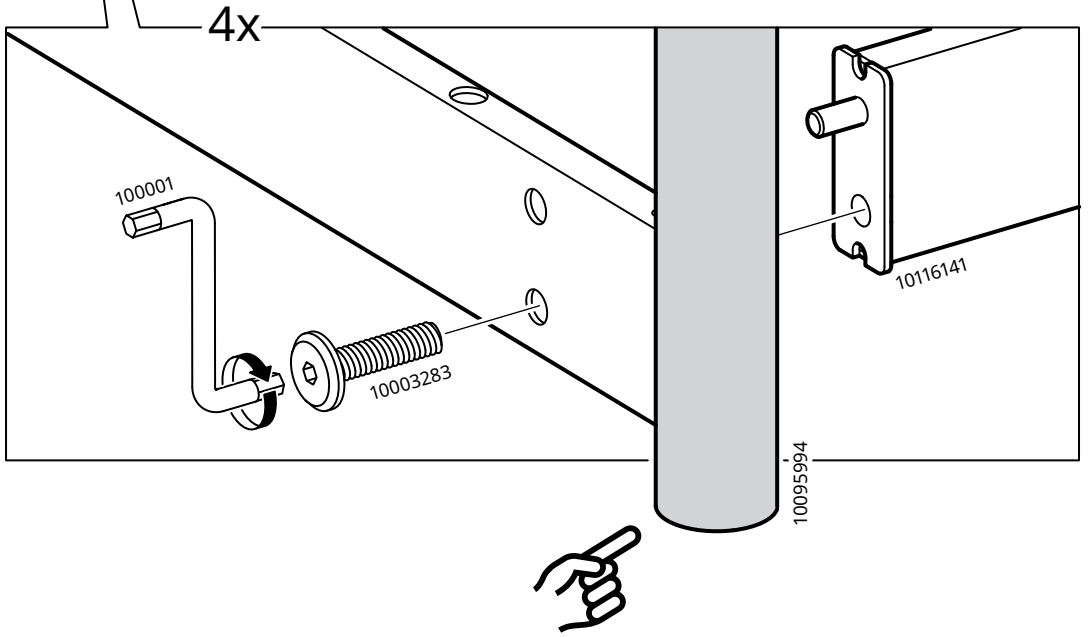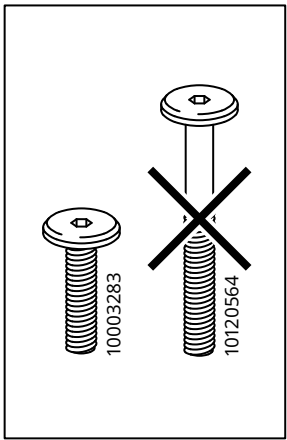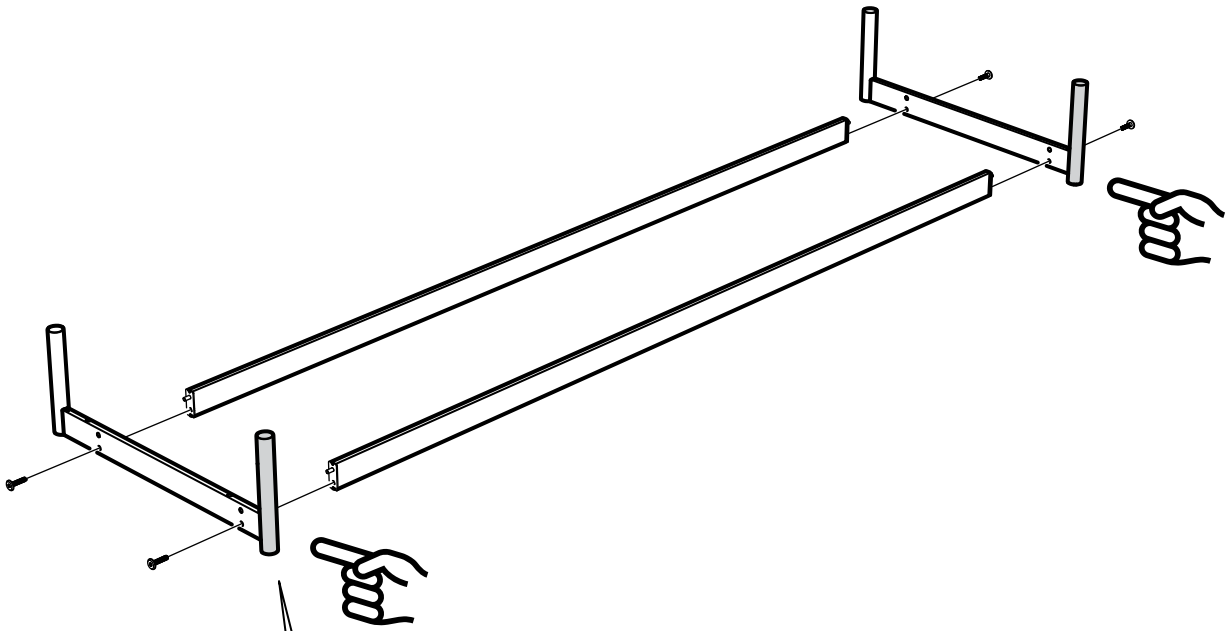   



12

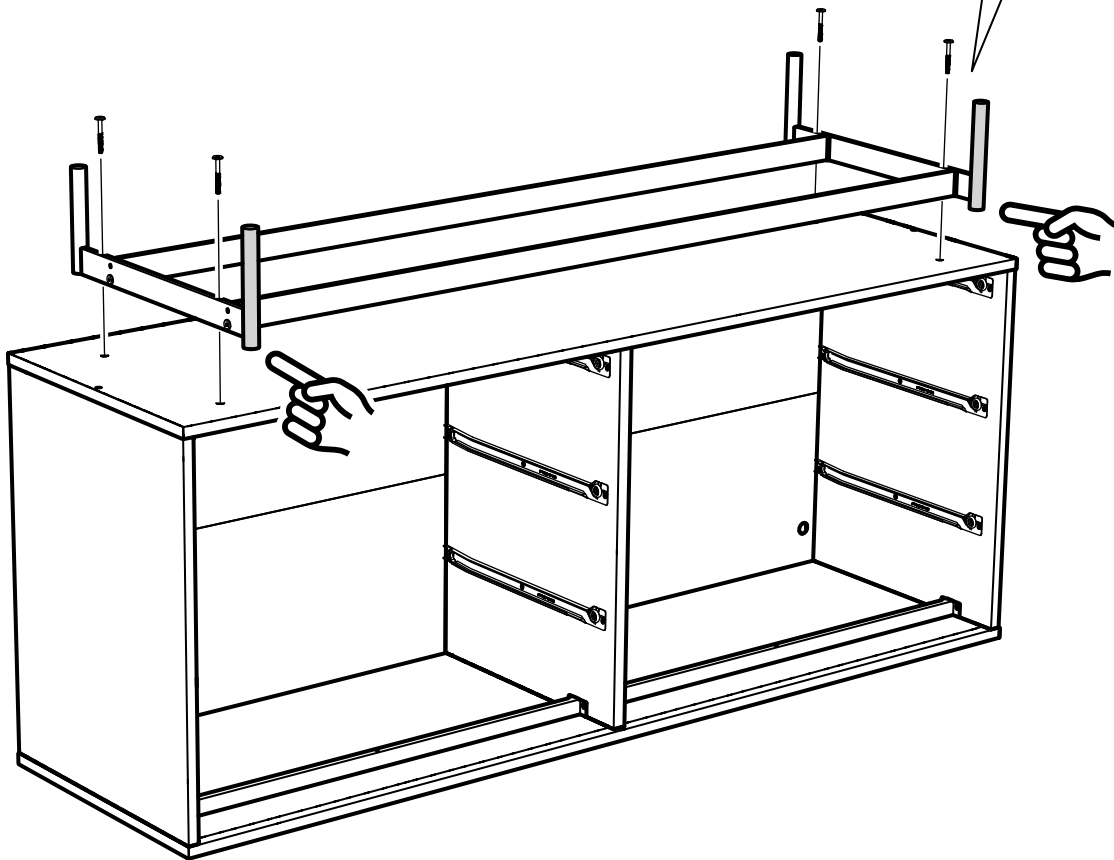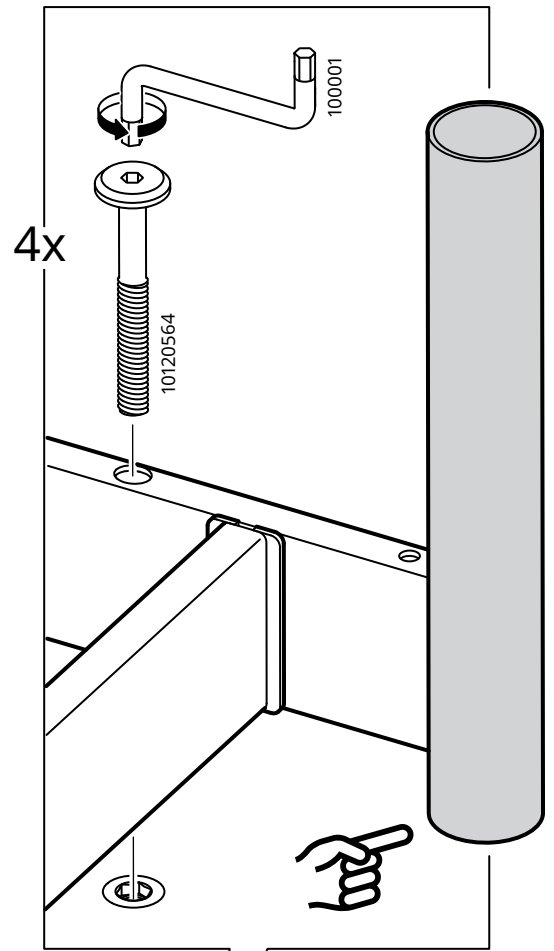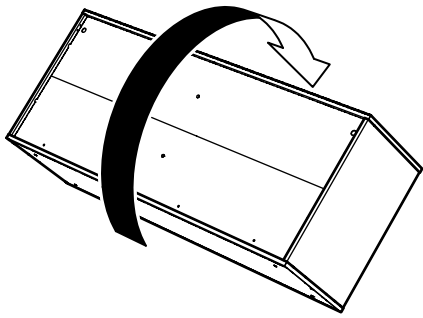   


13

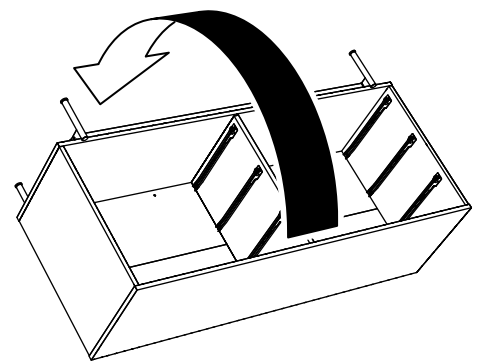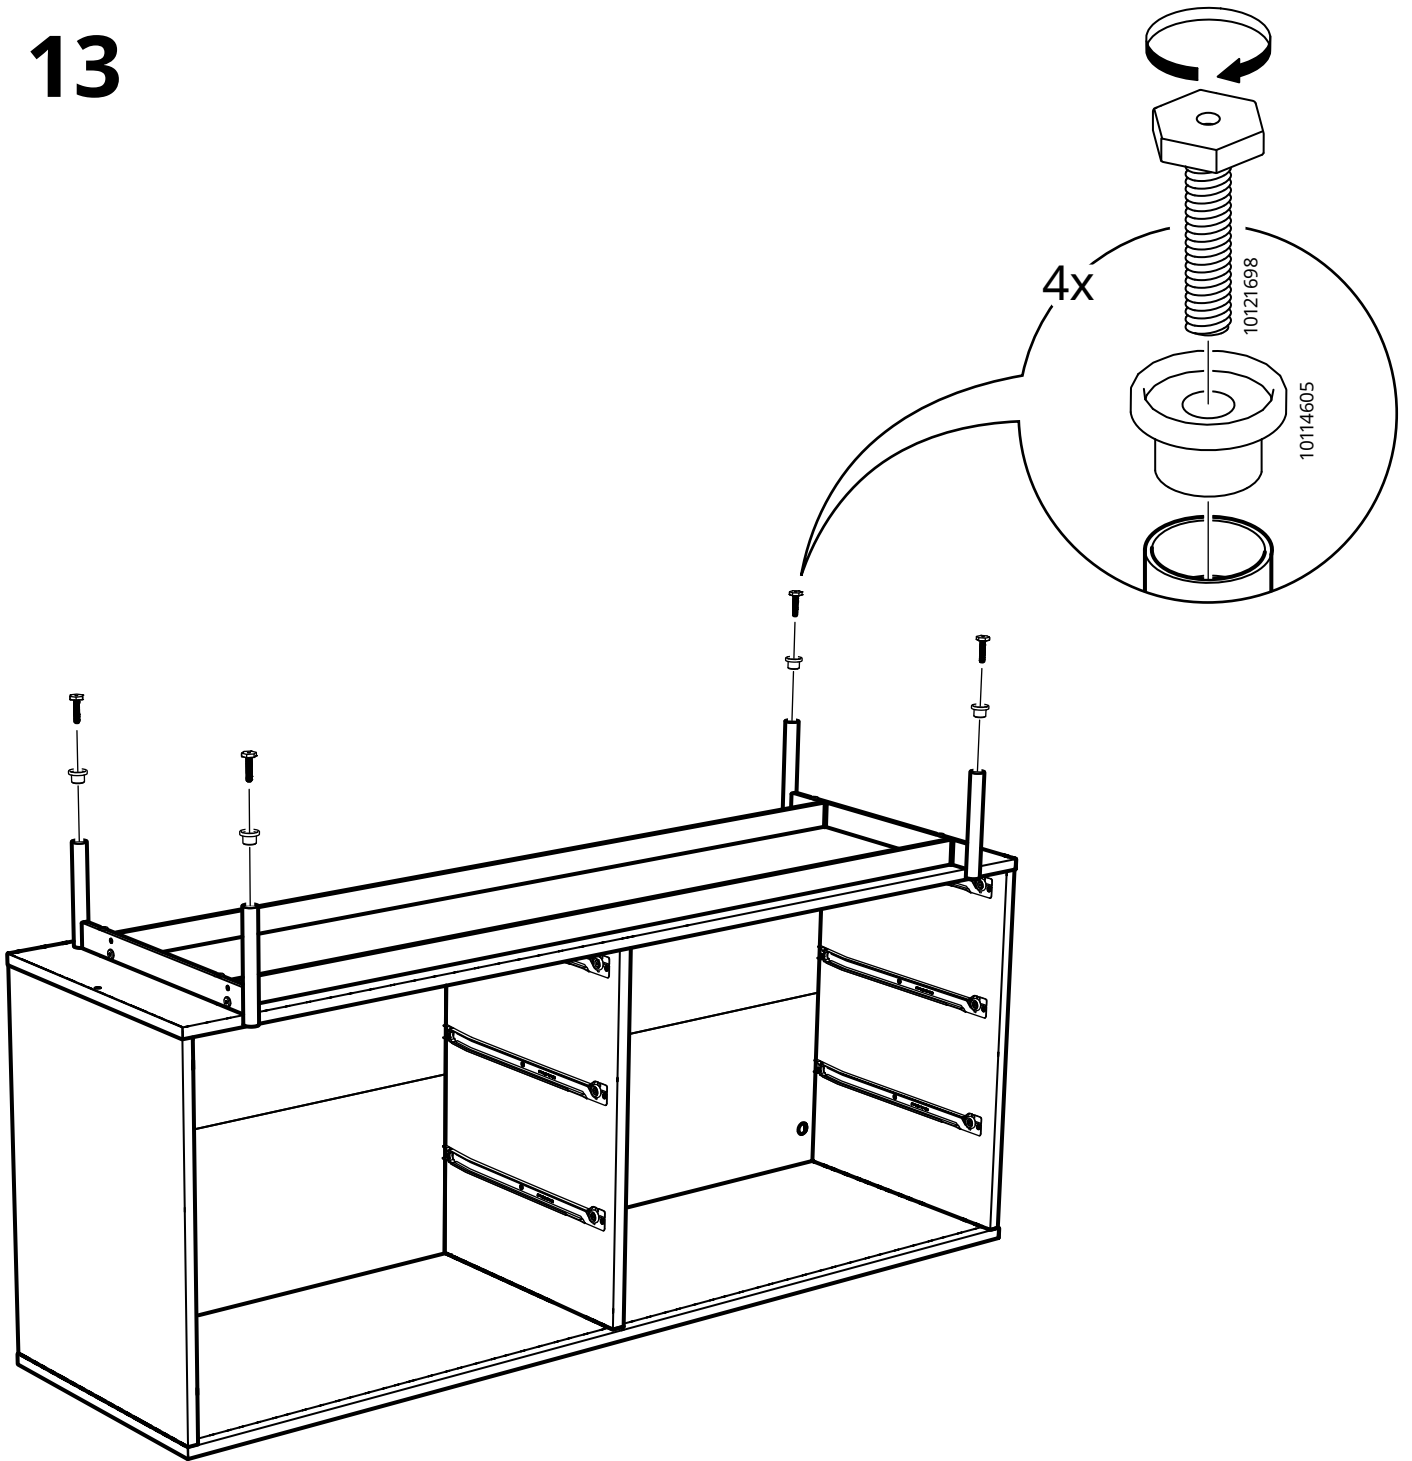  


14

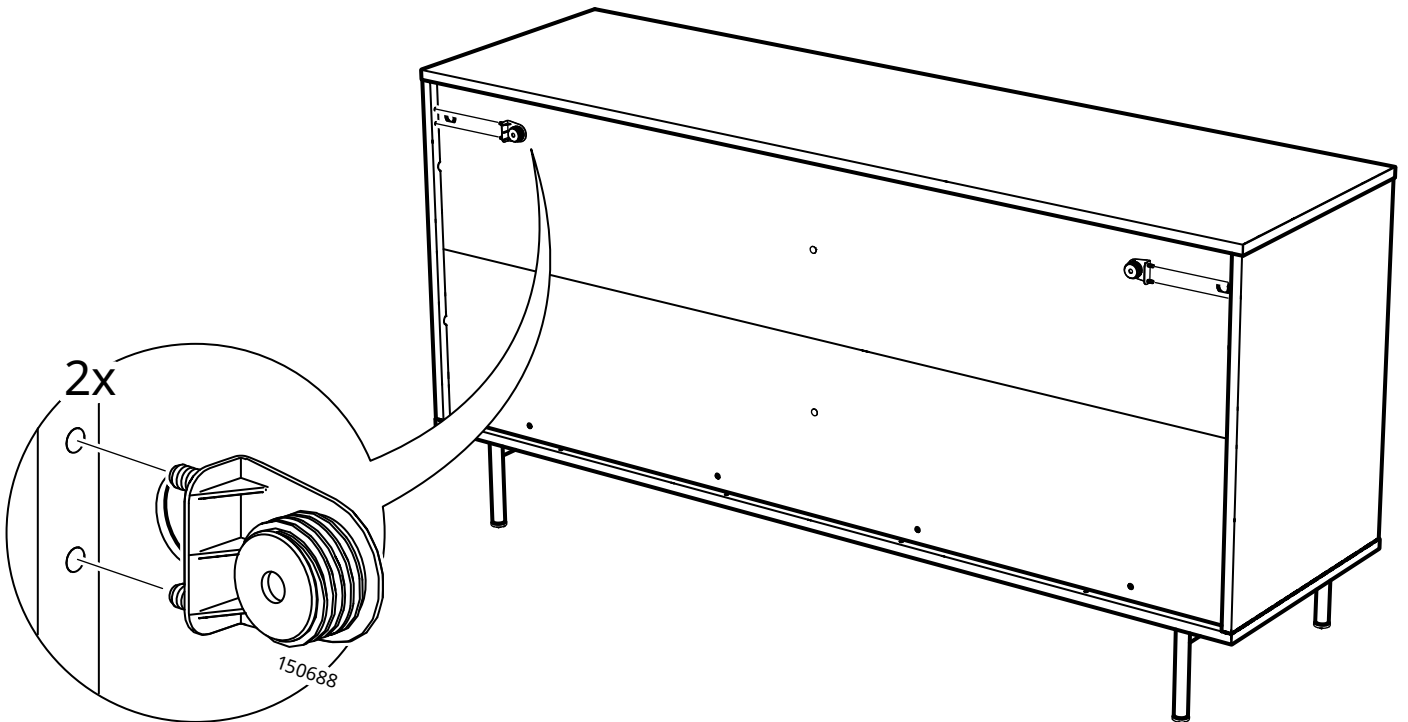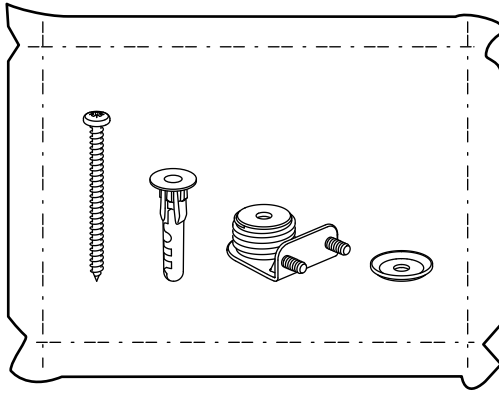  


15

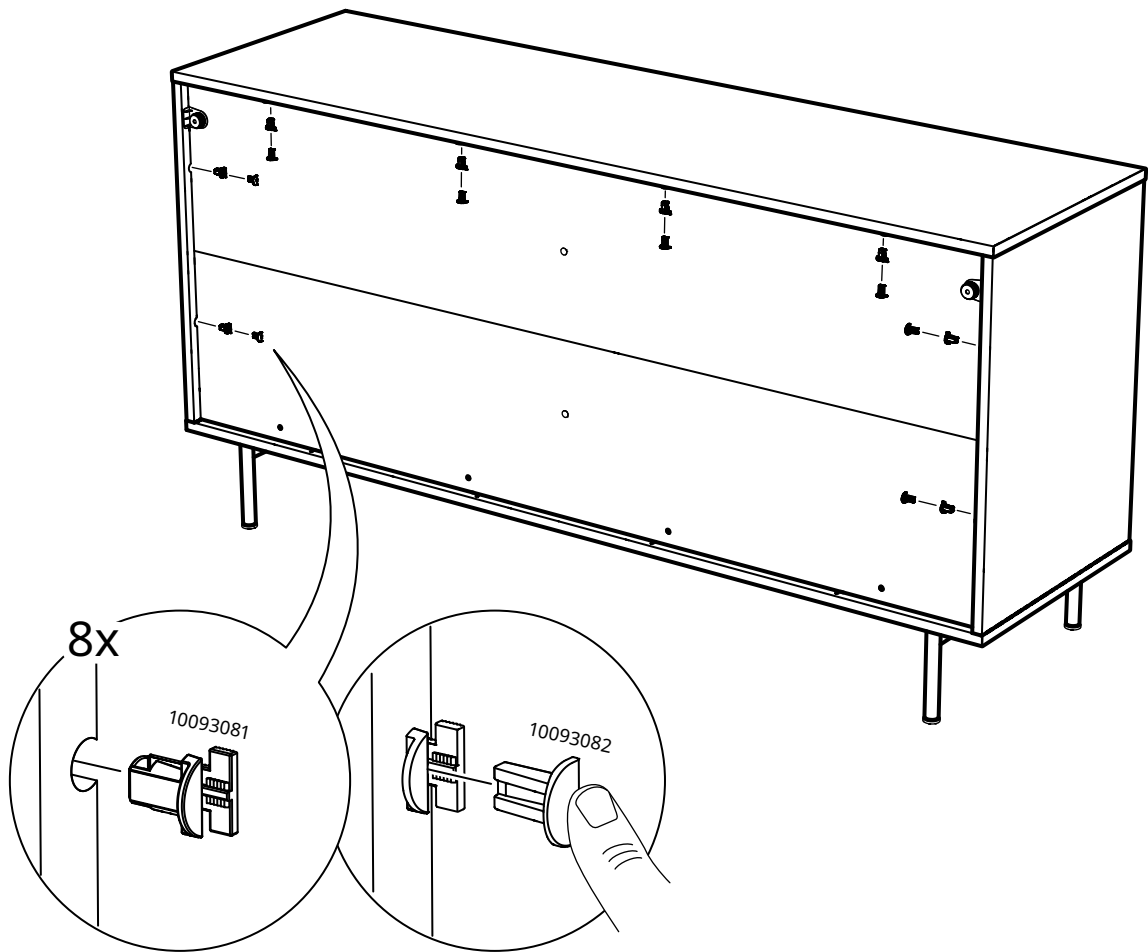 


16

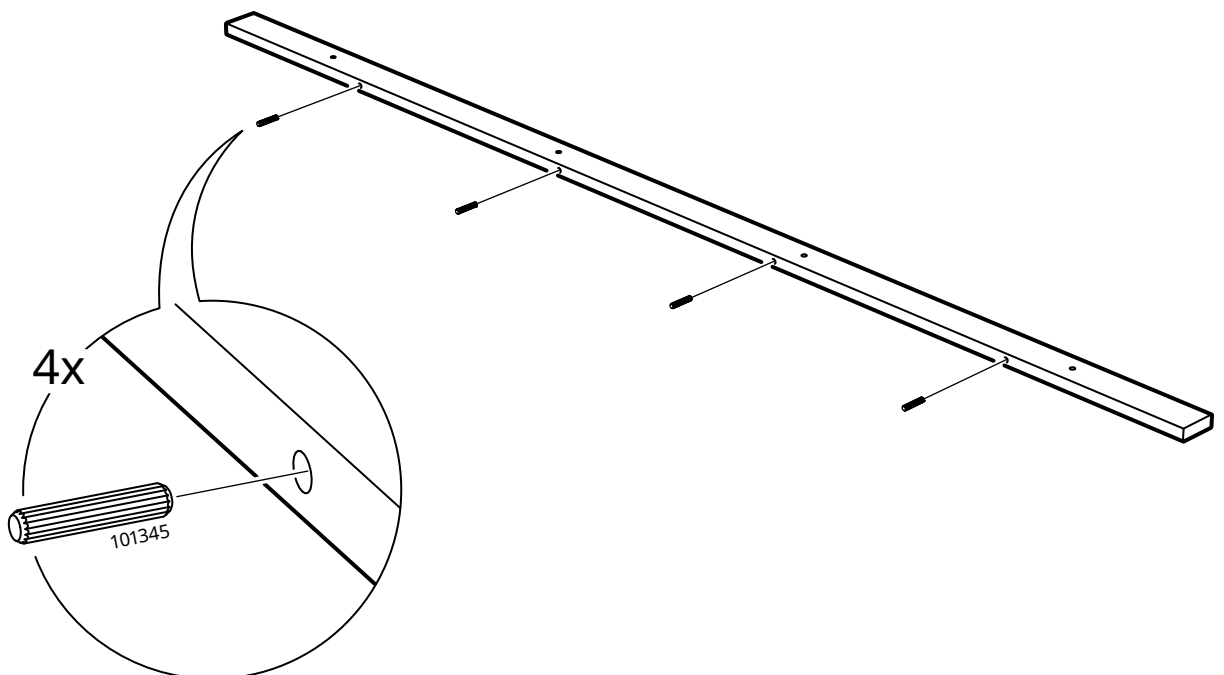 


17

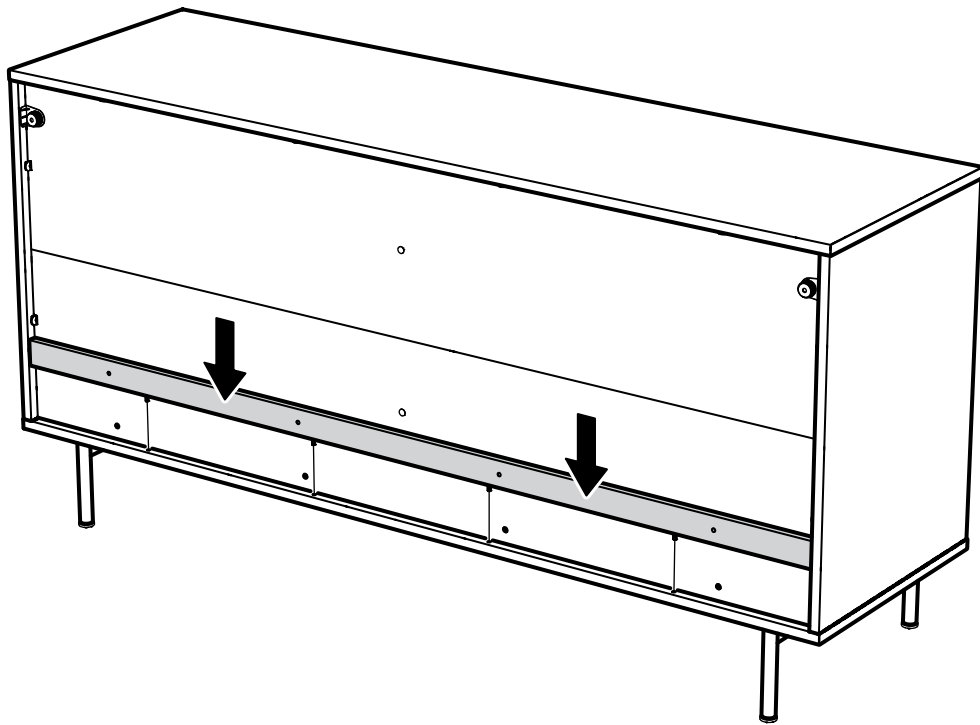 


18

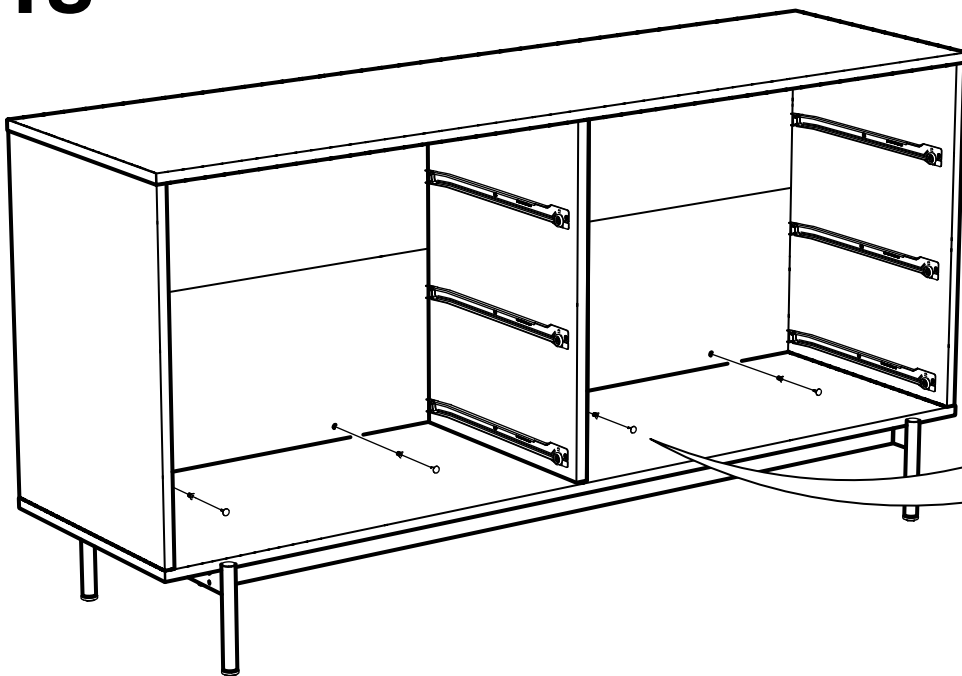 

4x

 


10075558

 


10051084

 
19

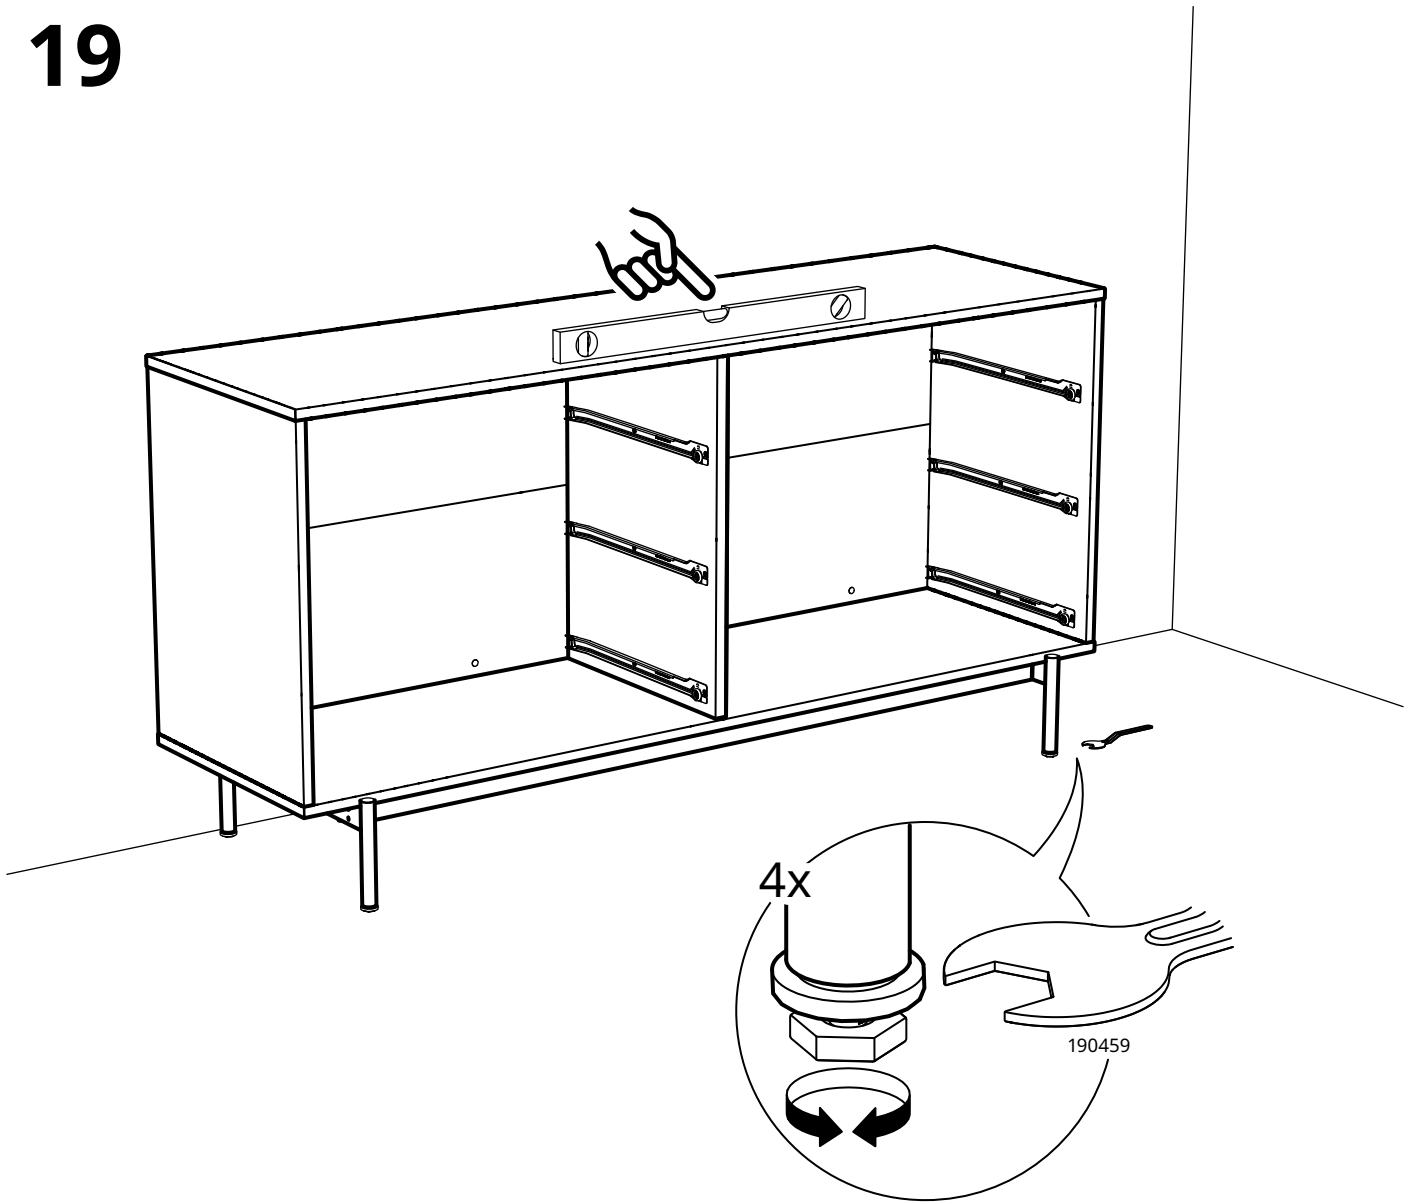

20

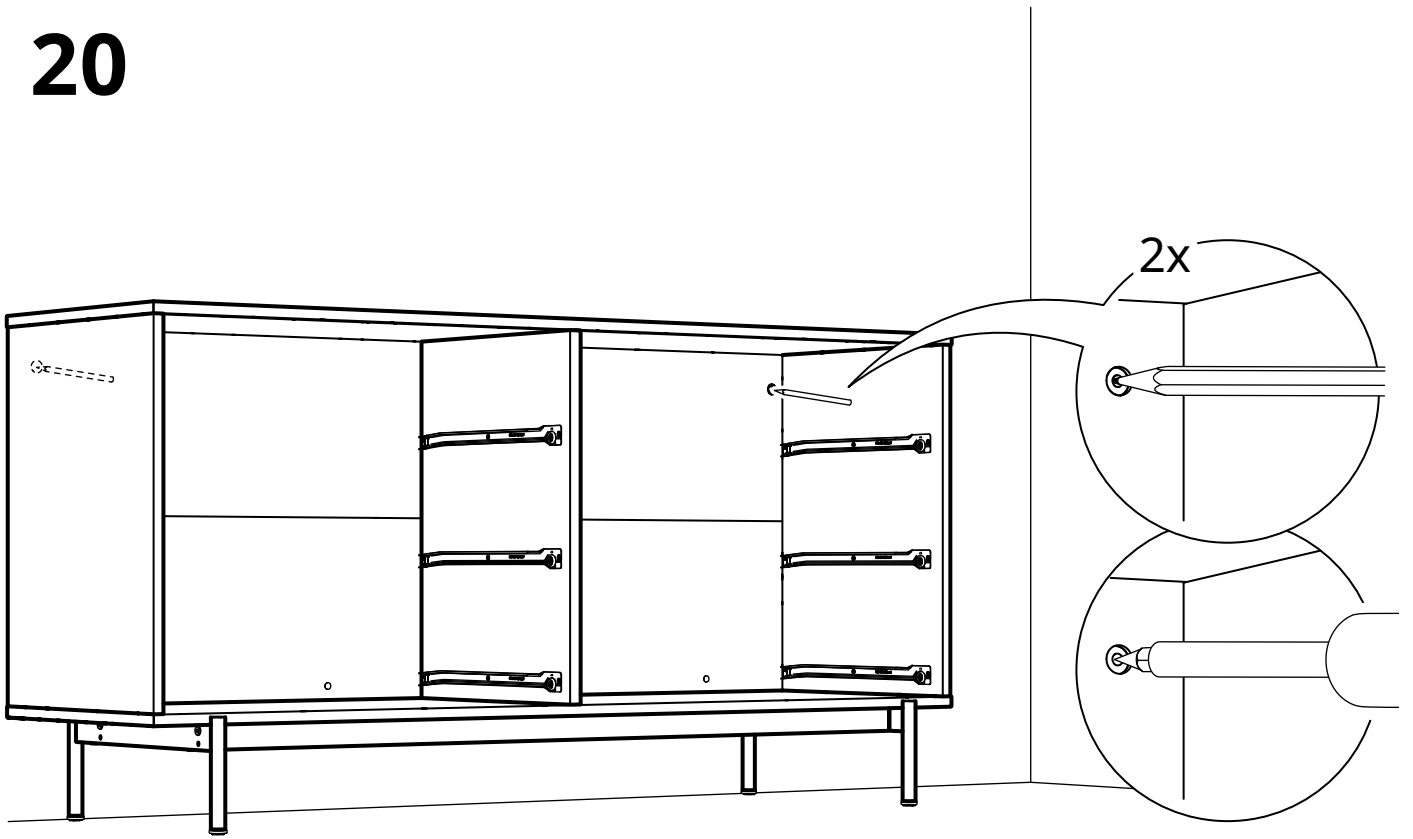 


21

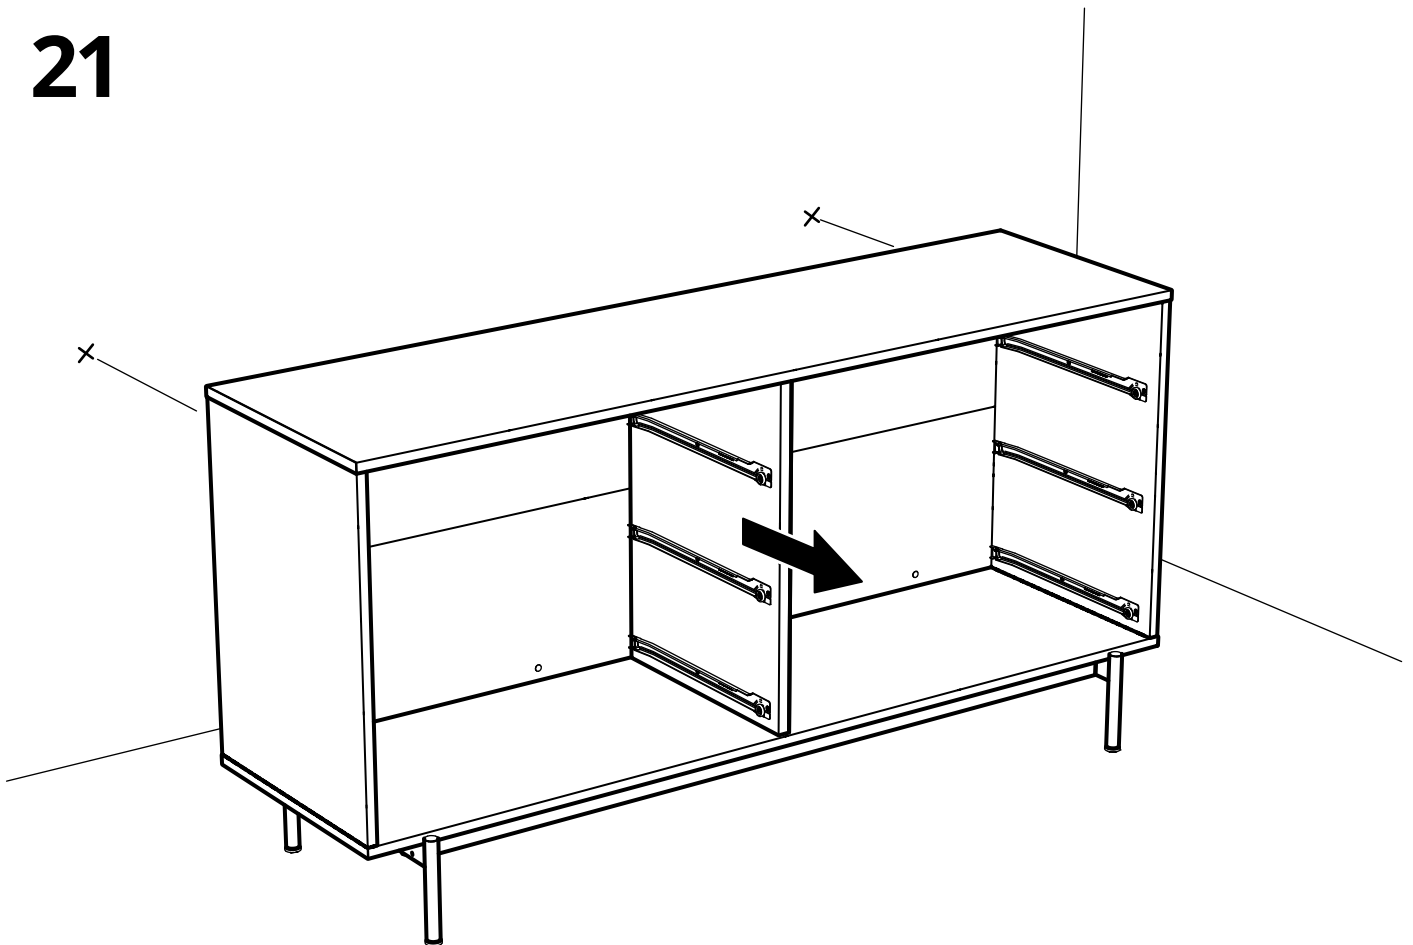 




www.IKEA.com/secure-it

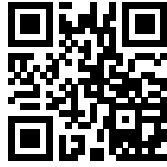 

www.IKEA.cn/secure-it

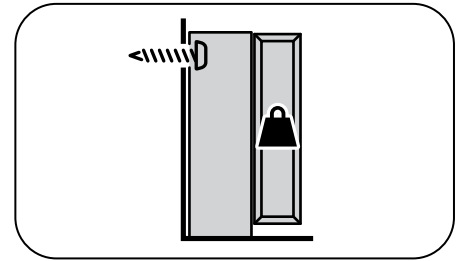 

22

English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

A

\varnothing 8 mm (5/16")

1

70 mm (2 3/4")

2

26

B

\varnothing 8 mm (5/16")

1

\approx 30 mm (\approx 1 1/4")

2

27

 
 
 
 
C

 
 
 
\varnothing 3 mm (1/8")

 
 
1

 
 
\approx 30 mm (\approx 1/4")

29

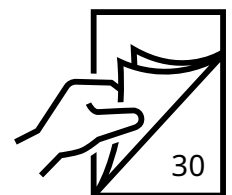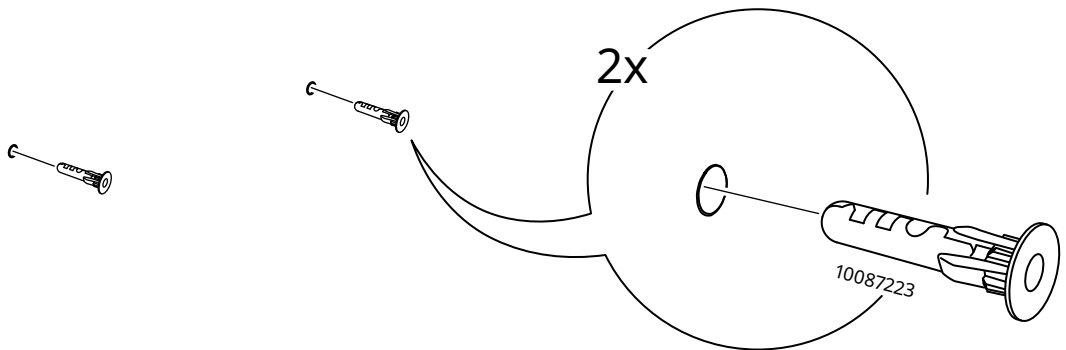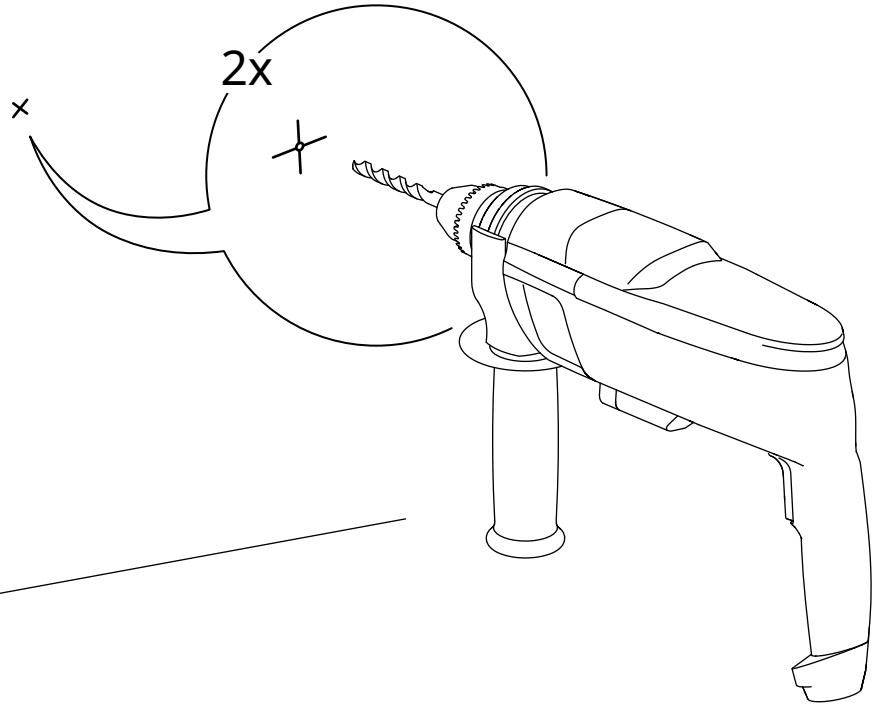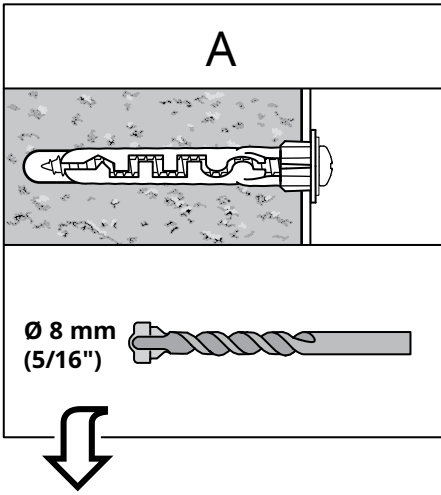


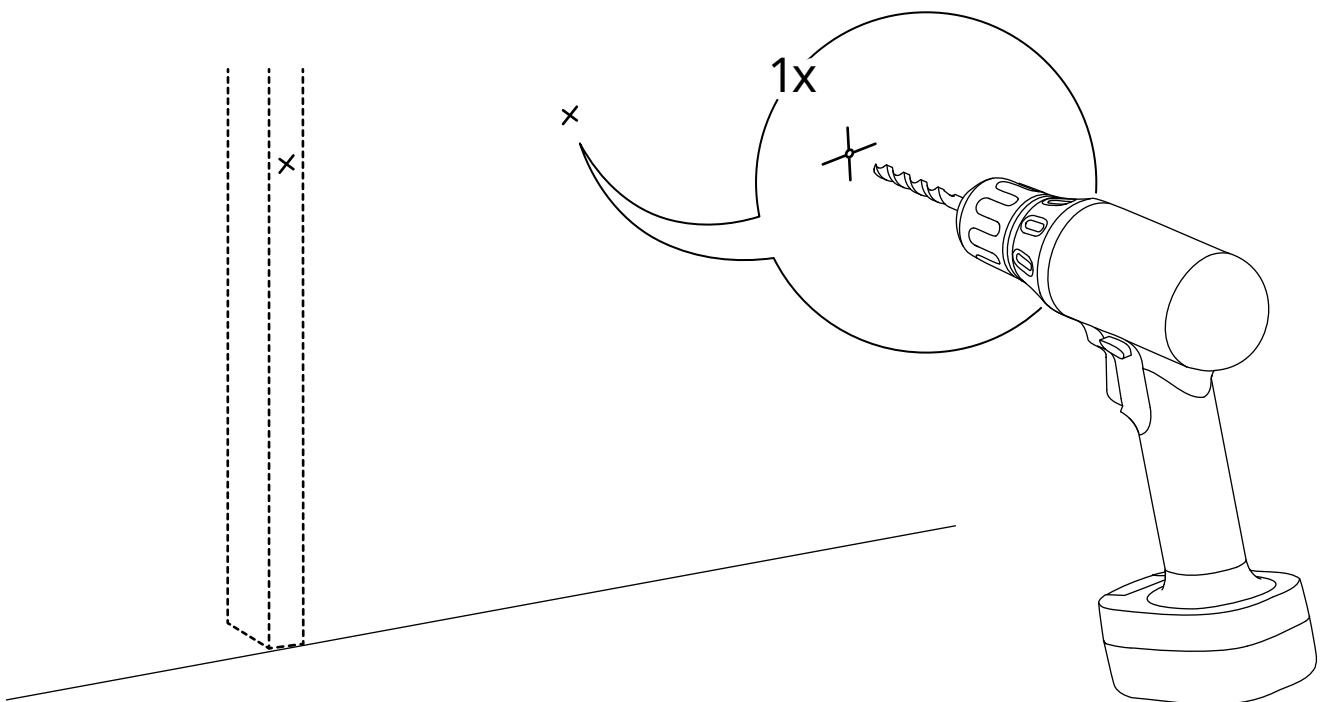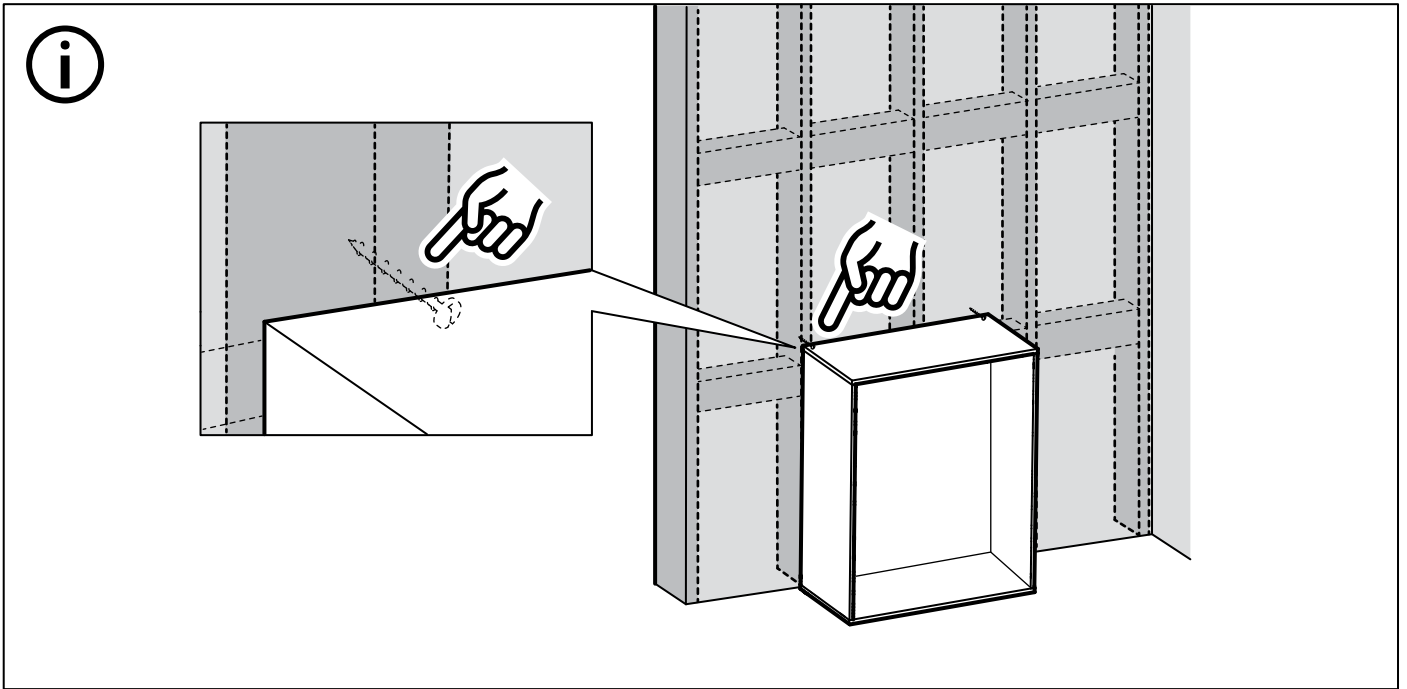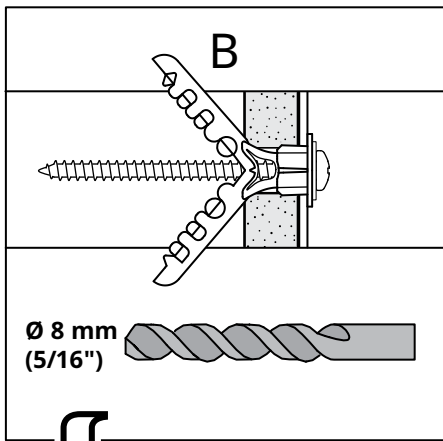


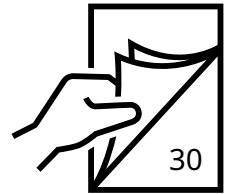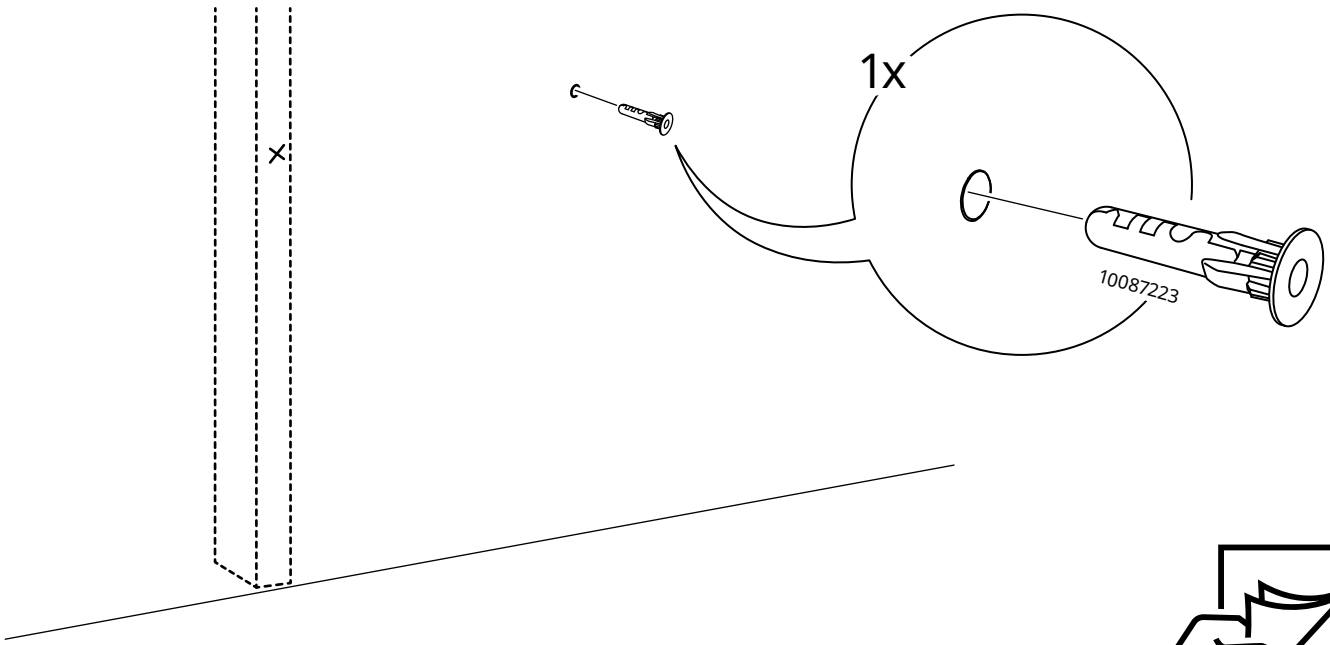

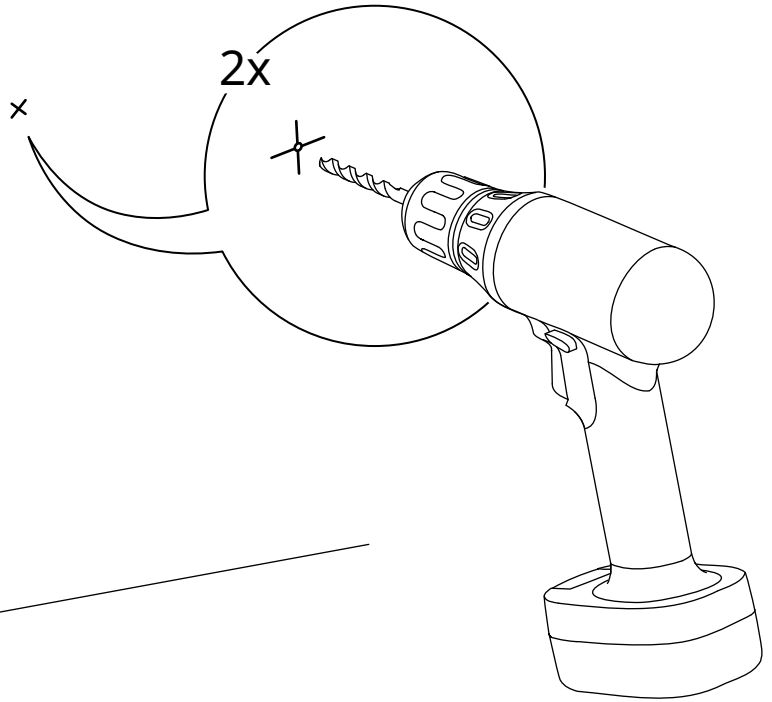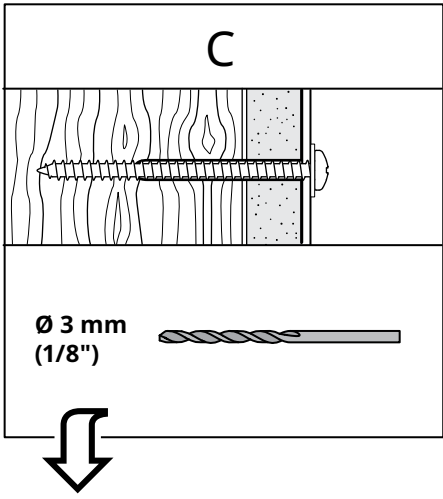


23


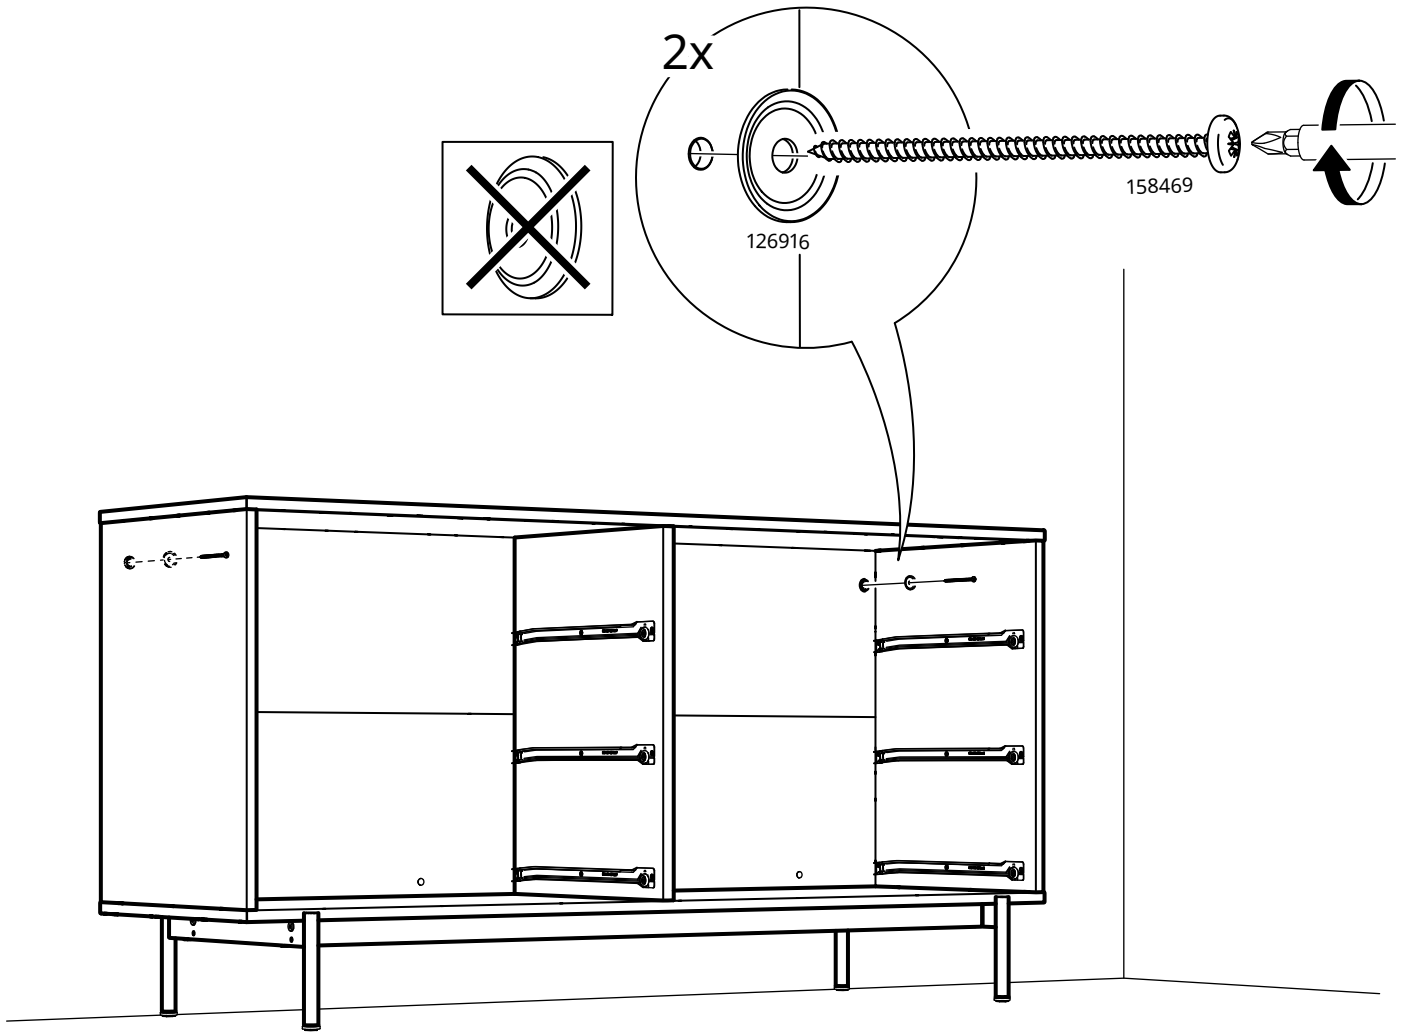 


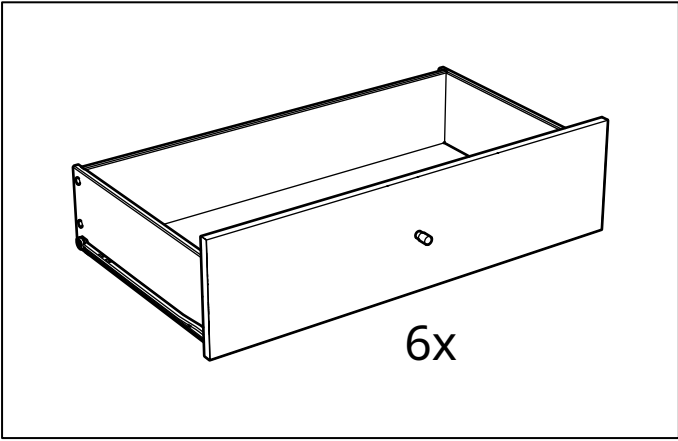 




24

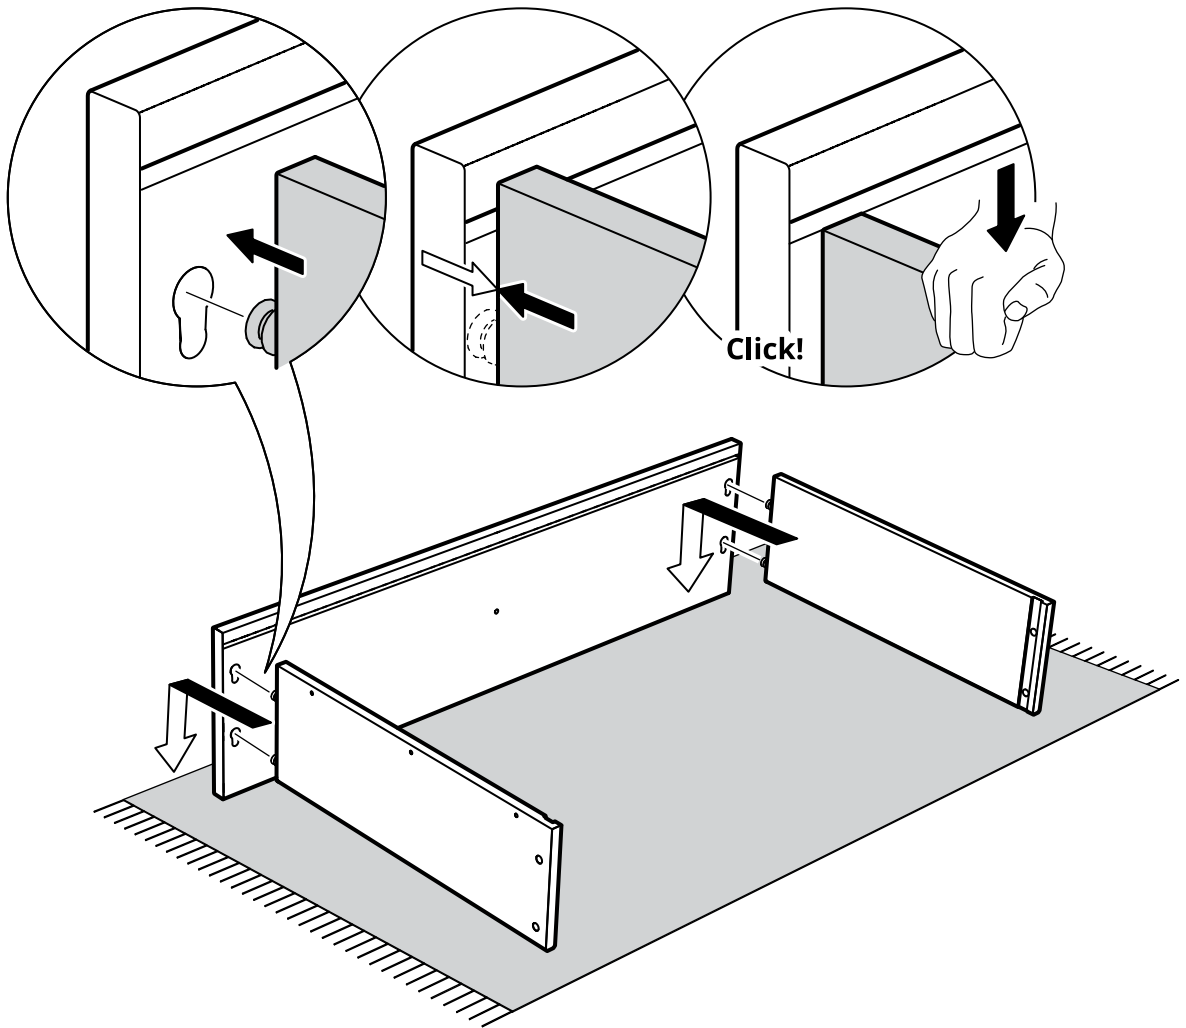 


25

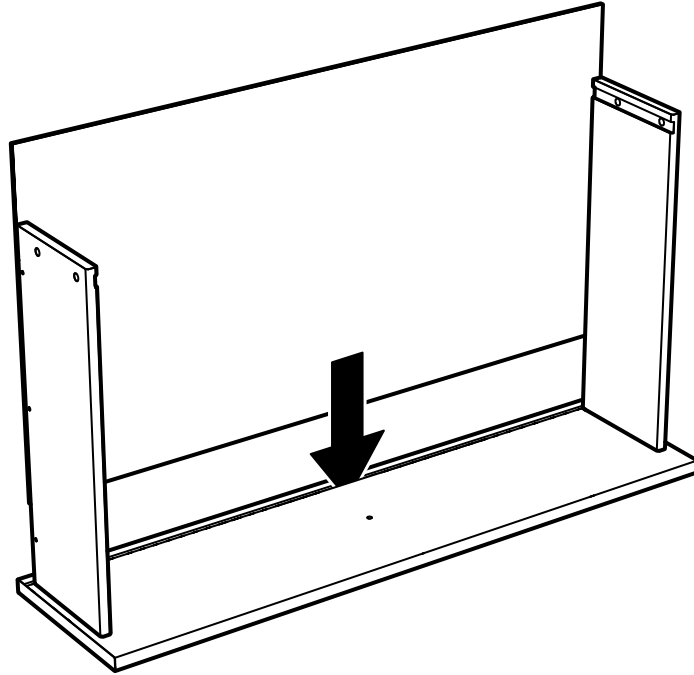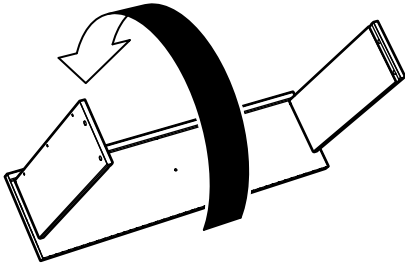  


26

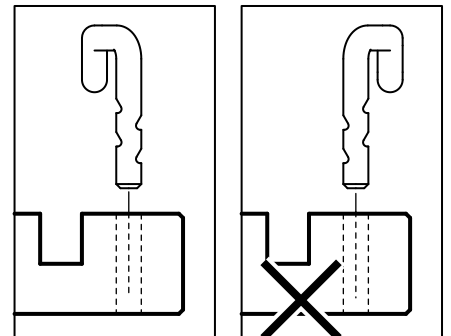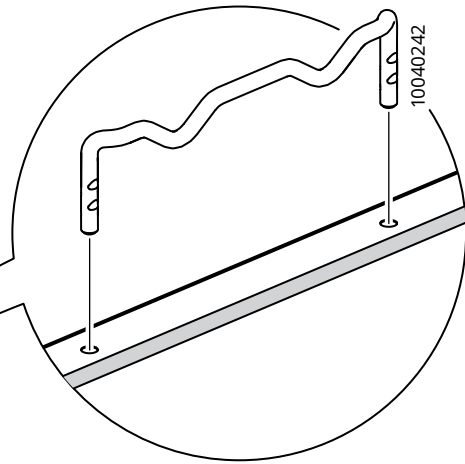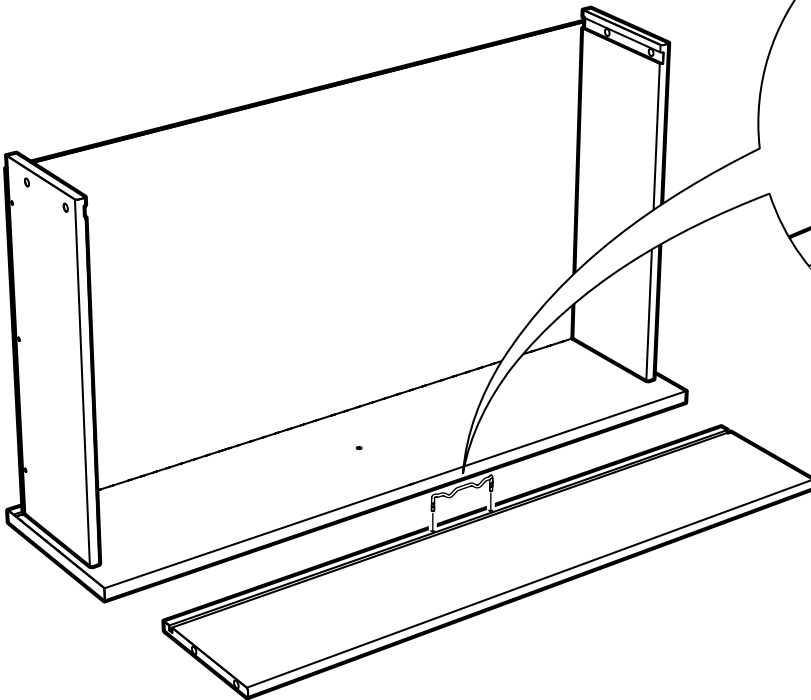   


27

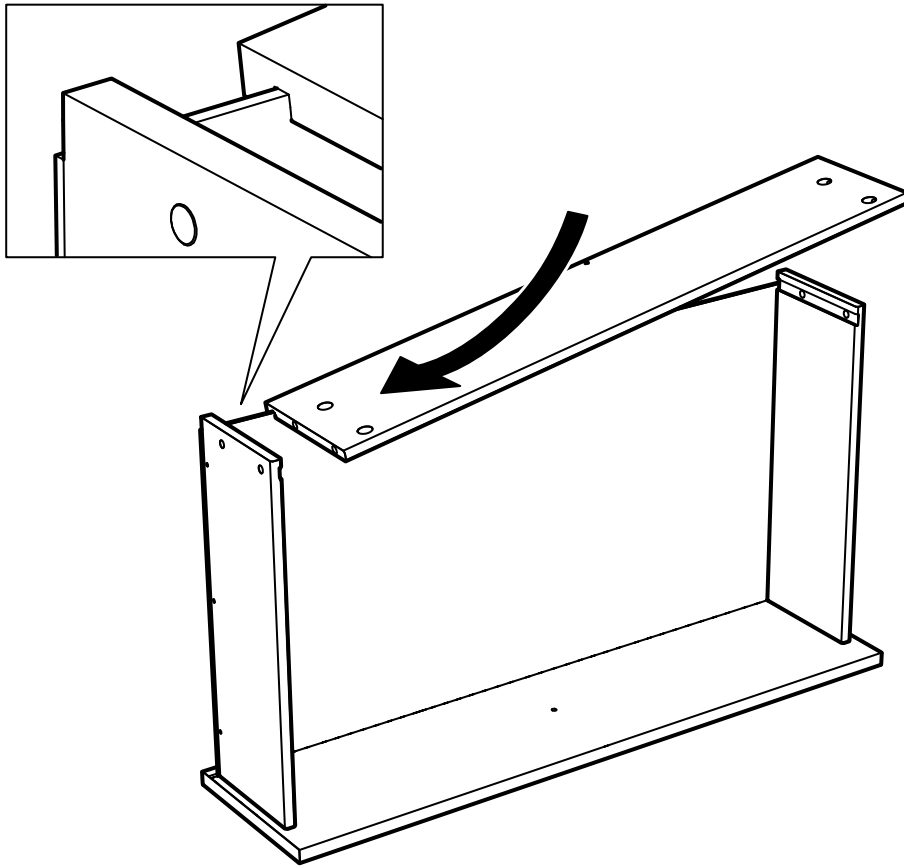 


28

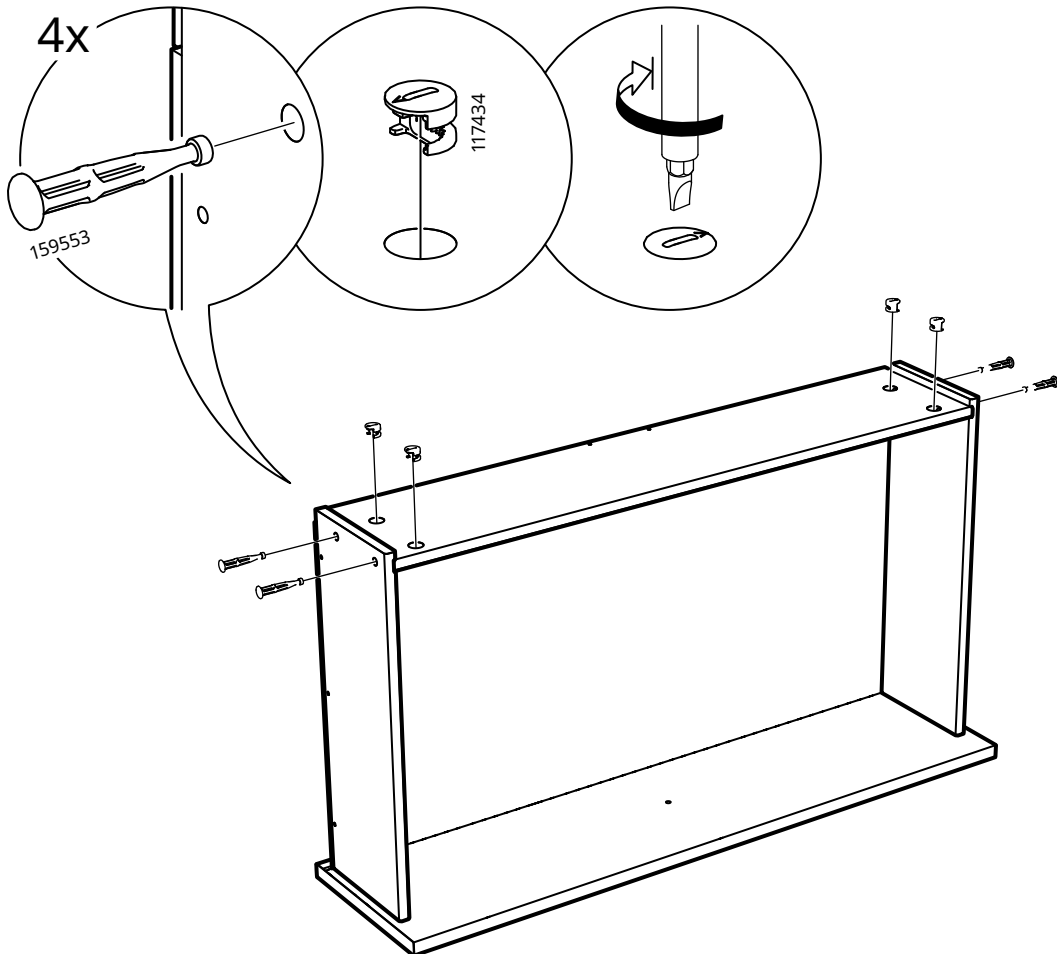 

29

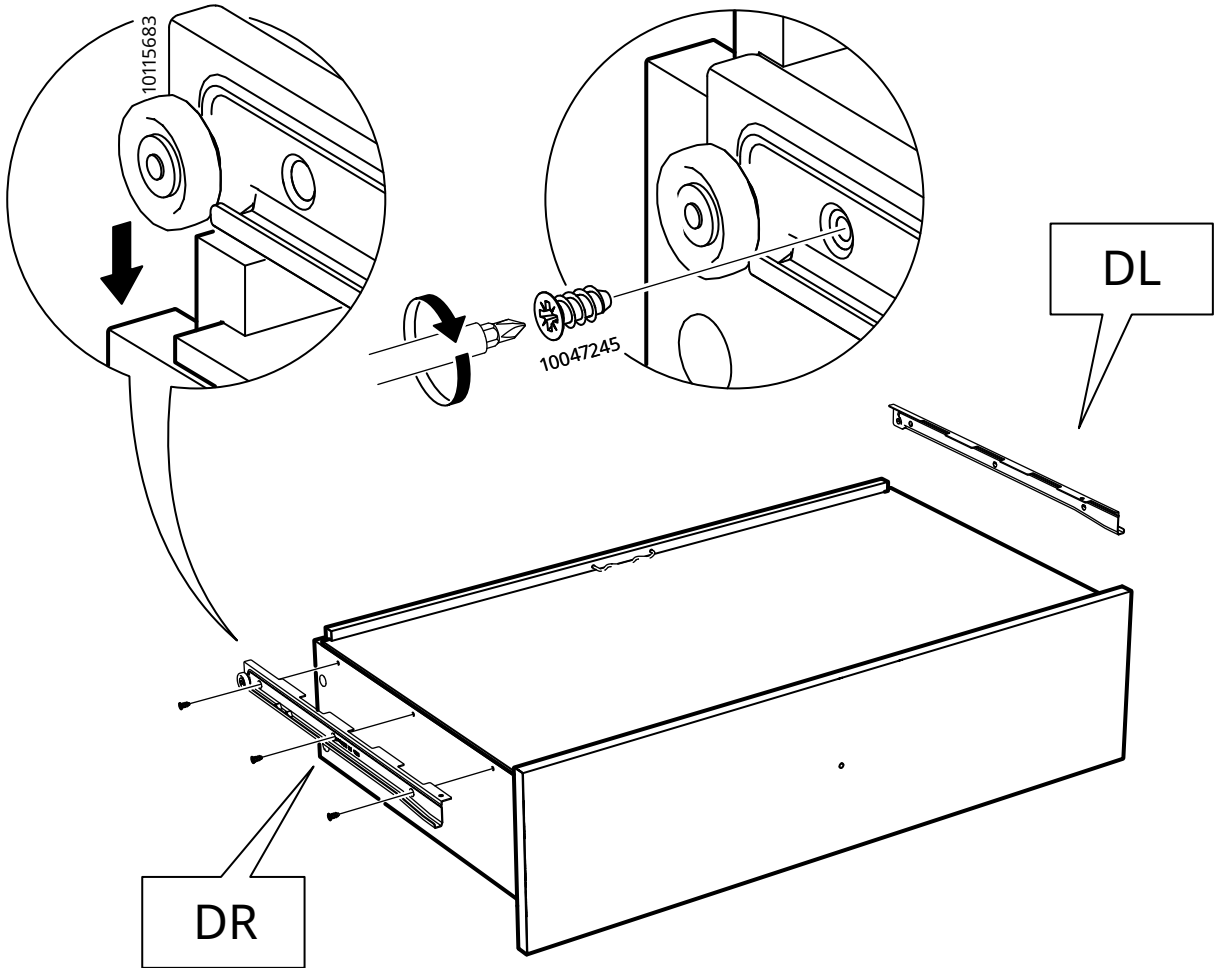 

30

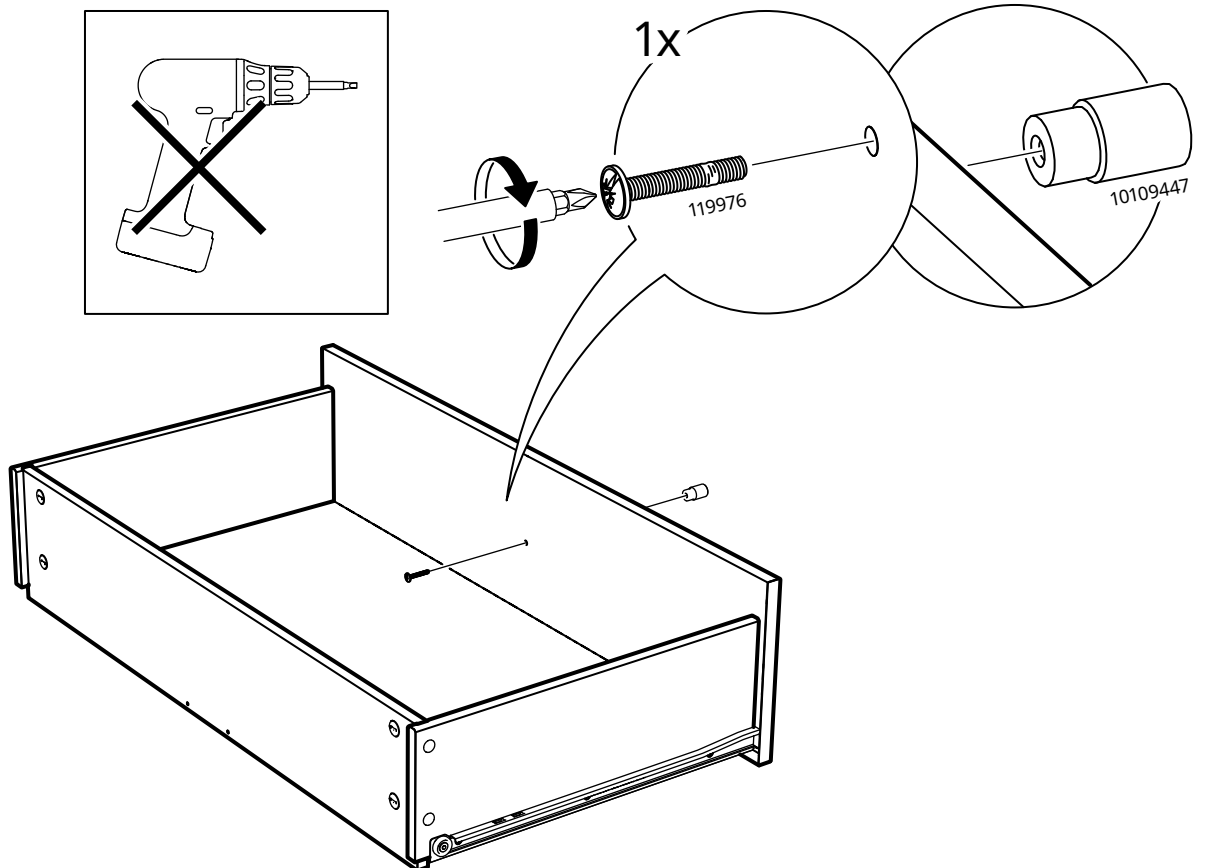 

31

