
RÅDMANSÖ

 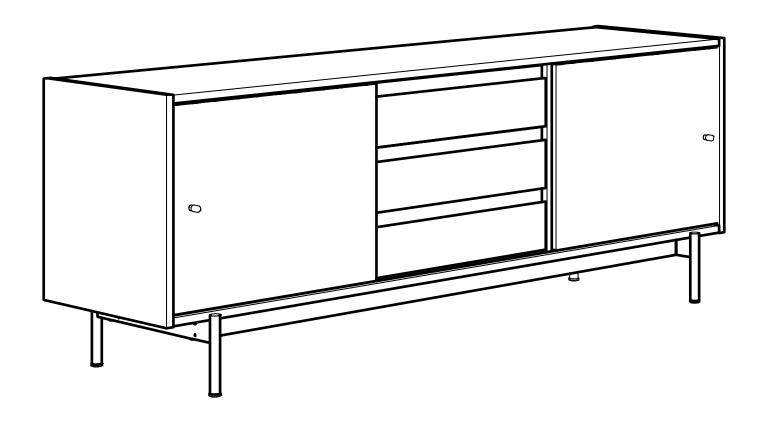














English

WARNING

Children have died from furniture tipover.To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.


NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.


ALWAYS secure your television with an anchor device.


English


Read and follow each step of the instruction carefully.


AA-2586497-1

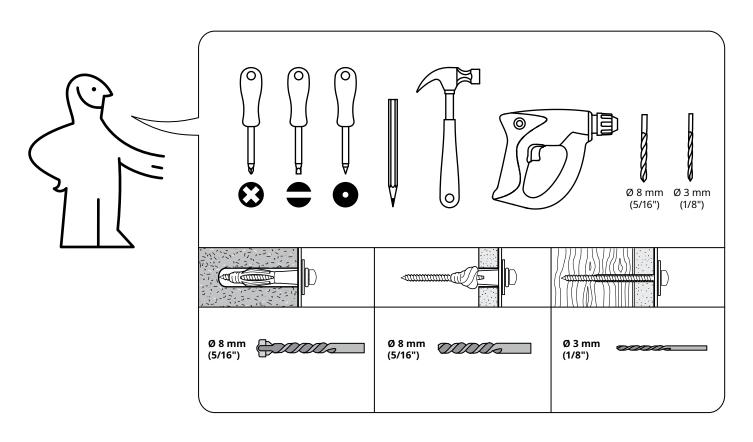


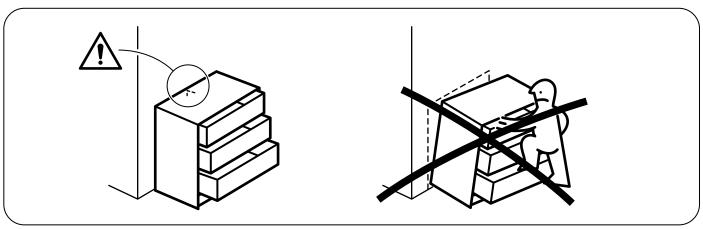


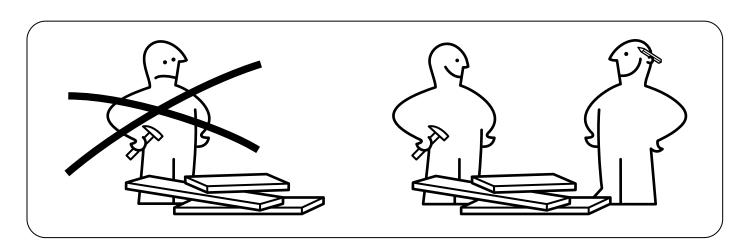


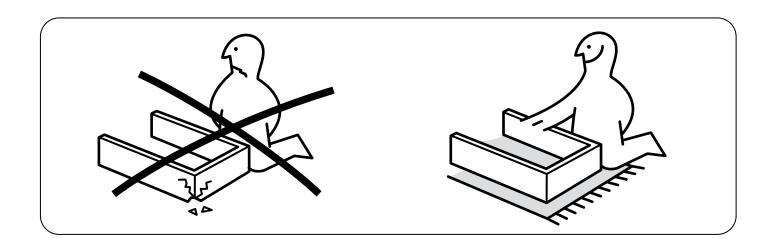


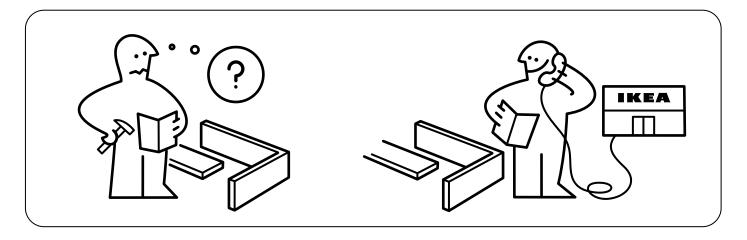


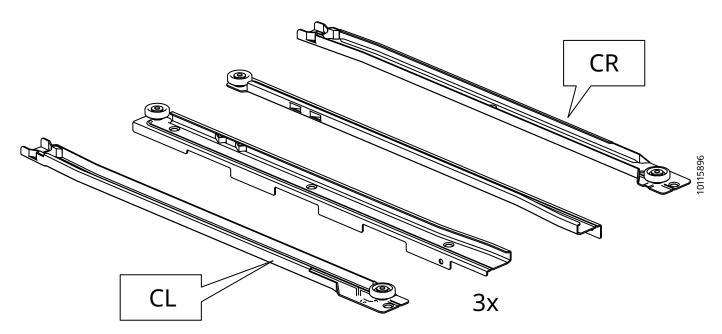

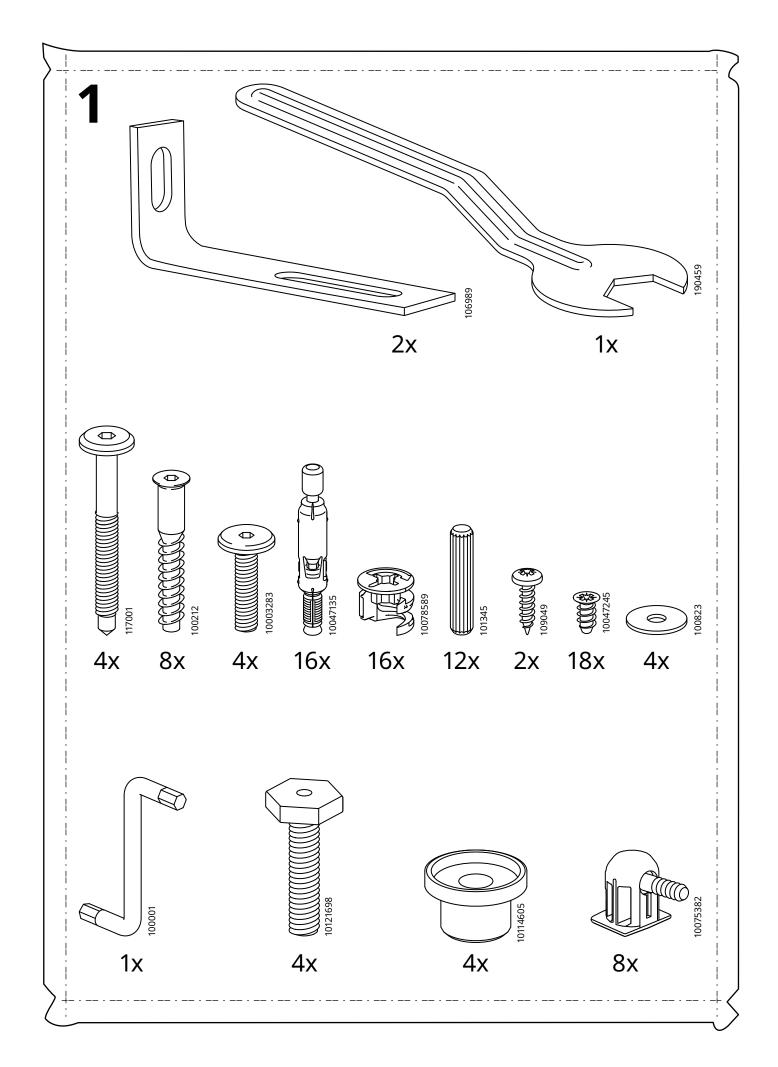


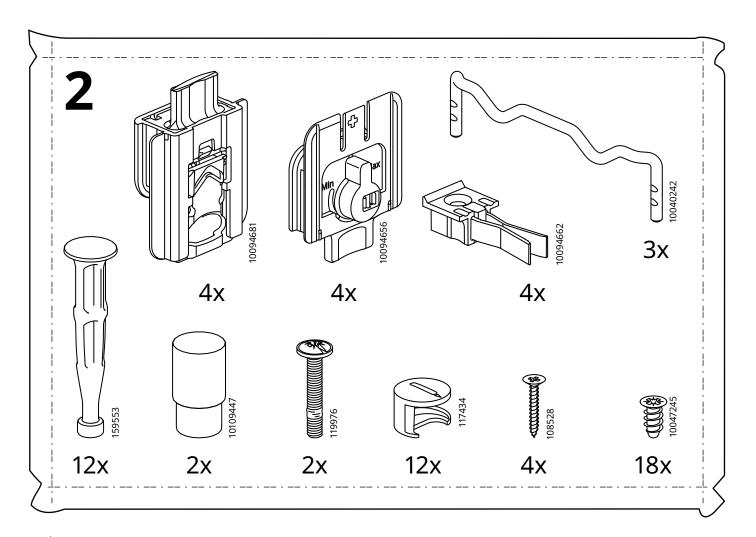


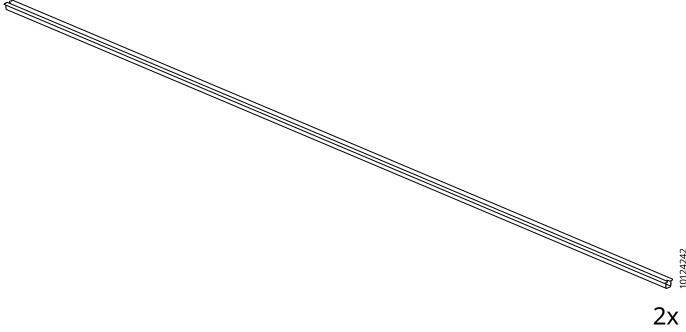


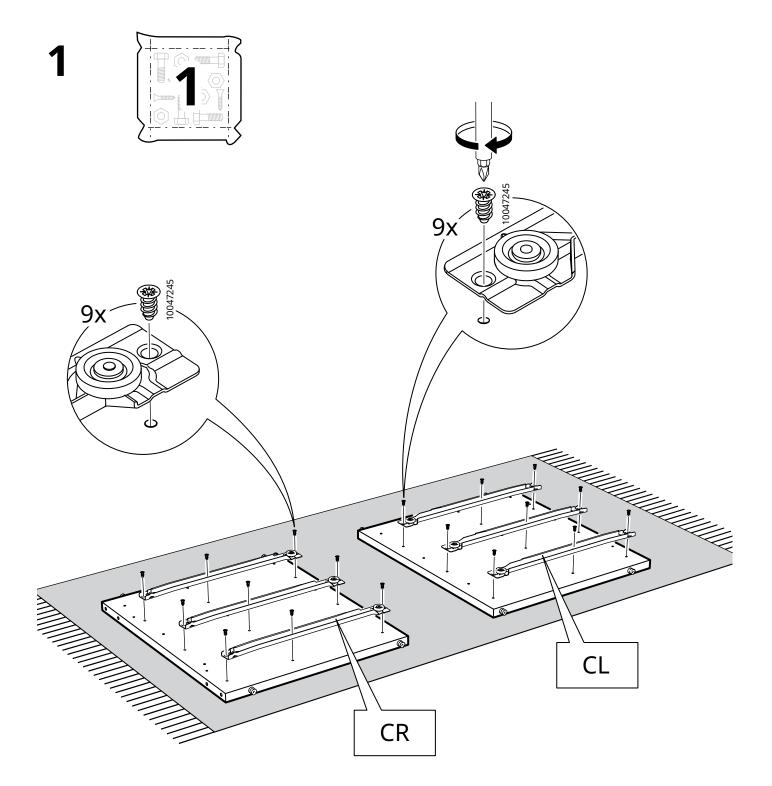




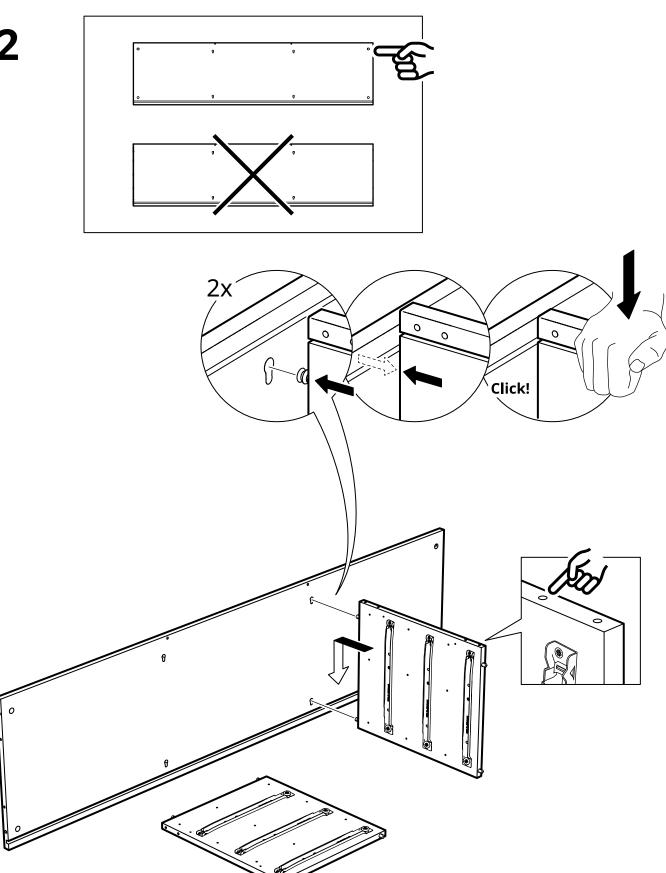


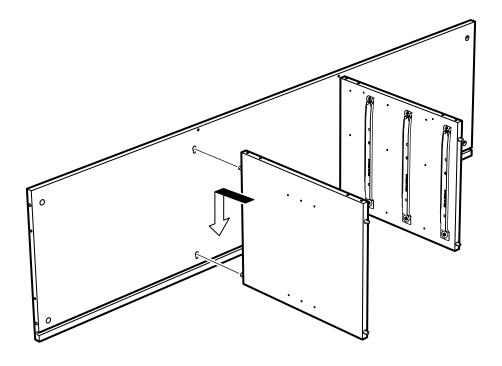


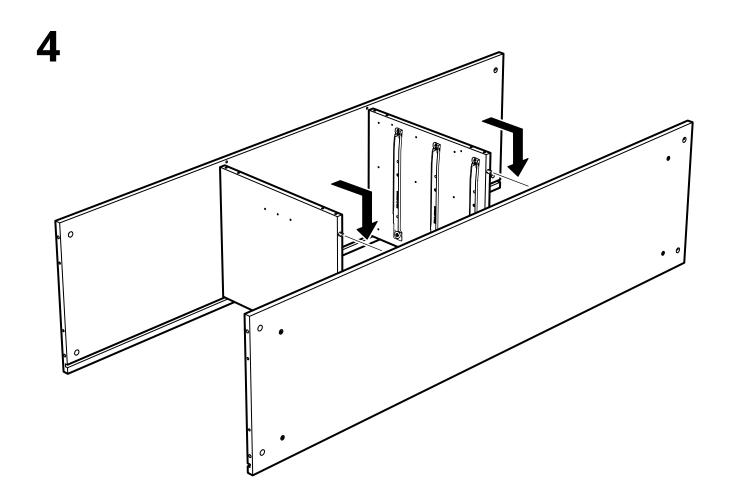

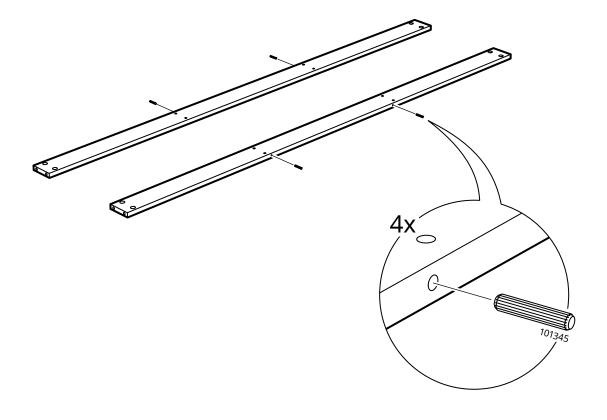





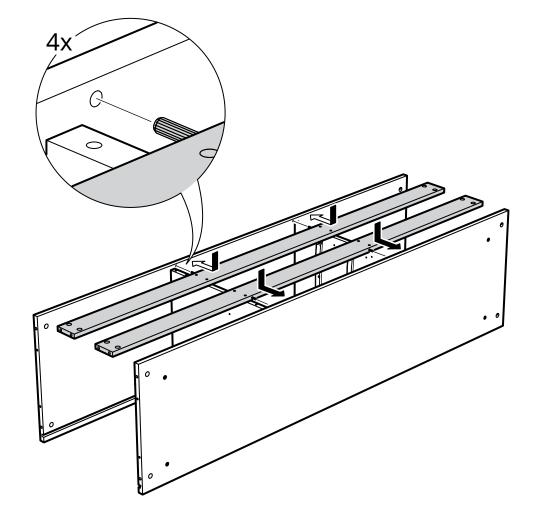


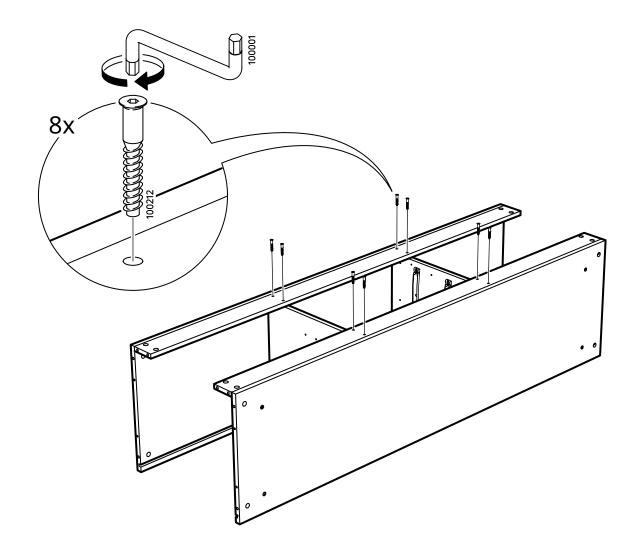




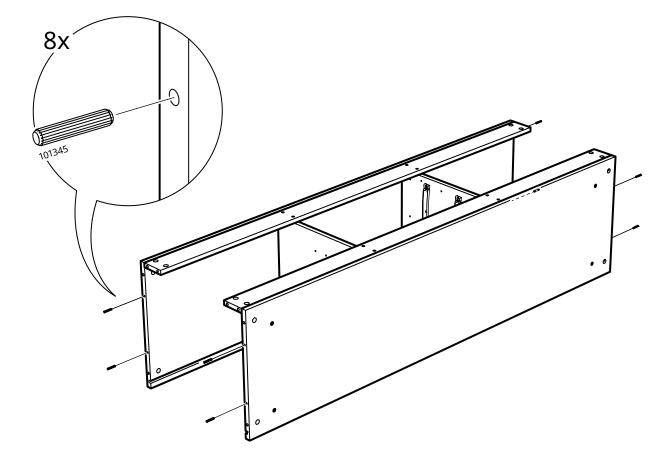


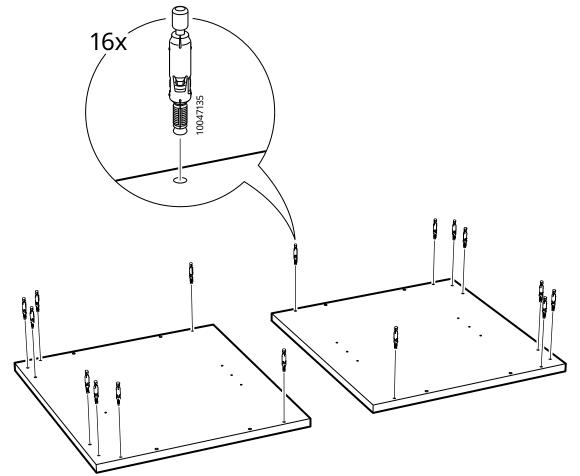


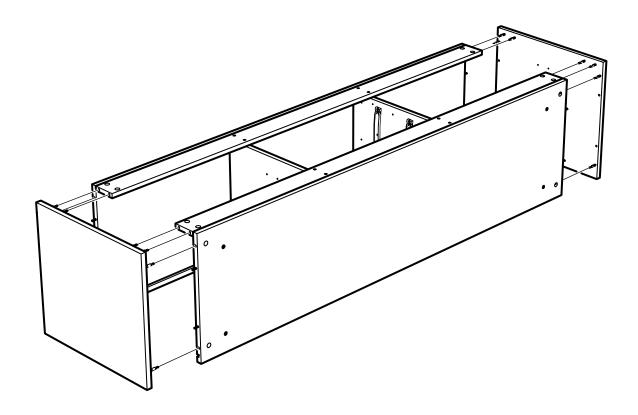



11 16x **12** 2x 1009₄₆₆₂

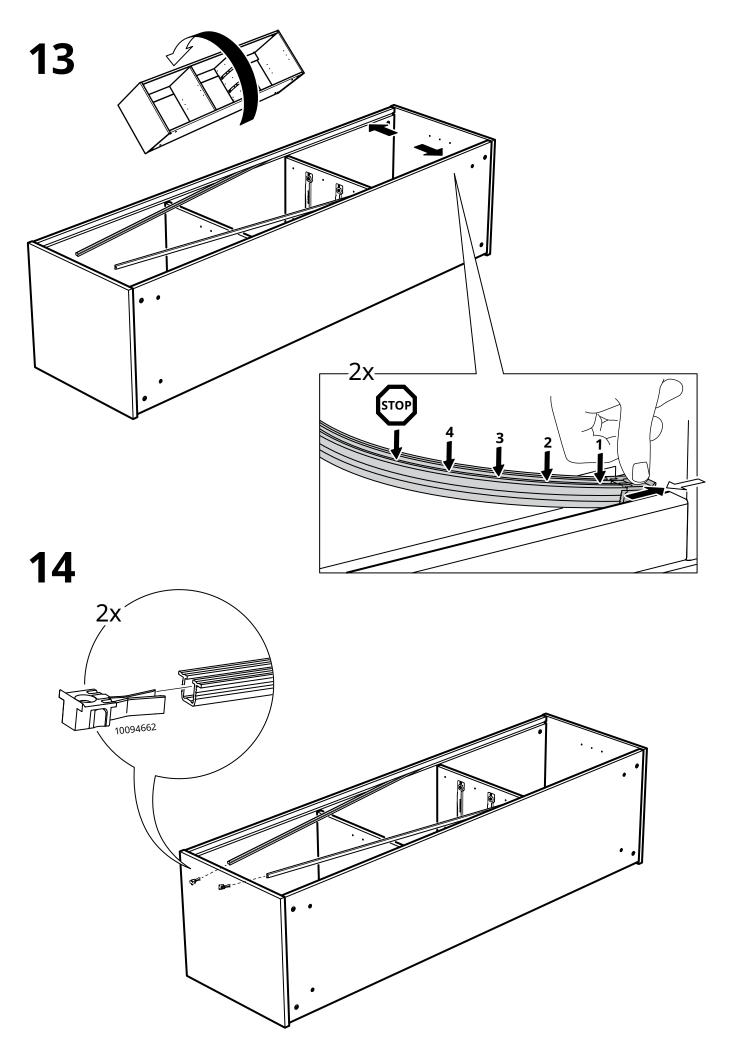


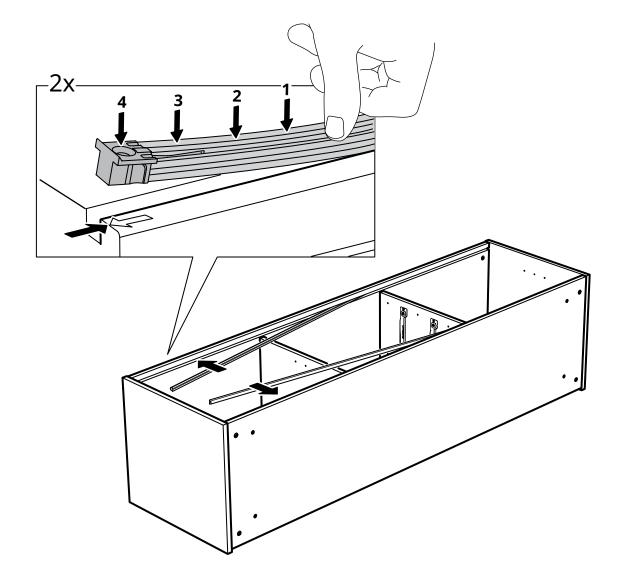


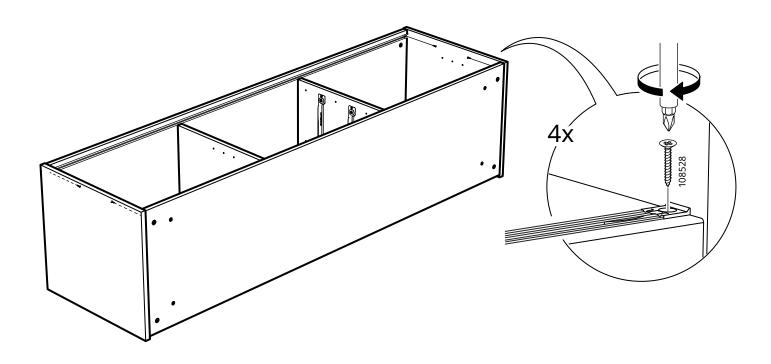

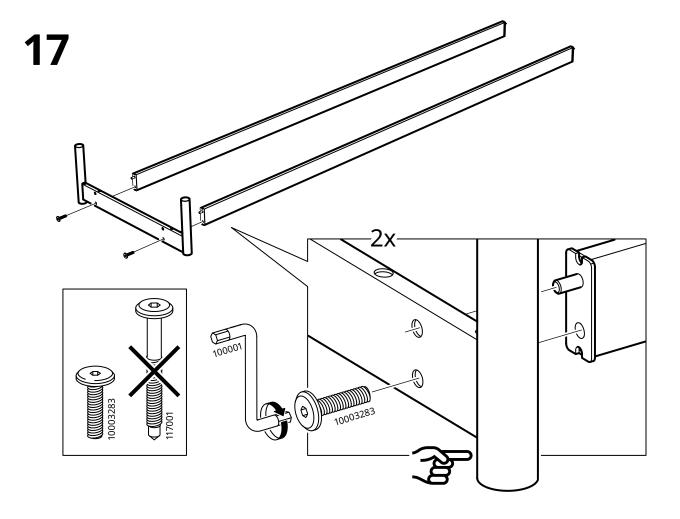

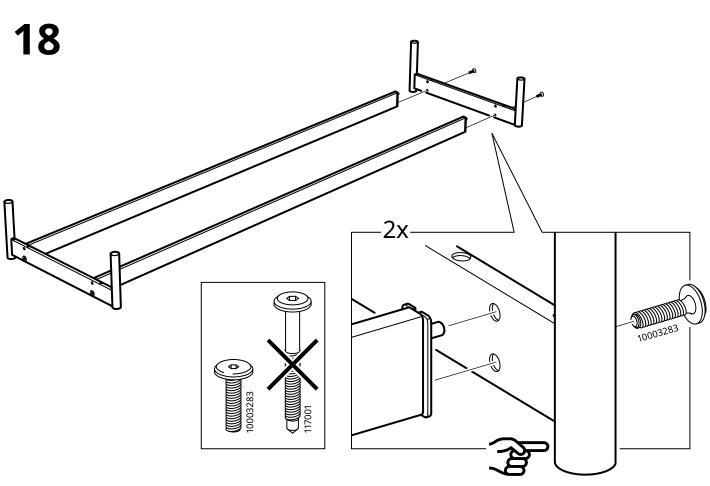

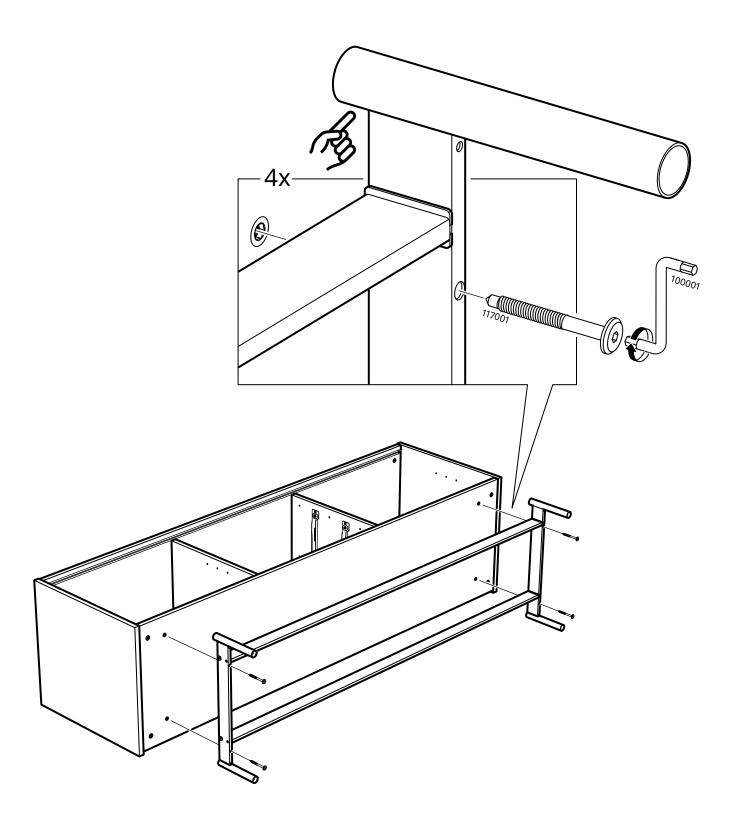

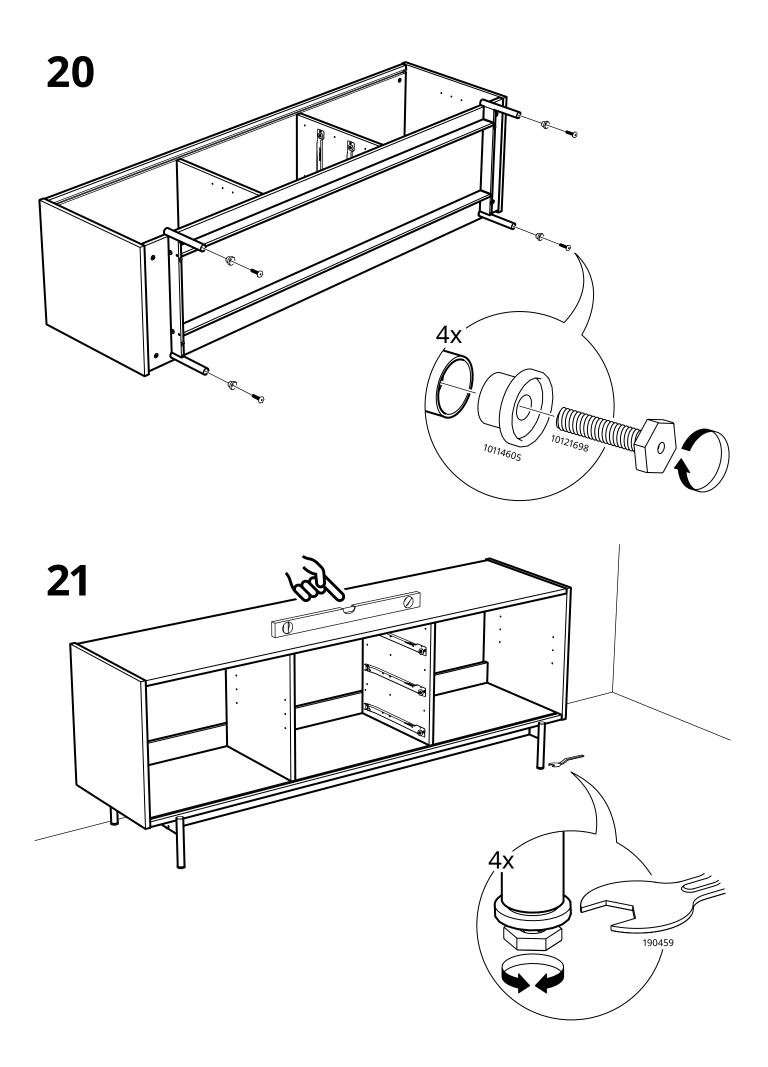









English


The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

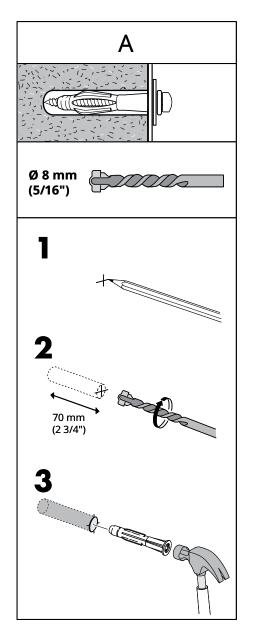


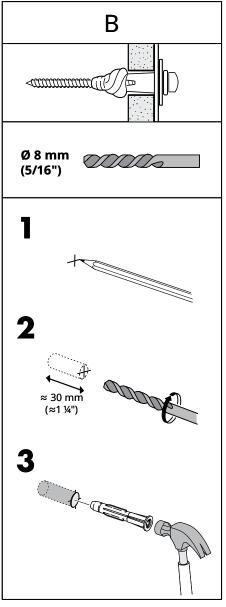


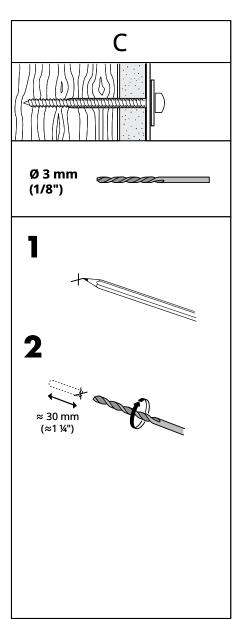


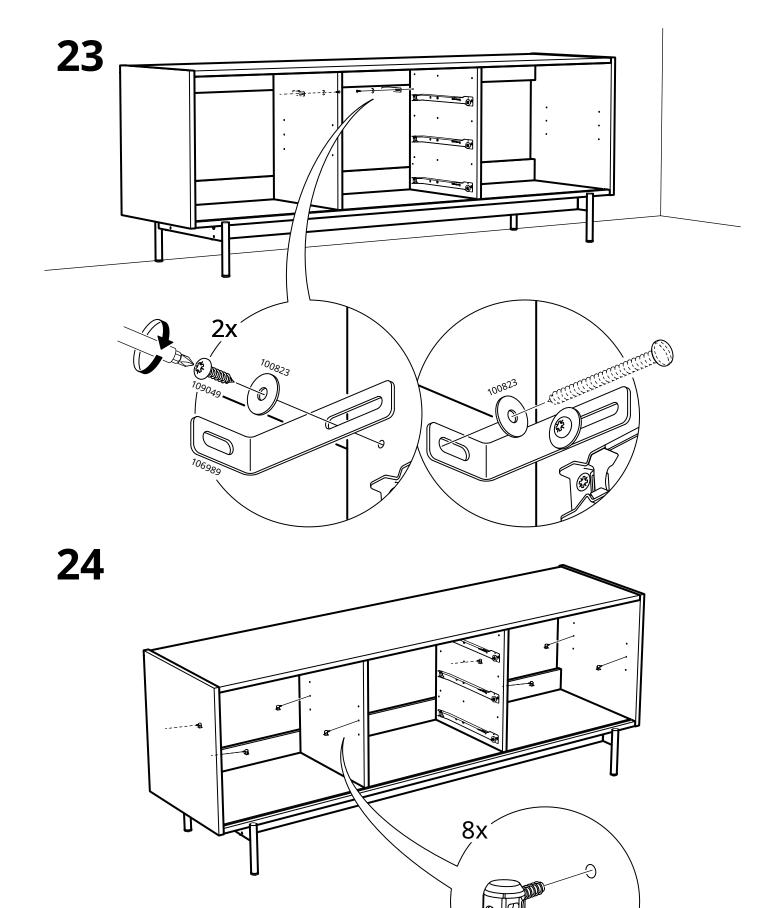


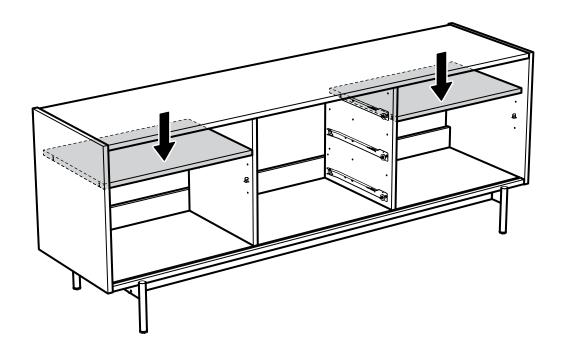

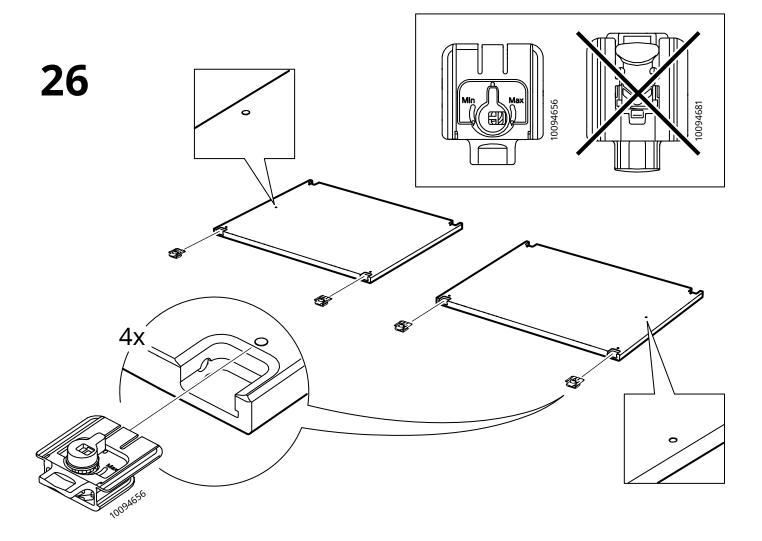


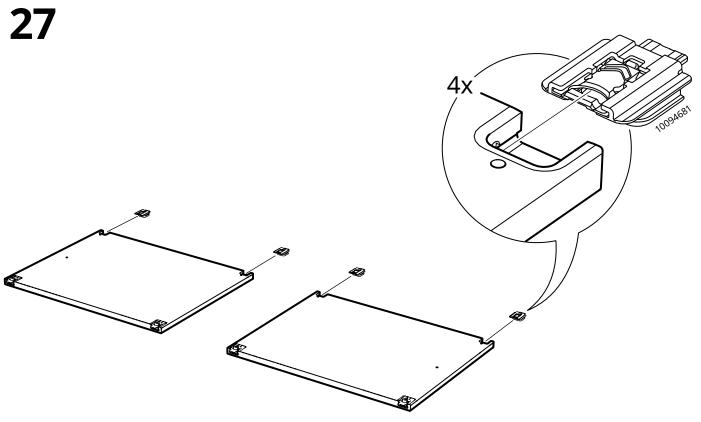


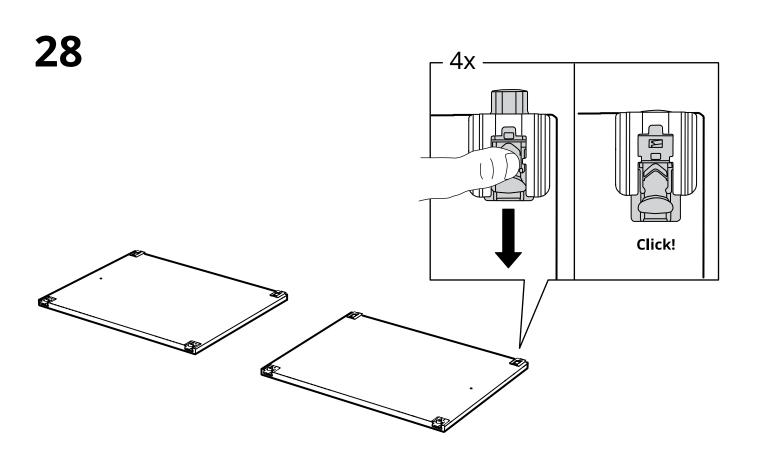


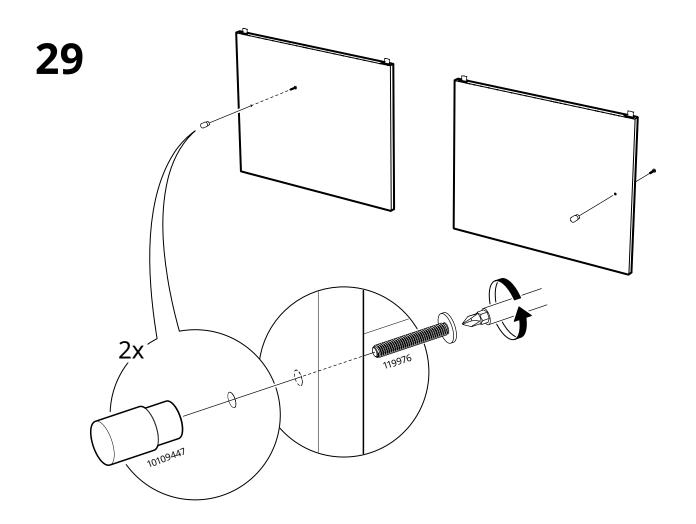





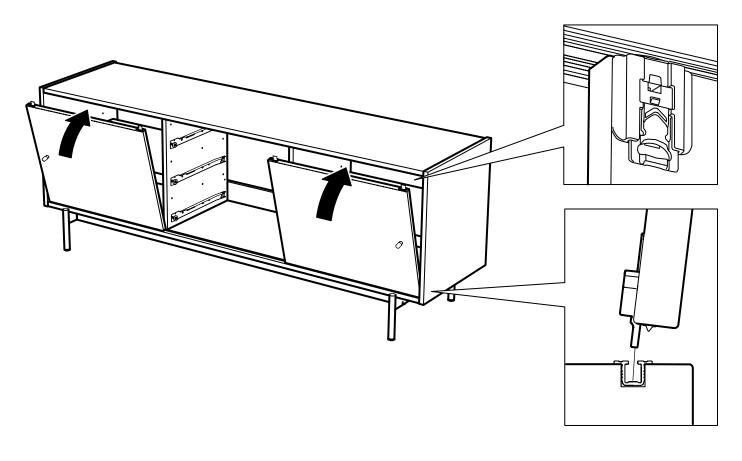


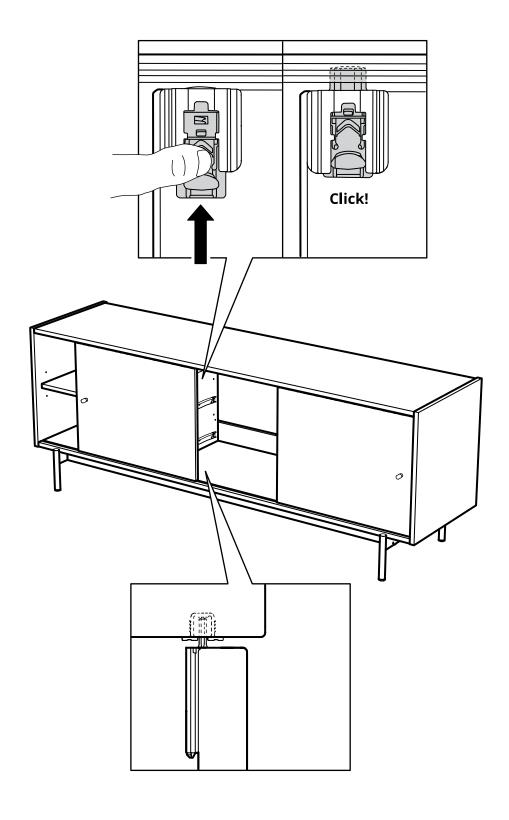


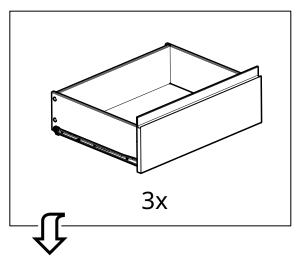


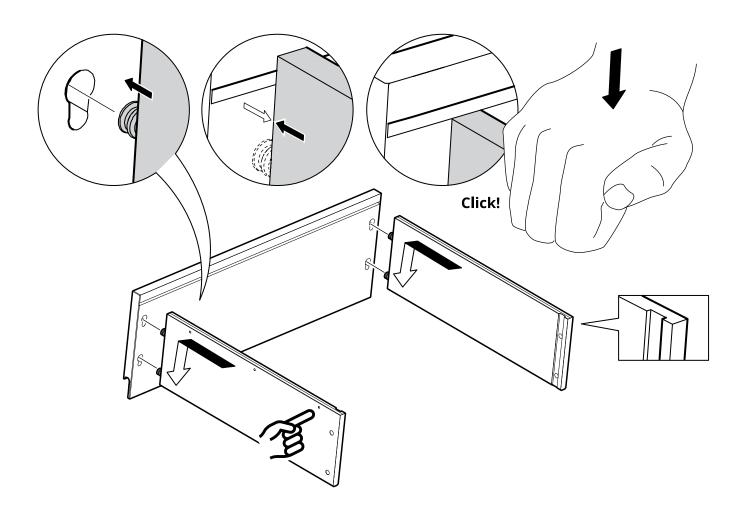


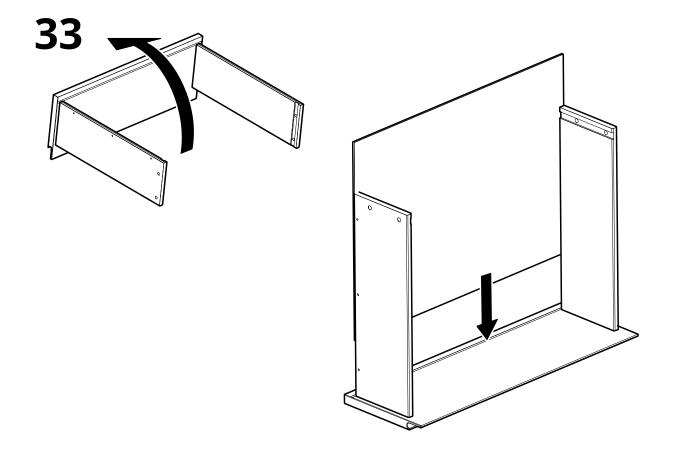


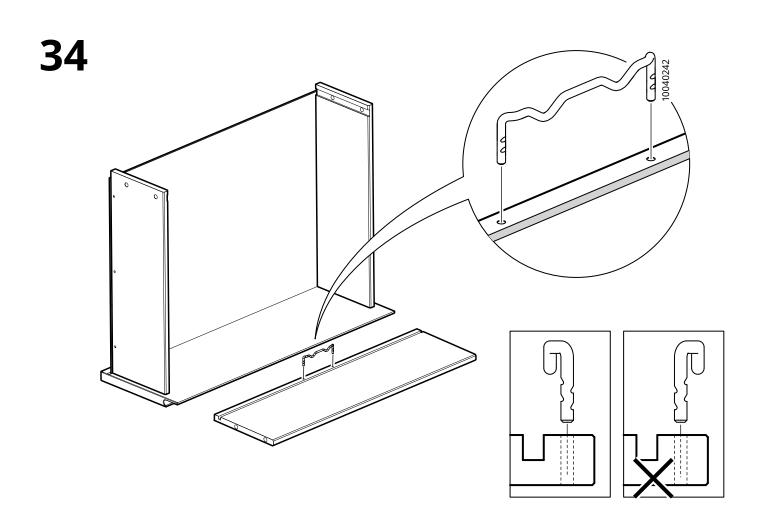


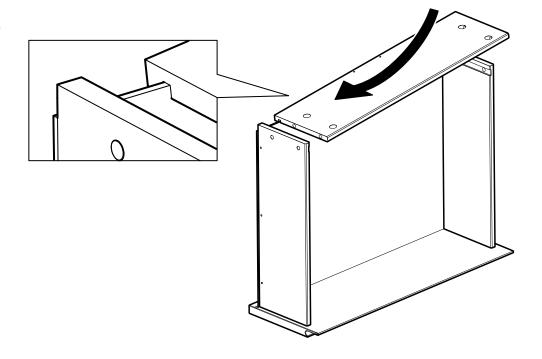

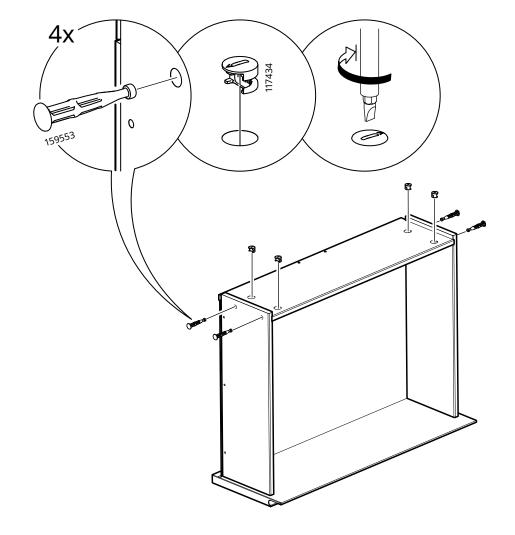

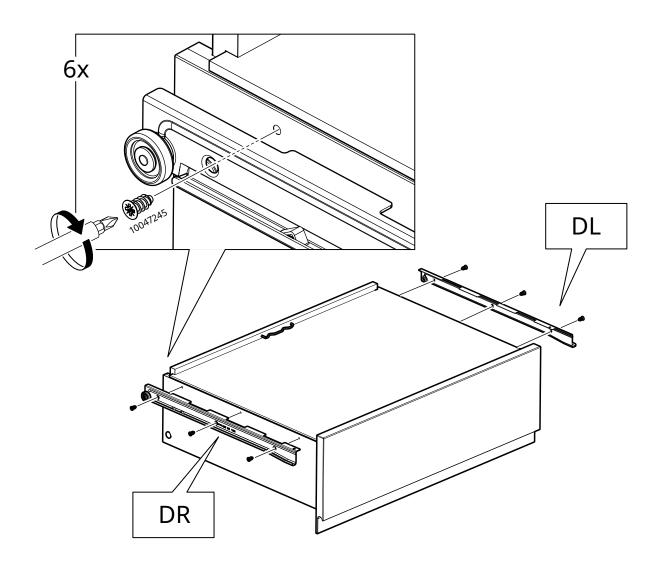

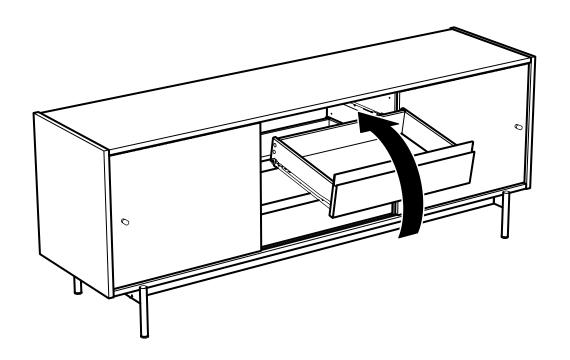

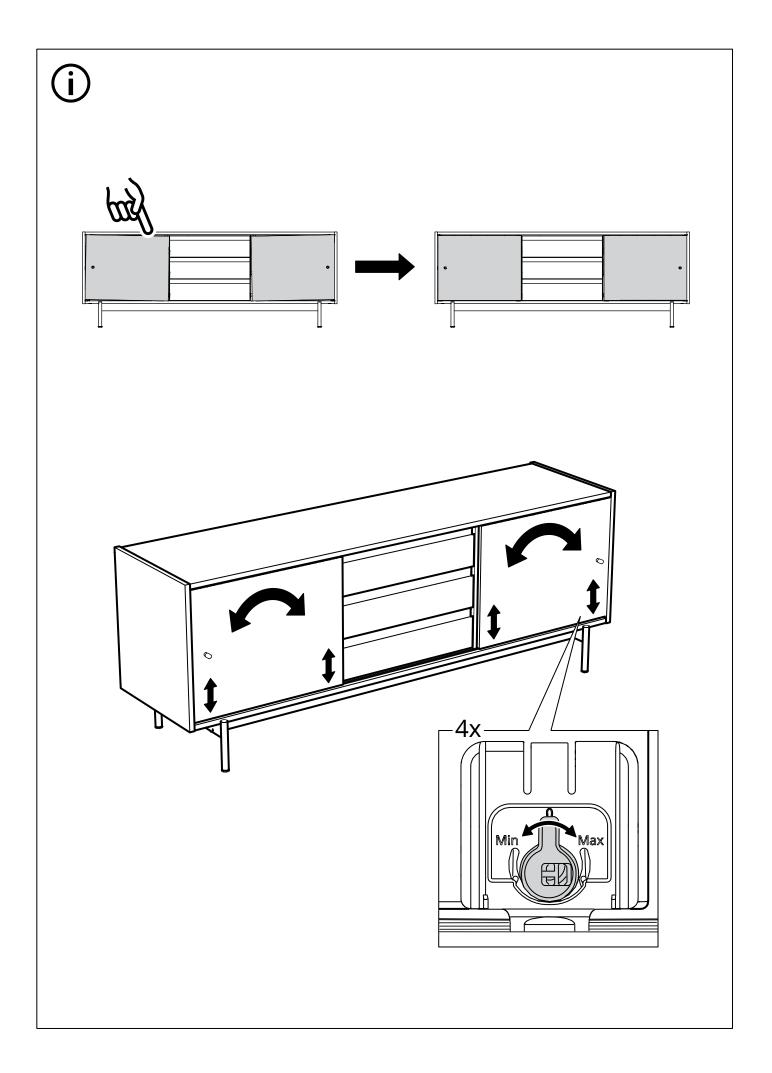

30 AA-2586497-1