 


RÅDMANSÖ

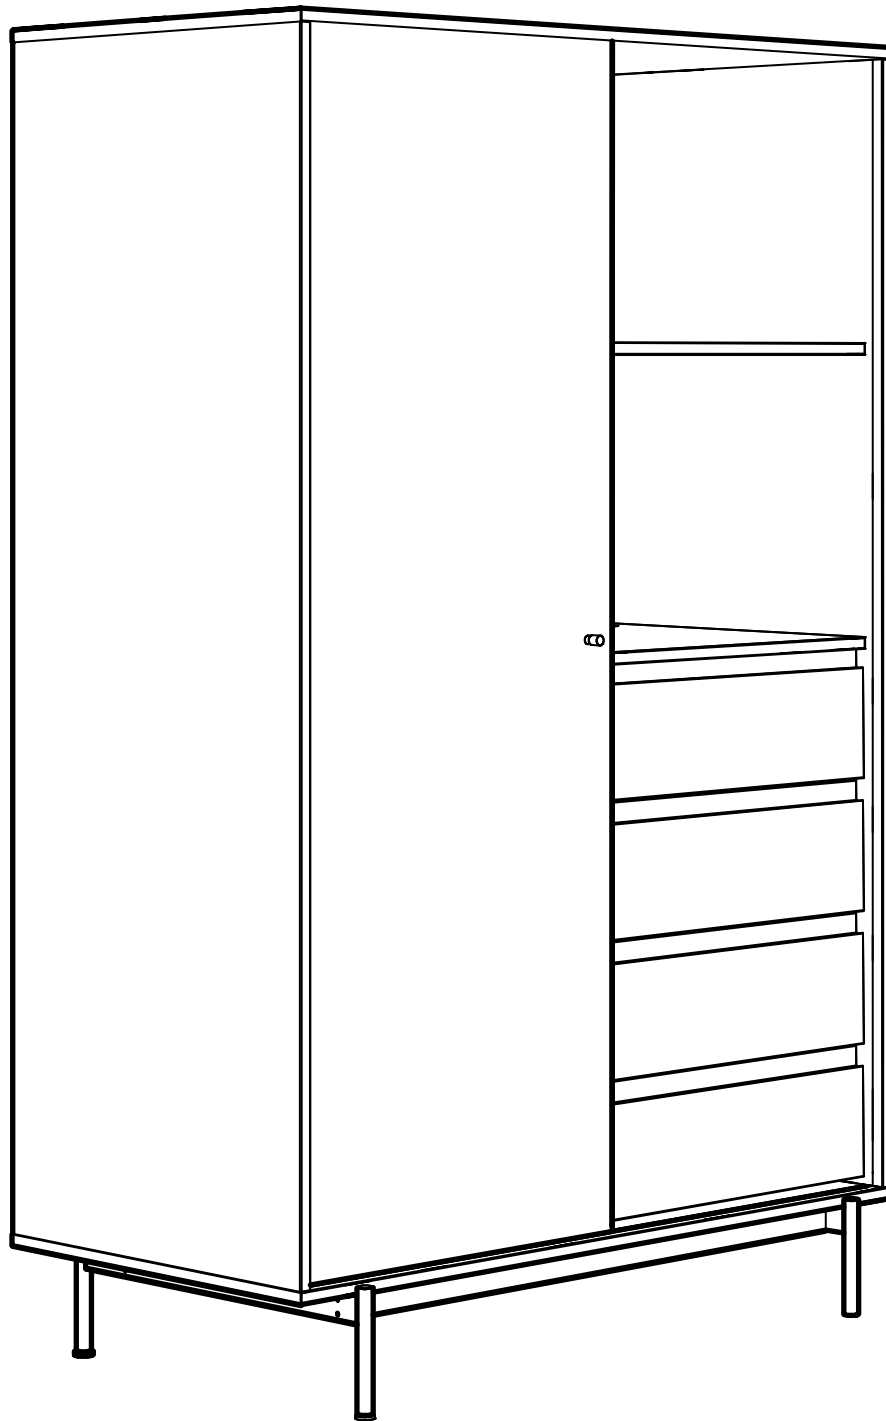

Design and Quality
IKEA of Sweden



English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

 
 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

 
 
 
 
 
NEVER open more than one drawer at a time.

Place heaviest items in the lowest drawers.

English


Read and follow each step of the instruction carefully.

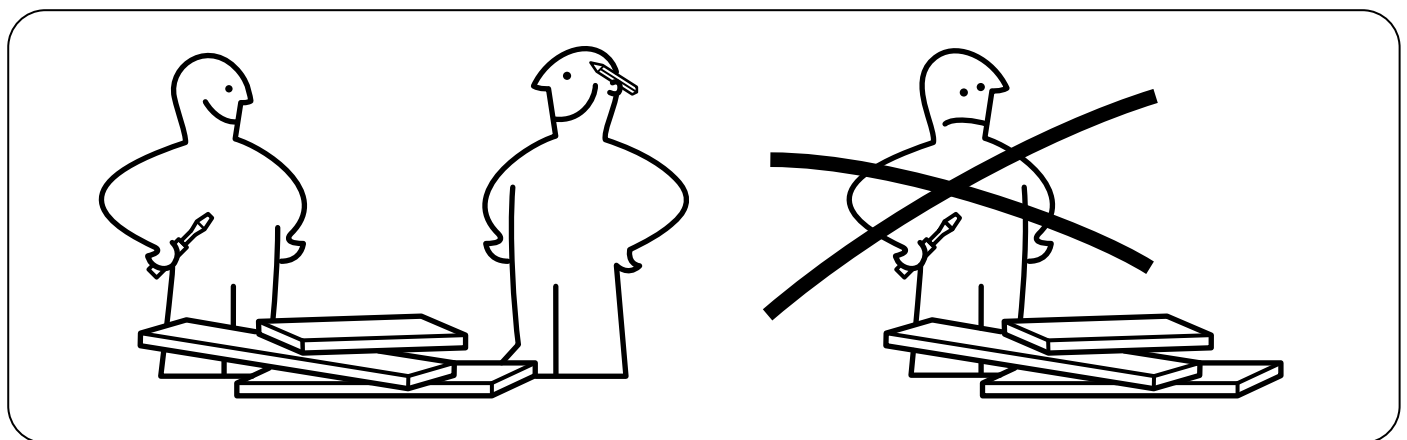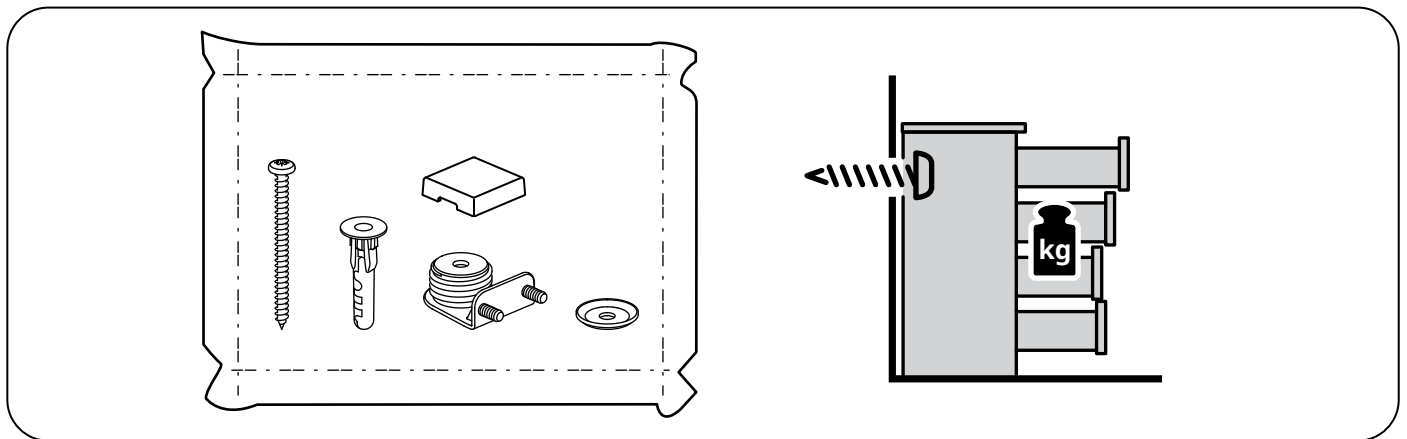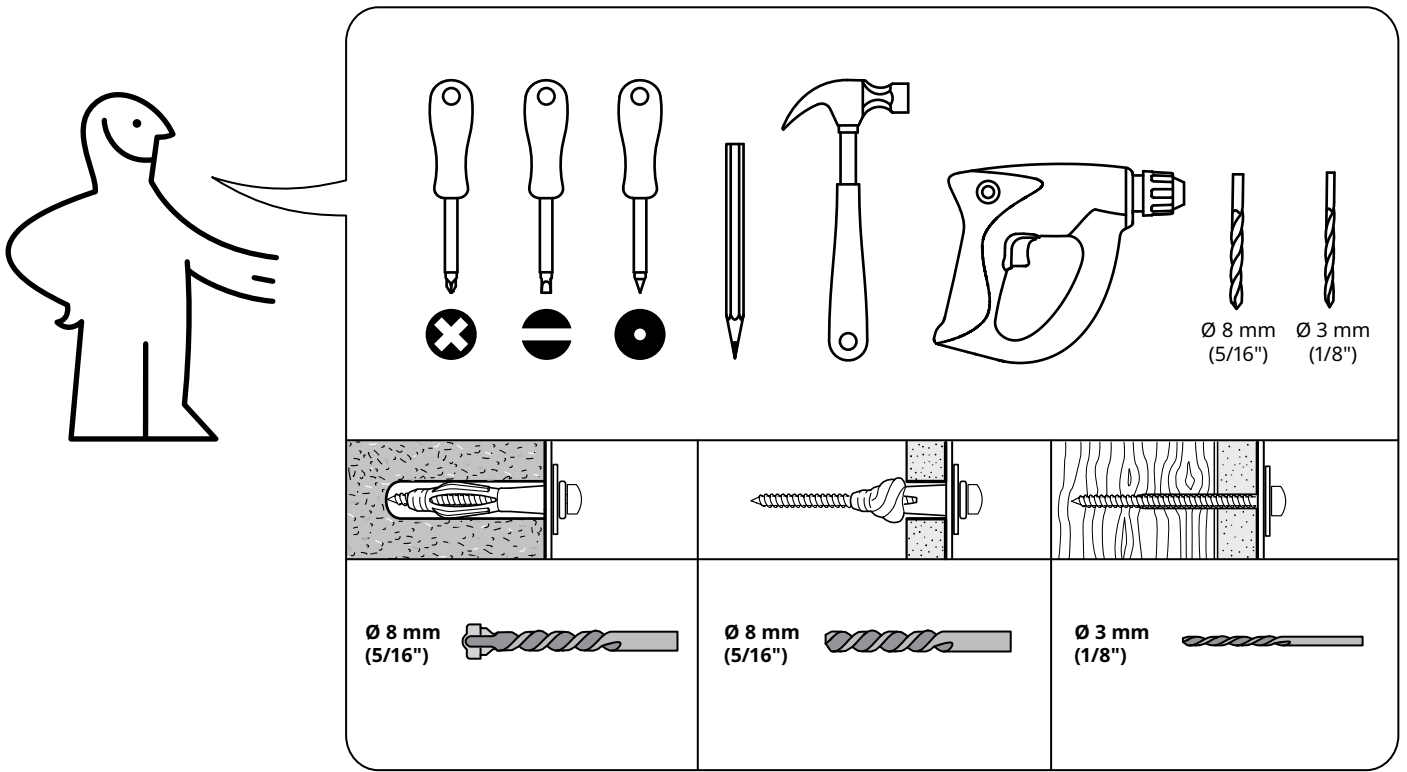

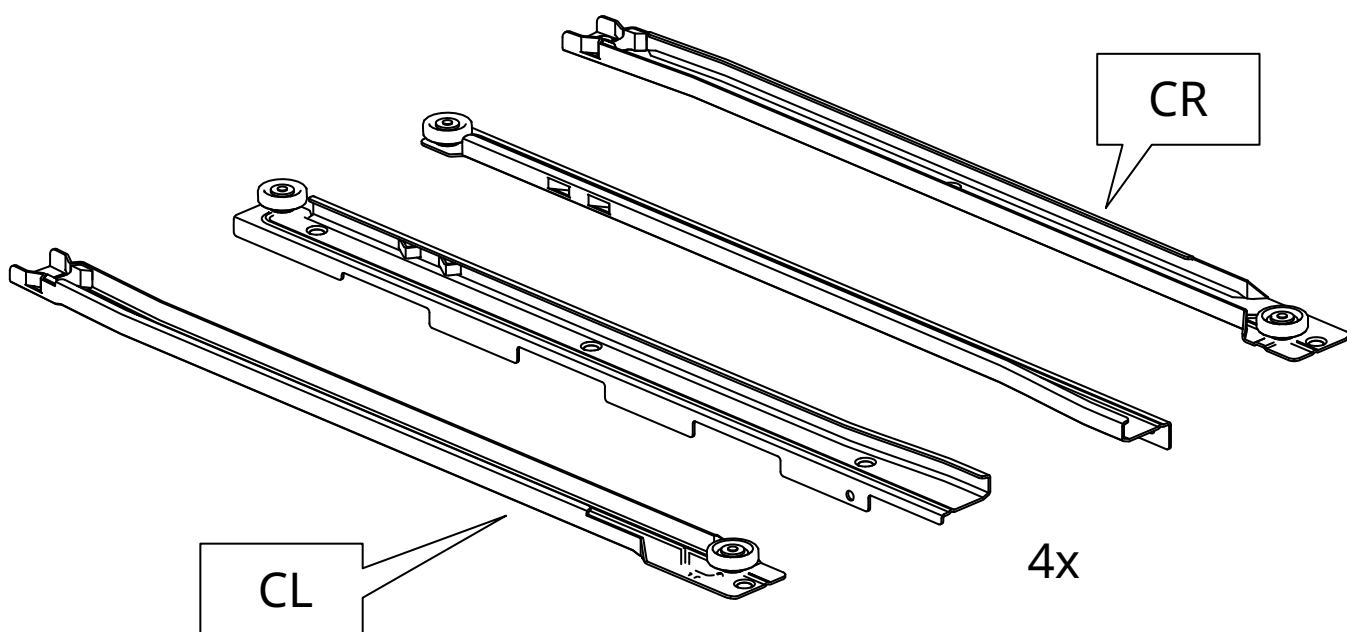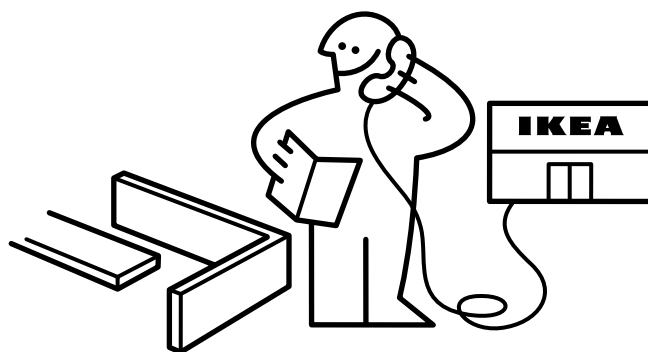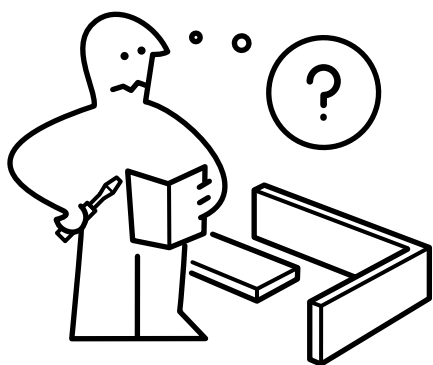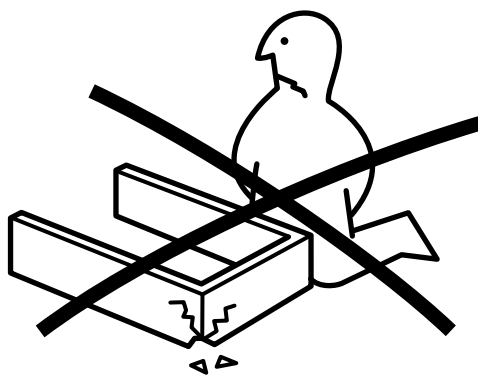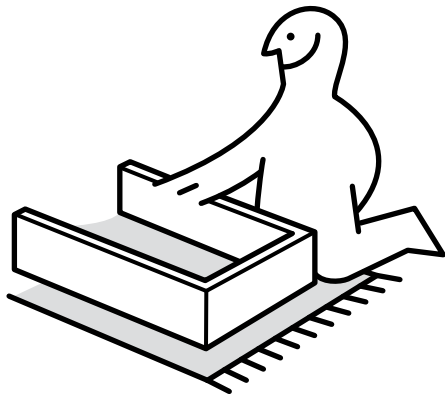


10115683

 
1

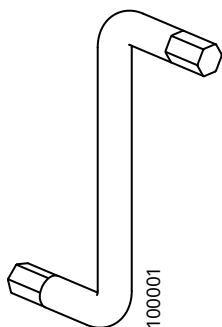


1x

 


12x

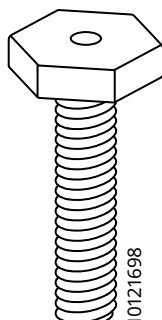 

4x

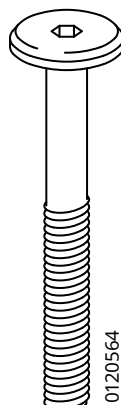 


4x

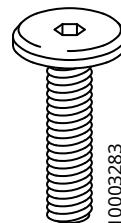 


4x



 
12x

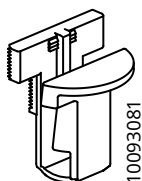

20x

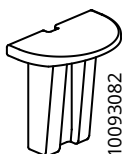 


20x

 


22x



 
26x

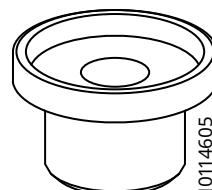


4x

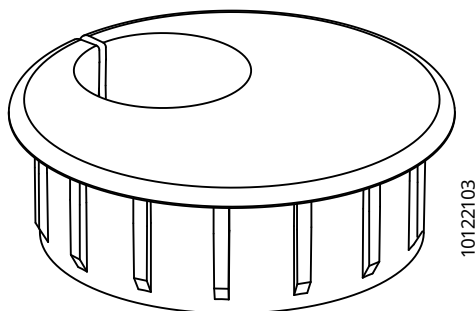 

1x

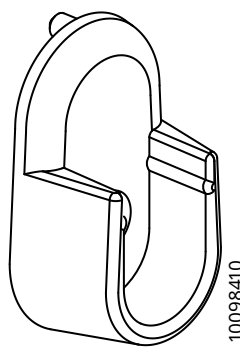 


2x

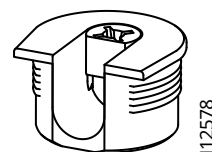 


22x

 2




159553

 16x



119976

 1x



10109447

1x



117434

16x



 
108528

4x




10047245

24x

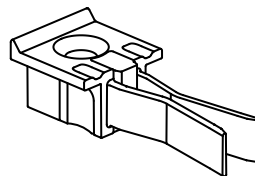


10094662

 4x

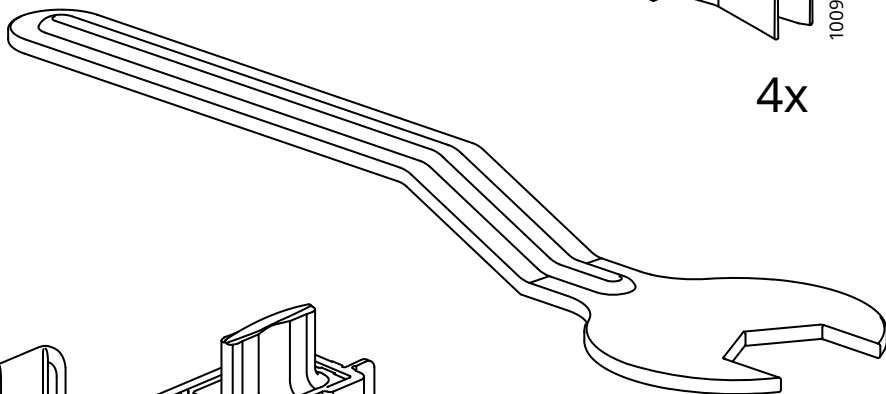


190459

 1x

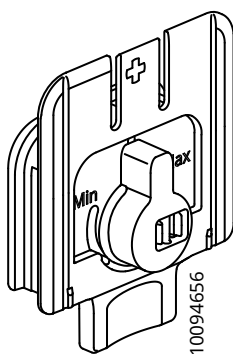


10094656

 2x

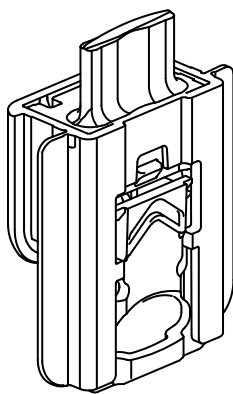



10094681

 
2x

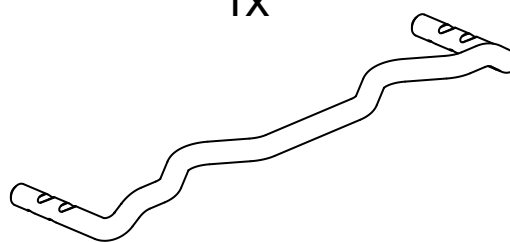


10040242

   6x

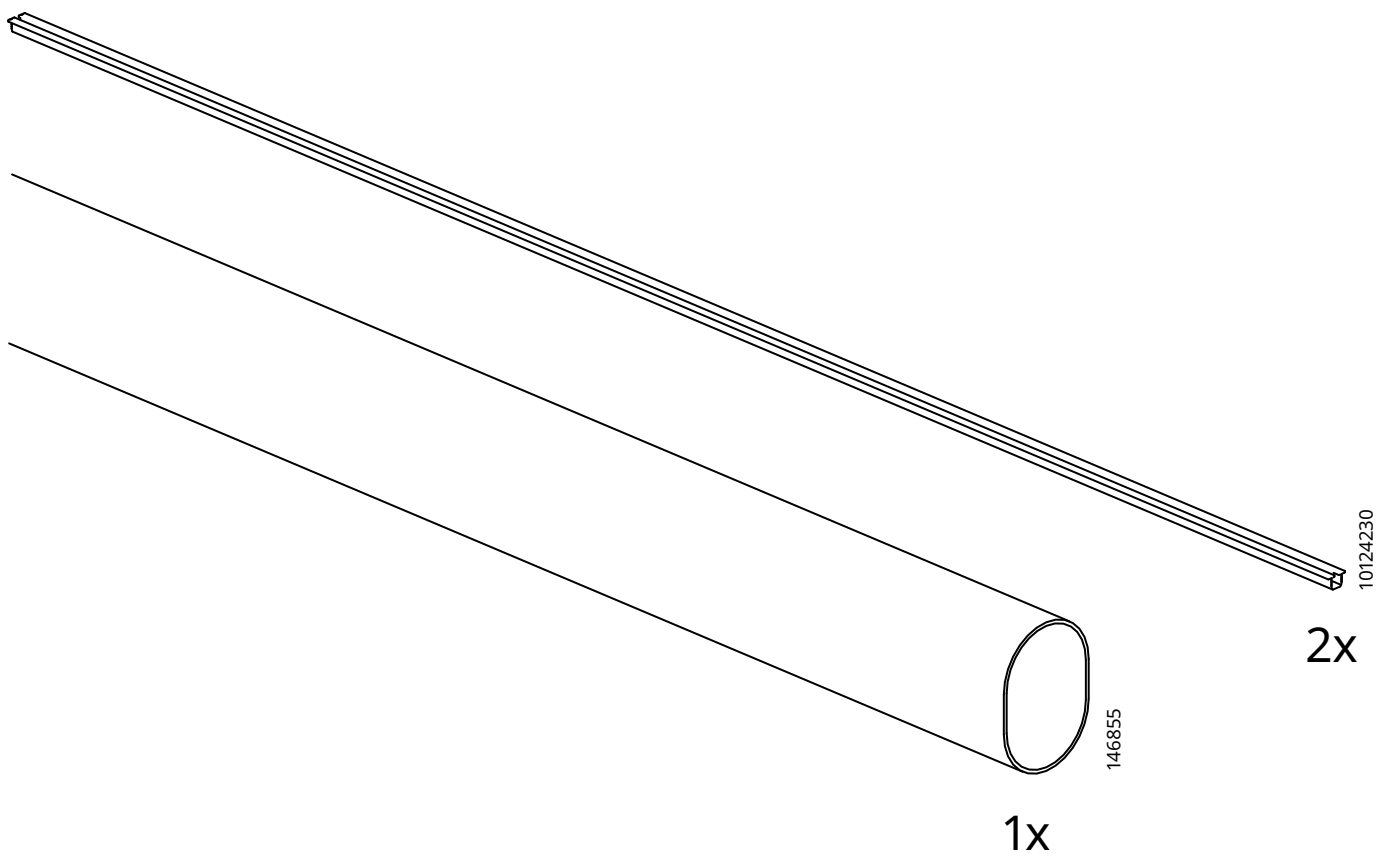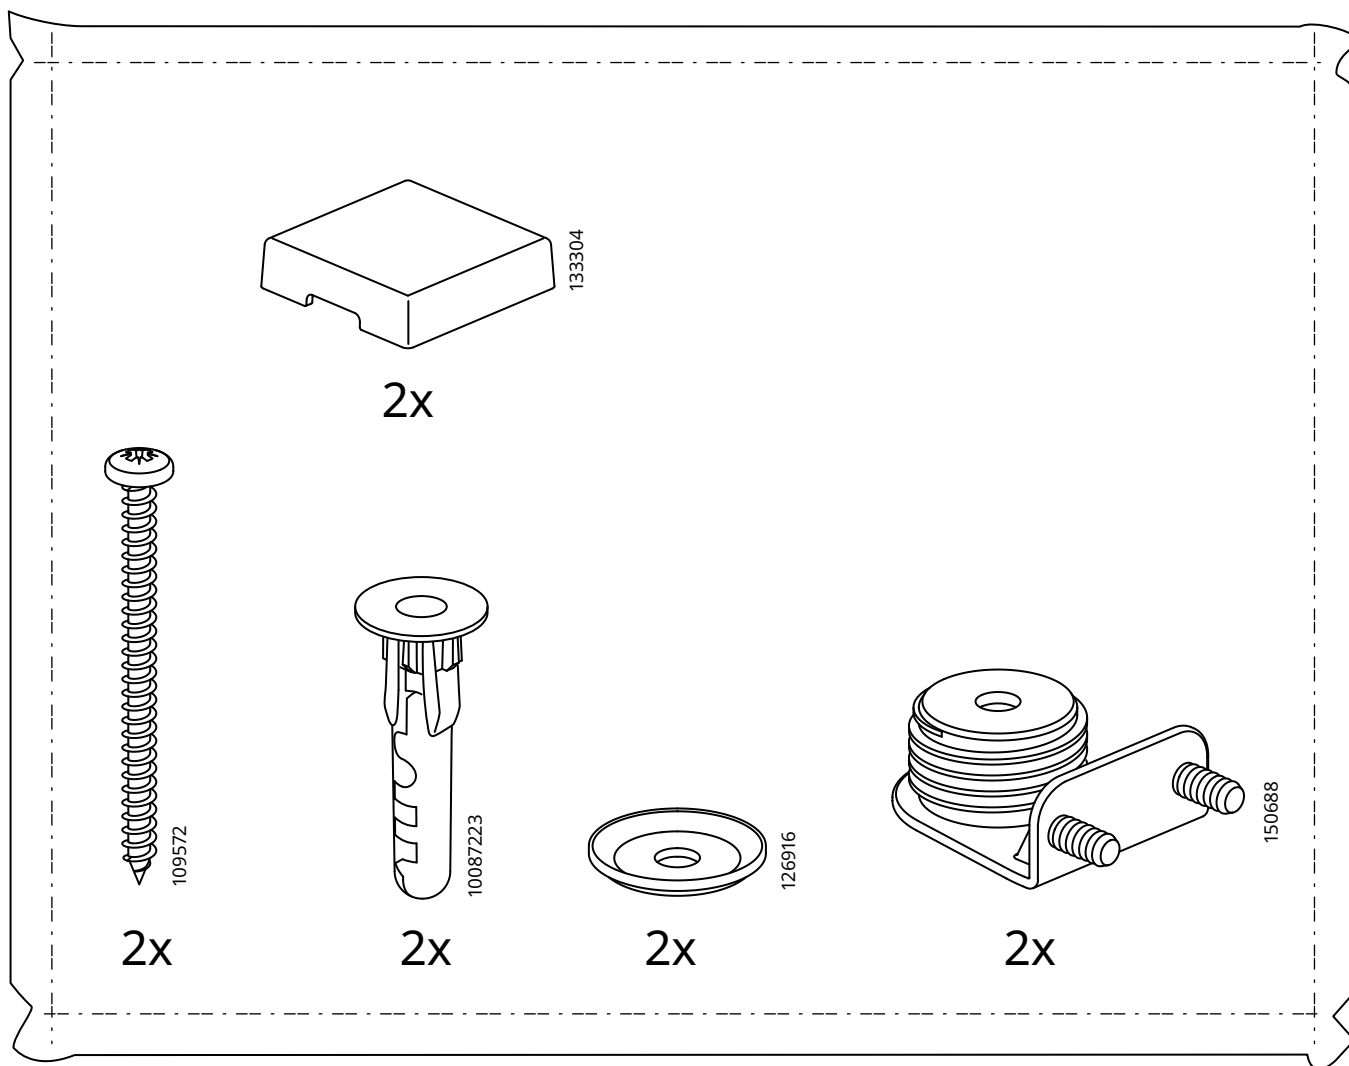


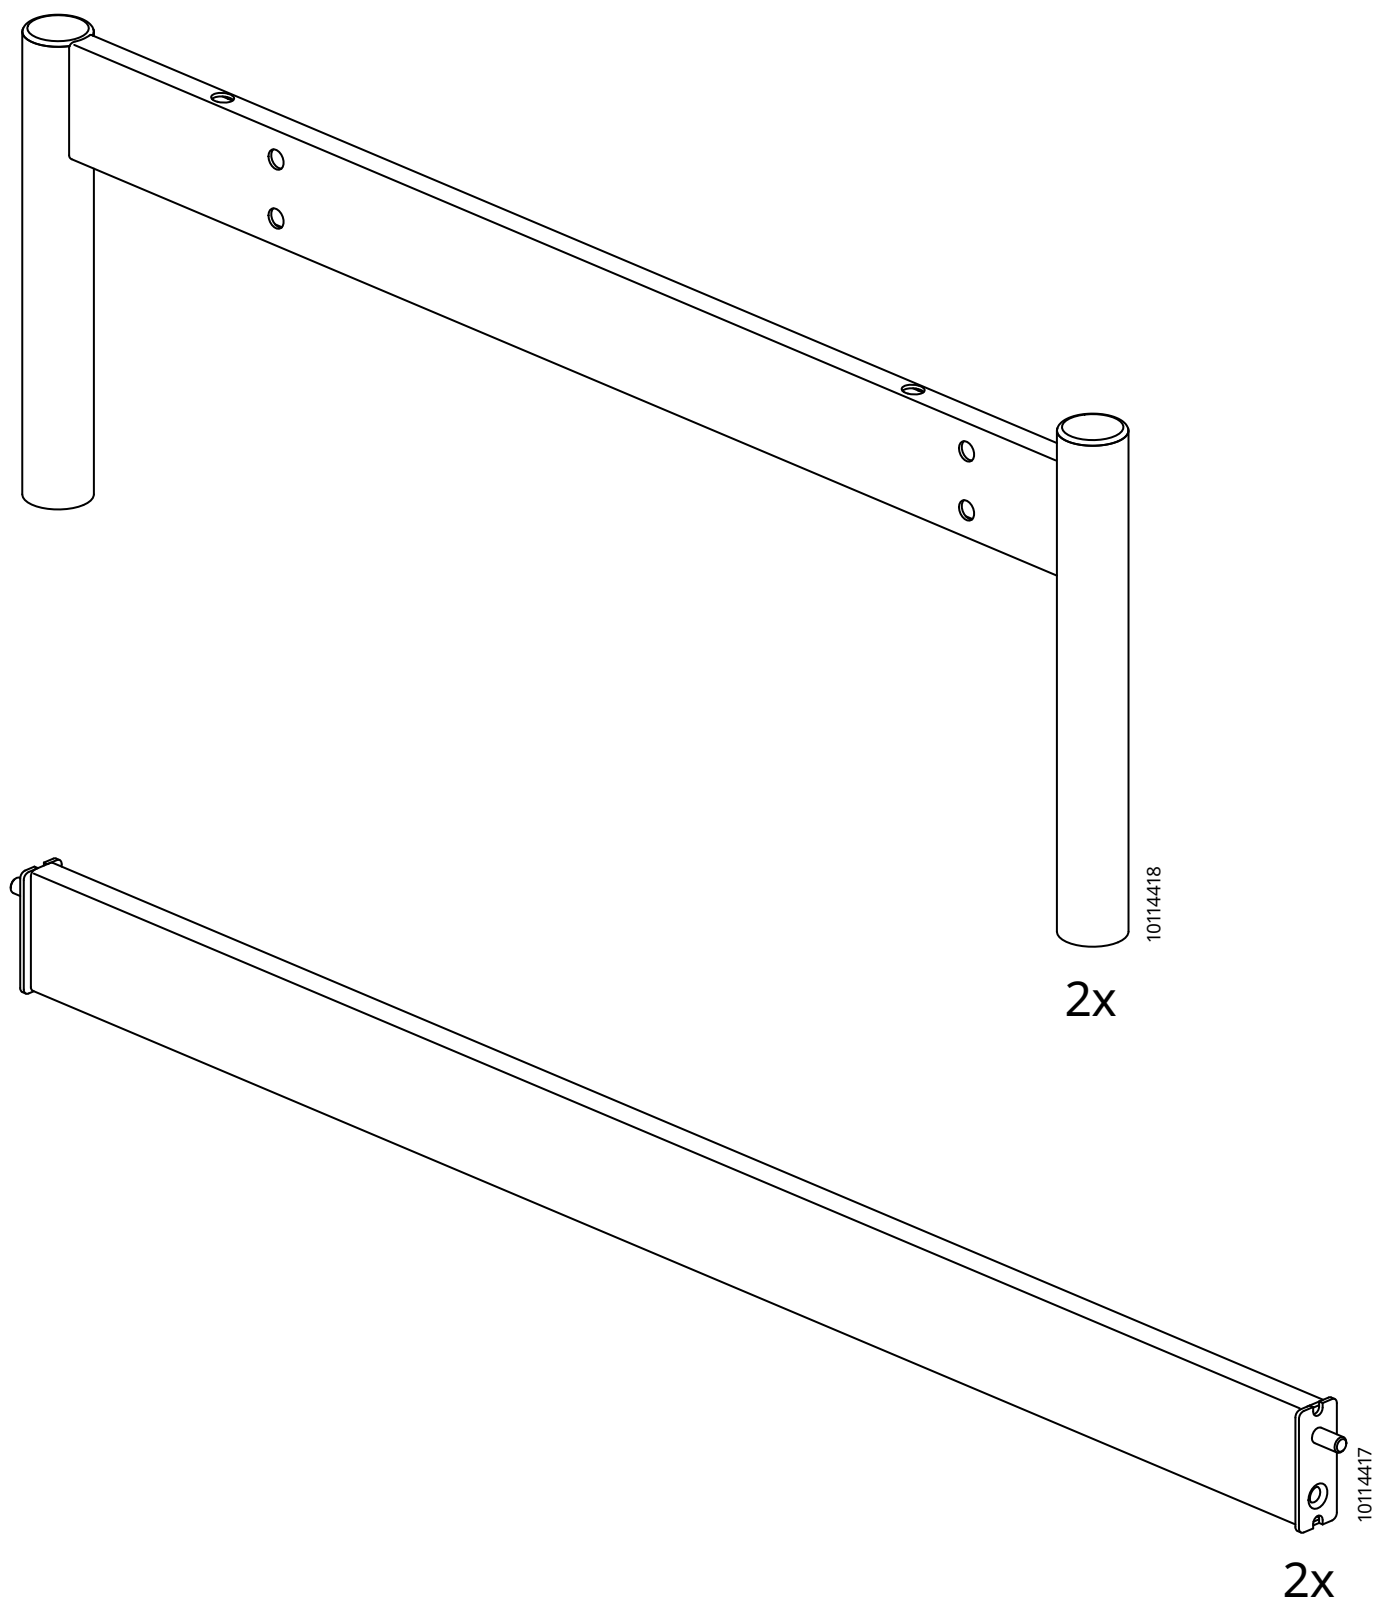


1

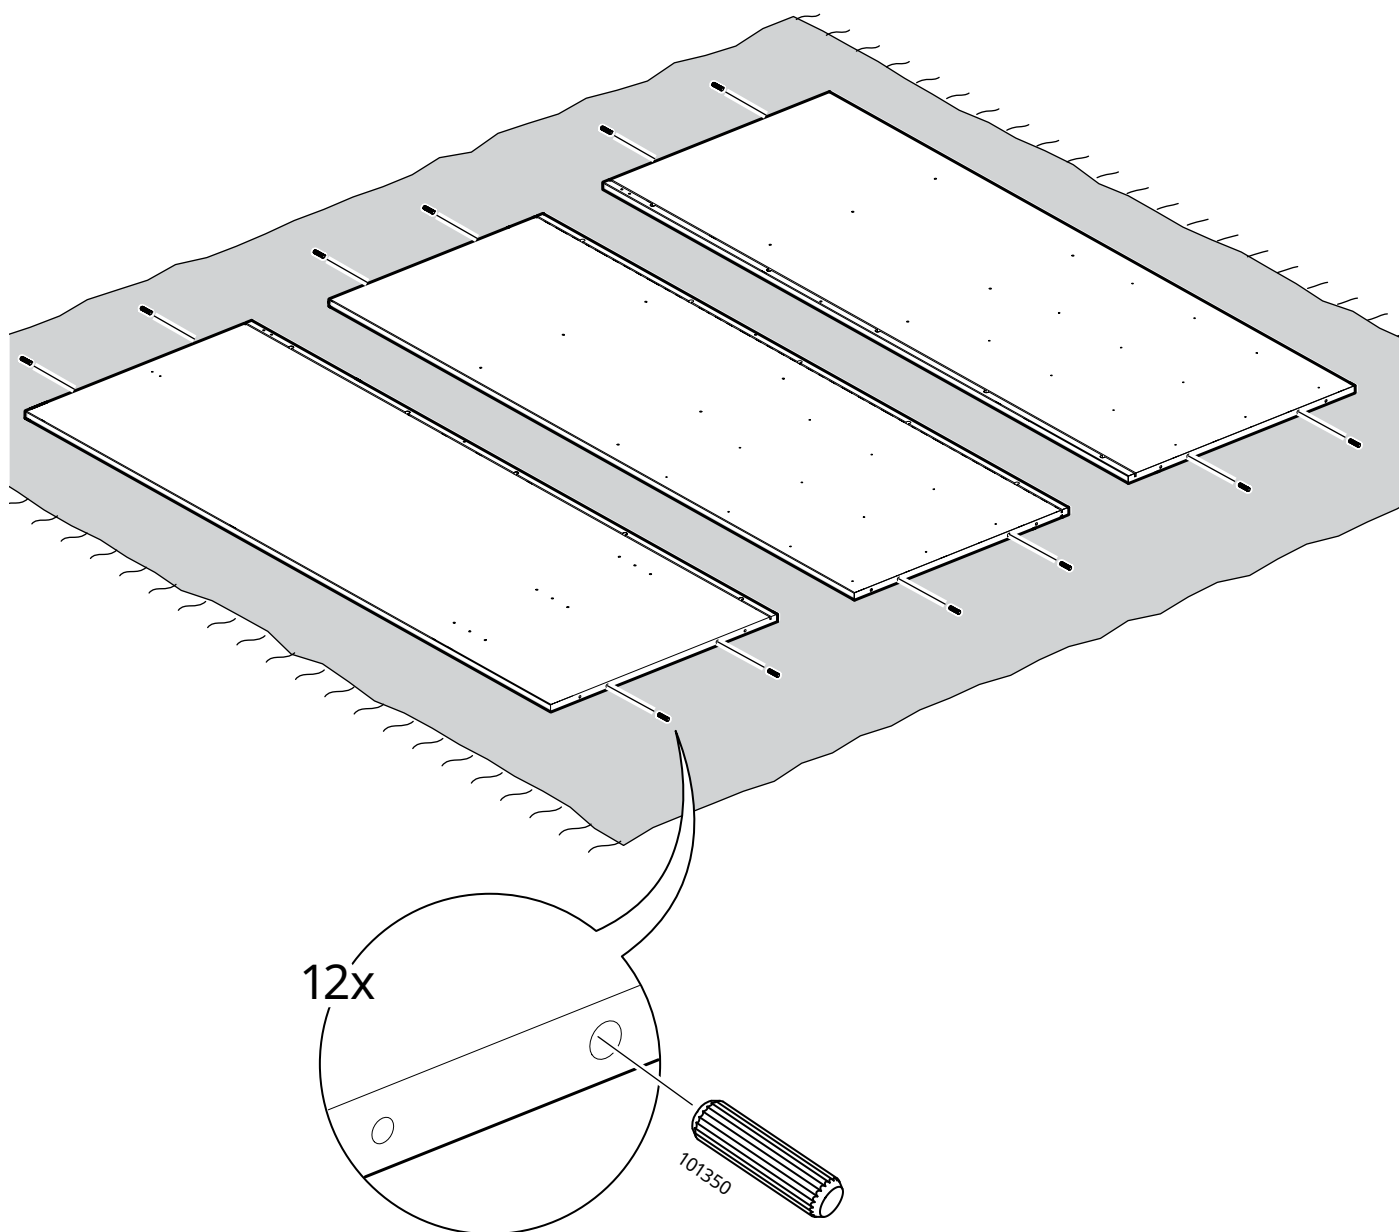 


2

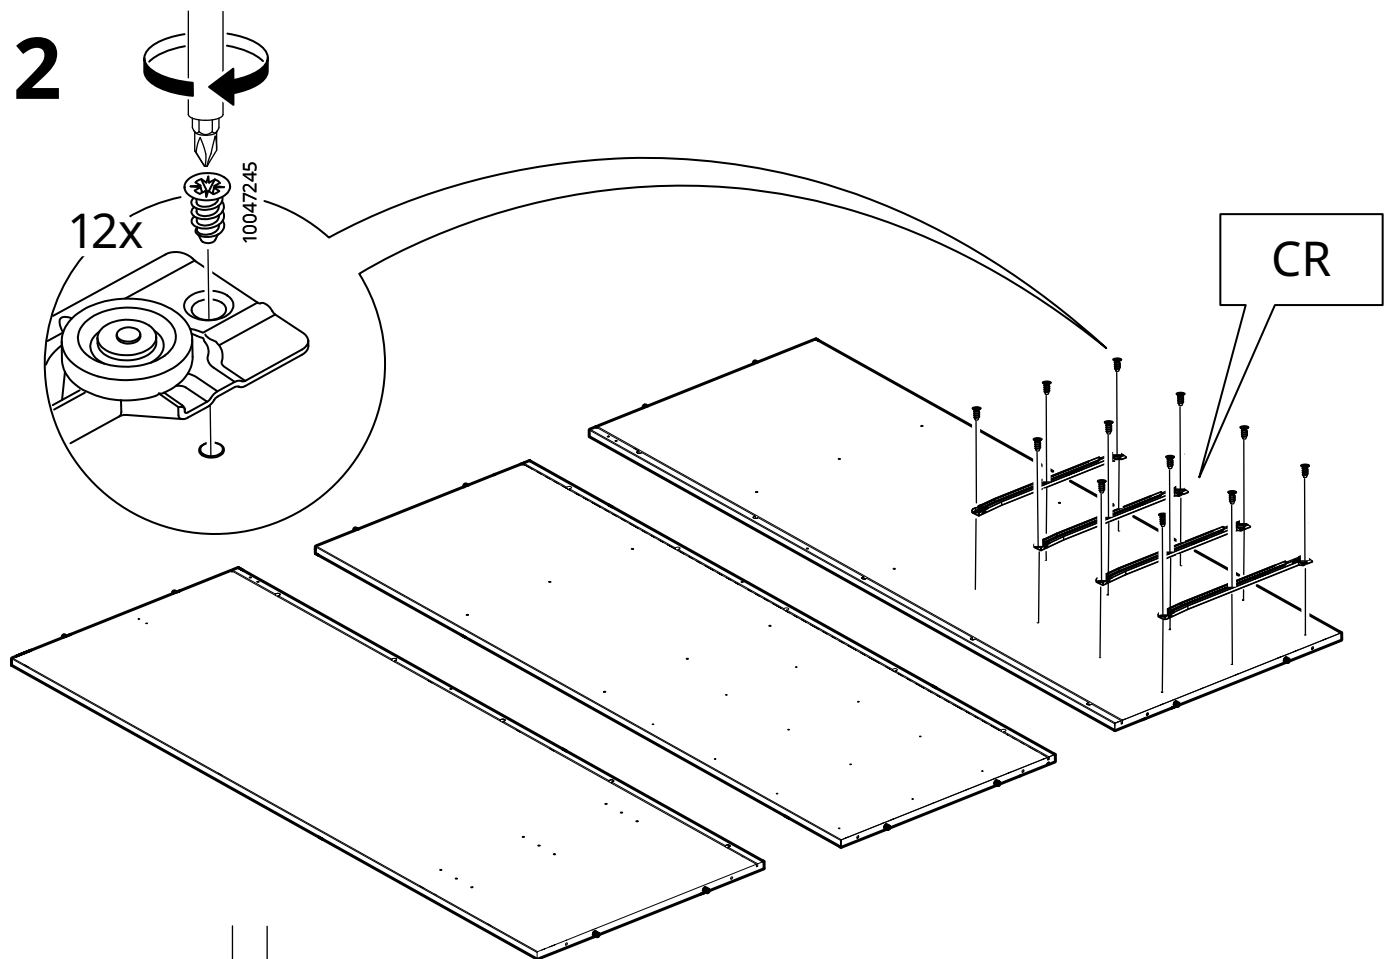 


3

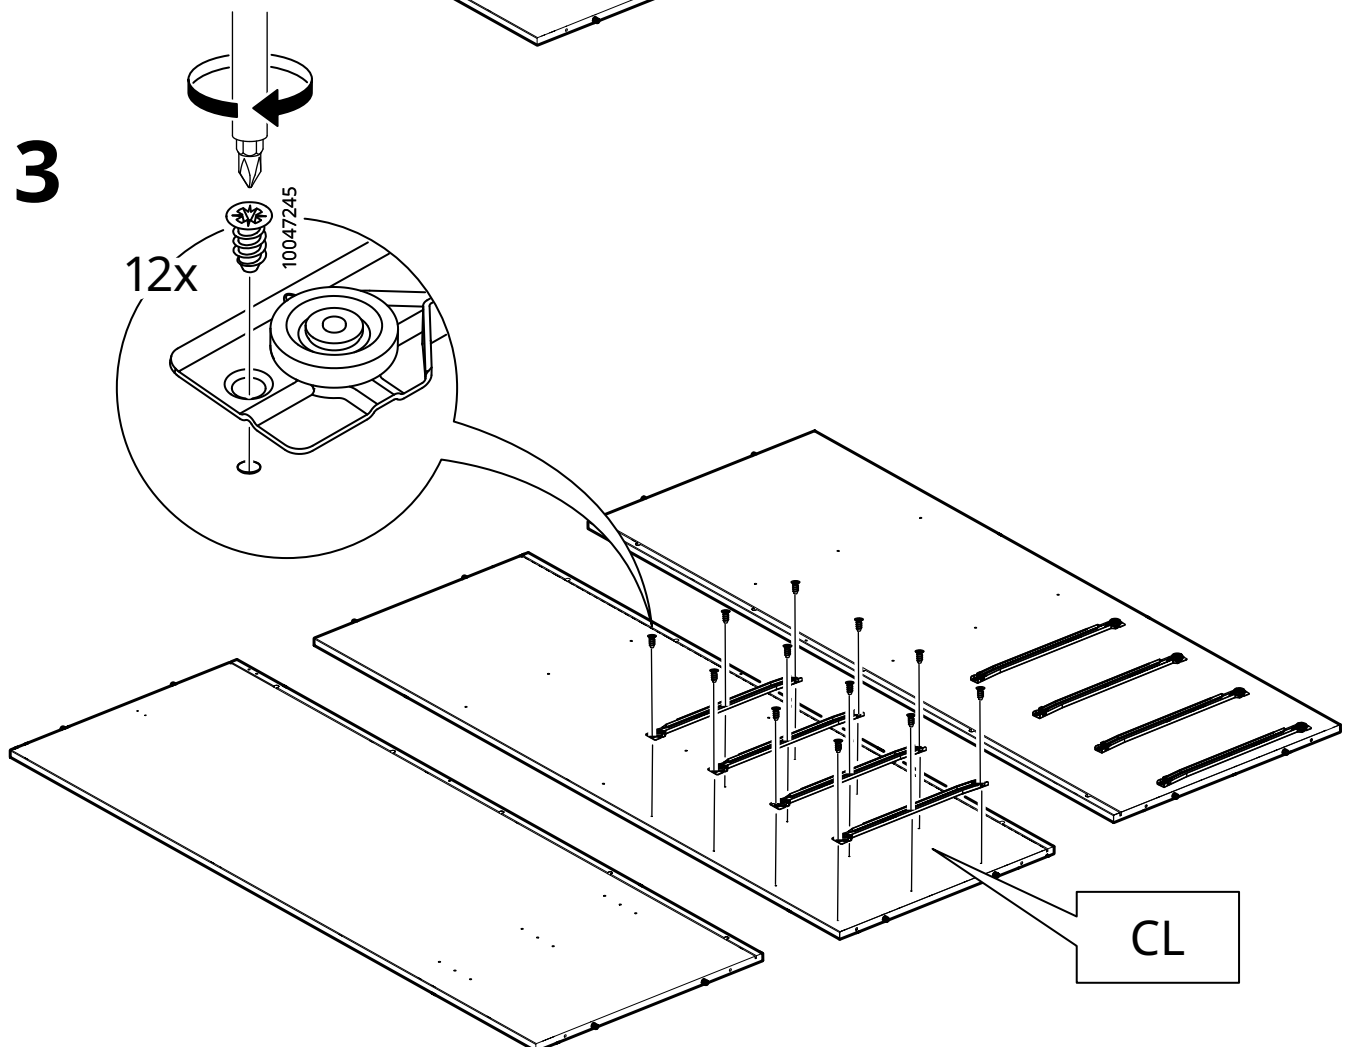 

4

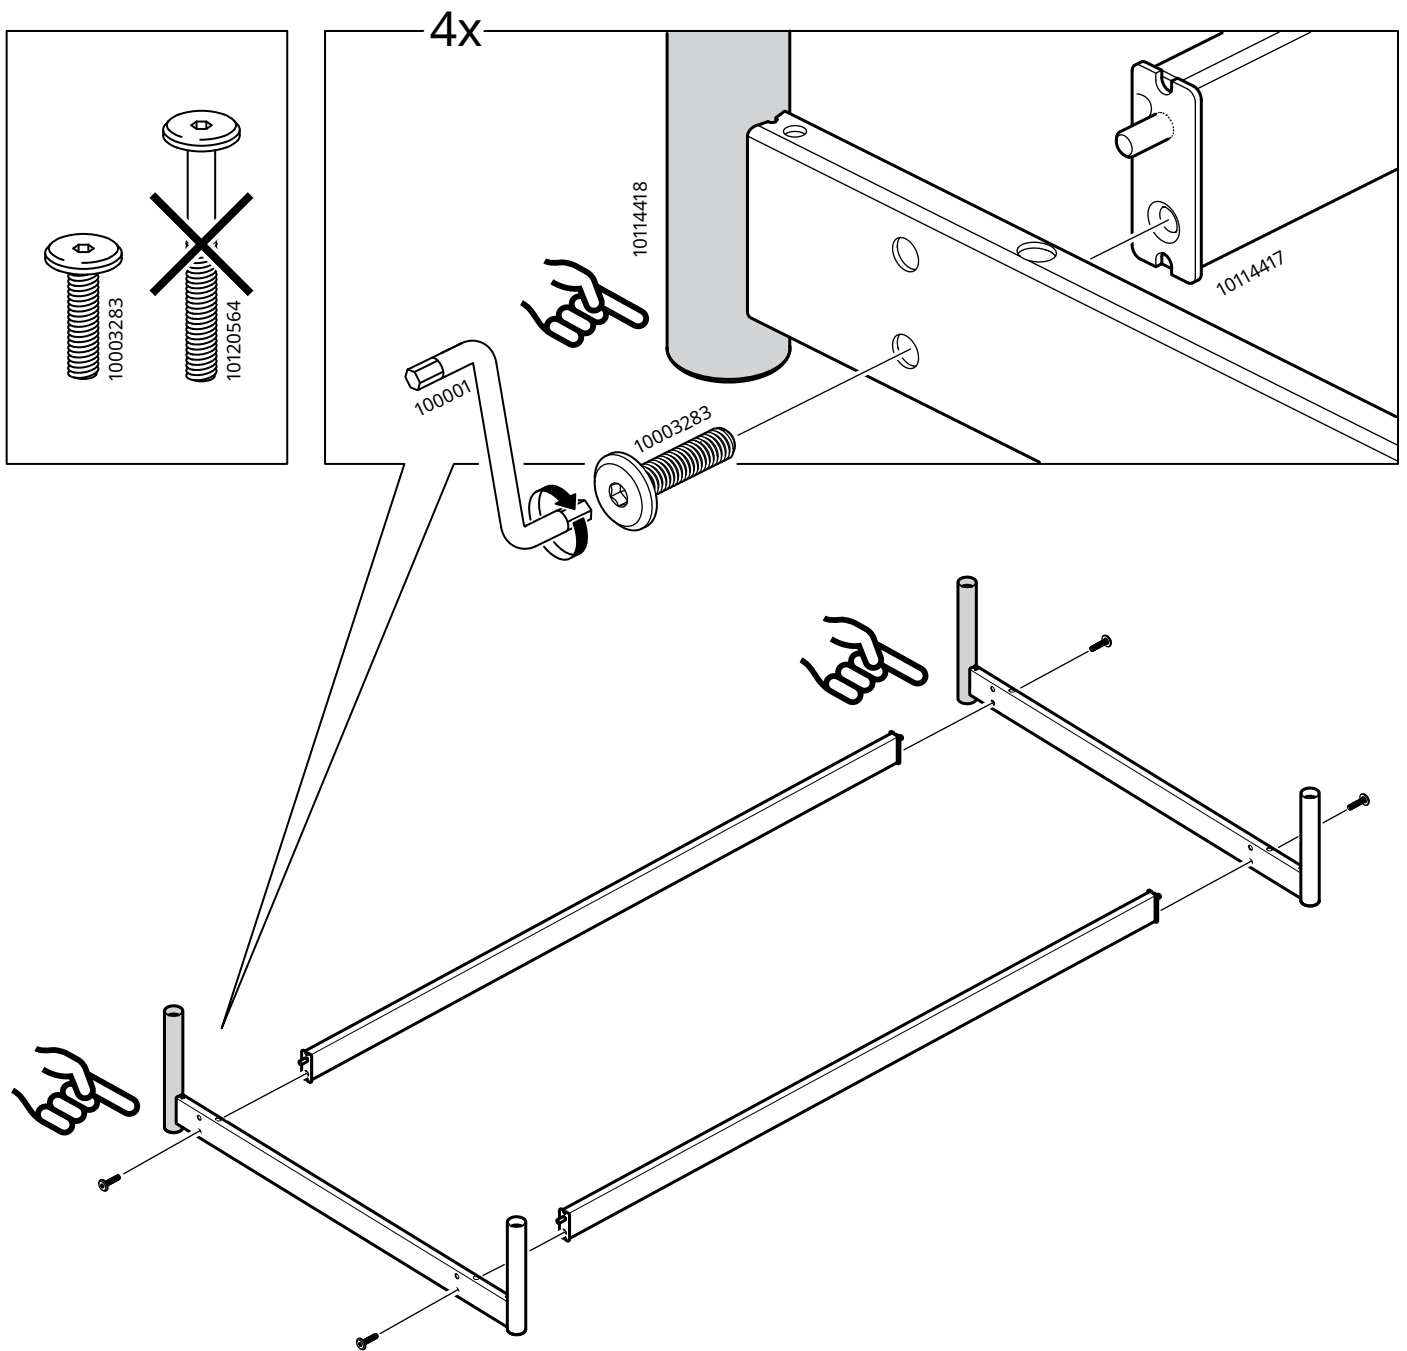 


5

 



4x



 
10120564

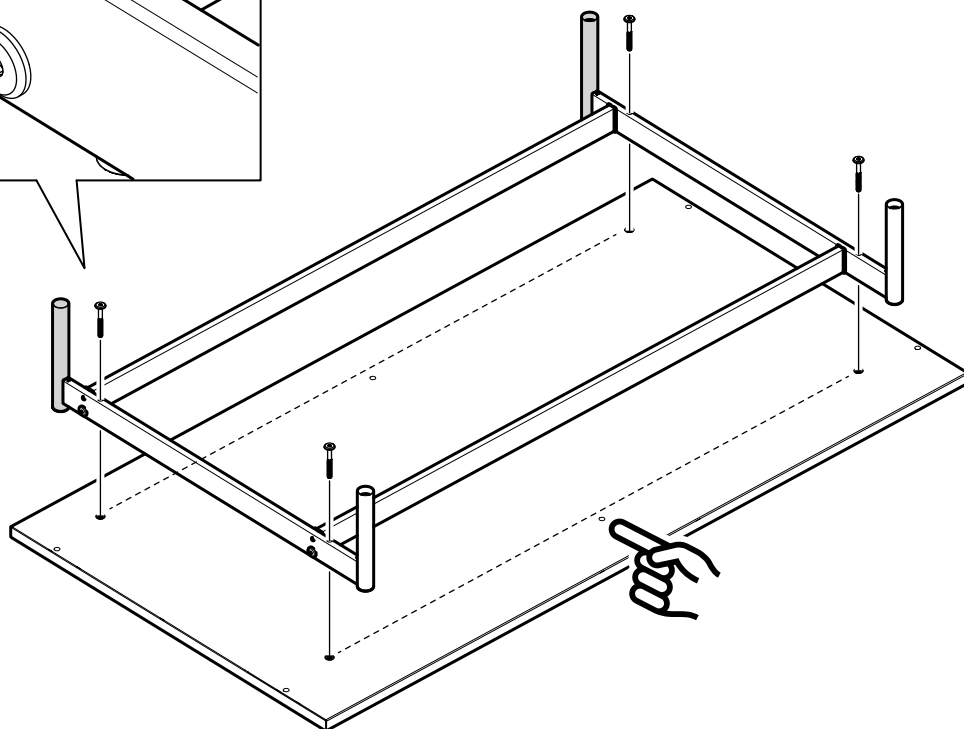


6

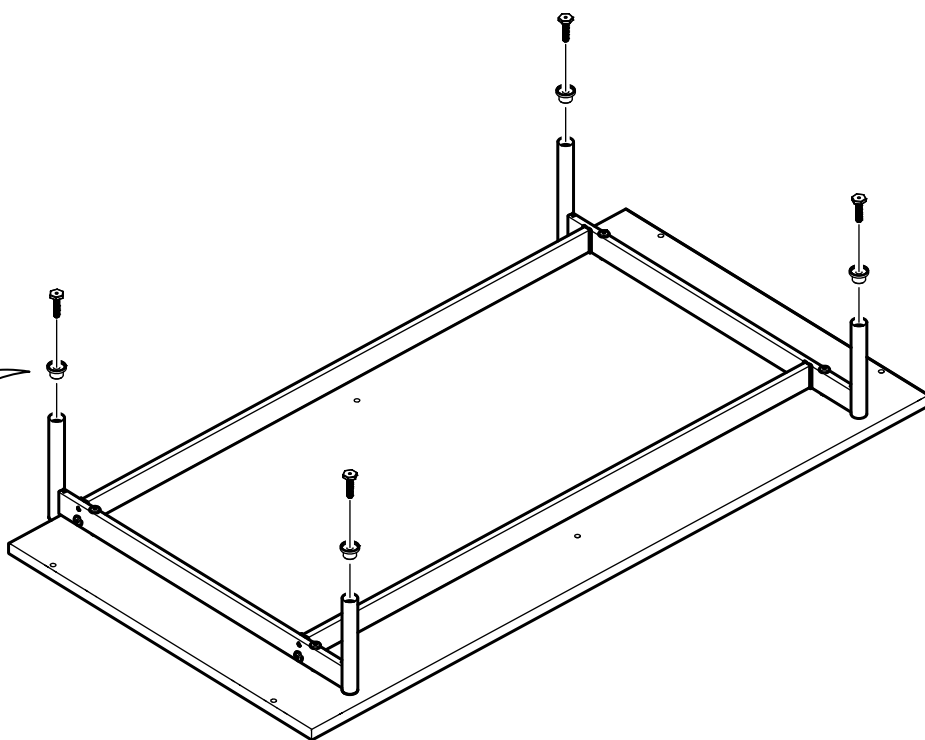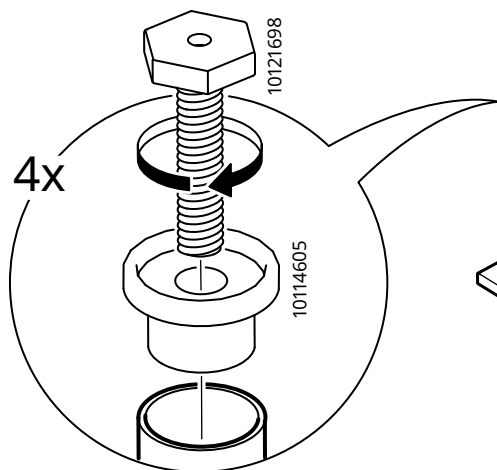  


7

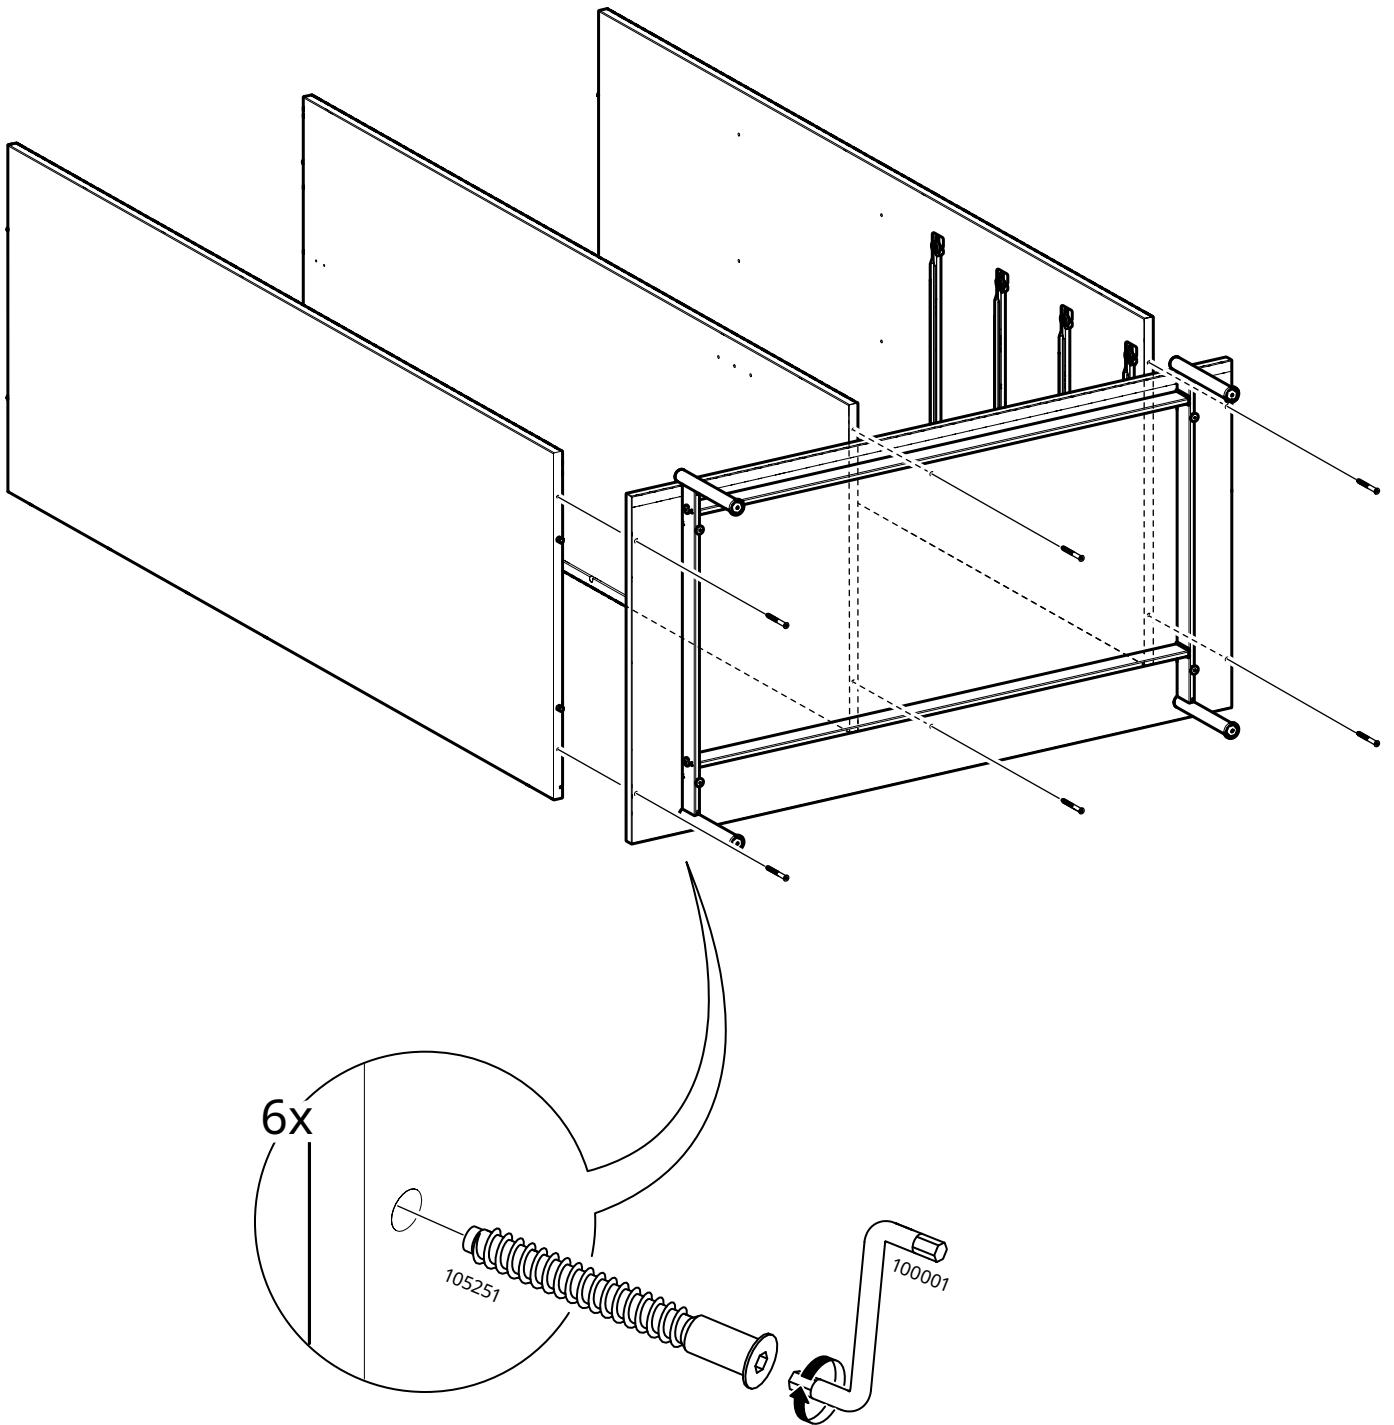 


8

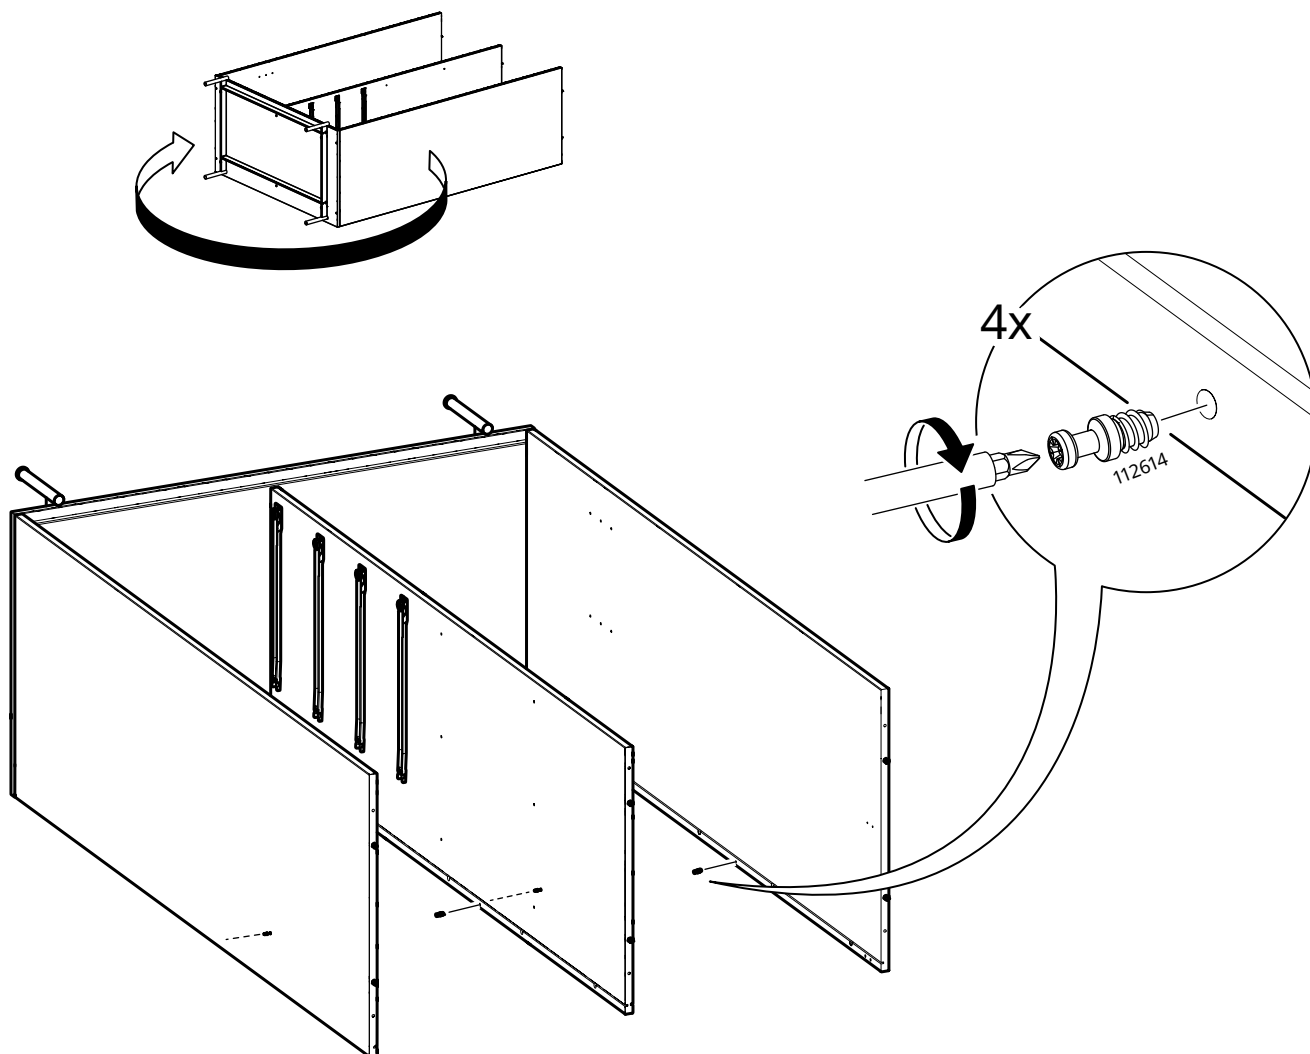 


9

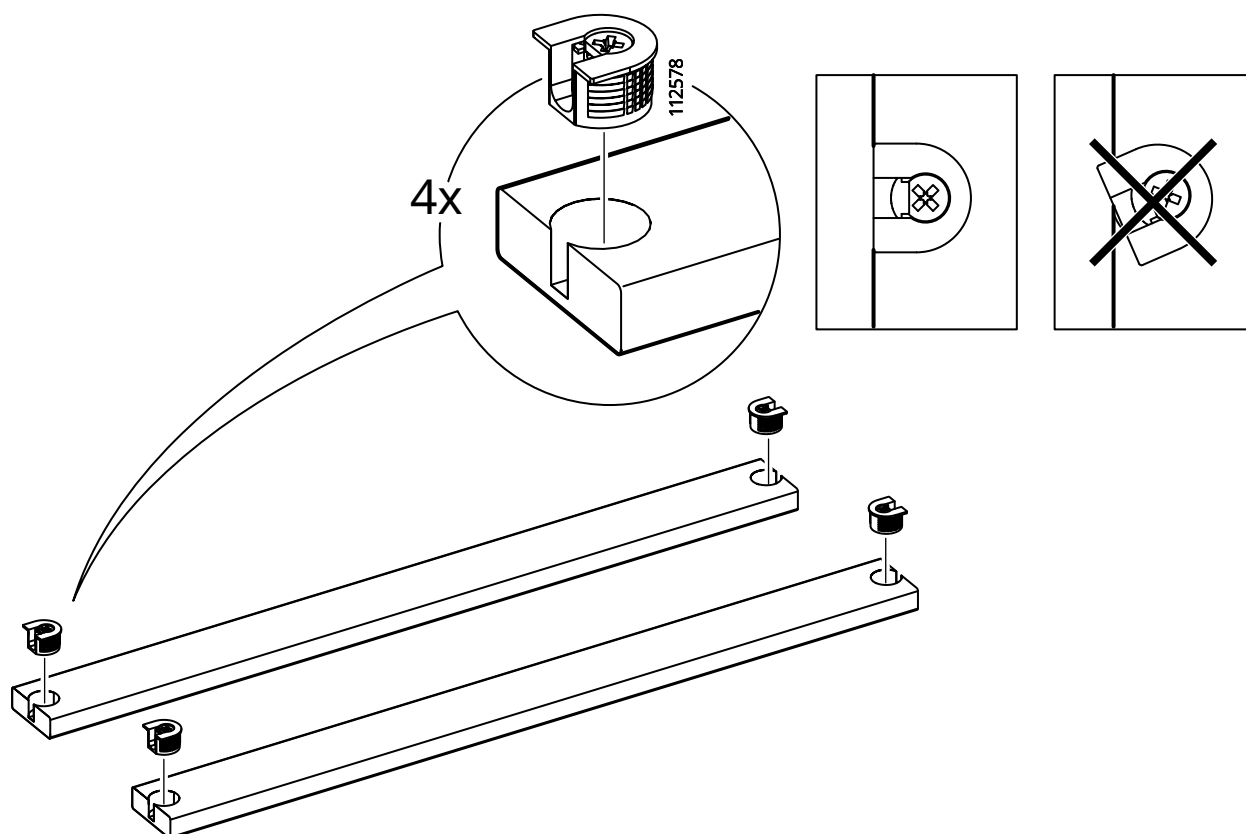 


10

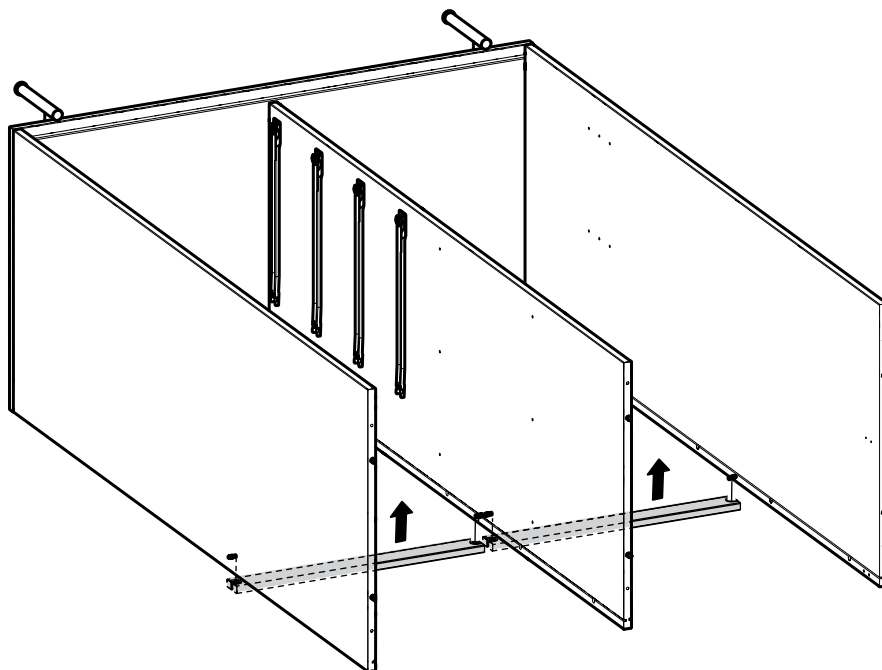 


11

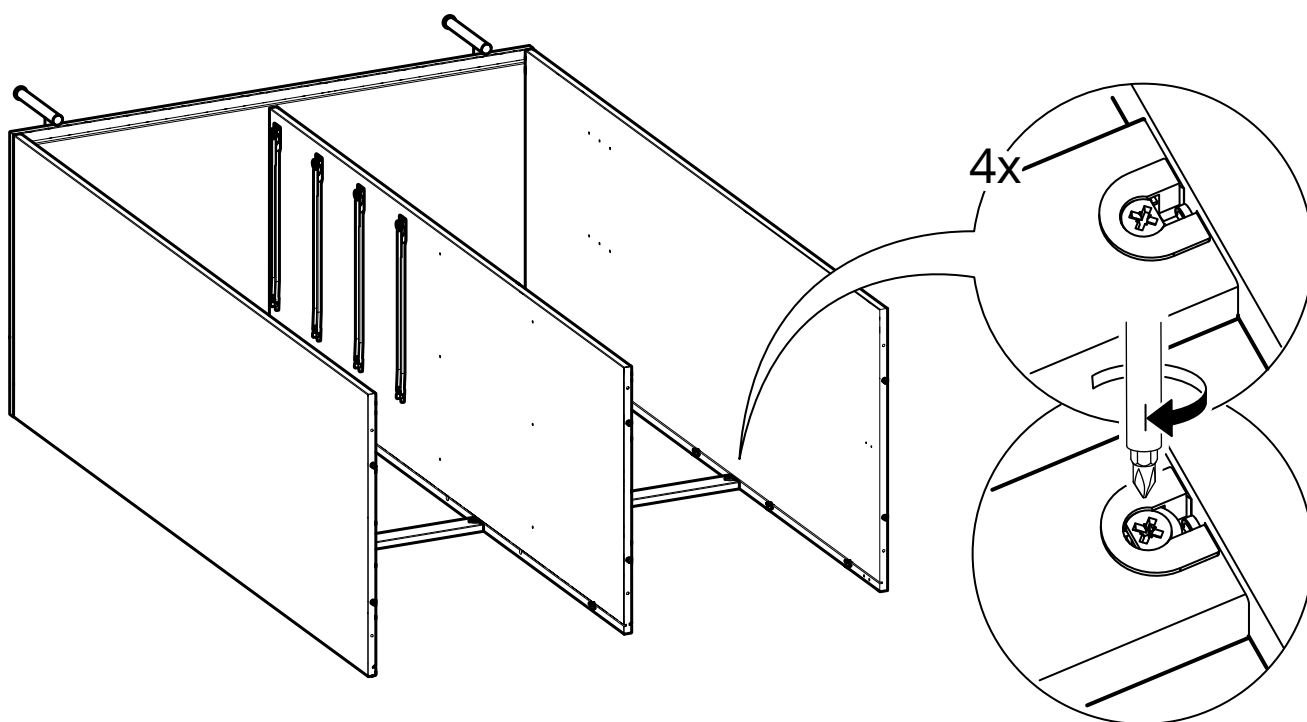 



12

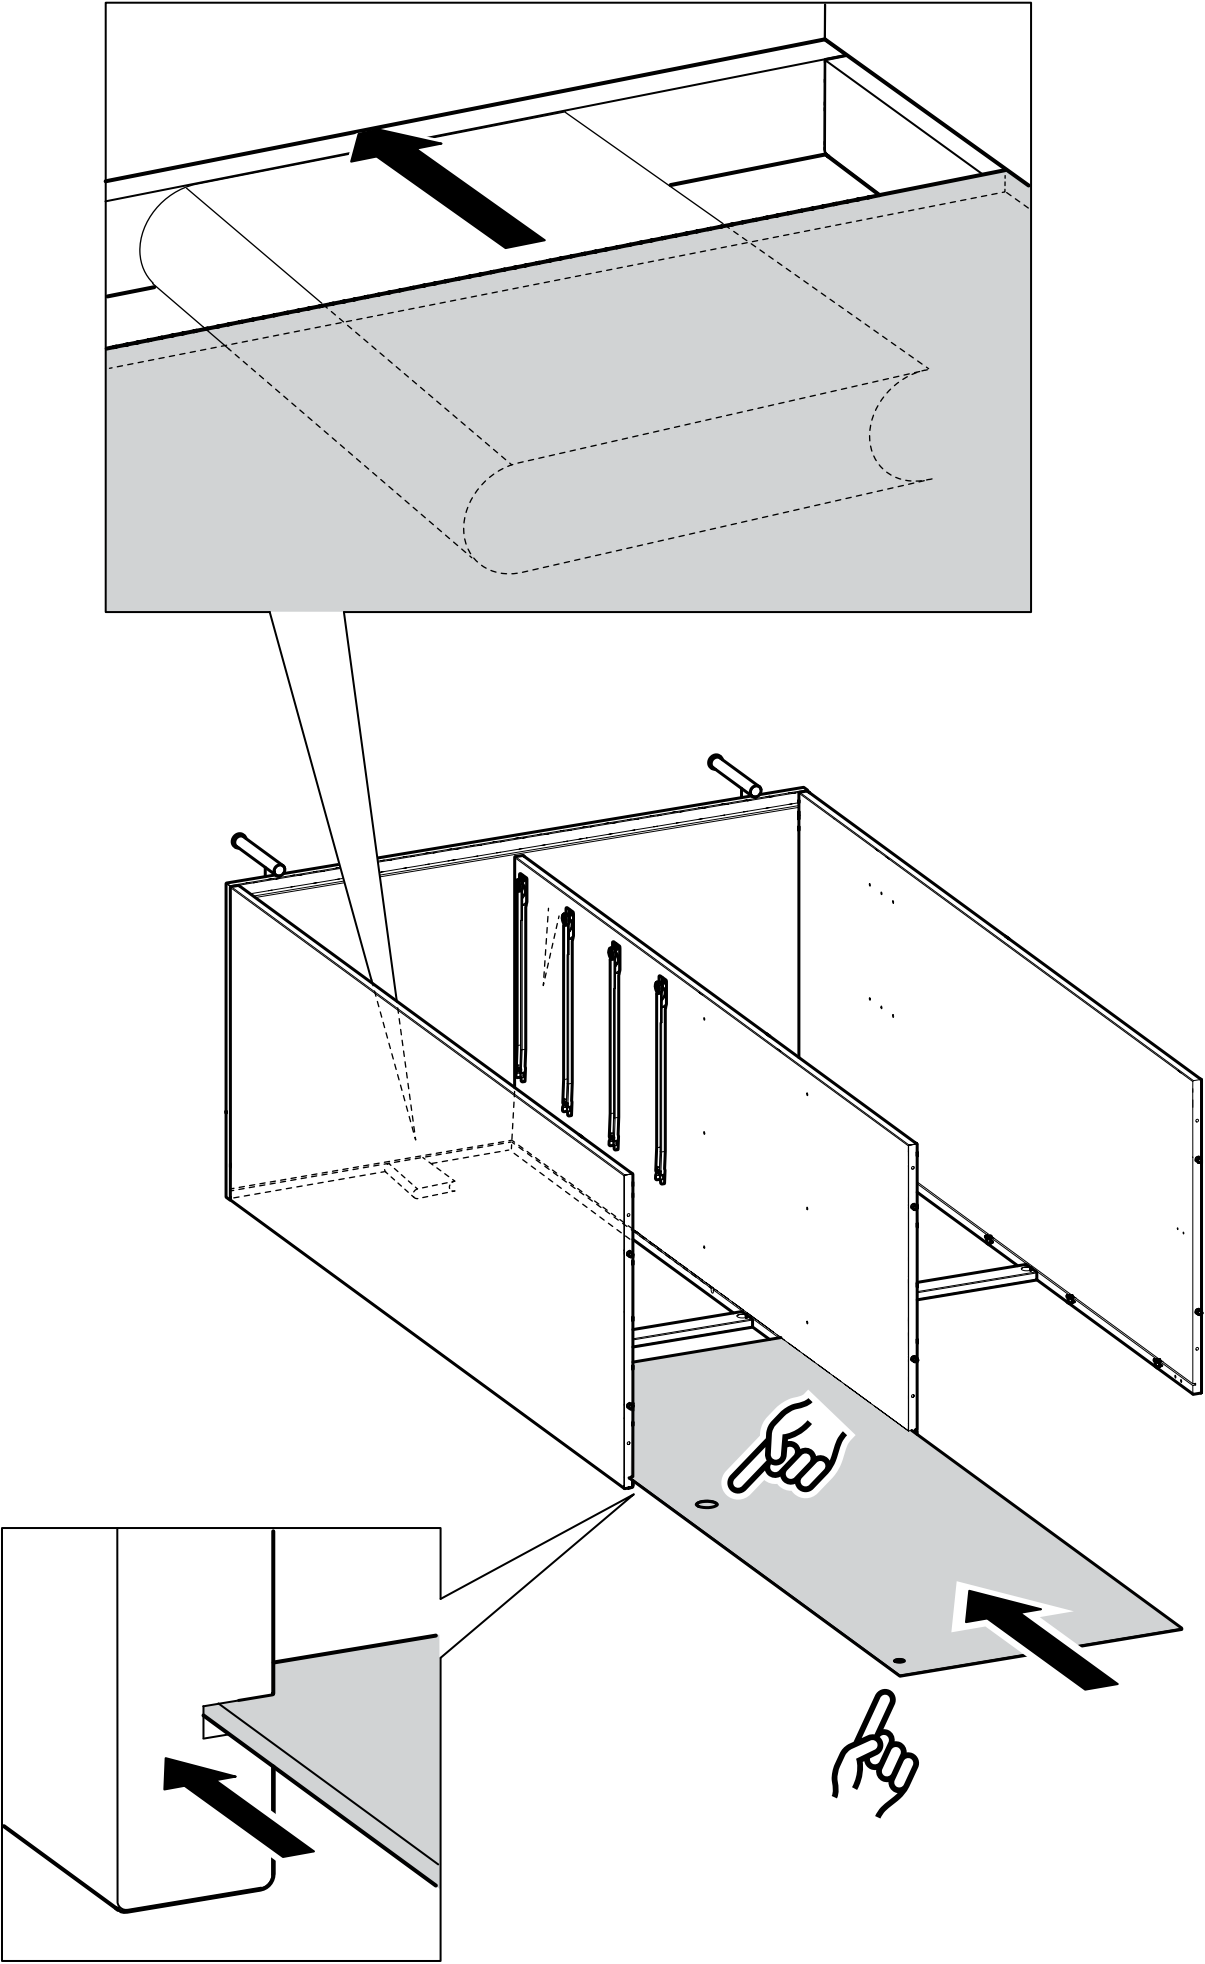 


13

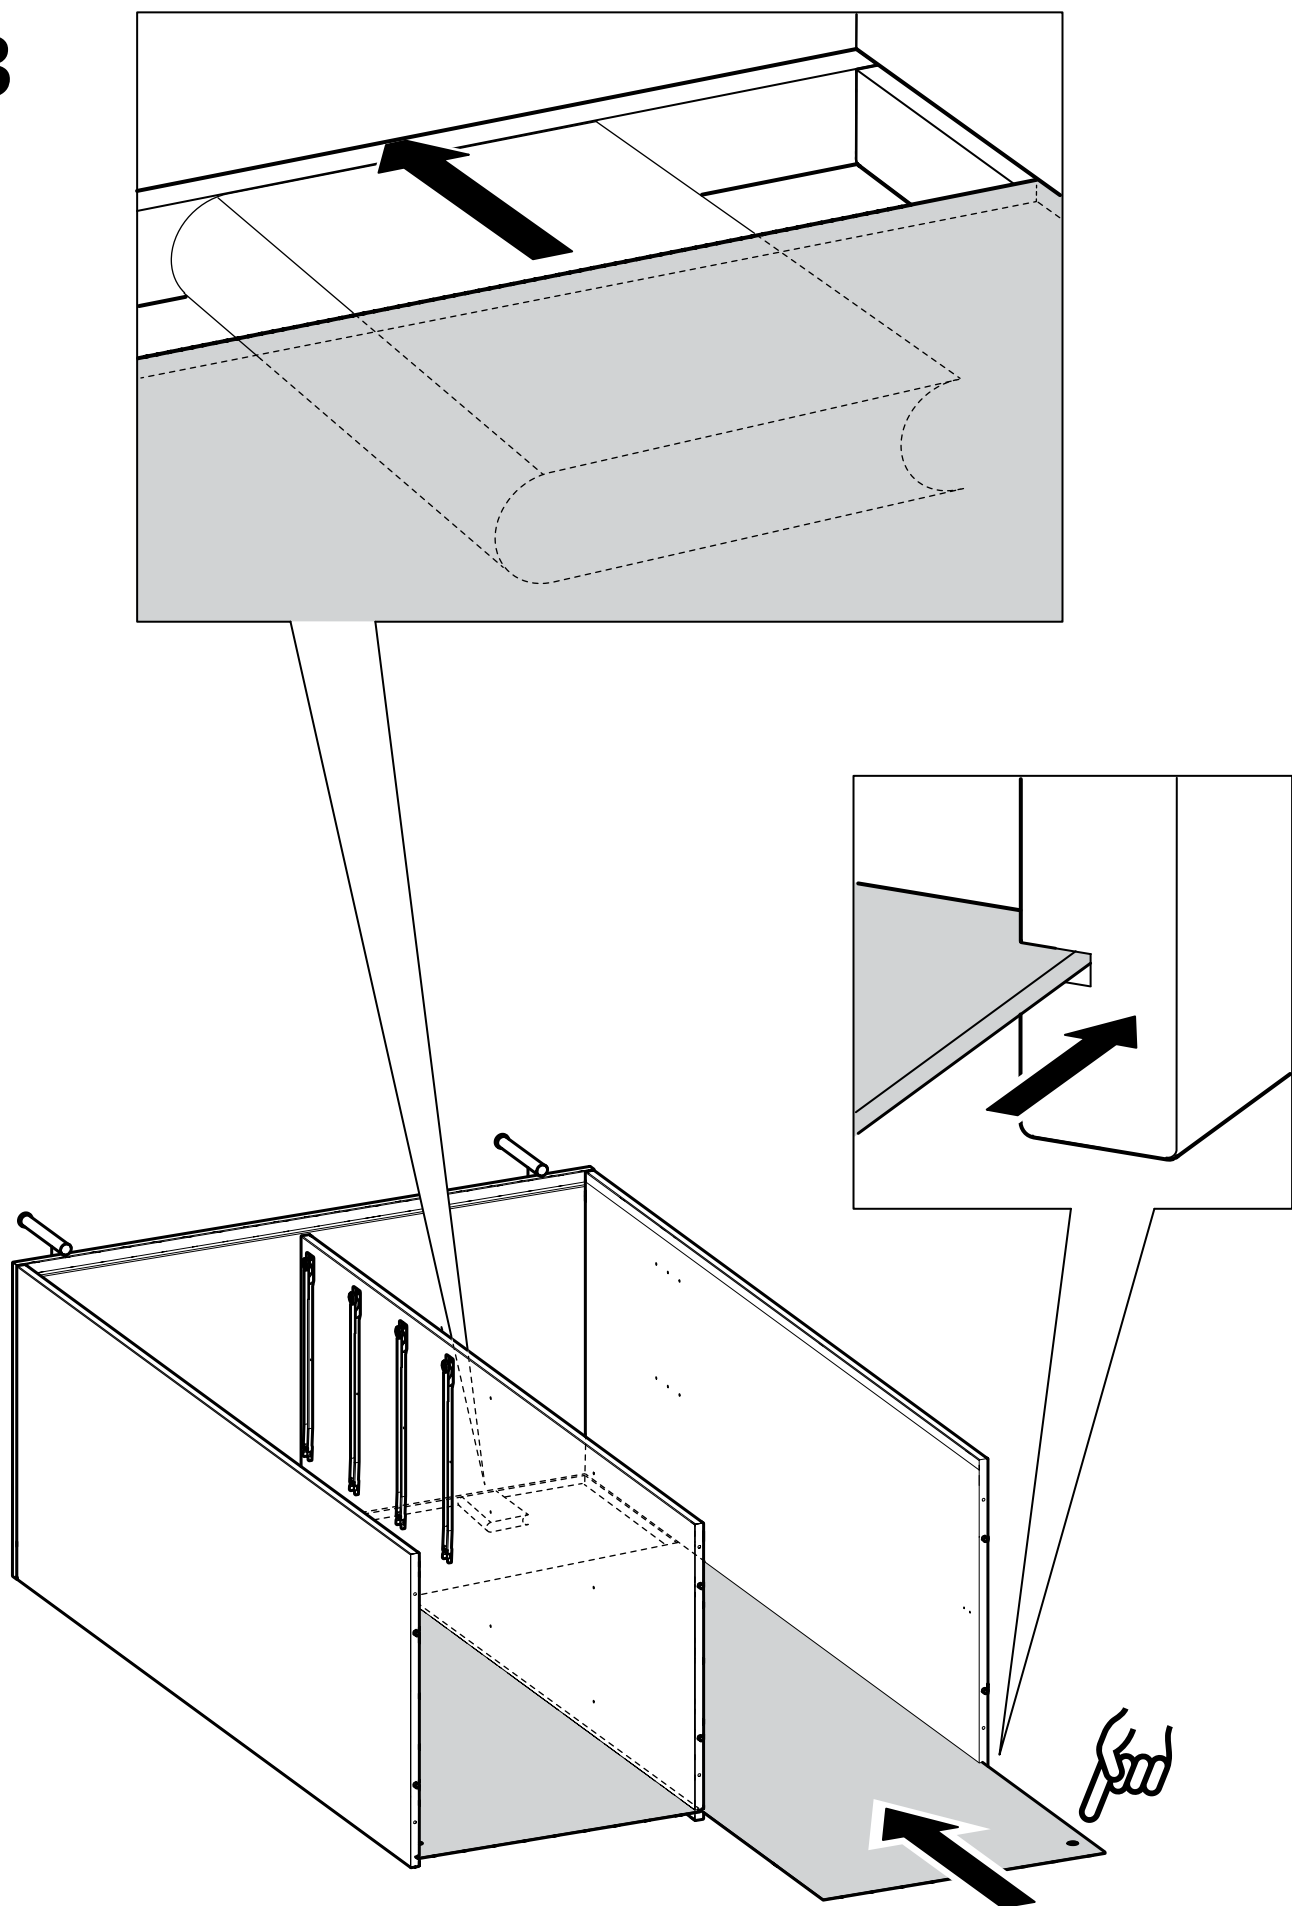 


14

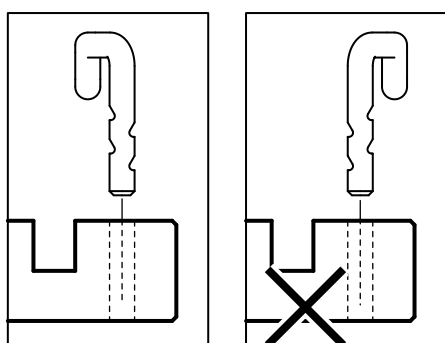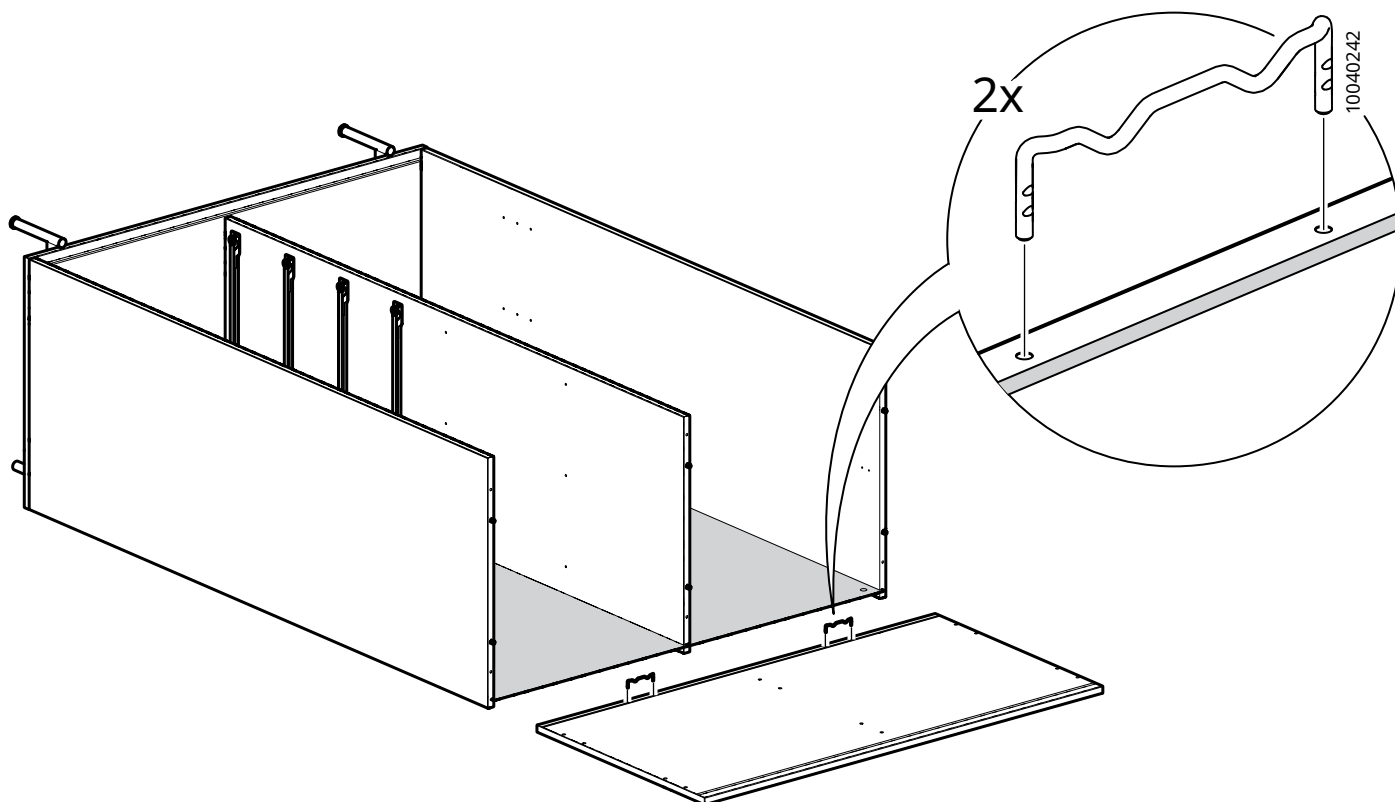  


15

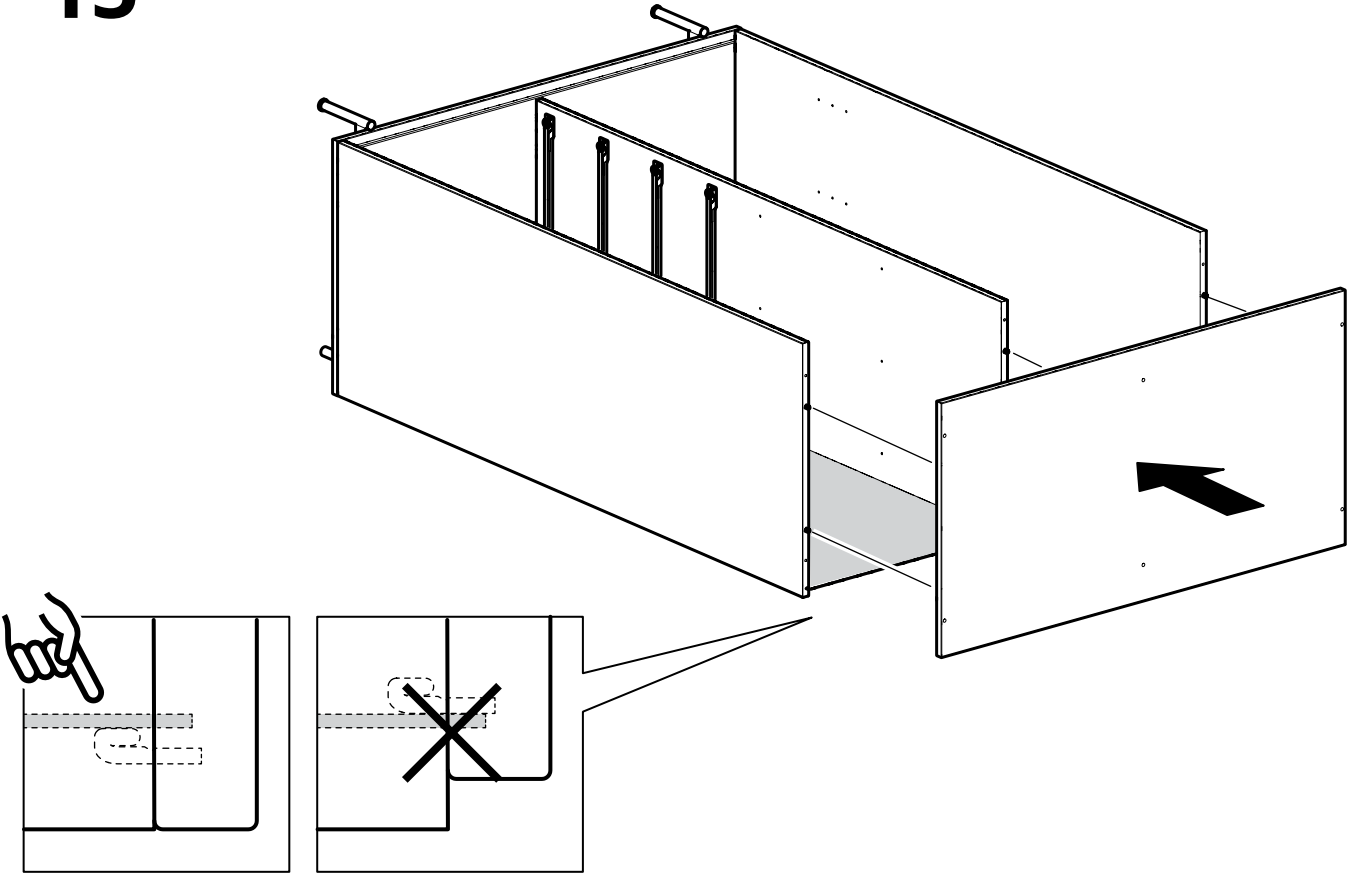 


16

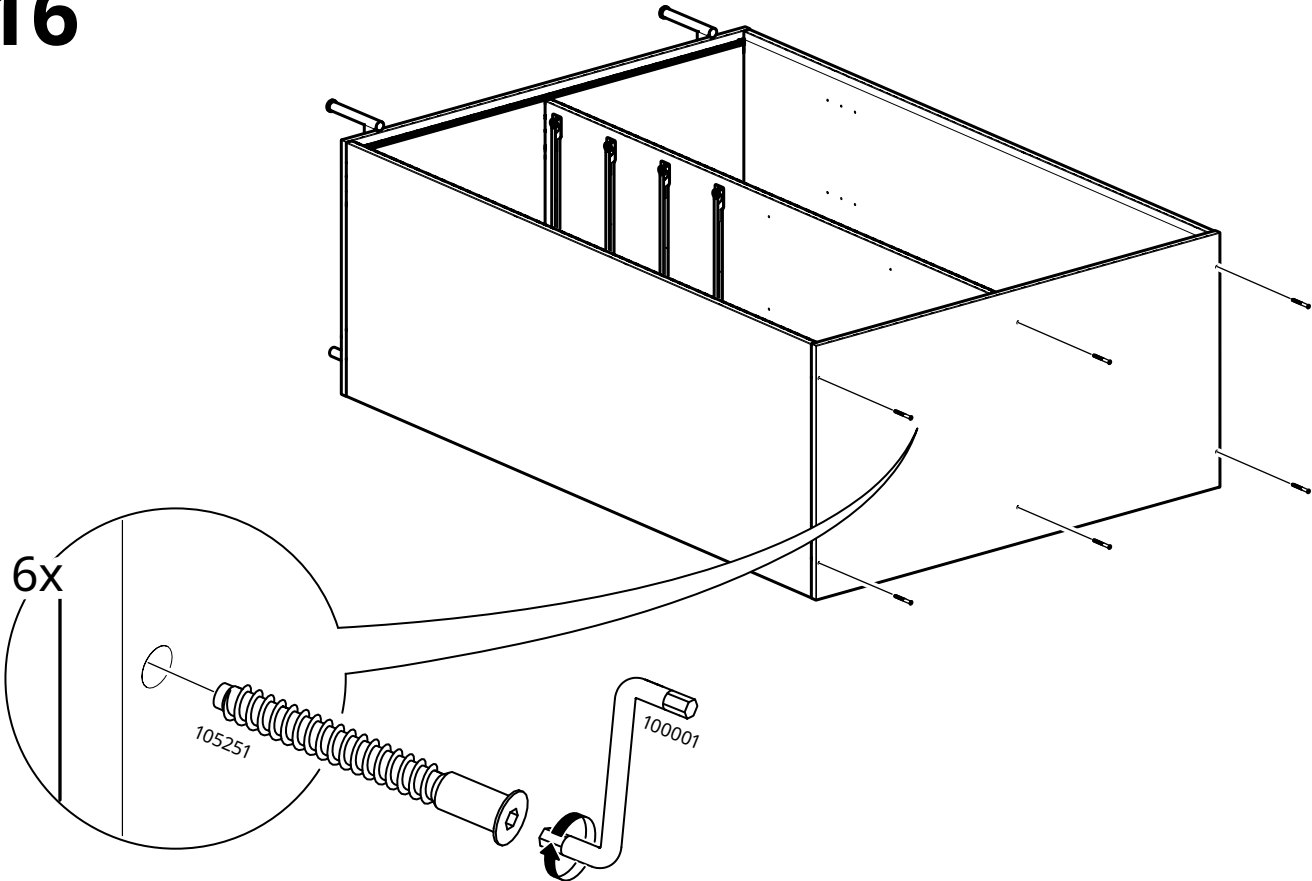 


17

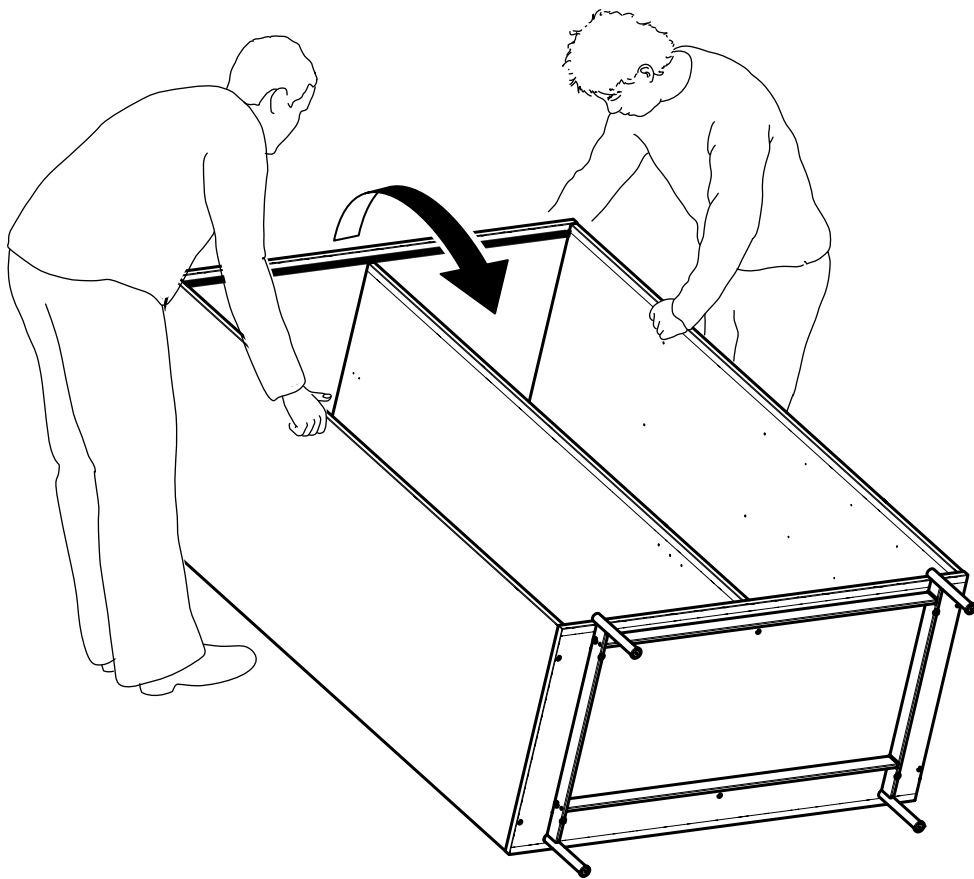 


18

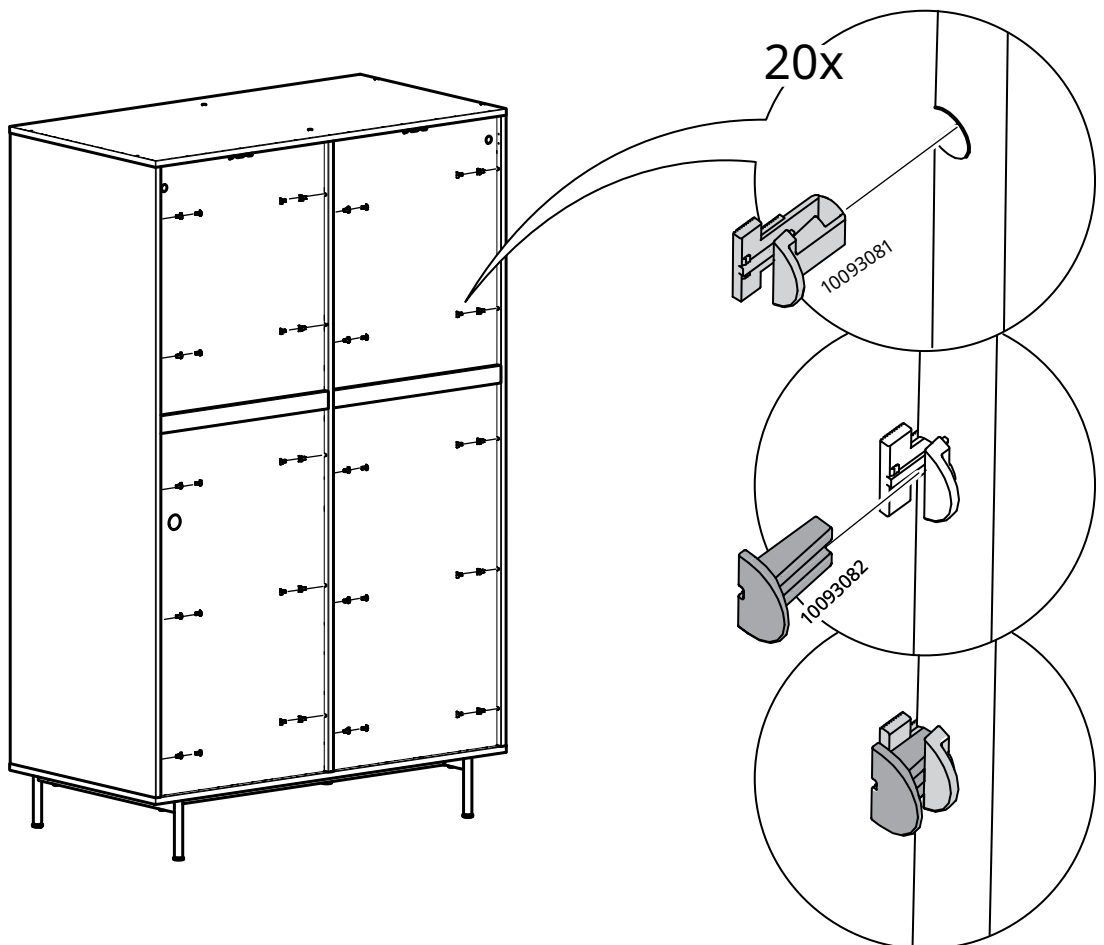 


19

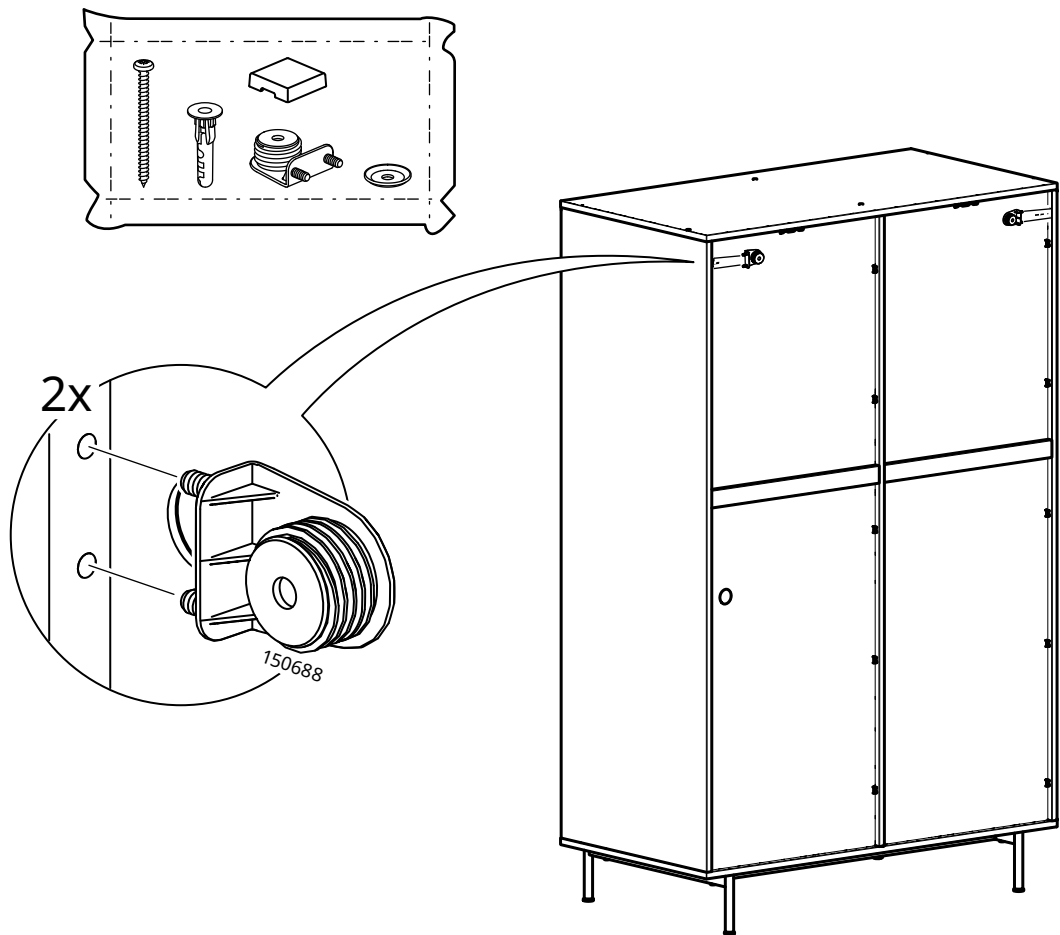 


20

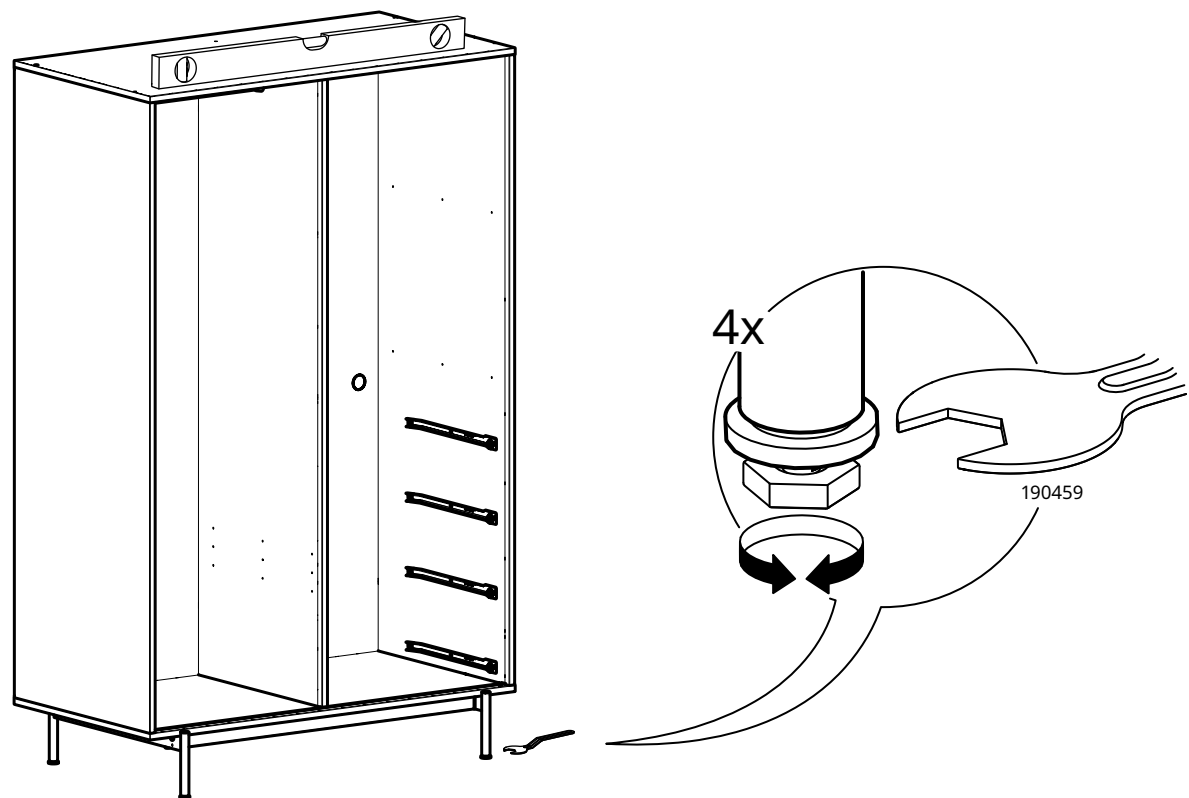 

21

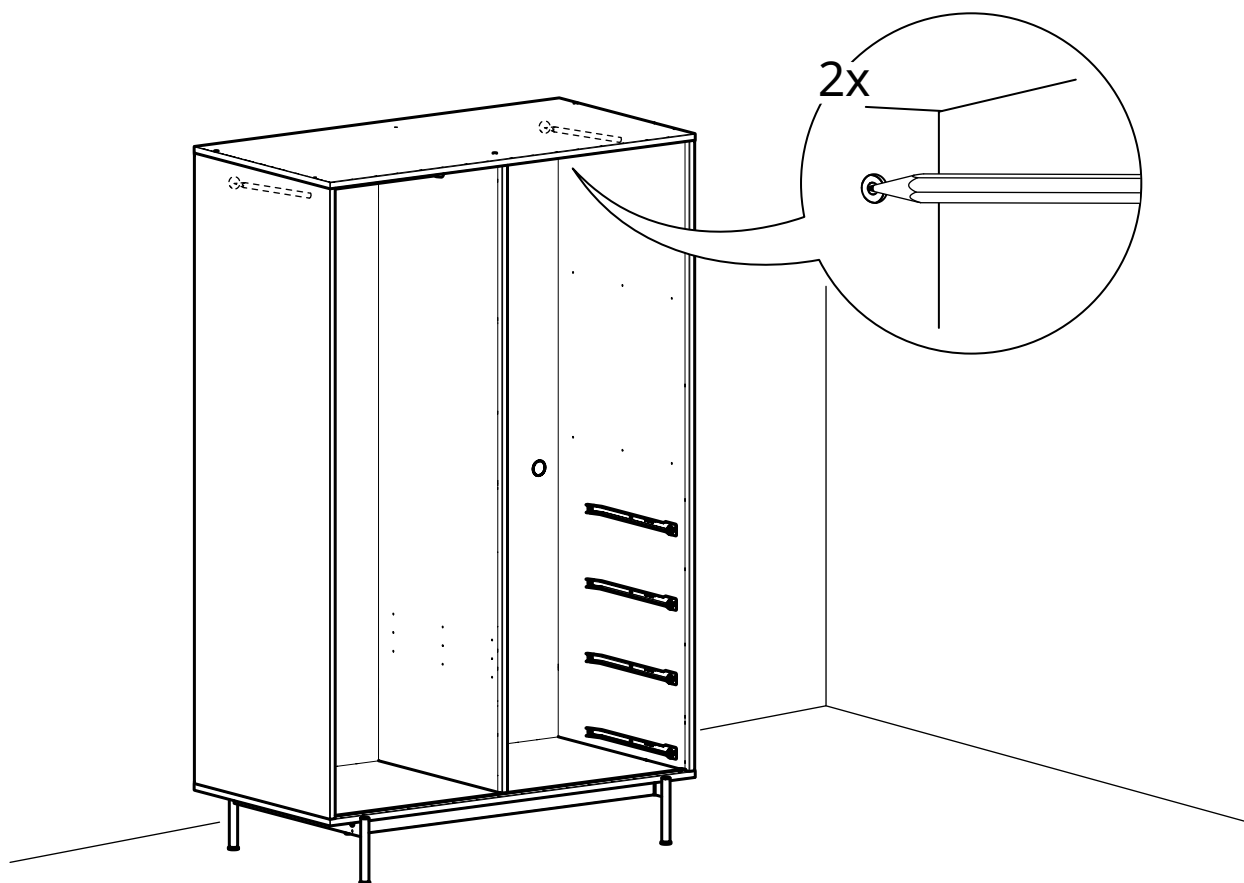 

22

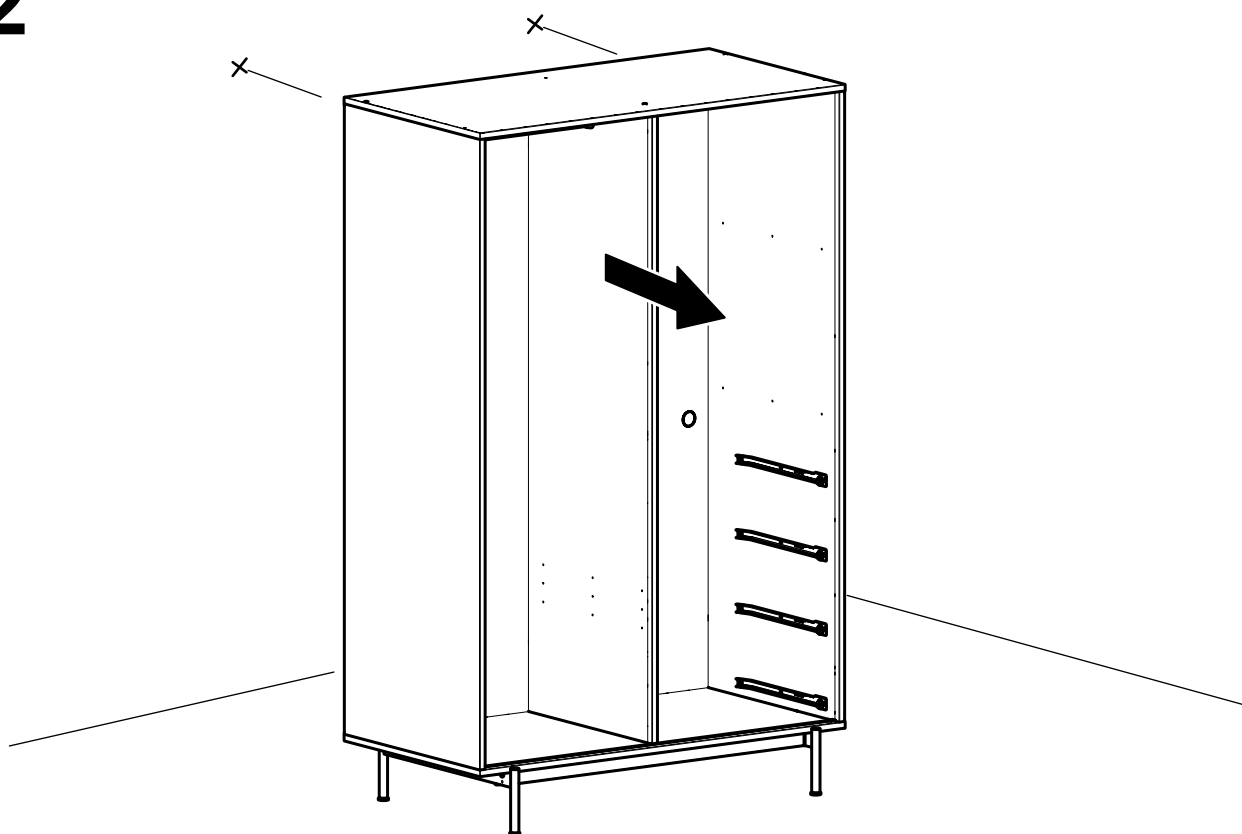 




www.IKEA.com/secure-it



 www.IKEA.cn/secure-it

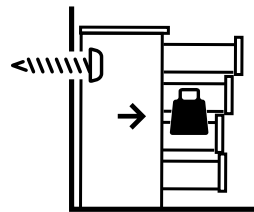


23

English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

 
A

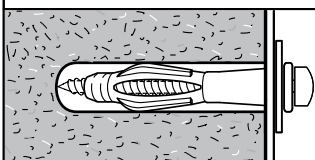


Ø 8 mm
(5/16")



 
1




2

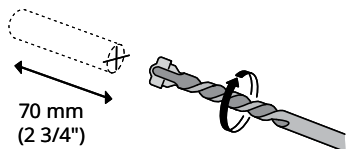 

3

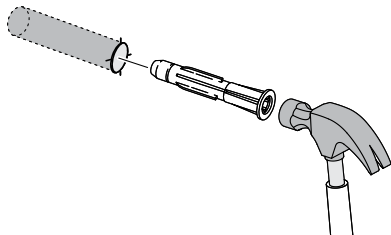 


B

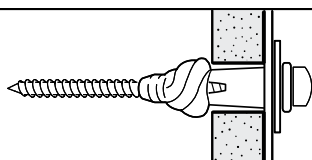 


Ø 8 mm
(5/16")



 
1




2

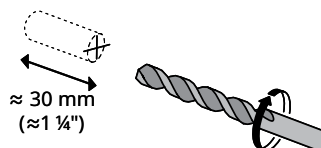 

3

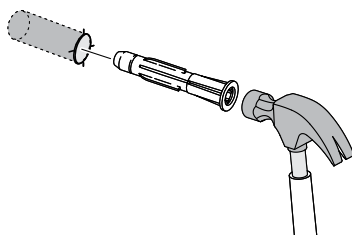 


C

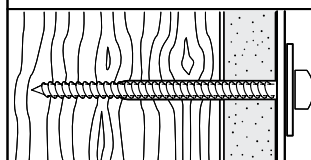 


Ø 3 mm
(1/8")



 
1




2

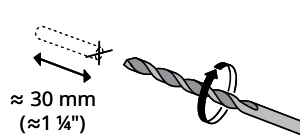 


24

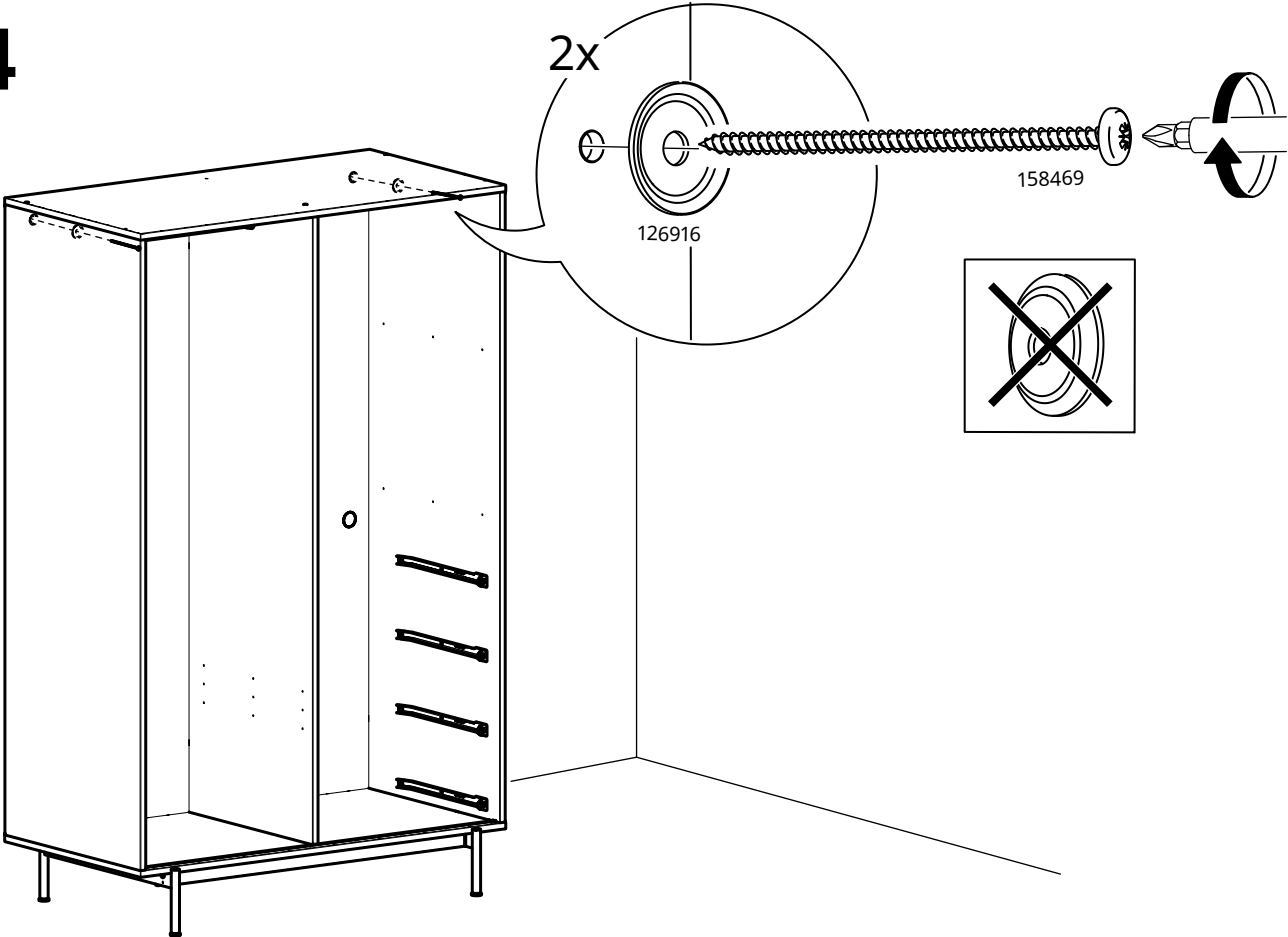 


25

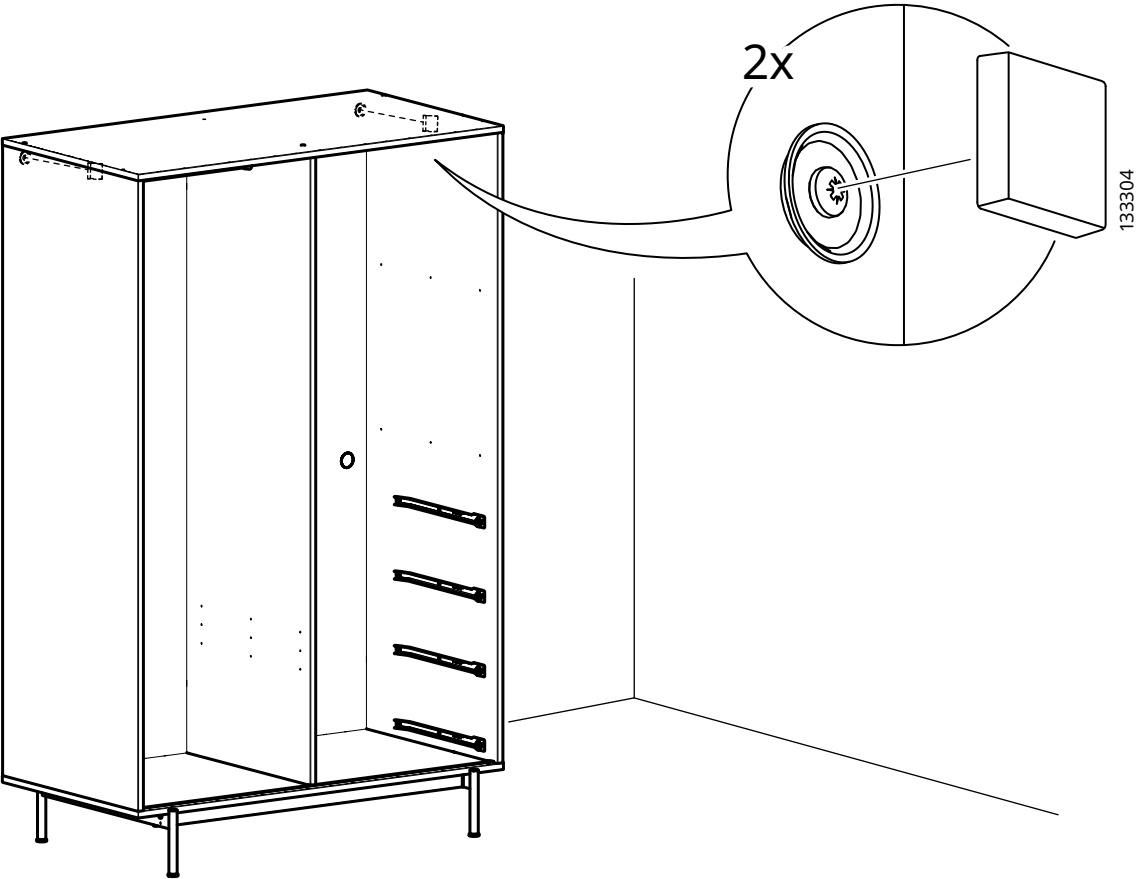 


26

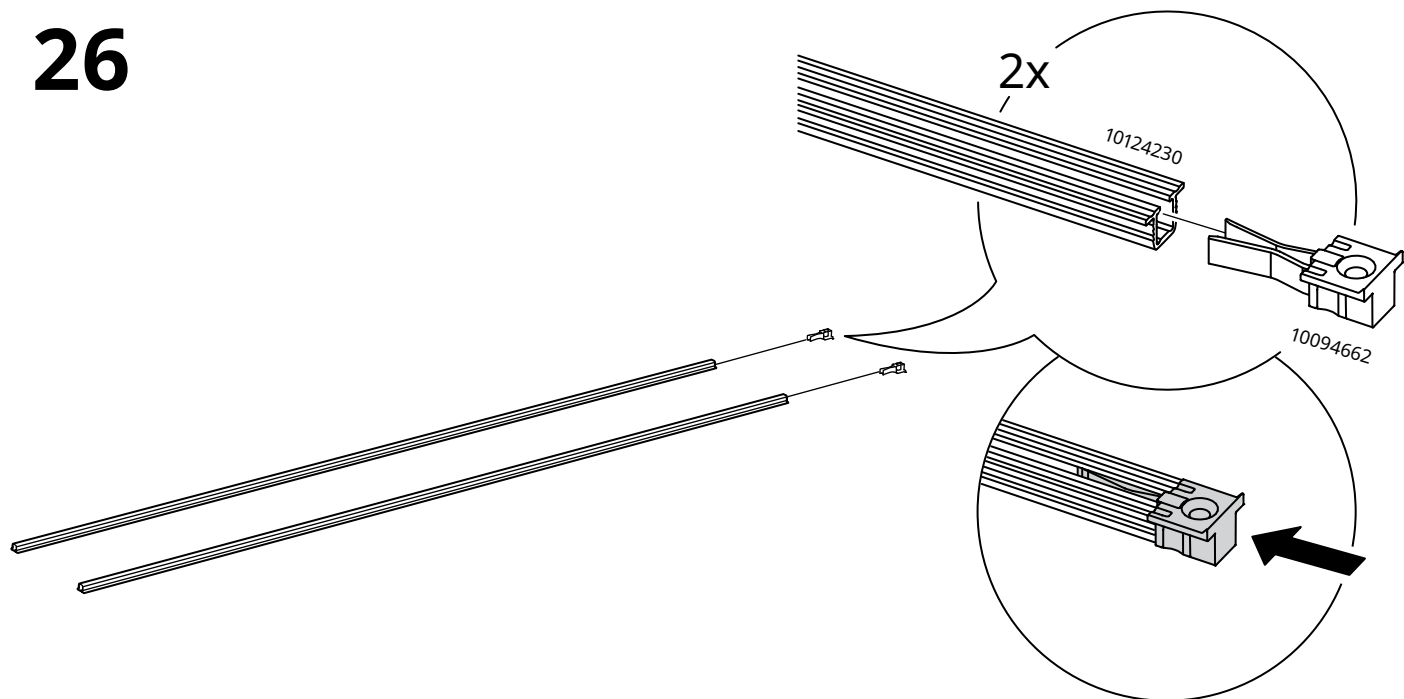 


27

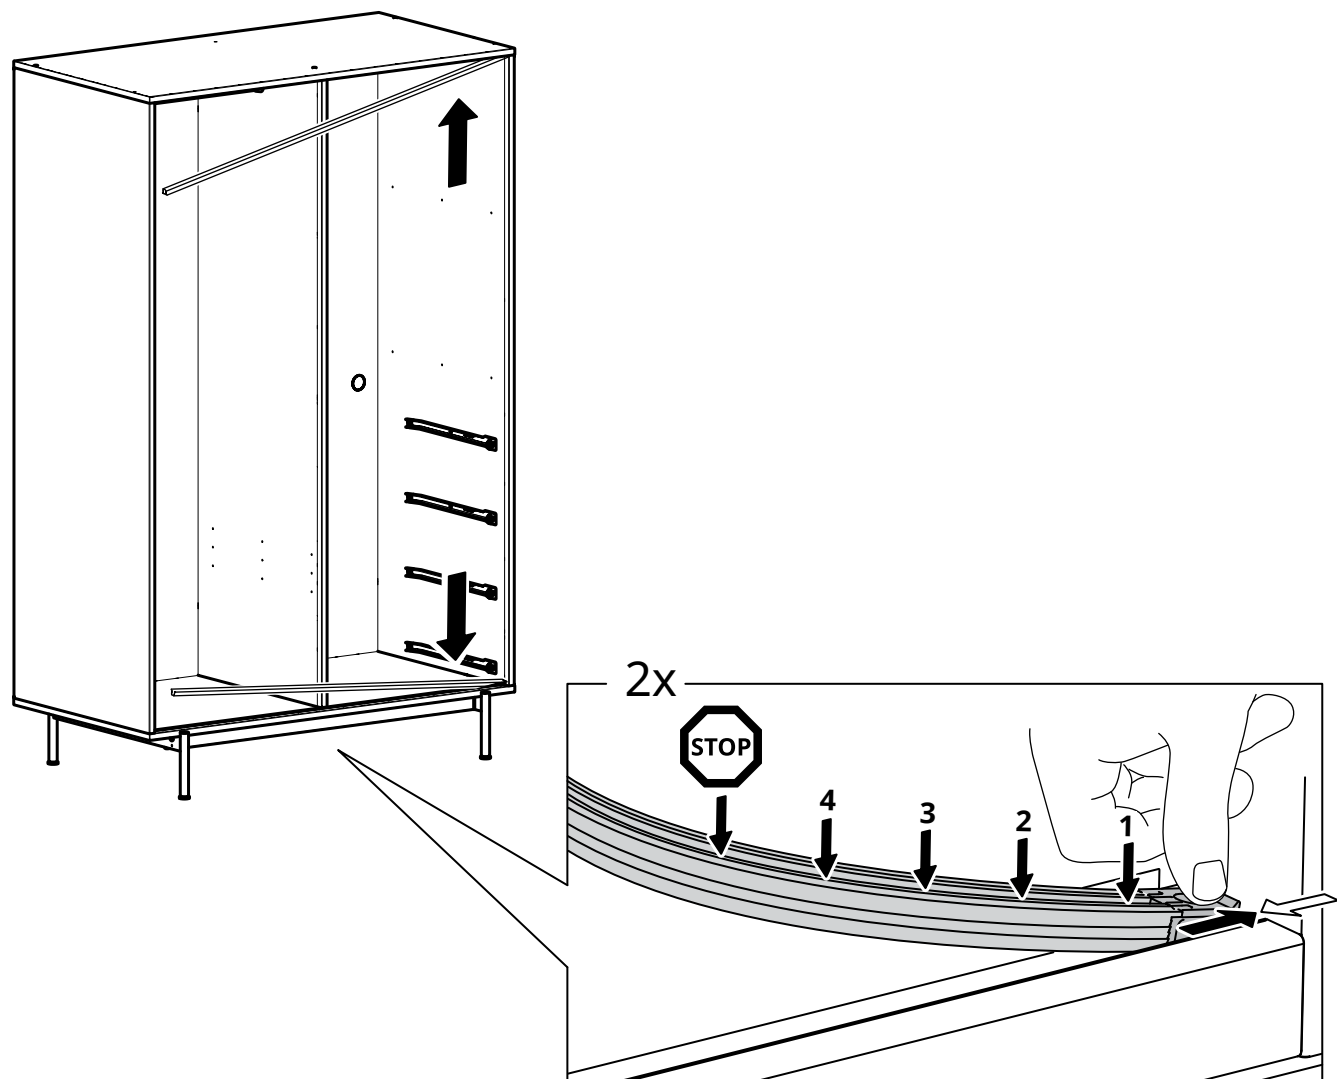 


28

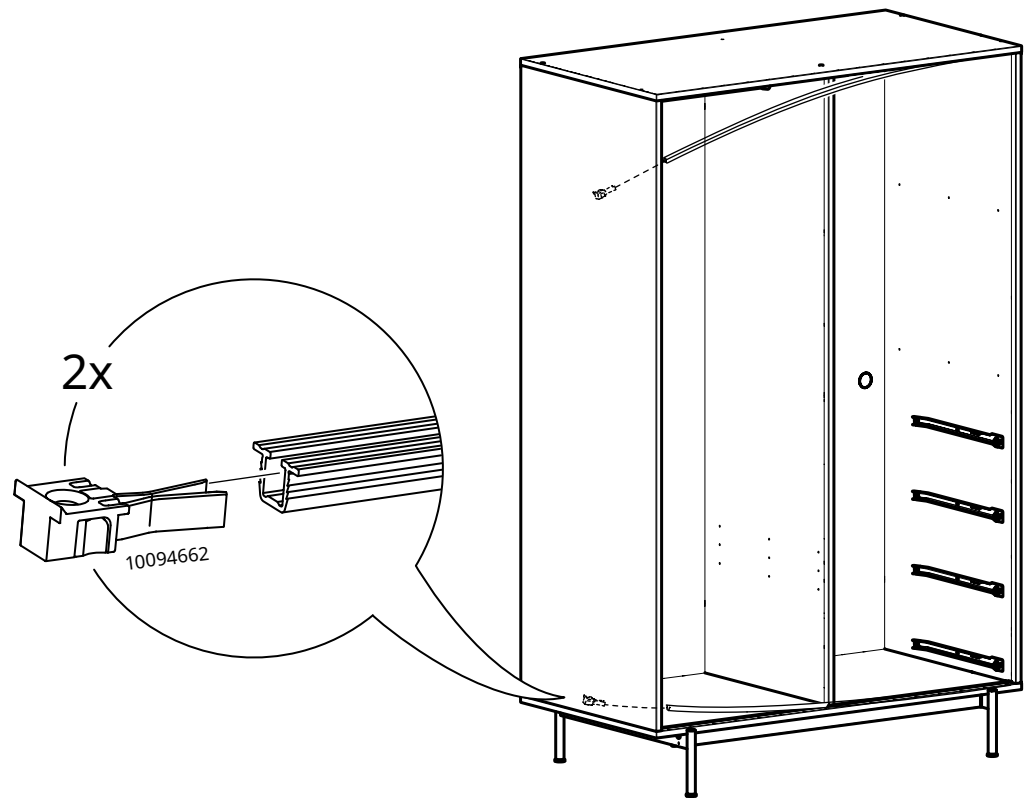 


29

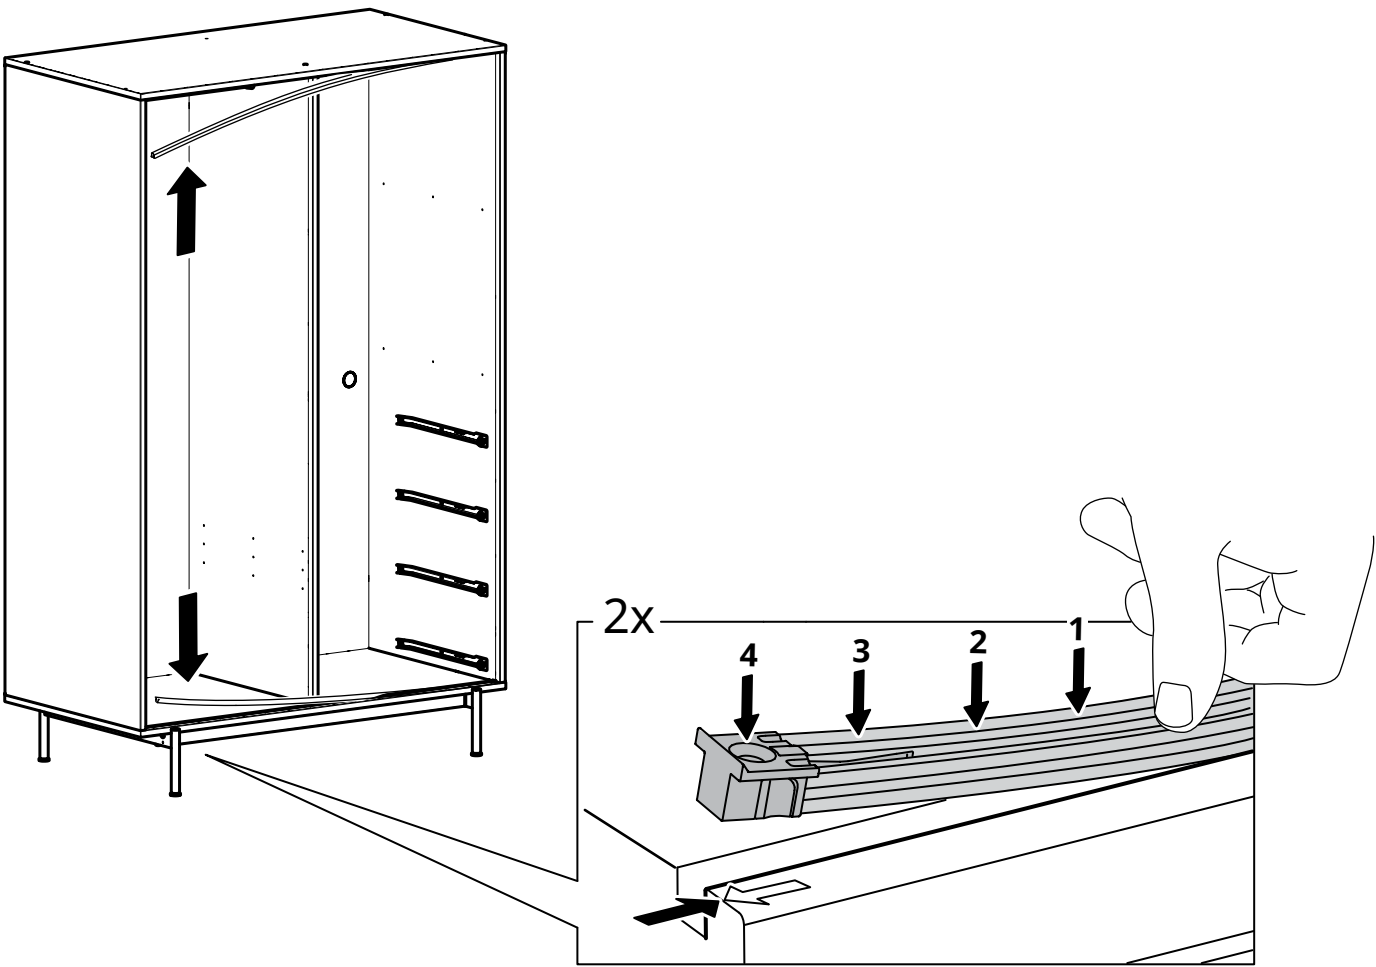 


30

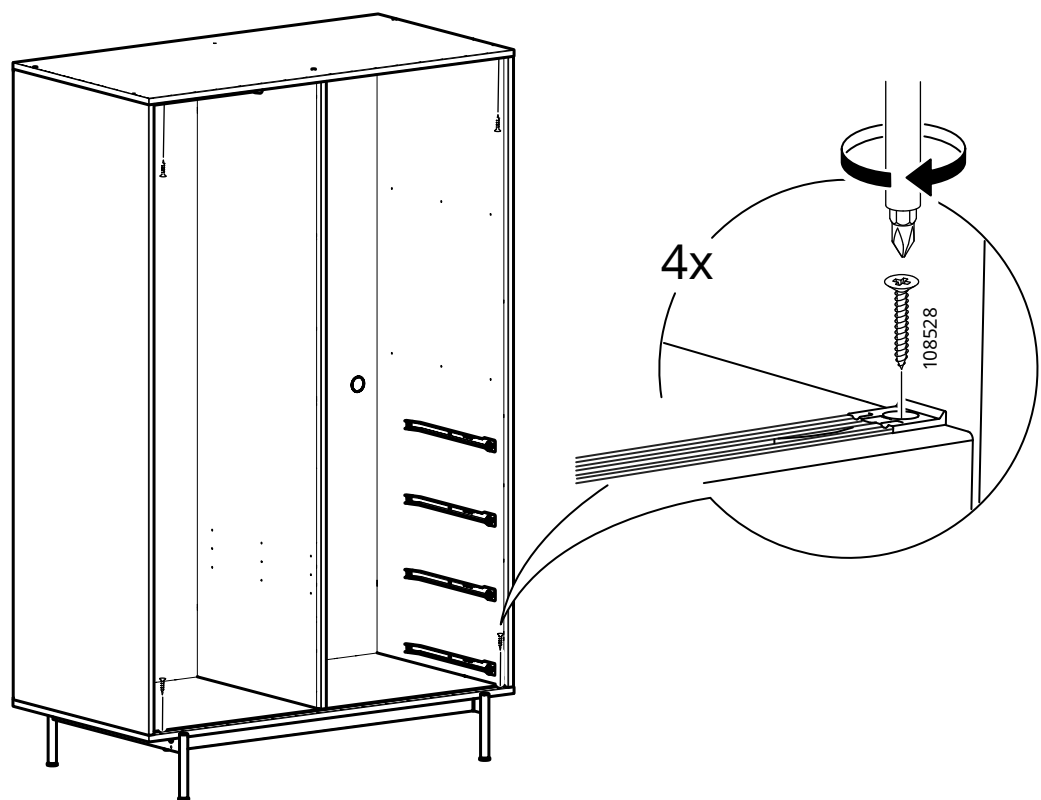 


31

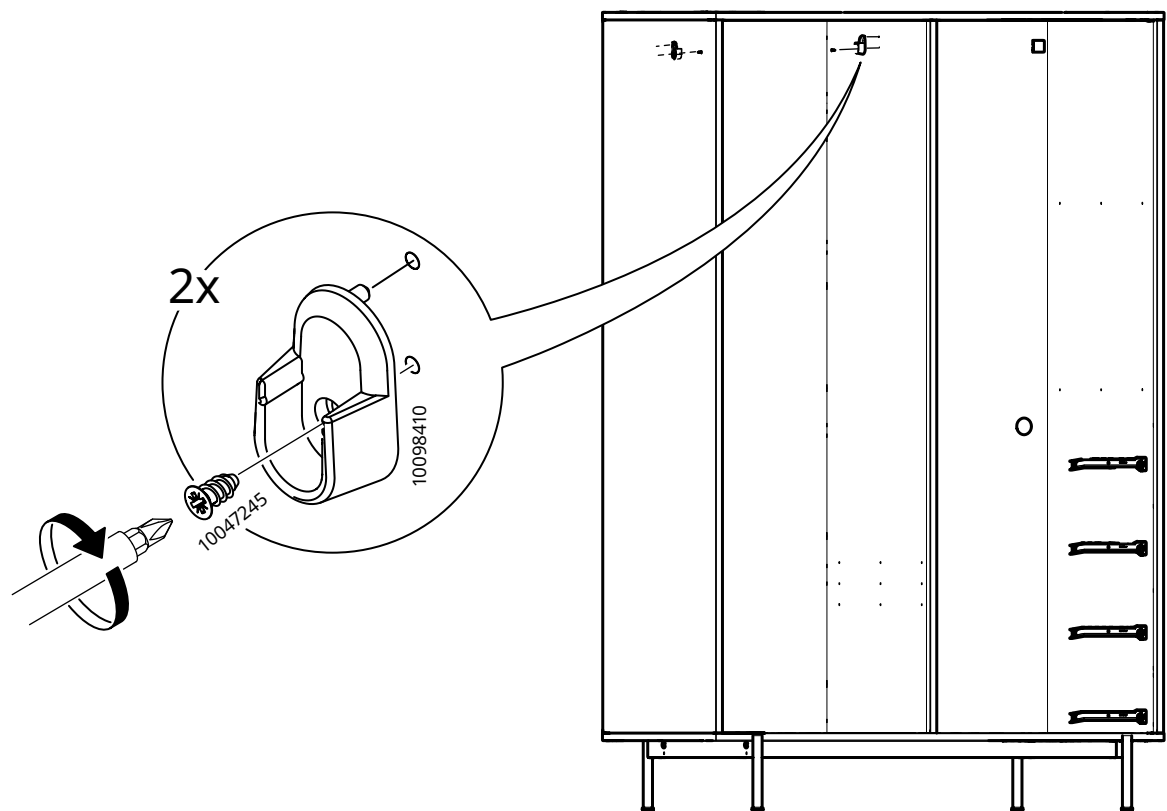 



32

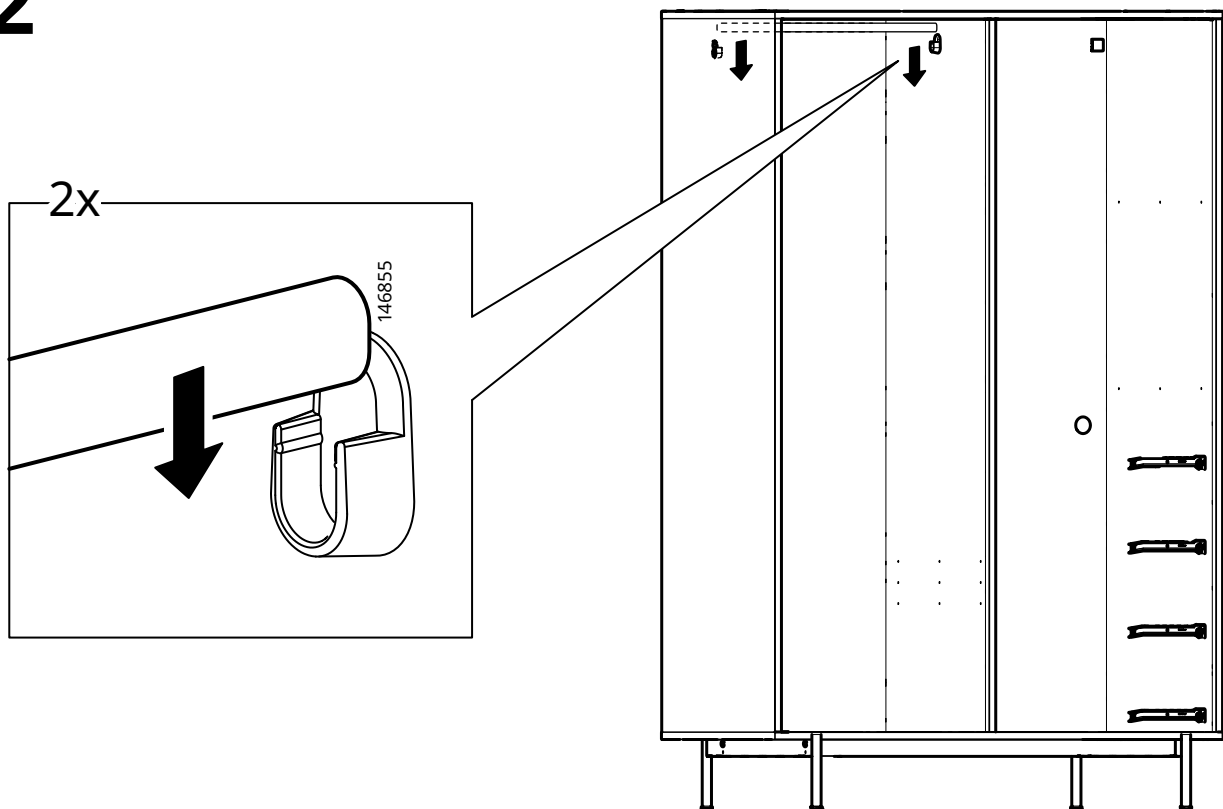 




33

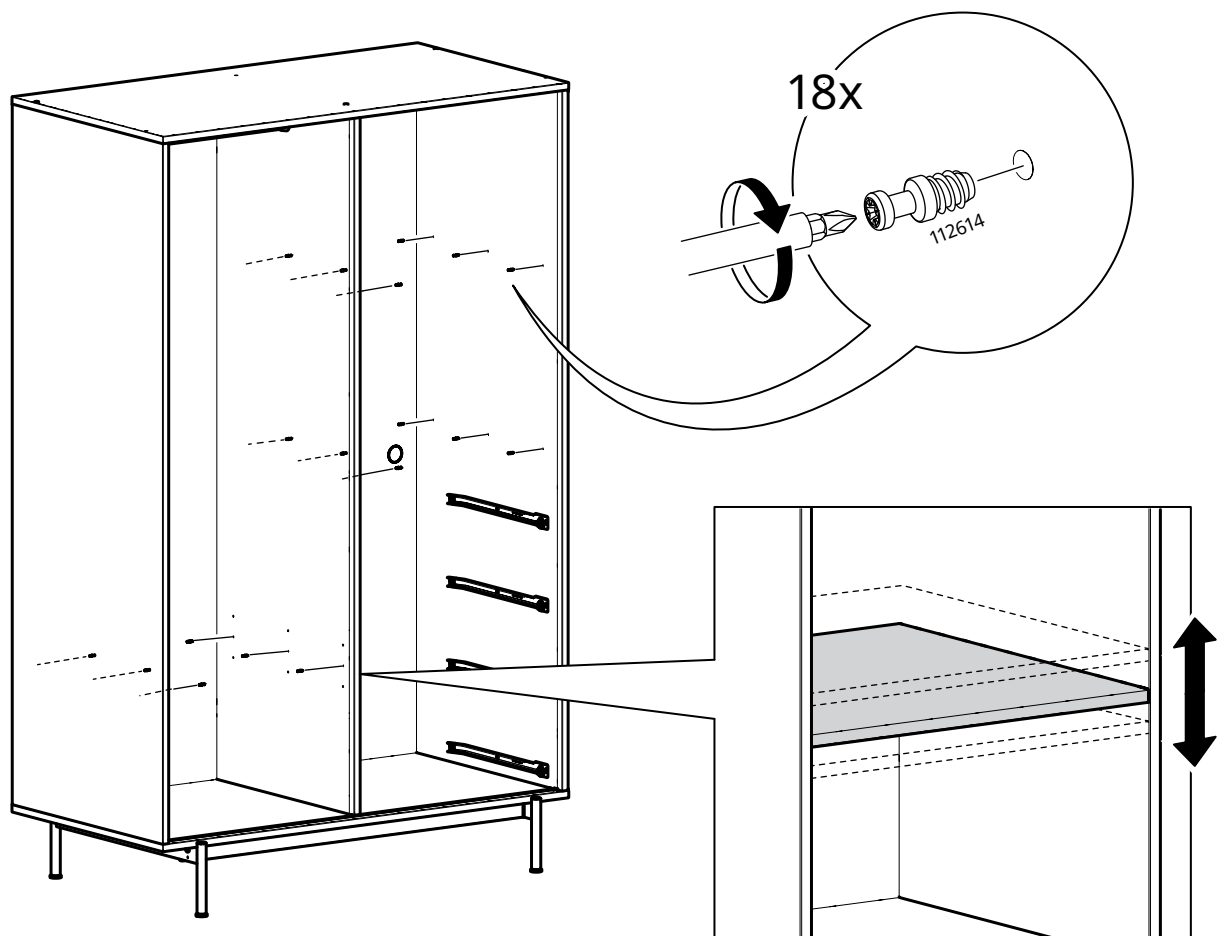 


34

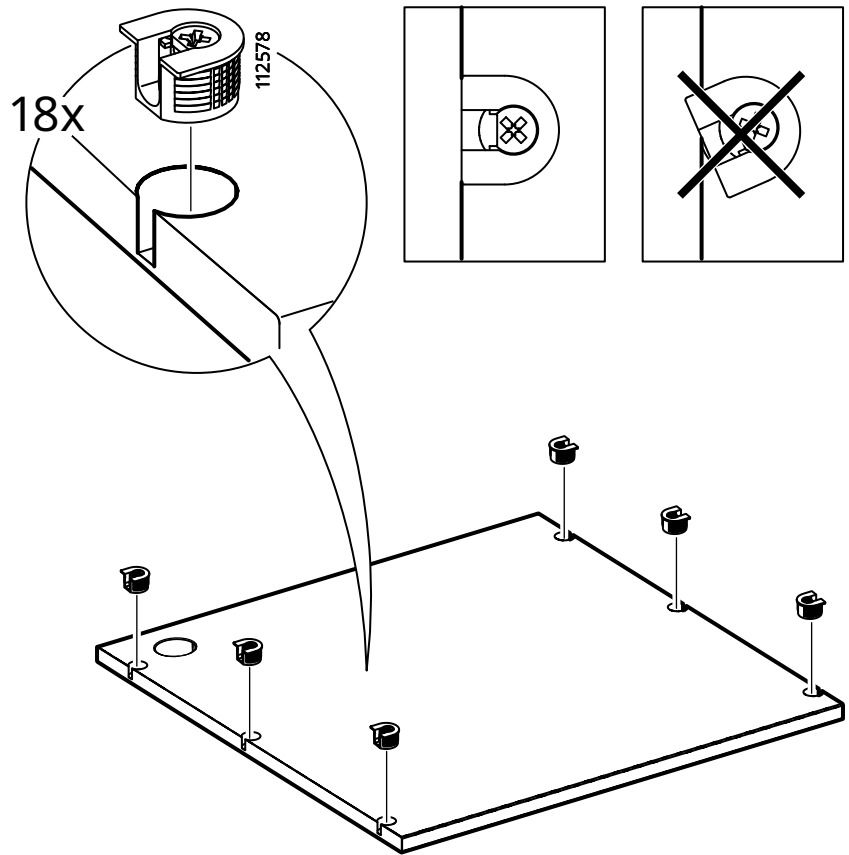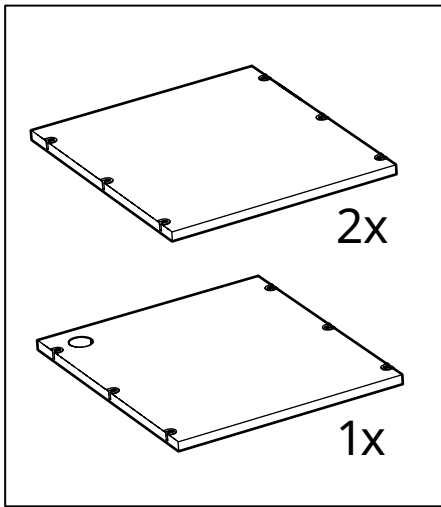  


35

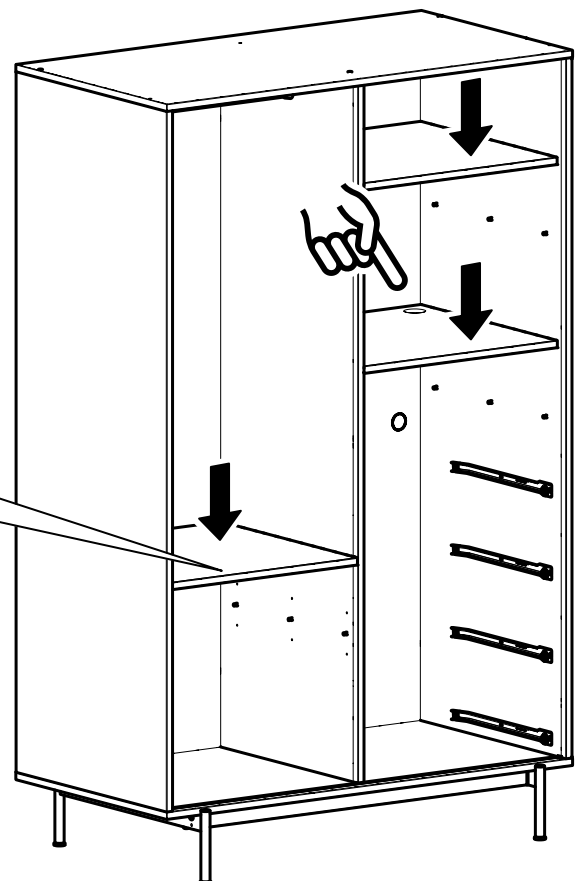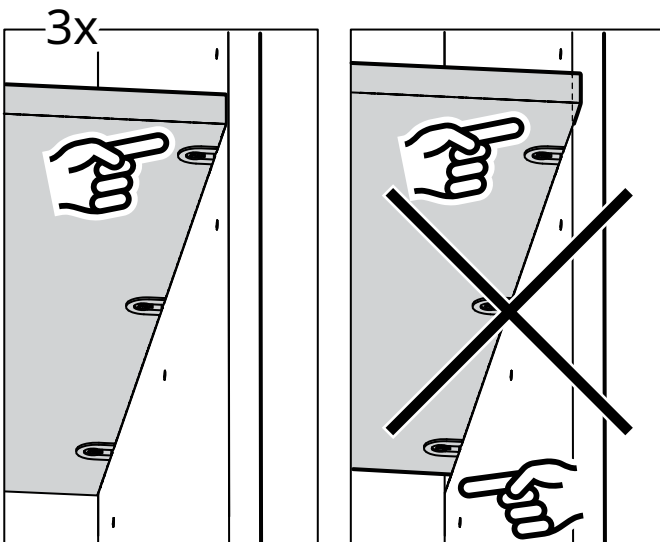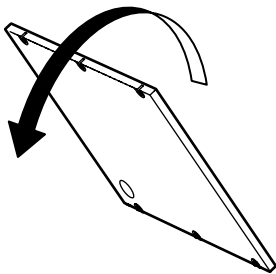   


36

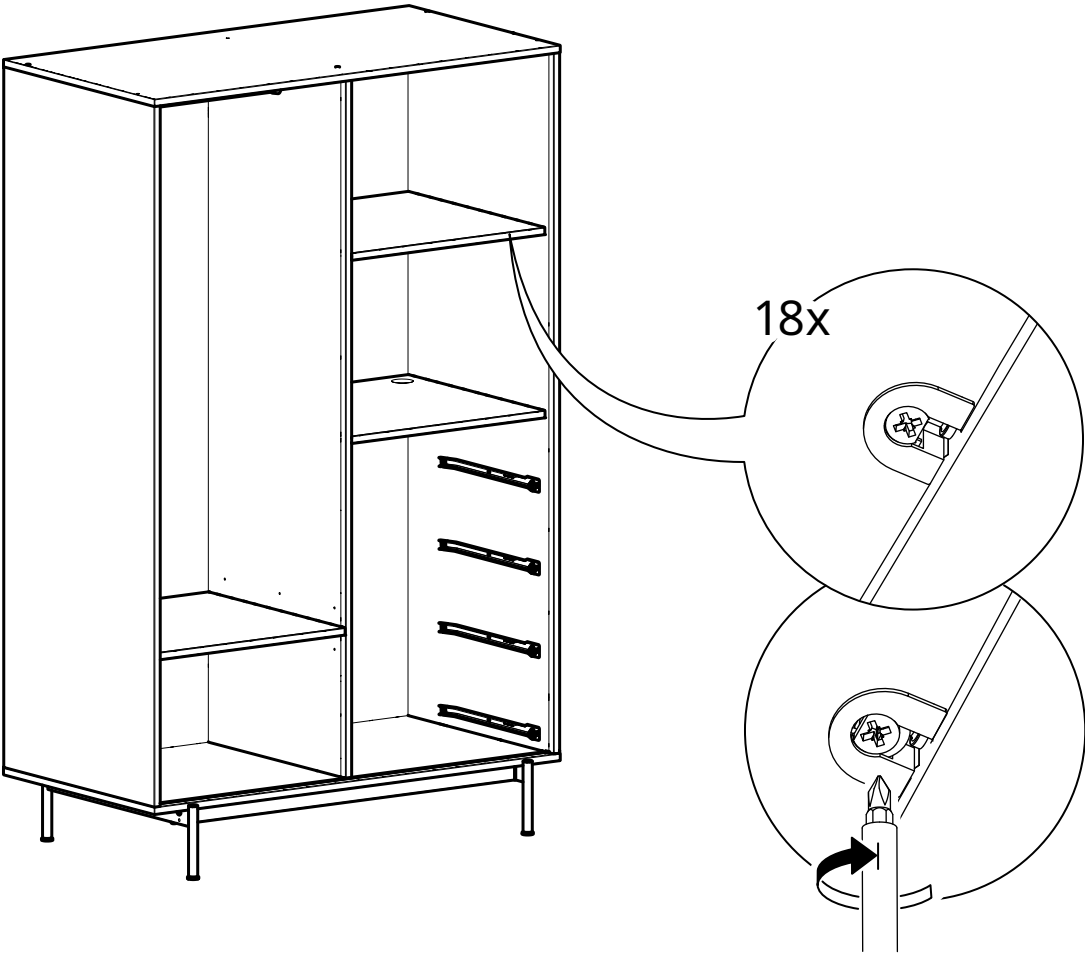 


37


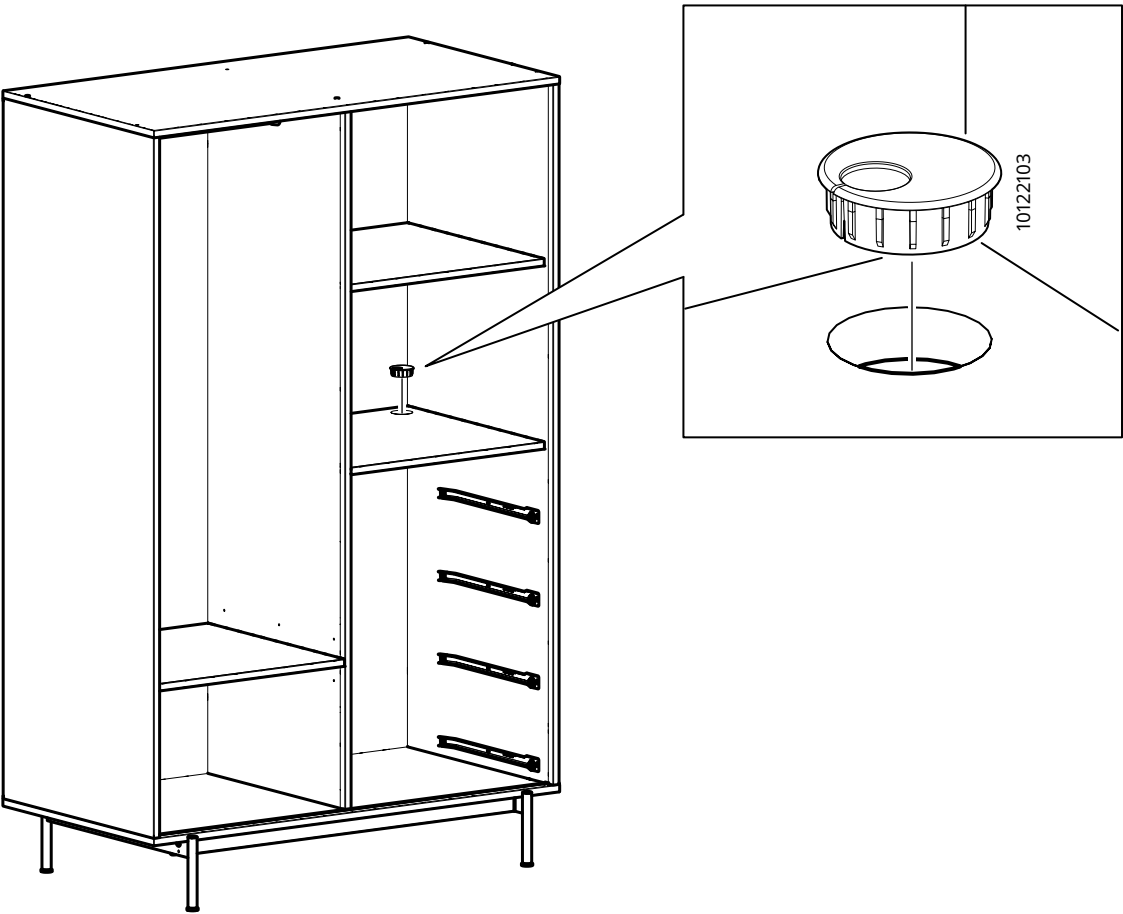 


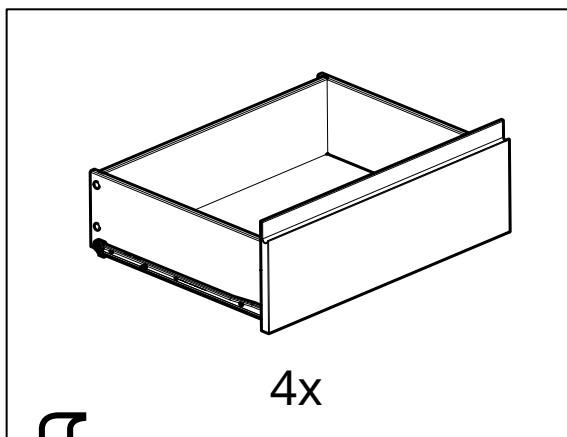 




38

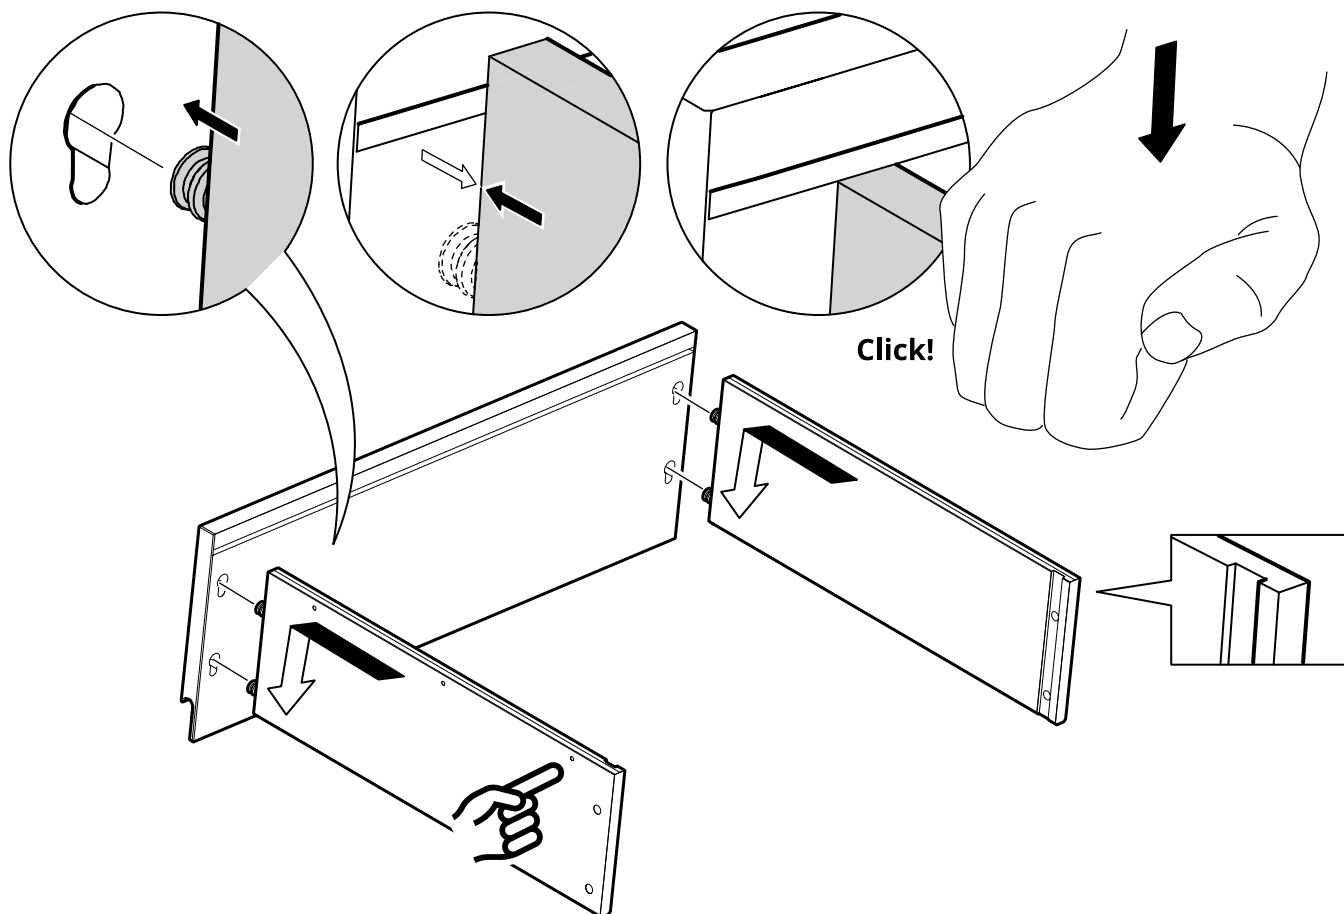 


39

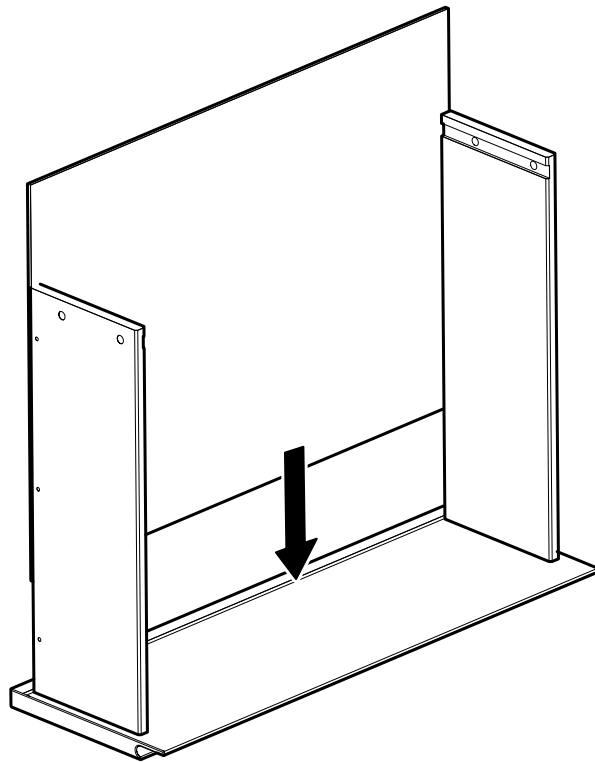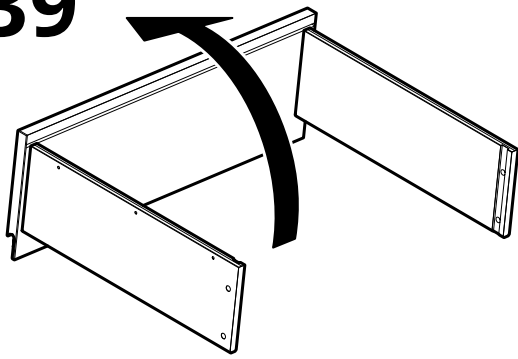  


40

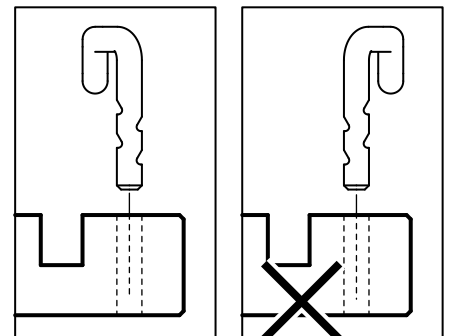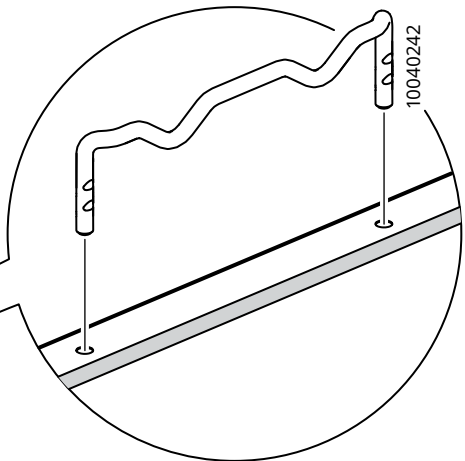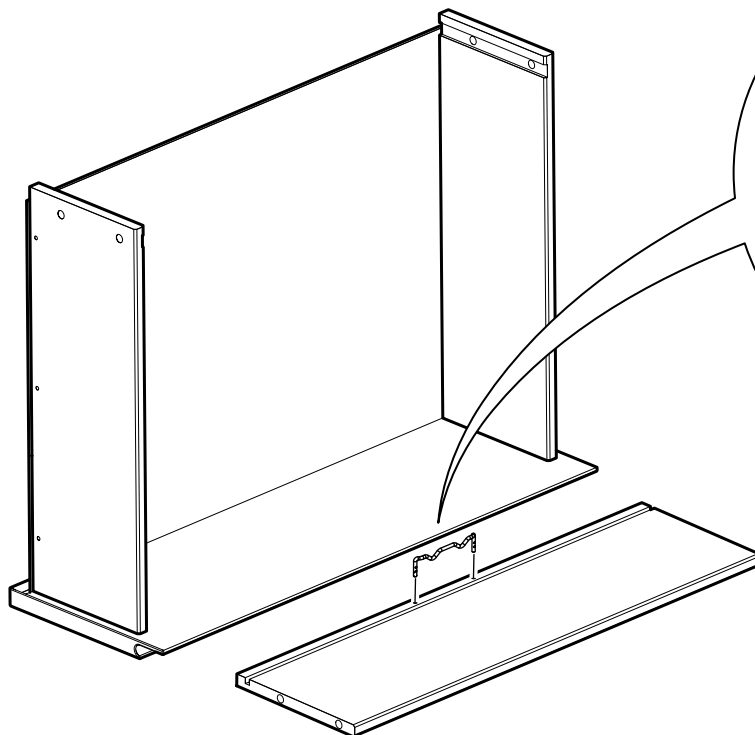   

41

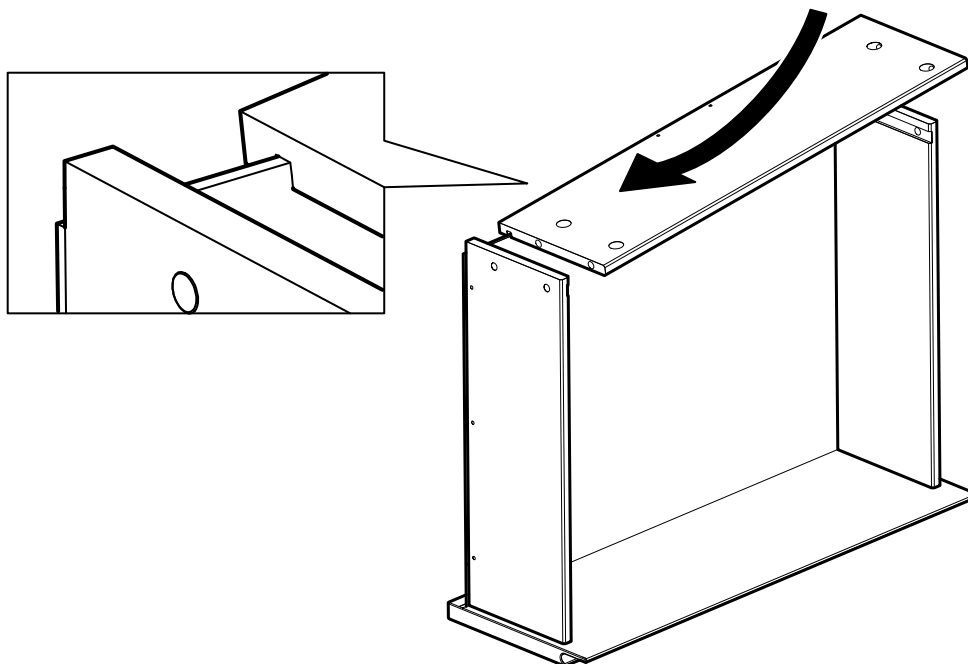 


42

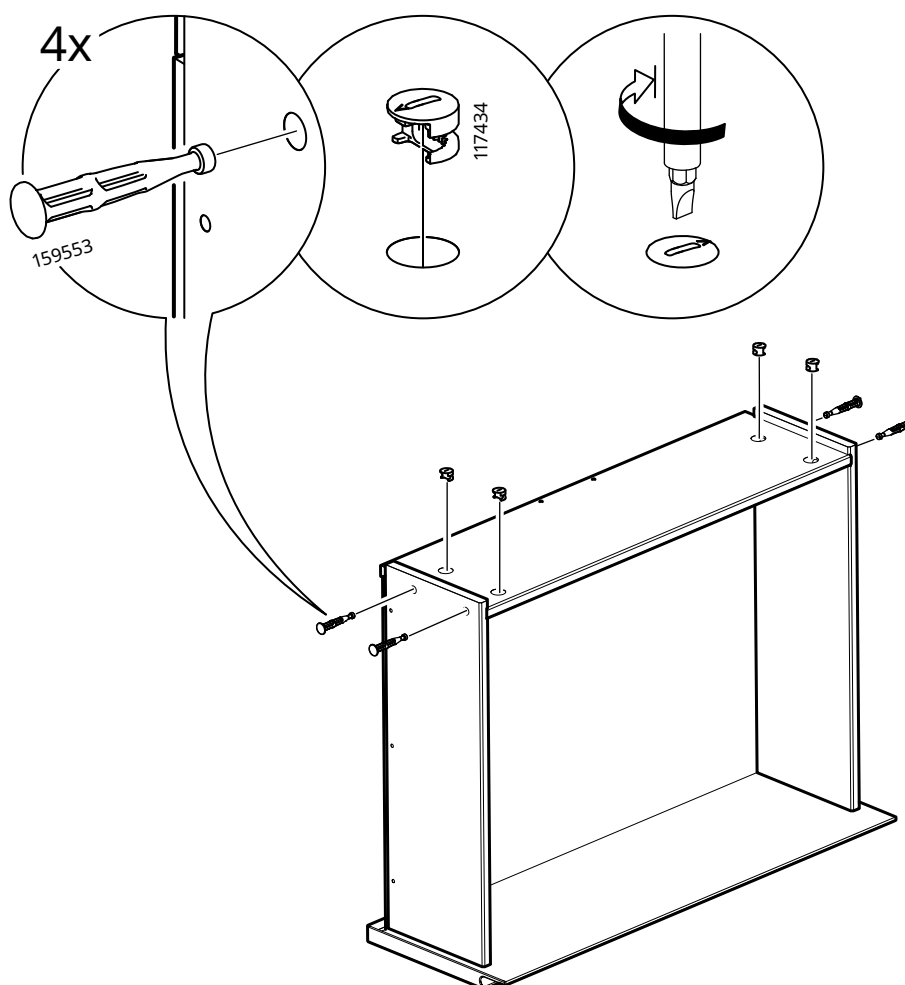 




43

 6x

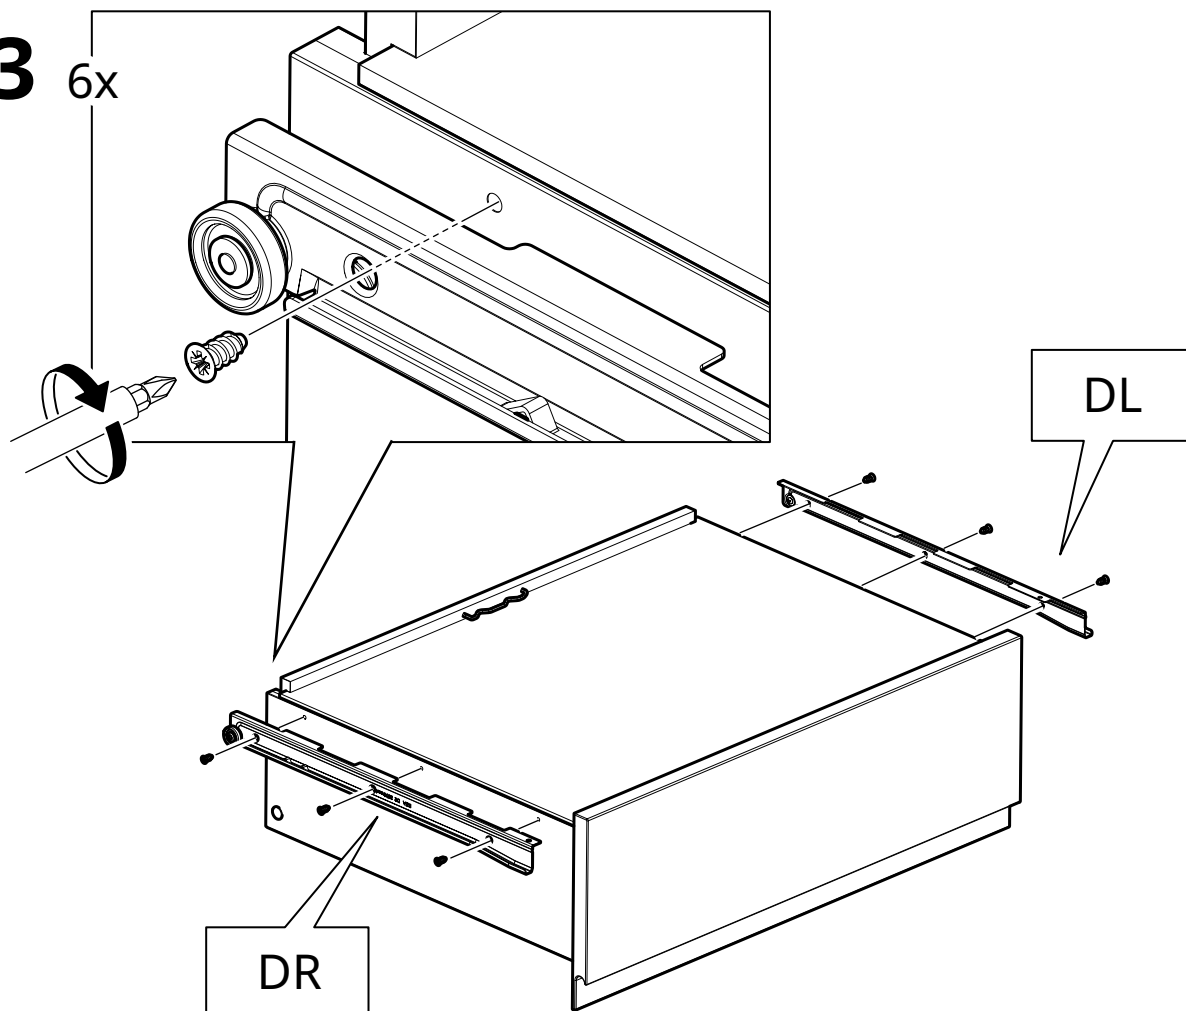


44

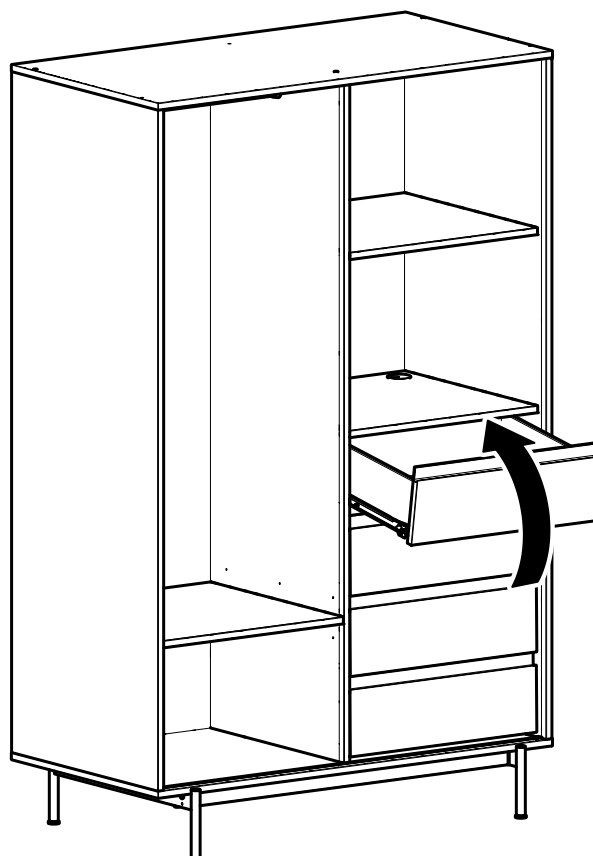 


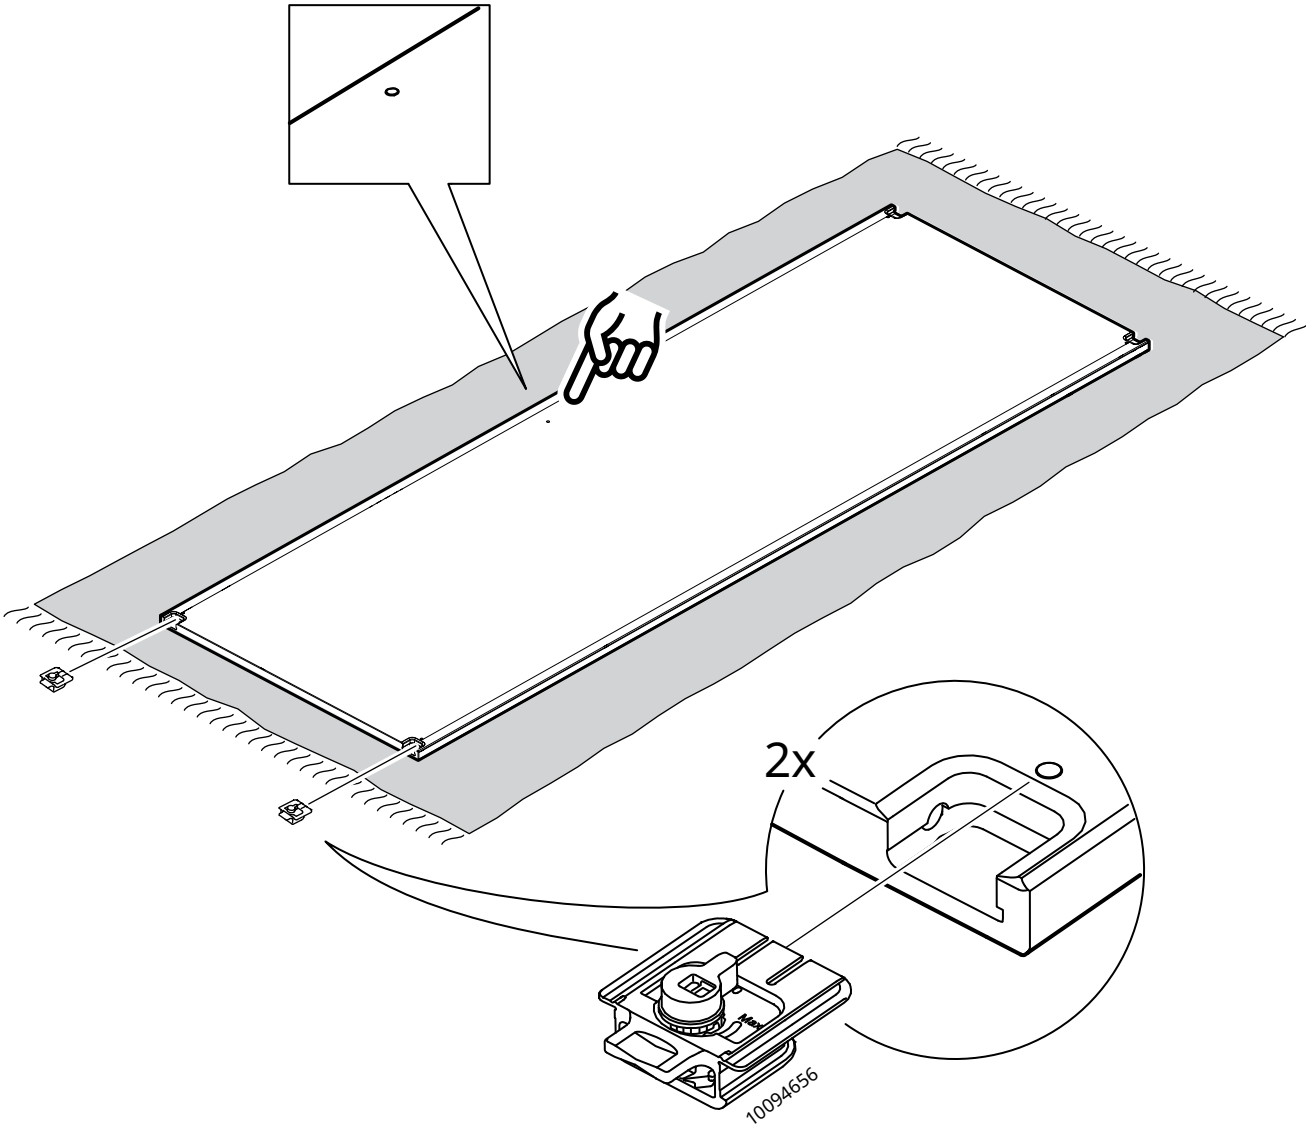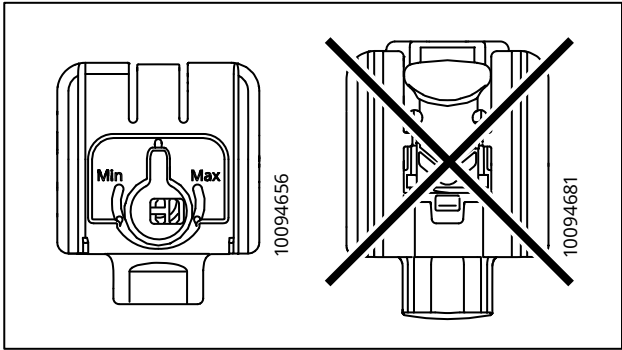  



46

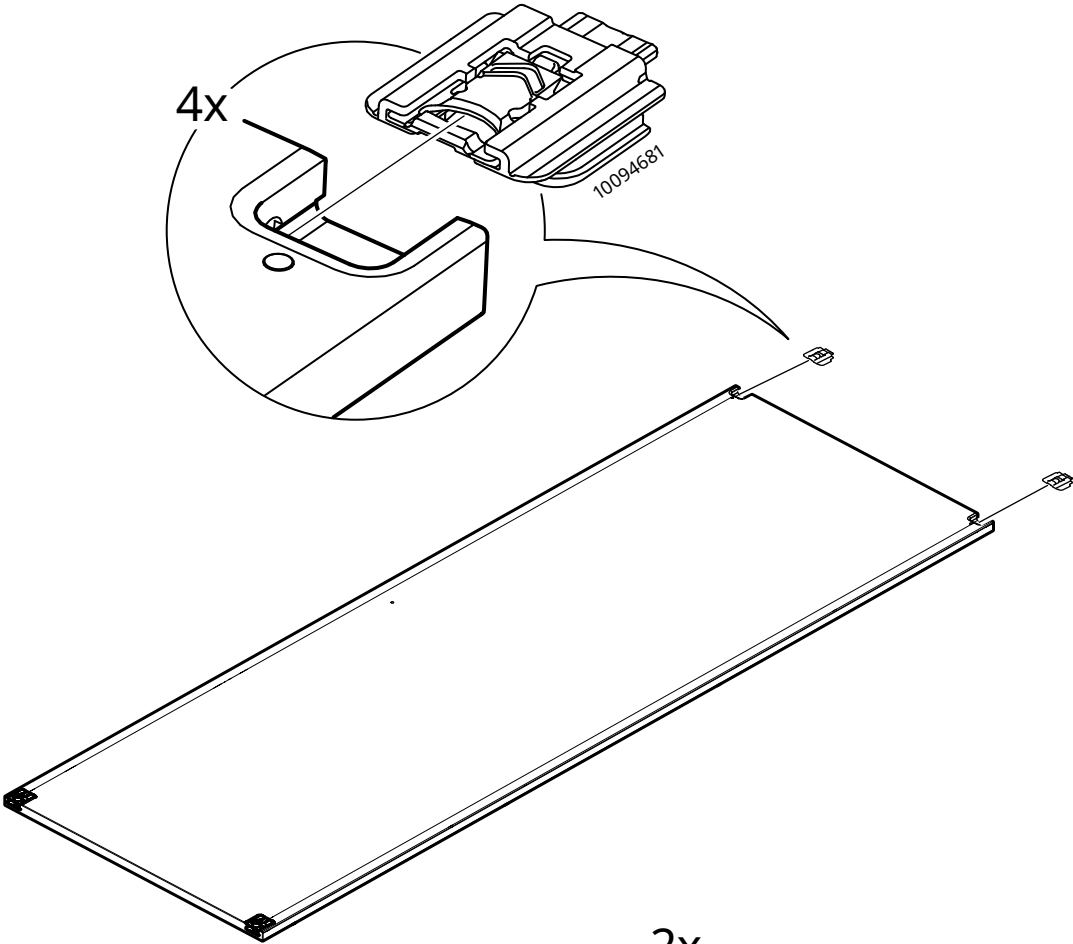 

47

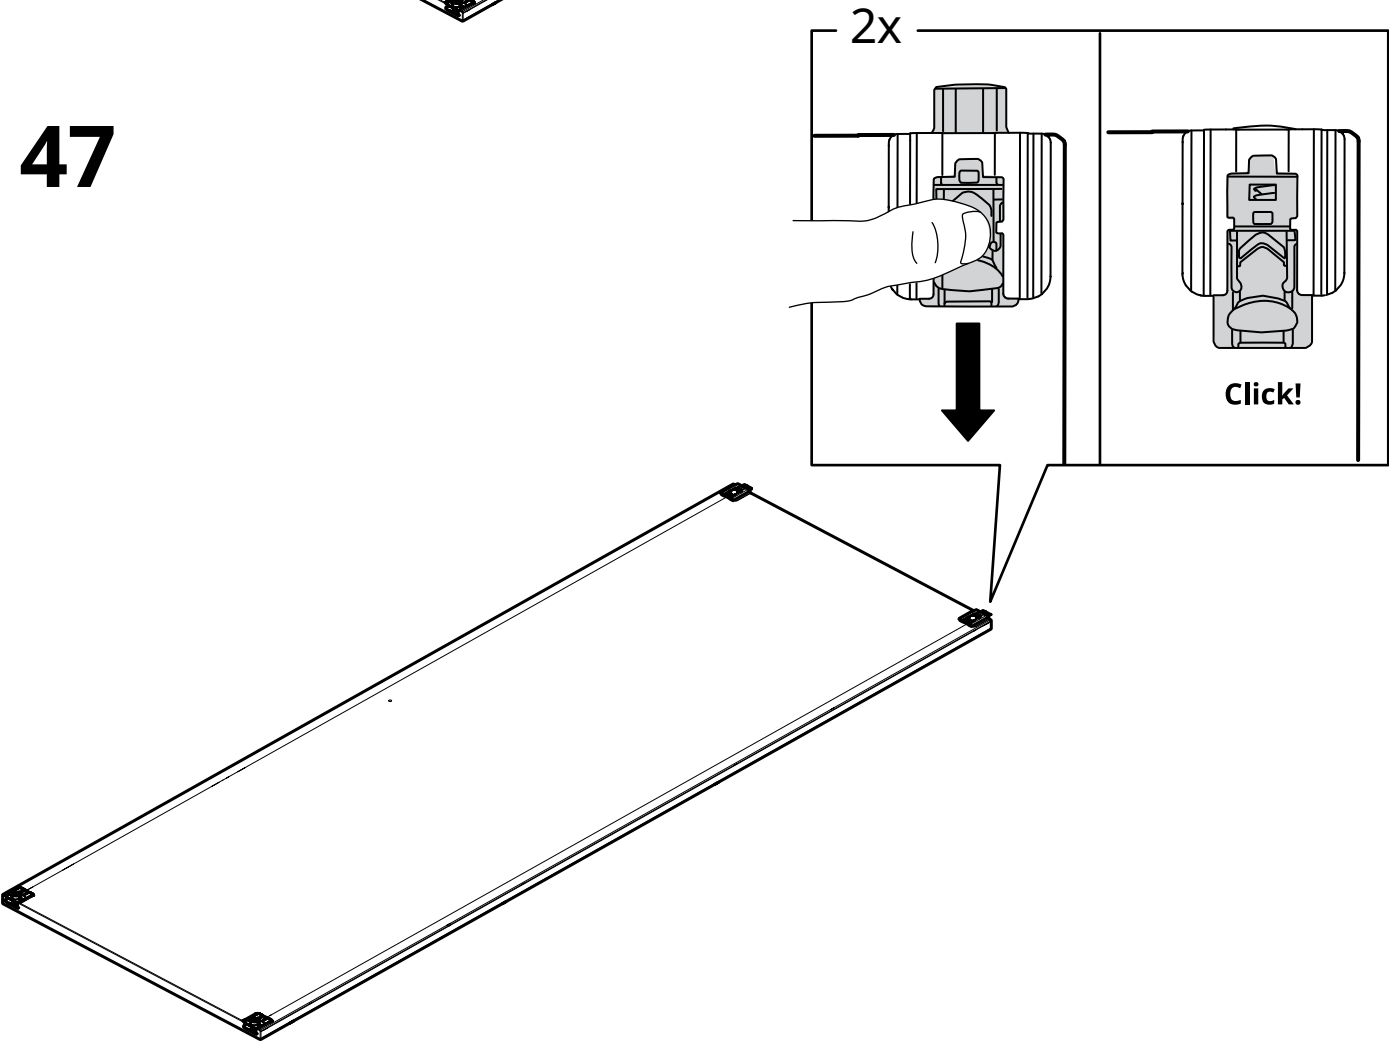 

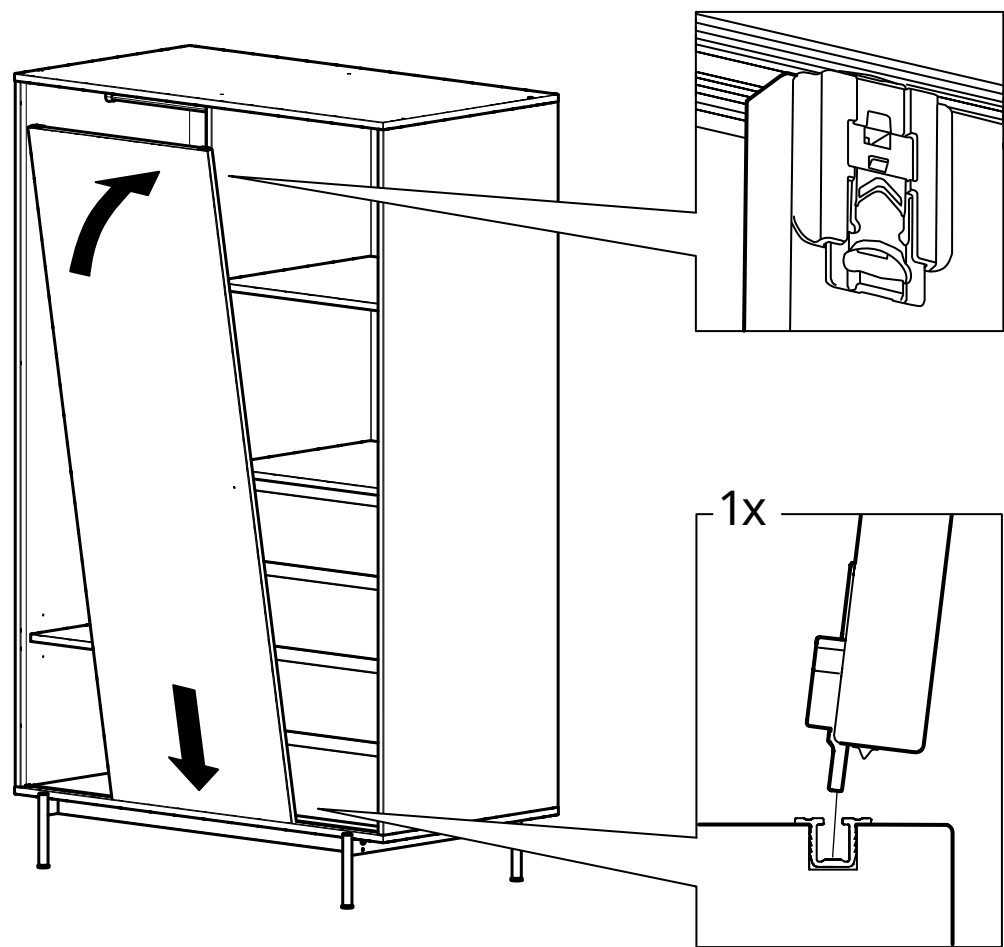 

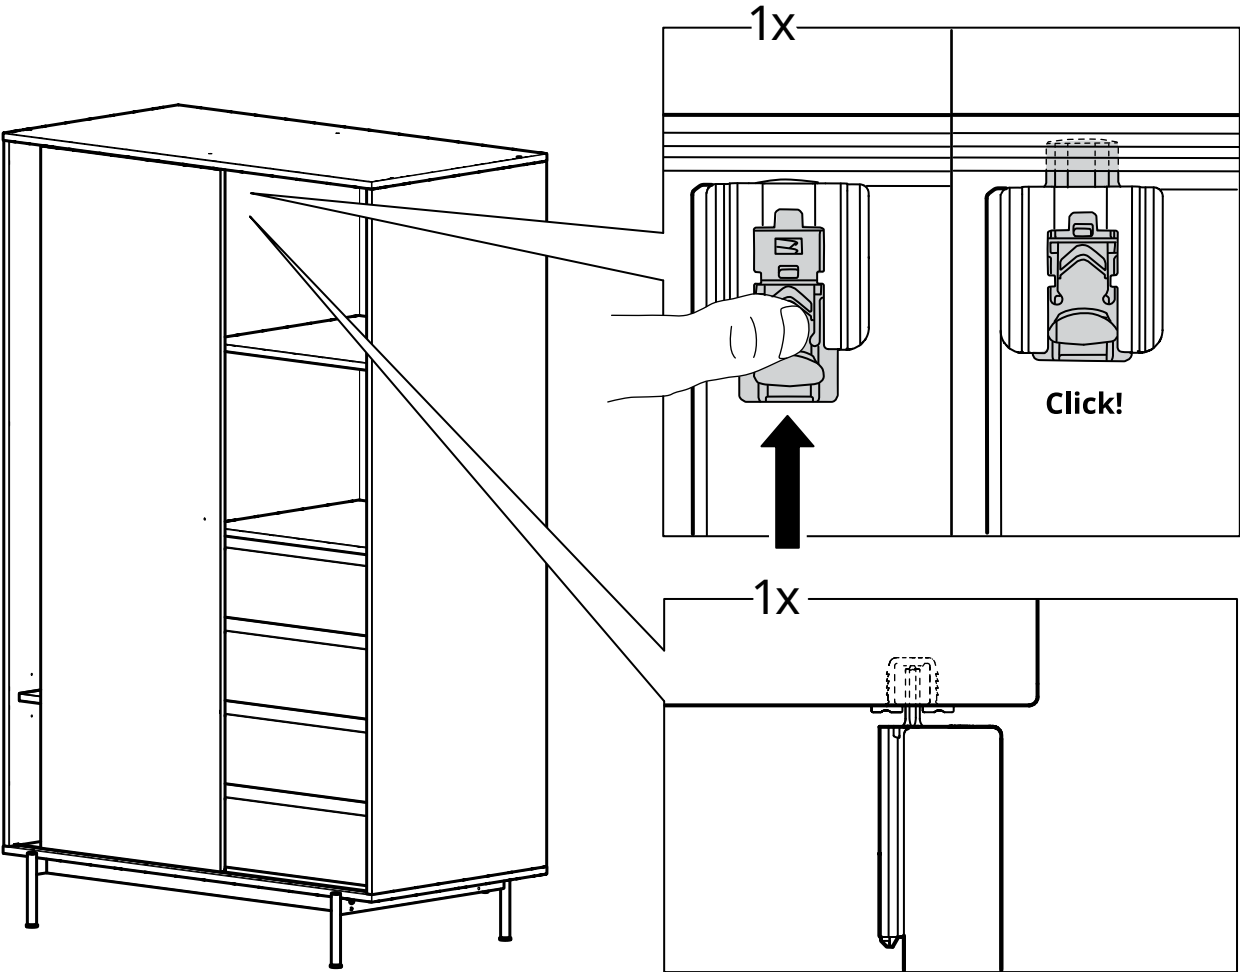 

50

