 


RAKKESTAD

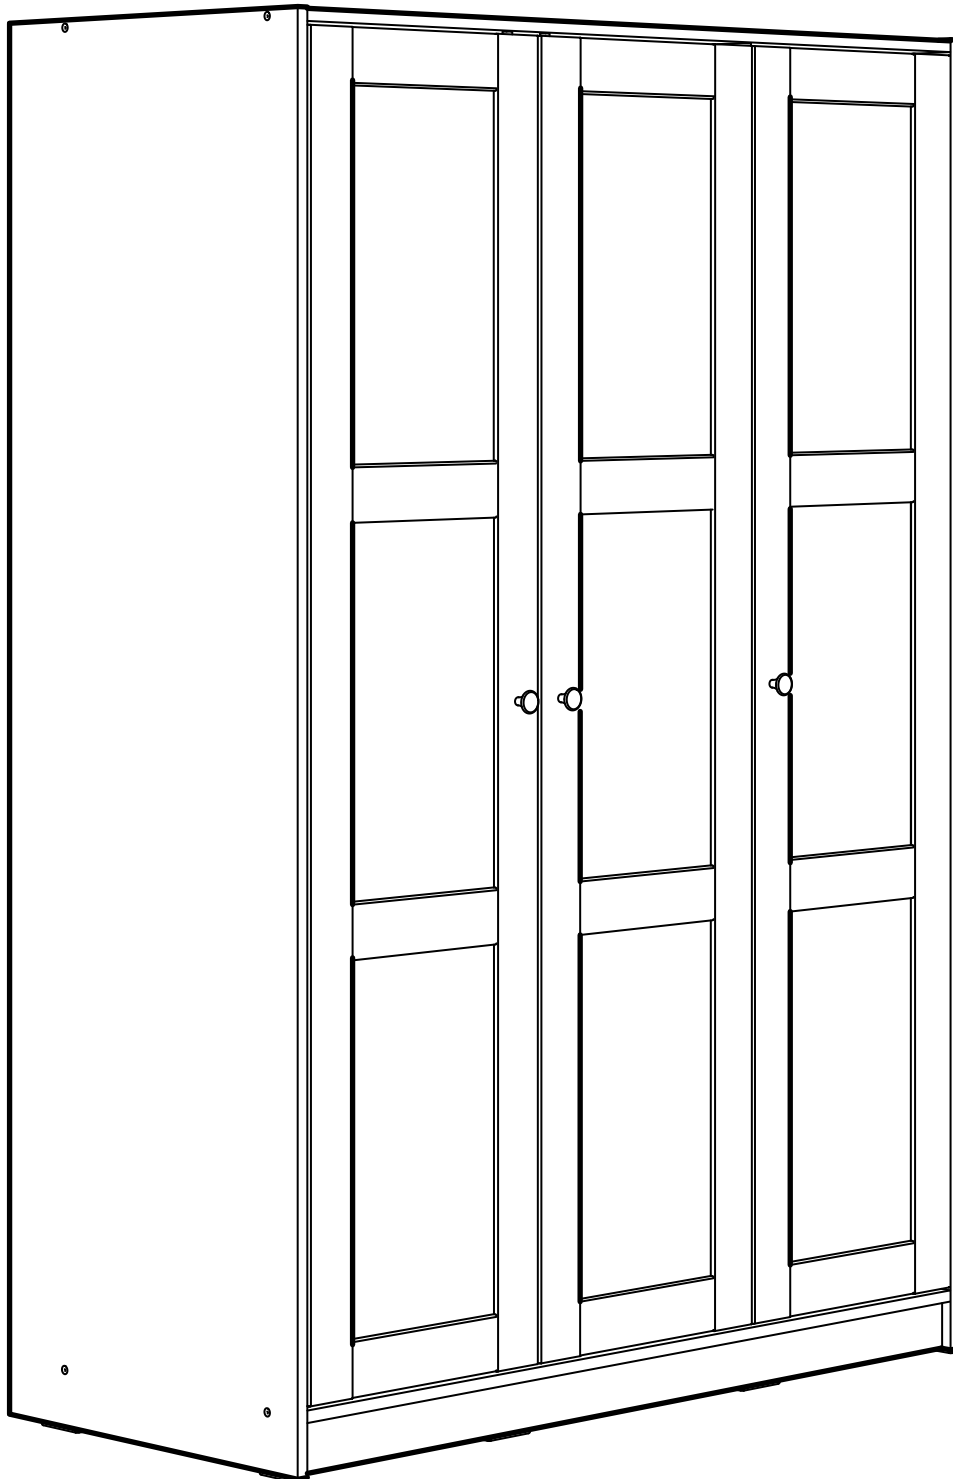

Design and Quality
IKEA of Sweden



English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

 
 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

 
 
 
 
 
 
NEVER open more than one drawer at a time.

Place heaviest items in the lowest drawers.


English

Read and follow each step of the instruction carefully.

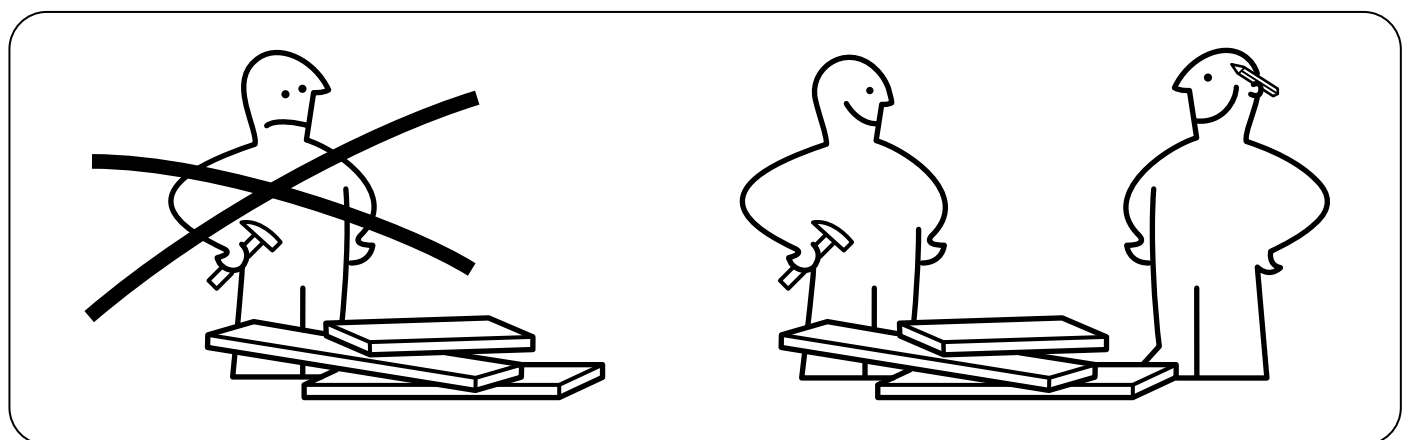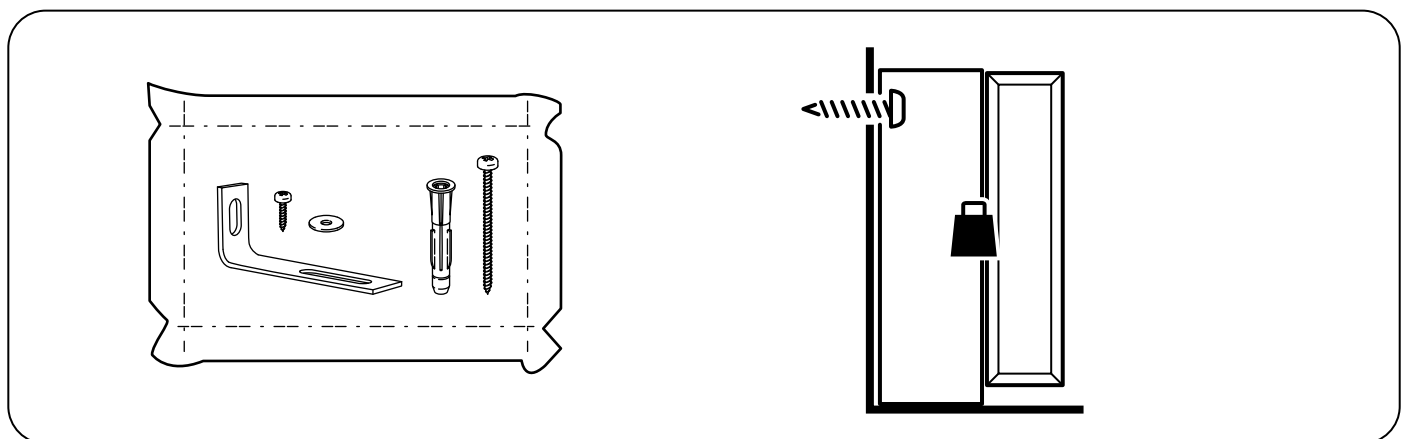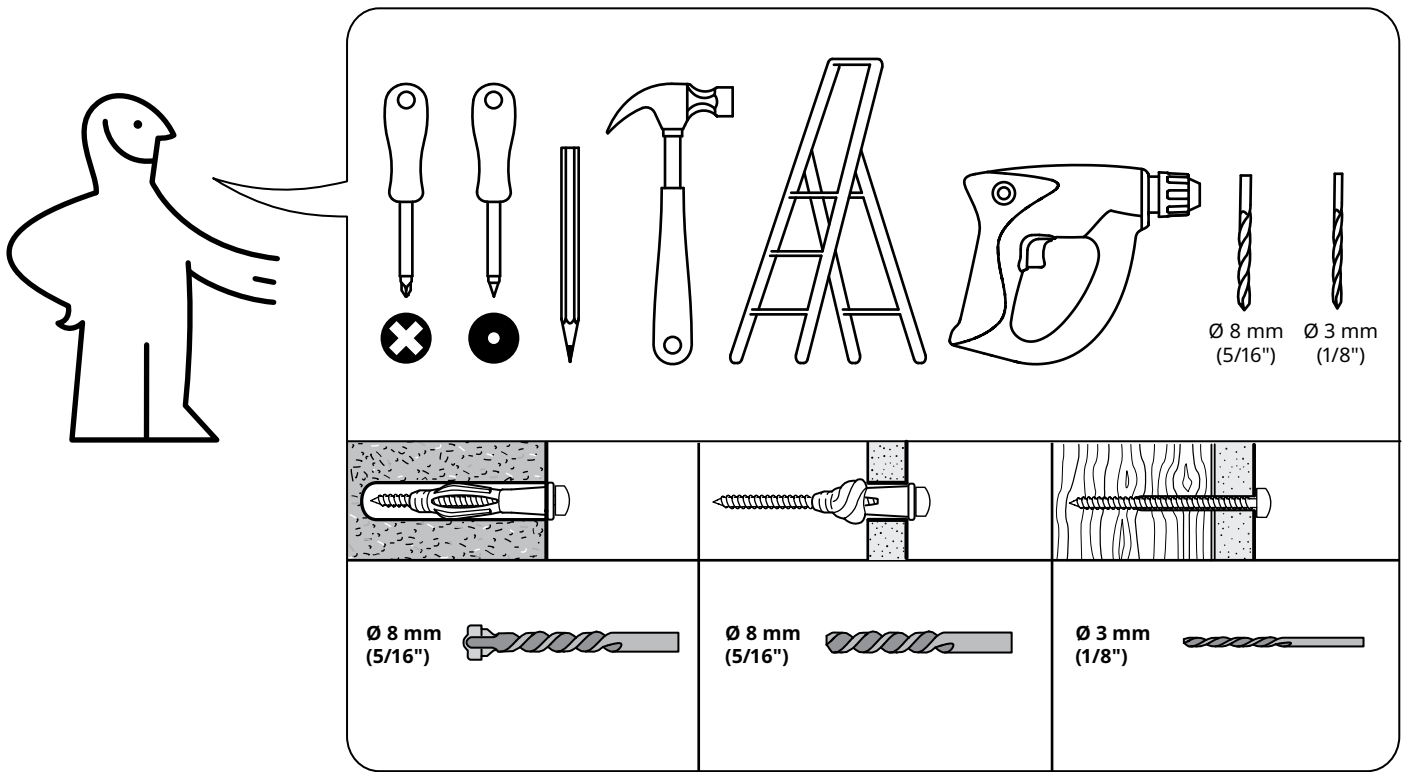

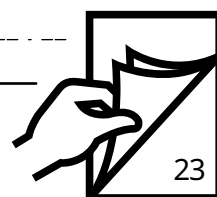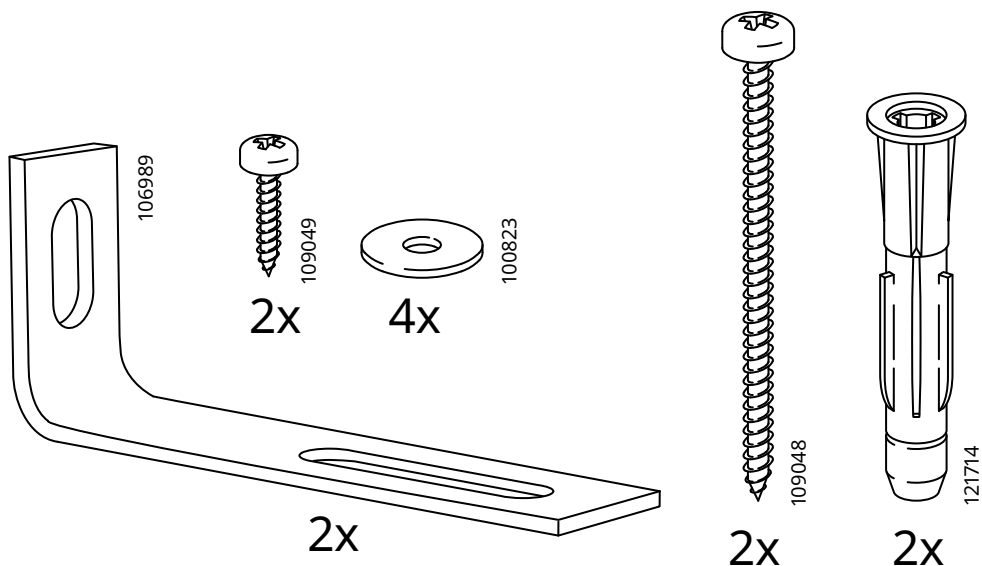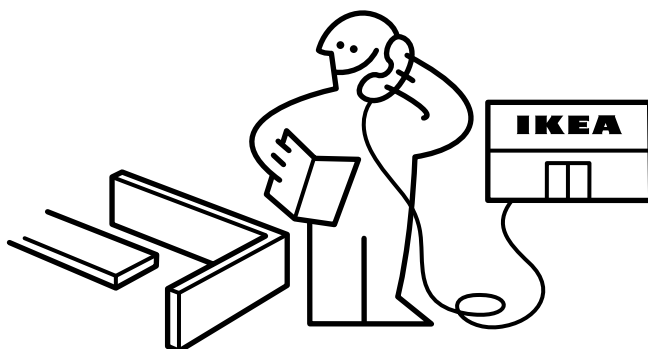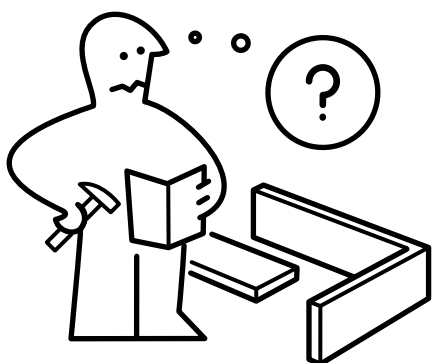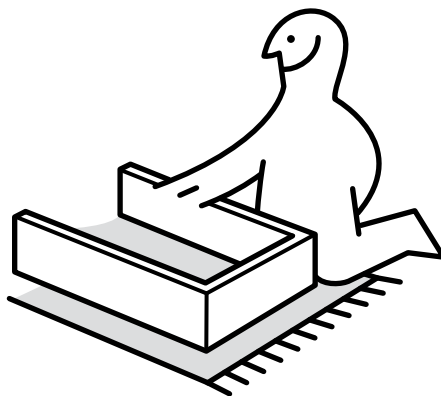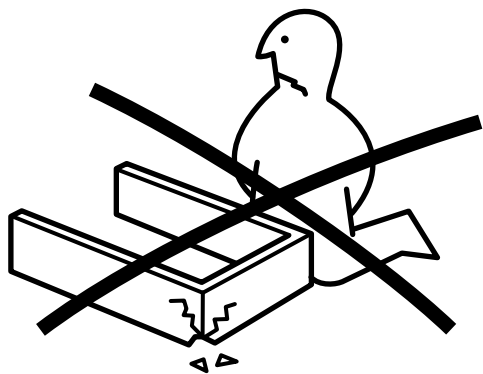


326949

 


100219

 16x




101345

 38x




109567

 3x




105248

 38x




109041

 2x




109837

 4x

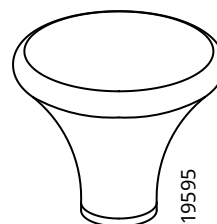


119595

 3x

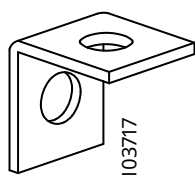


103717

 1x




107091

 1x

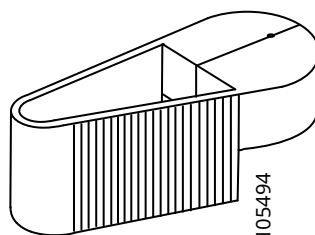


105494

 1x

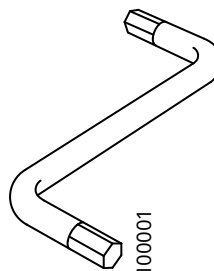


100001

 1x

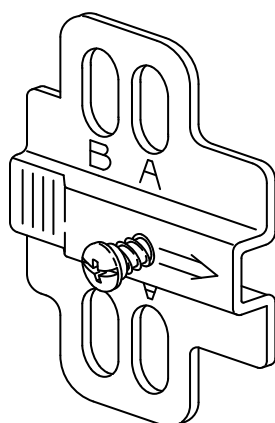


109221

 9x

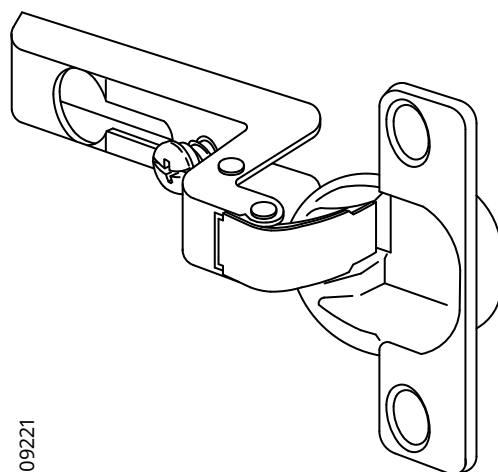


109338

 9x

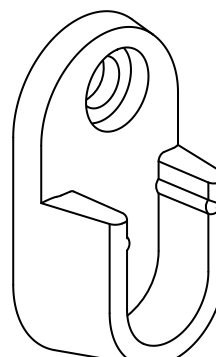


157308

 2x

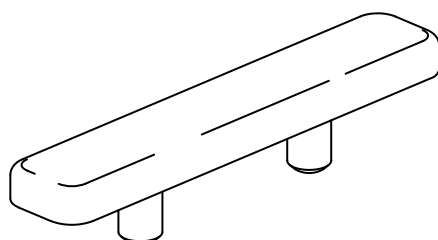


158568

 8x

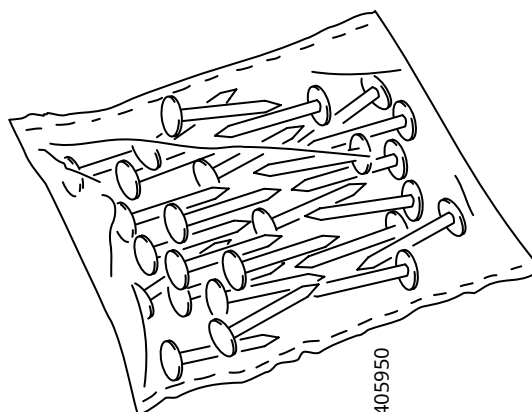





405950

 2x




146857

    
1x

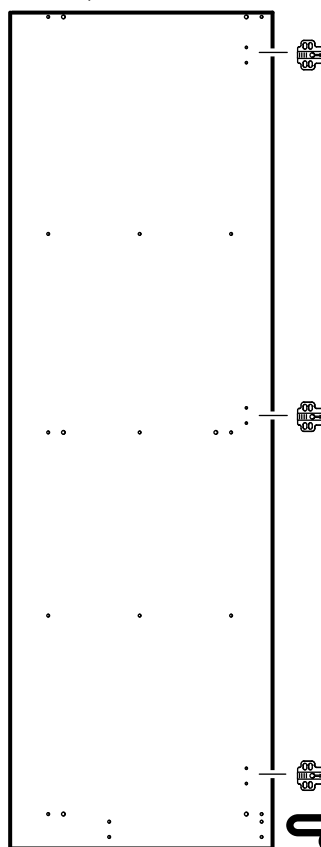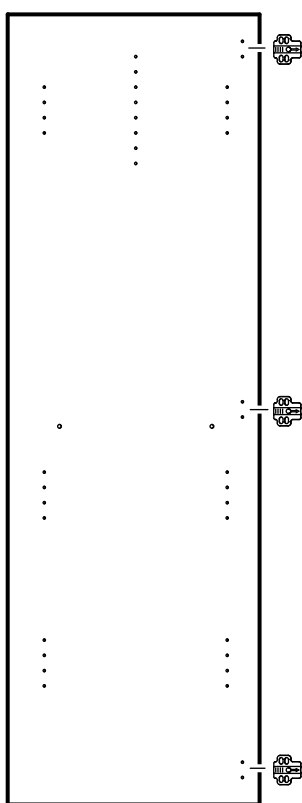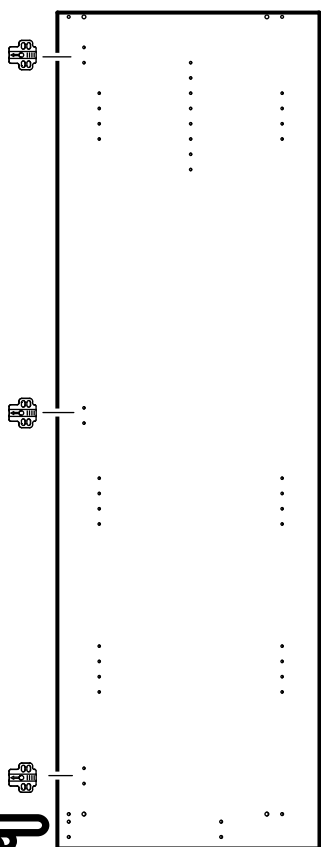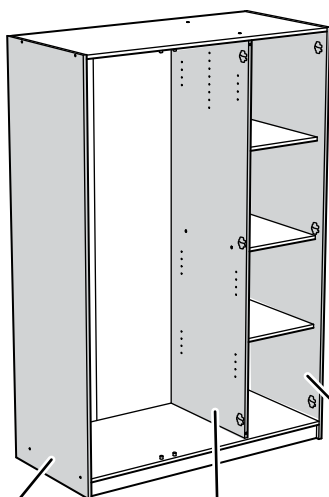





1

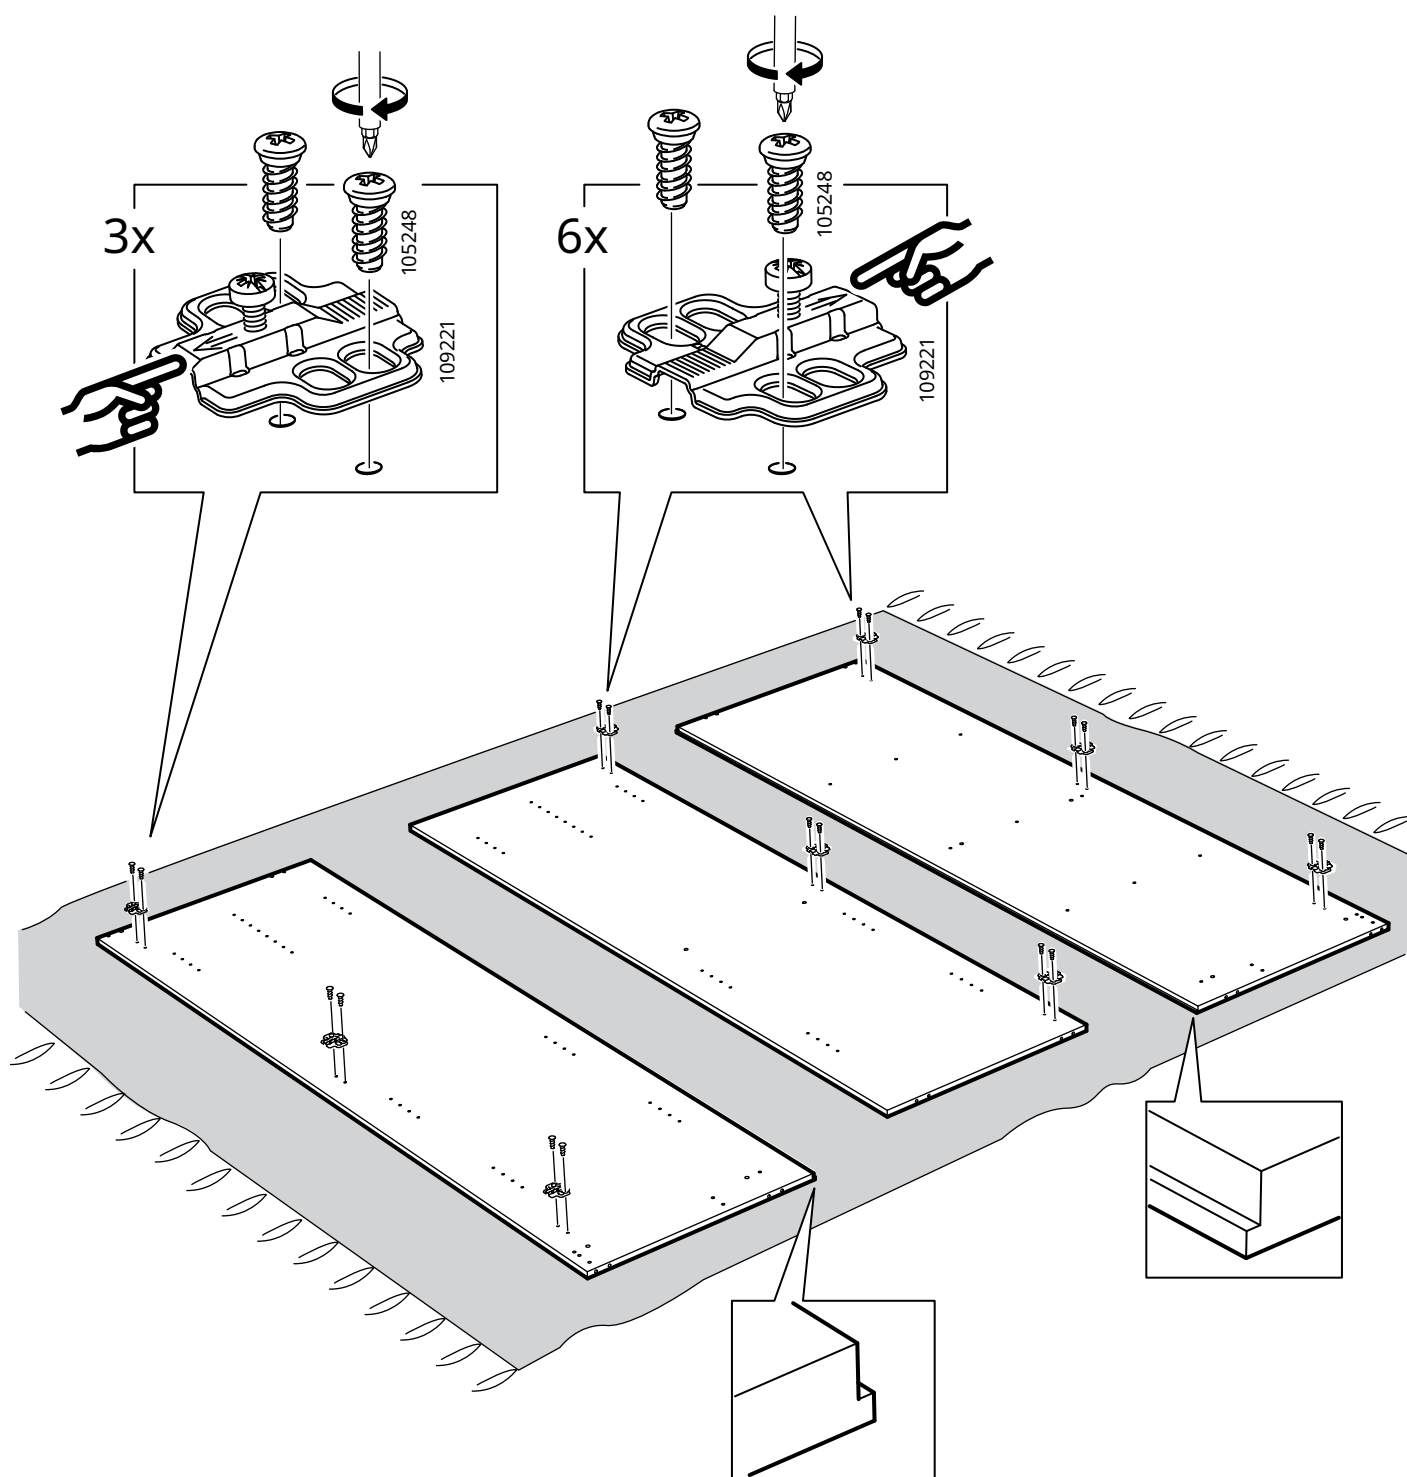 


2

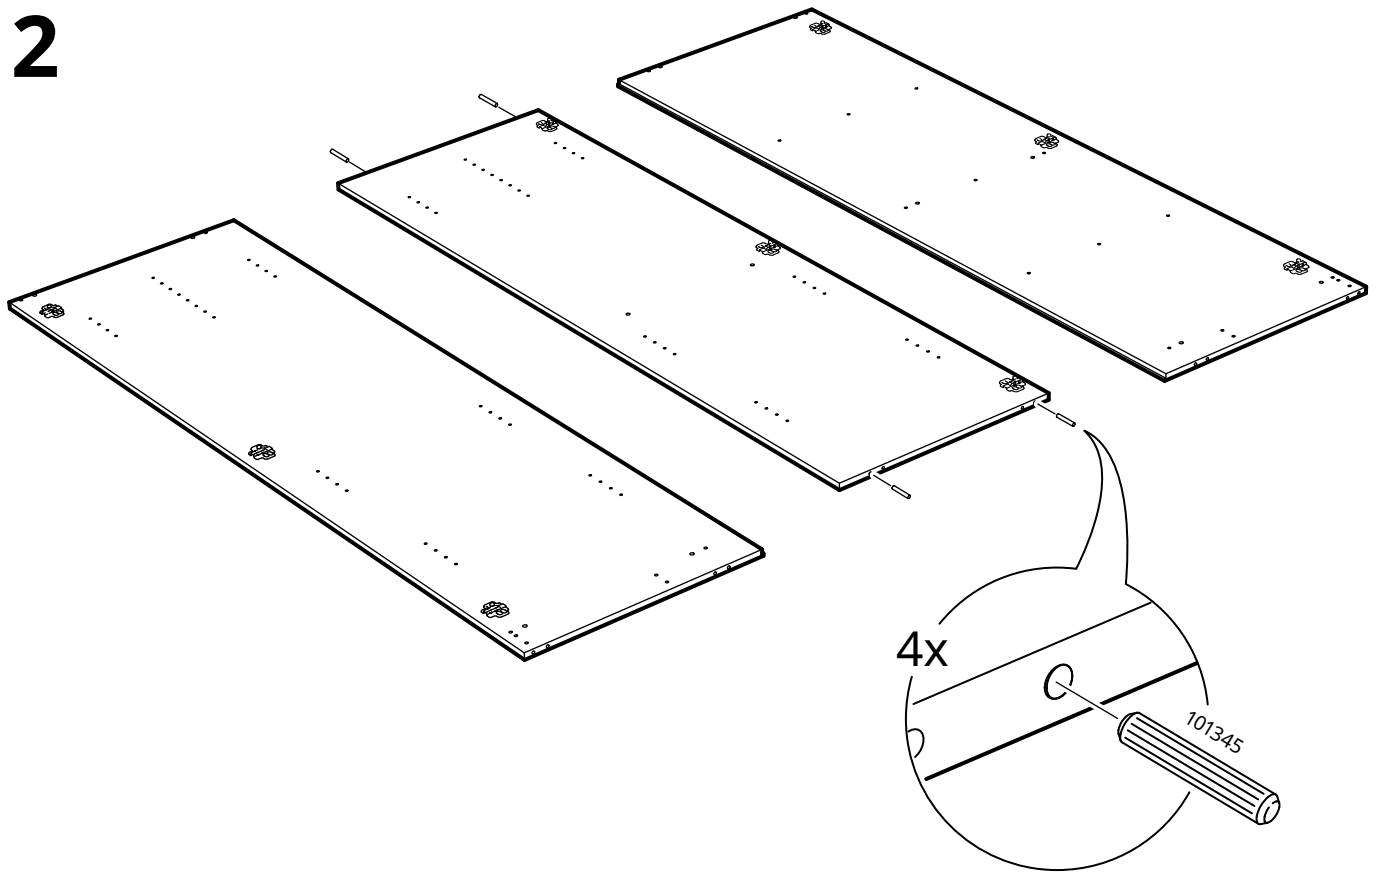 


3

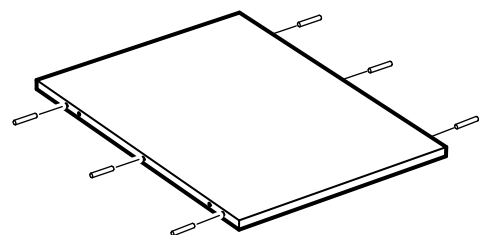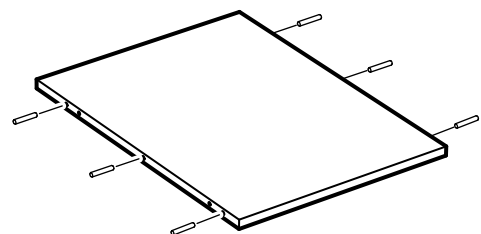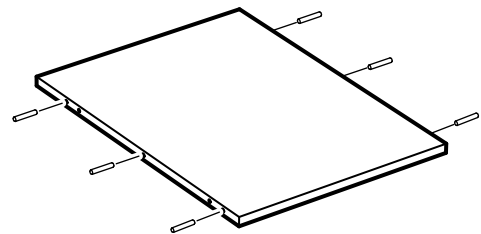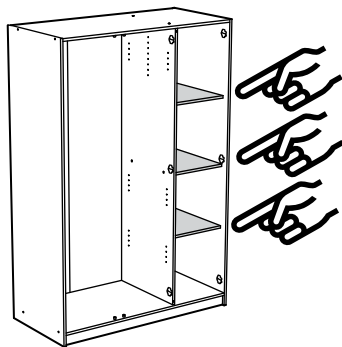    


4

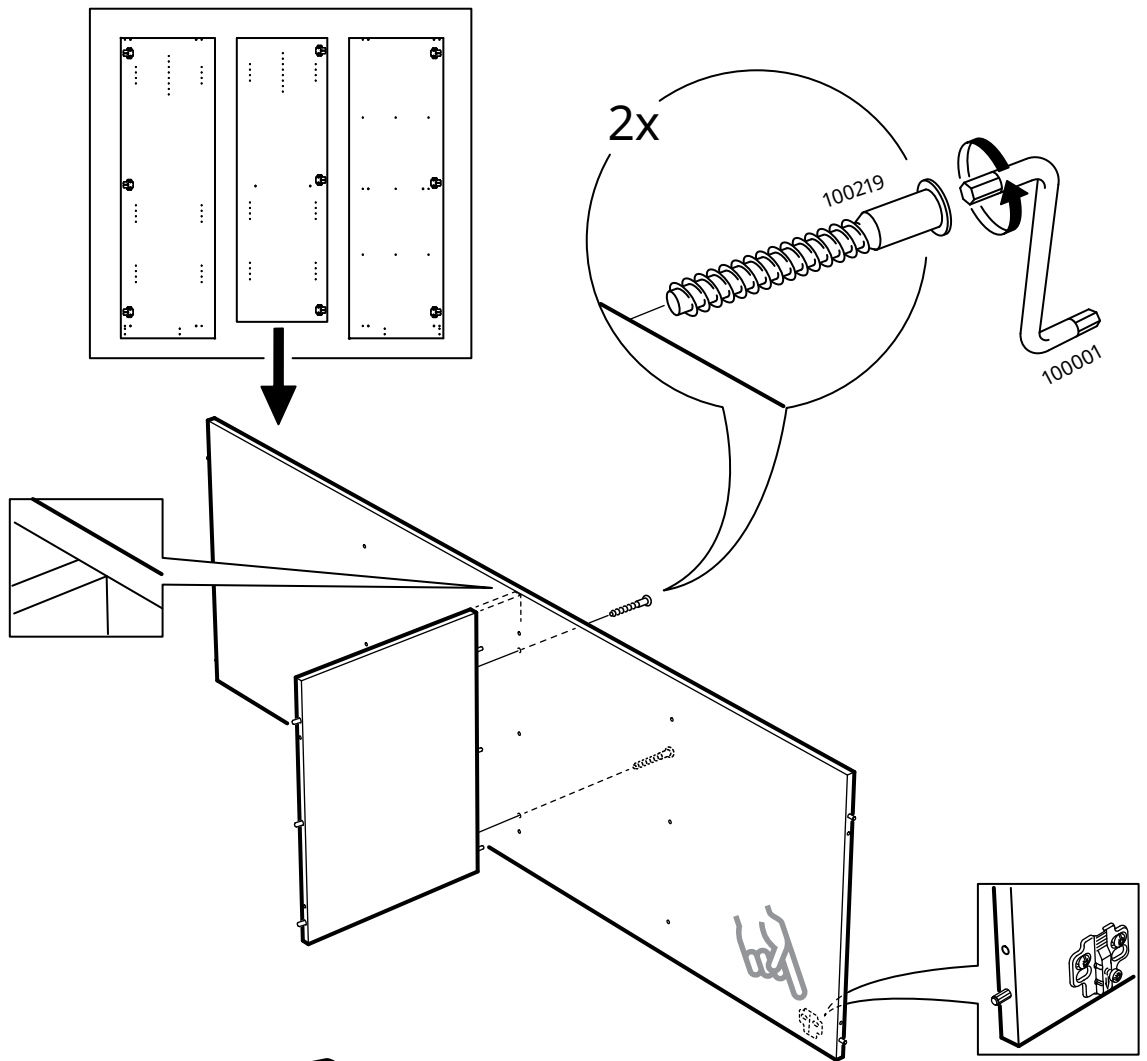 


5

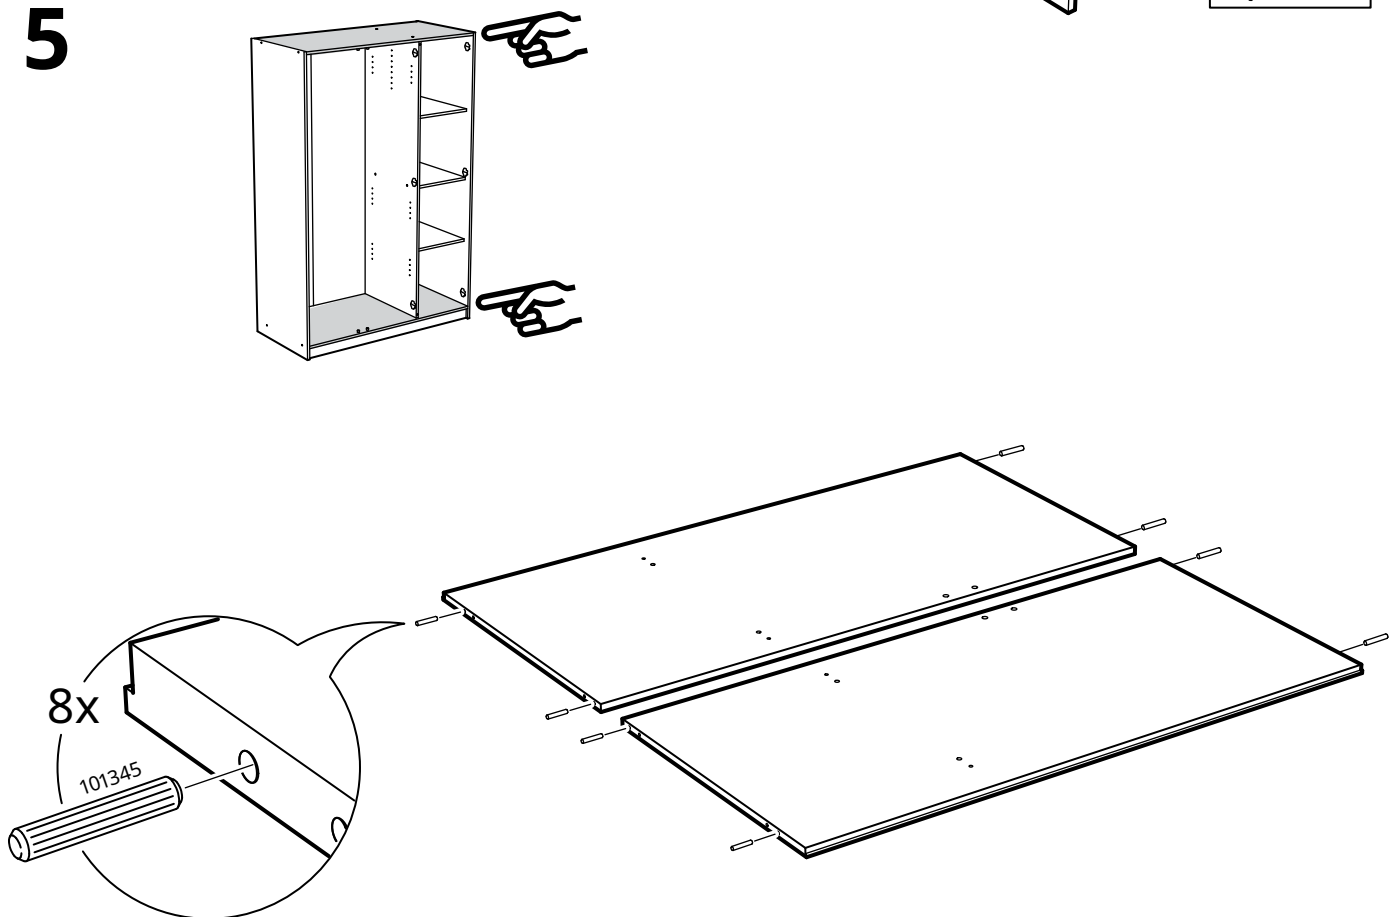 


6

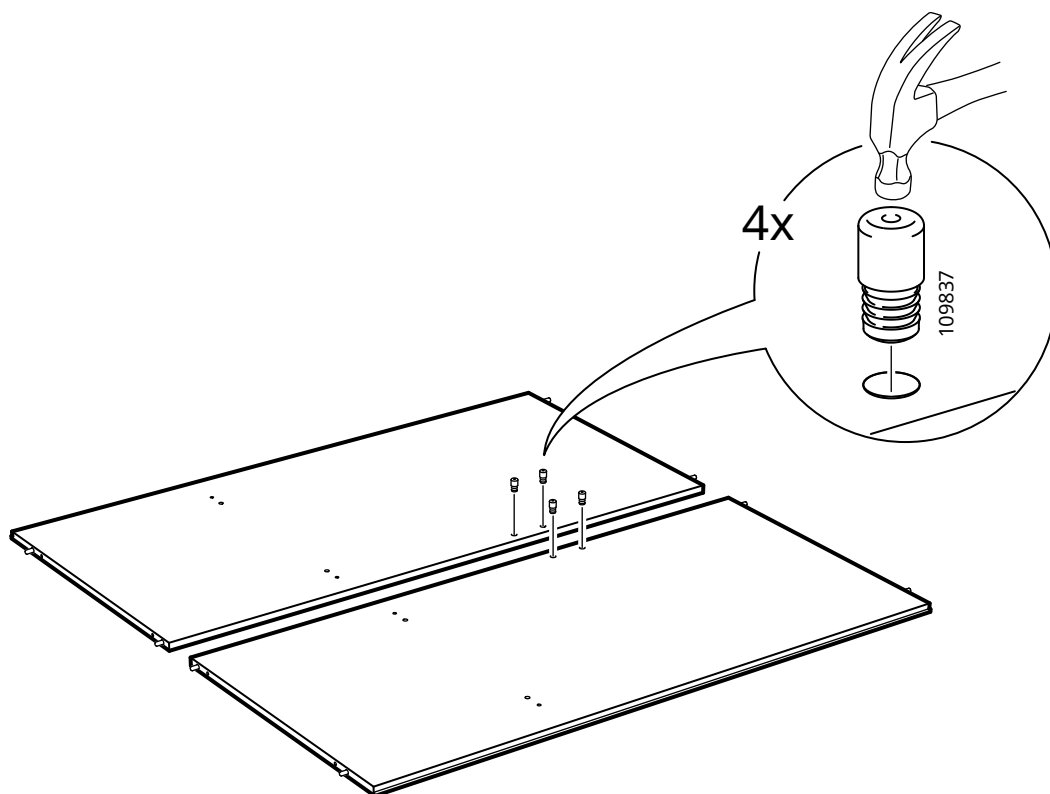 


7

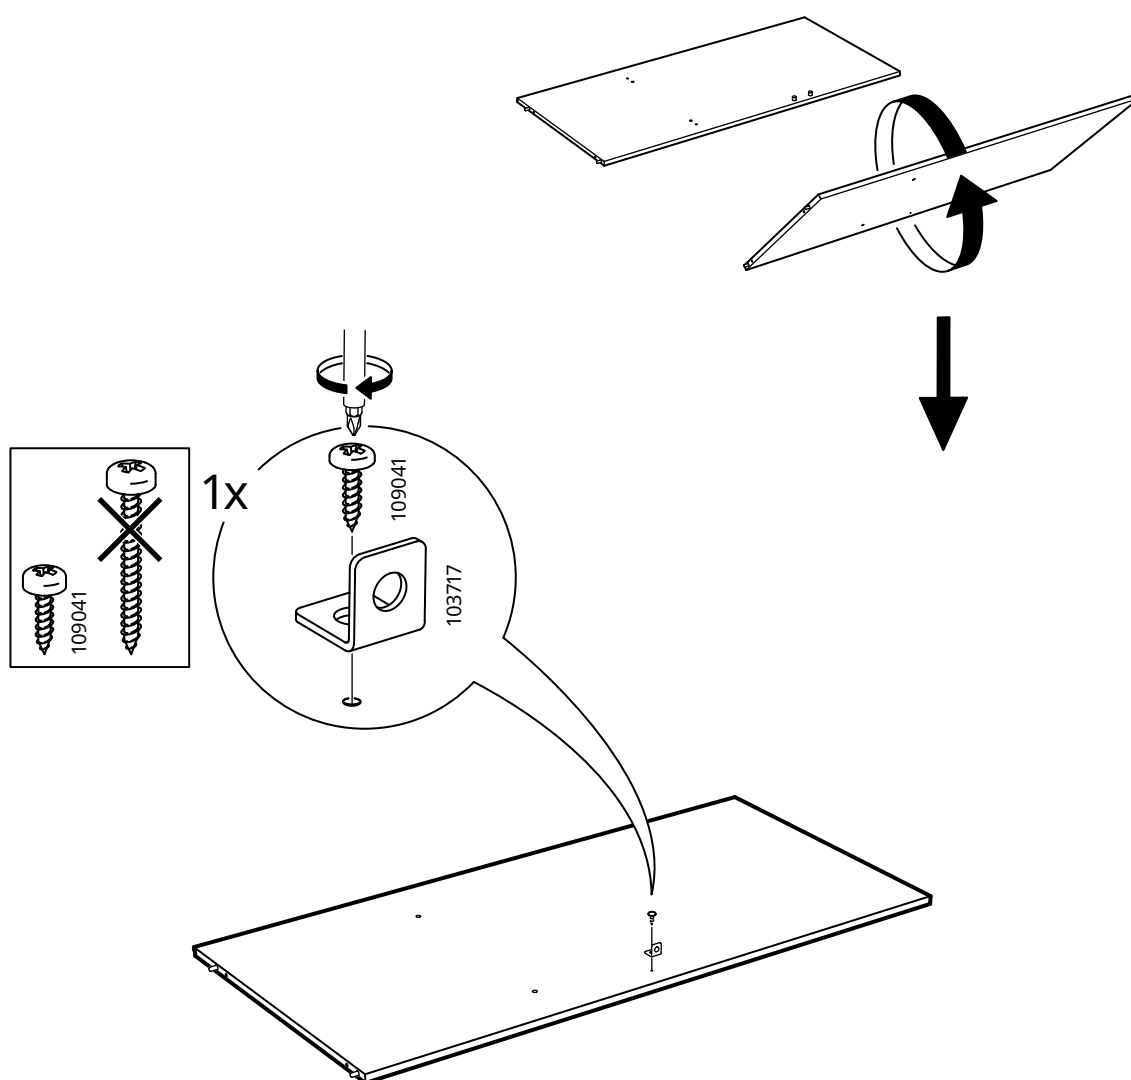 


8

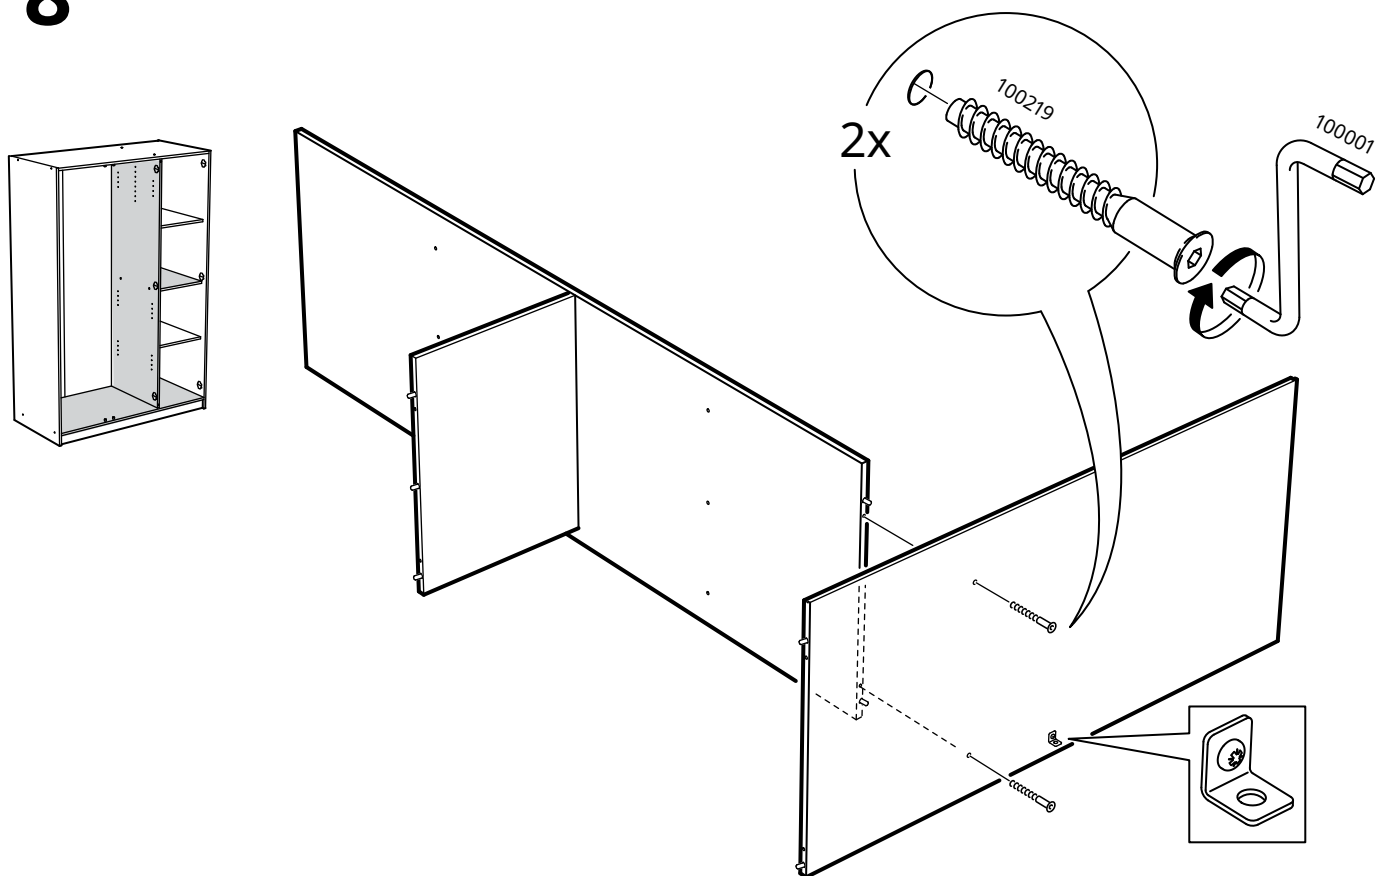 


9

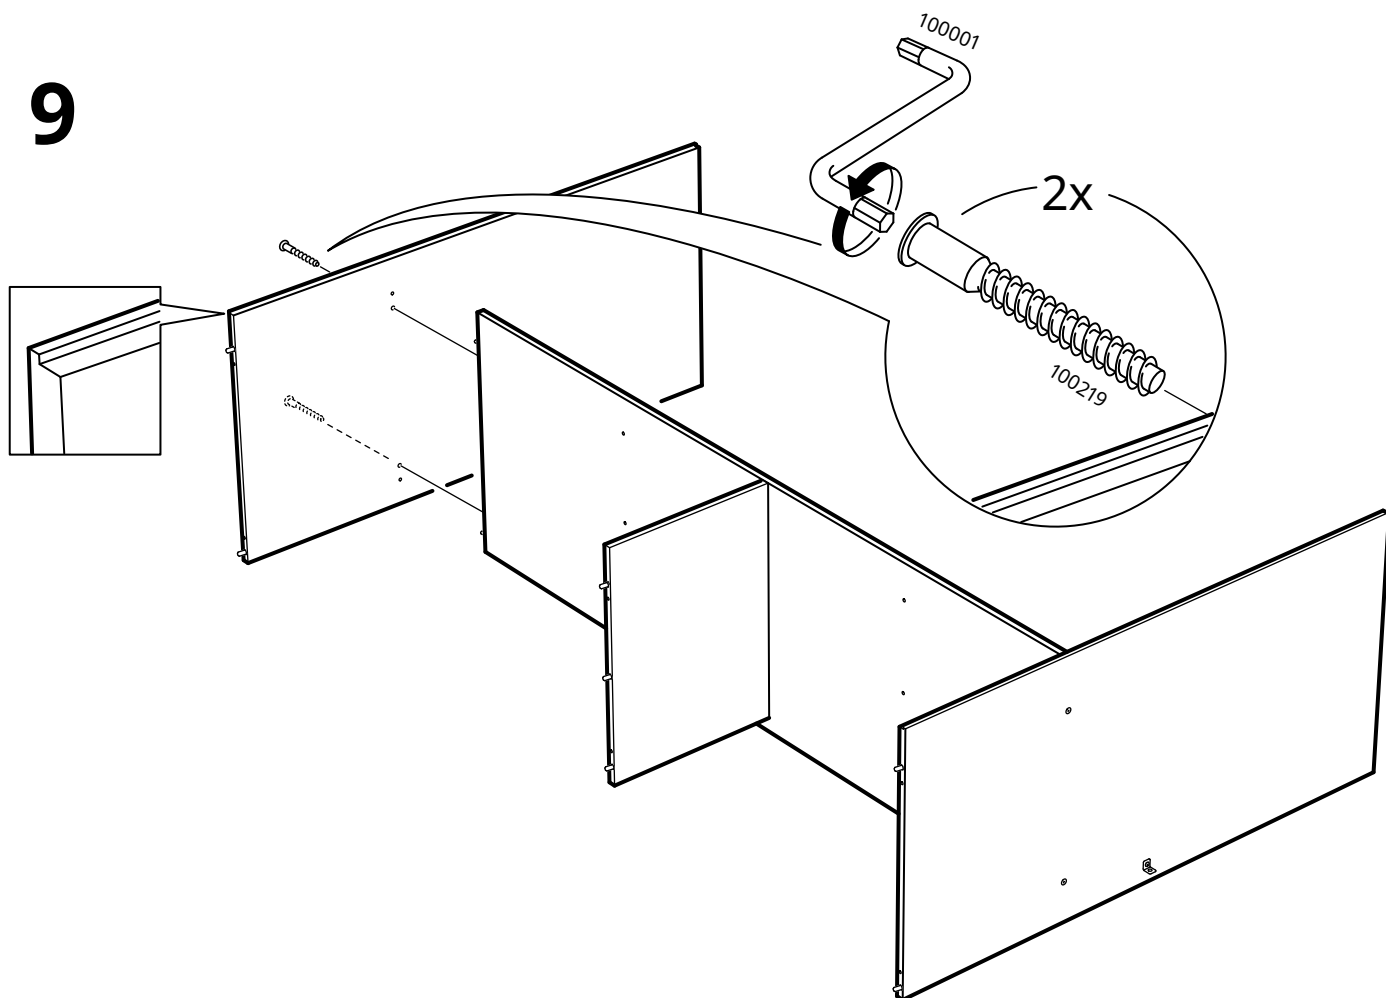 


10

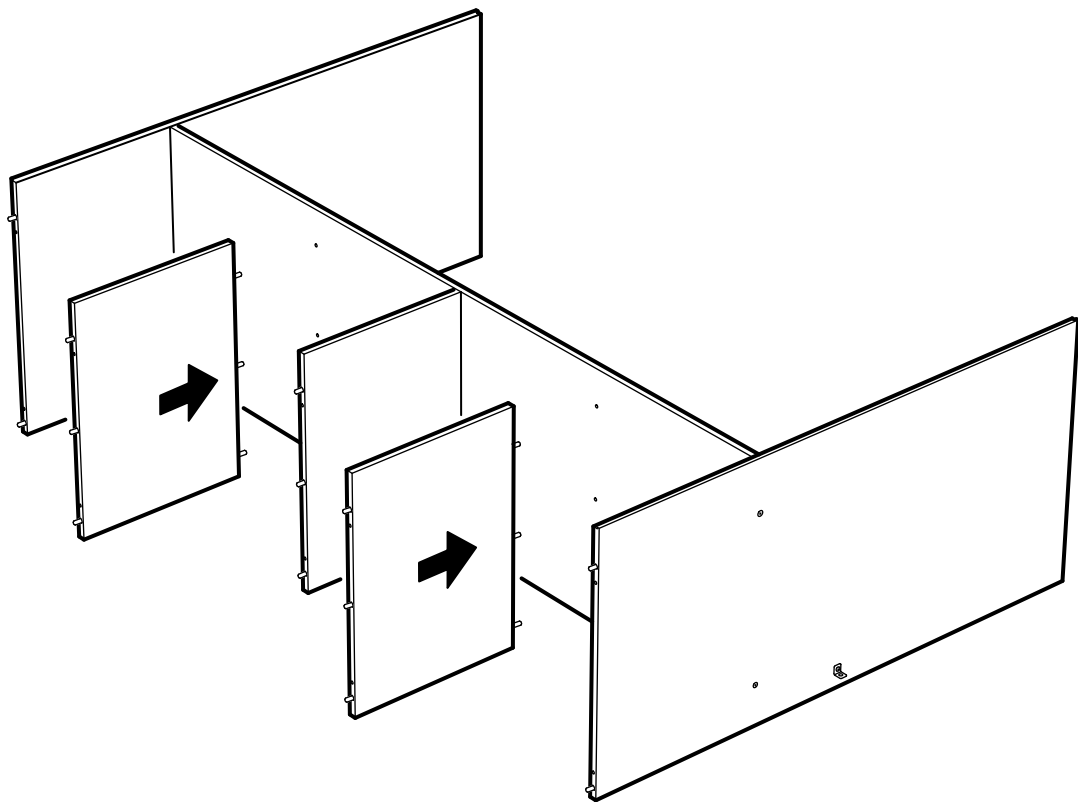 


11

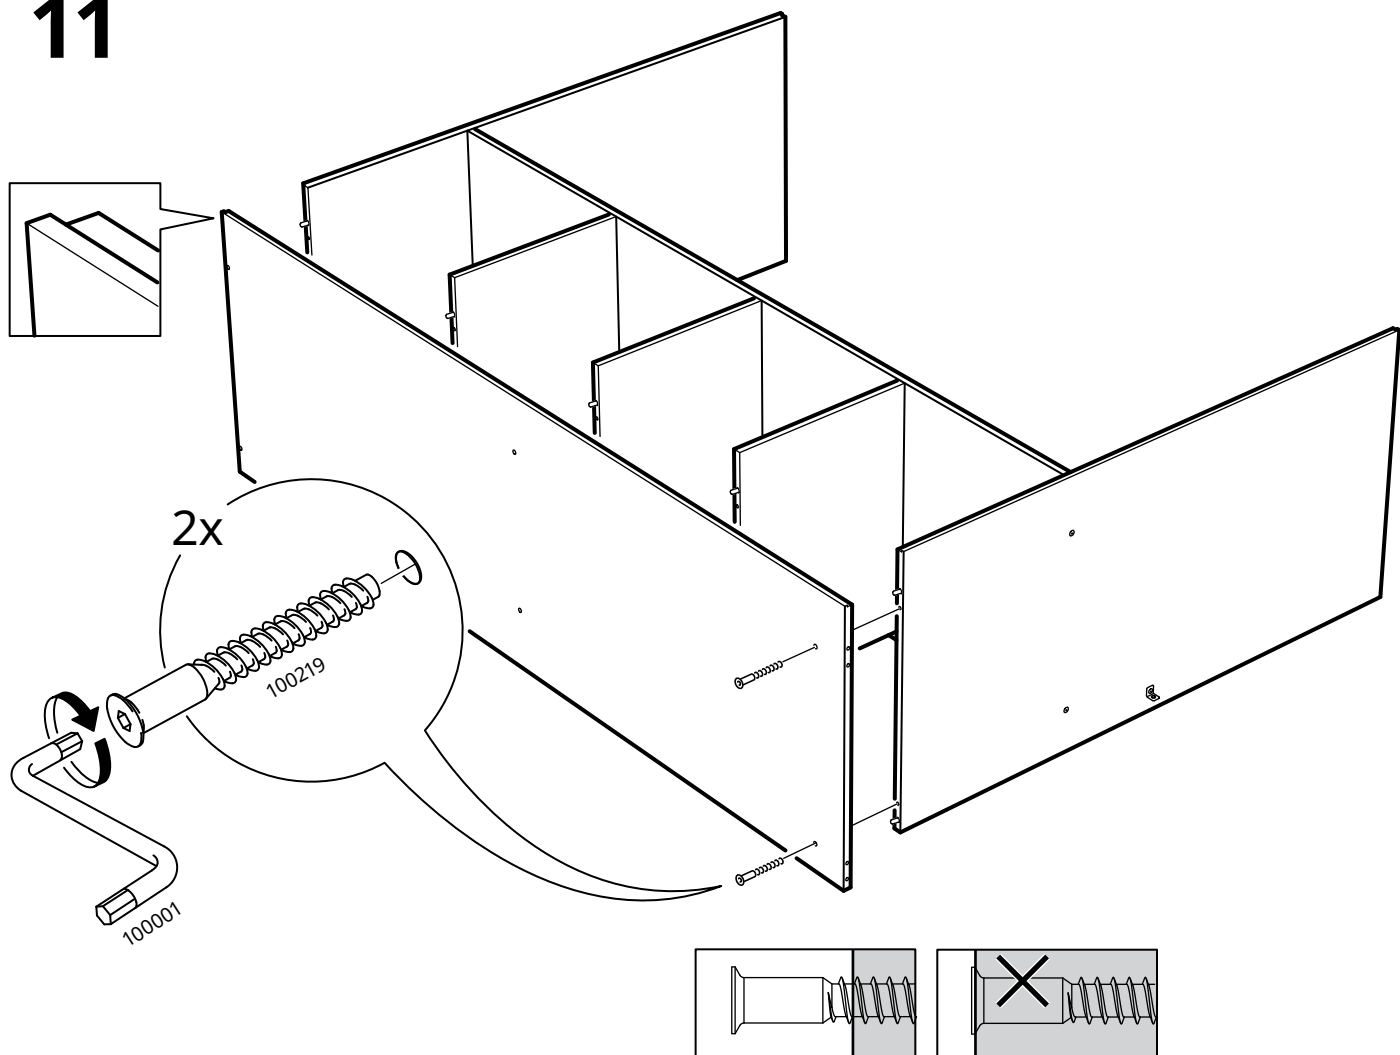 


12

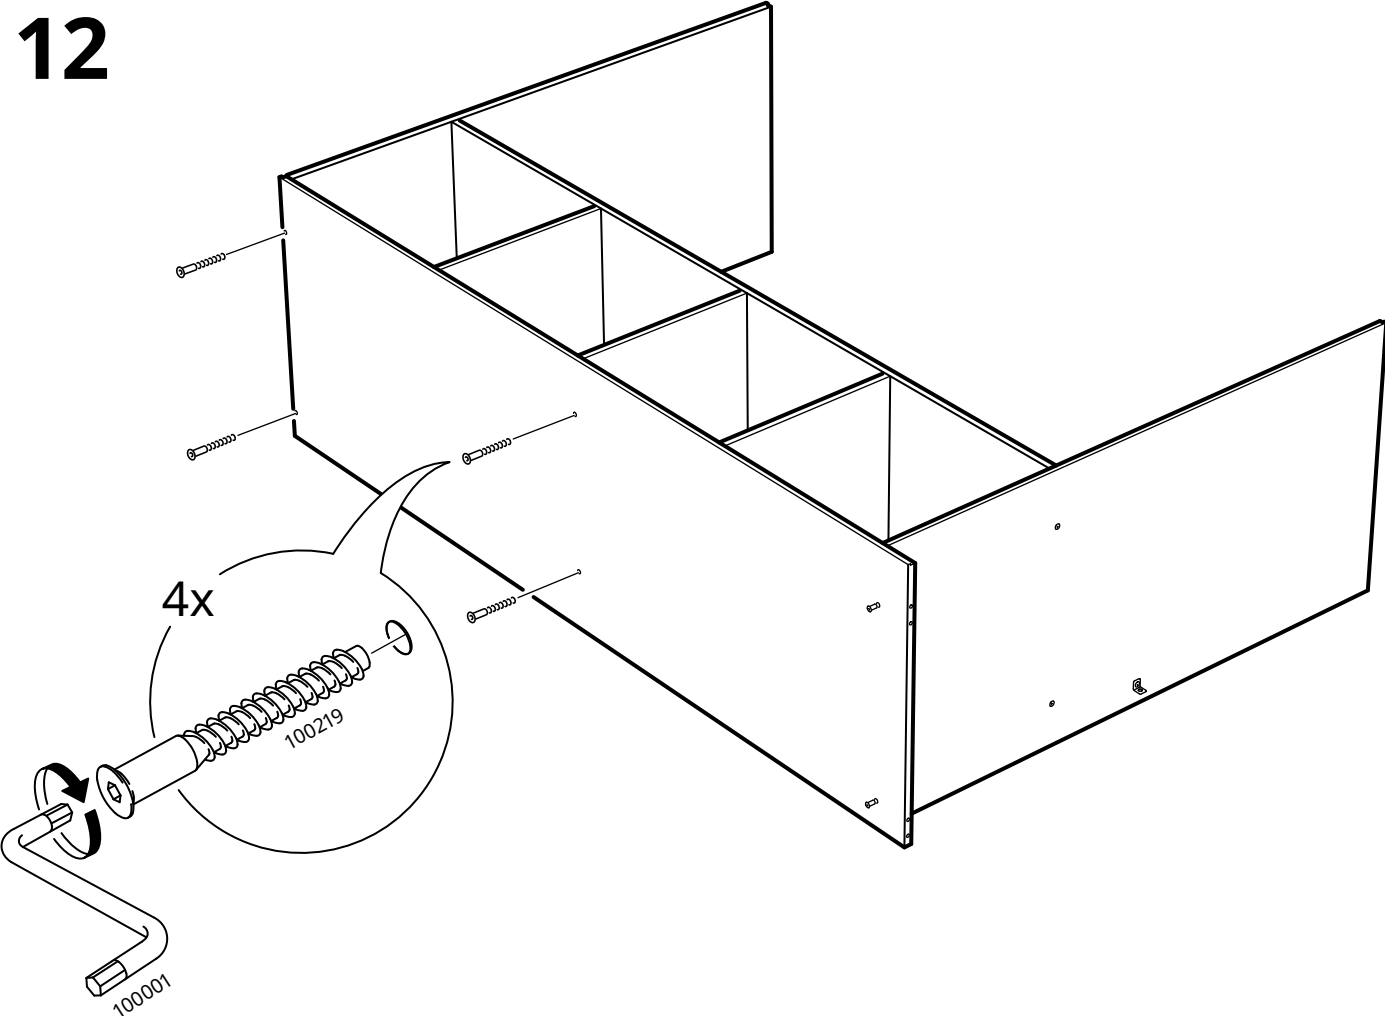 


13

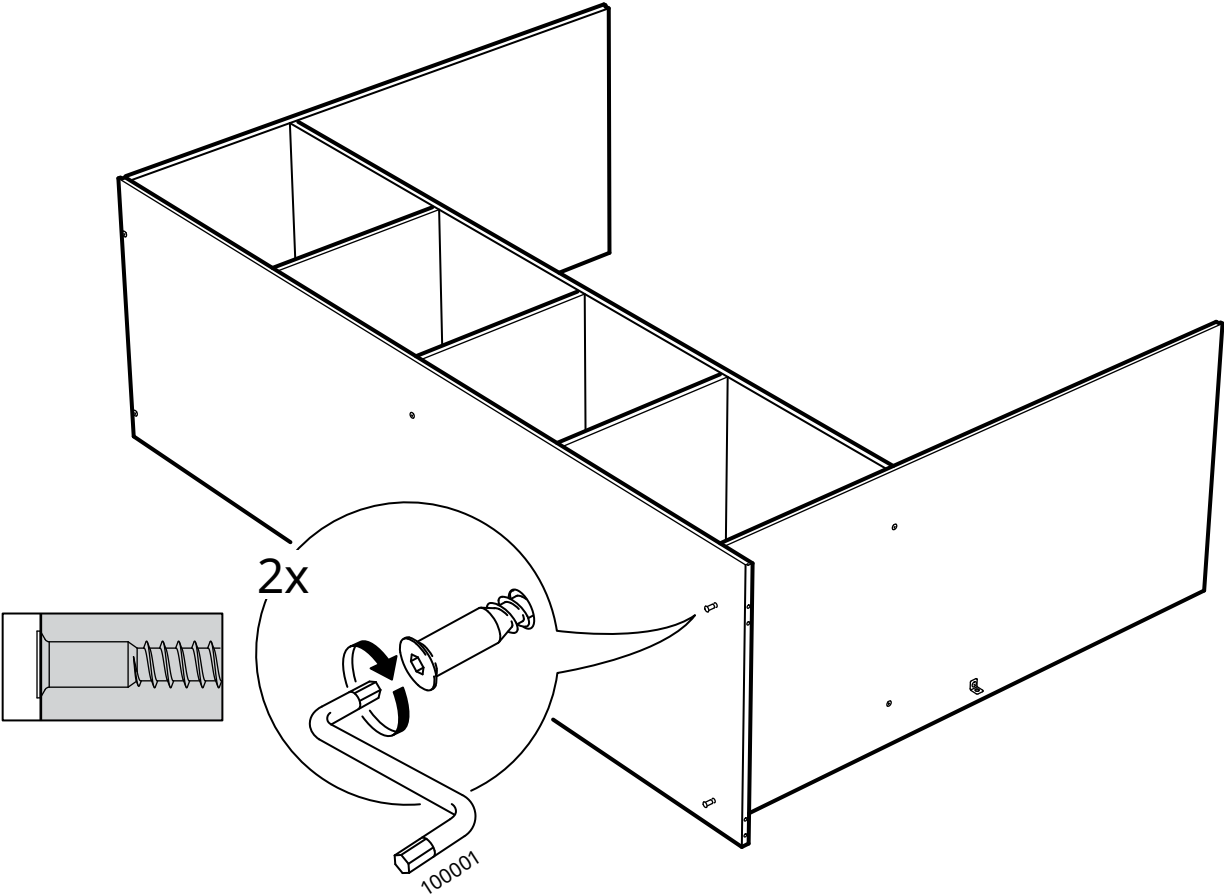 


14

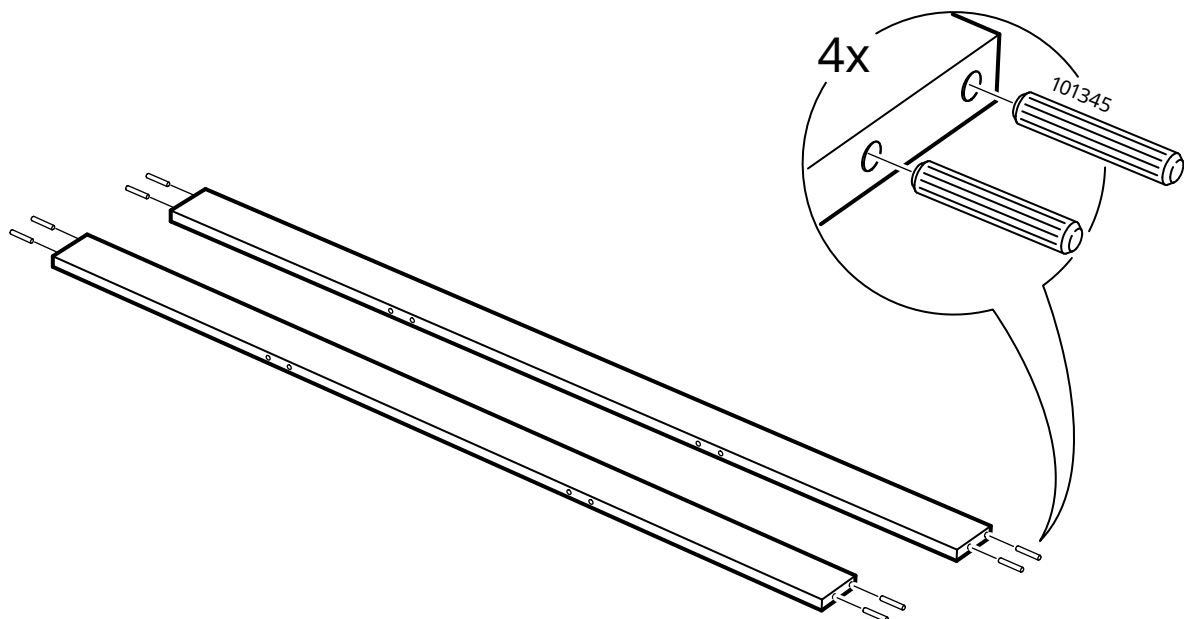 


15

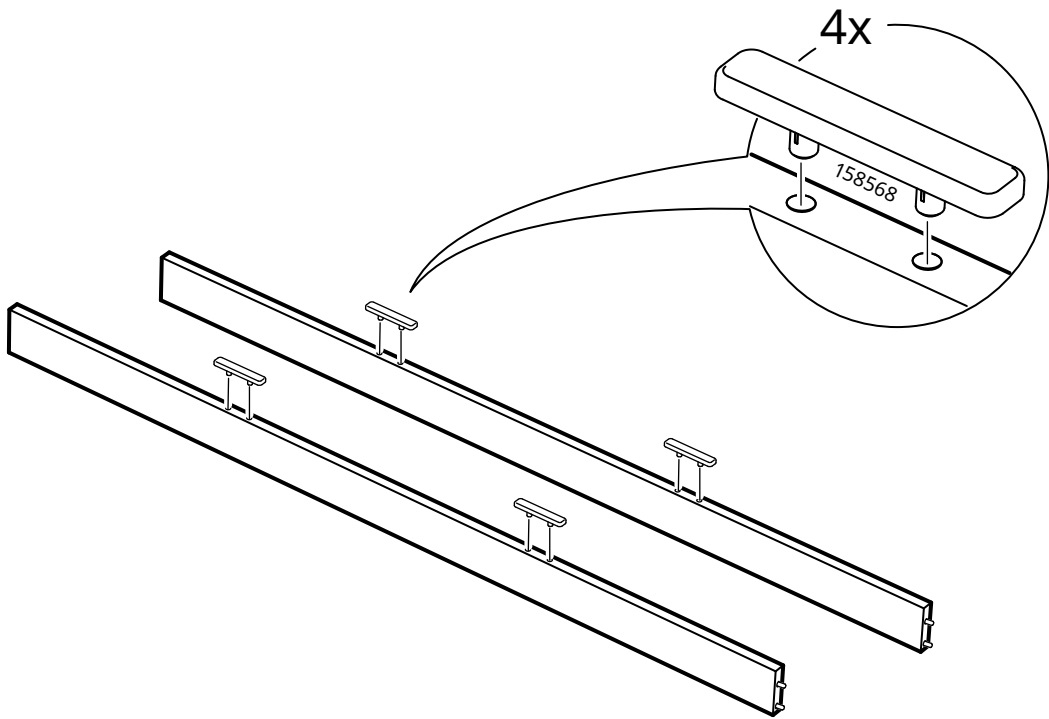 



16

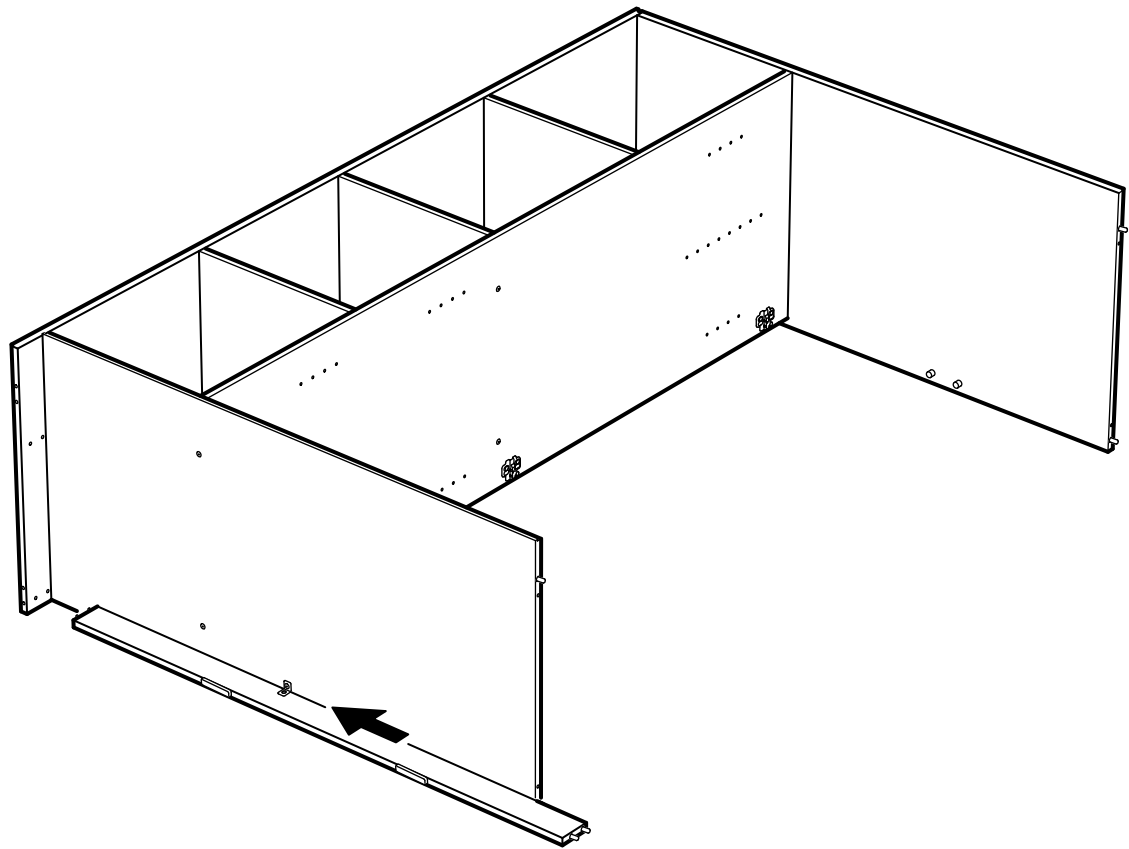 


17

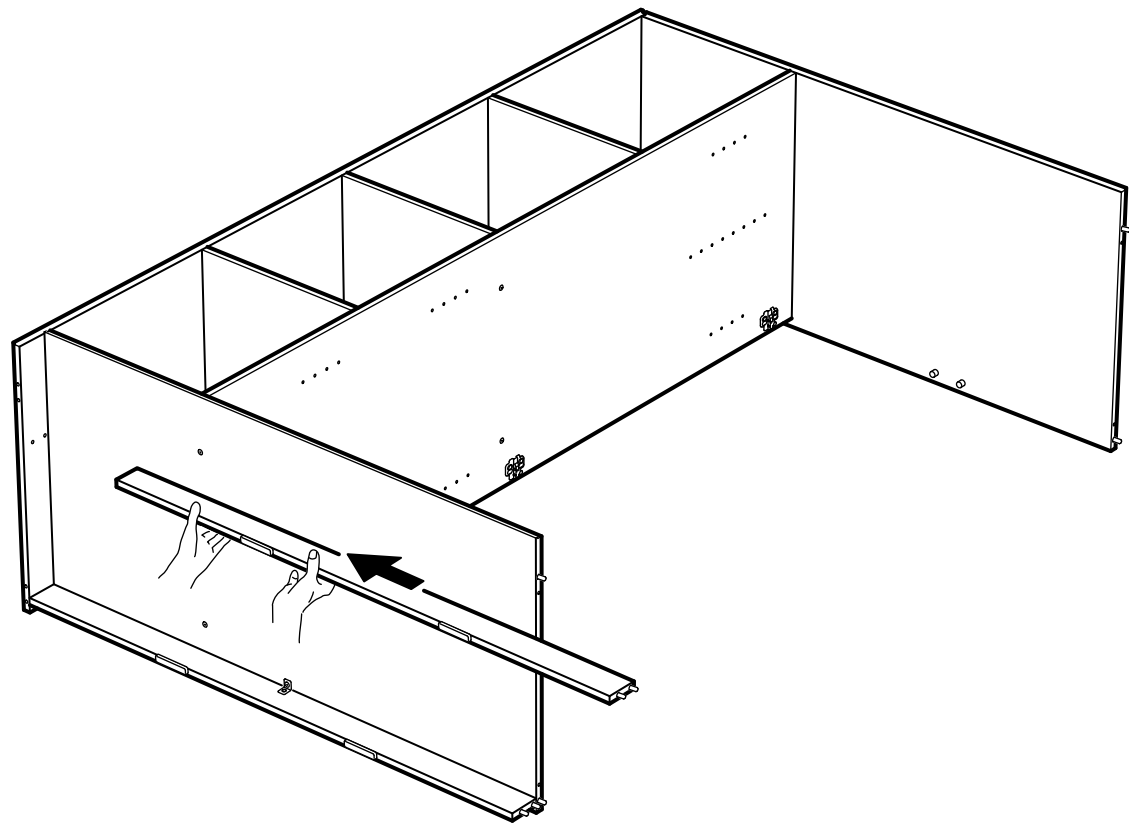 

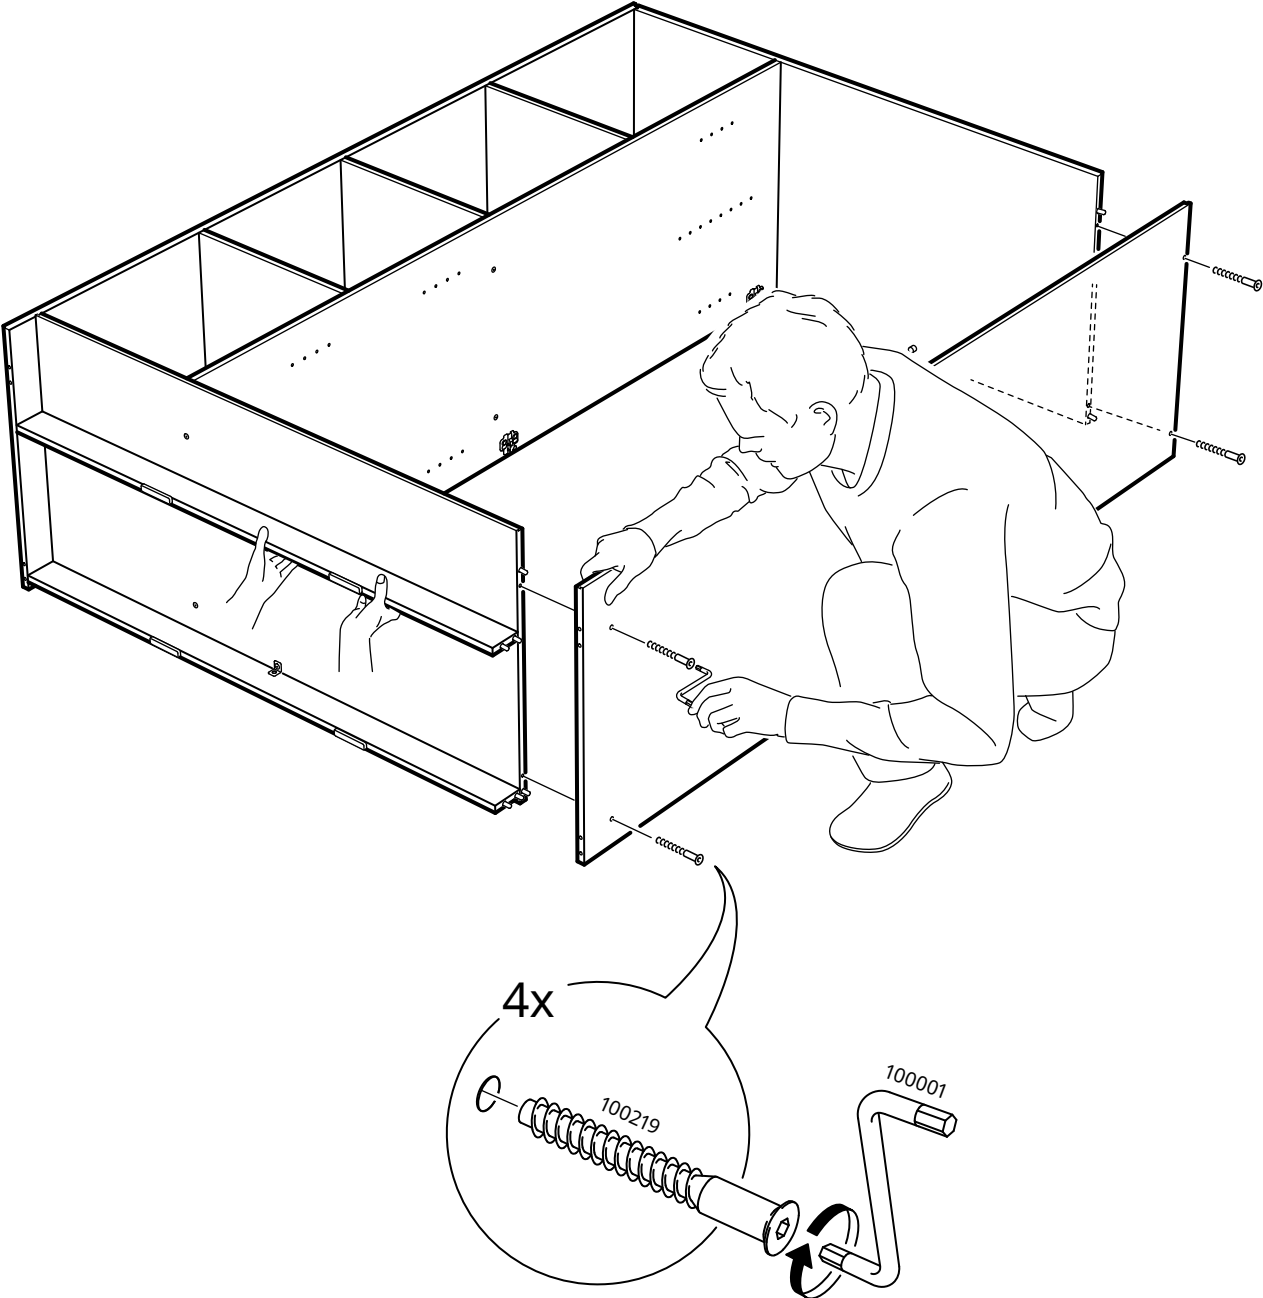 


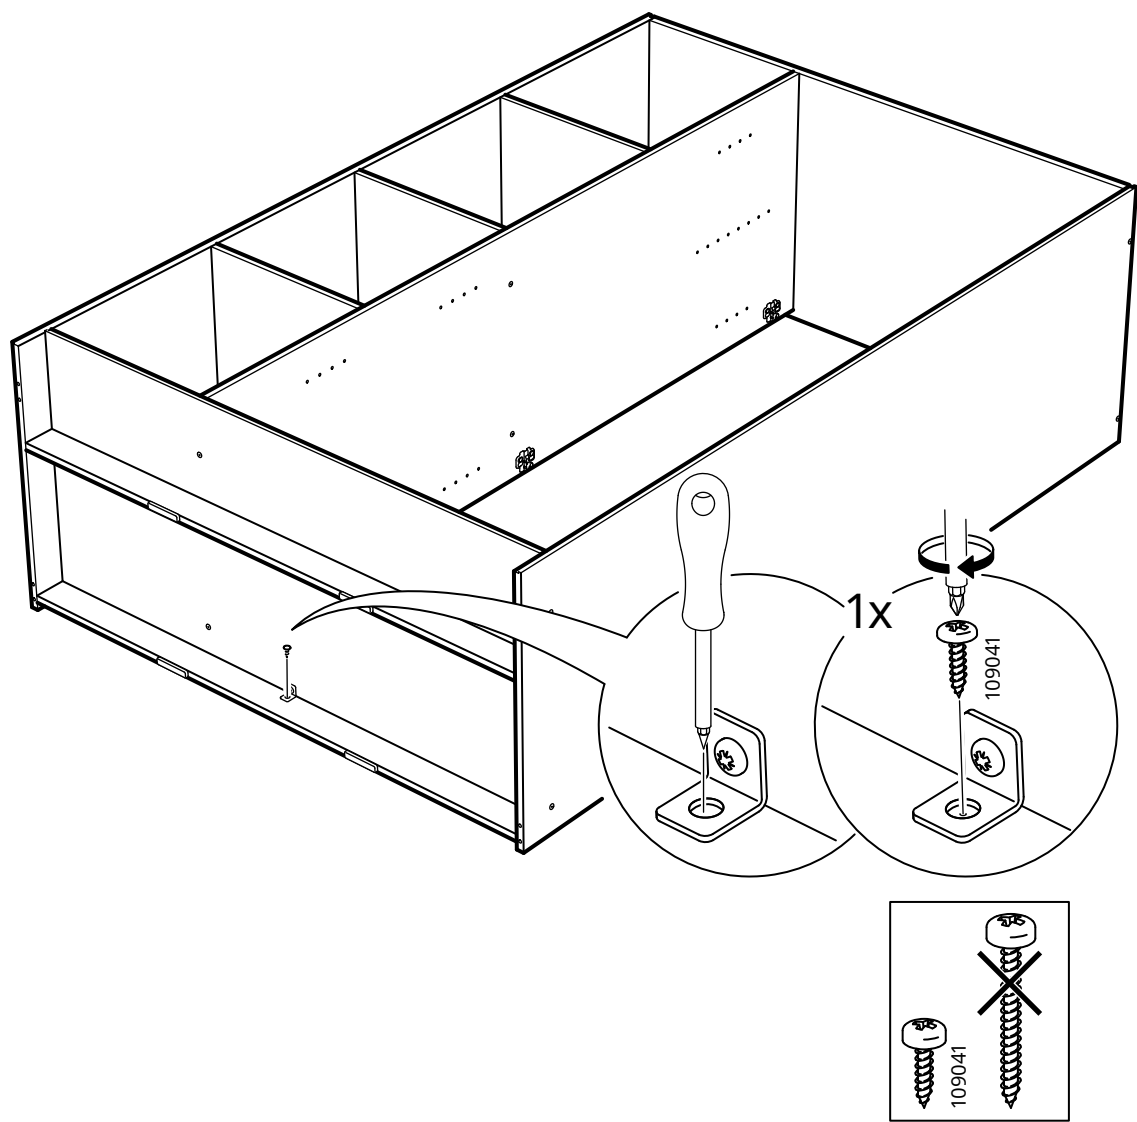 


20

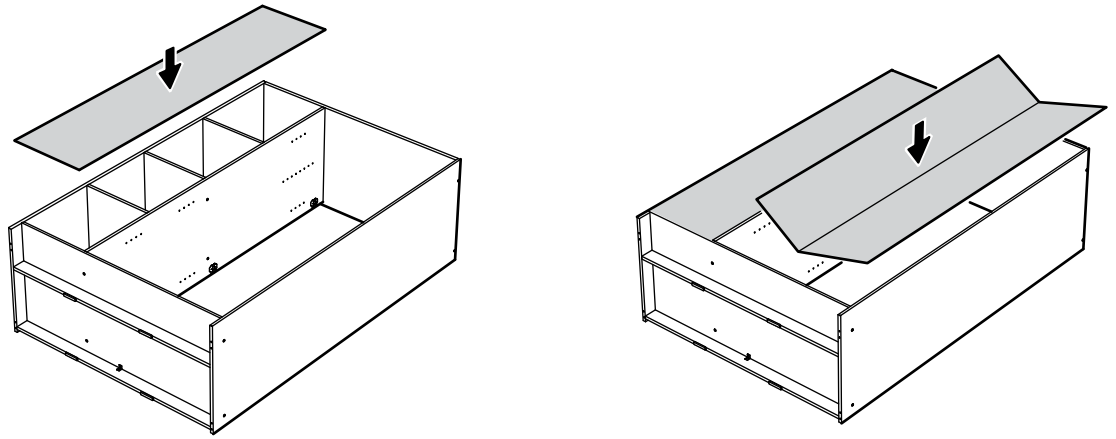 


21

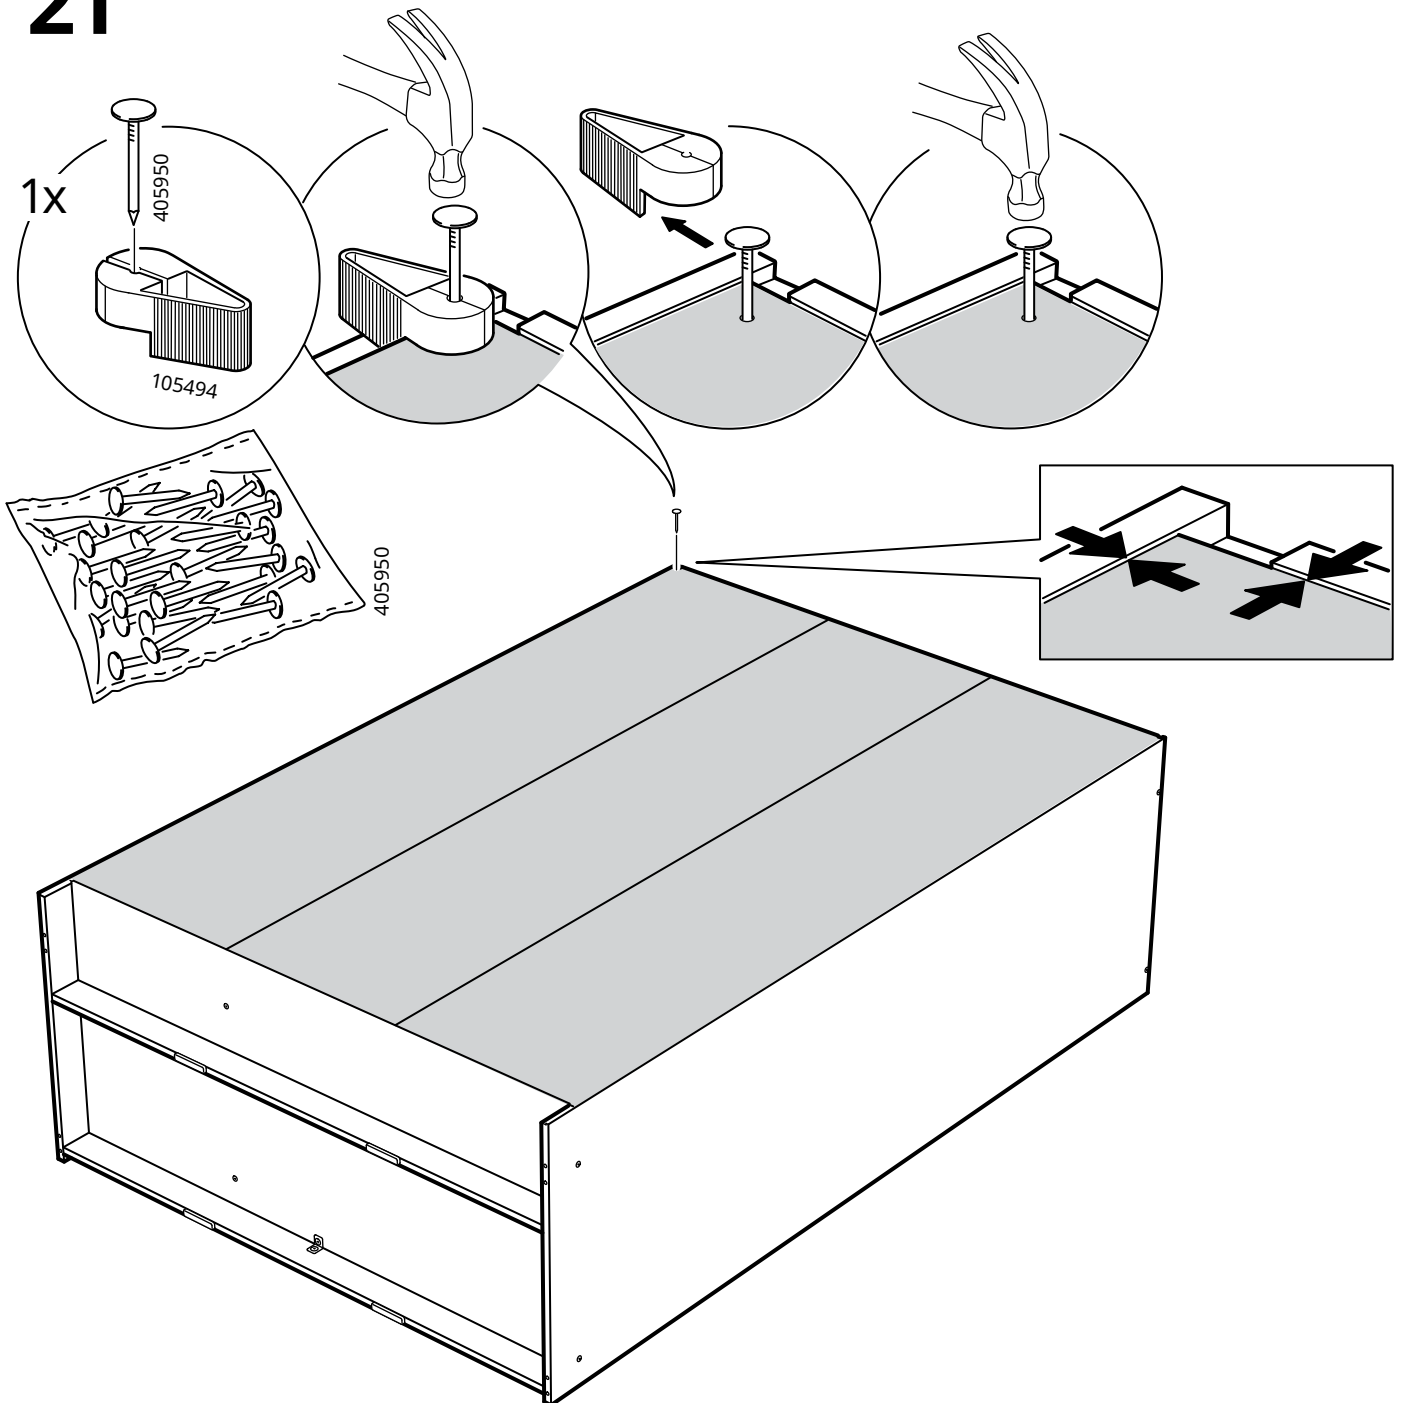 


22


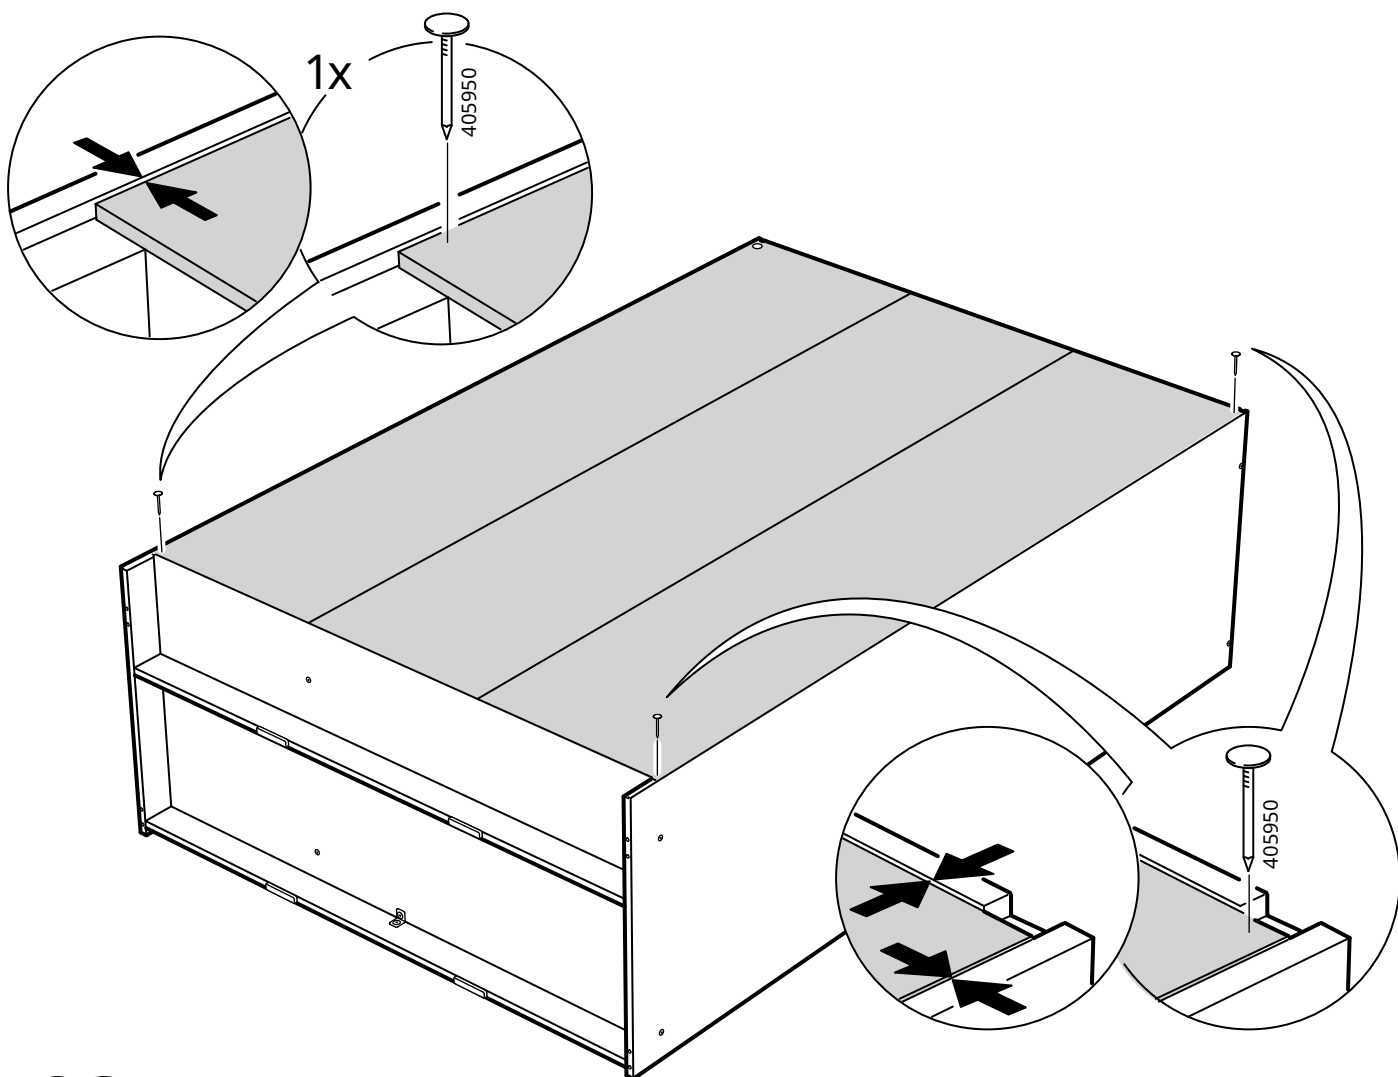 


23

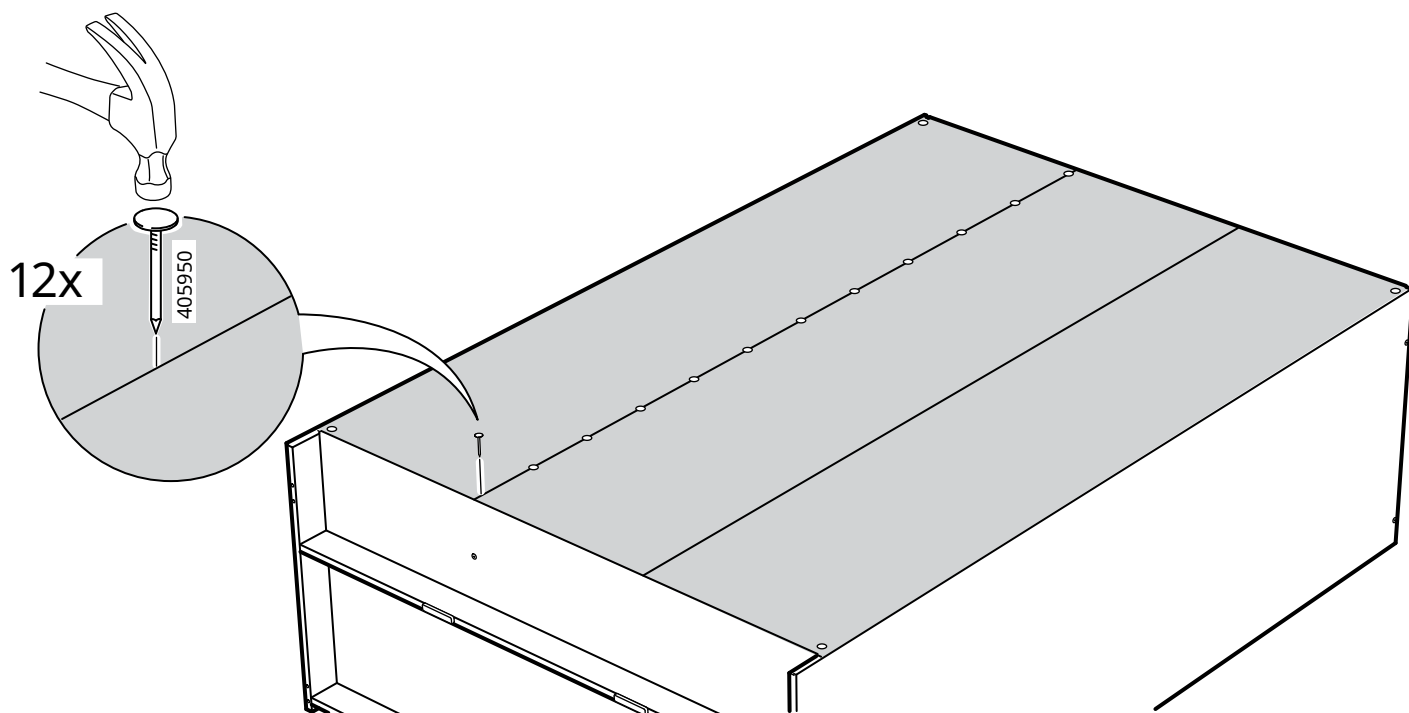 



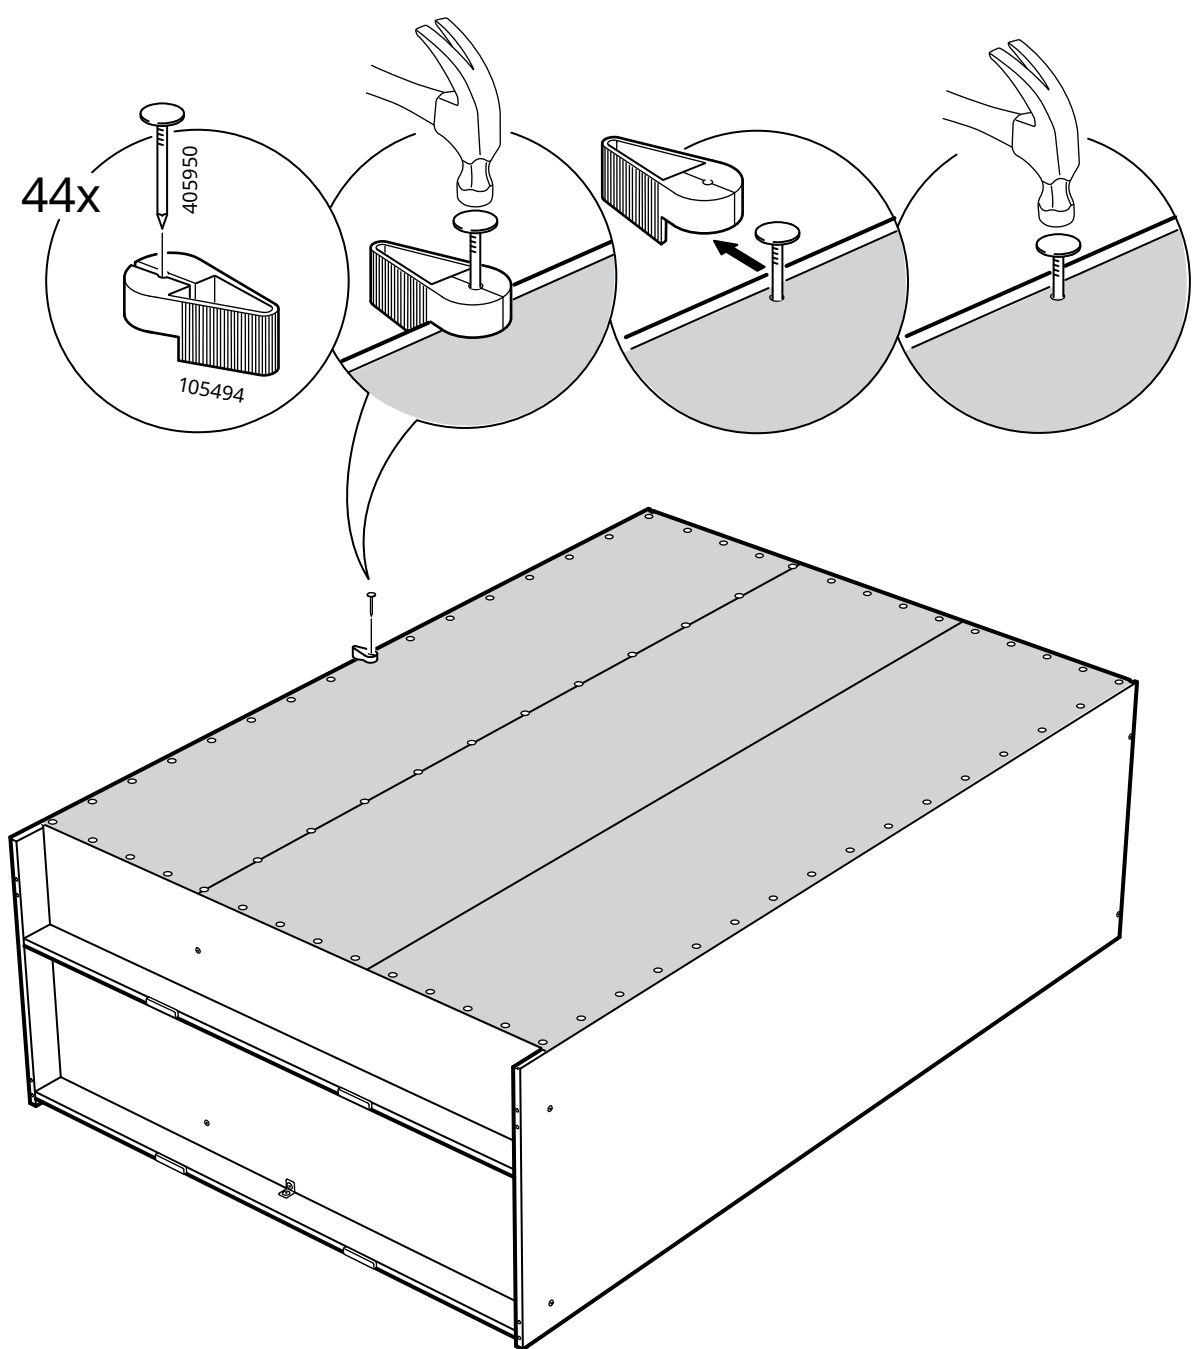 


25

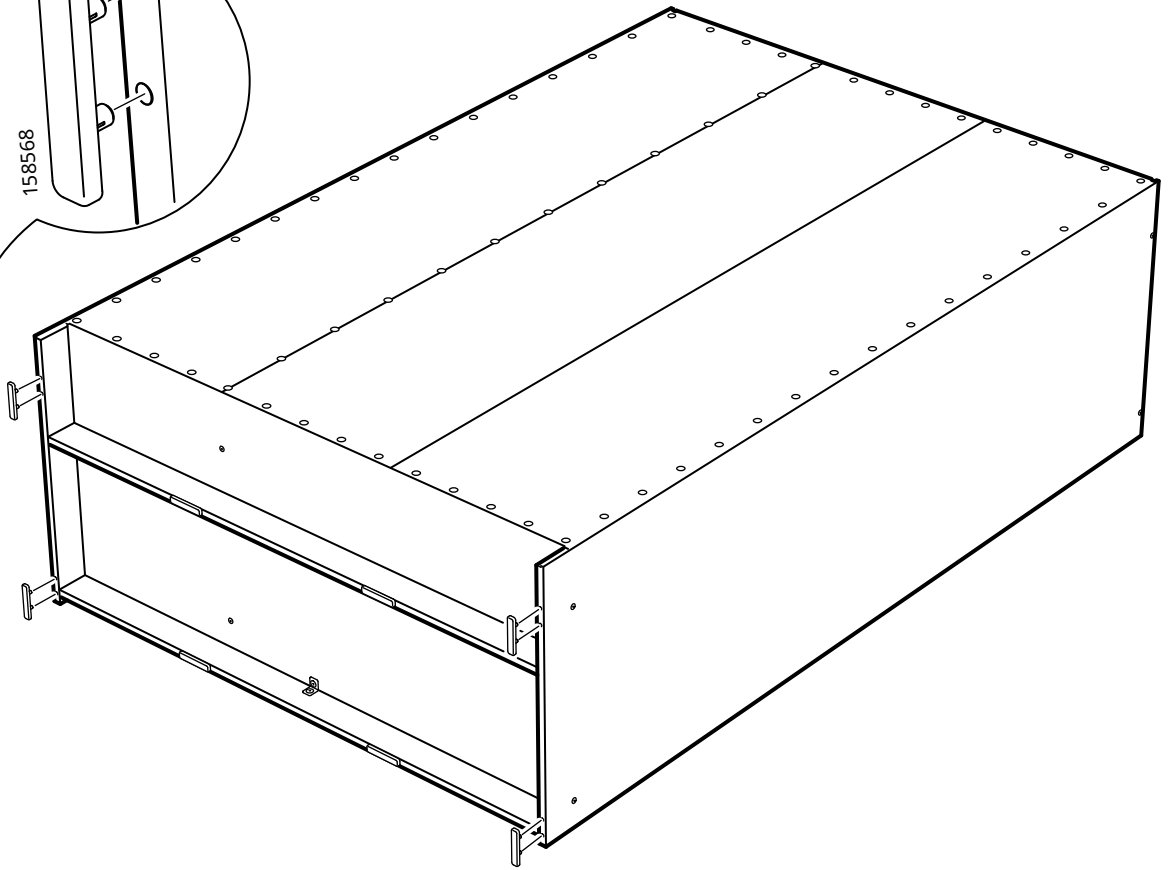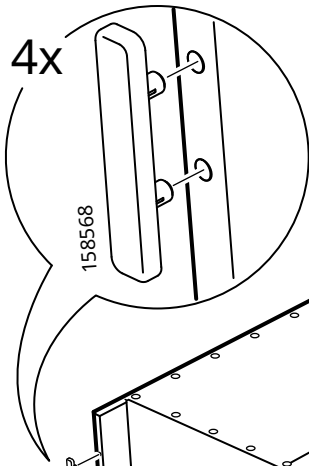  



26

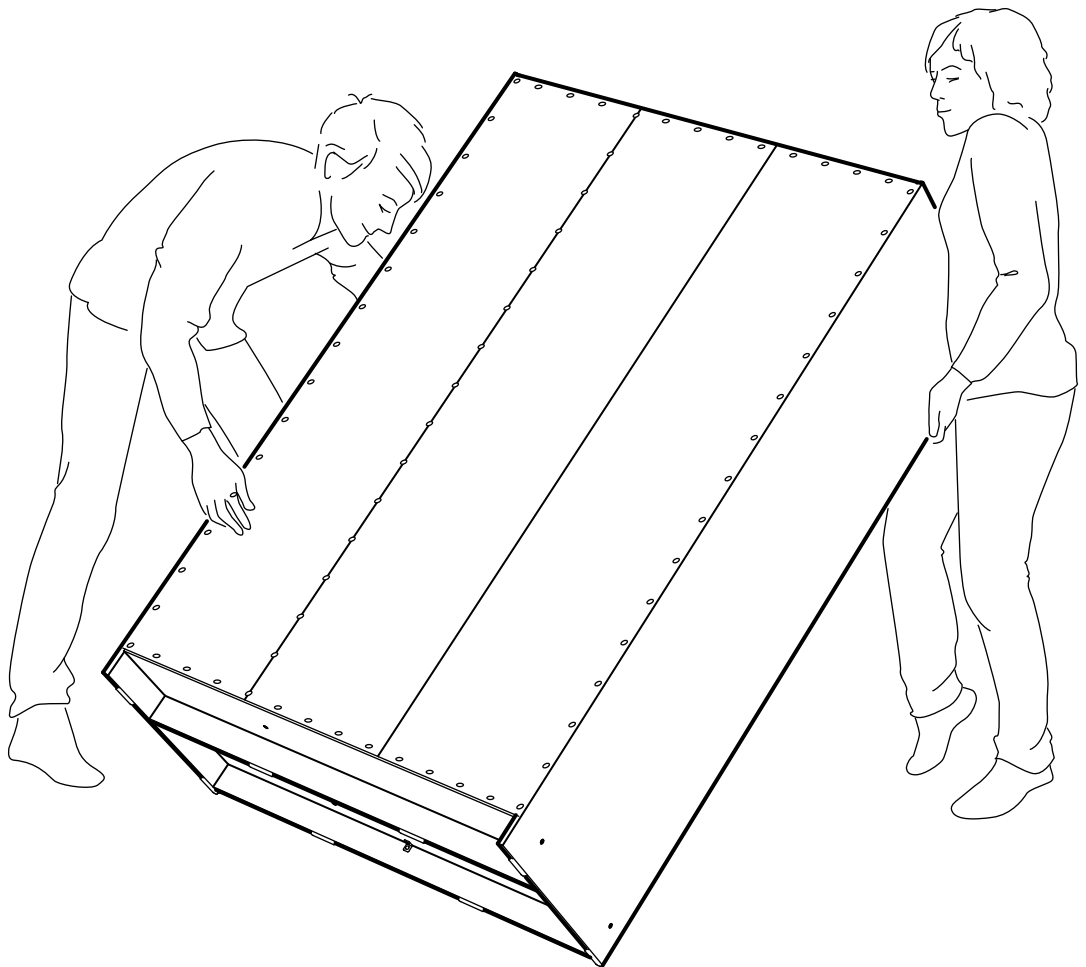 

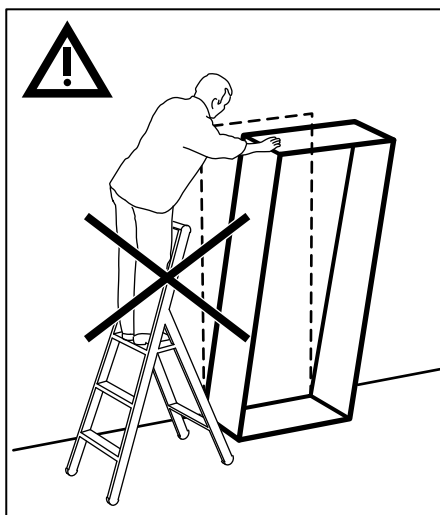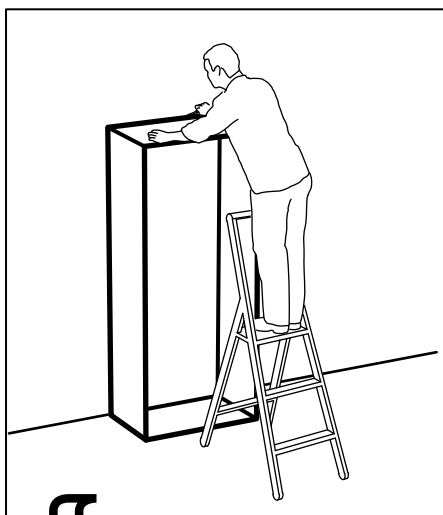  

27

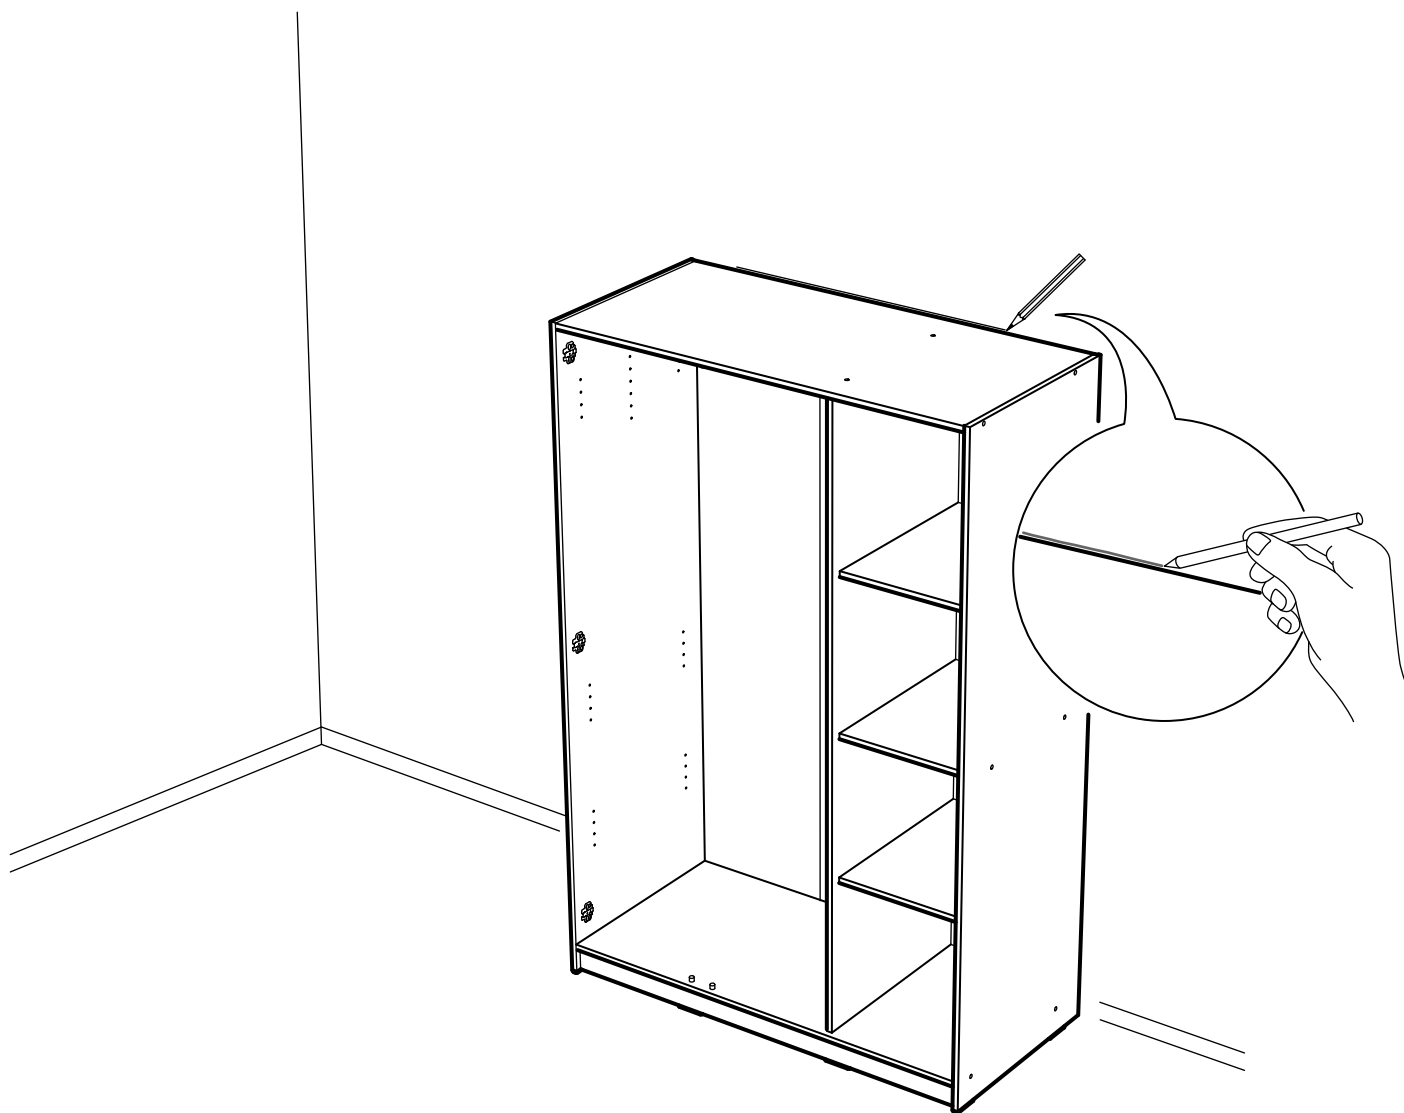 

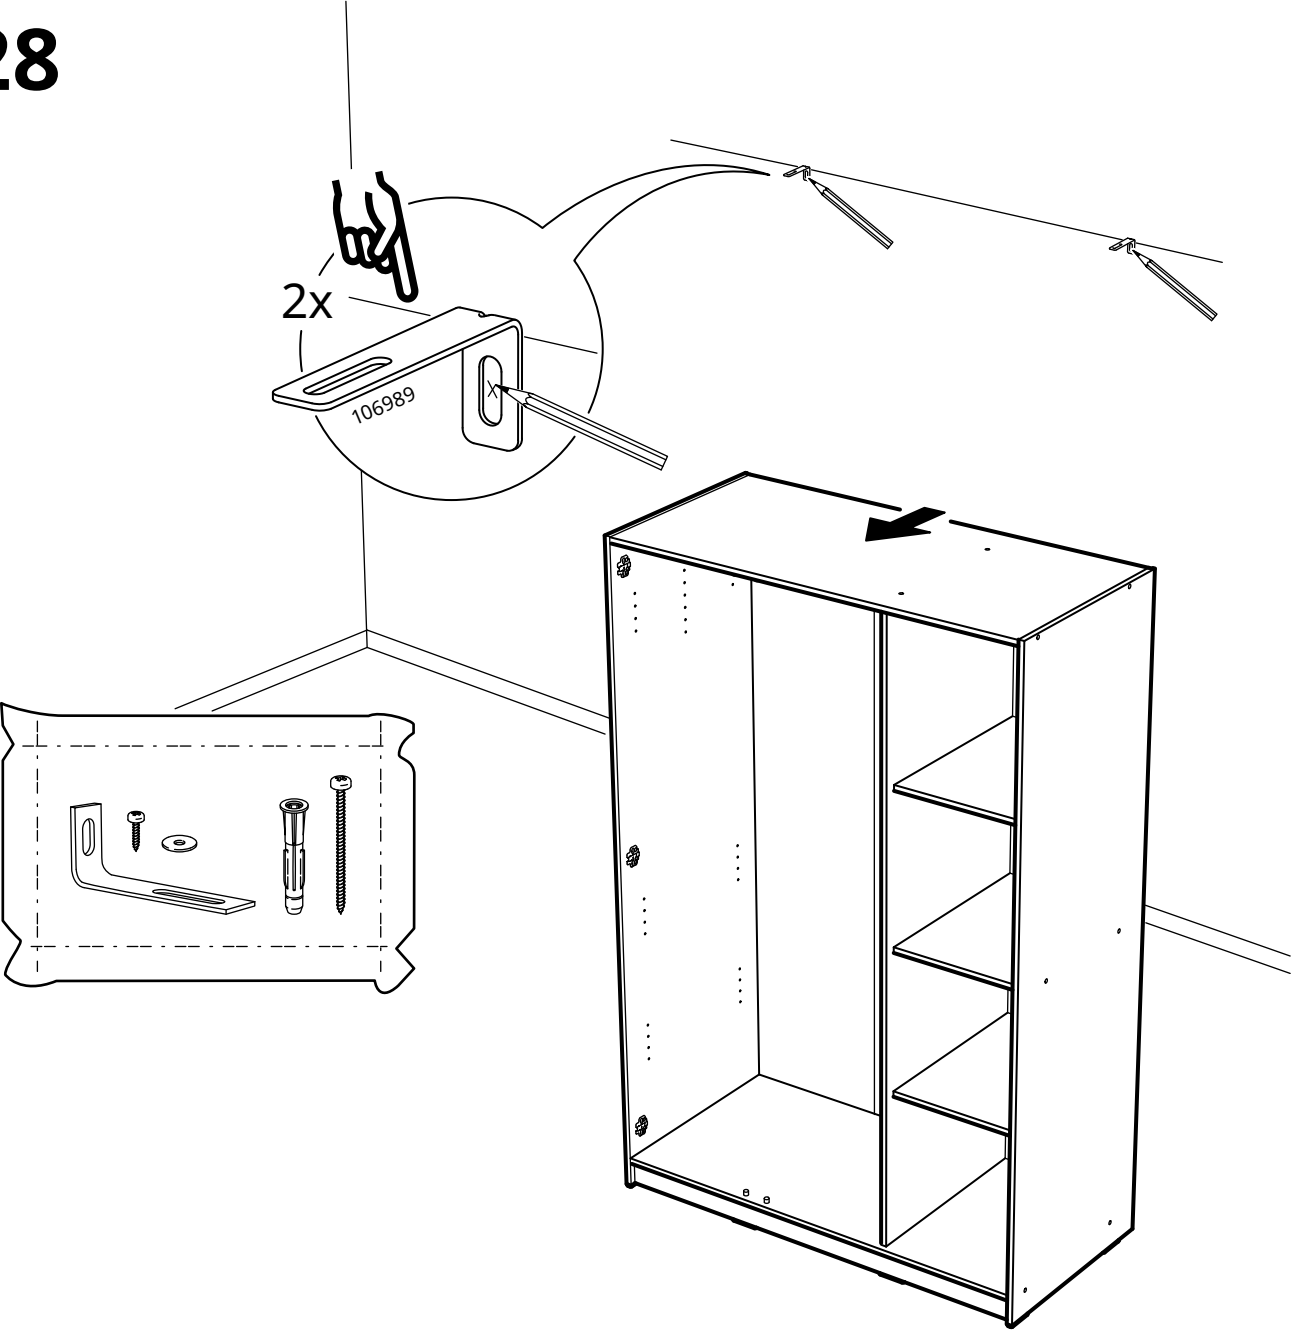 




www.IKEA.com/secure-it



 www.IKEA.cn/secure-it

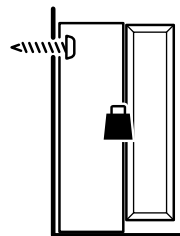


29

English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

 
A

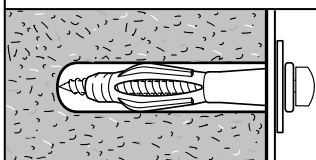


Ø 8 mm
(5/16")



 
1




2

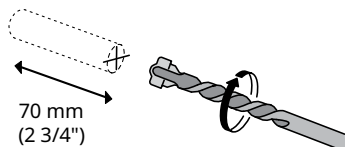 

3

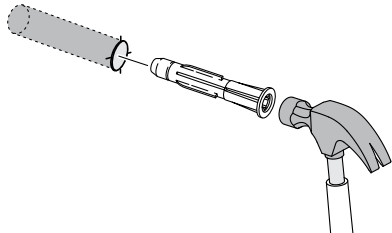 


B

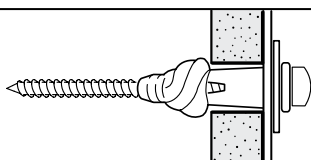 


Ø 8 mm
(5/16")



 
1




2

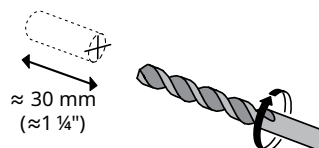 

3

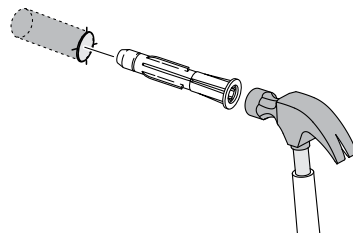 


C

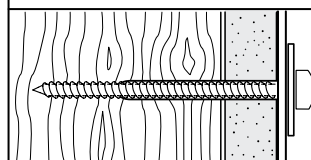 


Ø 3 mm
(1/8")



 
1




2

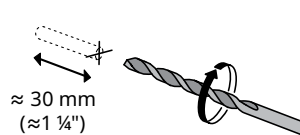 


30

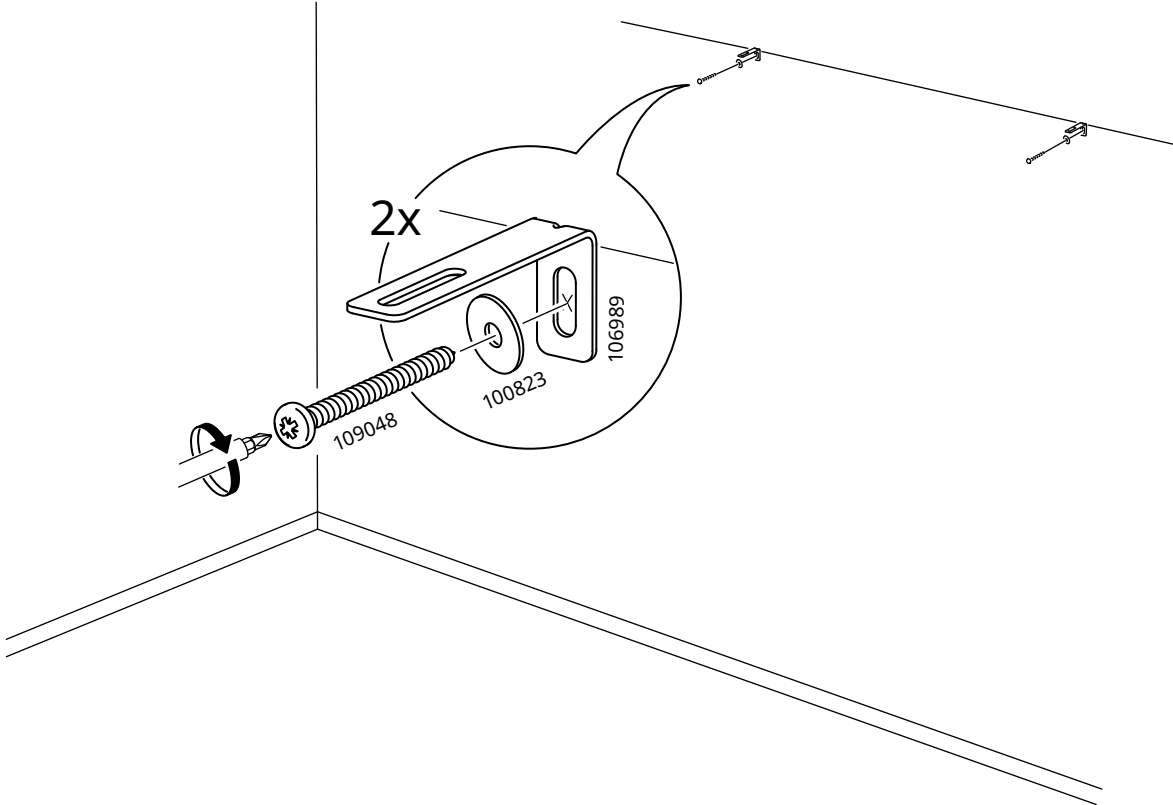 


31

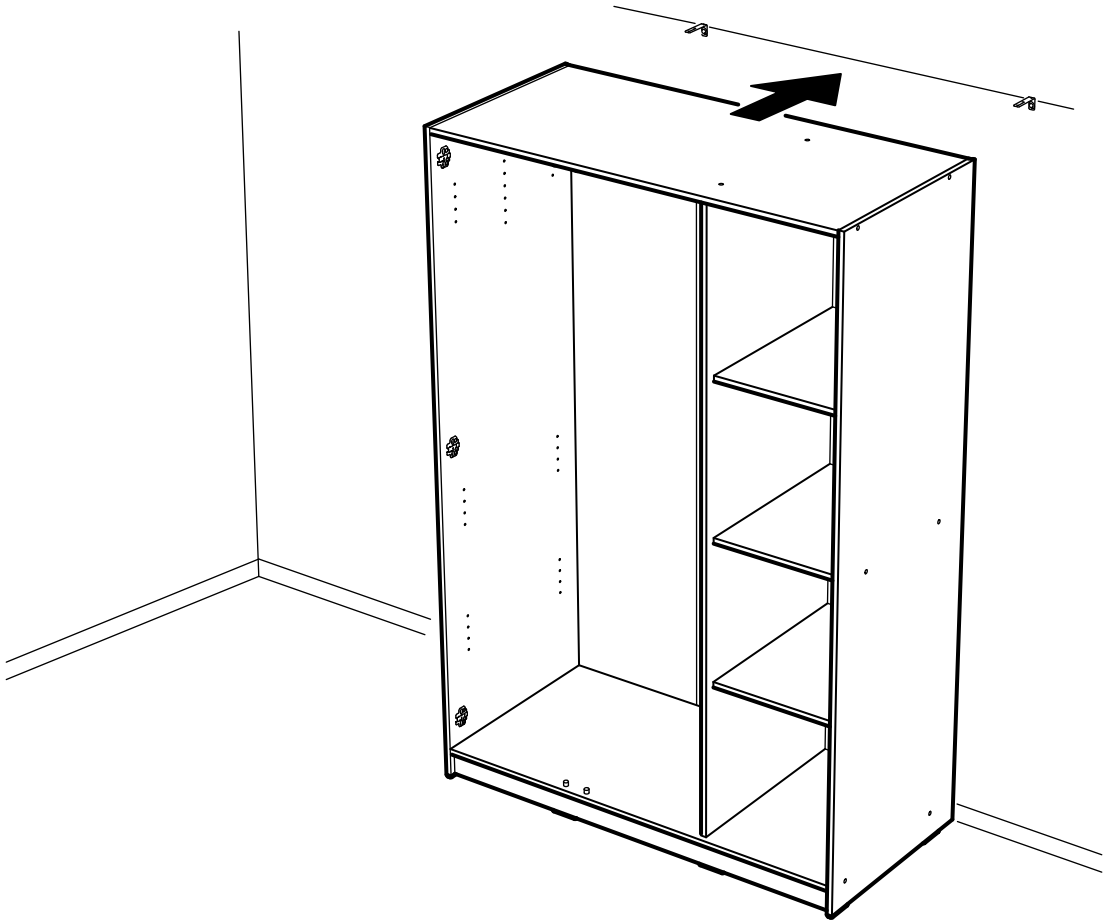 


32

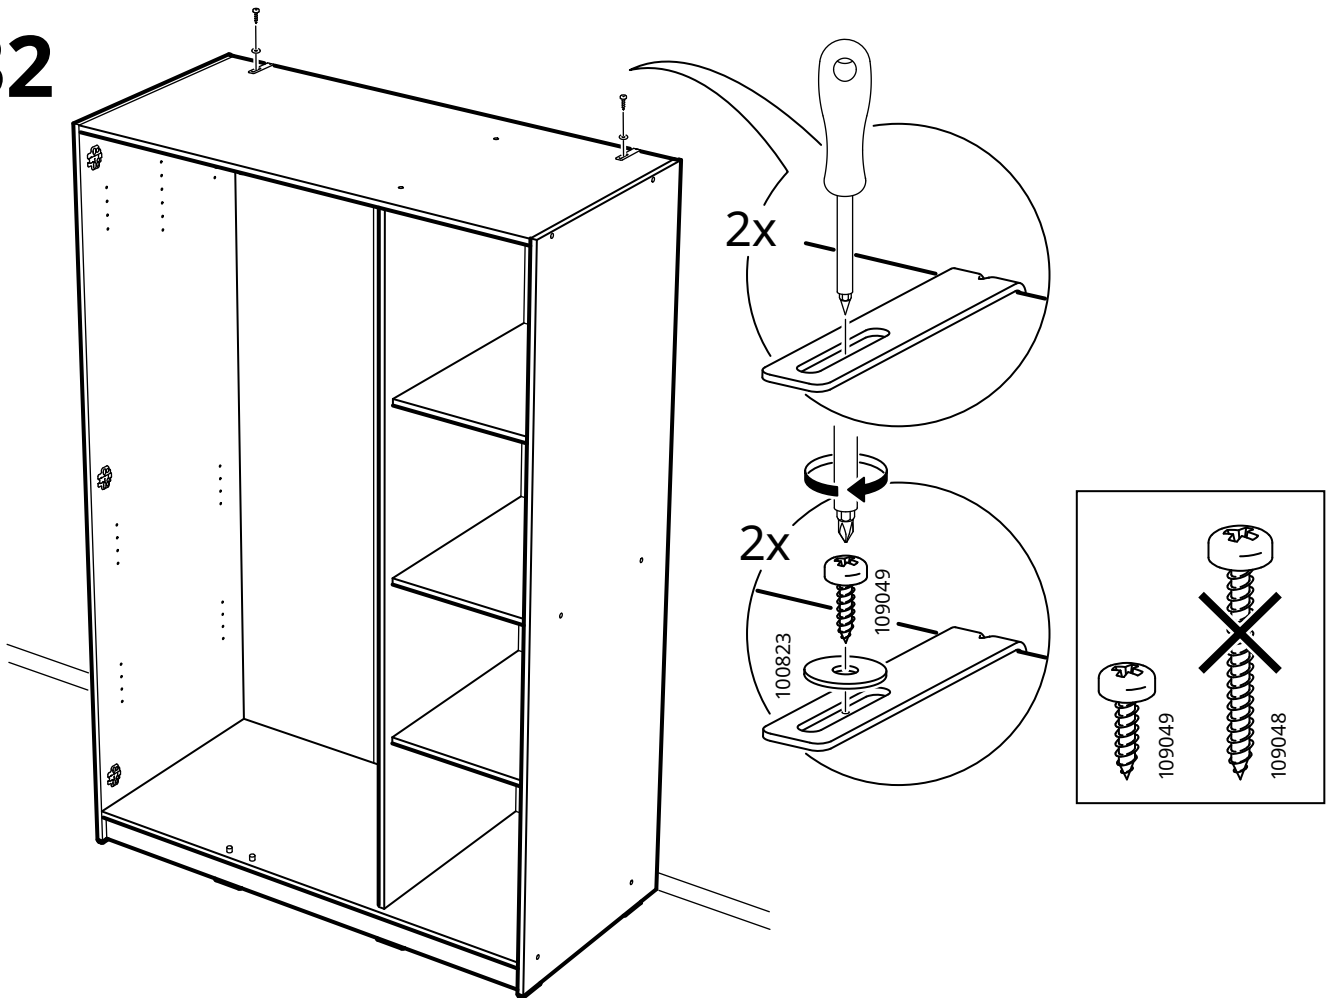 

33

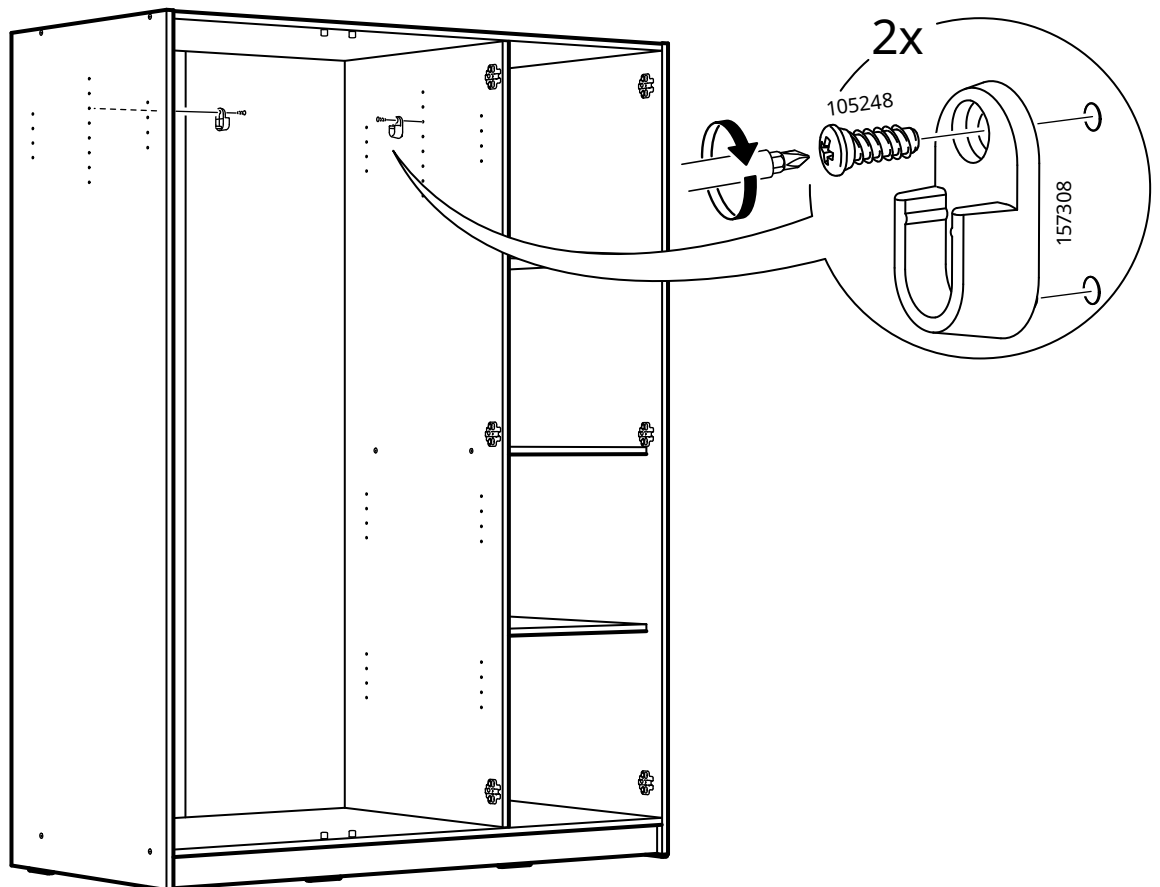 

34

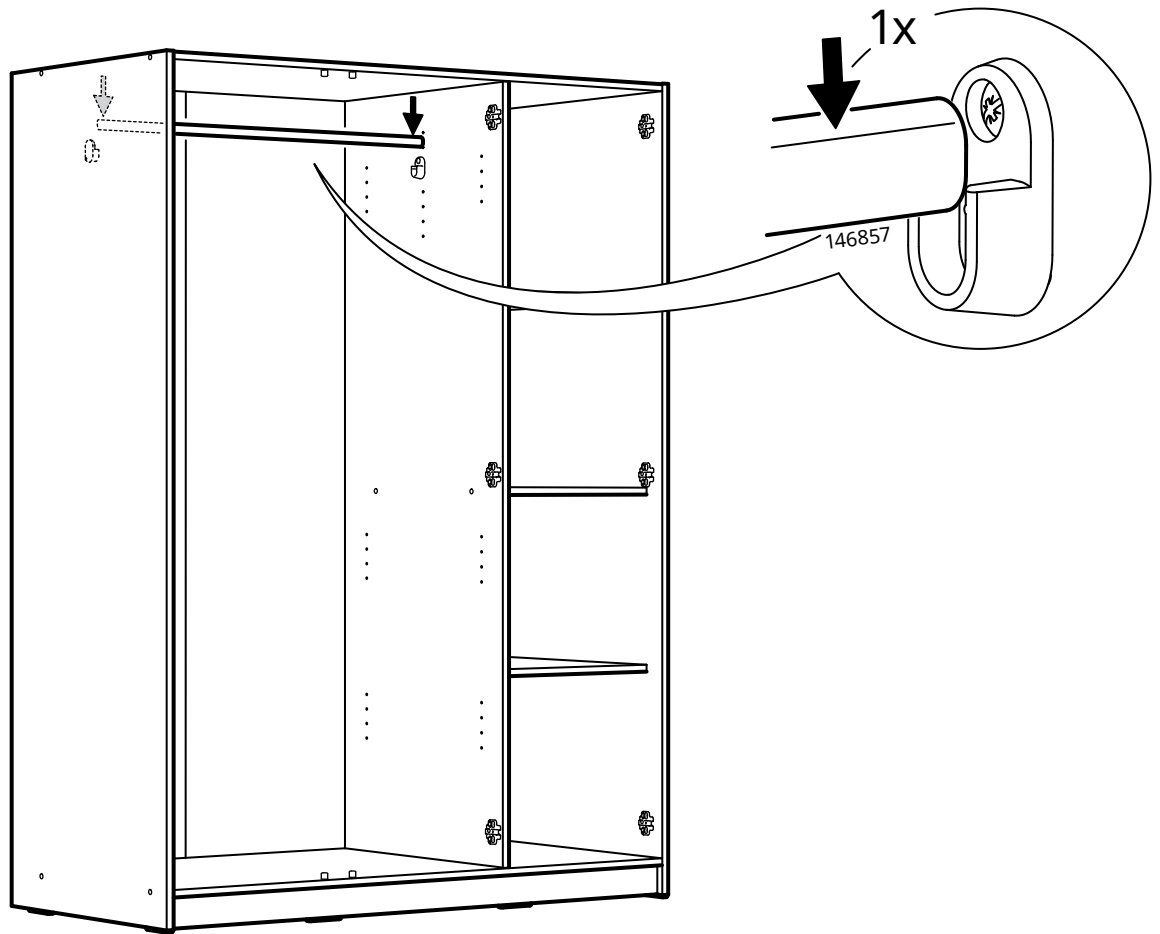 

35

