 


SKRUVBY



Design and Quality
IKEA of Sweden

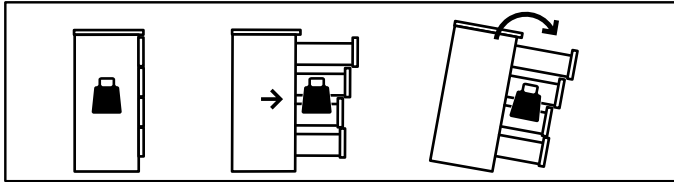

English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

 
 
 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

 
 
 
 
 
NEVER open more than one drawer at a time.

Place heaviest items in the lowest drawers.

English


Read and follow each step of the instruction carefully.

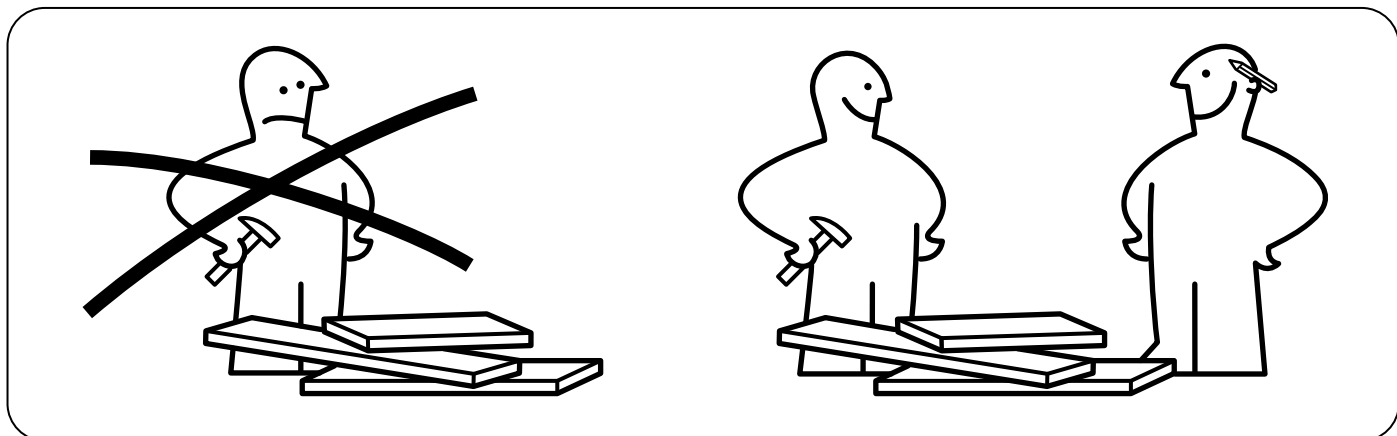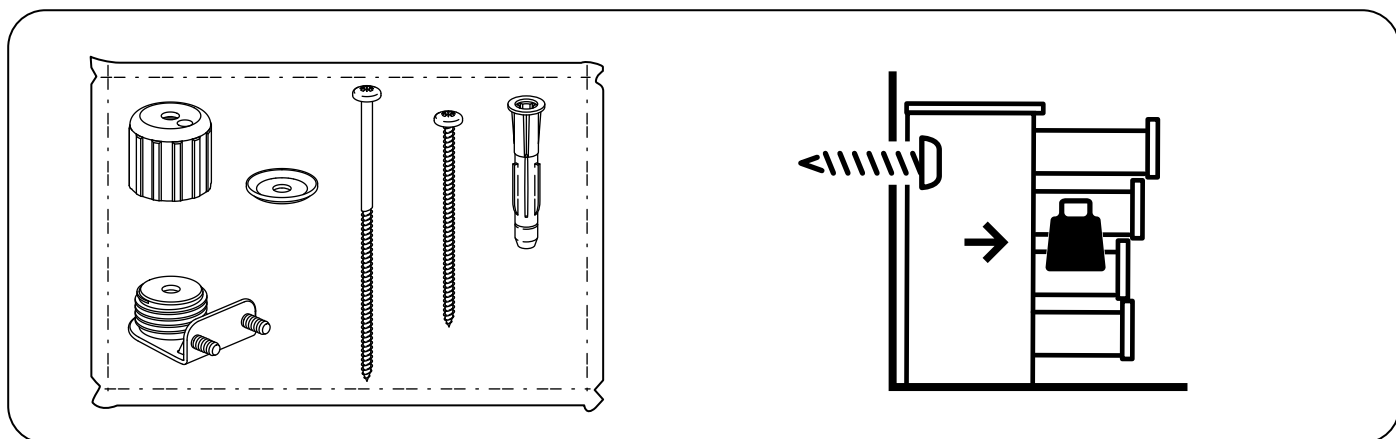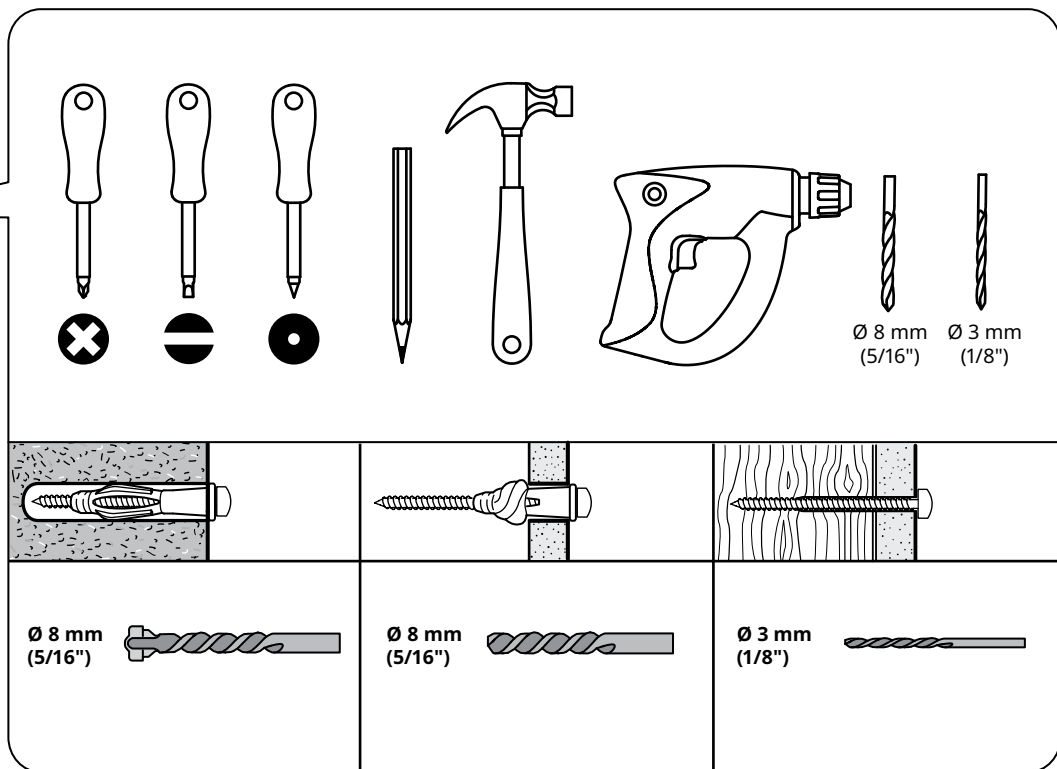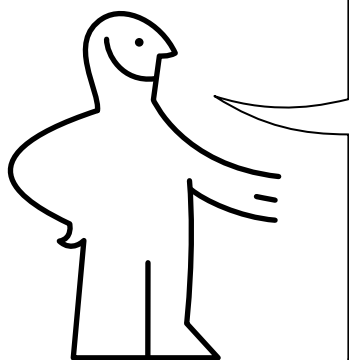

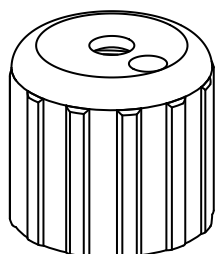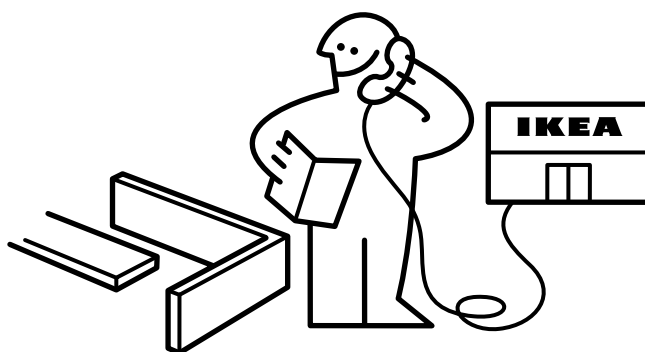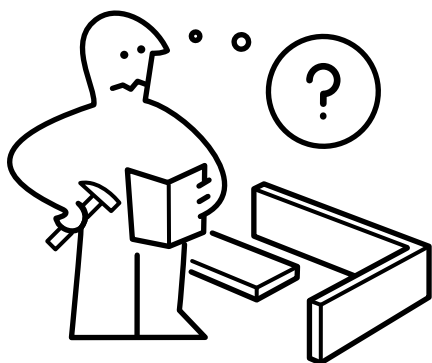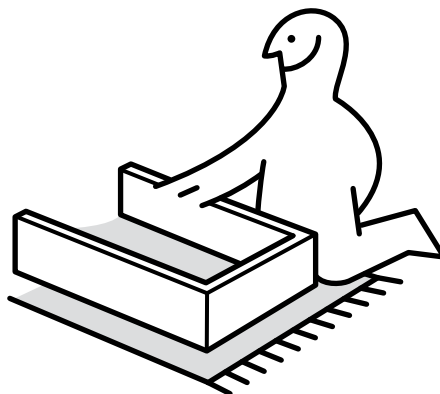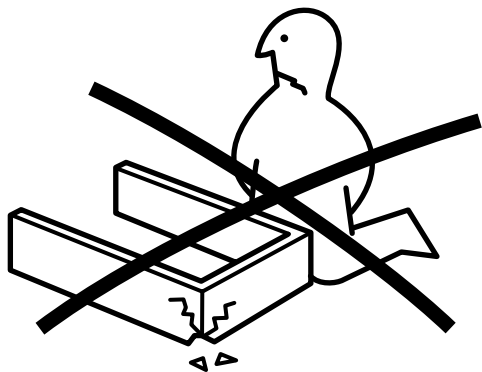


150689

 2x




126916

 2x

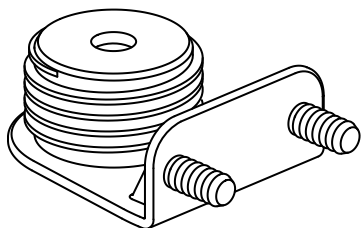


150688

 2x




147968

 2x




158469

 2x




121714

 2x

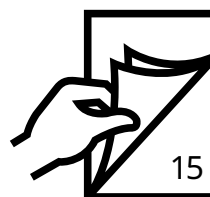


15

 327495




145718

 4x




10047135

 12x



118331

 4x




101345

14x




10075382
10051660

 16x

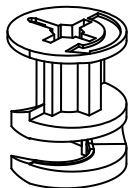

10115587
10117010

 4x

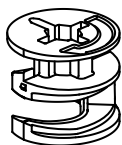


10078589
10069936

8x



119030

 8x




100400

6x




146114

 10x

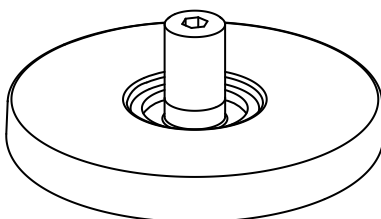


152676

 5x

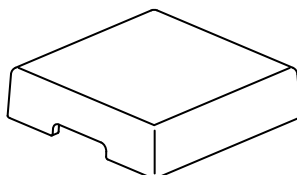

133304
133303

 2x

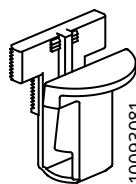


10093081

22x




10093082

 22x




104663

 3x

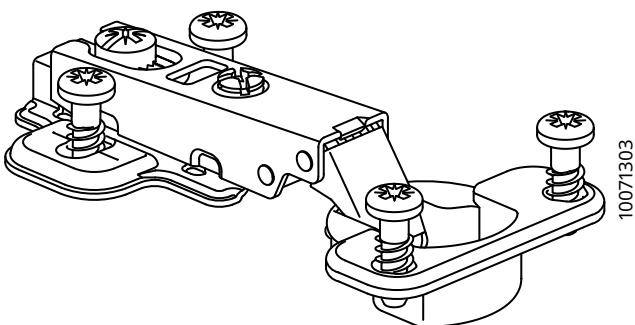

10071303

 4x


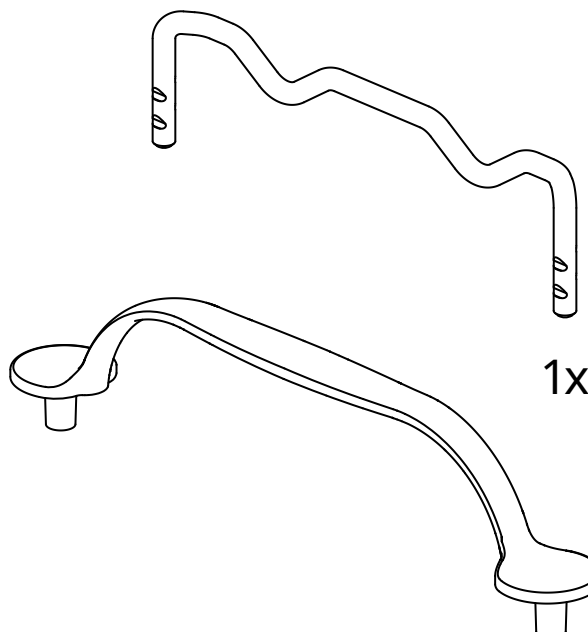


10040242





1x

130417

  
3x

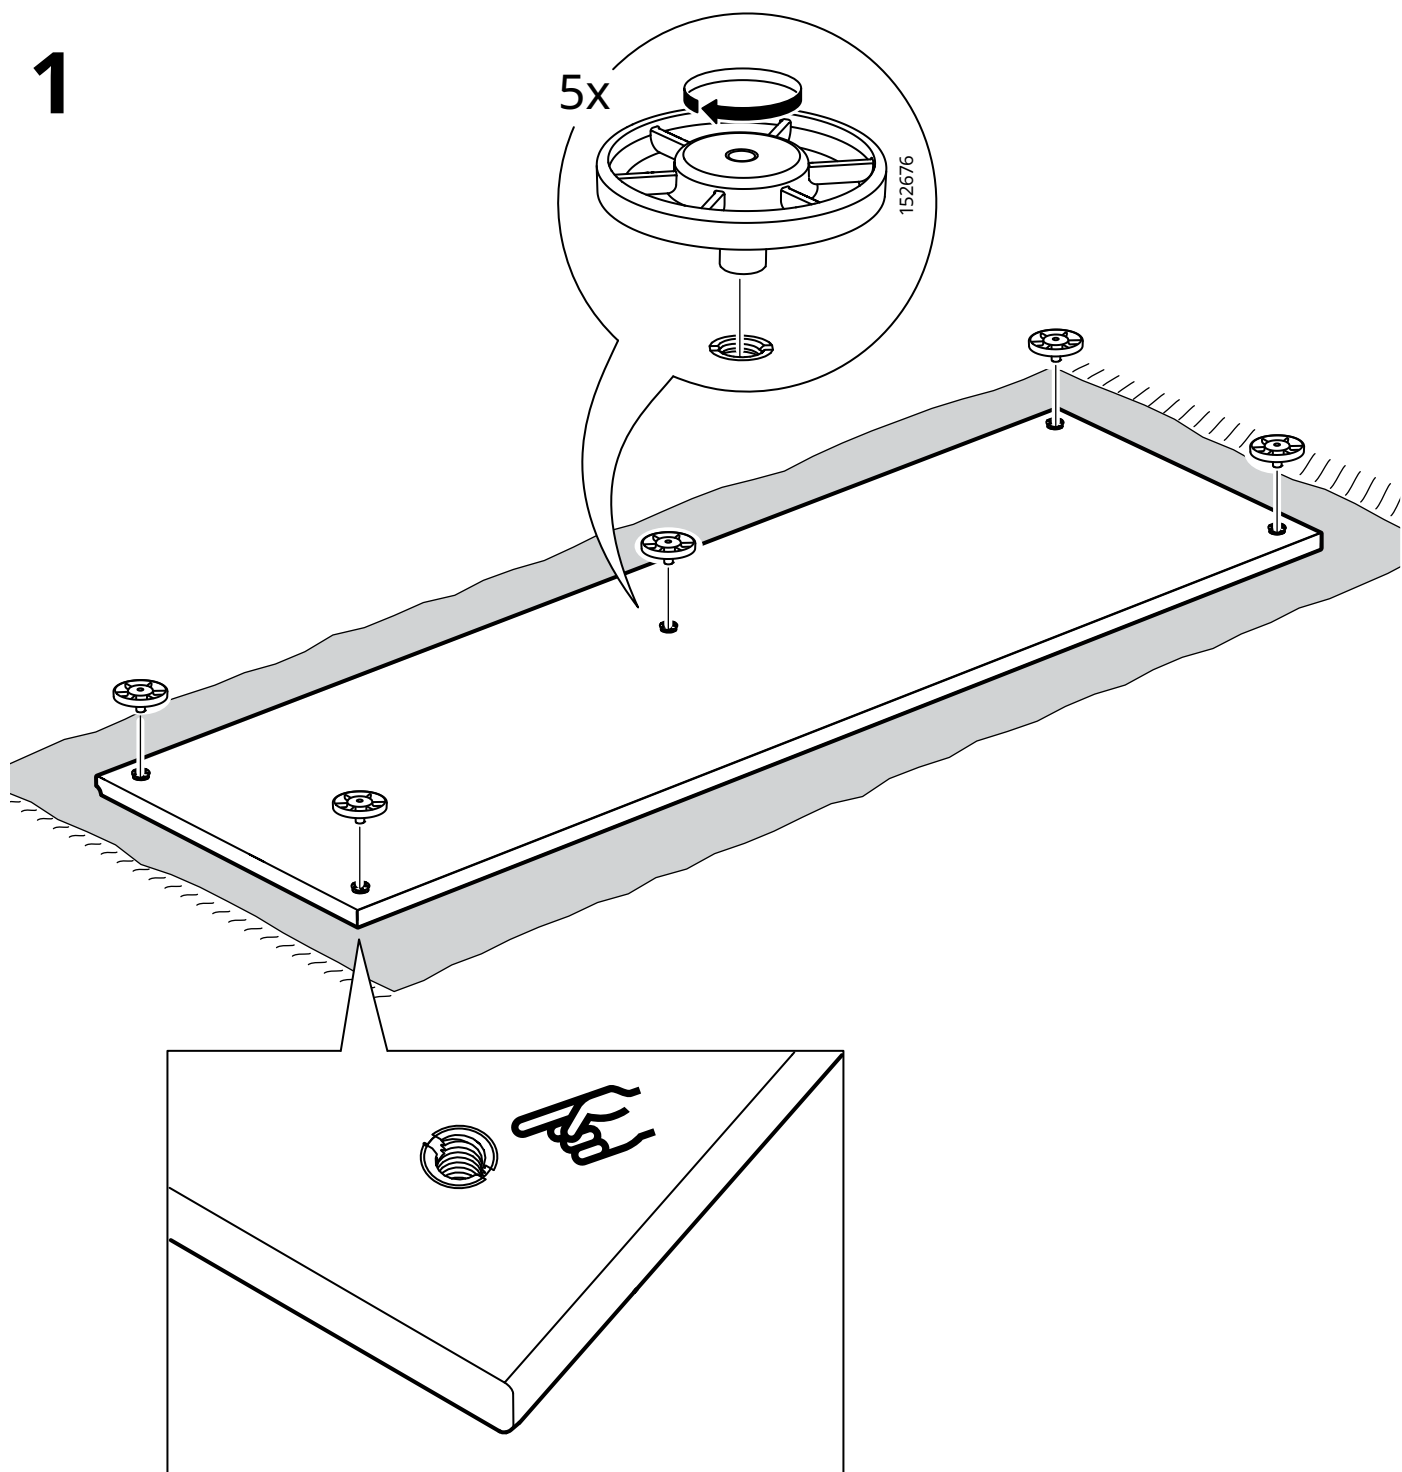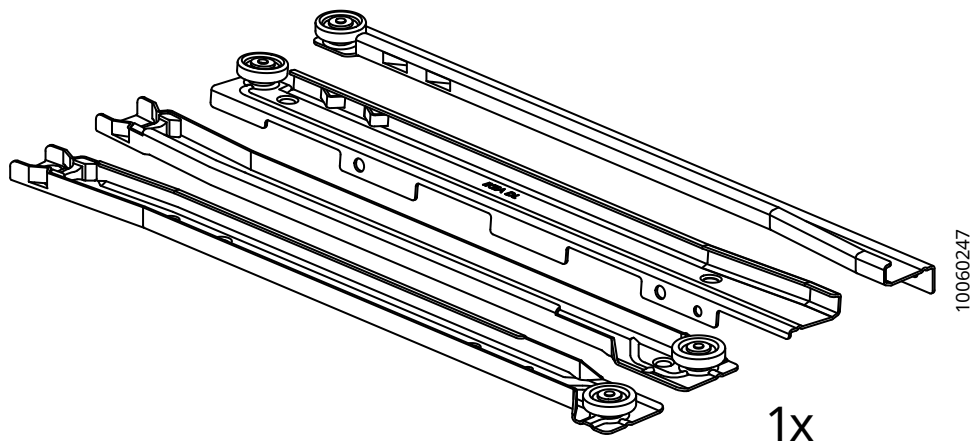


2

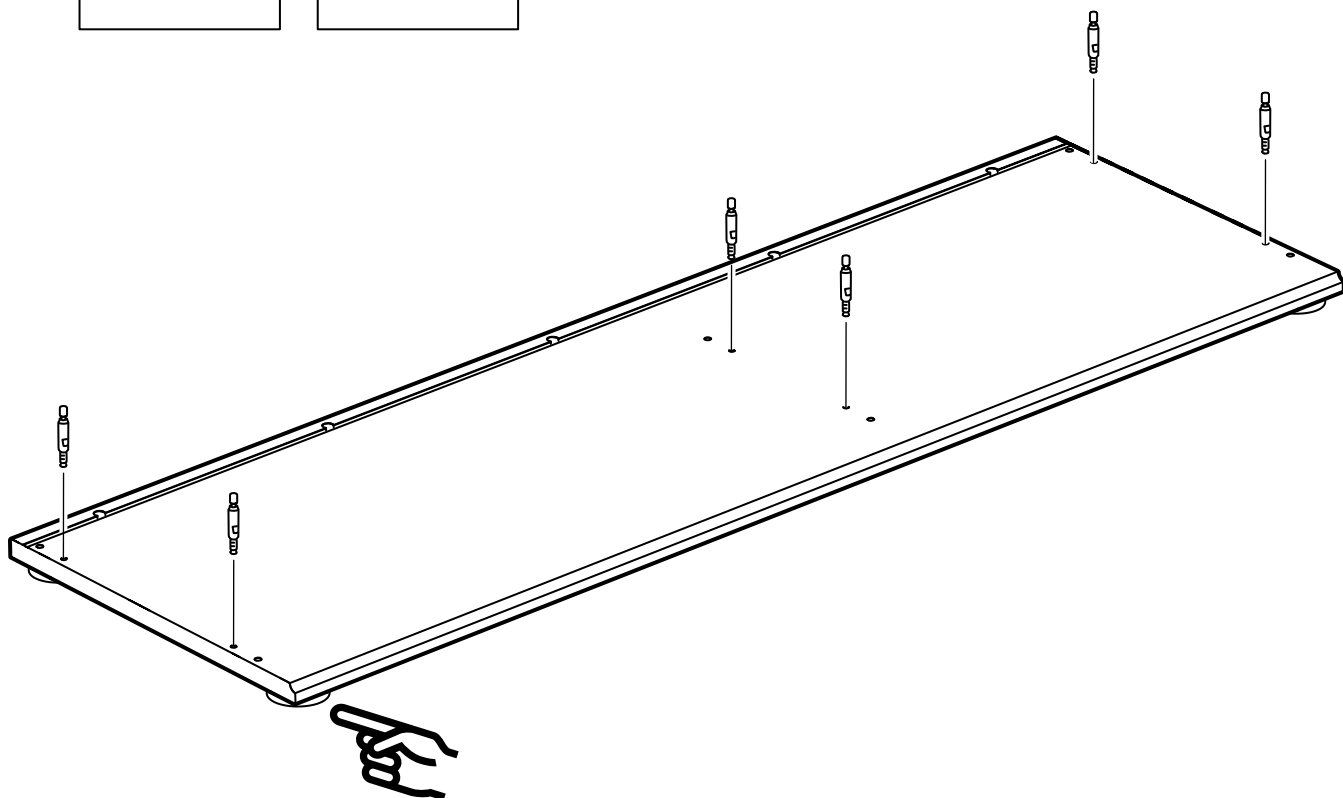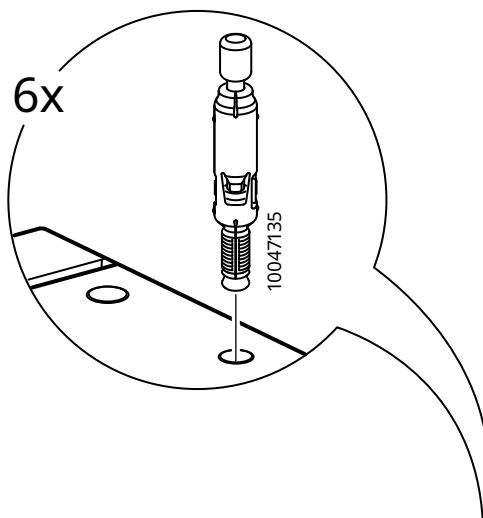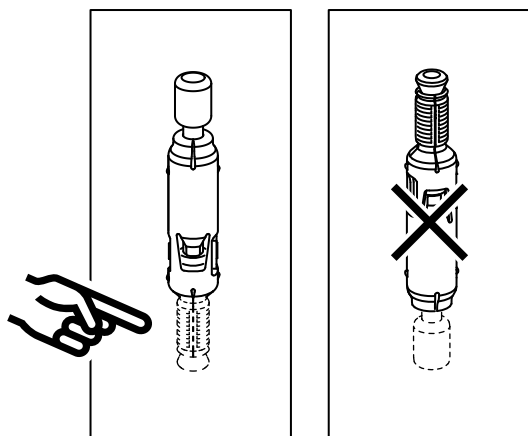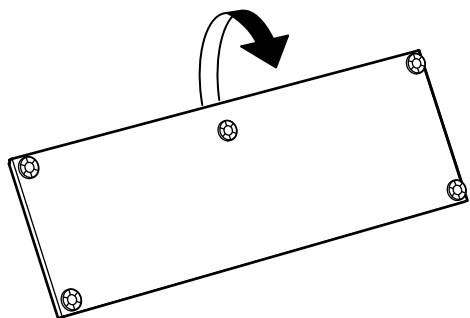    


3

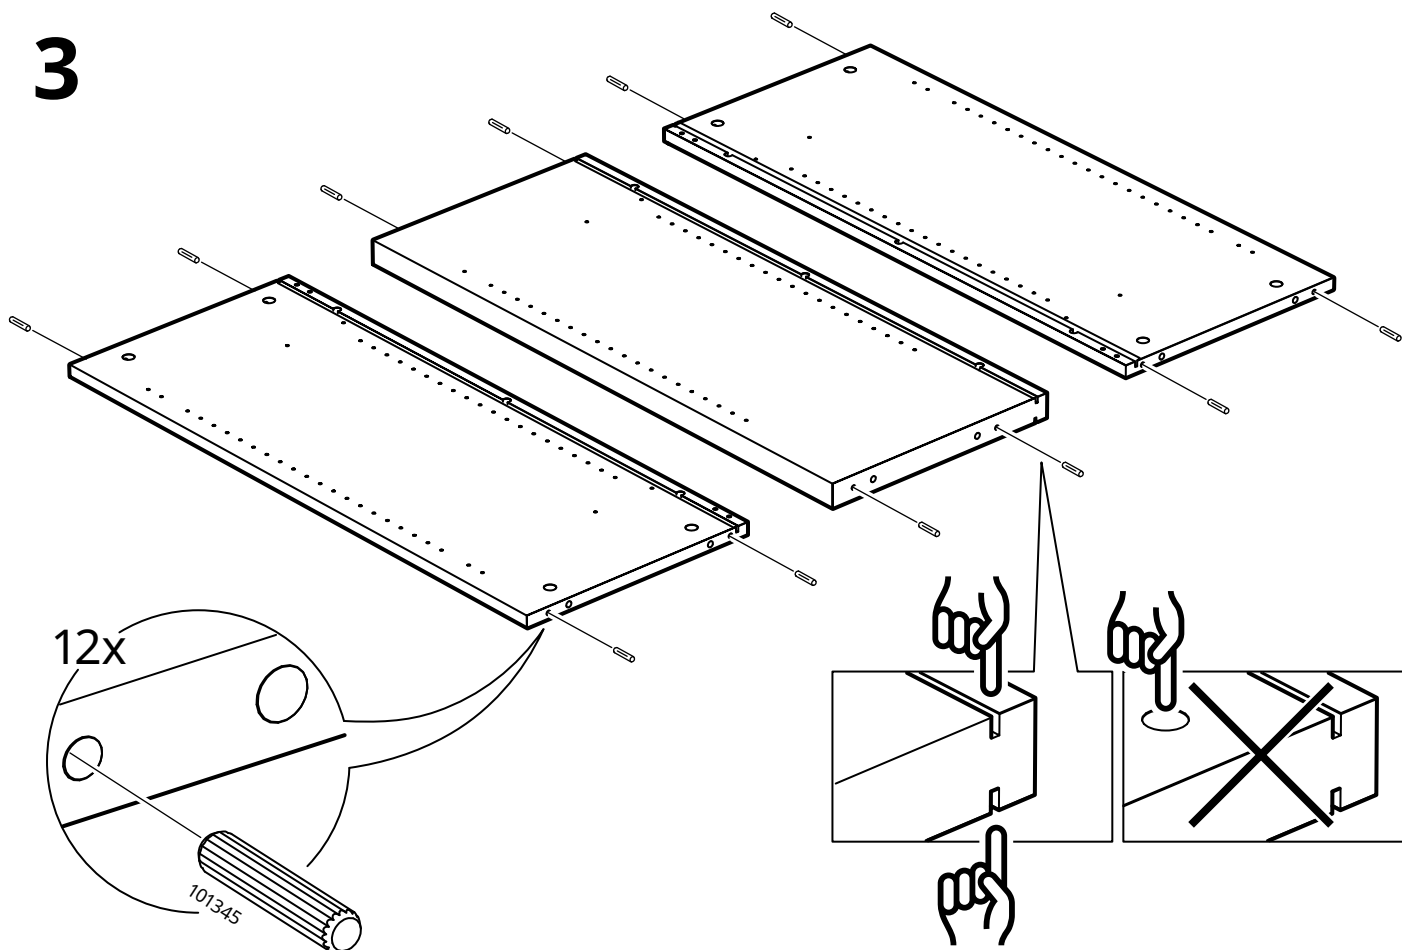 


4

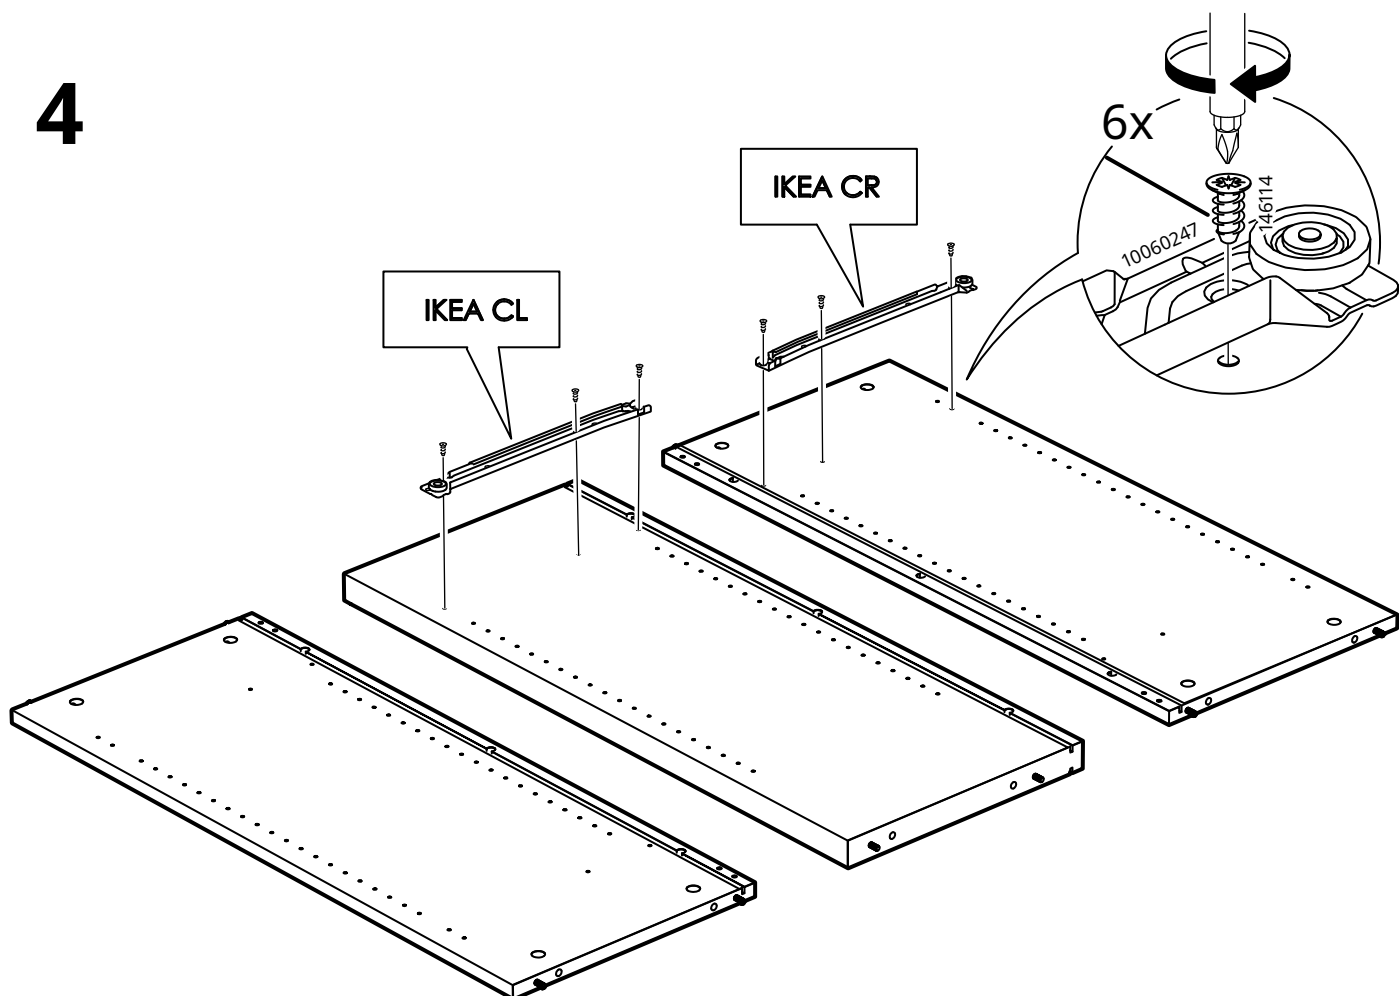 





5

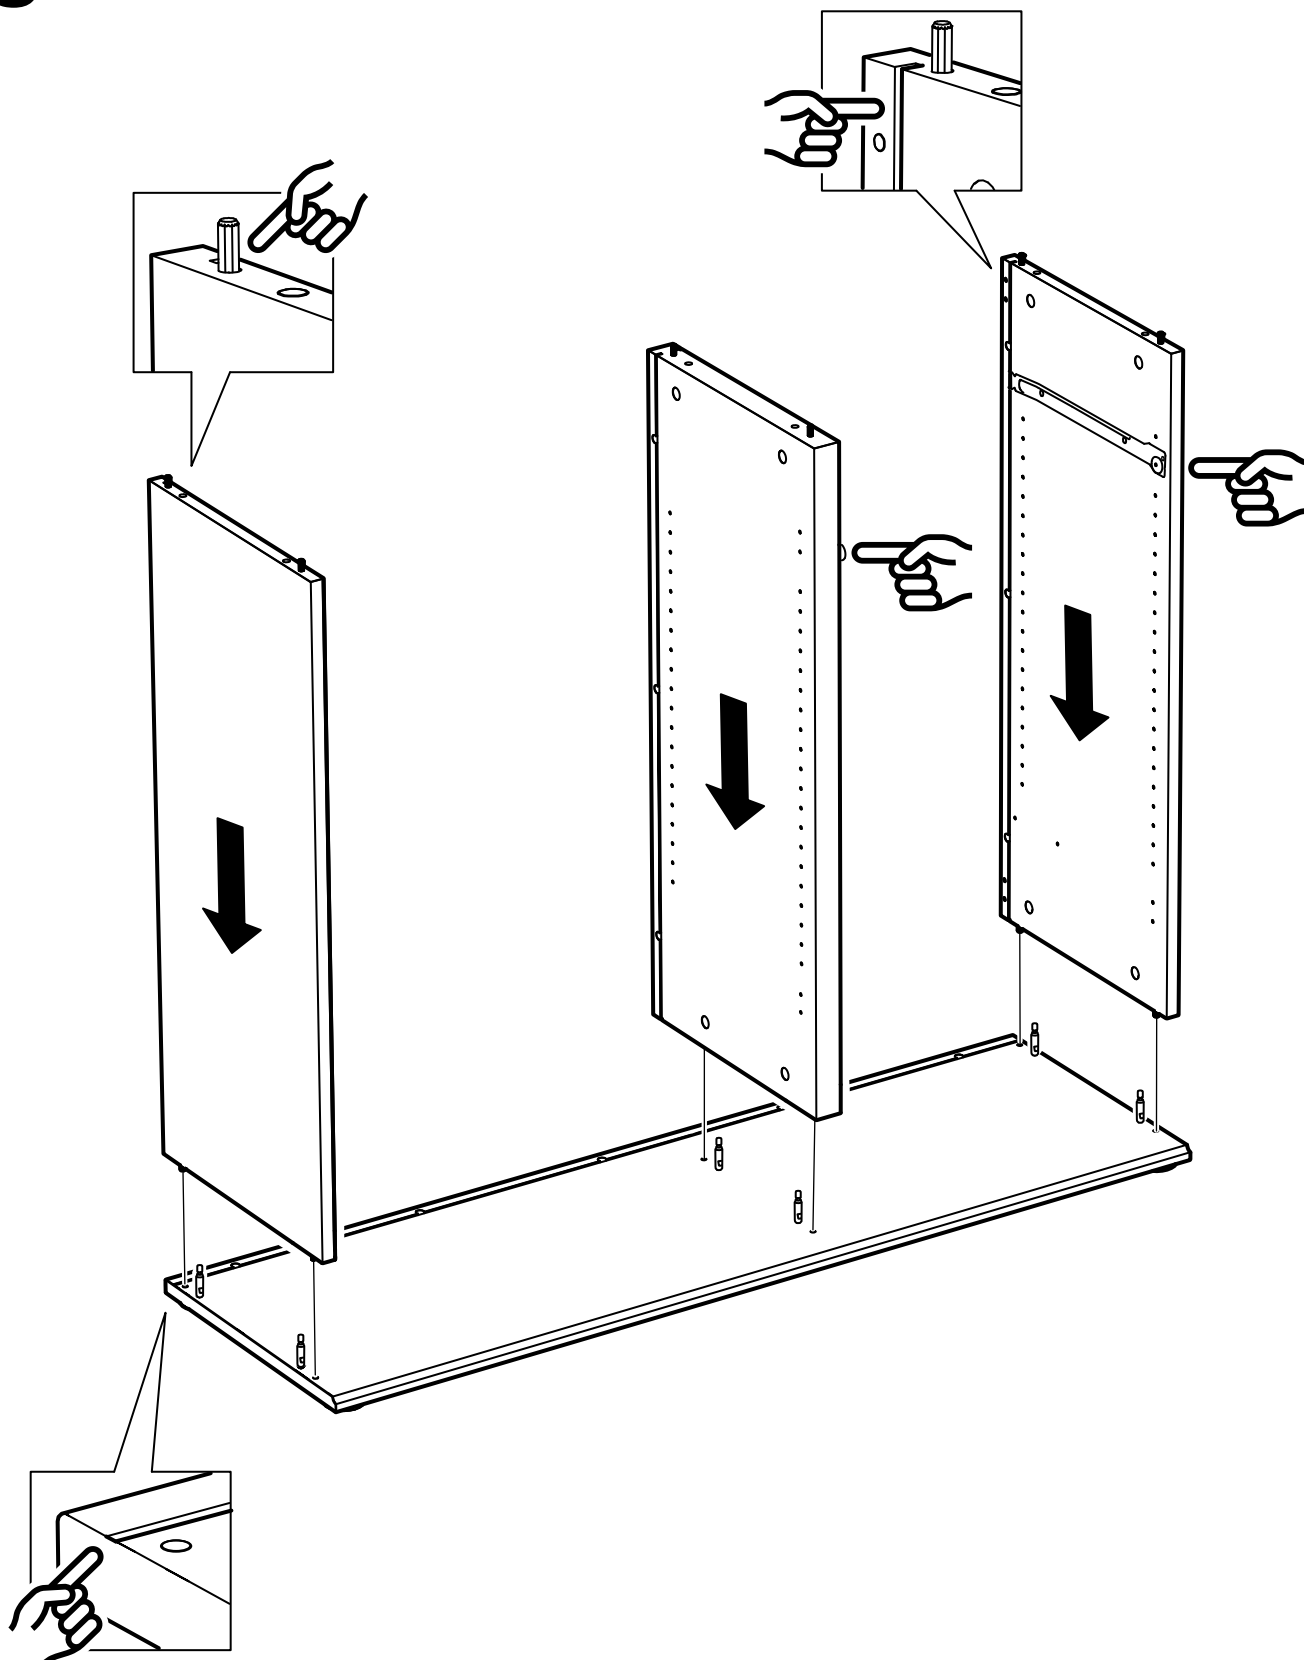 




6

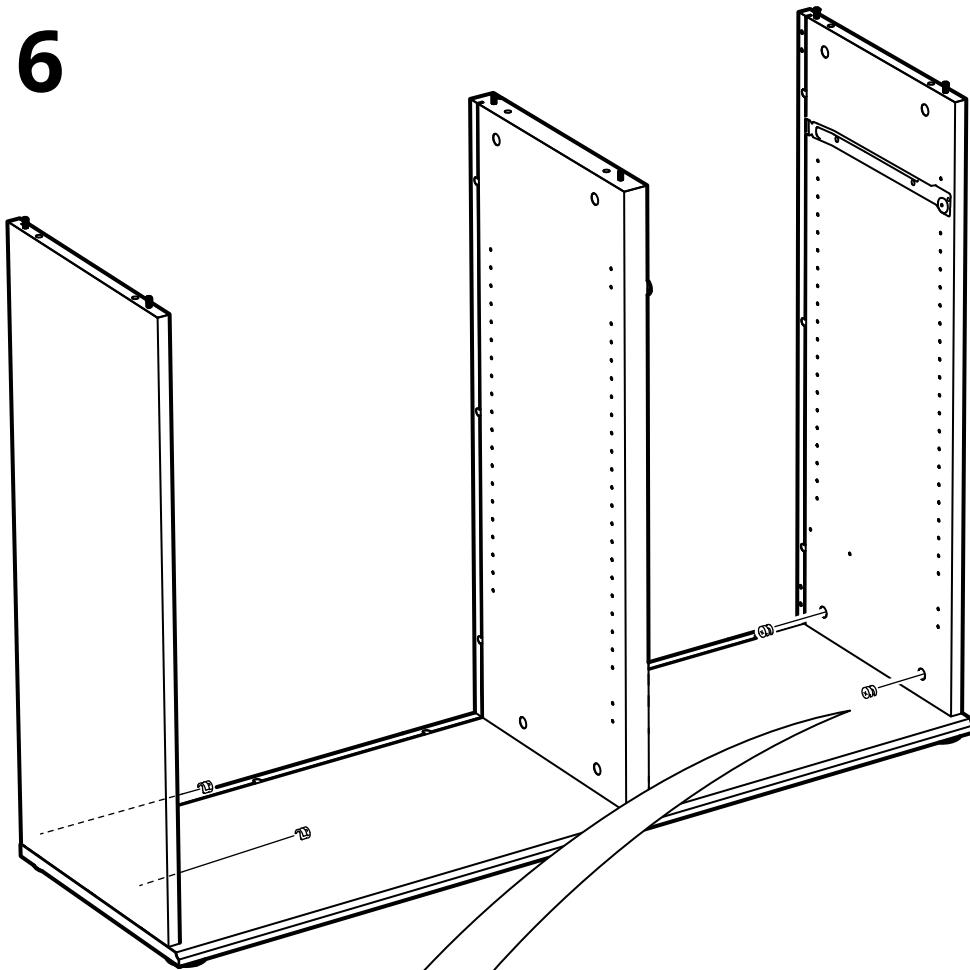 


4x

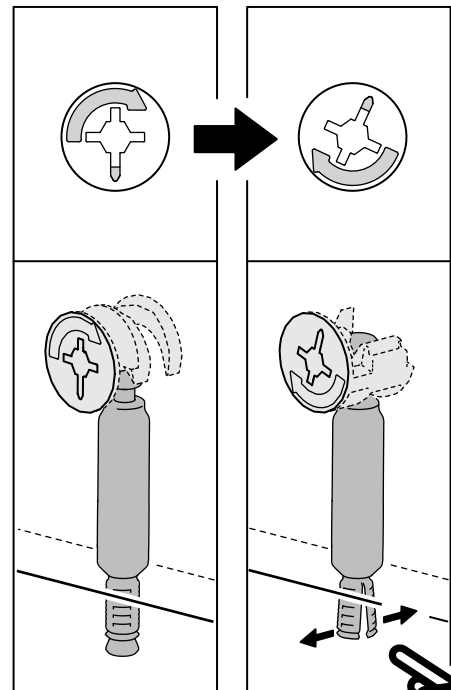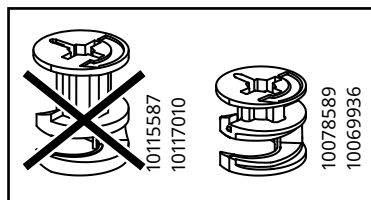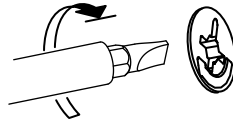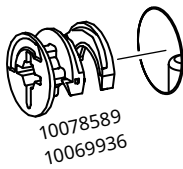    


7

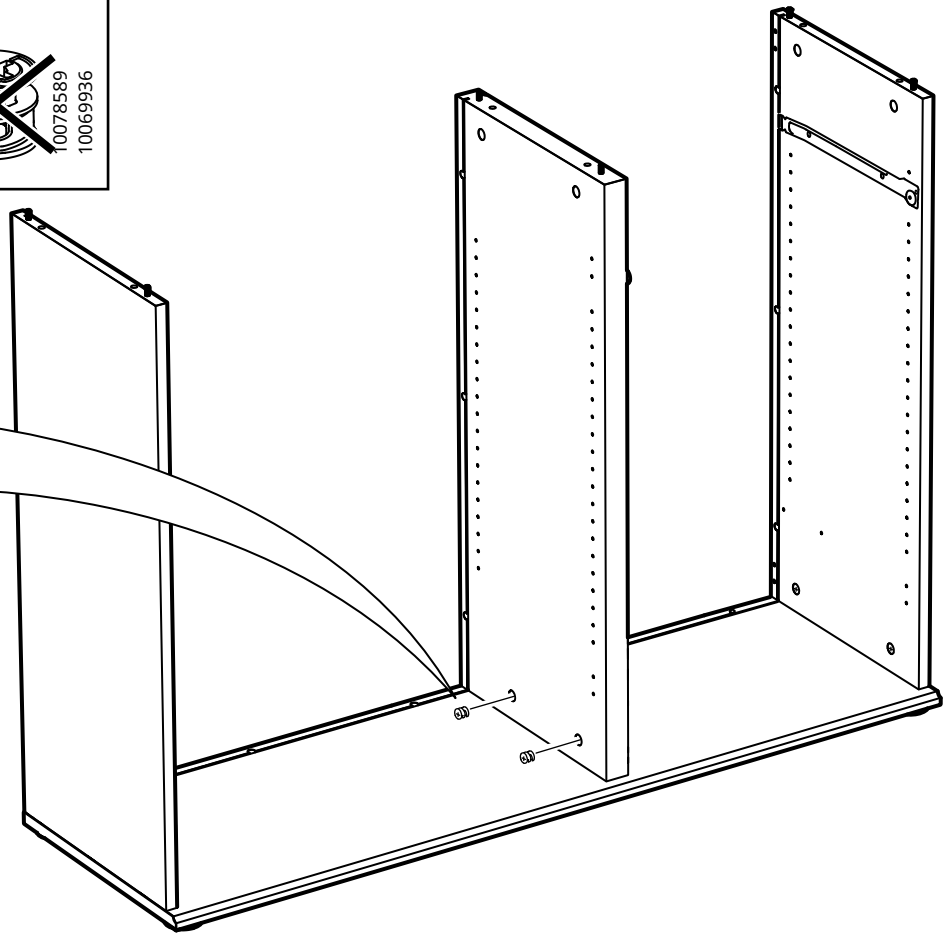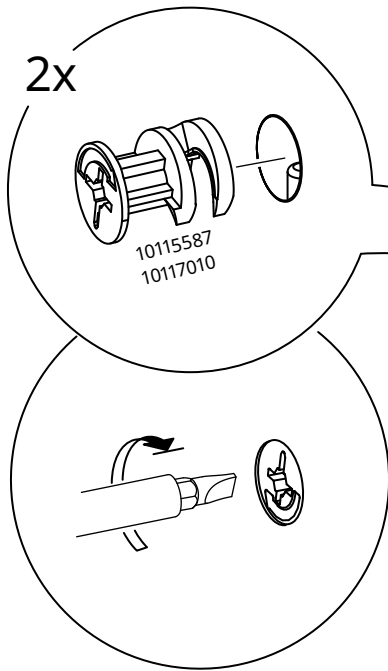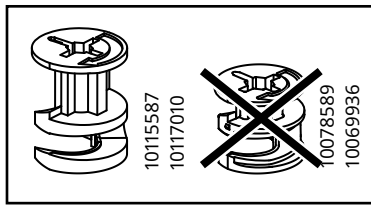   


8

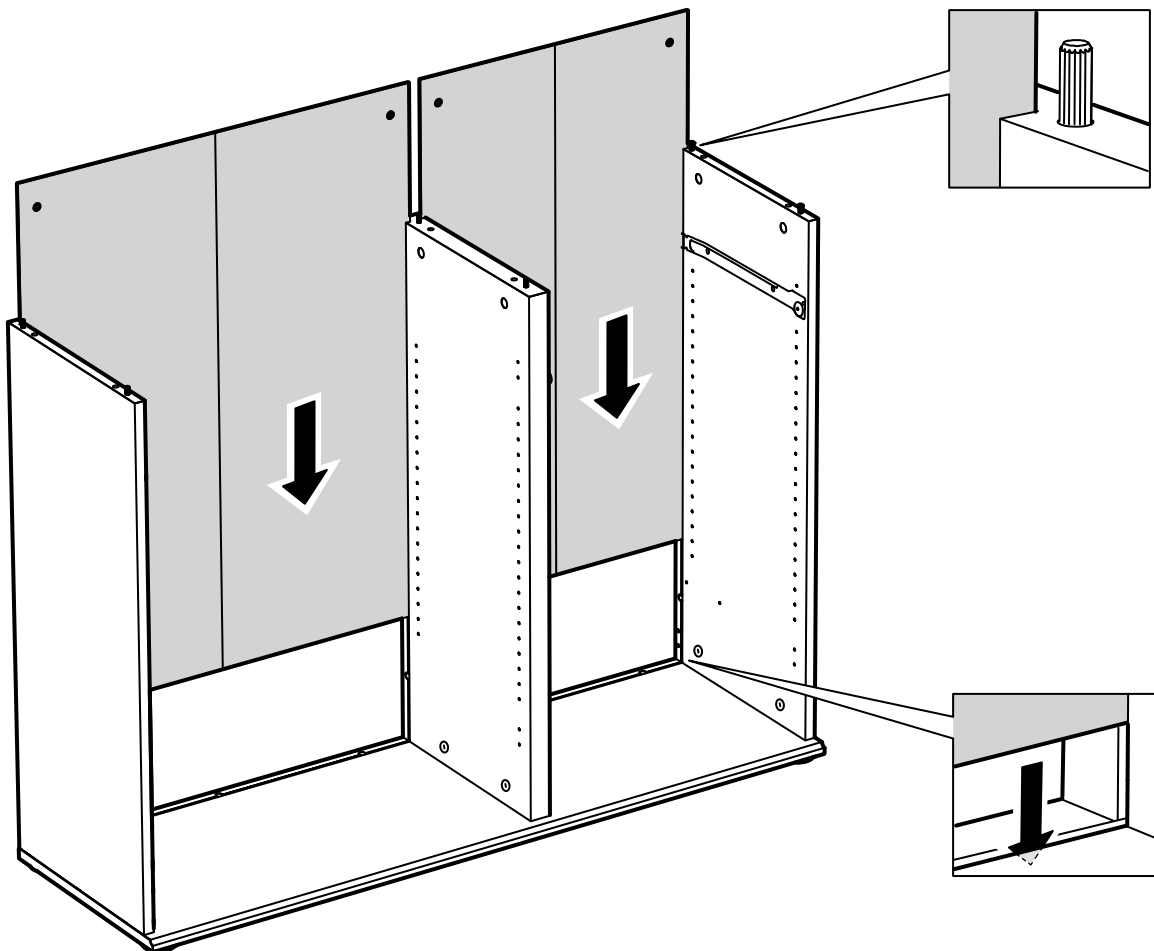 



9

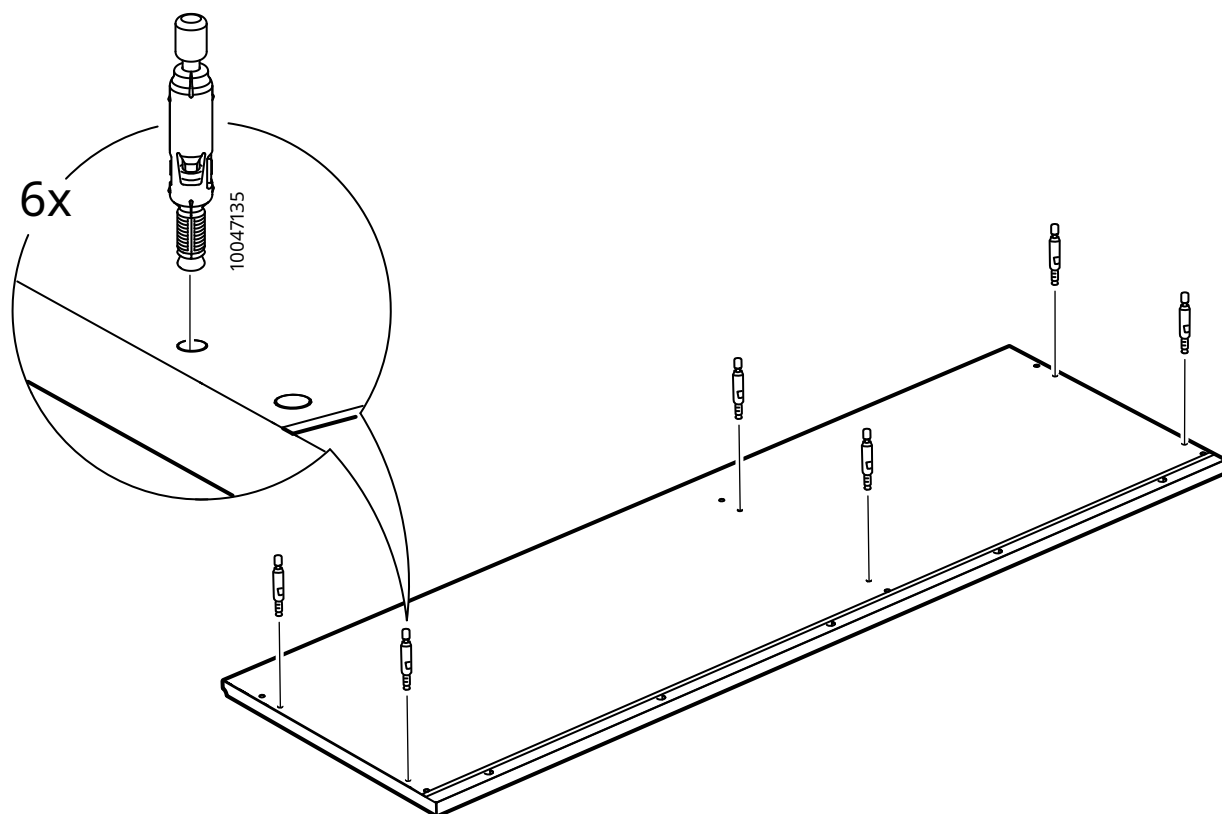 



10

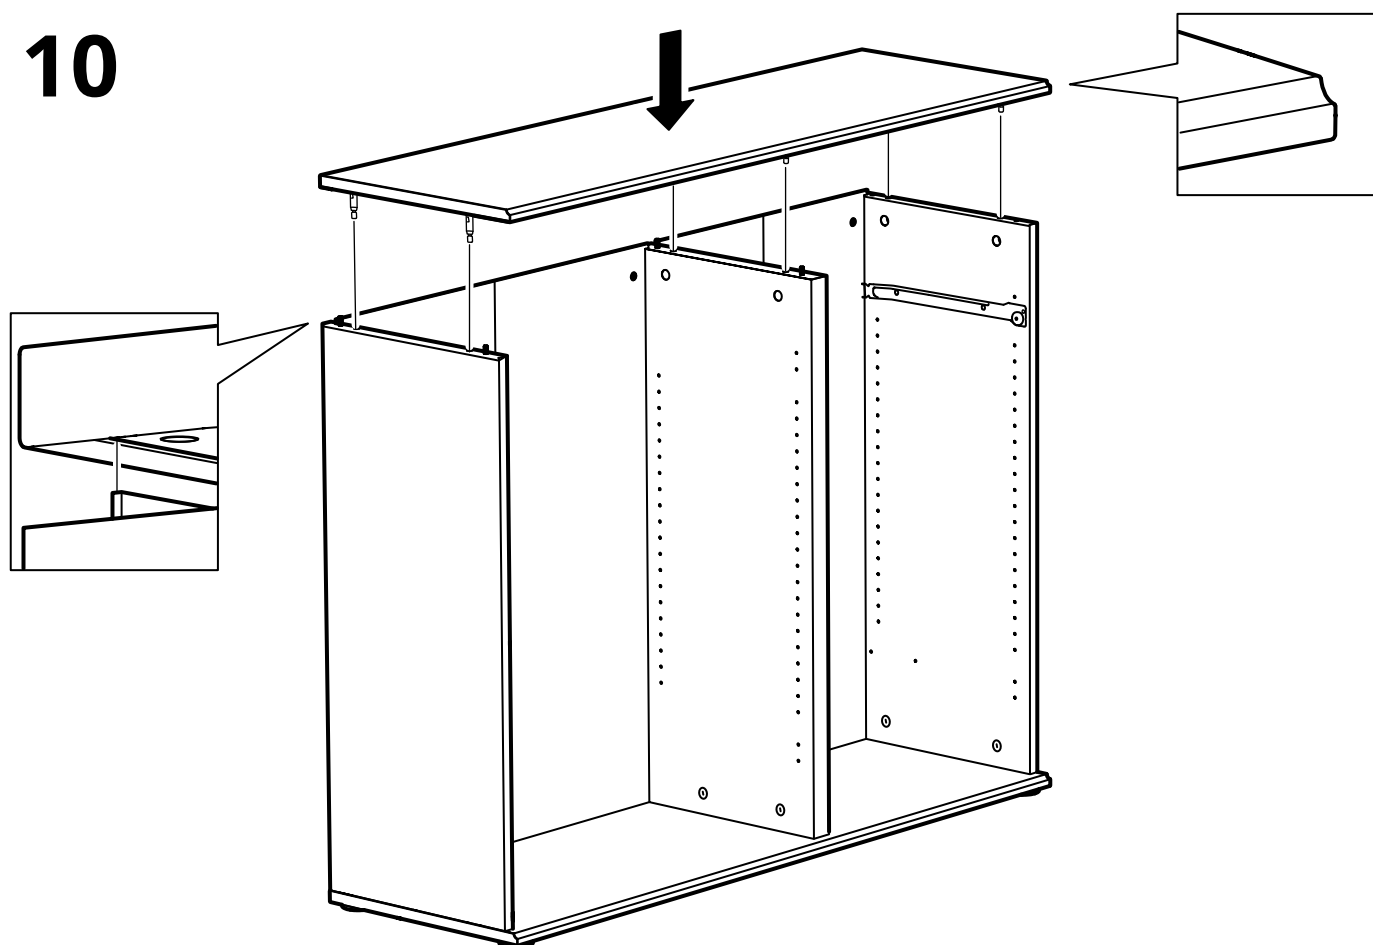 


11

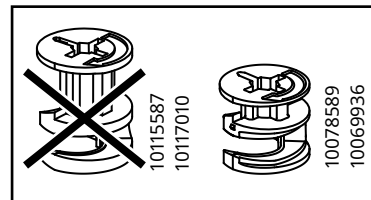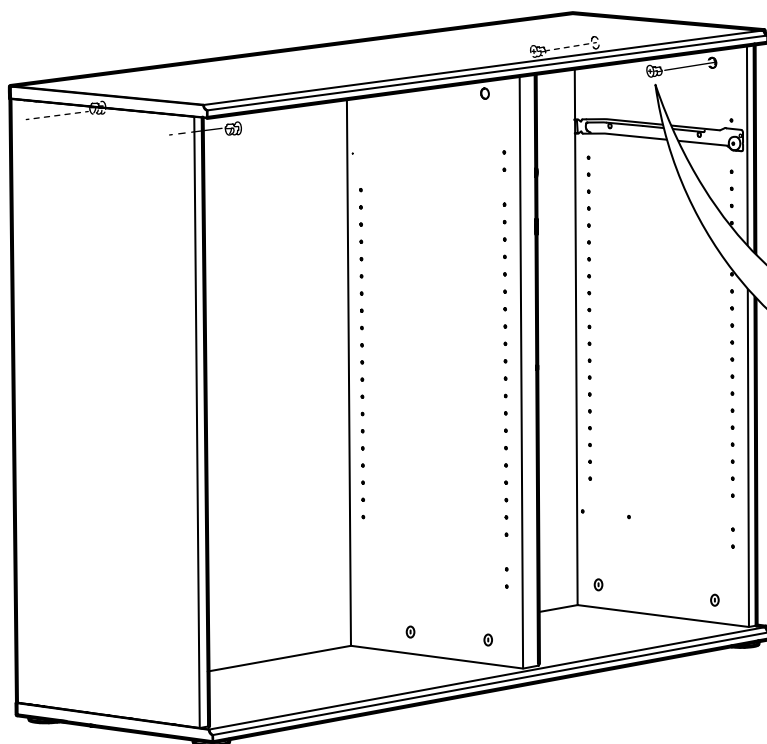  



4x

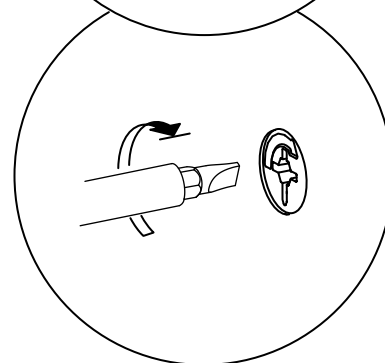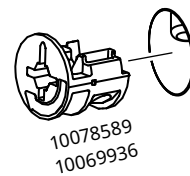  



12

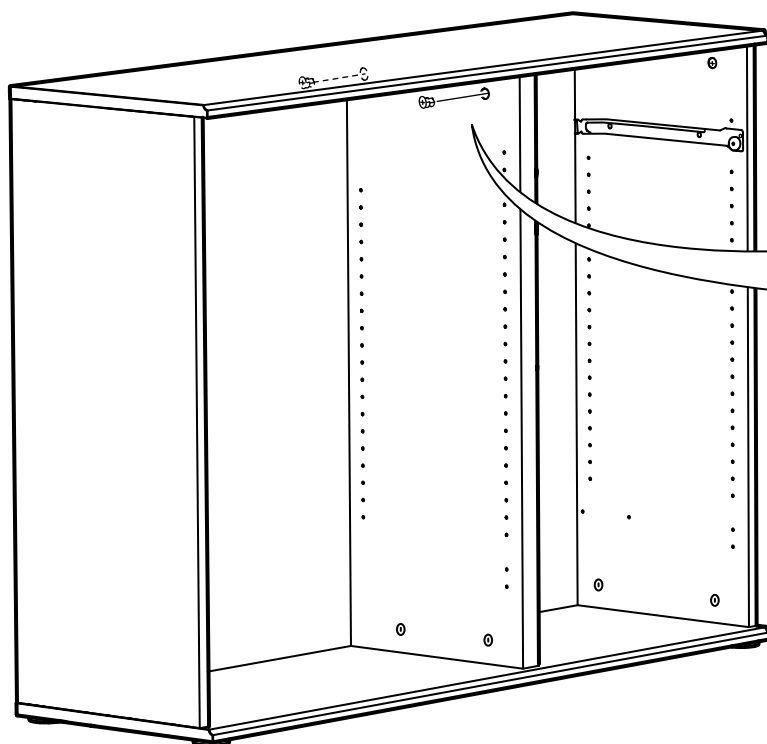 




2x

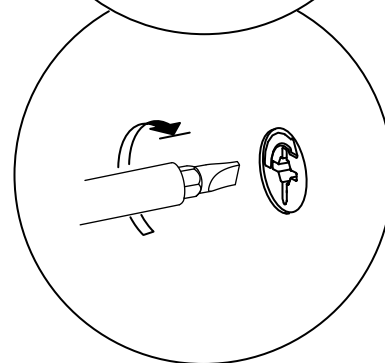 
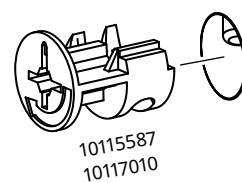 


13

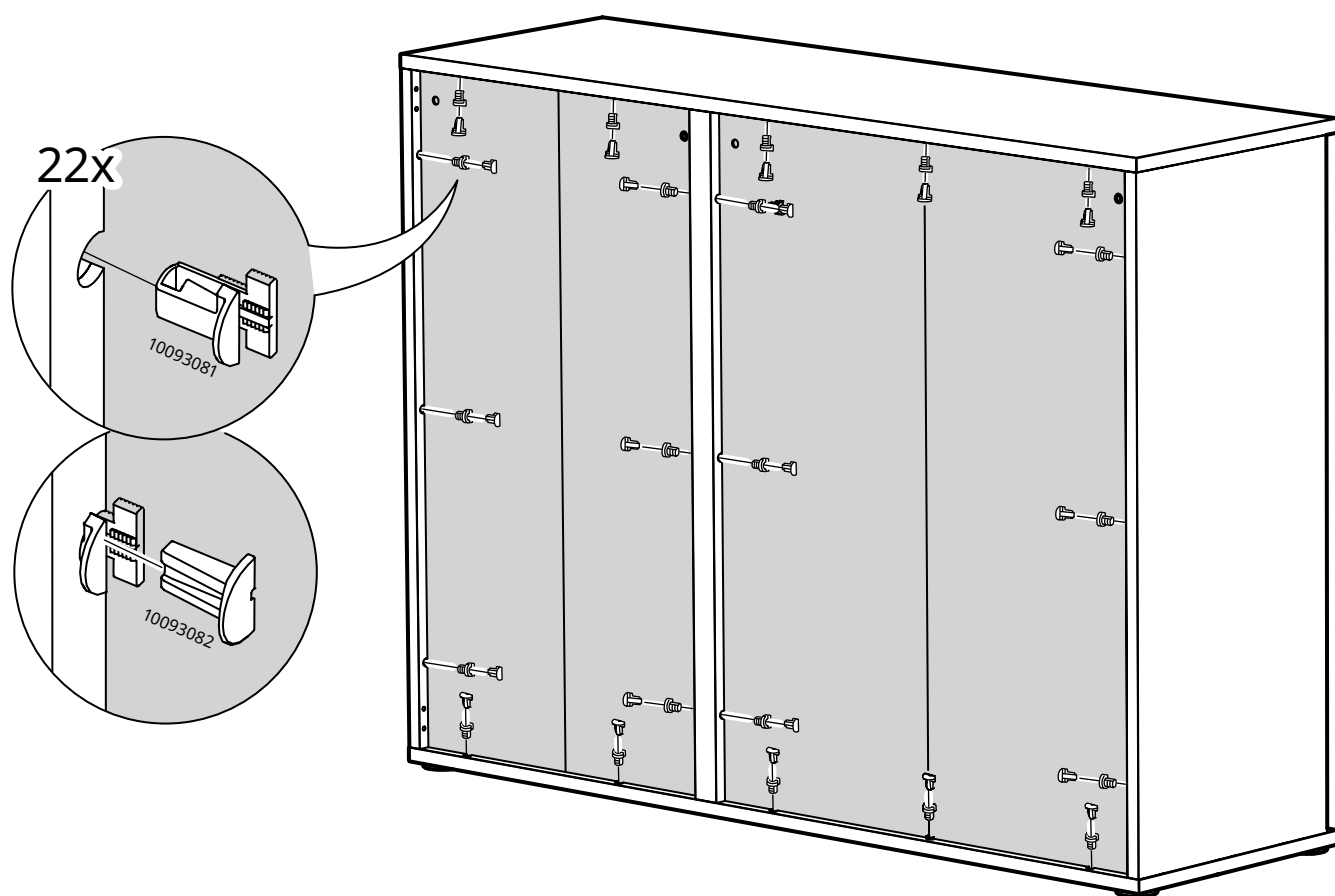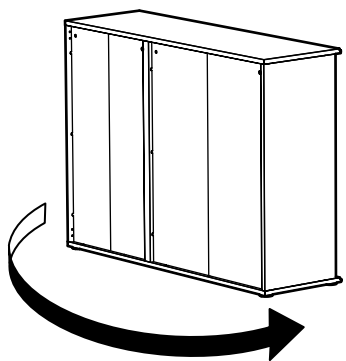  



14

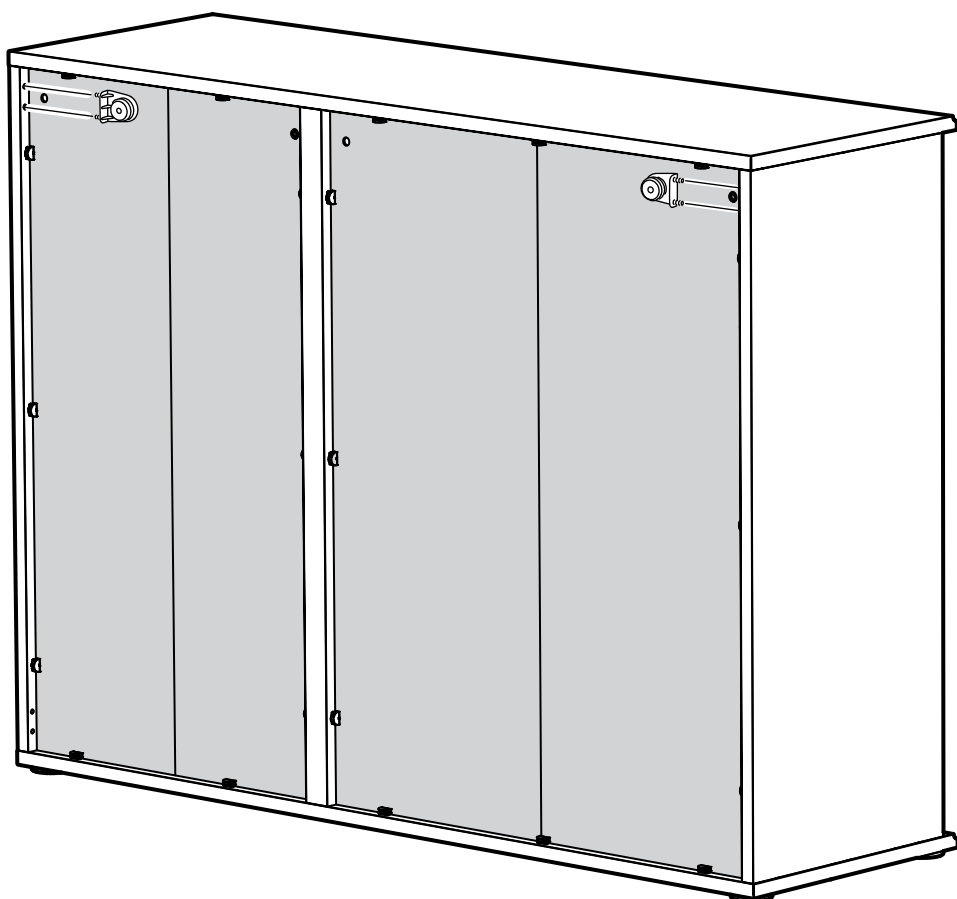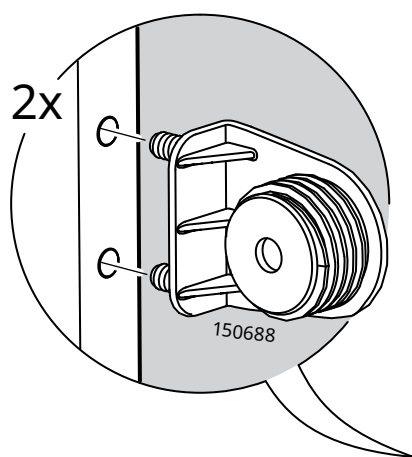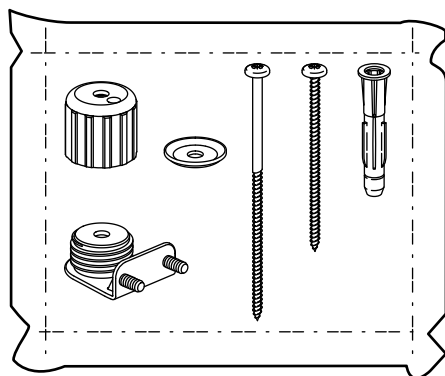   


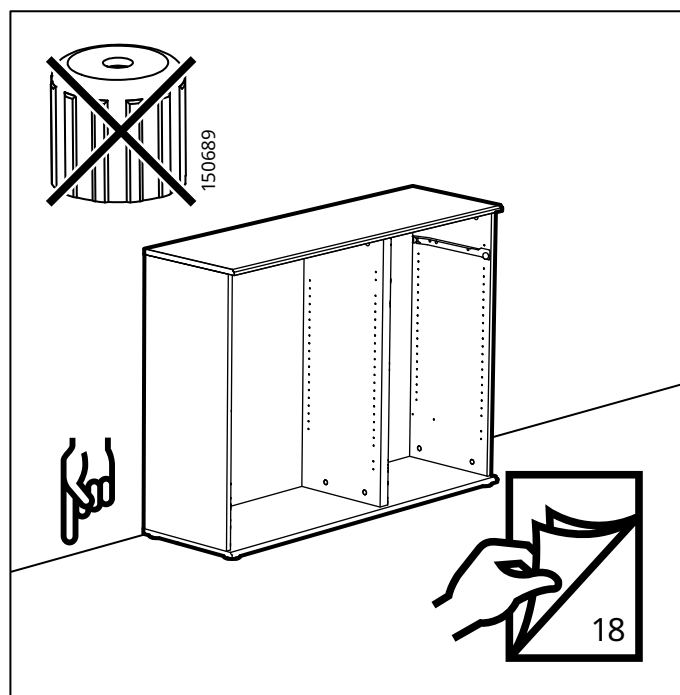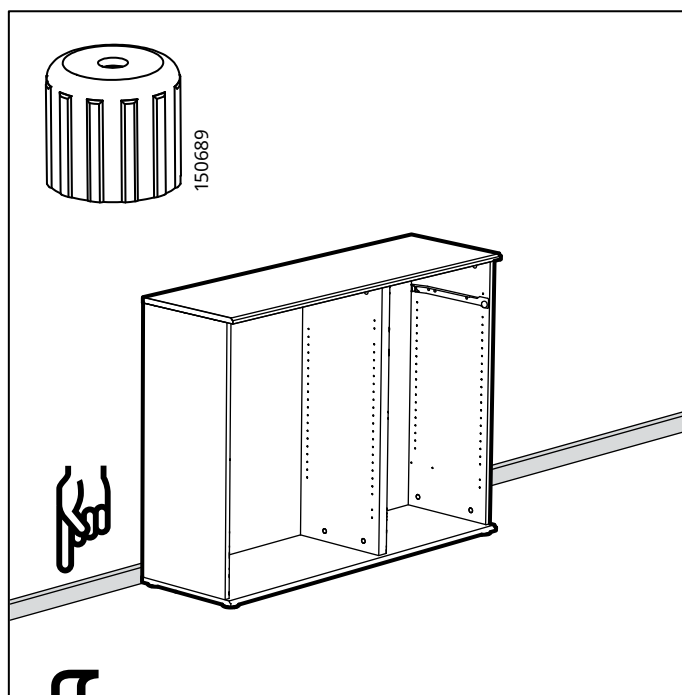  


15

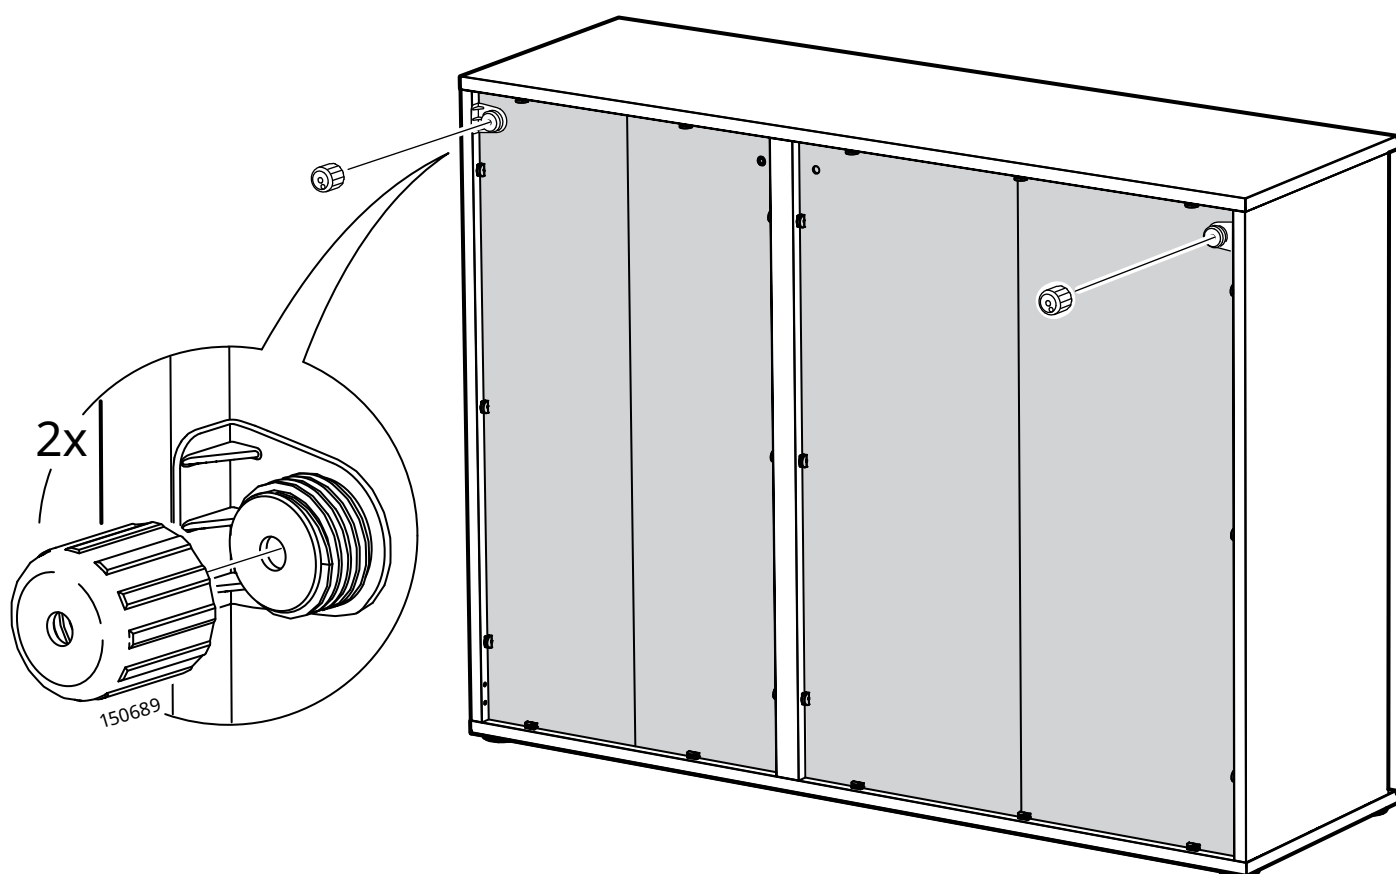 

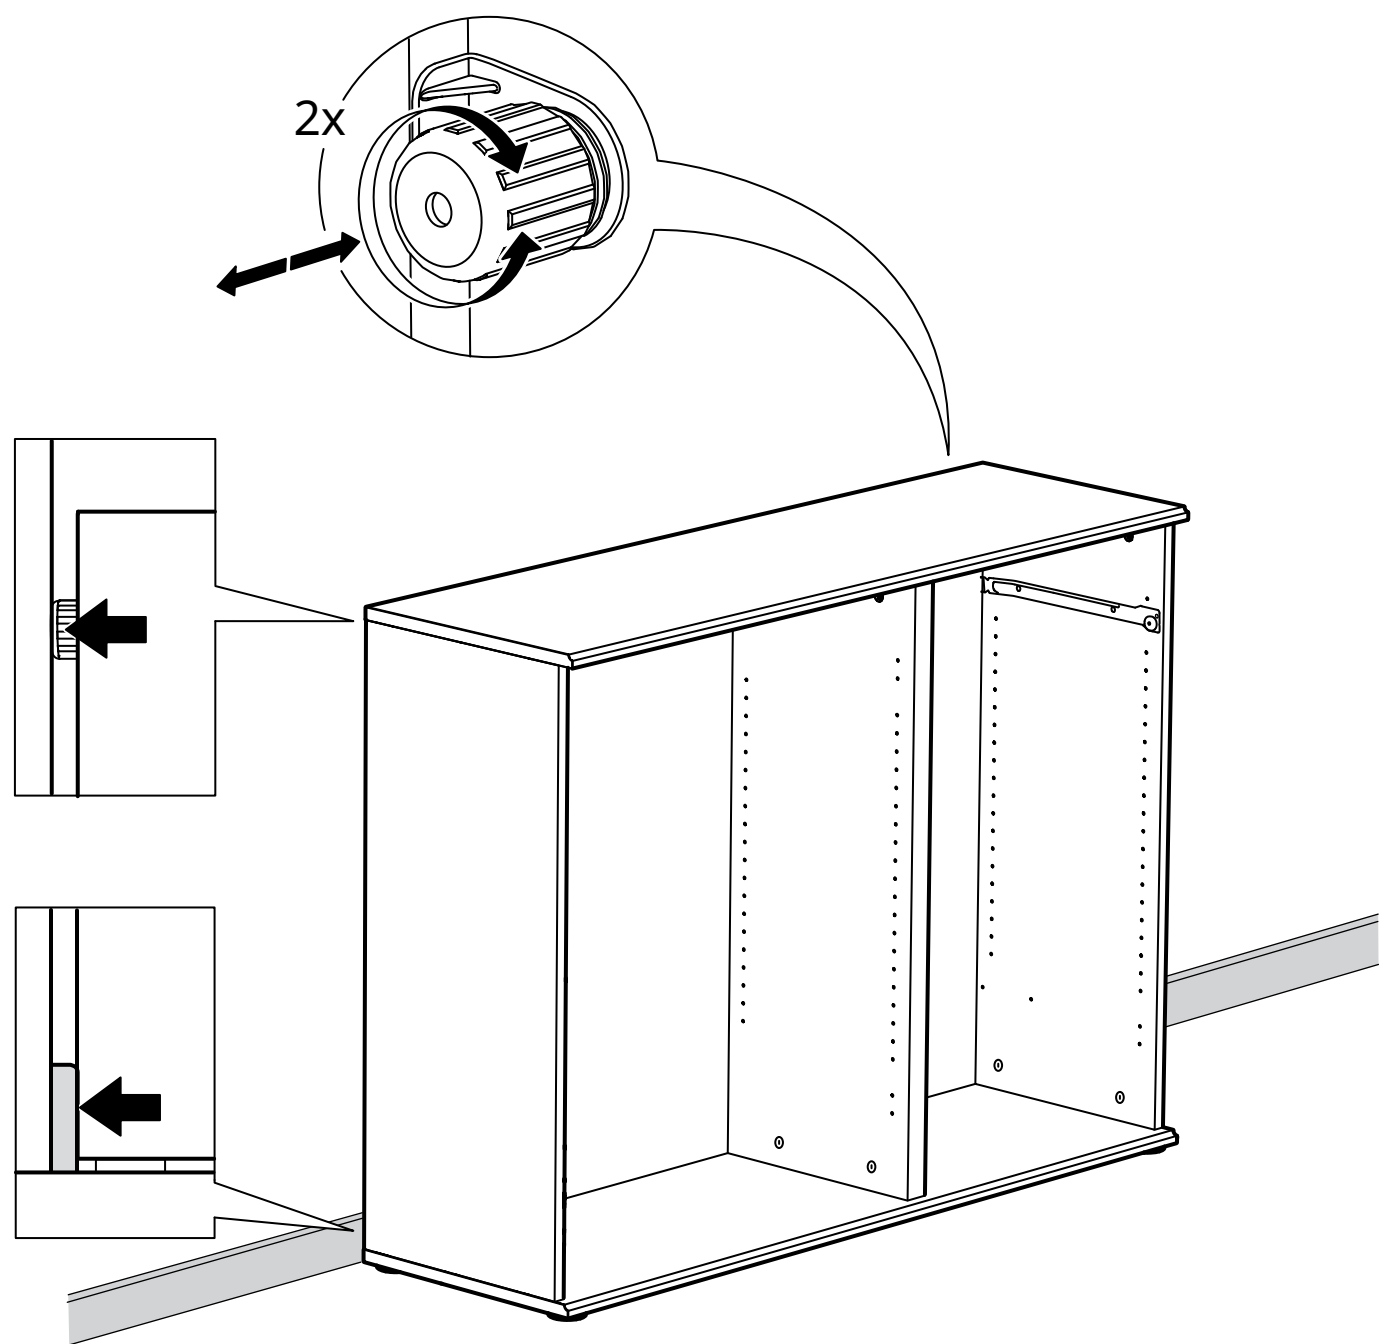 


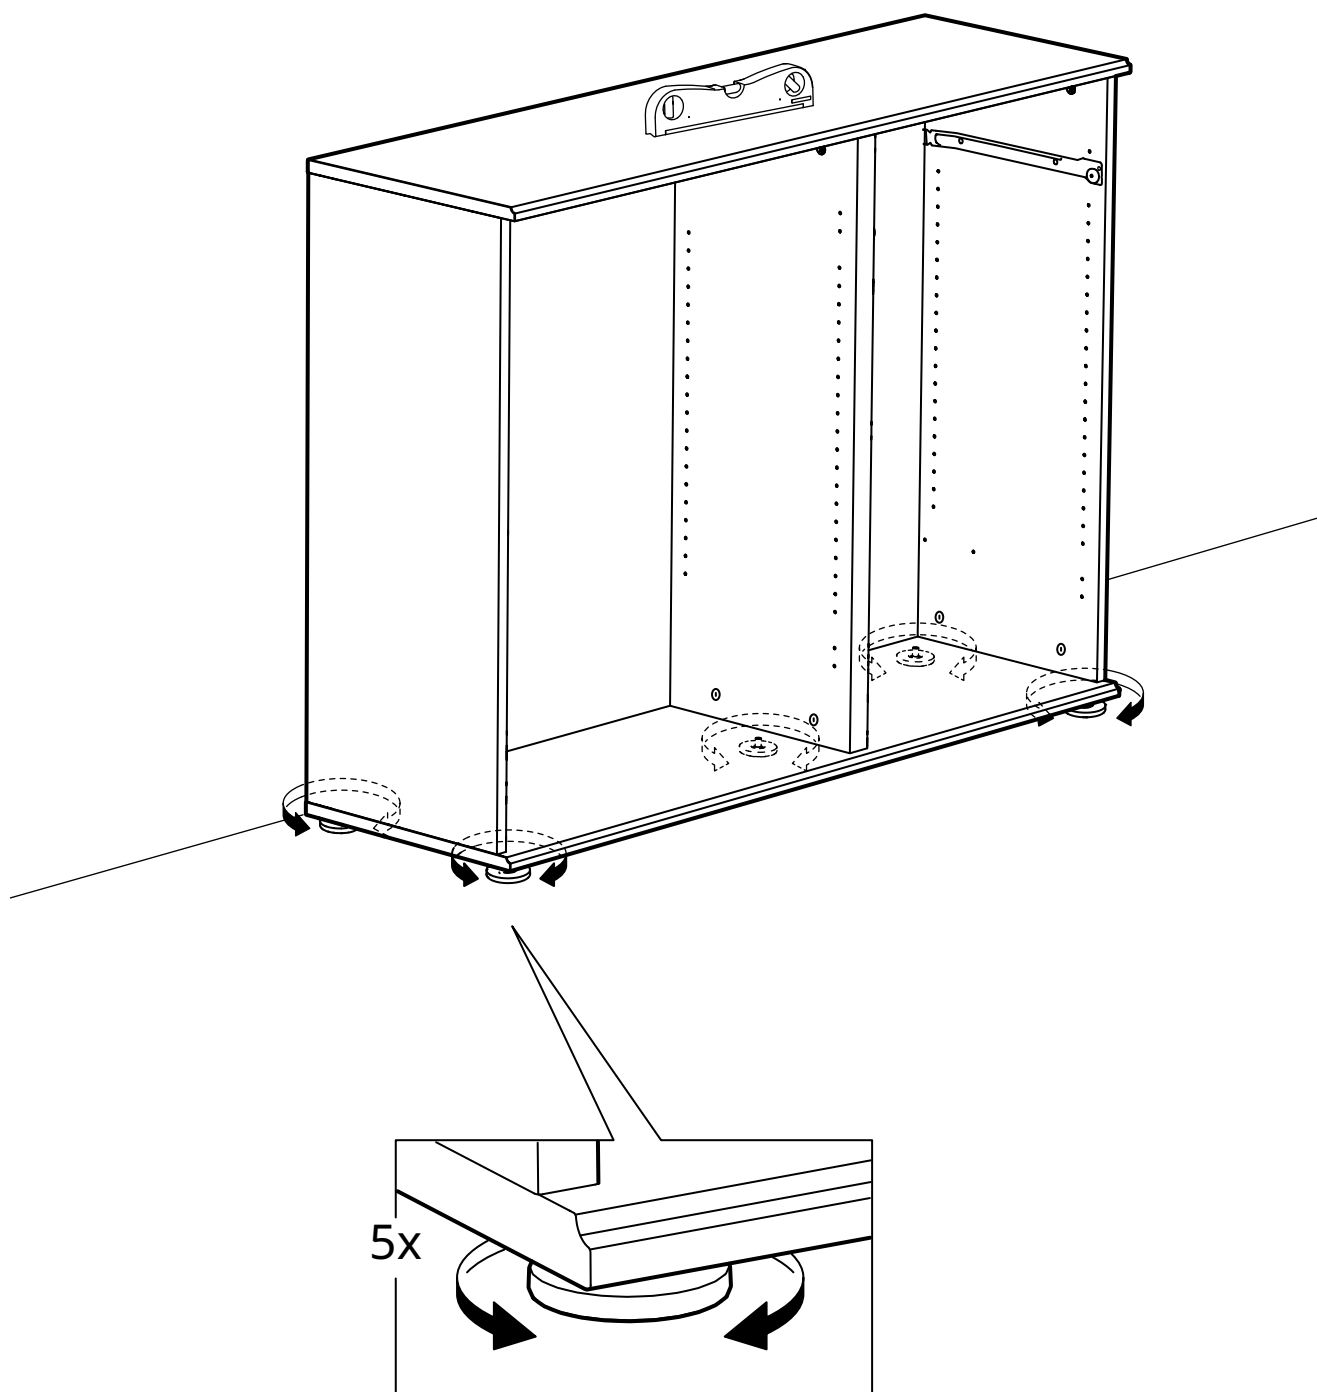 

18

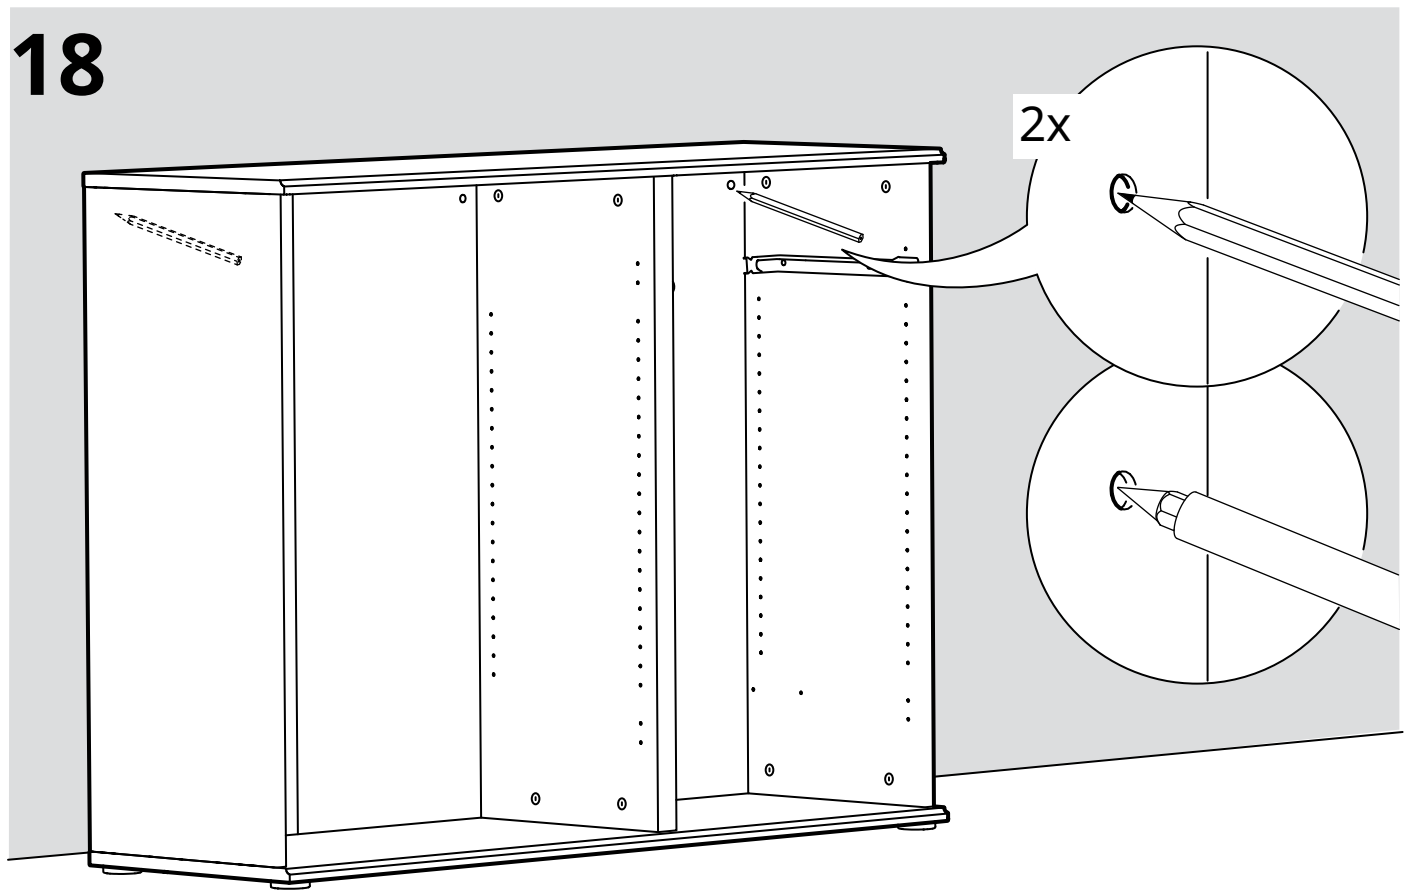 


19

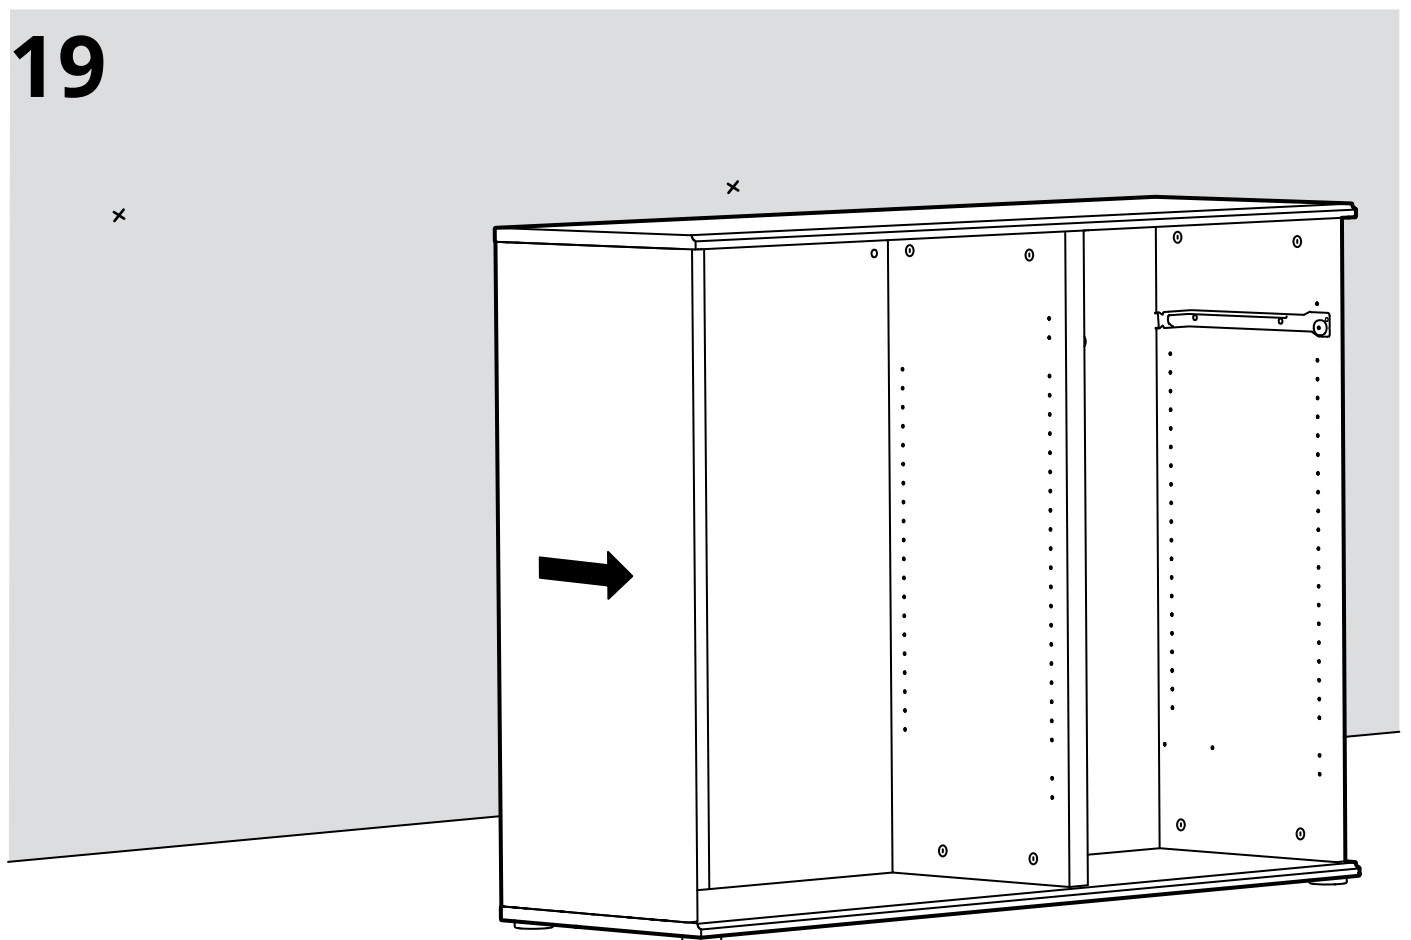 




www.IKEA.com/secure-it

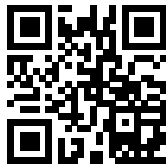 

www.IKEA.cn/secure-it

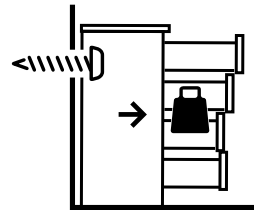 


19

English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

 
A

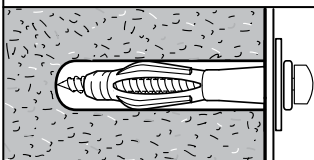


Ø 8 mm
(5/16")



 
1




2

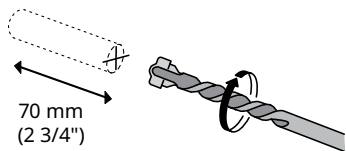 

3

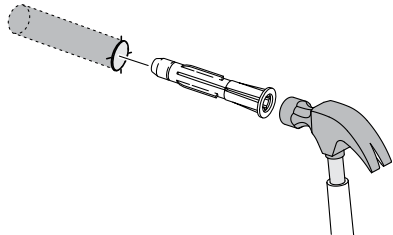 


B

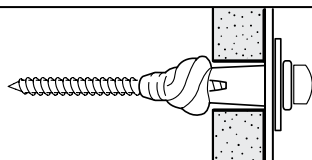 


Ø 8 mm
(5/16")



 
1




2

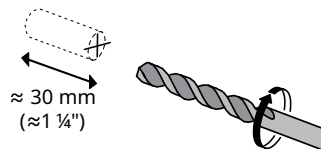 

3

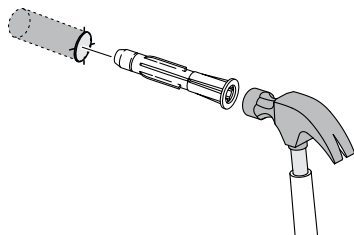 


C

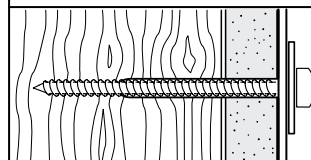 


Ø 3 mm
(1/8")





 1










2

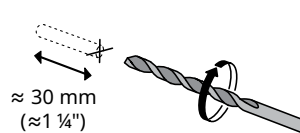 

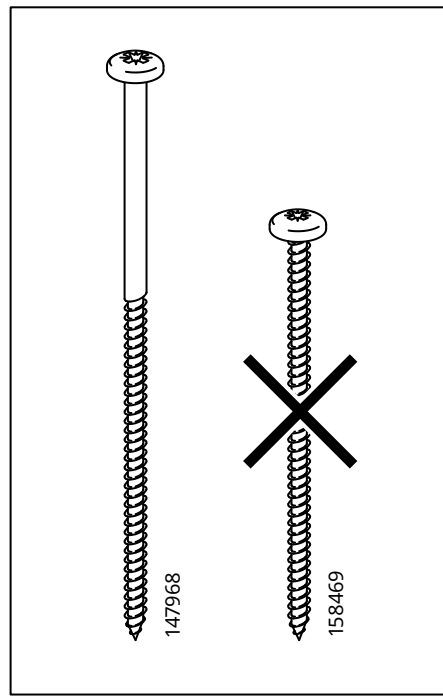 
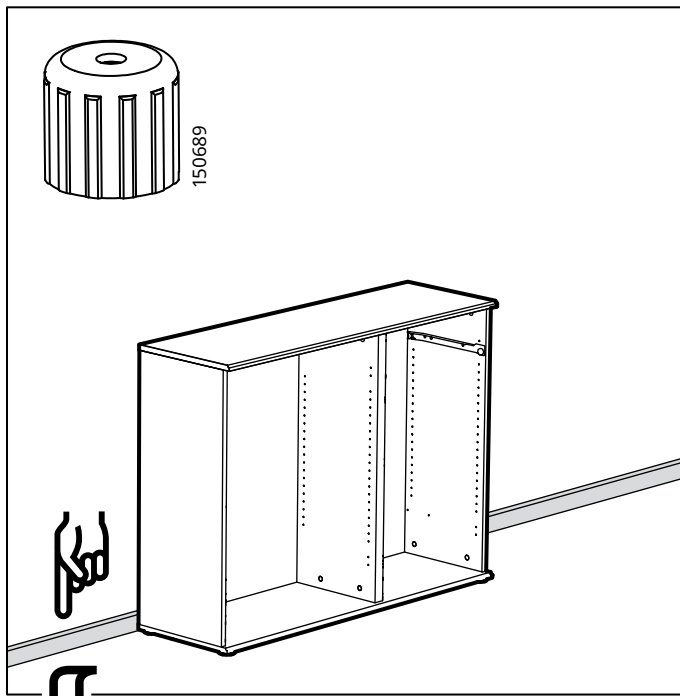 


20

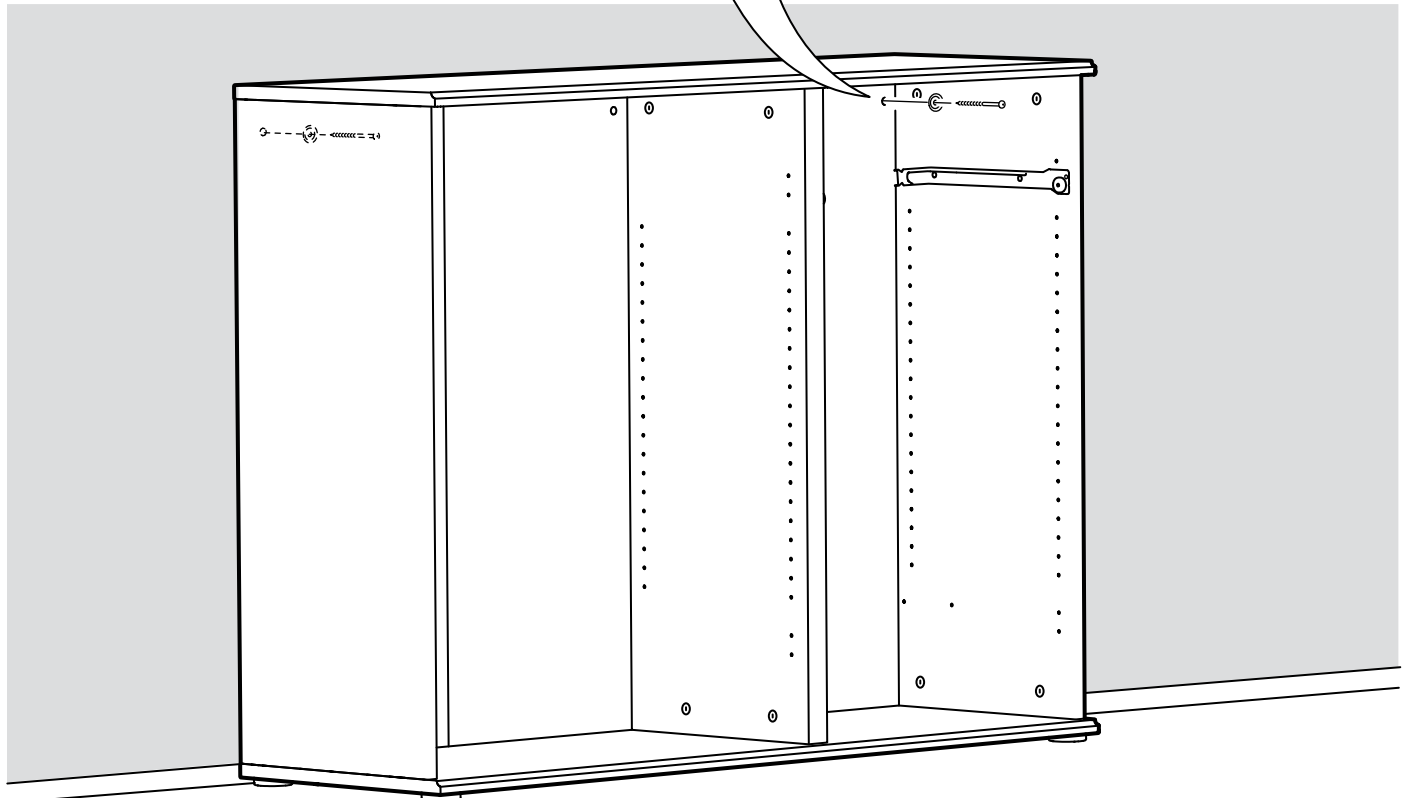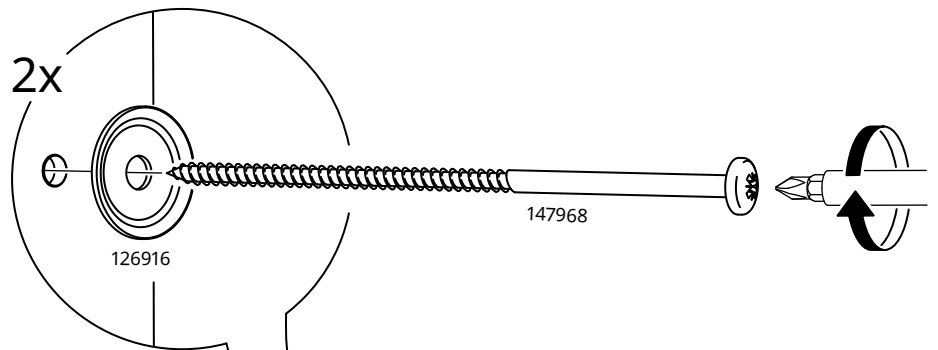  
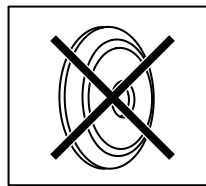 


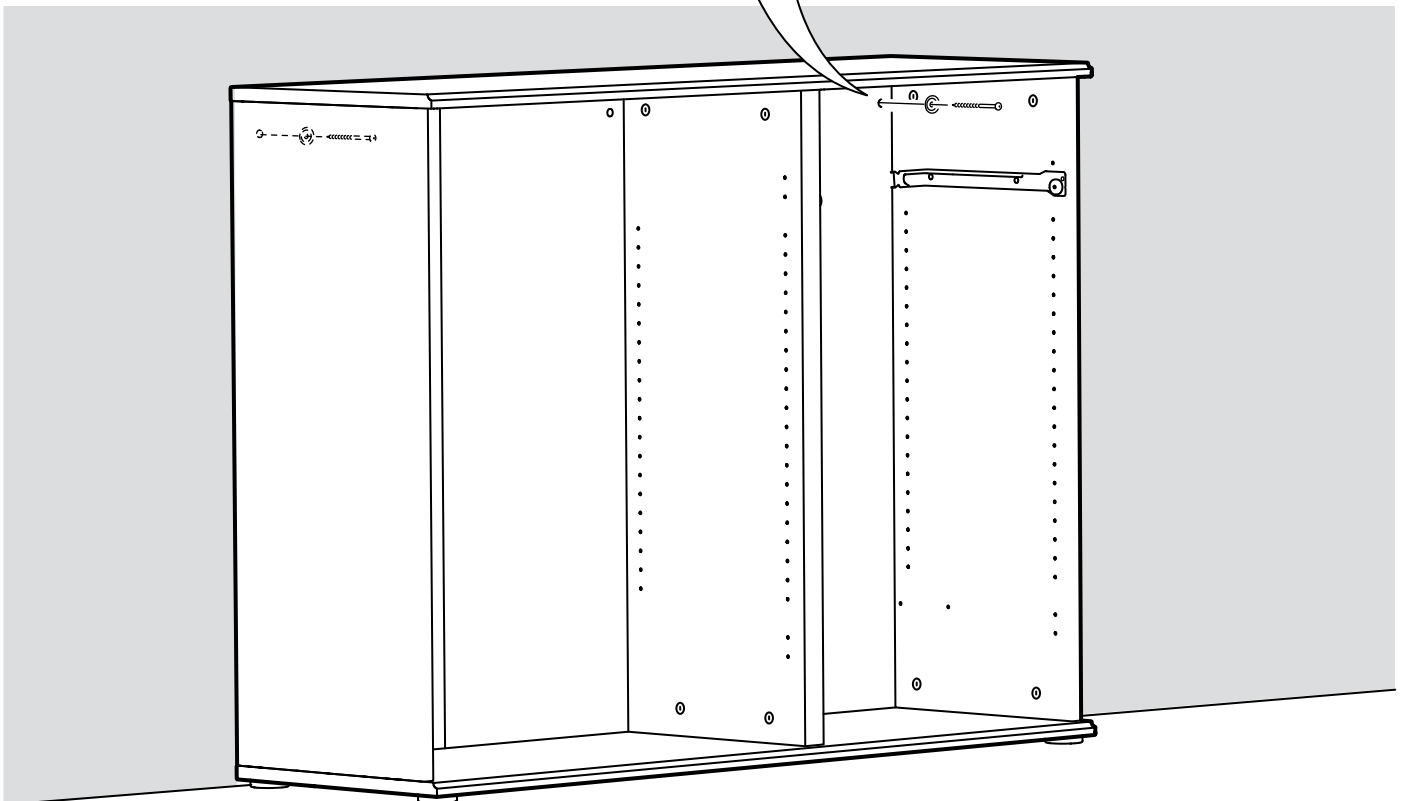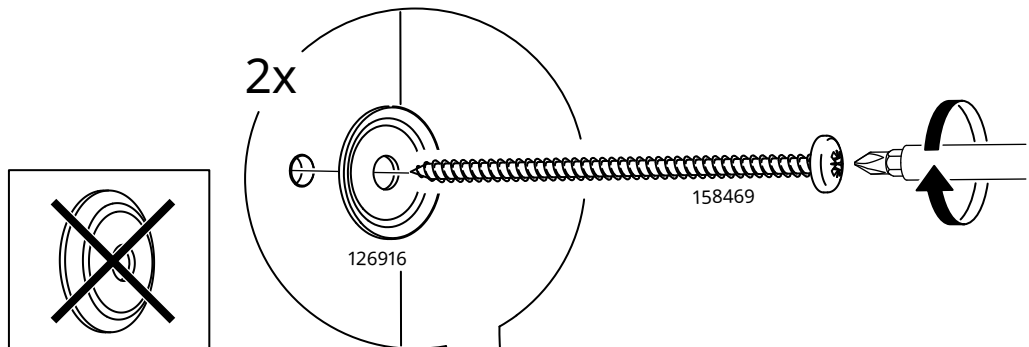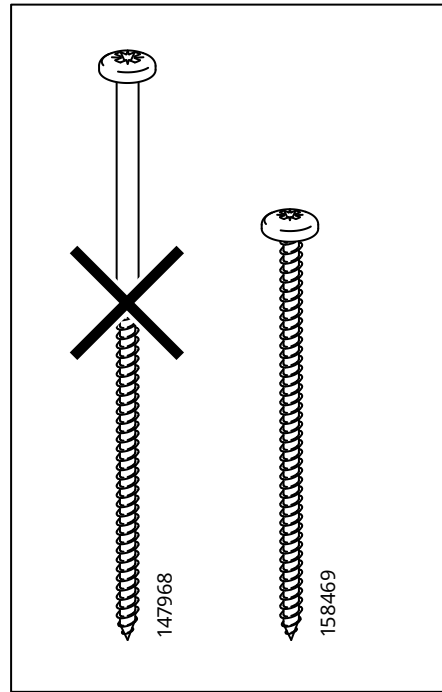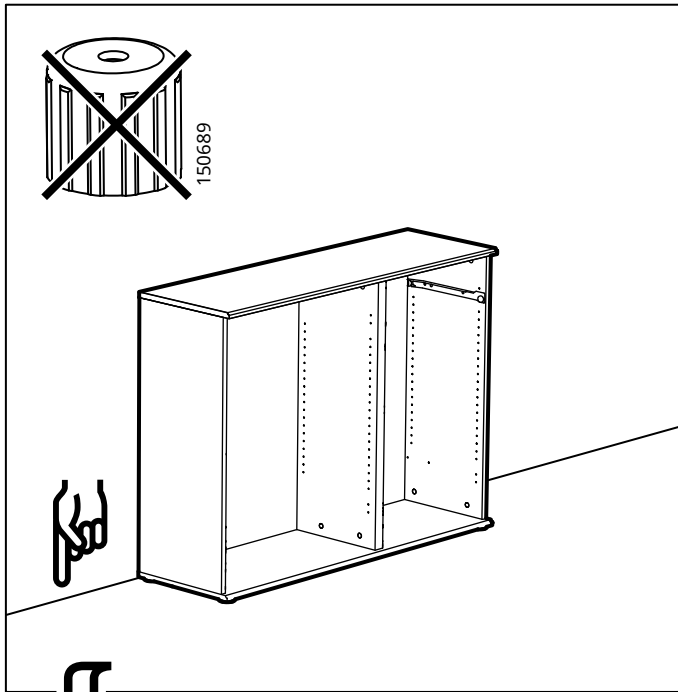    


22

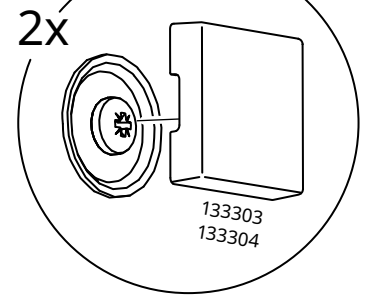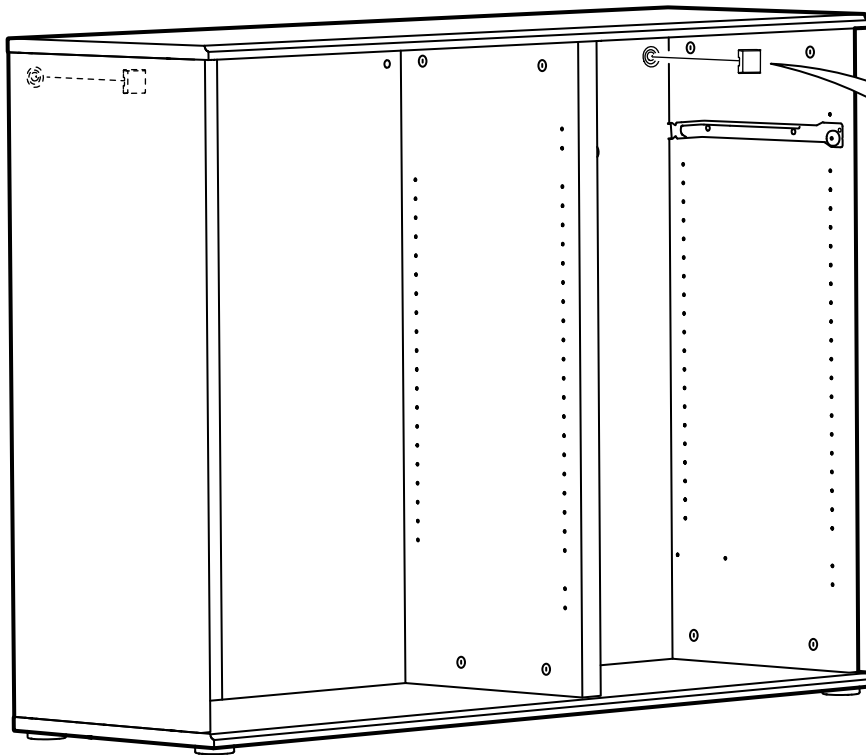  


23

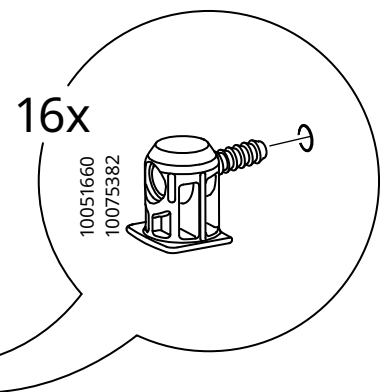 
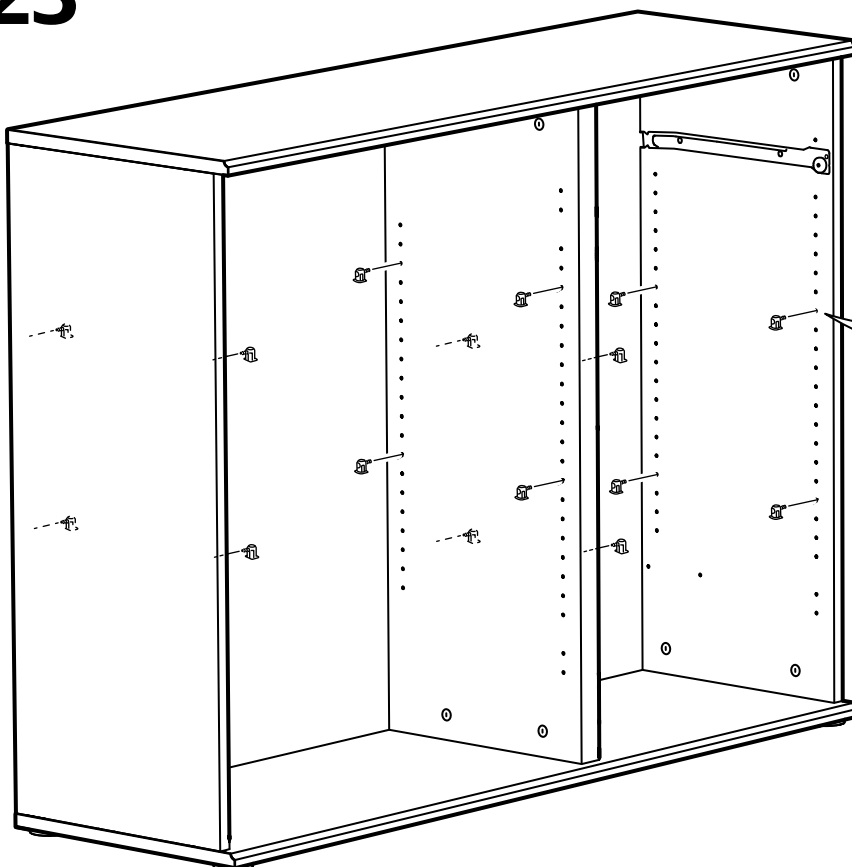 



24

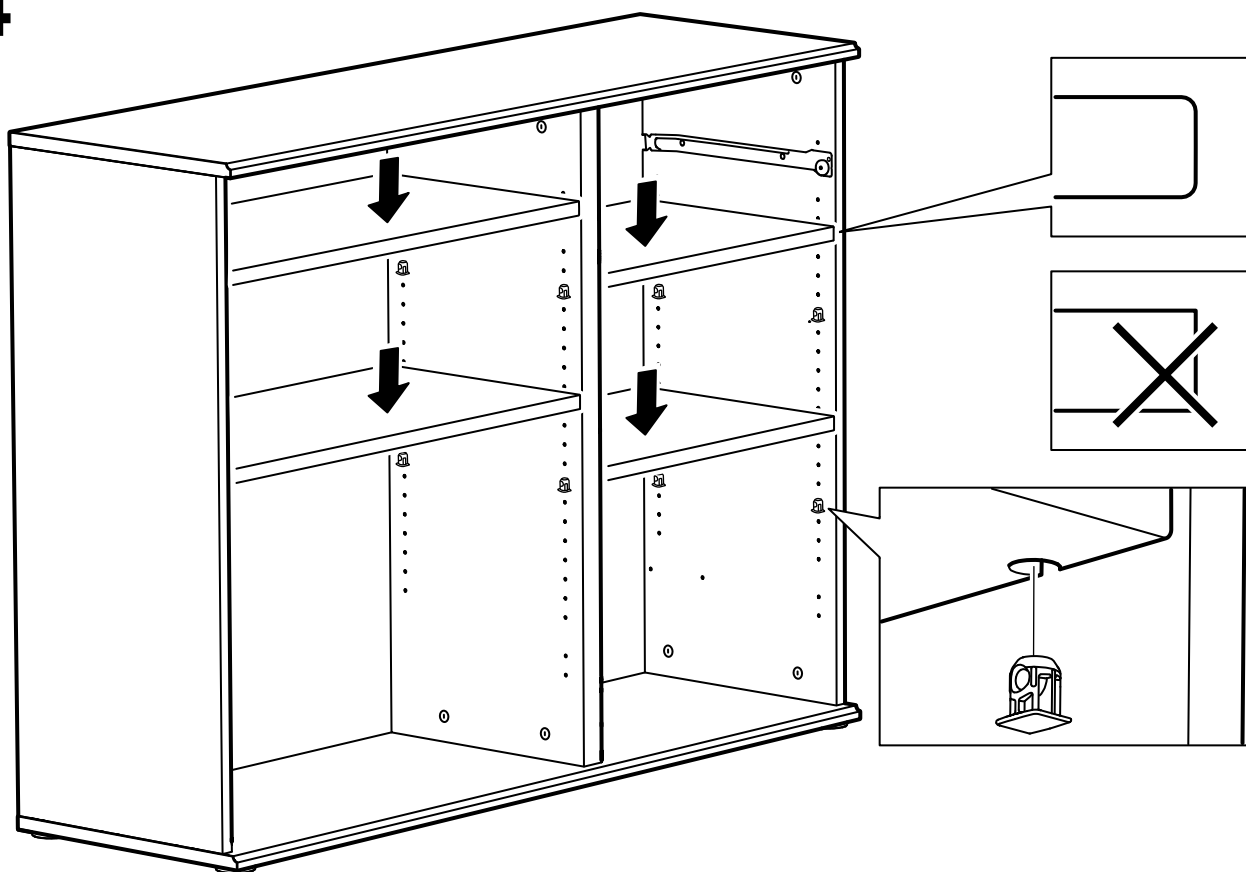 



25

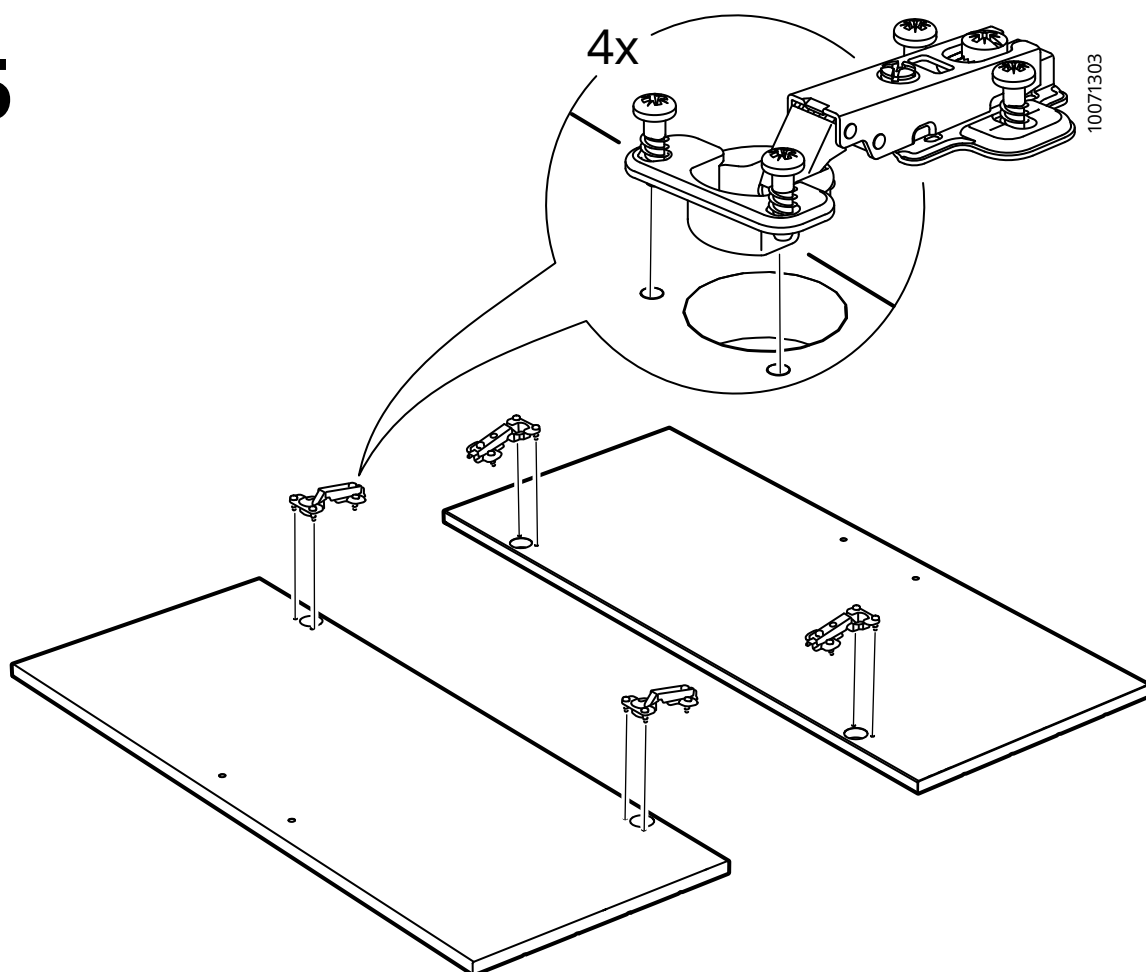 

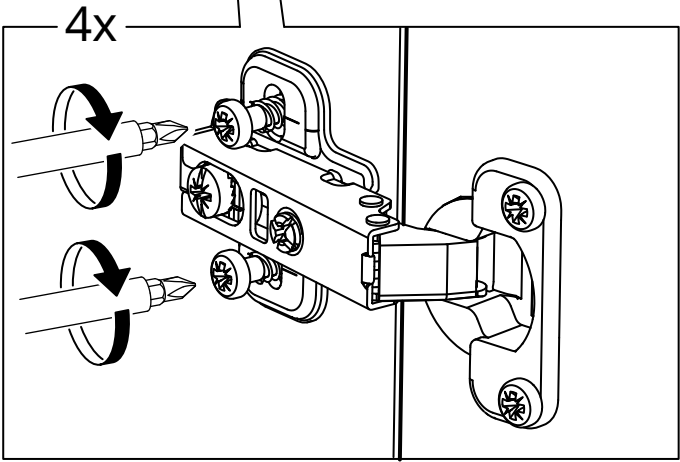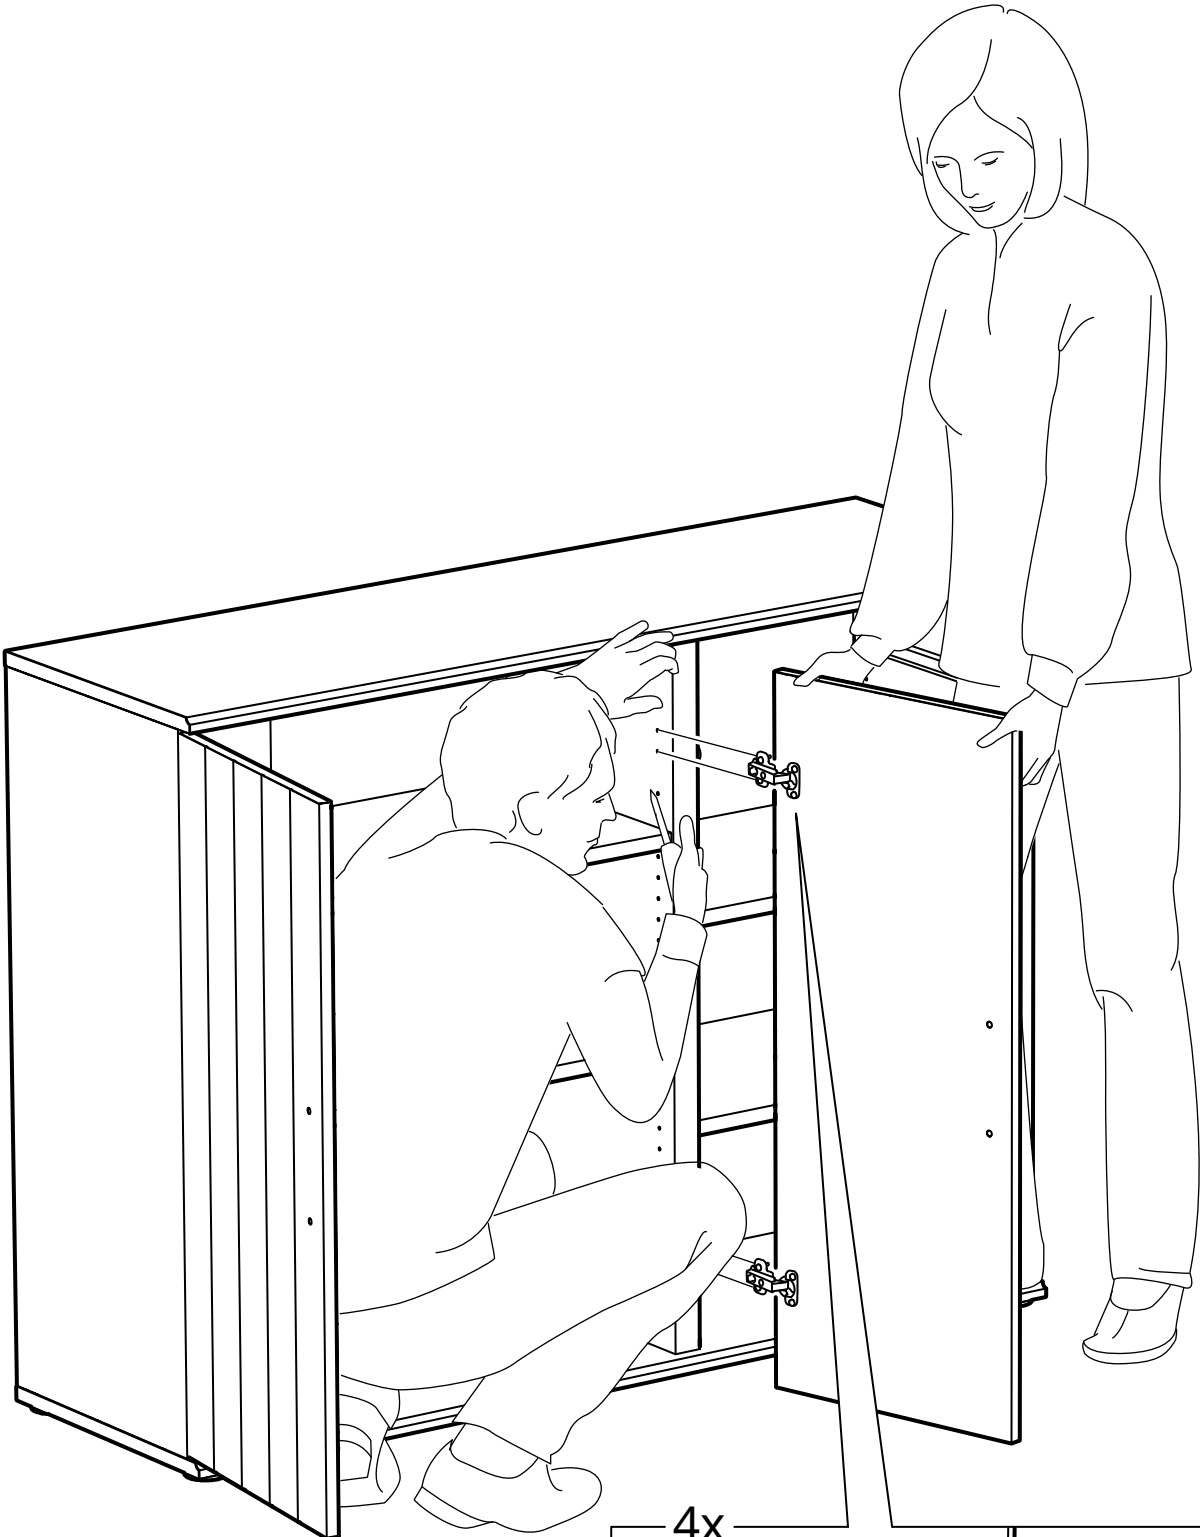  


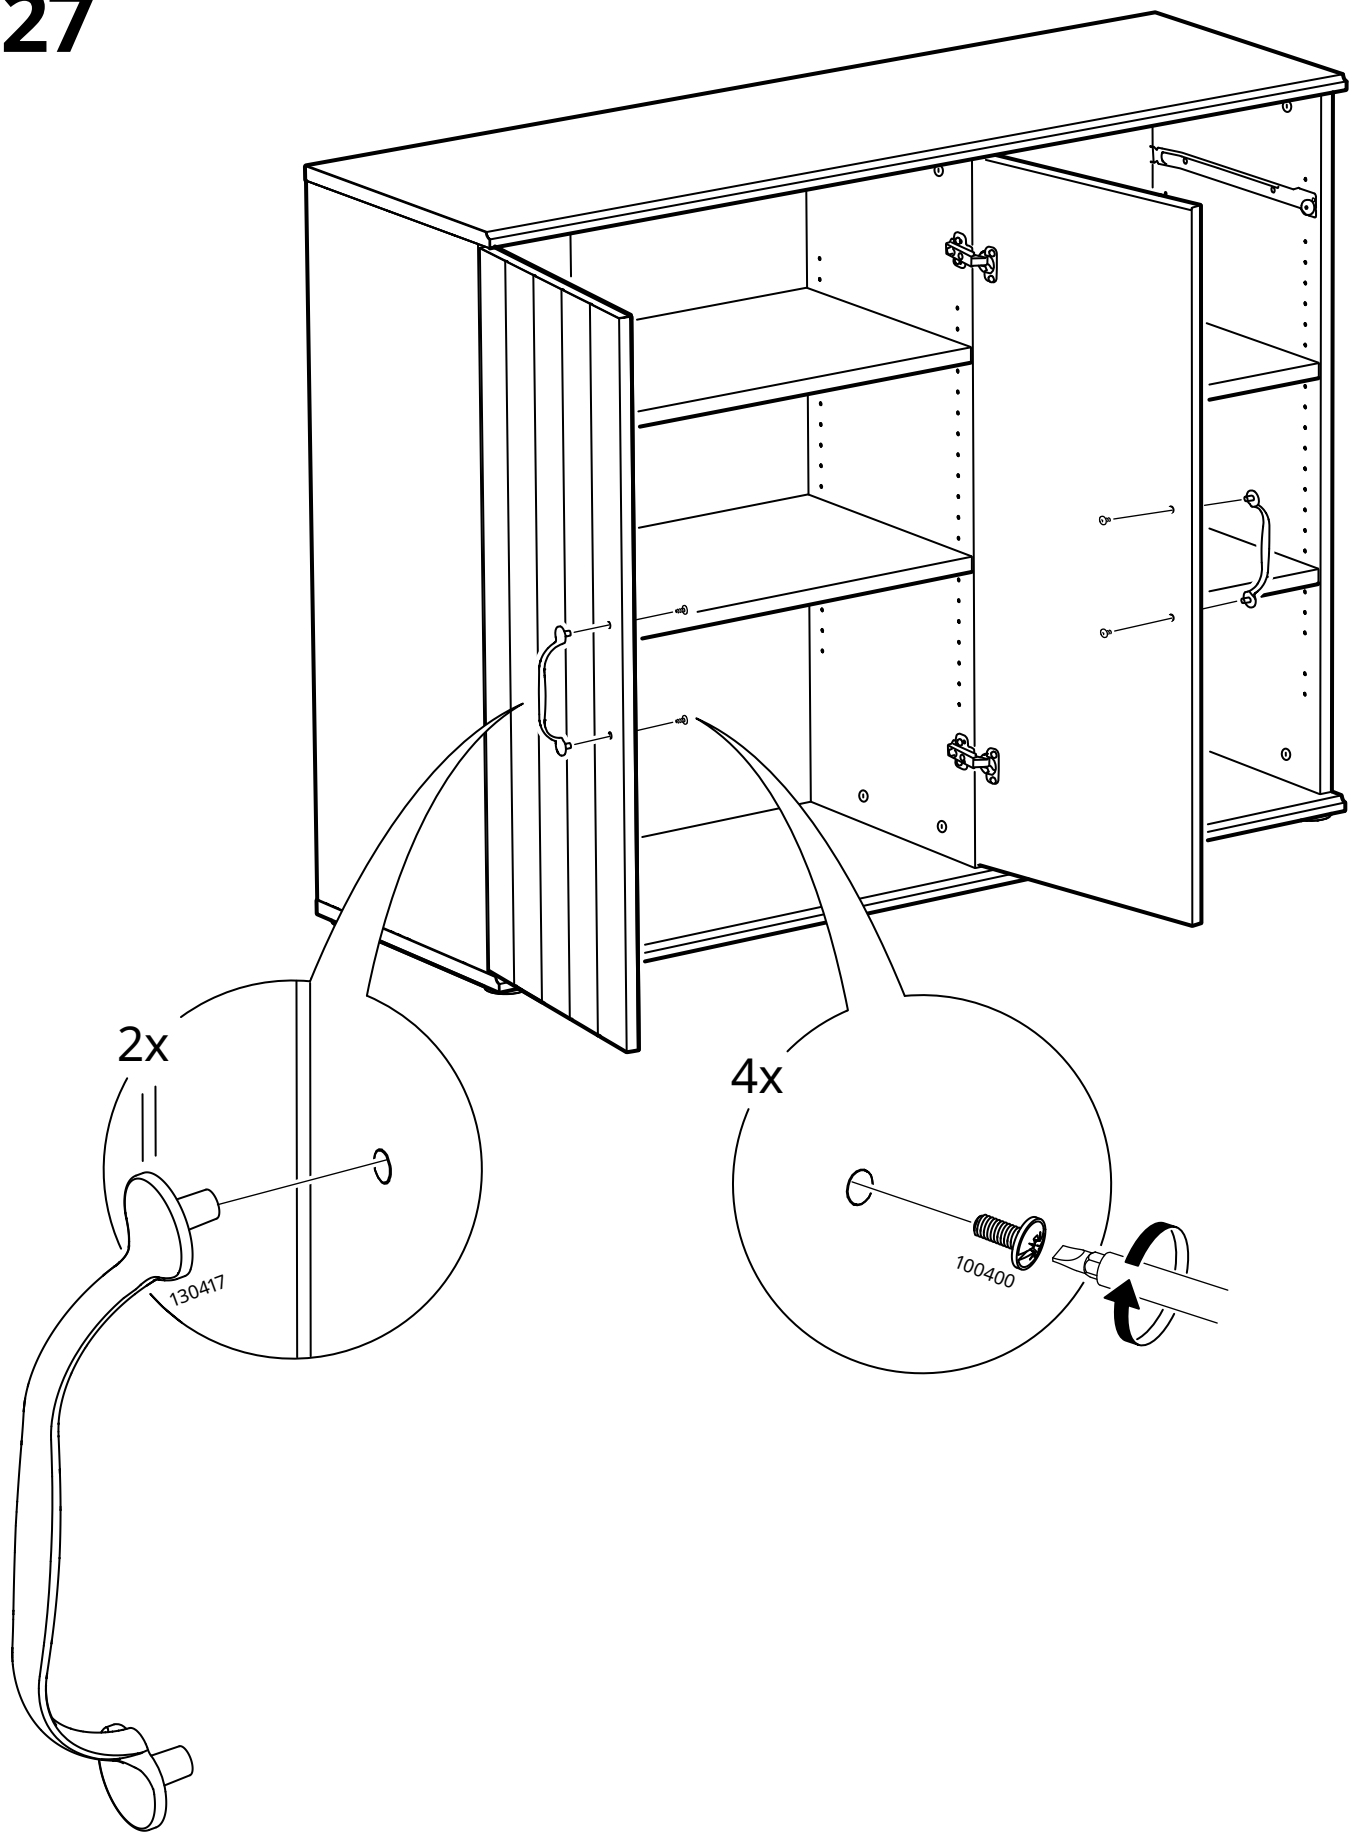 

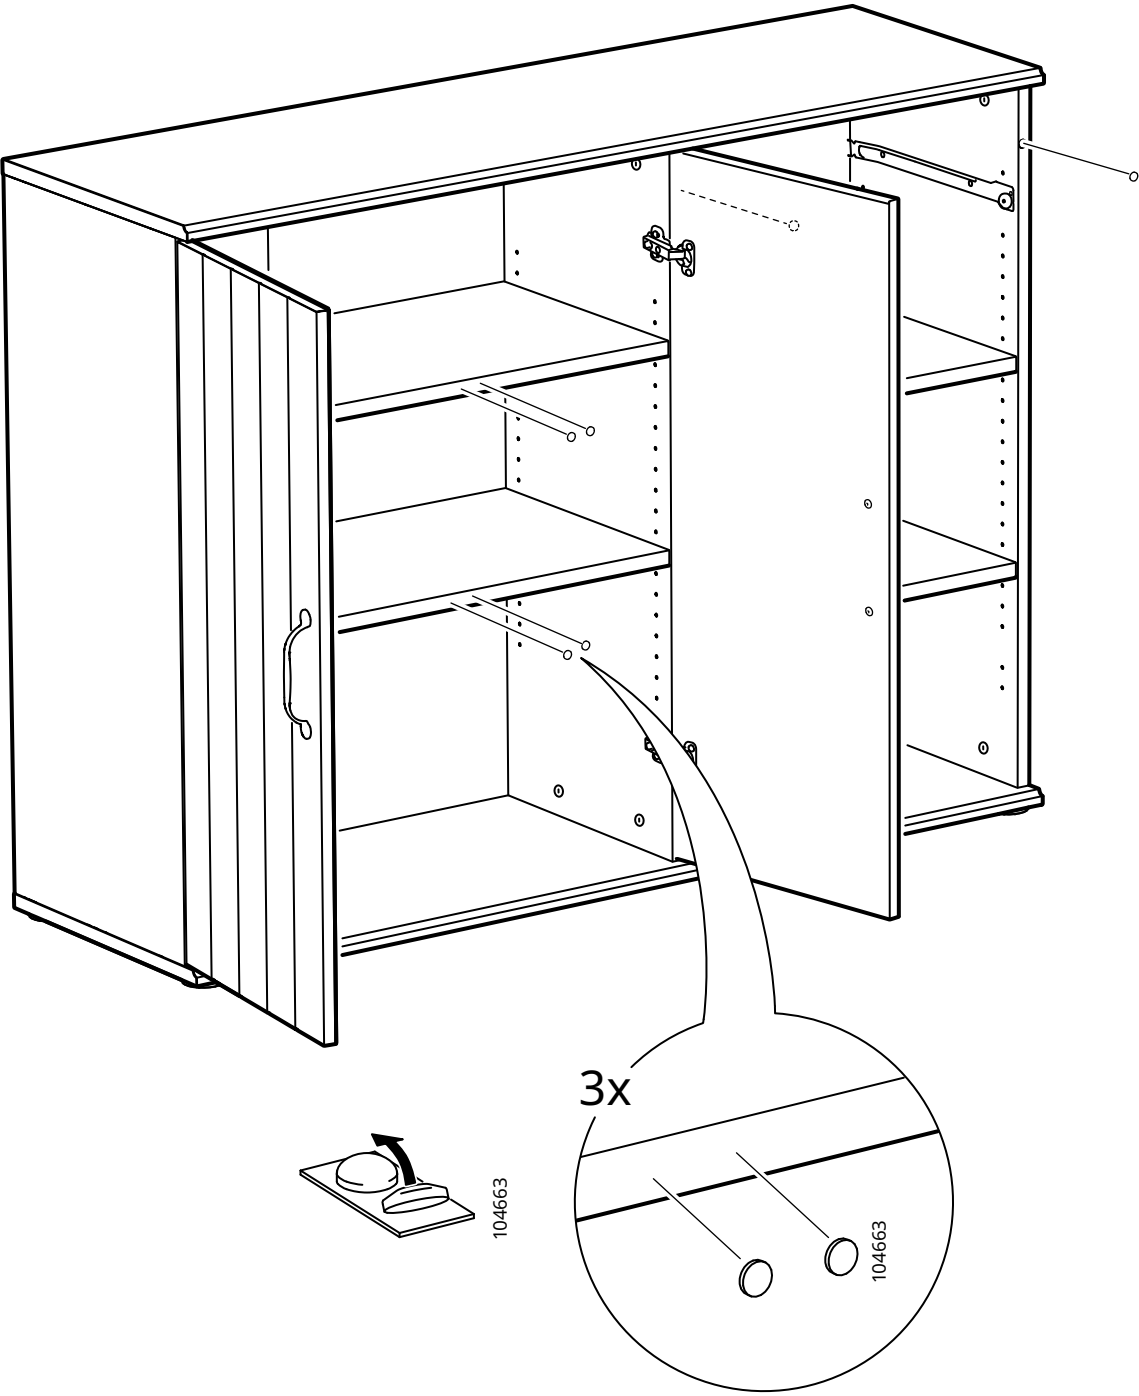 


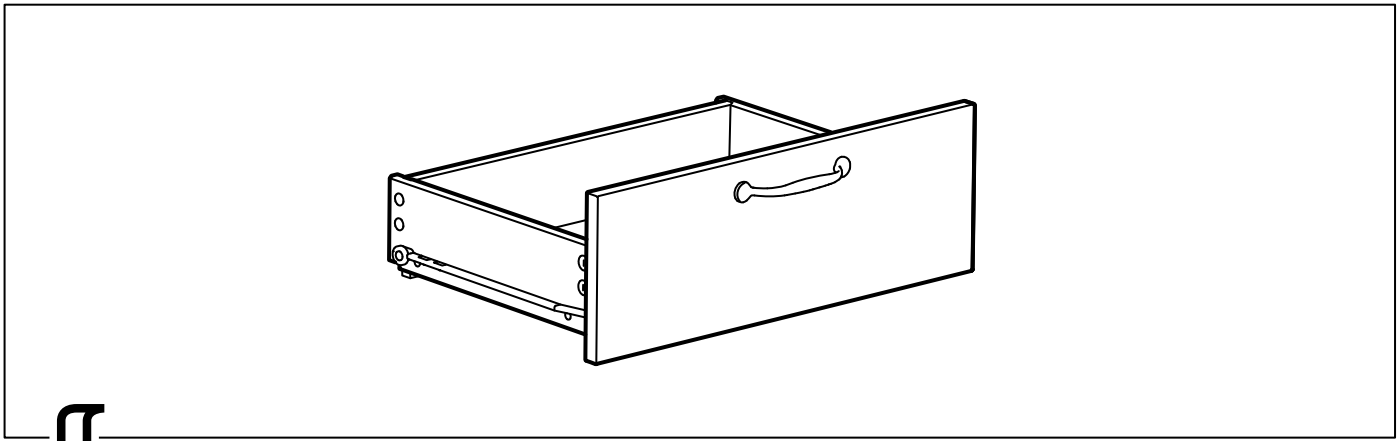 


29

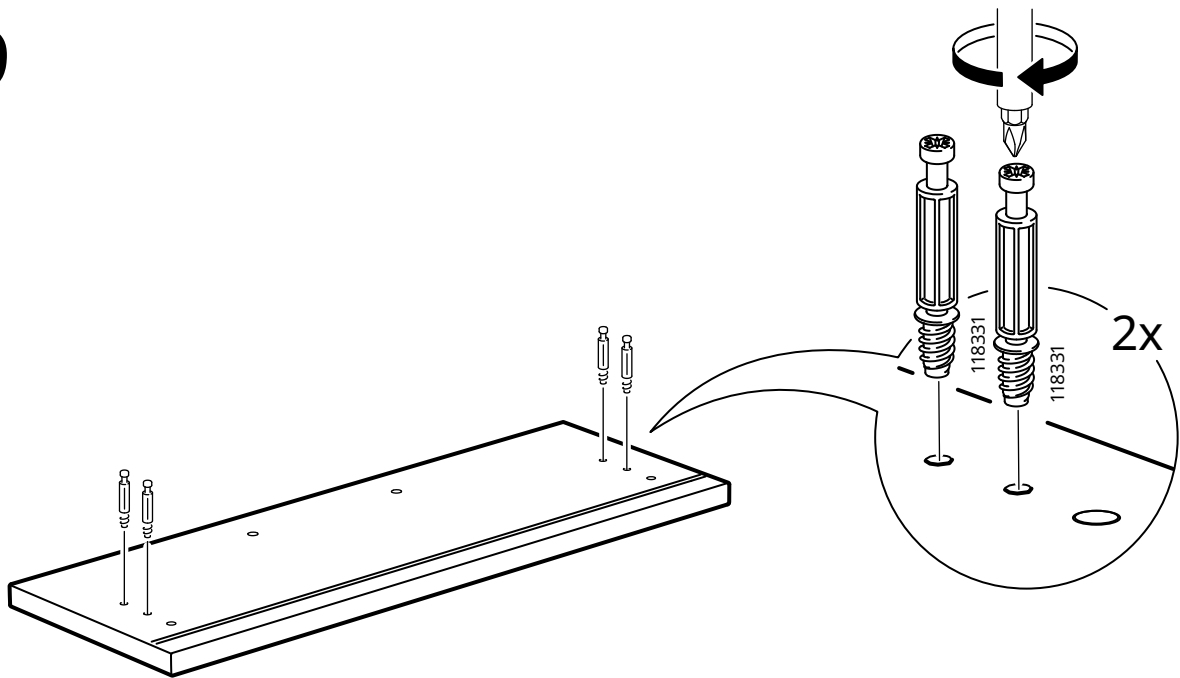 


30

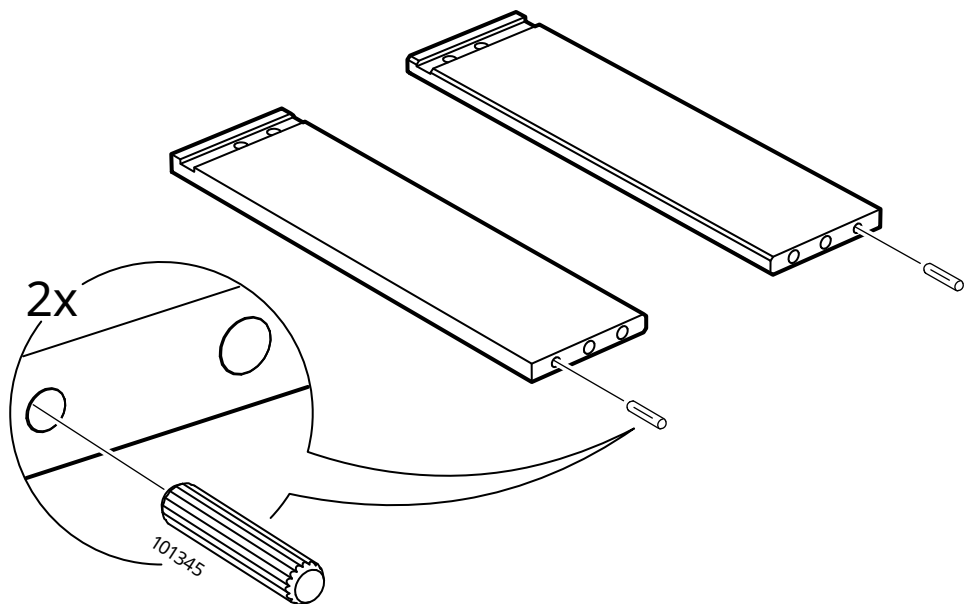 


31

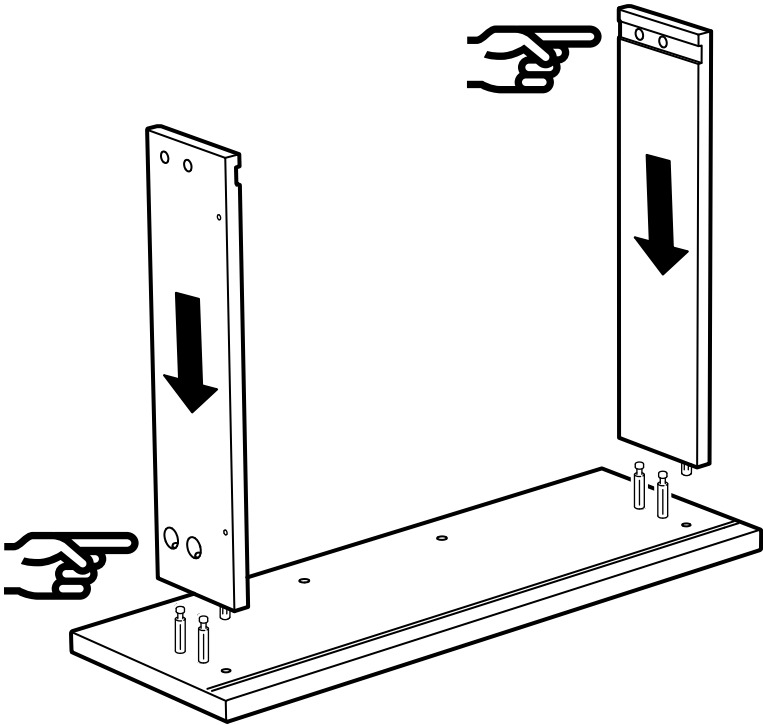 





32

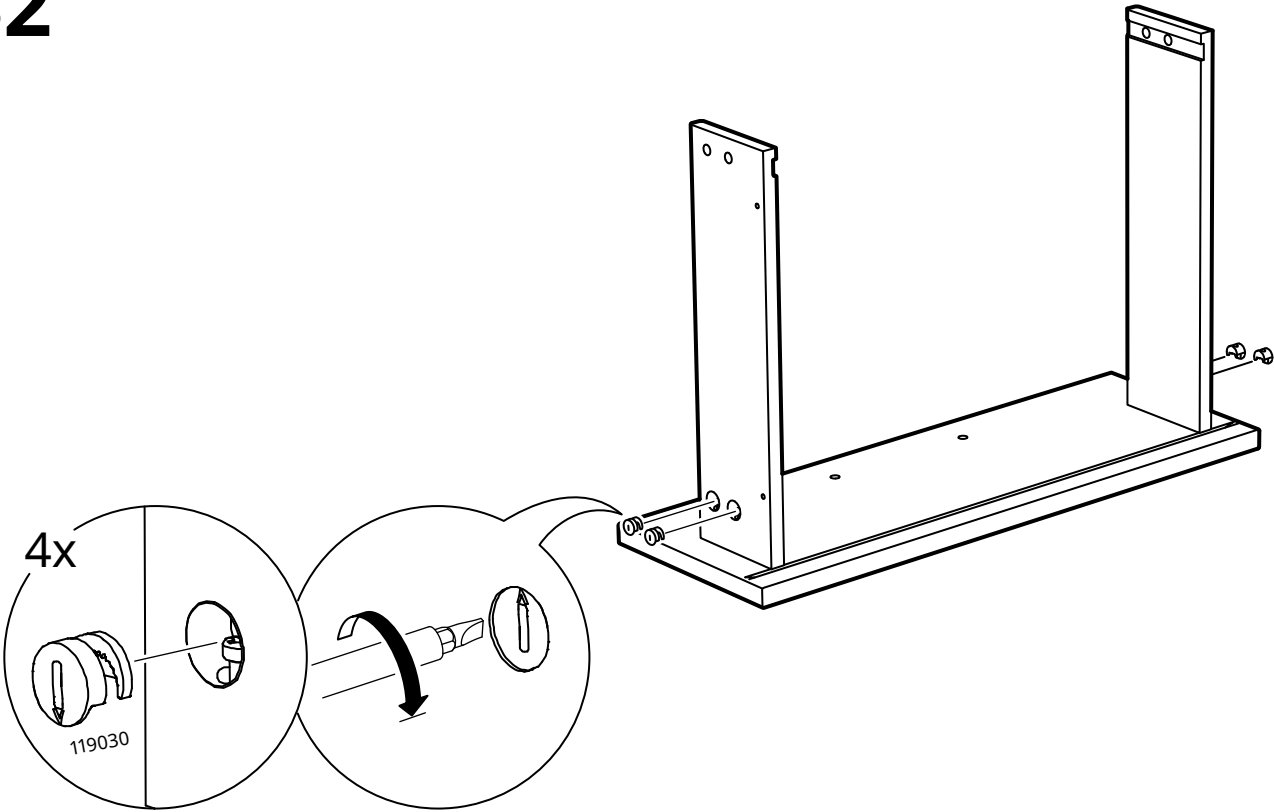 


33

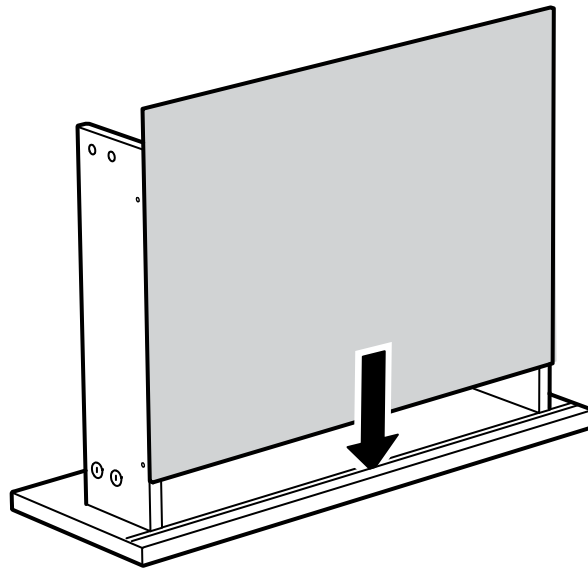 


34

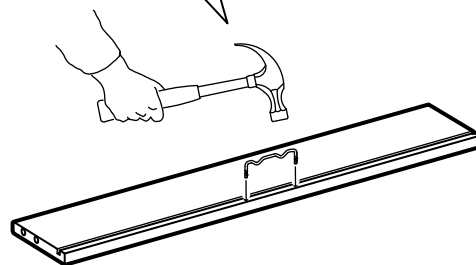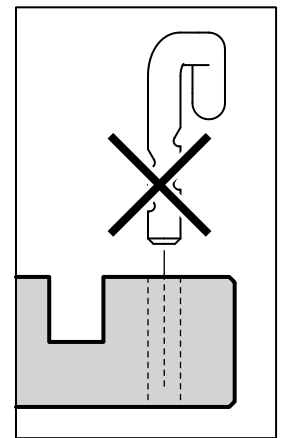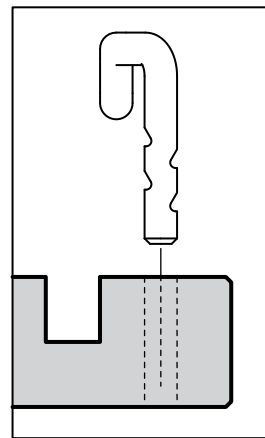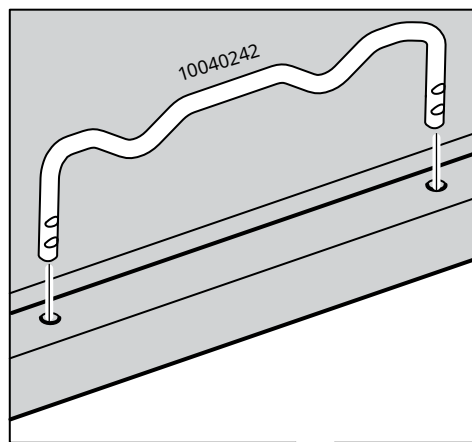    


35

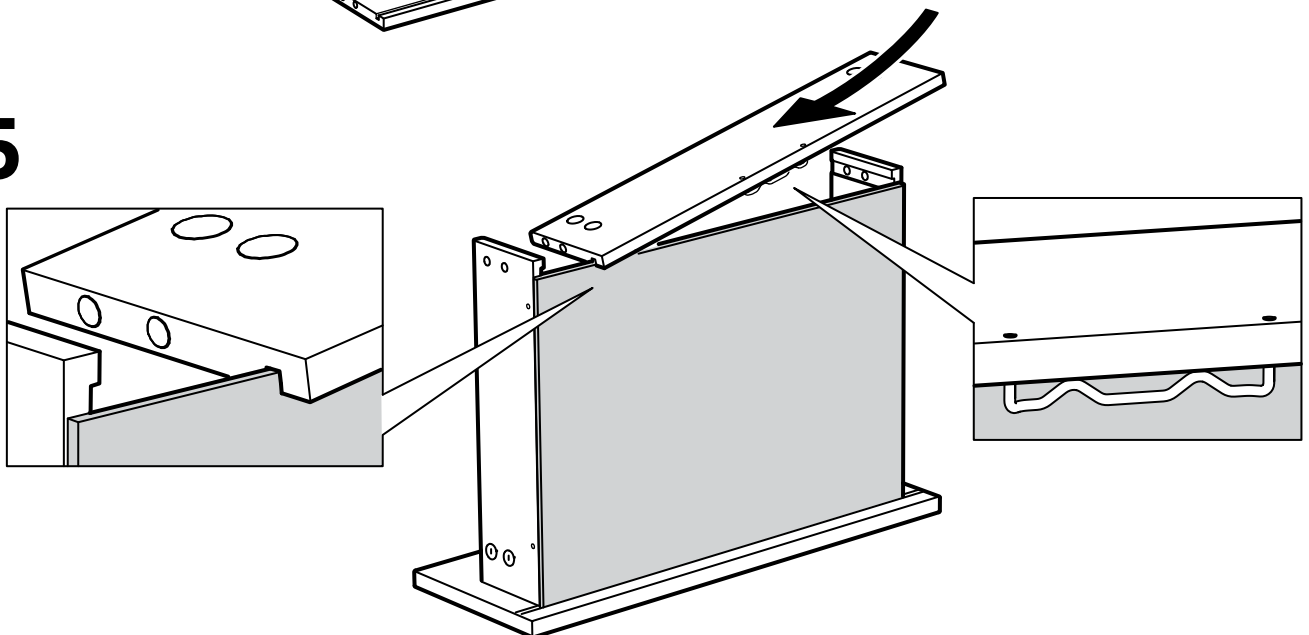 


36

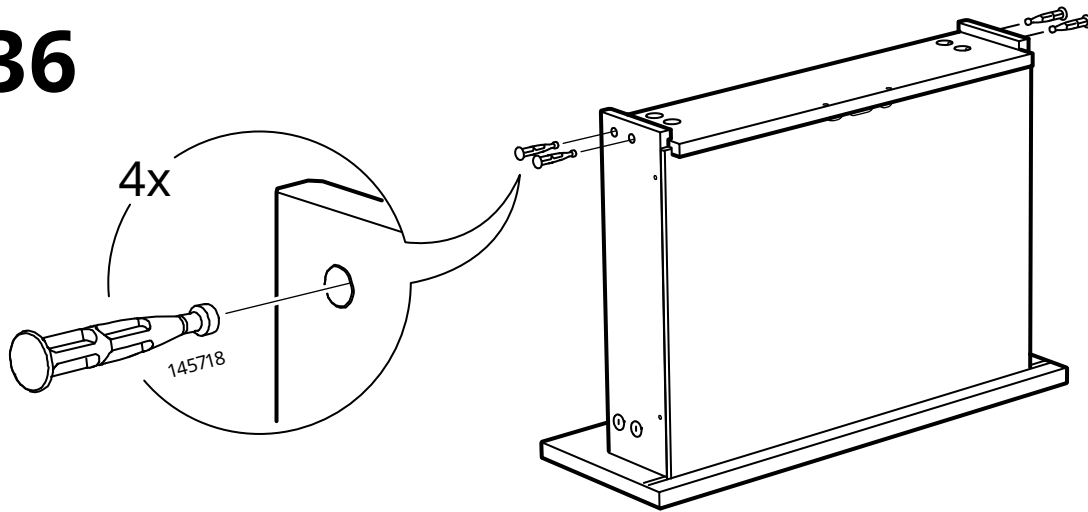 


37

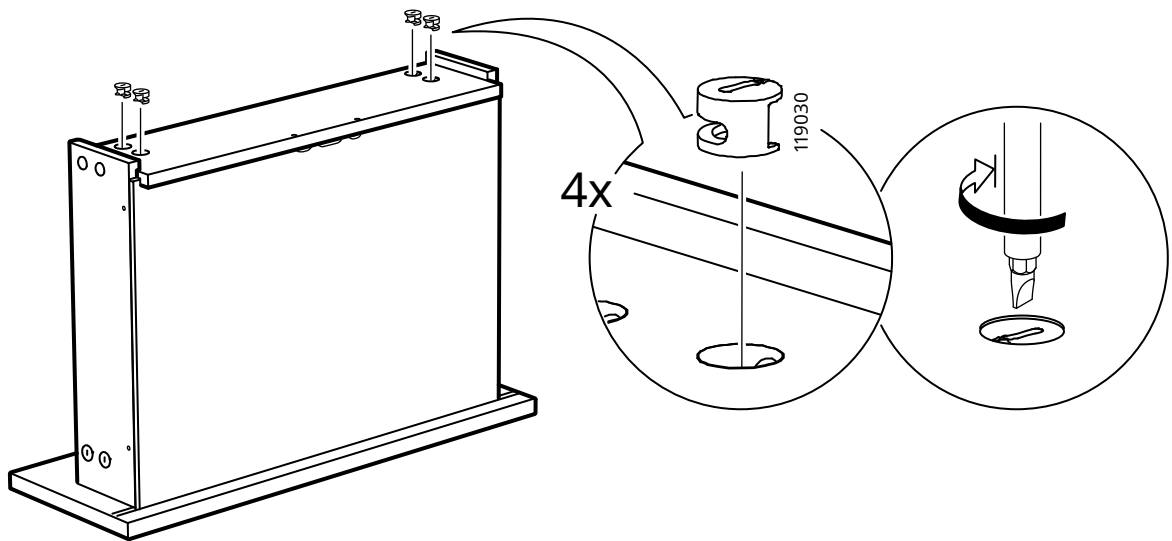 

38

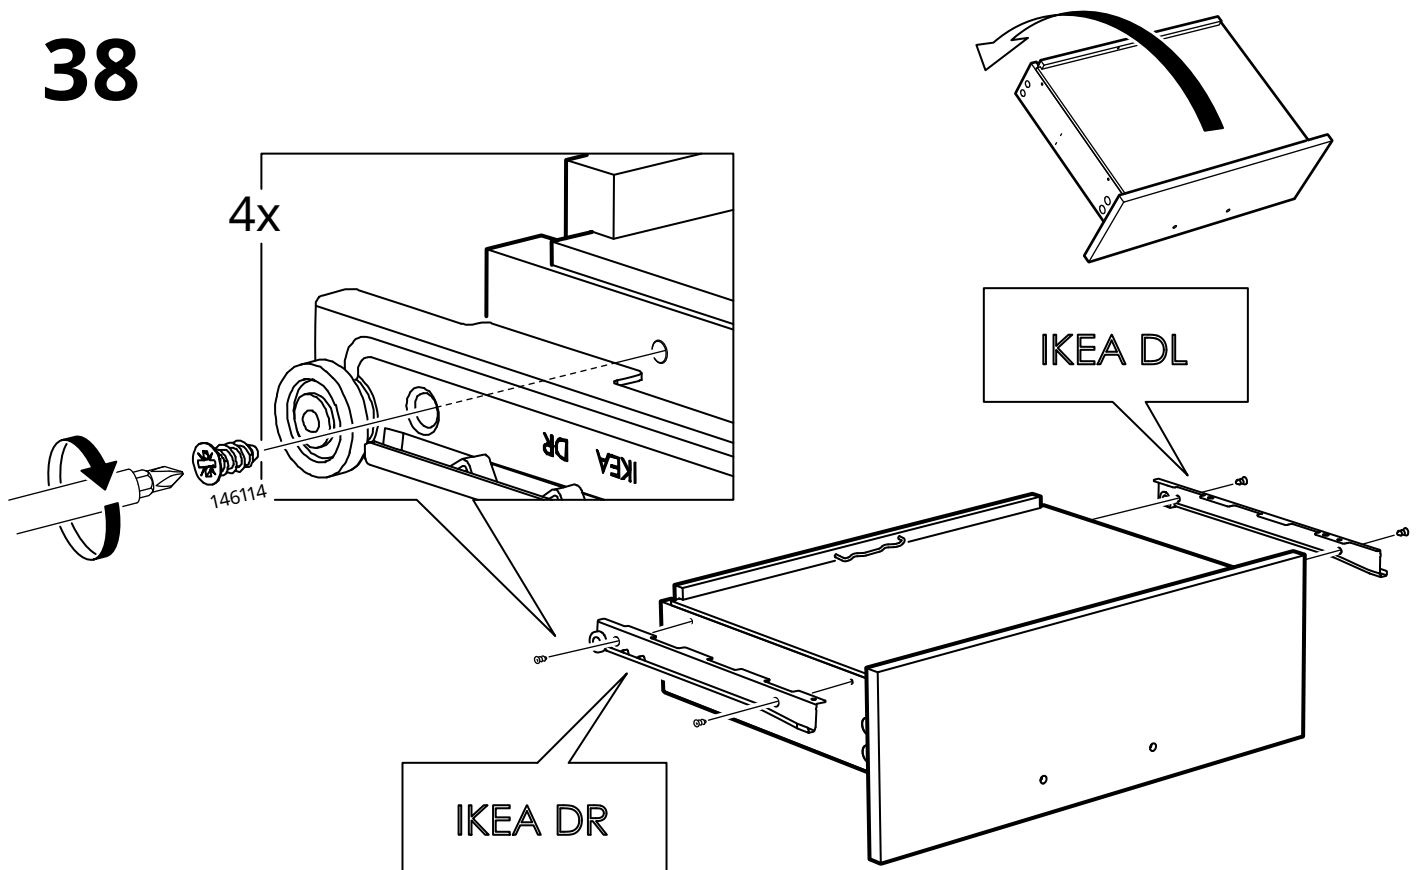 

39

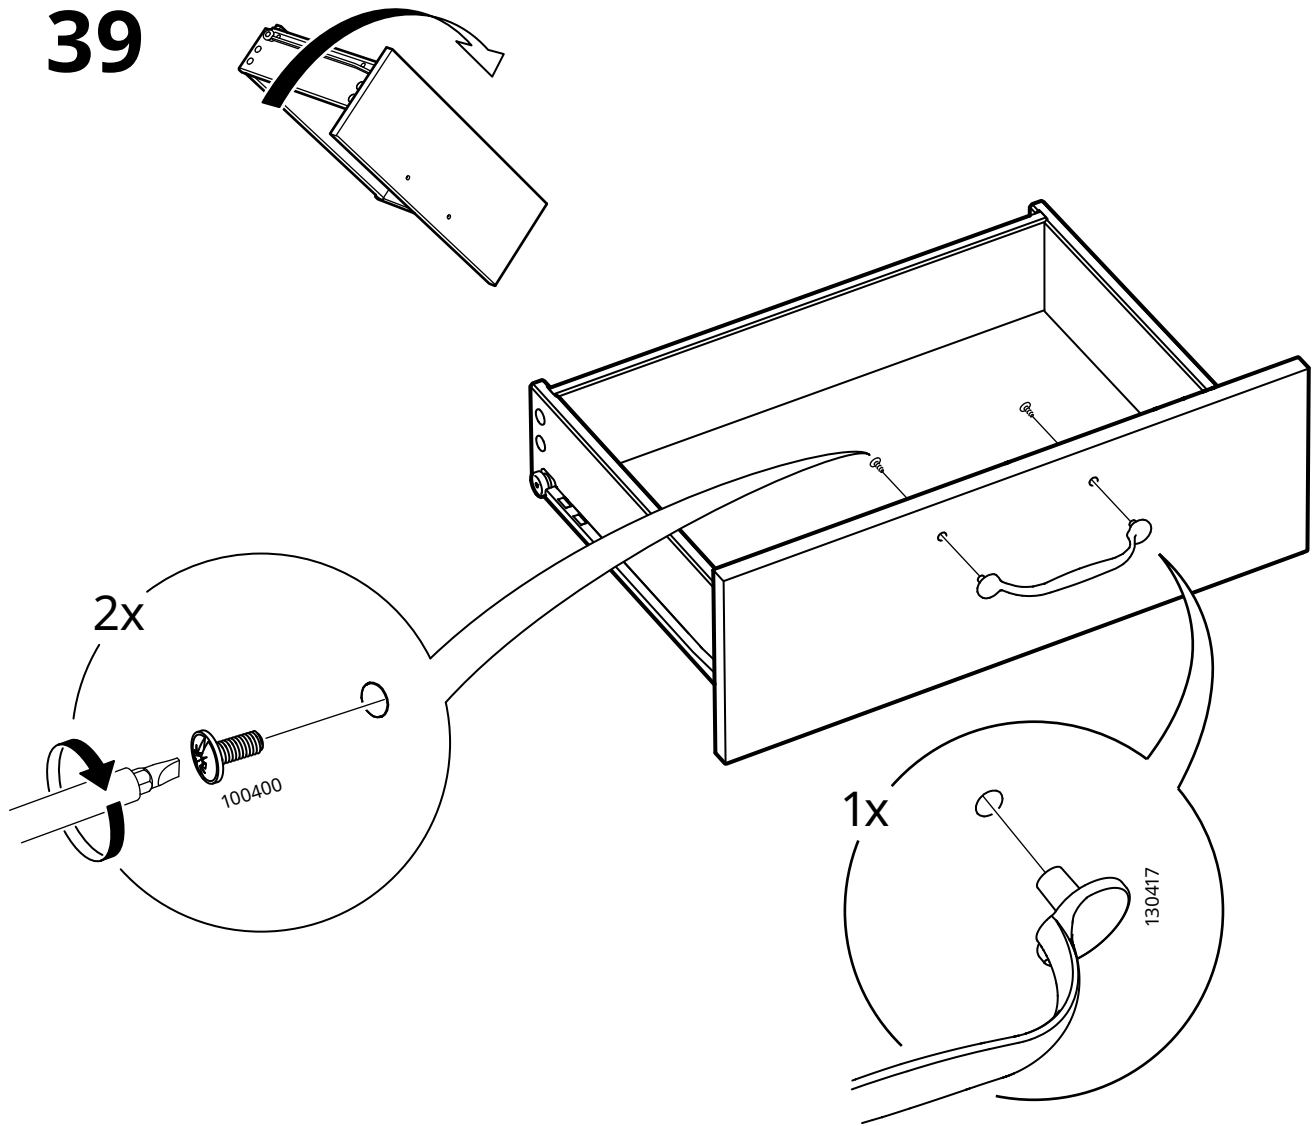 

40

