
SMÅGÖRA

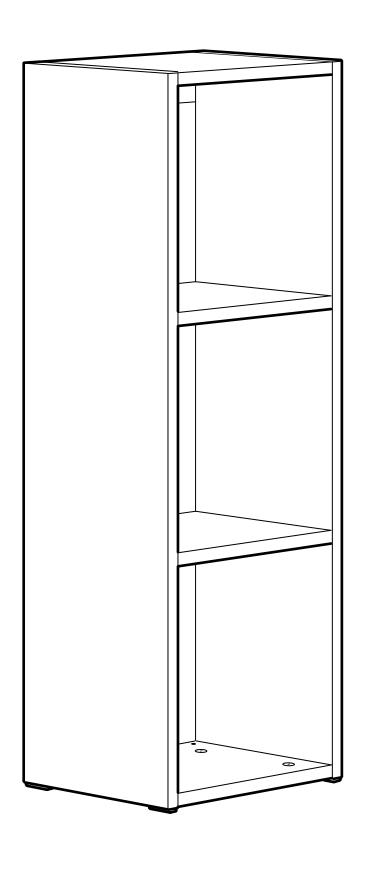









English

WARNING

Children have died from furniture tipover.To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.


NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.


NEVER open more than one drawer at a time.


Place heaviest items in the lowest drawers.


English


Read and follow each step of the instruction carefully.

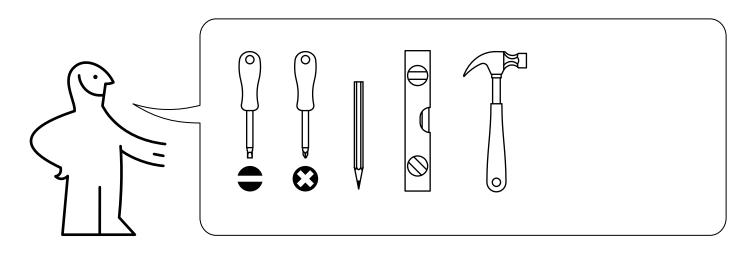


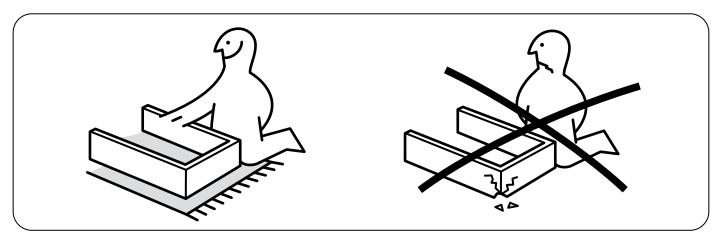


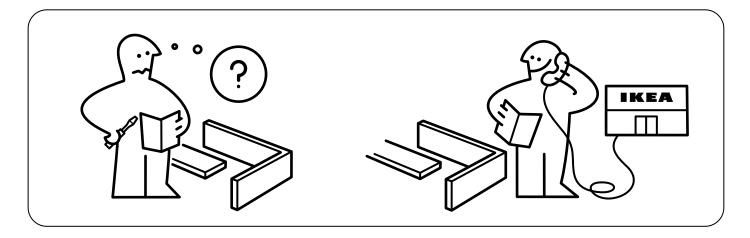


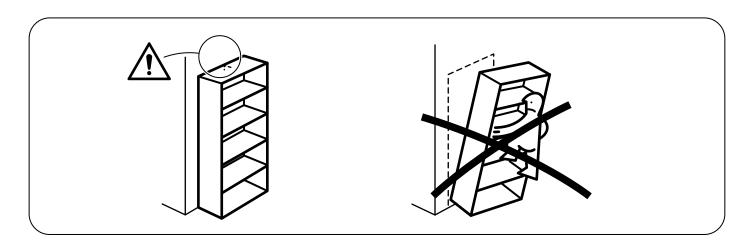


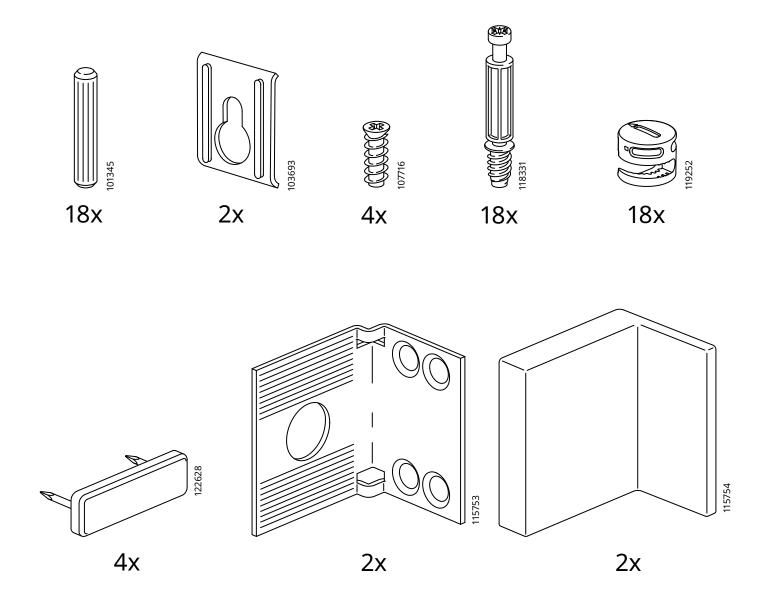


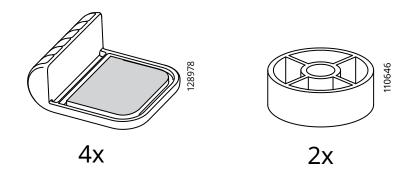


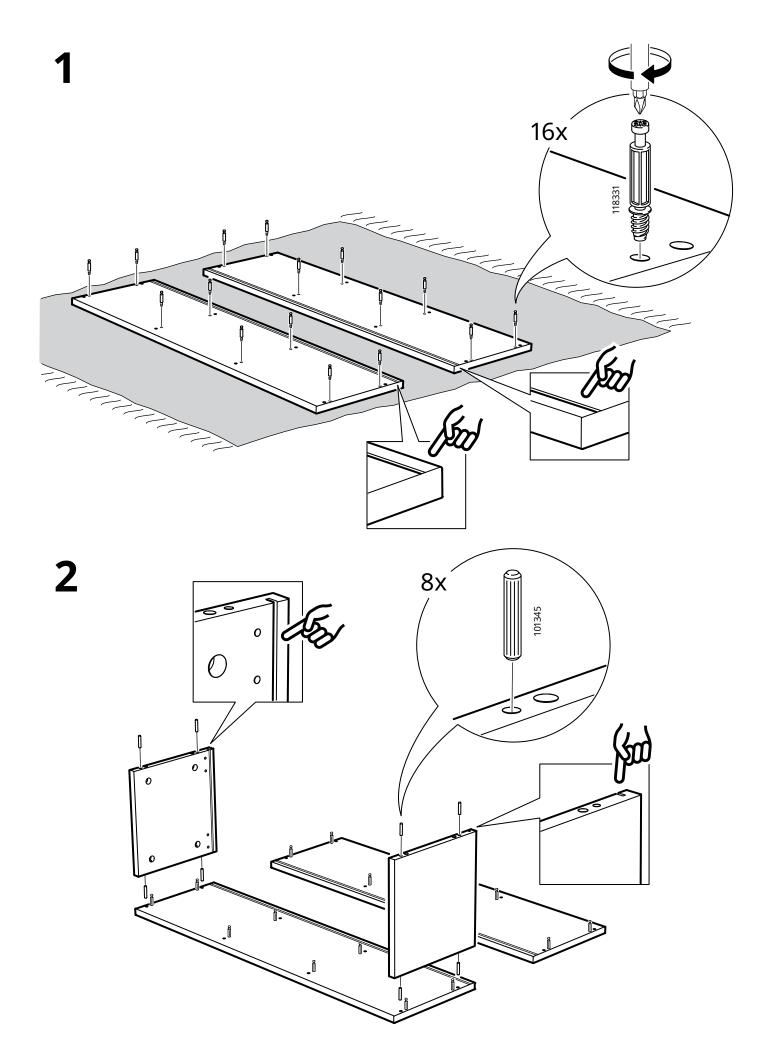


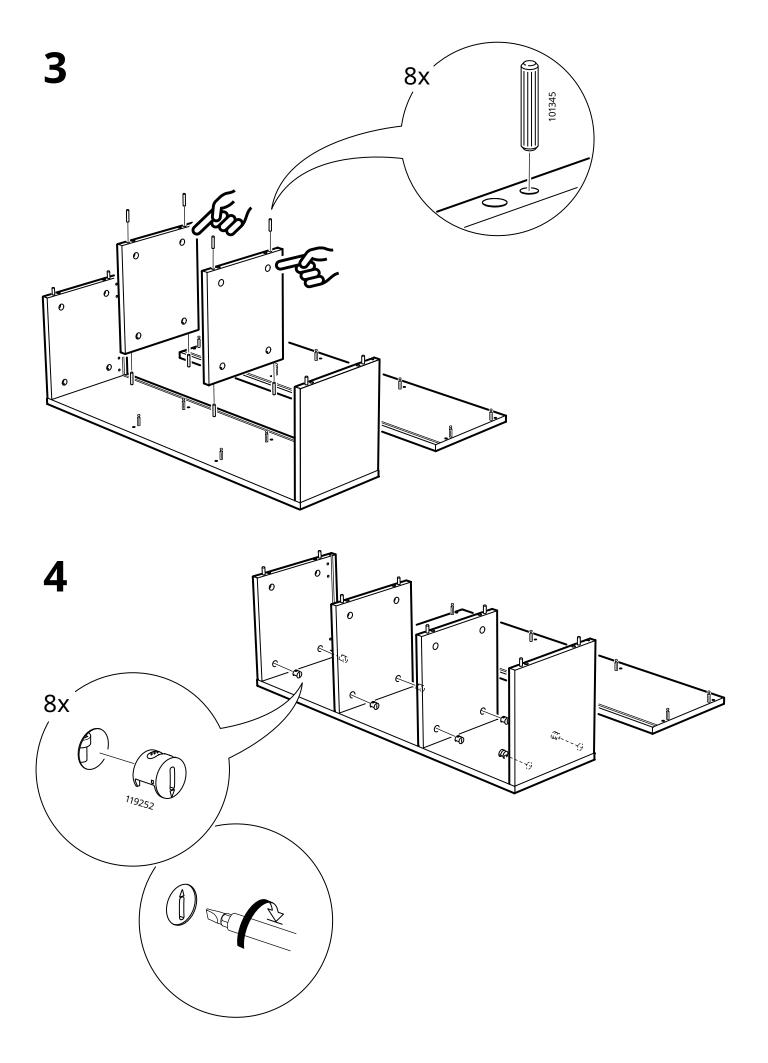


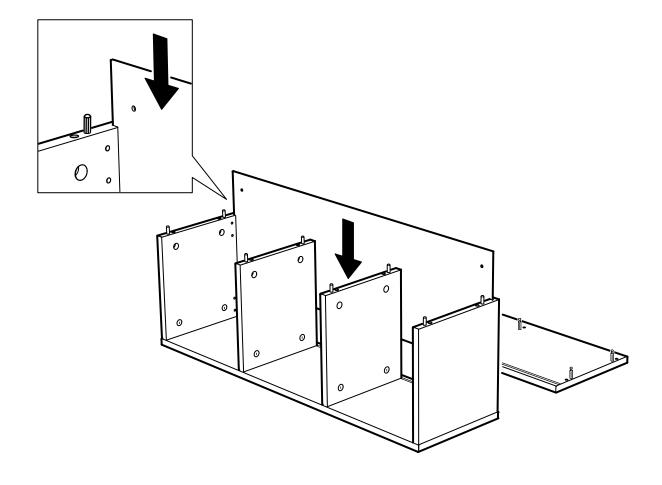


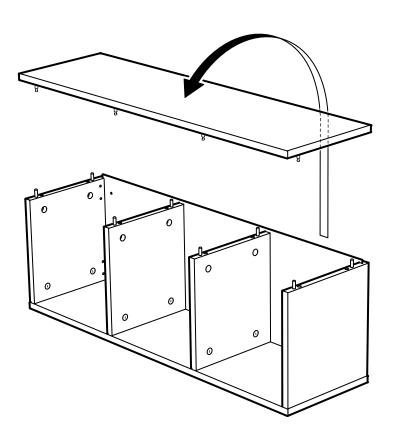


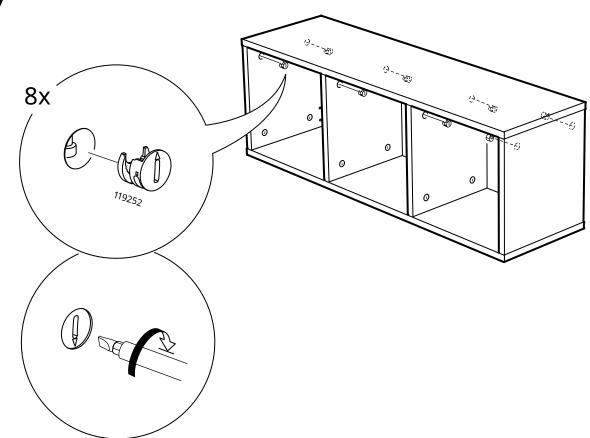


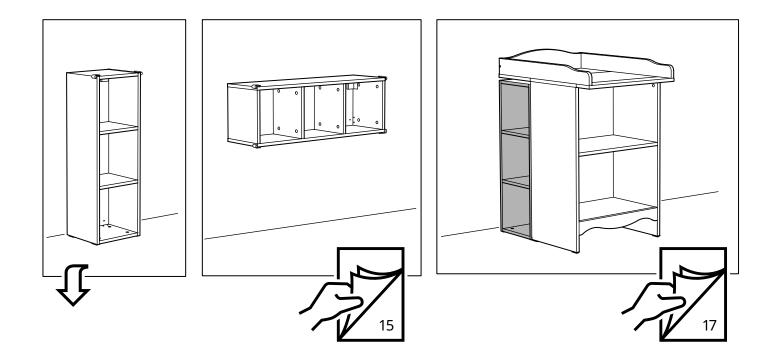


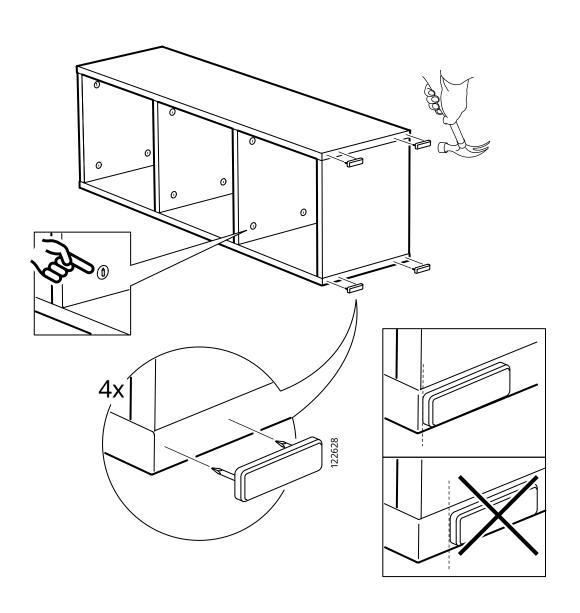

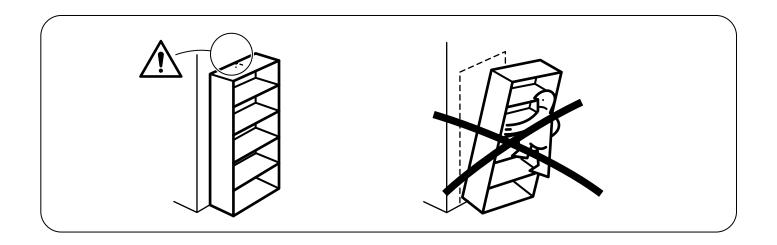


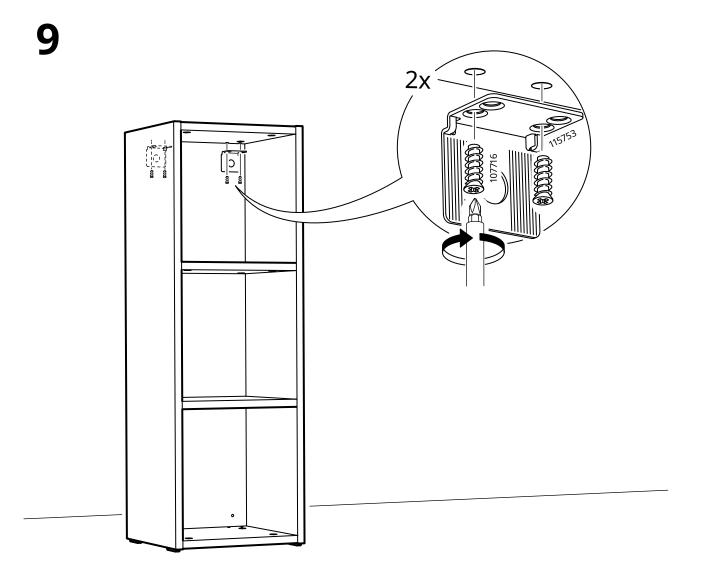

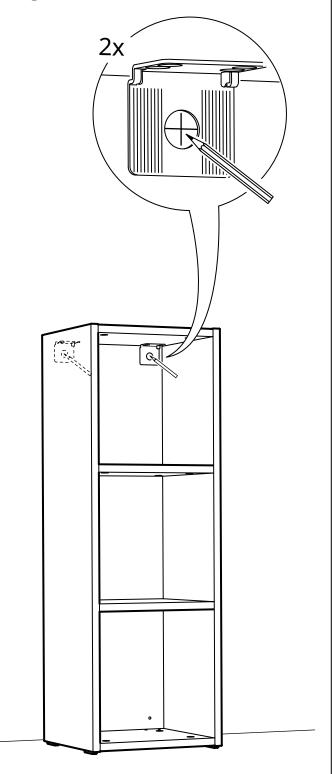

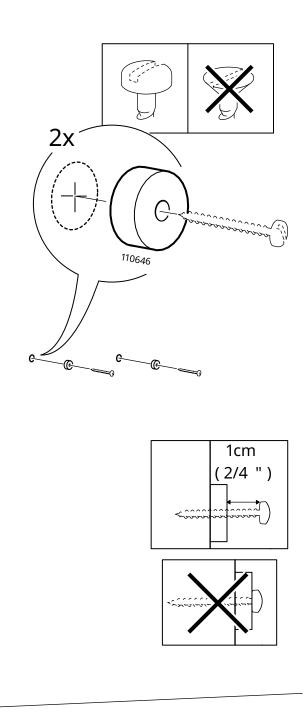

12 _{2x} 115754 103693 (3)-[---] (3) (E)

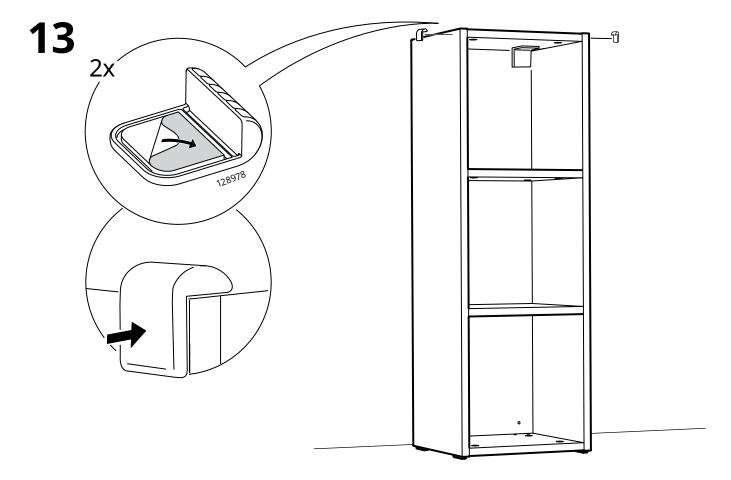

For your child's safety, be sure to attach the corner protectors firmly on the corners of all children's furniture.

These corner protectors are intended only for use on the corners of children's furniture. Never use them for any other purpose.

Do not use the corner protectors if damaged.

Clean the surface of the furniture with a dry cloth before attaching the corner protectors. Use the adhesive tape on the back to attach the corner protectors on the corners of the furniture and press firmly. Avoid touching the adhesive surface with your fingers. Do not reuse the corner protectors.

