

SONGESAND



Design and Quality
IKEA of Sweden



English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

 
 
 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

 
 
 
NEVER open more than one drawer at a time.

Place heaviest items in the lowest drawers.


English

Read and follow each step of the instruction carefully.

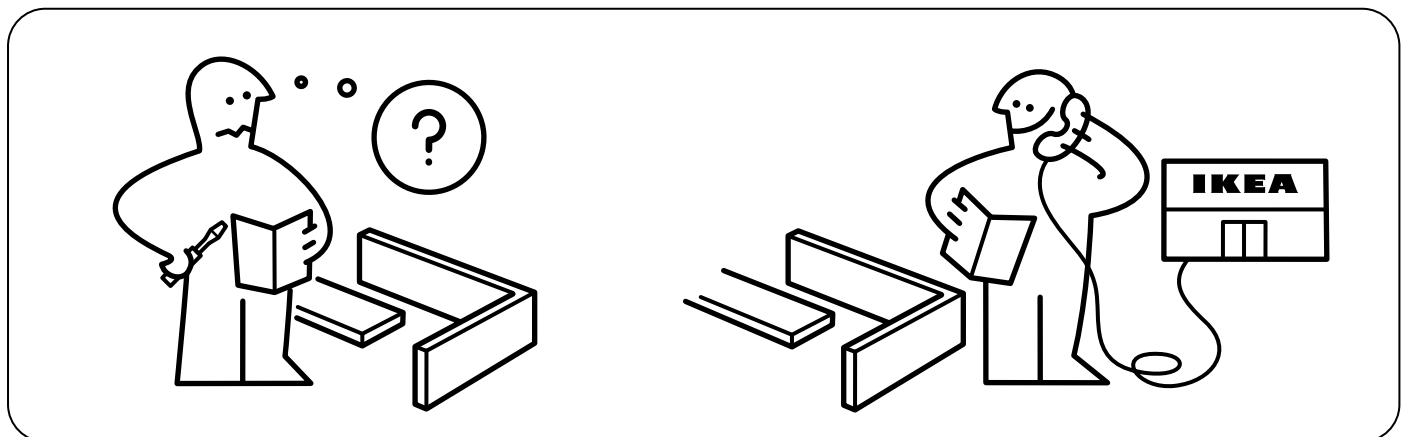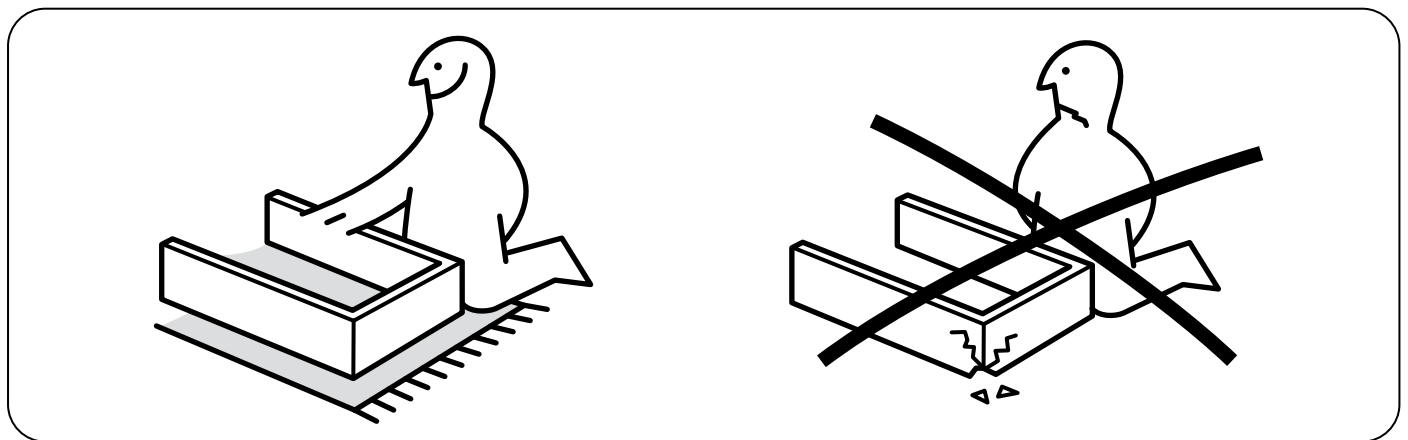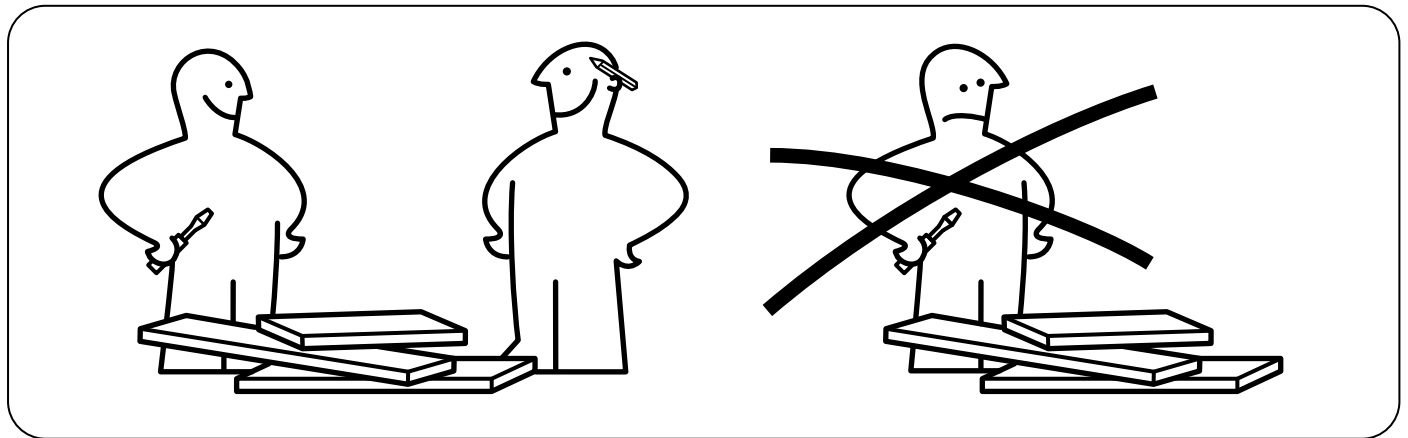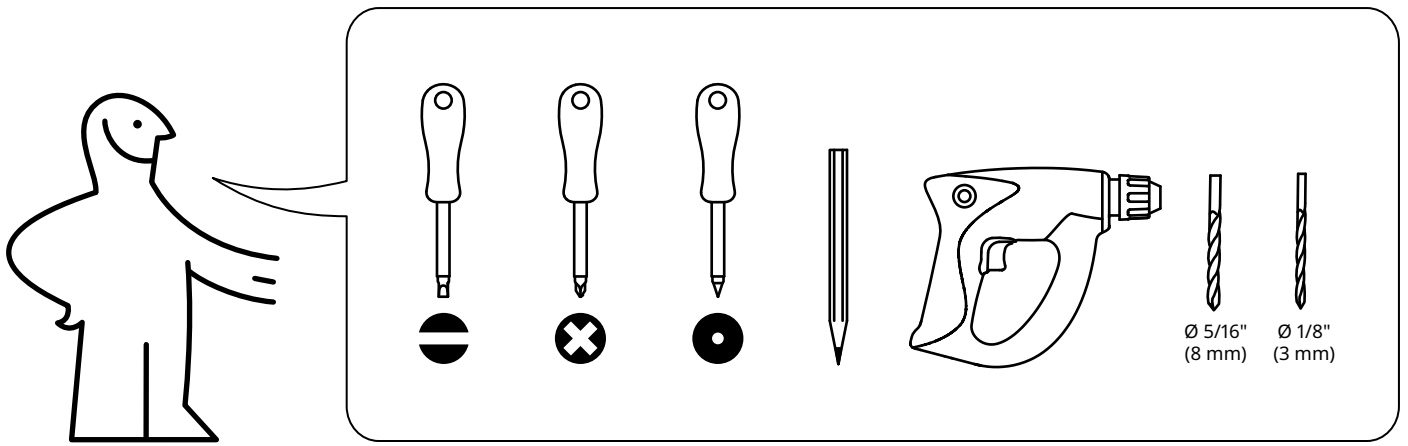


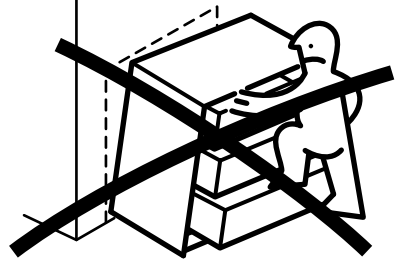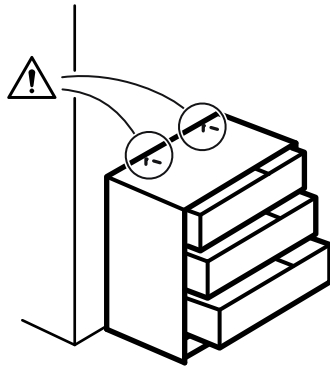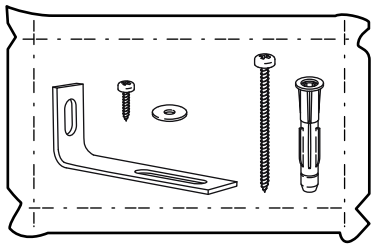

1

 

14x

 

22x



 
4x




18x









14x

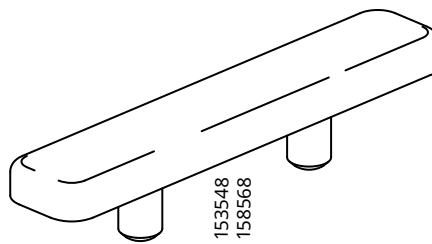

5x

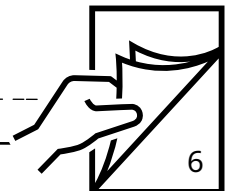 

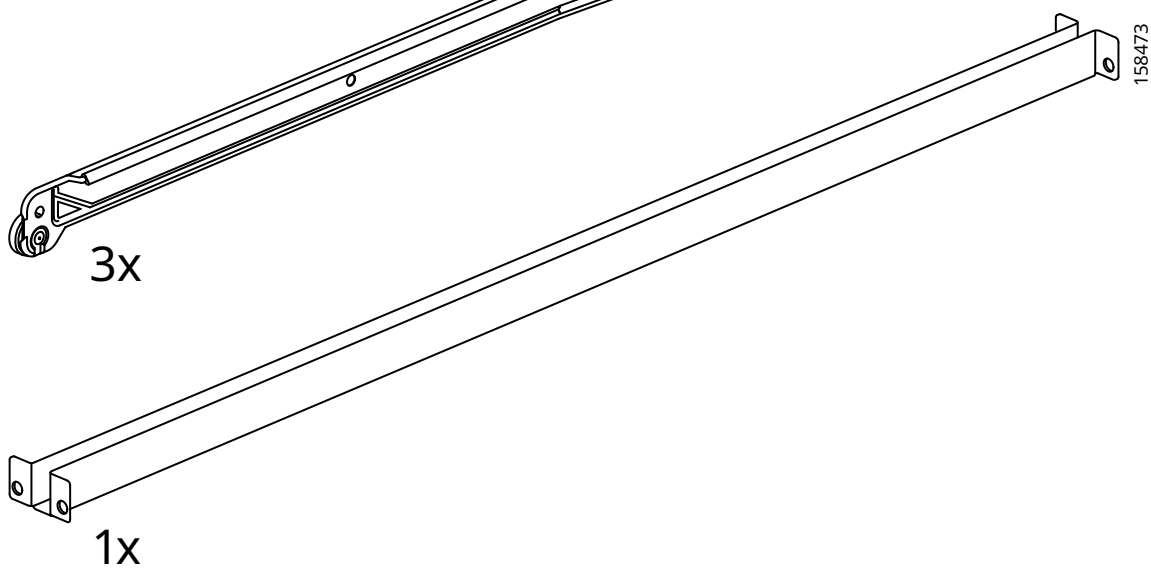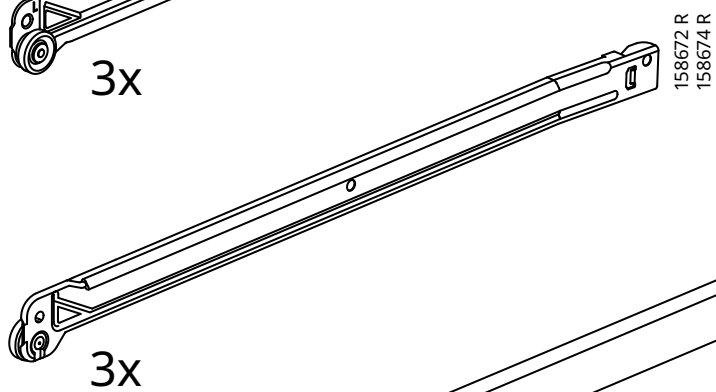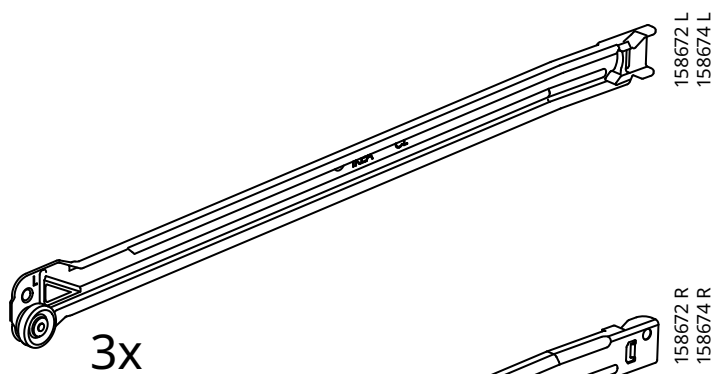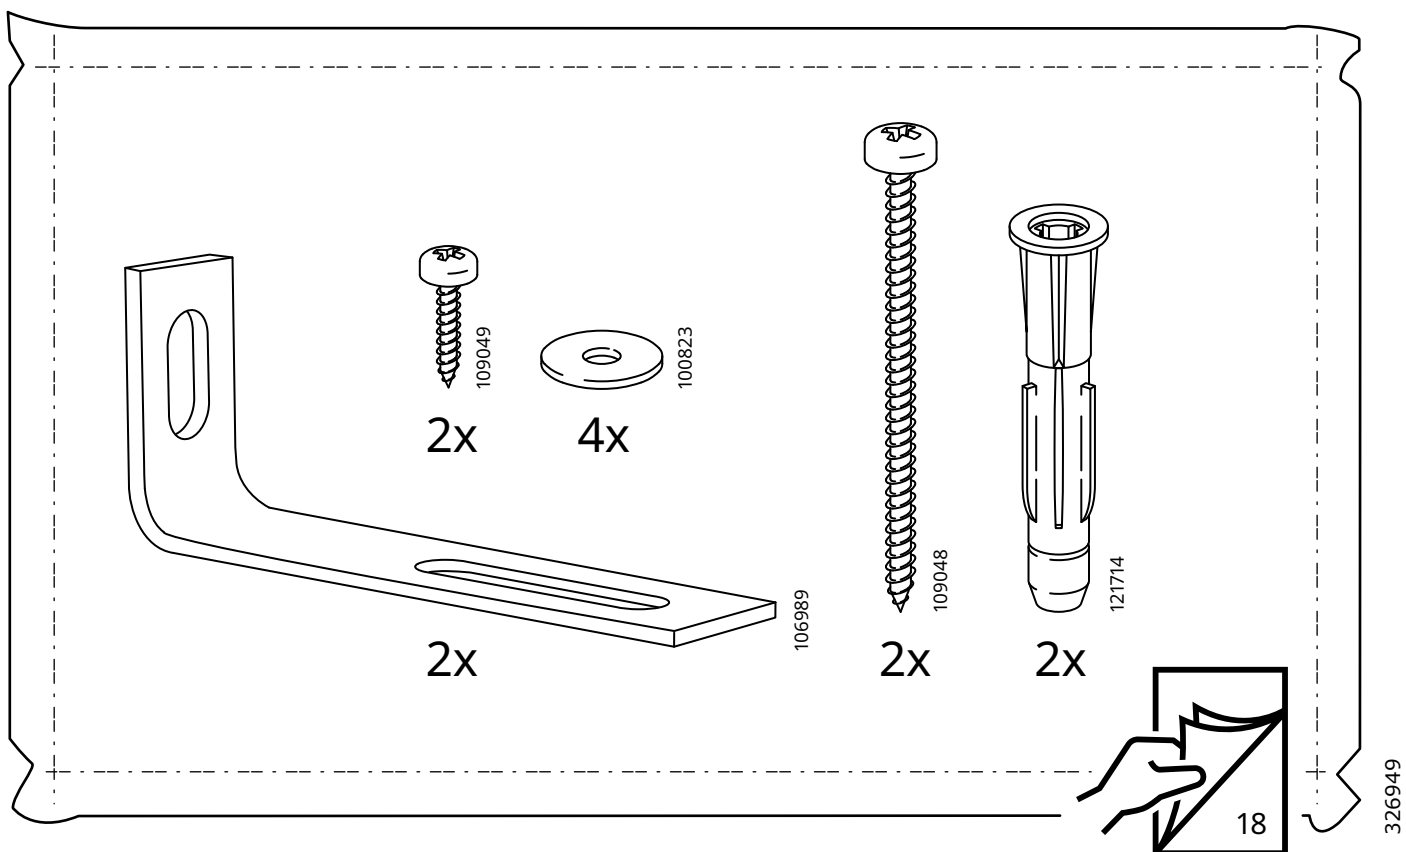    


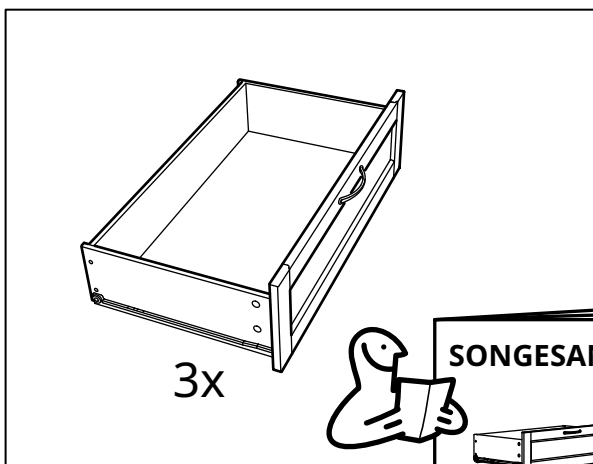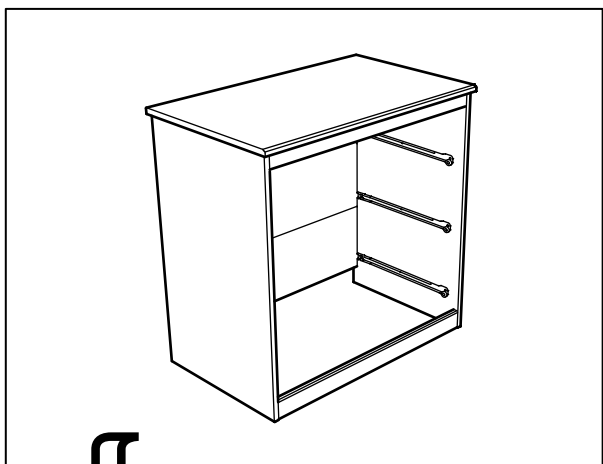  


3x



 
1

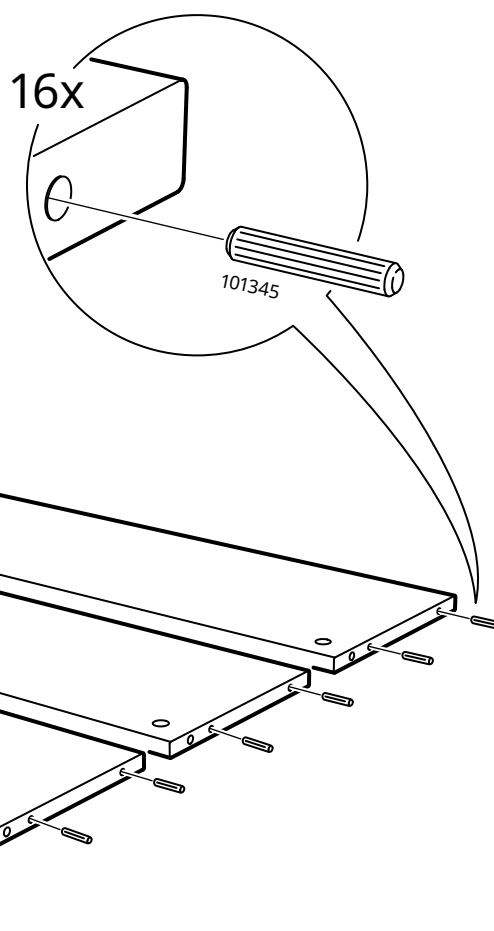


2

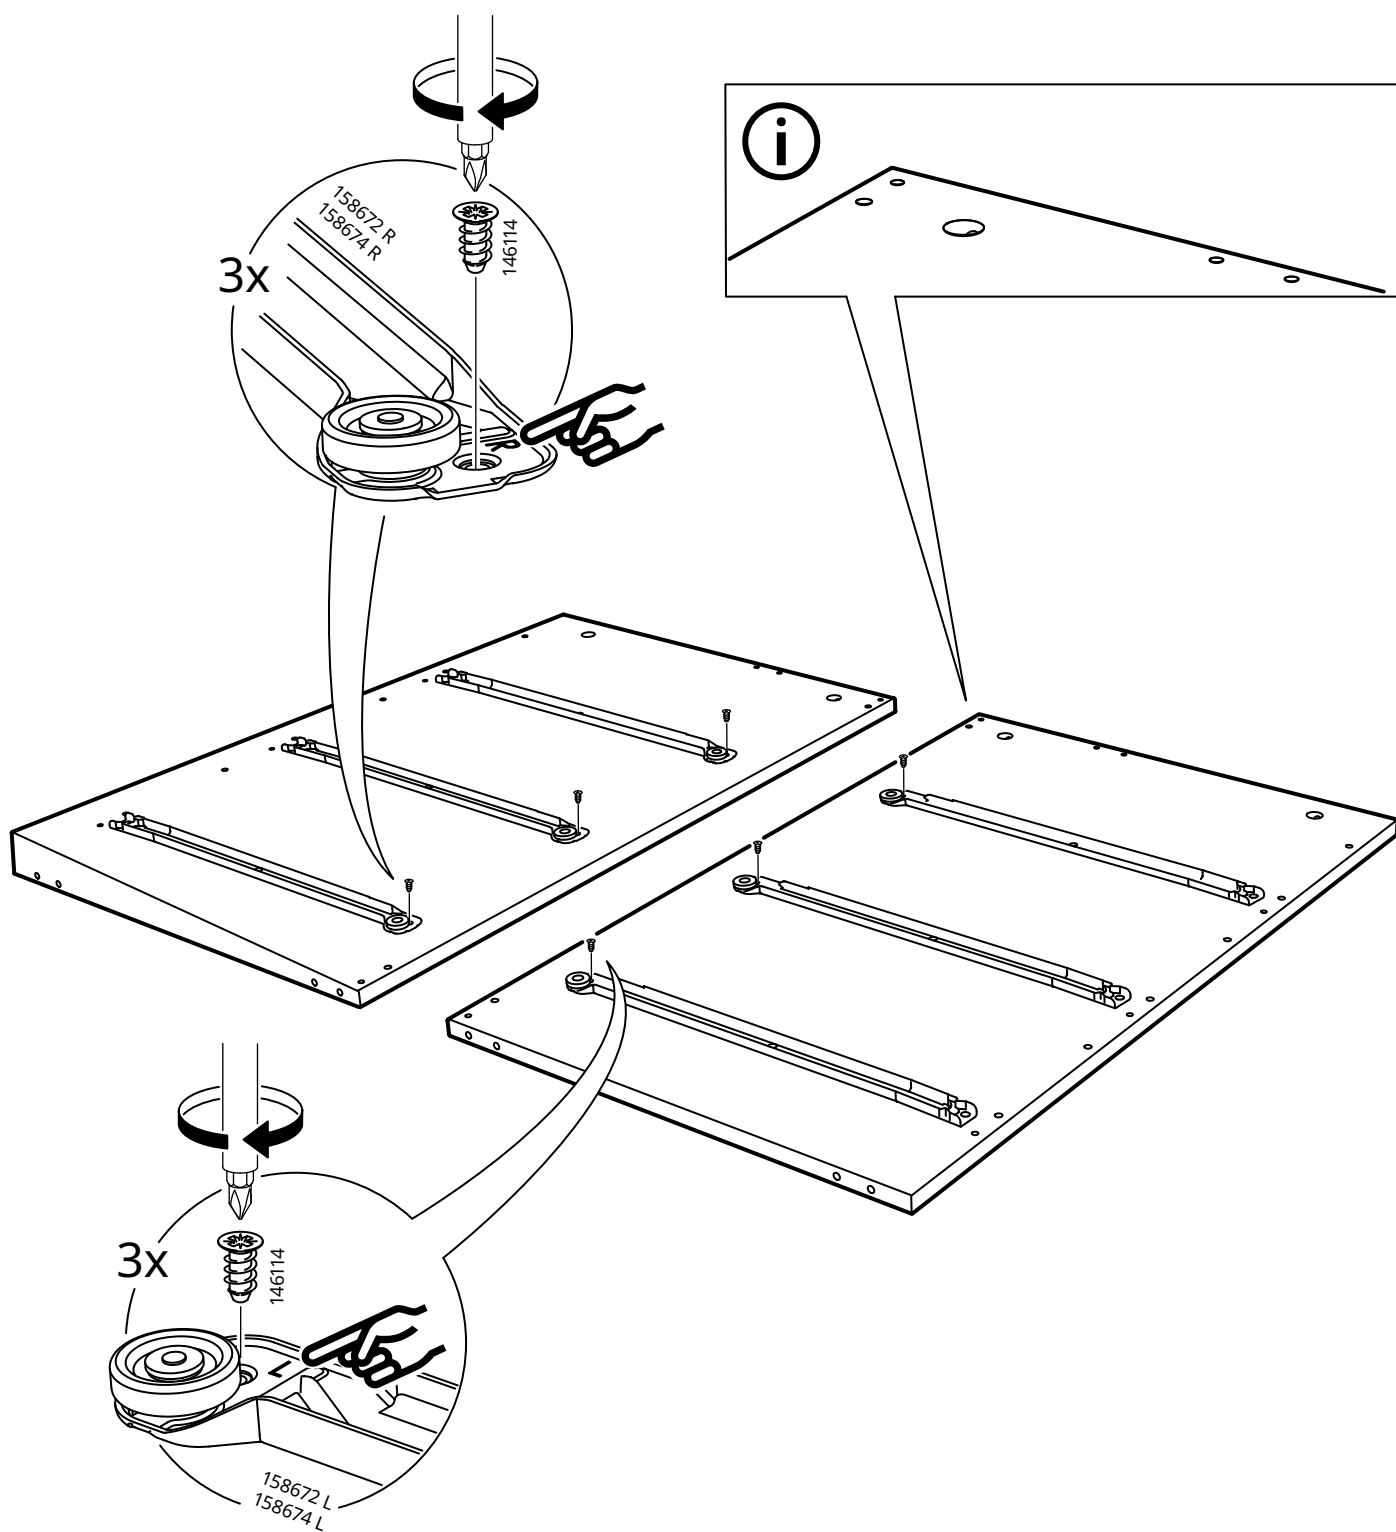 


3

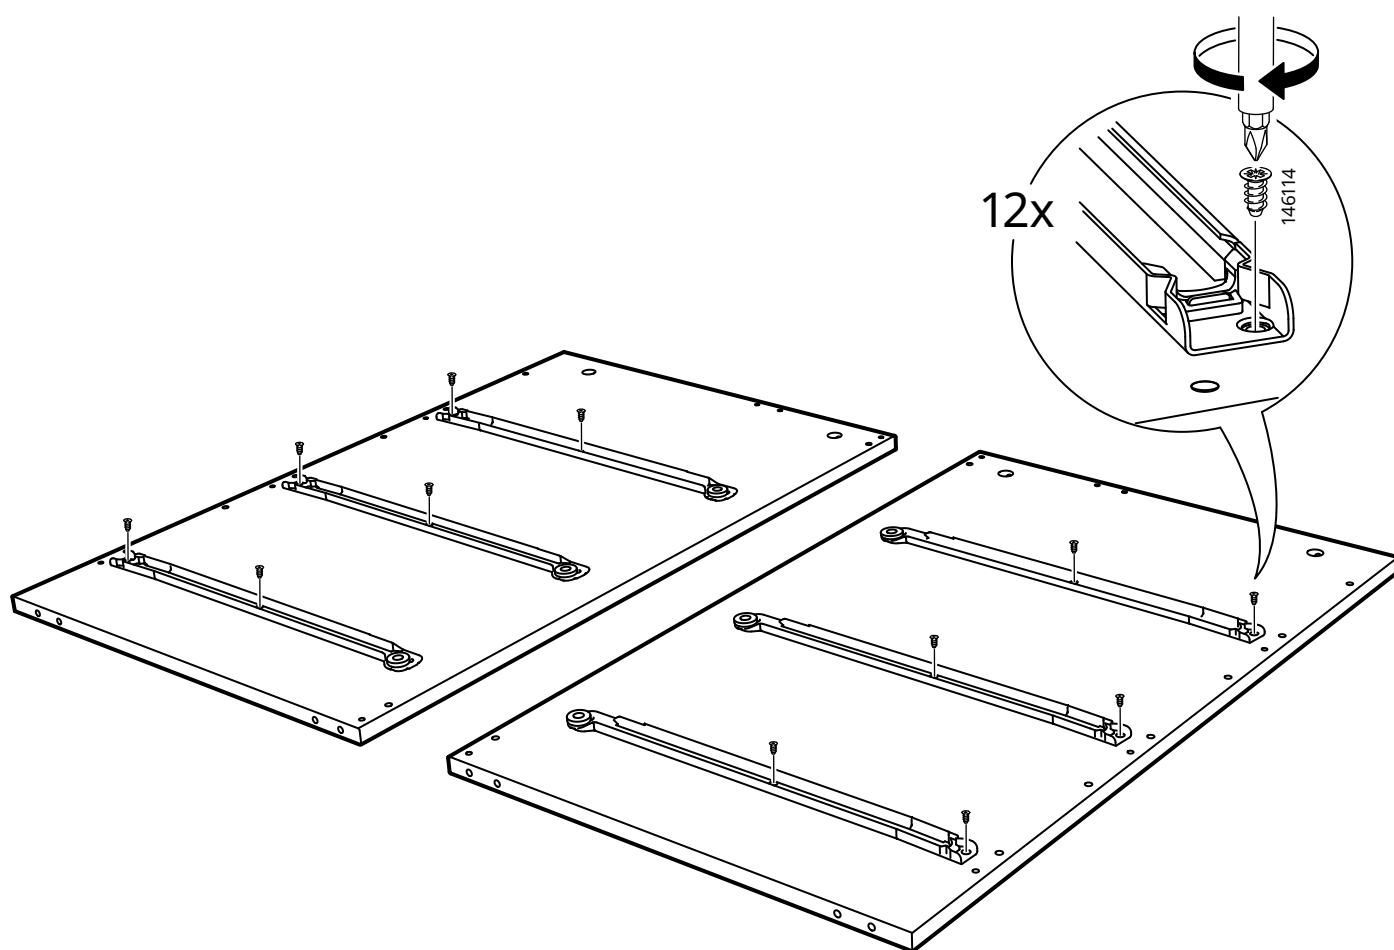 


4

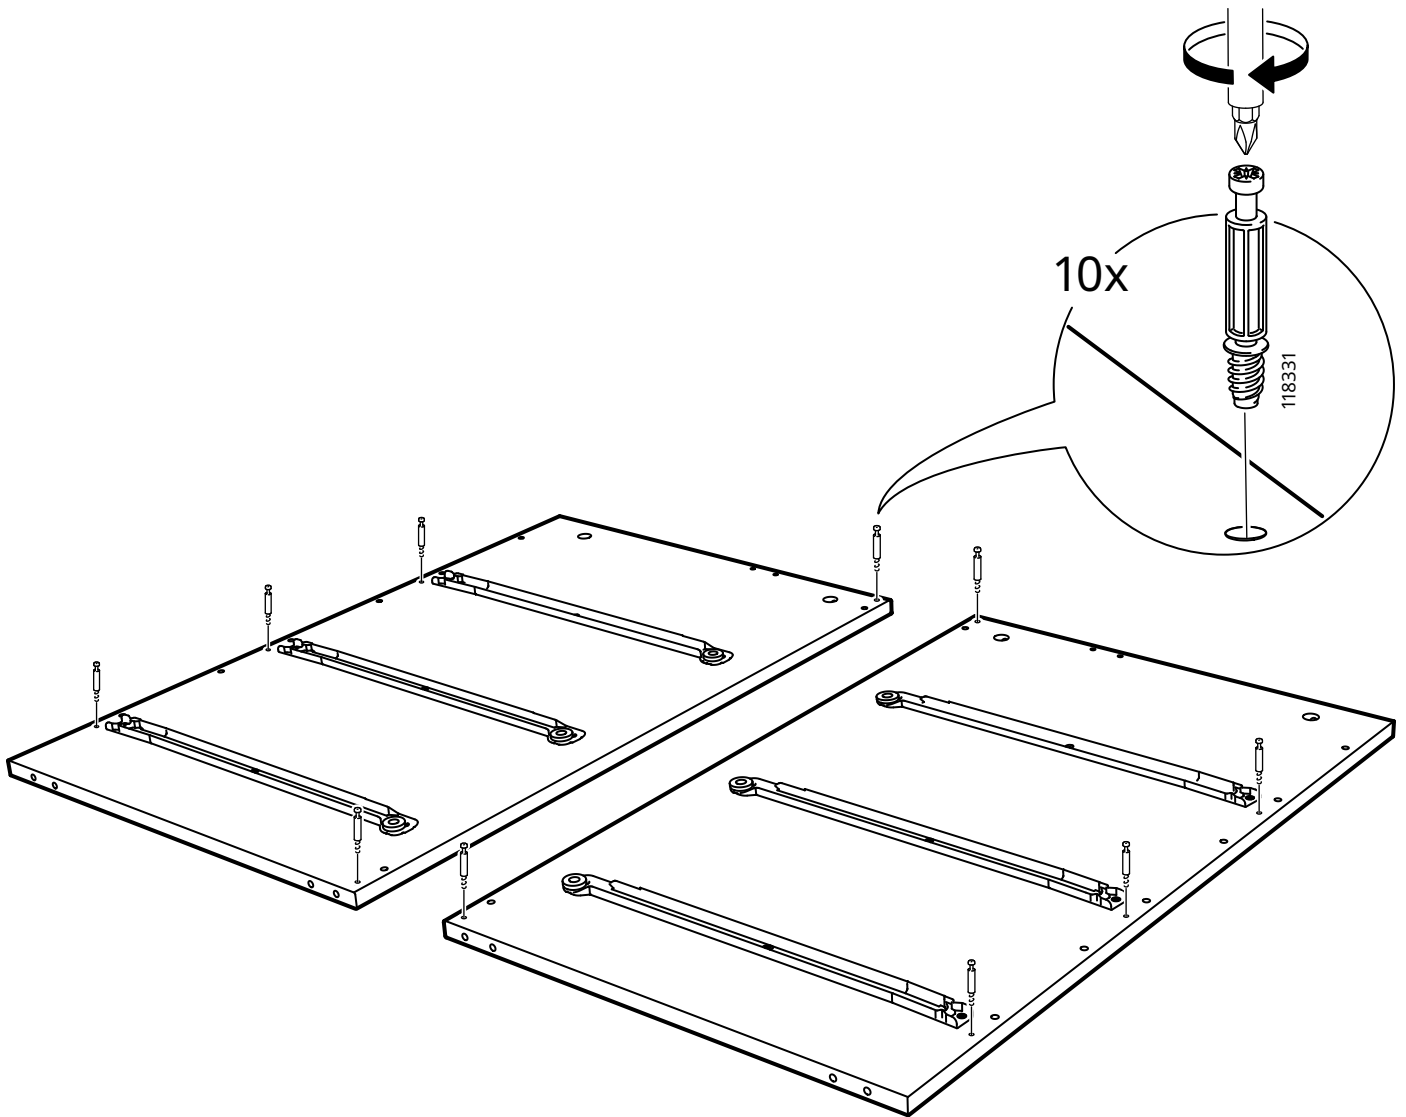 


5

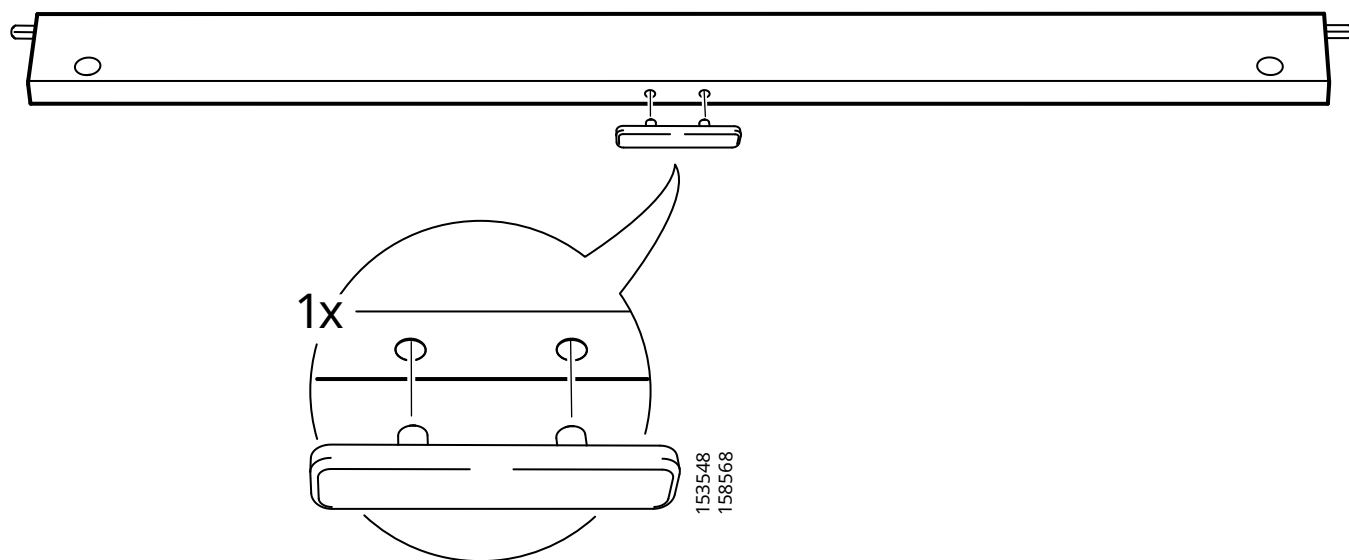 


6

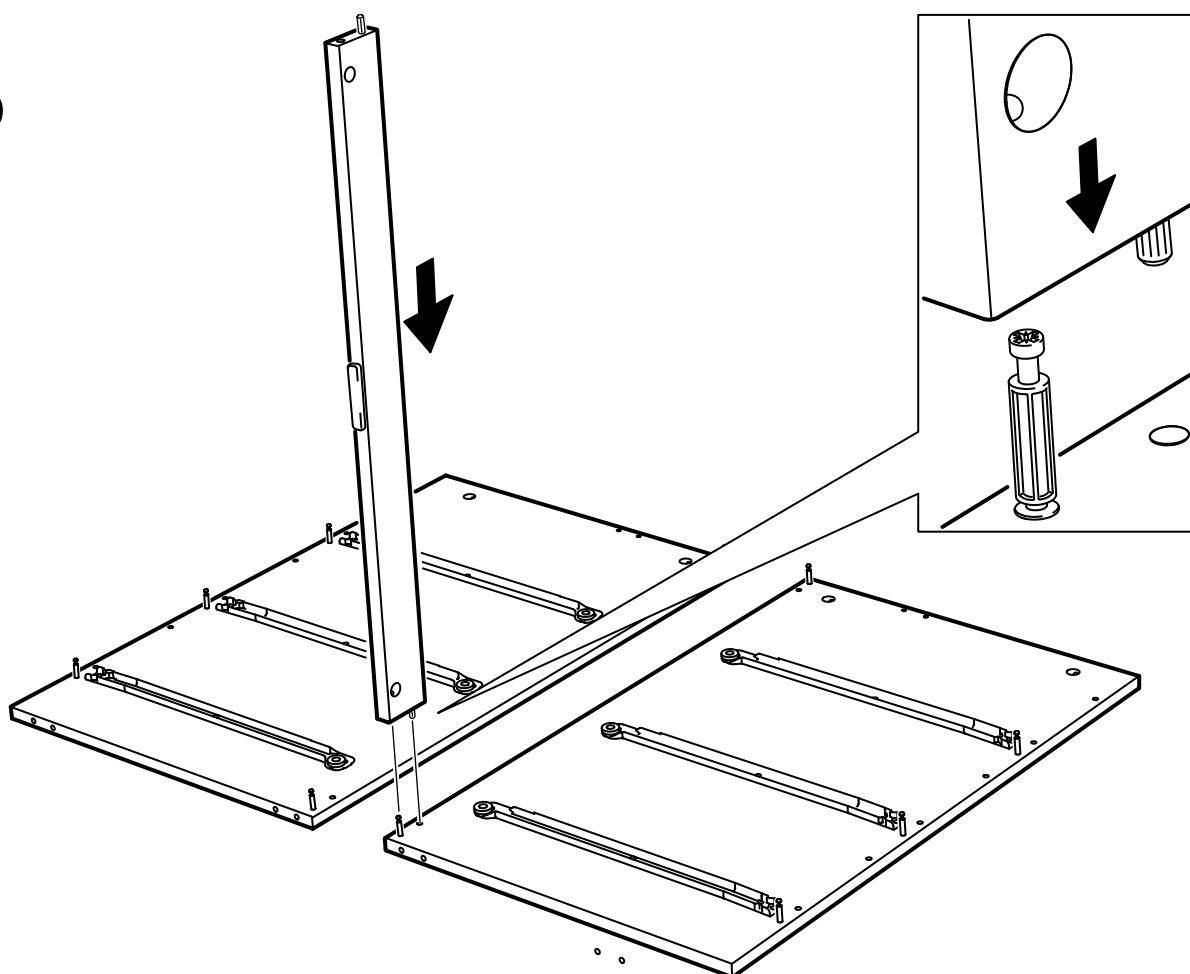 



7

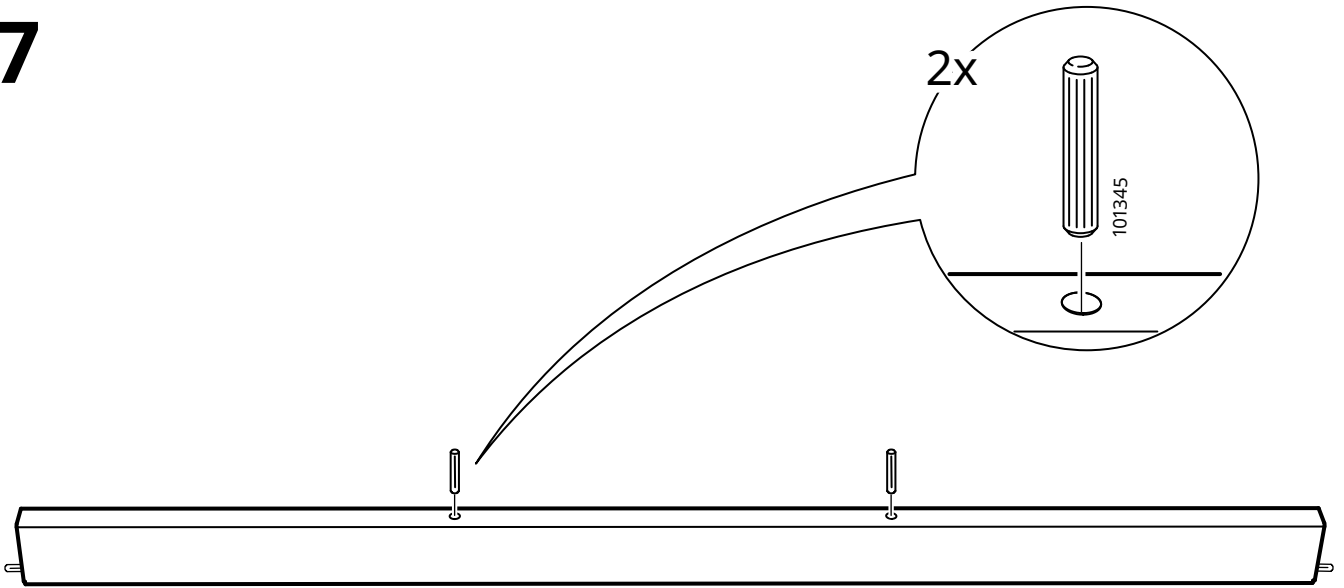 


8

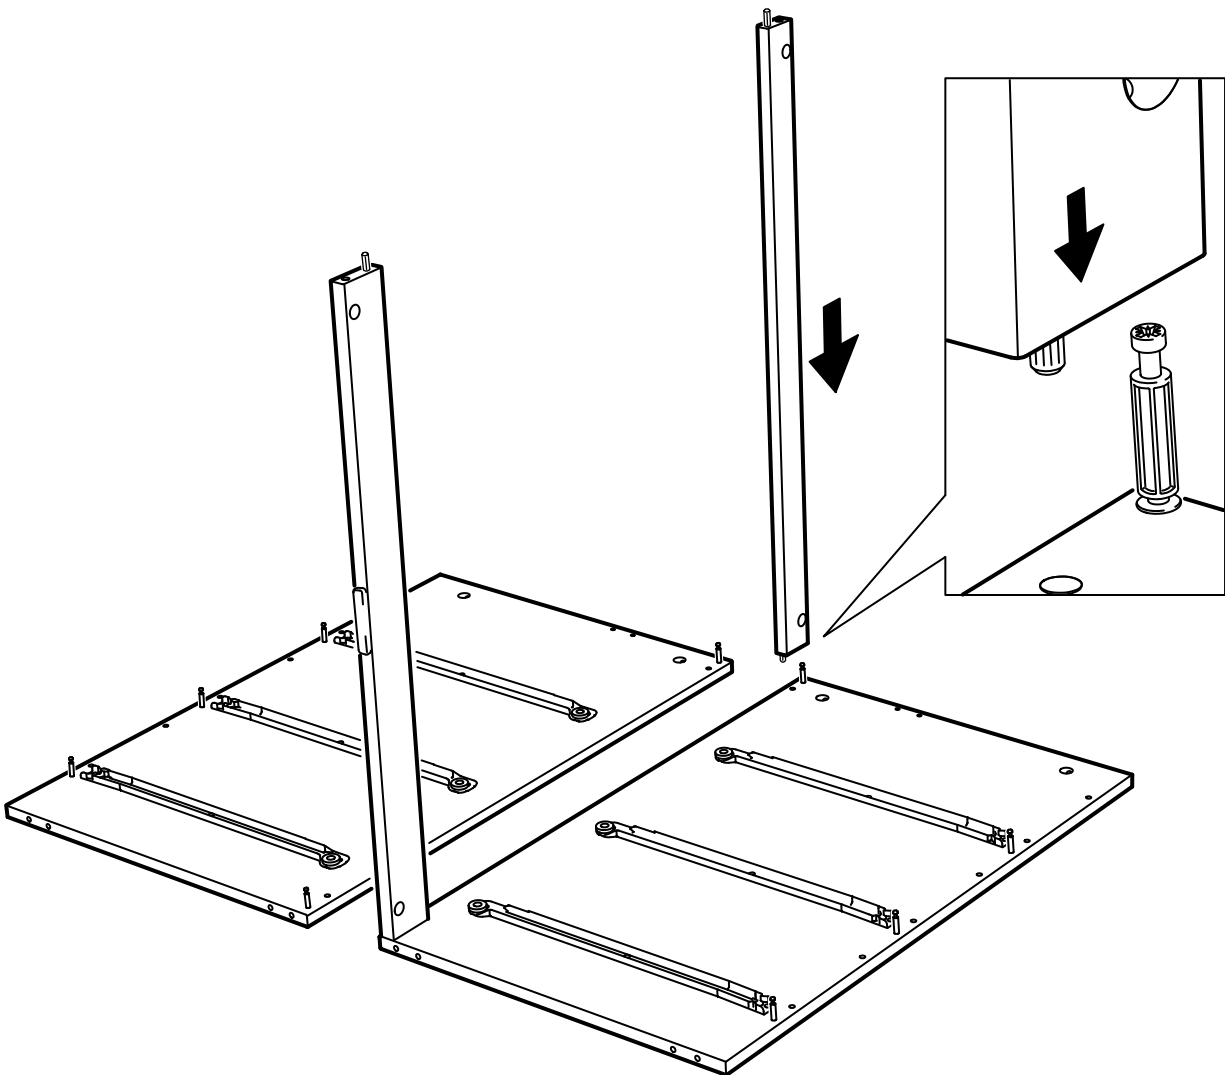 

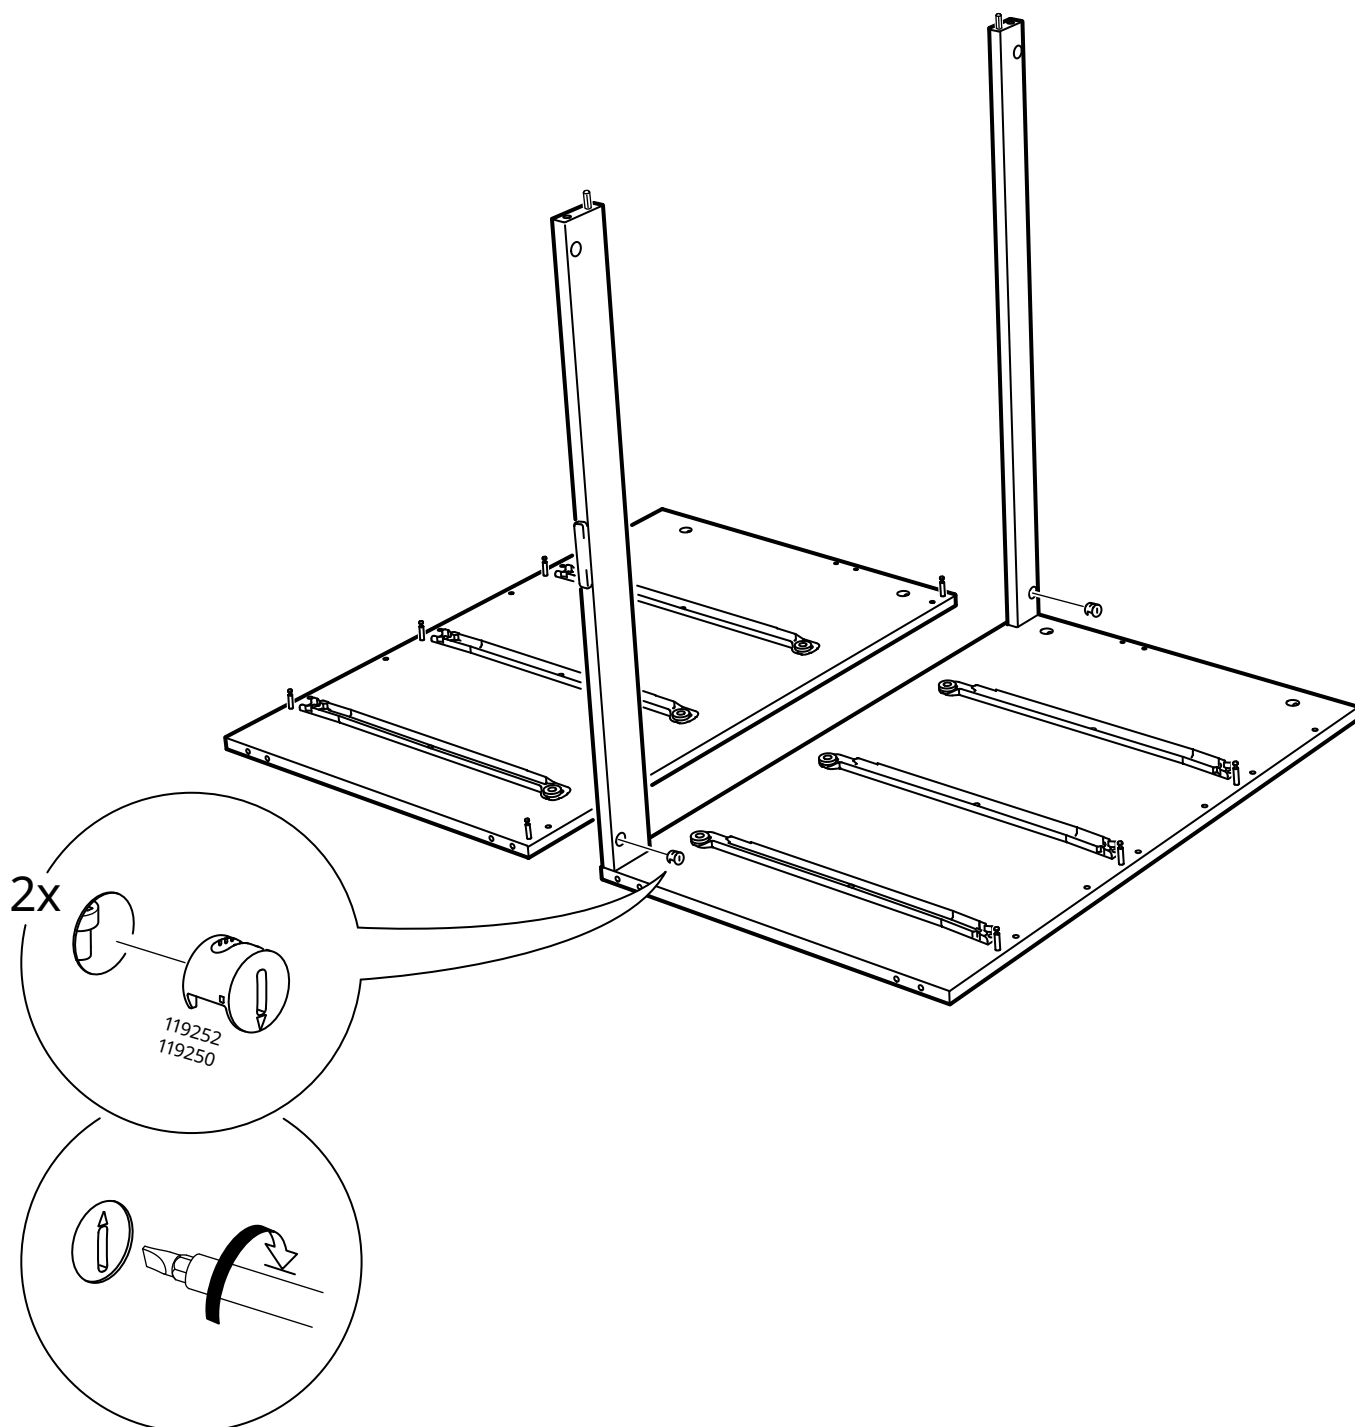 


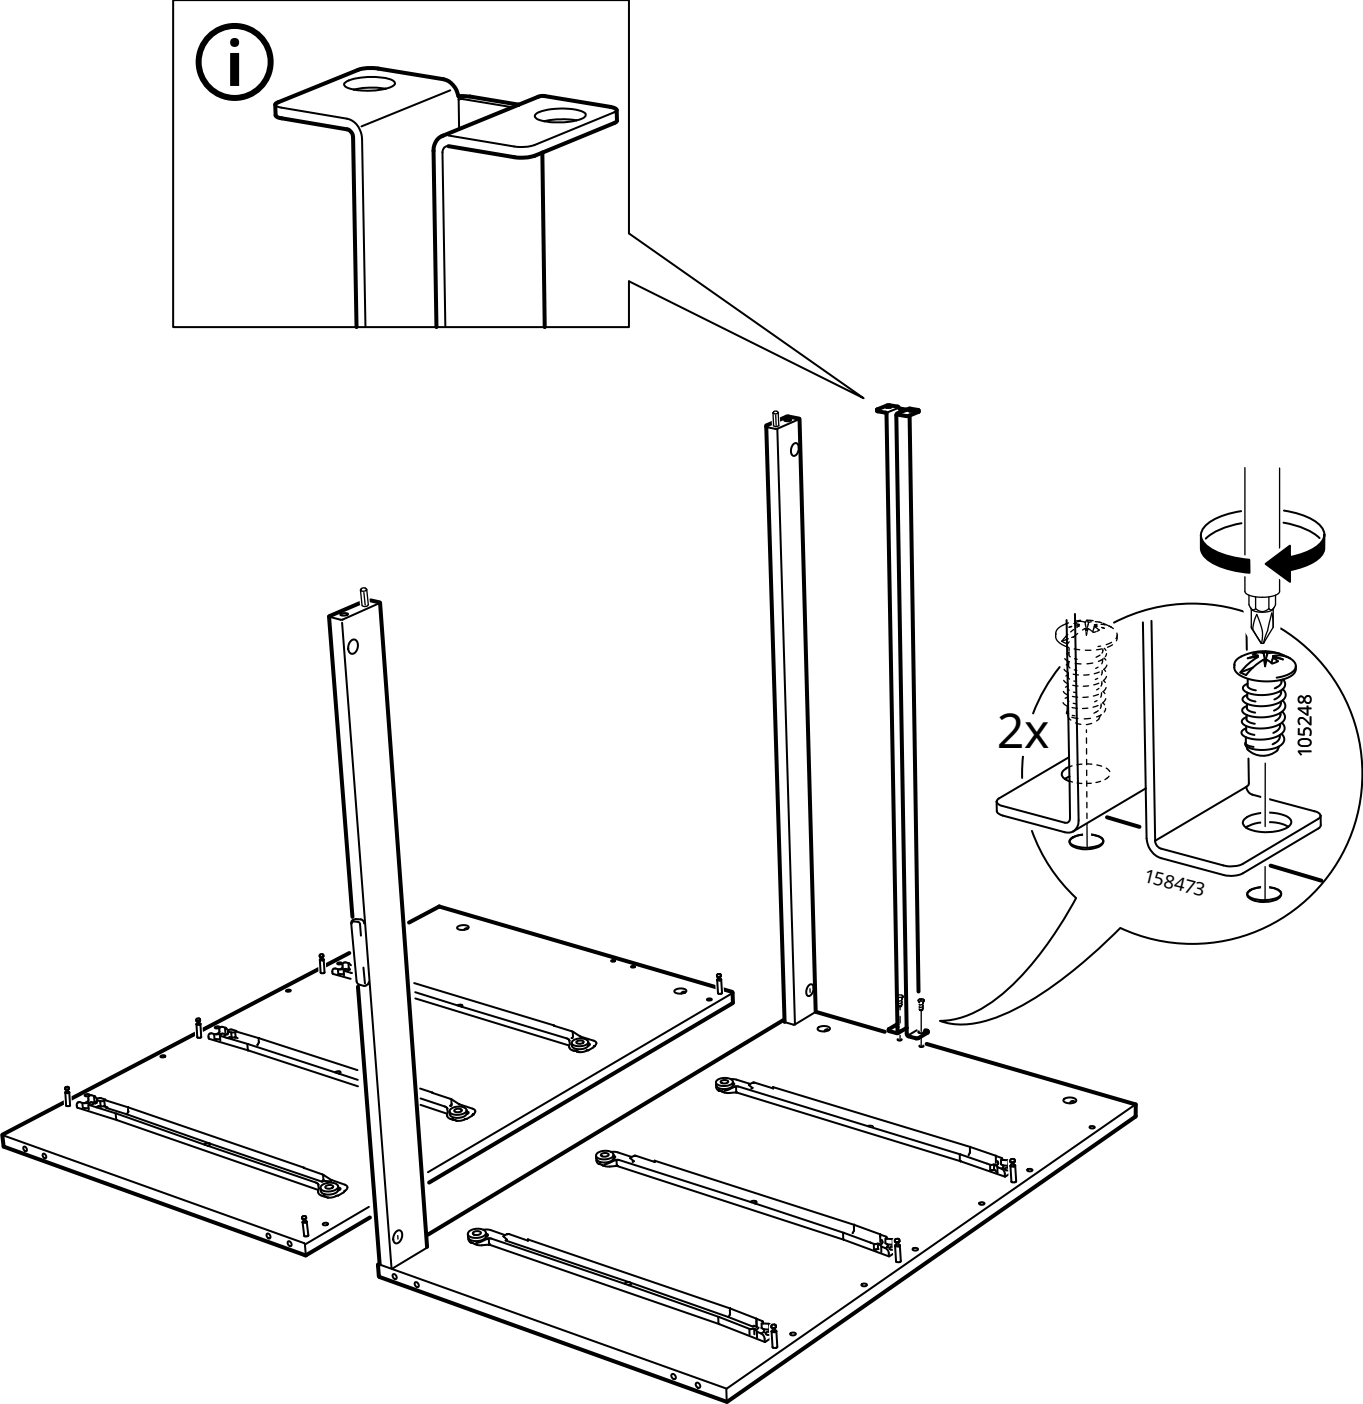 


11

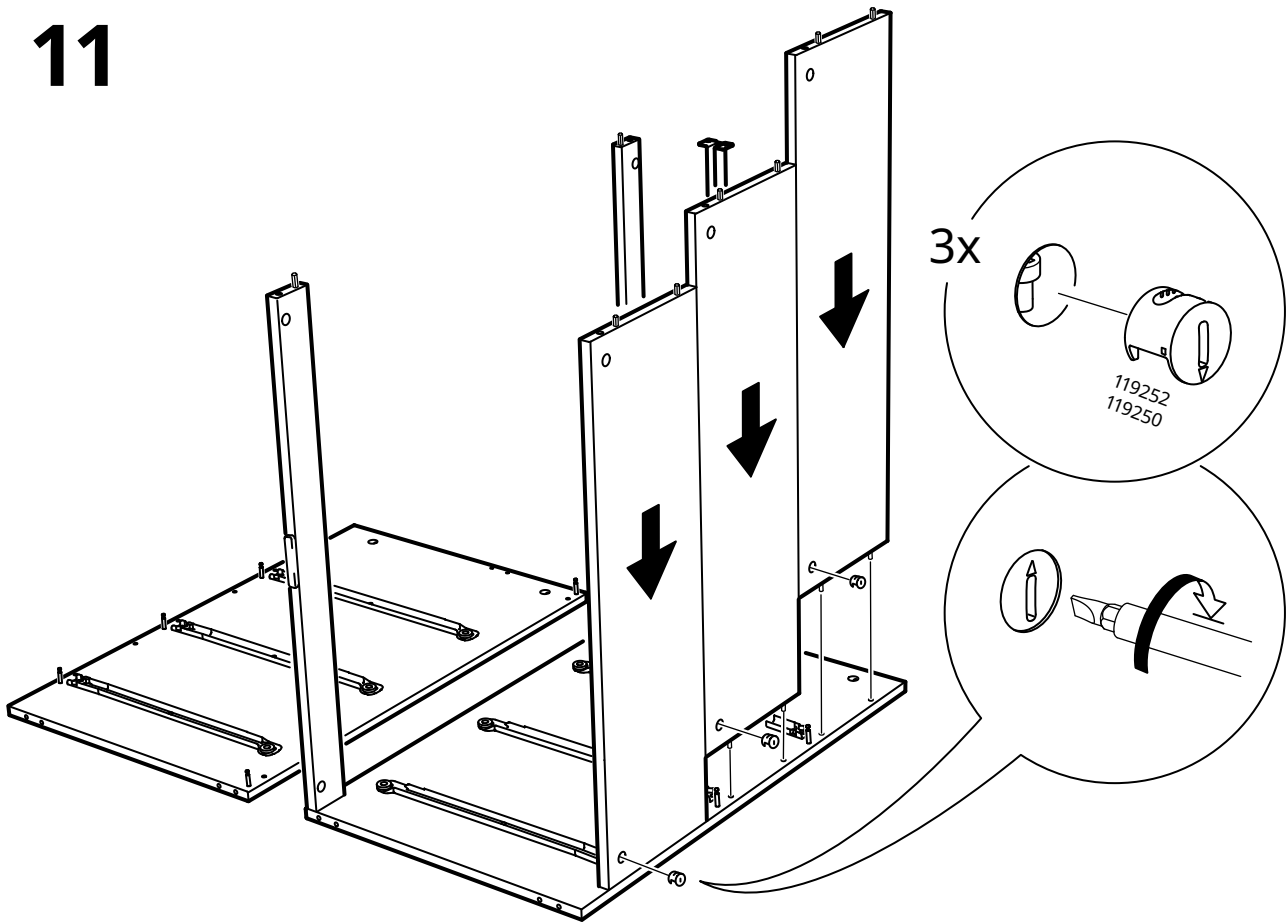 


12

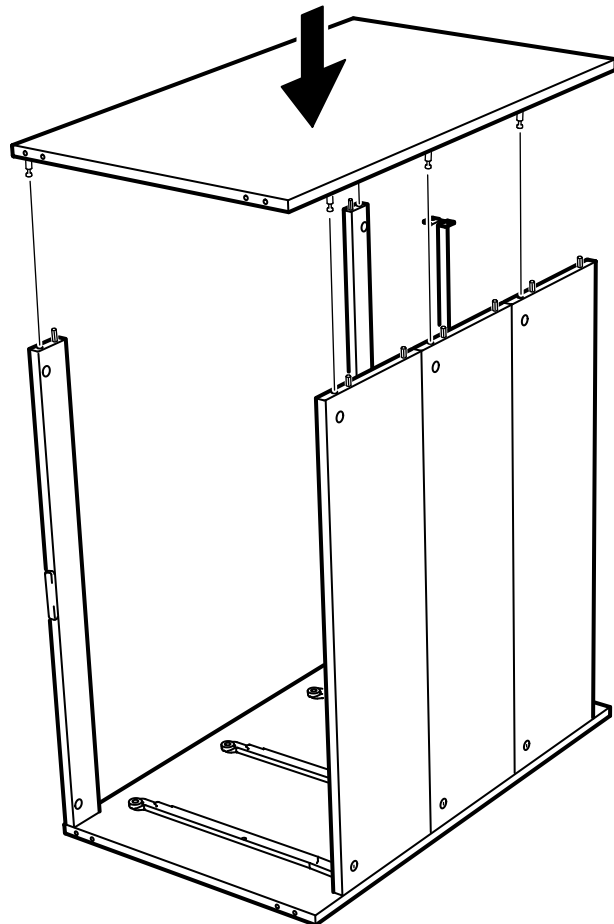 


13

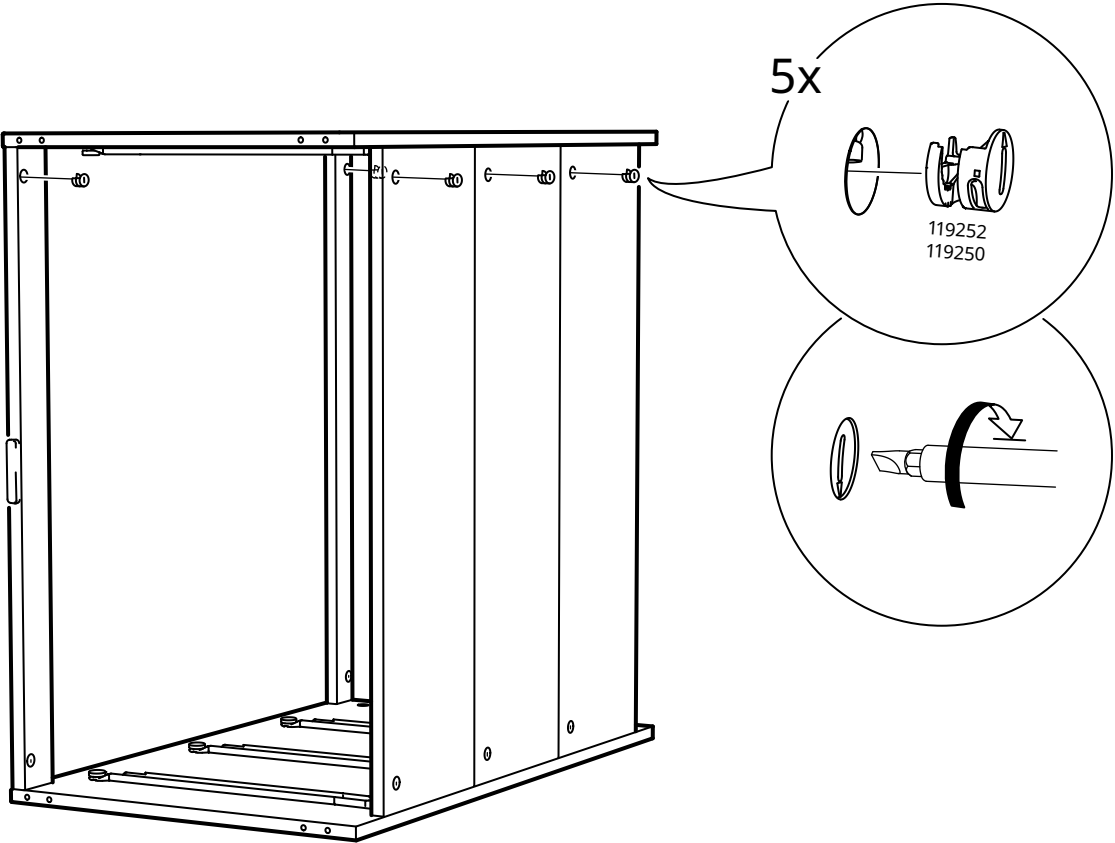 


14

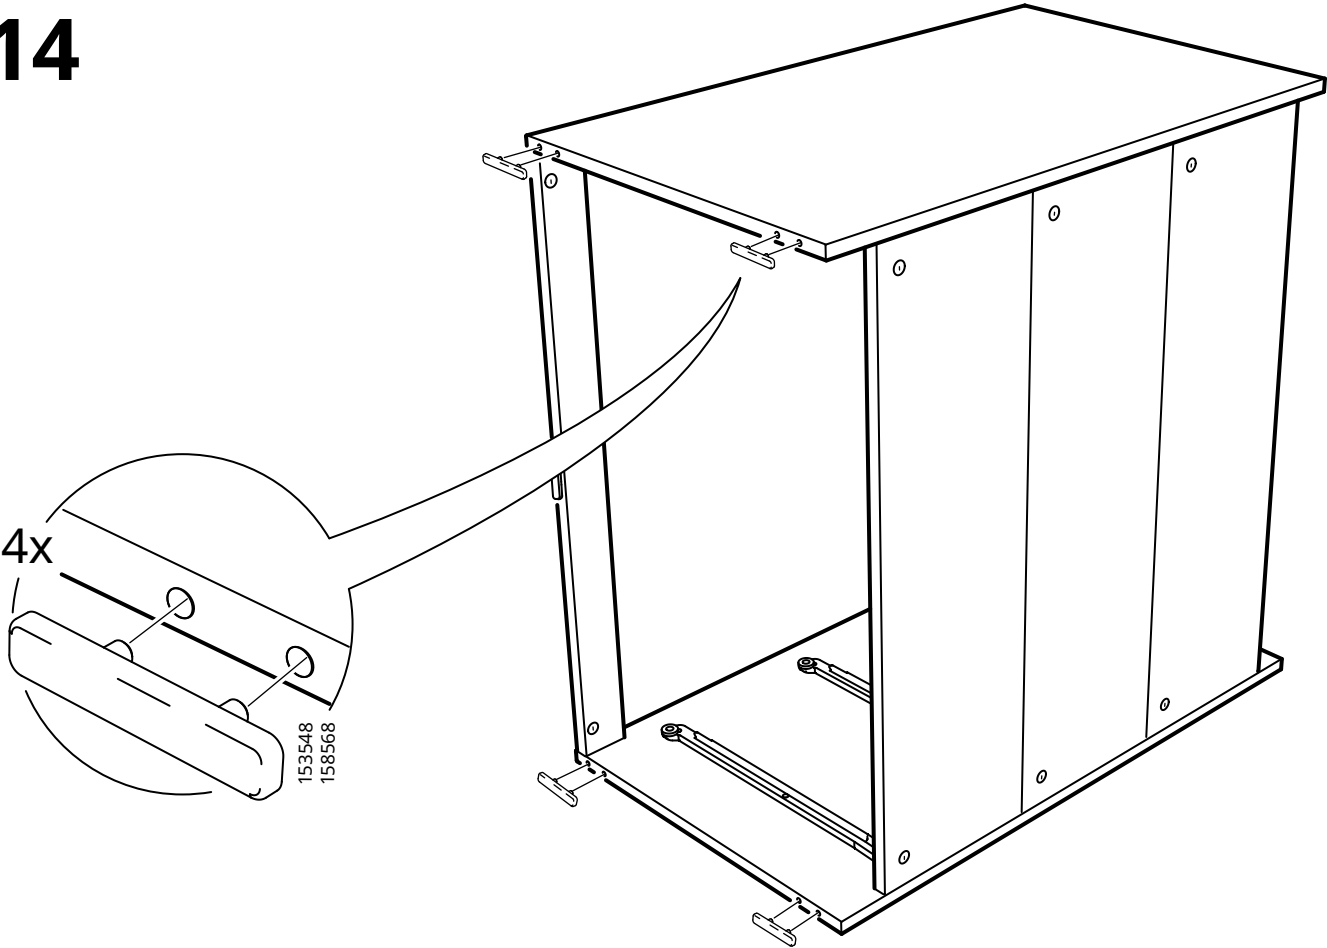 


15

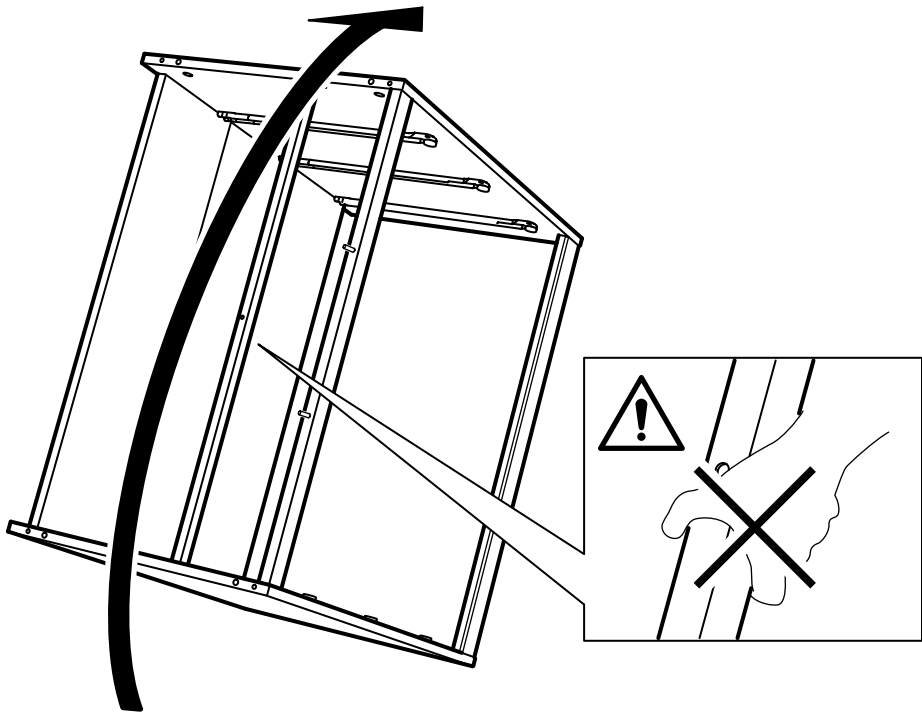 


16

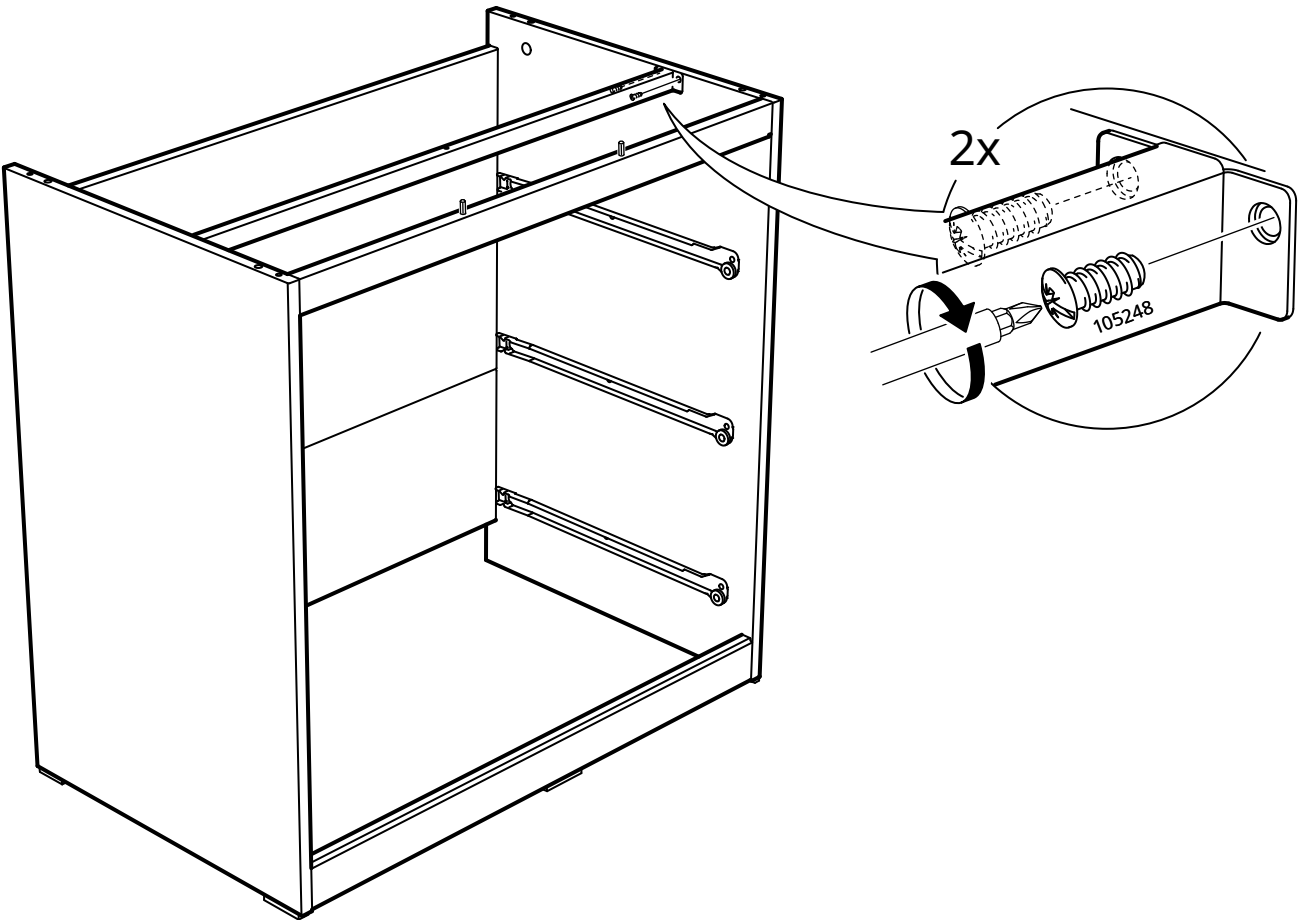 



17

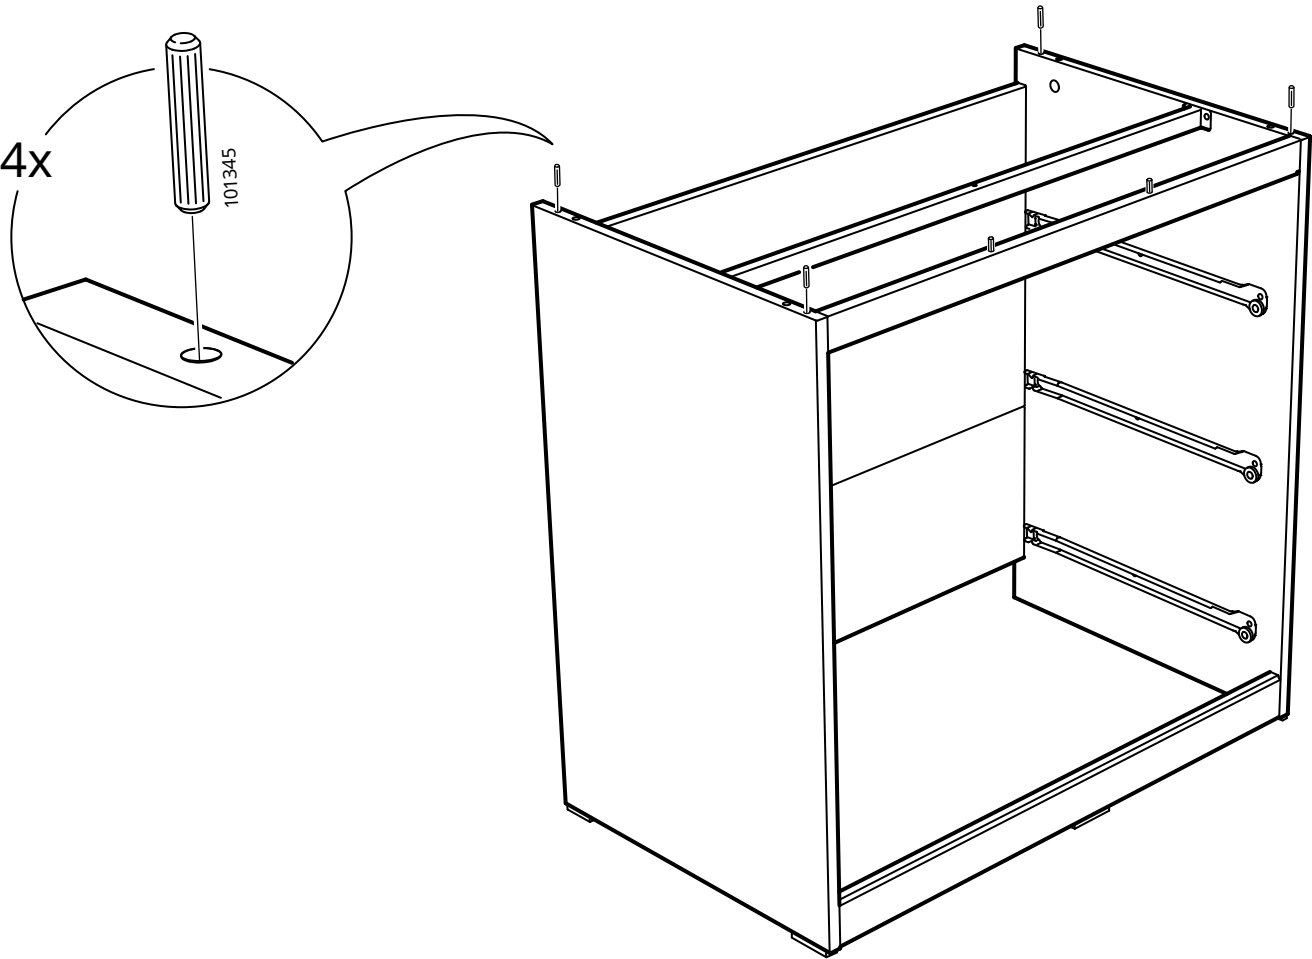 





18

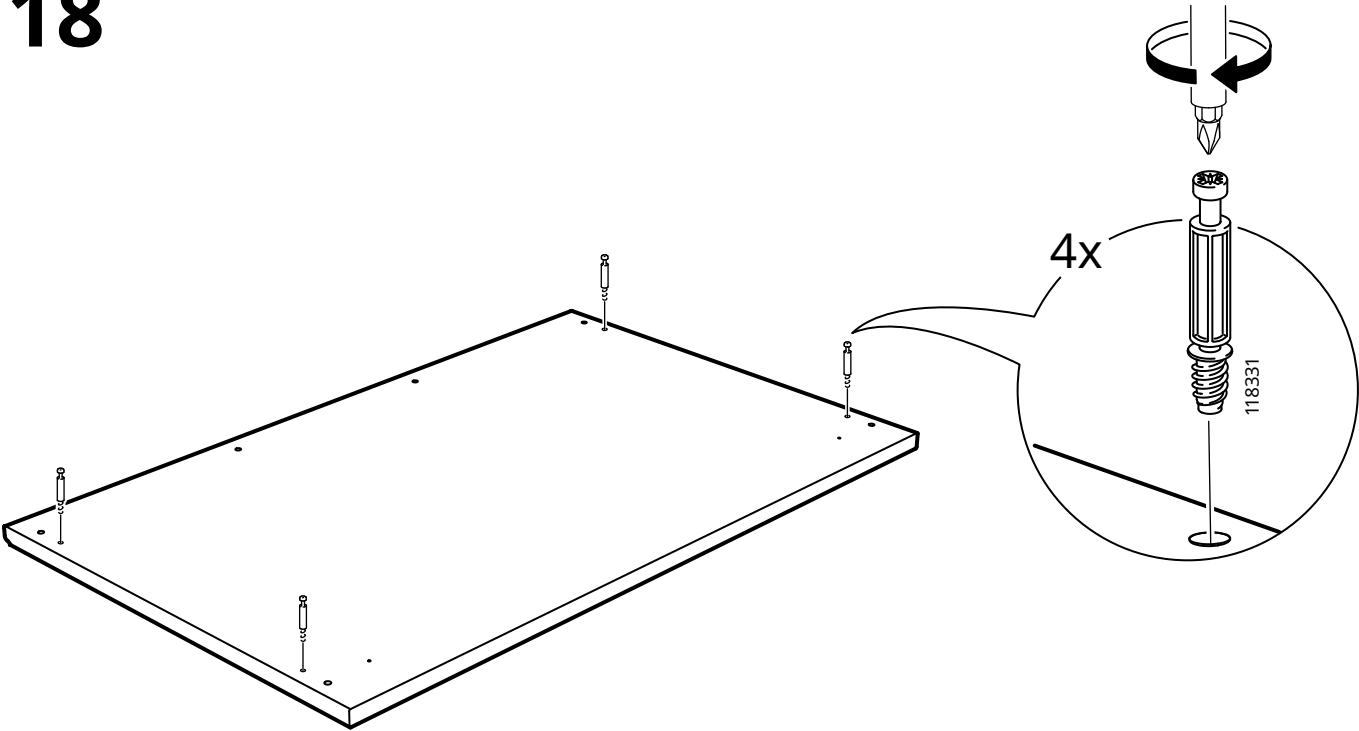 




19

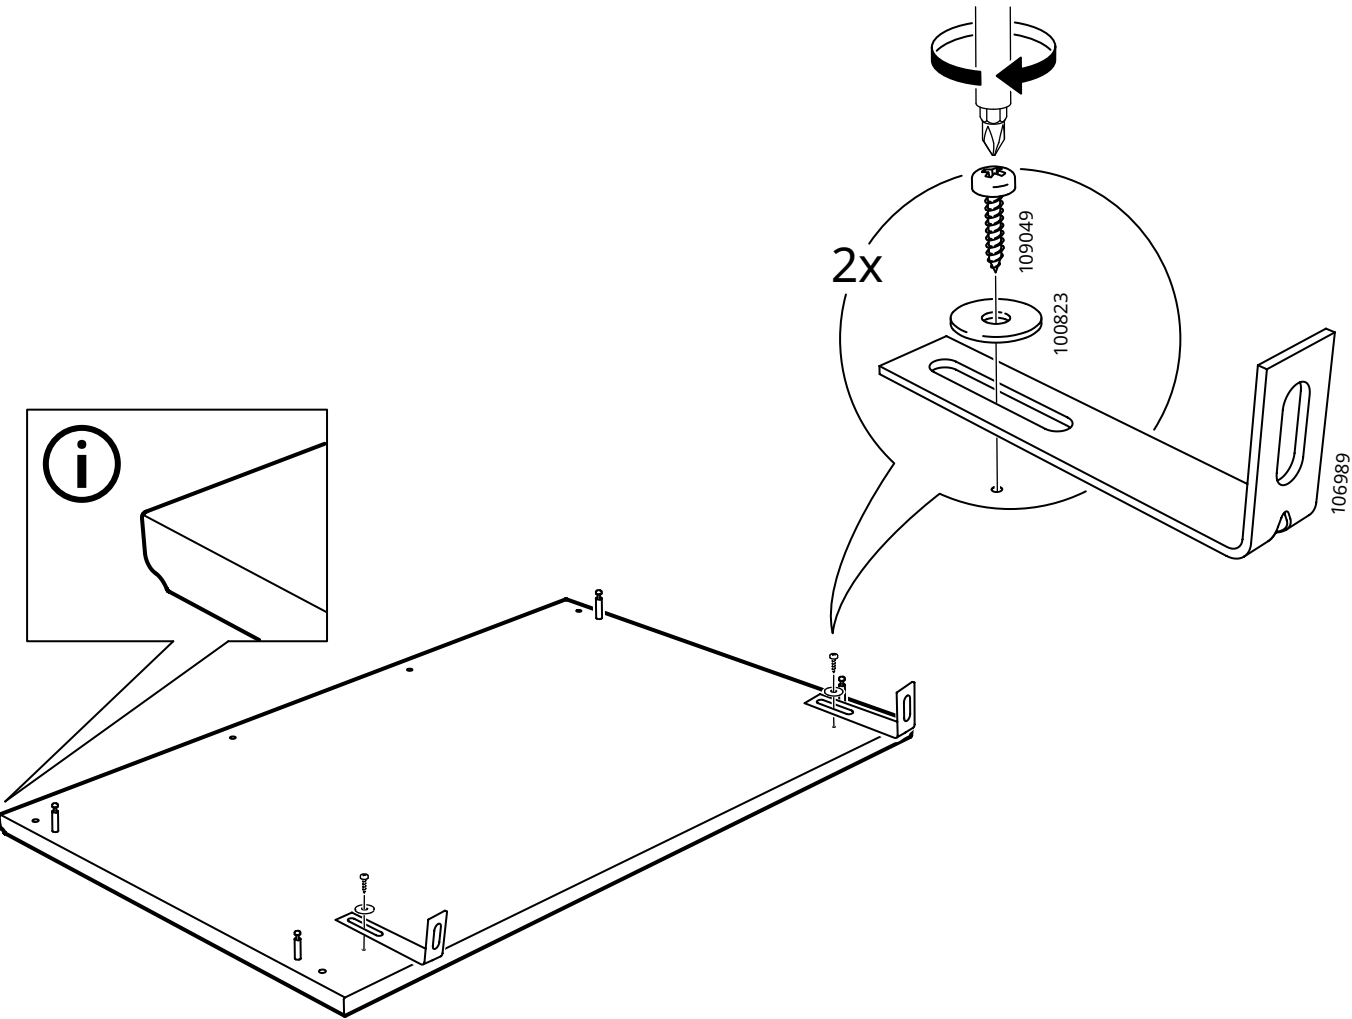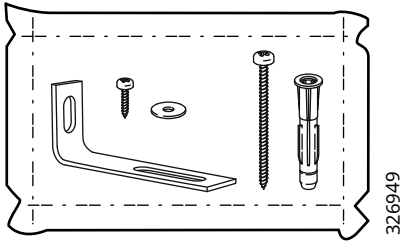  


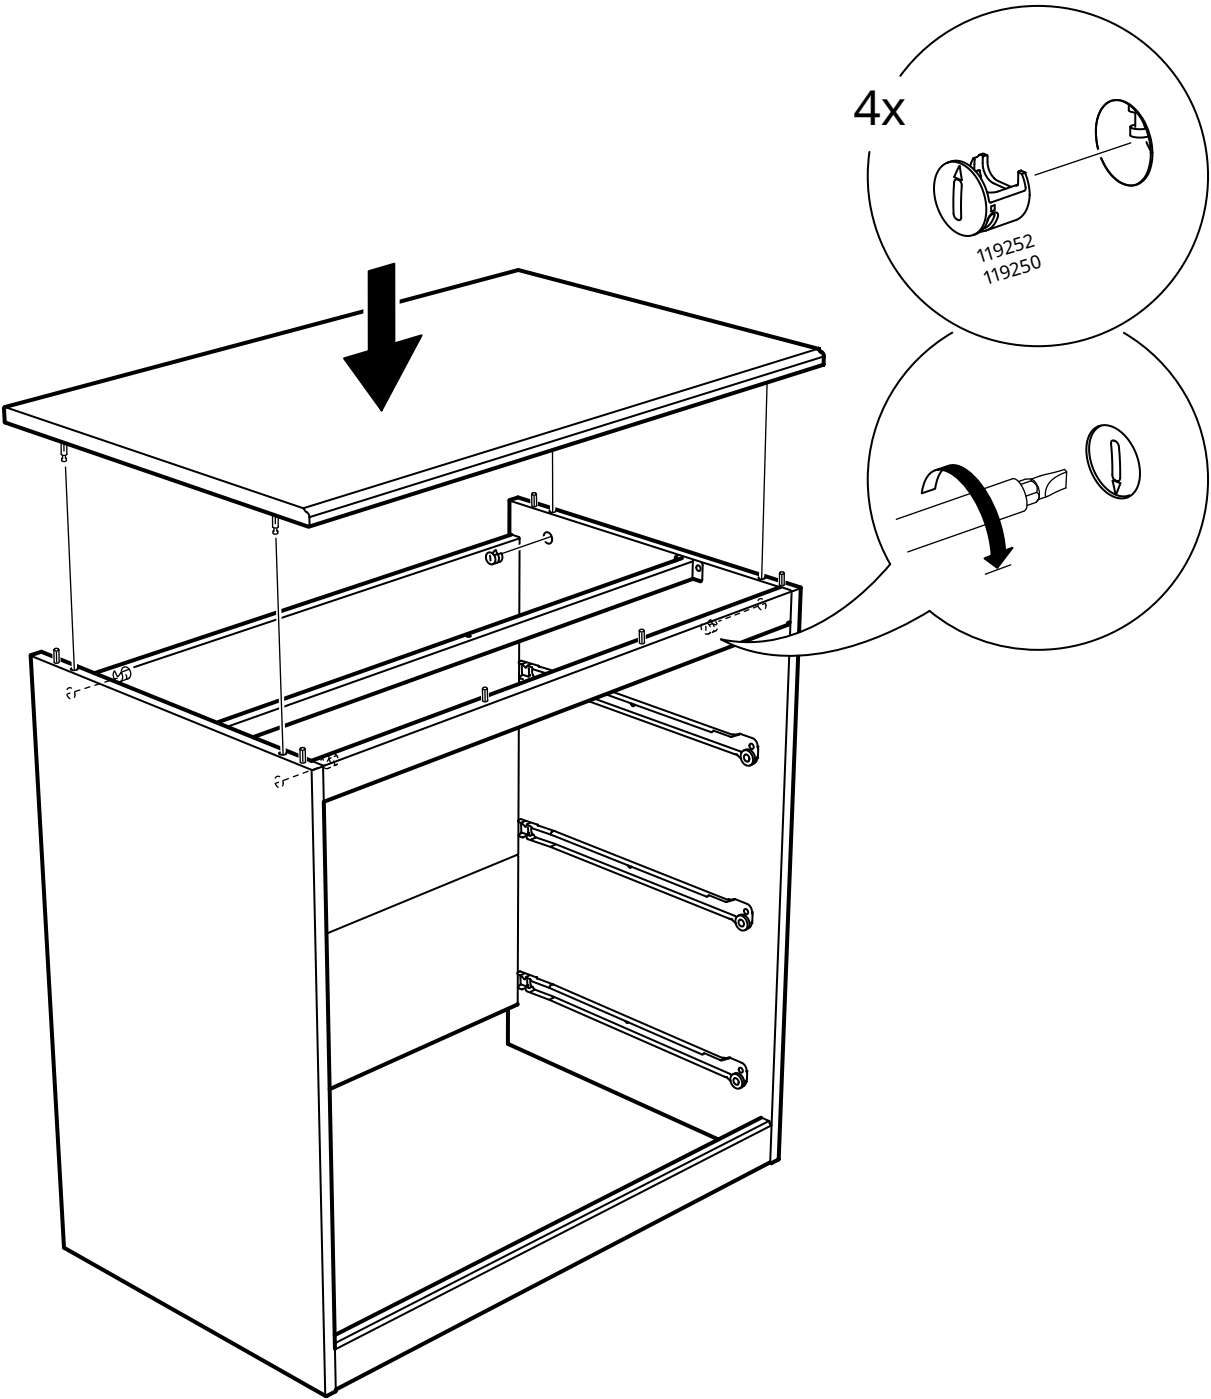 

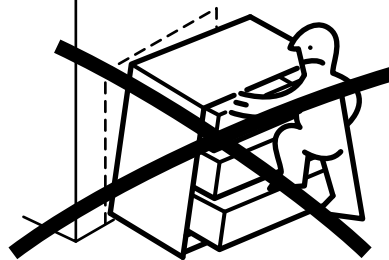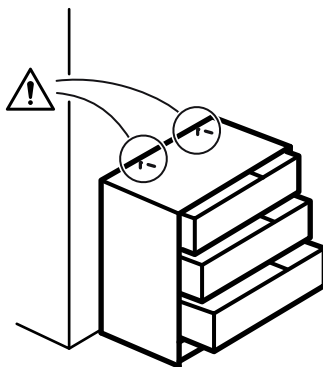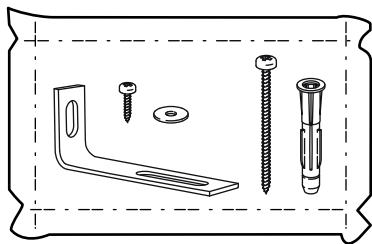   


21

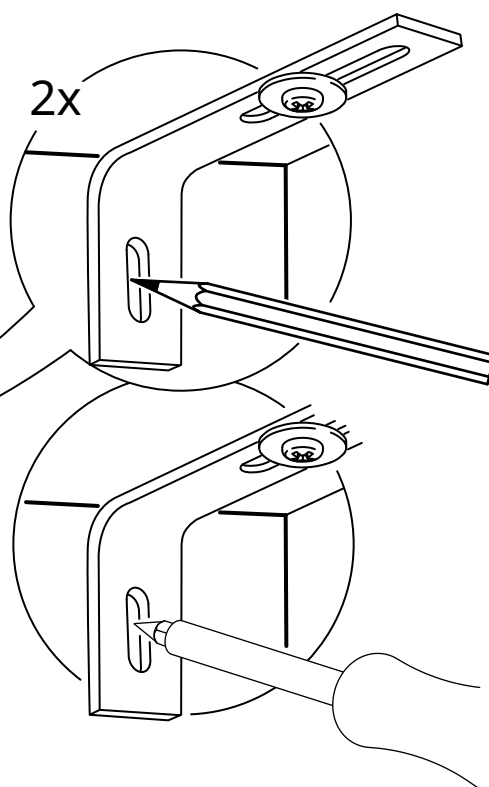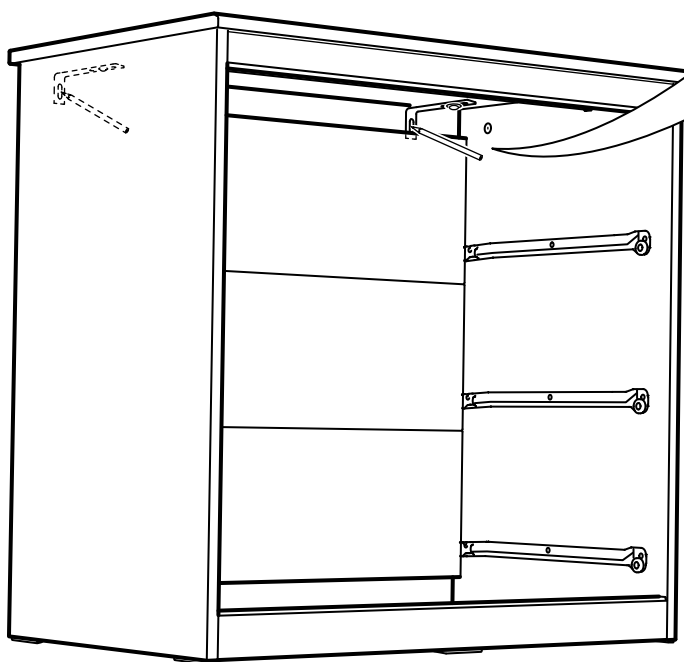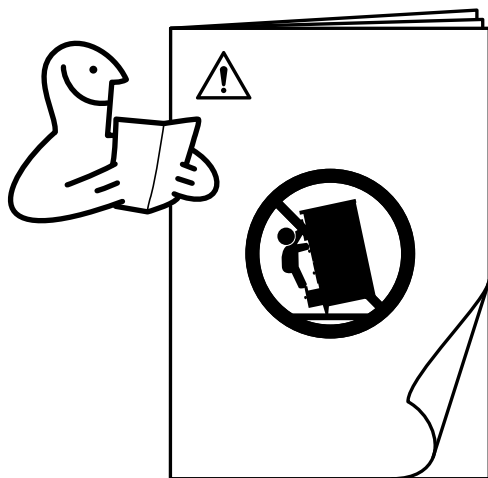   

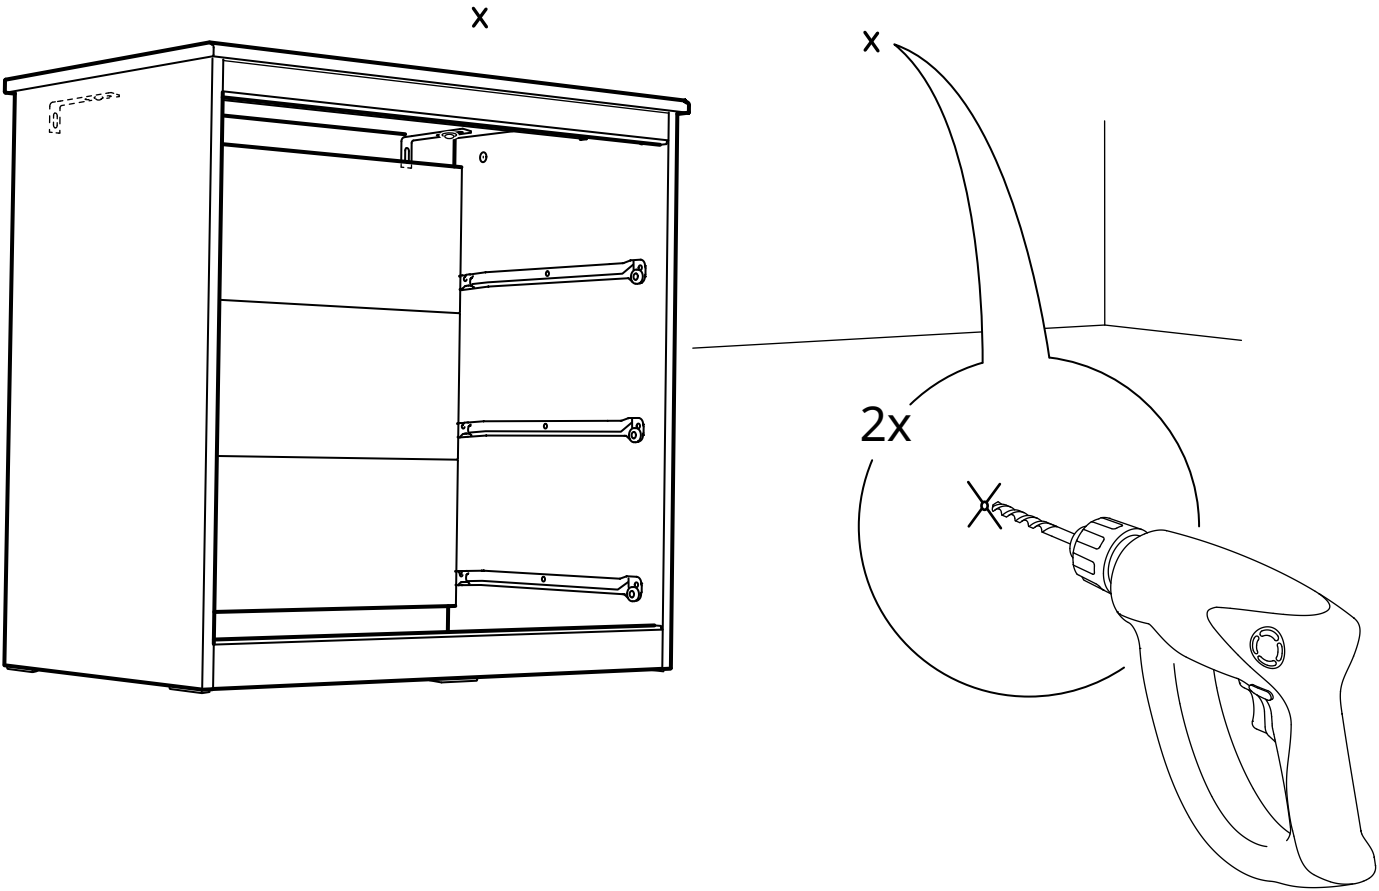 

23

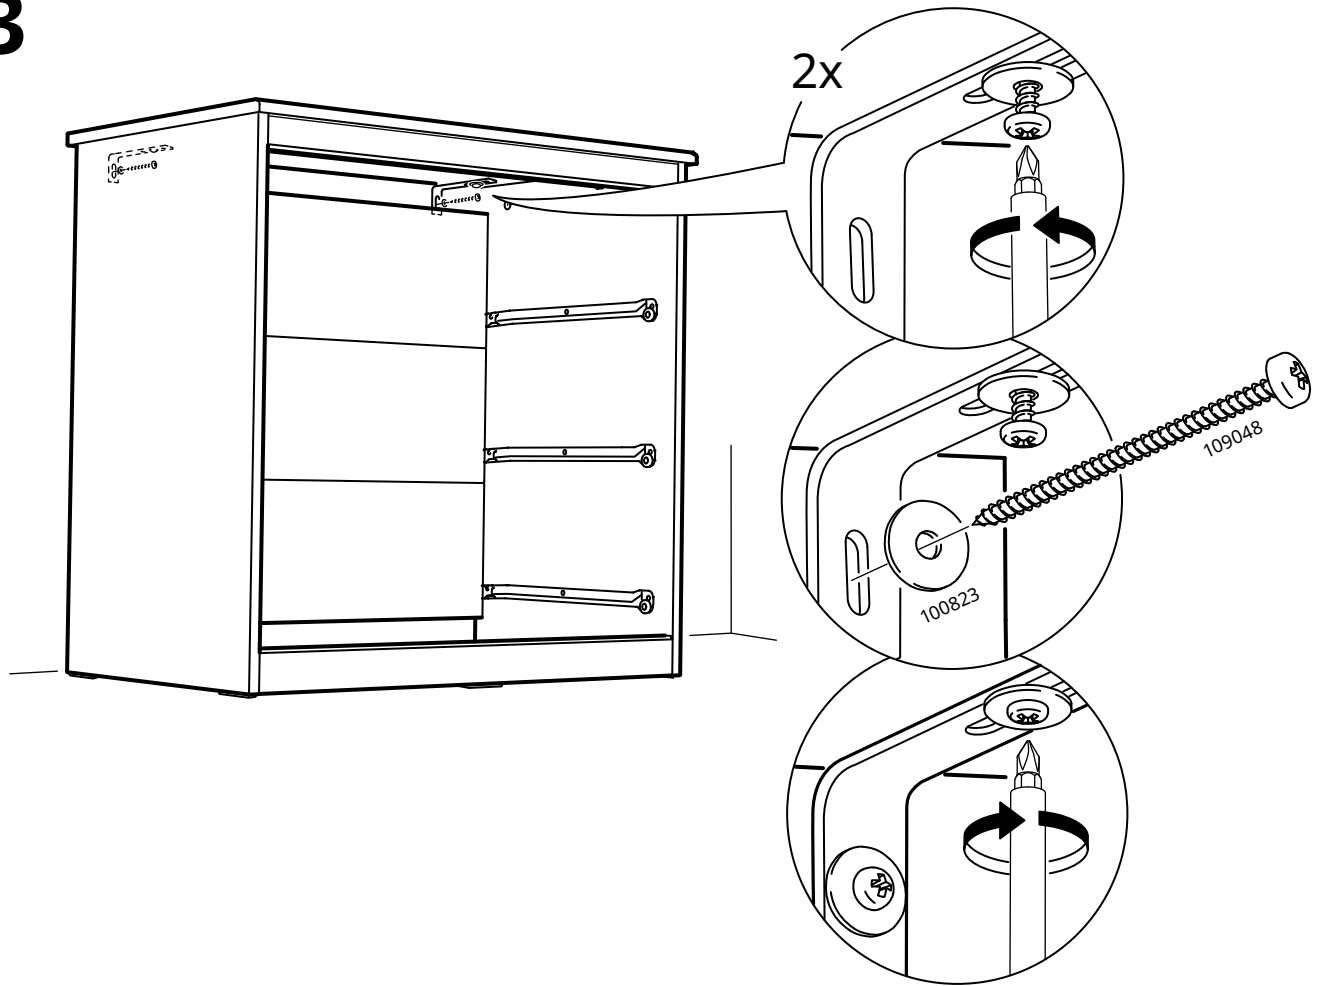 

24

