 


SONGESAND



Design and Quality
IKEA of Sweden

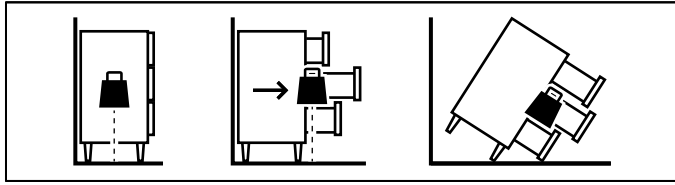

English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

 
 
 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

 
 
 
NEVER open more than one drawer at a time.

Place heaviest items in the lowest drawers.

English

Read and follow each step of the instruction carefully.

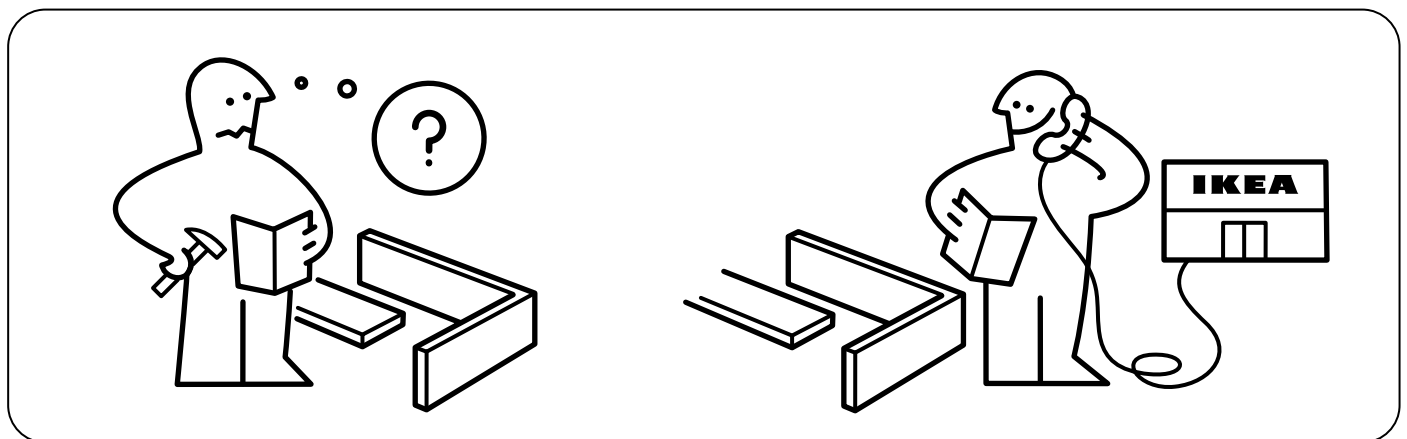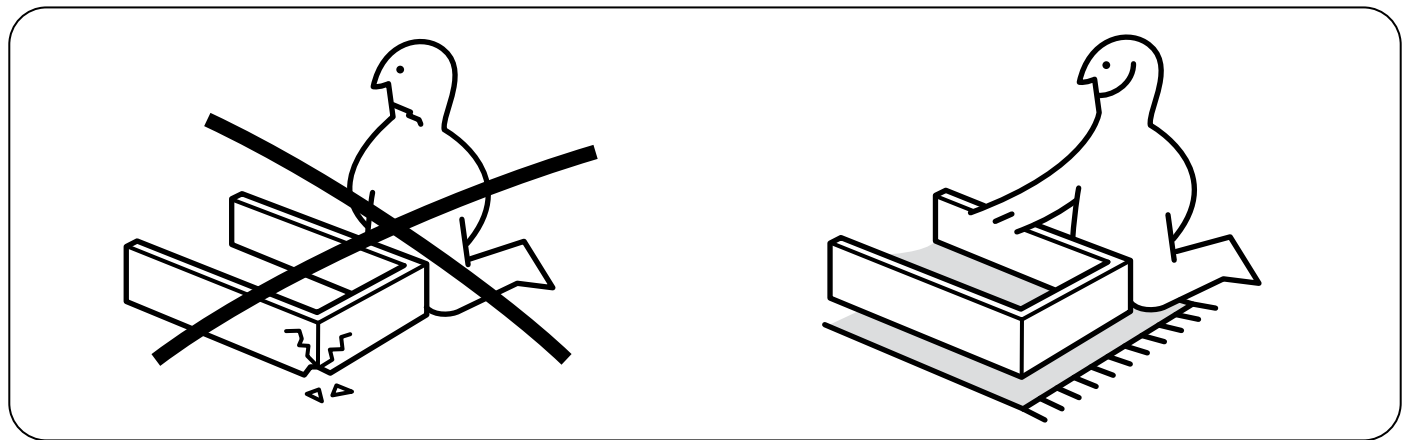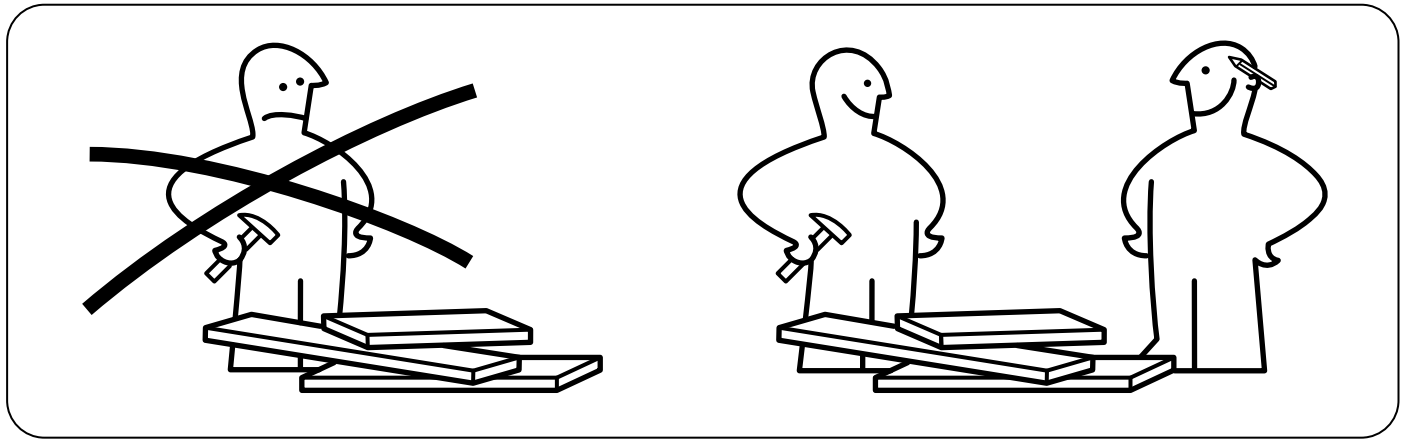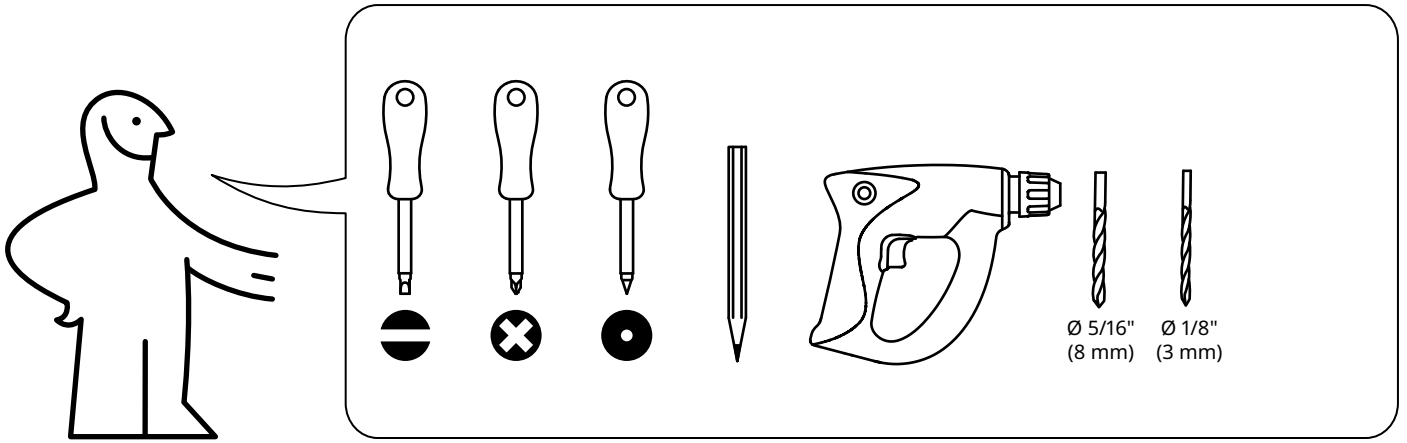

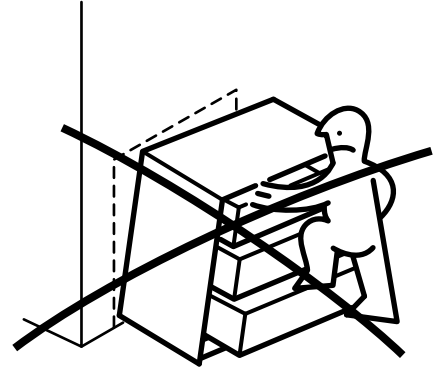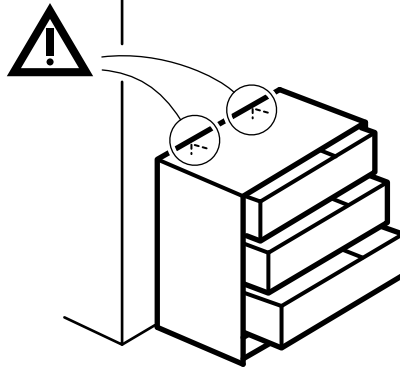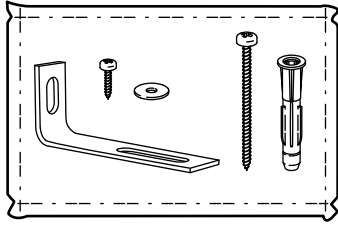

1



118331

16x



101345

18x



105248

4x



146114

 
36x



119252

119250


16x

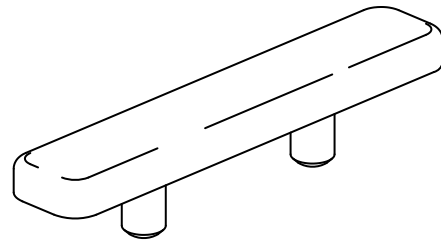

153548


158568

 5x

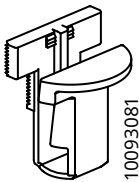


10093081

 16x


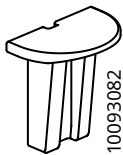




10093082

 16x


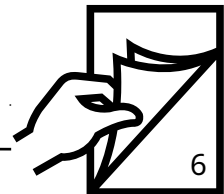


6

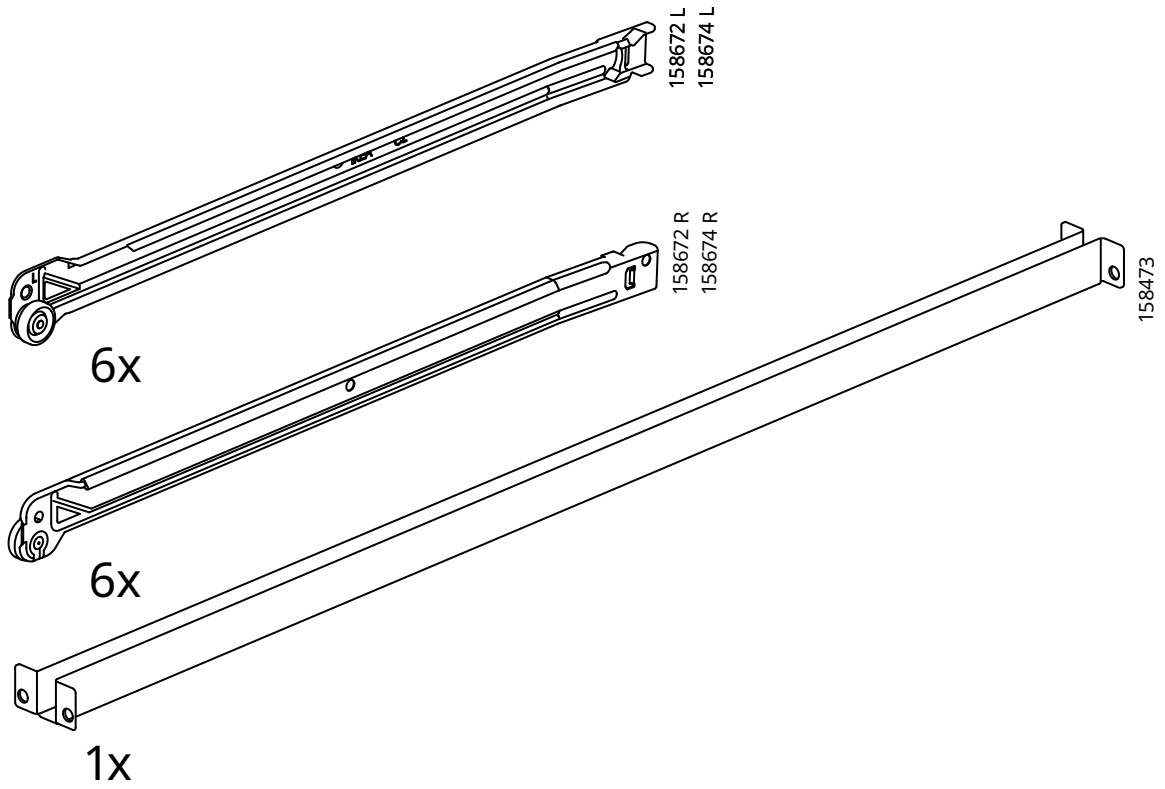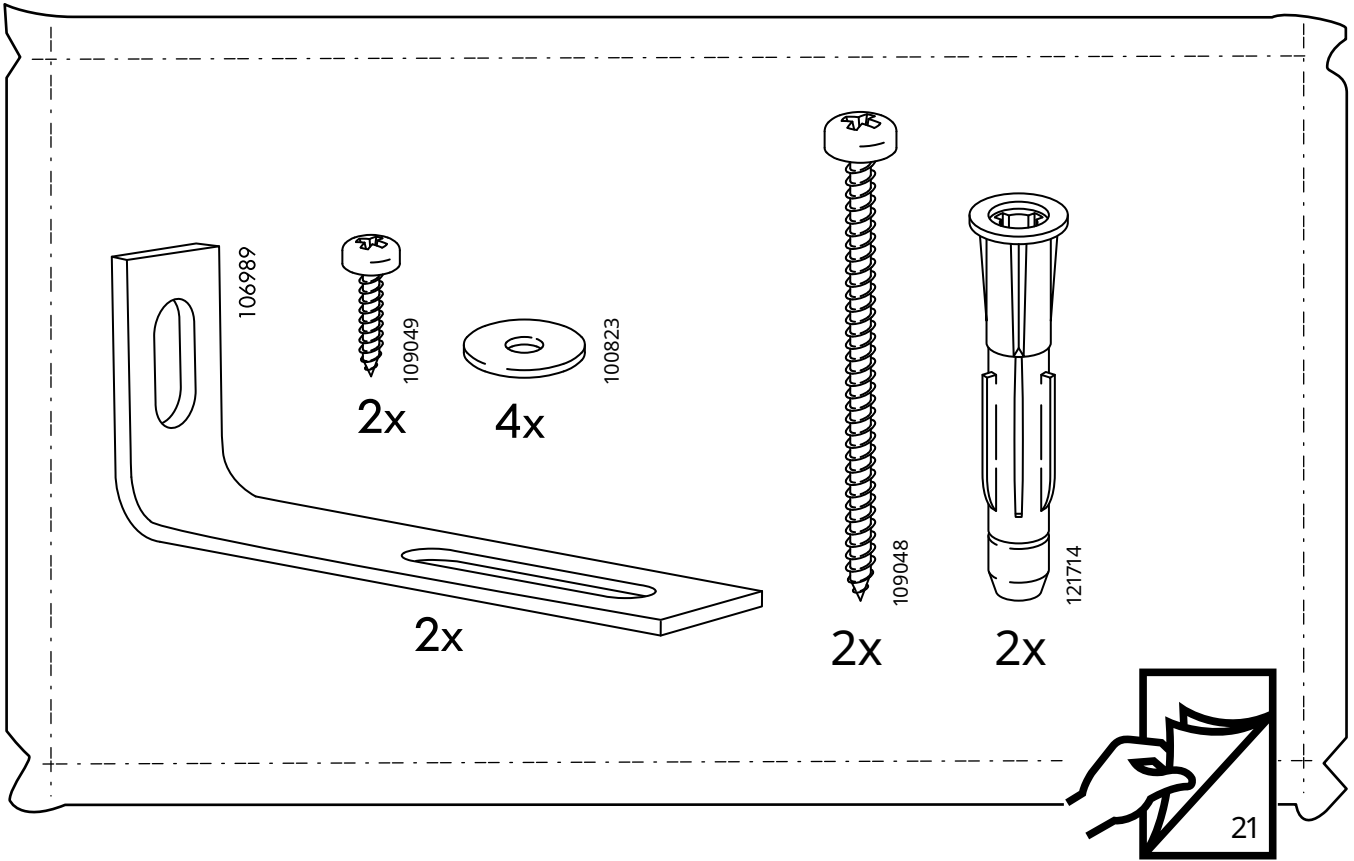  


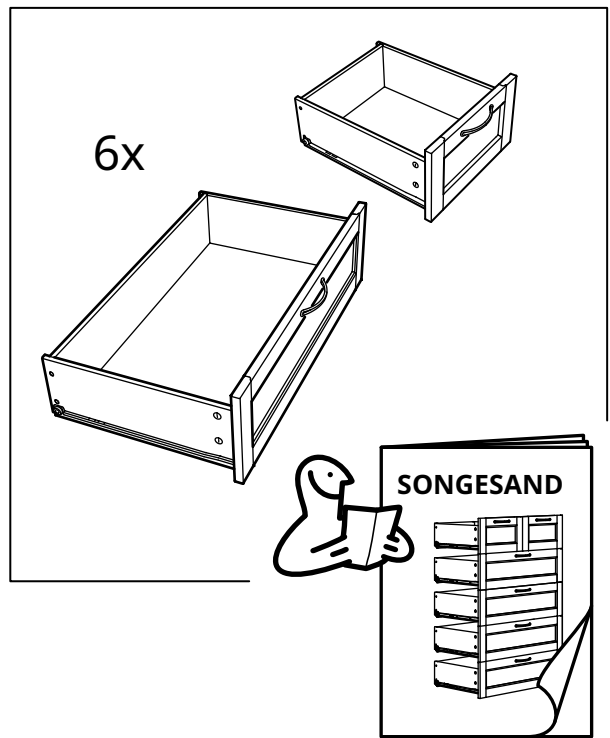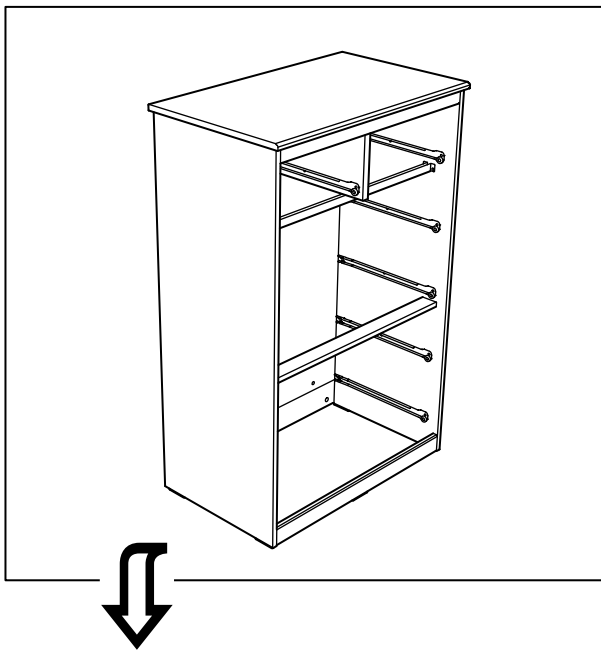  


1

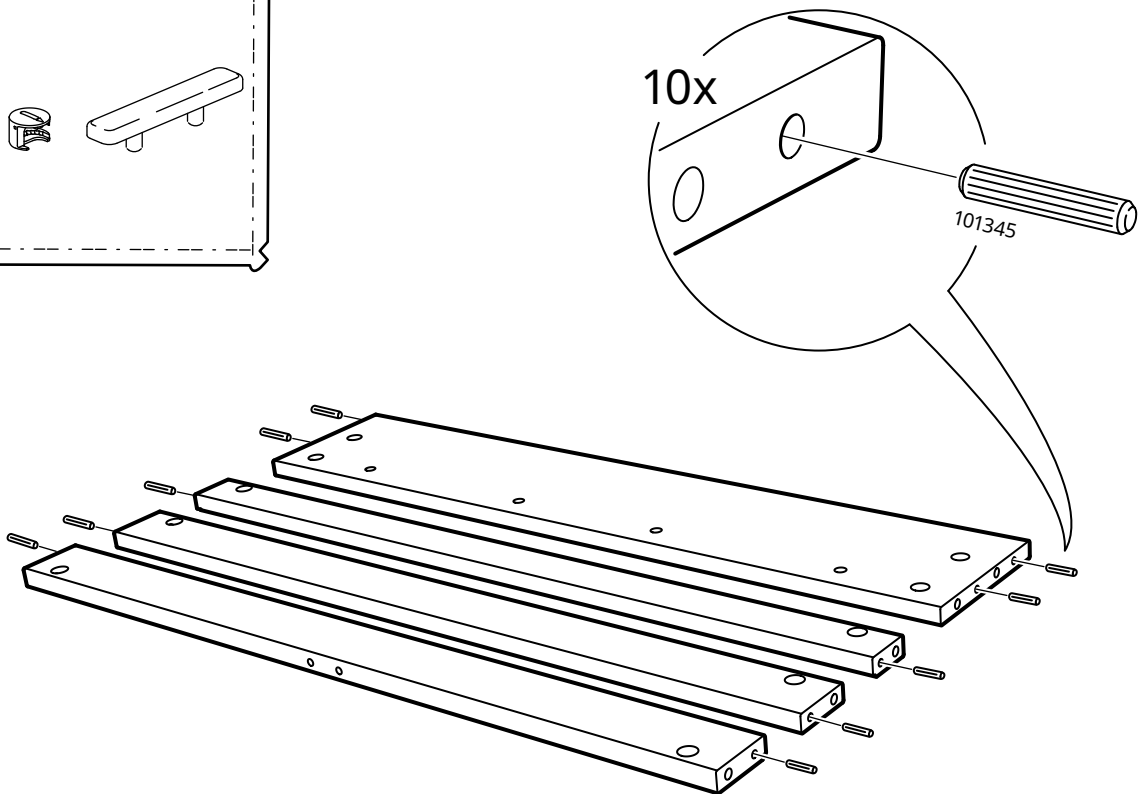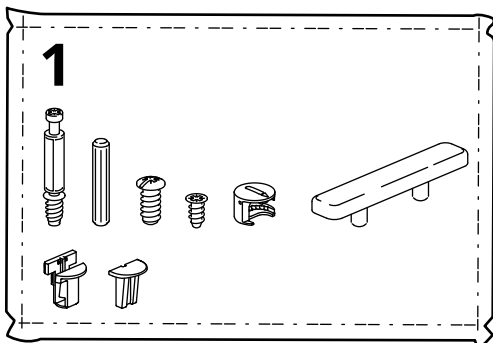  


2

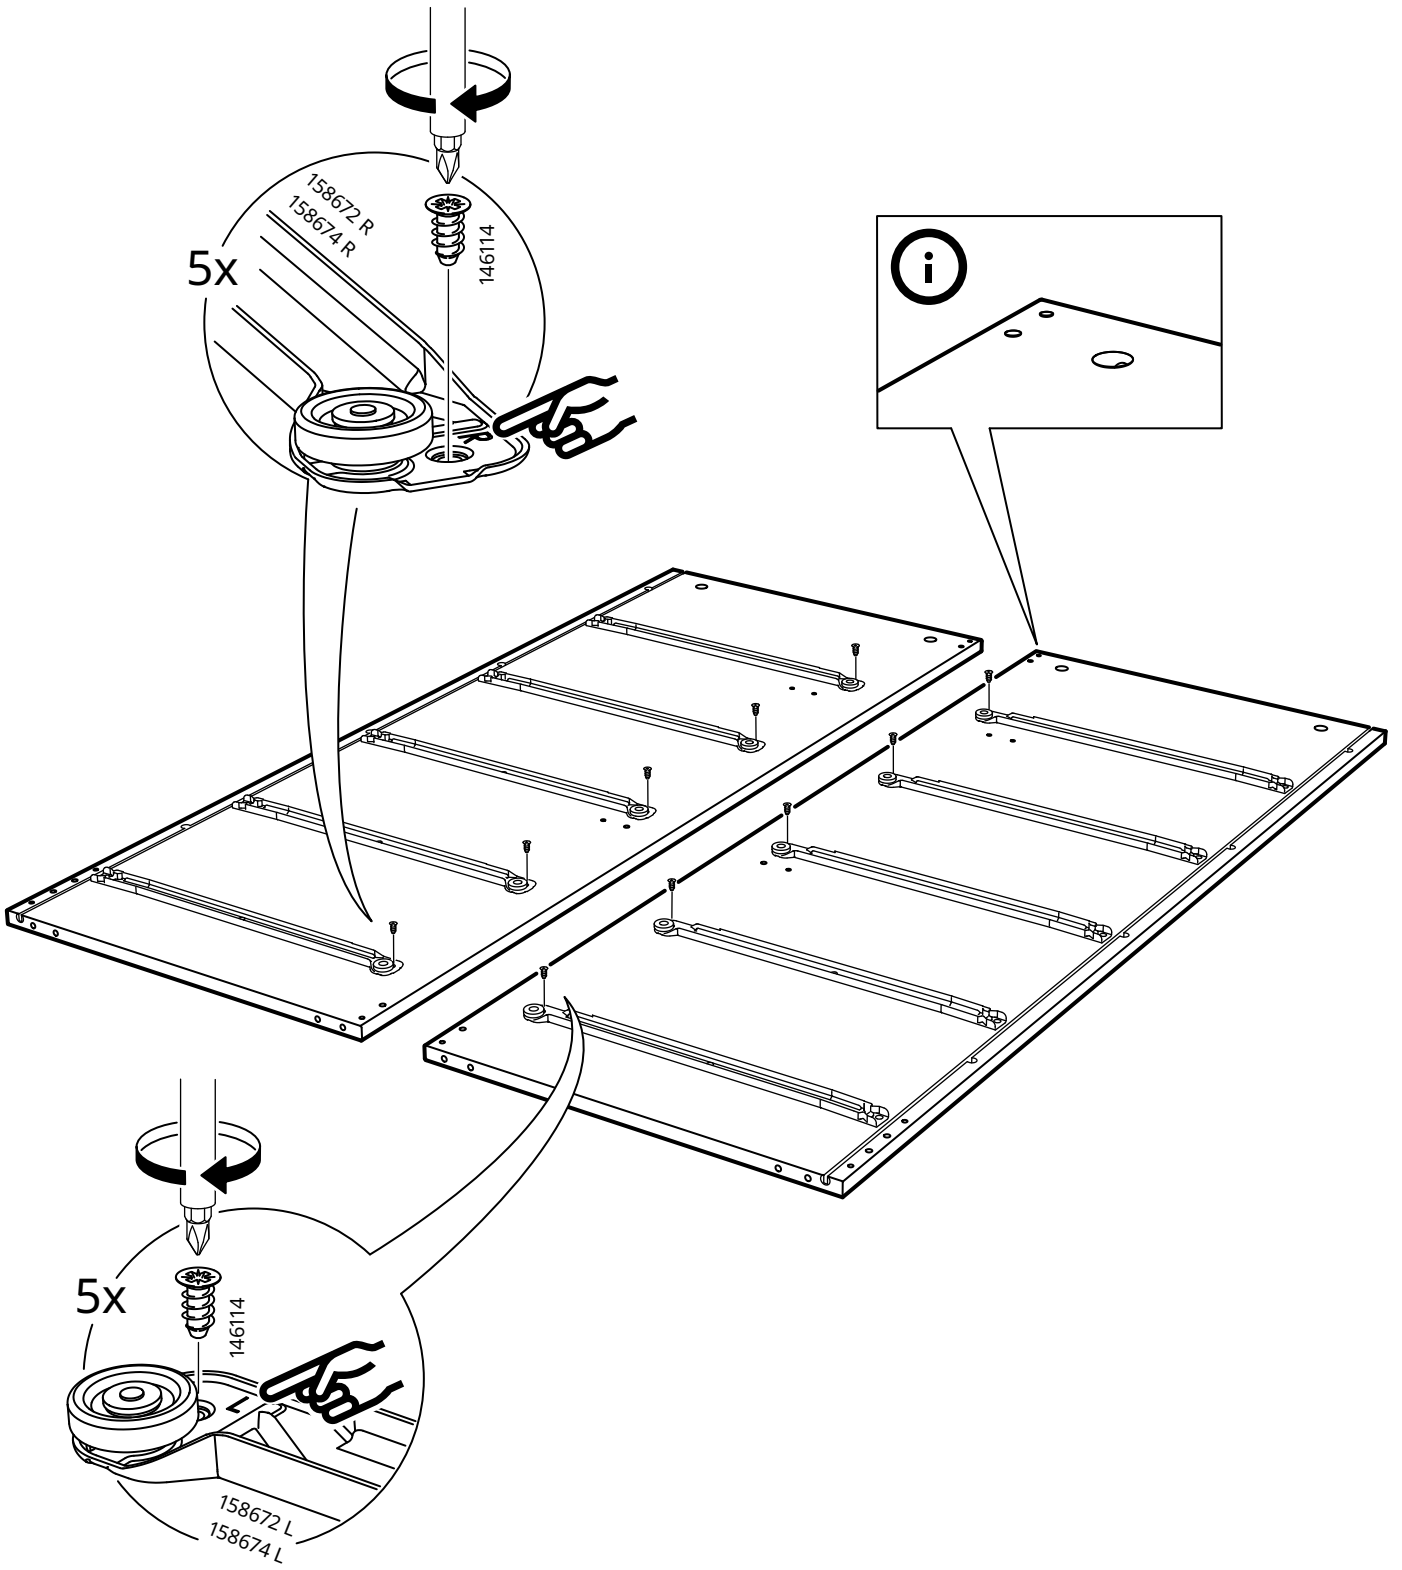 


3

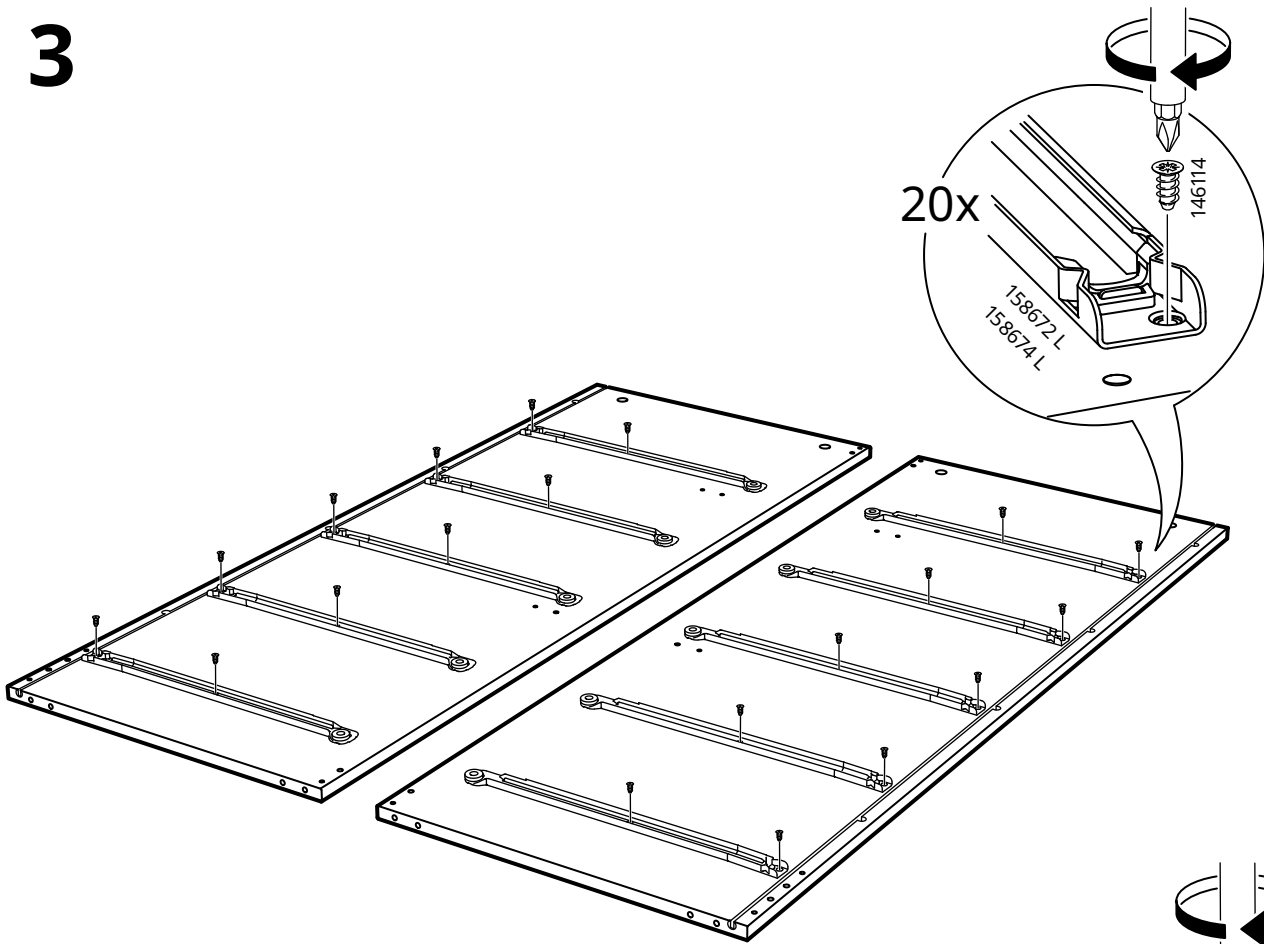 


4

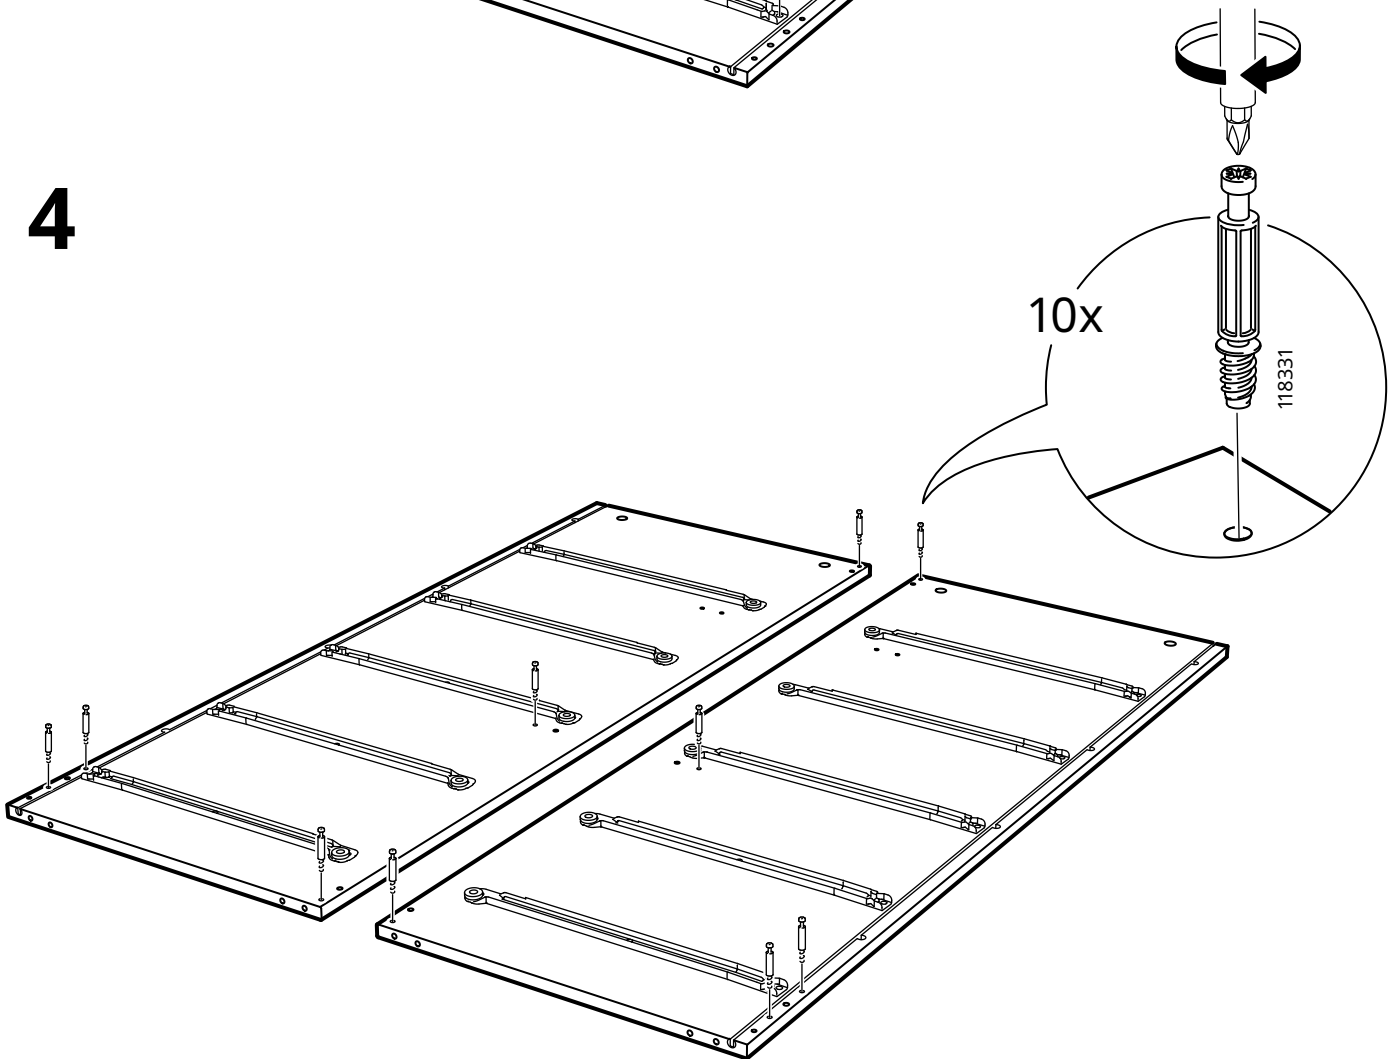 


5

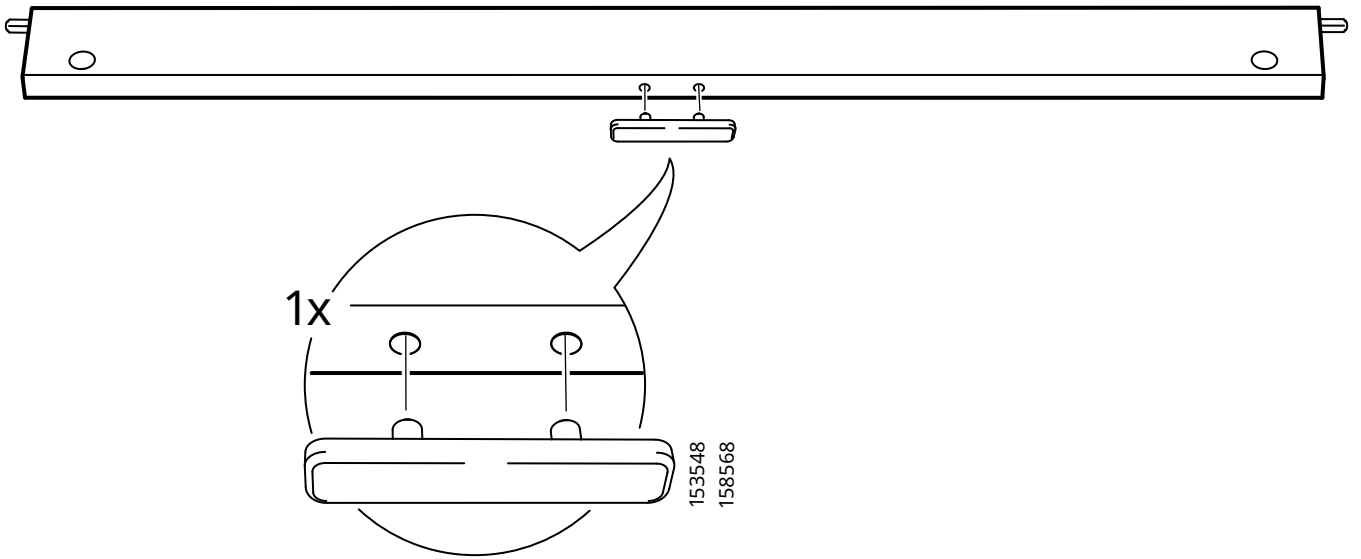 


6

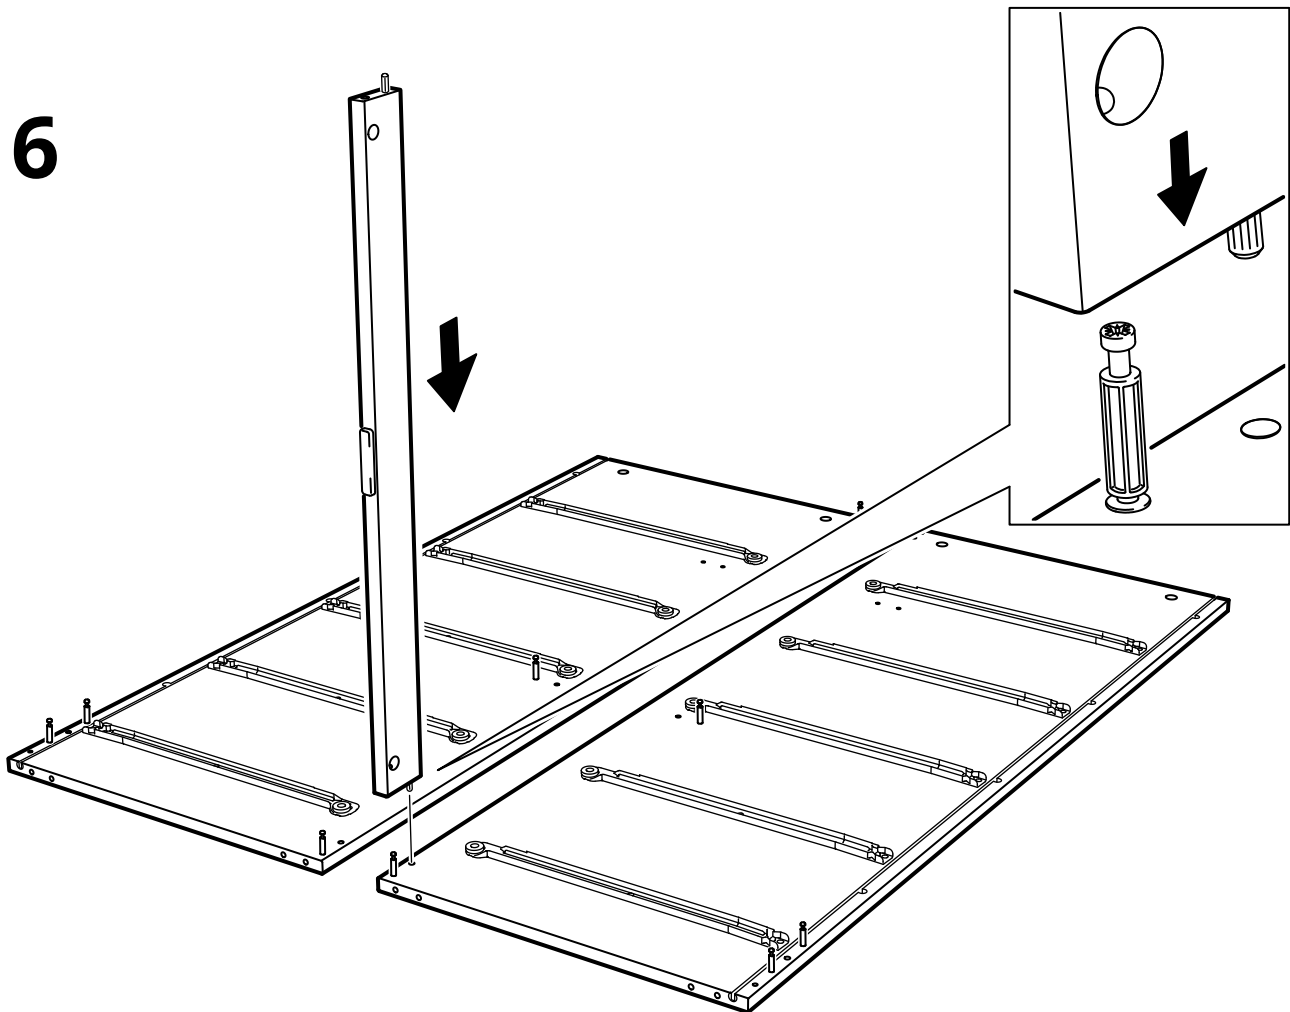 


7

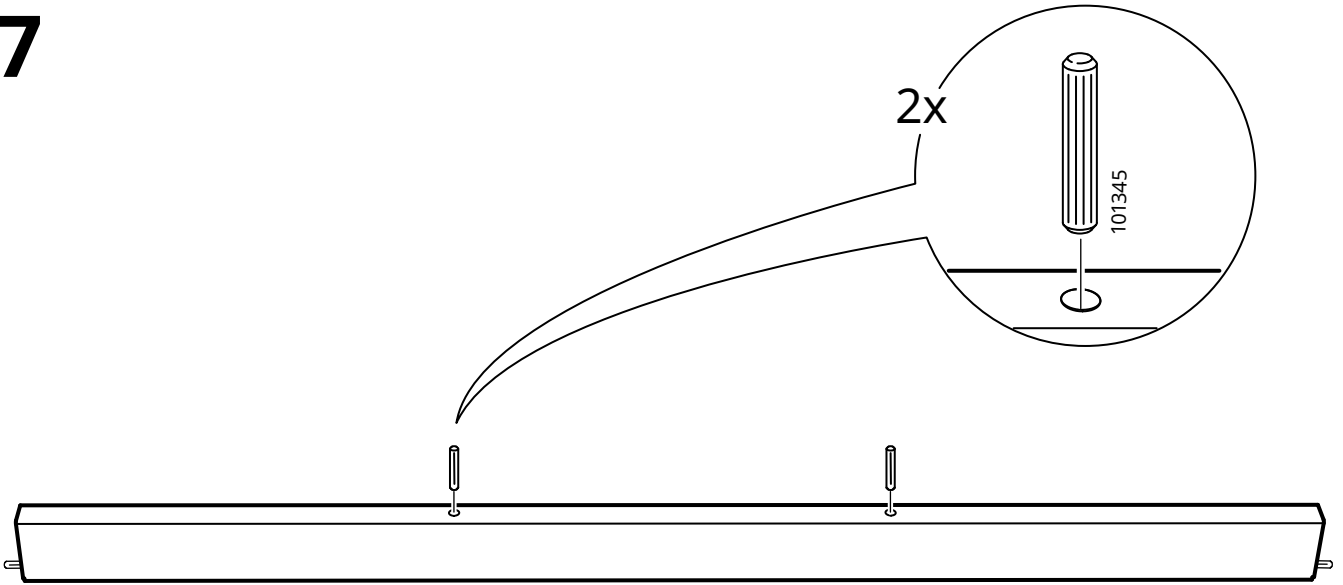 


8

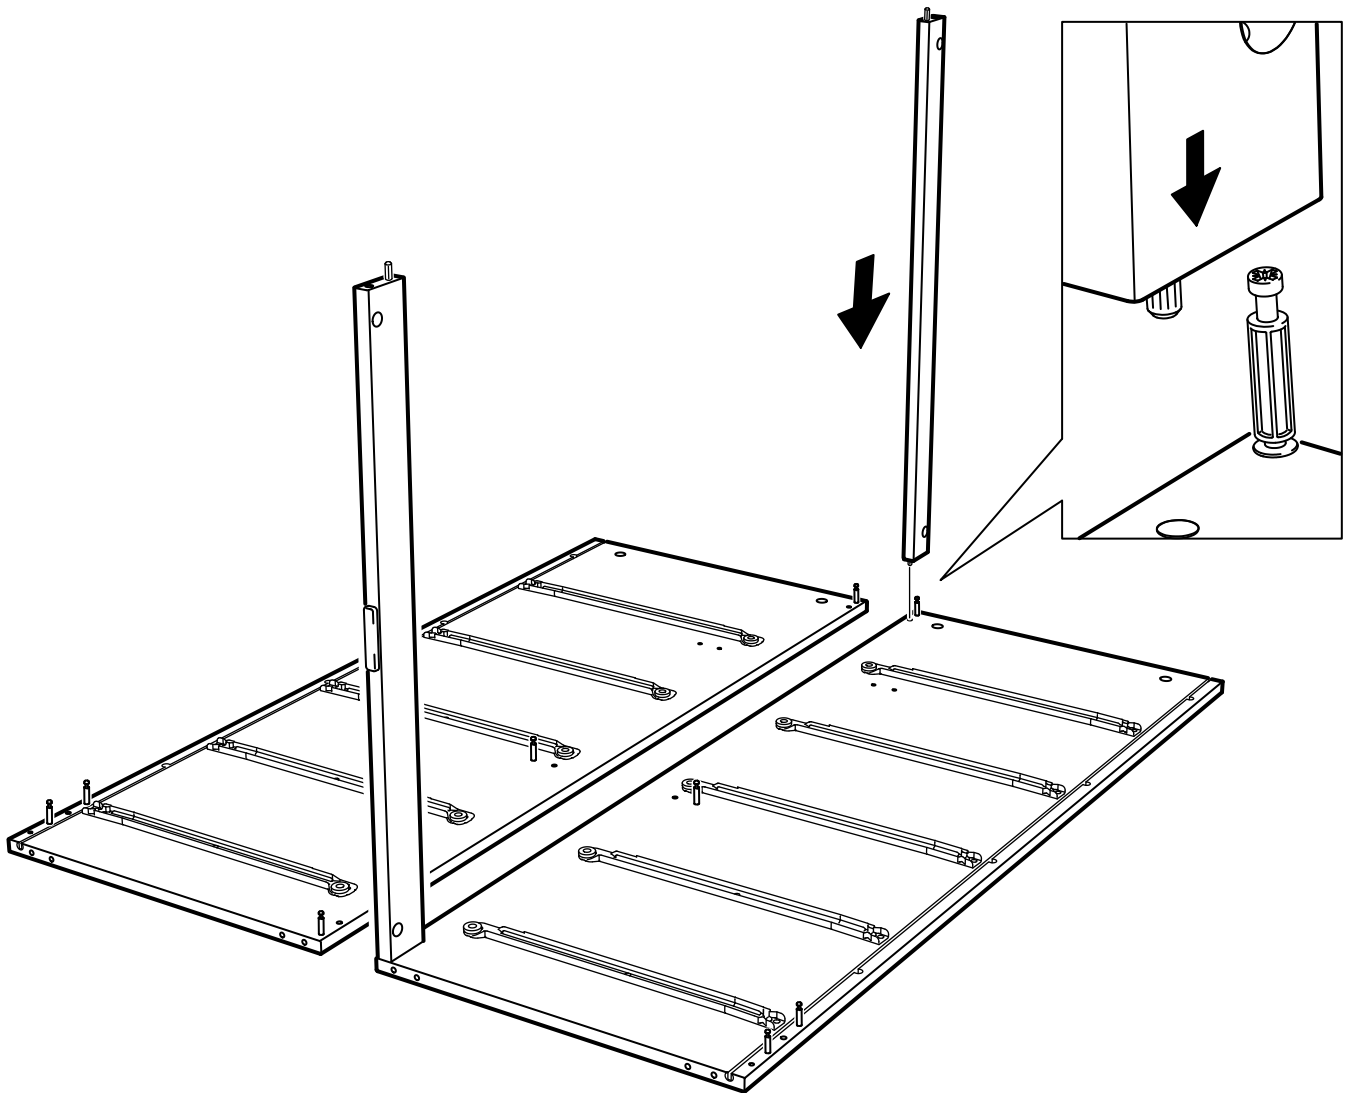 


9

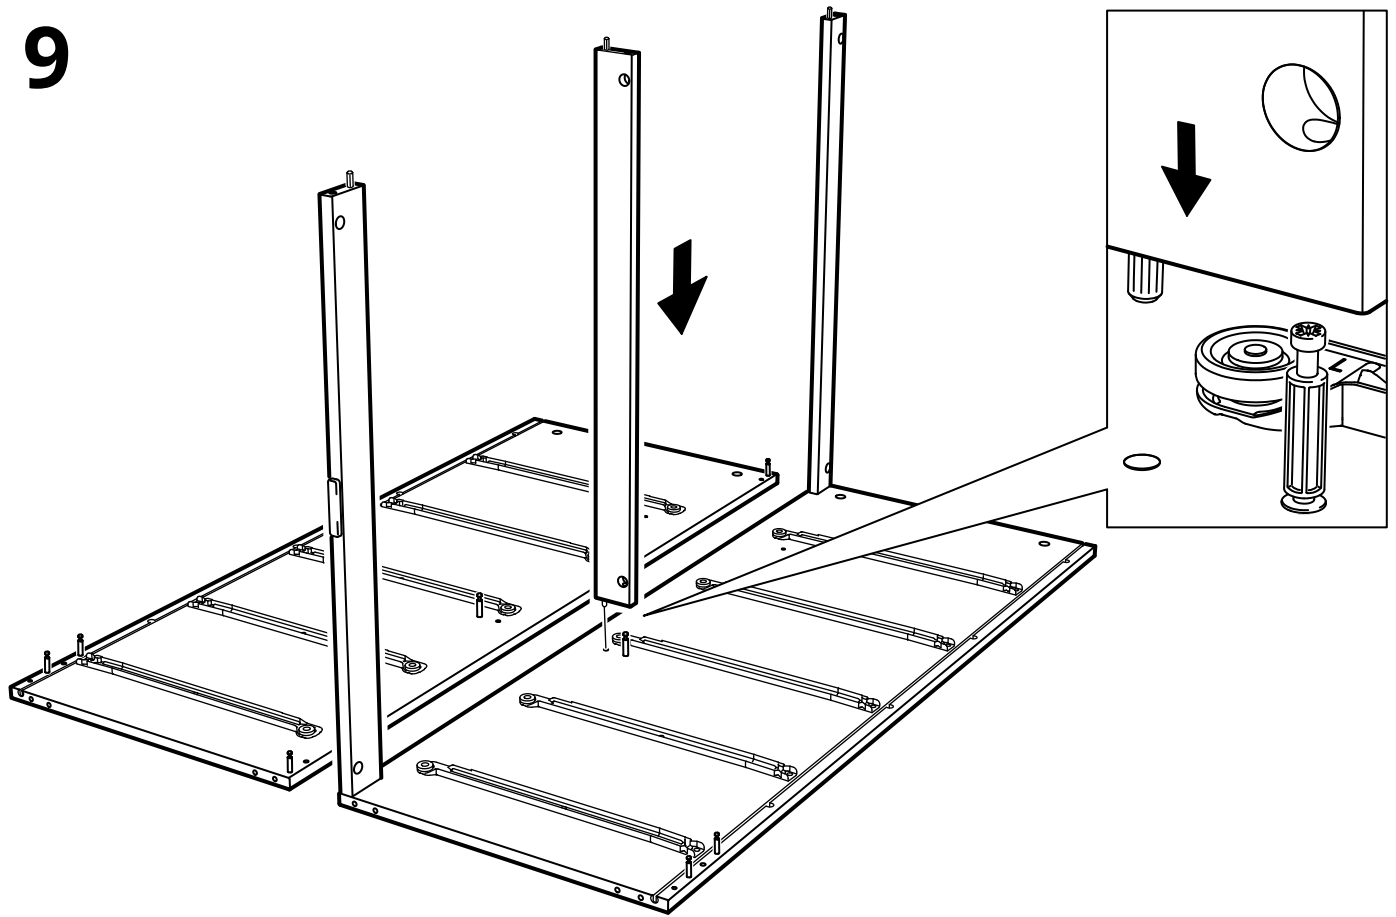 



10

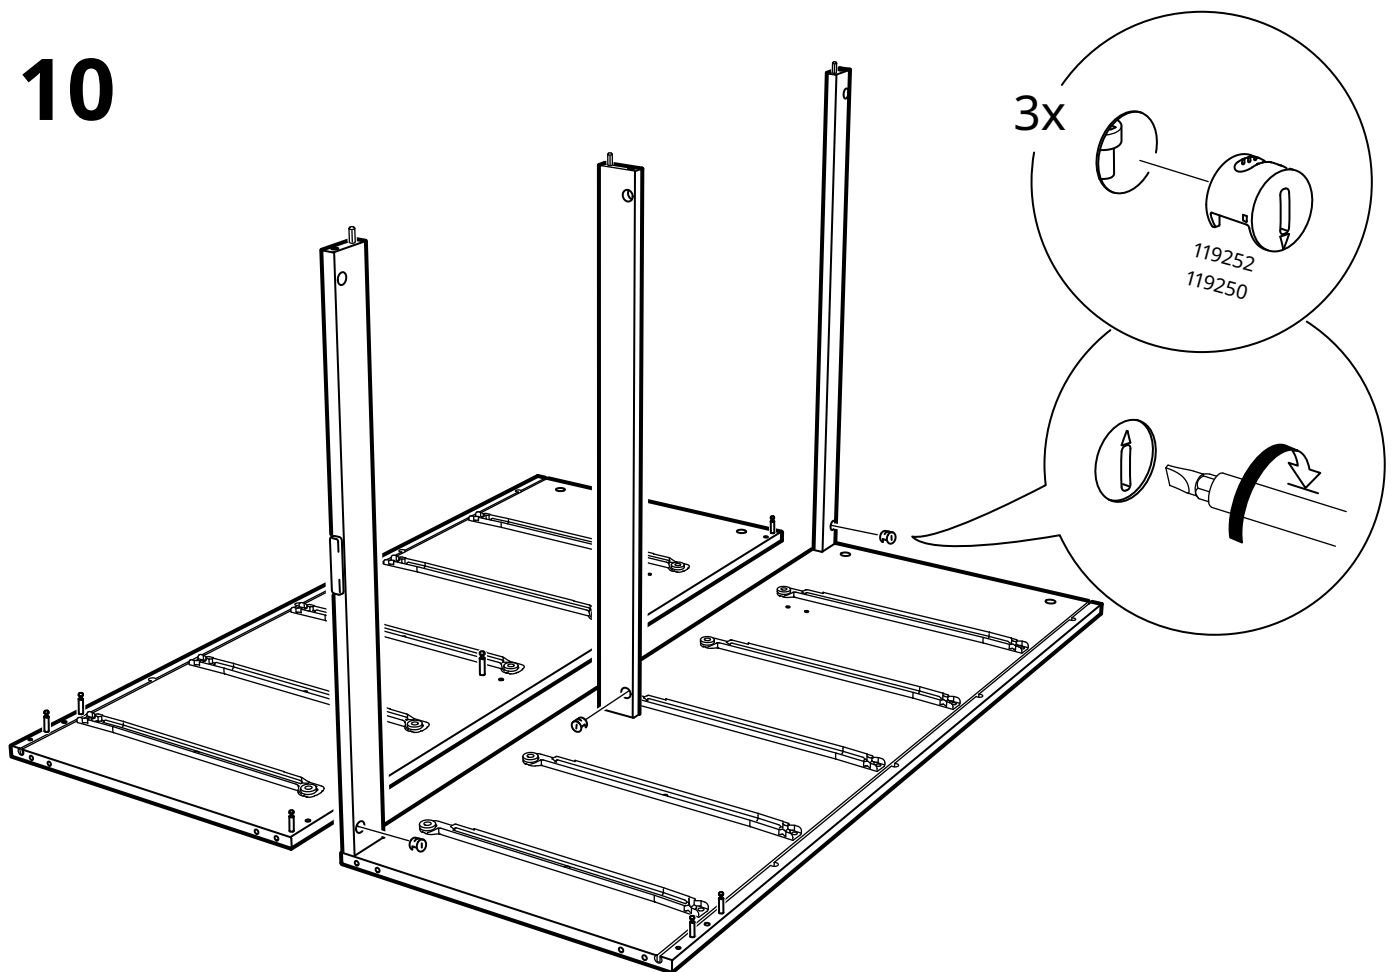 

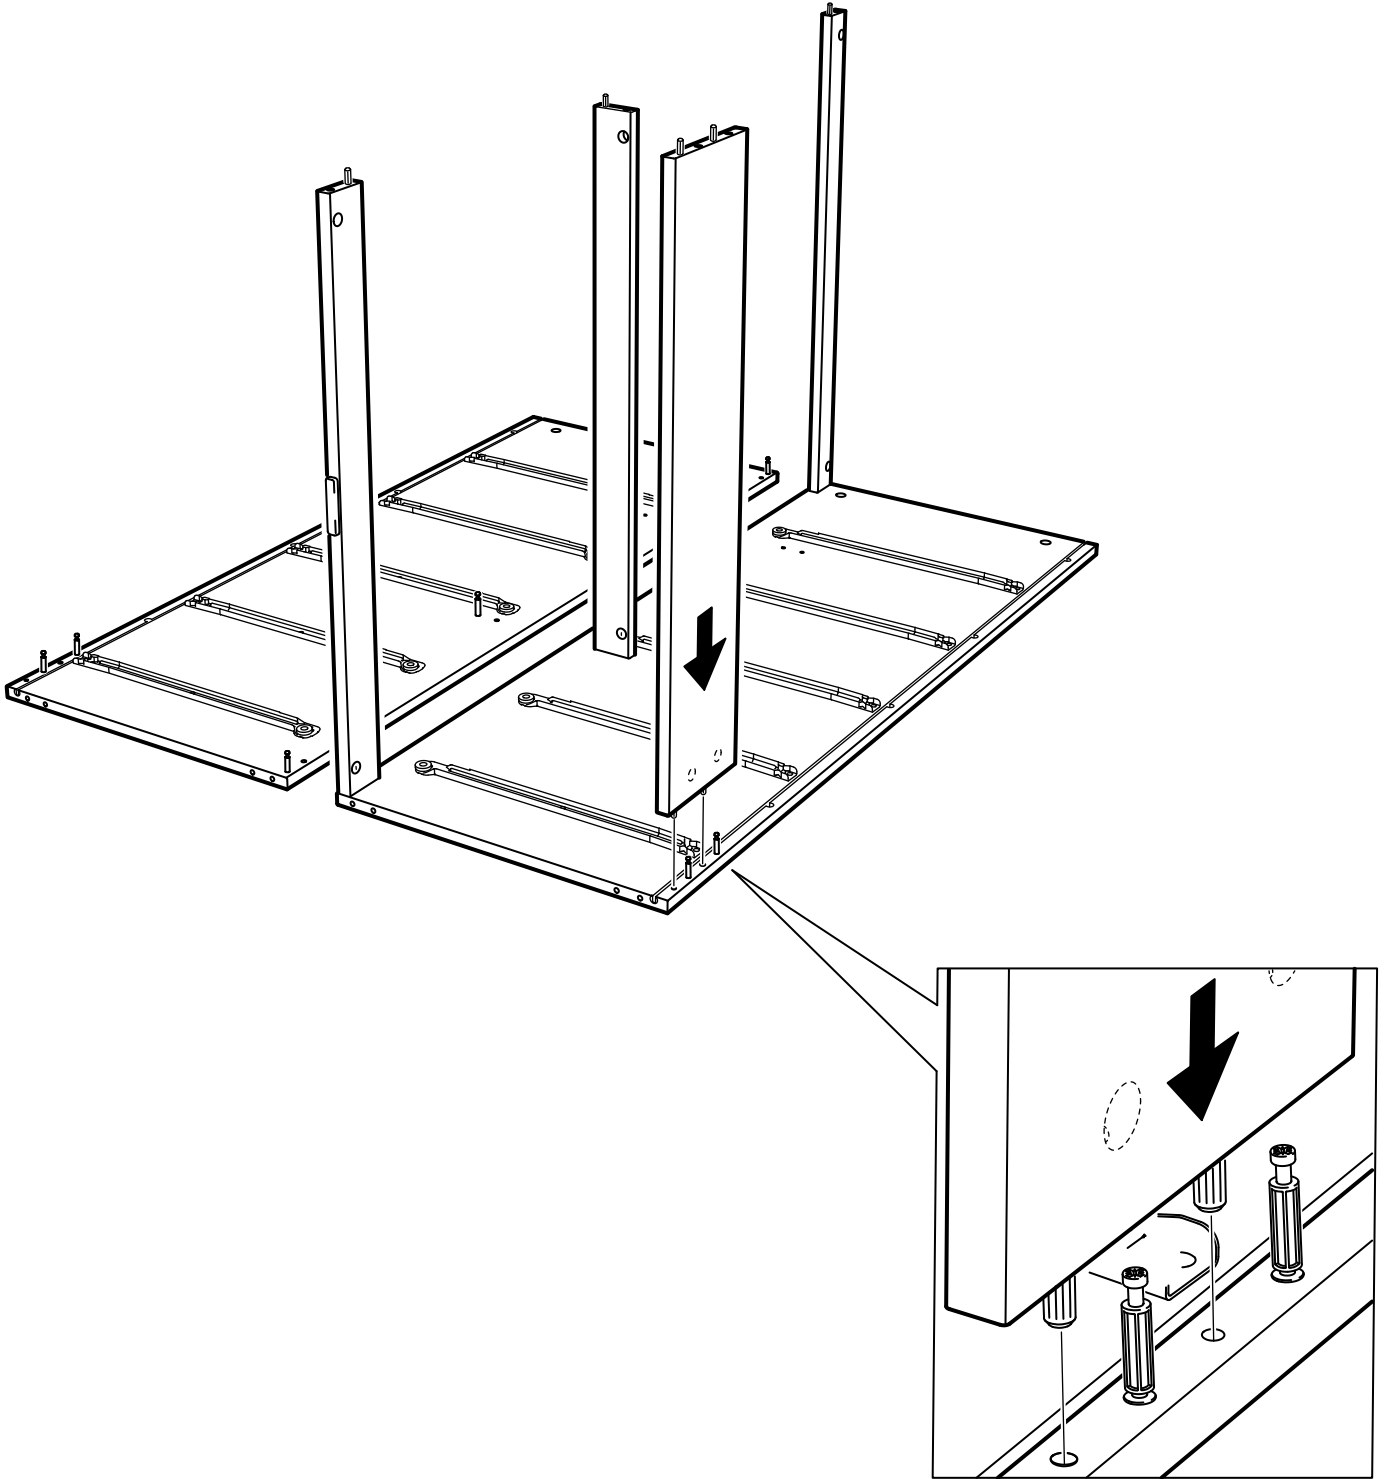 


12


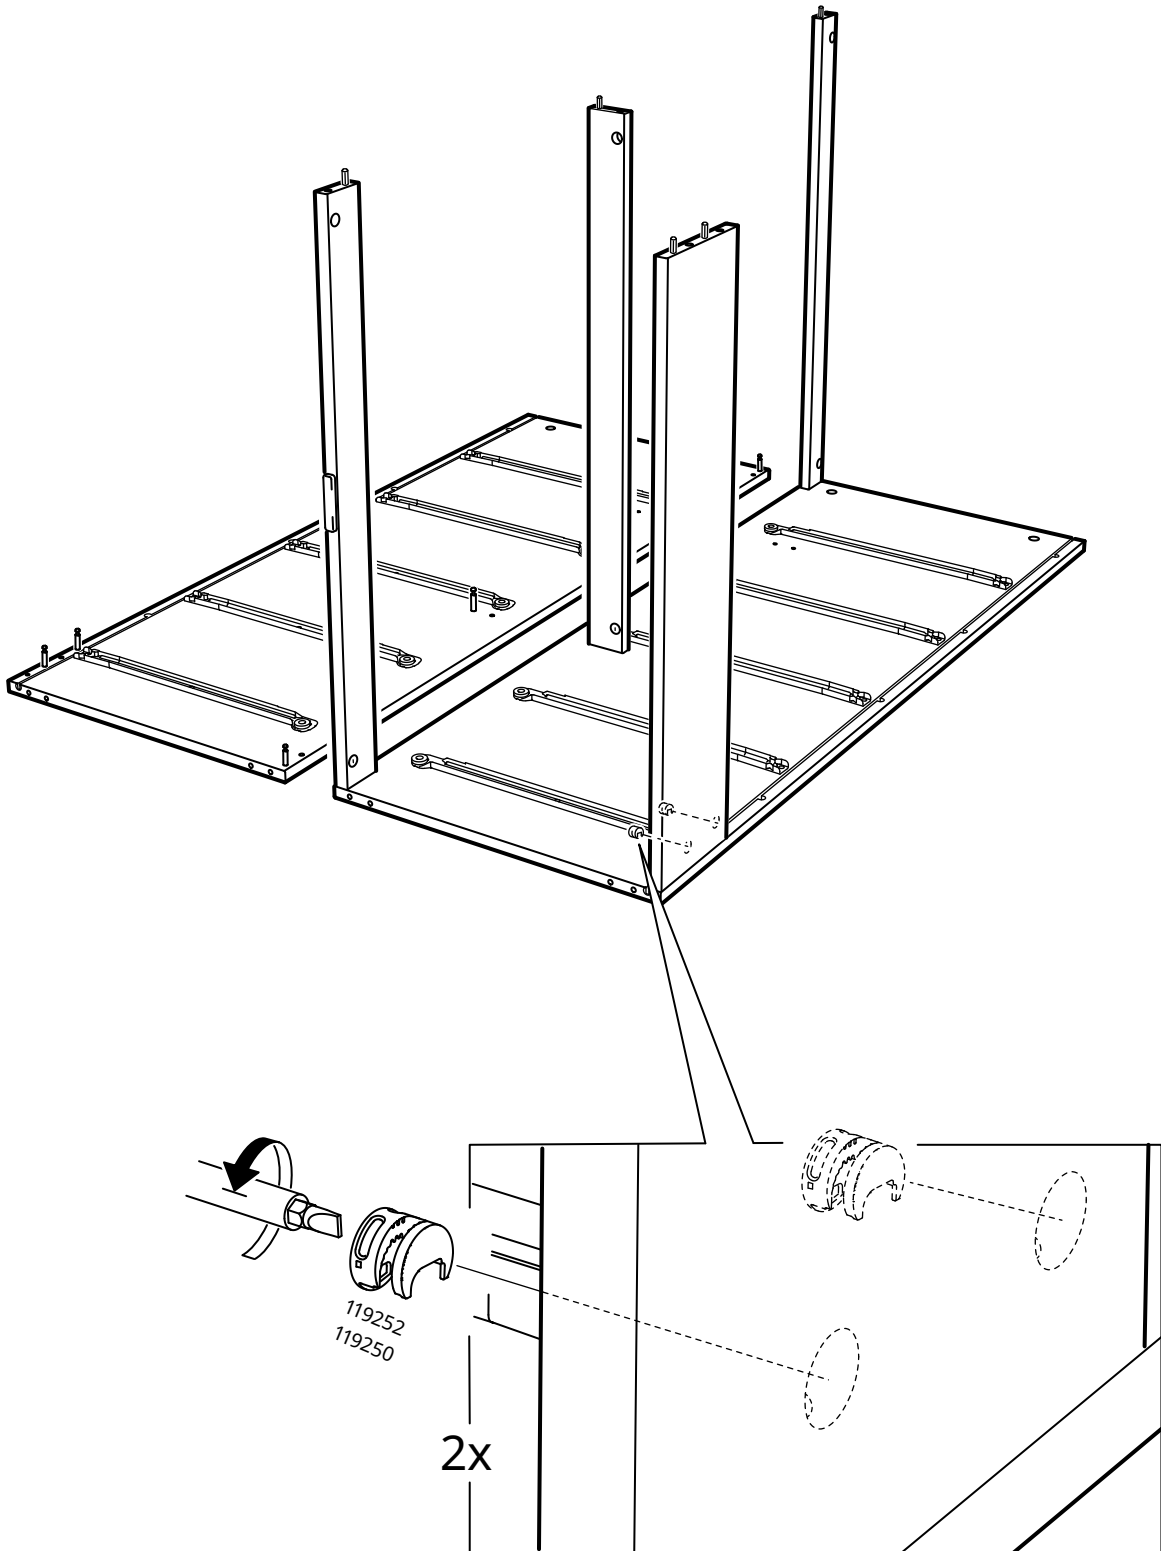 


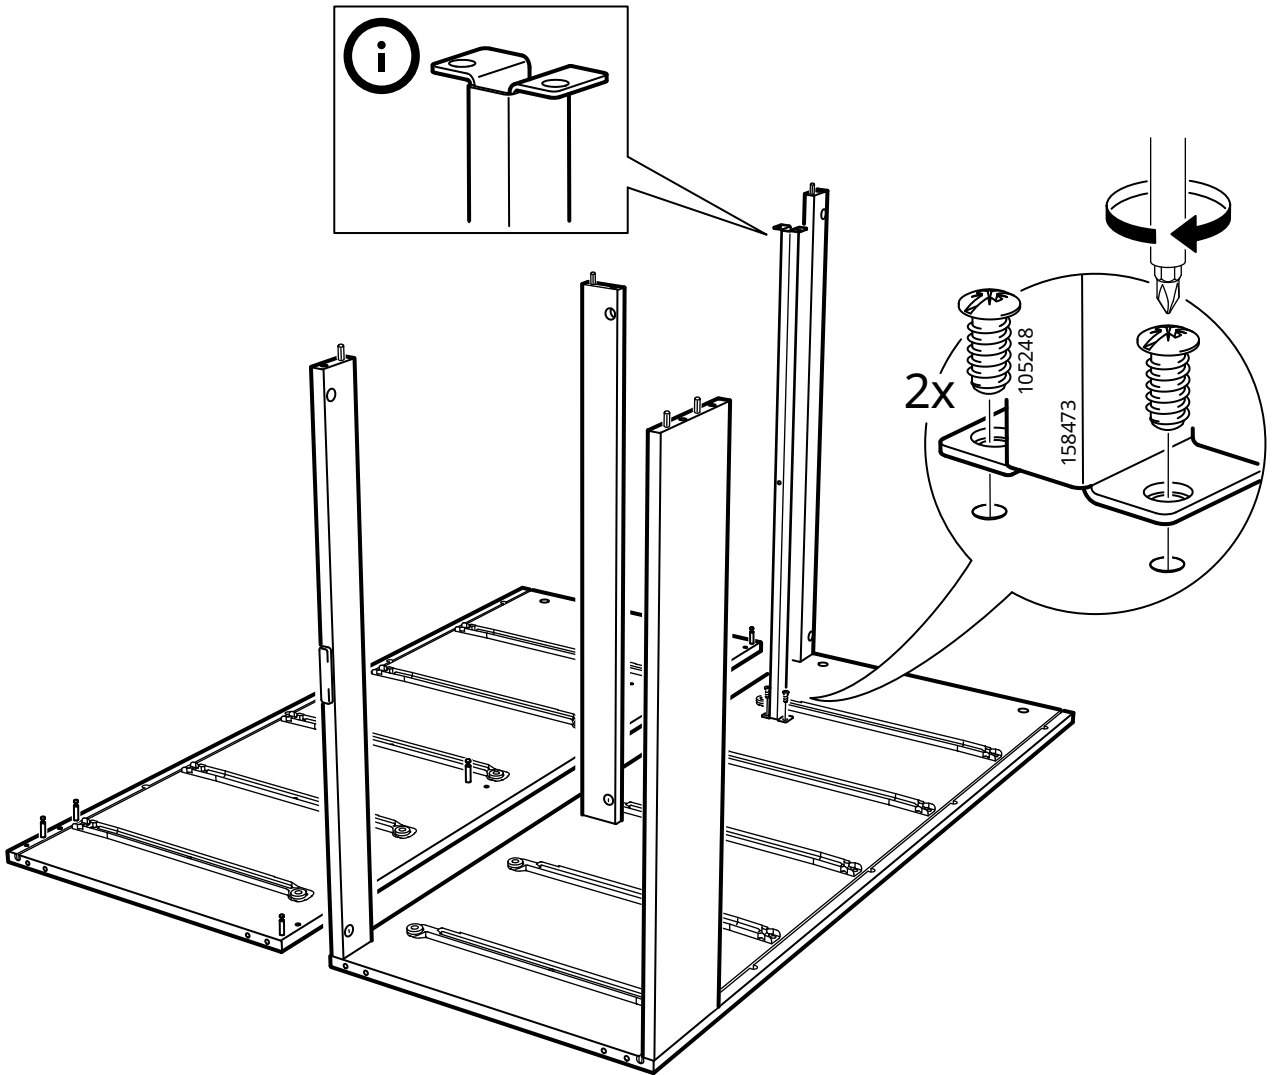 


14

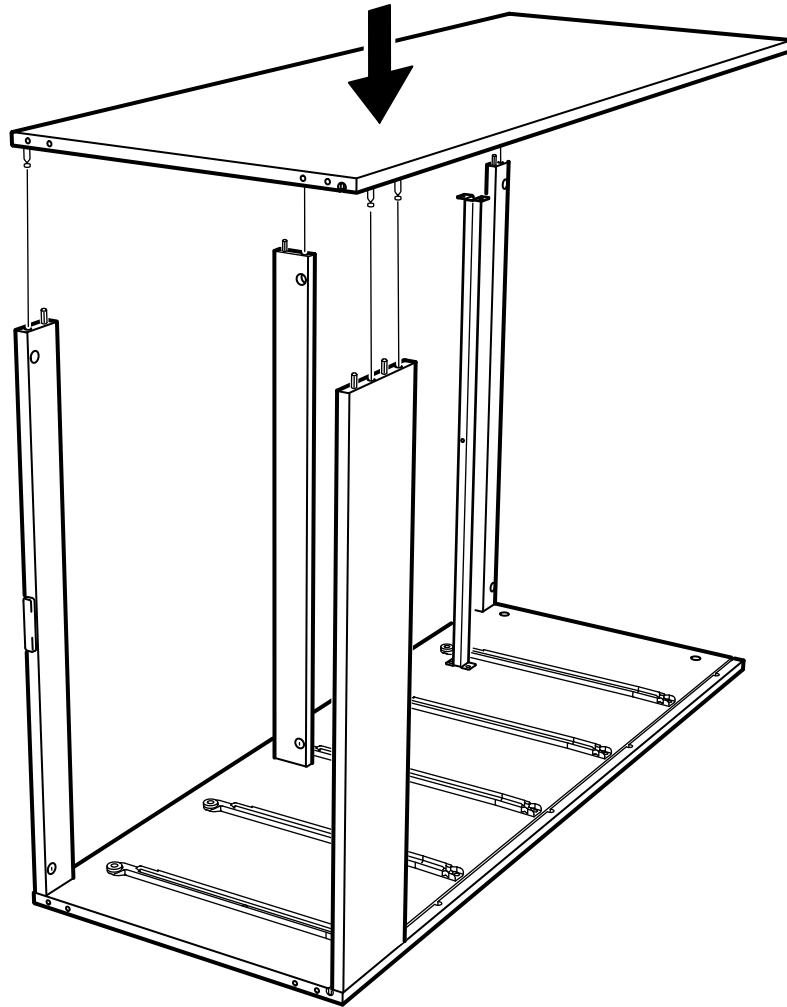 


15

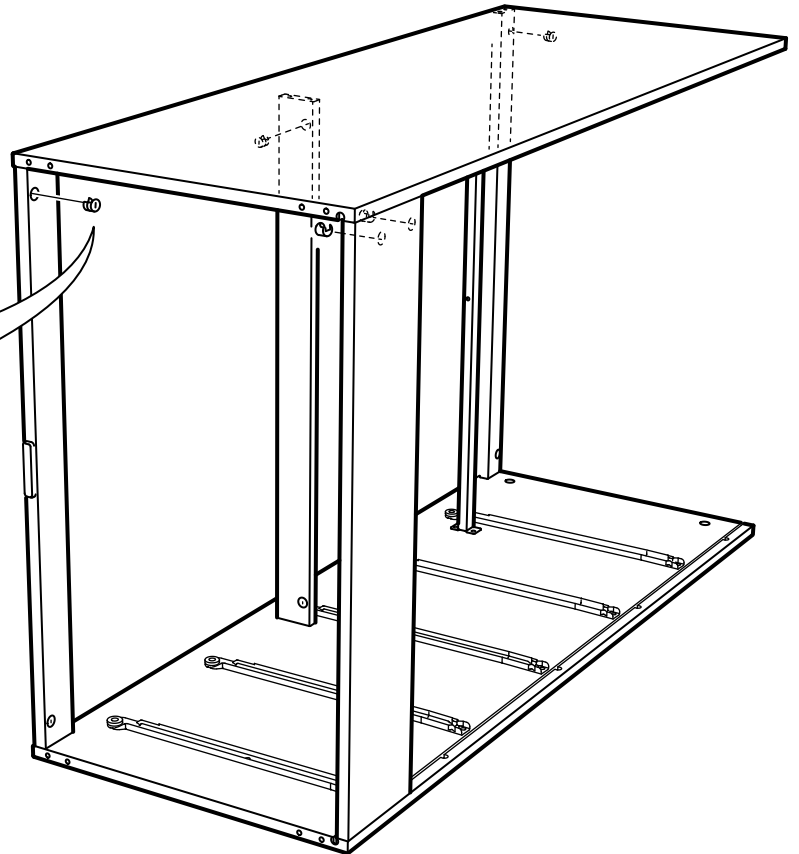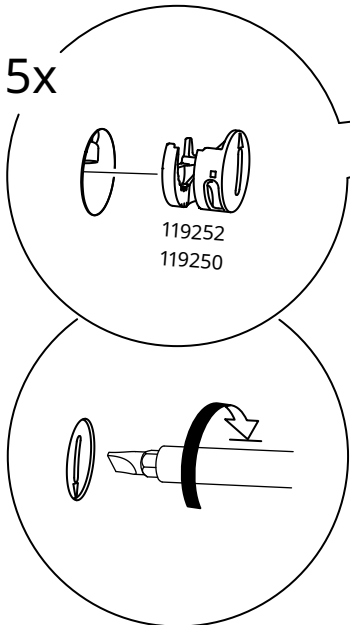  


16

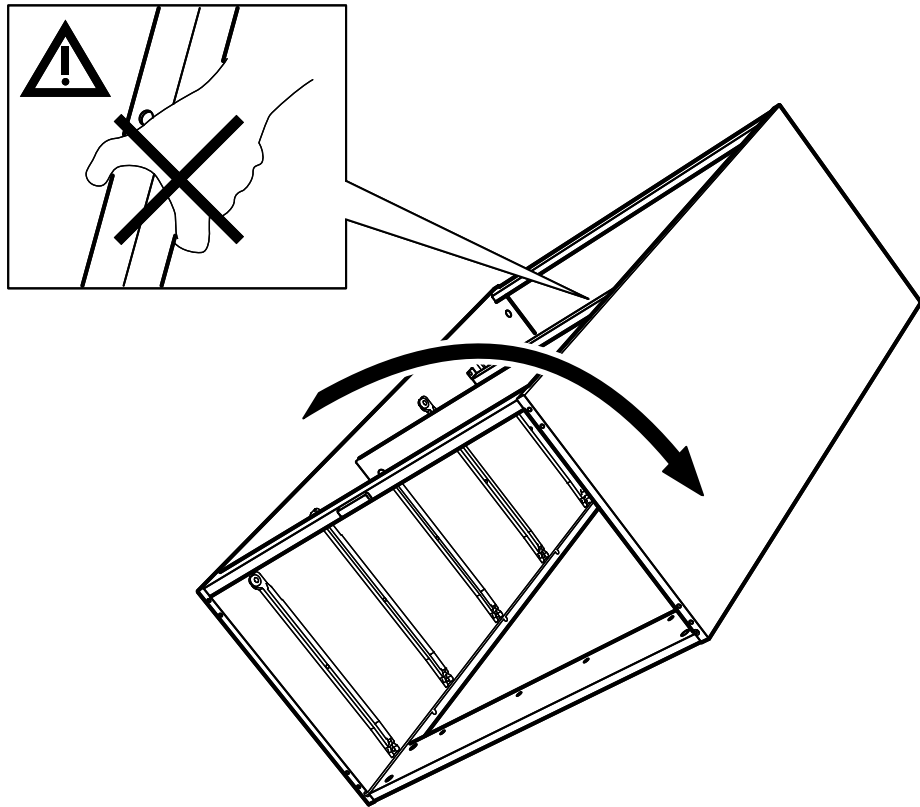 


17

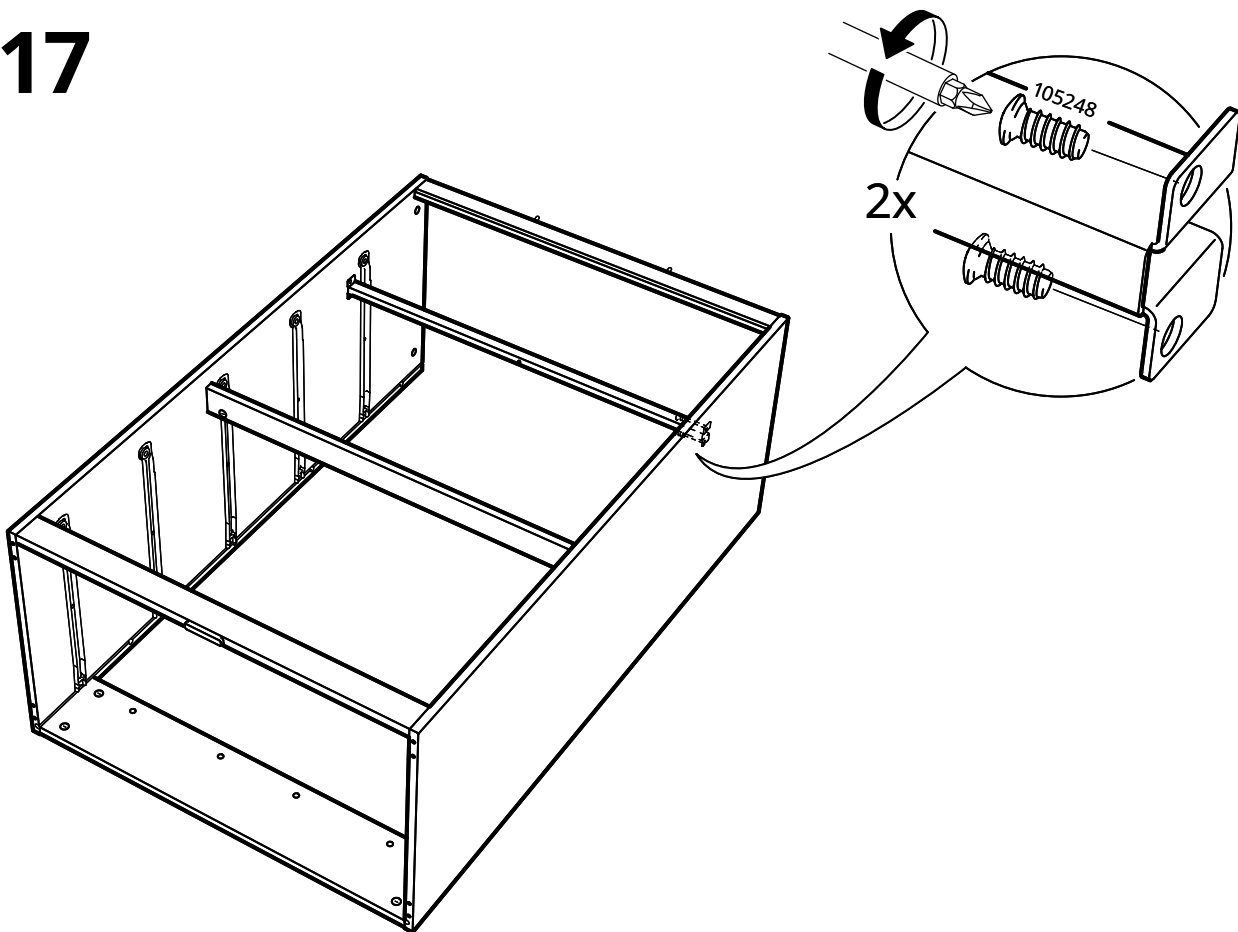 


18

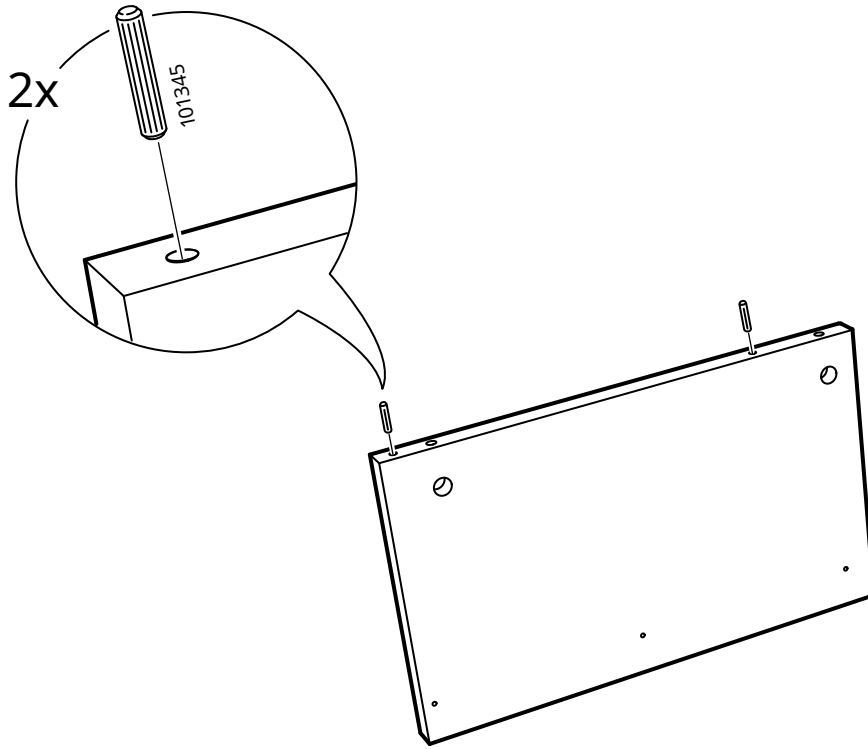 


19

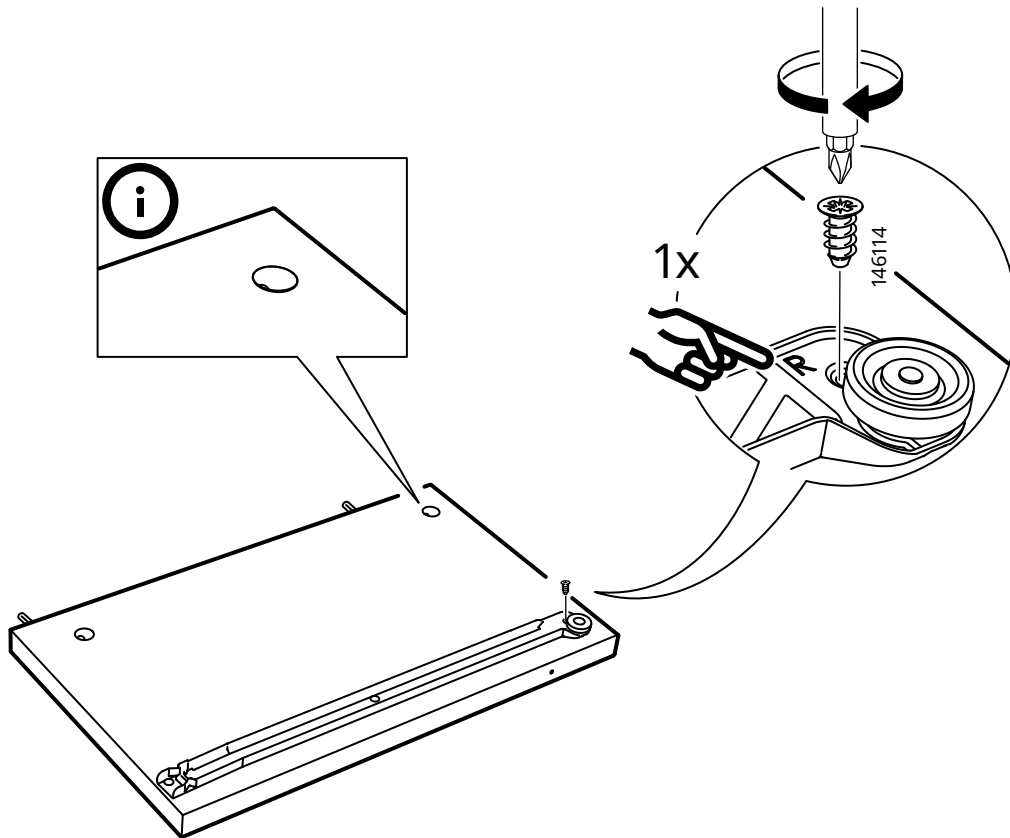 


20

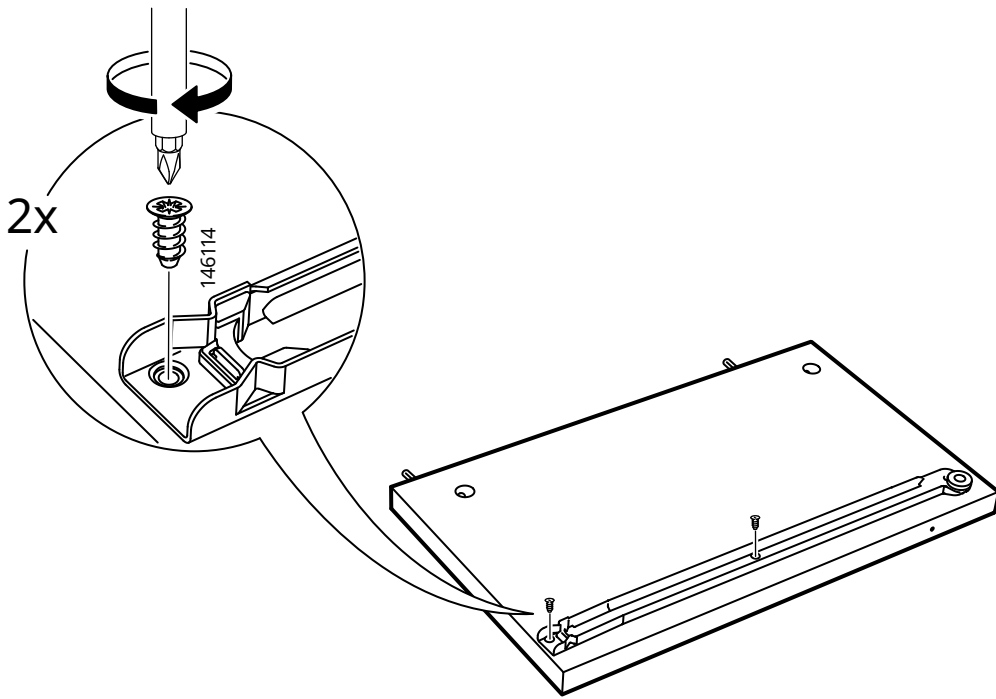 


21

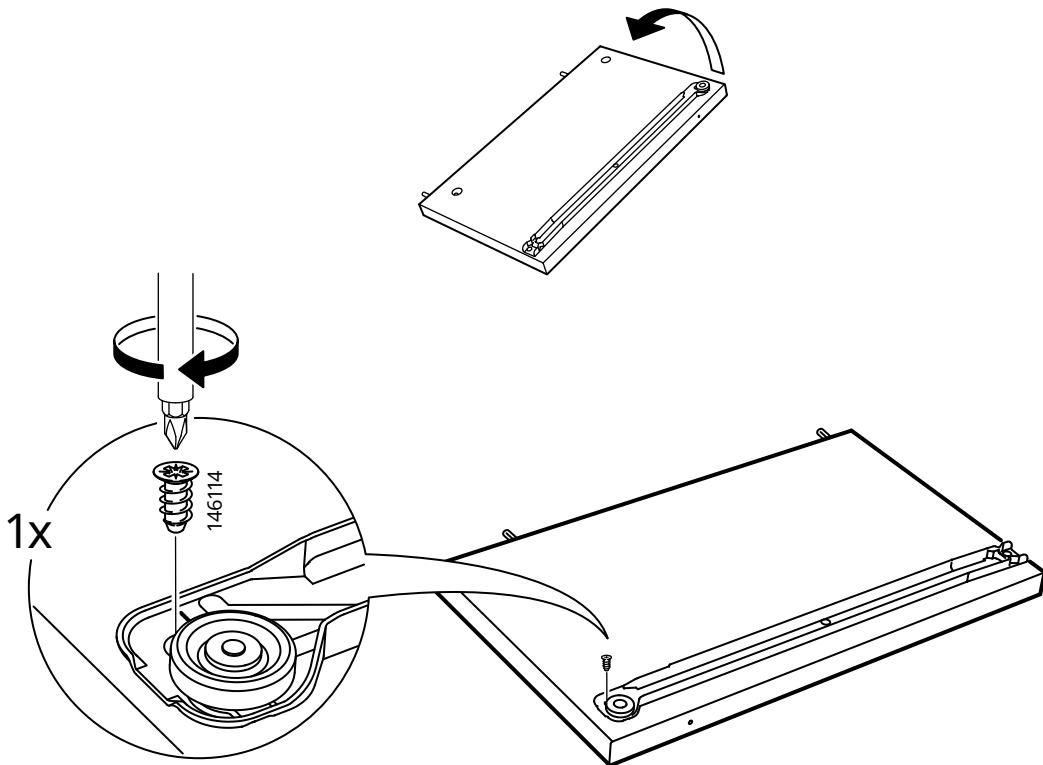 


22

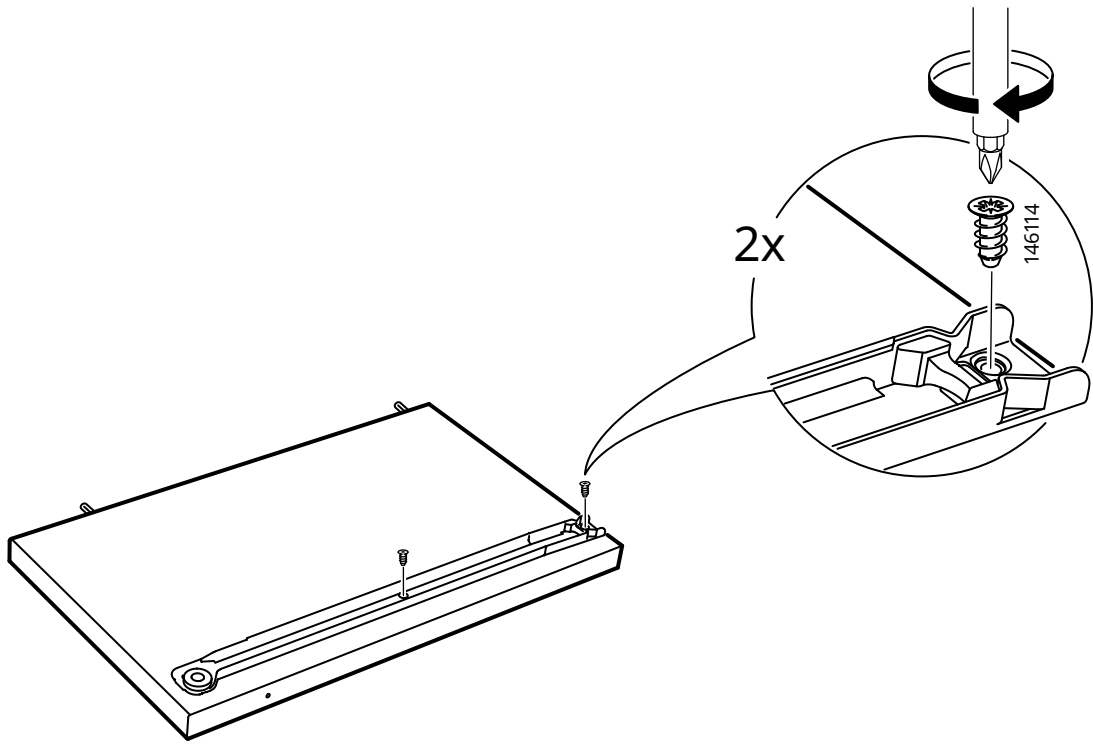 


23

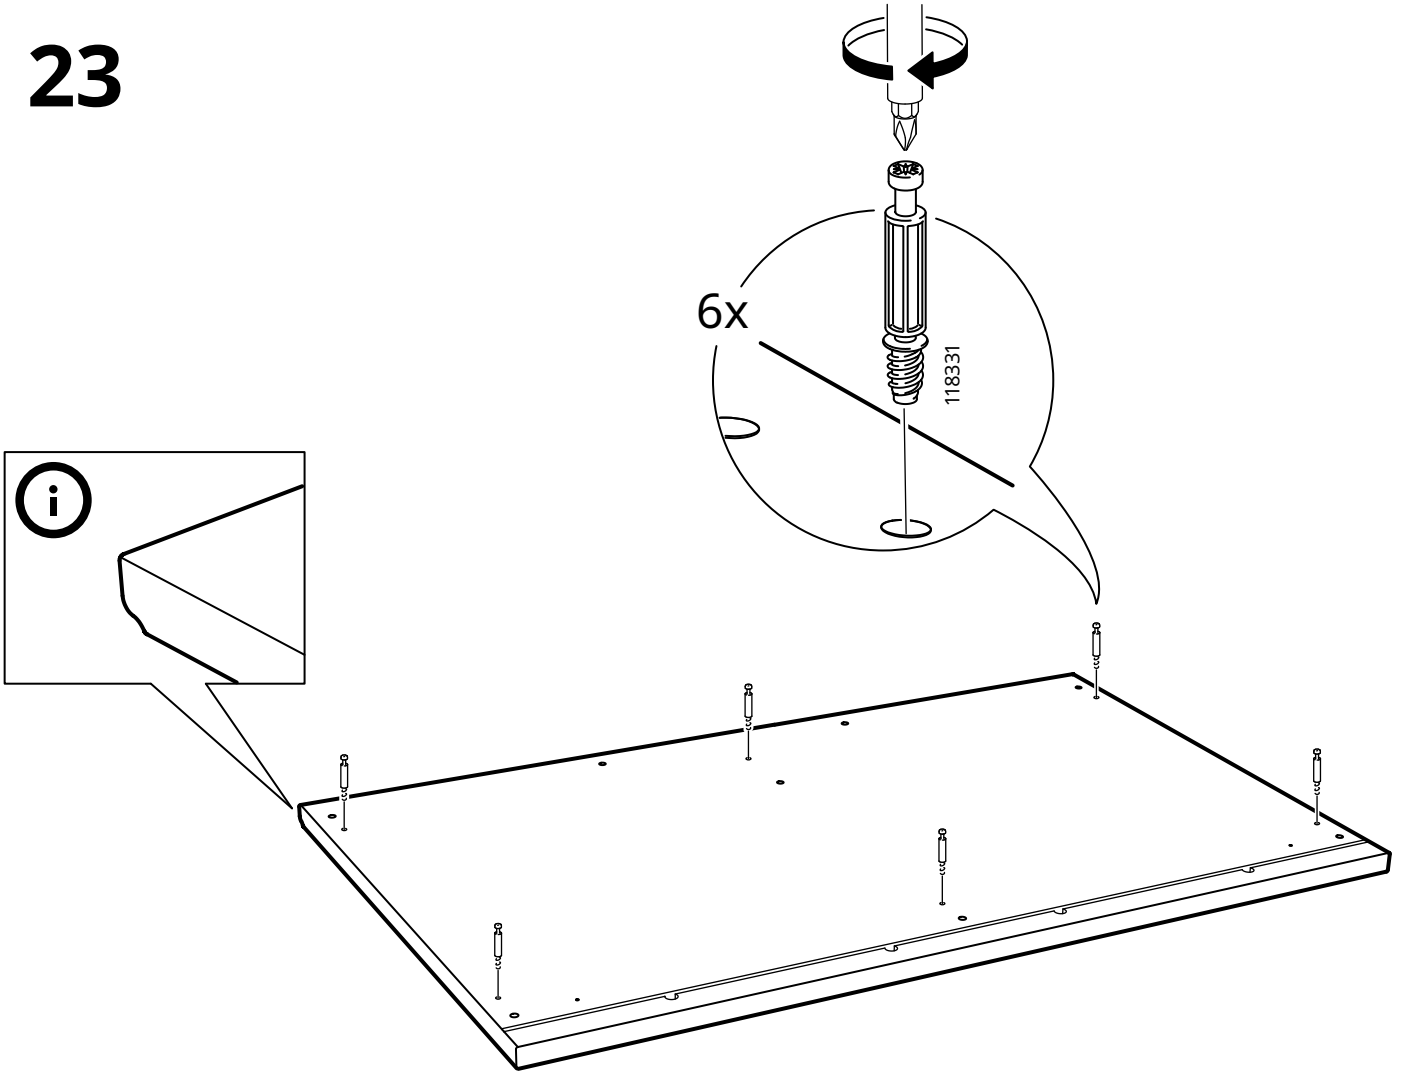 


24

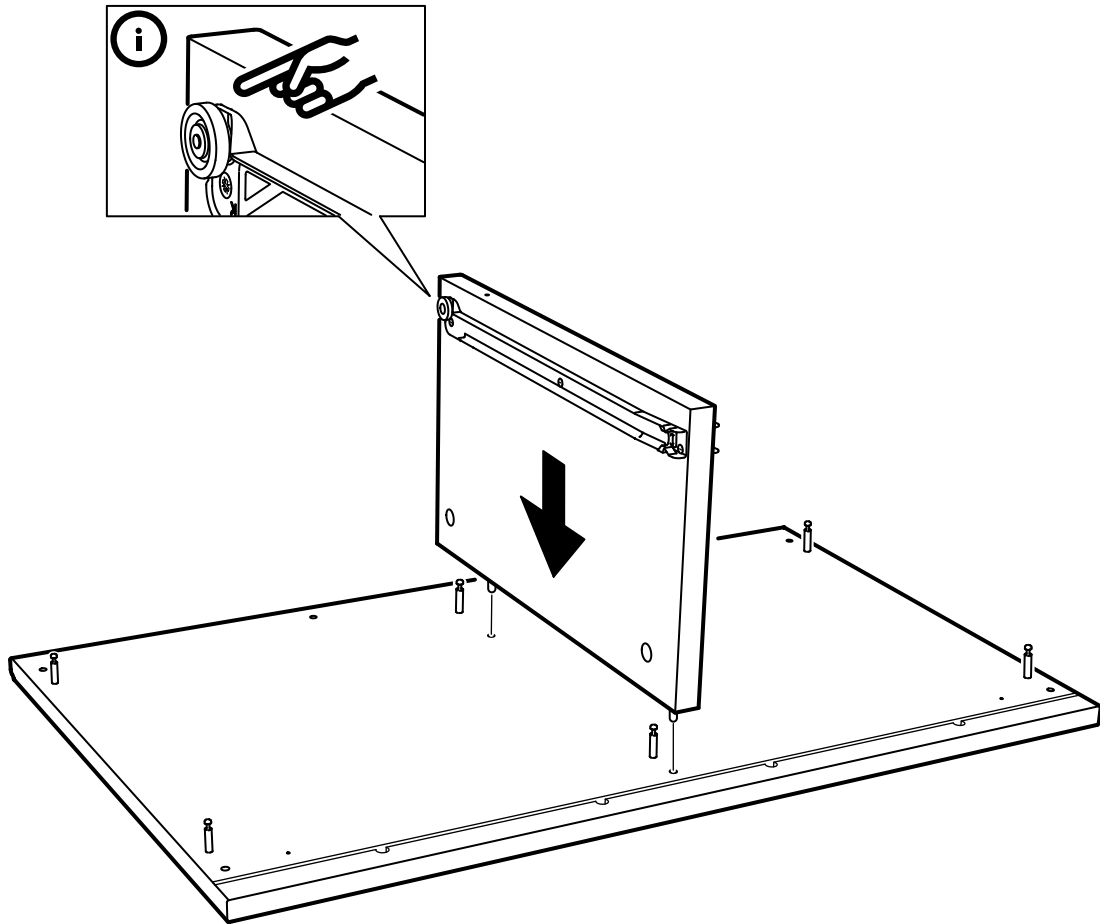 


25

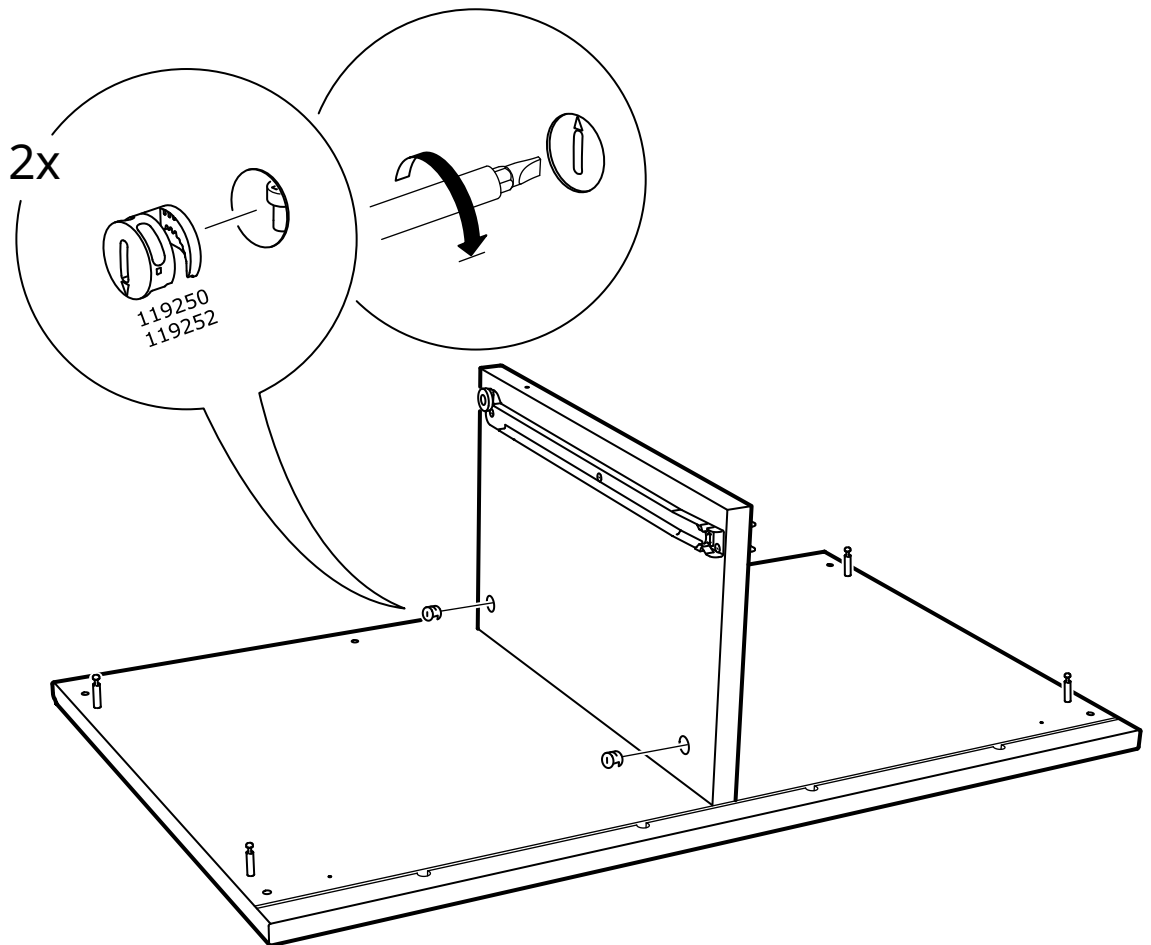 


26

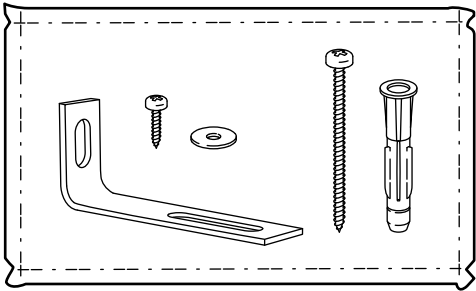 

326949

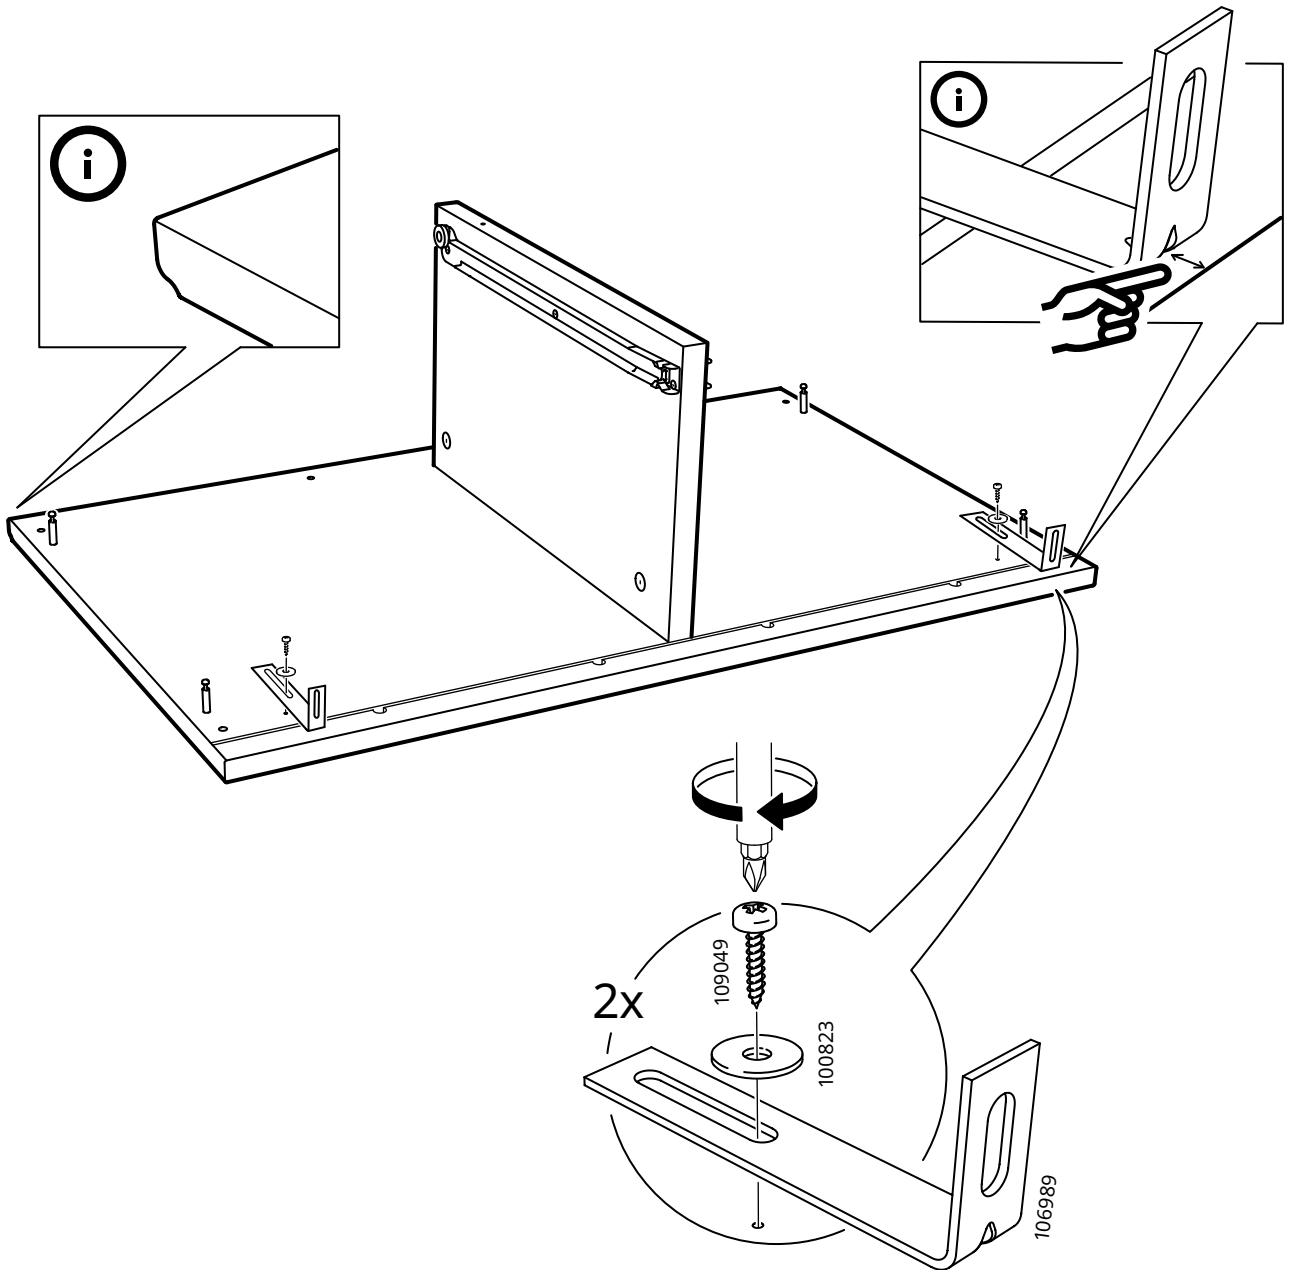 


27

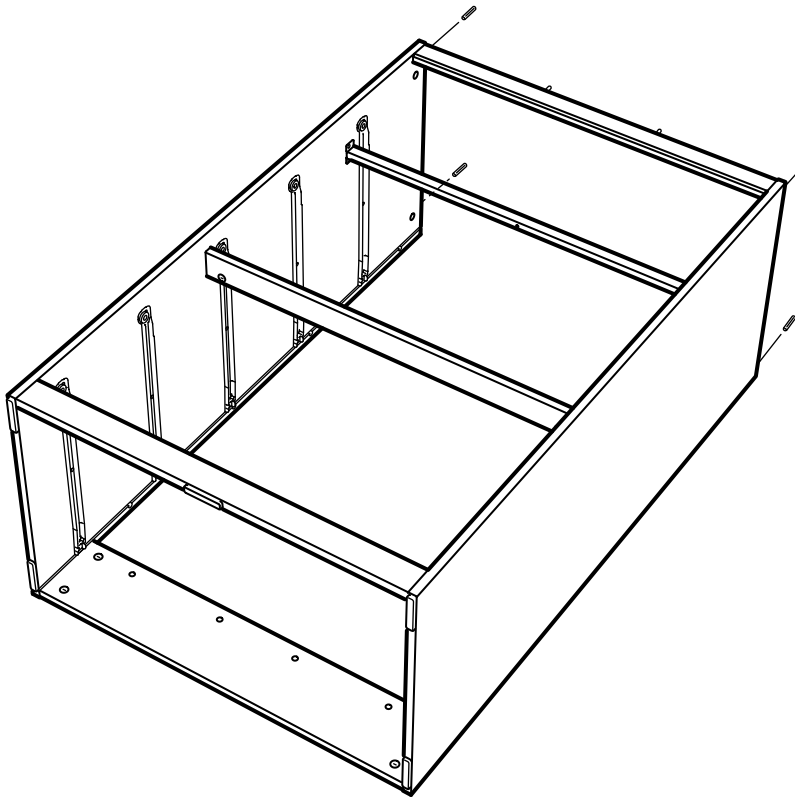 


4x



 
28

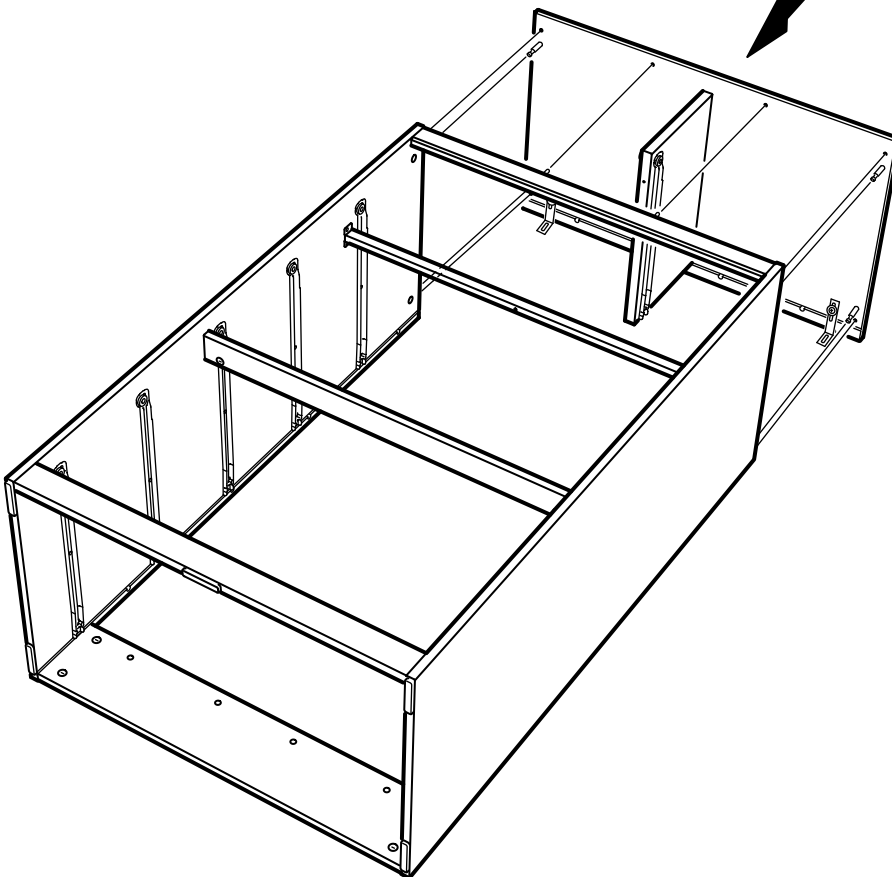

29

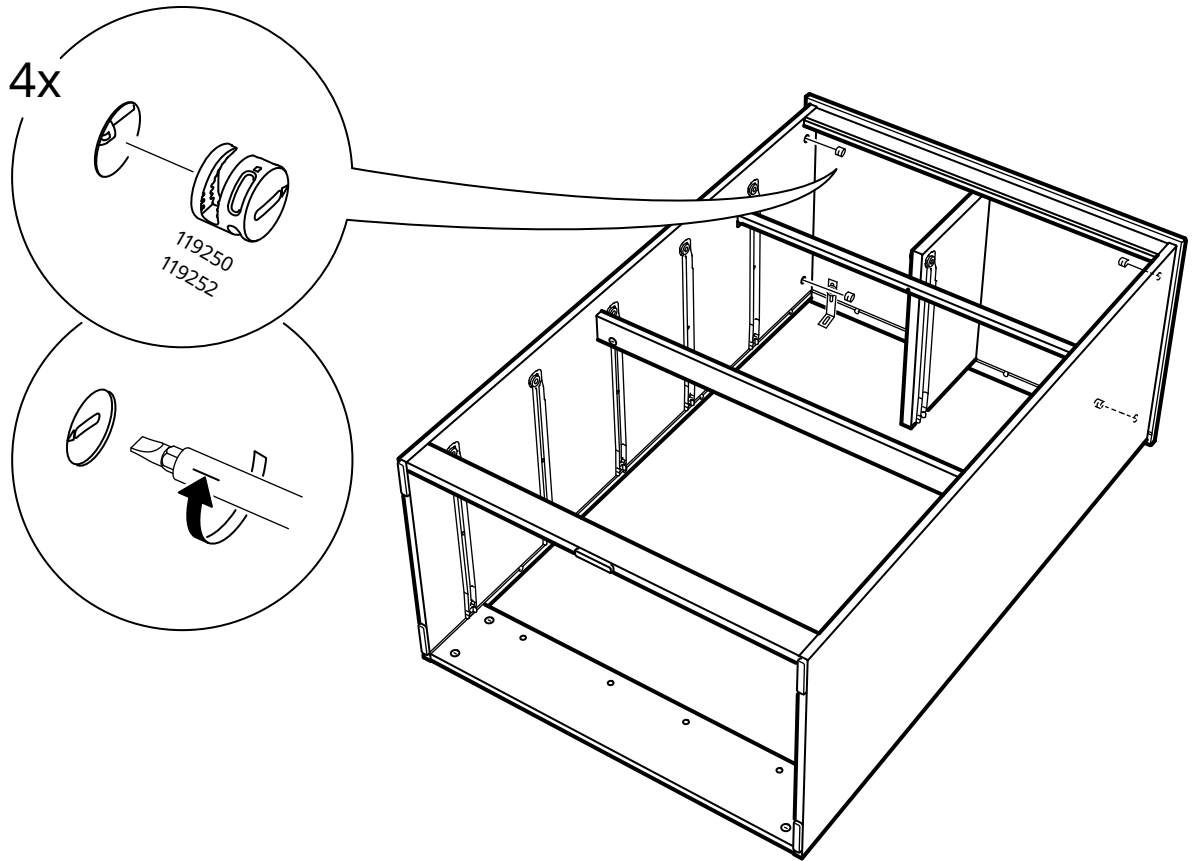 


30

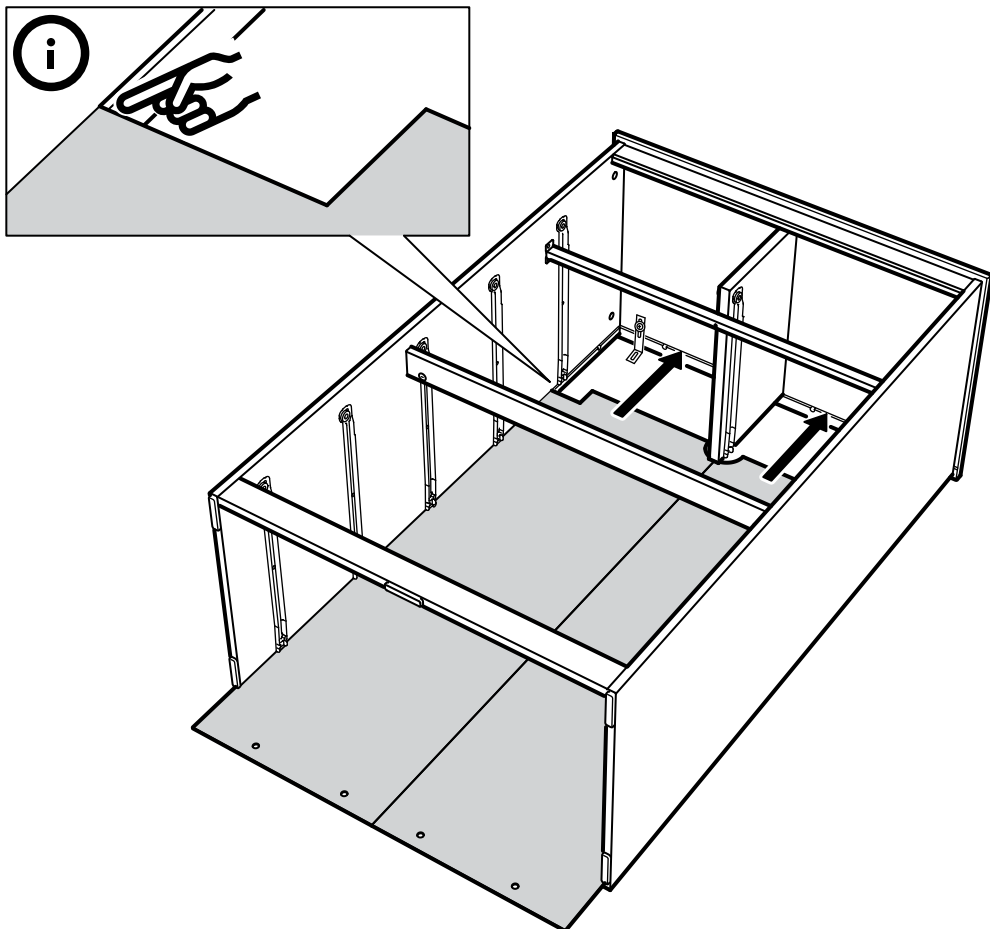 


31

 
4x

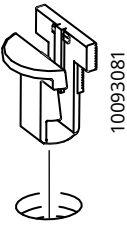

10093081

 


10093082

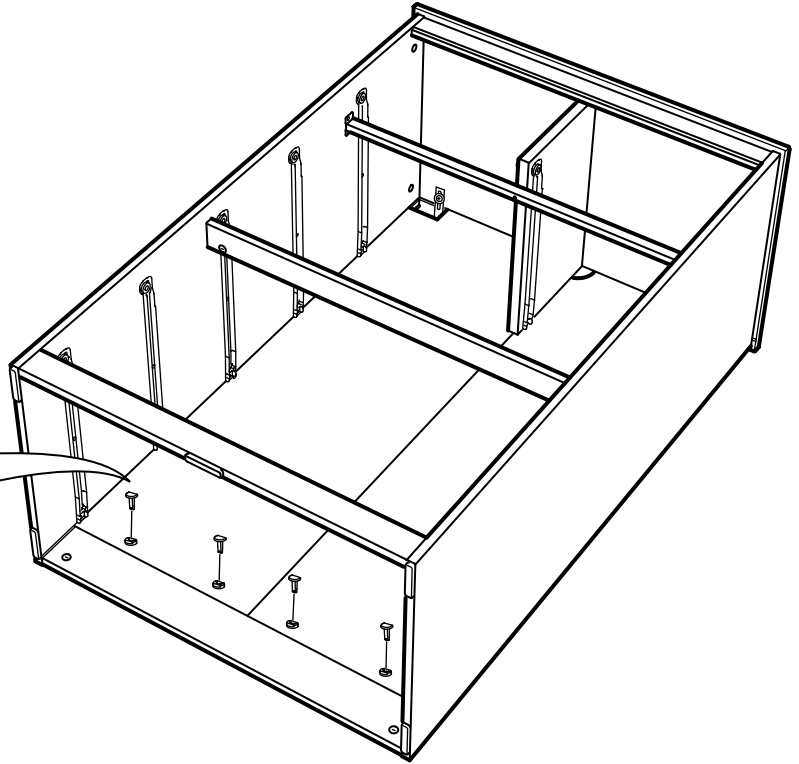 


32

 
4x

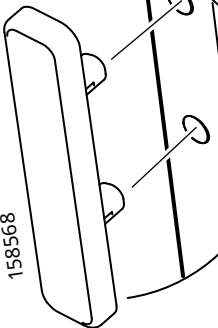


153548
158568

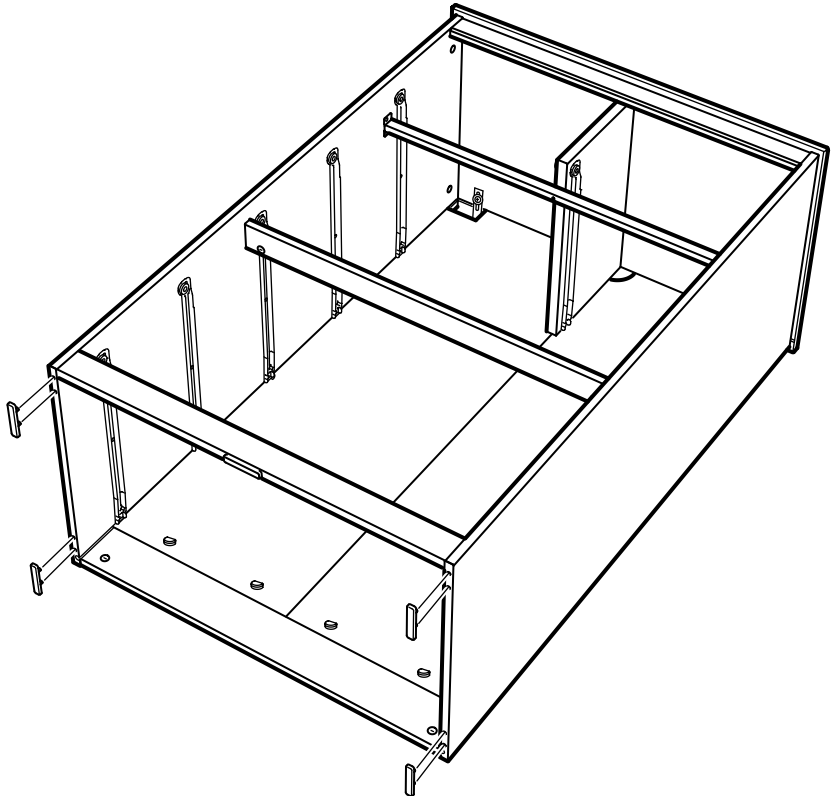 



33

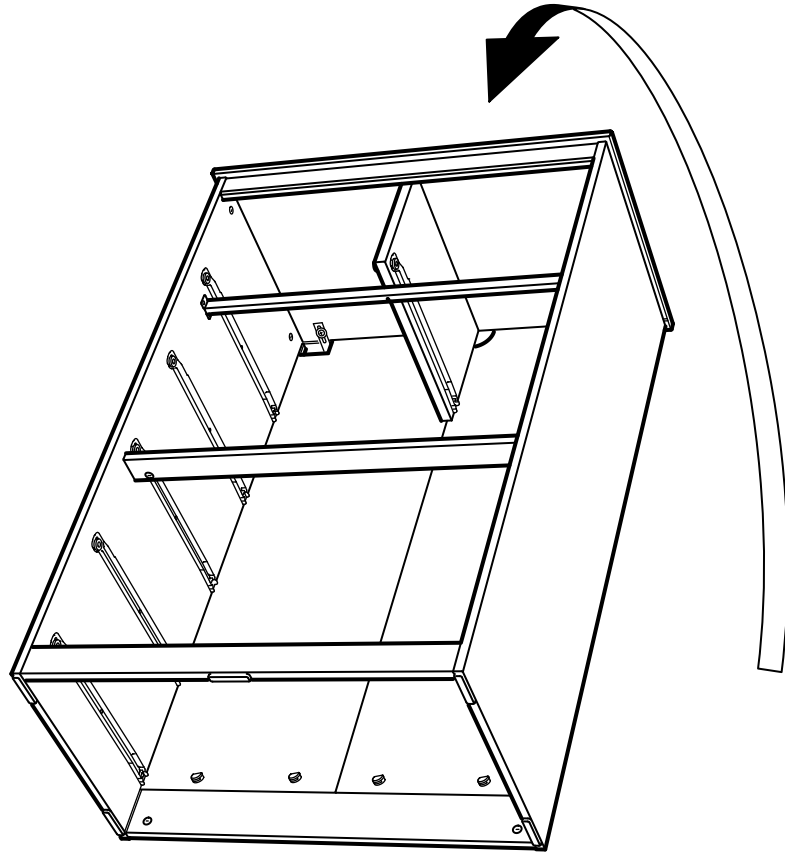 


34

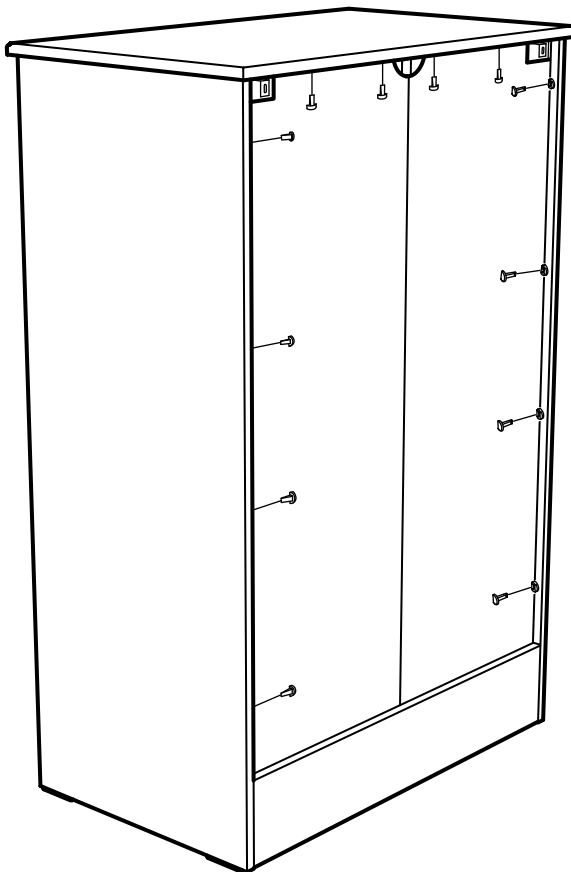 


12x

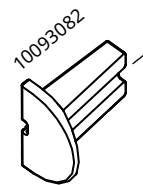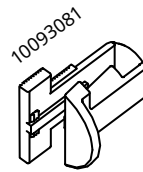  


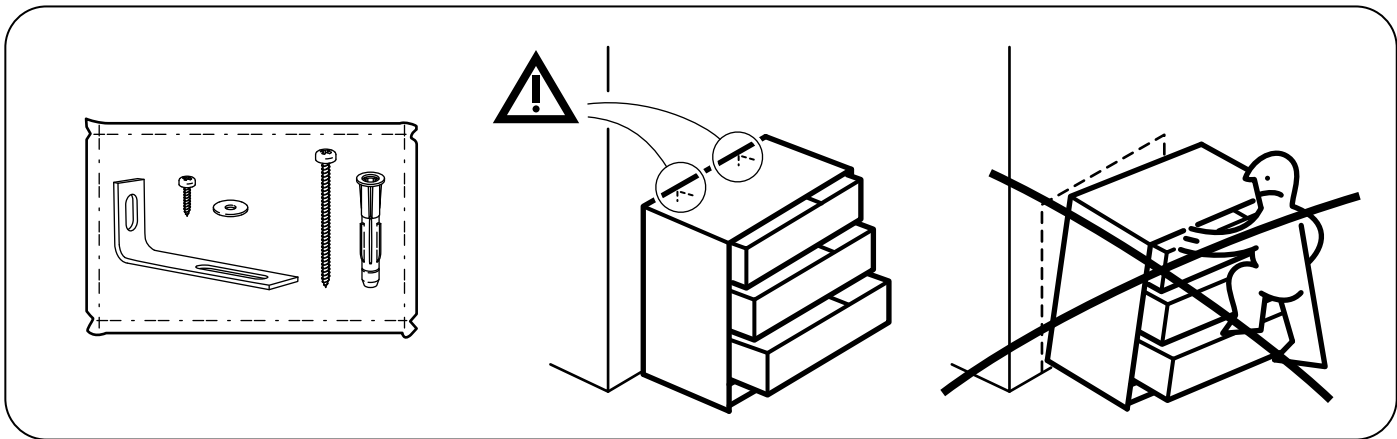 

35

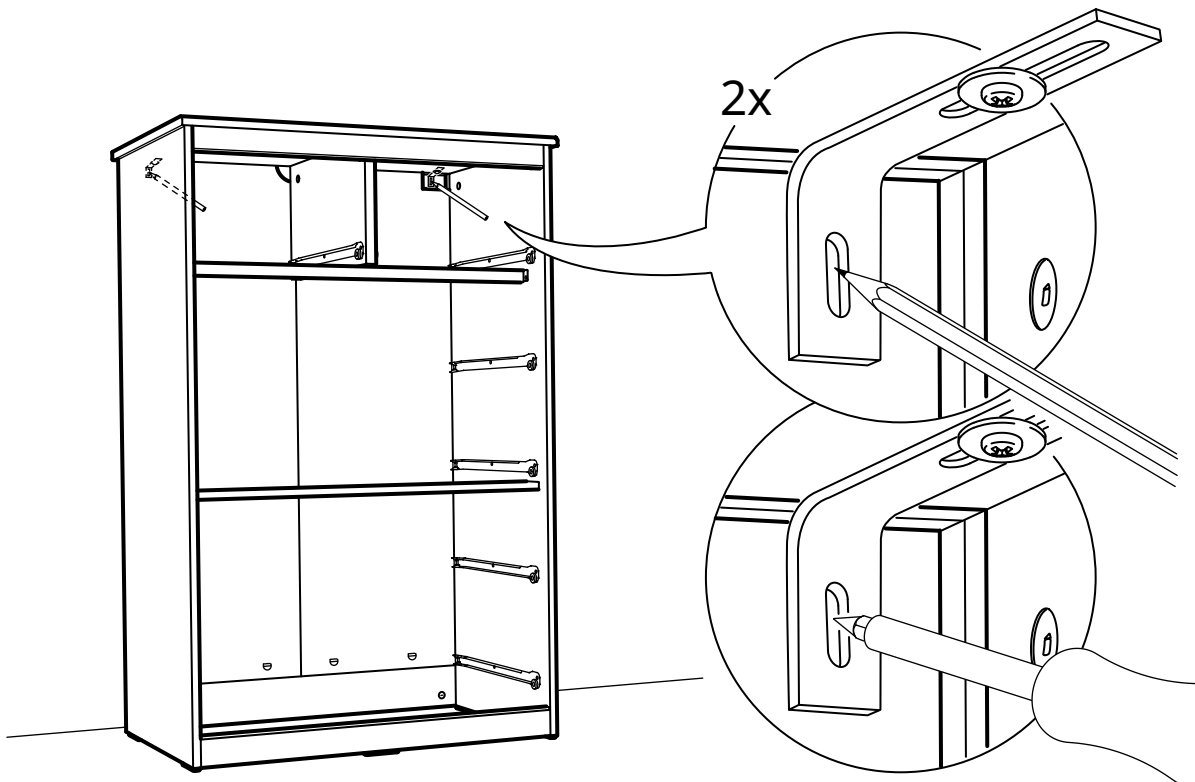 

36

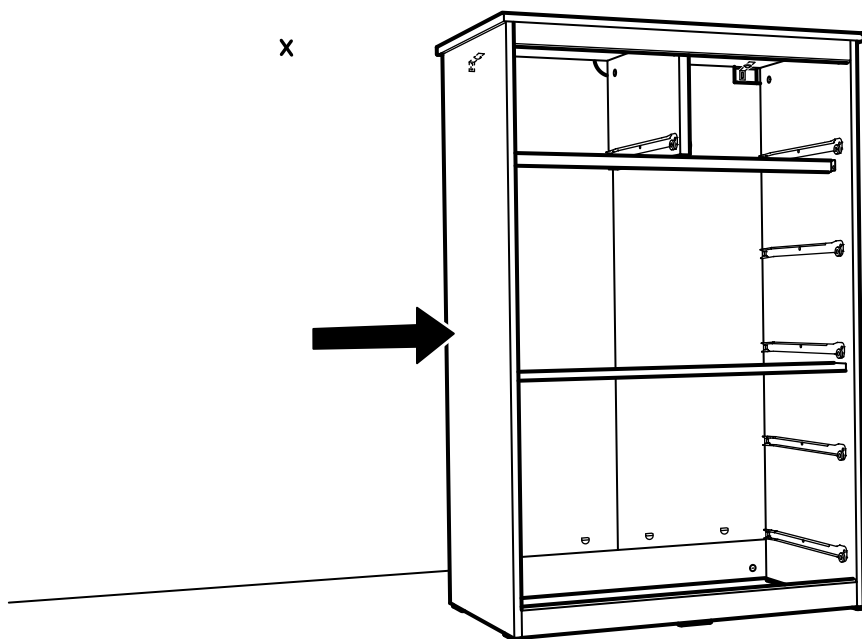 




www.IKEA.com/secure-it



 www.IKEA.cn/secure-it

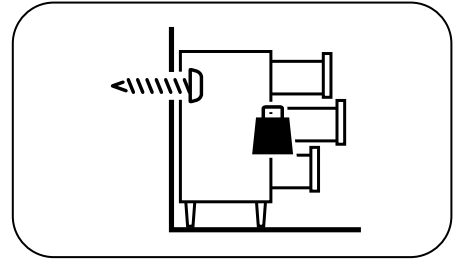

37

English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

A

Ø 8 mm (5/16")

1

2 70 mm (3/4")

3

1

B

Ø 8 mm (5/16")

1

2 ≈ 30 mm (≈1 1/4")

3

1

C

 
Ø 3 mm (1/8")

1


2 ≈ 30 mm (≈1 1/4")



1

38

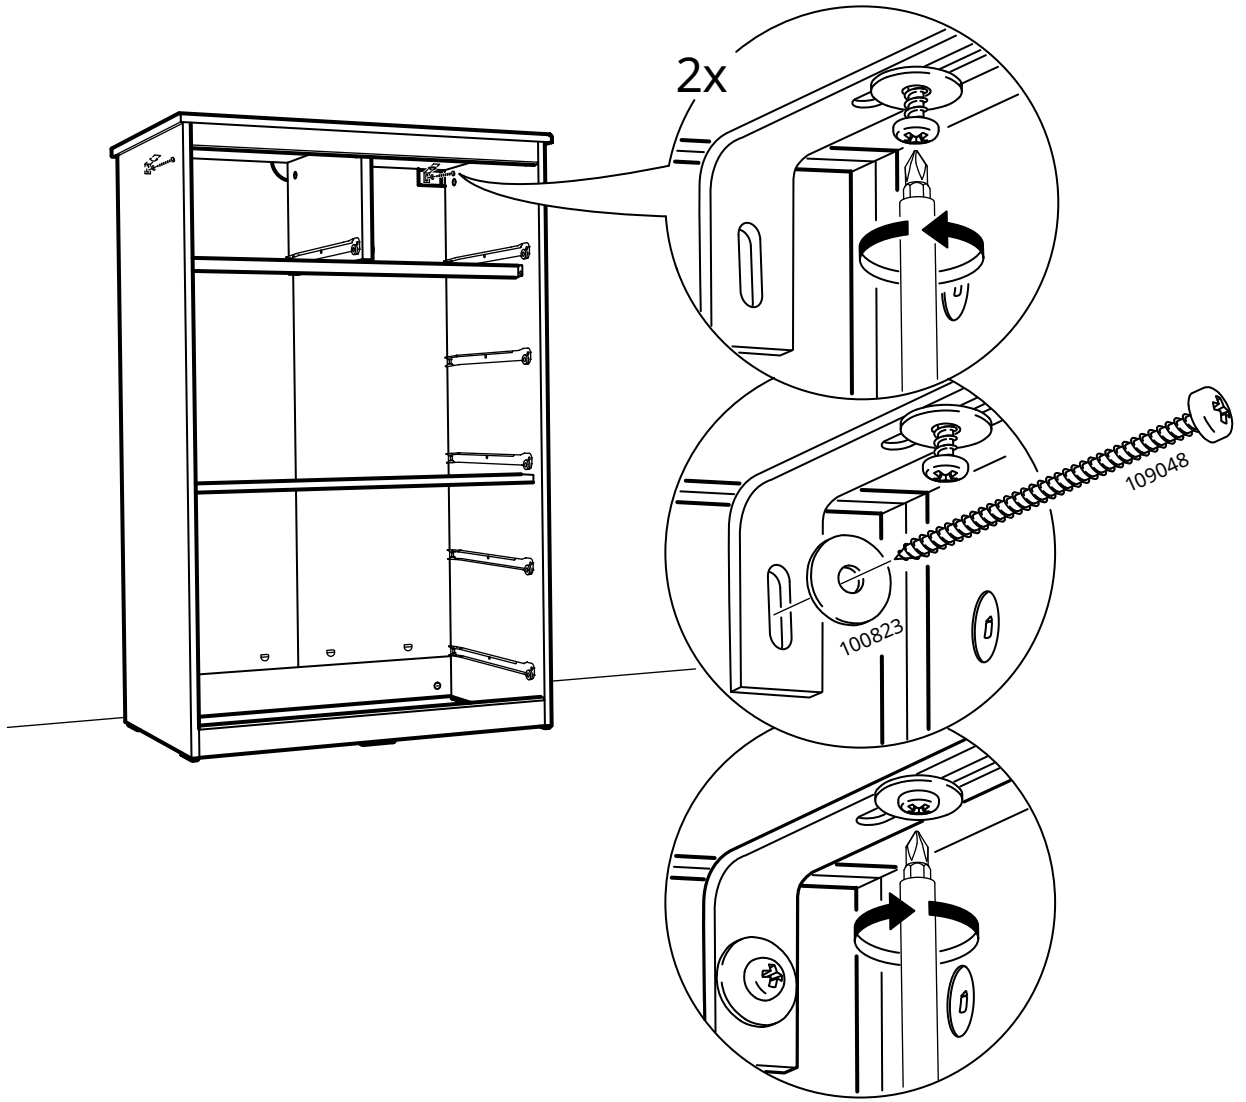

39

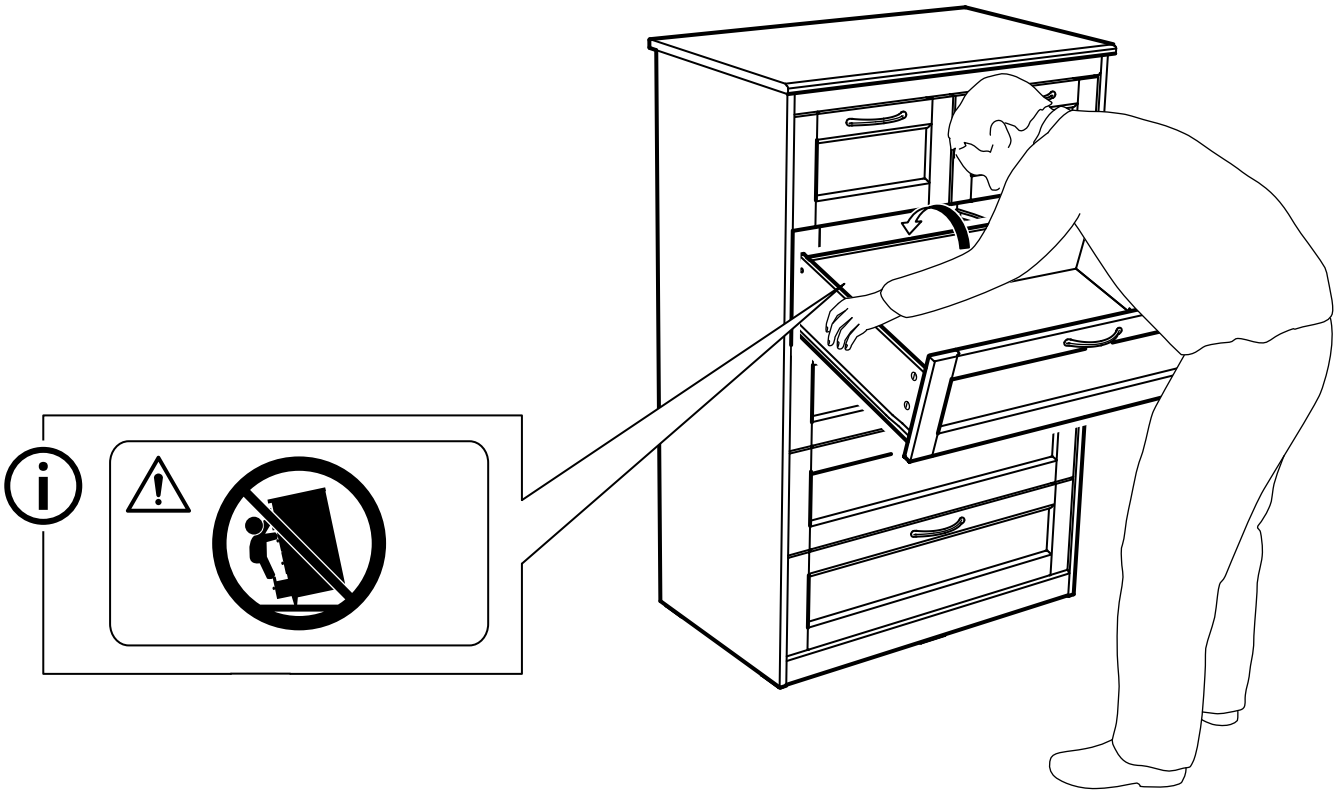 

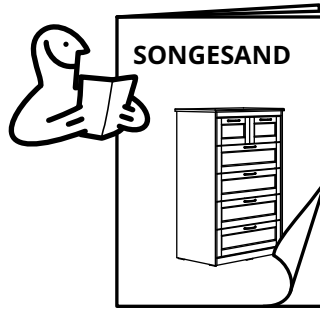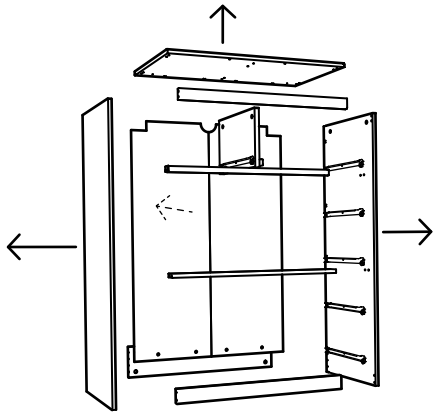  

34 → 1

