 


SONGESAND

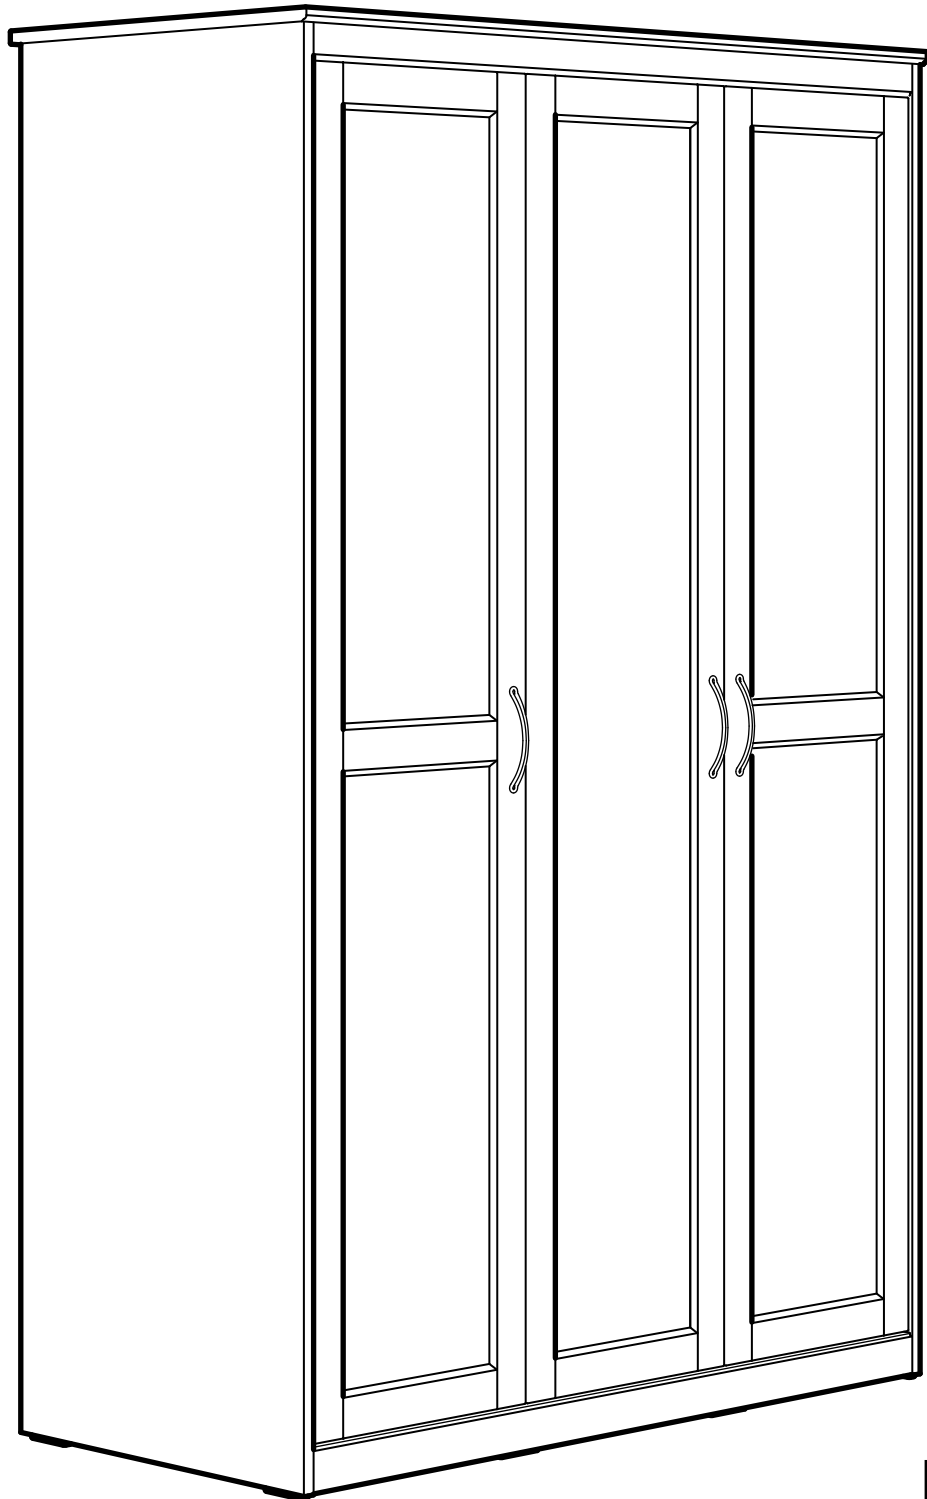

Design and Quality
IKEA of Sweden



English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

 
 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

 
 
 
 
NEVER open more than one drawer at a time.

 
 
Place heaviest items in the lowest drawers.

English


Read and follow each step of the instruction carefully.

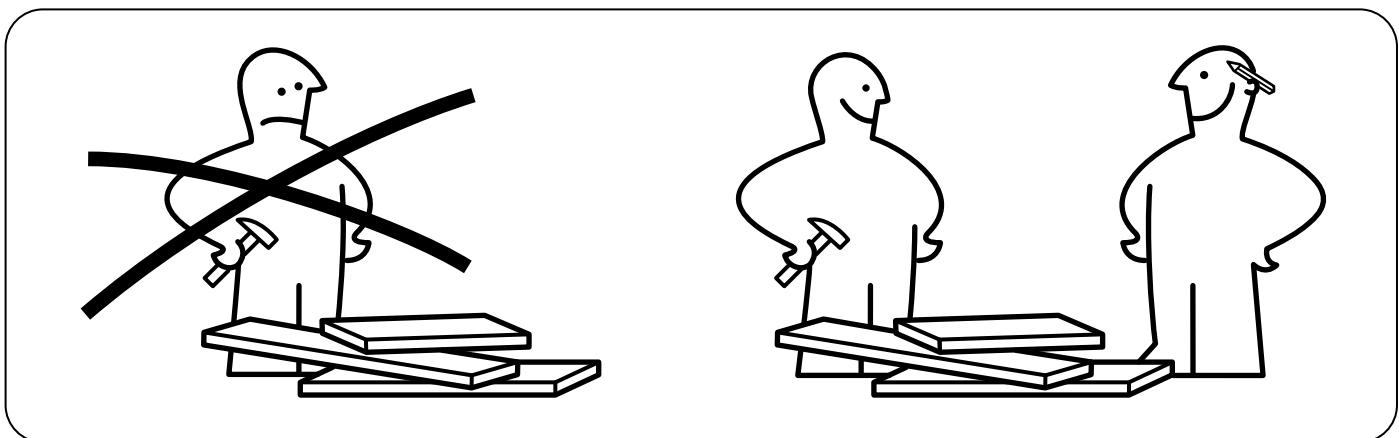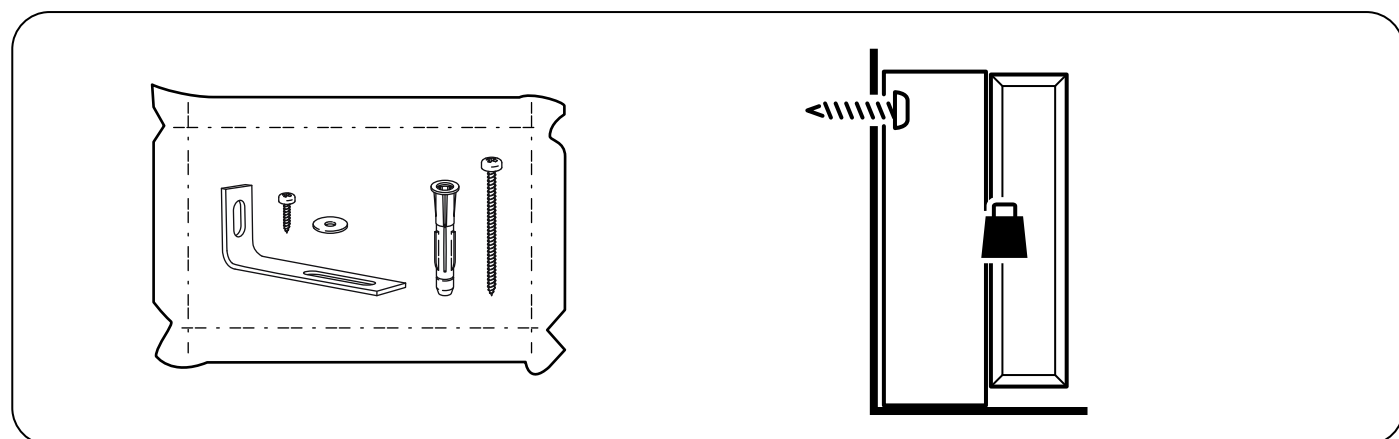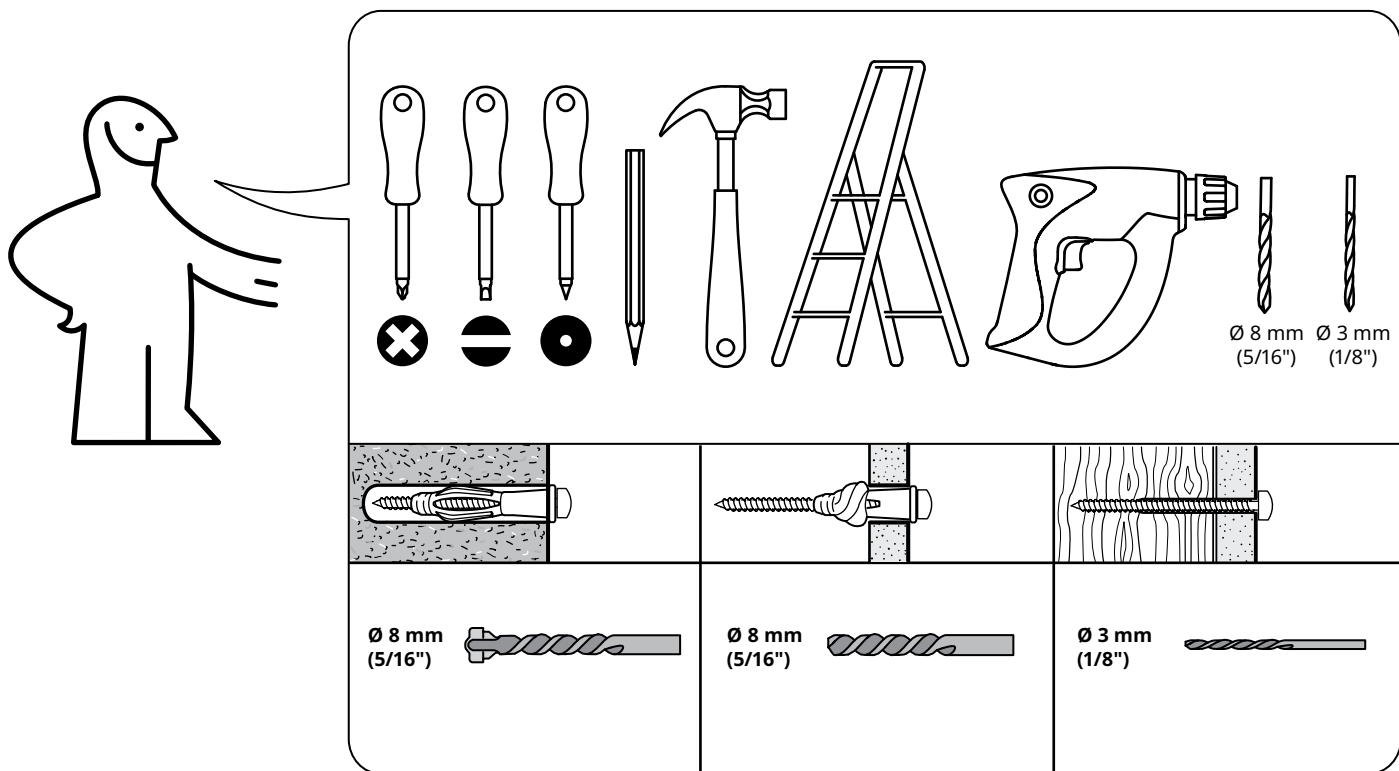

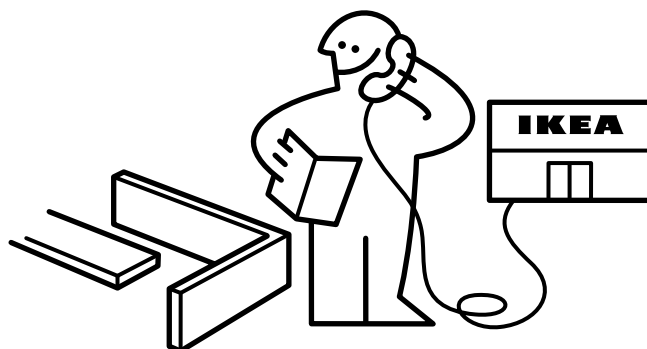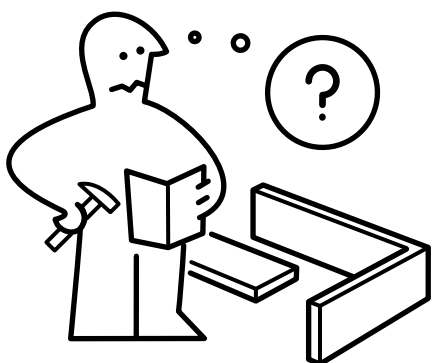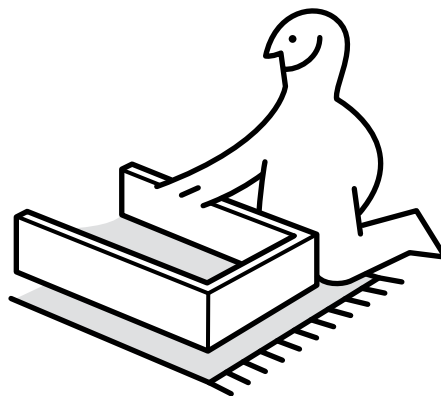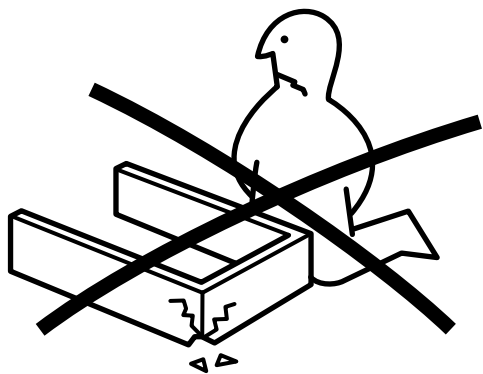

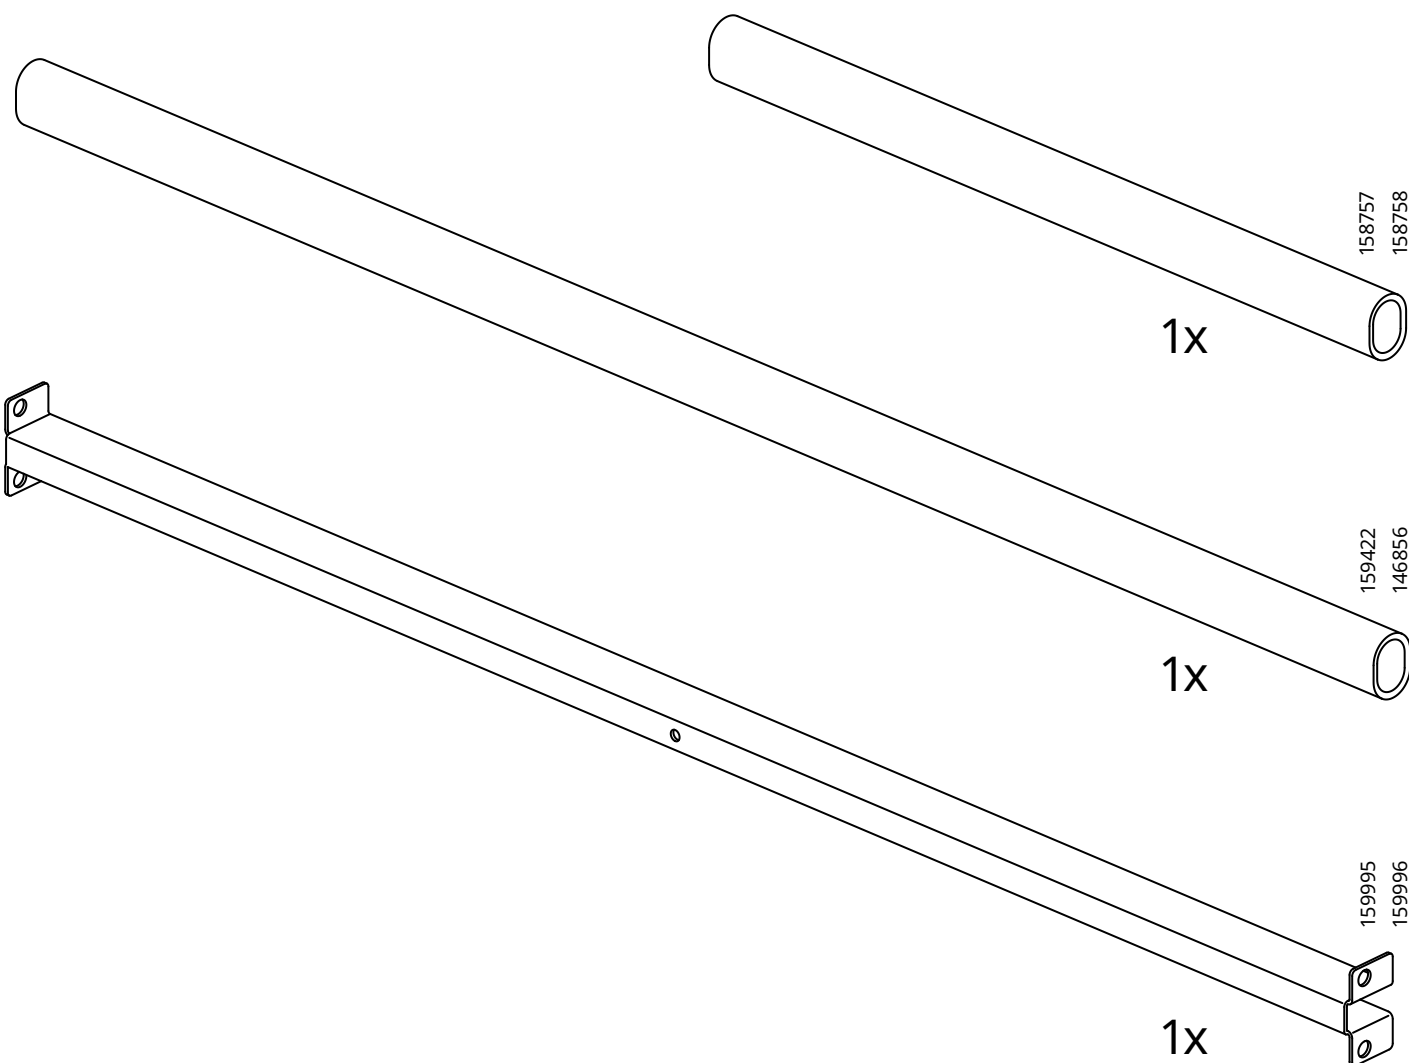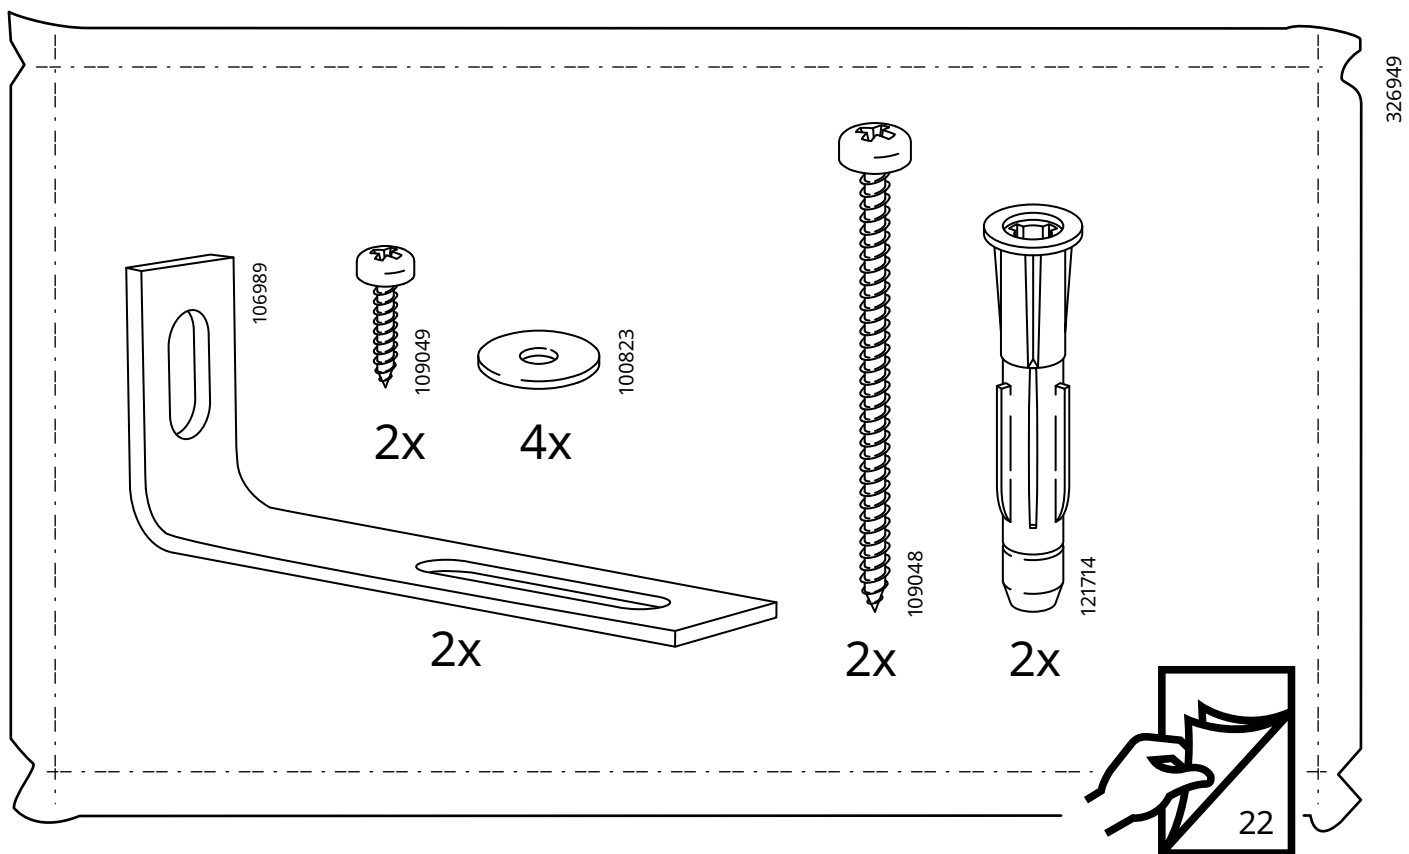

1

 


100214

10x



118331
112996

 20x



105248

8x



 
119250
119252

20x




101345

22x

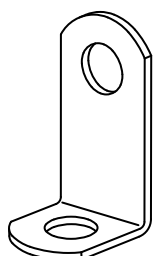

102553

 2x

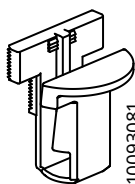


10093081

20x



10093082

 
20x

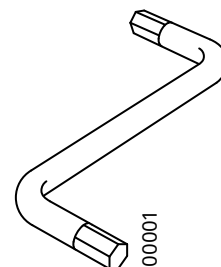

100001

1x

 2

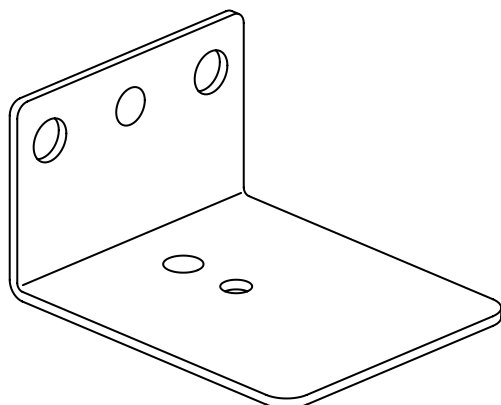


159129
114246

1x



109049

 5x




100408

6x



105248

 
42x

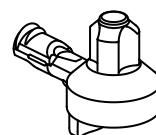

131372

12x

 3

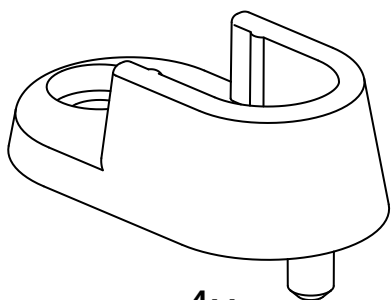

4x

157307
157306



 
105811

4x




115339

6x

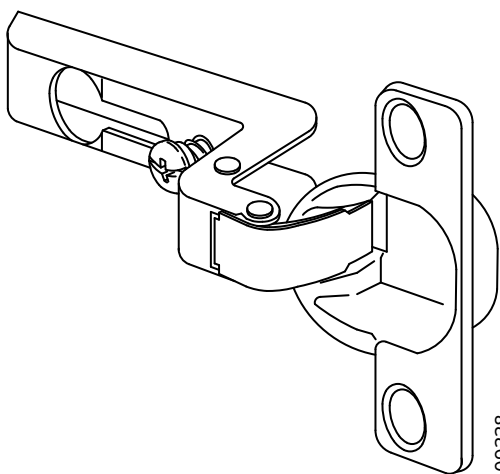


109338

 10x

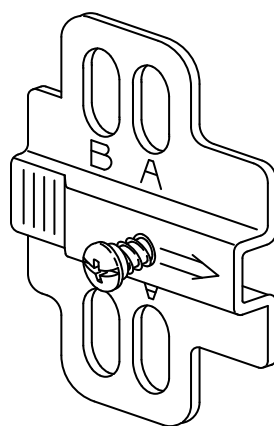


109221

 10x

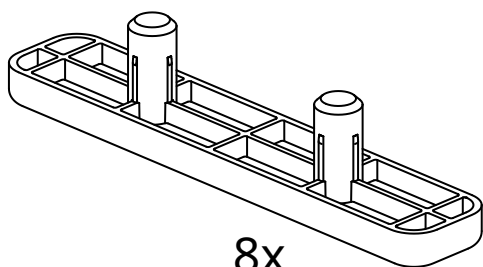

8x

 
158568
153548

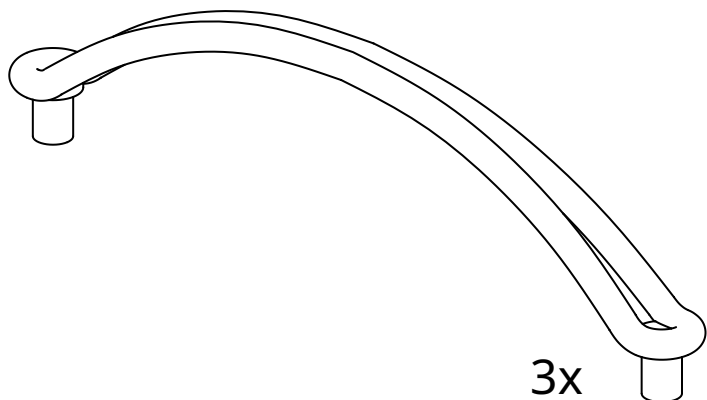


3x

157426

 
1

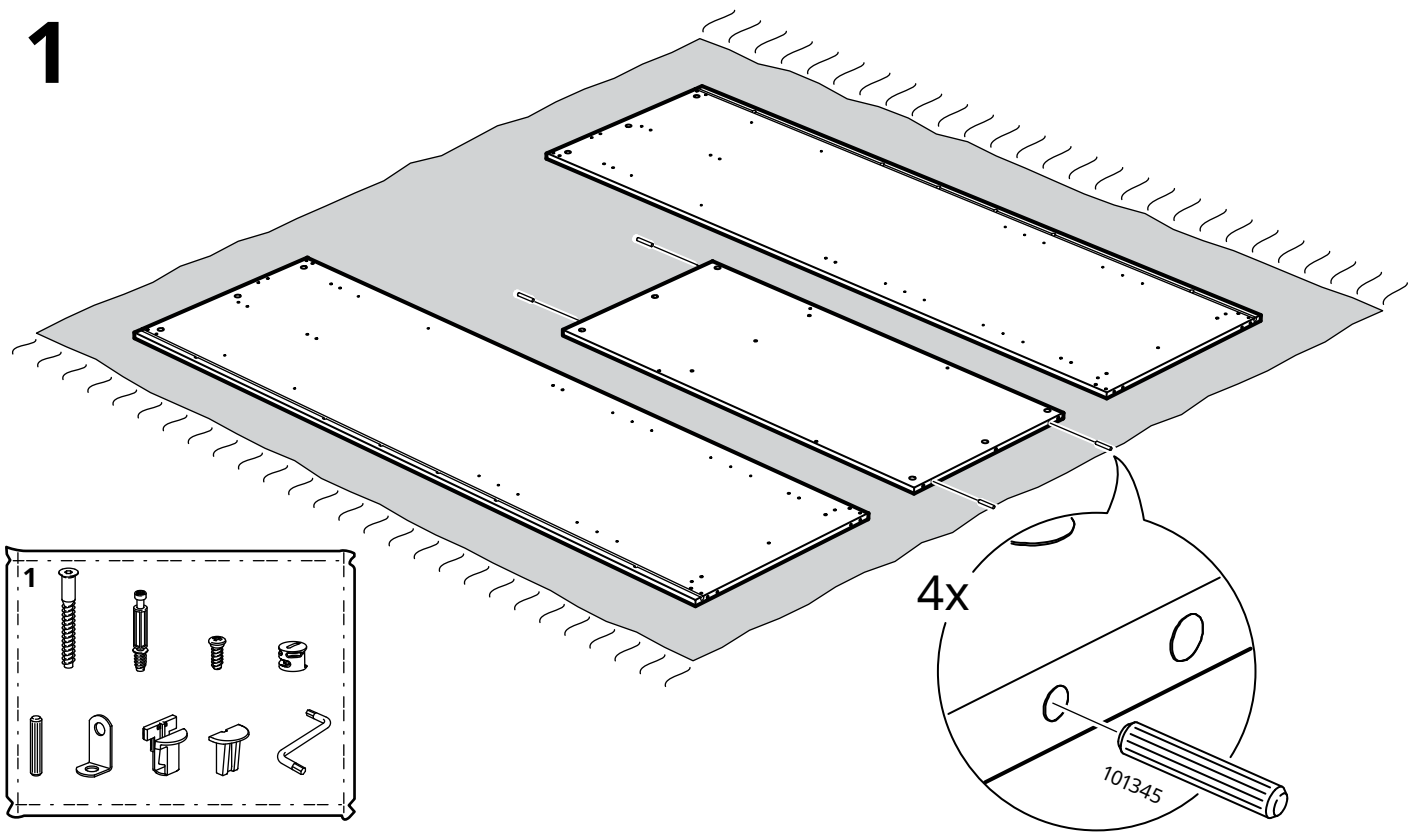


2

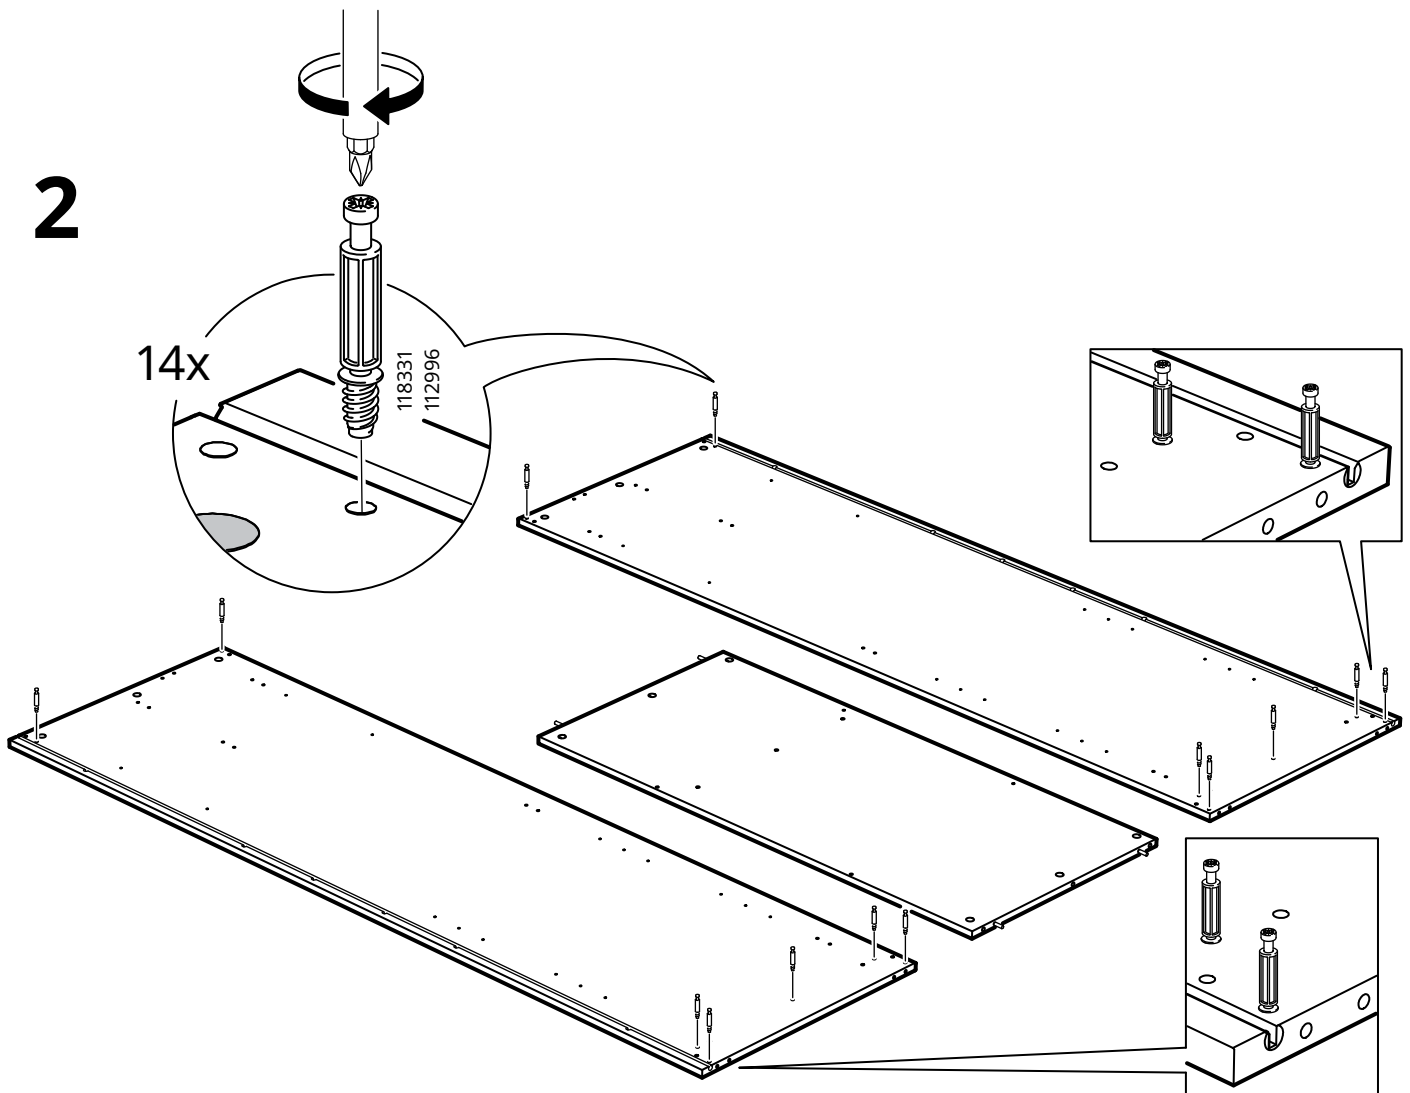 


3

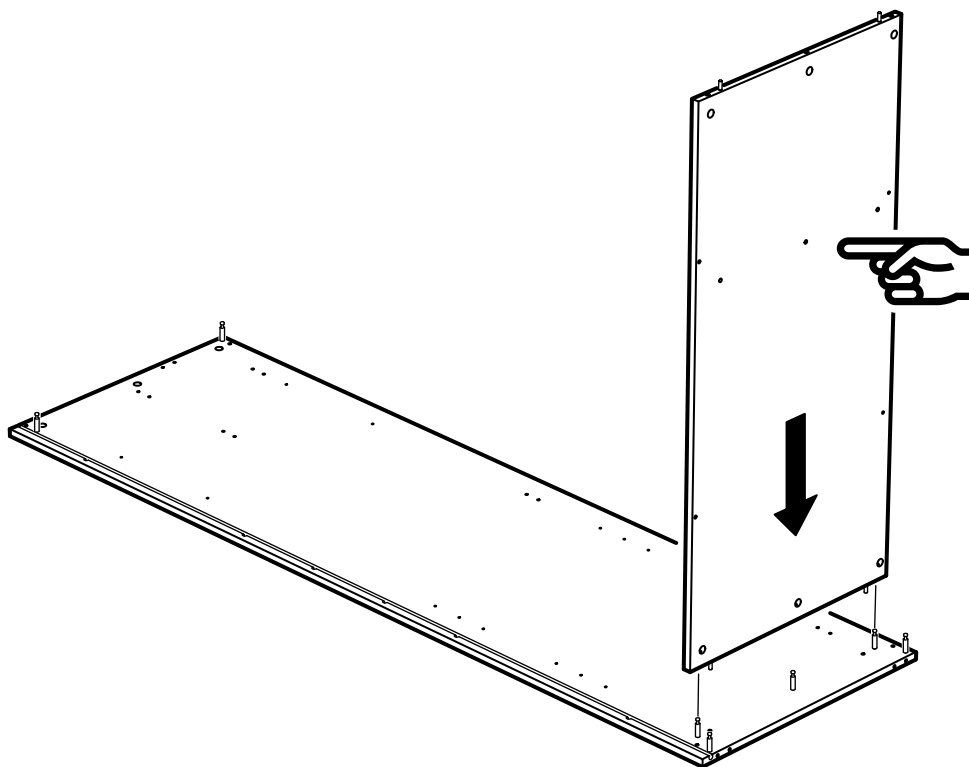 


4

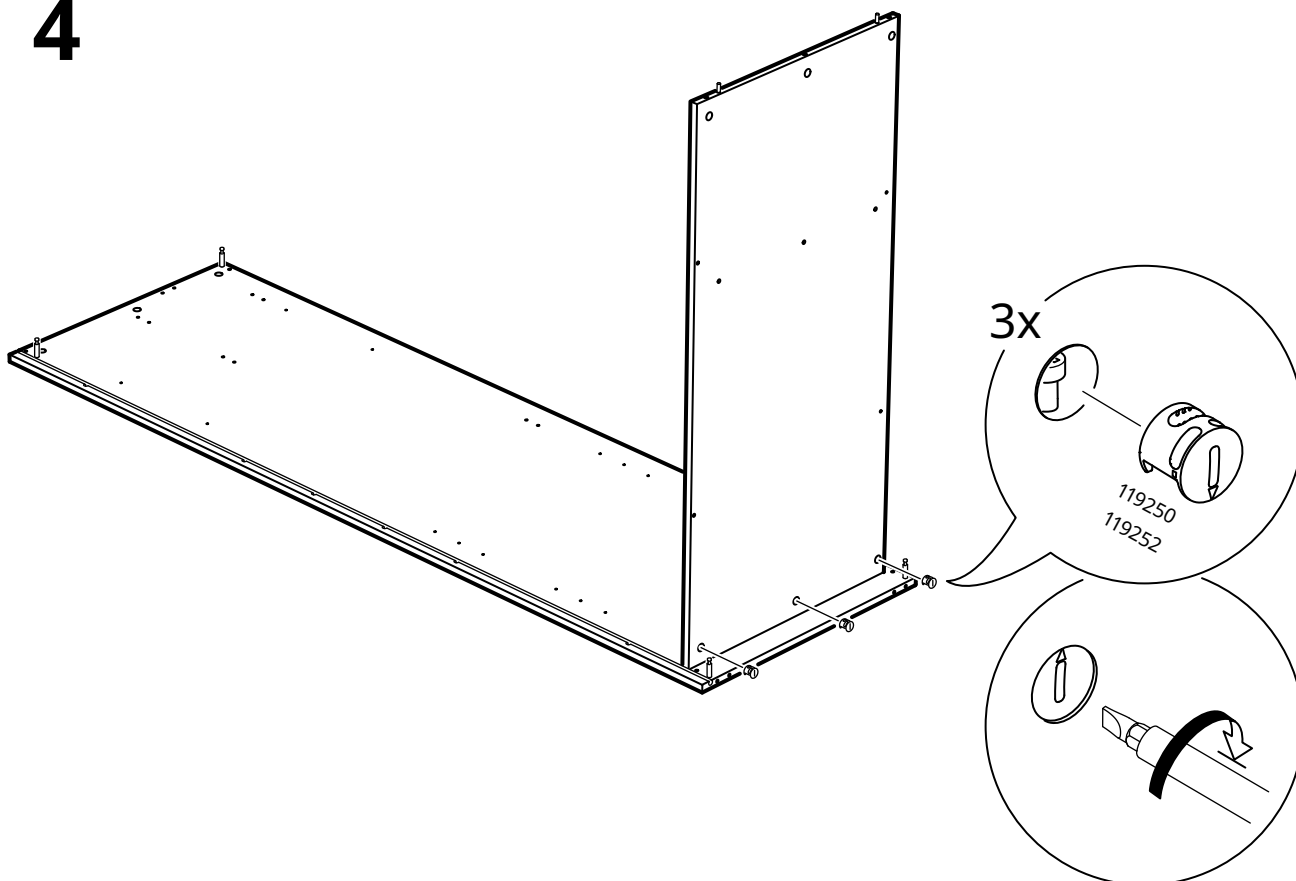 


5

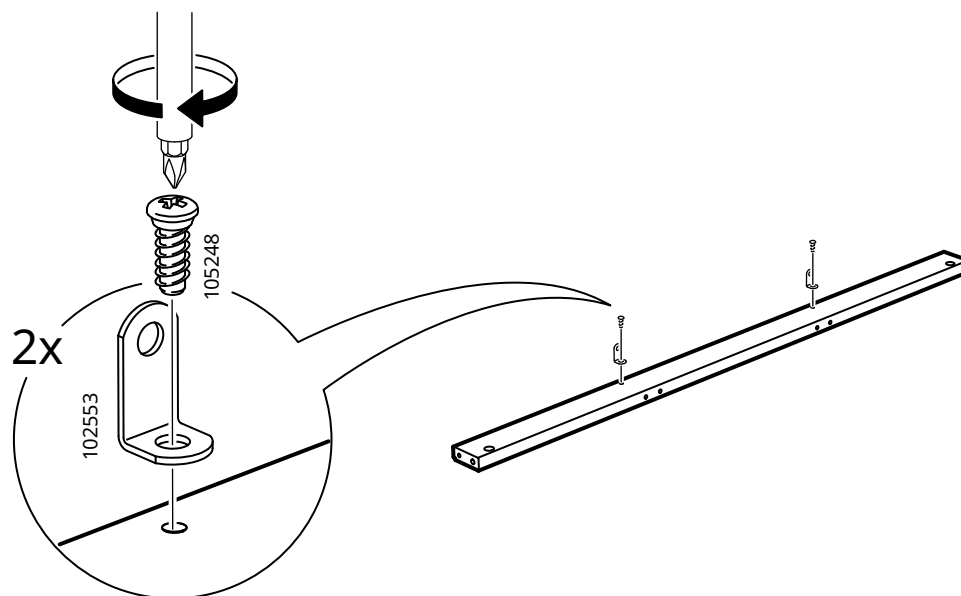 


6

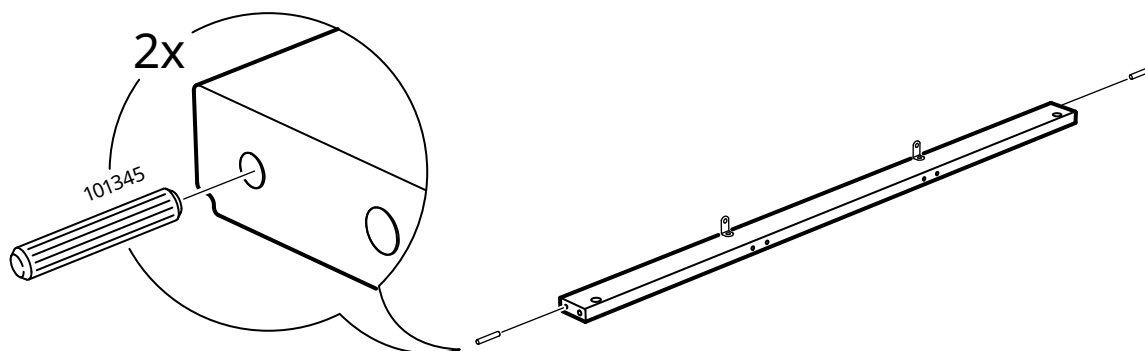 


7

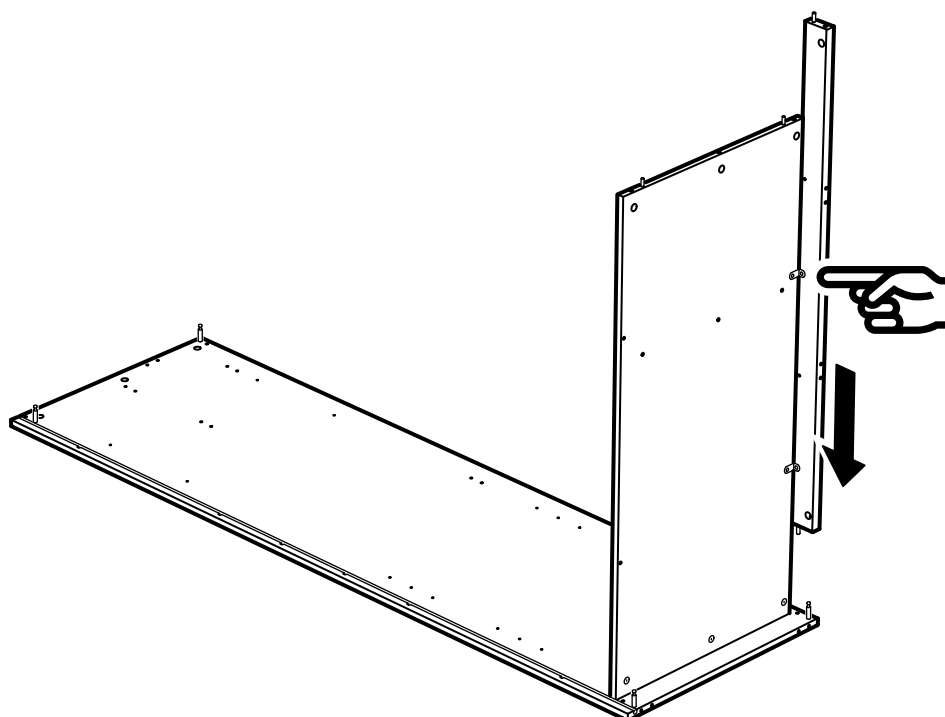 


8

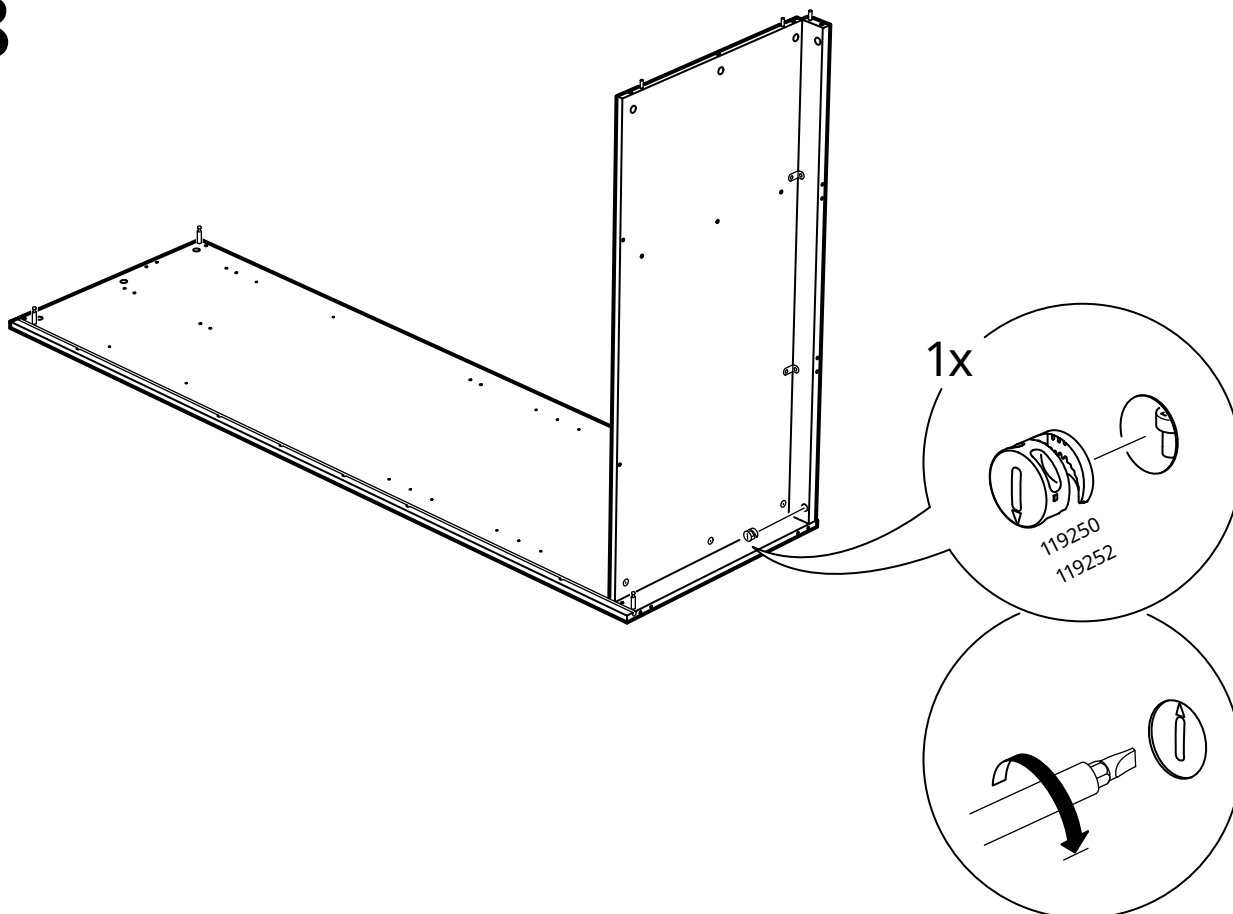 


9

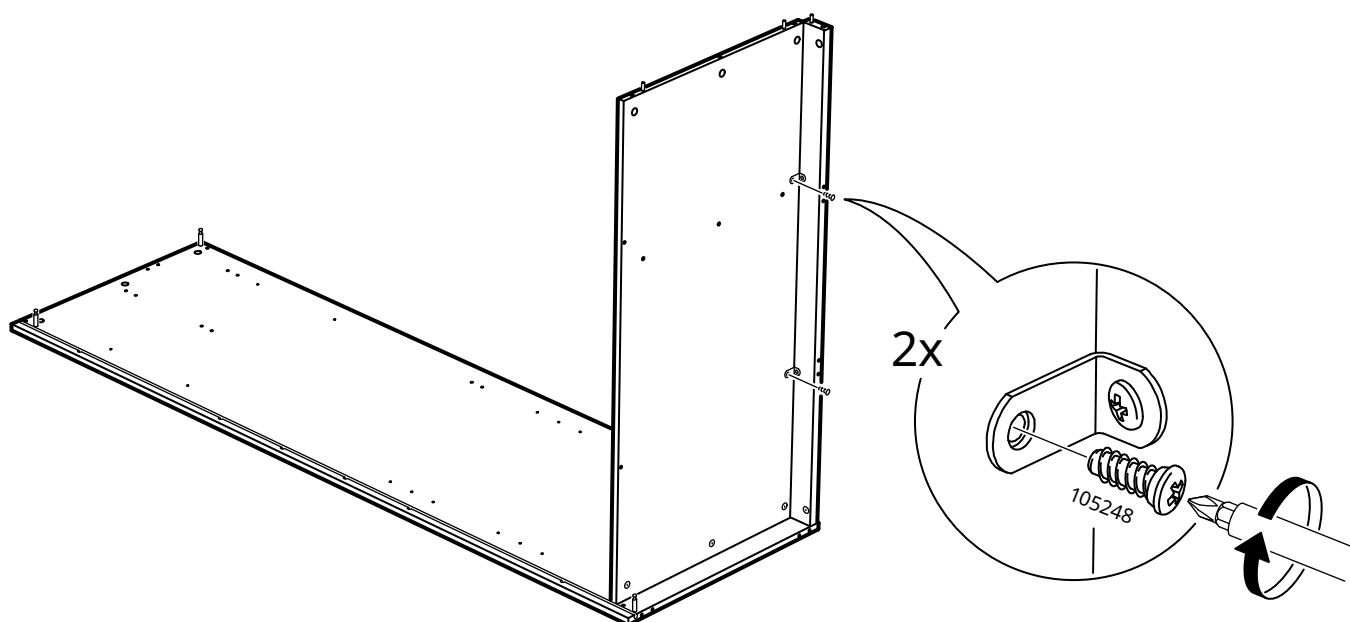 


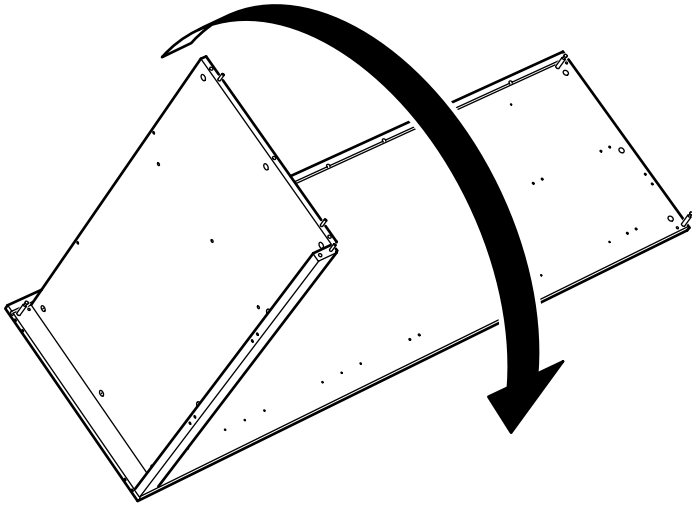 


10



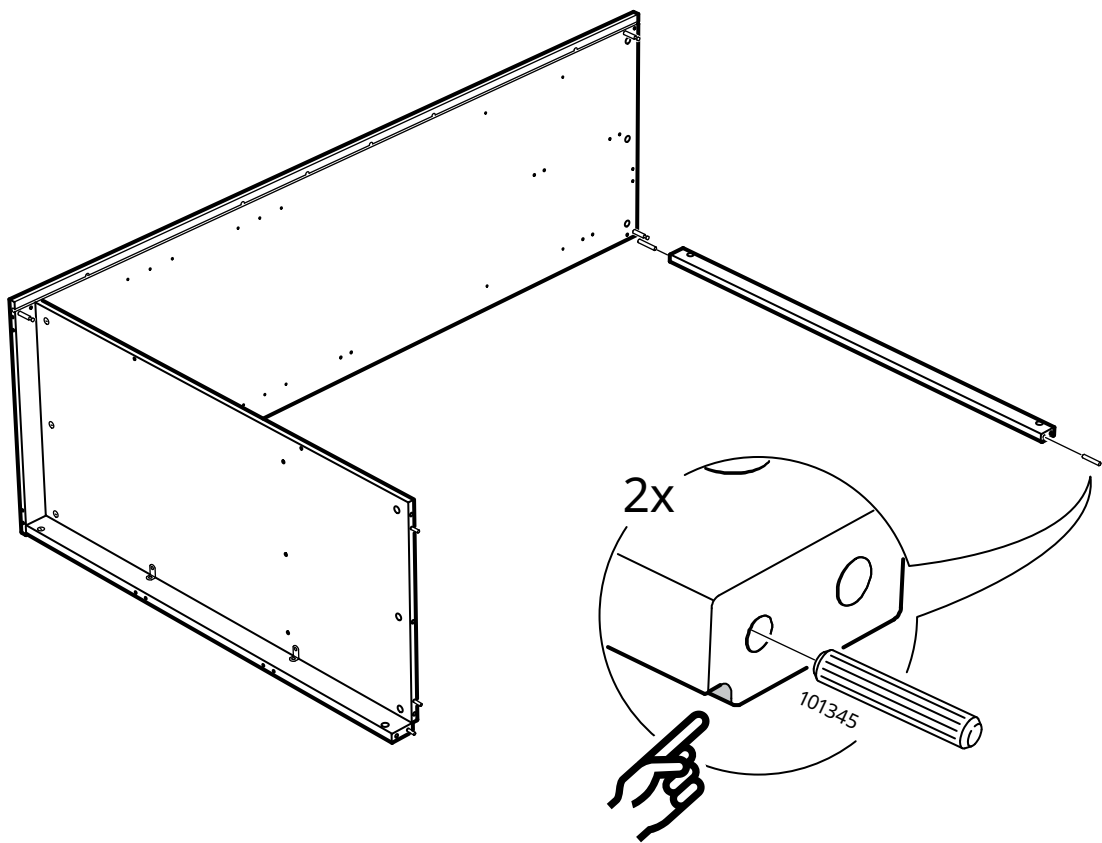 


11

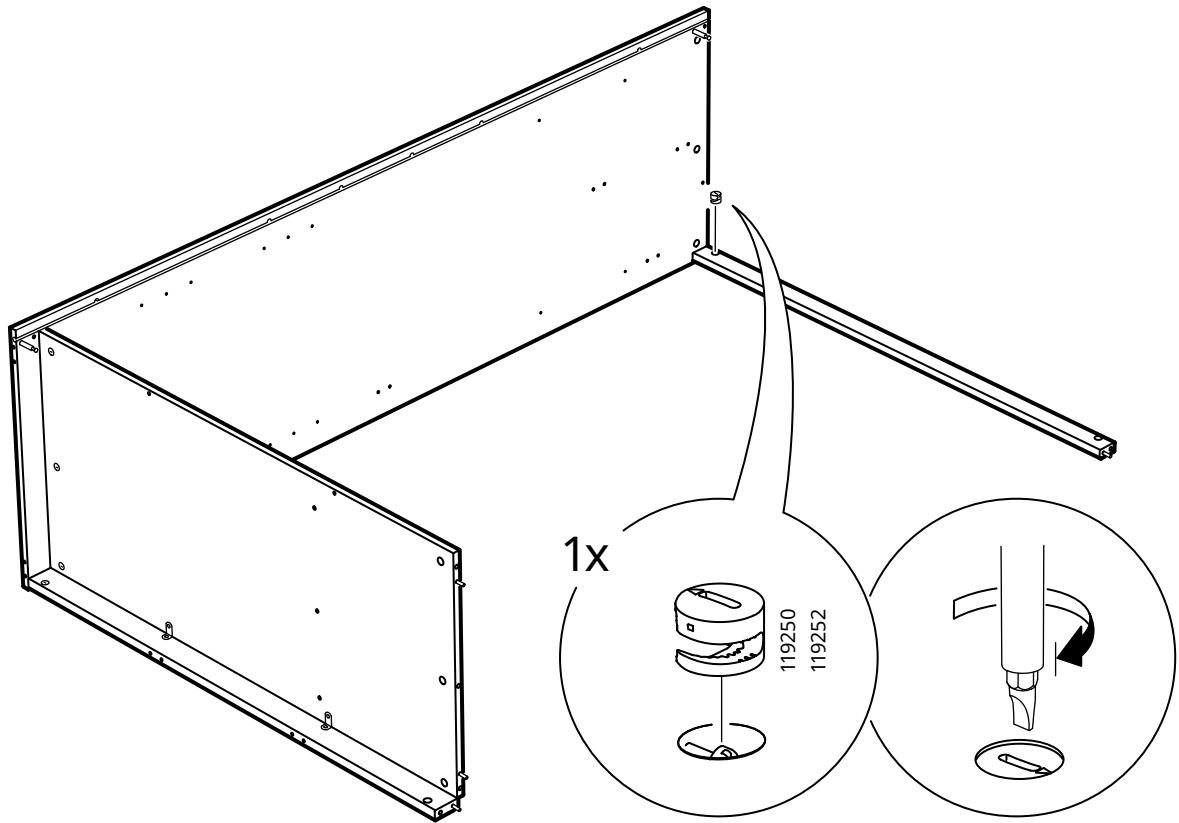 


12

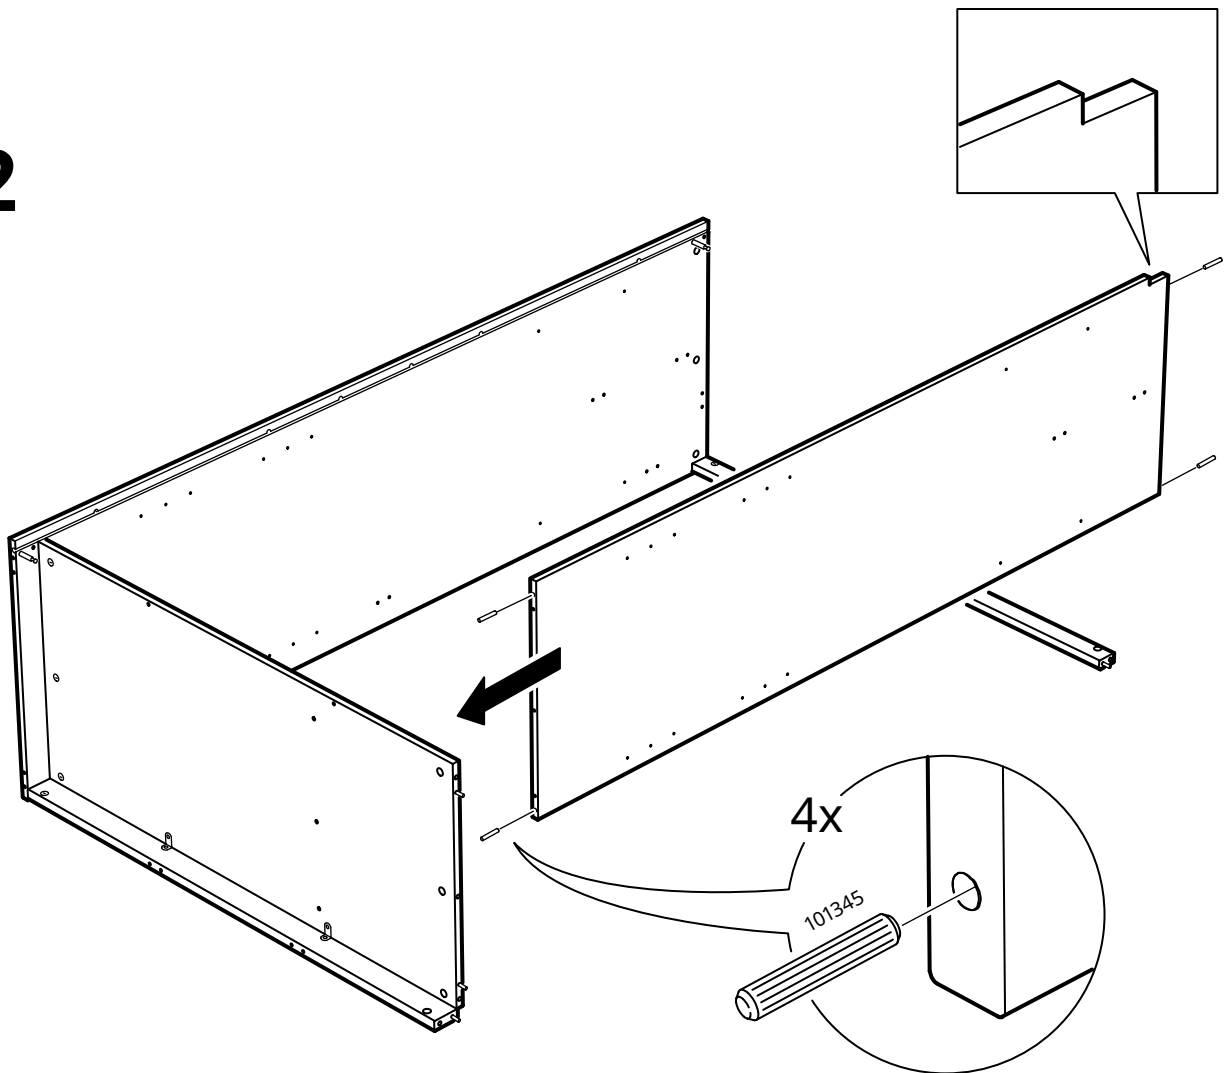 


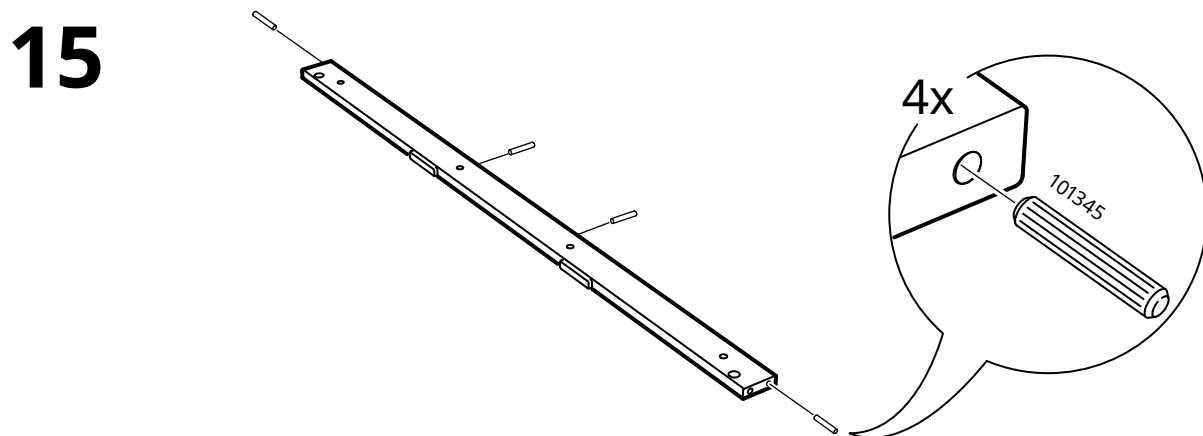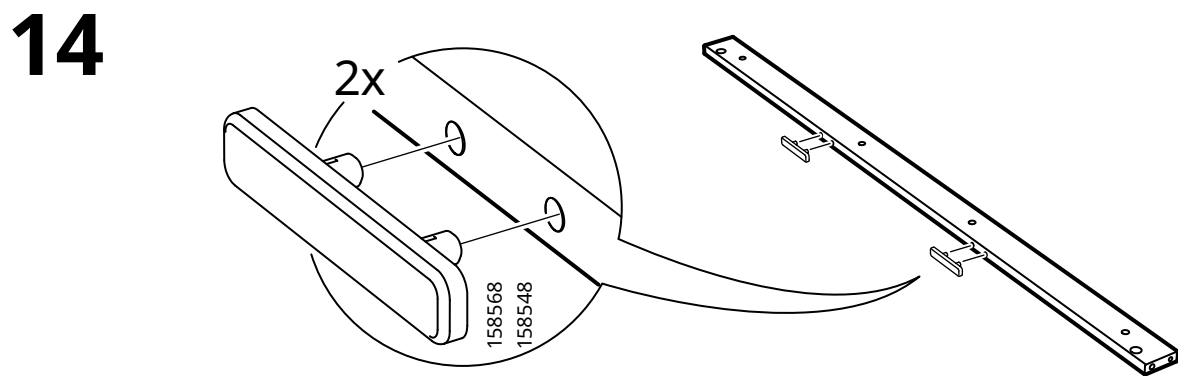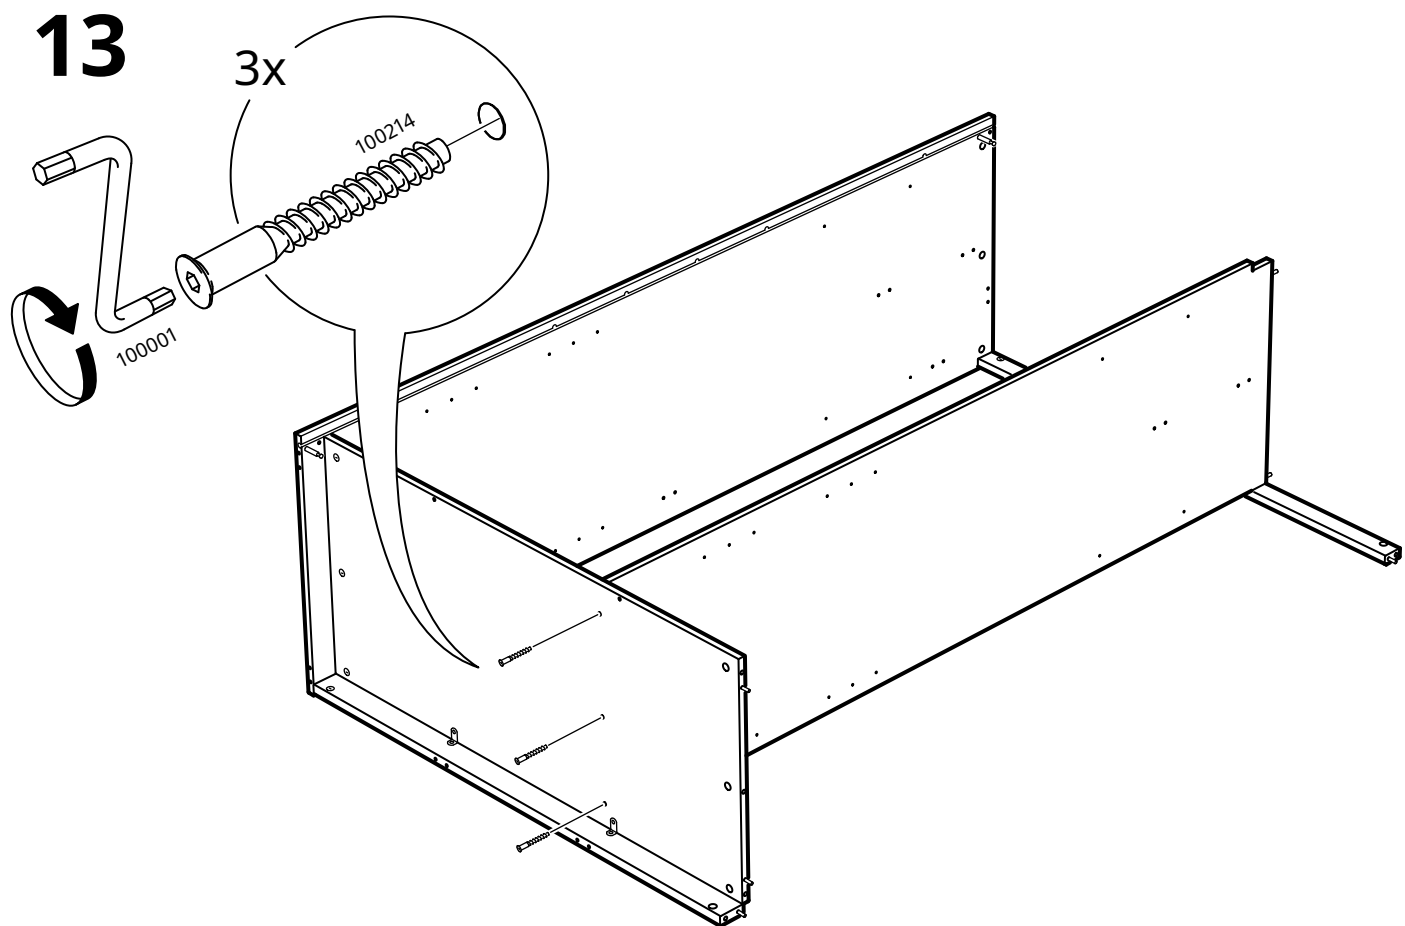   


16

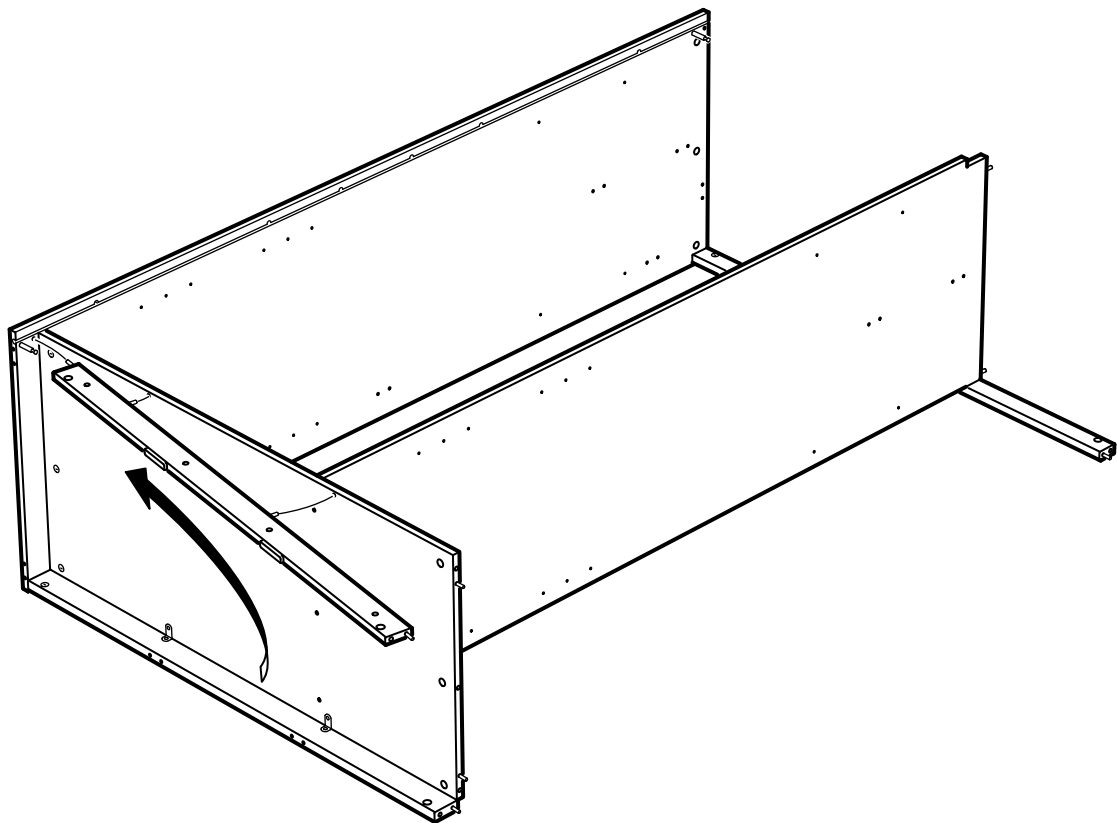 


17

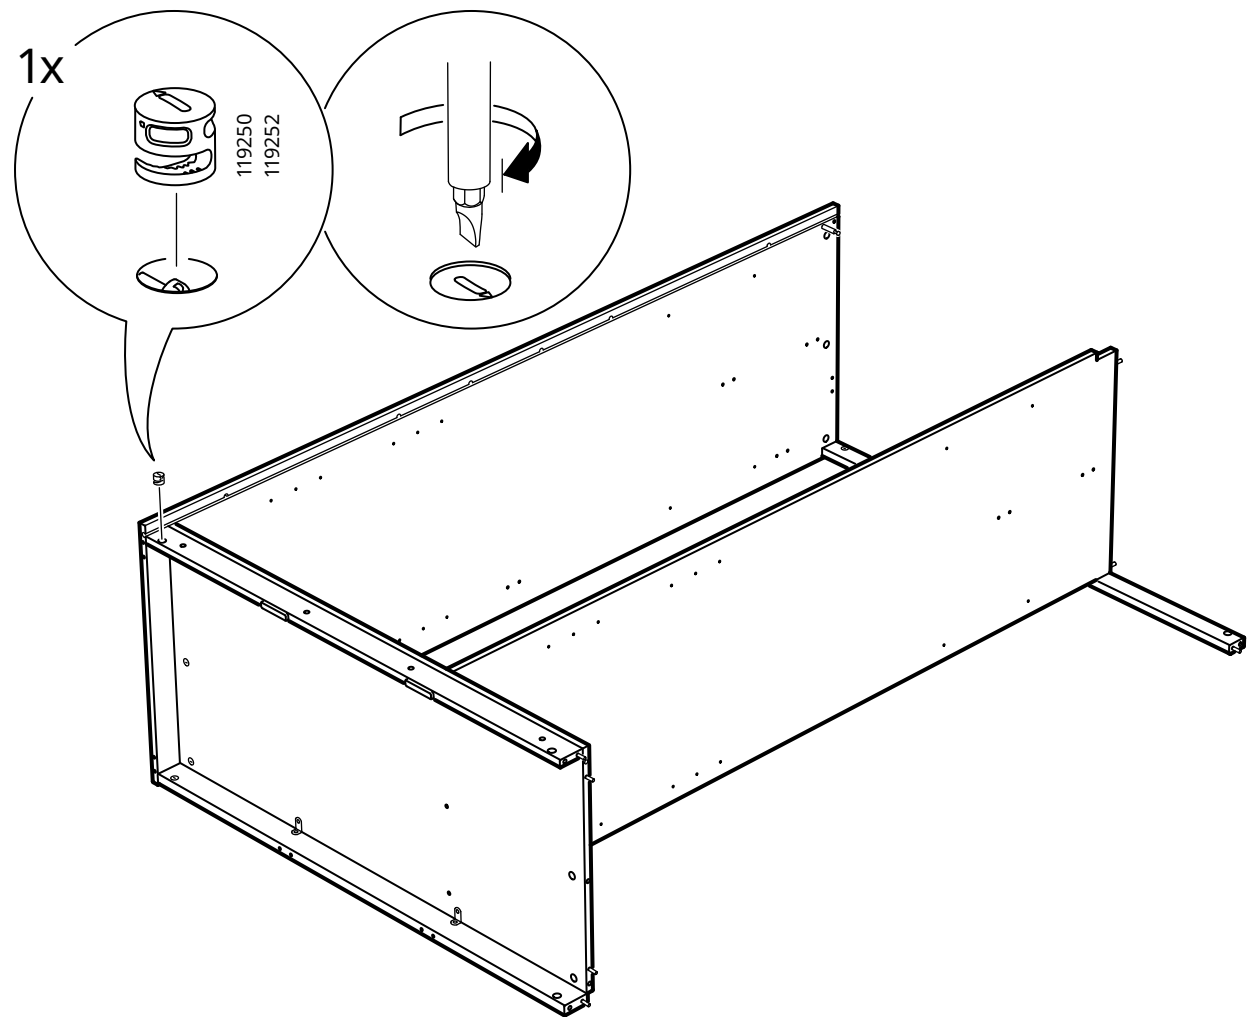 


18

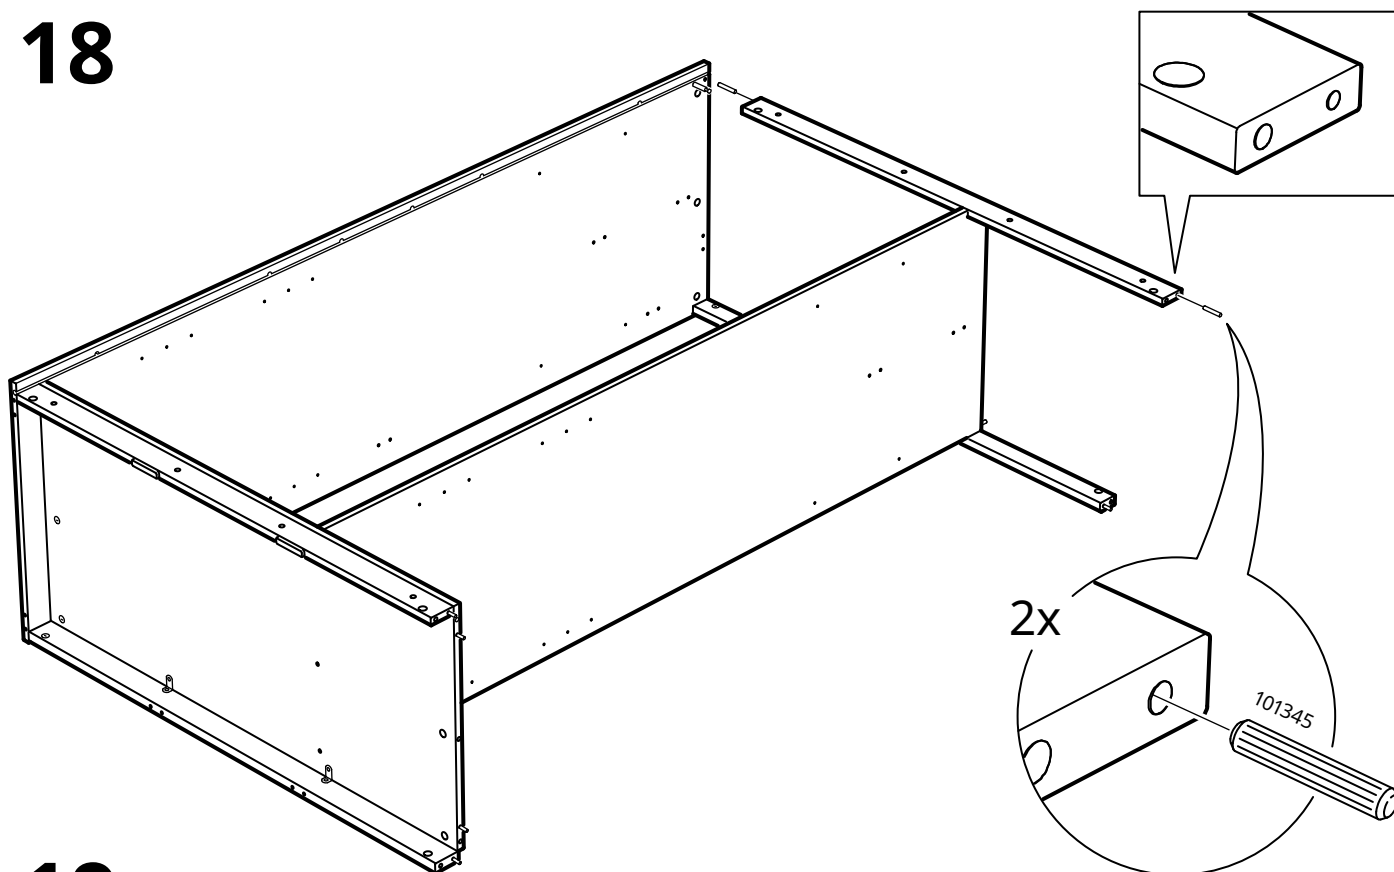 


19

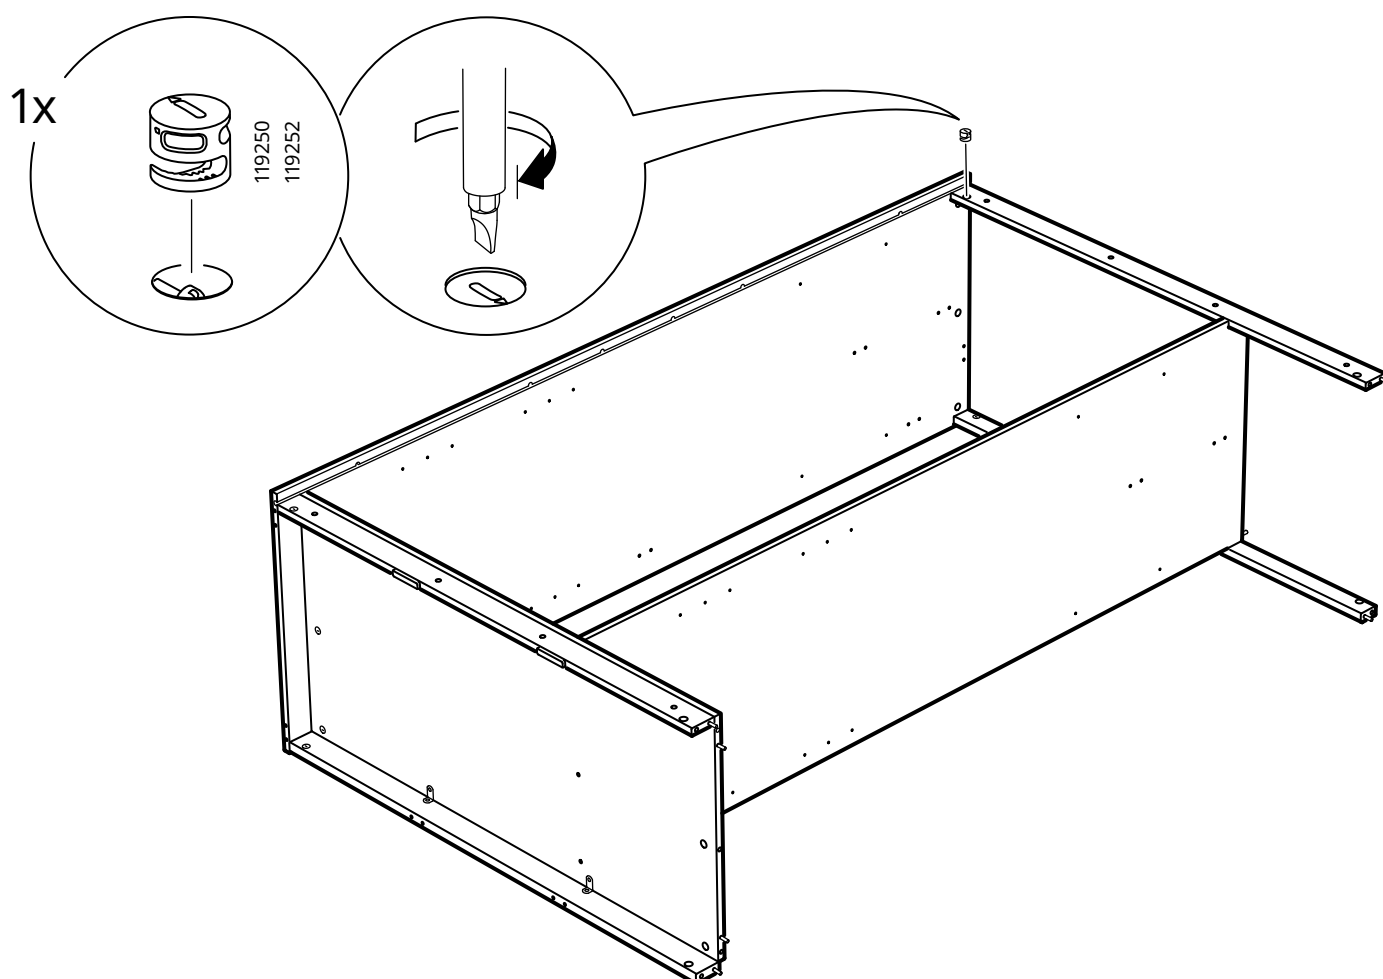 


20

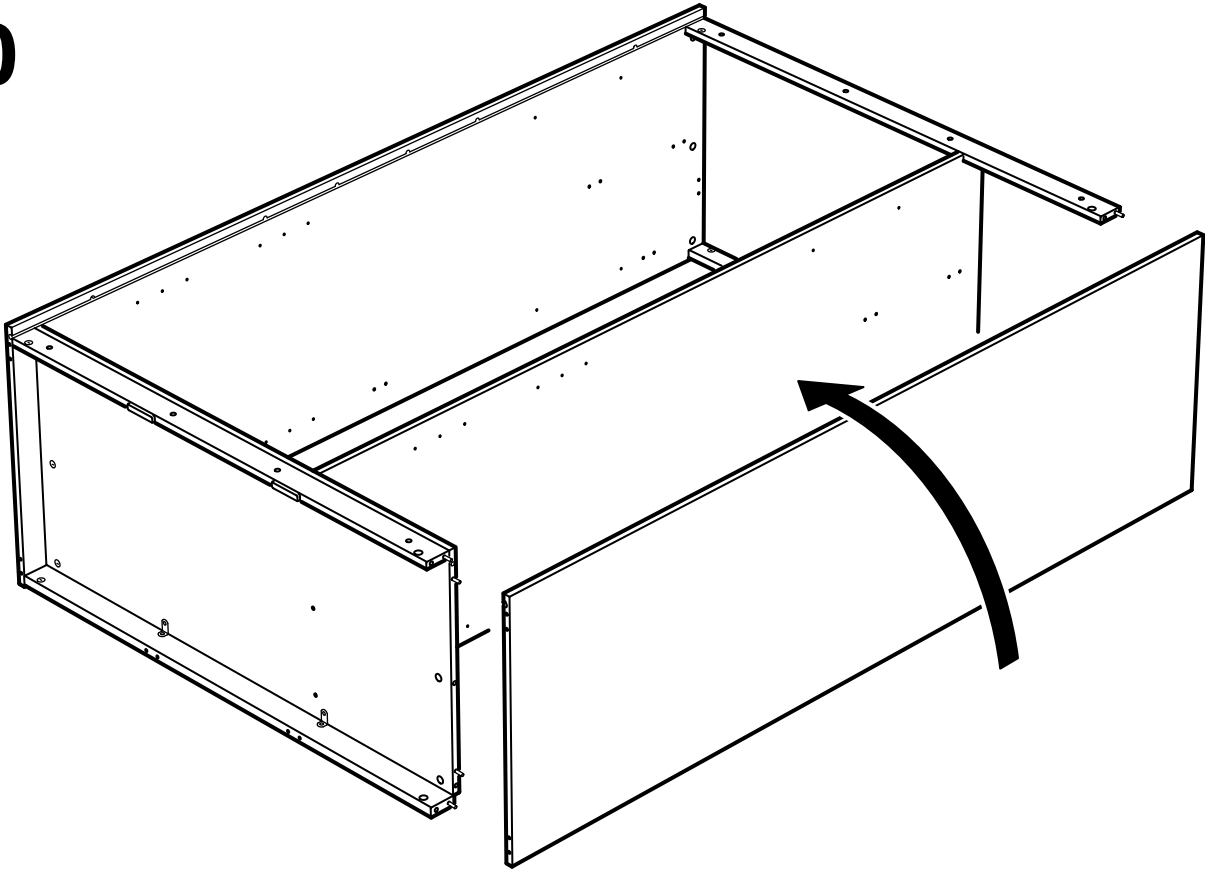 


21

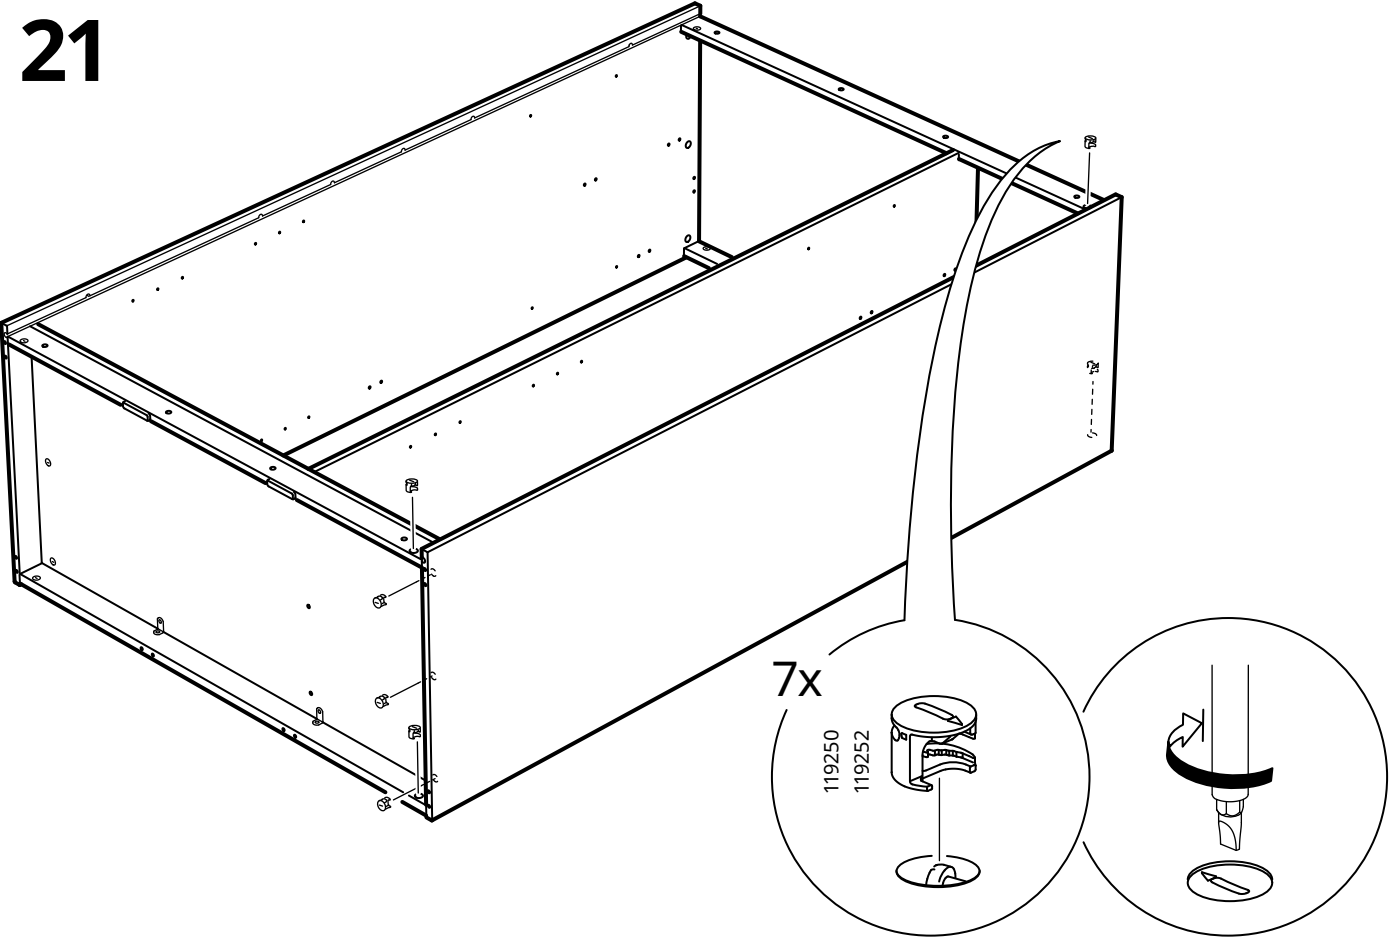 


22

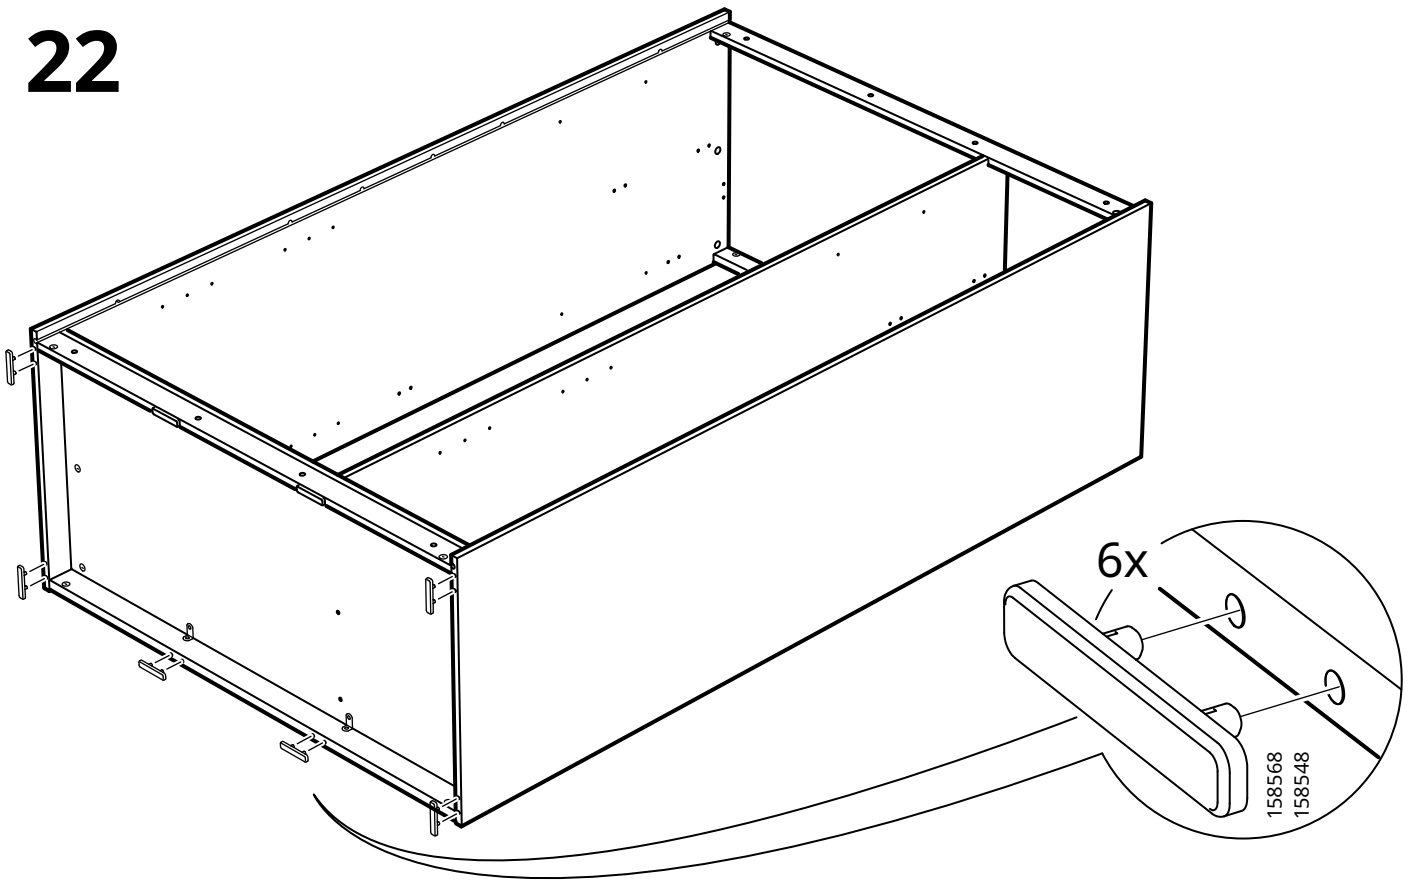 


23

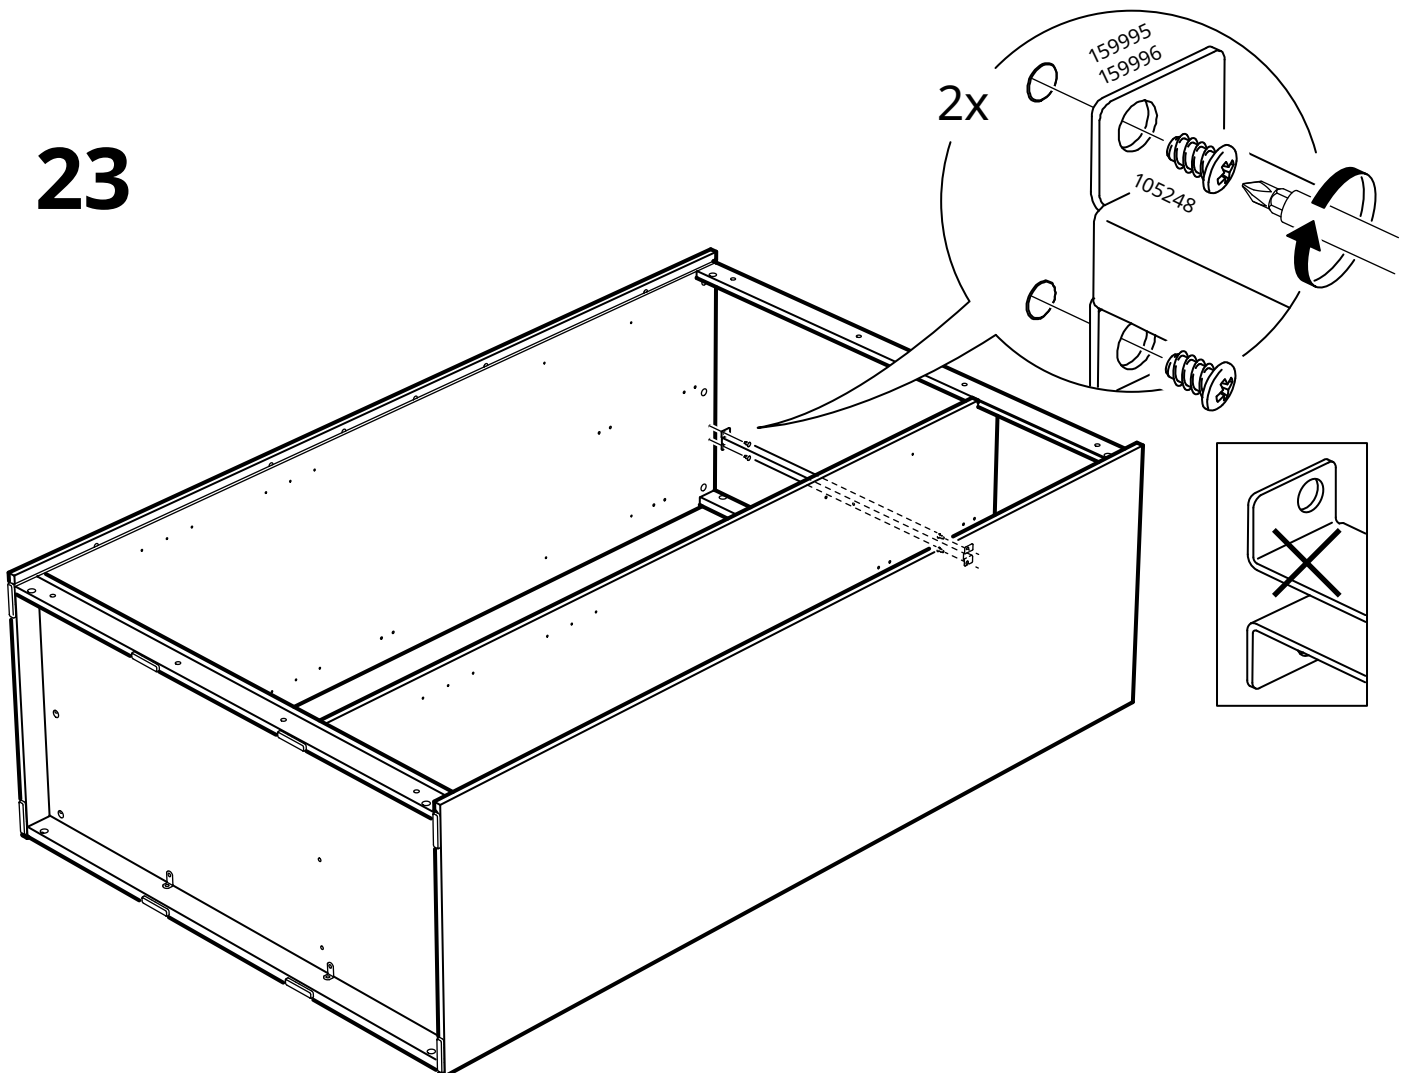 


24

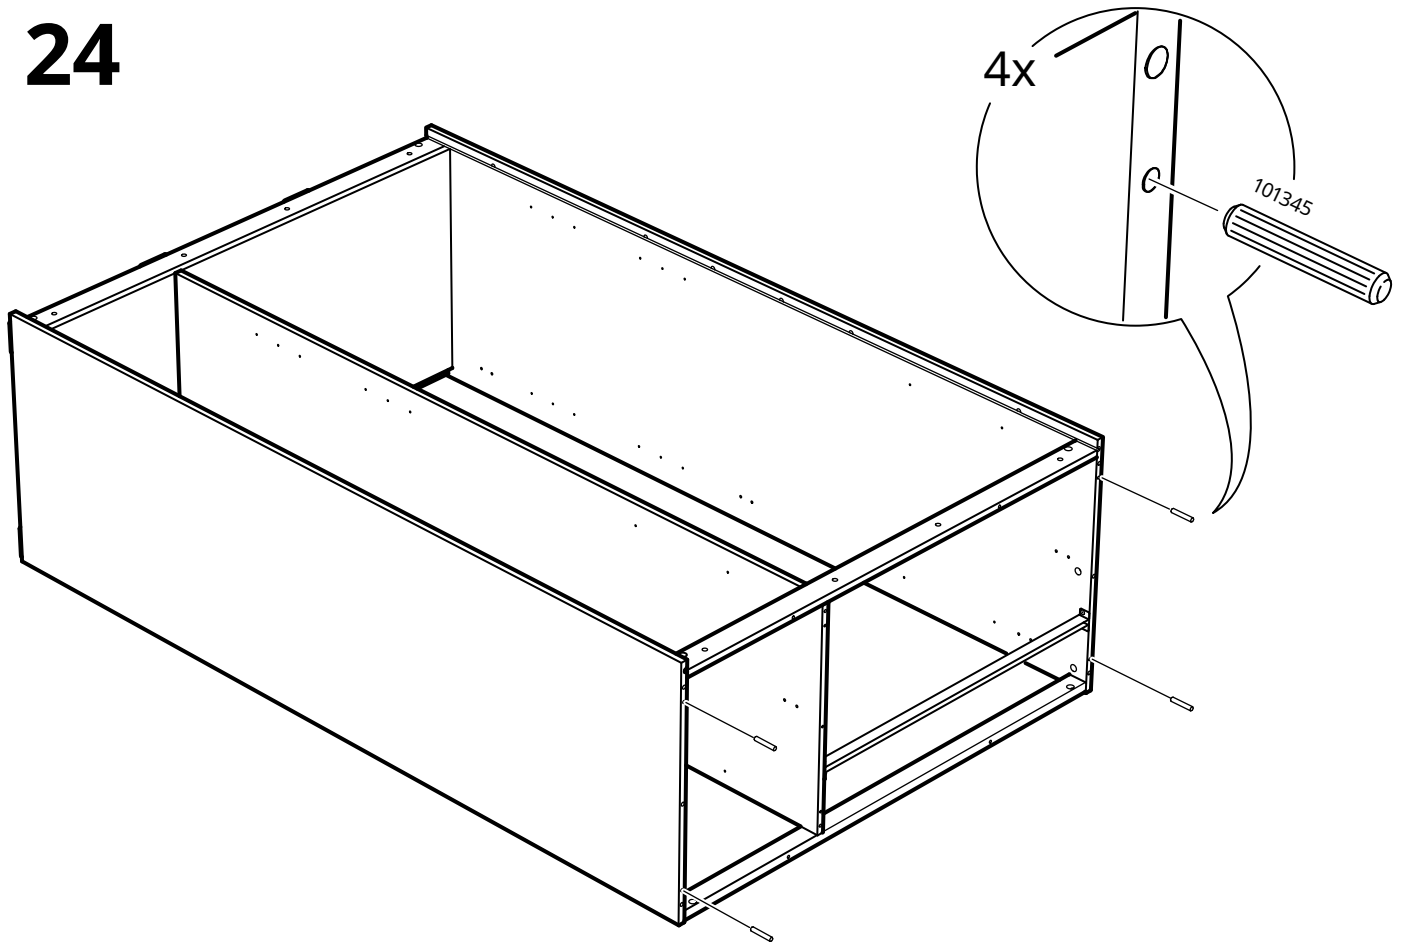 


25

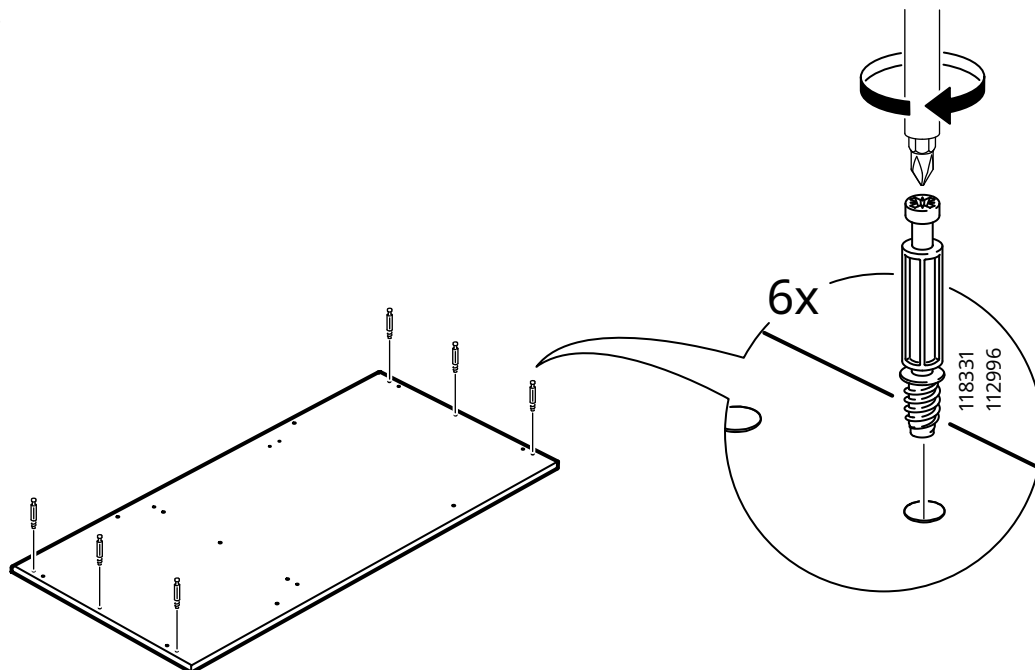 


26





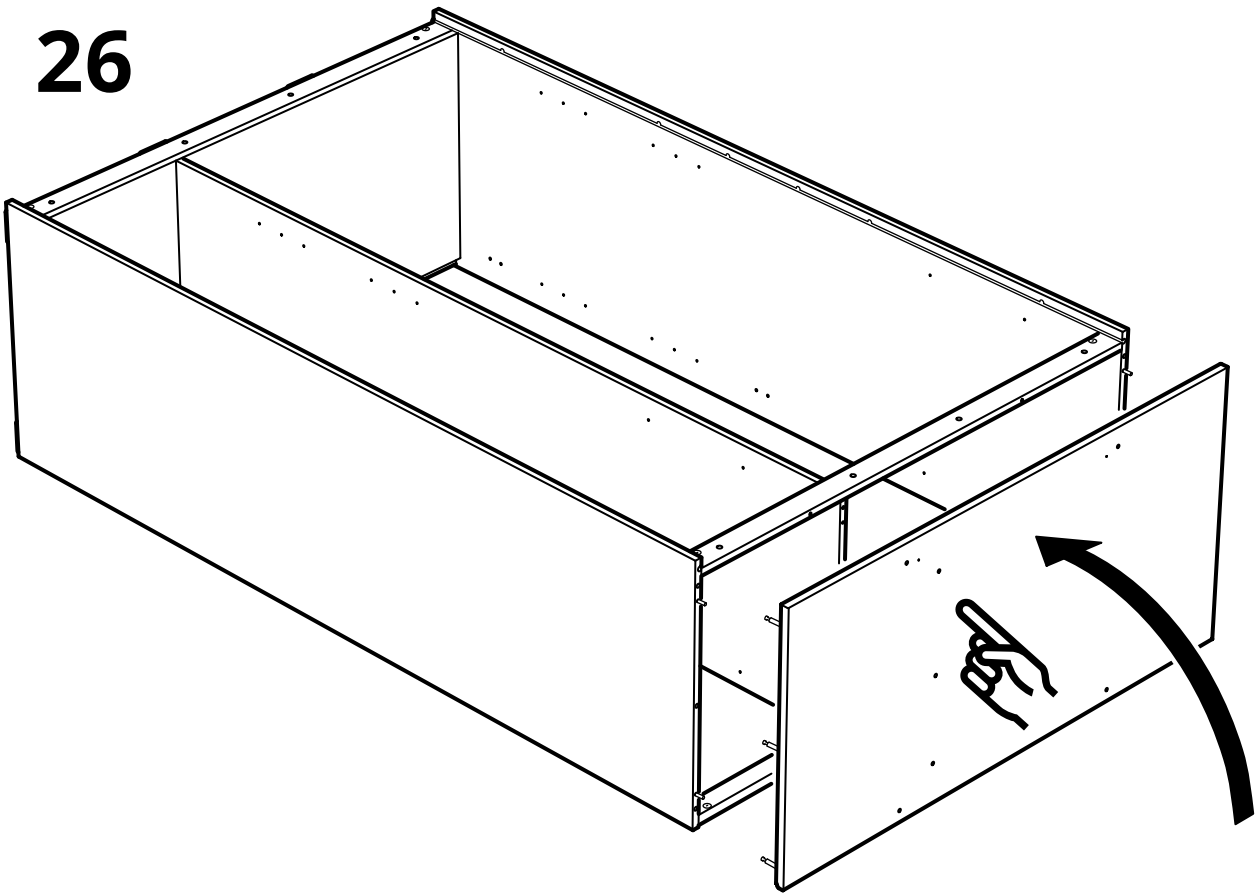 


27


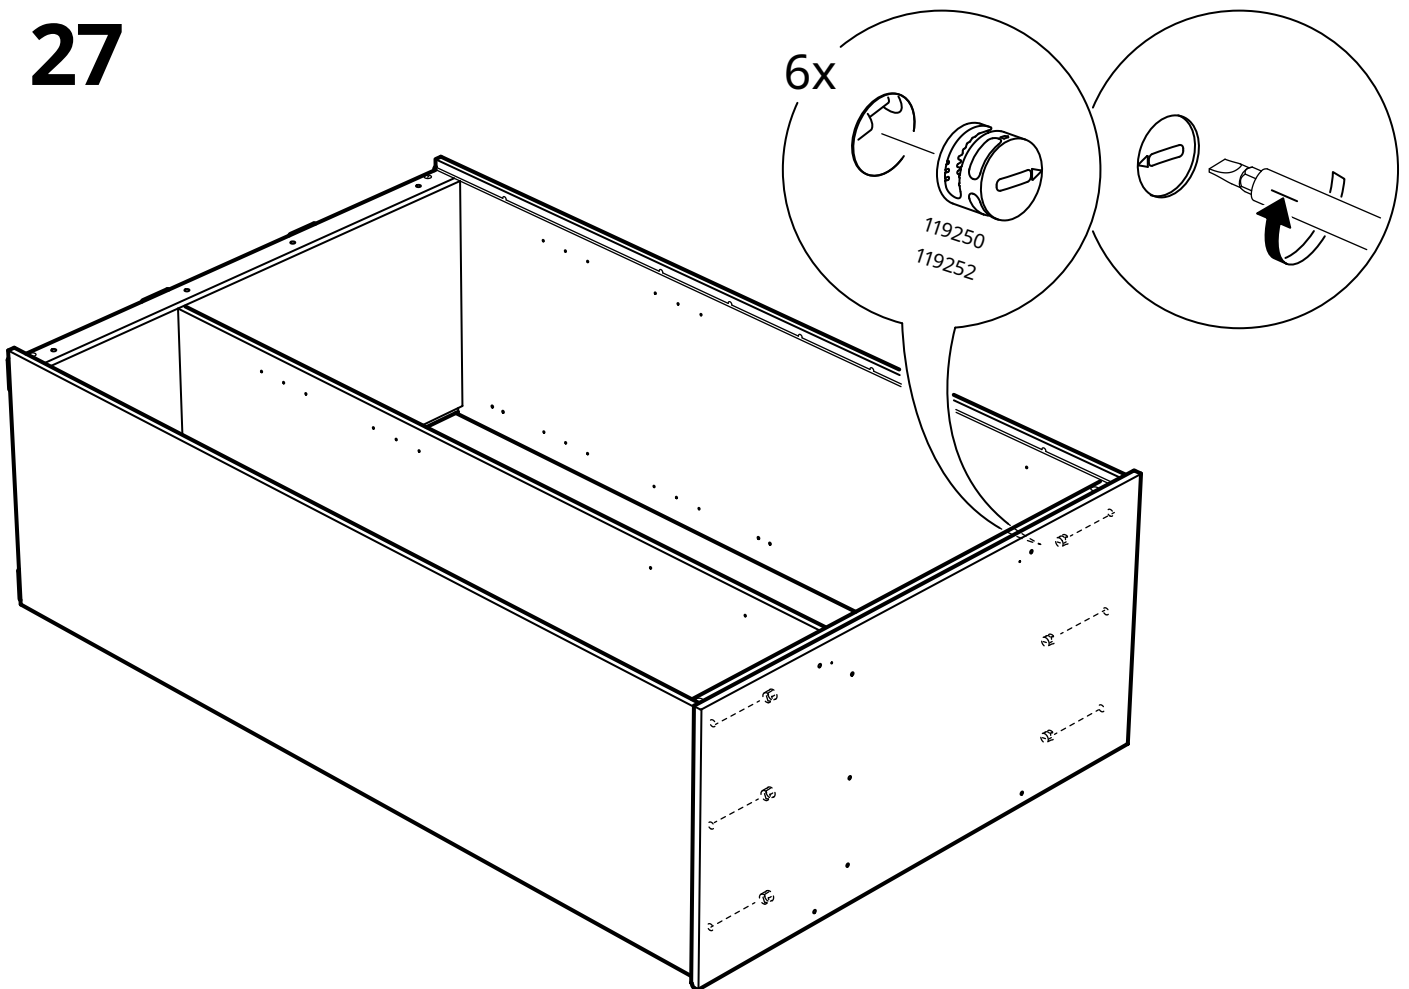 


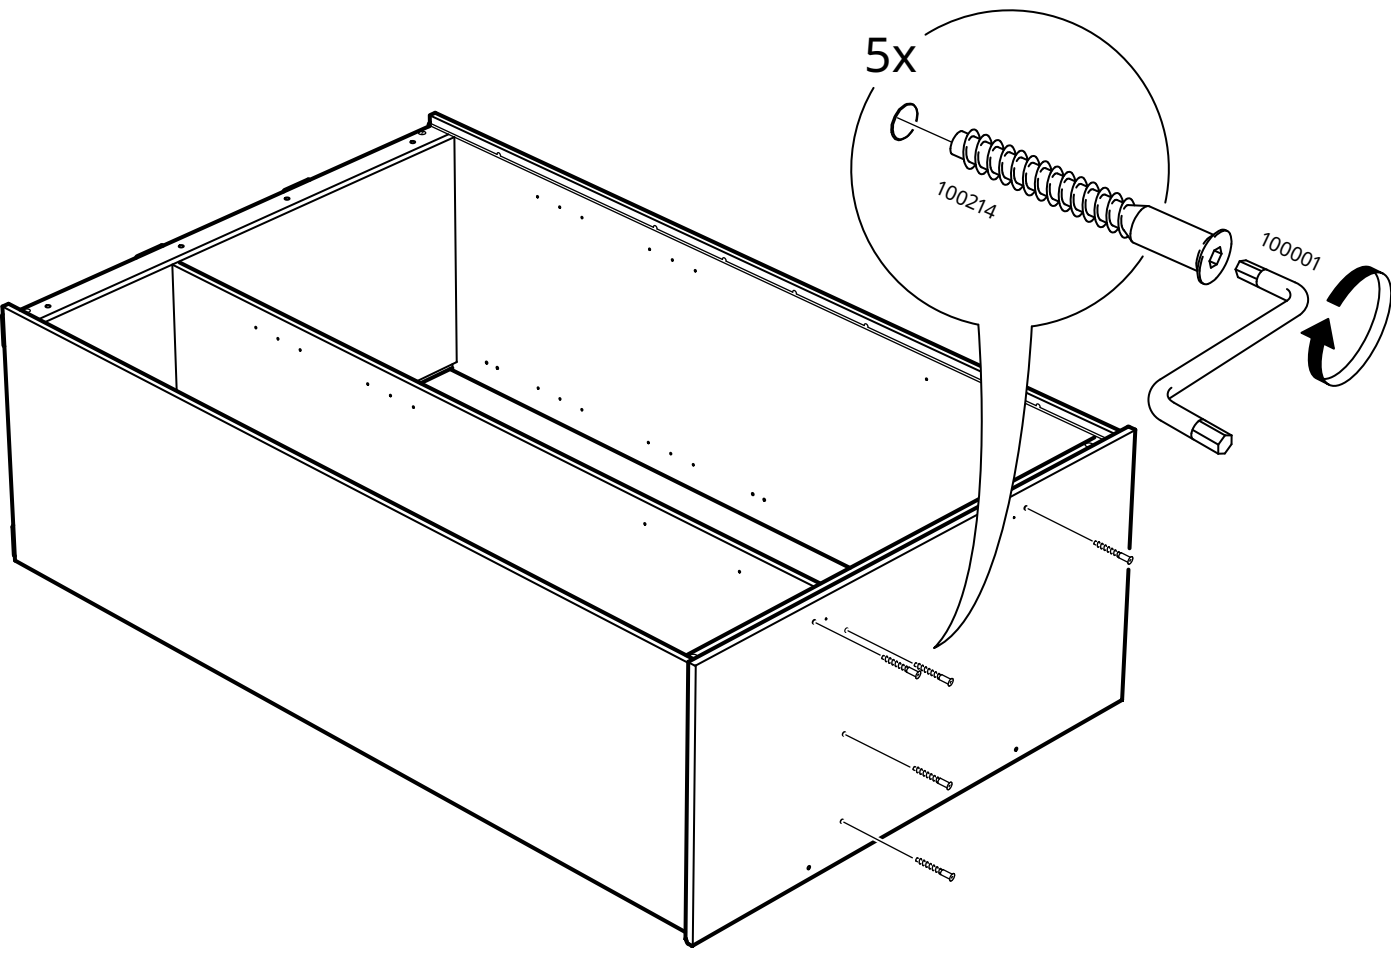 


29

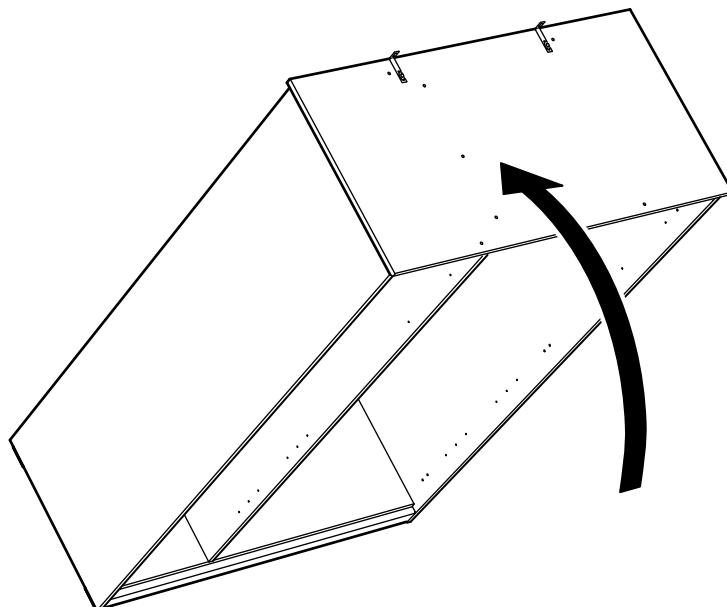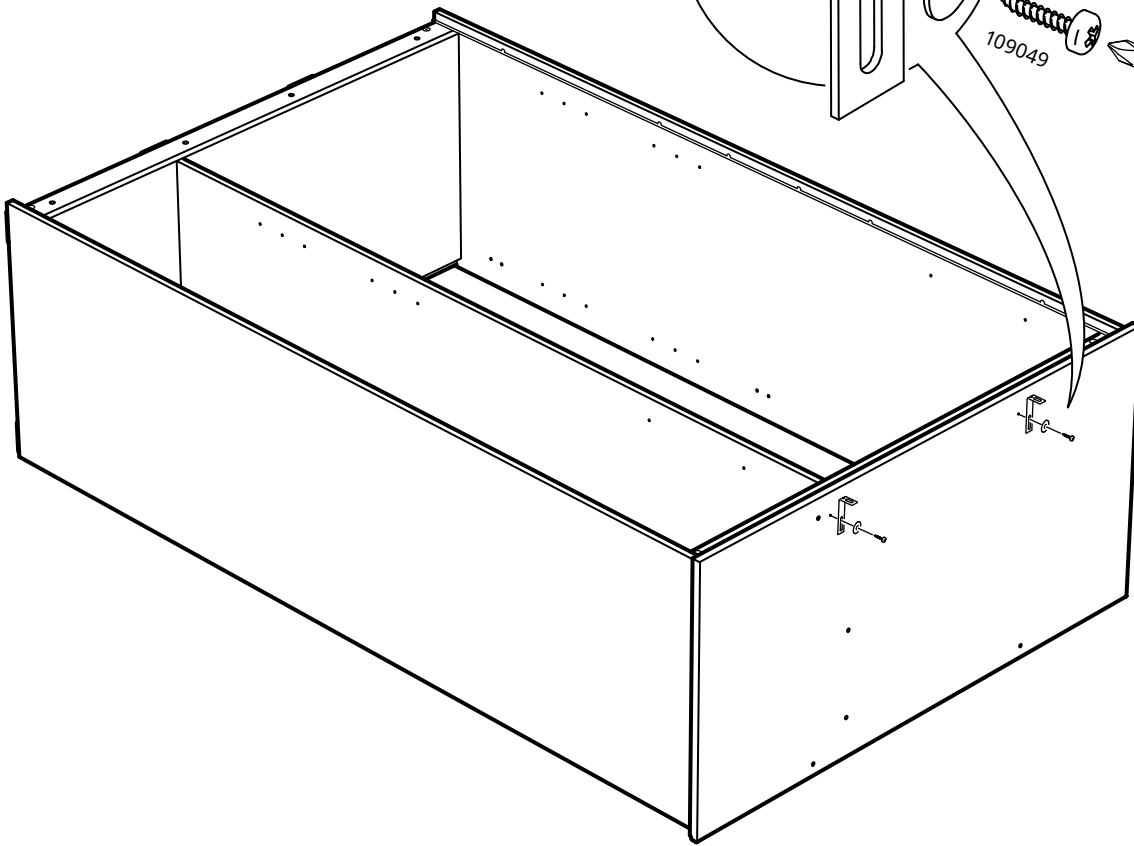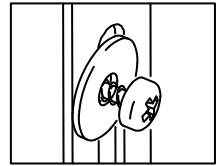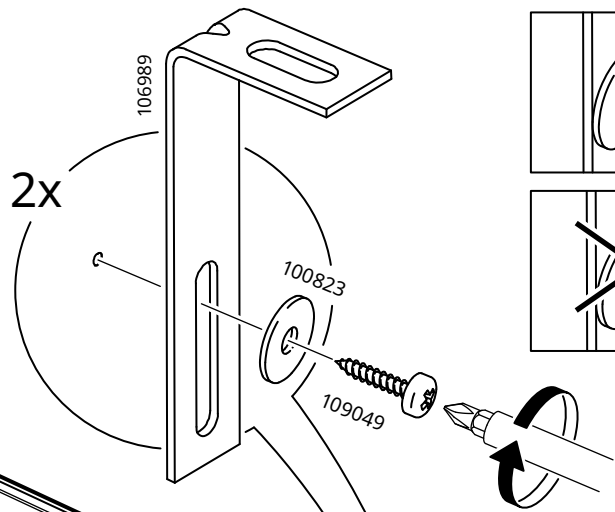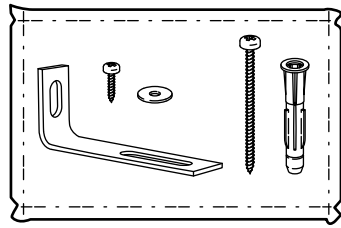     


30

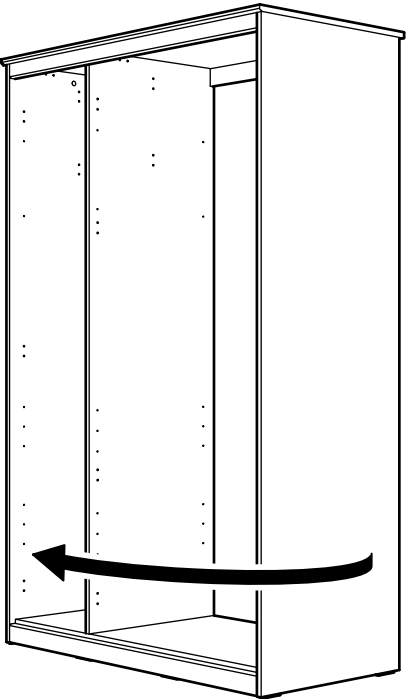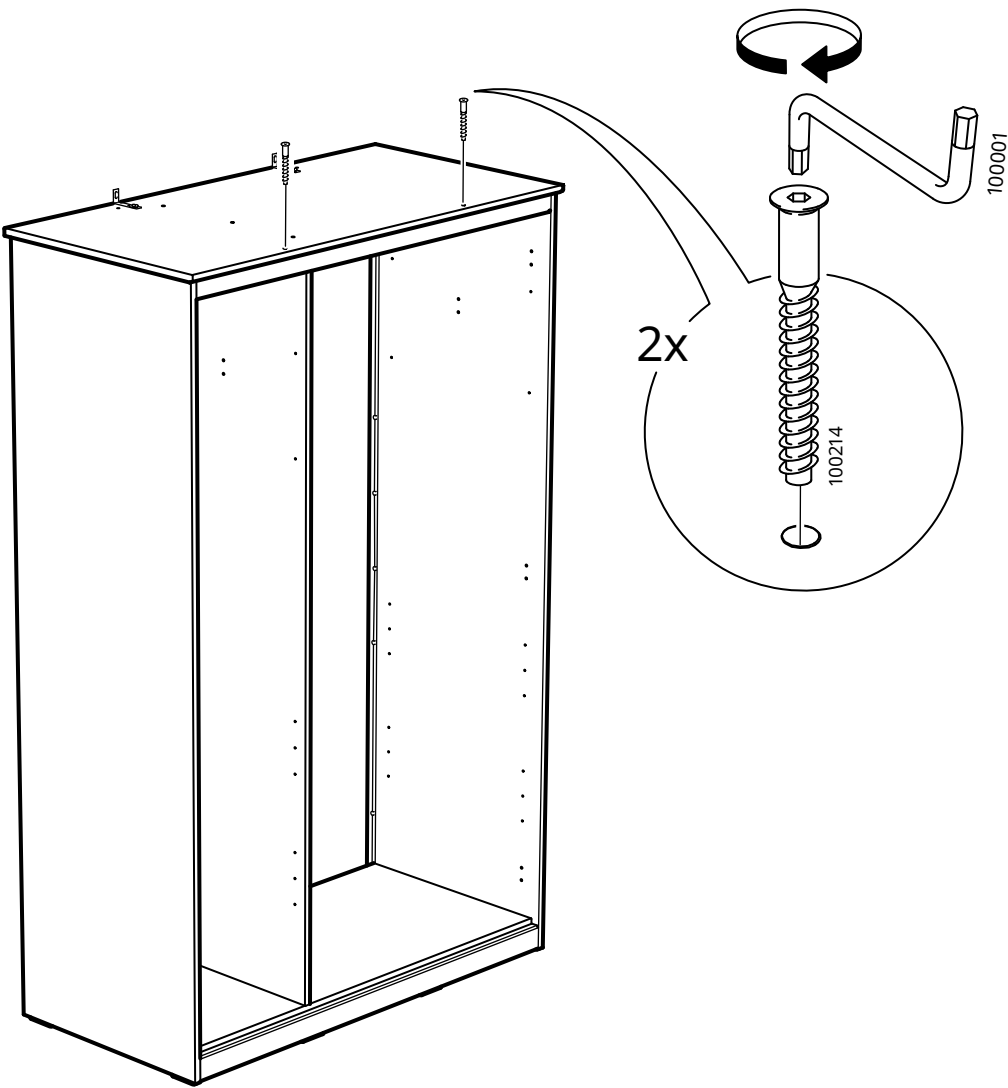  


31

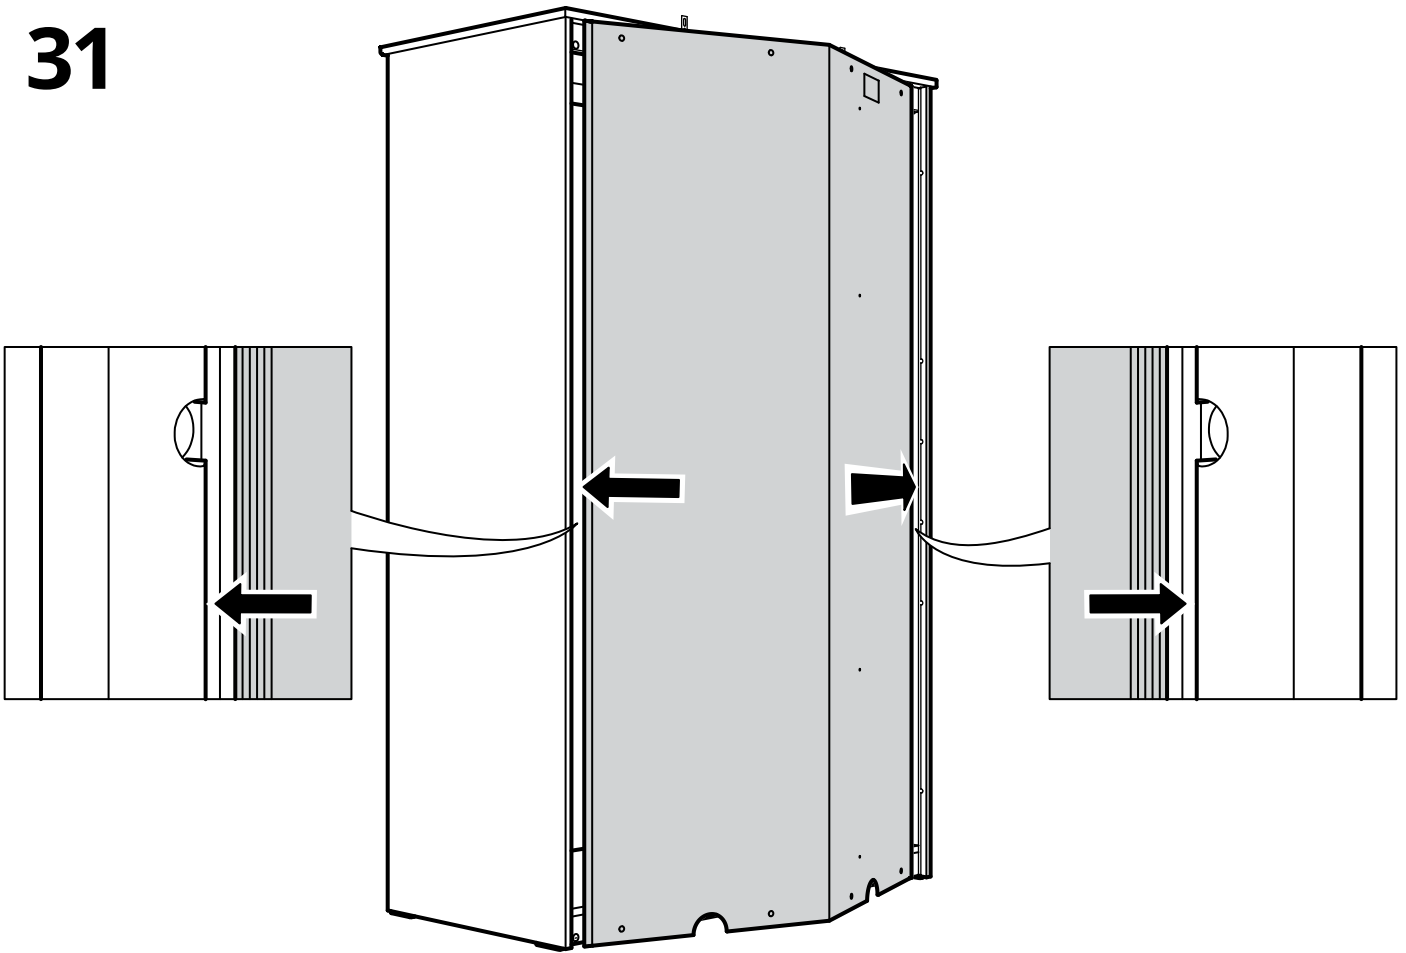 


32

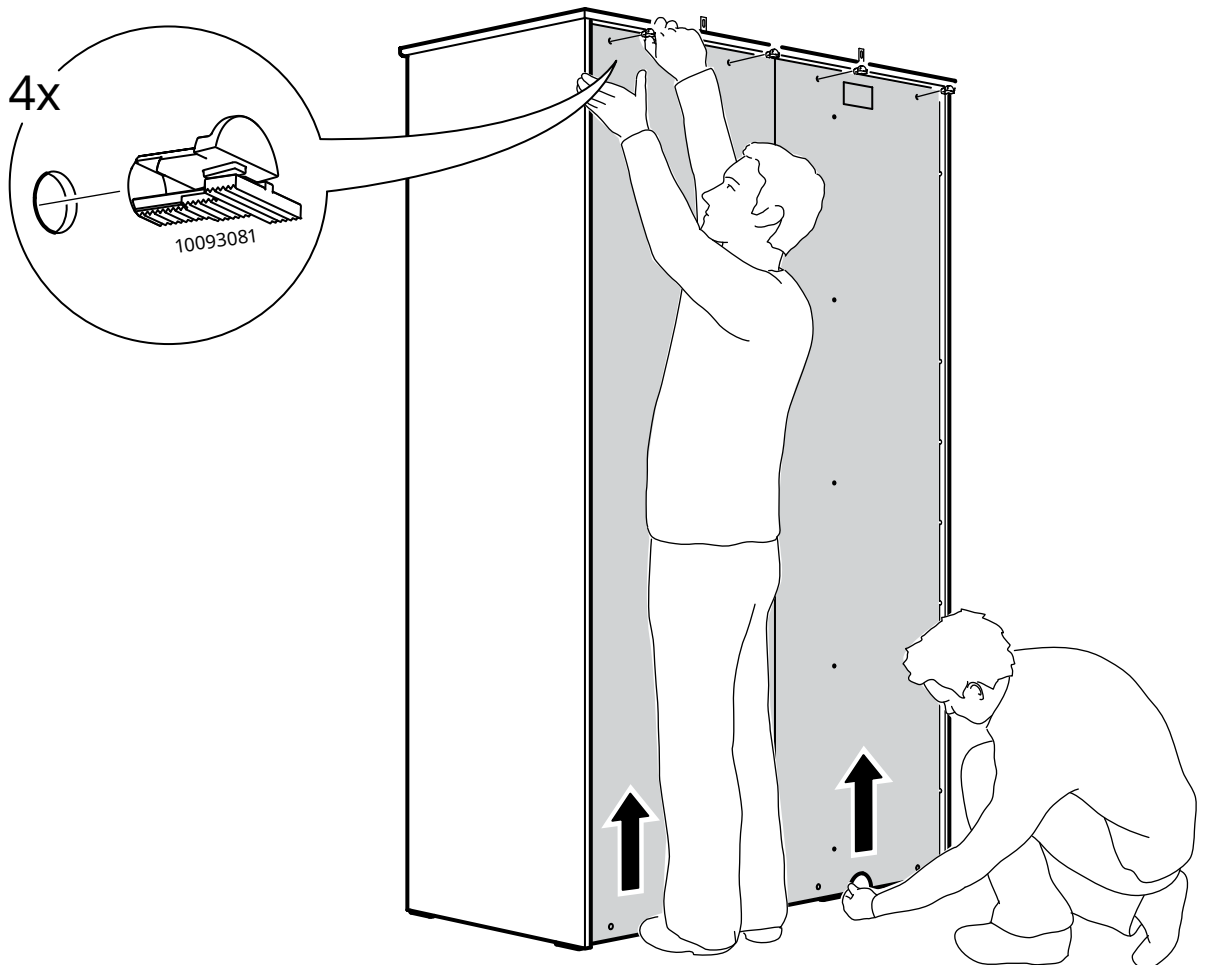 



33


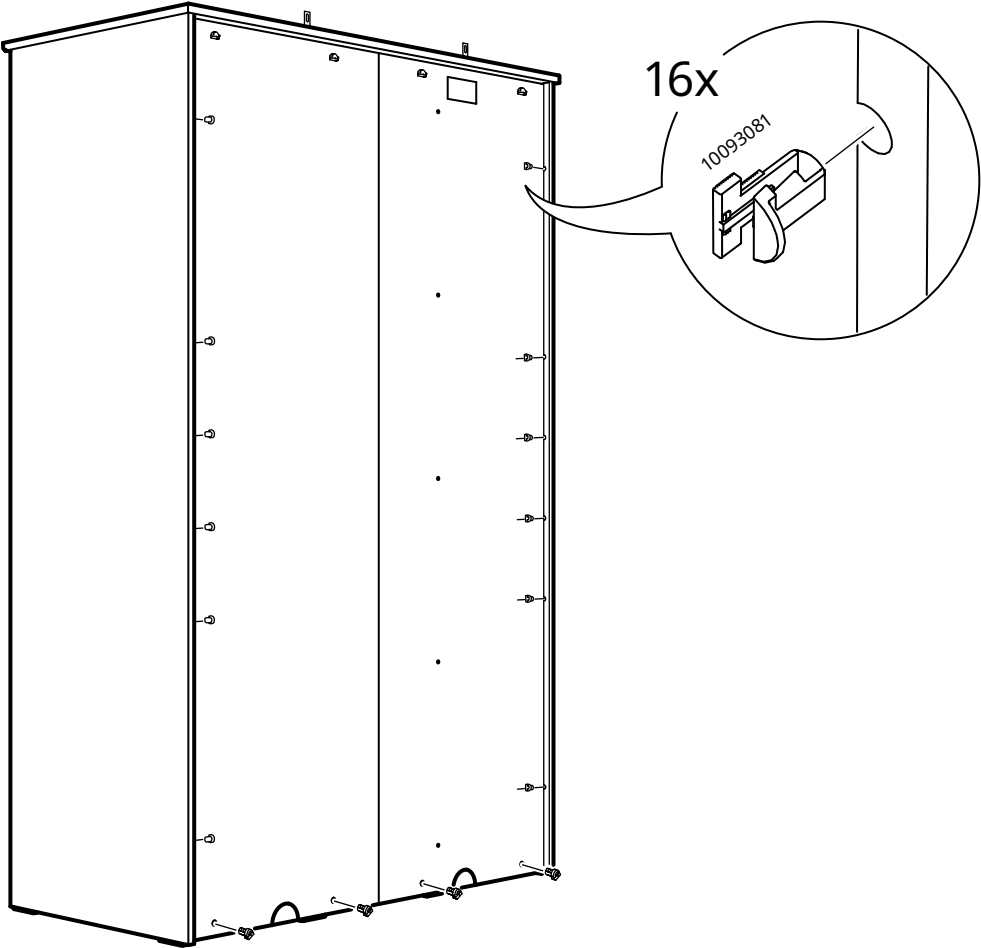 


34

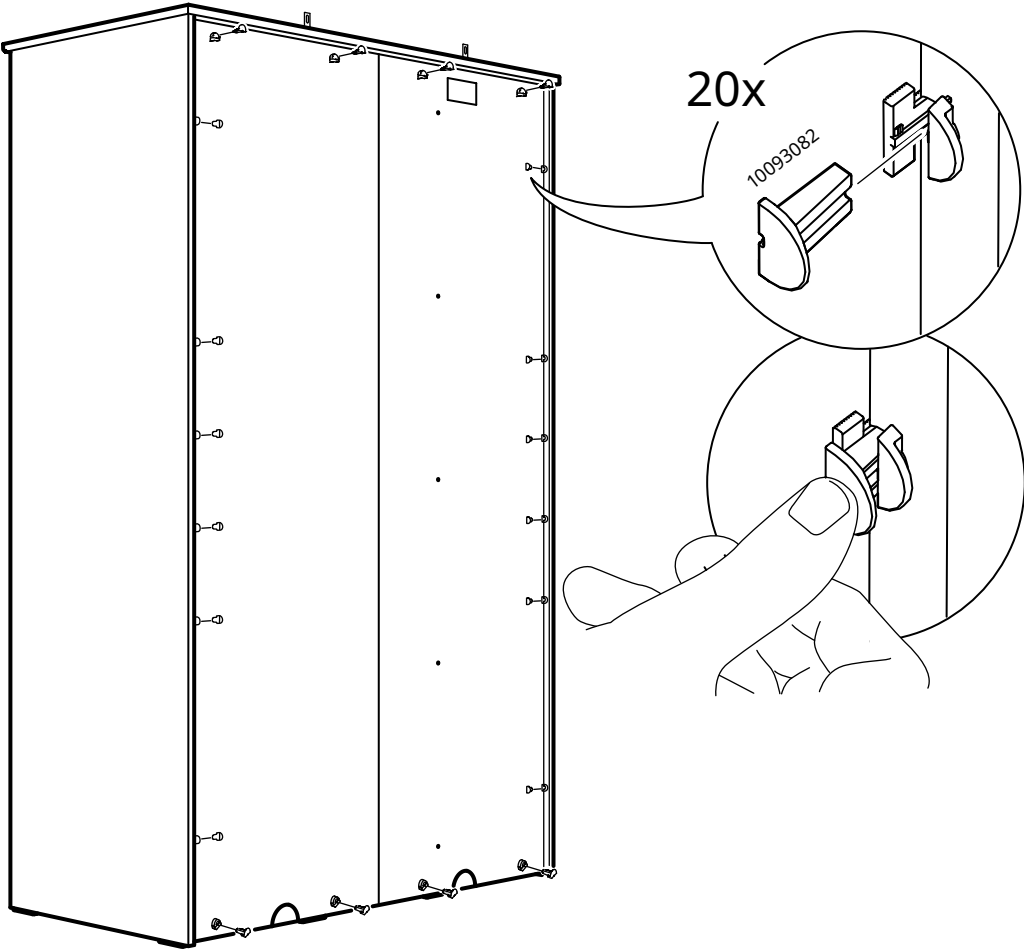 


35

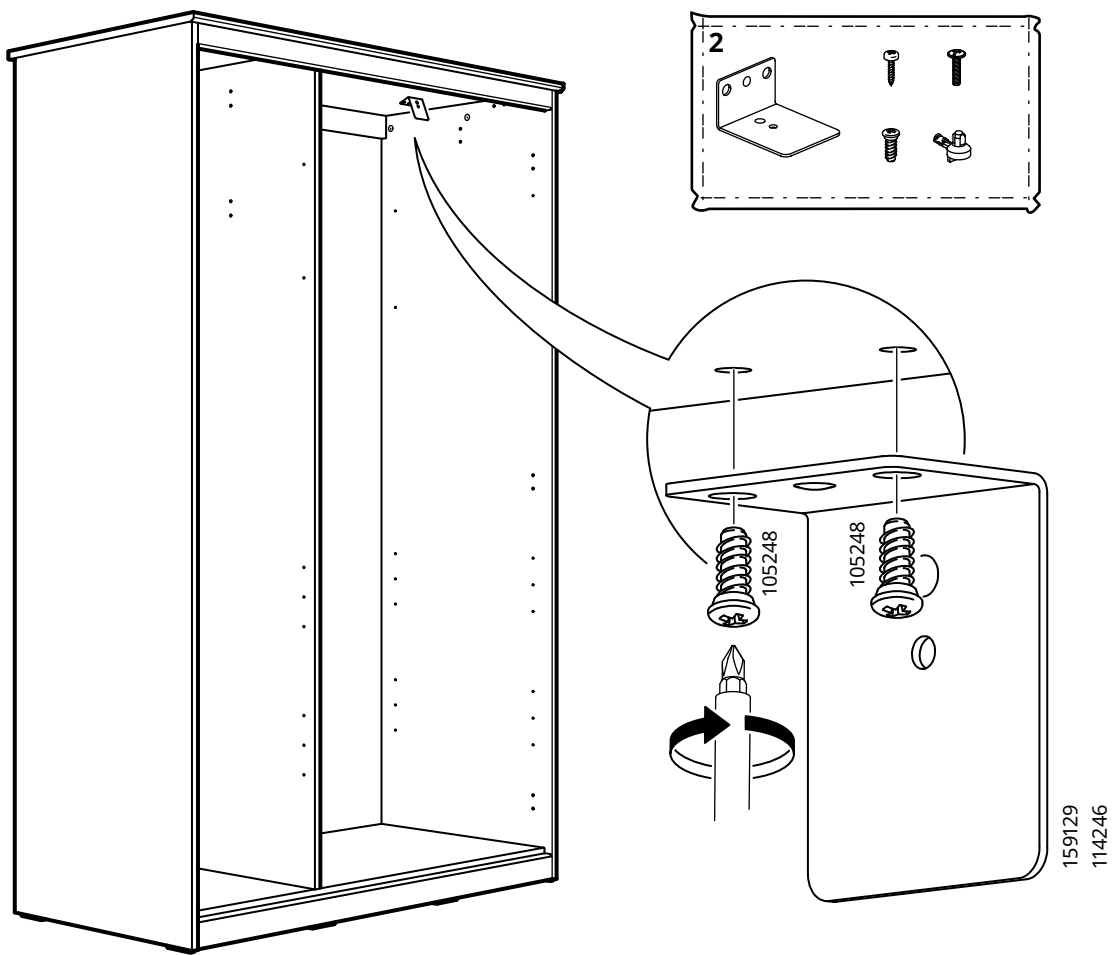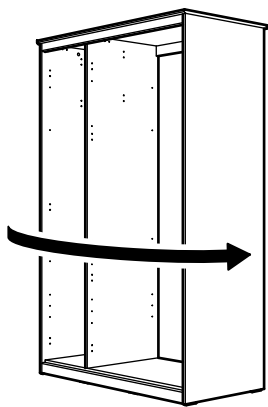  

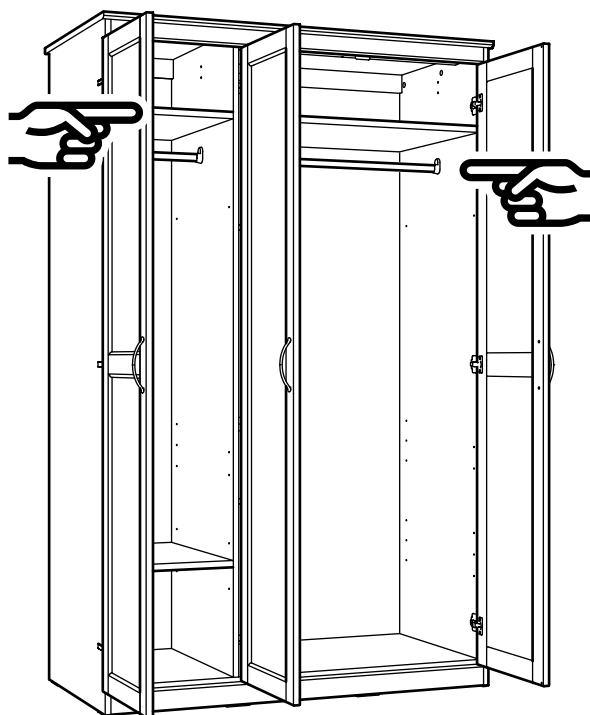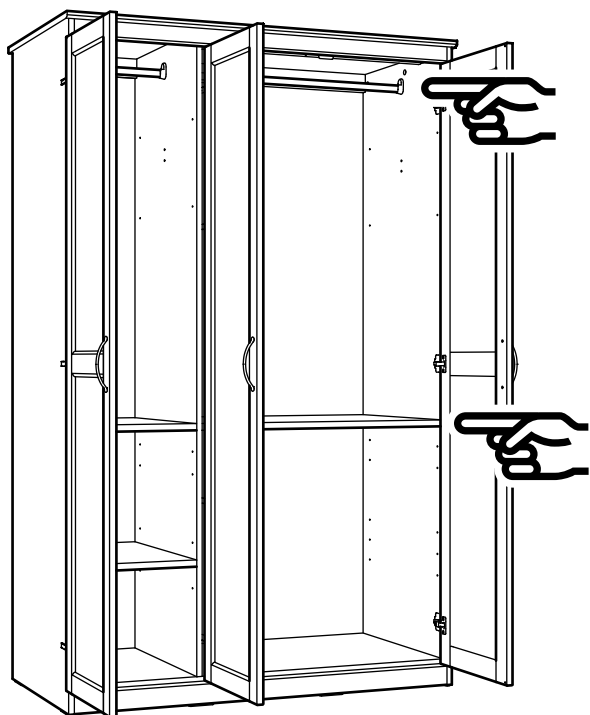  


36


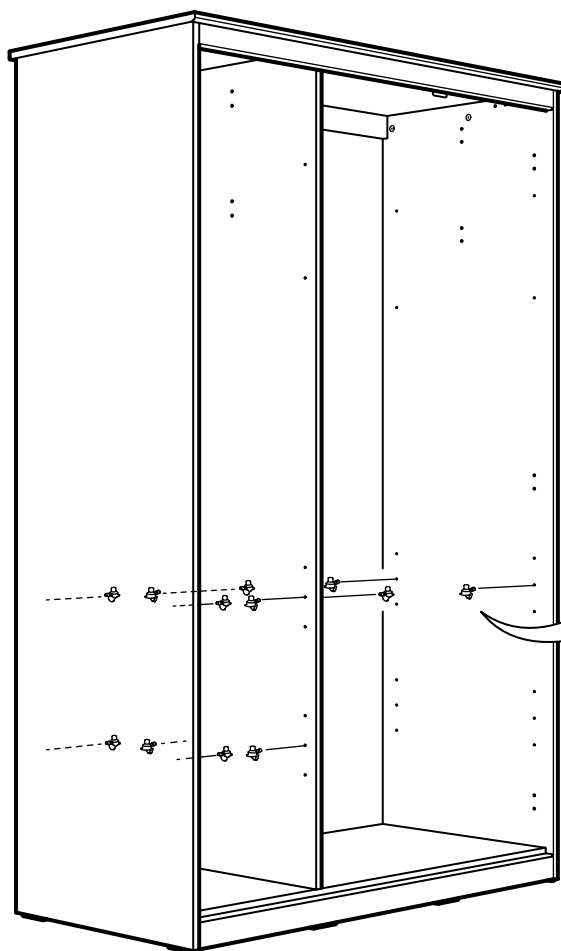 


12x


 
131372






37

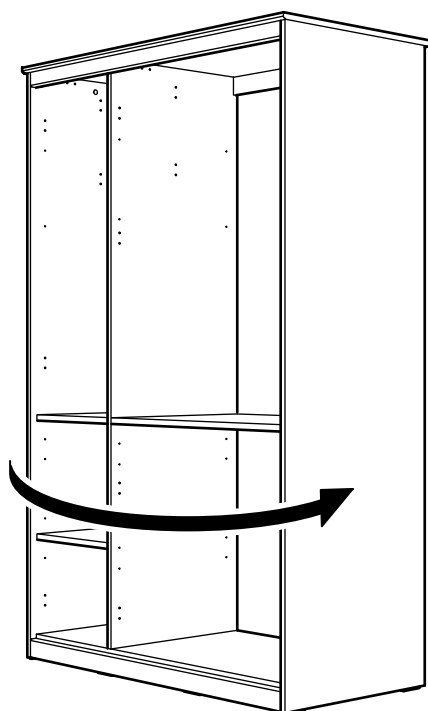 
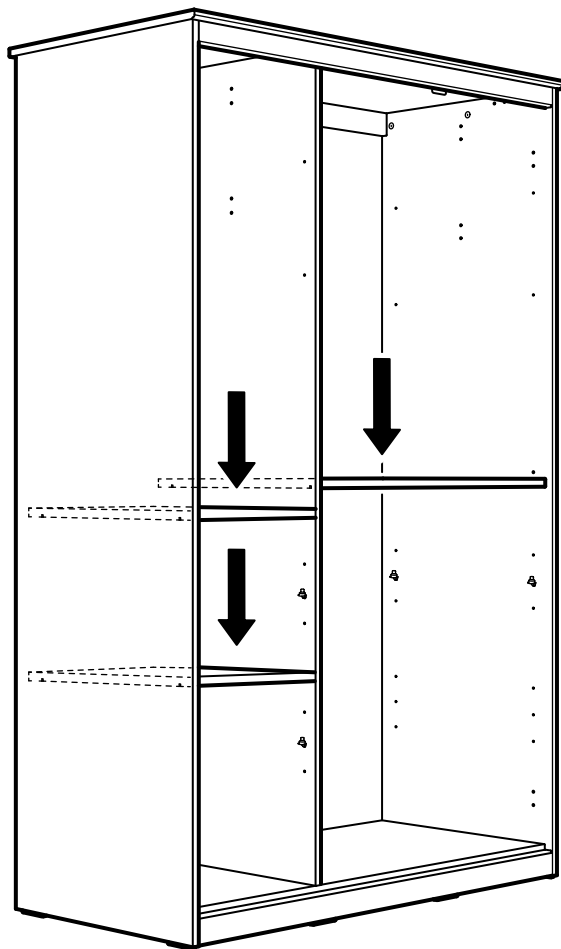 


38

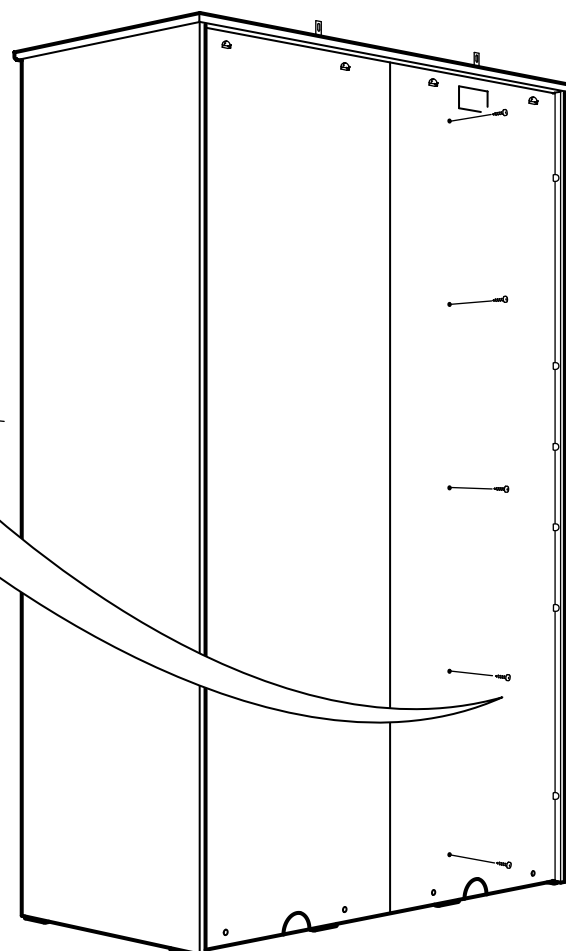 
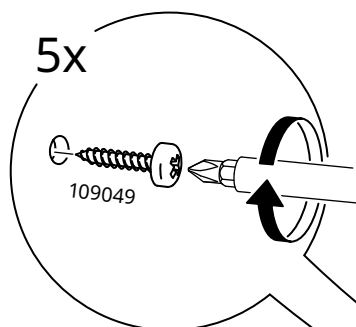 


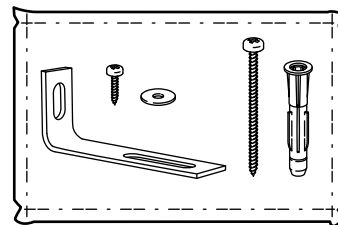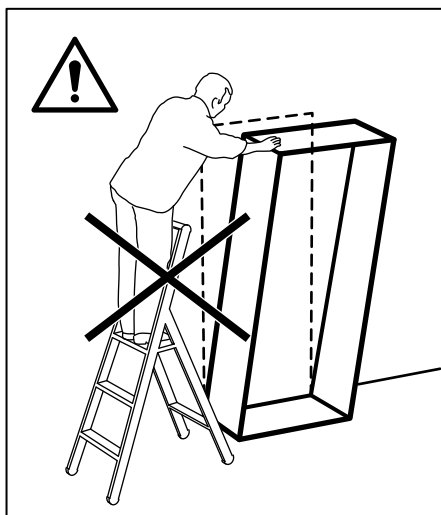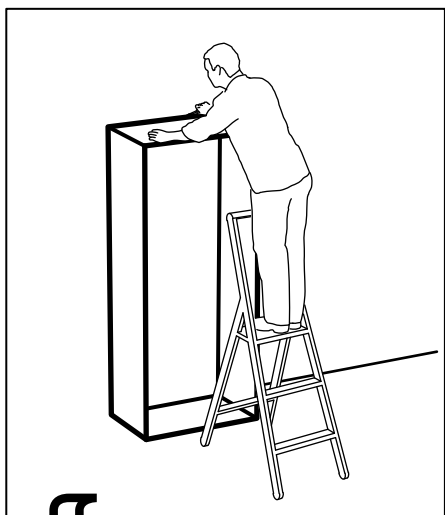   

39

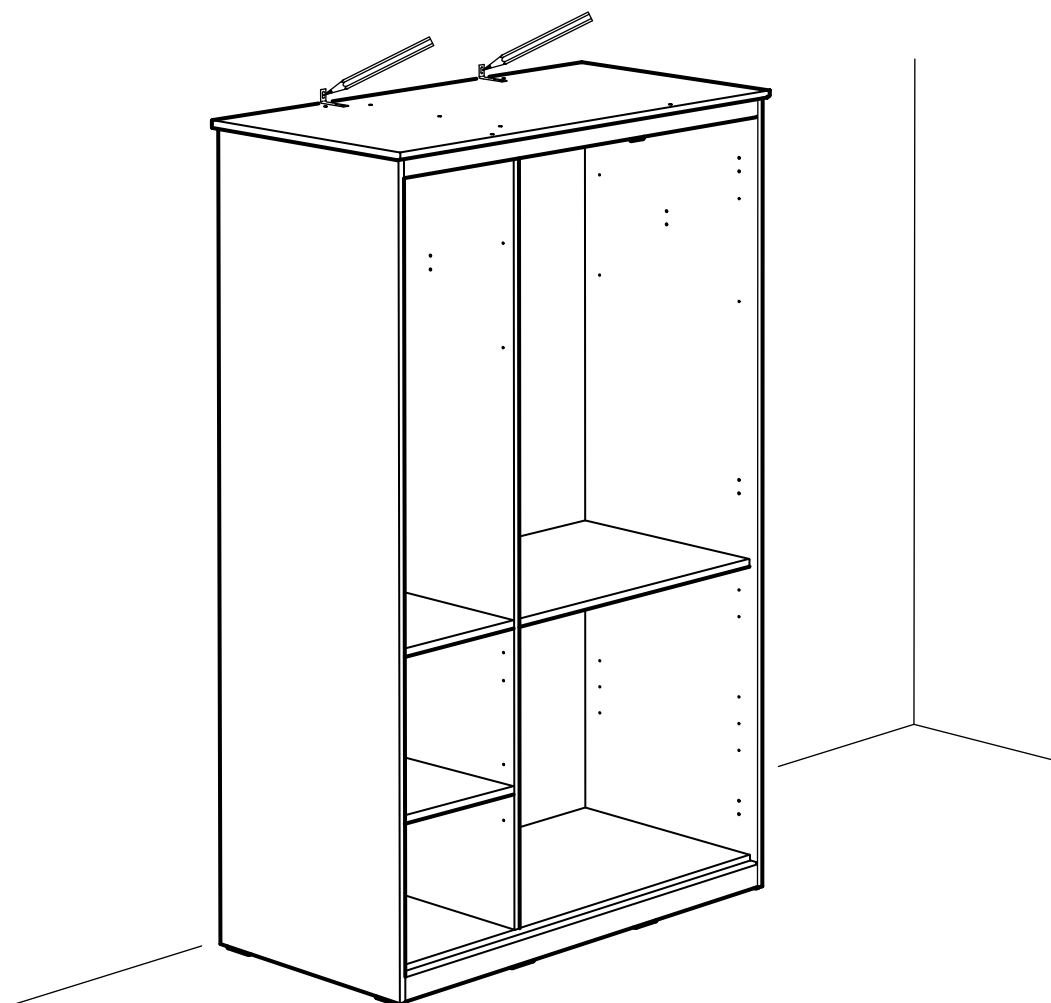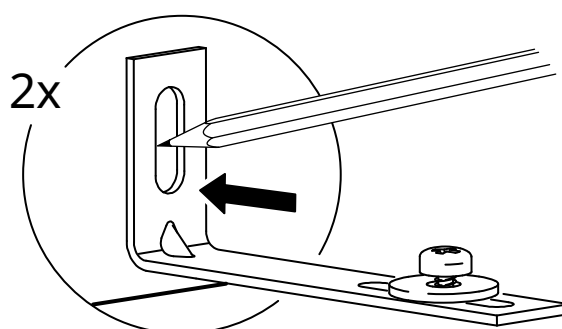  

40

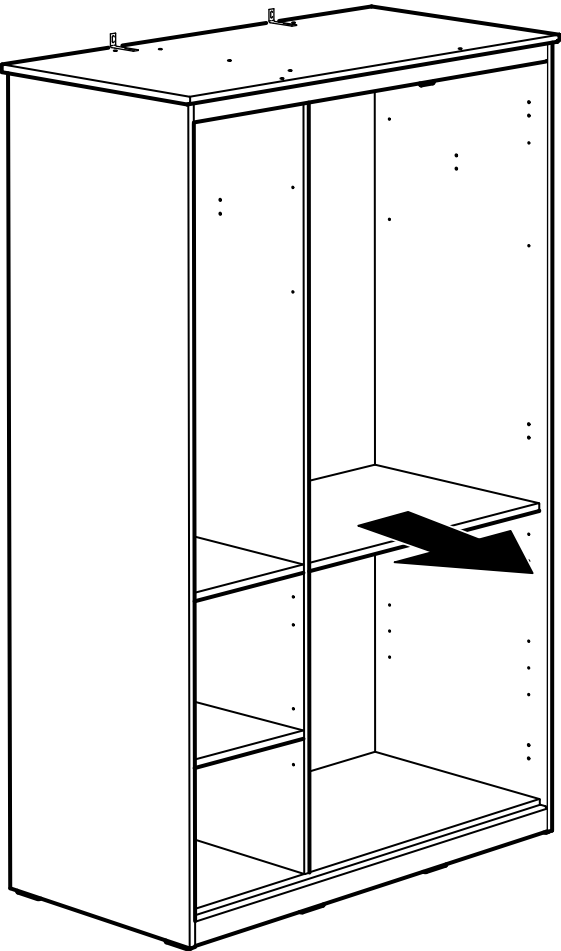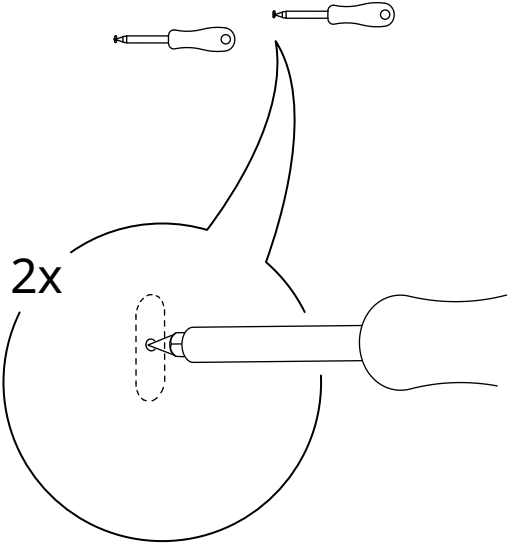  




www.IKEA.com/secure-it





 
www.IKEA.cn/secure-it

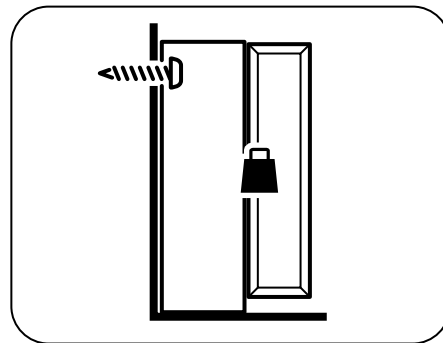


41

English

   
The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

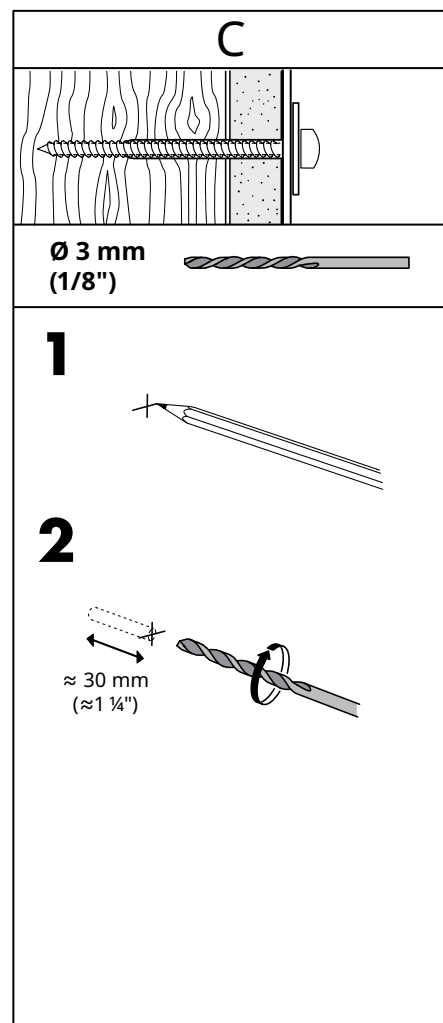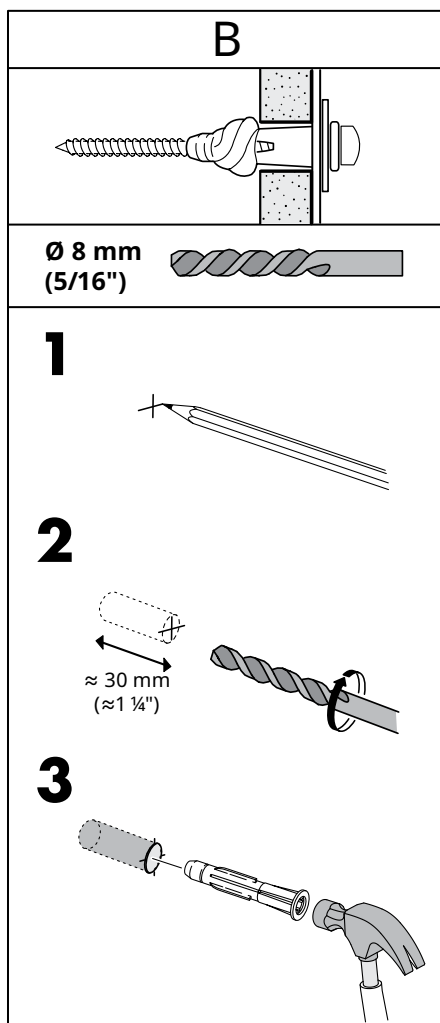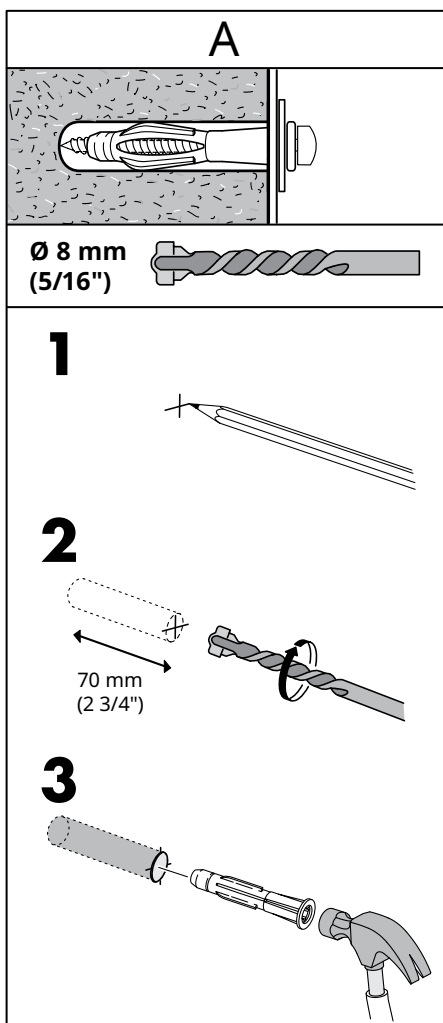


42

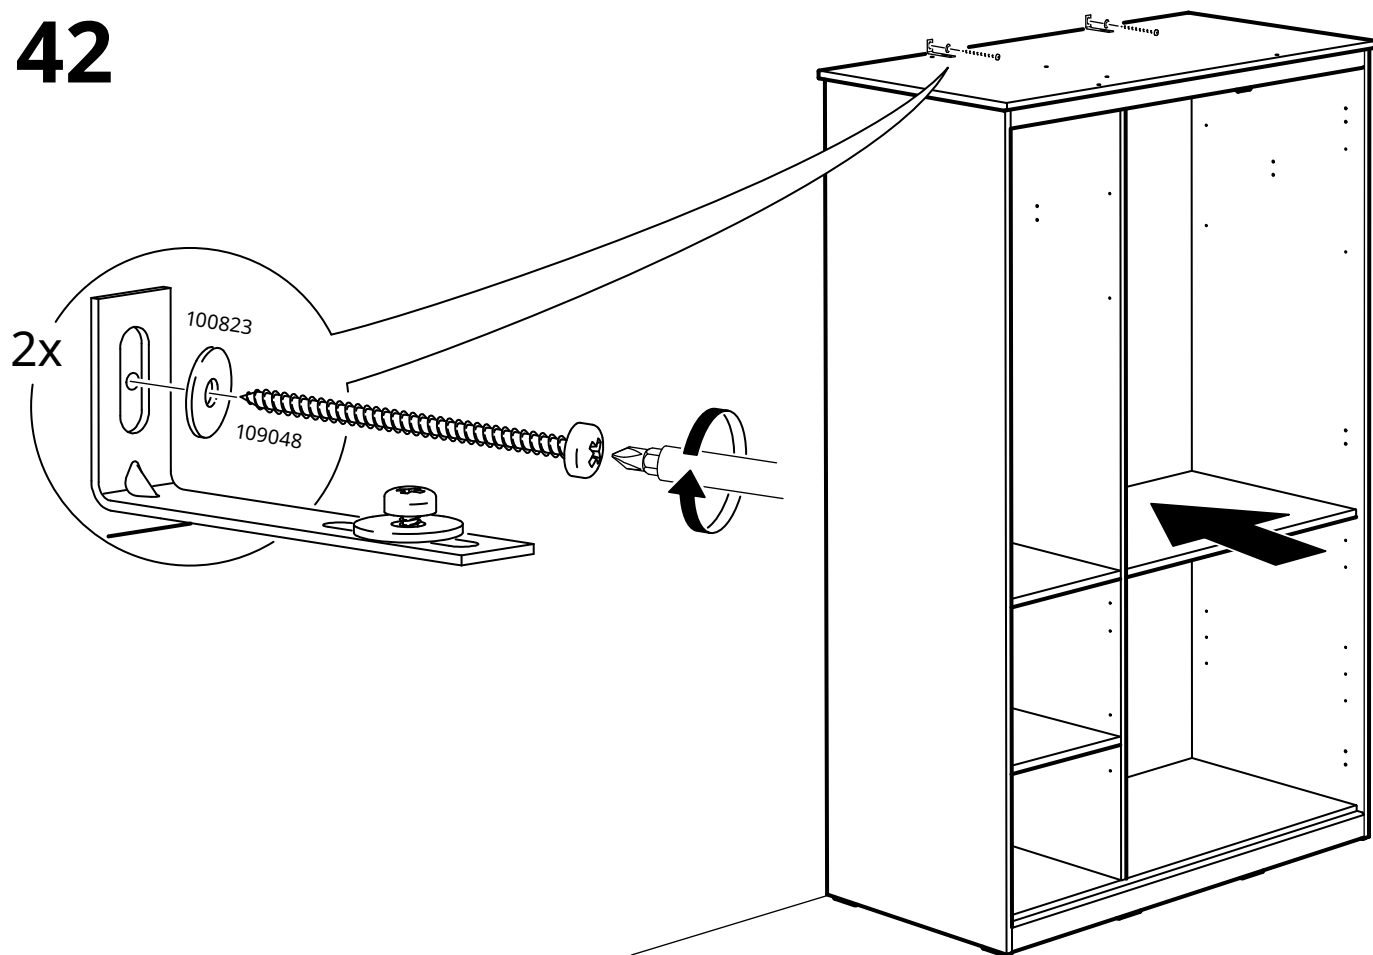 


43

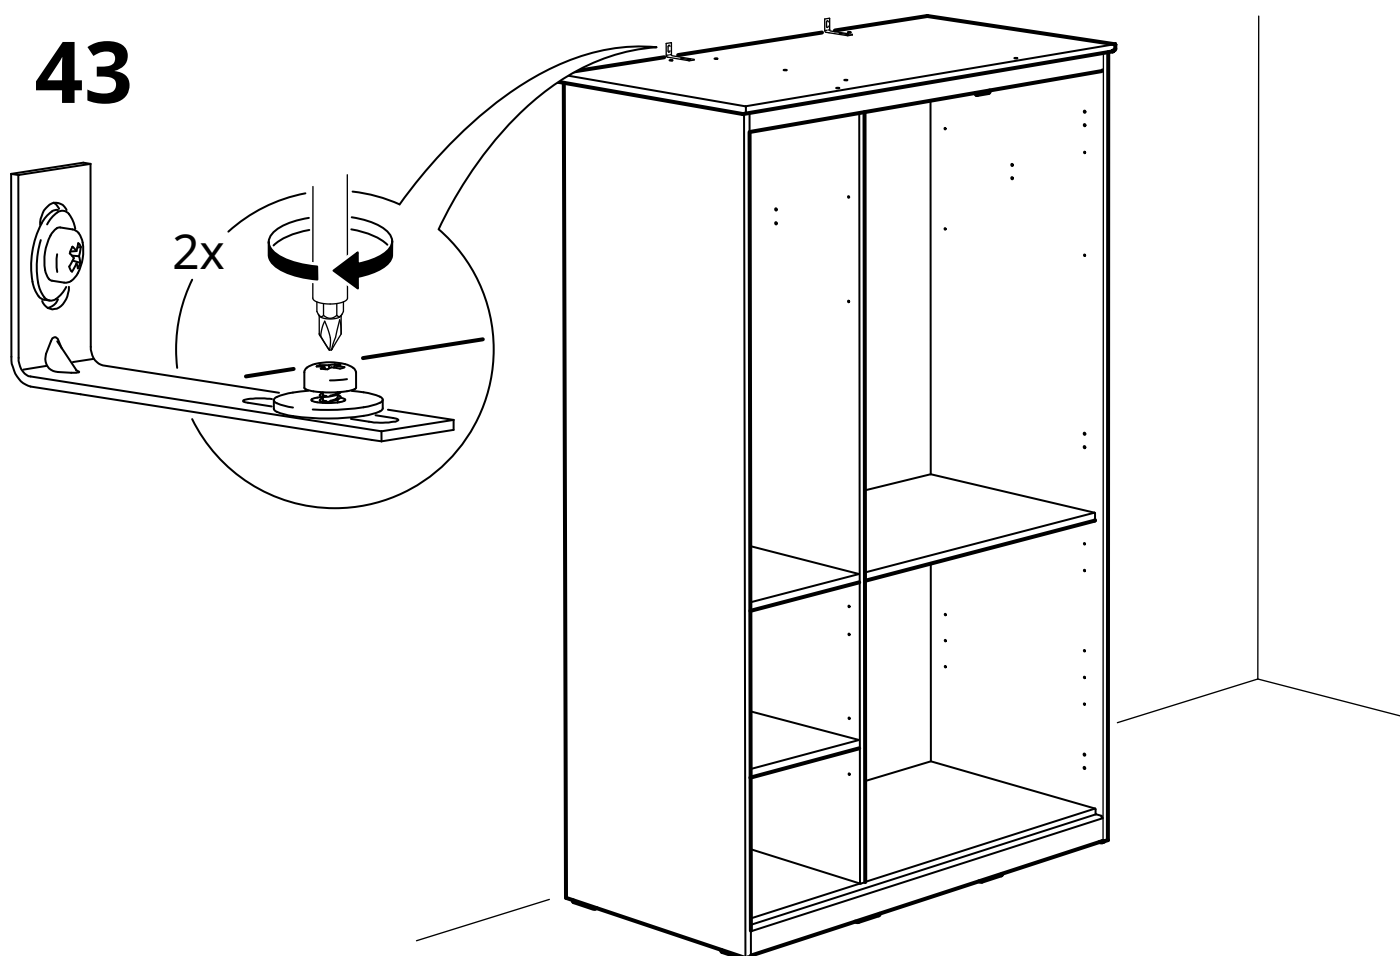 


44

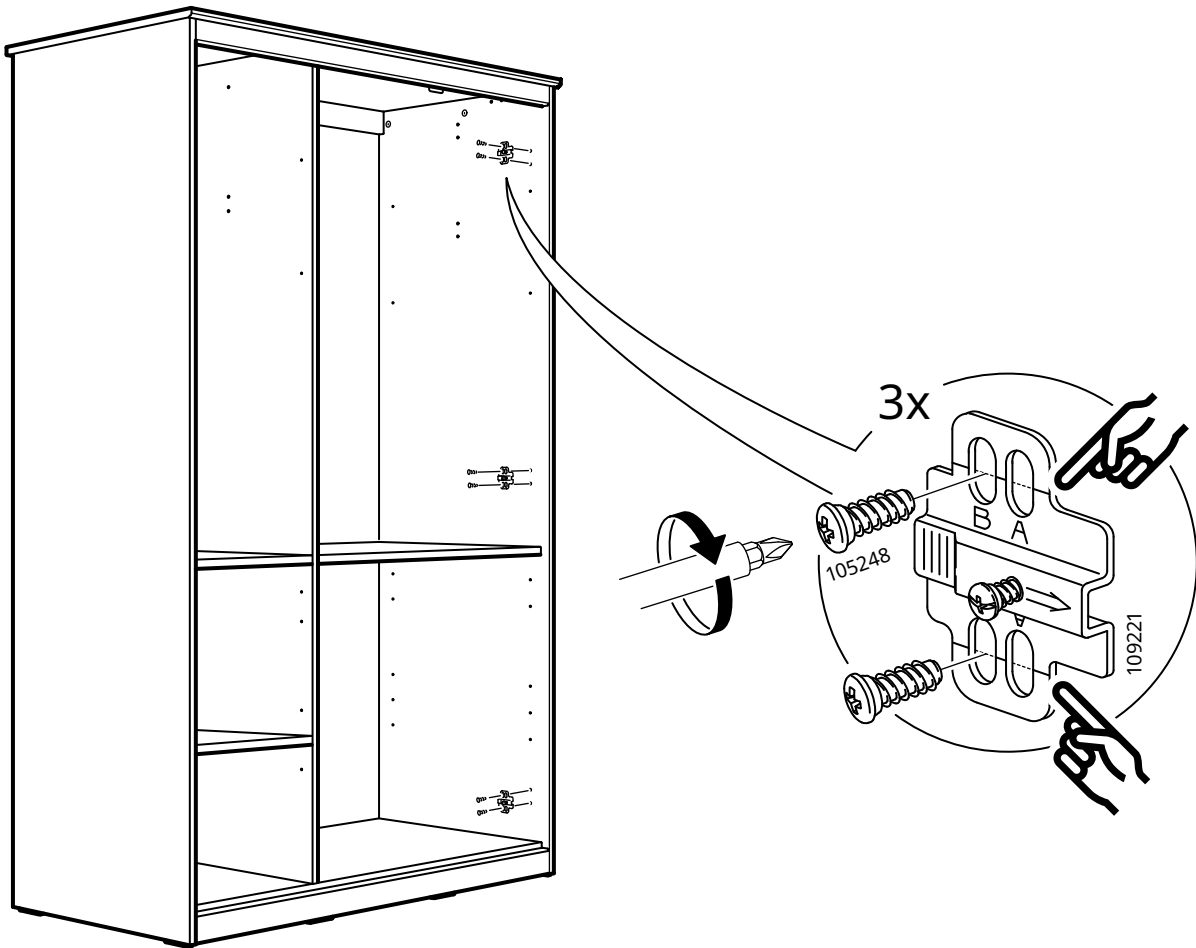 


45

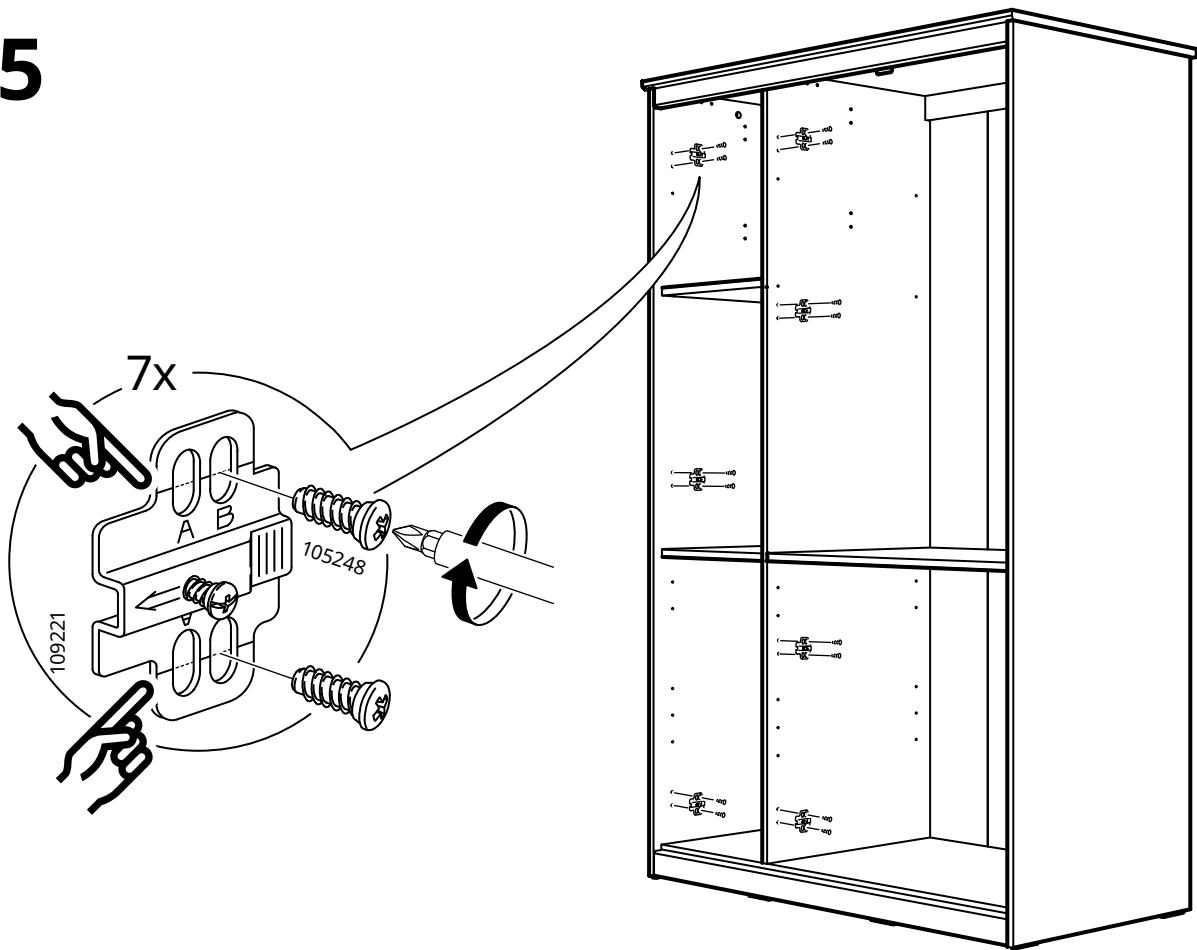 


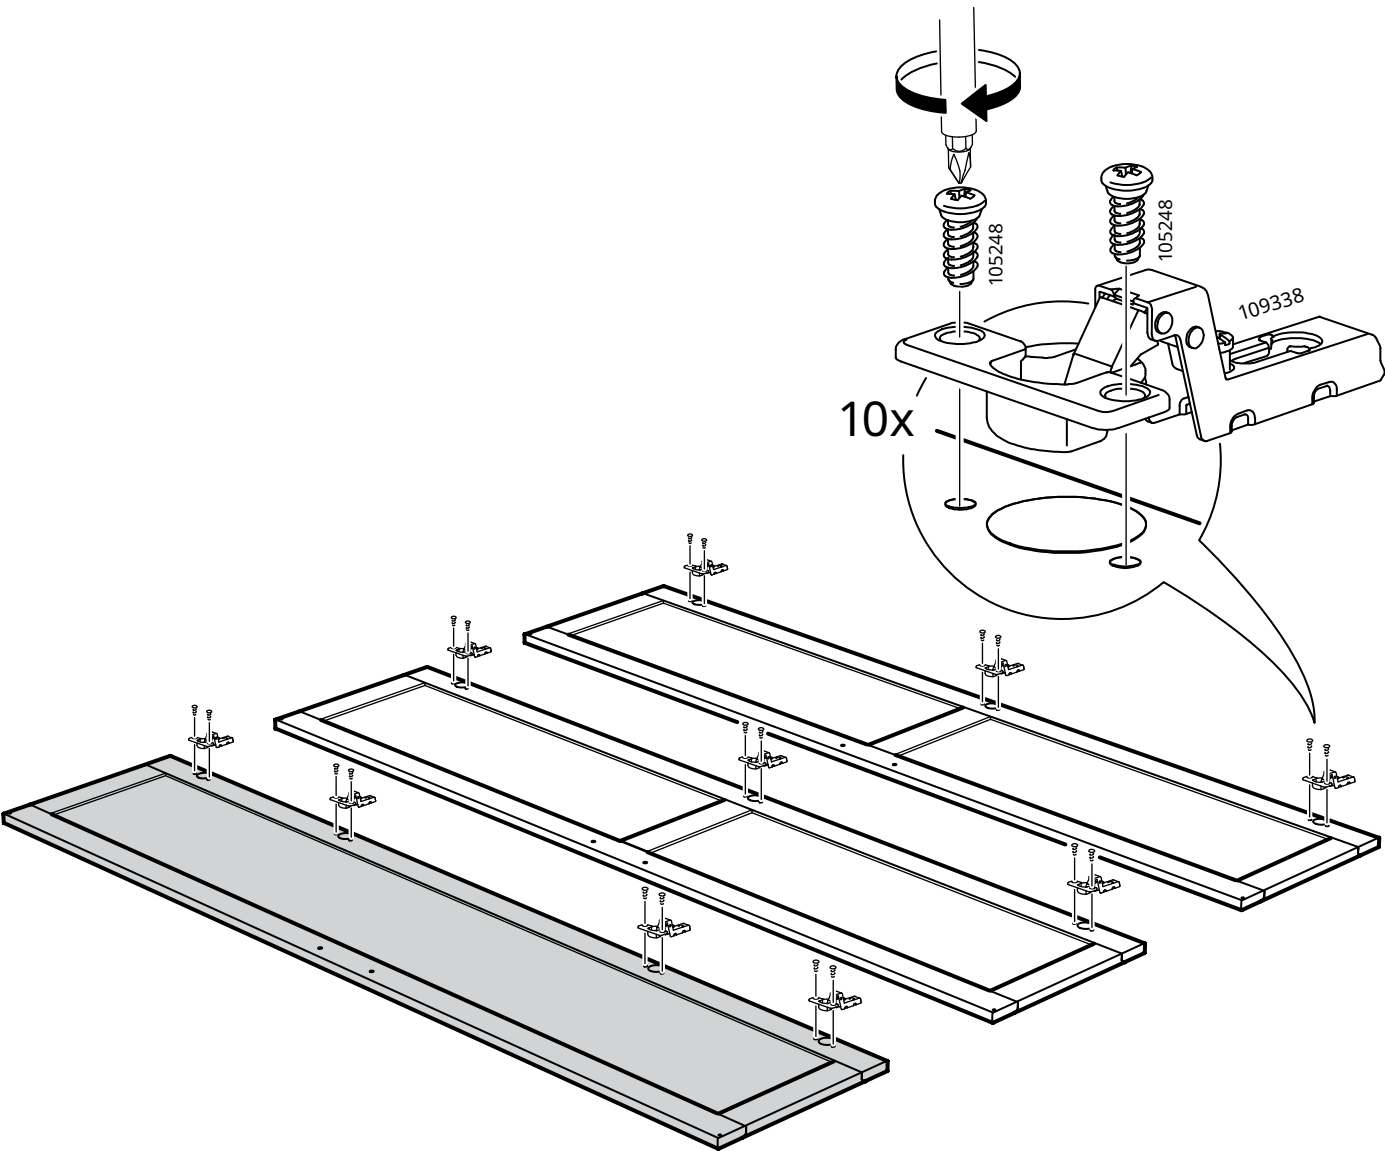 


47

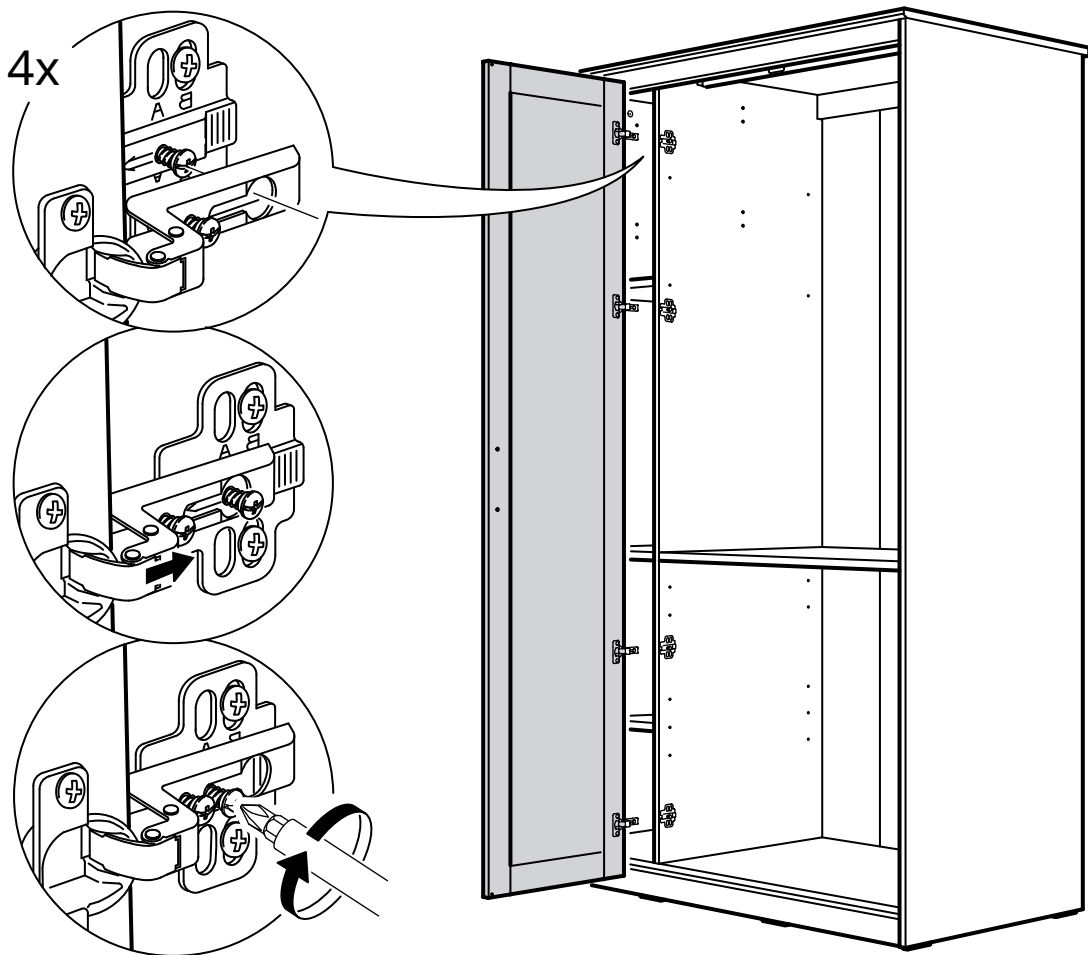 


48

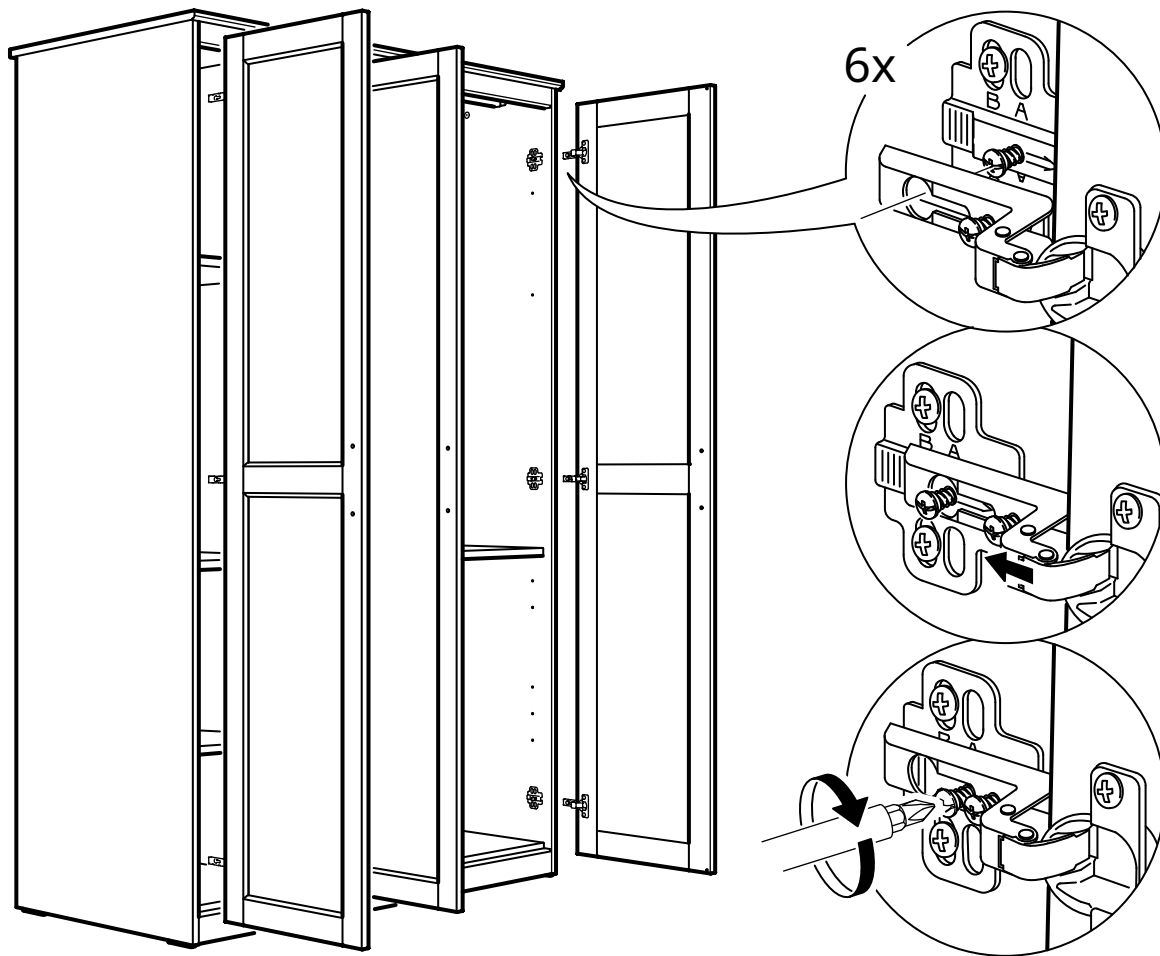 


49

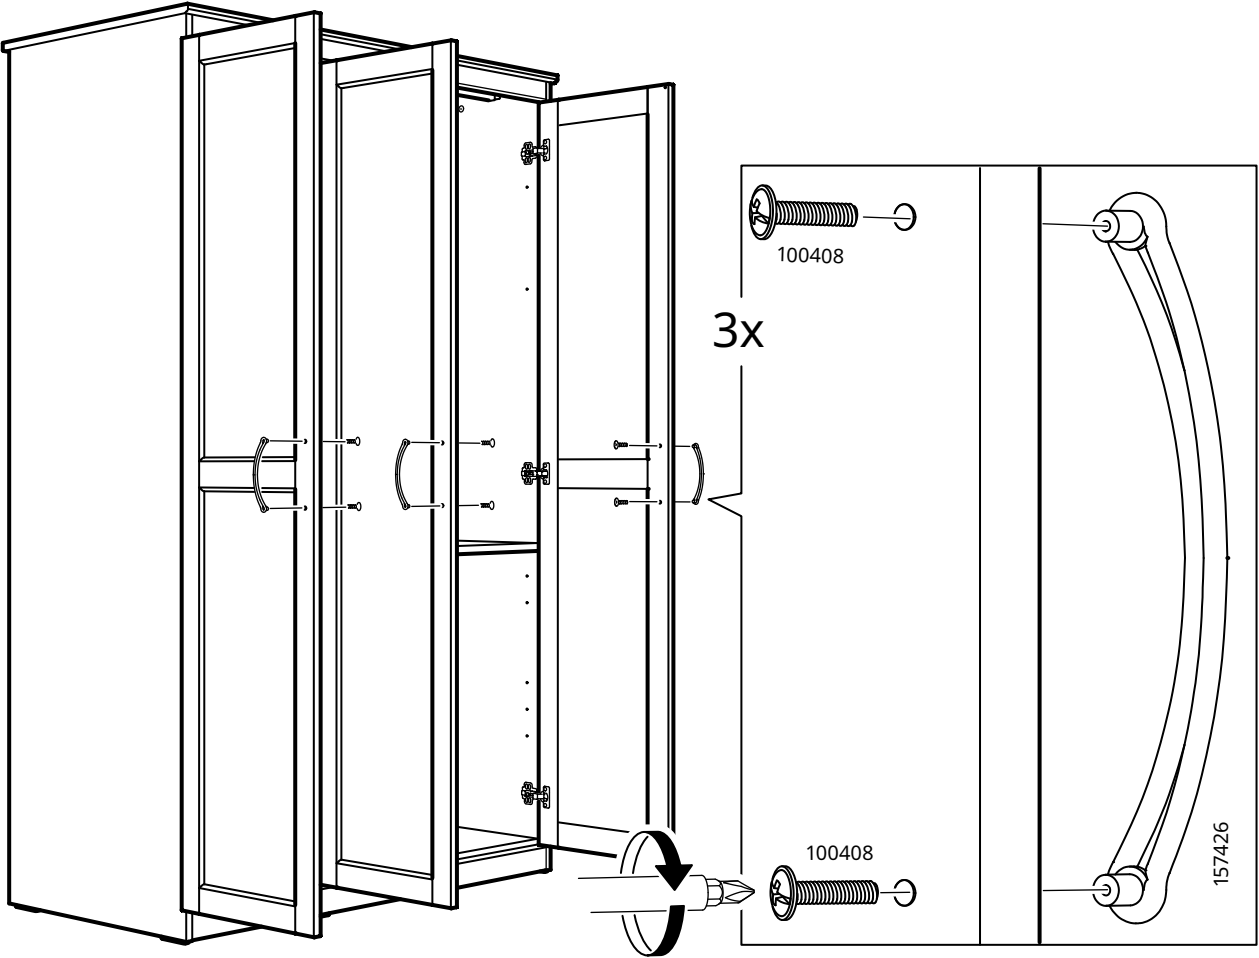 


50






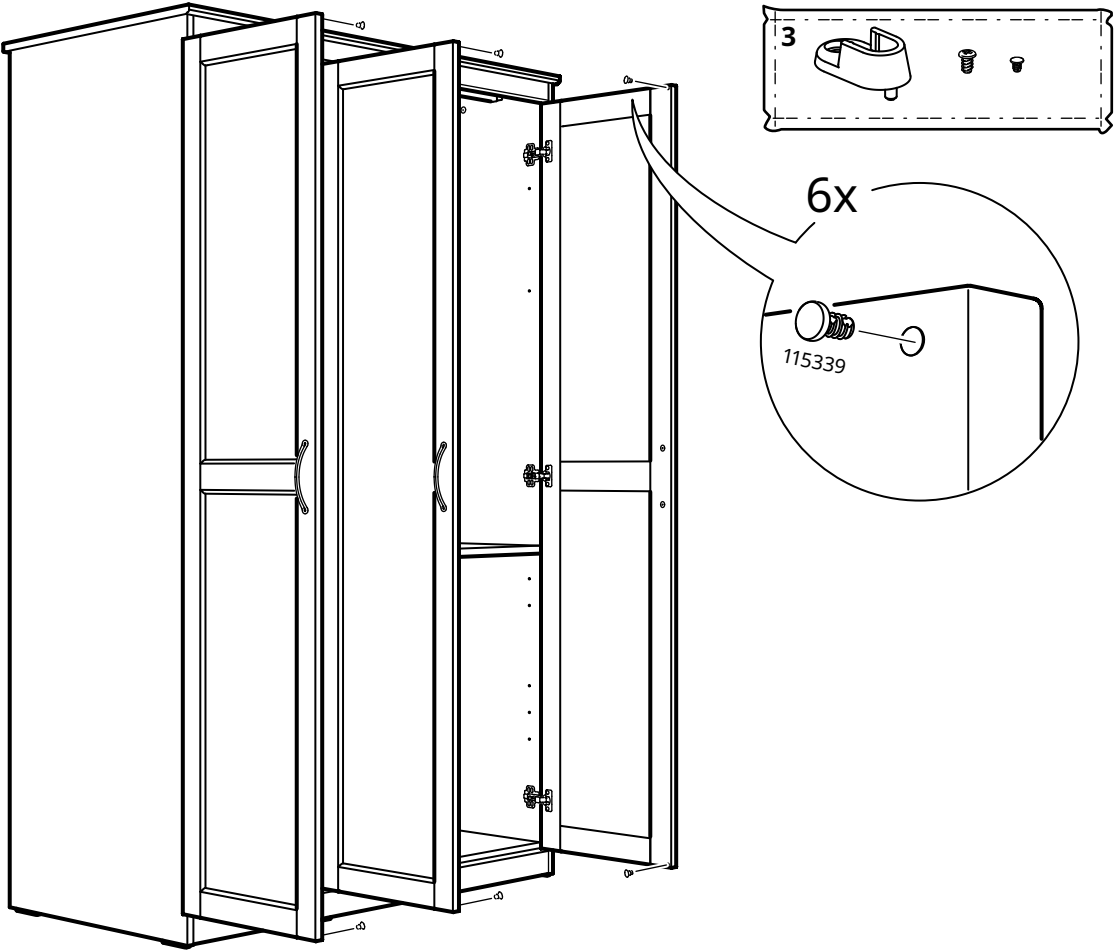 




51

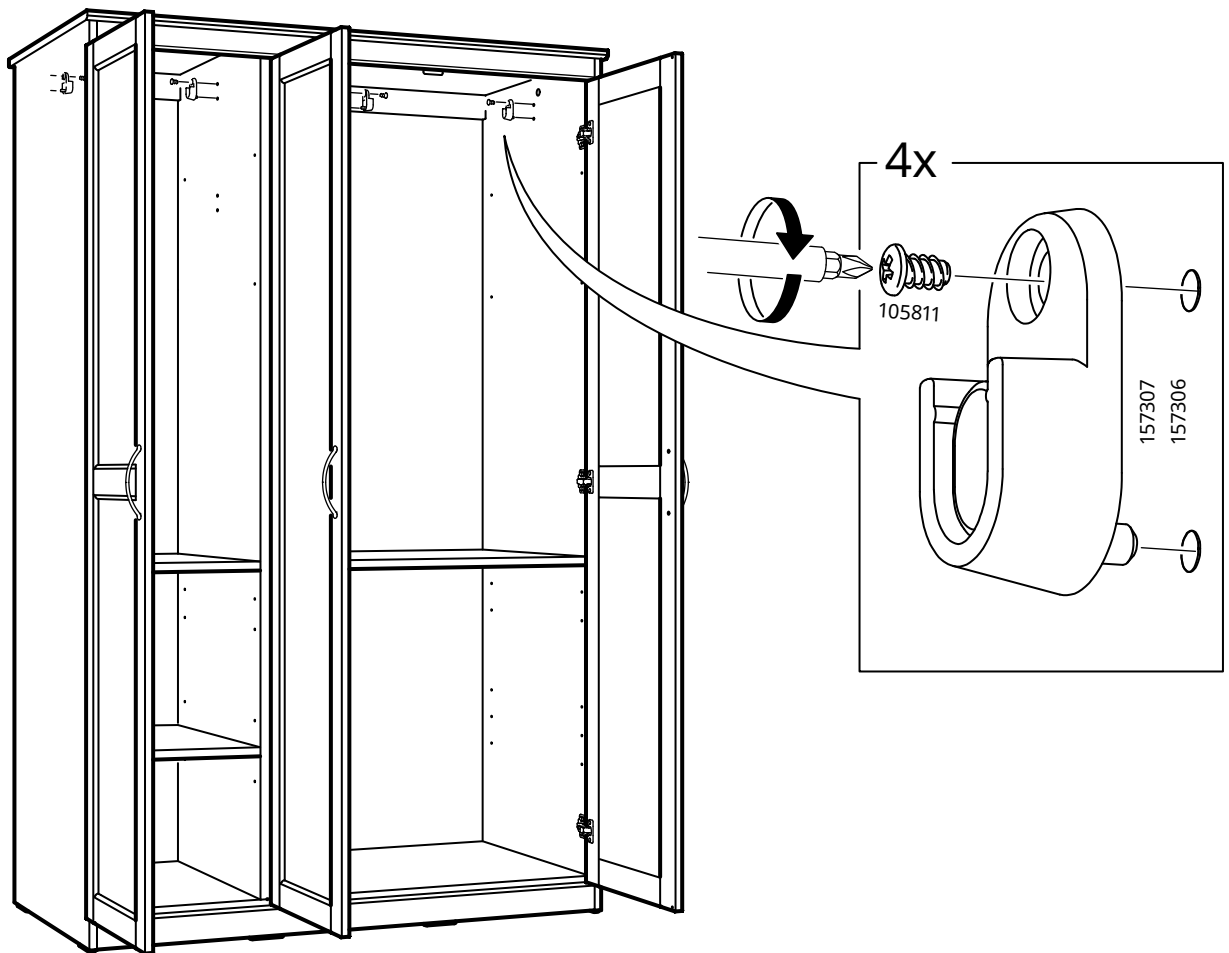 

52

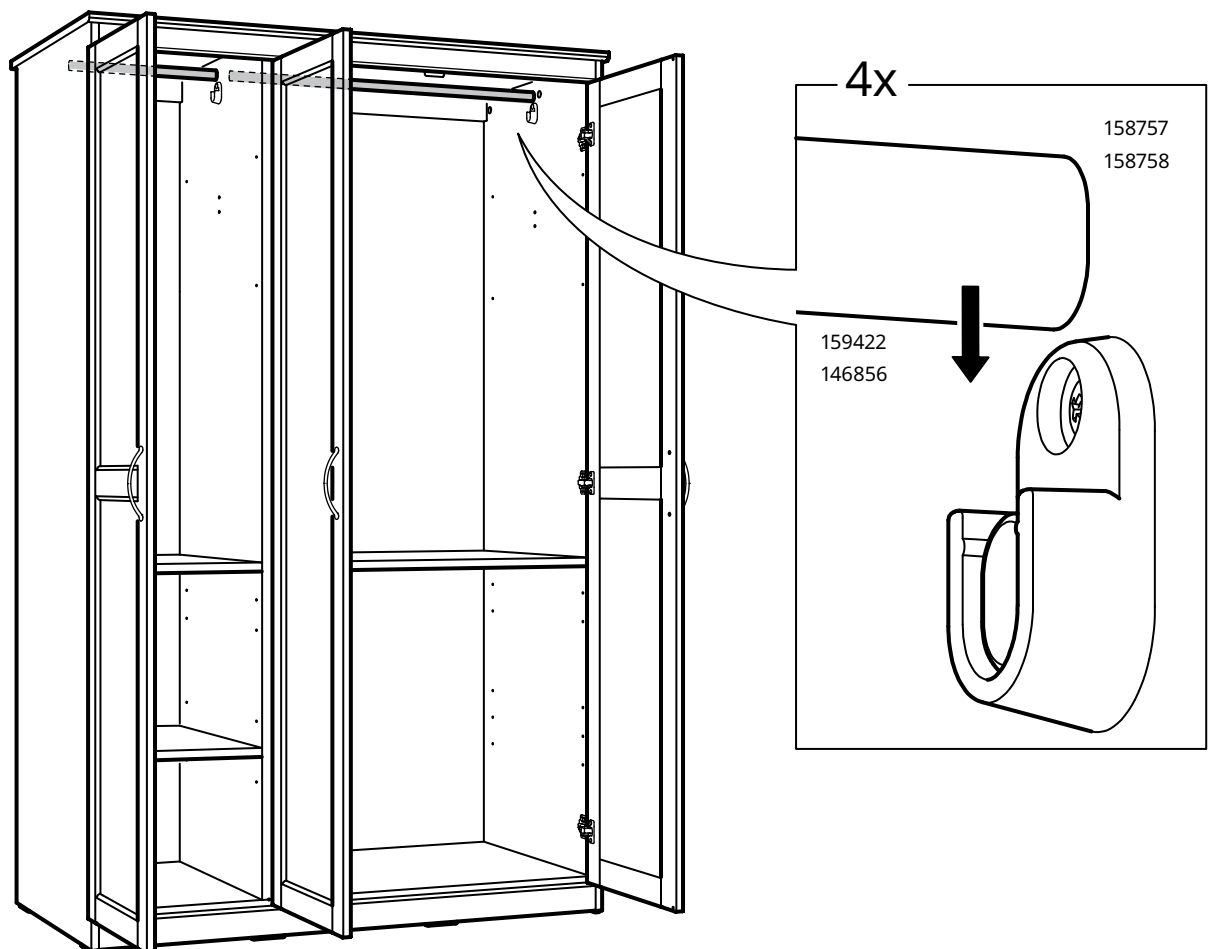 

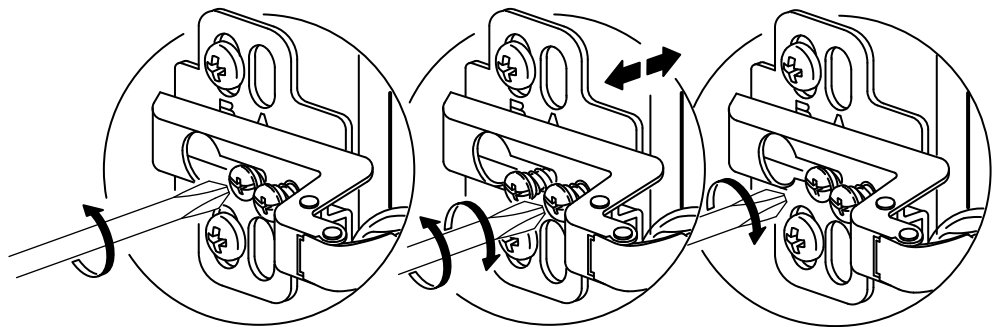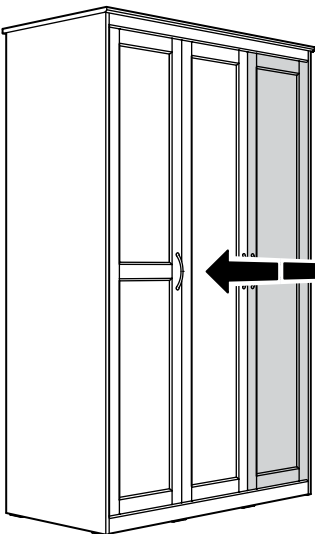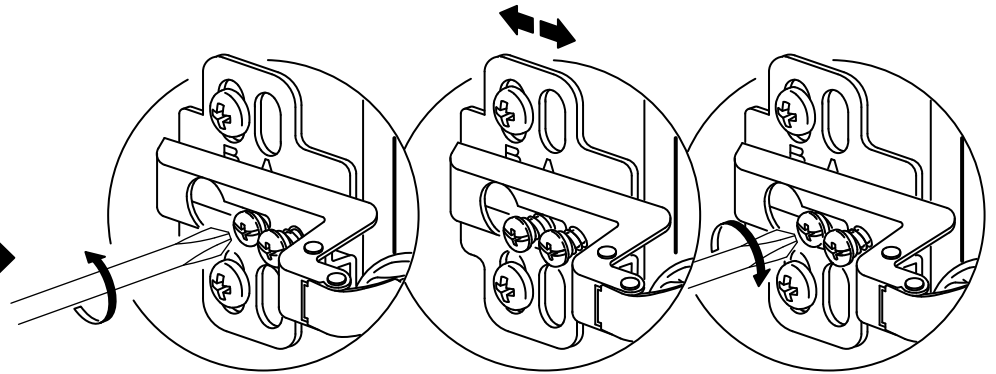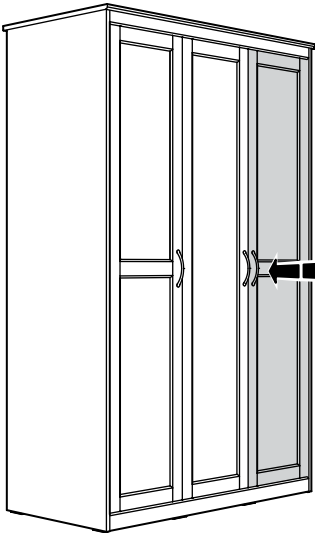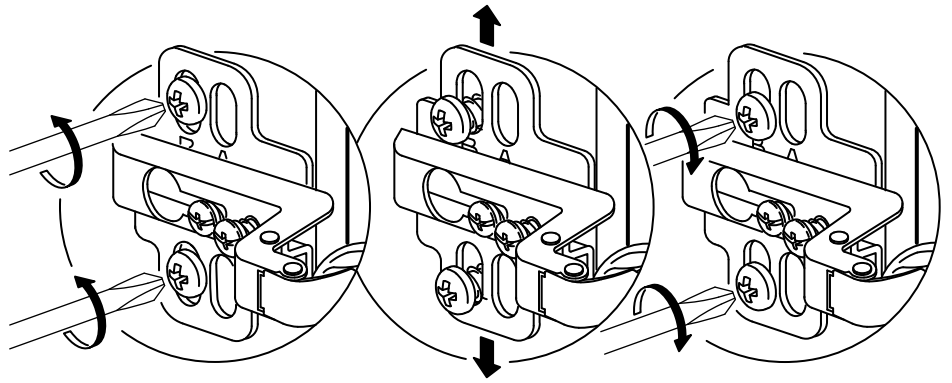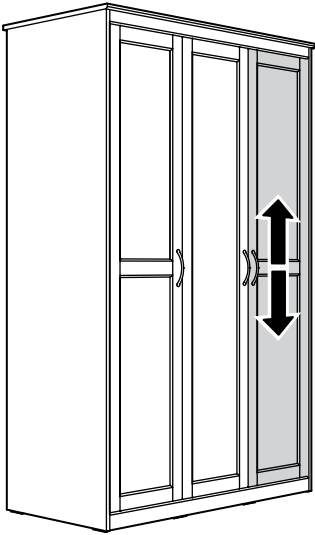      

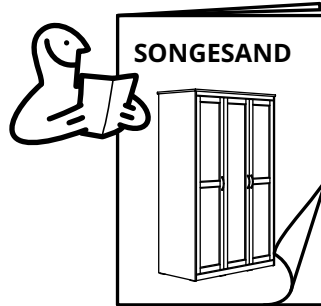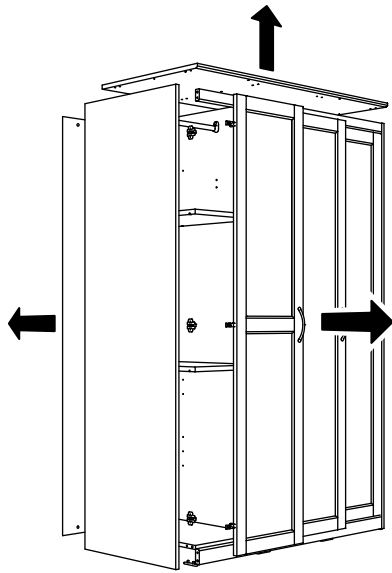  

51 → 1

