 


SPIKSMED

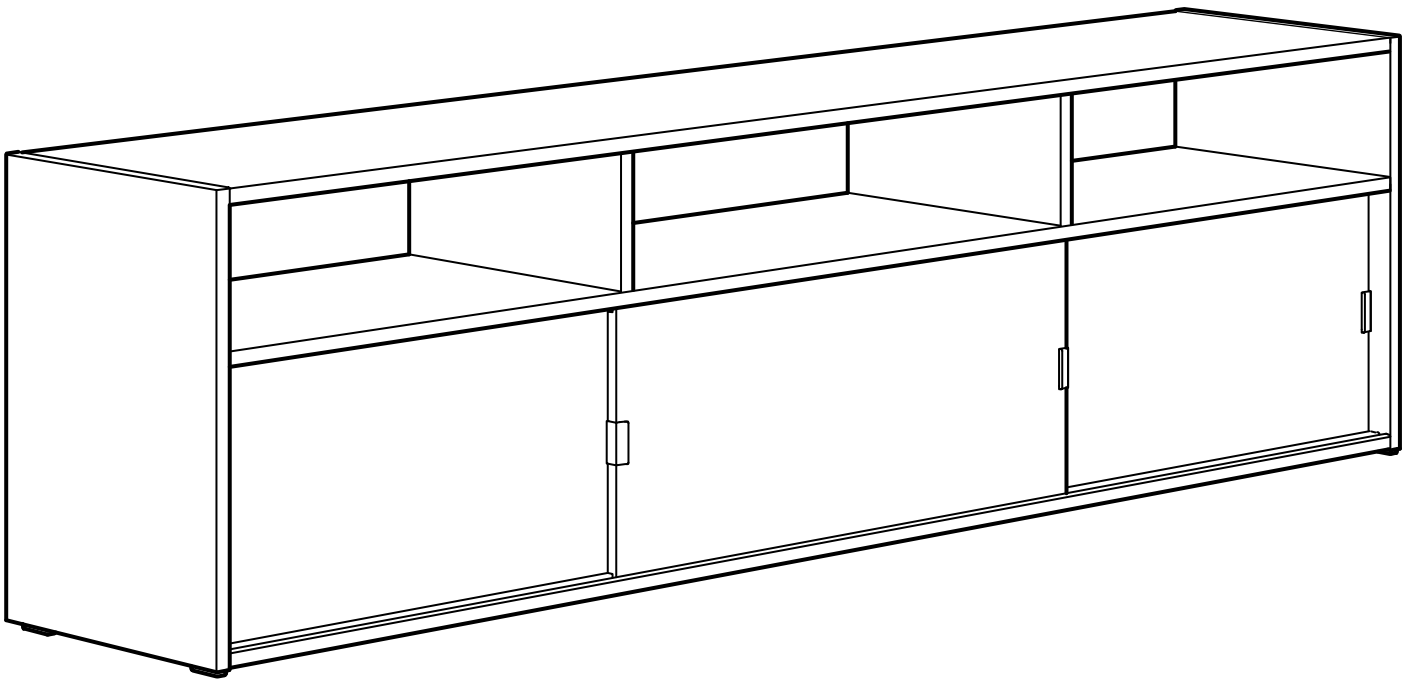

Design and Quality
IKEA of Sweden



English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

 
 
 
 
ALWAYS install anti-tip device provided.

 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

 
 
 
 
ALWAYS secure your television with an anchor device.

English




Read and follow each step of the instruction carefully.

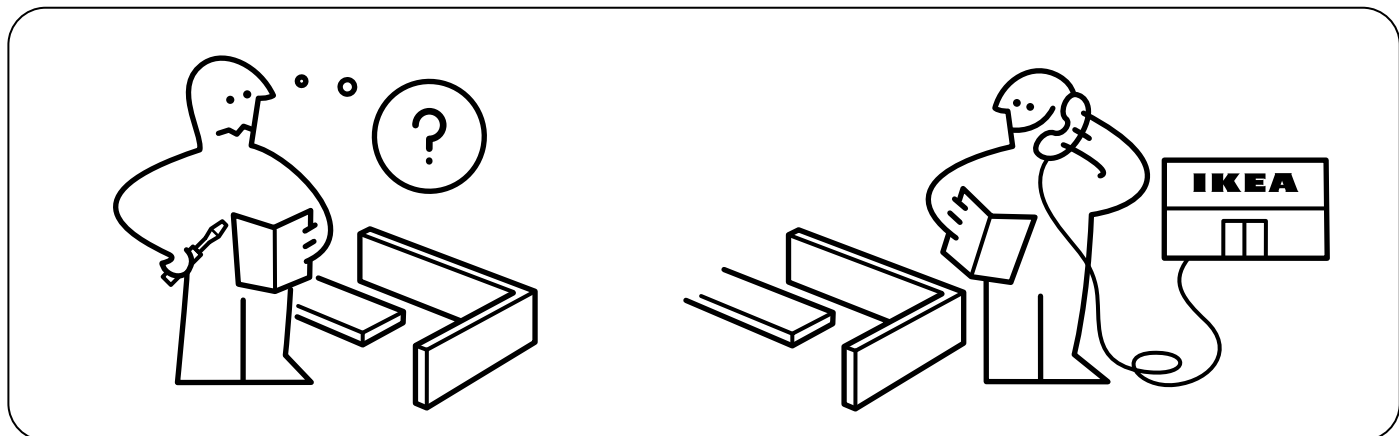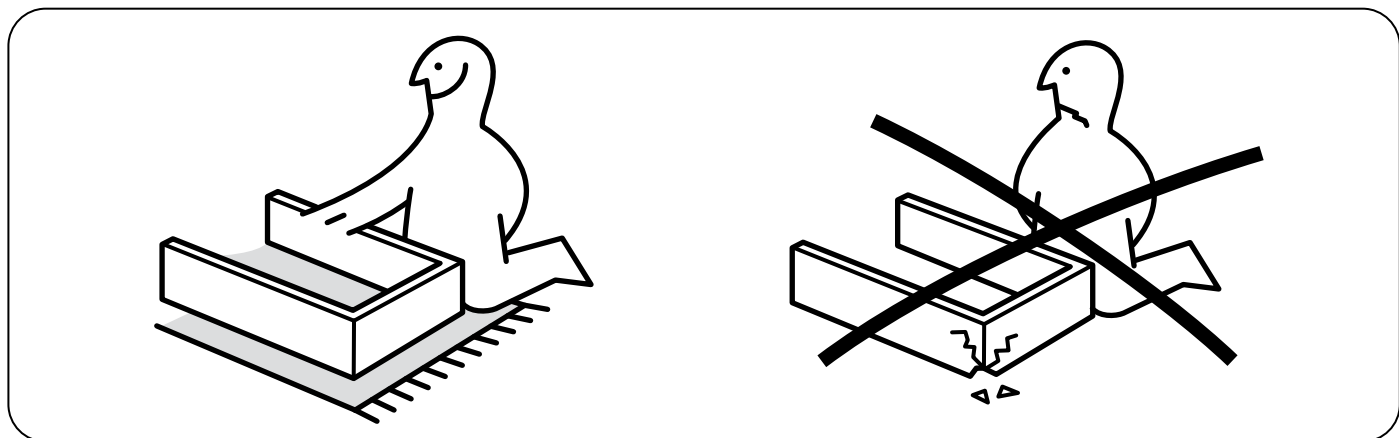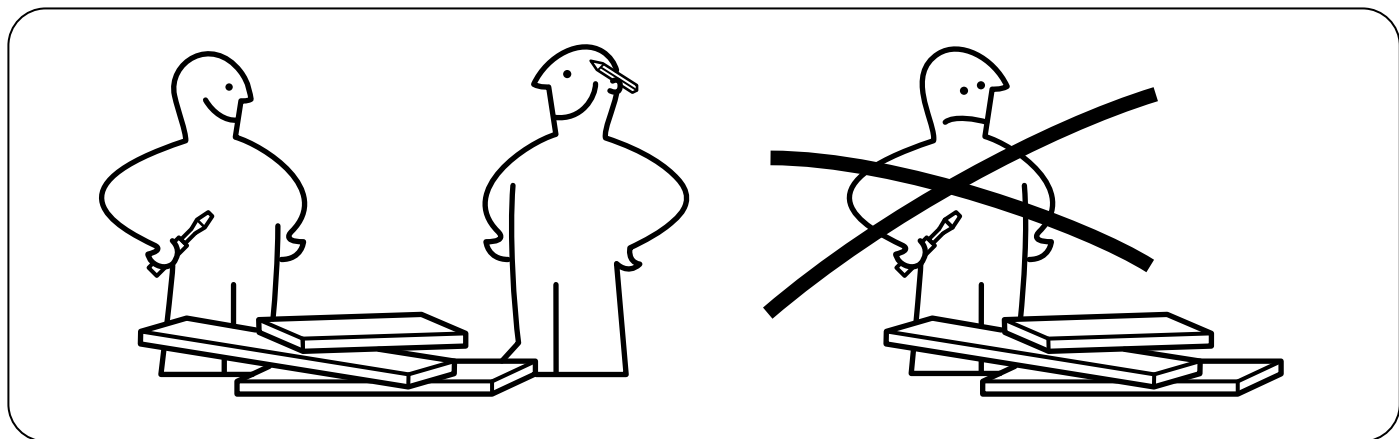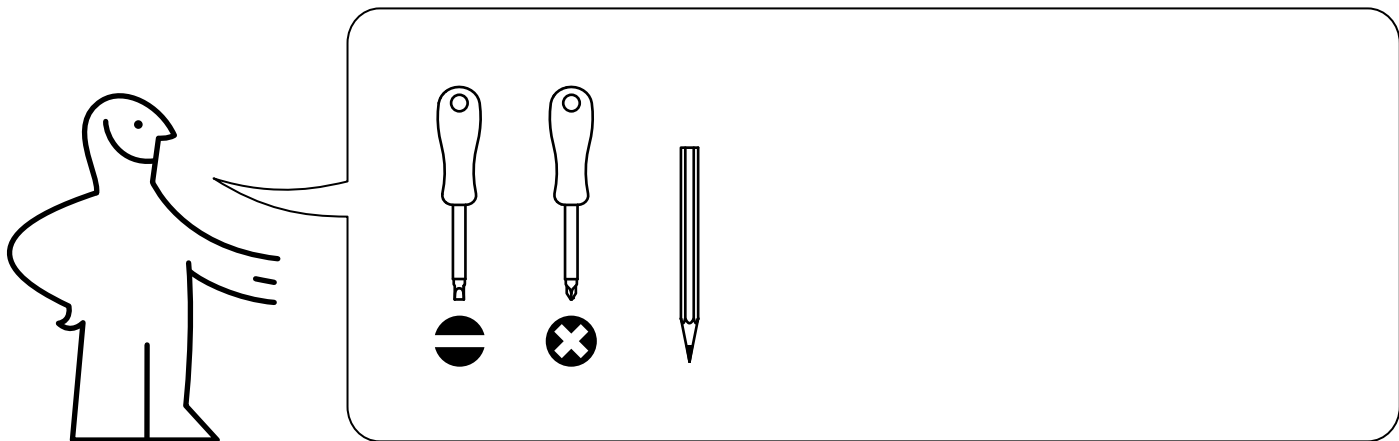

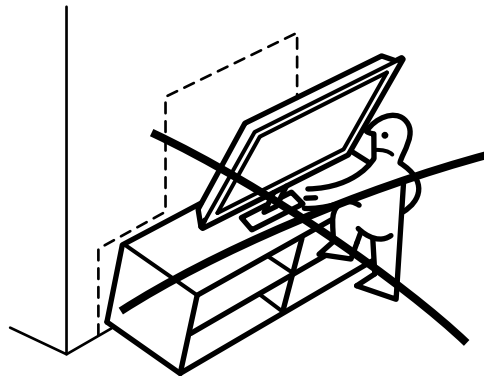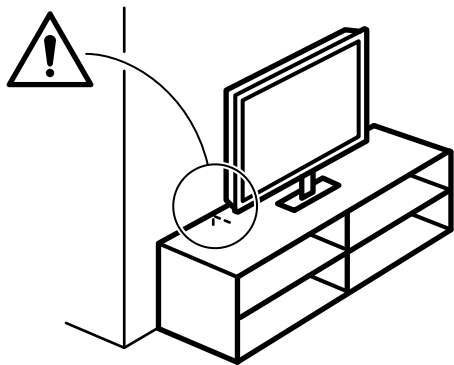


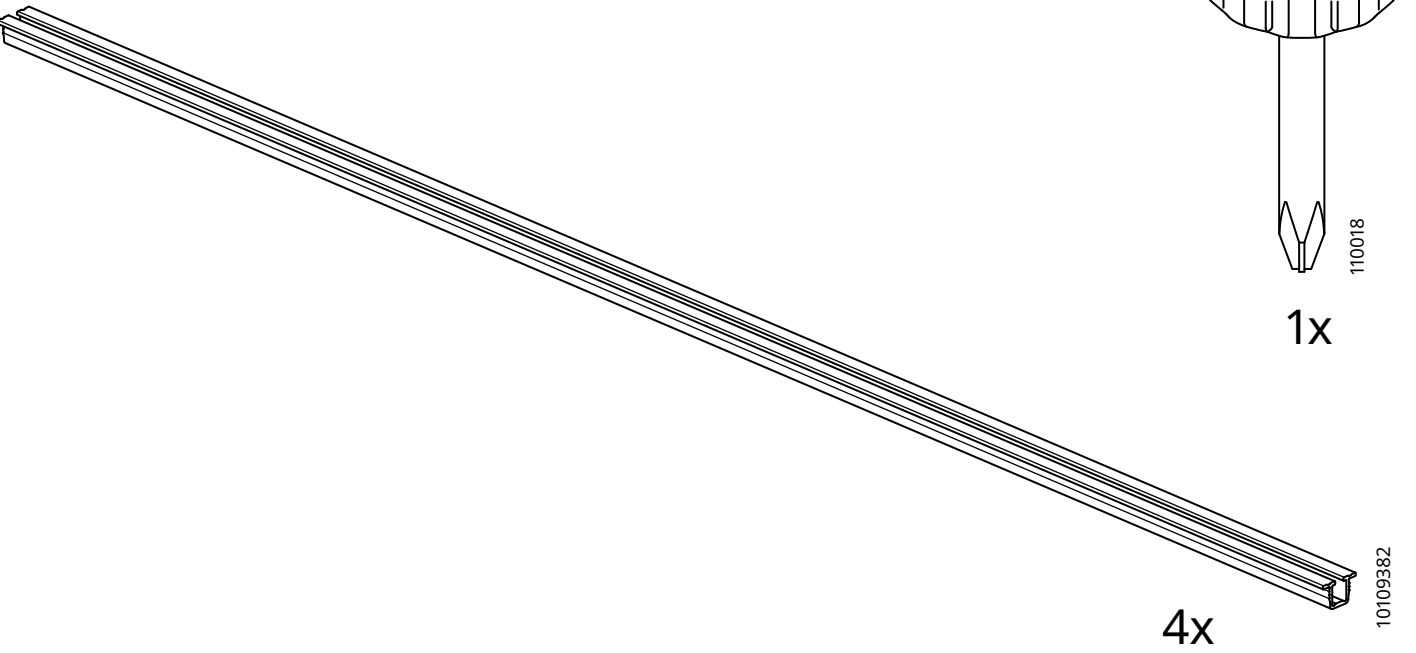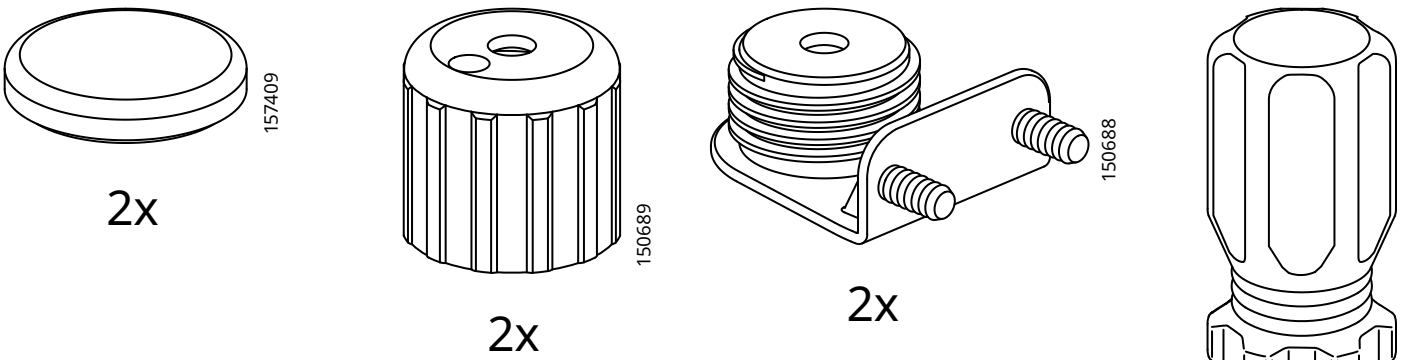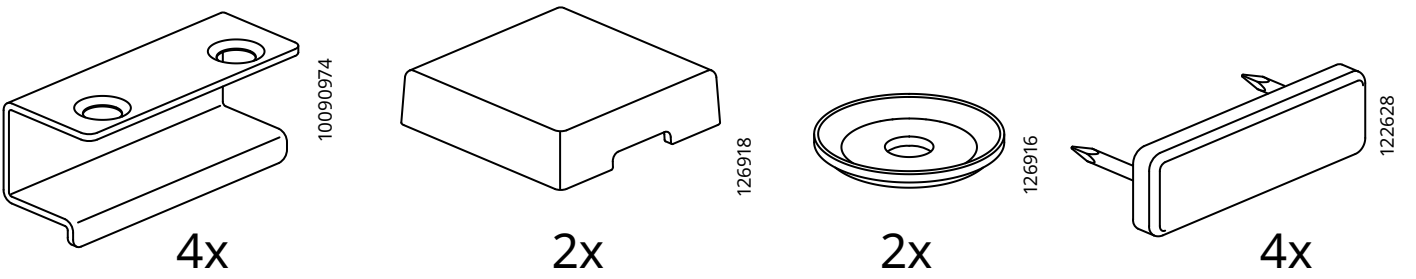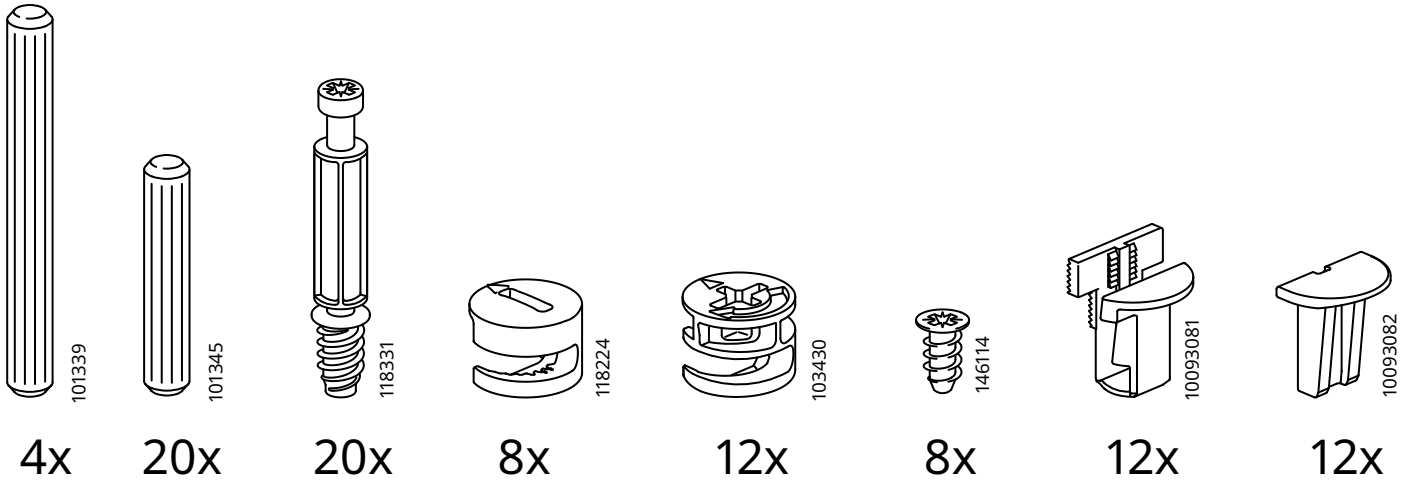


1

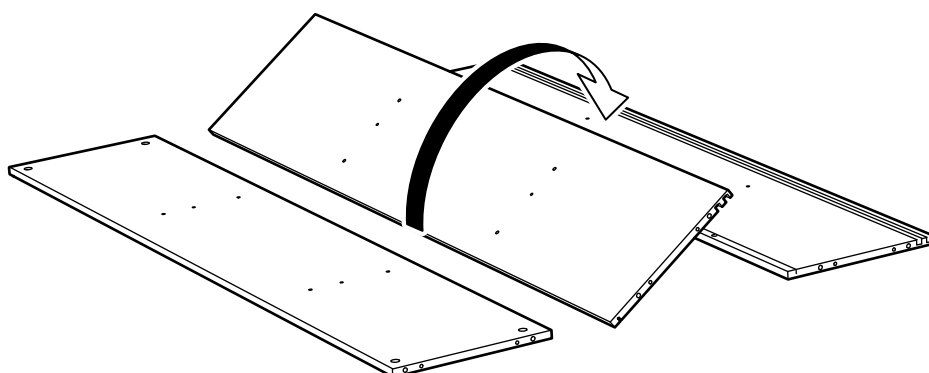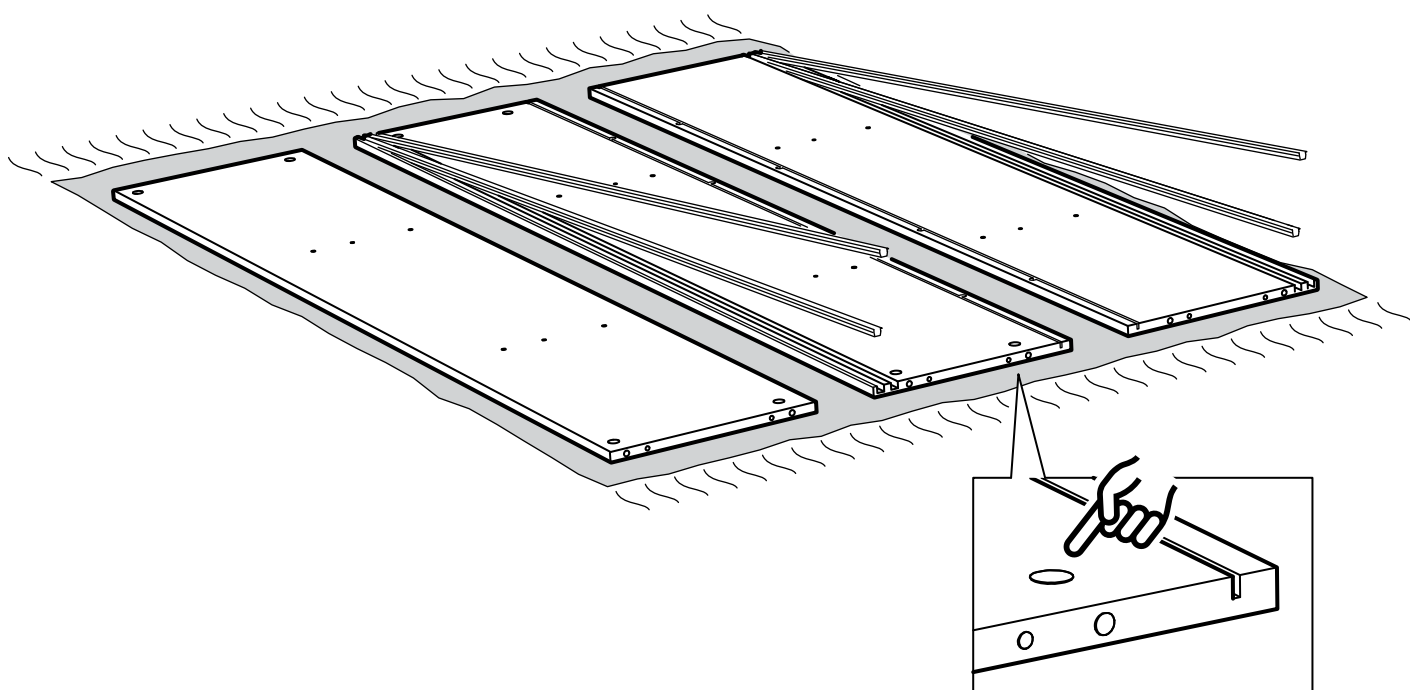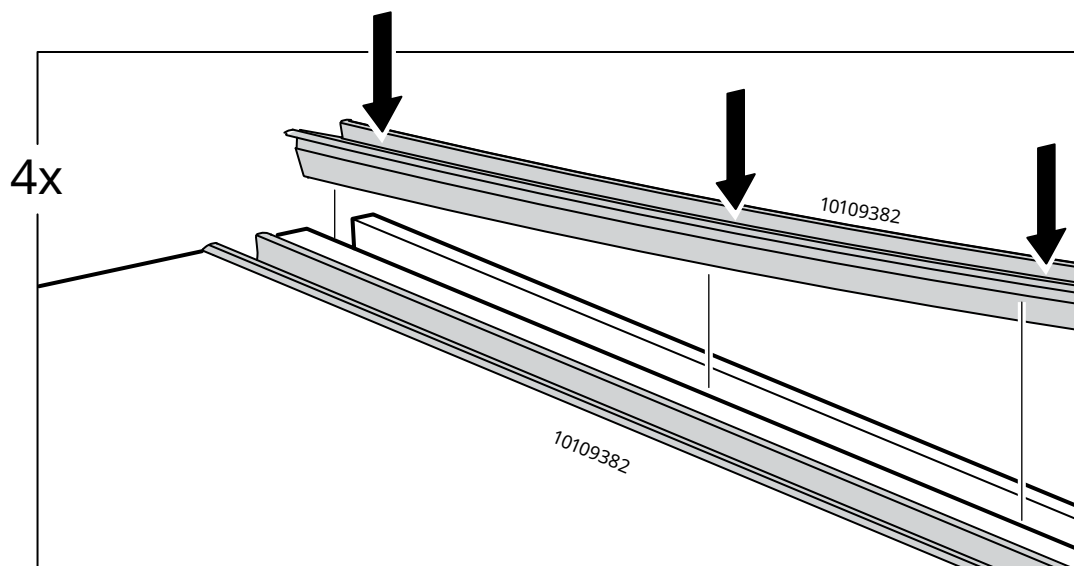   


2

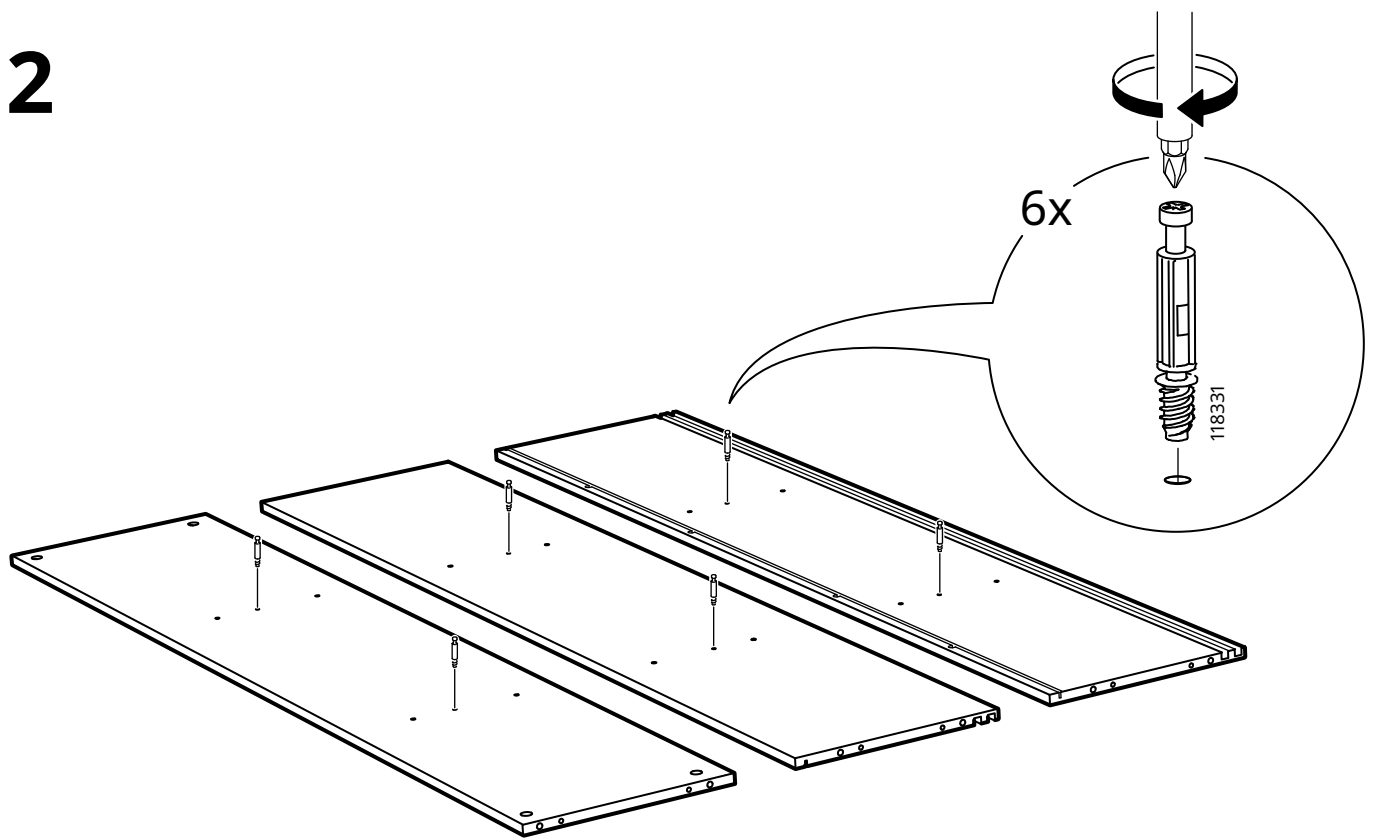 


3

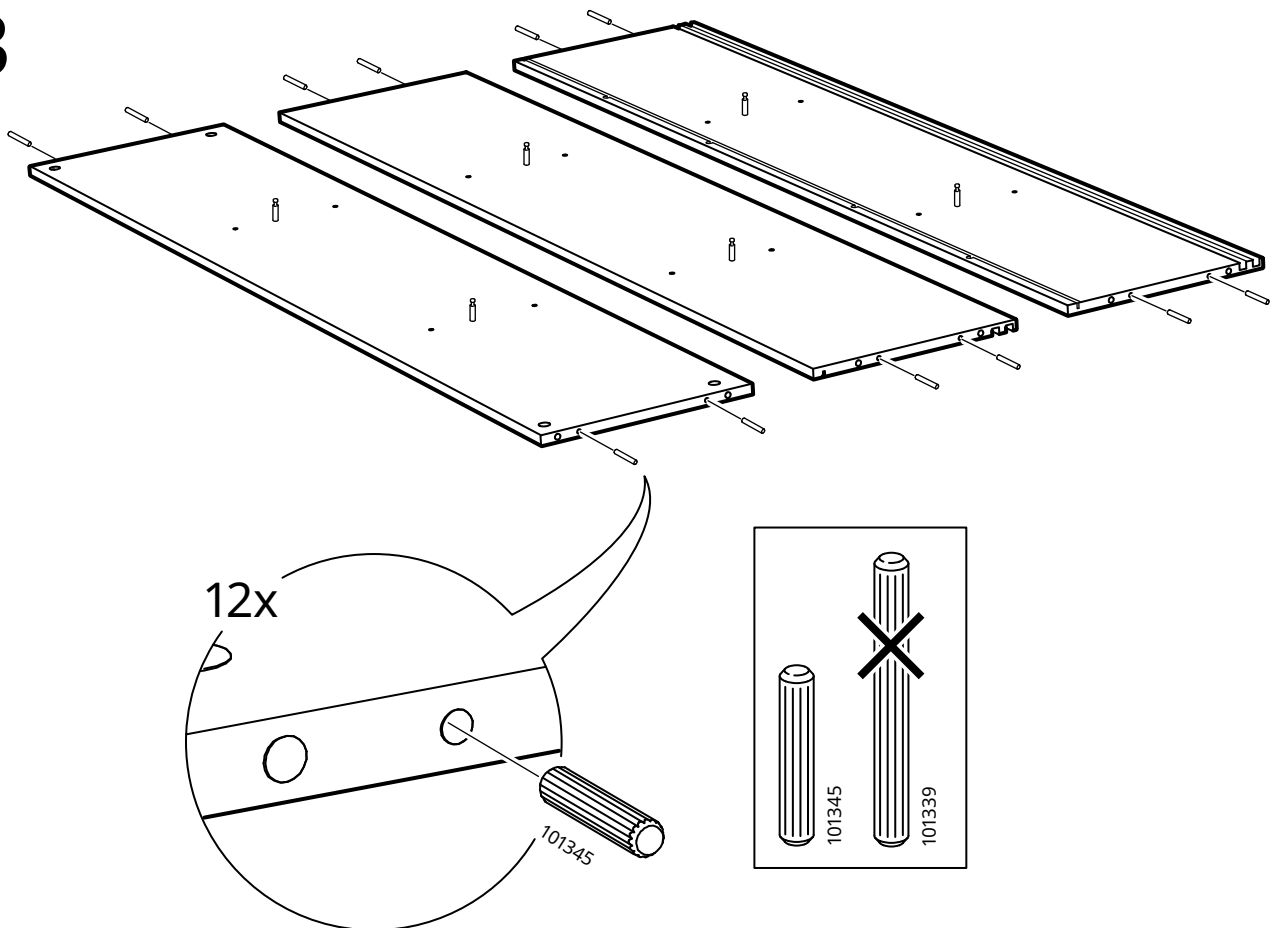 



4

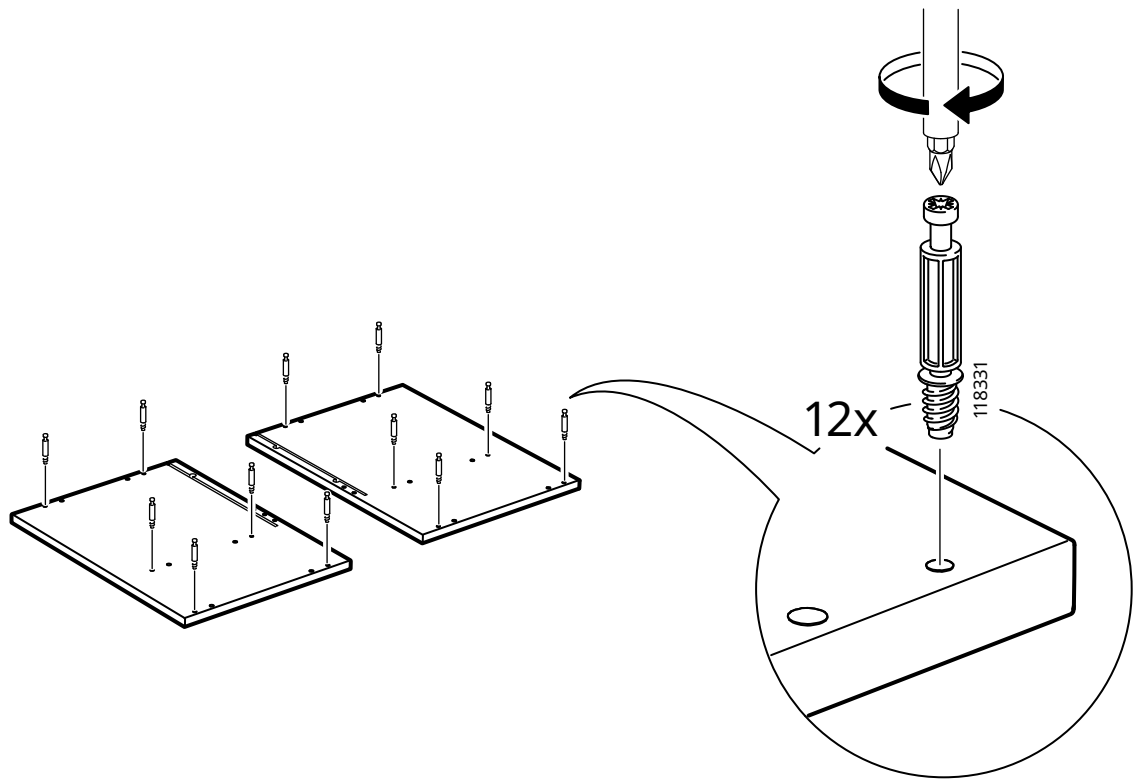 


5

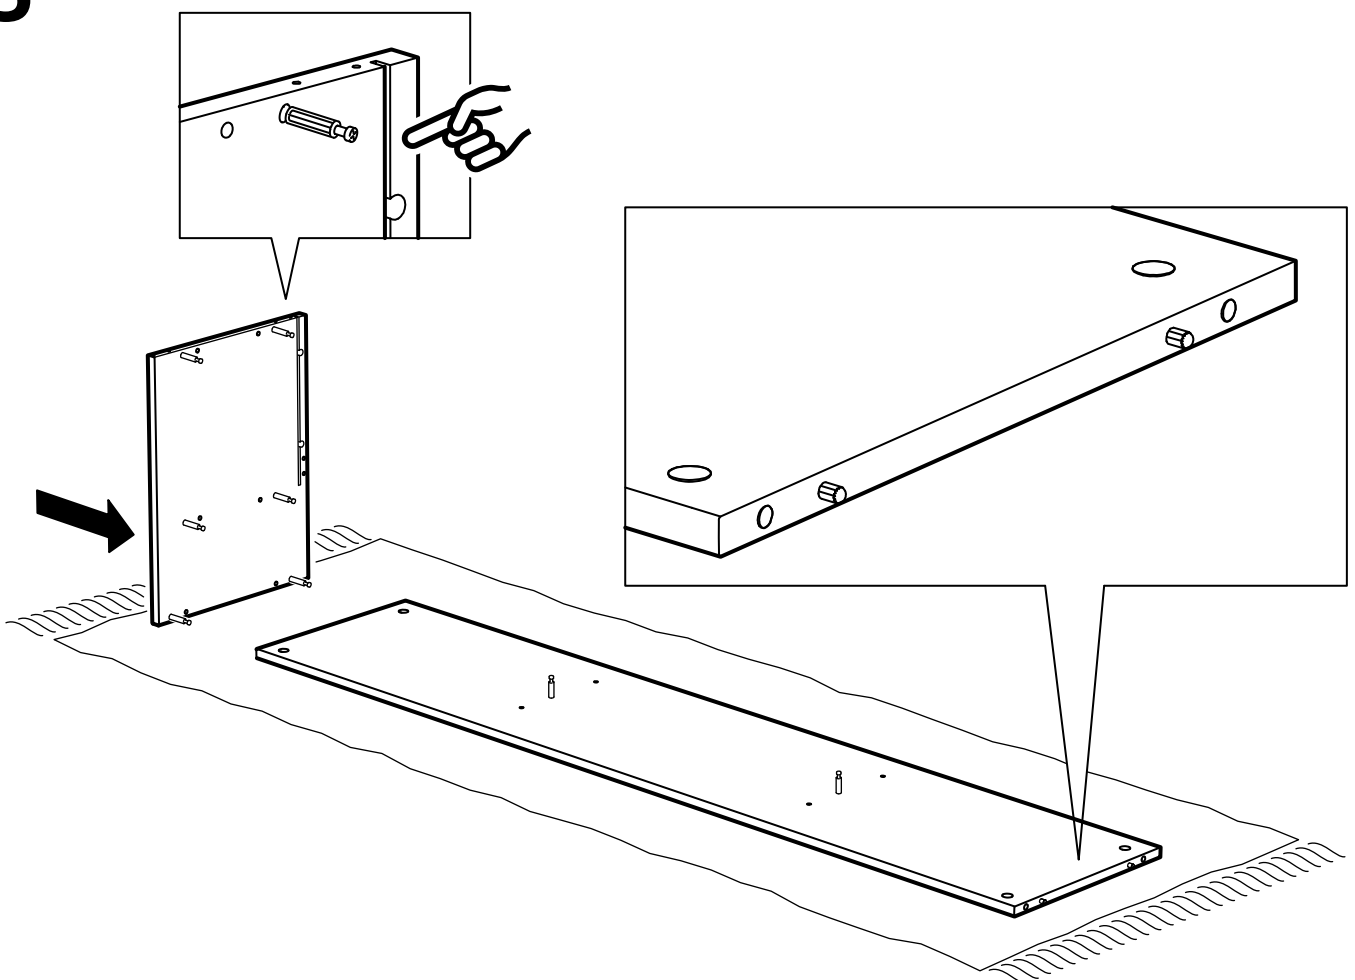 


6

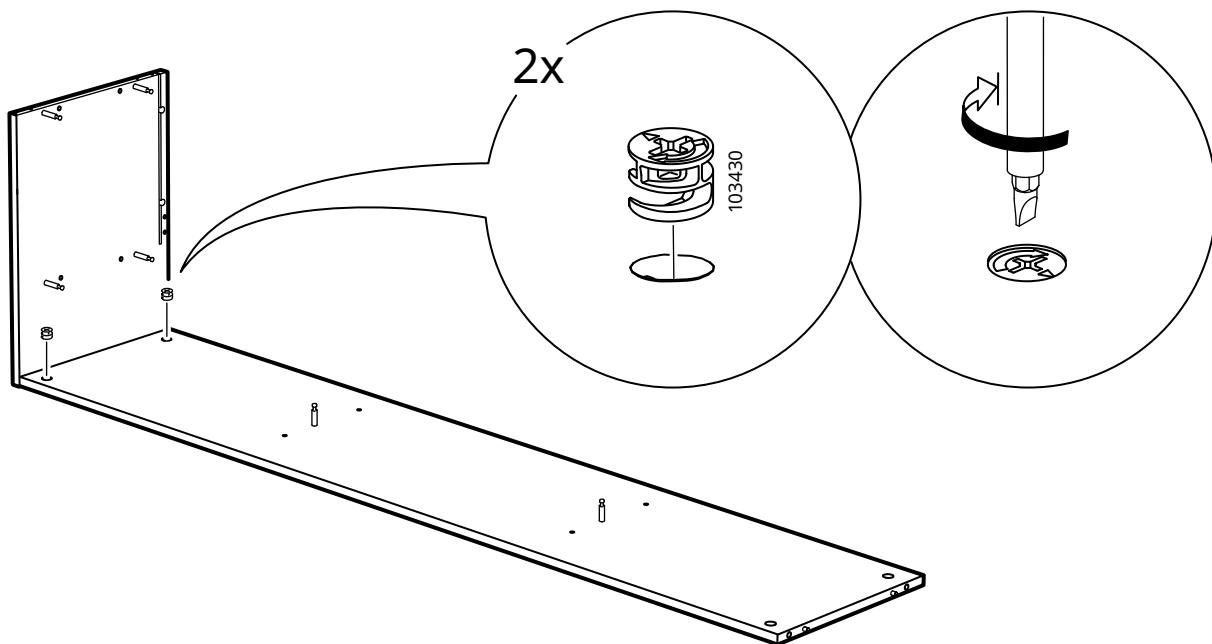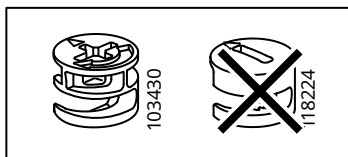  



7

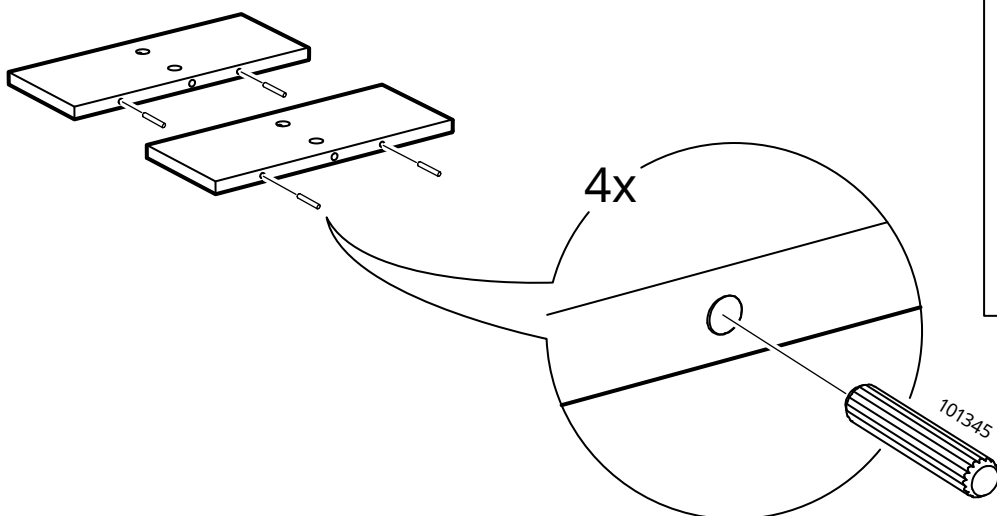 


8

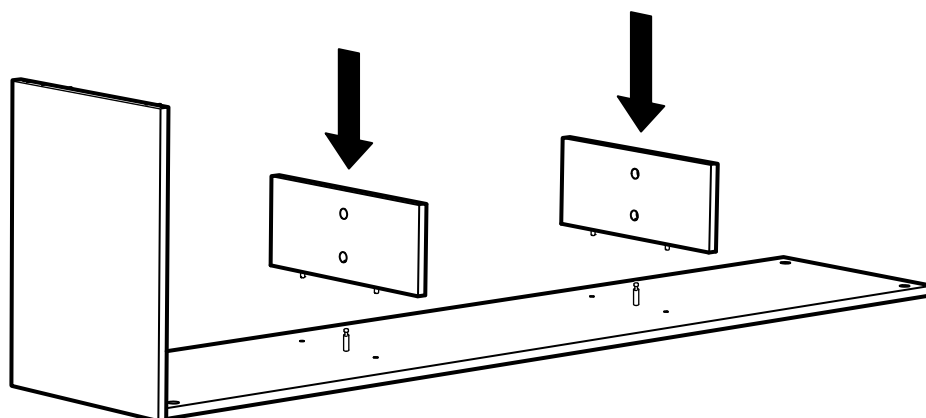 


9

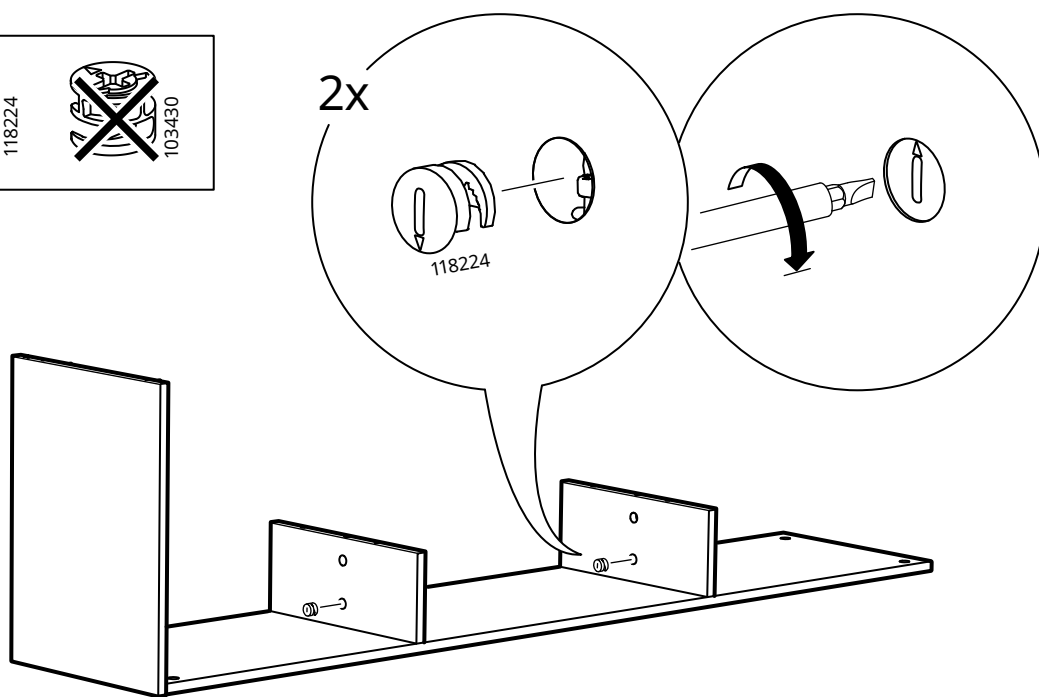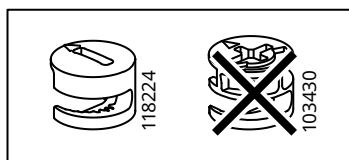  


10

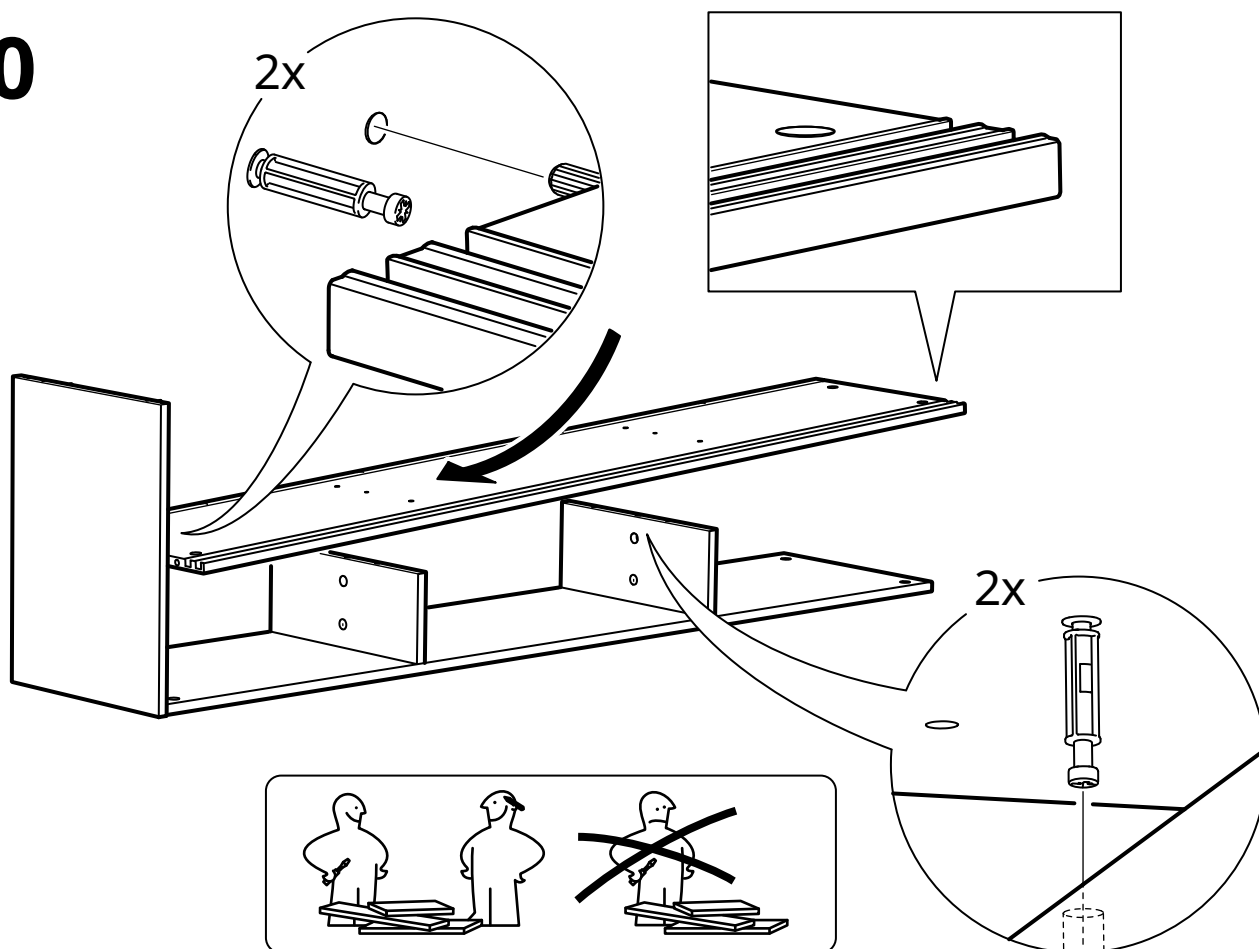 


11

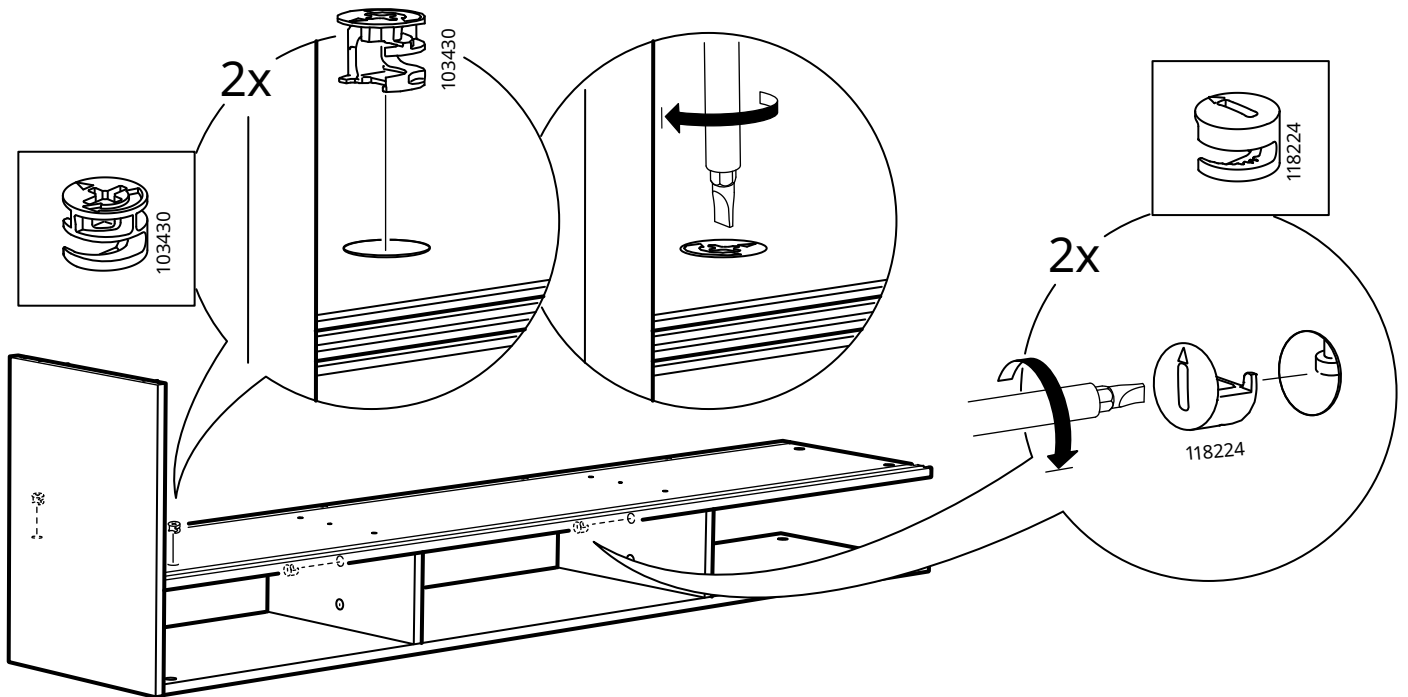 


12

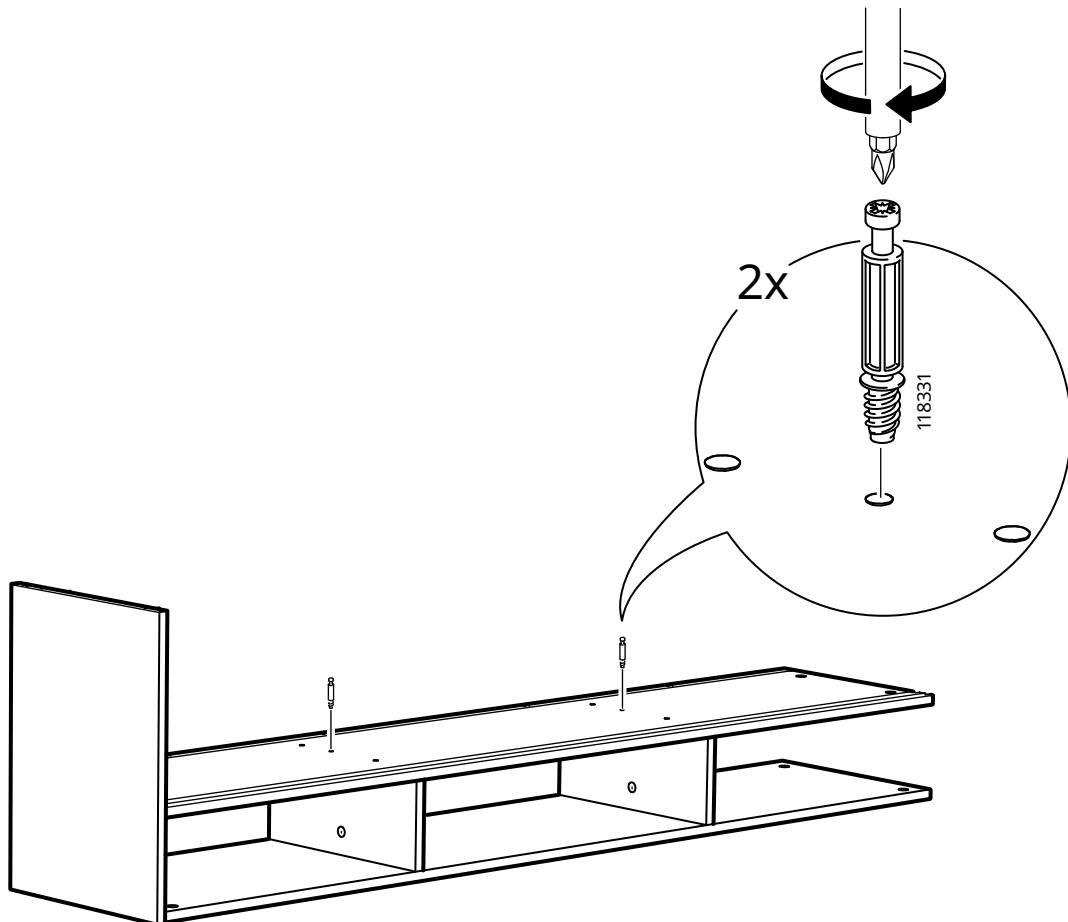 


13

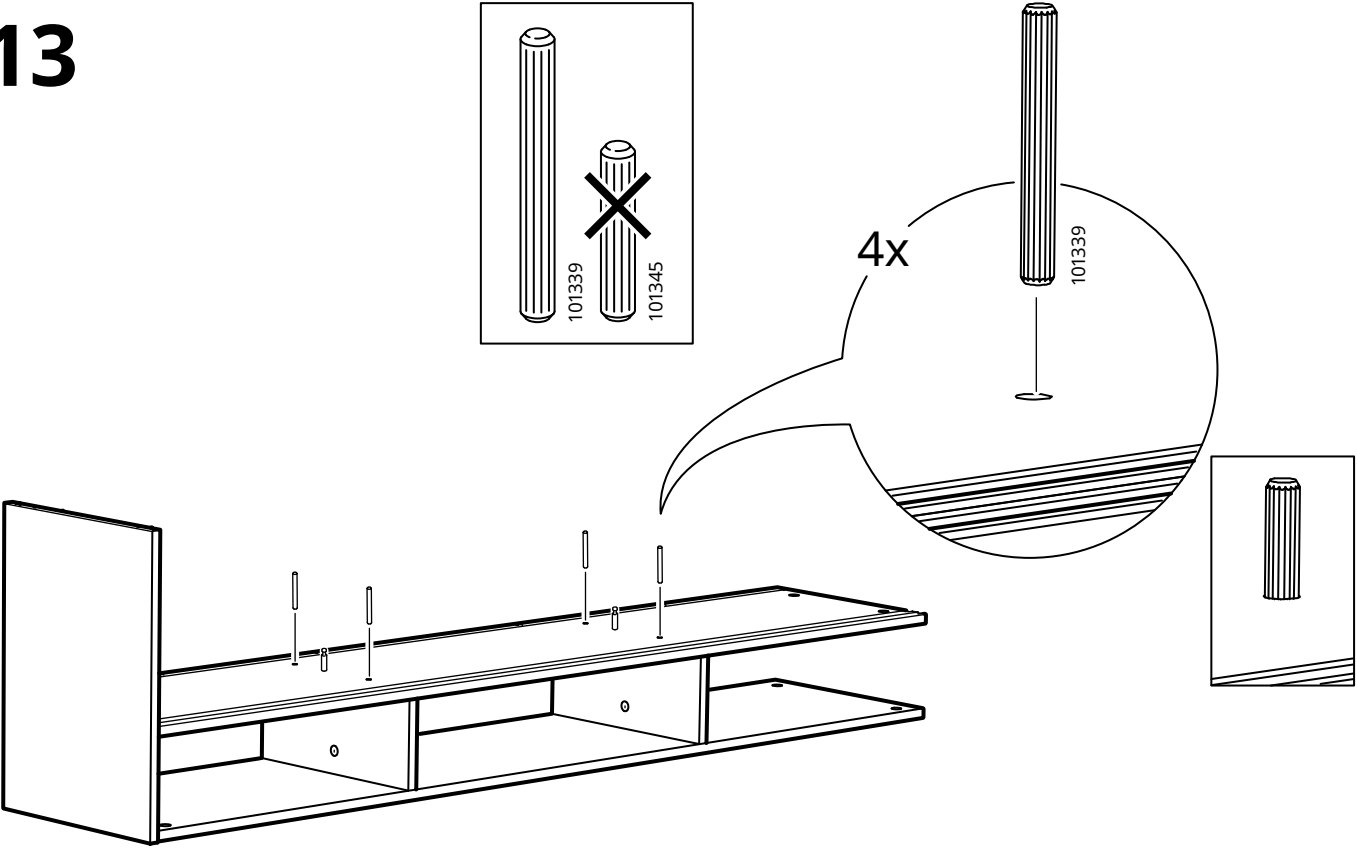 


14

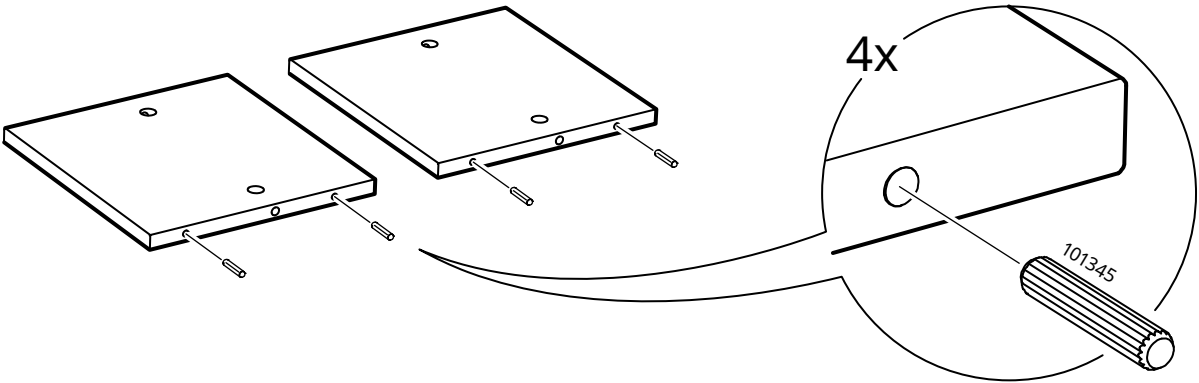 


15

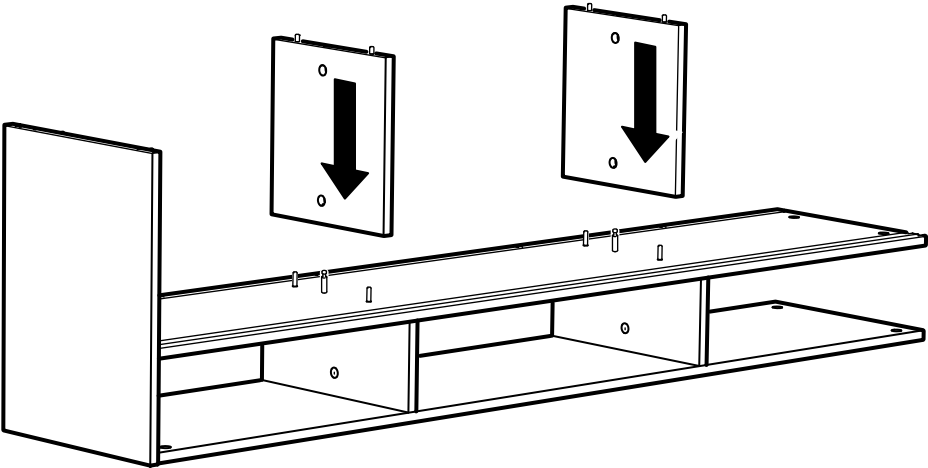 


16

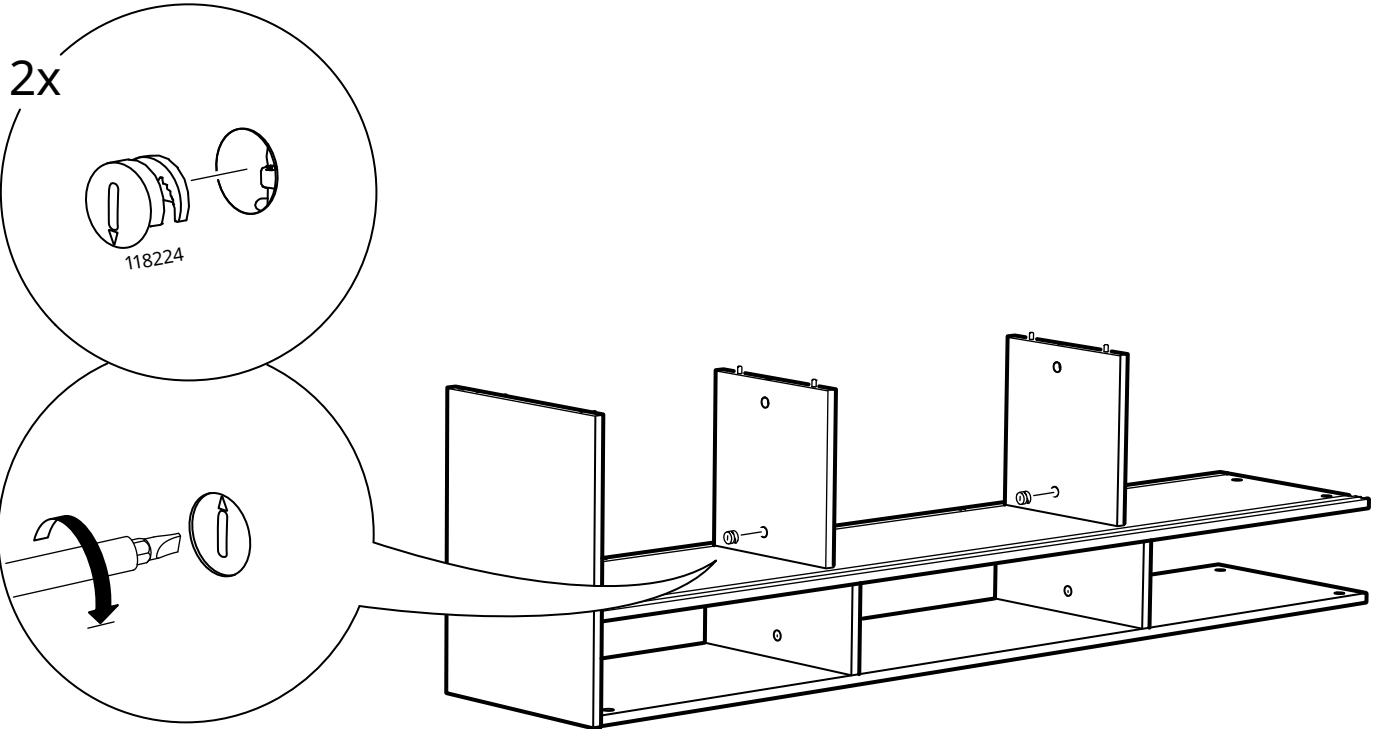 


17

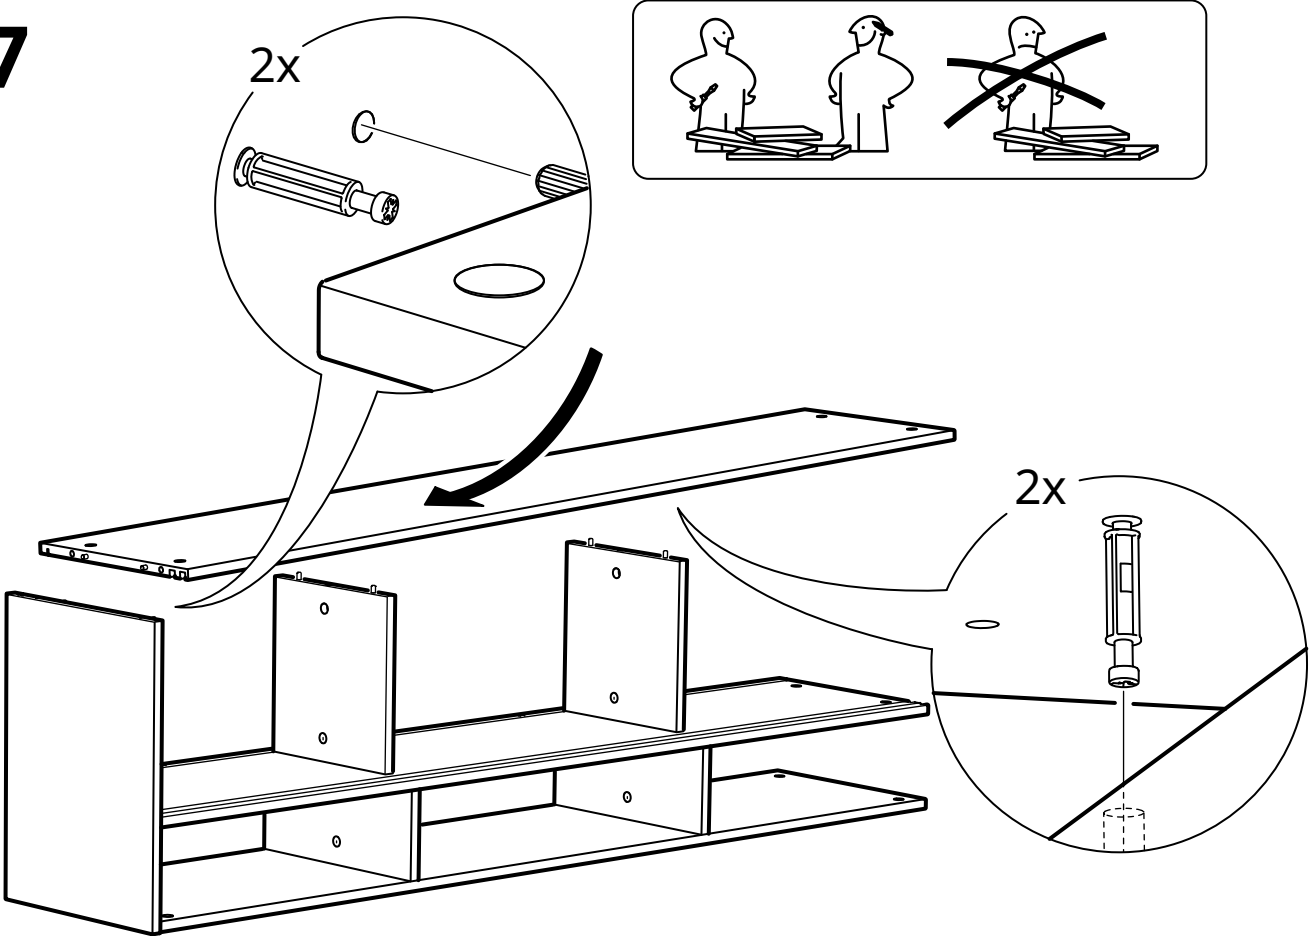 


18

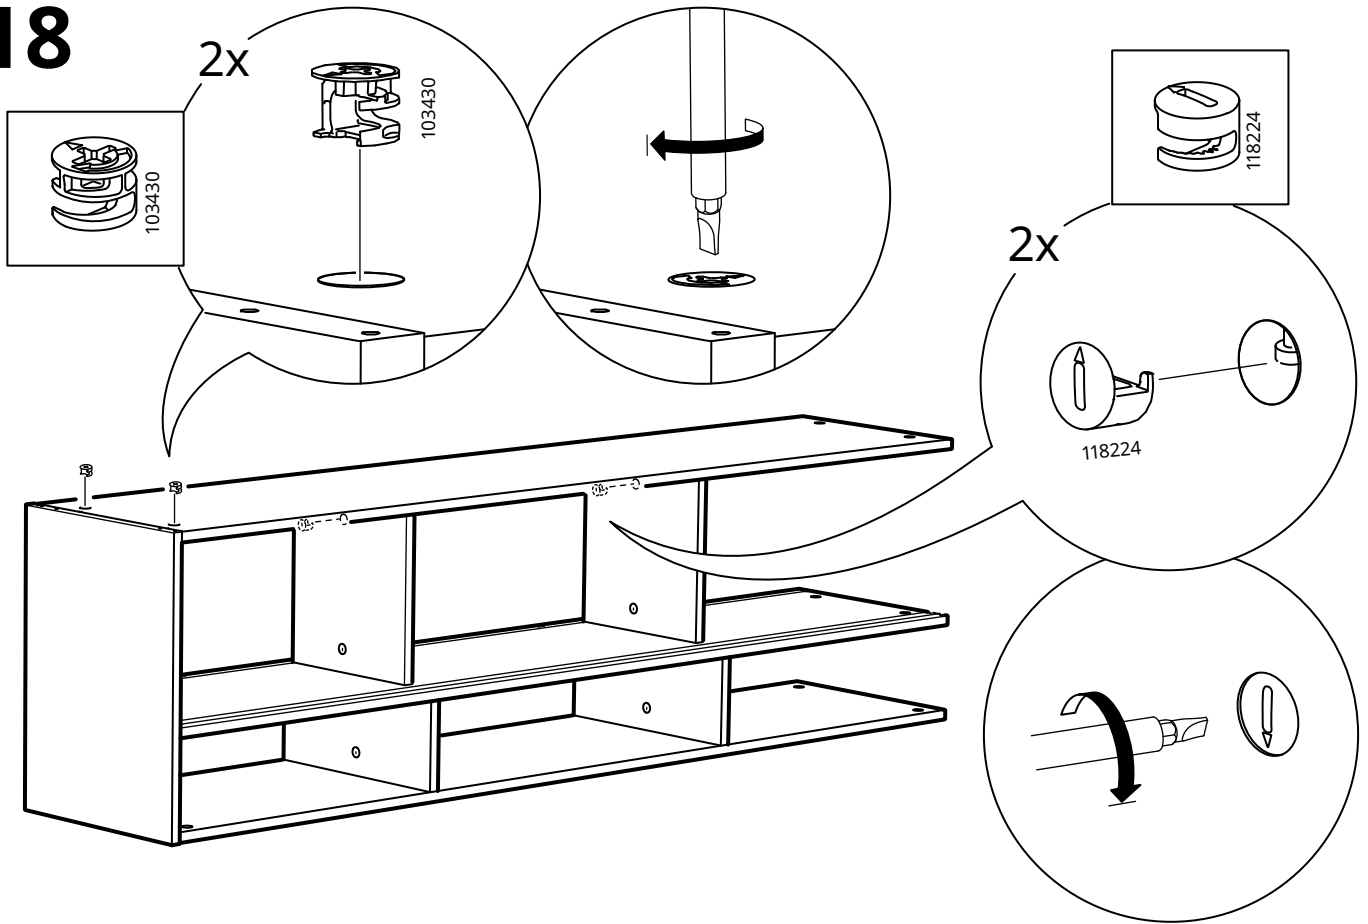 


19

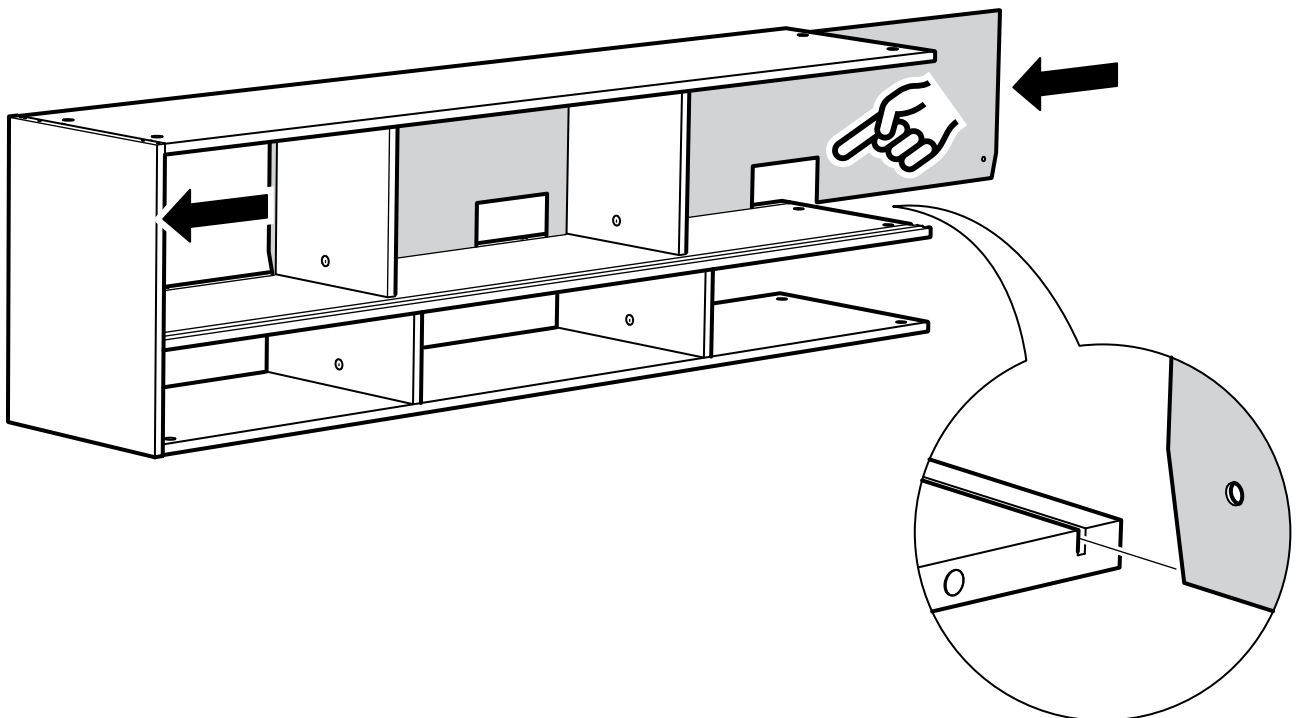 


20

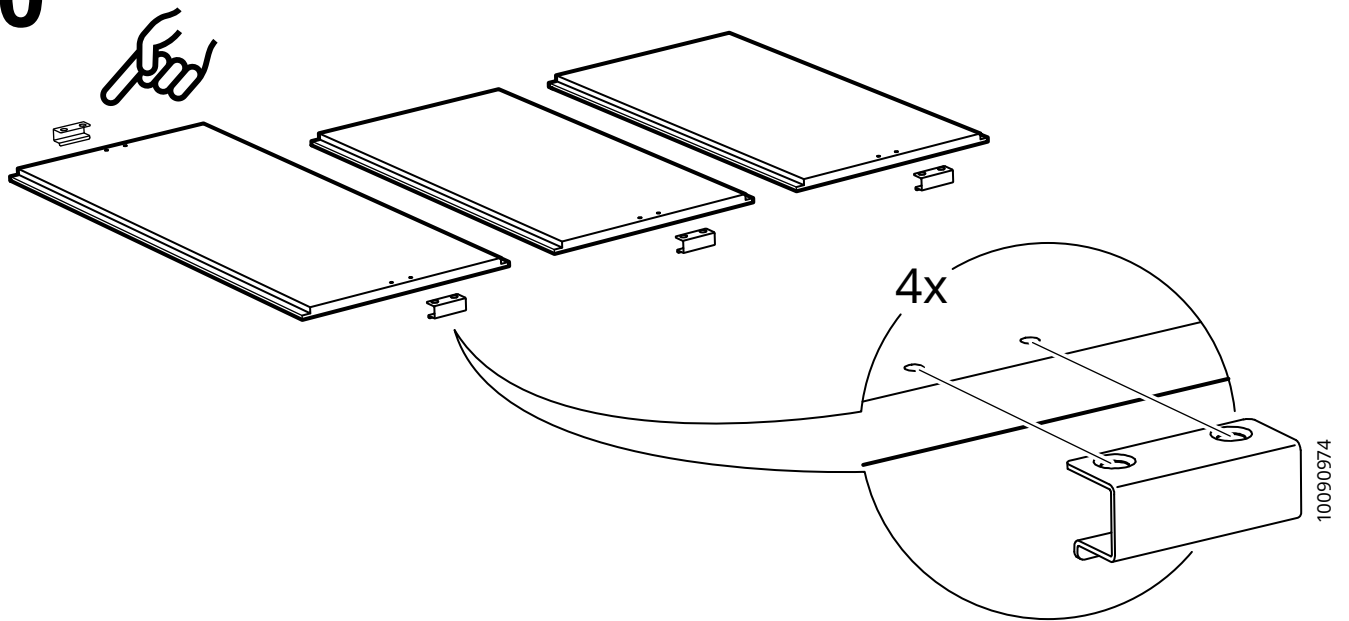 


21

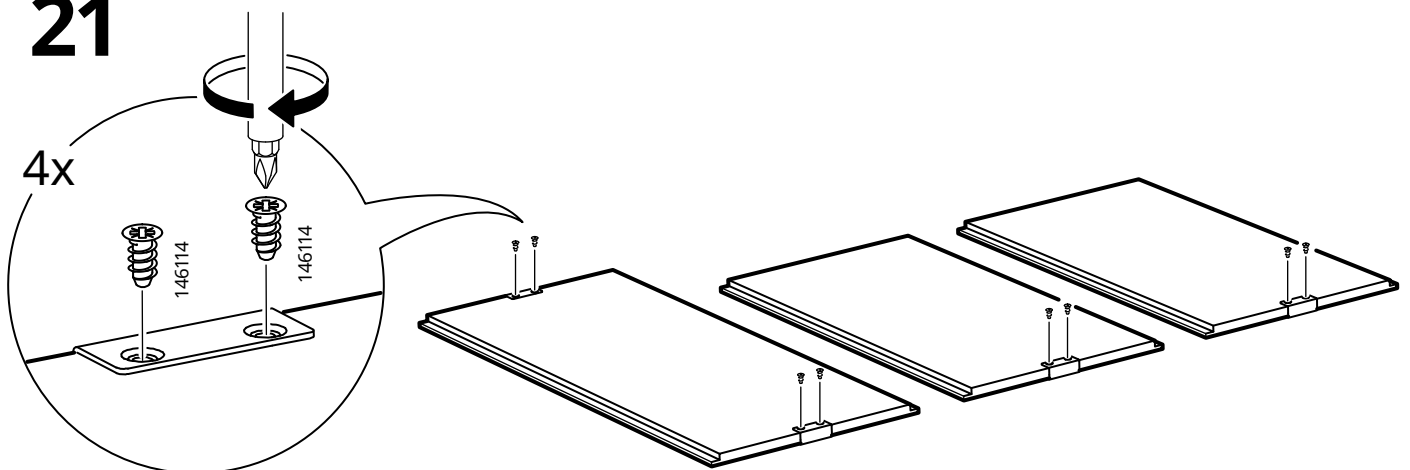 


22

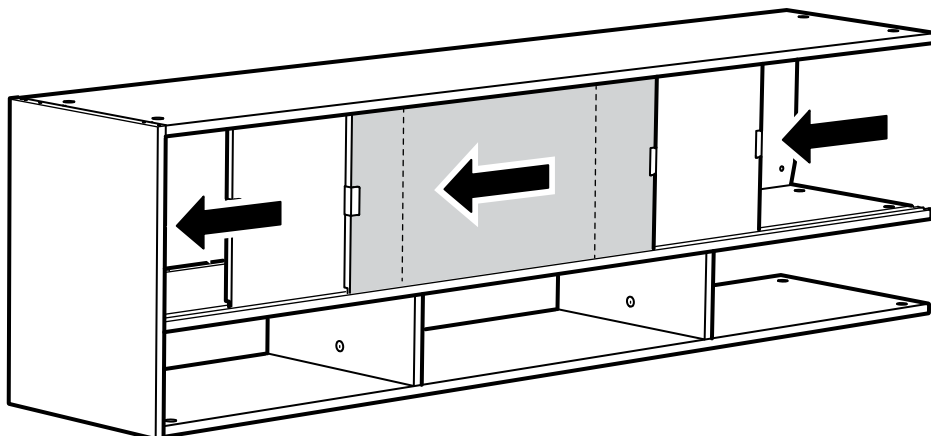 


23

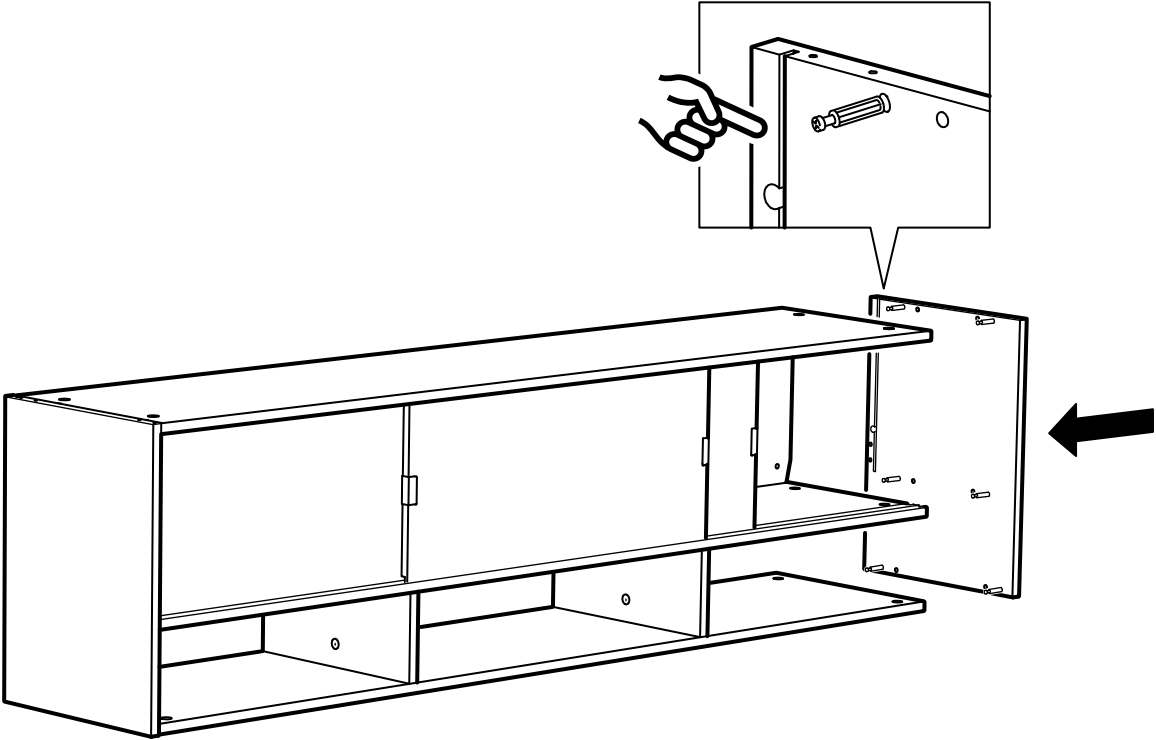 


24

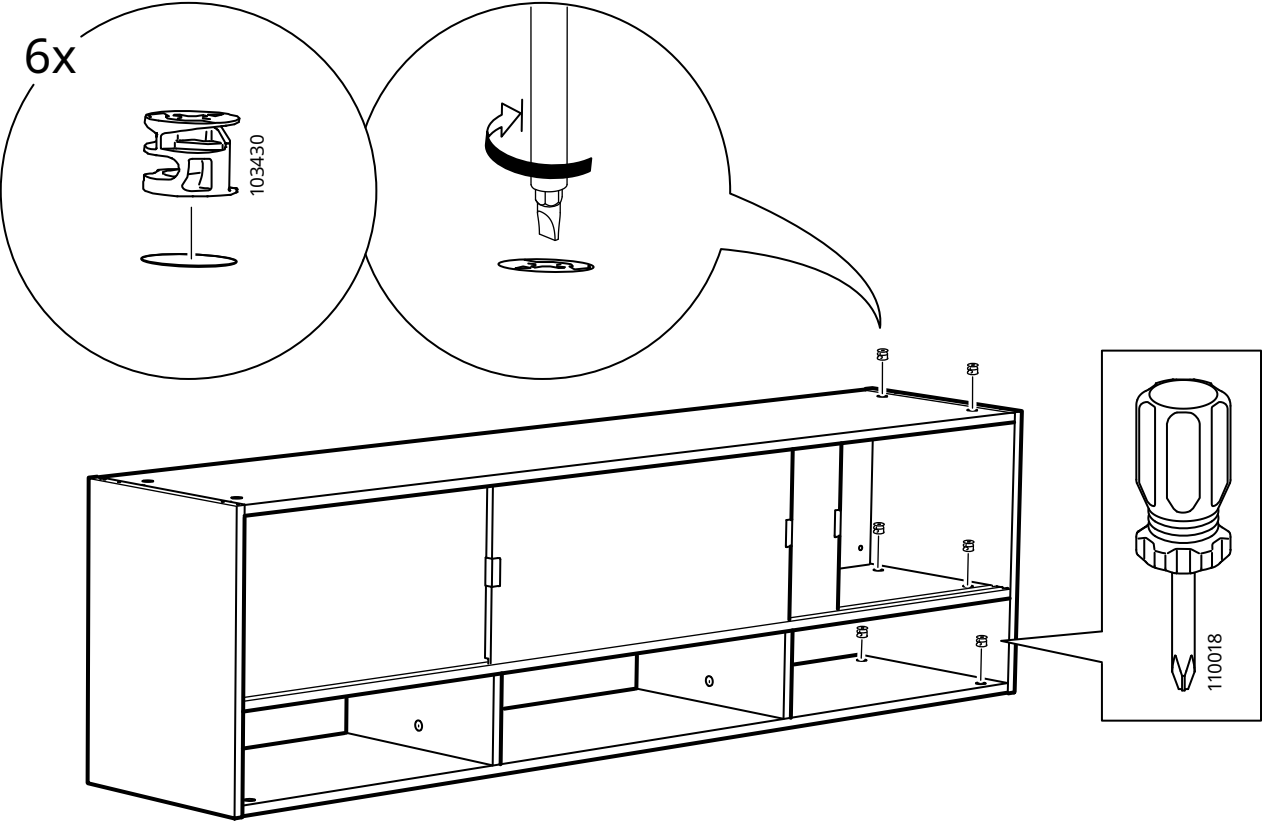 


25

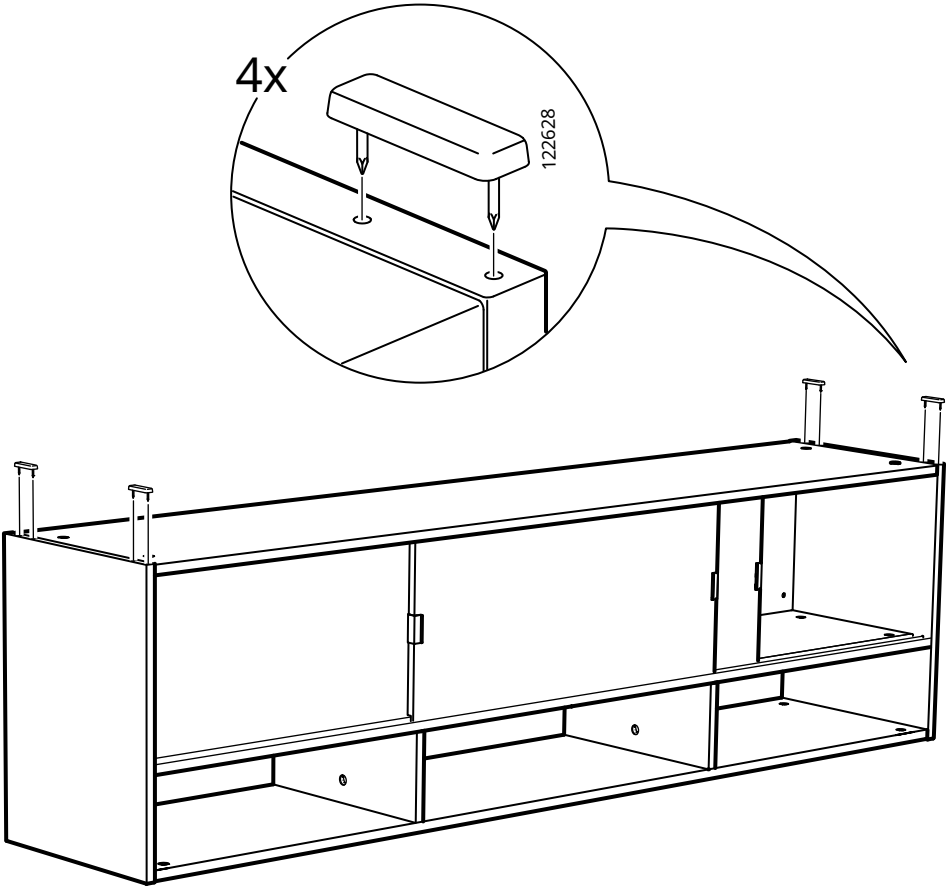 


26


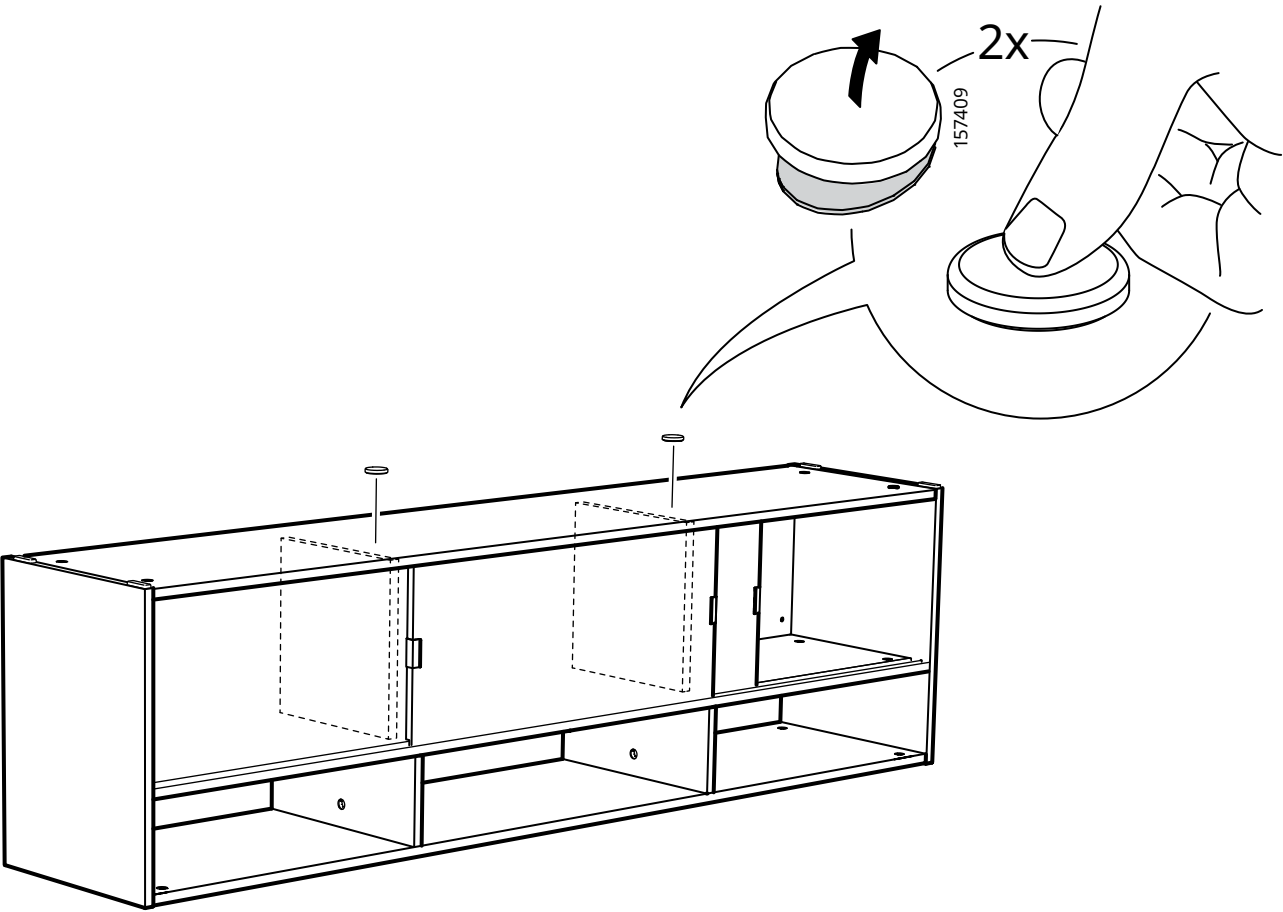 


27

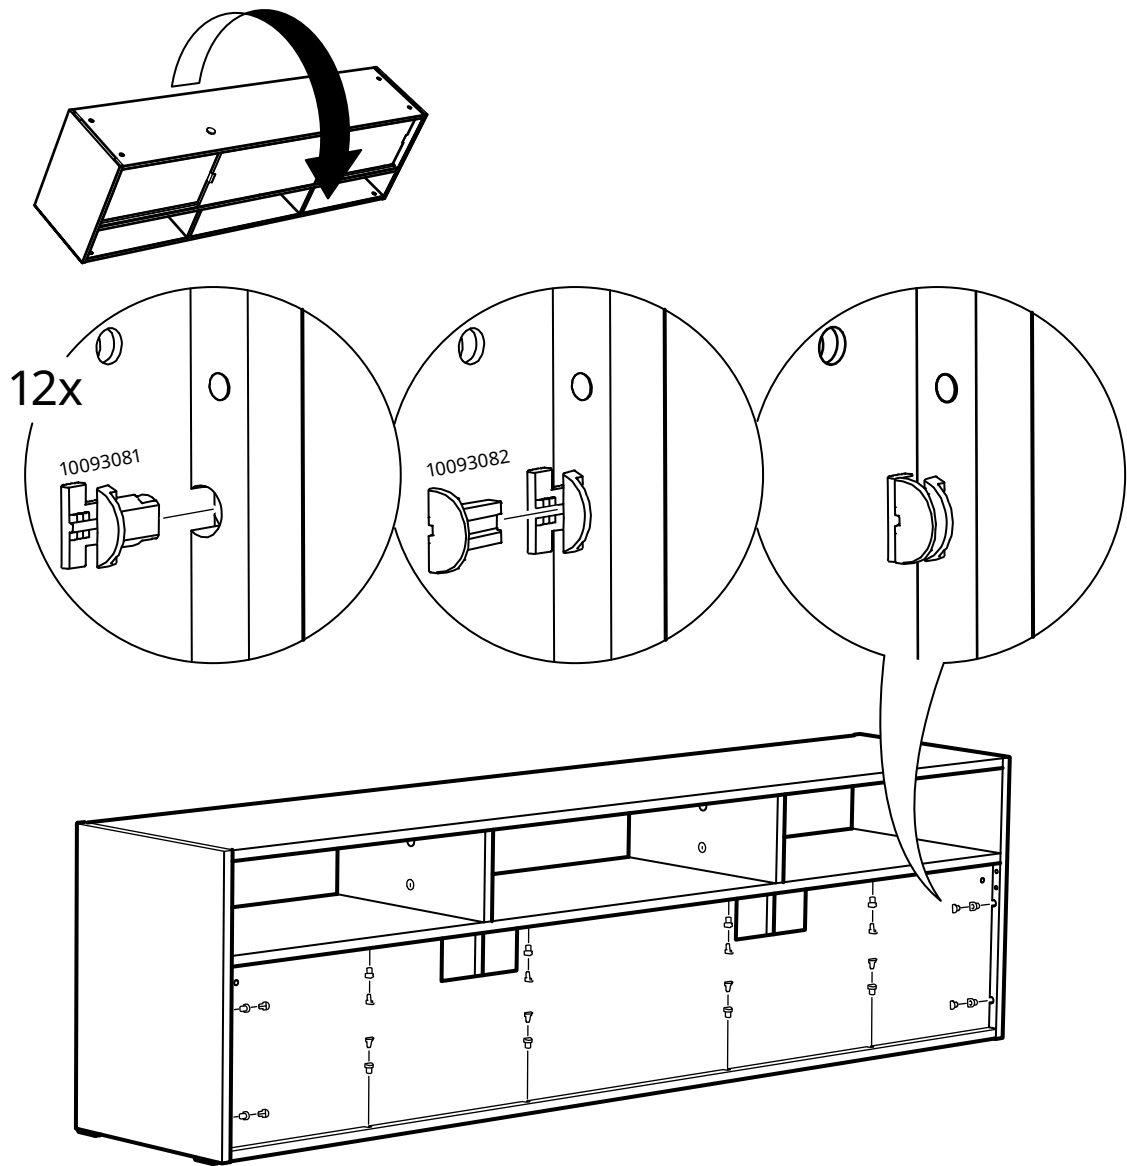 



28

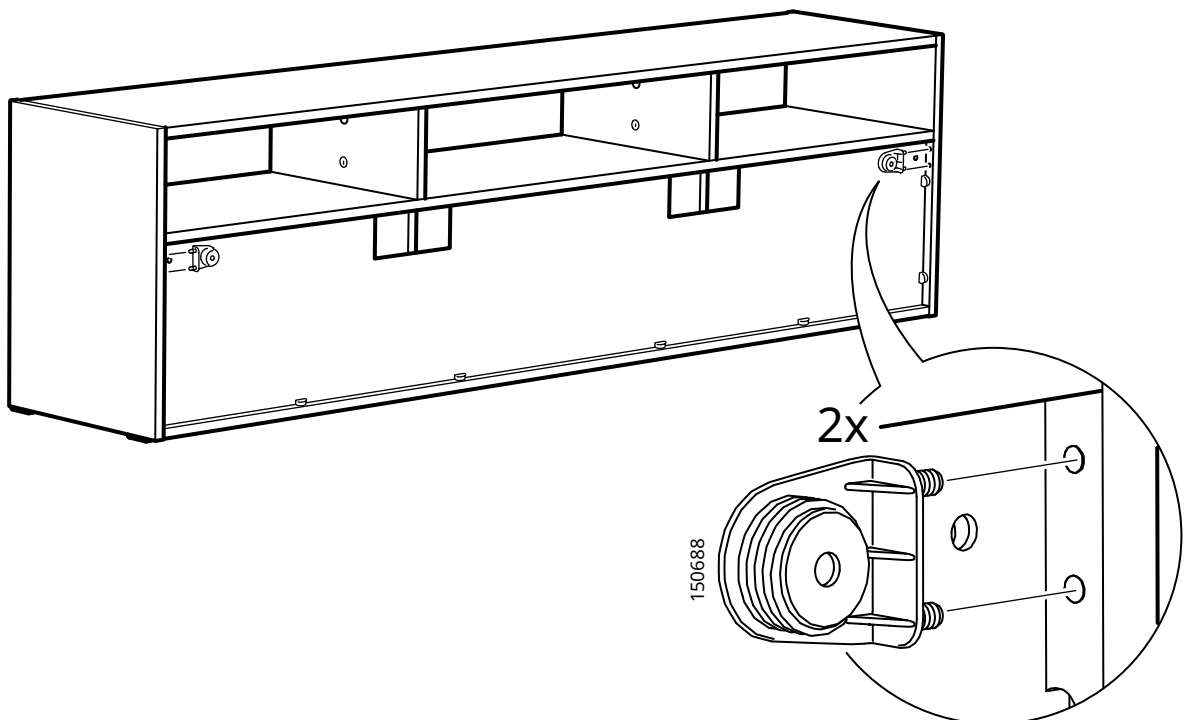 


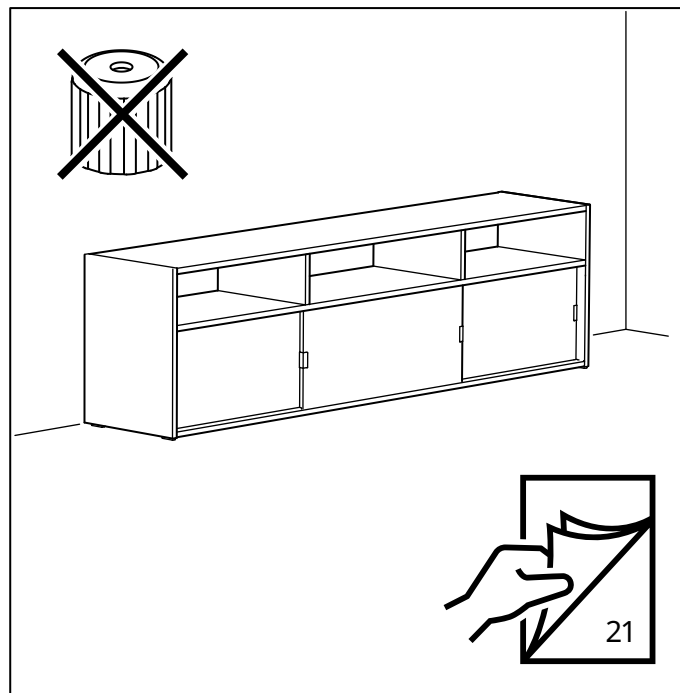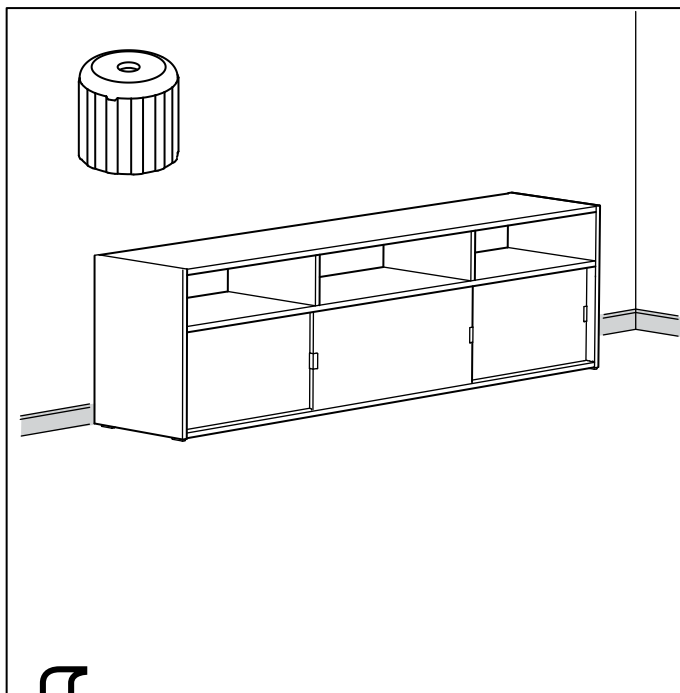  

29

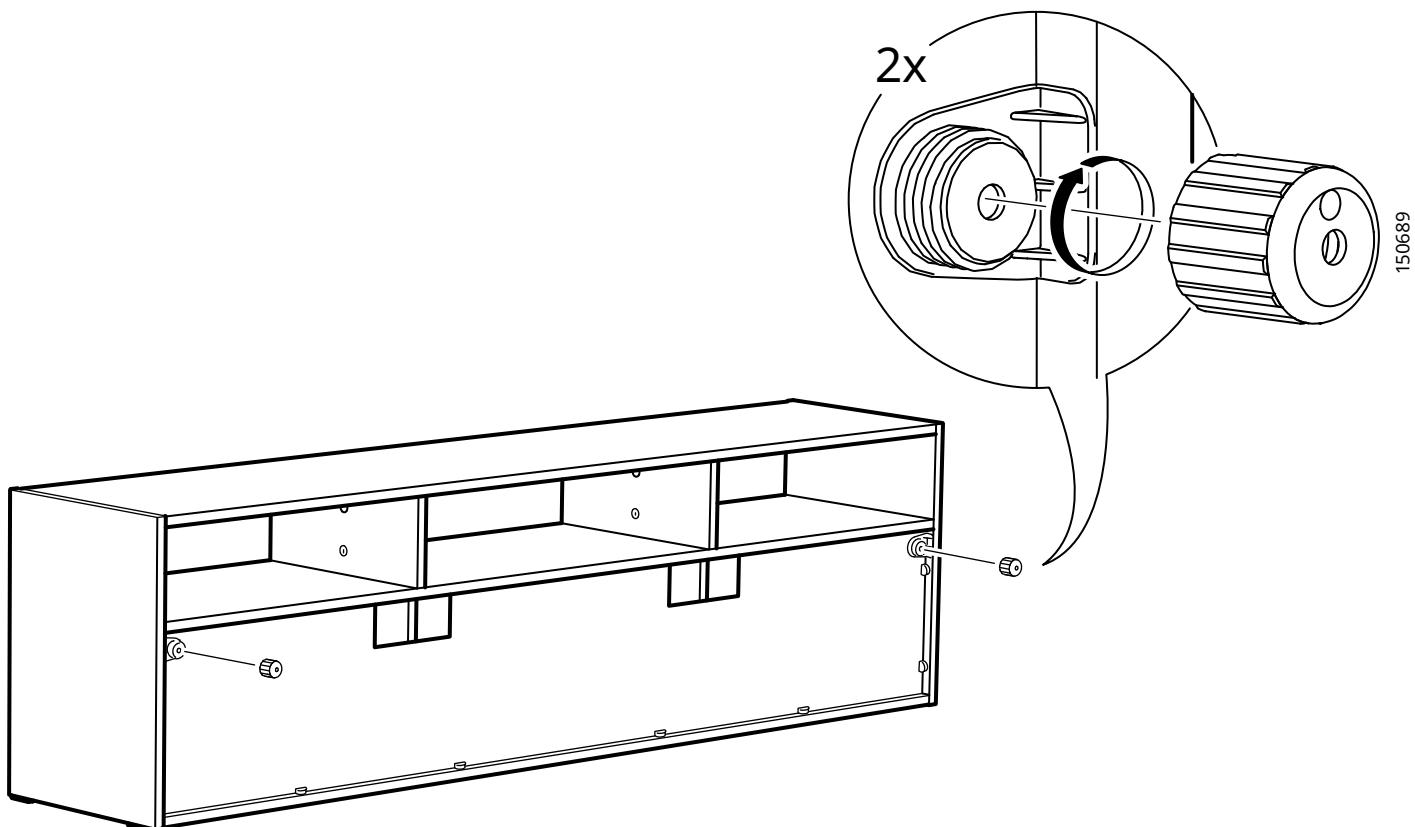 

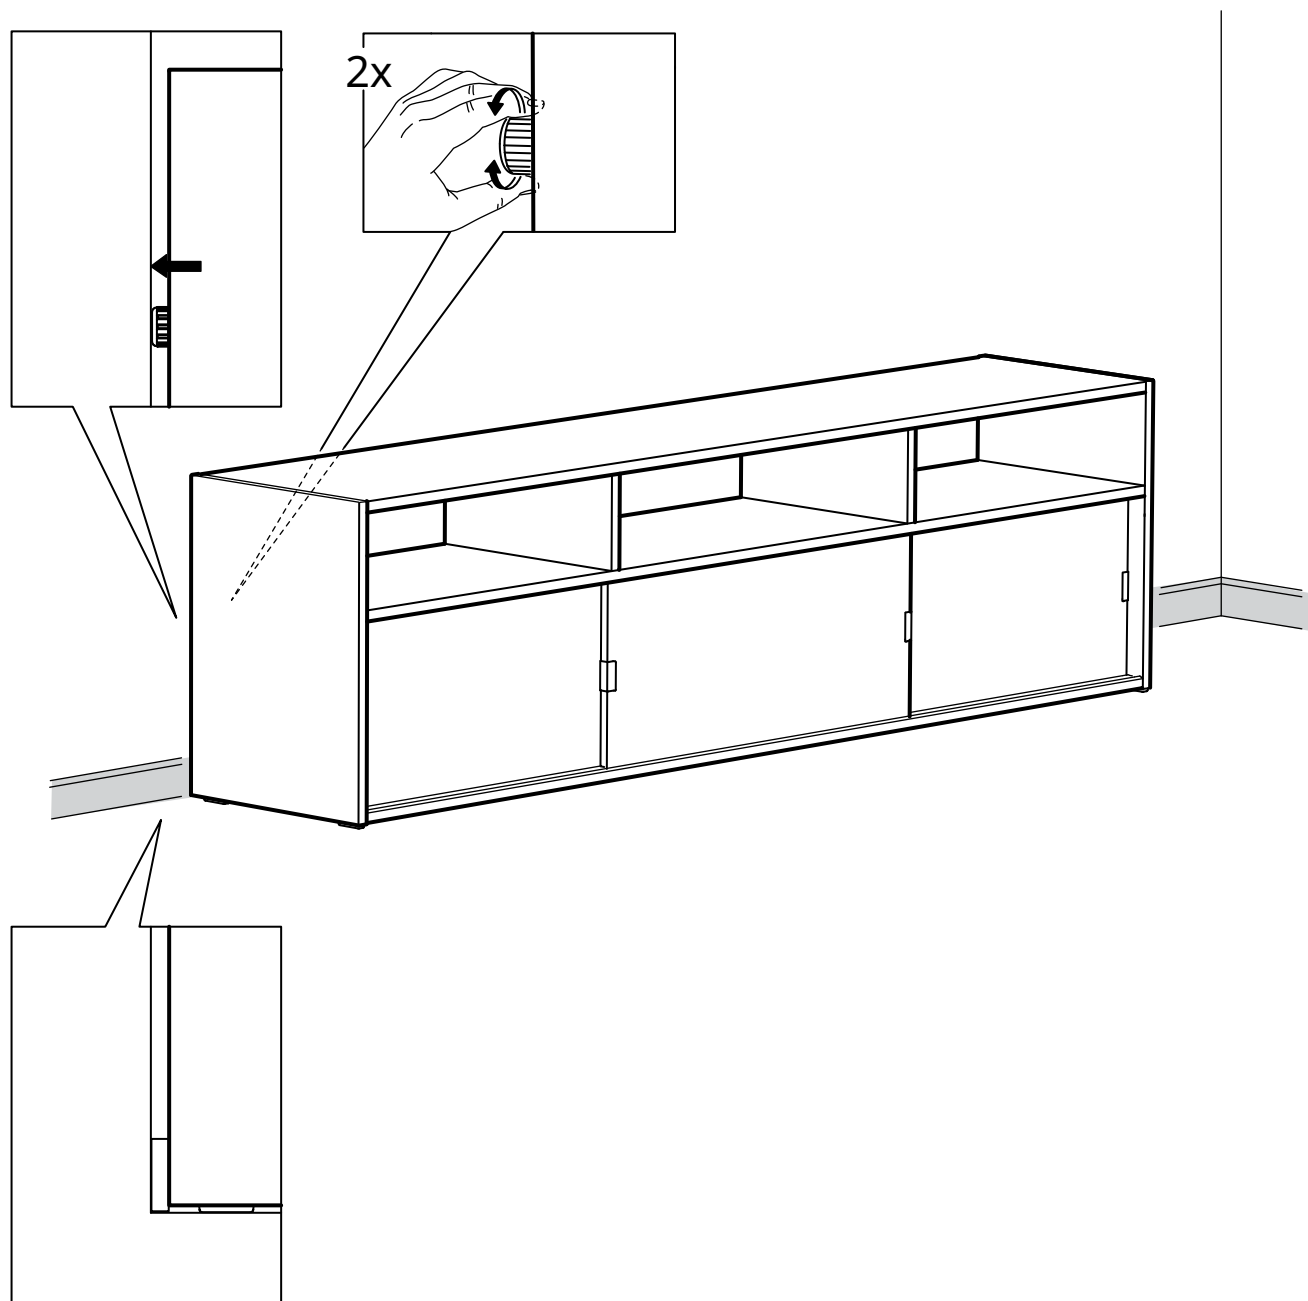 

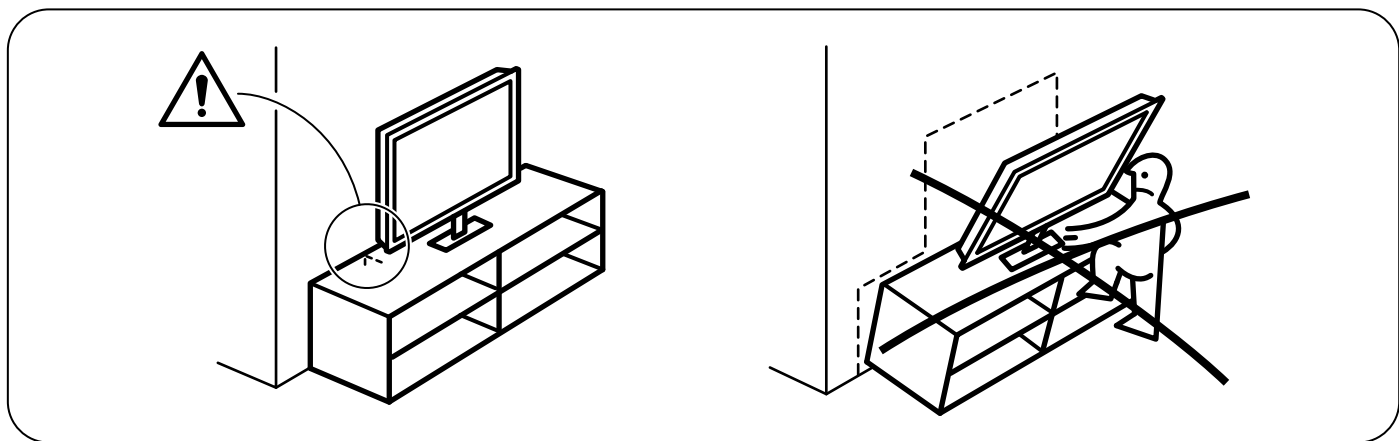 

31

