 
 
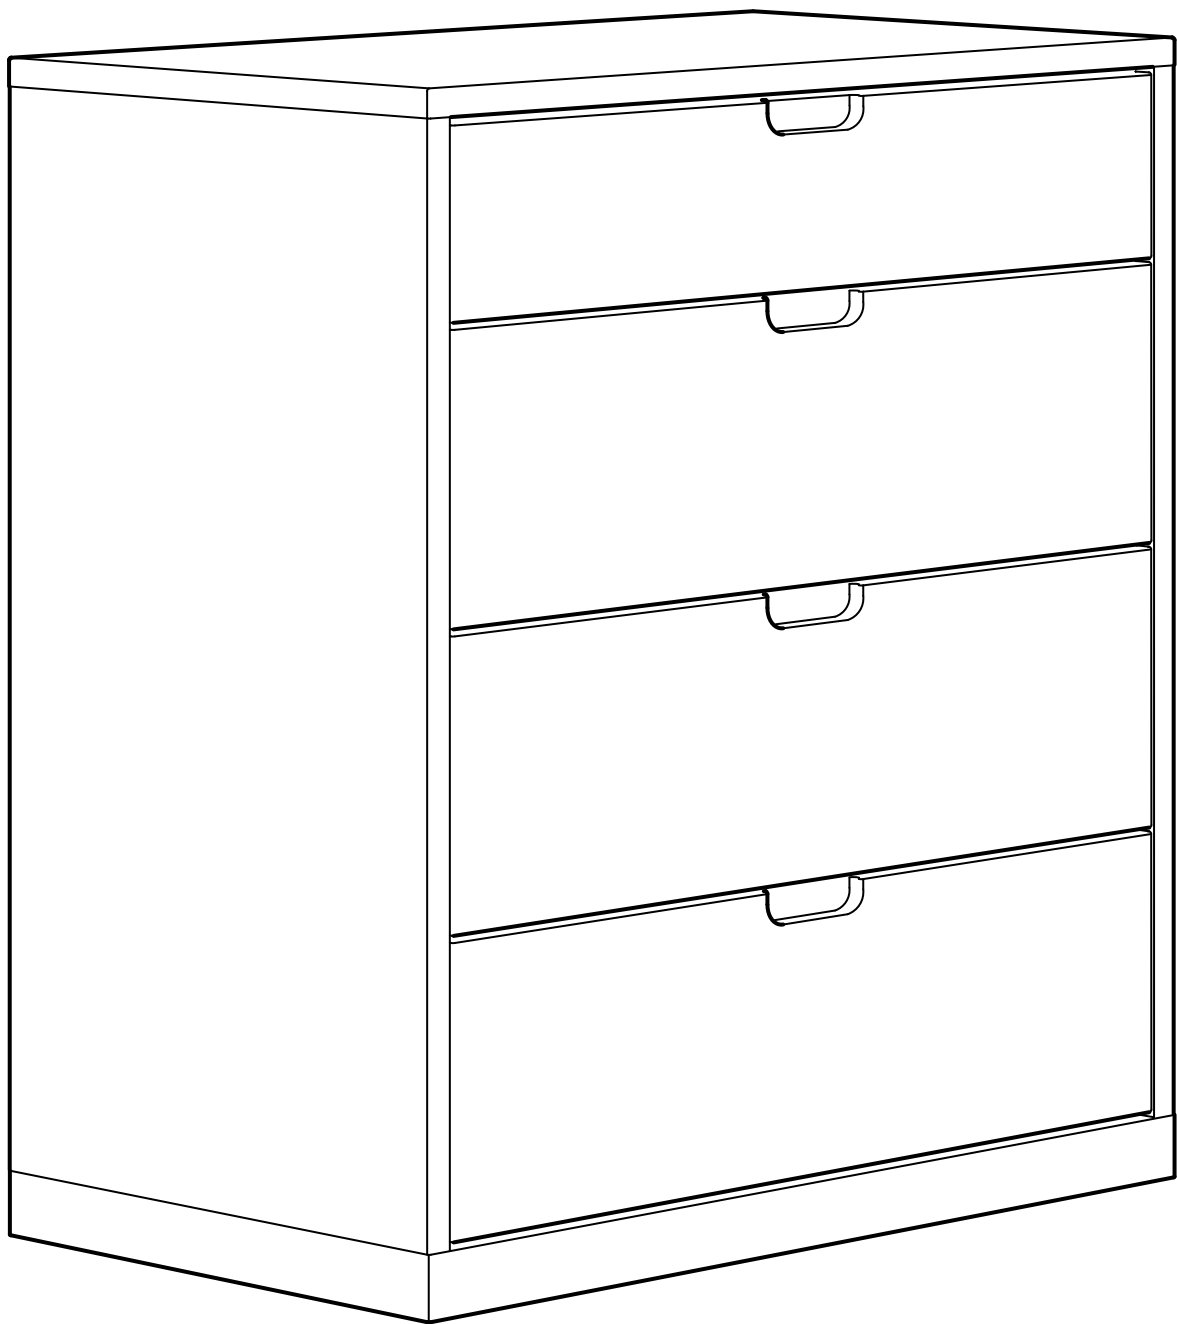 
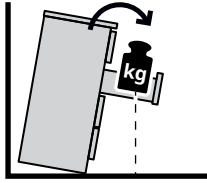 


TONSTAD

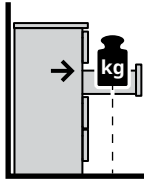

Design and Quality
IKEA of Sweden



English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

 
 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

 
 
 
 
 
NEVER open more than one drawer at a time.

Place heaviest items in the lowest drawers.

English


Read and follow each step of the instruction carefully.

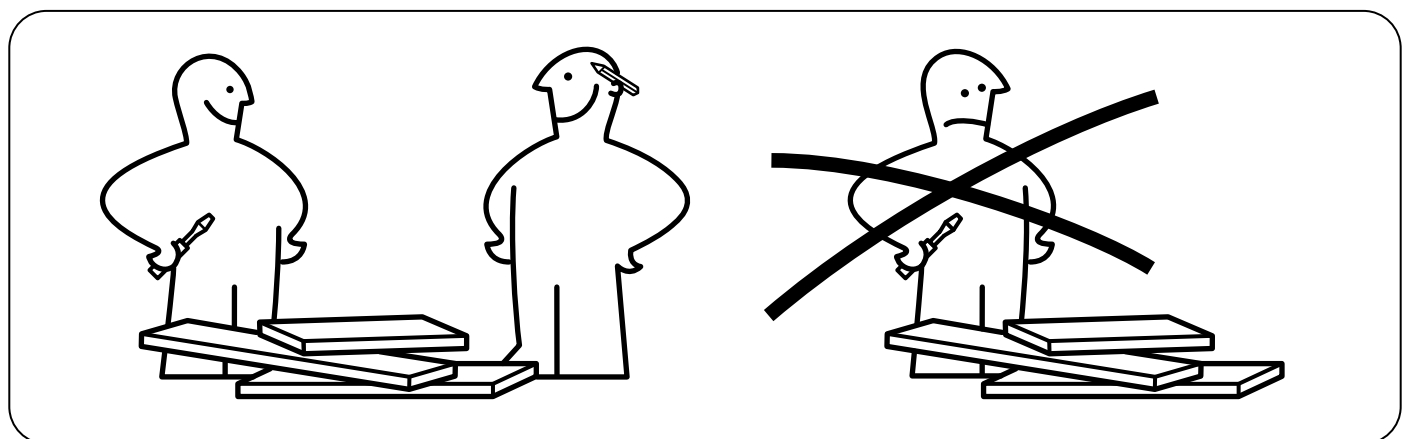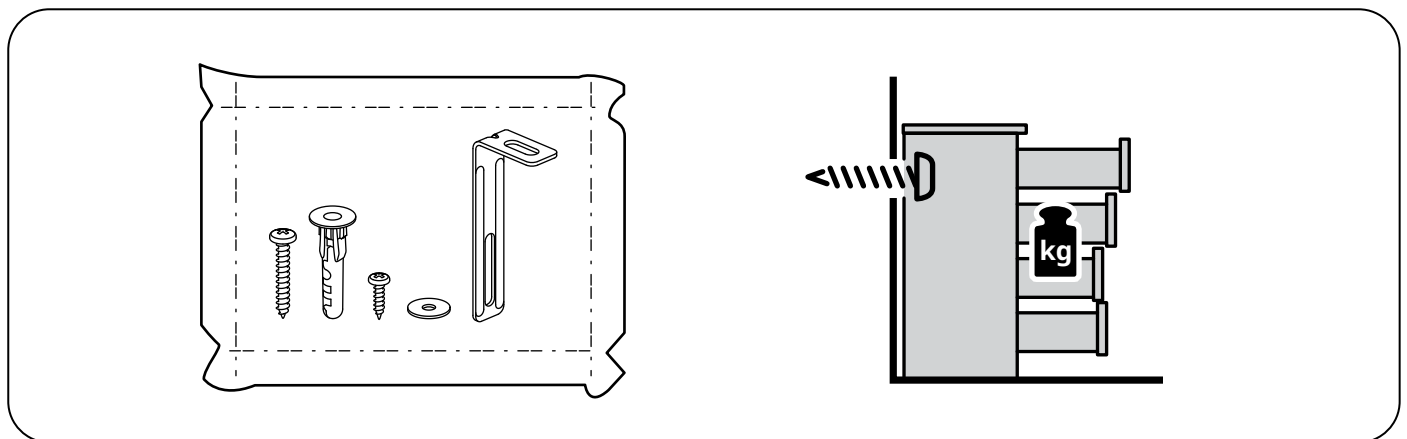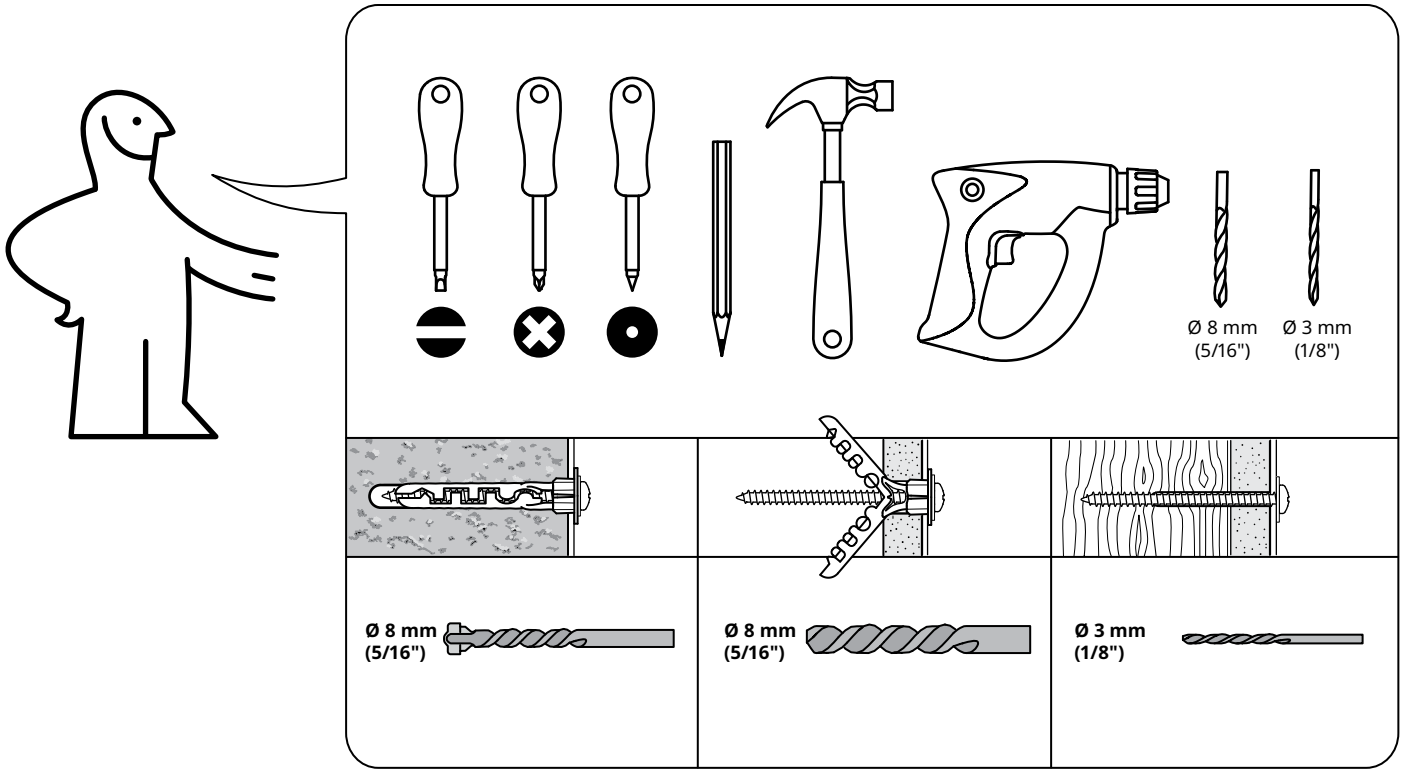

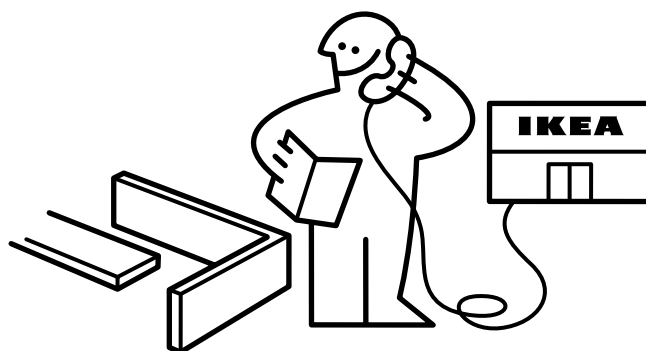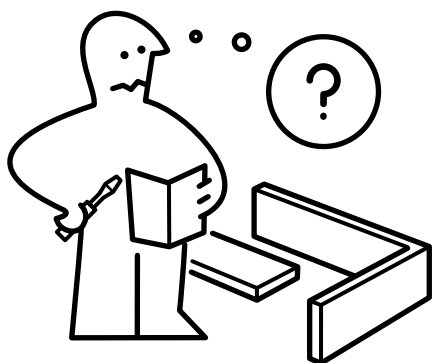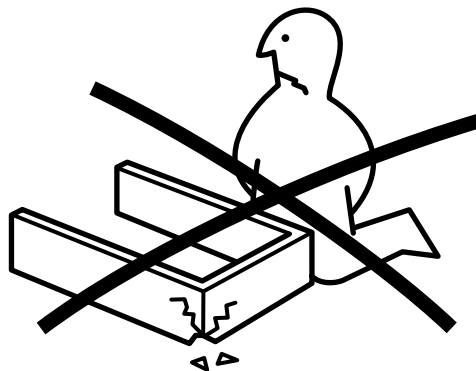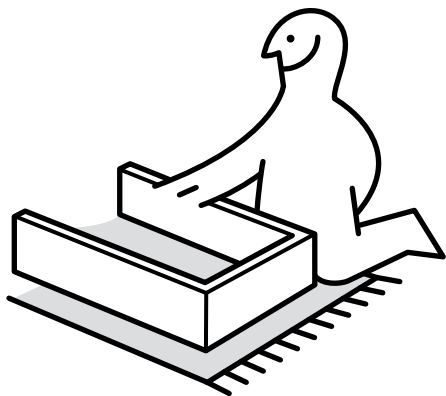

109567

 2x

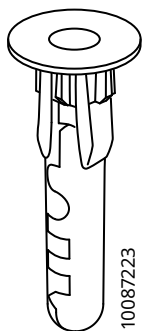


10087223

2x




109049

 2x



100823

 
4x

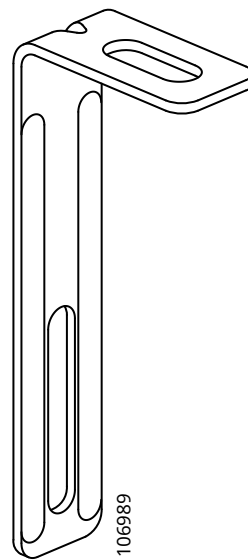

106989

2x

 
371505



16x



 16x



6x



 
6x




20x




10x

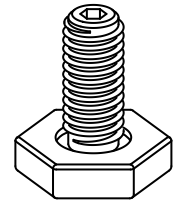


4x

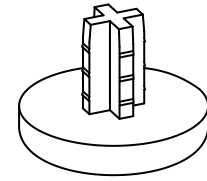 


2x

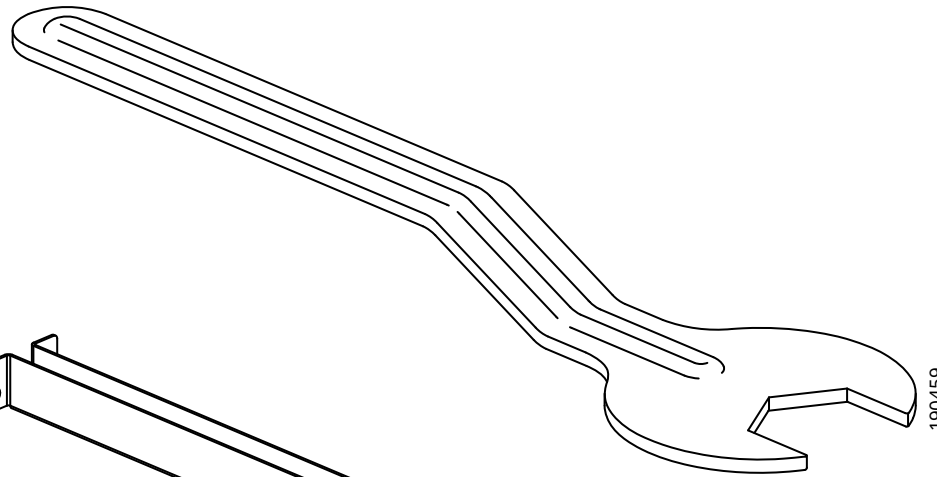 

1x

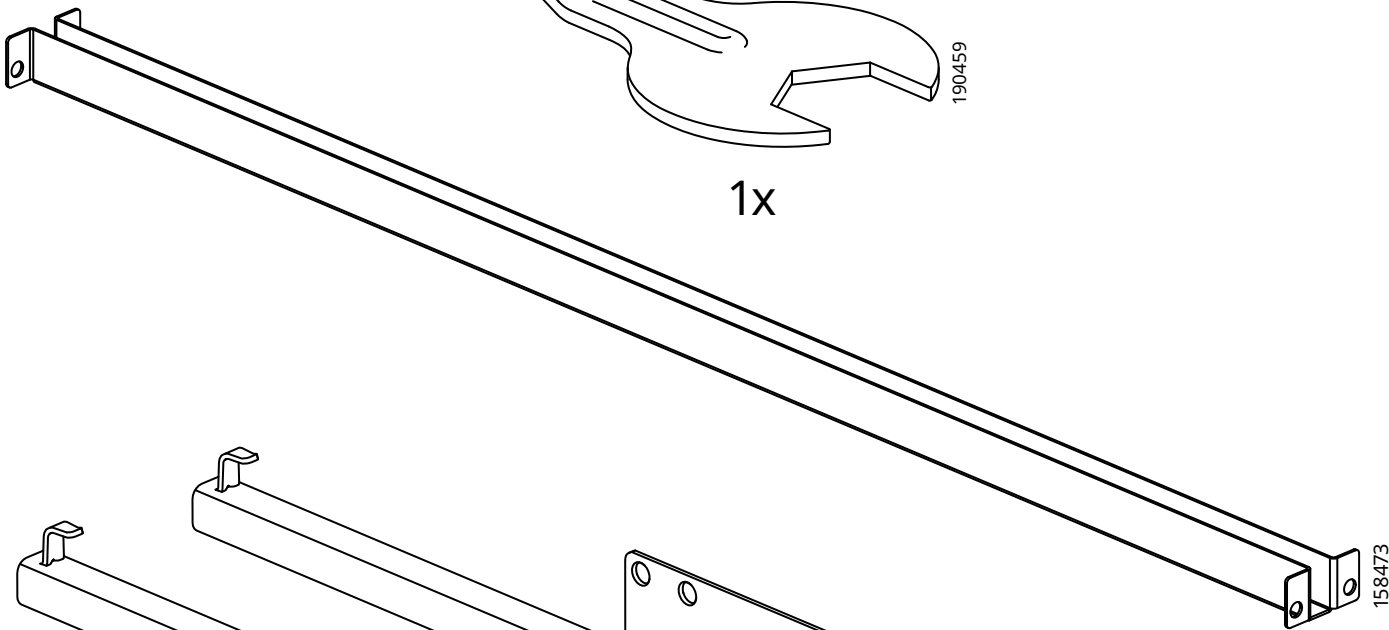 


1x

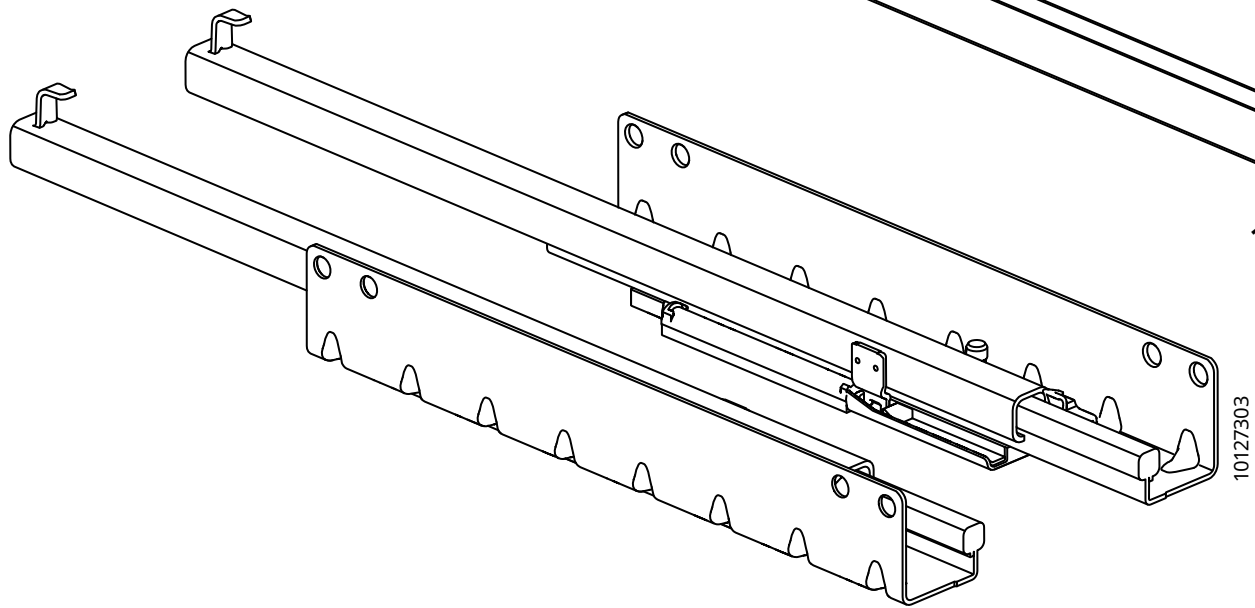 


4x

 
1

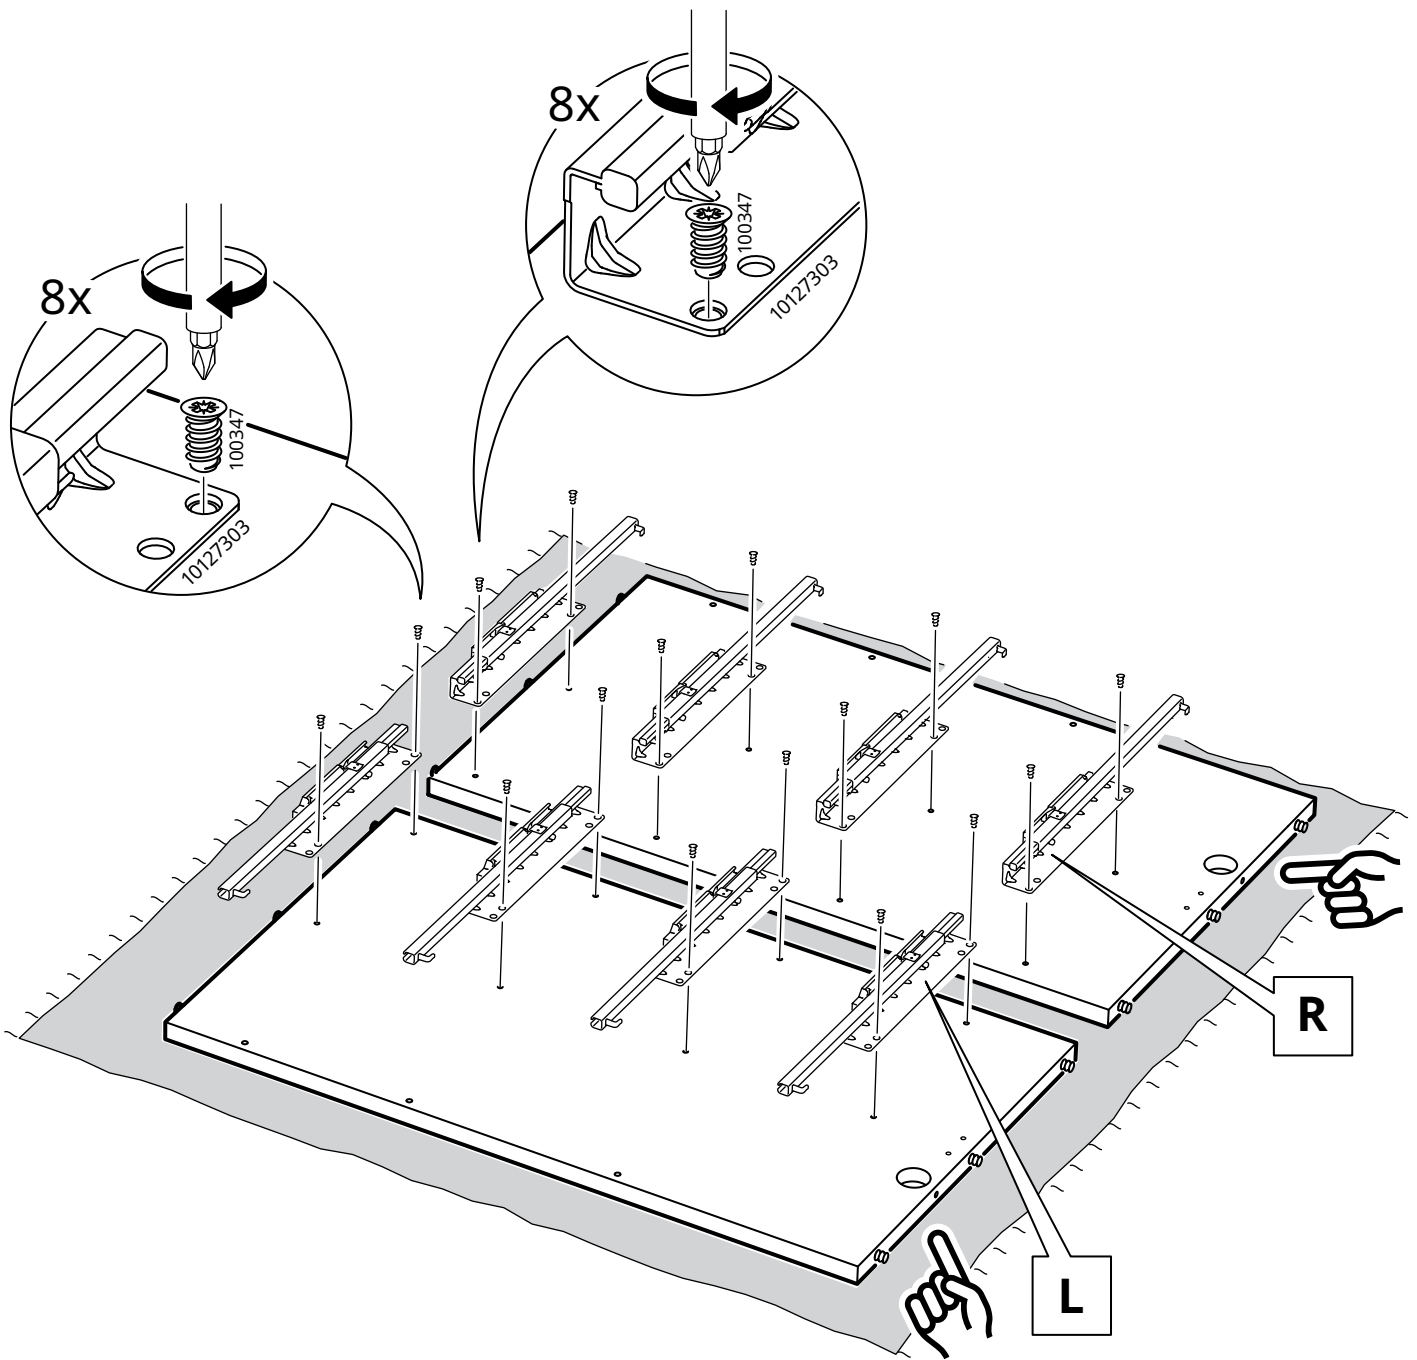


2

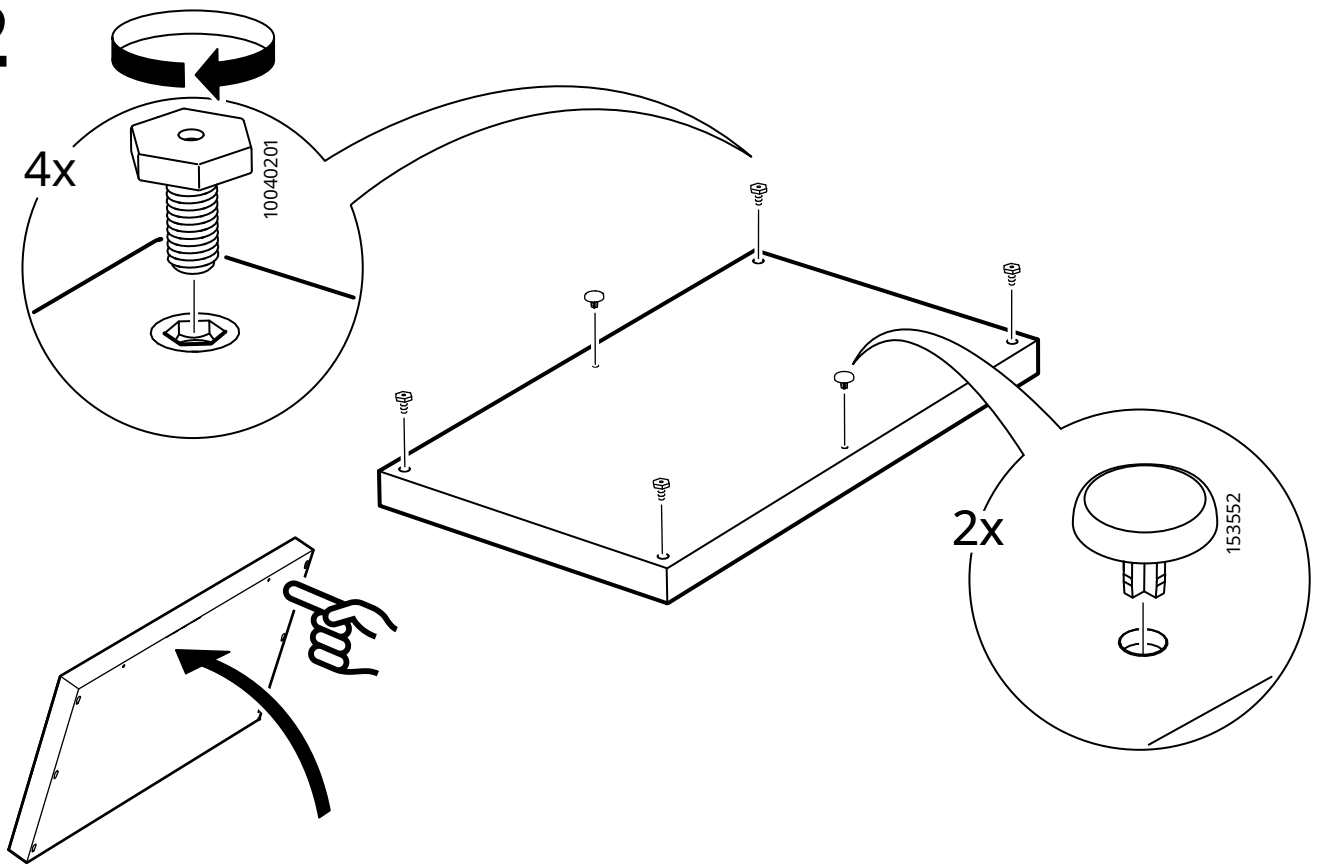 


3

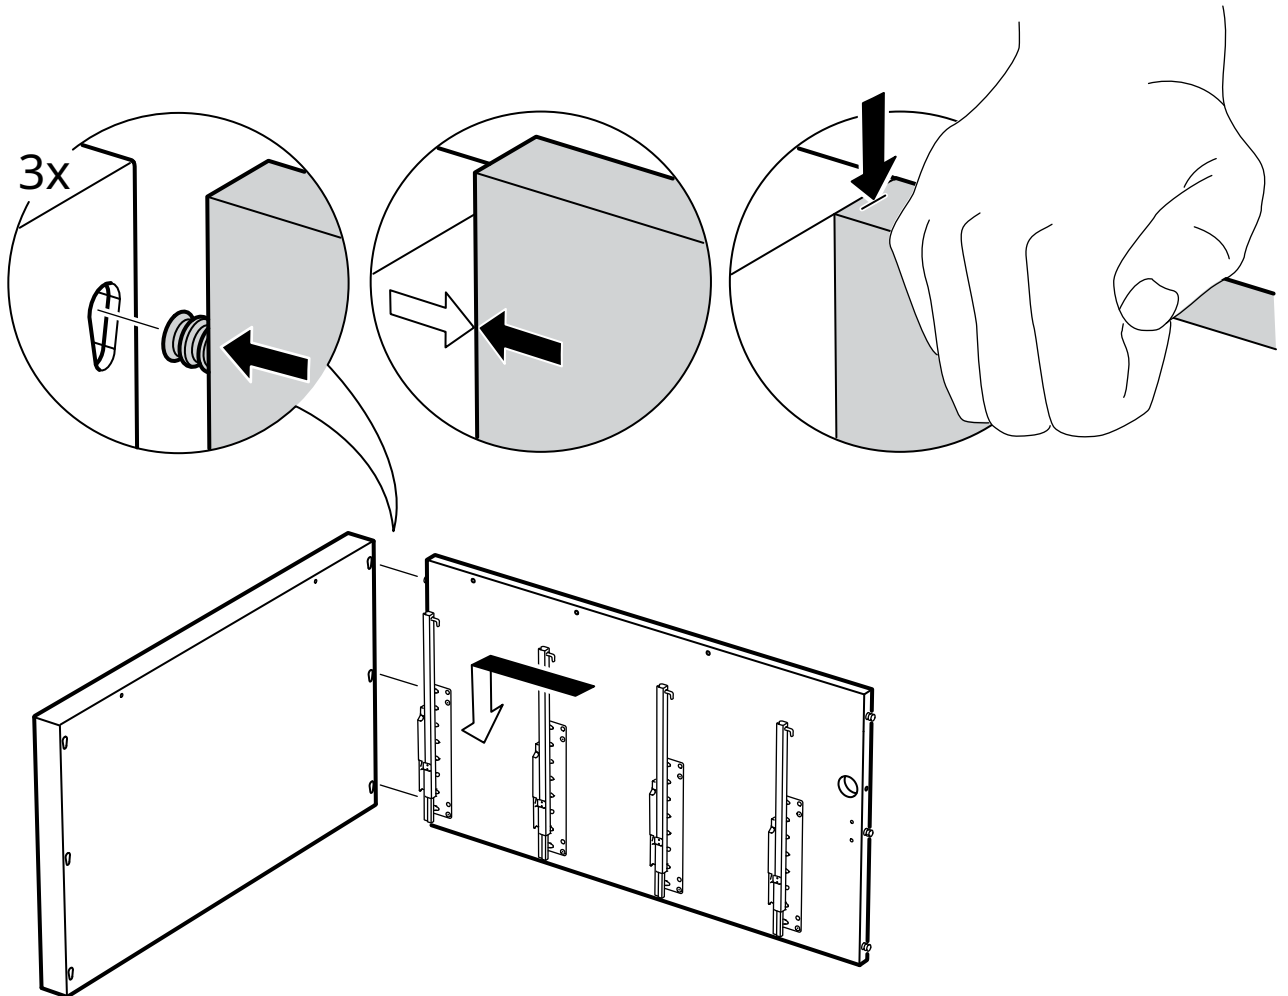 


4

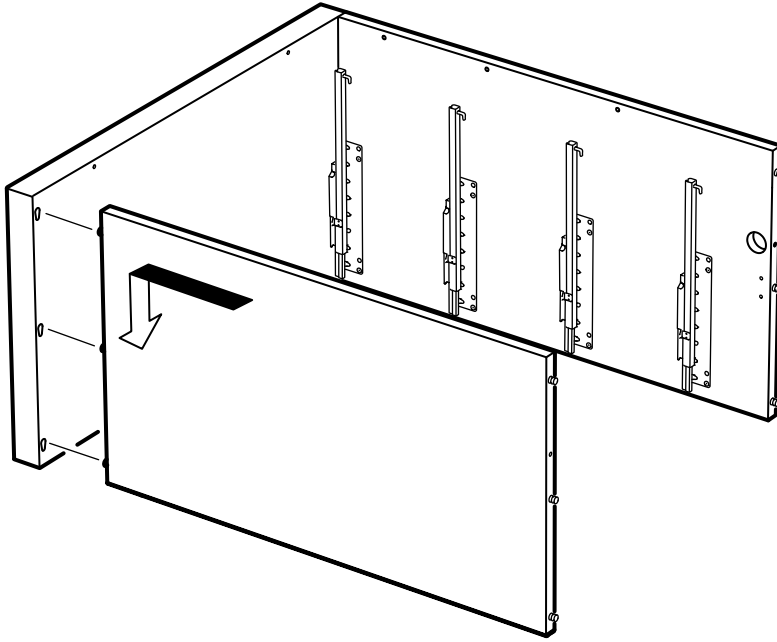 


5

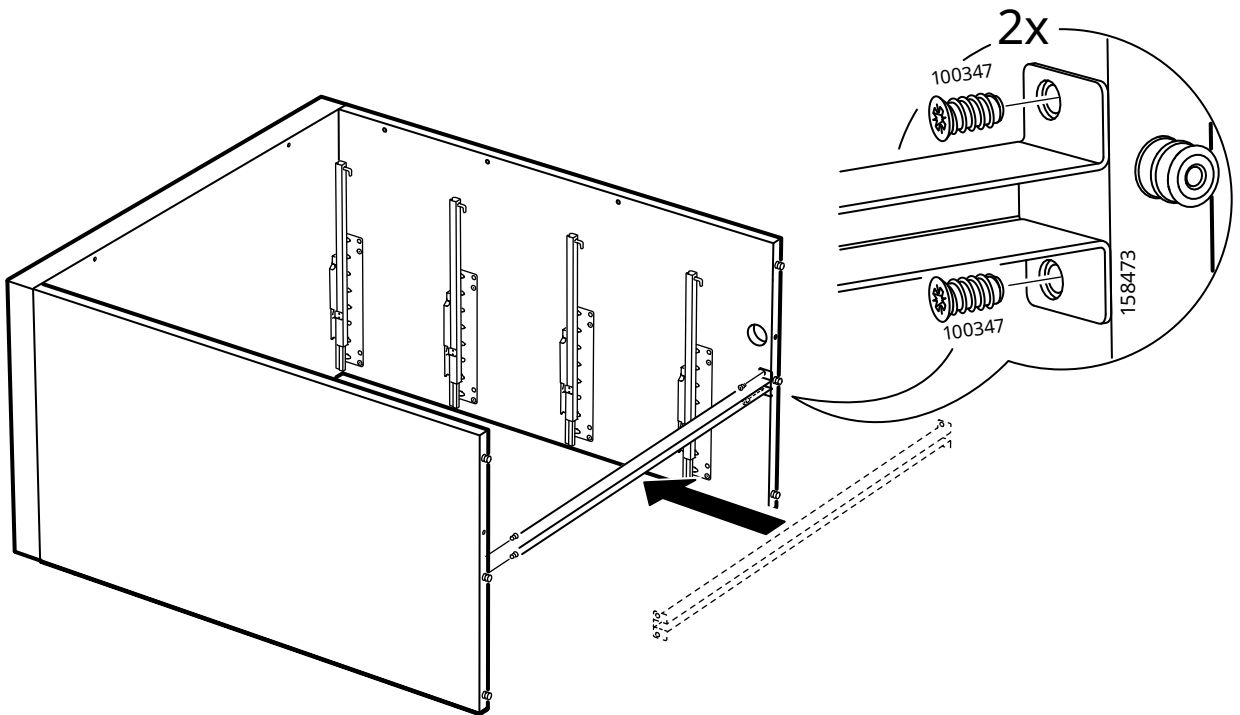 


6

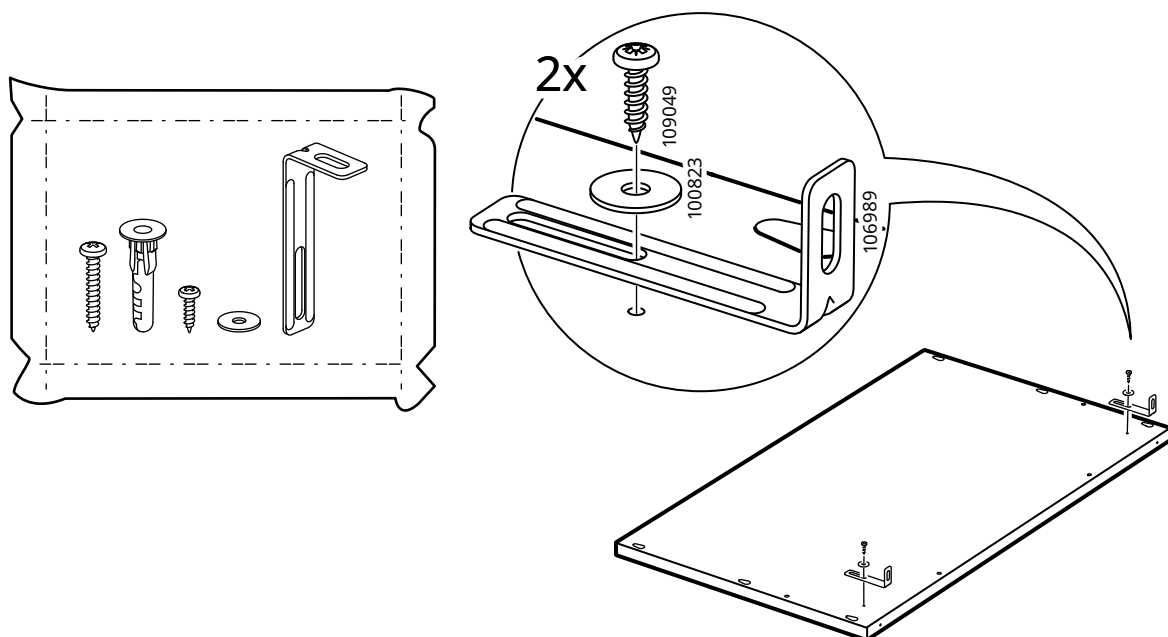 


7

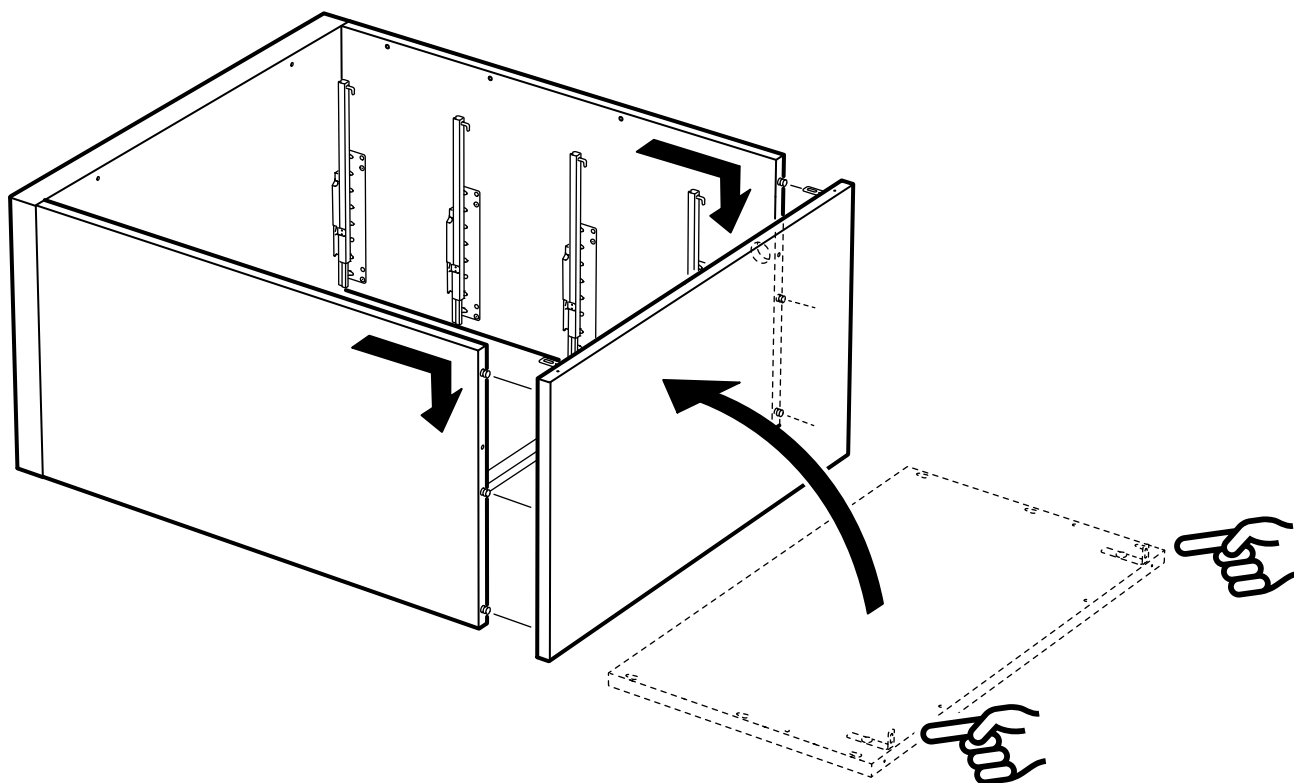 


8


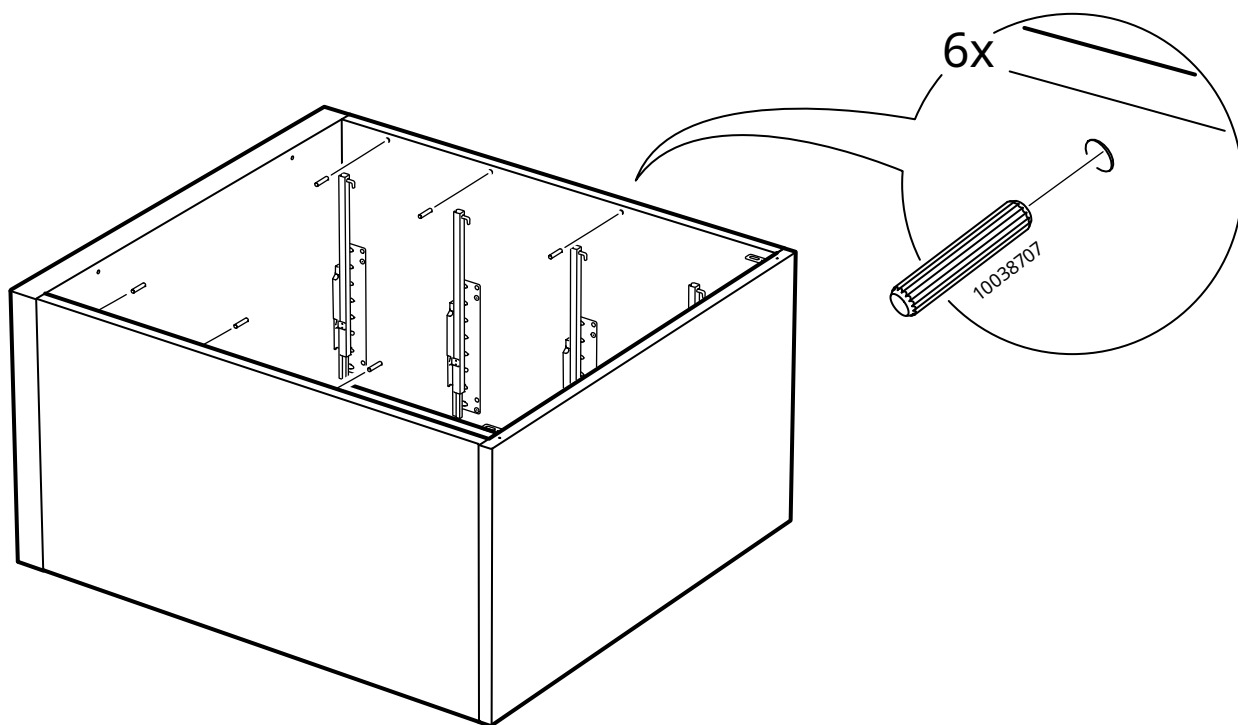 


9

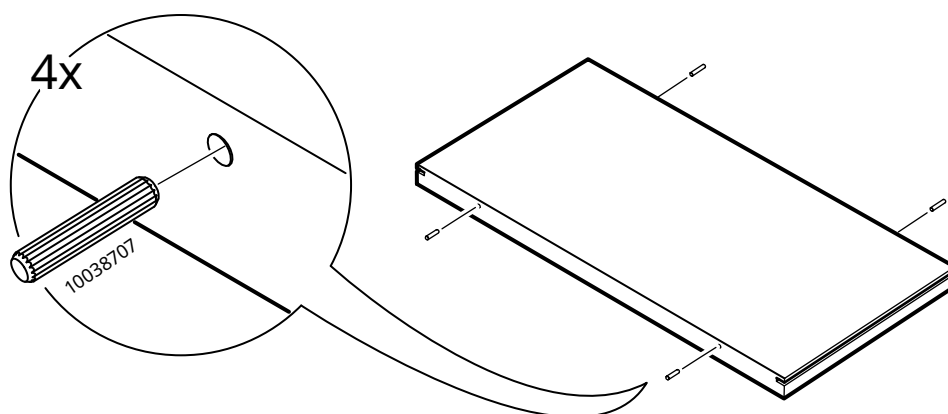 


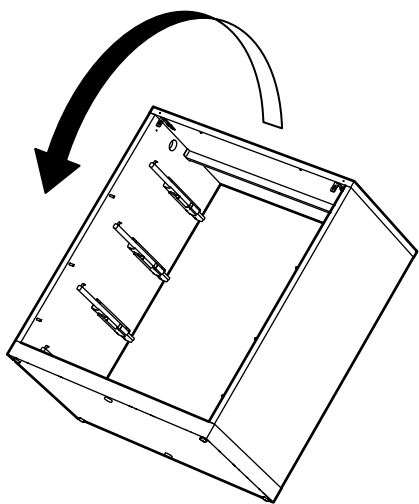 


10

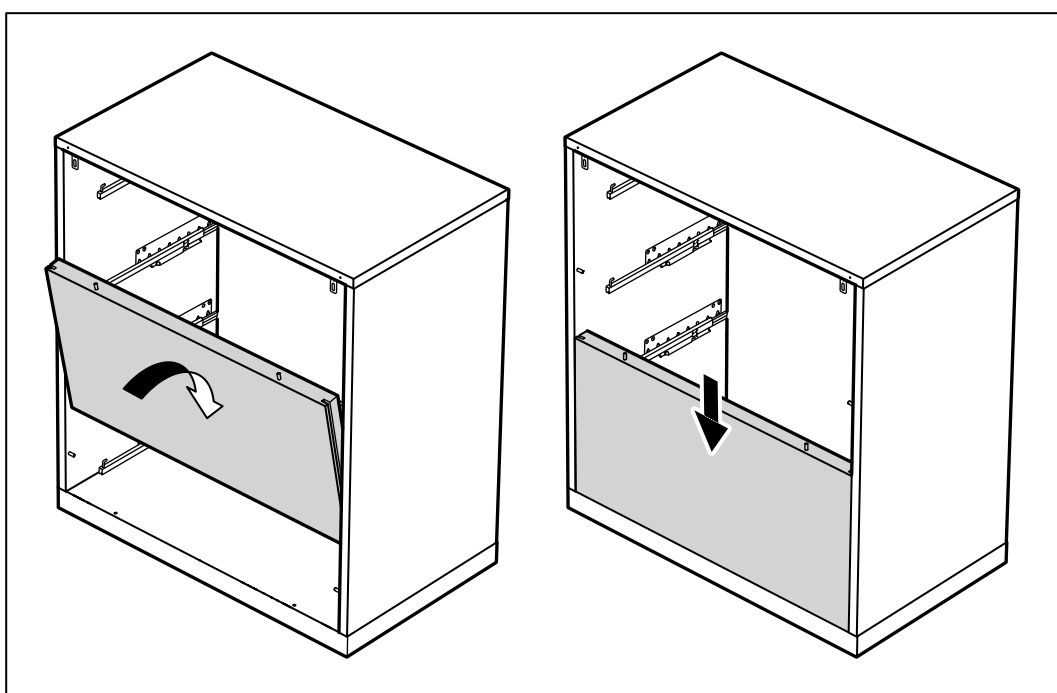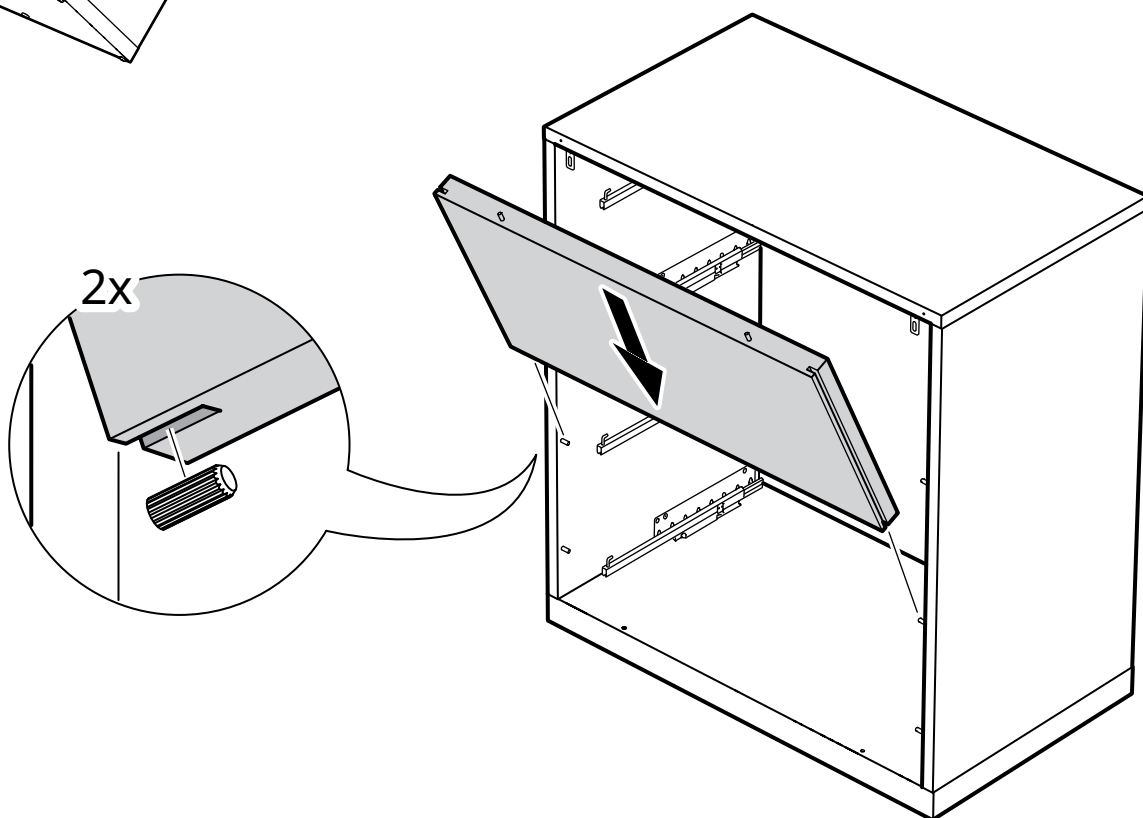  


11

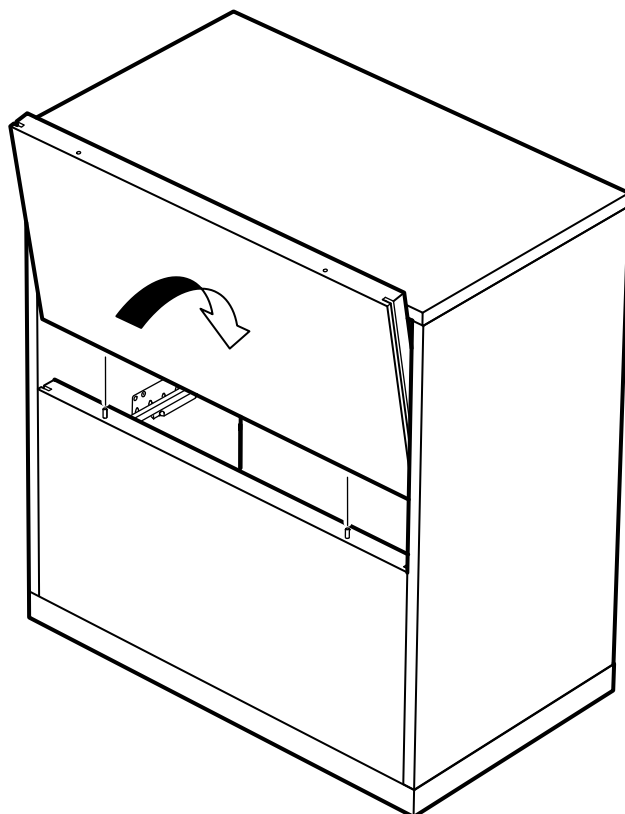 


12

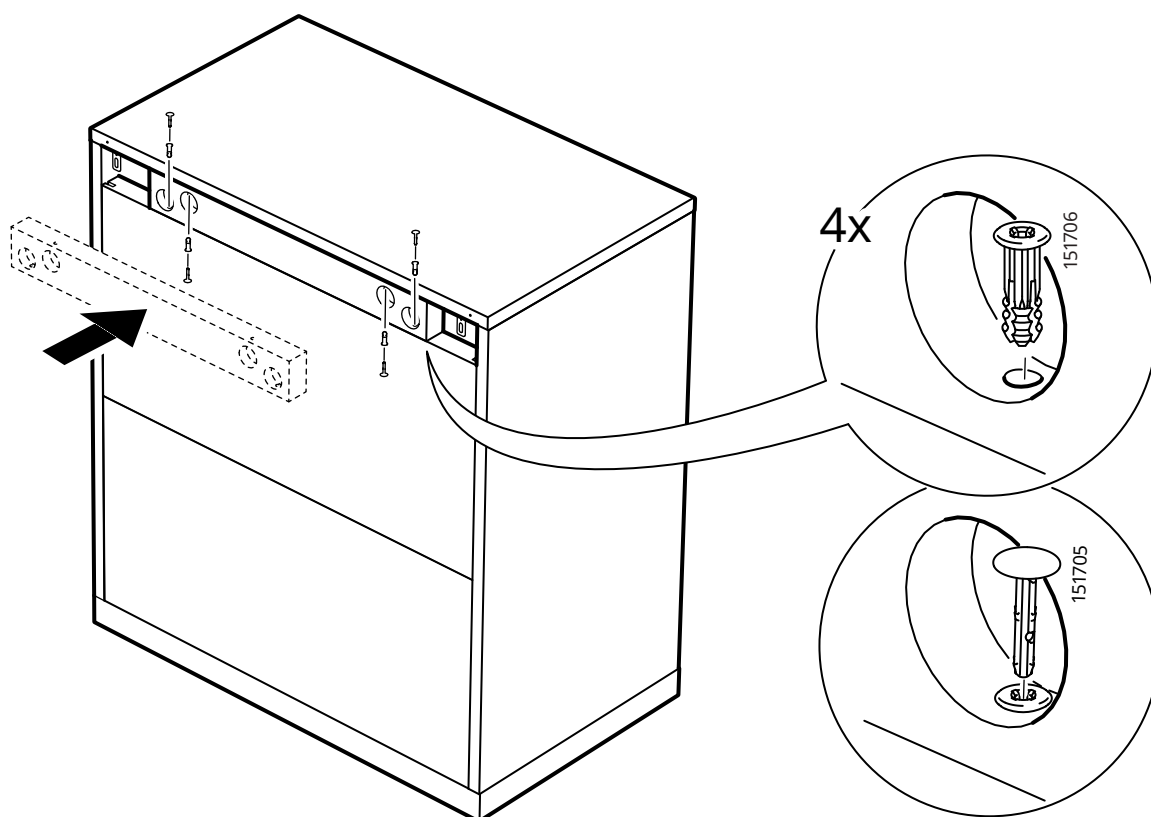 


13

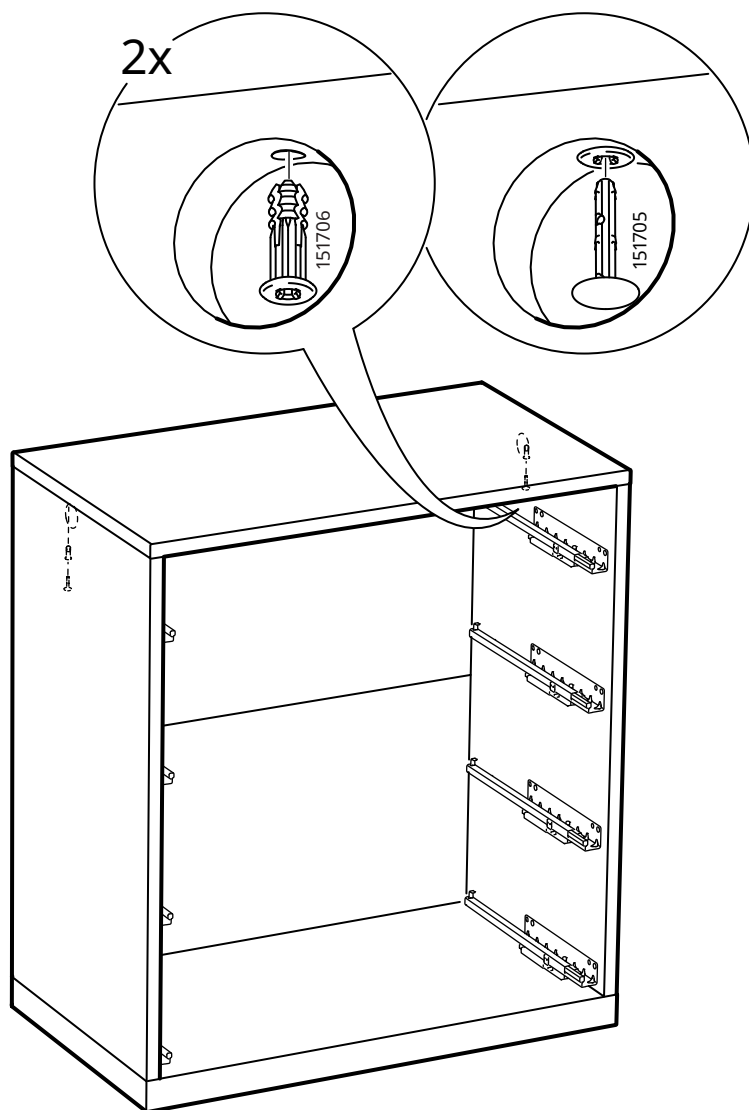 


14

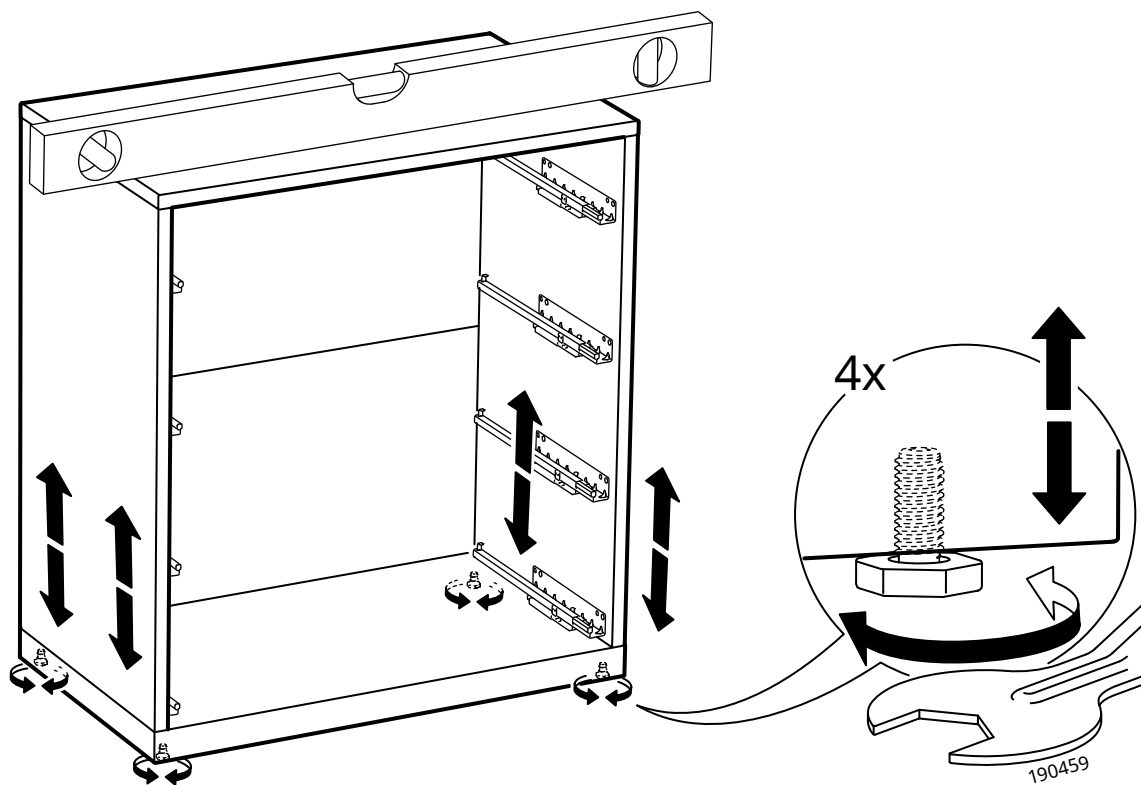 

15

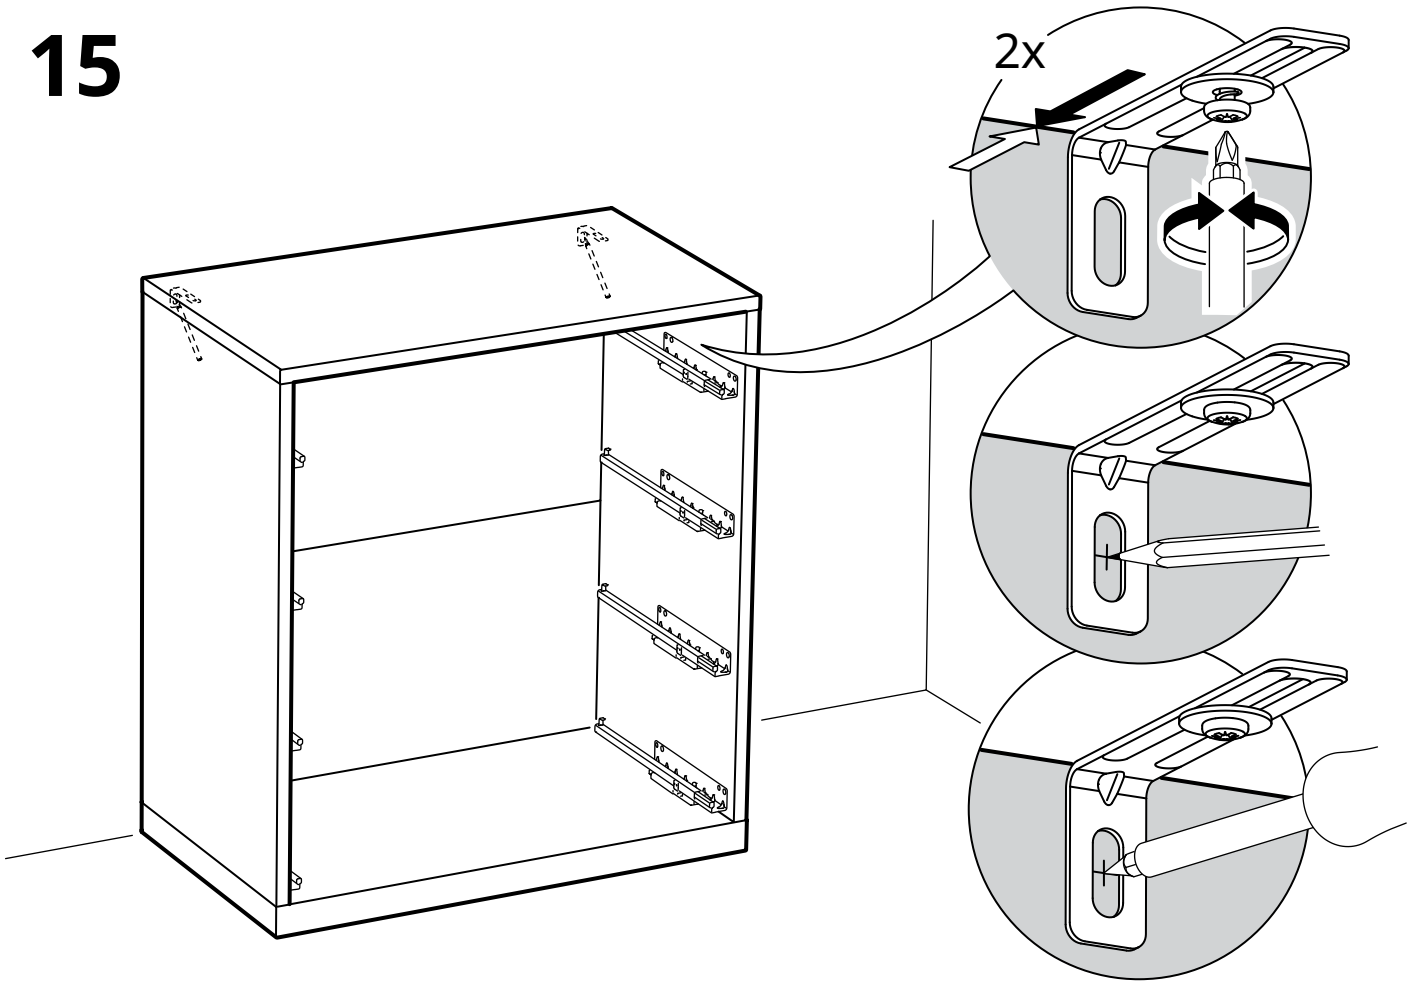 

16

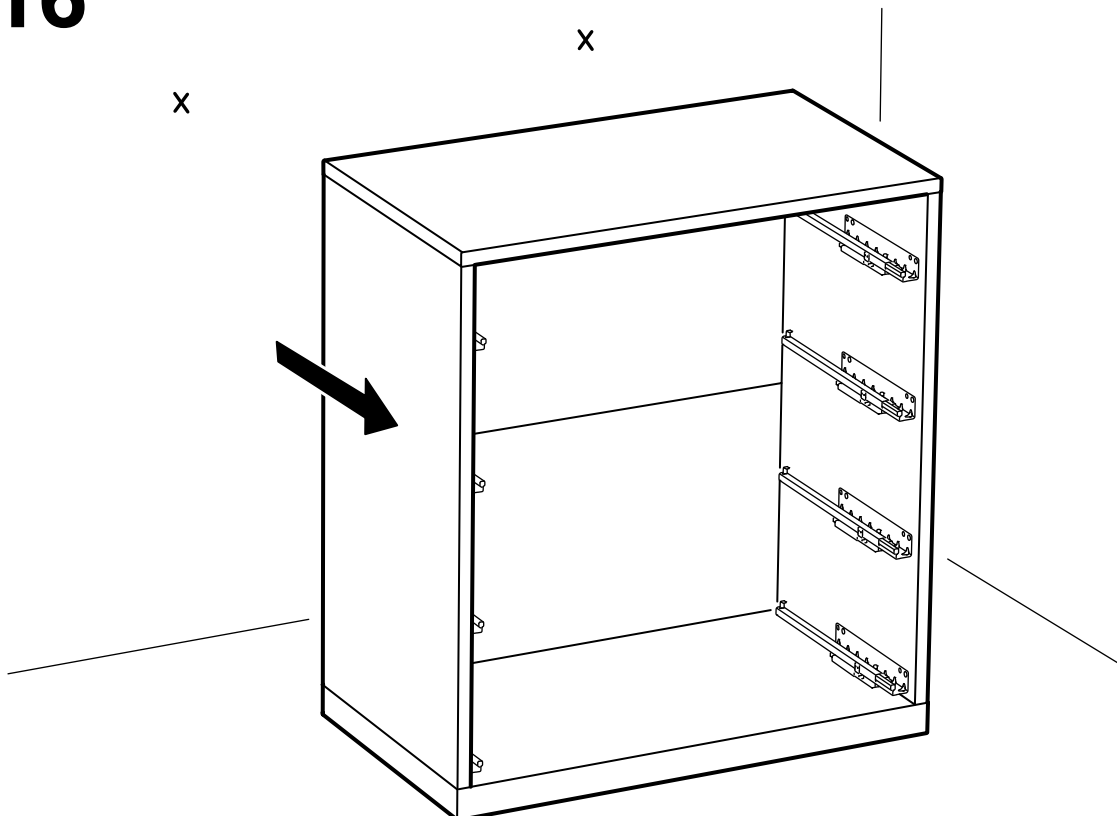 




www.IKEA.com/secure-it



 www.IKEA.cn/secure-it

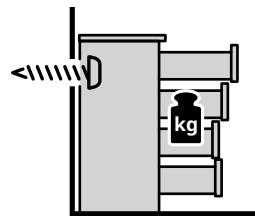

17

 
English

 
The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

A
Ø 8 mm (5/16")
1
2
3


B
Ø 8 mm (5/16")
1
2
3

C
Ø 3 mm (1/8")
1
2
3

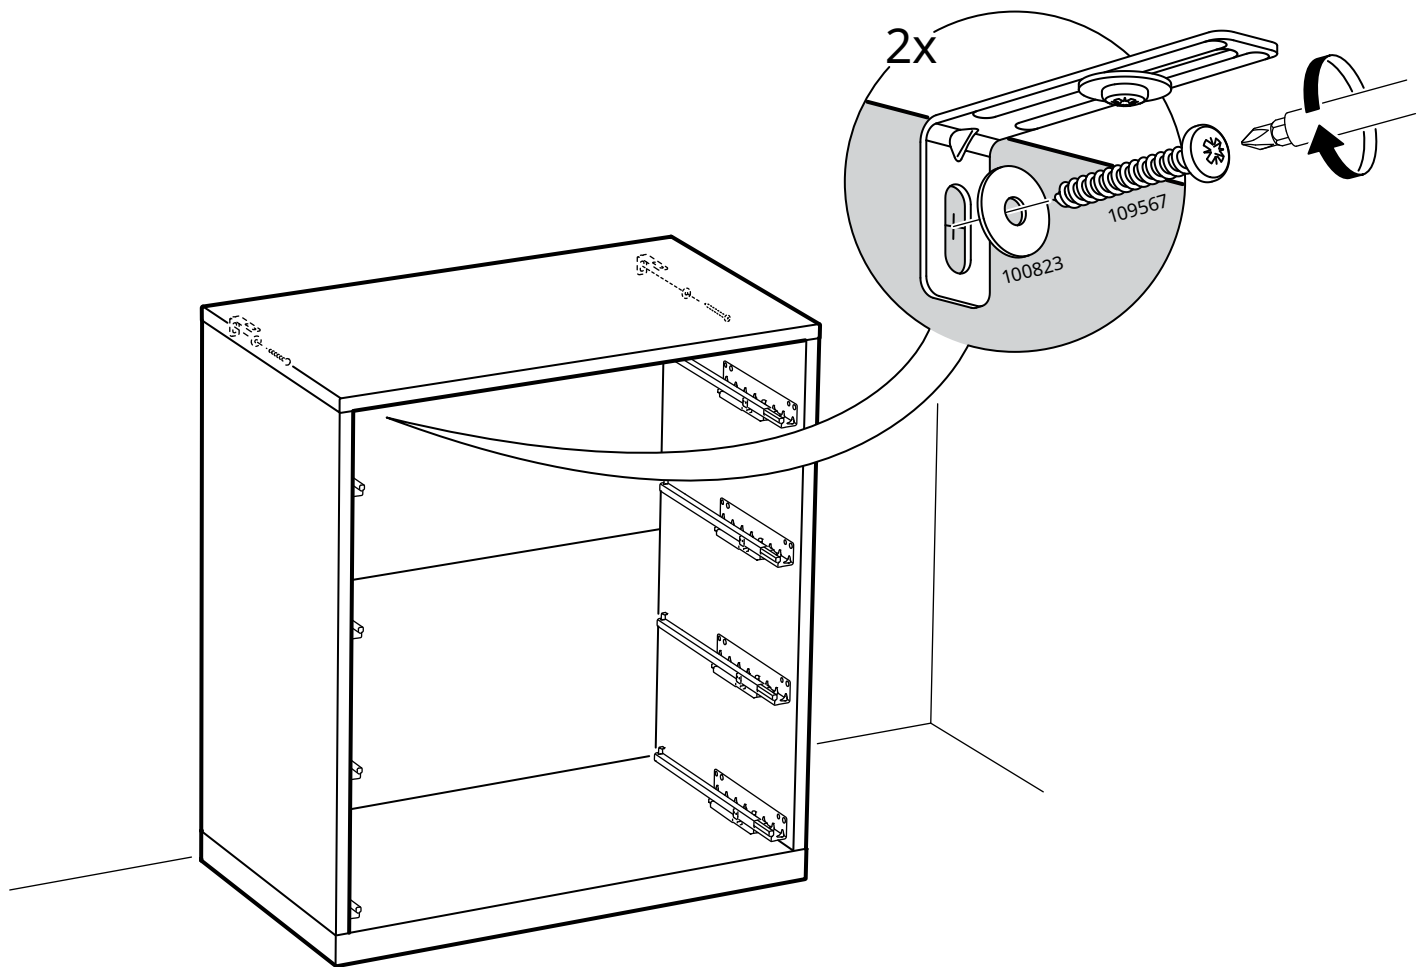


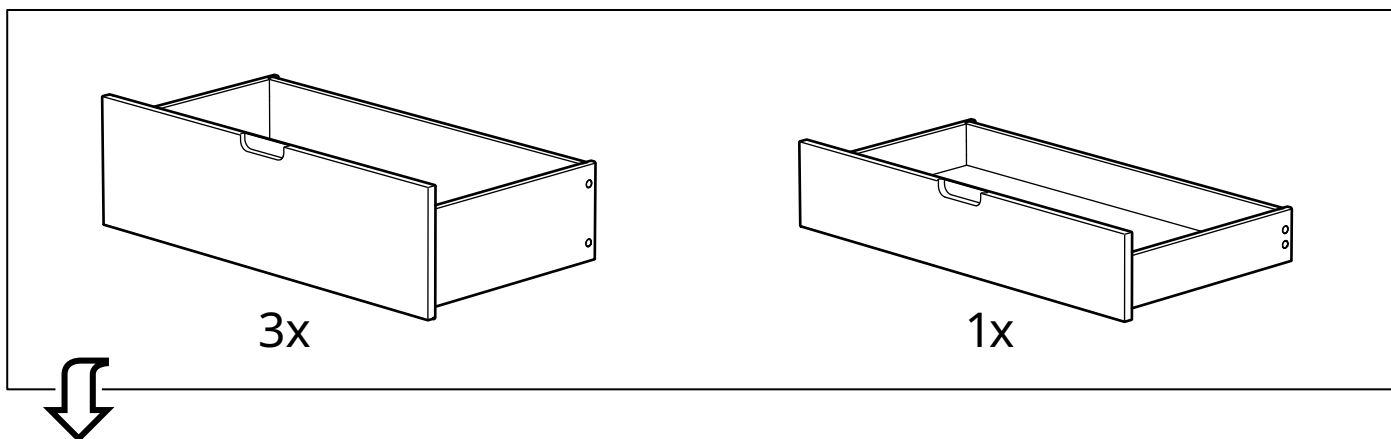


19

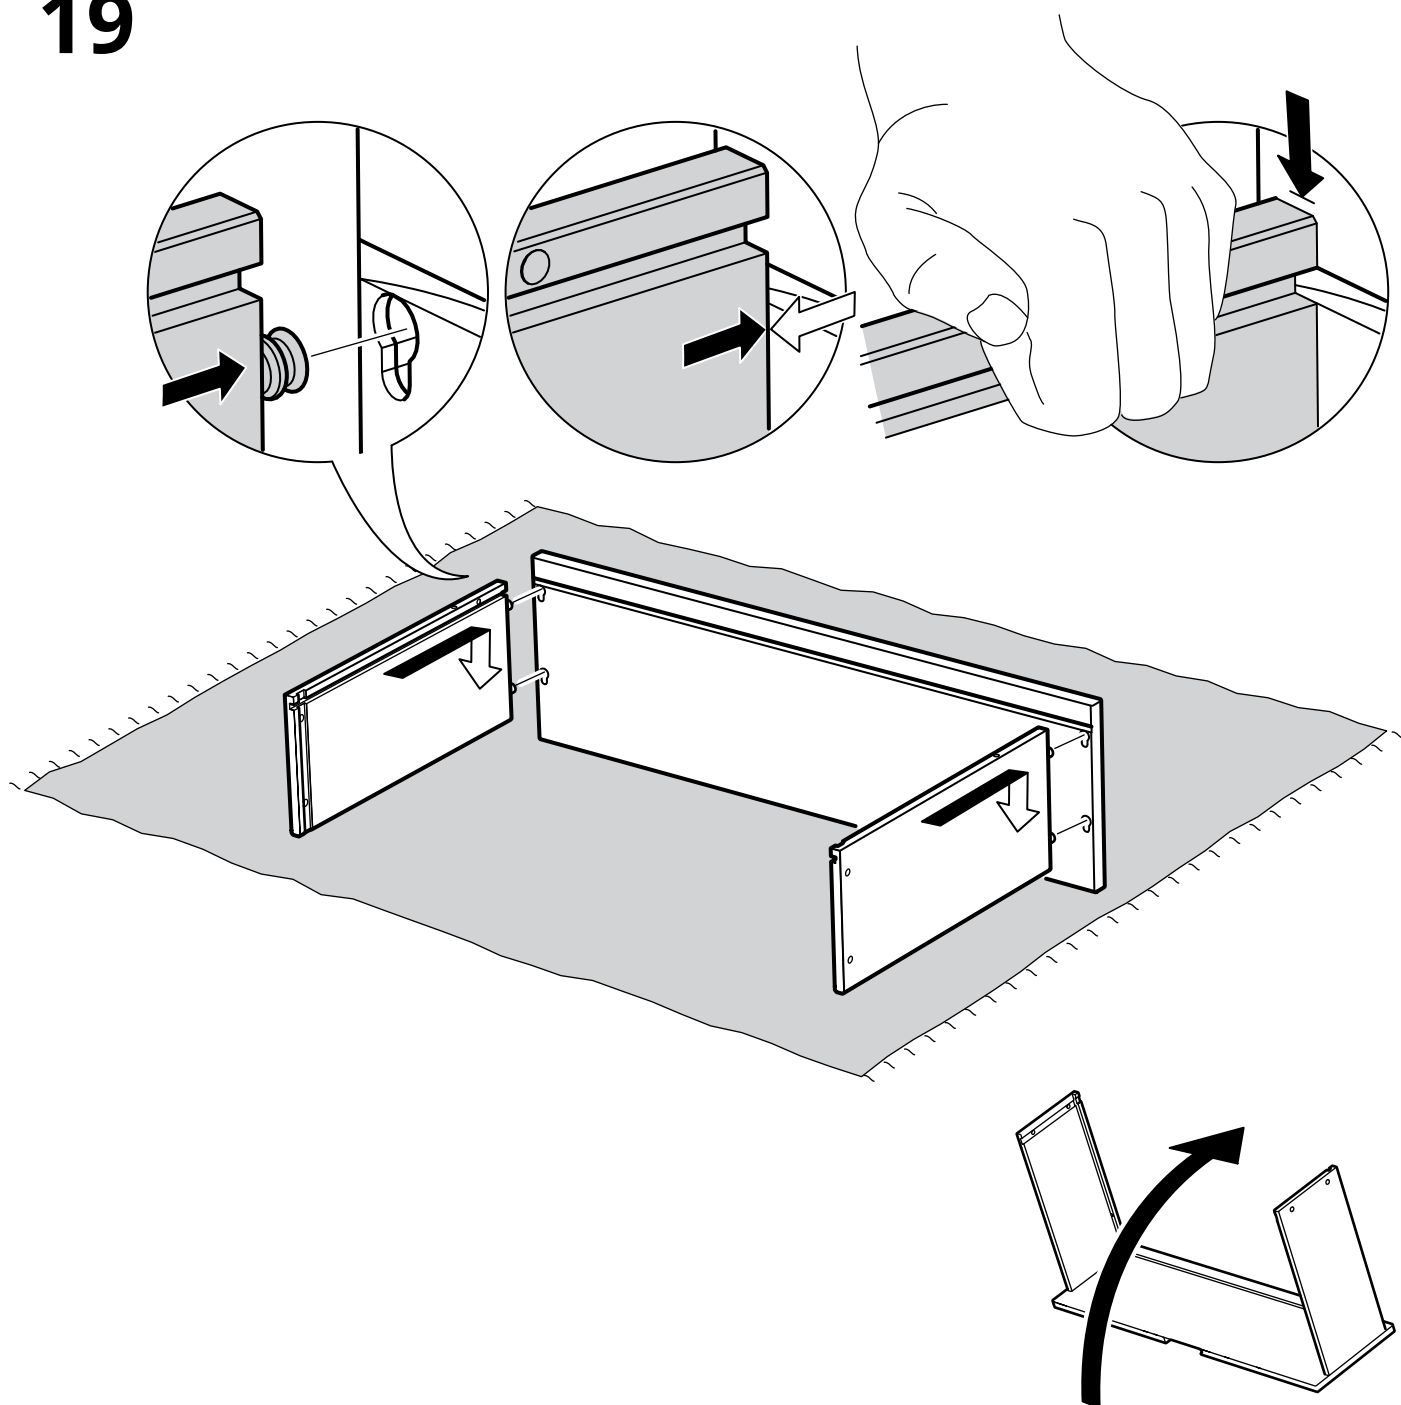 


20

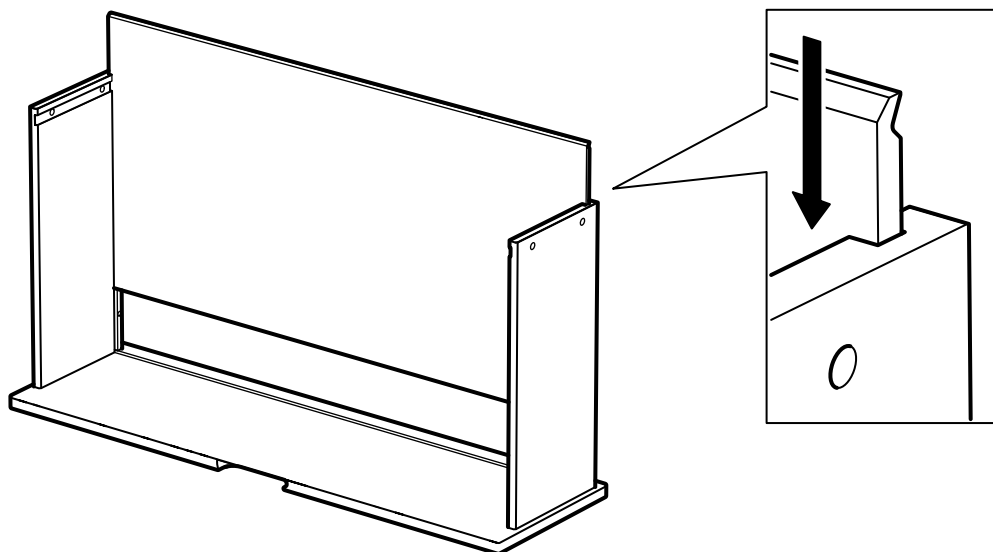 


21

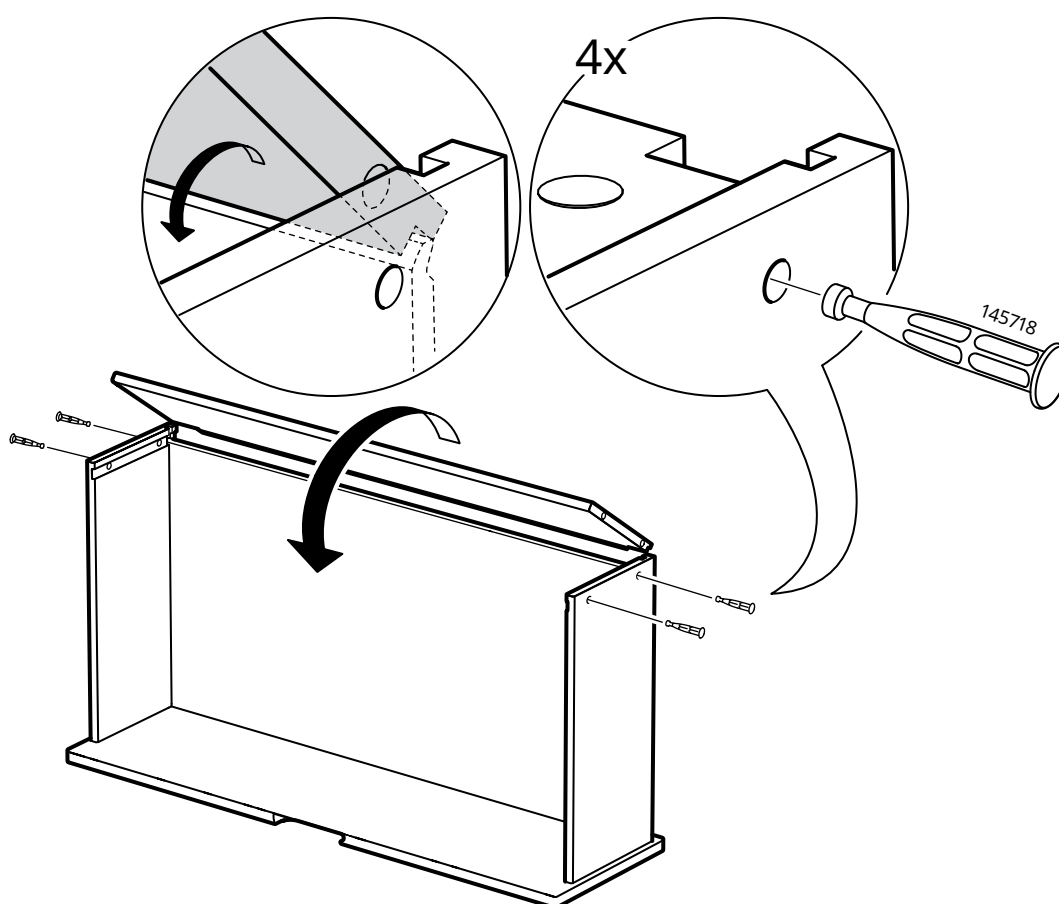 


22

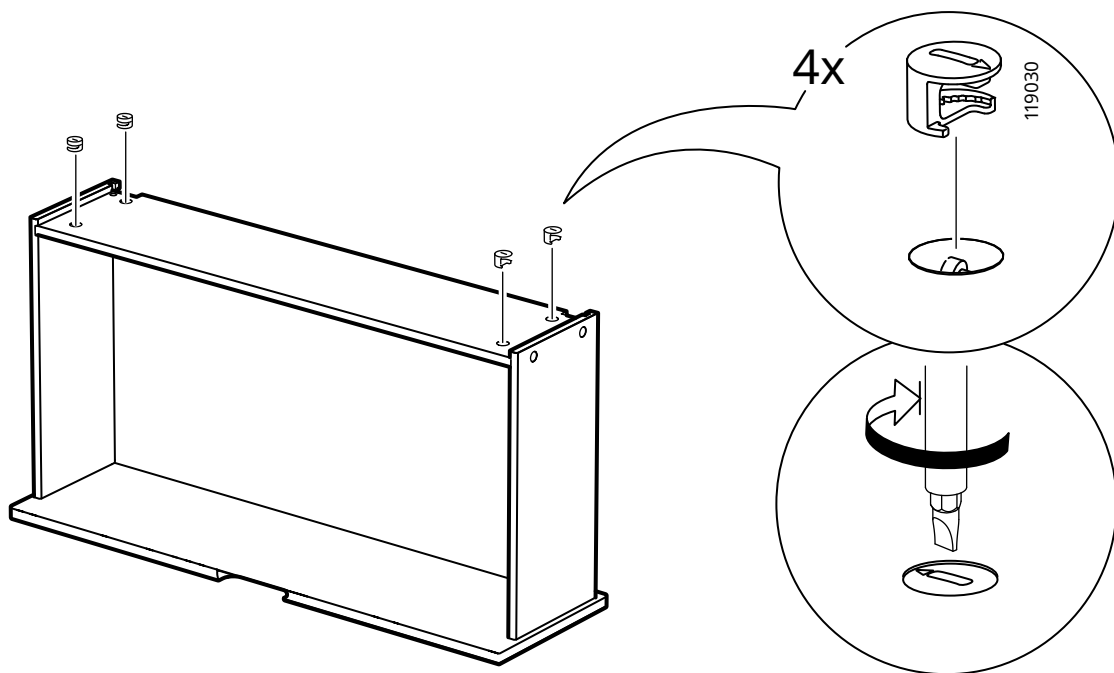 


23

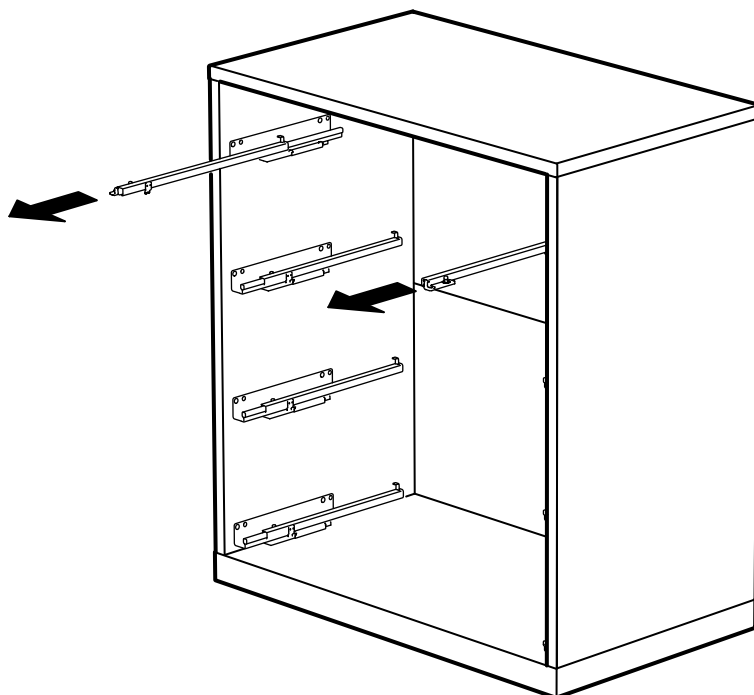 


24

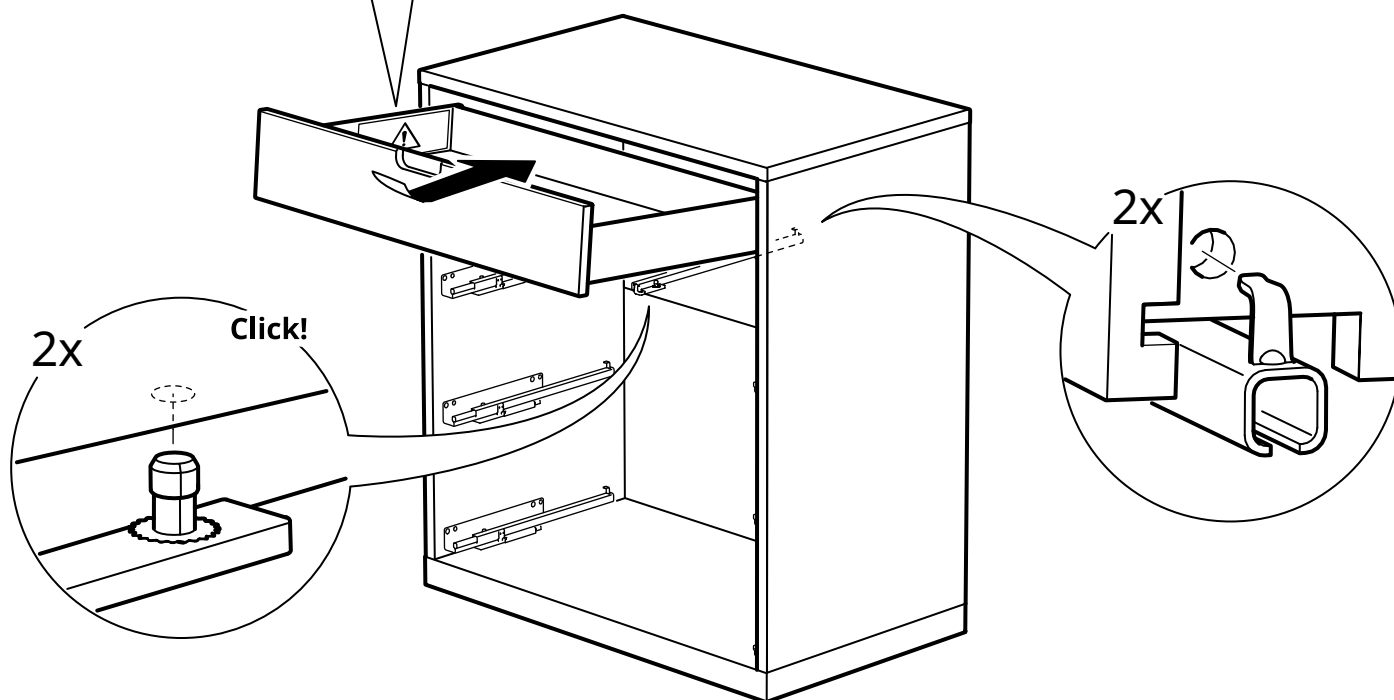 


25

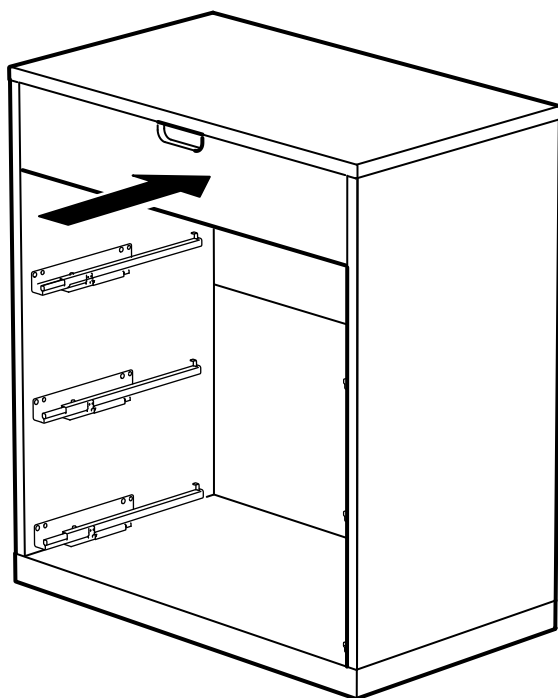 

26

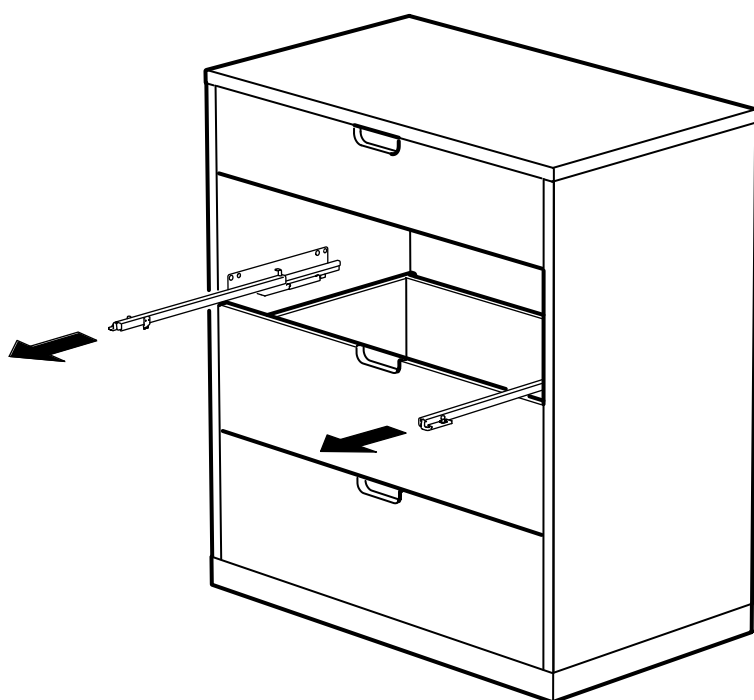 

27

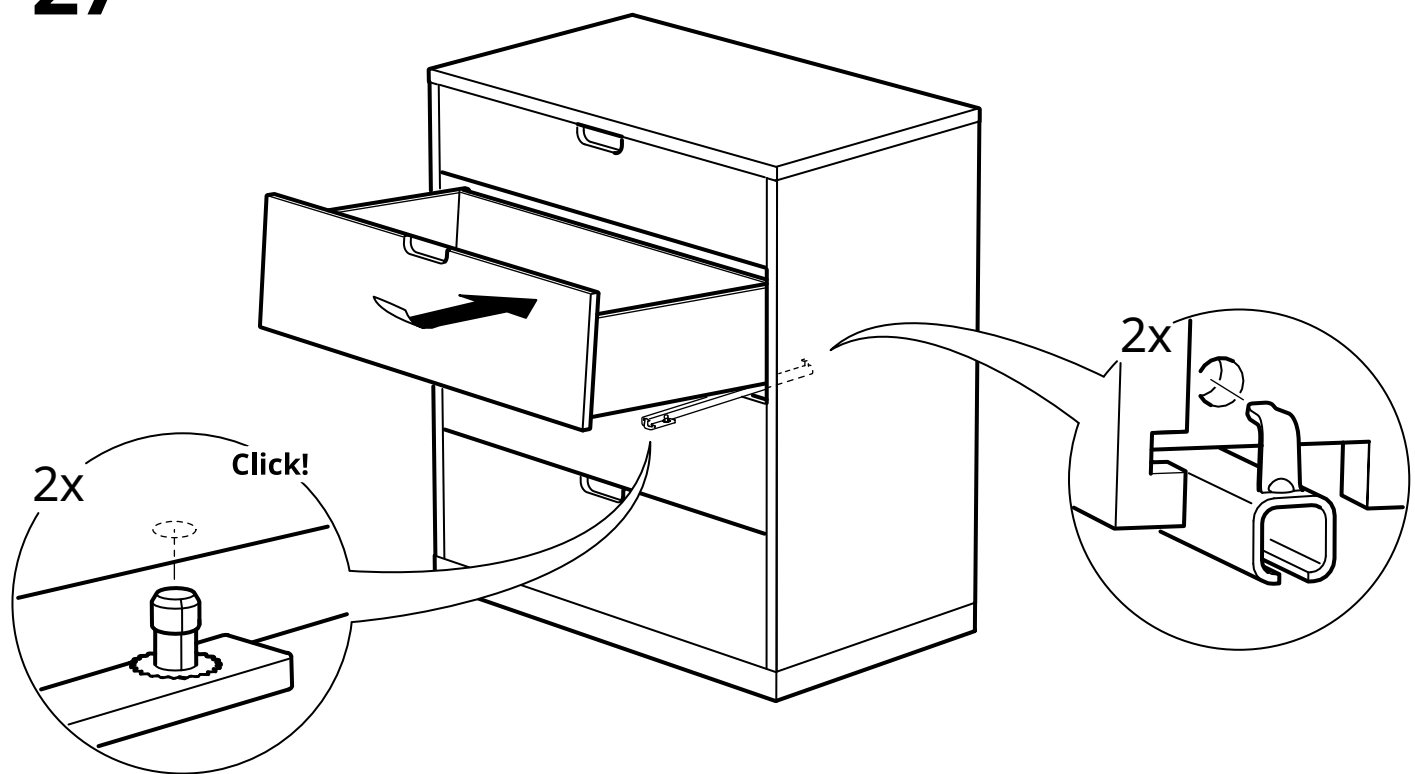 

28

