 


TONSTAD

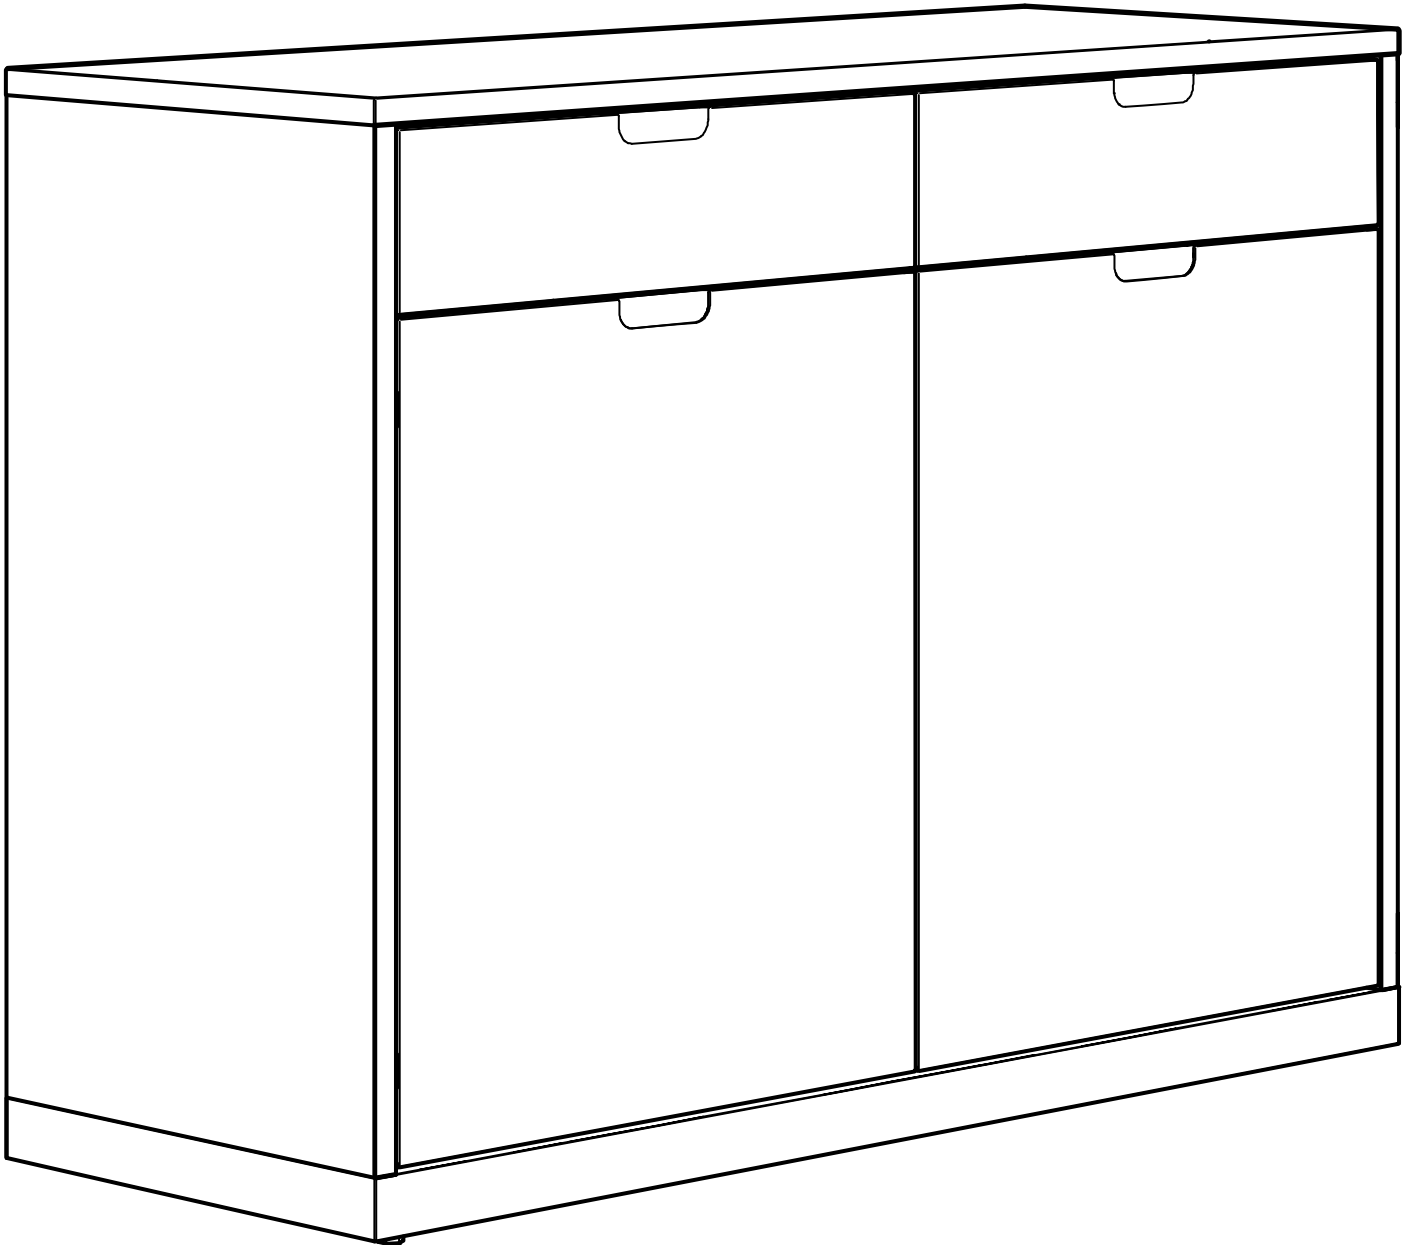

Design and Quality
IKEA of Sweden



English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

 
 
 
 
 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

 
 
 
 
 
 
 
NEVER open more than one drawer at a time.

Place heaviest items in the lowest drawers.


English

Read and follow each step of the instruction carefully.

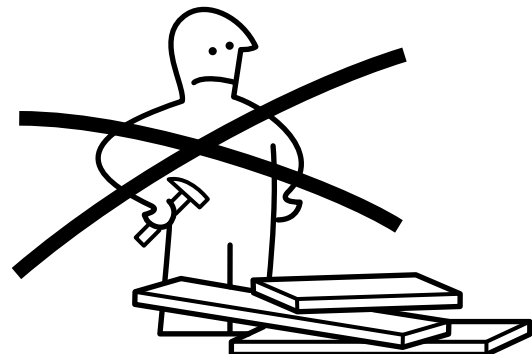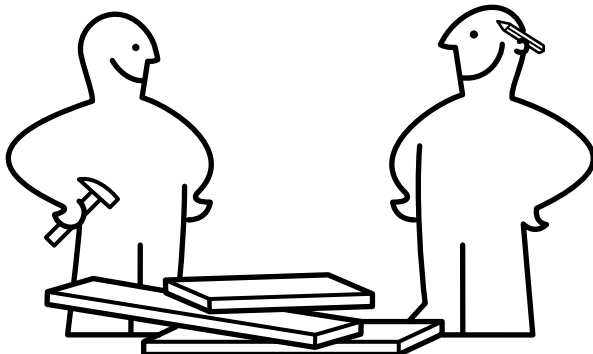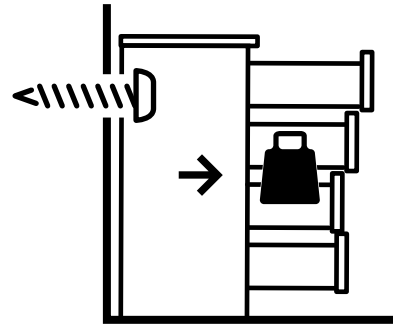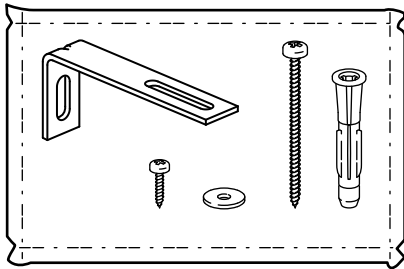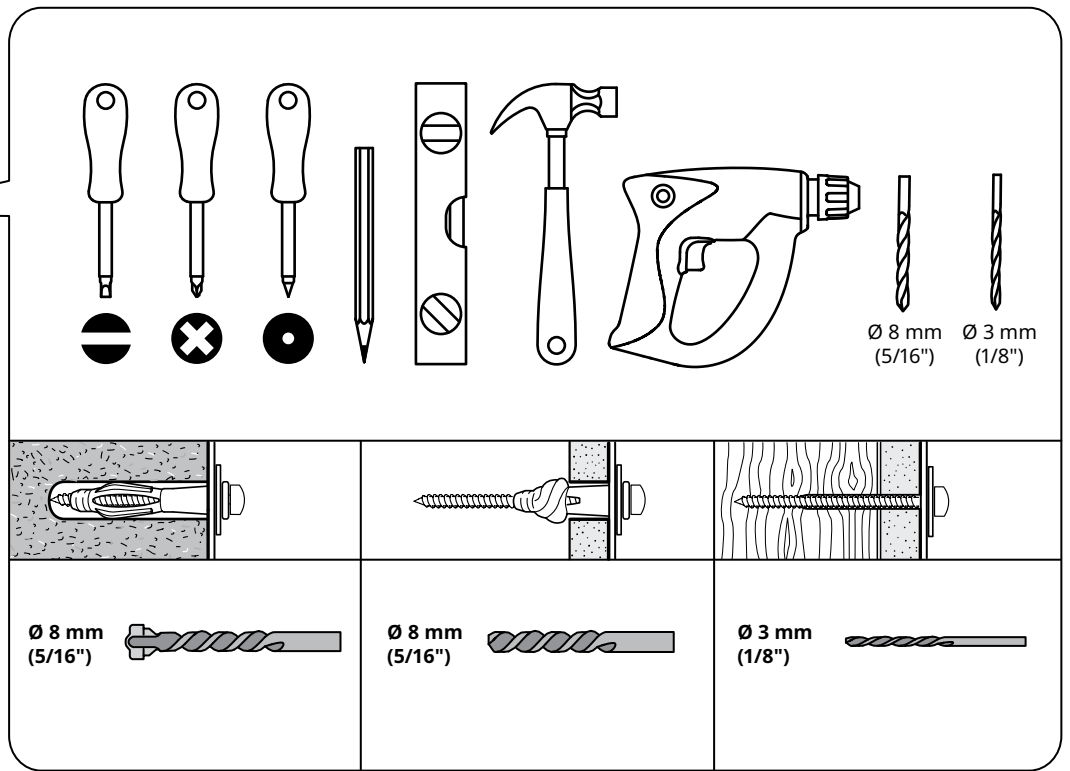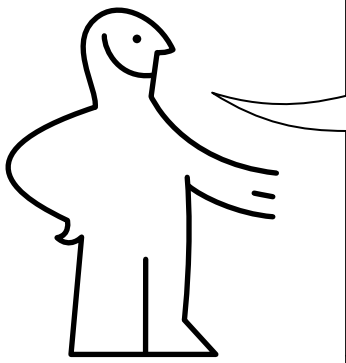

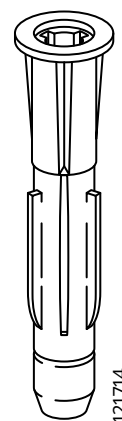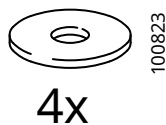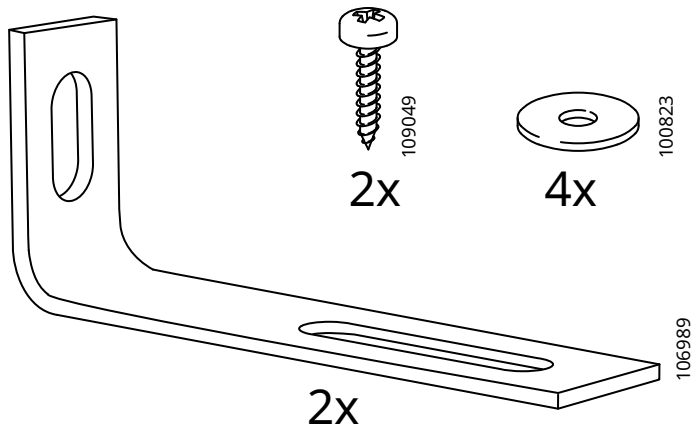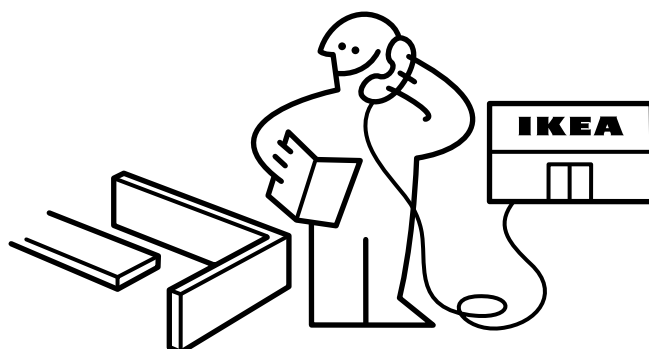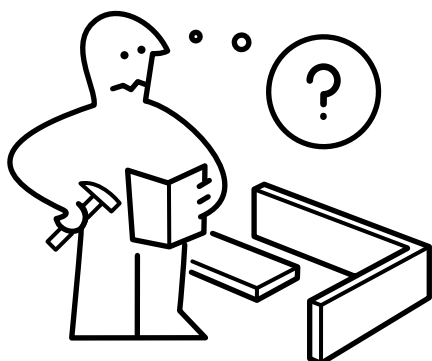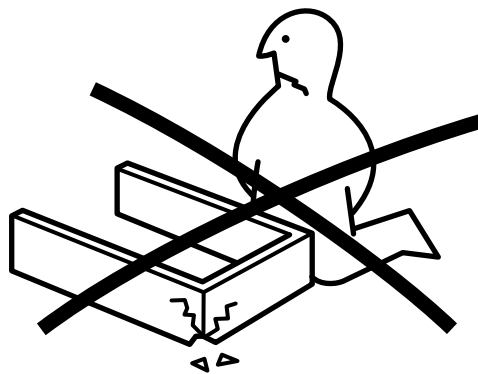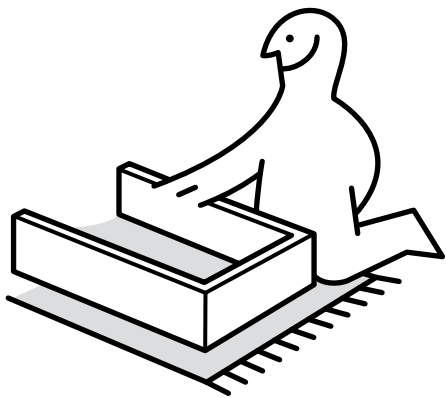

1

 


101339

3x




101345

 14x



151707

 10x




151708

10x




100347

 8x

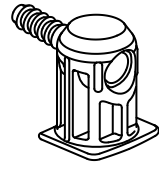


10116968

 8x

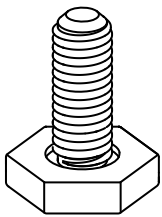


159992

 5x

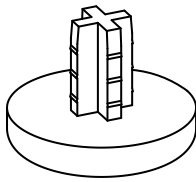


153552

 1x

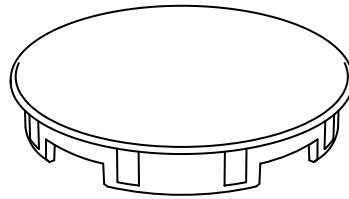

10117001

 
2x

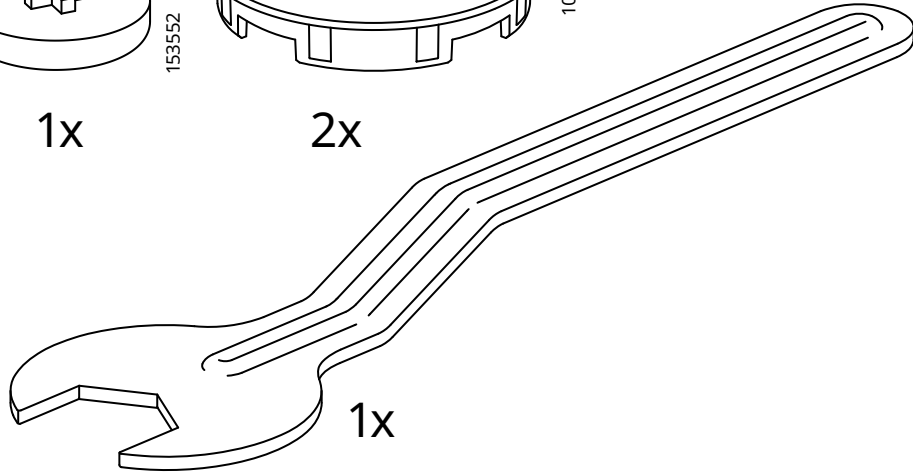

190459

1x

 2




10095420

8x






107586

 4x






119030

  
 
8x

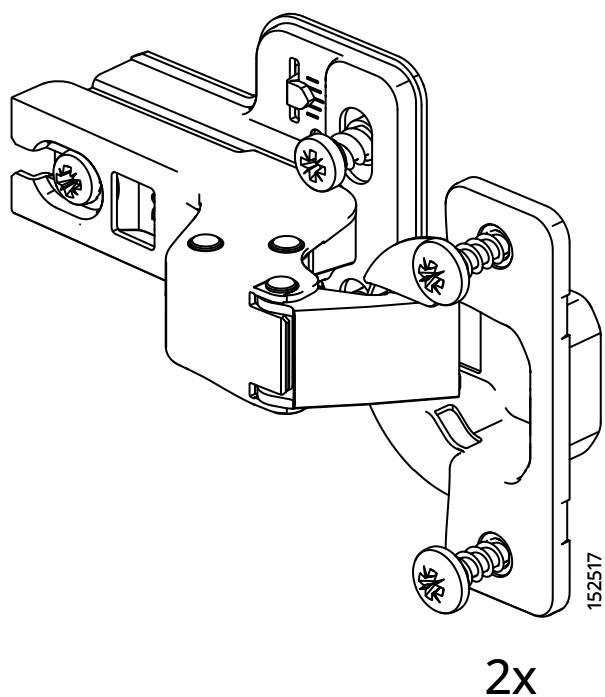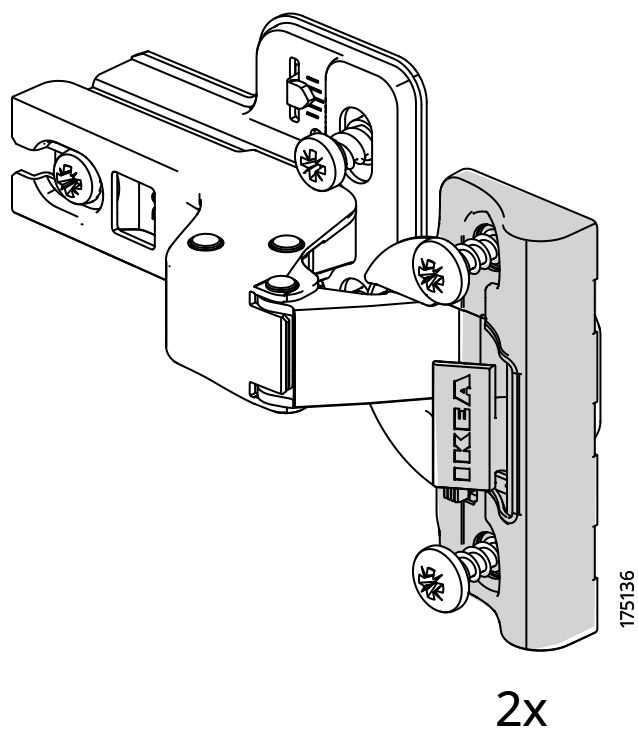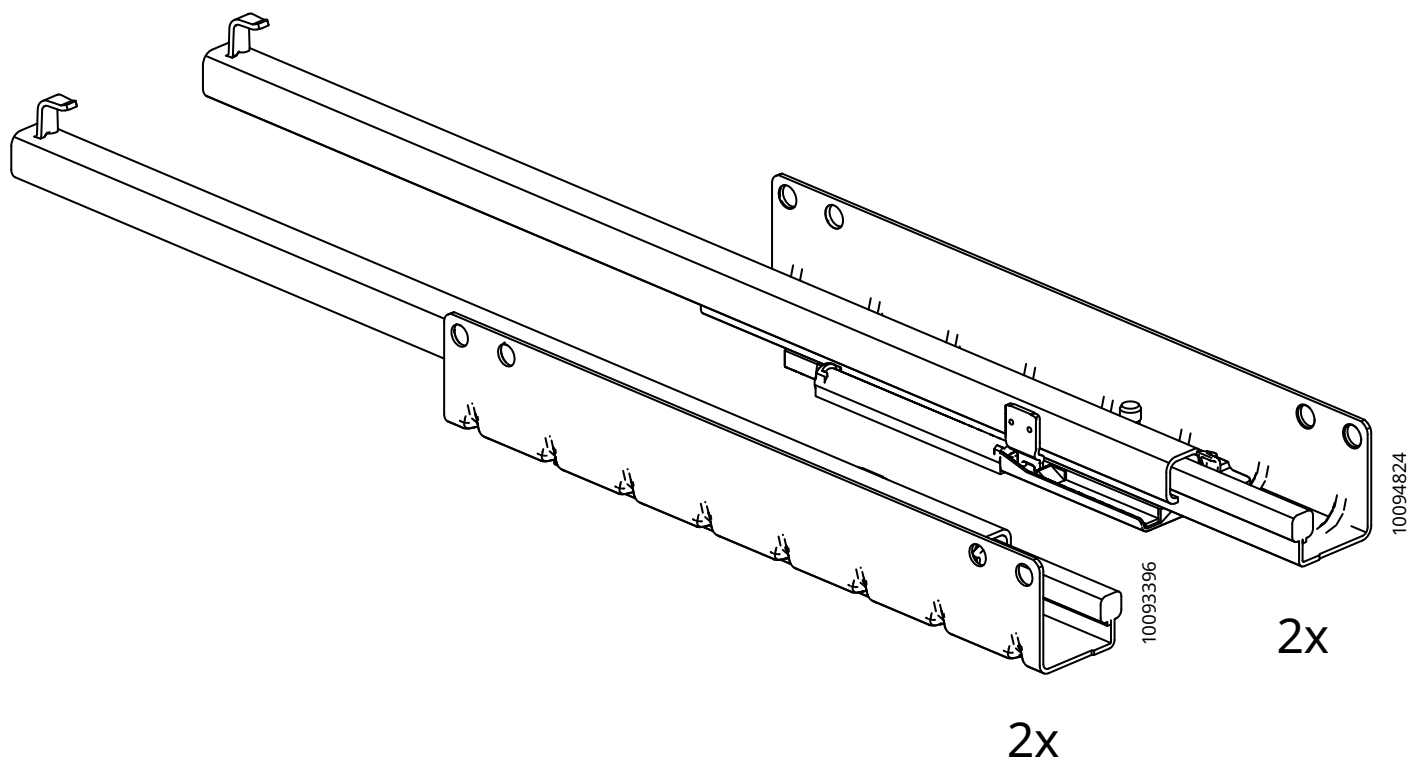


1

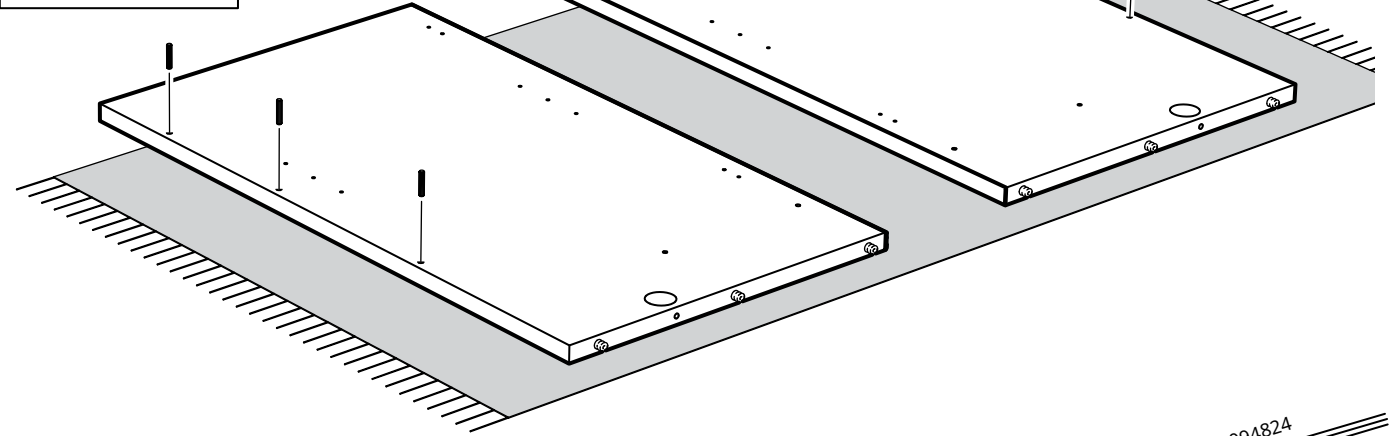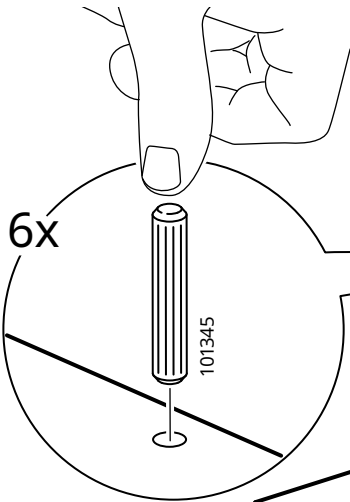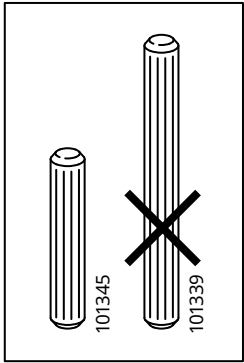   



2

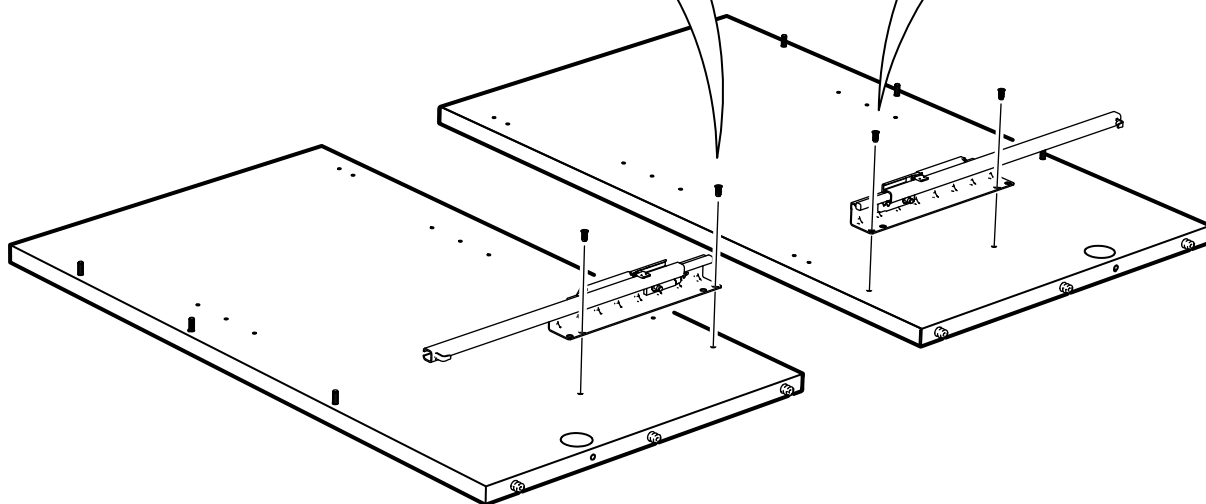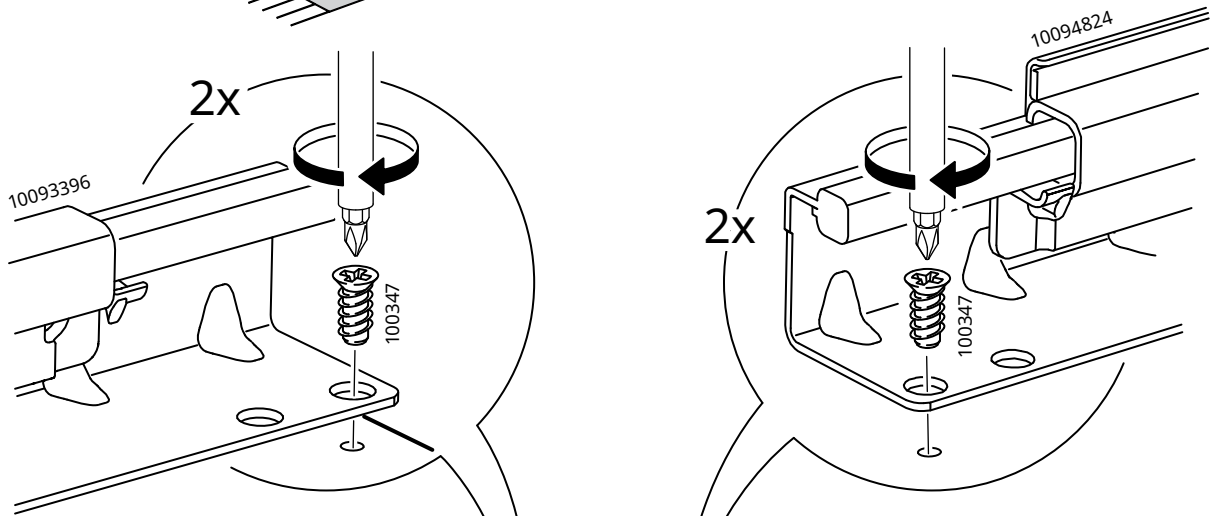  



3

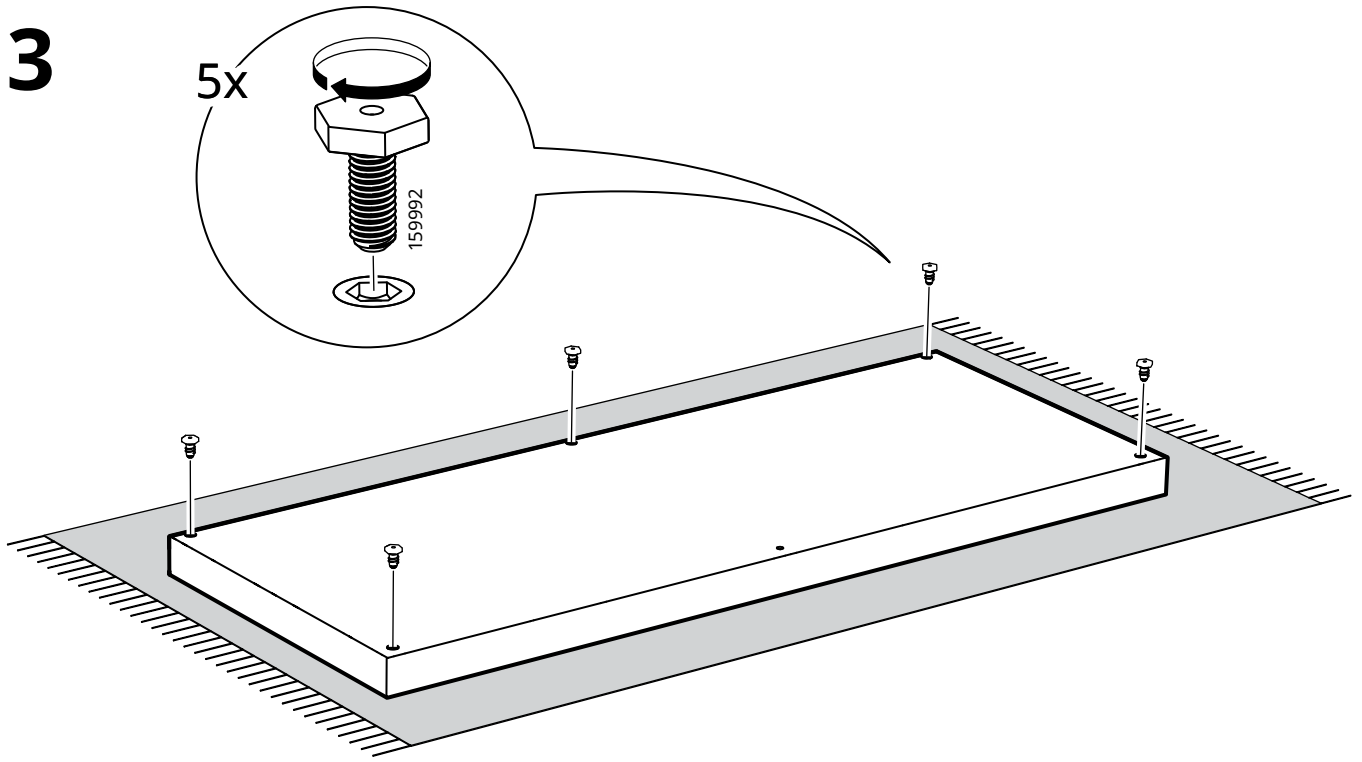 


4

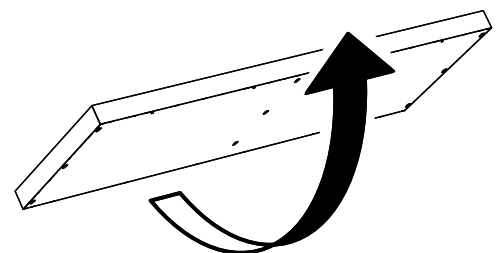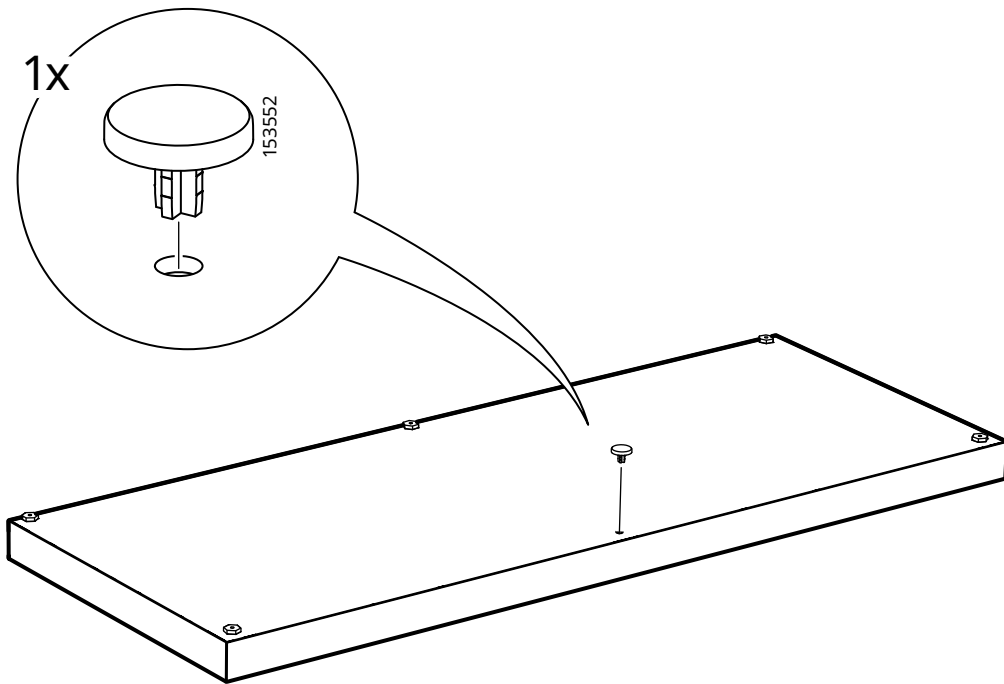  


5

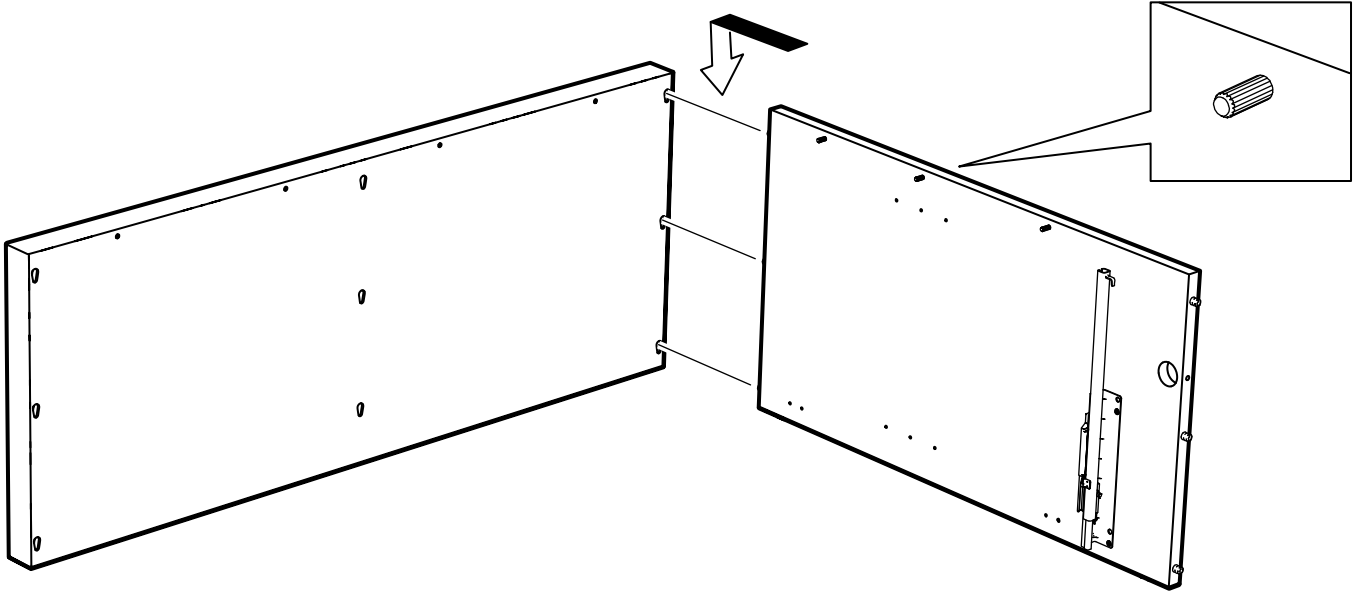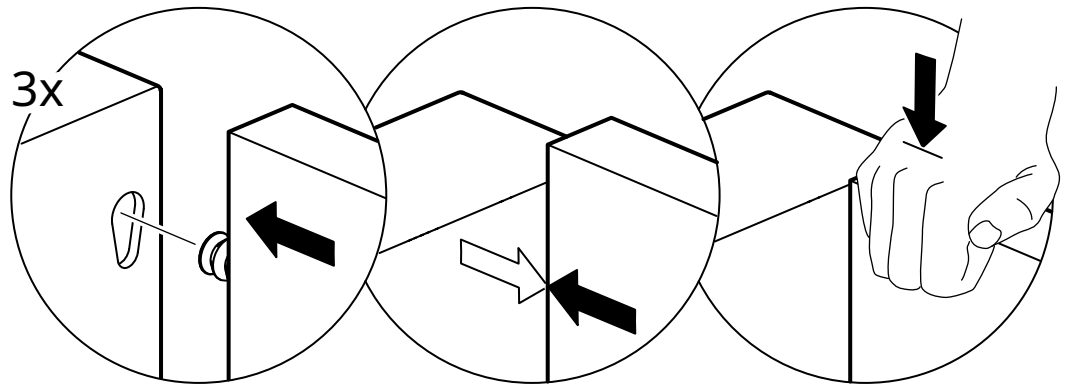  


6

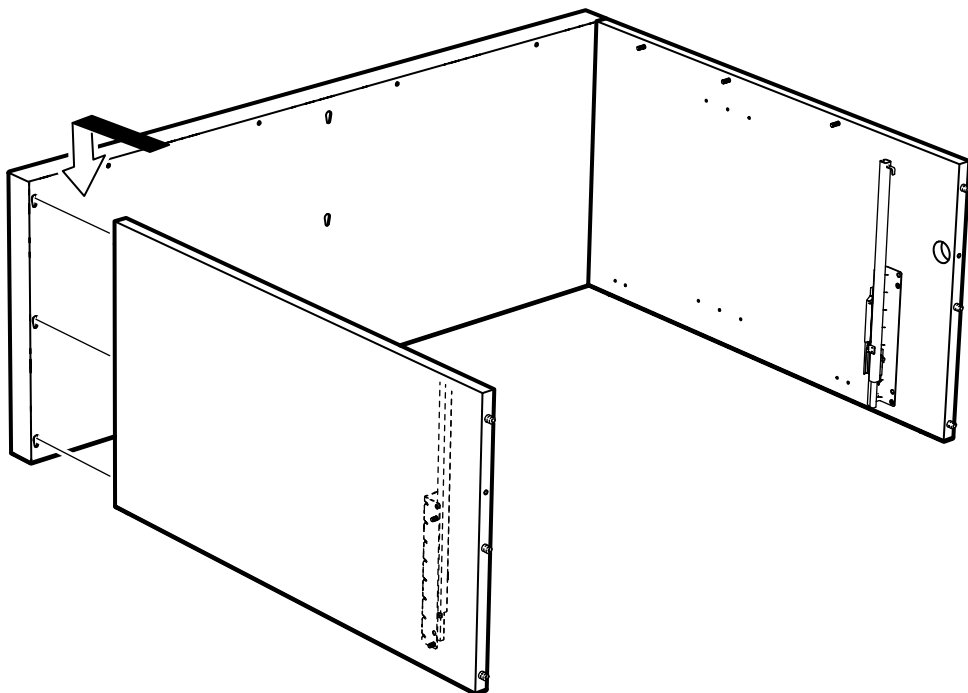 


7

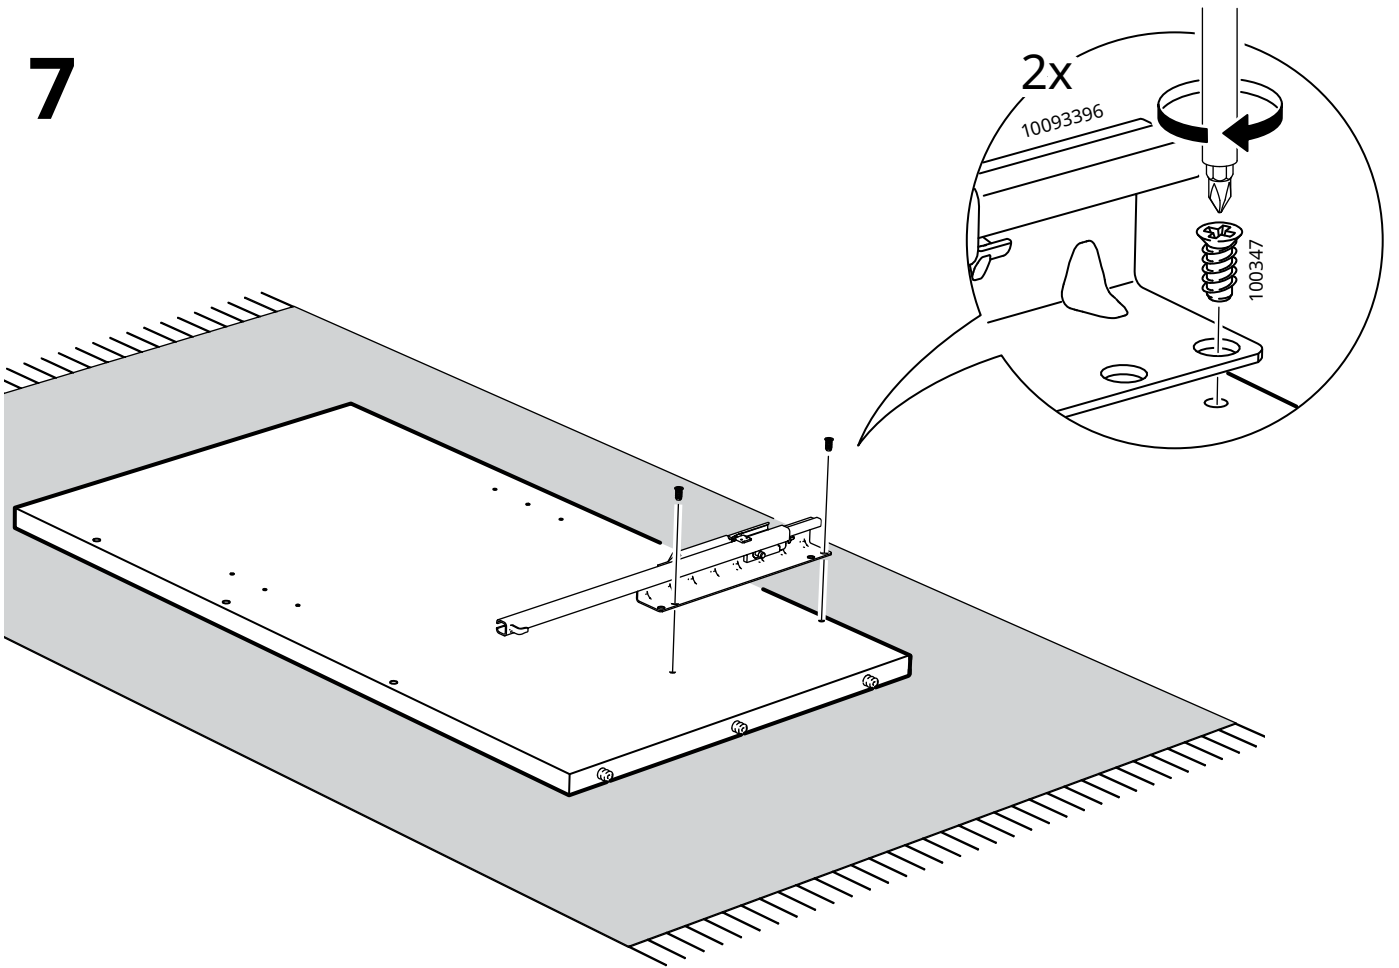 


8

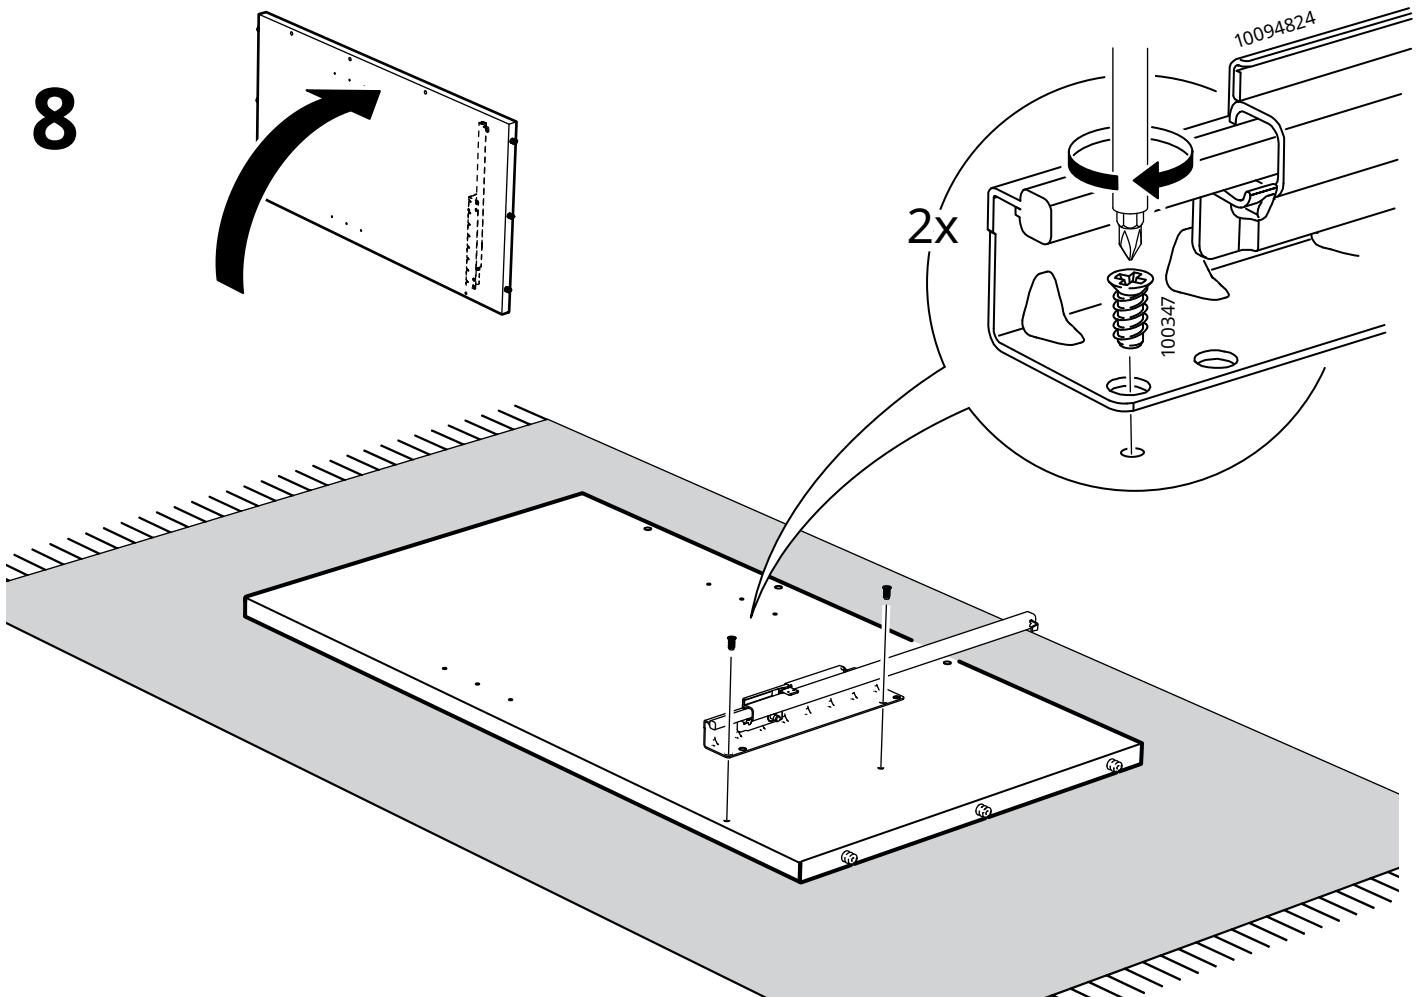 

9



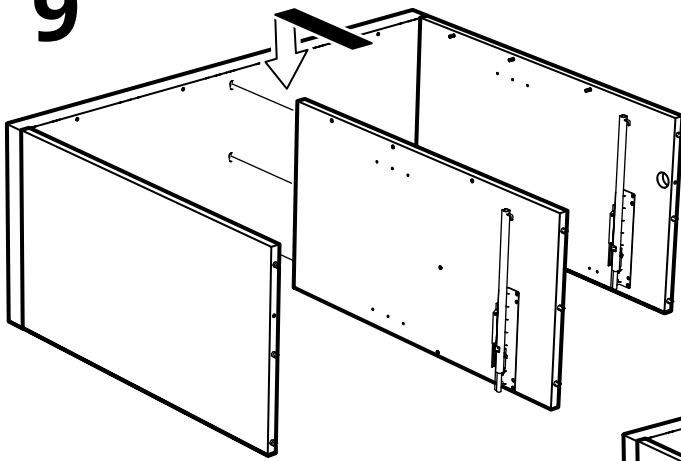 


10

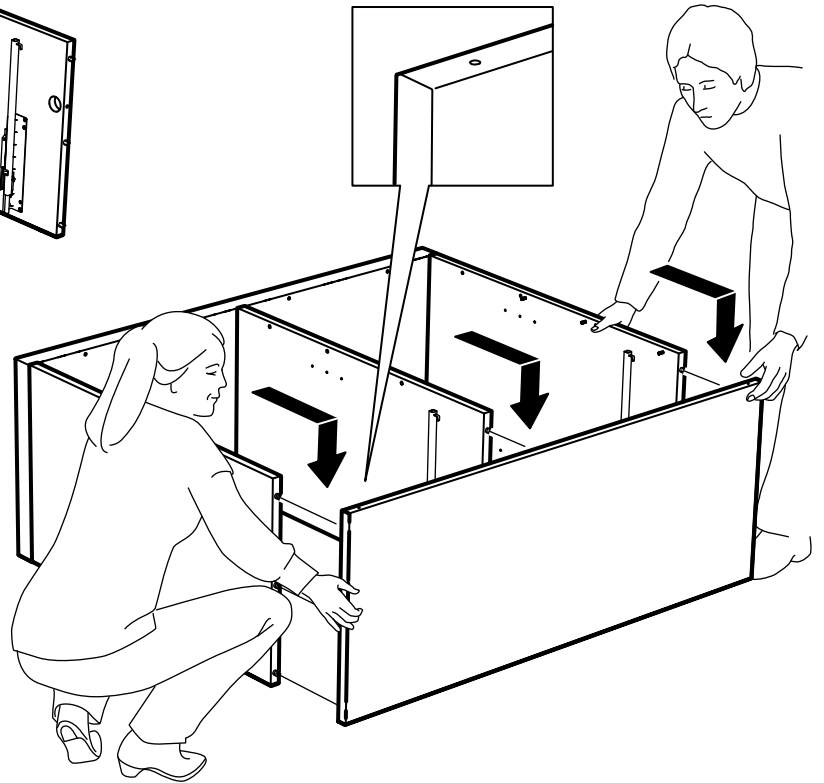 


11

   
2x

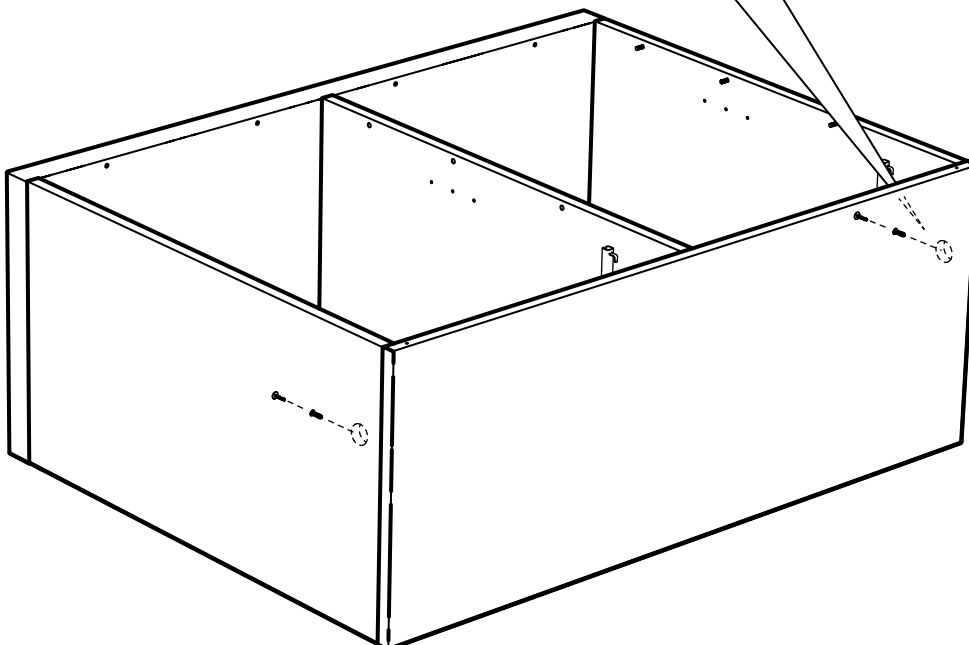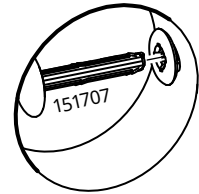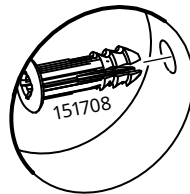


12

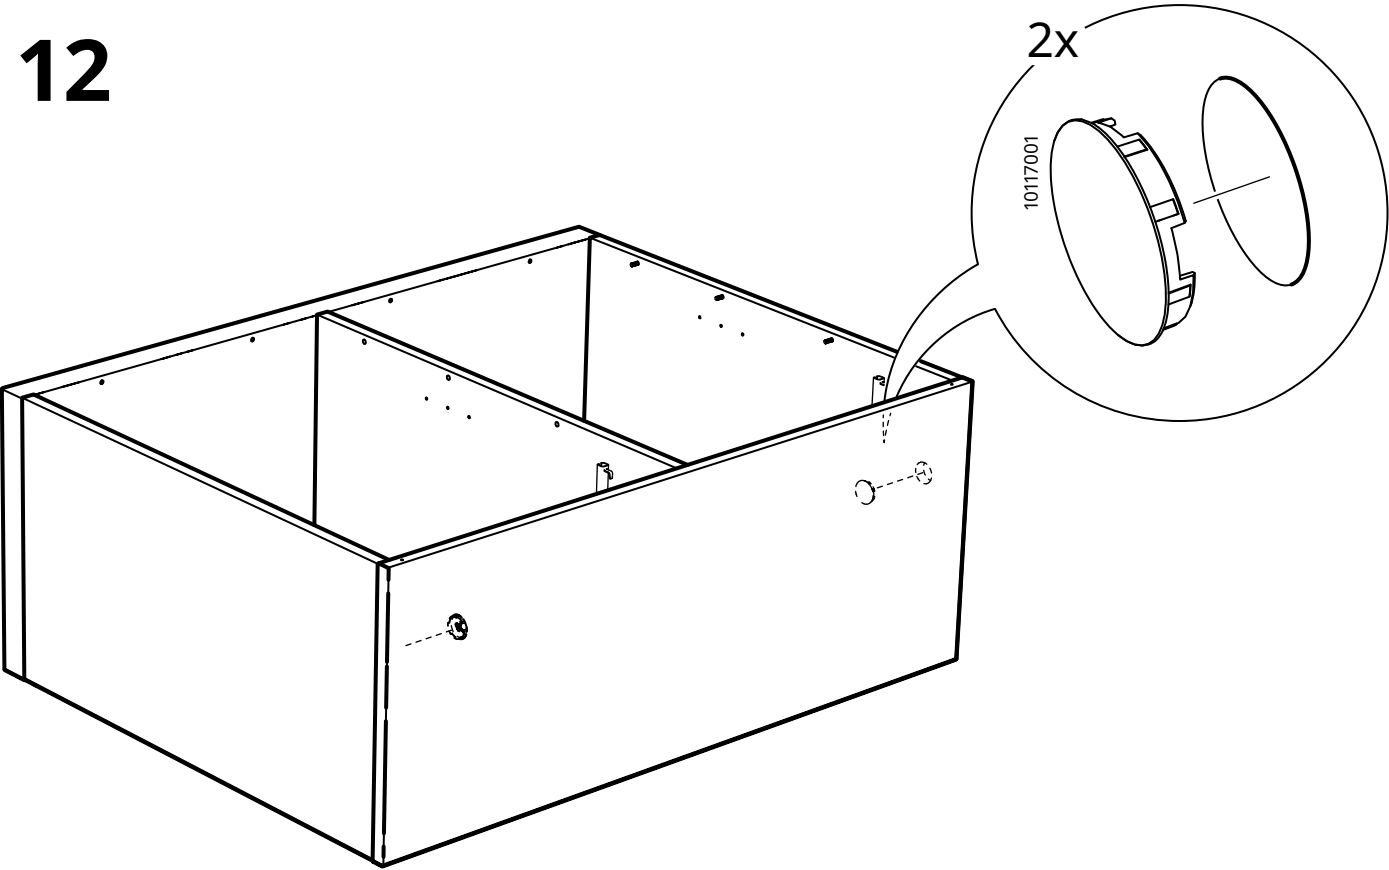 




13

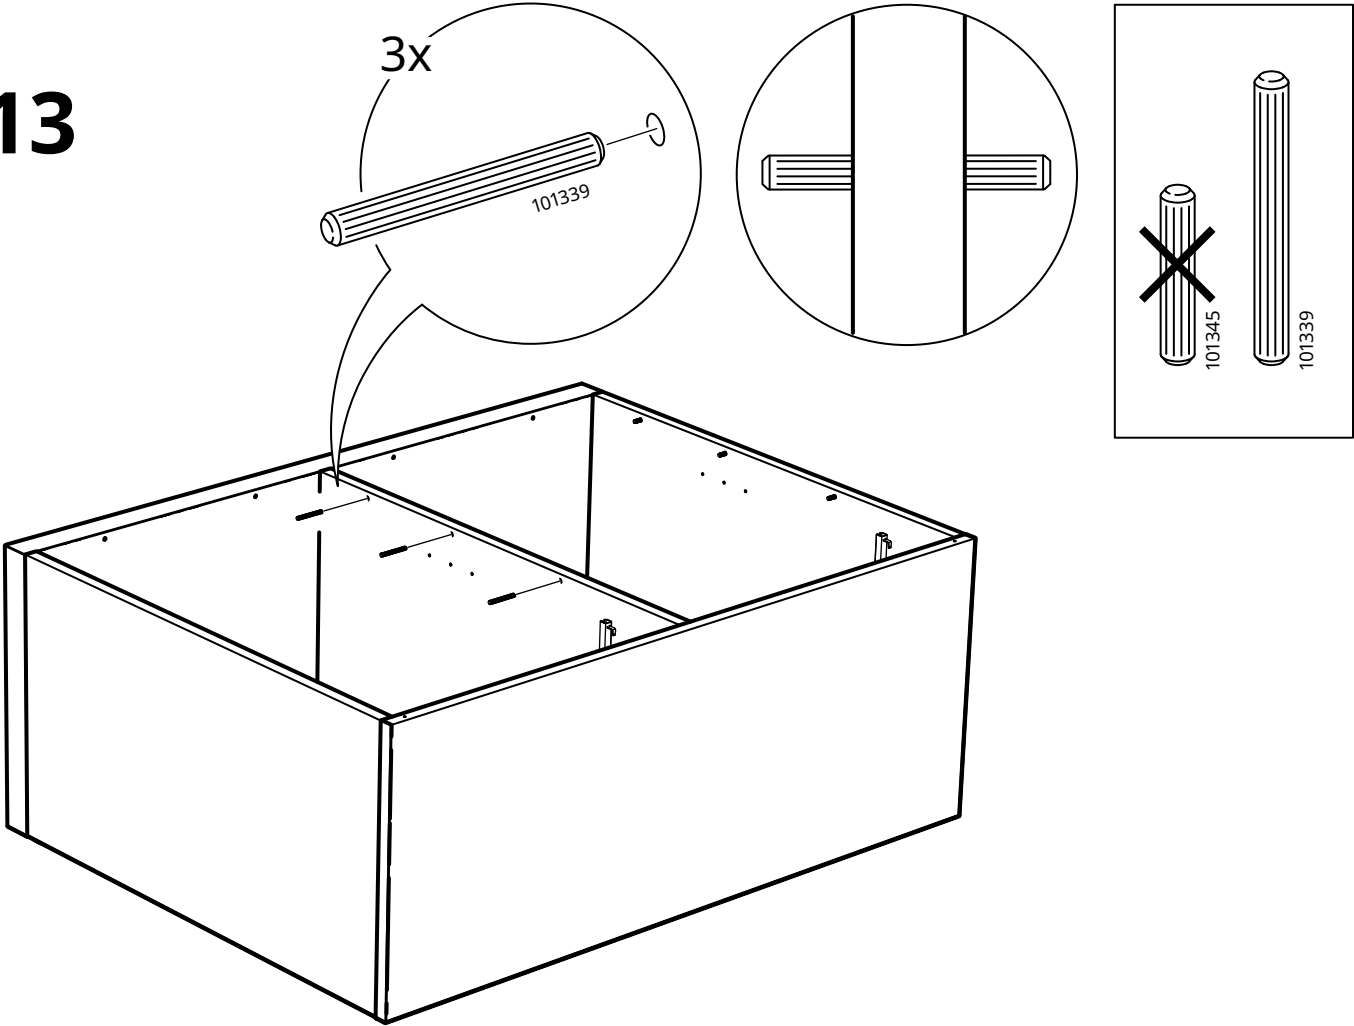 



14

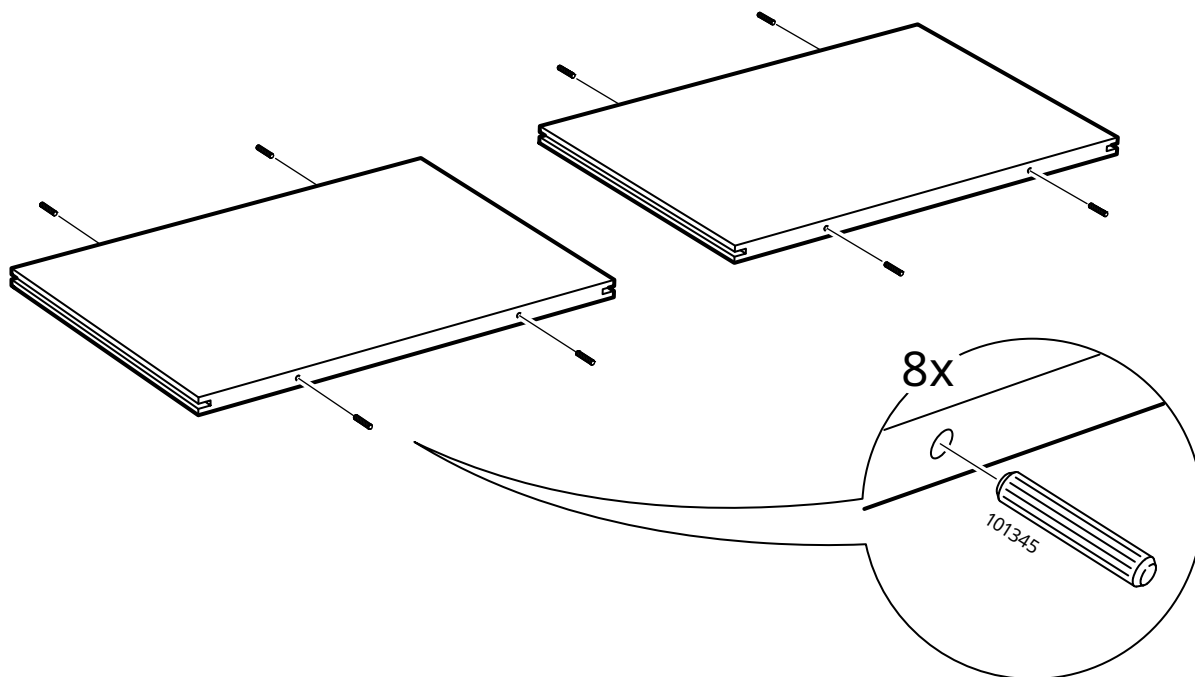 


15

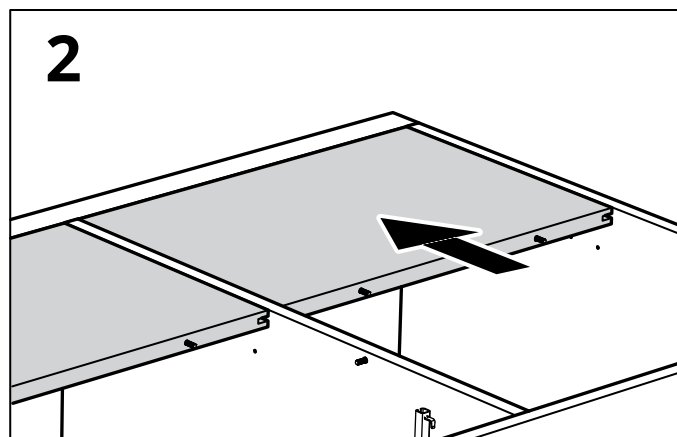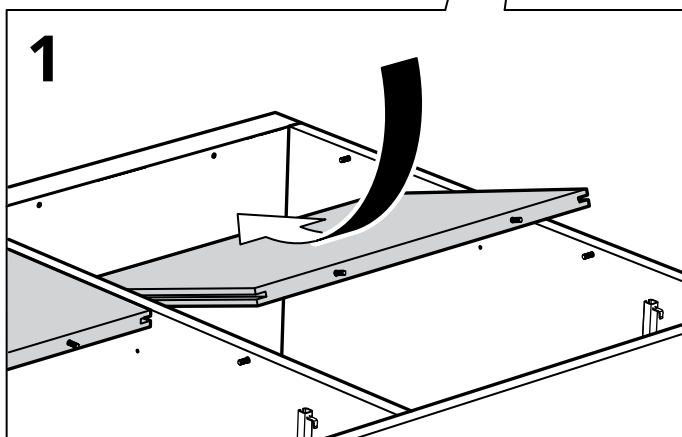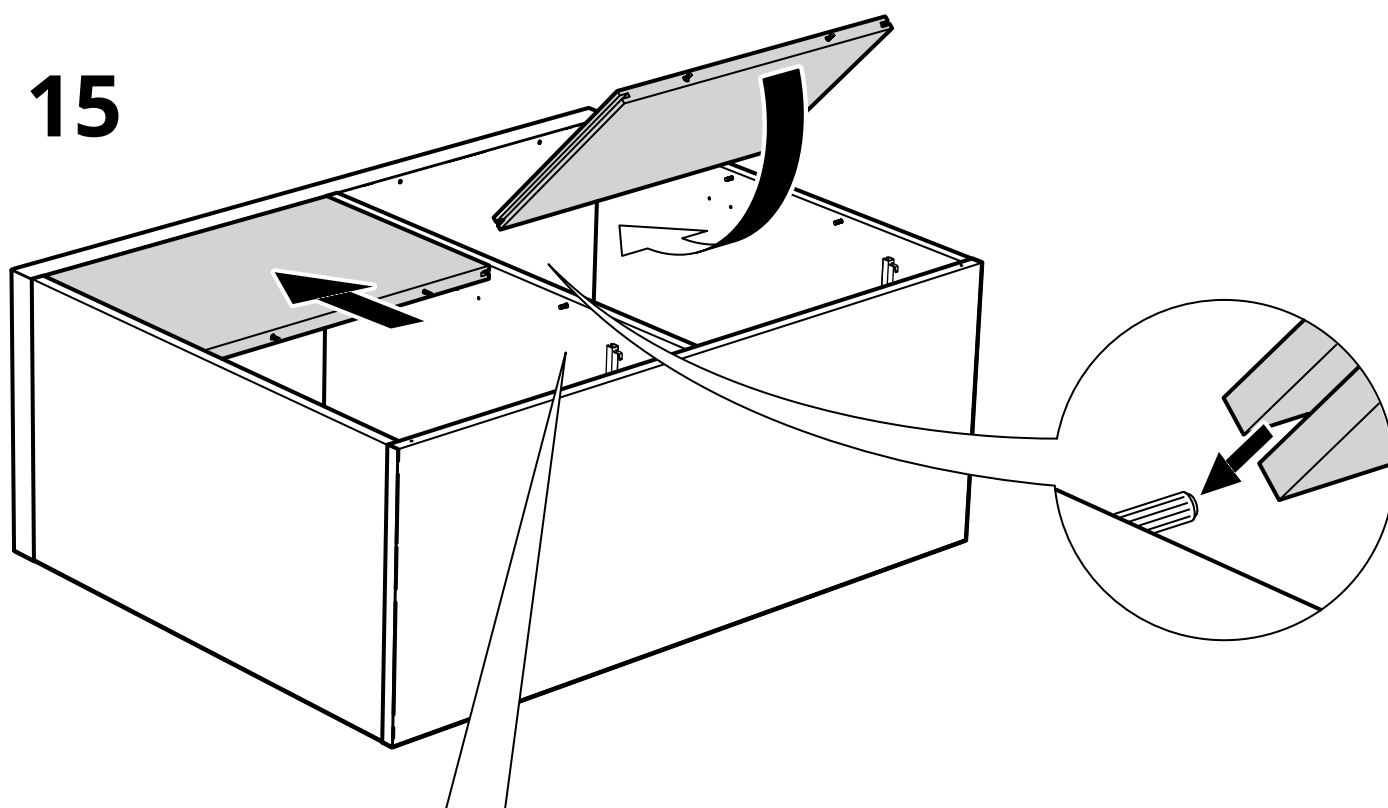   




16

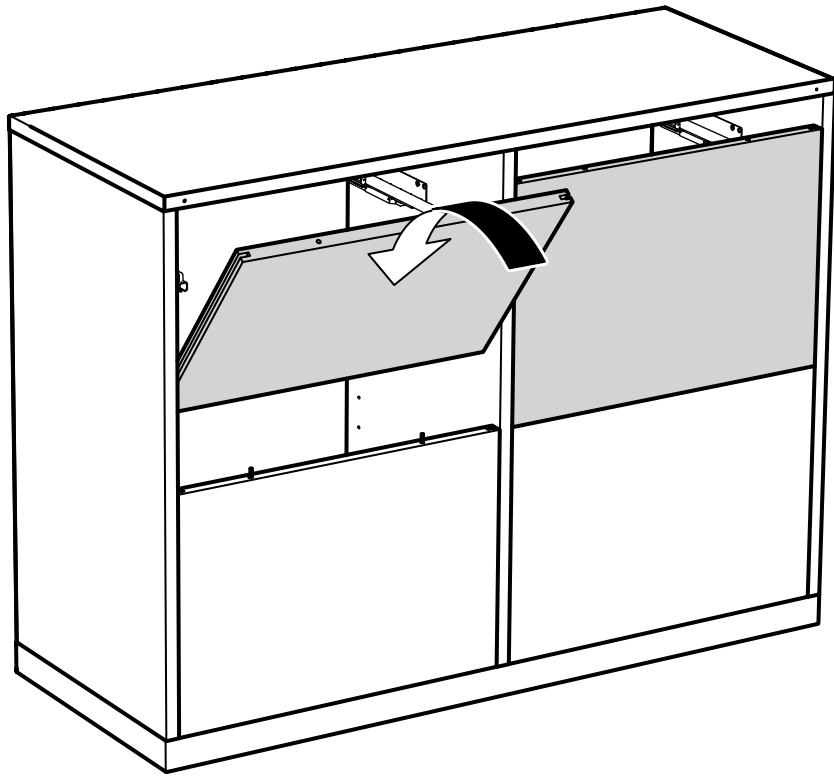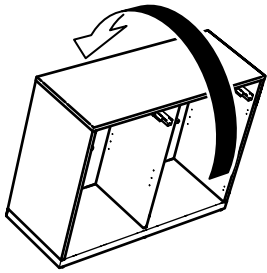  


17

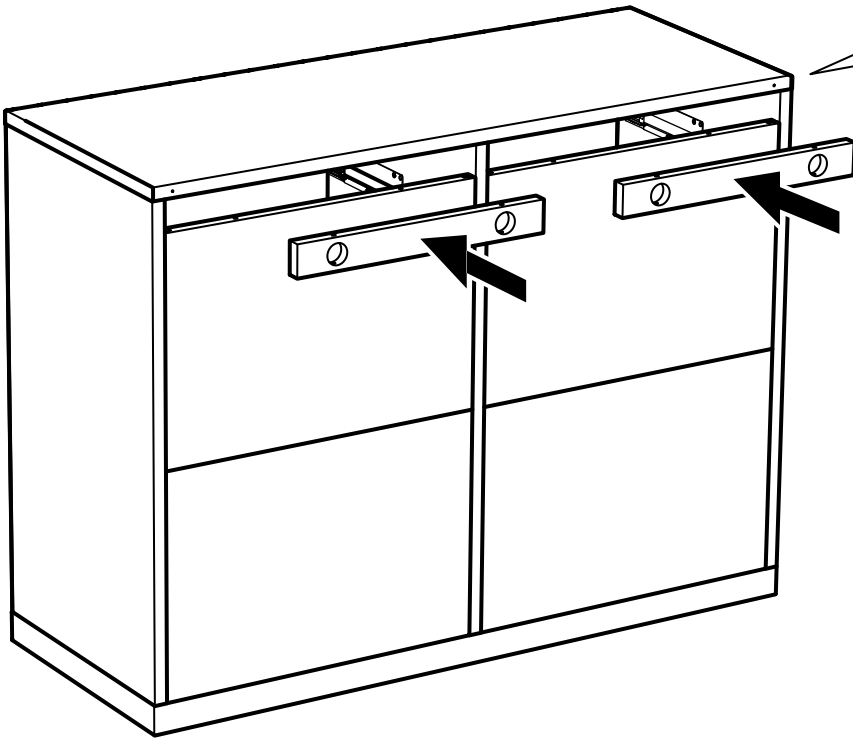 






8x

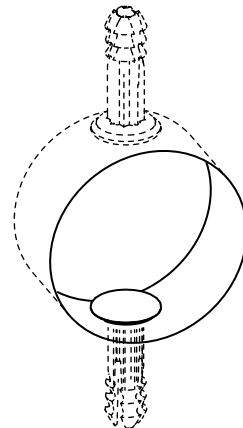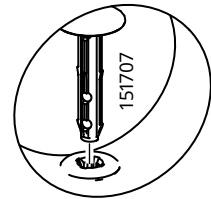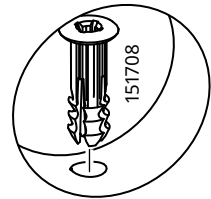   



18

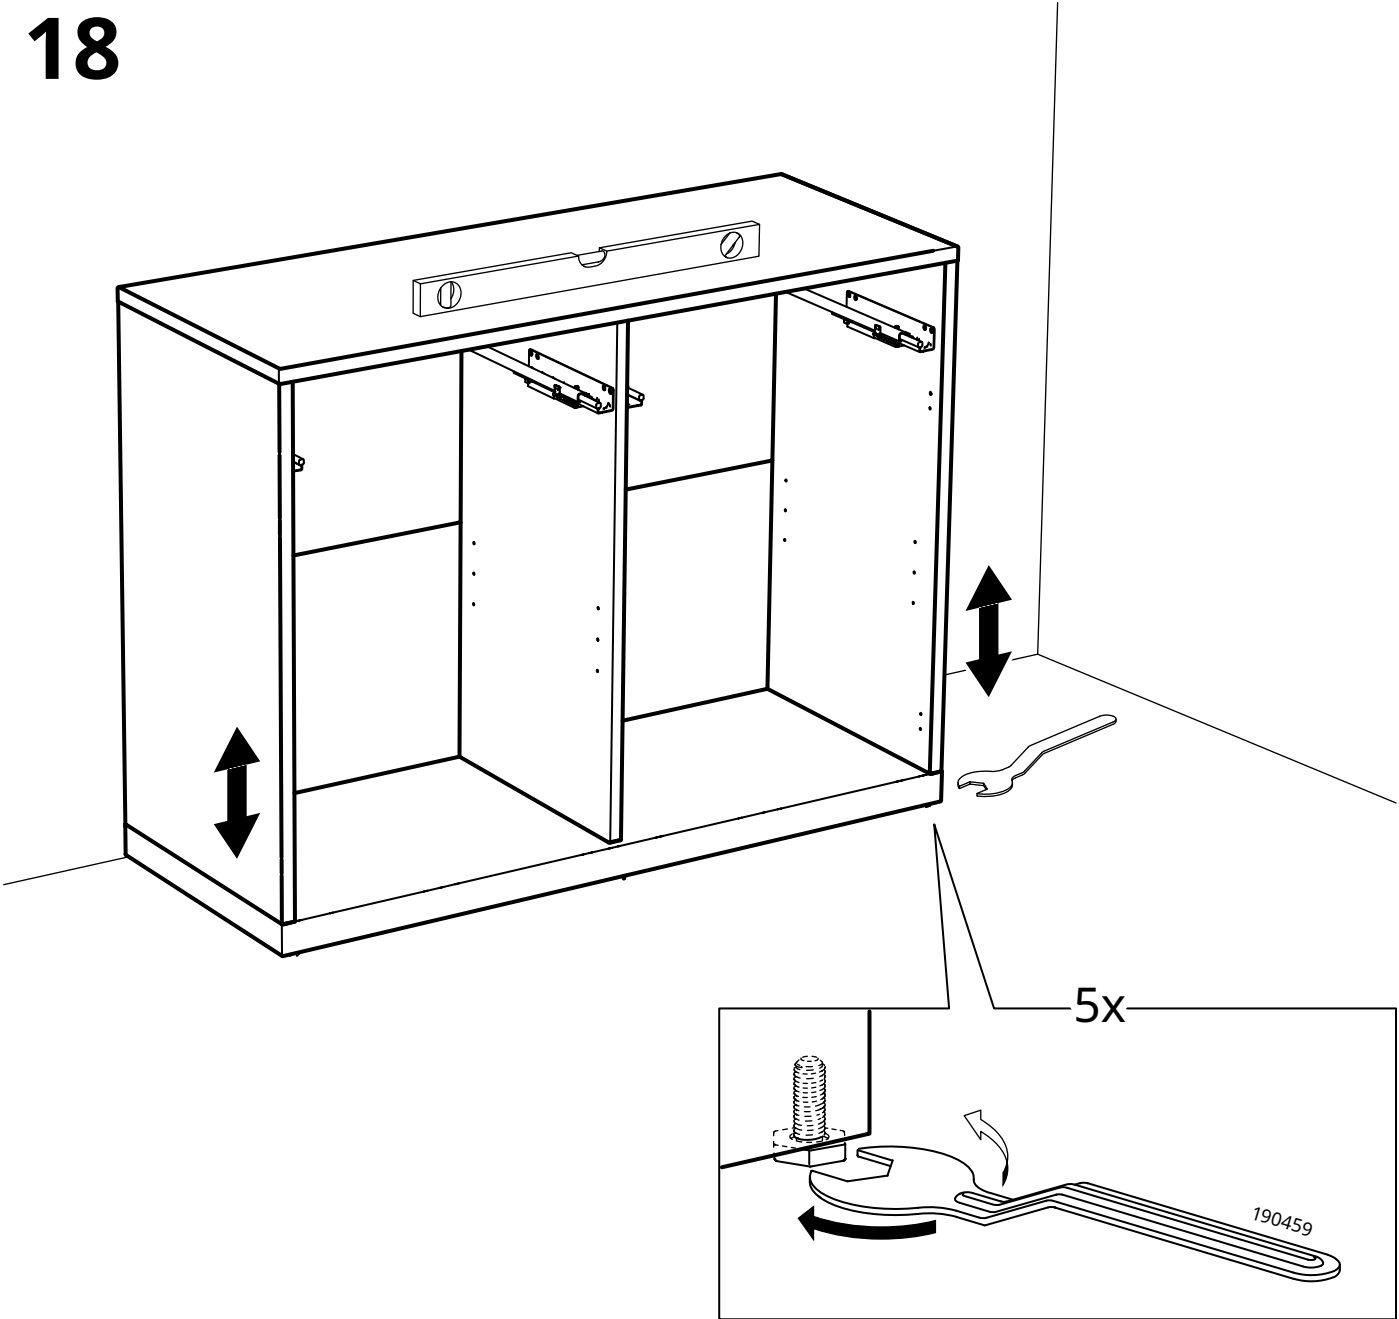 

19

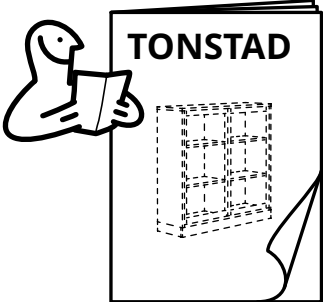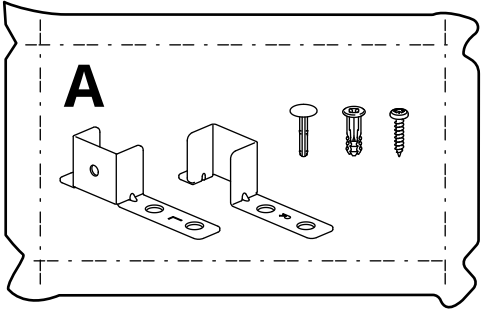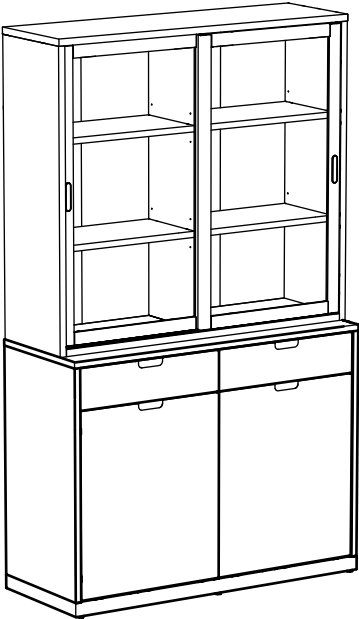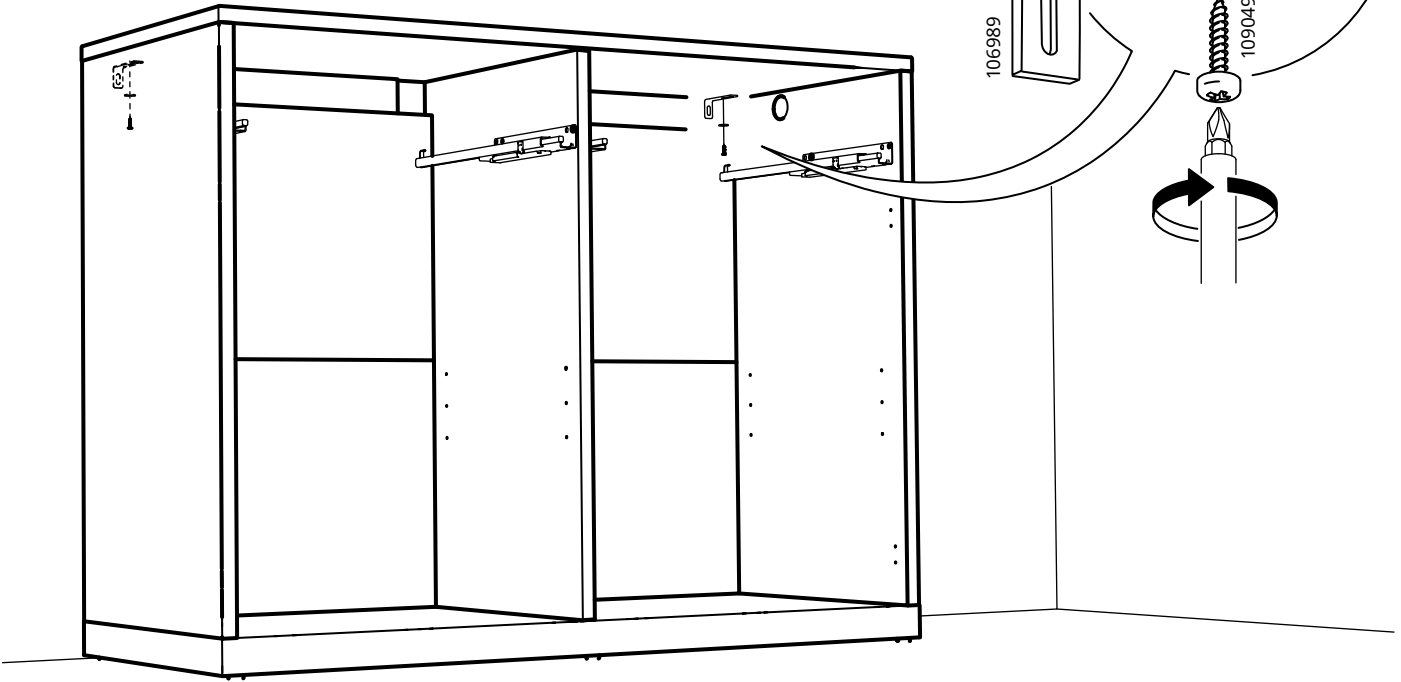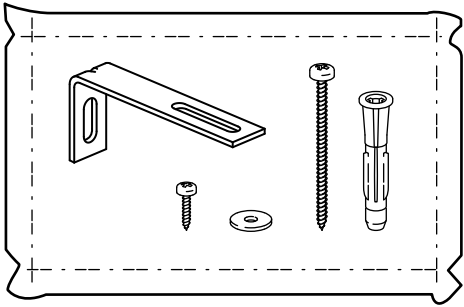     


20

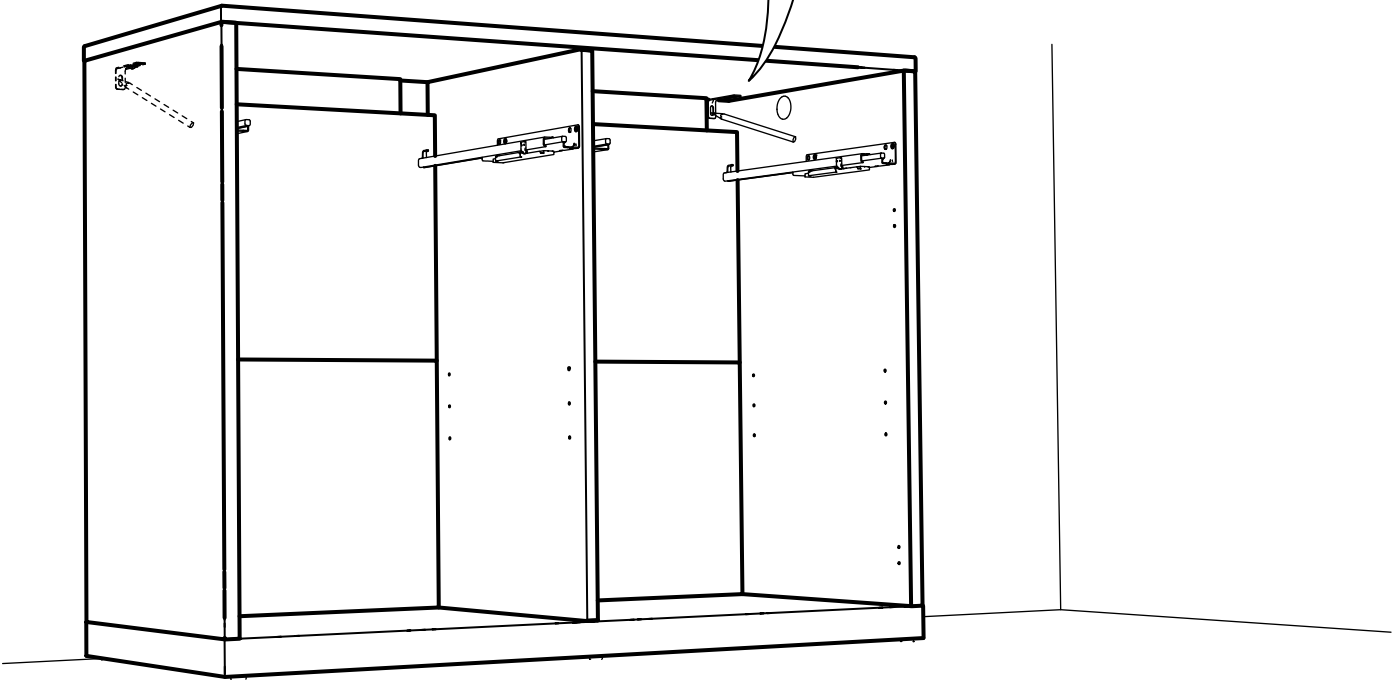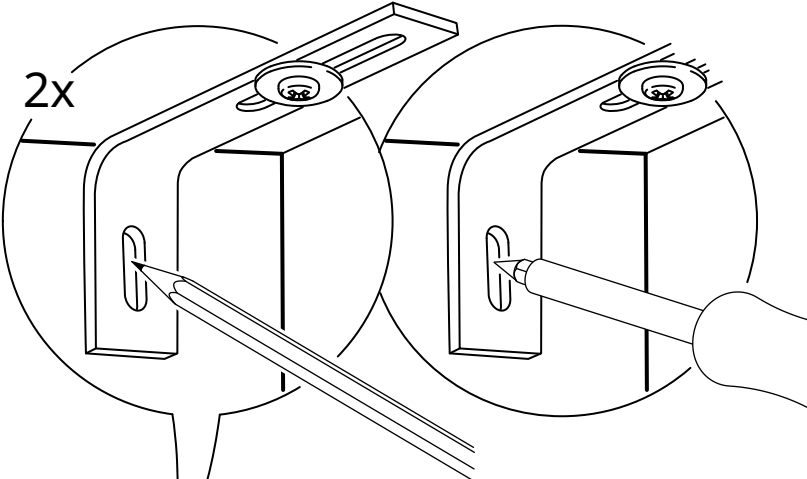  


21

x

  x

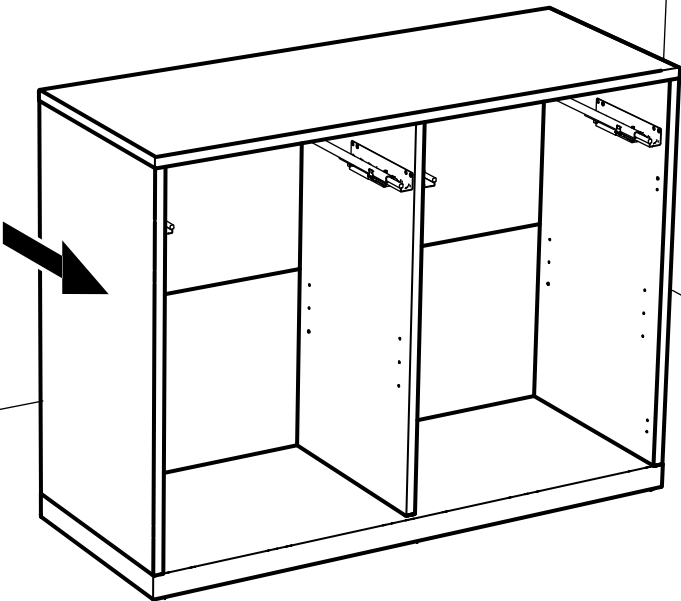


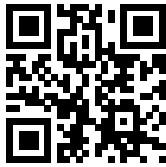

www.IKEA.com/secure-it



 www.IKEA.cn/secure-it

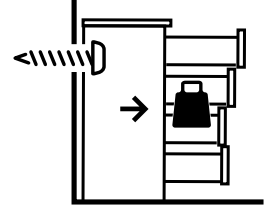

22

 
 
English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.


A
Ø 8 mm (5/16")
1
2
3

B
Ø 8 mm (5/16")
1
2
3


C
Ø 3 mm (1/8")
1
2
3

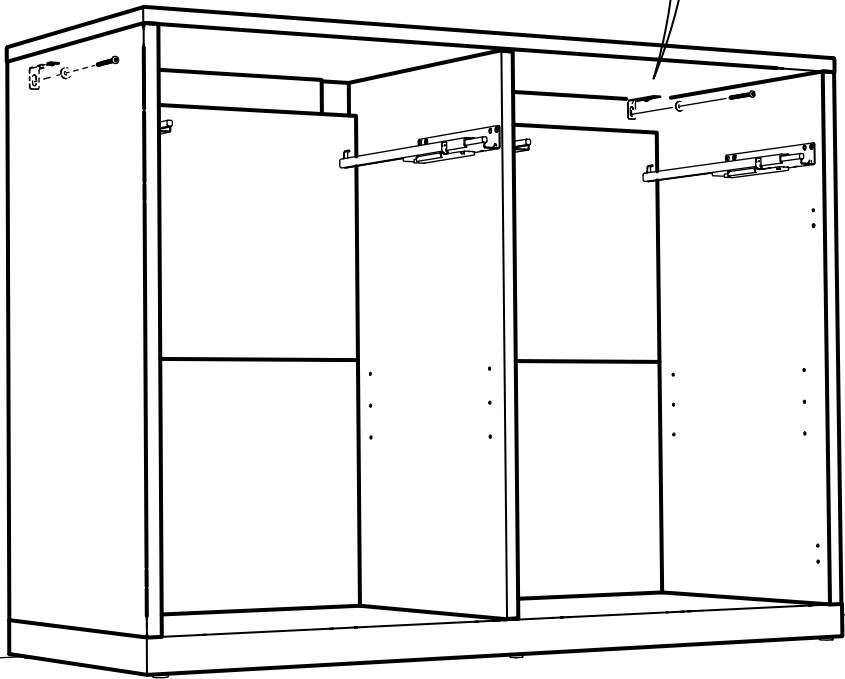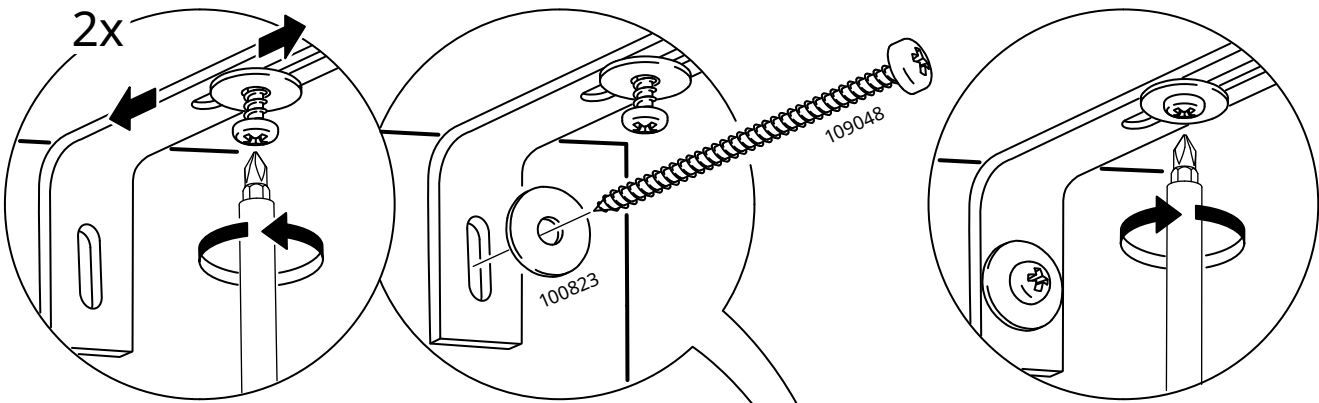

24

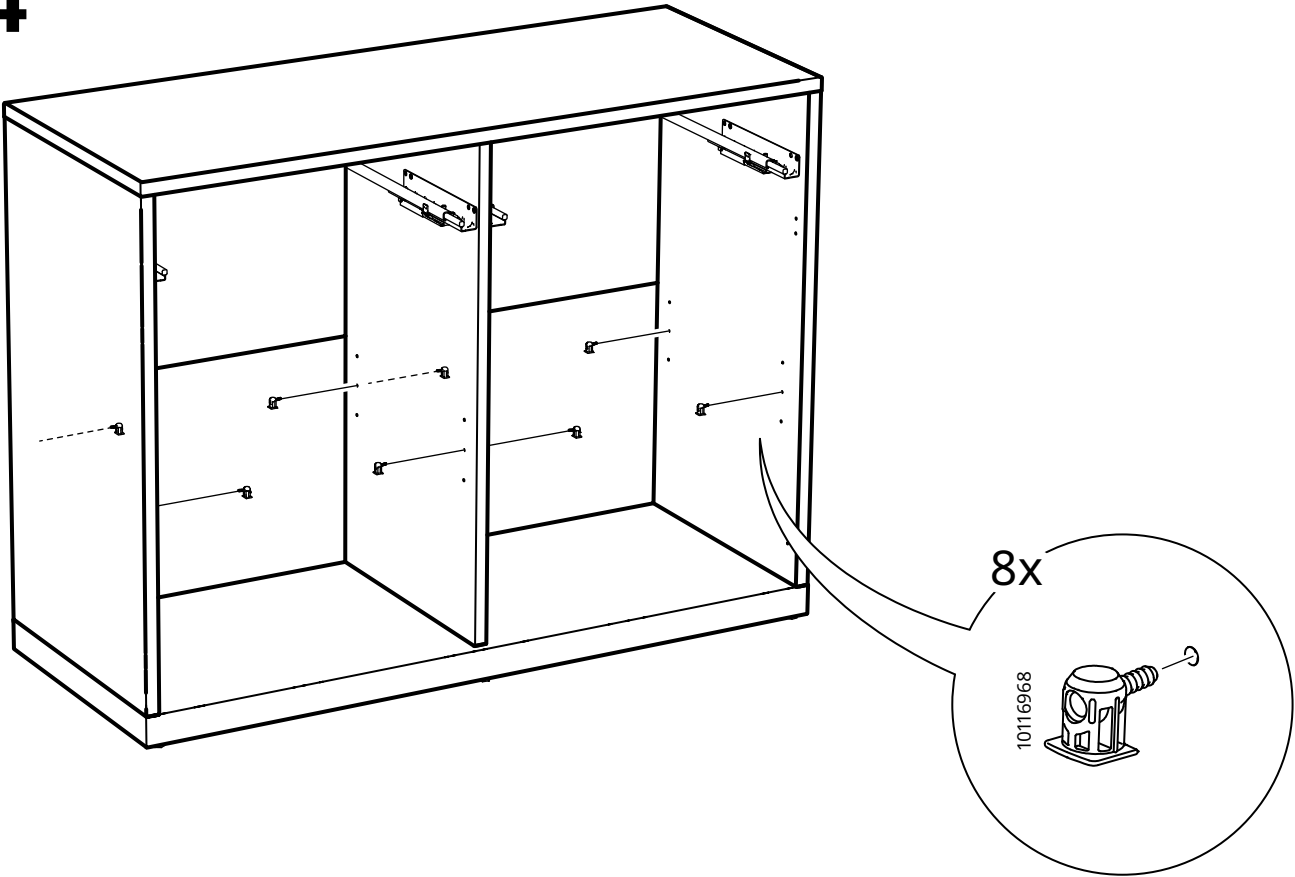 

25

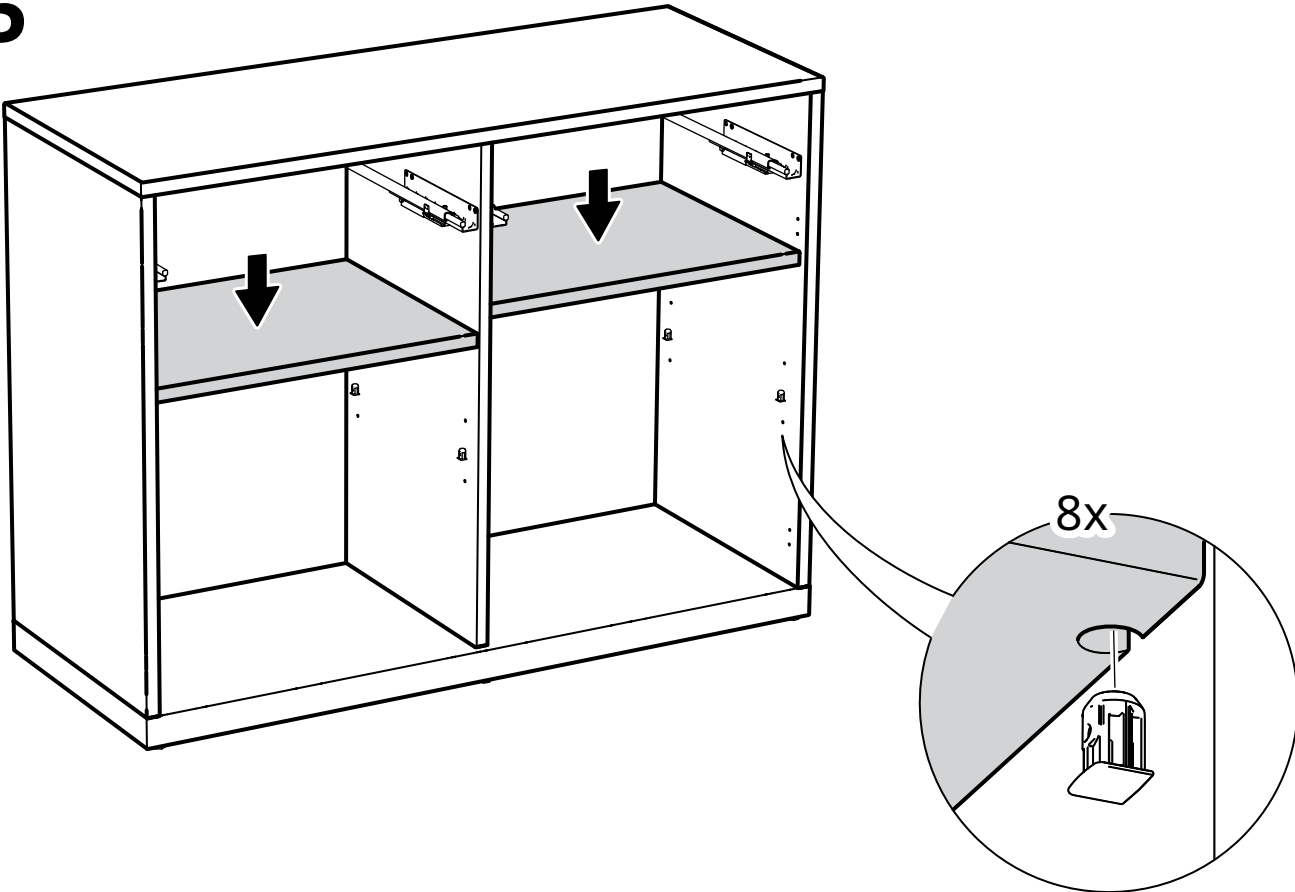 


26

4x

107586



 
2

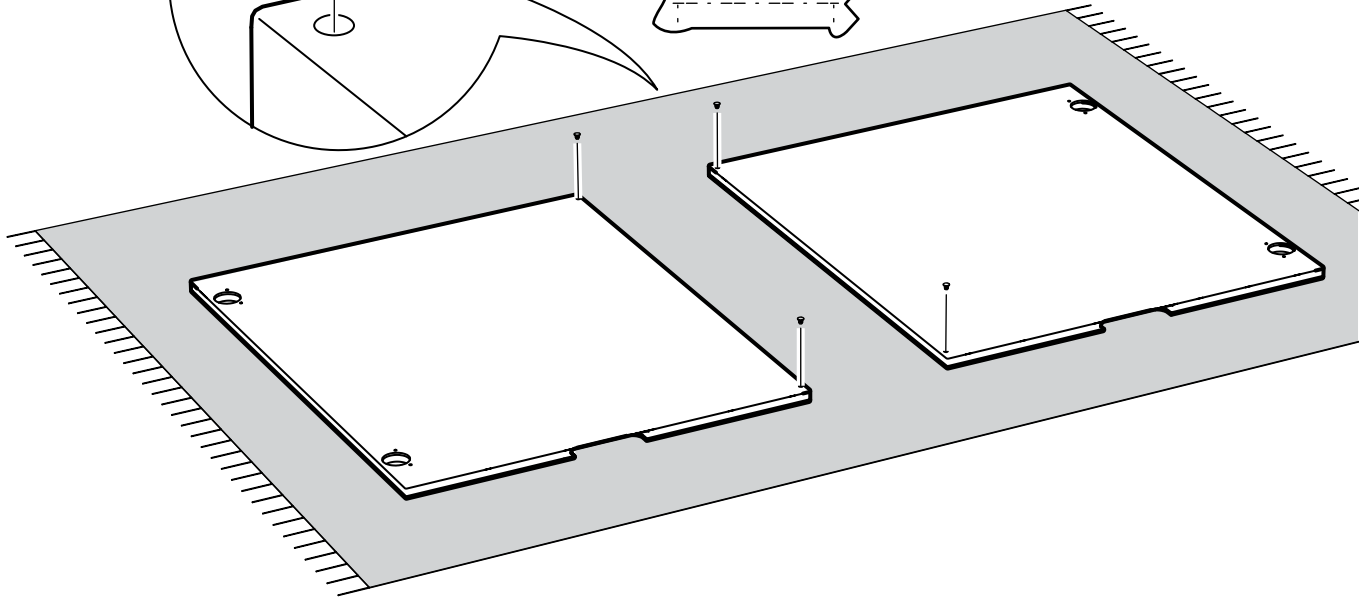


27

2x

   
175136

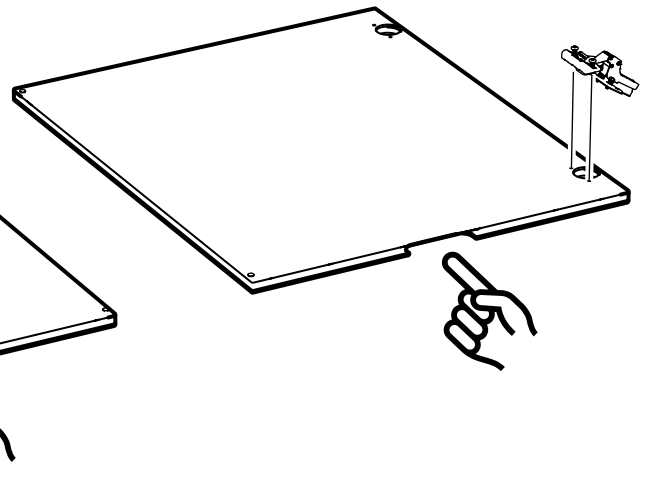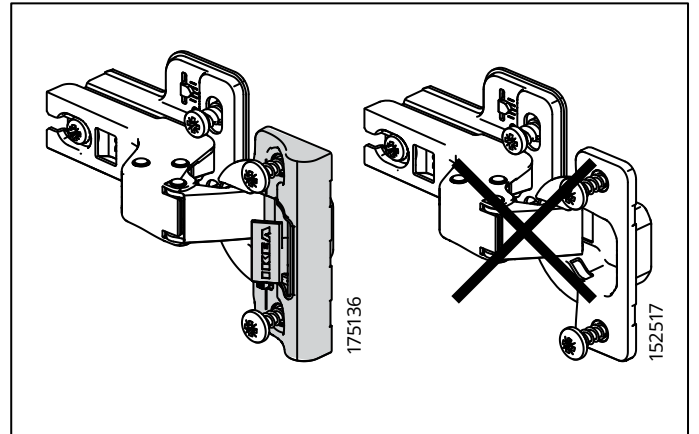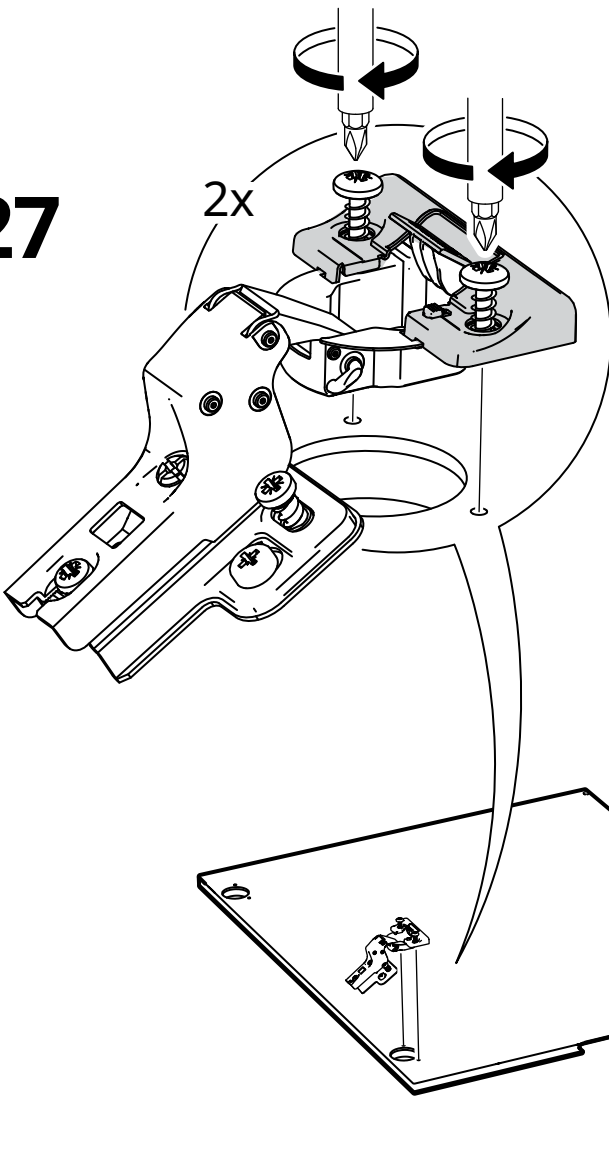


28

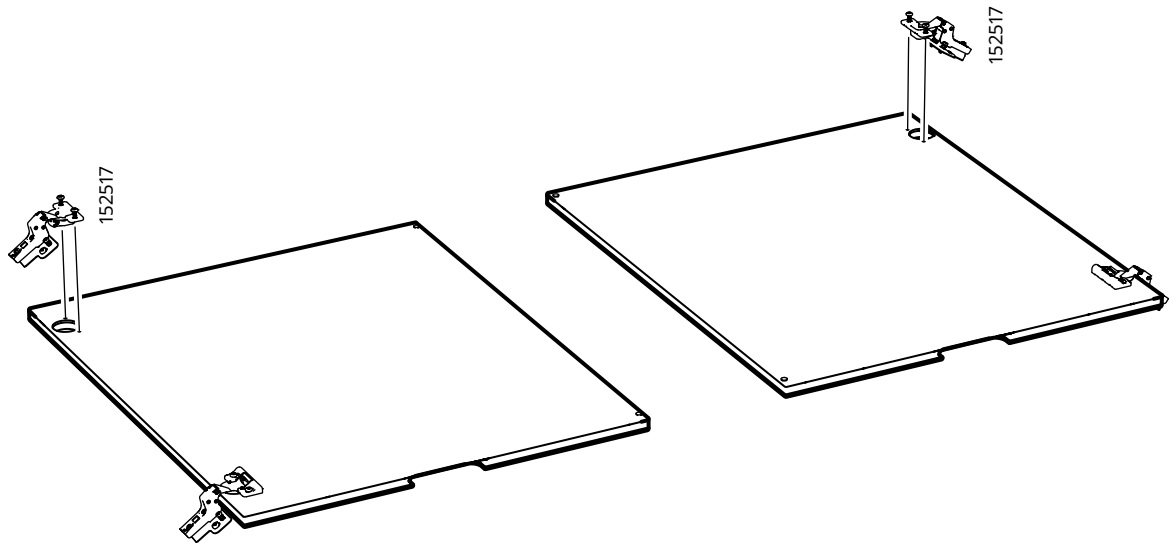 


29

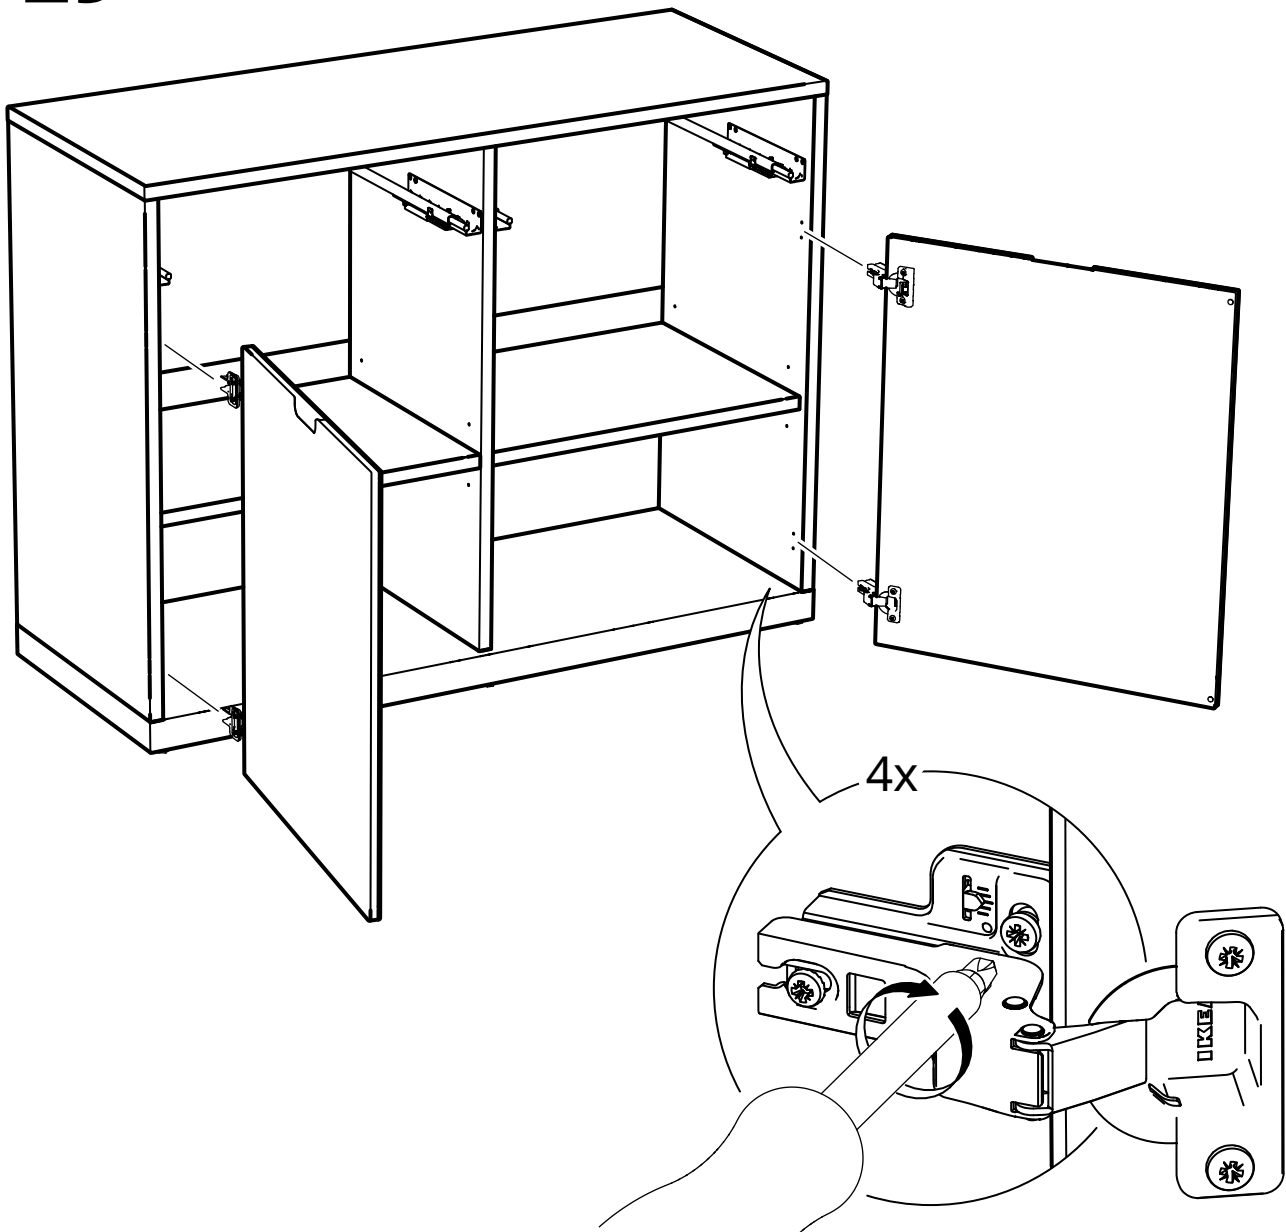 


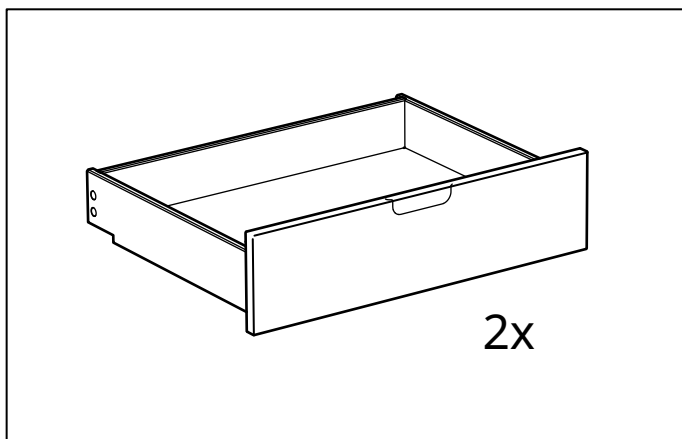 




30

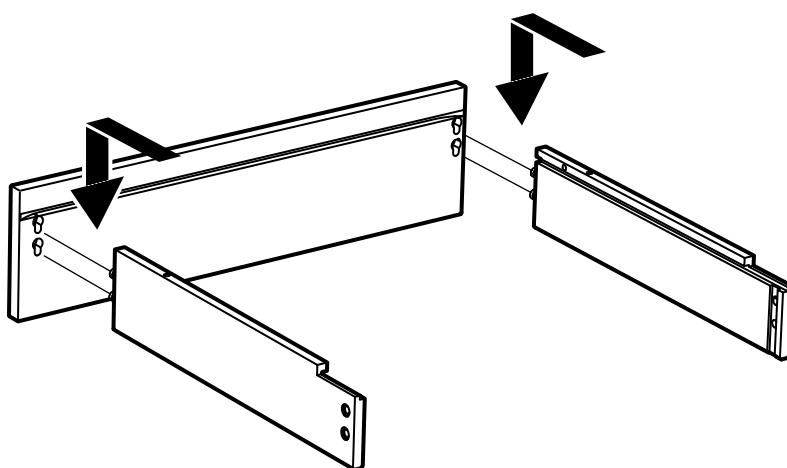 

31




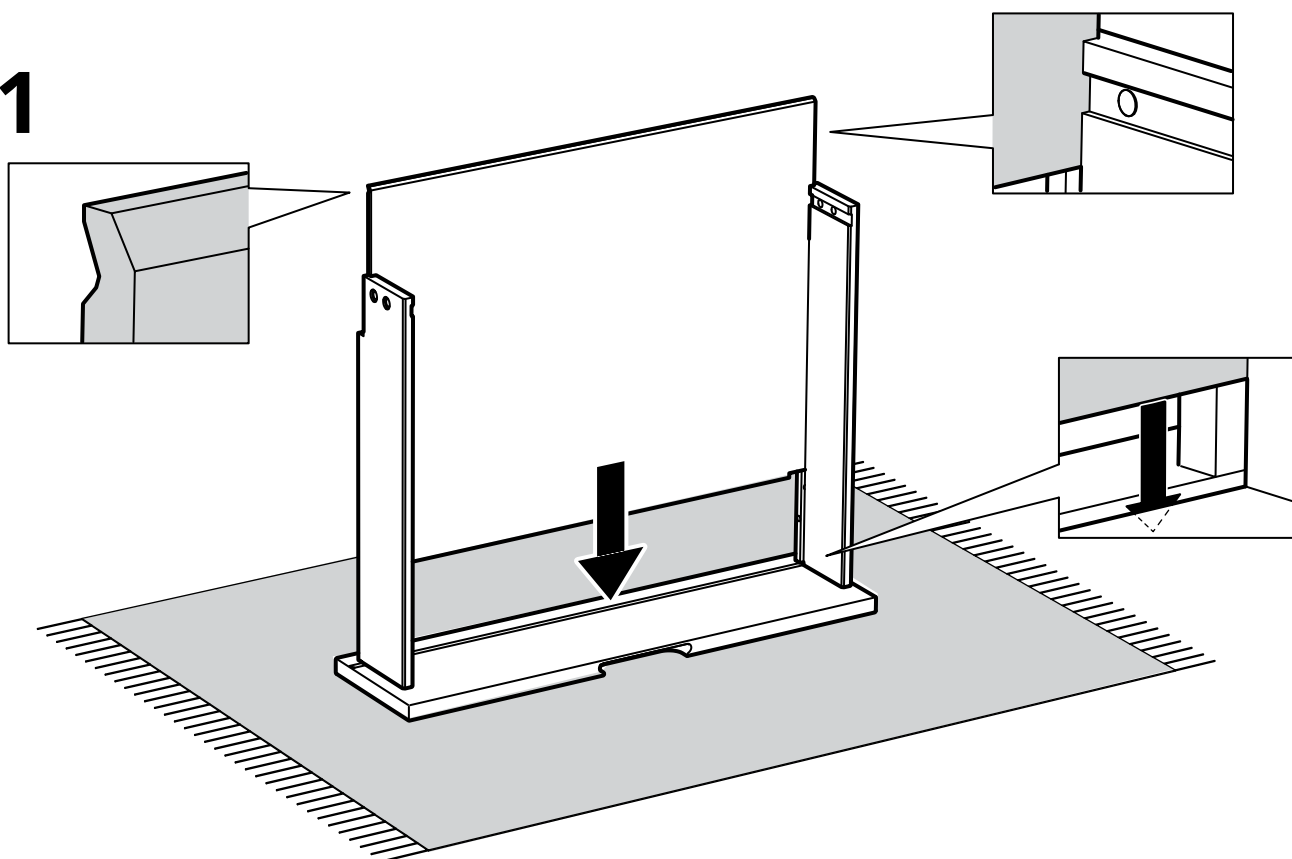 


32

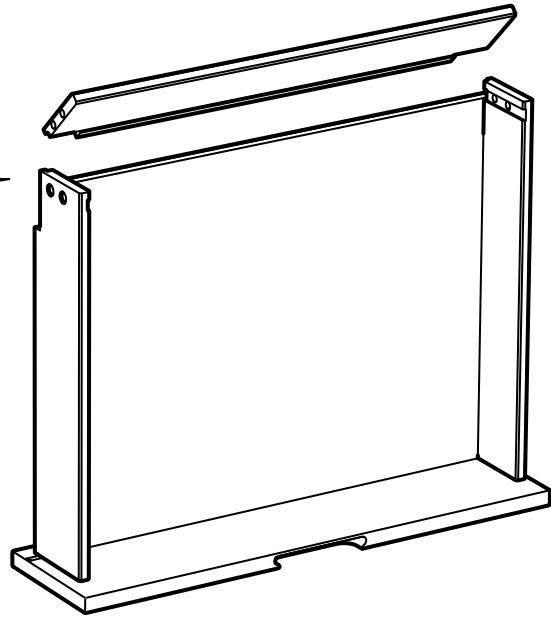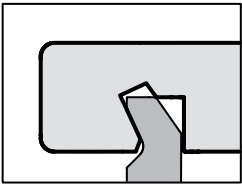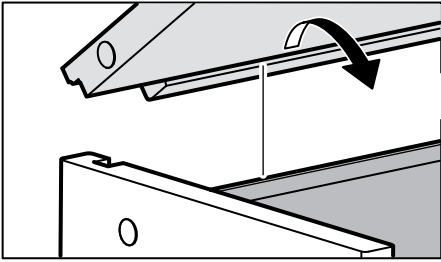   

33

    4x

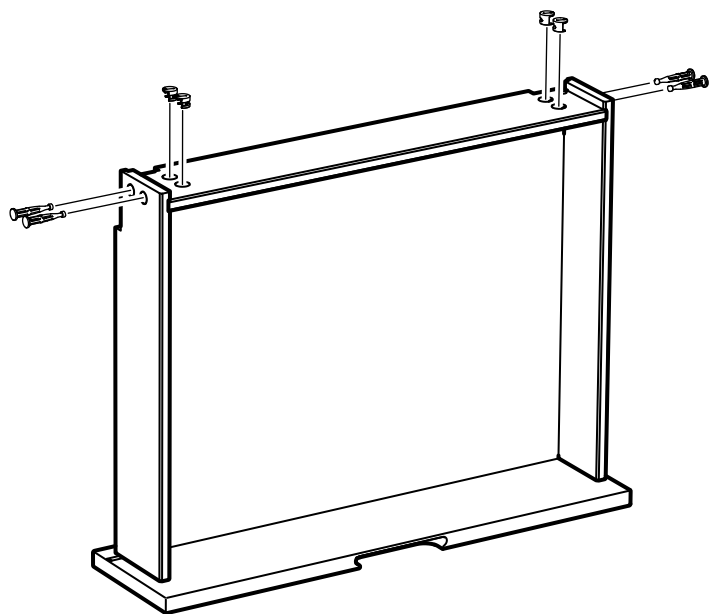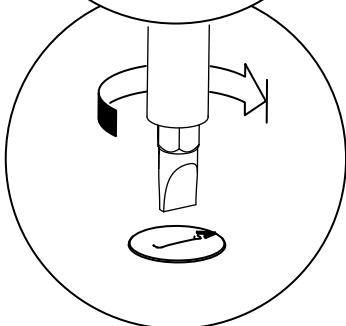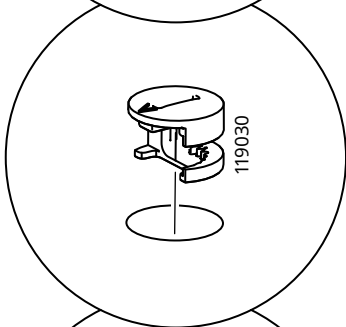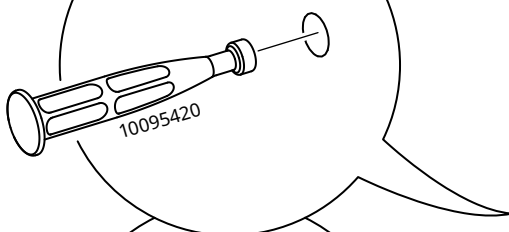

34

