# TROTTEN









#### English

#### **WARNING**

Children have died from furniture tipover.To reduce the risk of furniture tipover:

Always anchor your furniture with an anti-tip device.


NEVER put a TV on this product.


NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.


NEVER open more than one drawer at a time. Place heaviest items in the lowest drawers.


#### English


Read and follow each step of the instruction carefully.

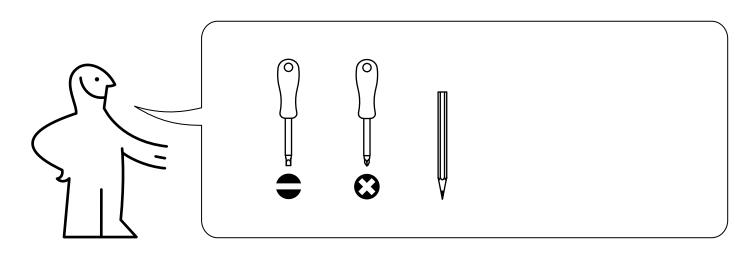


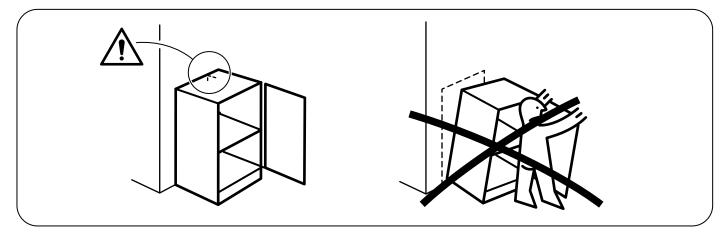


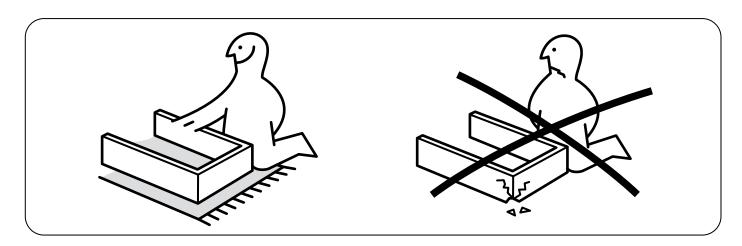


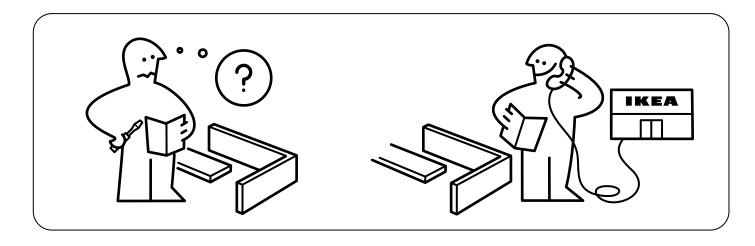


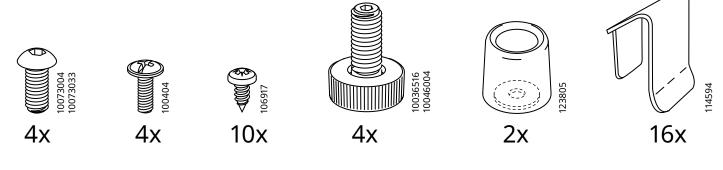


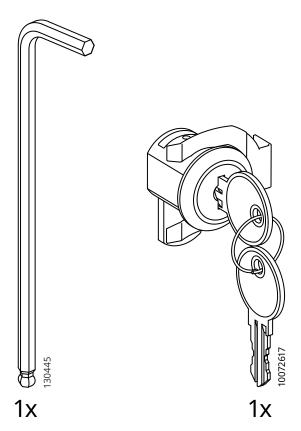


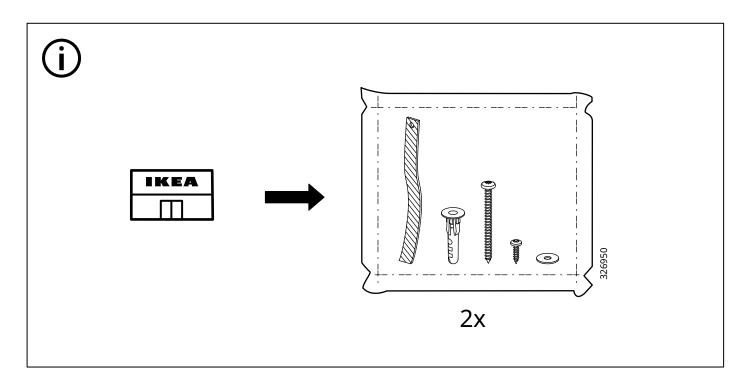


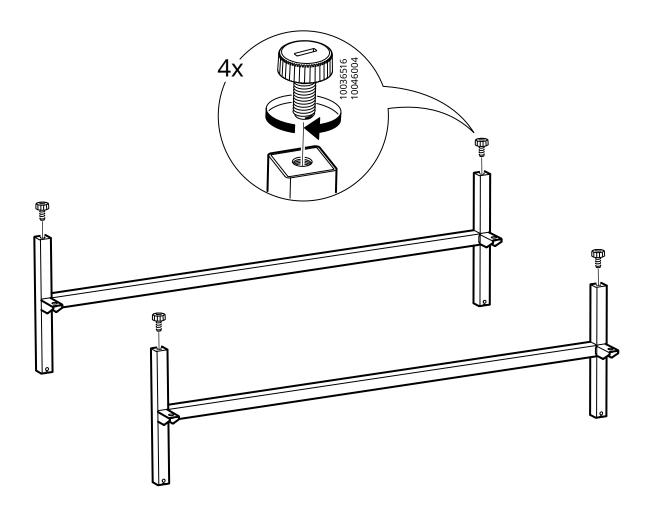


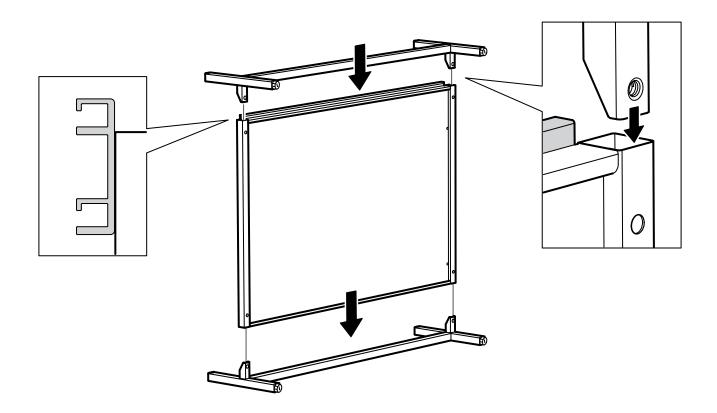


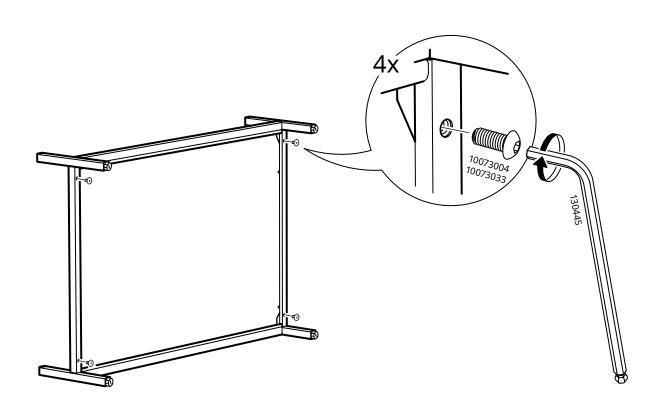

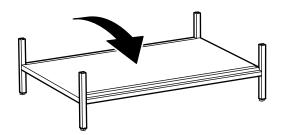


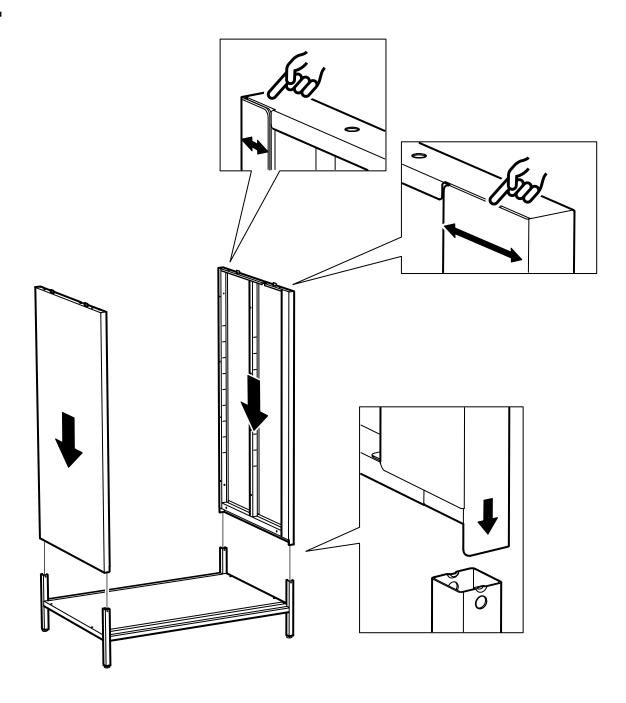


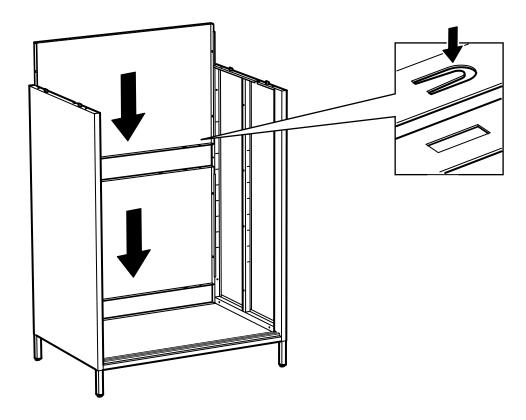


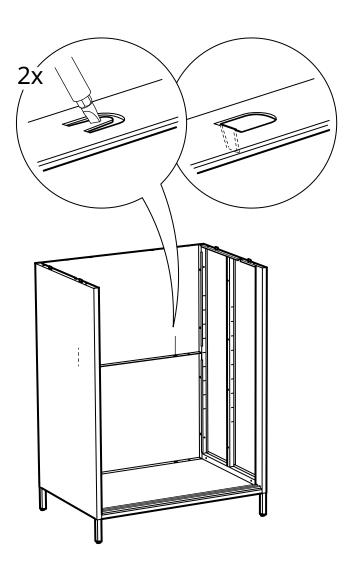





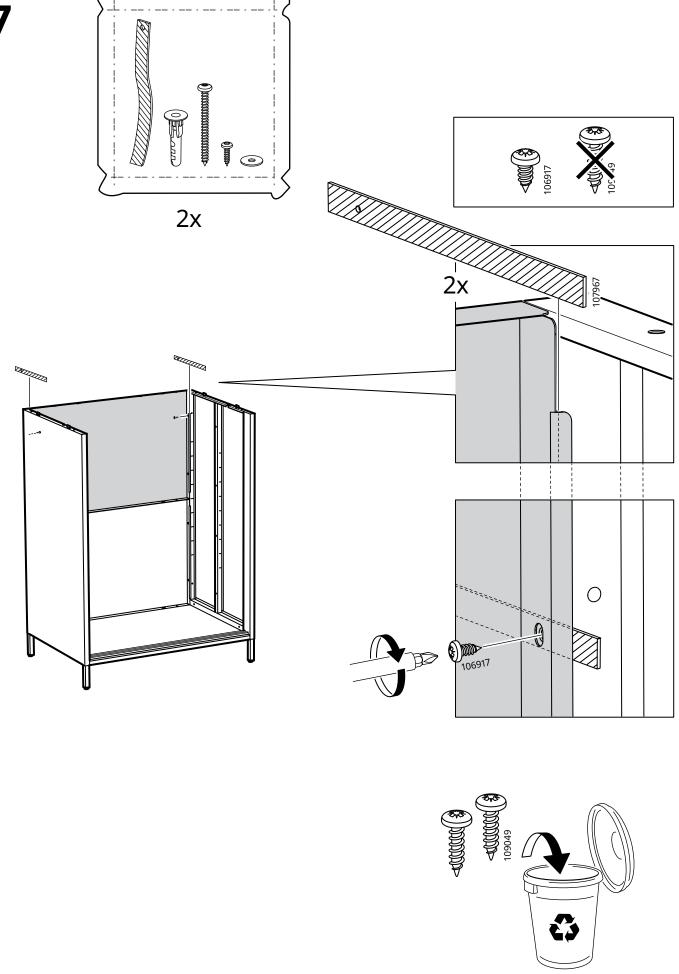


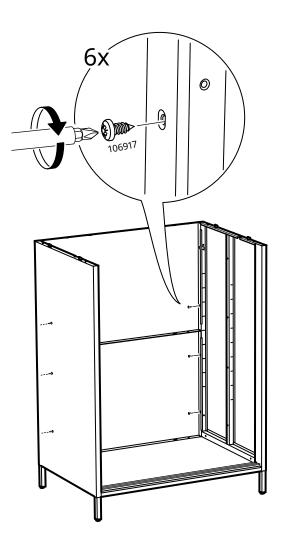


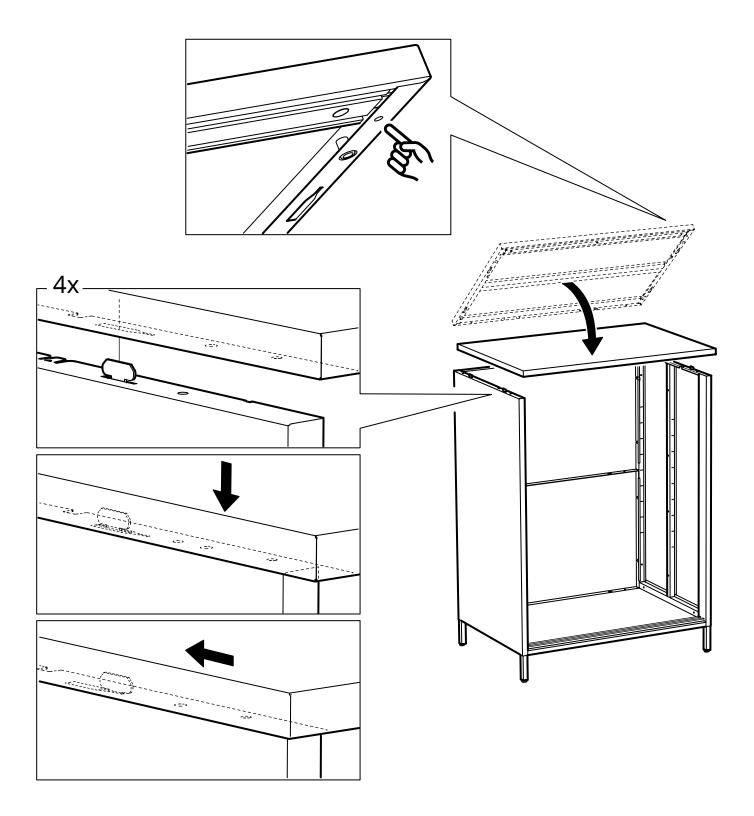


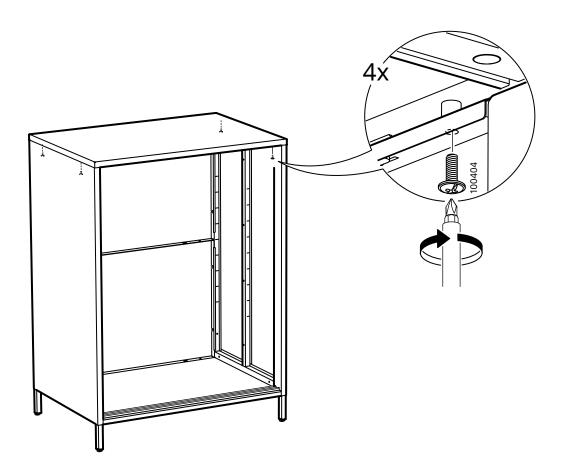


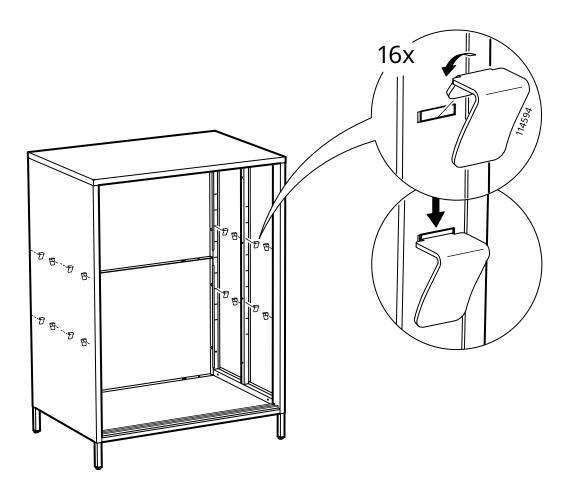


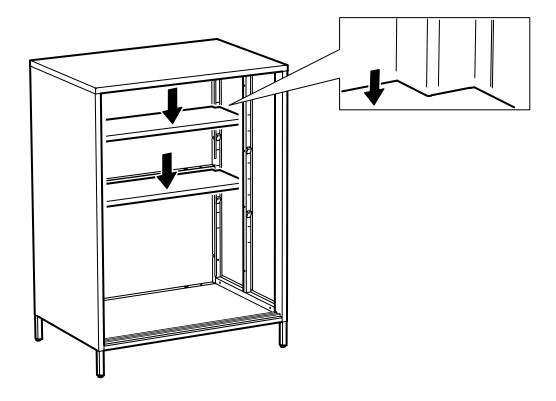


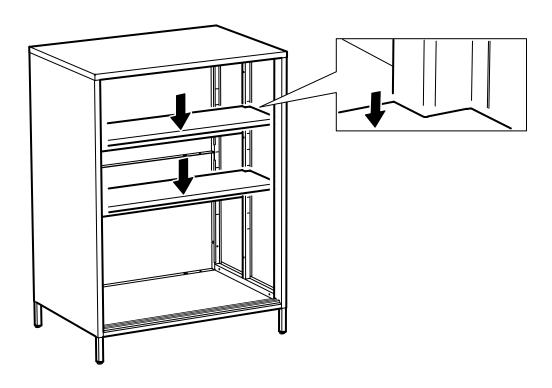


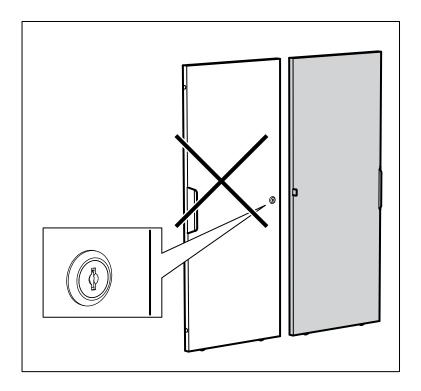


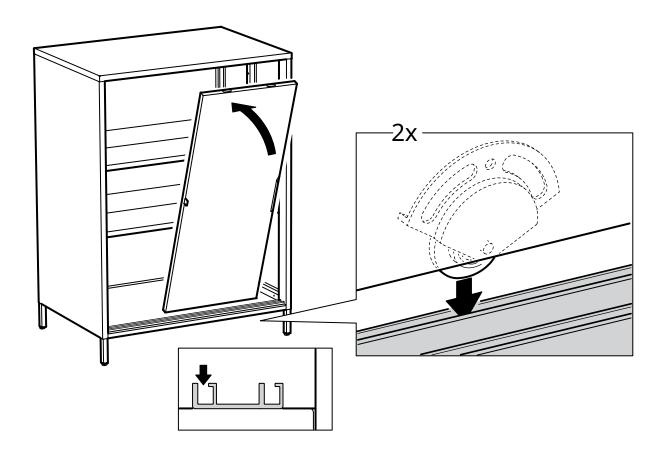


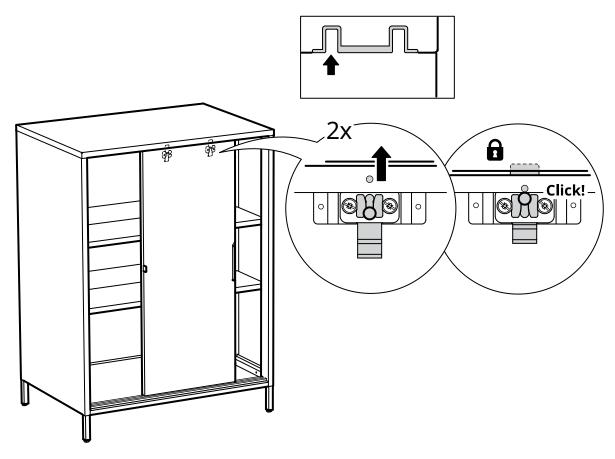

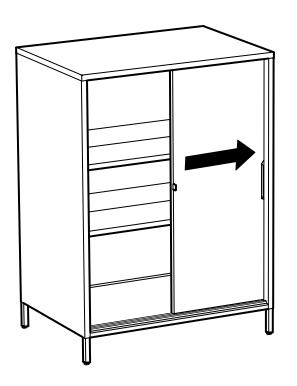


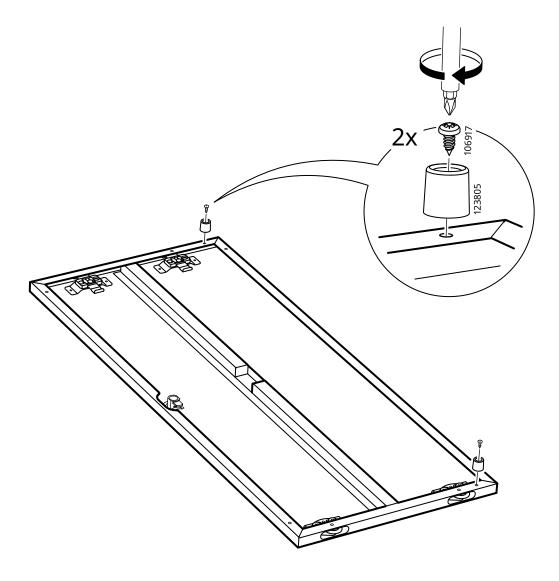


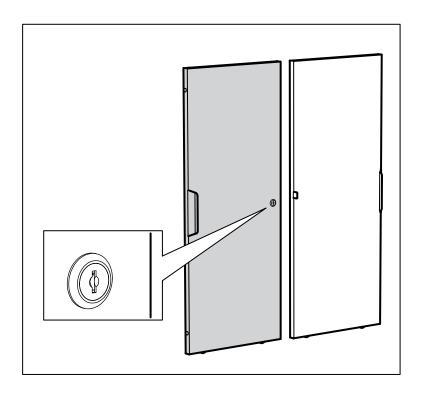


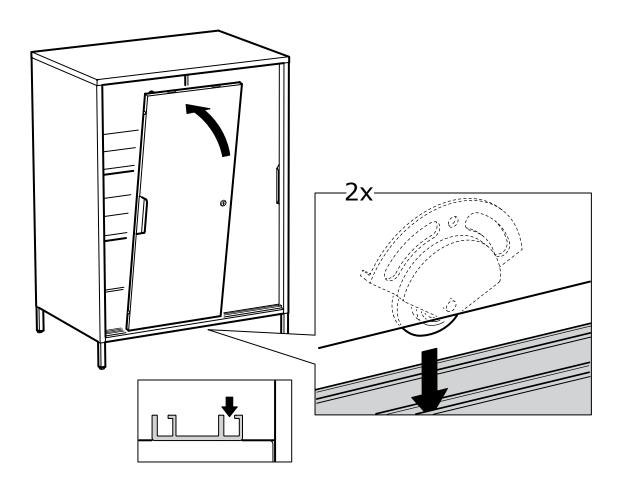





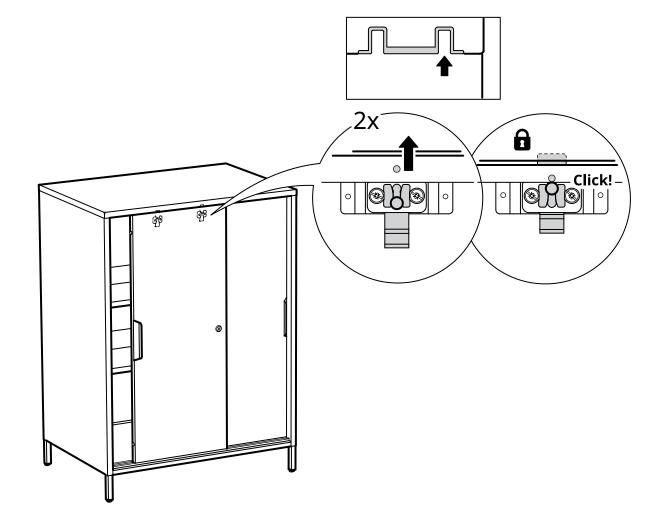

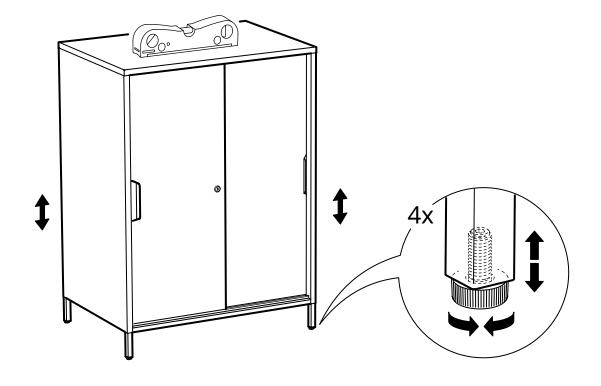


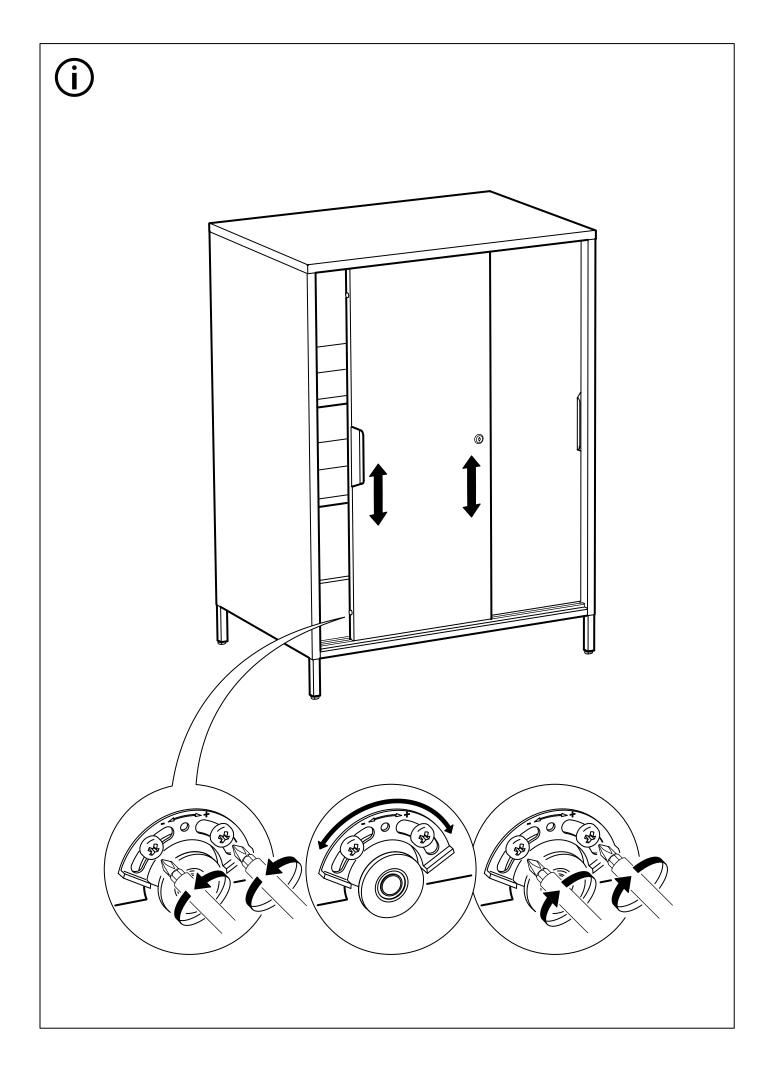

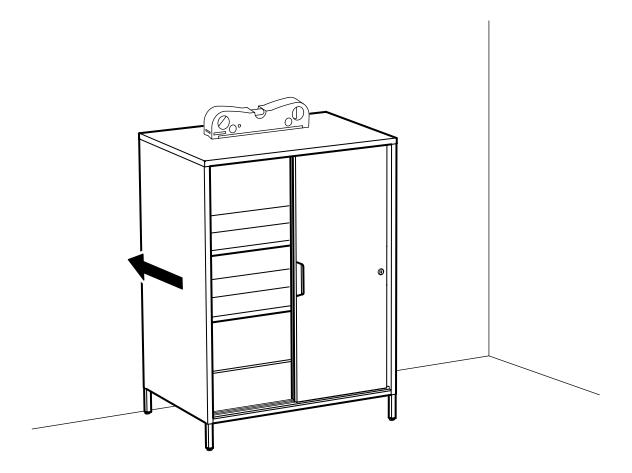

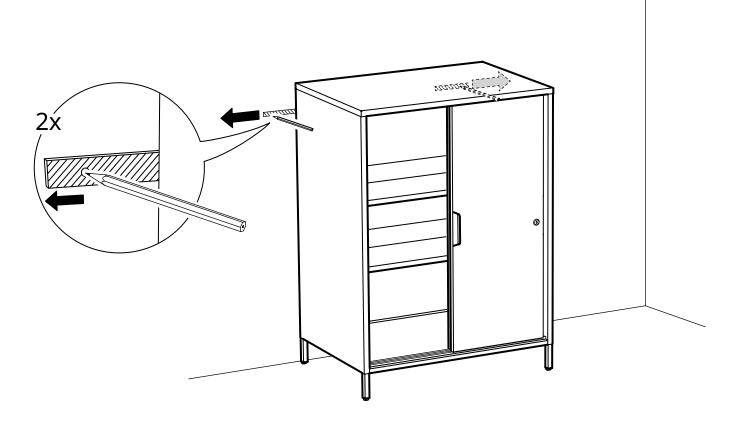



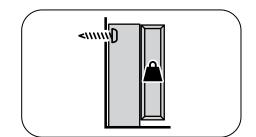

#### English

Screw(s) and plug(s) for the wall are not included. Use screw(s) and plug(s) suitable for your walls. If you are uncertain, seek professional advice. Read and follow each step of the instruction carefully.

