 


VIHALS

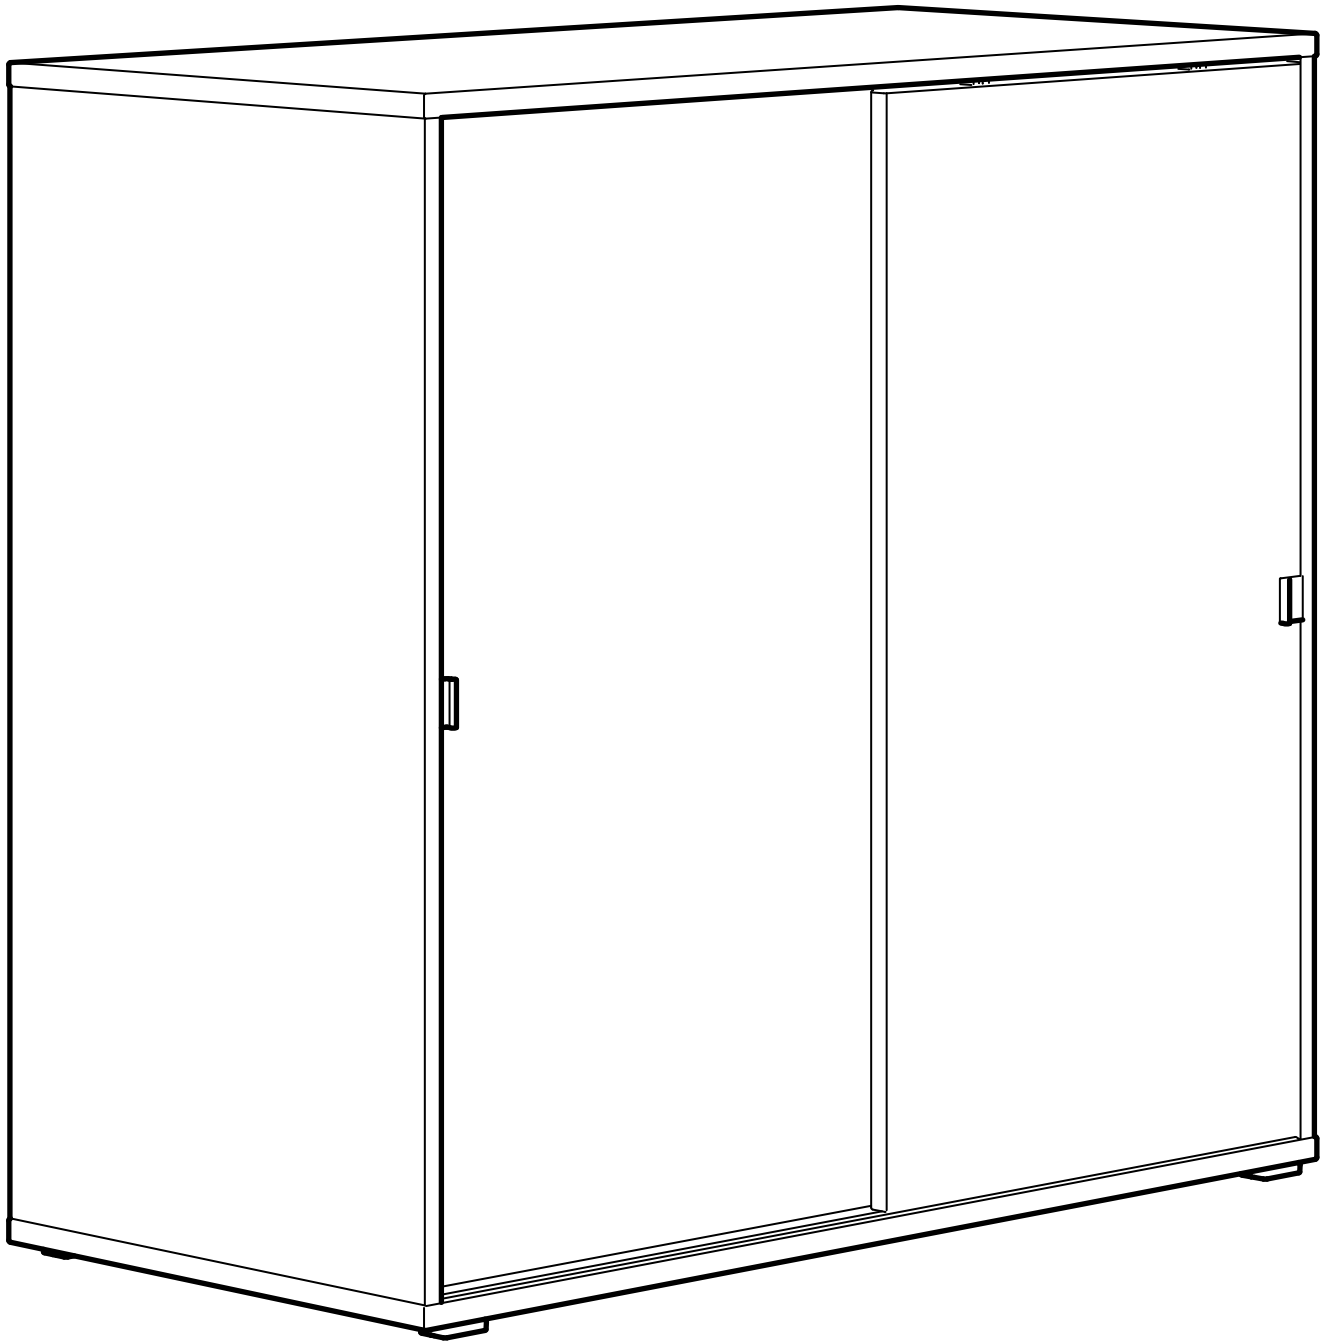

Design and Quality
IKEA of Sweden



English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

 
 
 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

 
 
 
 
NEVER open more than one drawer at a time.

Place heaviest items in the lowest drawers.


English

Read and follow each step of the instruction carefully.

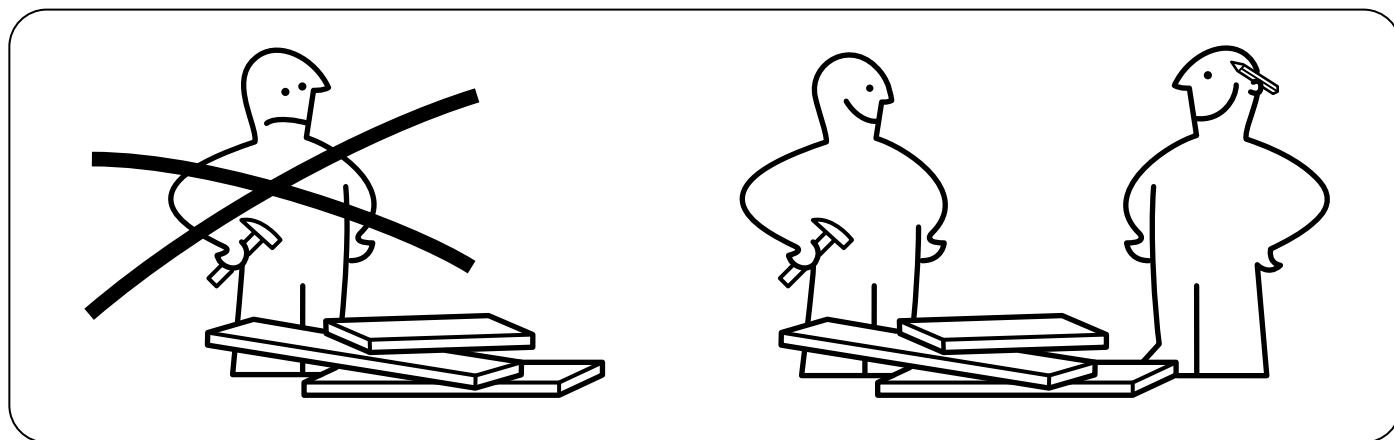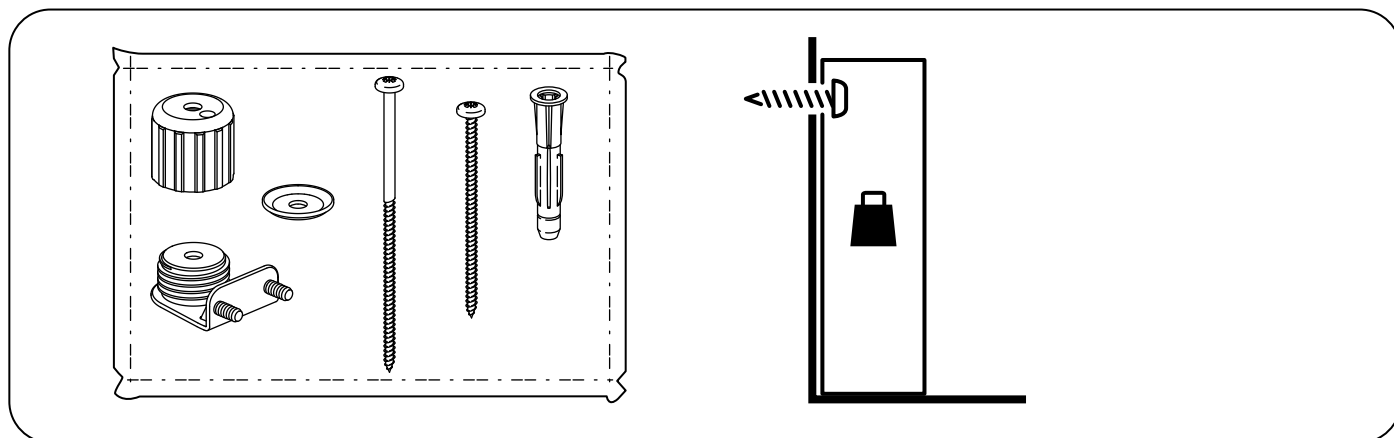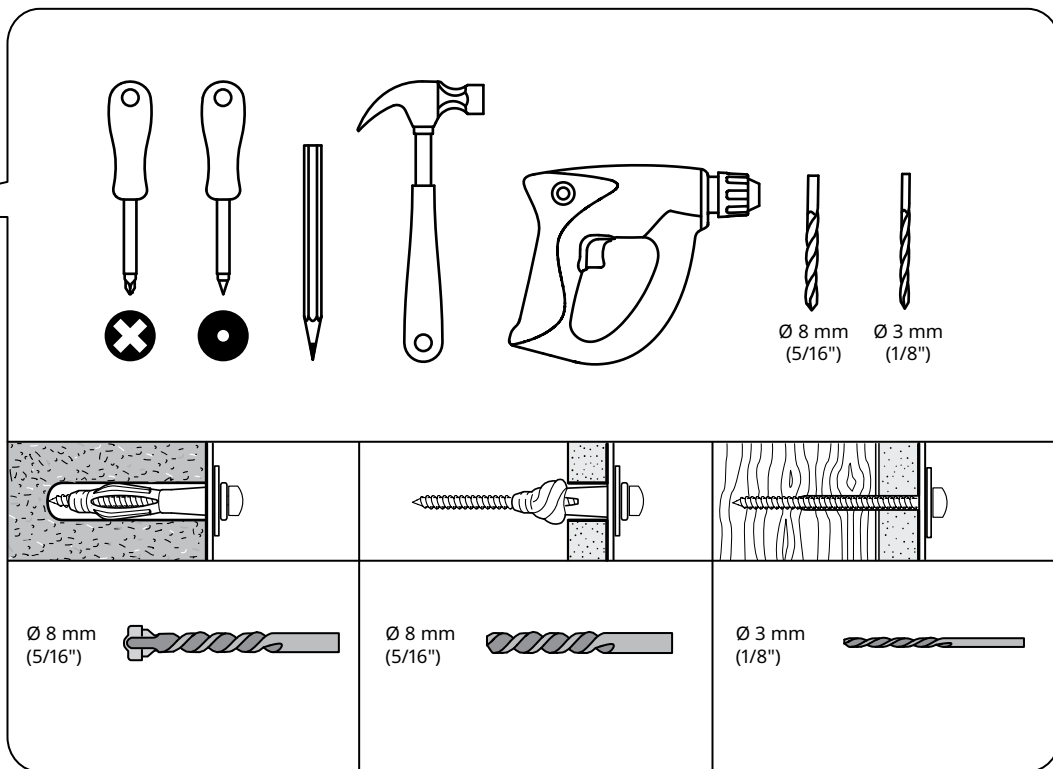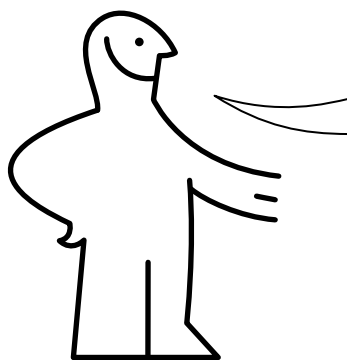

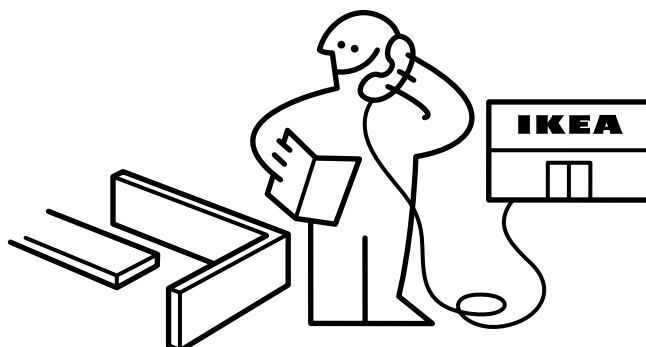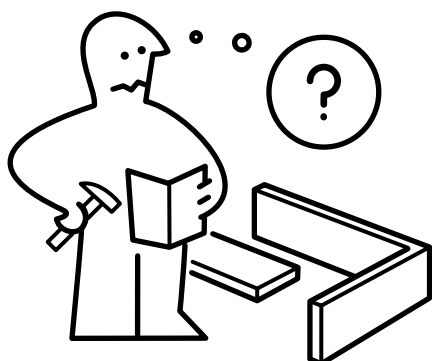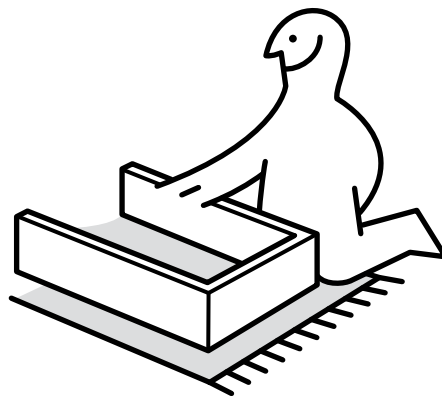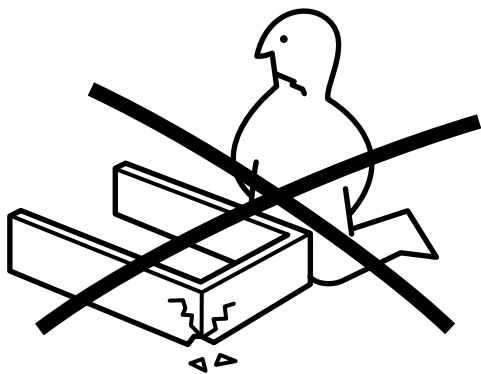


1

 


10077982

 4x



151707

 10x




151708

10x



10051660
10102154
10107001

 16x

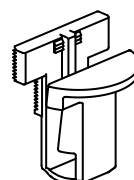


10093081

6x




10093082

 6x

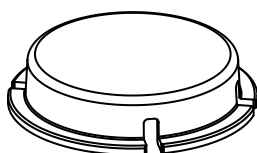


10005905
10099750
10106990

 2x

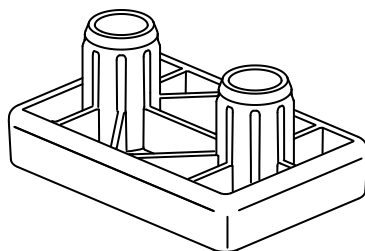

10061178
10100254
10107020

 6x

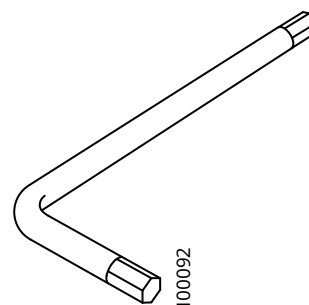


100092

1x




 2

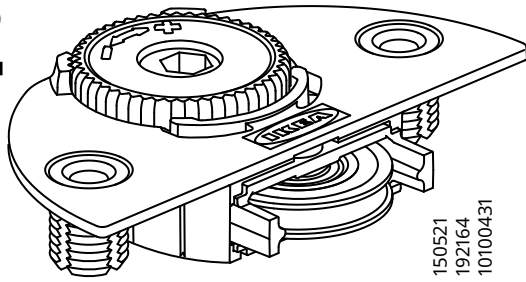


4x

 150521
192164
10100431

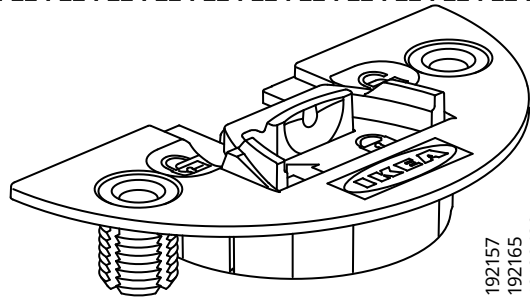


4x

 192157
192165
10100439

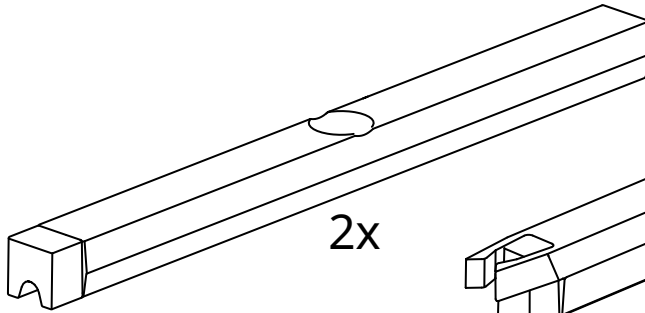


2x

 192160
192168
10107466

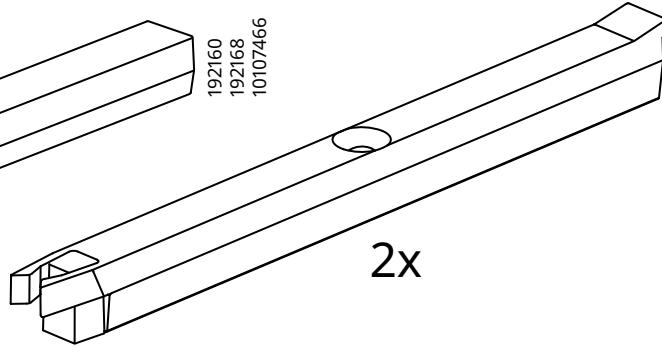

2x

 192159
192167
10107465




20x

192158
192166
10100430




4x

 146114




4x

 109535
116560

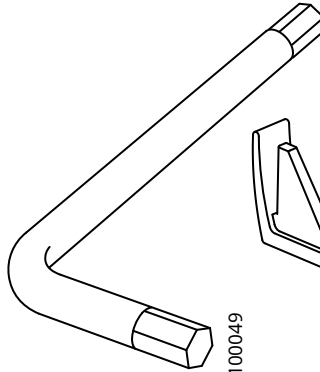


1x

 100049

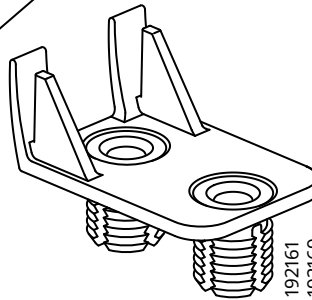

2x

 192161
192169
10100429

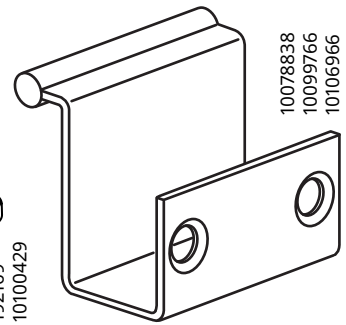


2x

10078838
10099766
10106966




 24

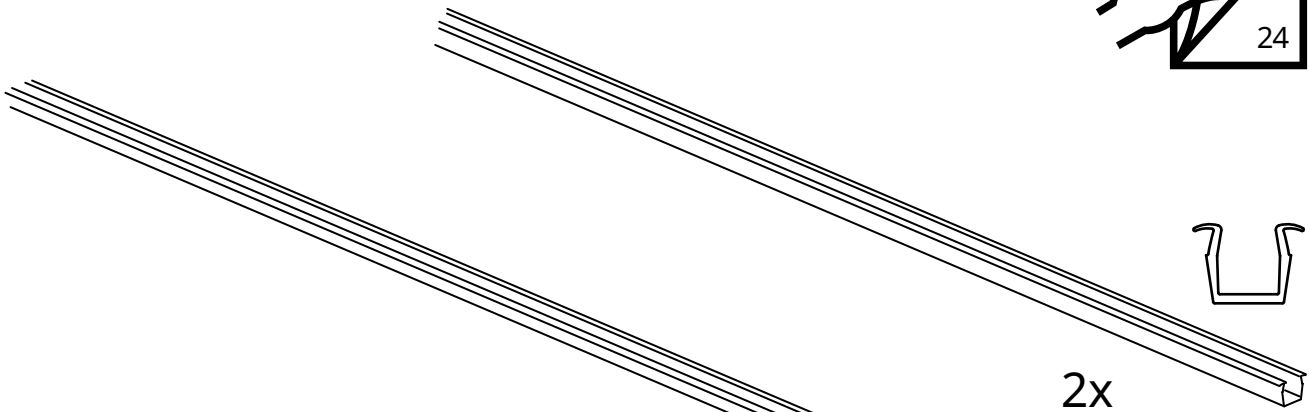



2x

 157976
10100089
10108121

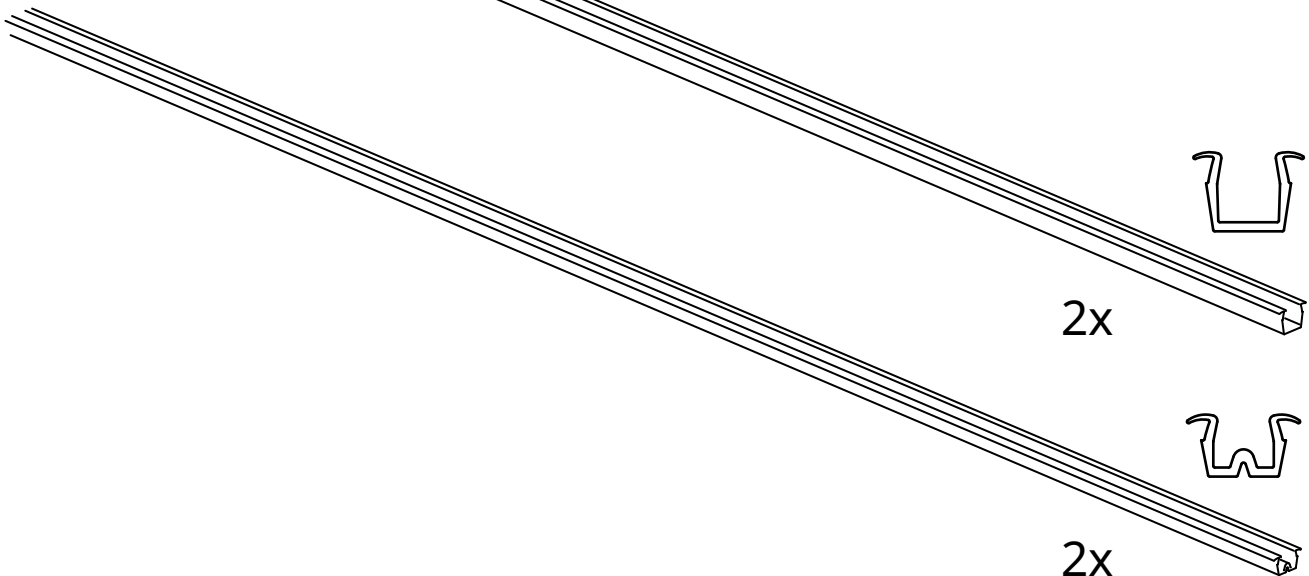


2x

  157975
10100091
10108120

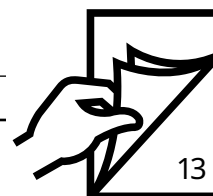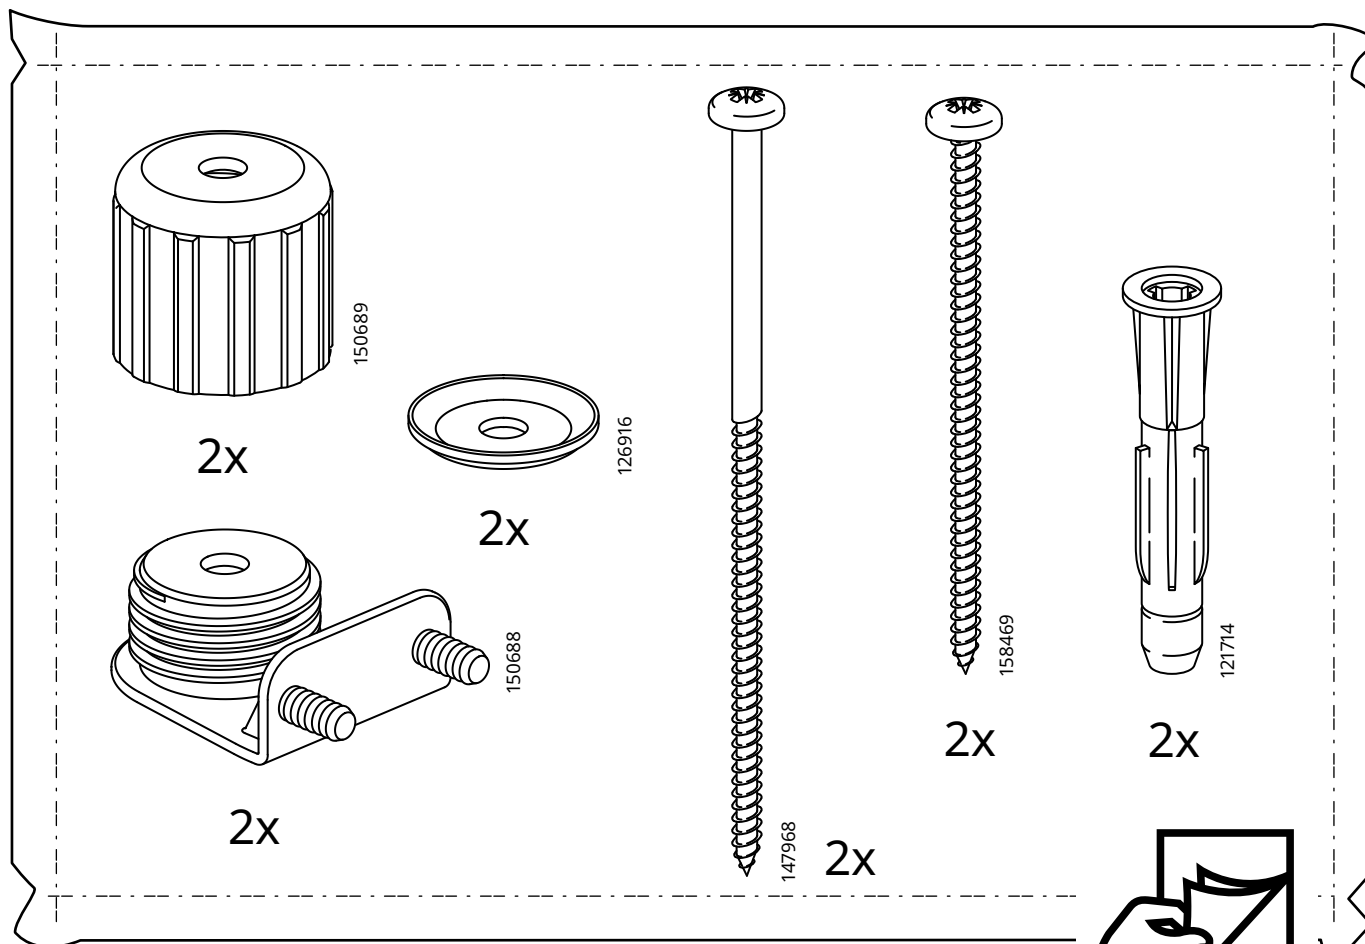


327495

 
1

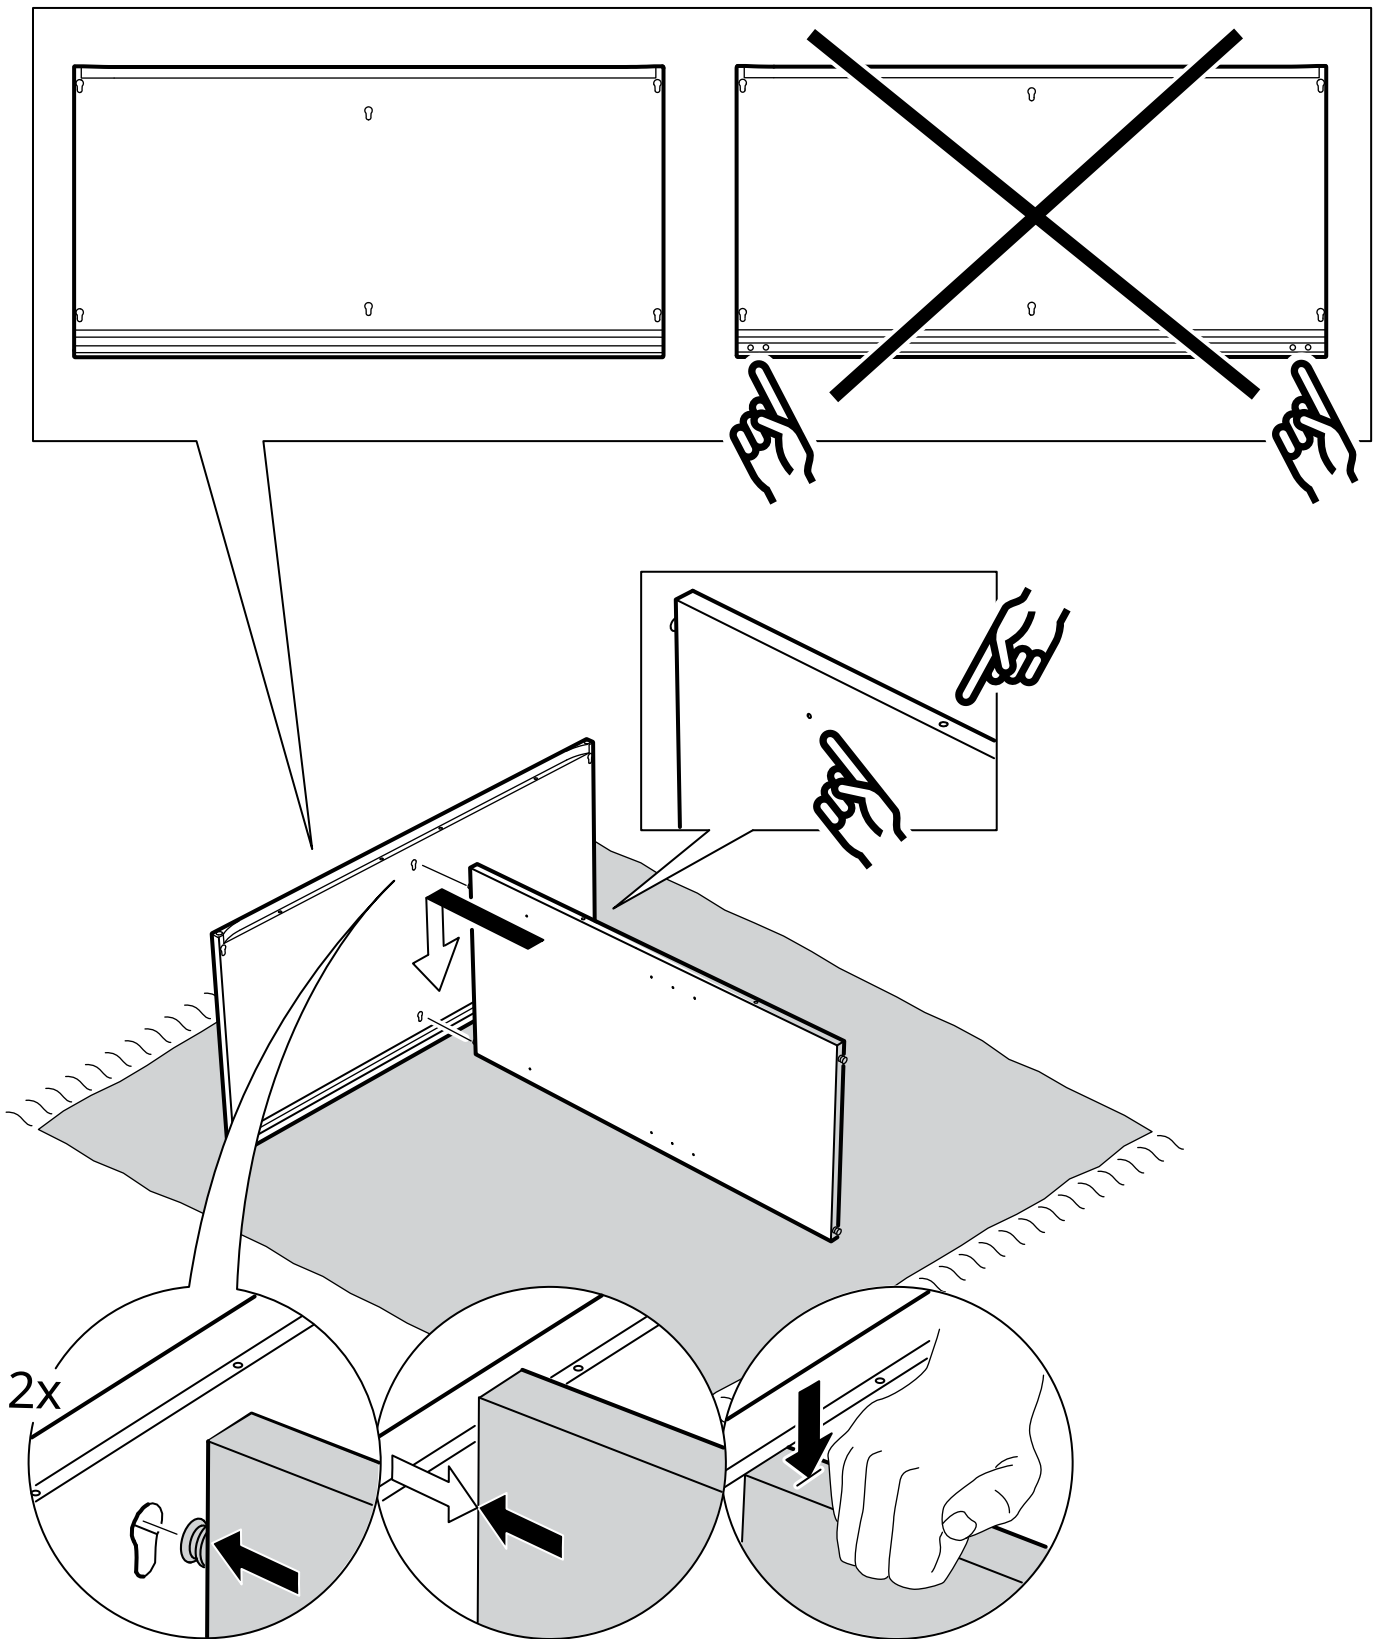





2

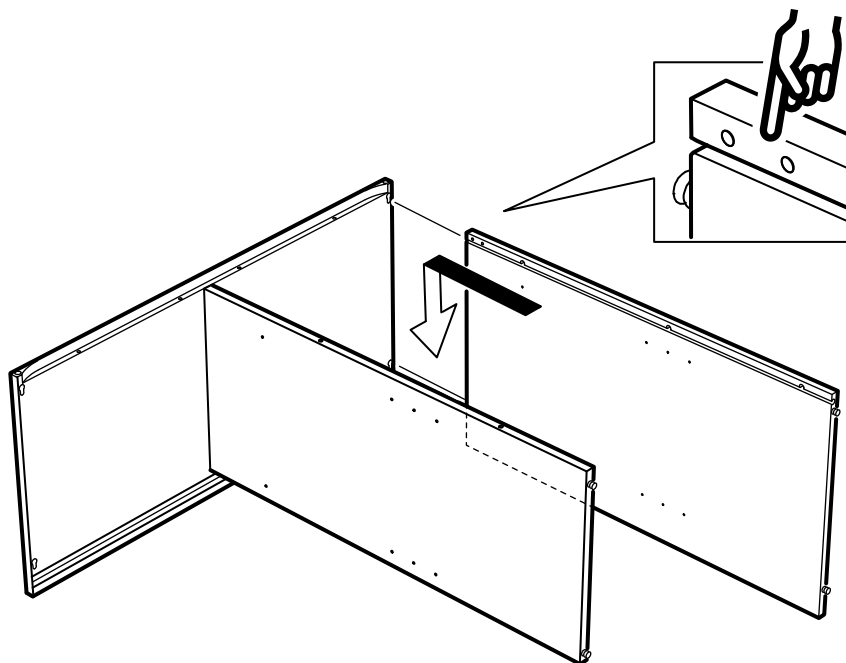 


3

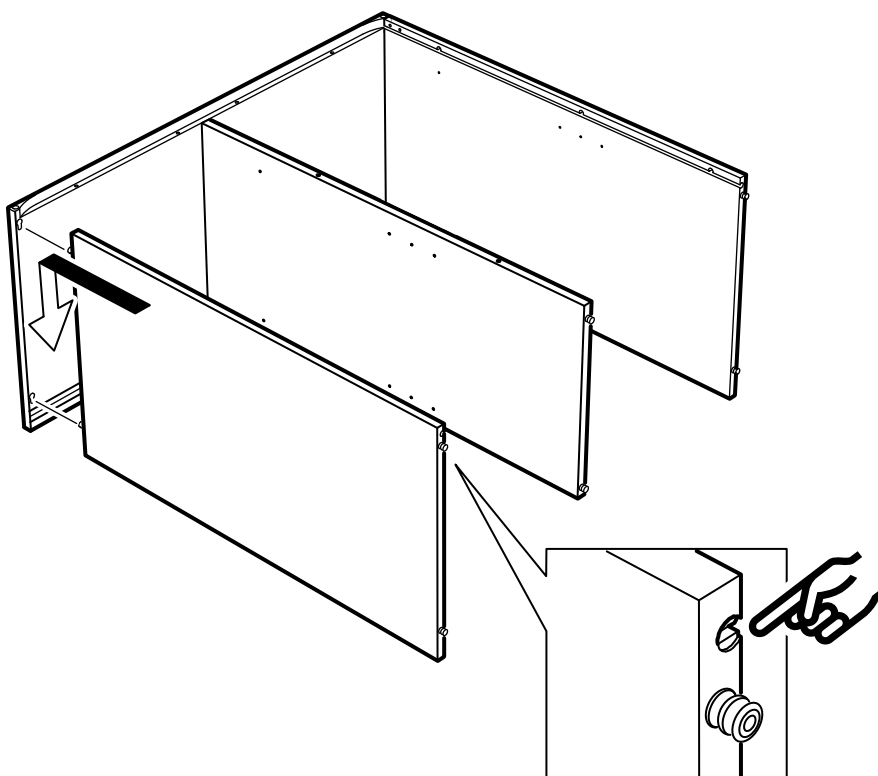 


4

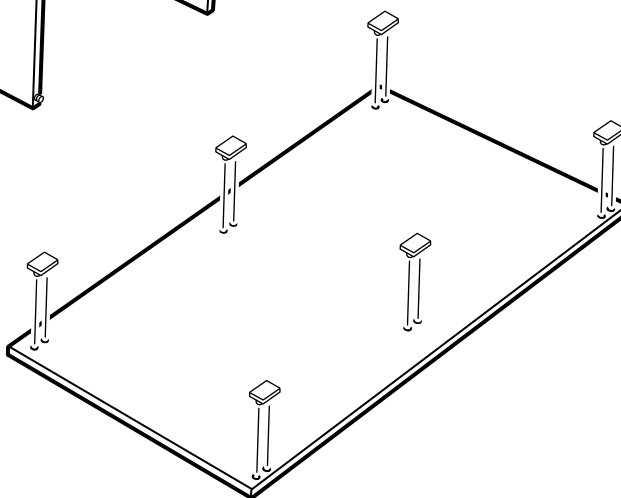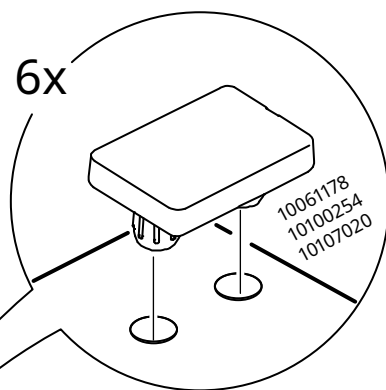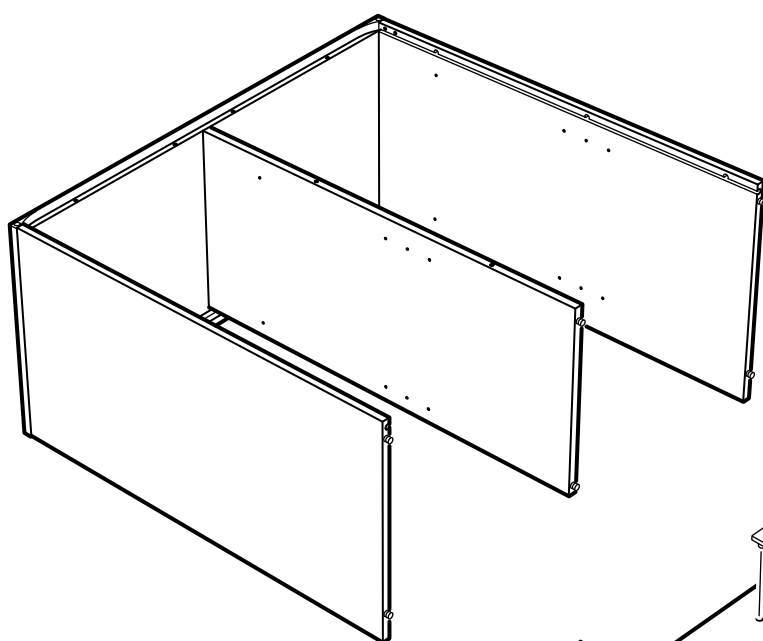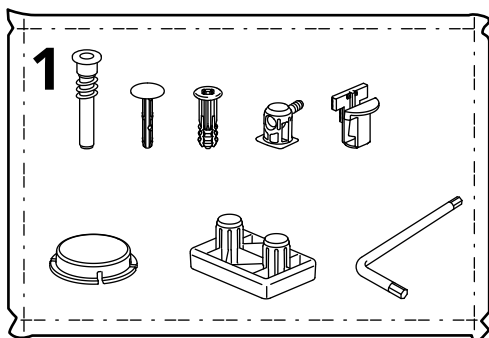    


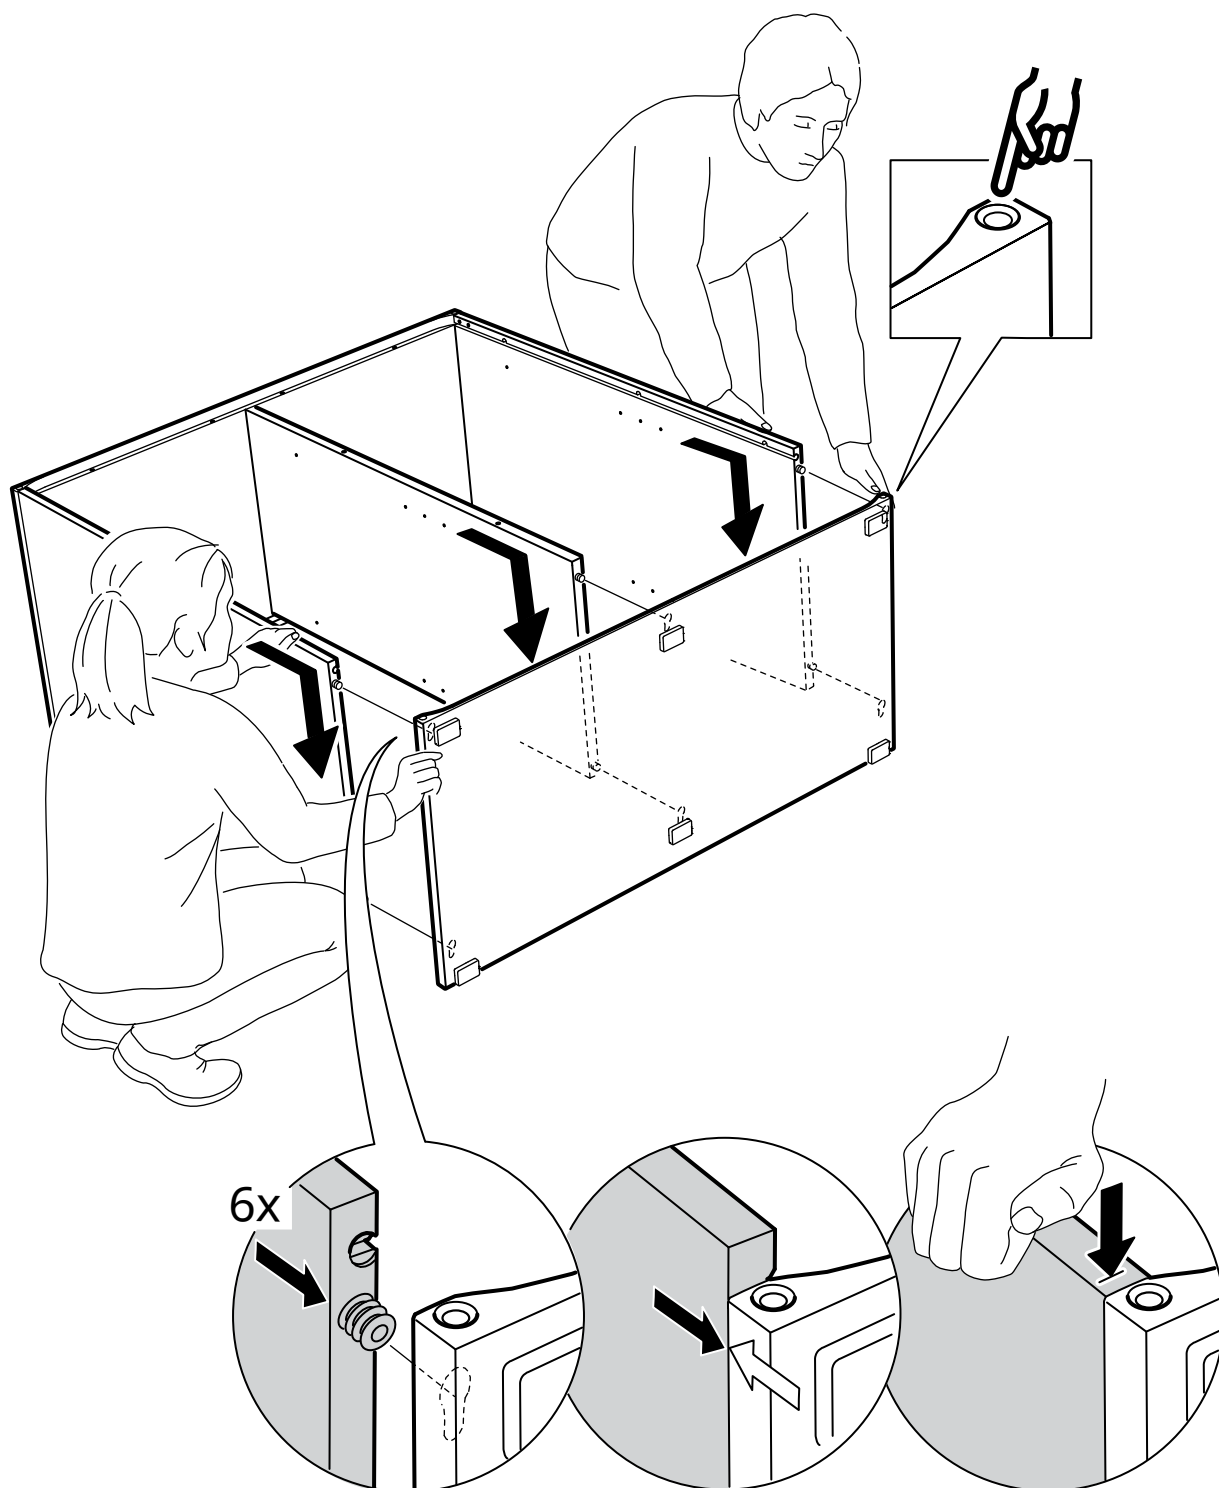 


6

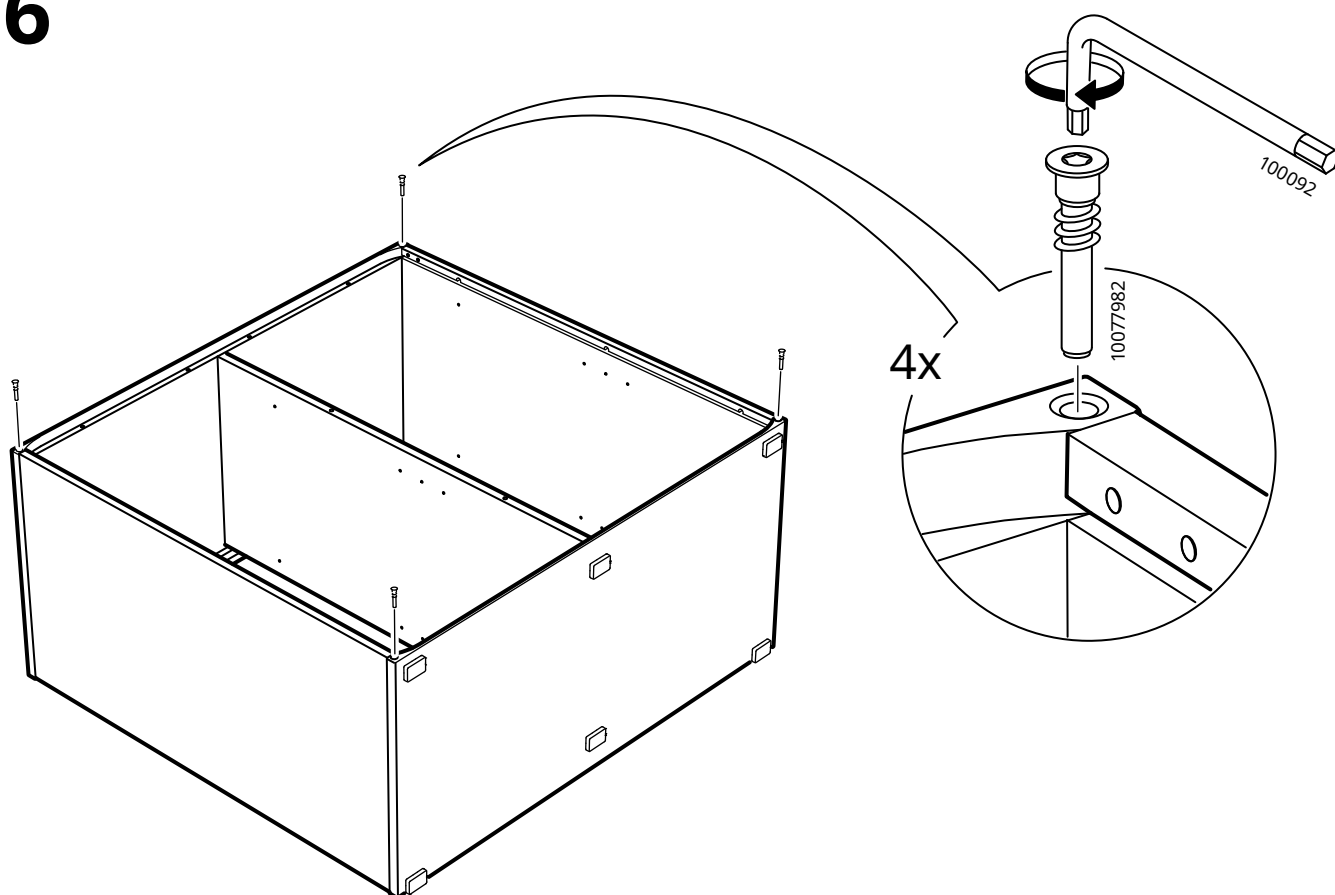 


7

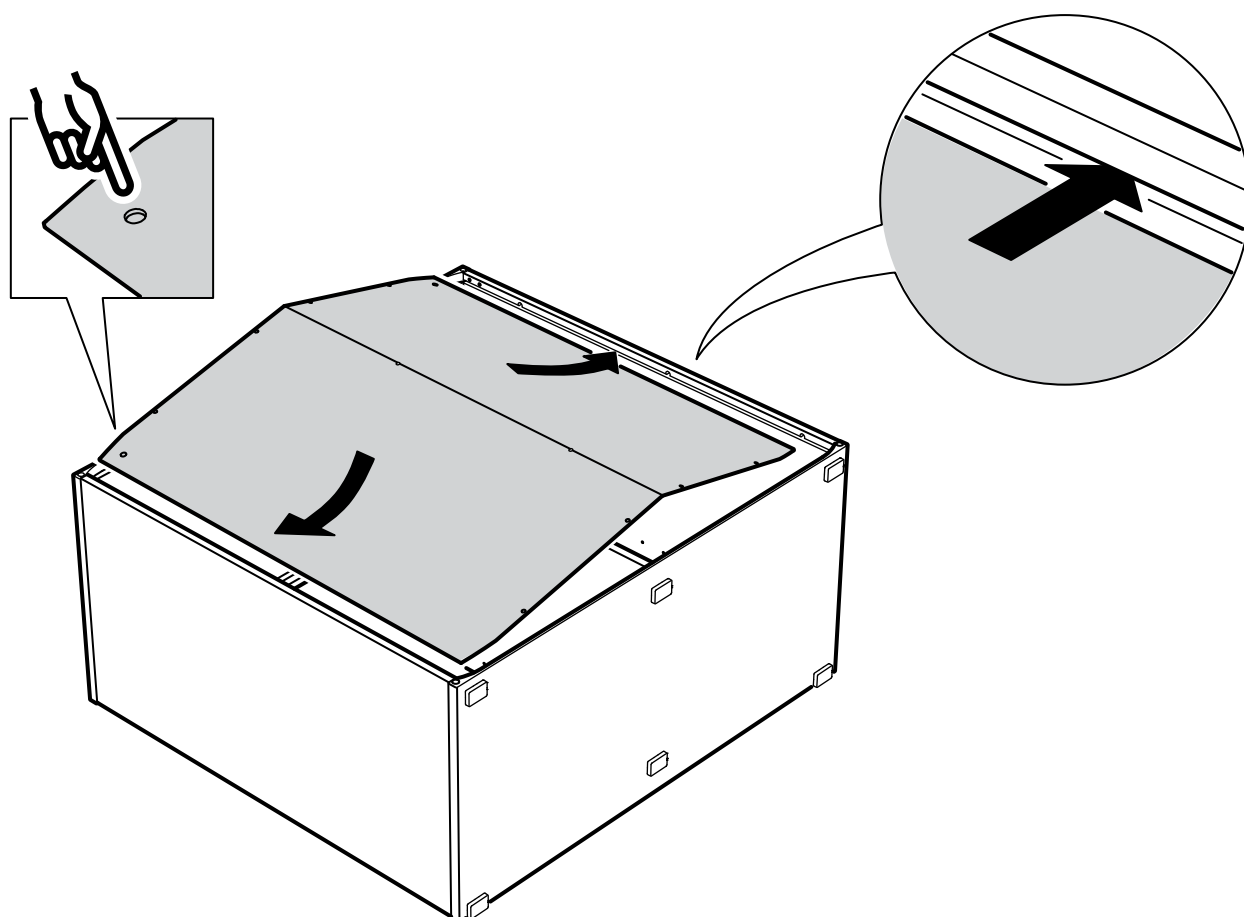 



8


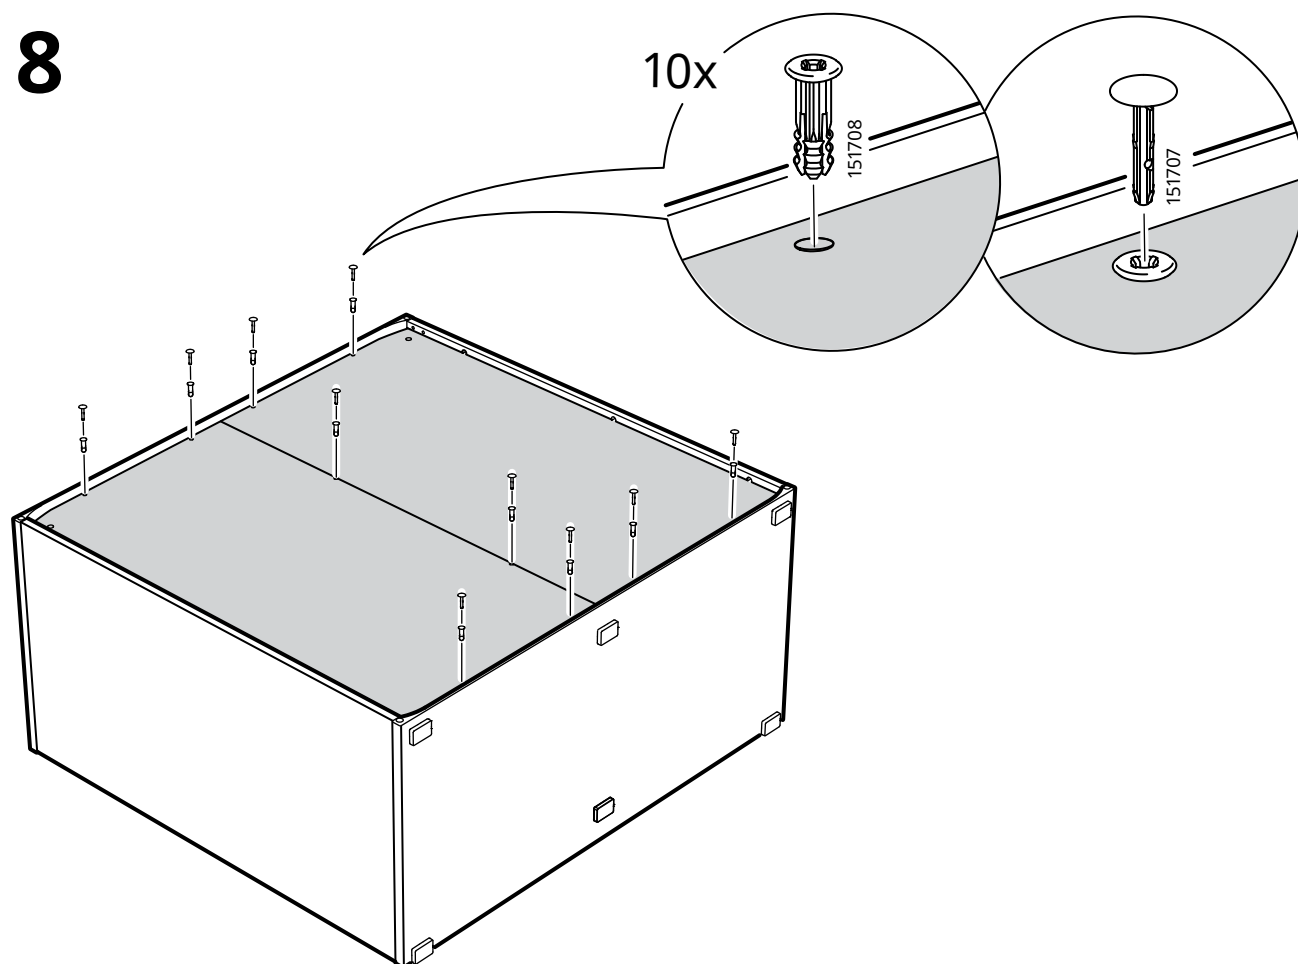 


9



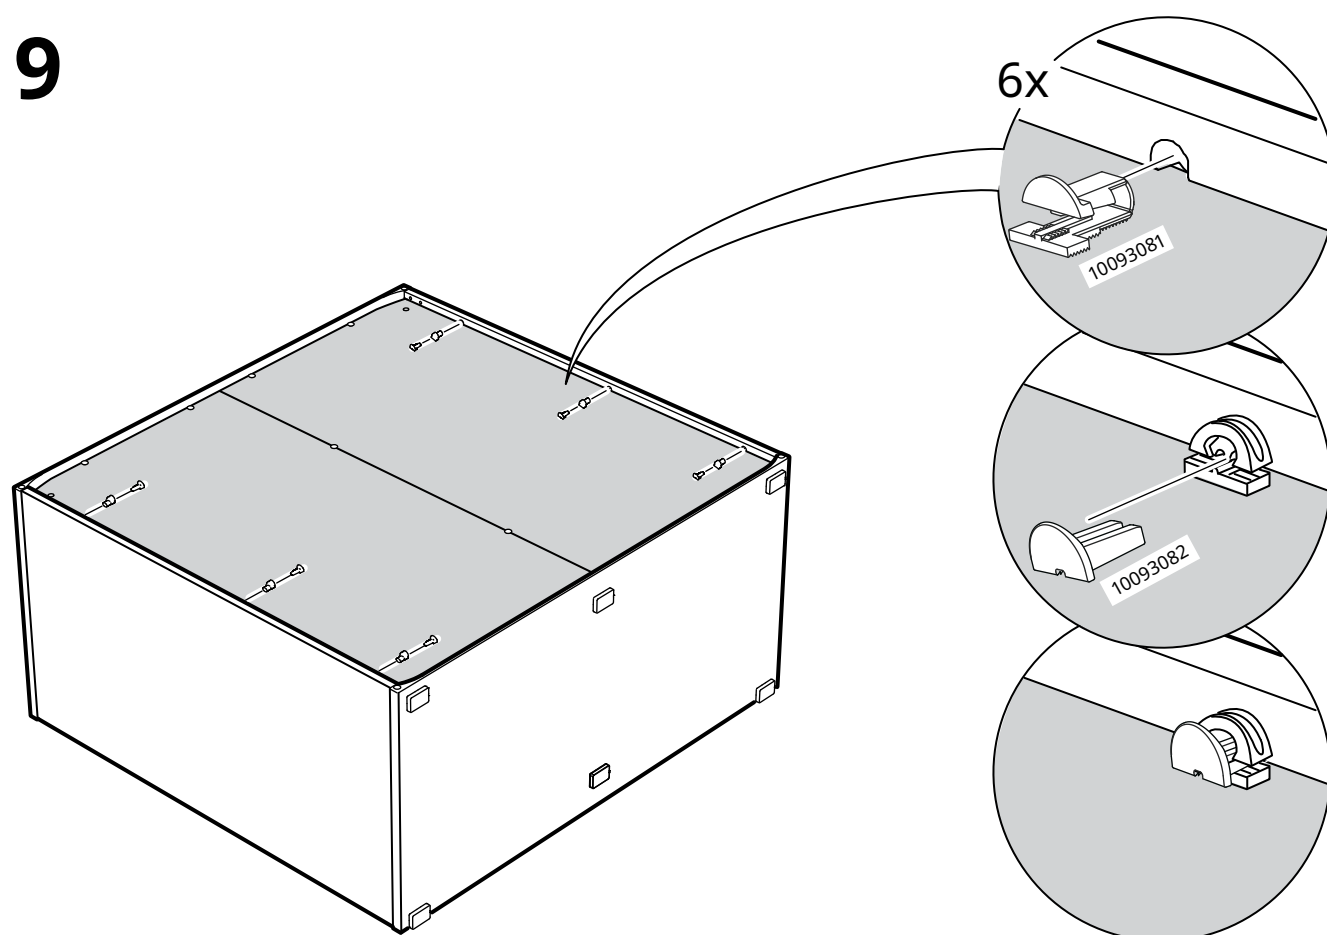 


10

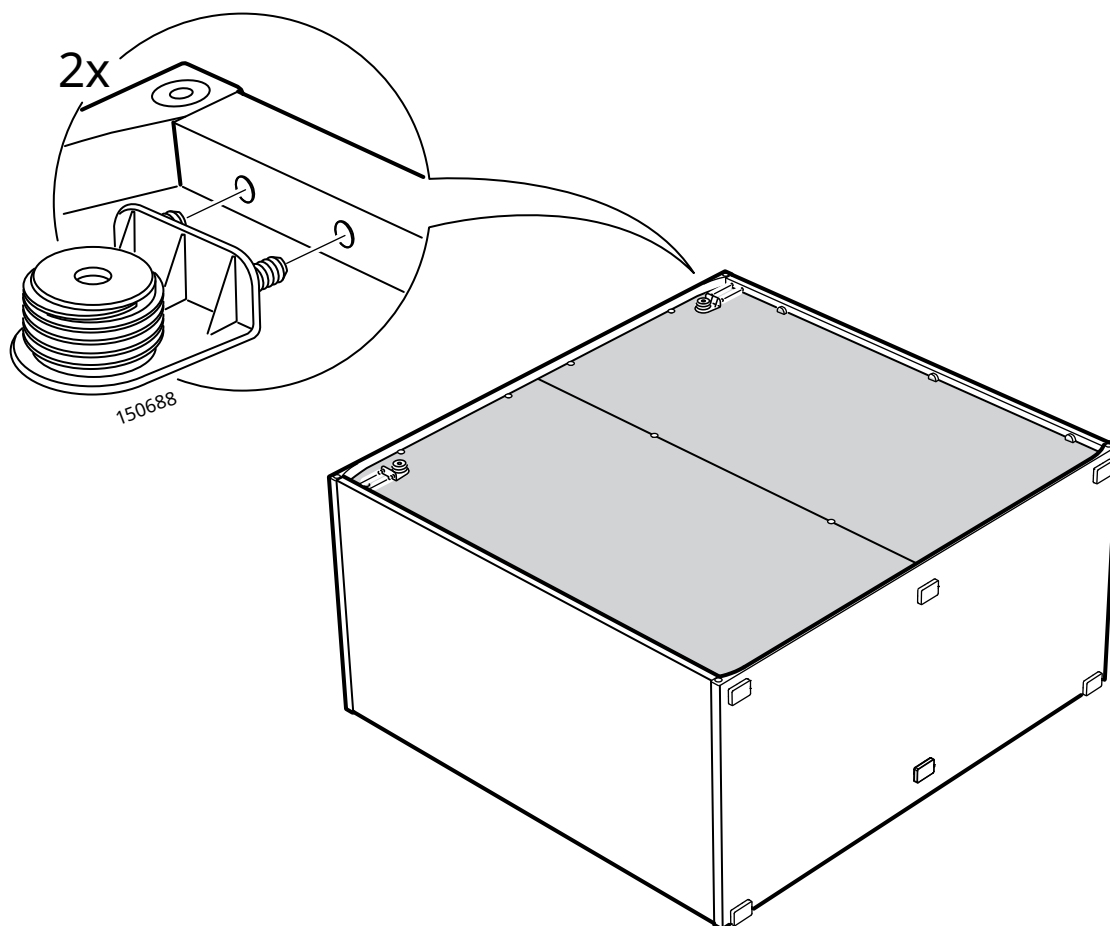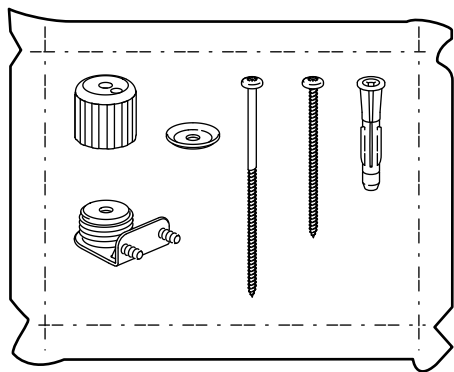  


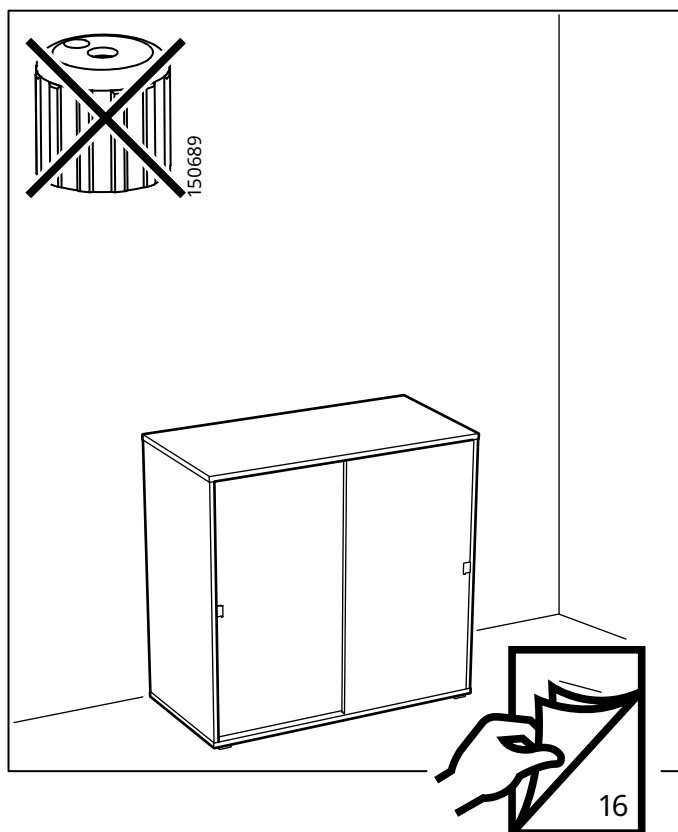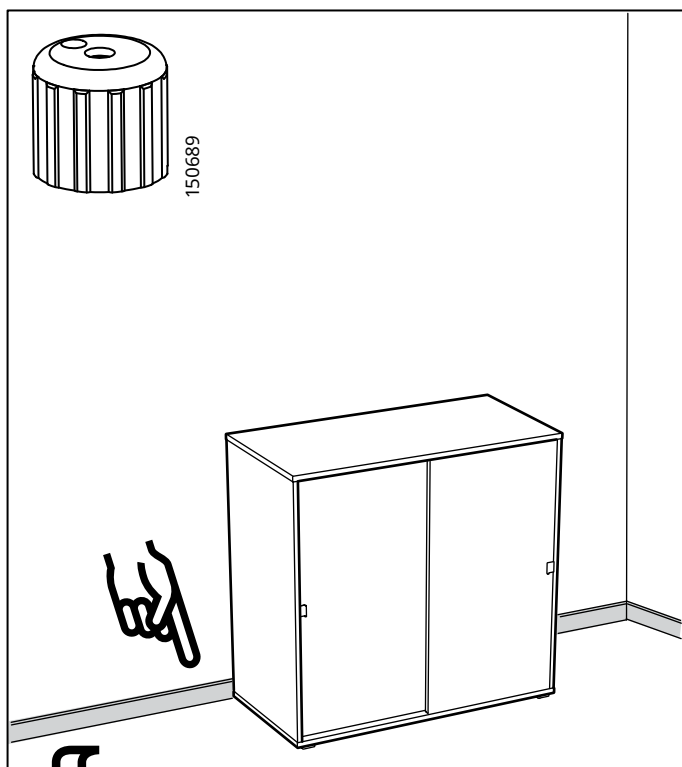  


11

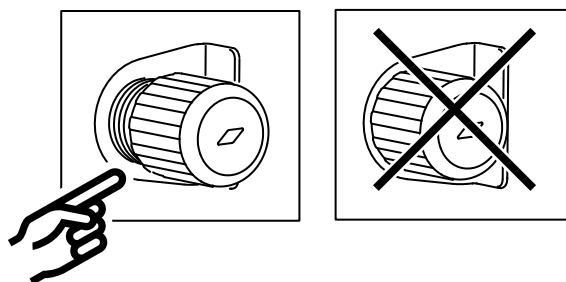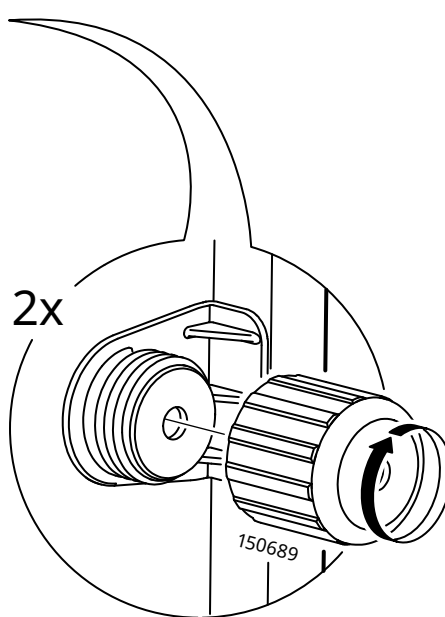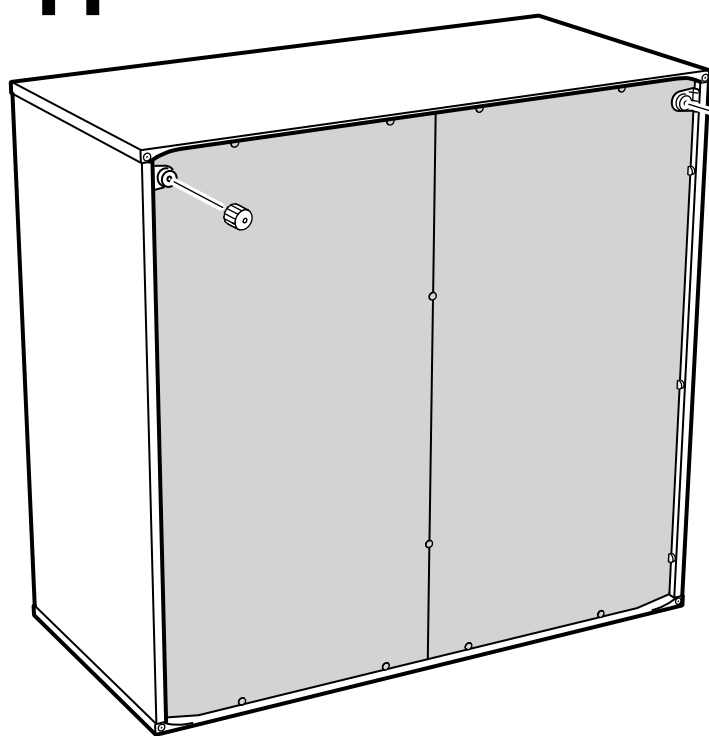   


12

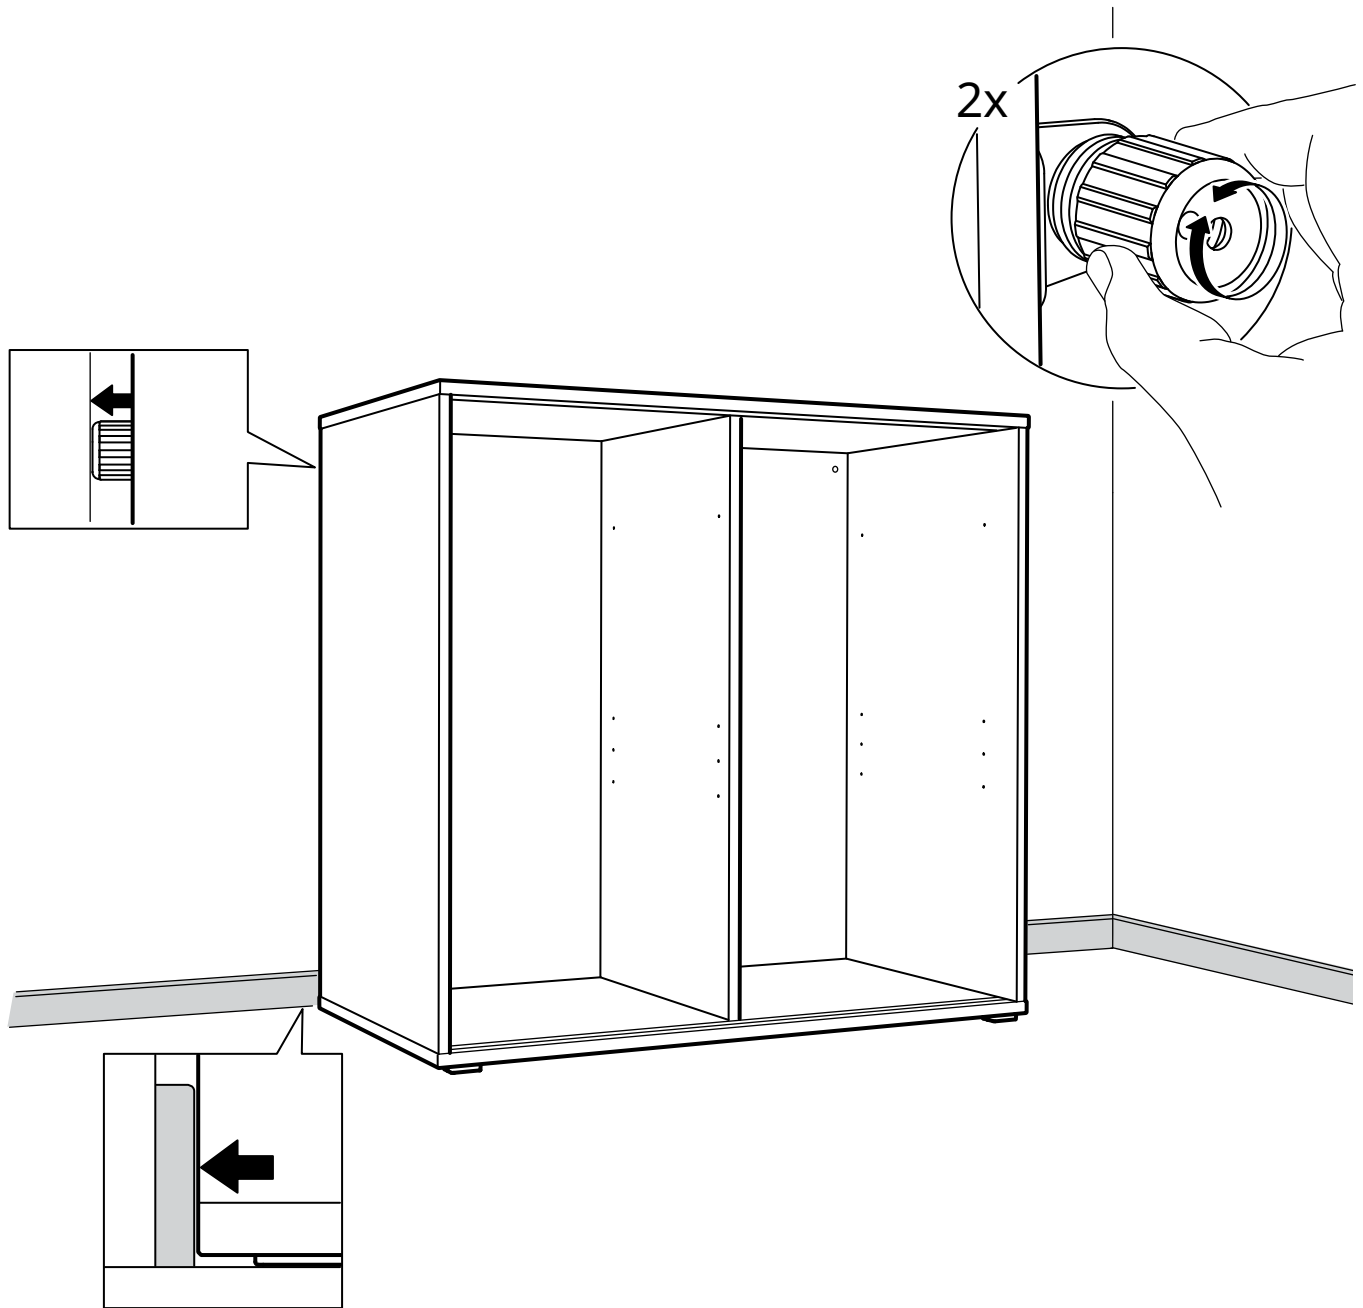 

13

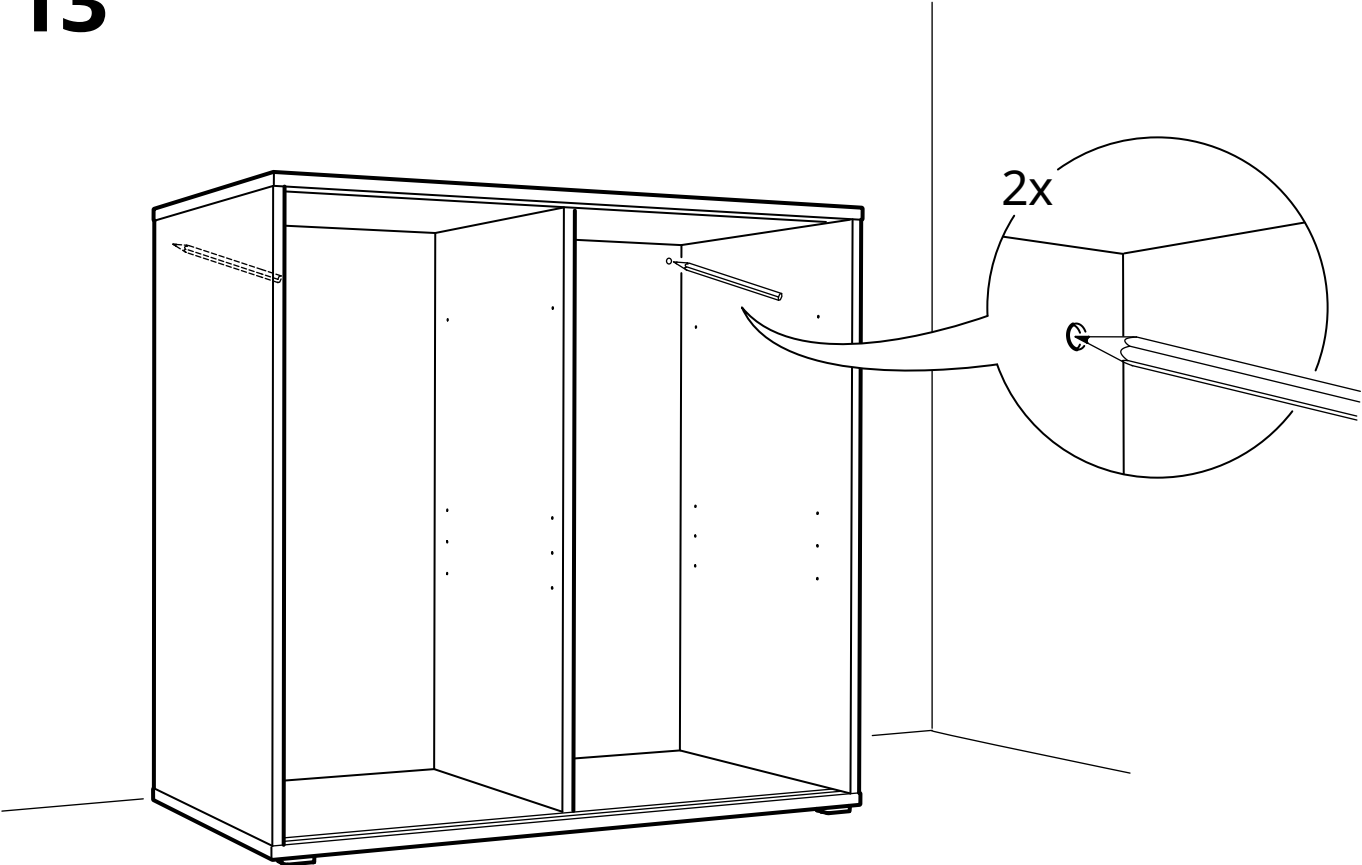 

14

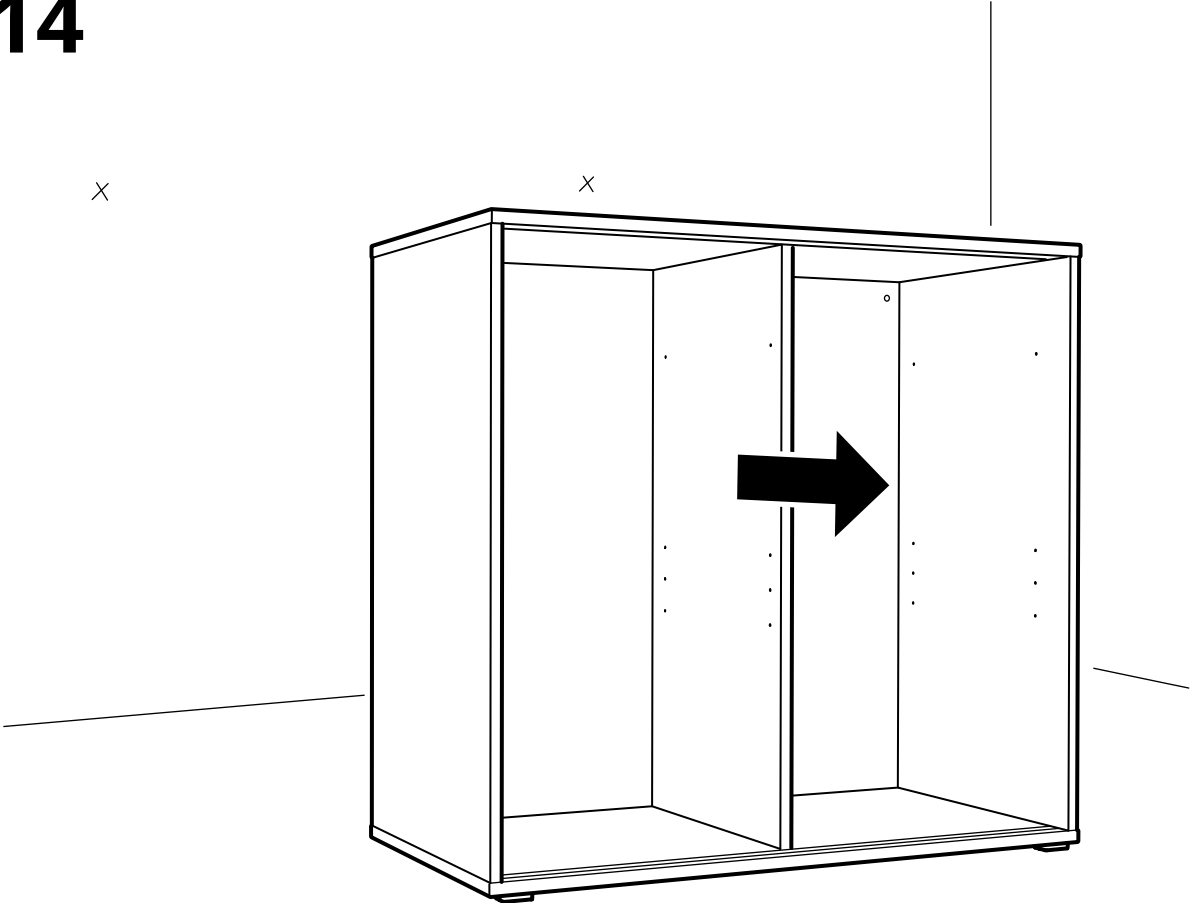 




www.IKEA.com/secure-it



 
www.IKEA.cn/secure-it

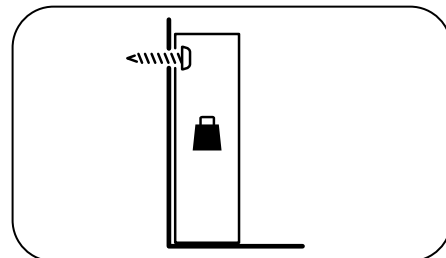

English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

 
A

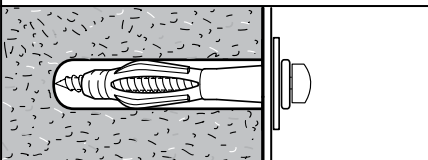


Ø 8 mm
(5/16")



 1




2

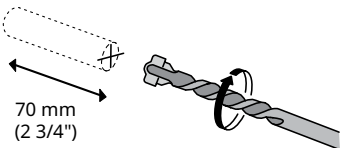 


70 mm
(2 3/4")

 3

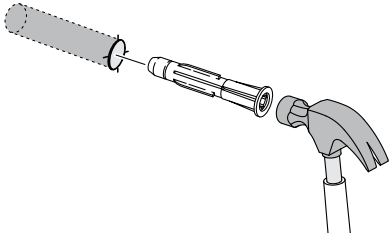


B

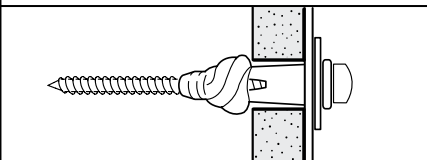 


Ø 8 mm
(5/16")



 1




2

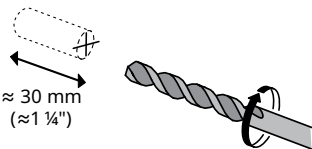 


≈ 30 mm
(≈ 1 1/4")

 3

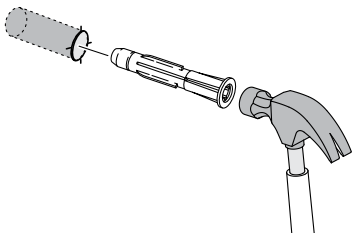


C

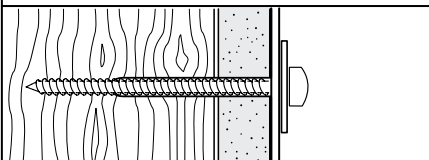 


Ø 3 mm
(1/8")




 
1






2


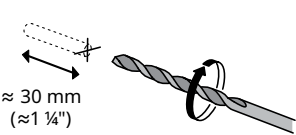 


≈ 30 mm
(≈ 1 1/4")



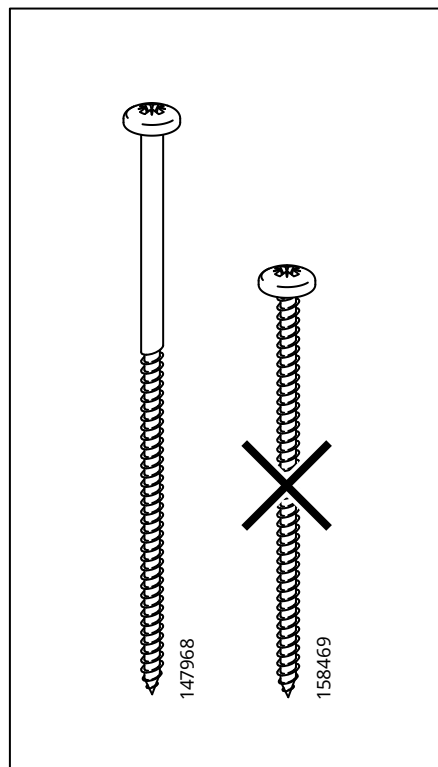 
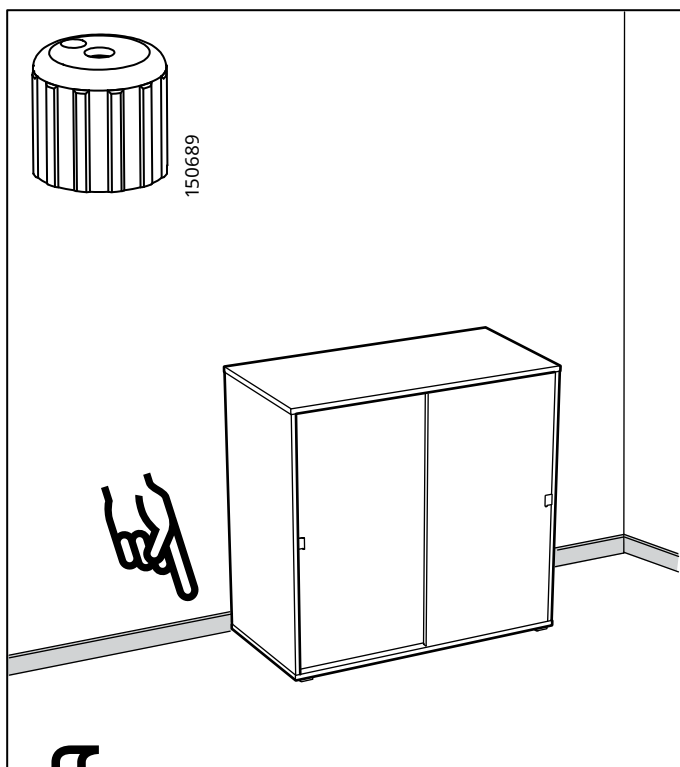 


↕
15

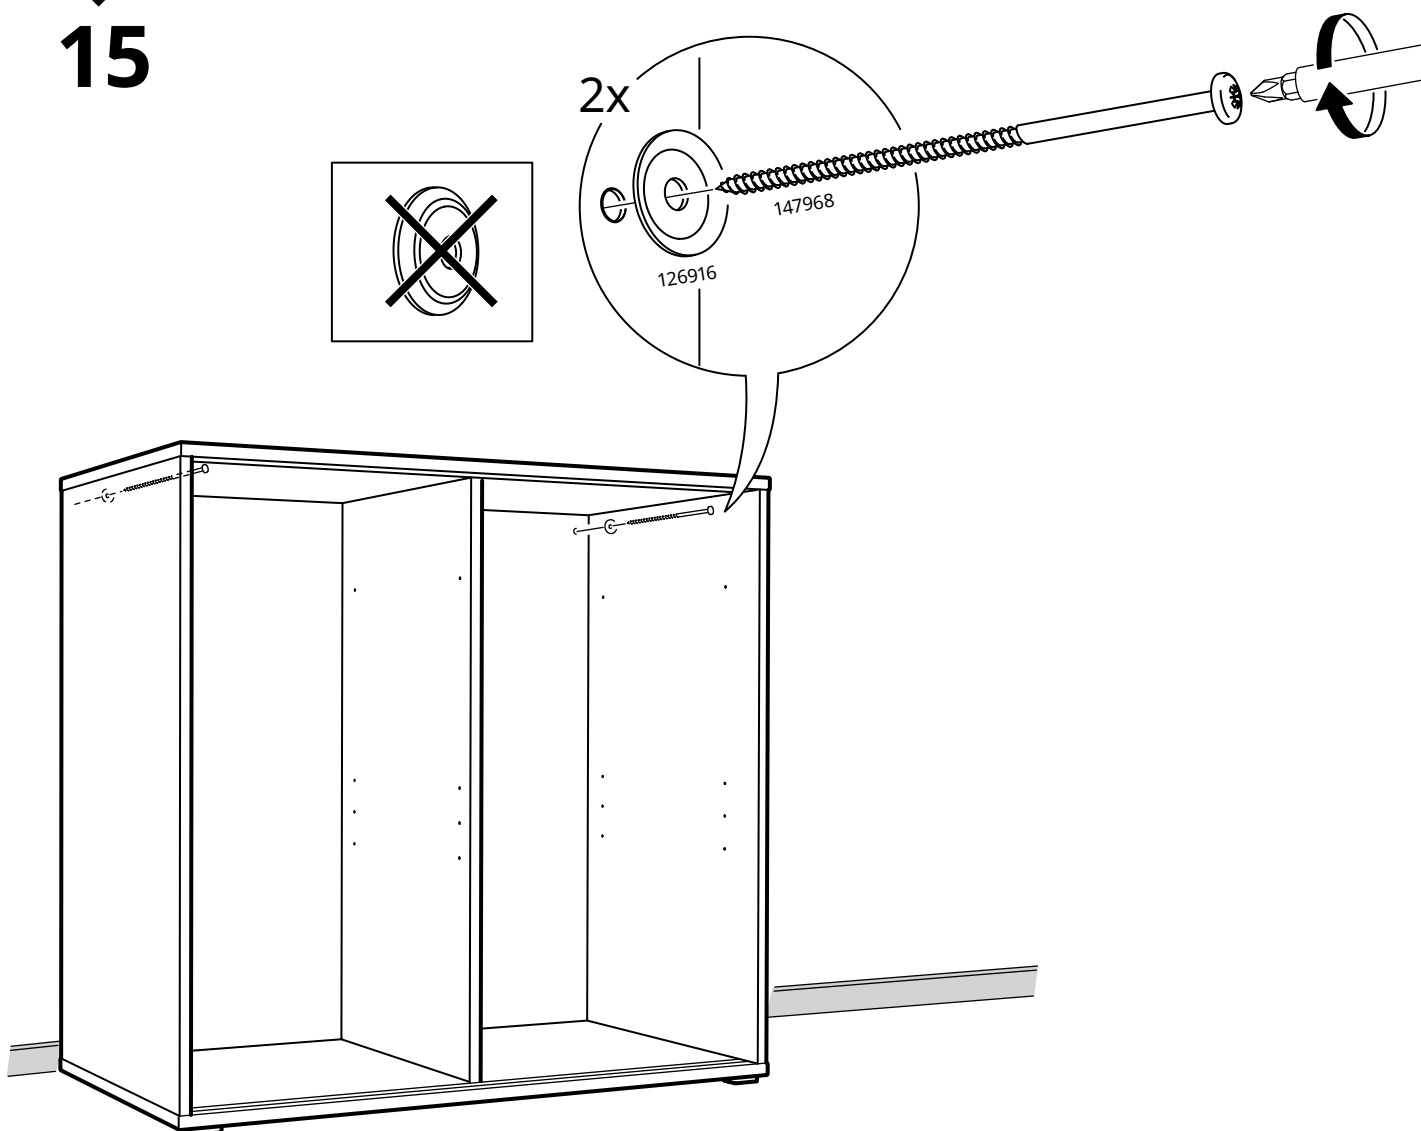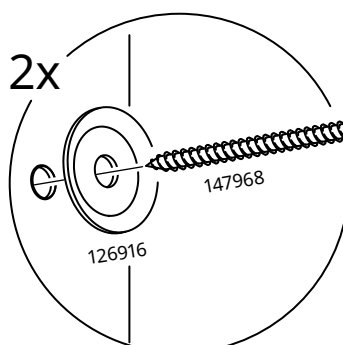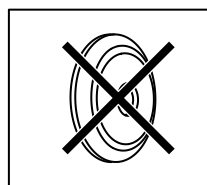   


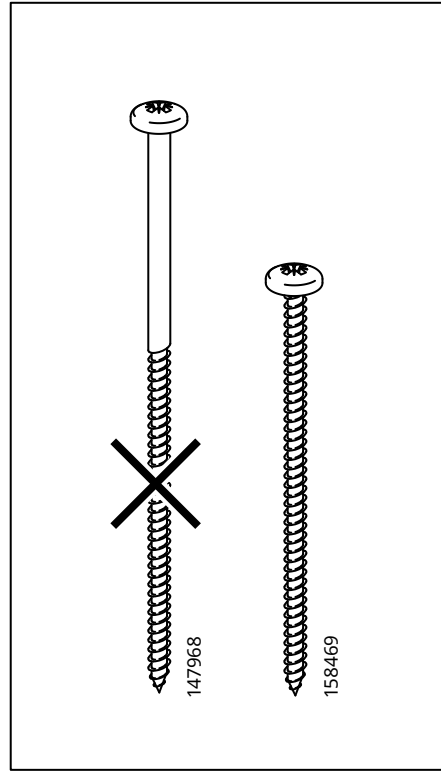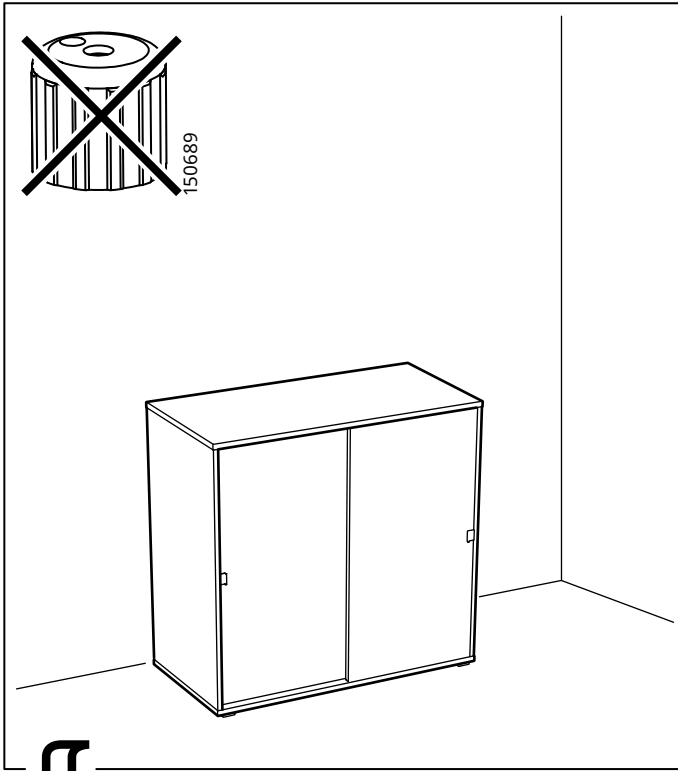  


⇅
15

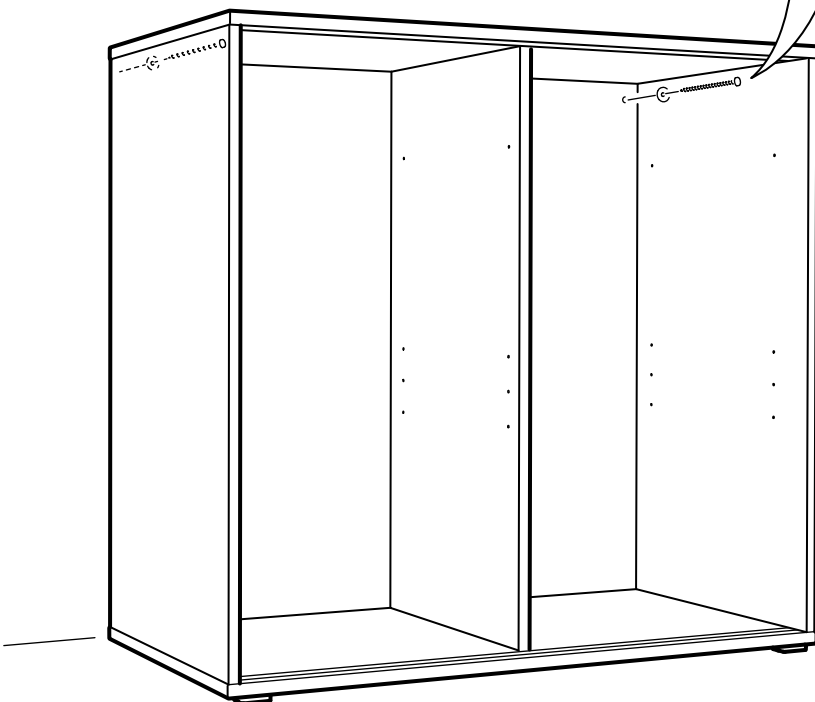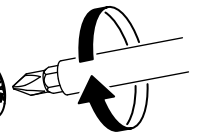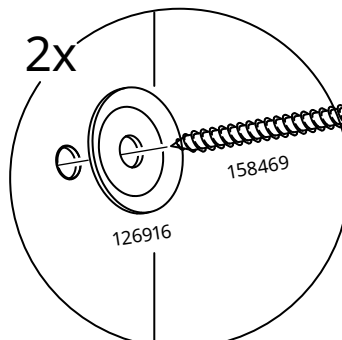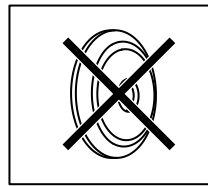    



16

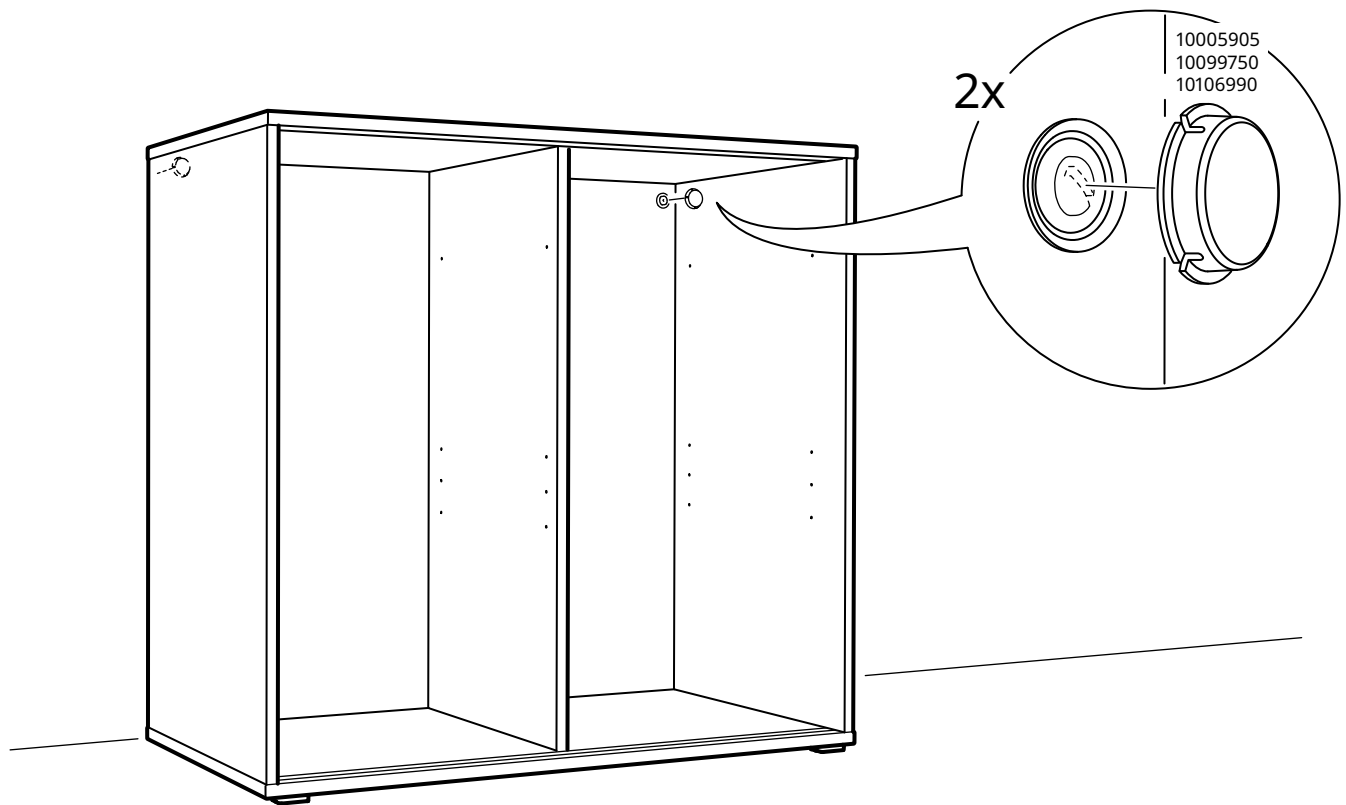 








17

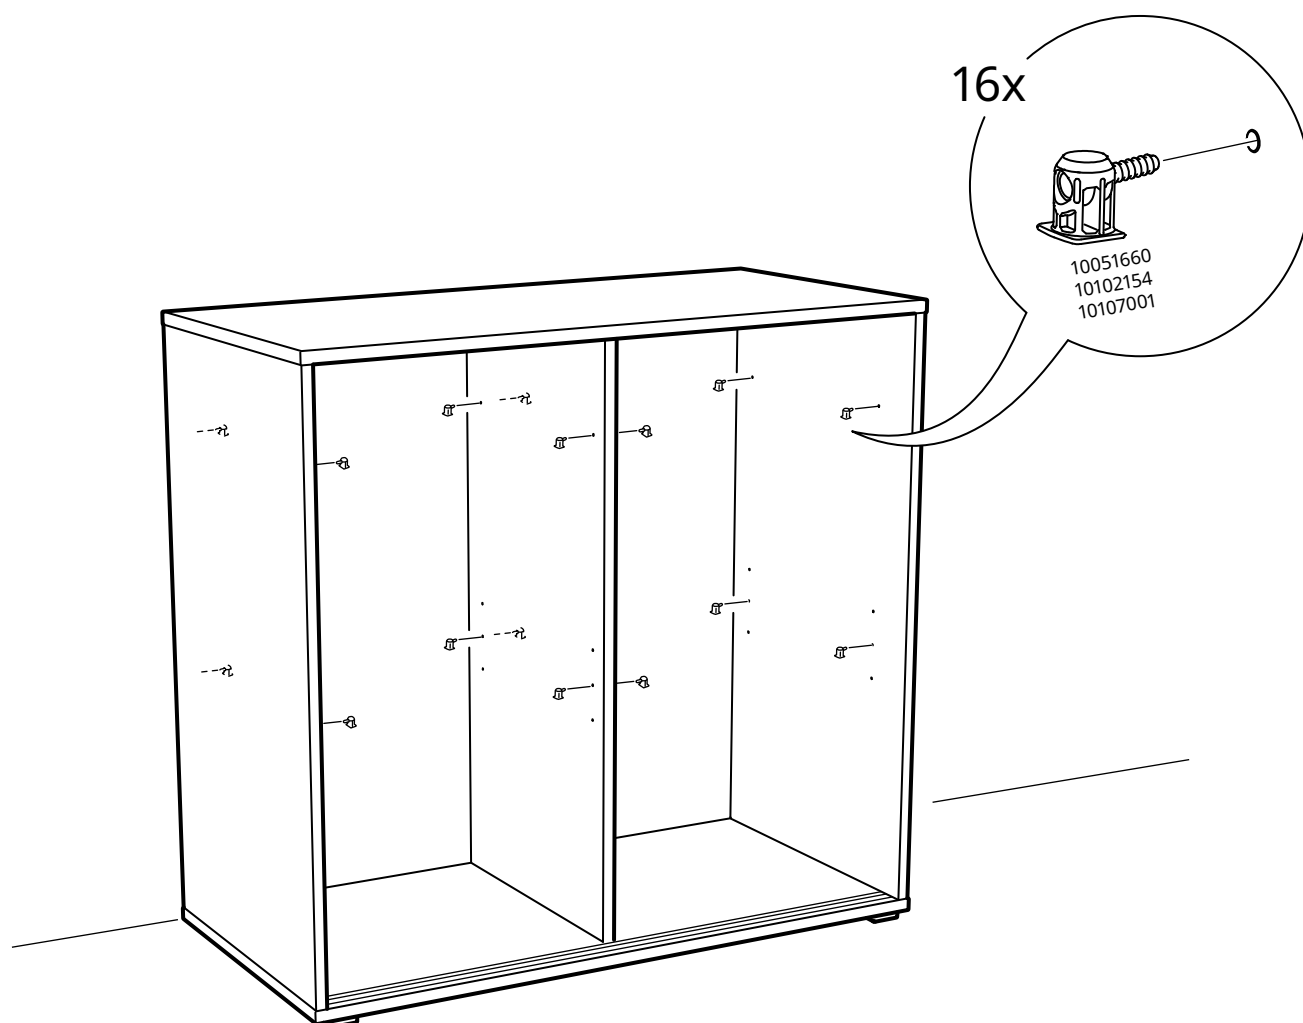 




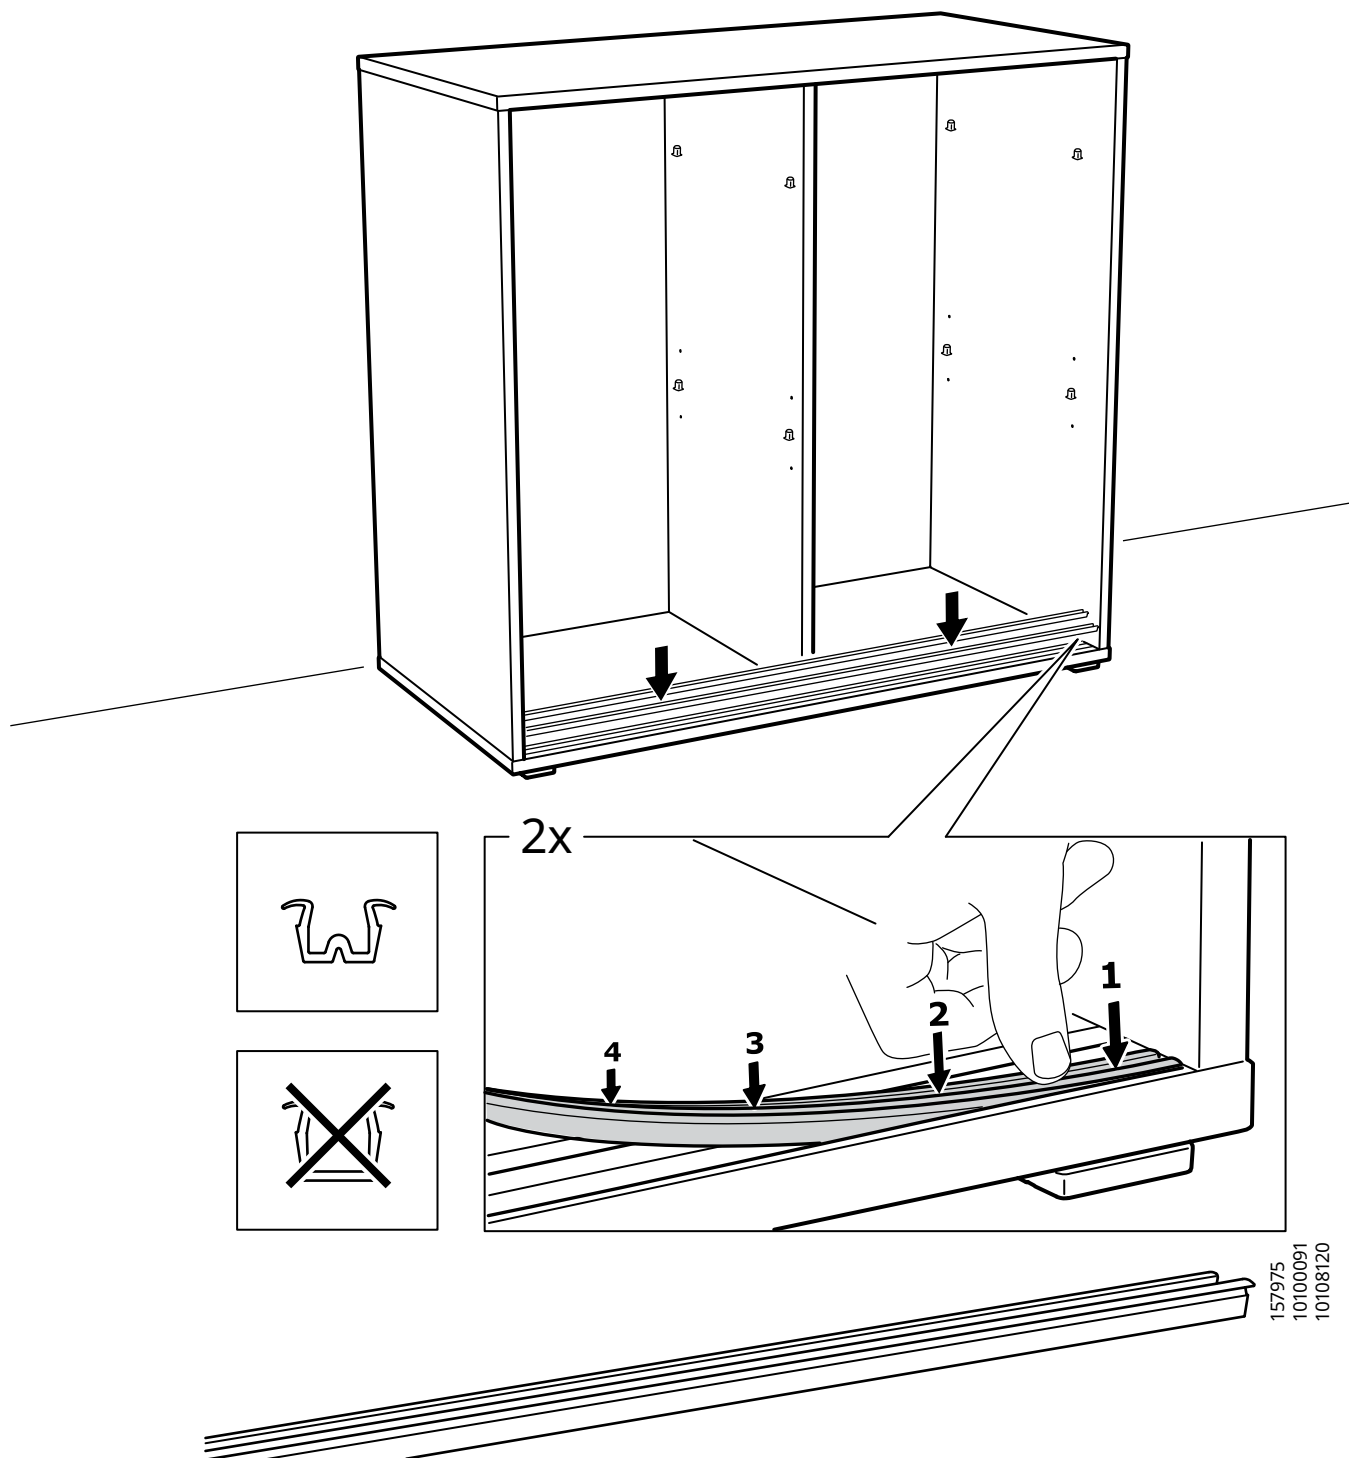 


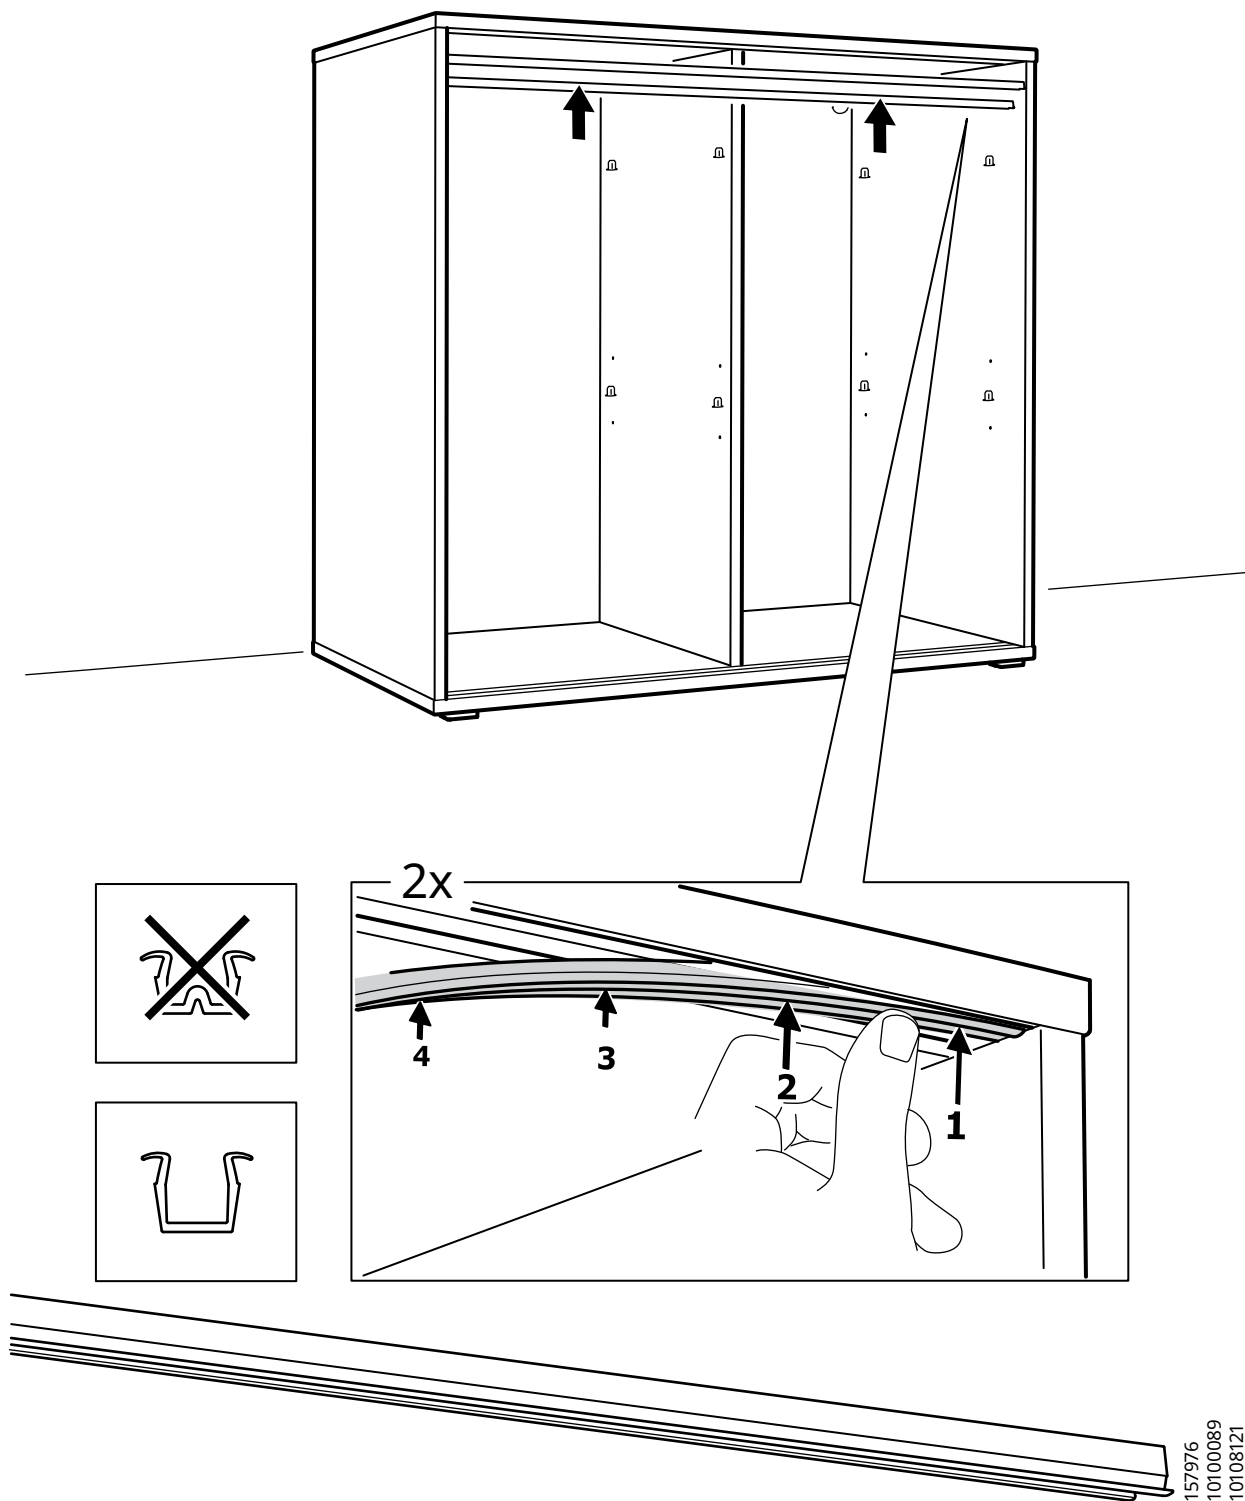 






20

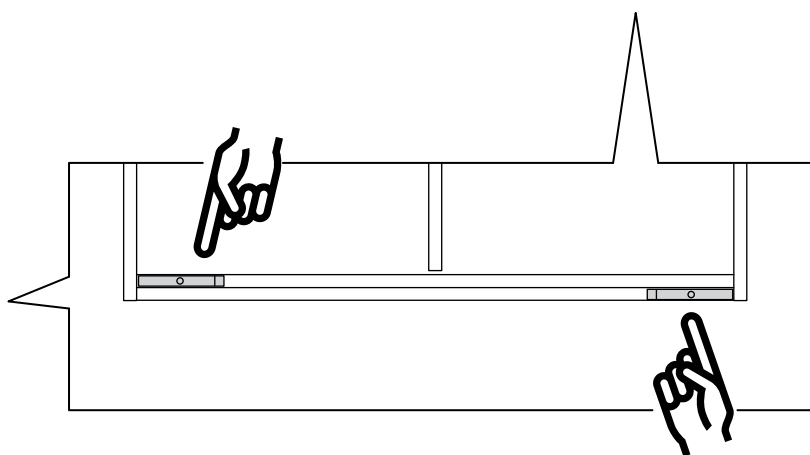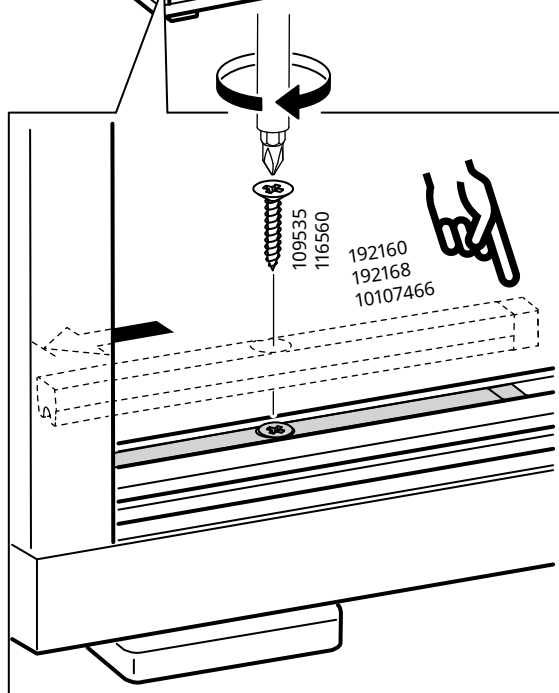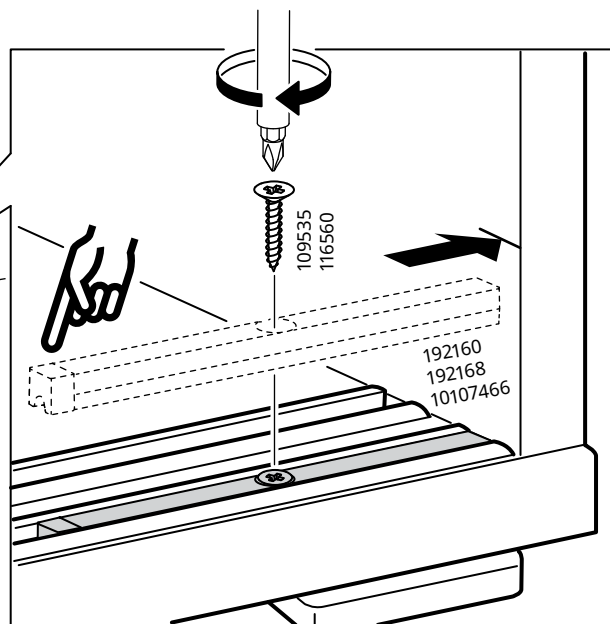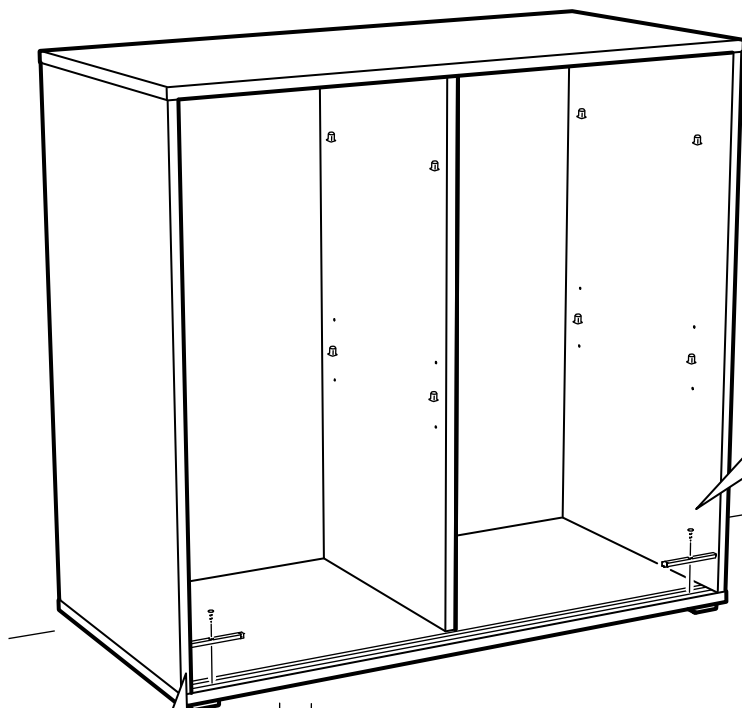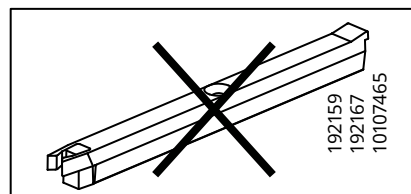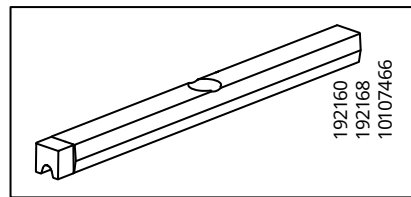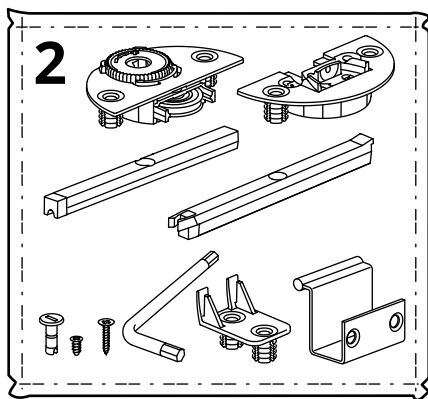       



21

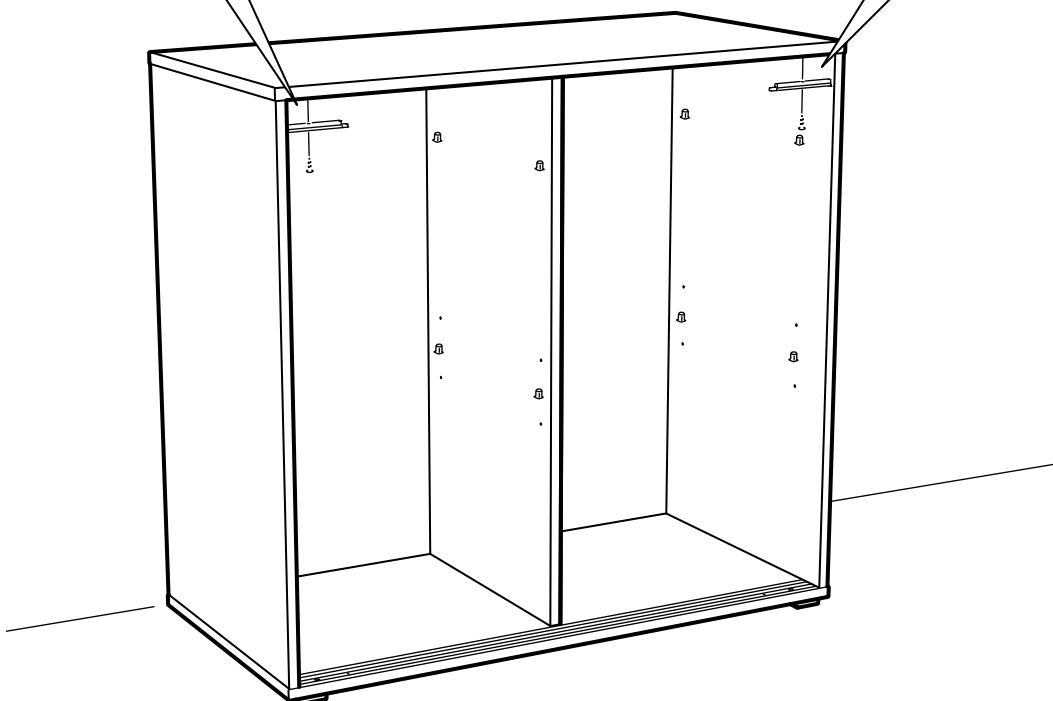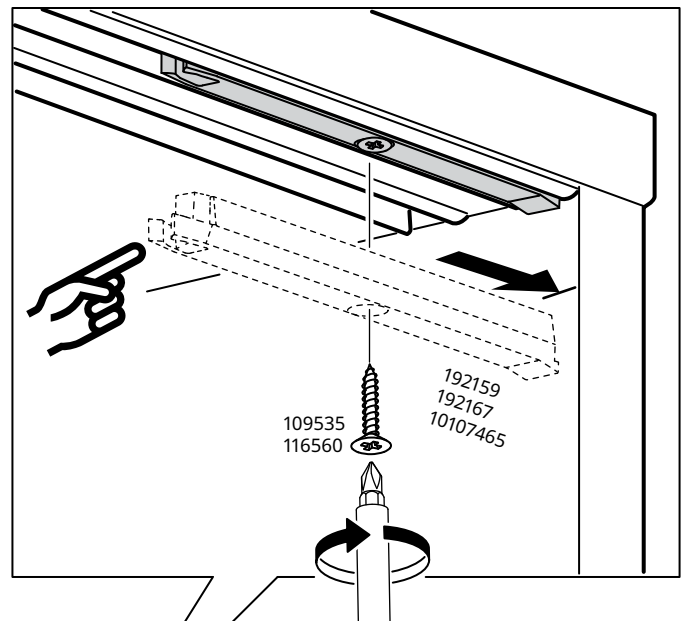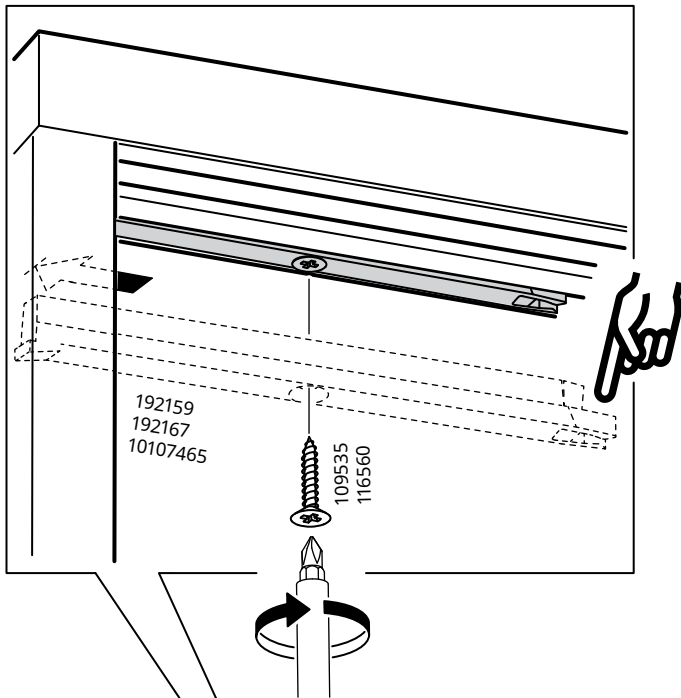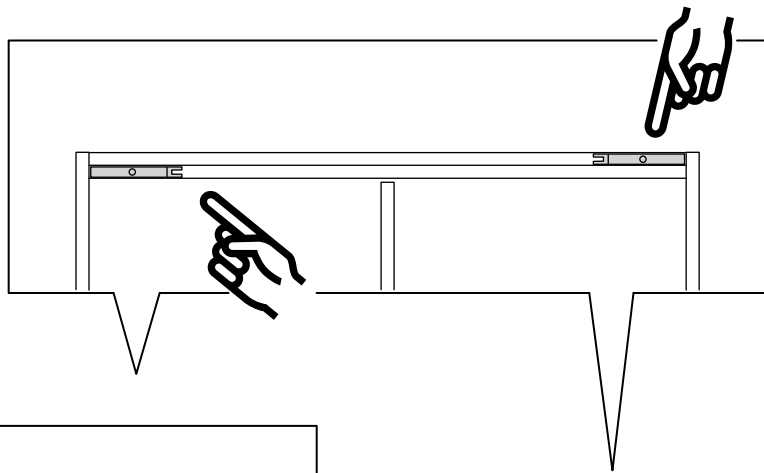    


22

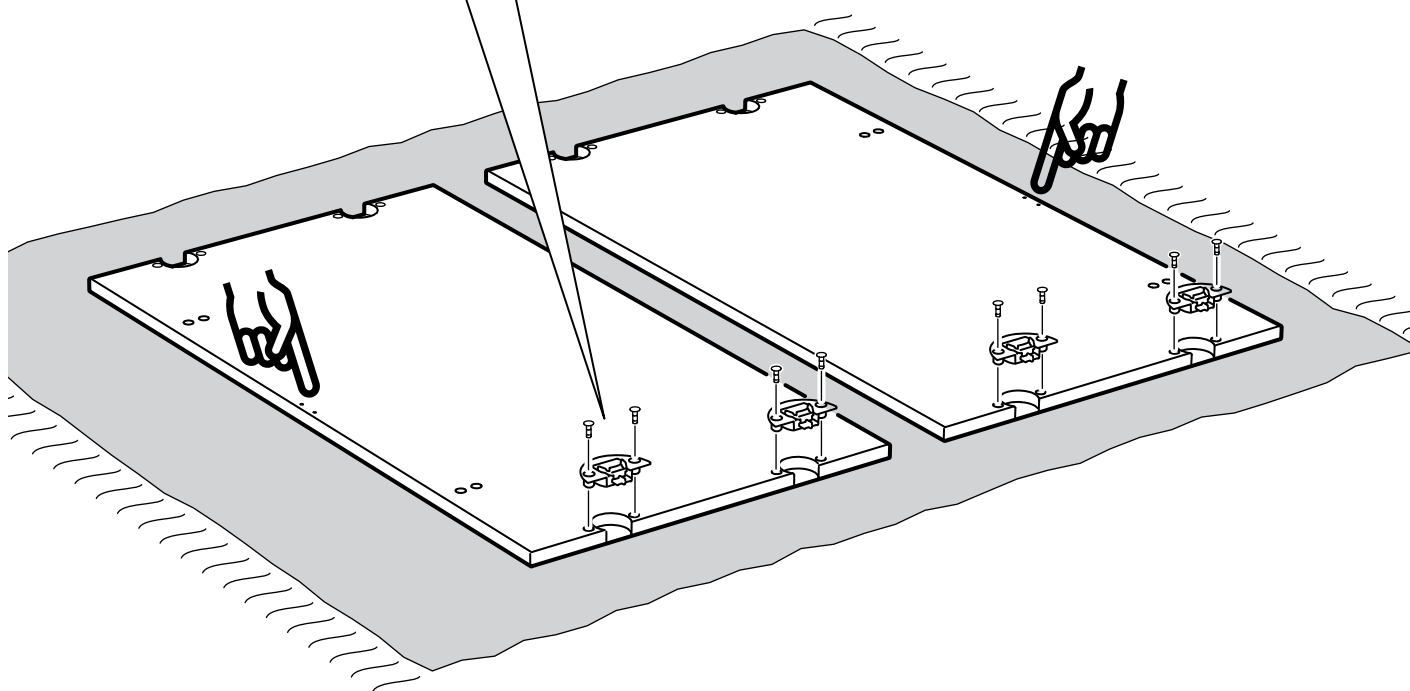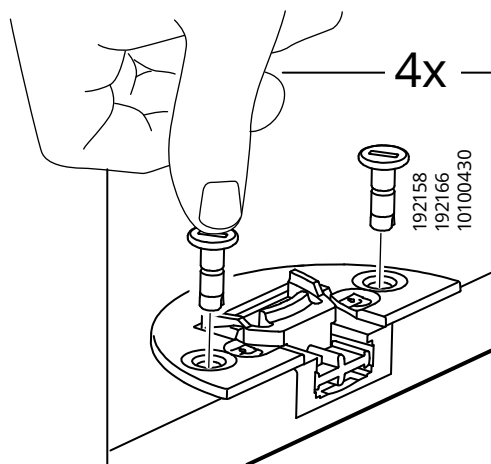  
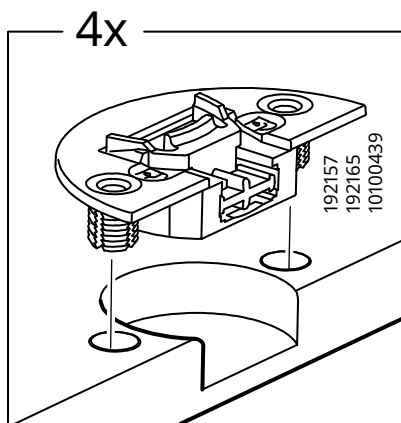 
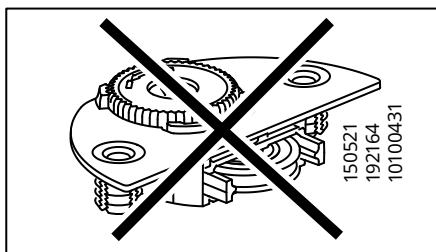 
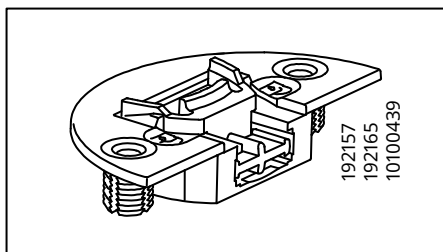 


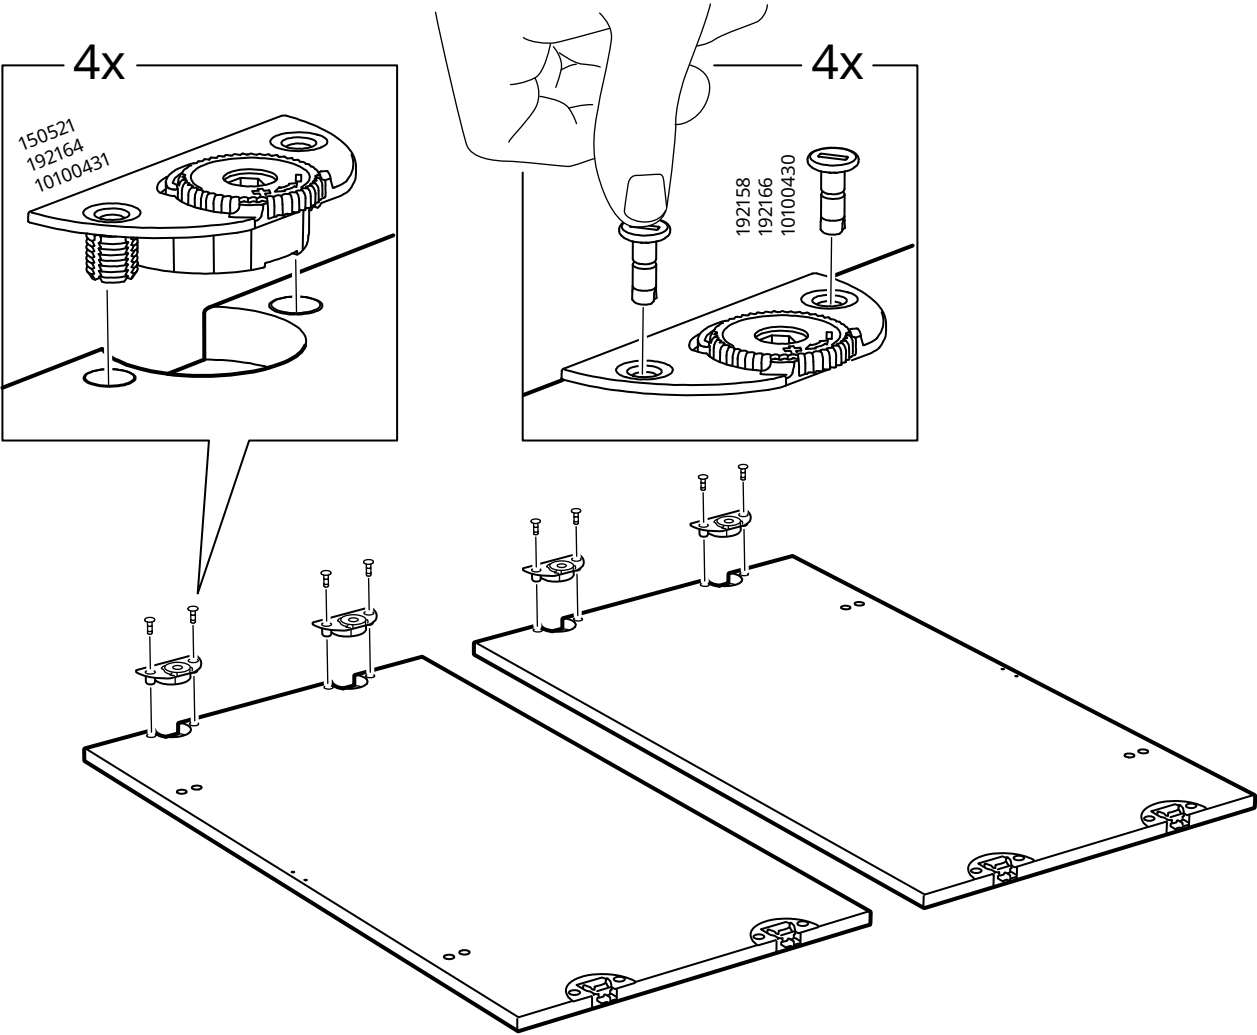 

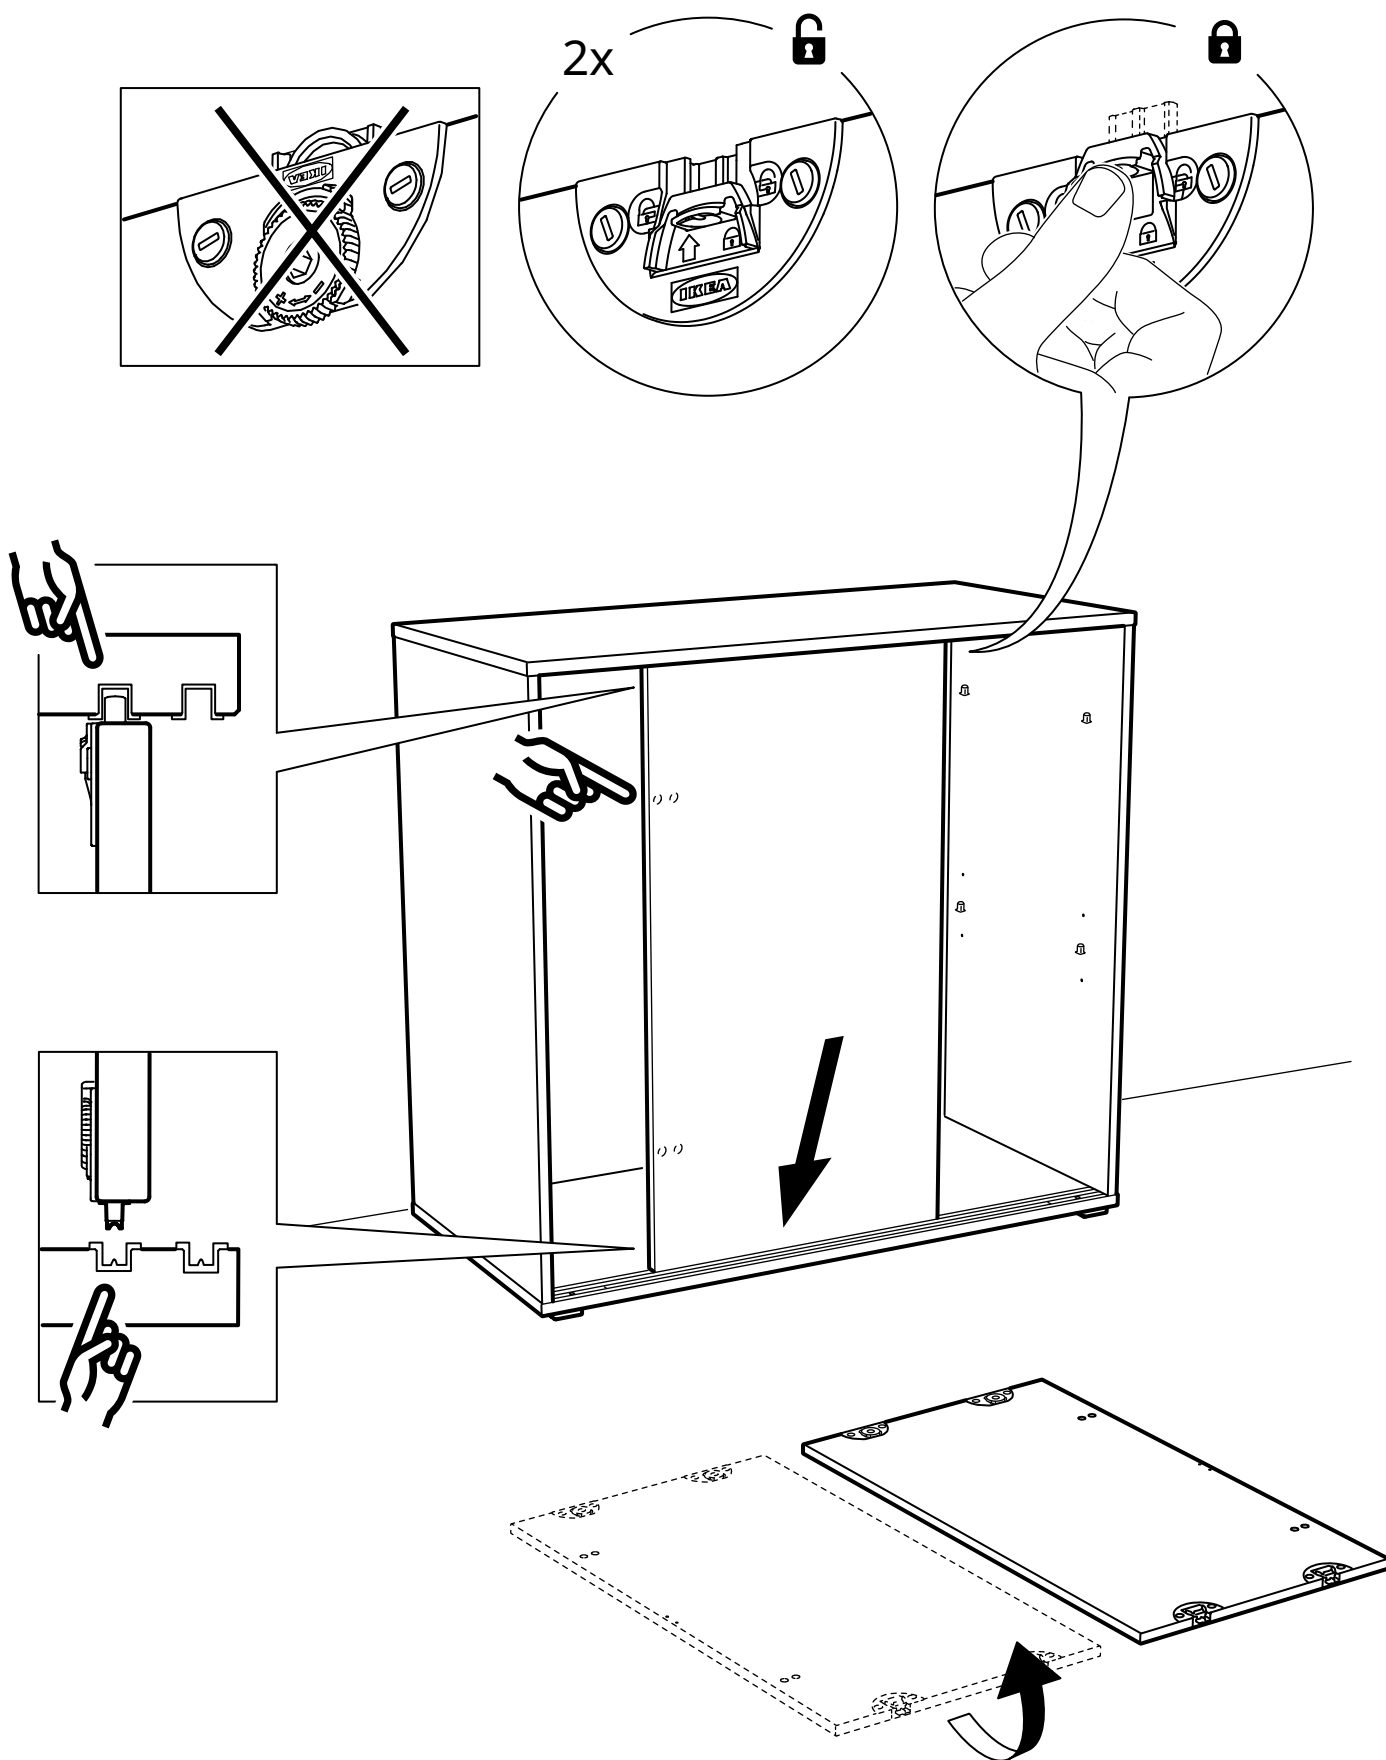 


25

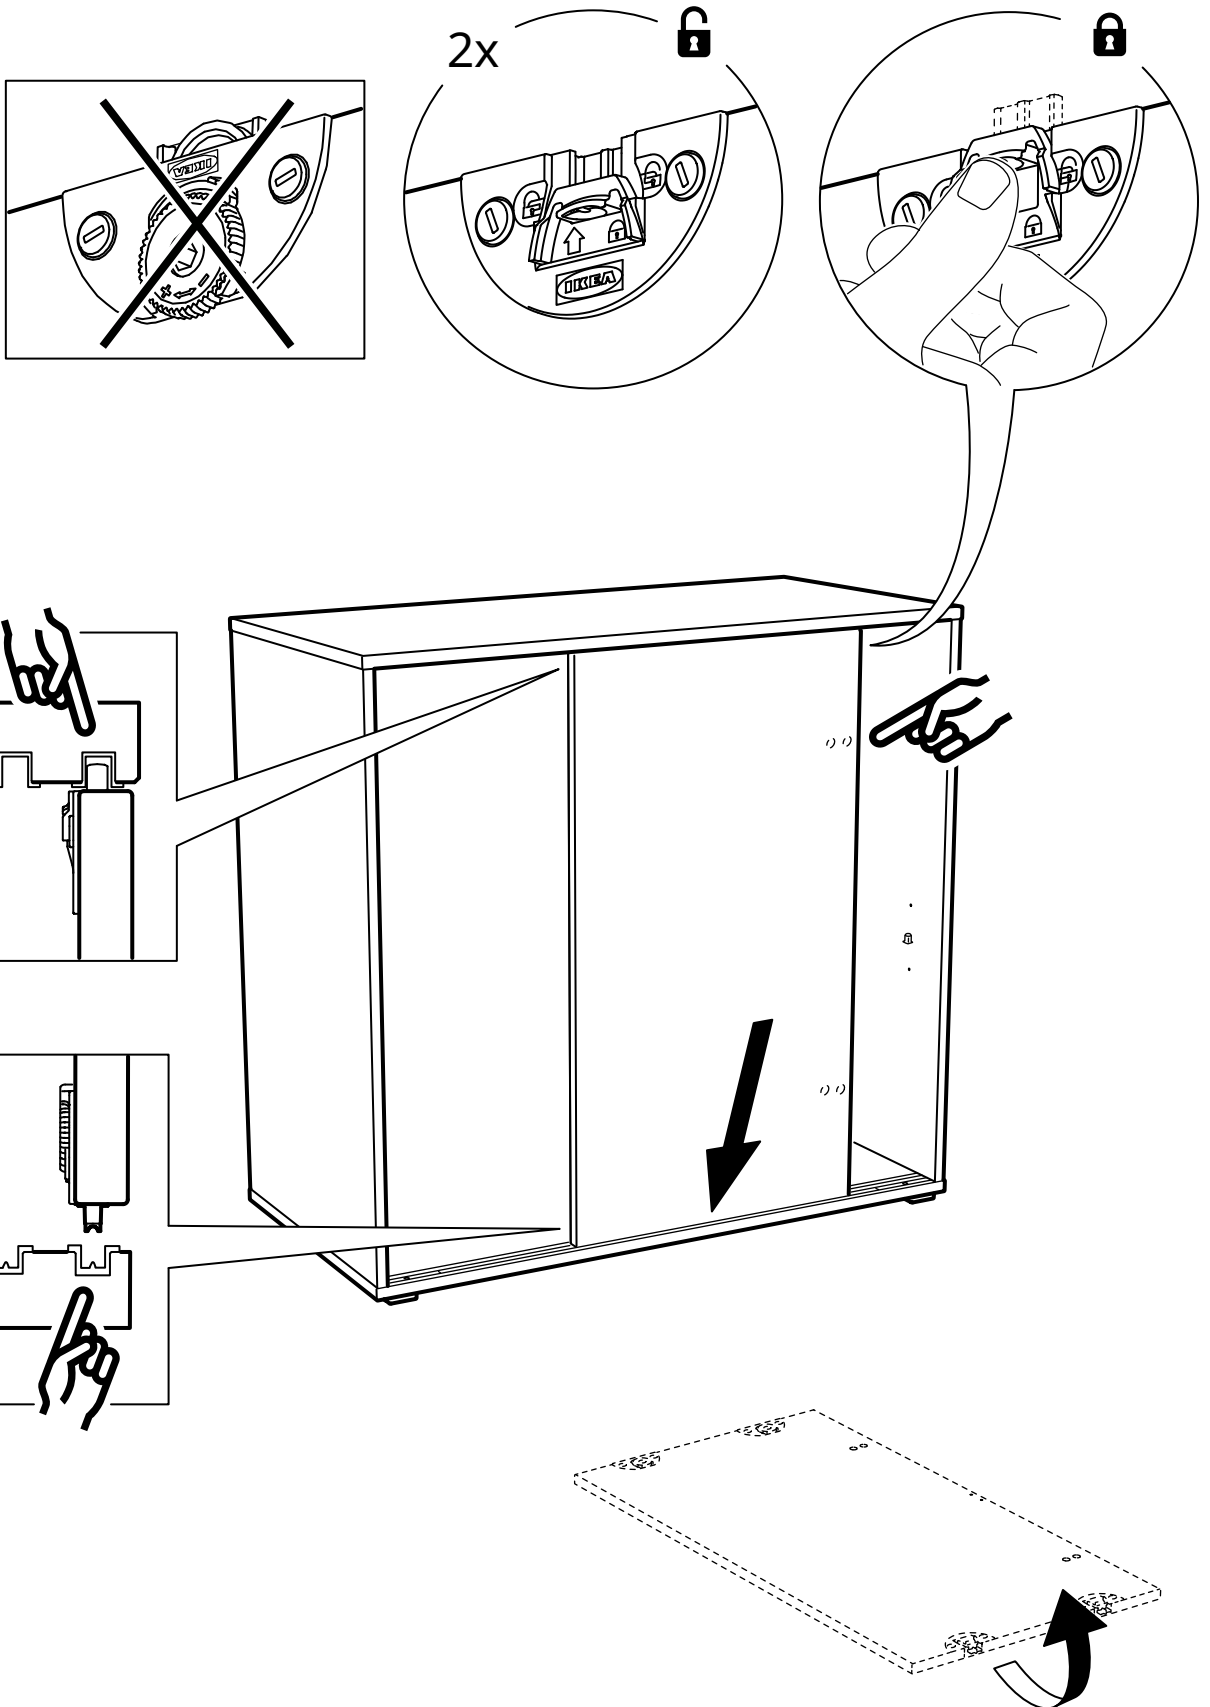 

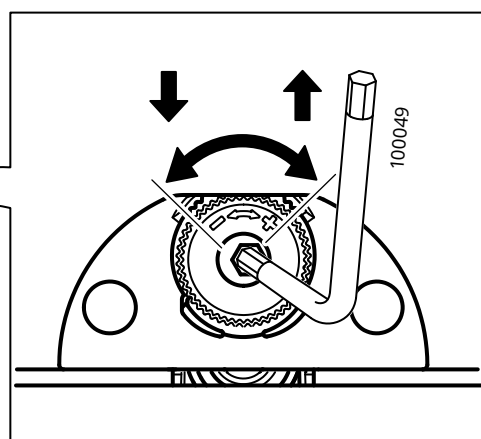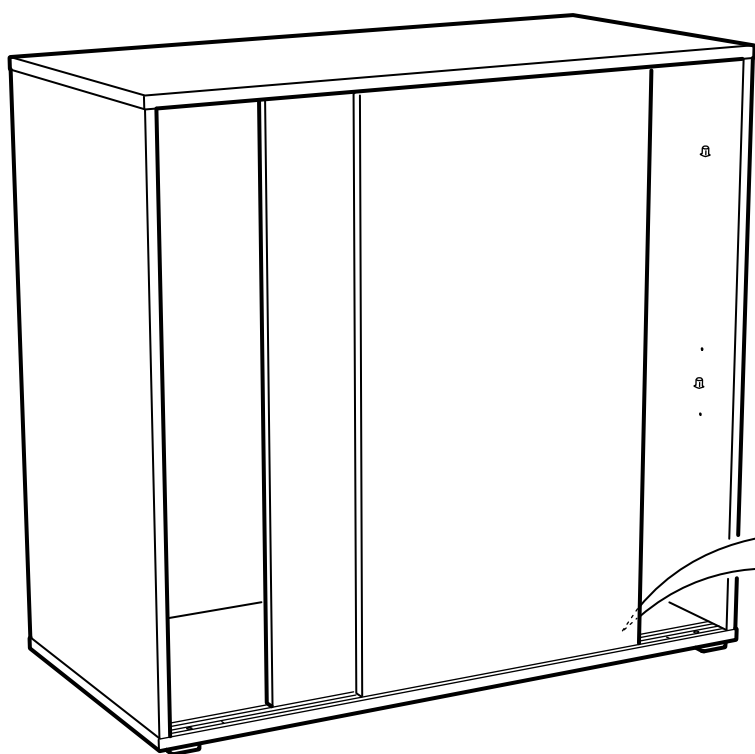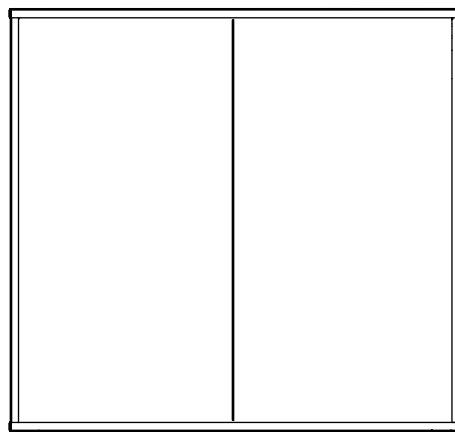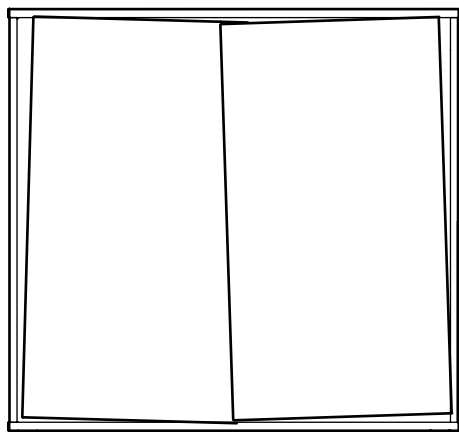    

26

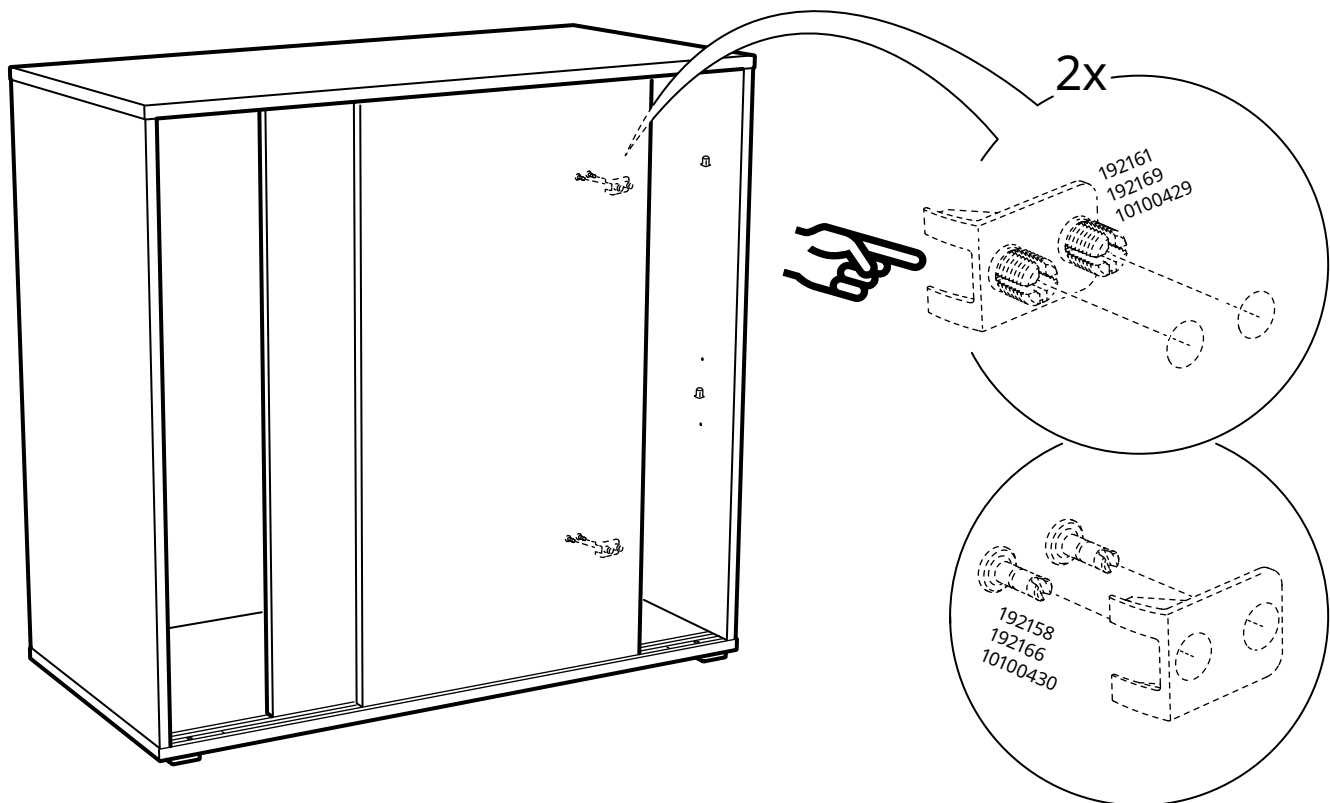 

27

