 
 


VIHALS

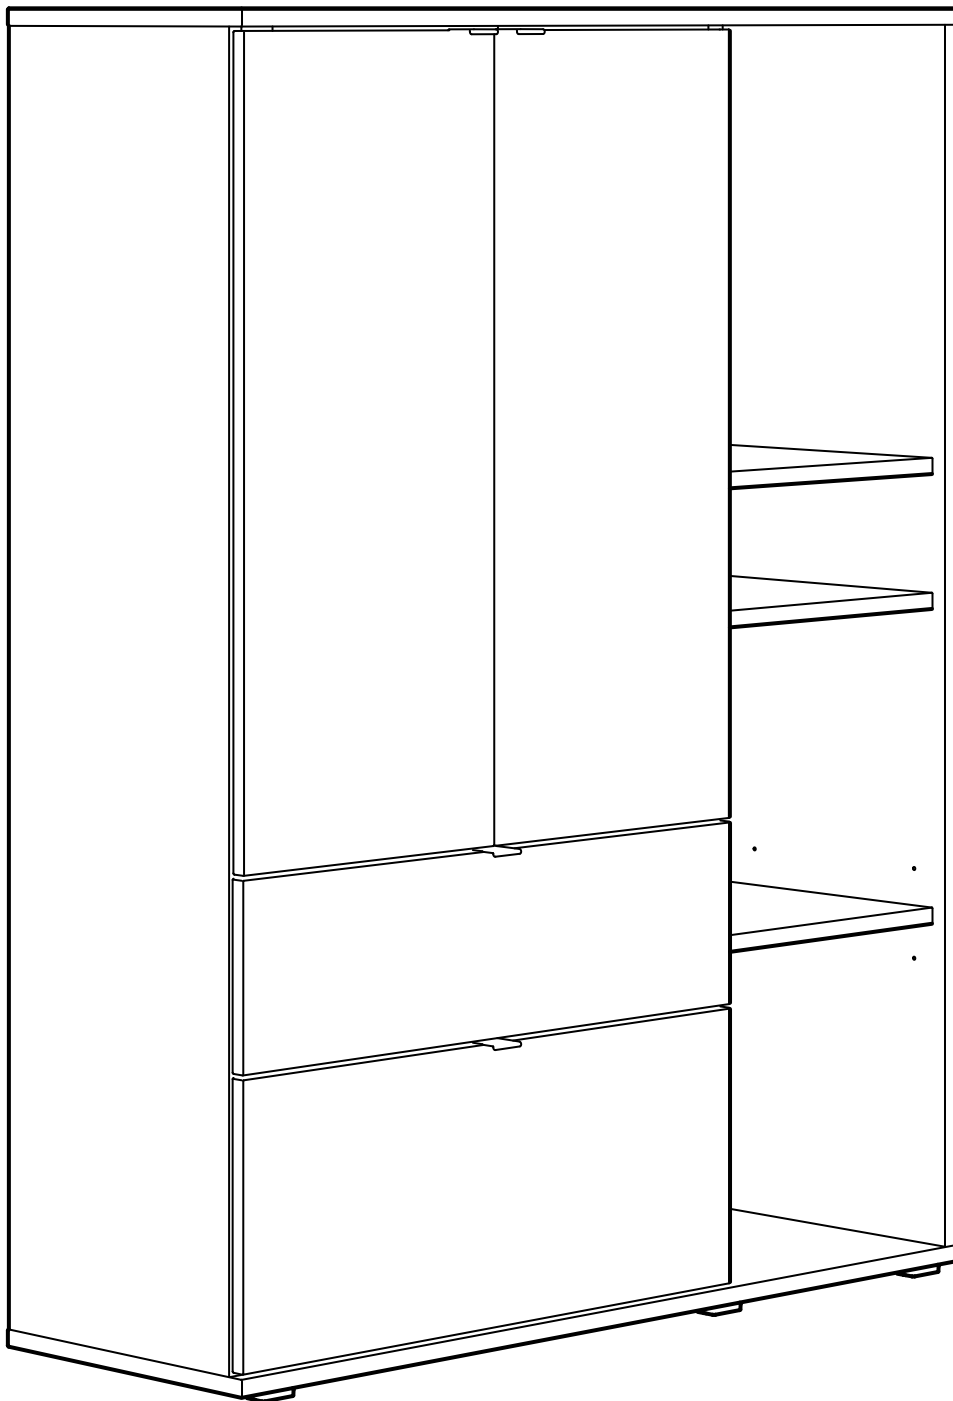

Design and Quality
IKEA of Sweden

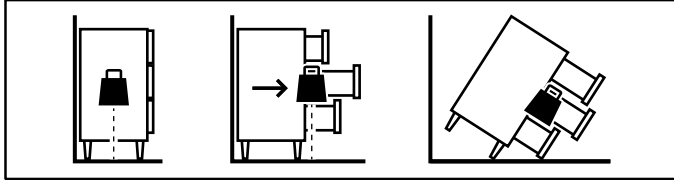

English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

 
 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

 
 
 
 
NEVER open more than one drawer at a time.

Place heaviest items in the lowest drawers.


English

Read and follow each step of the instruction carefully.

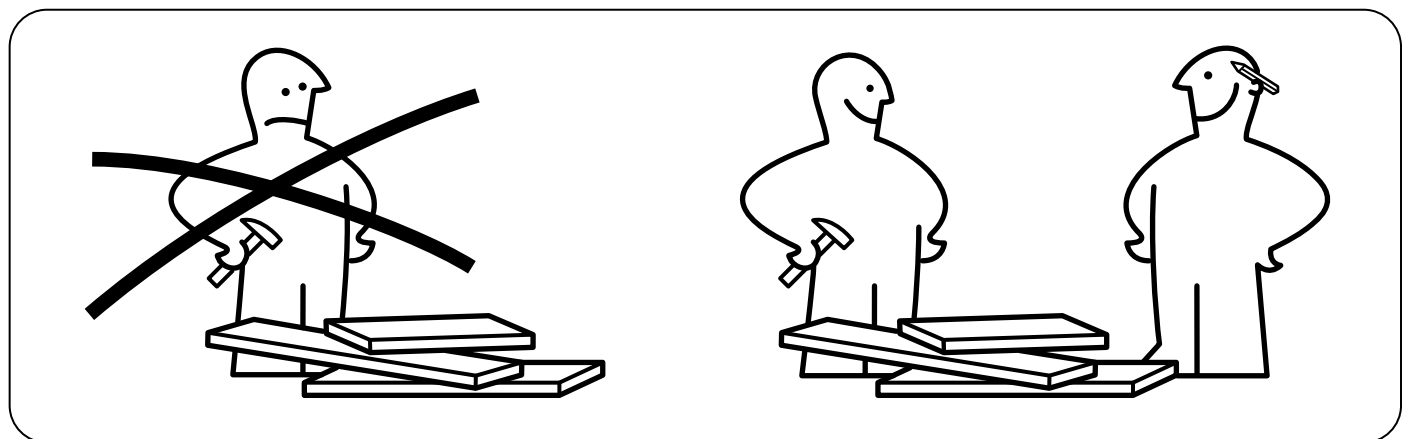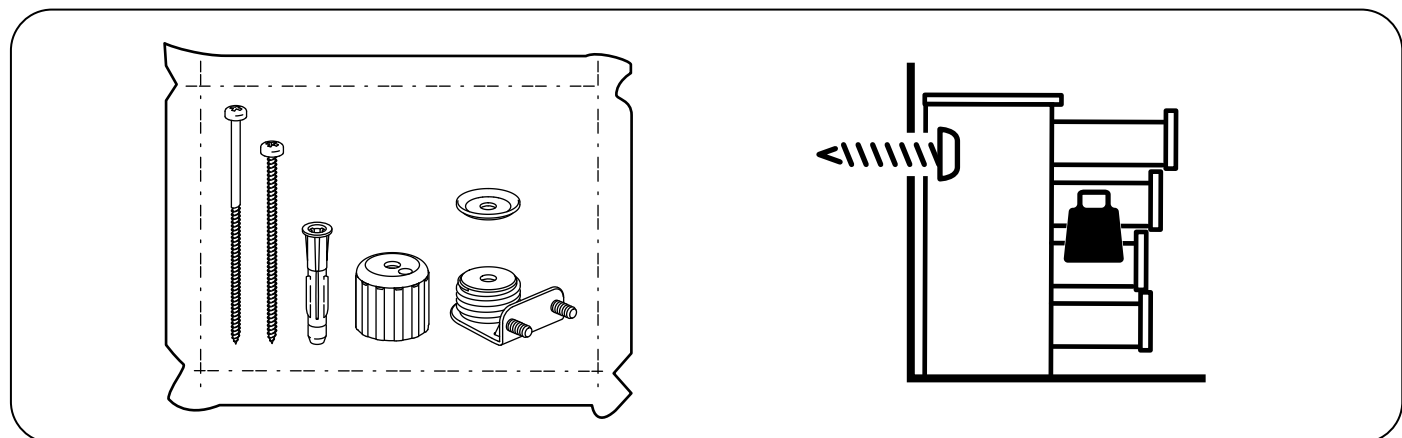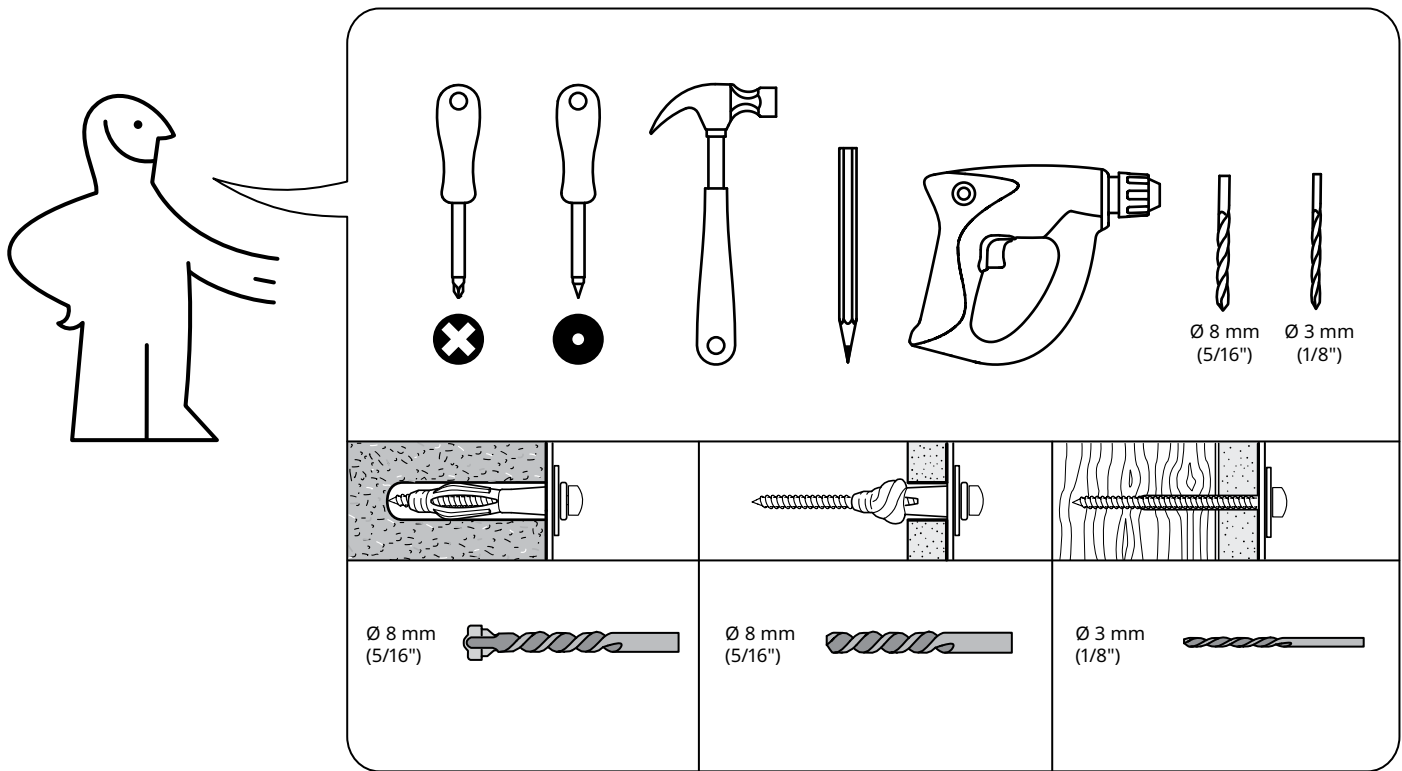

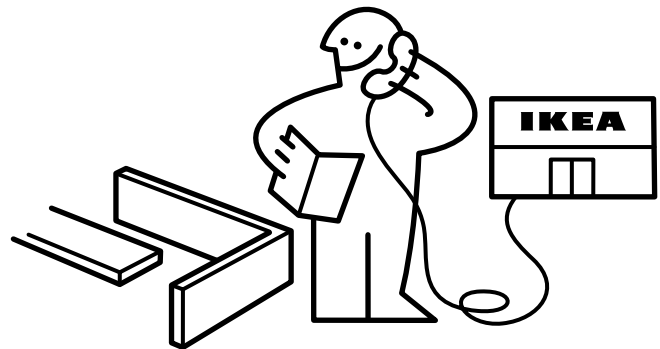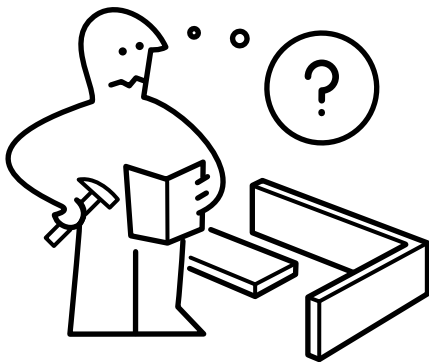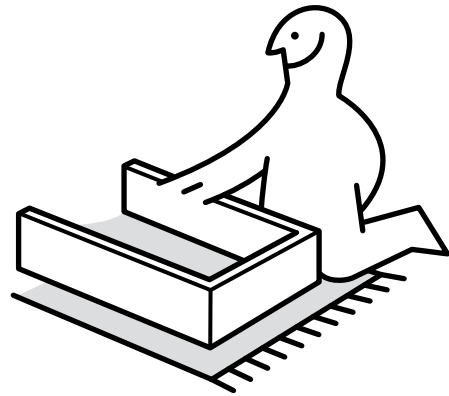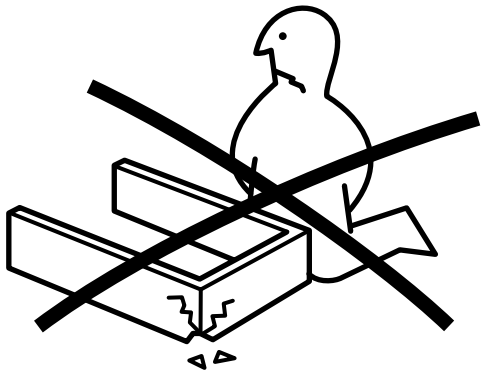


A

 


145718

 8x



130449

 8x

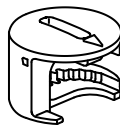


119030

16x




146114

 12x

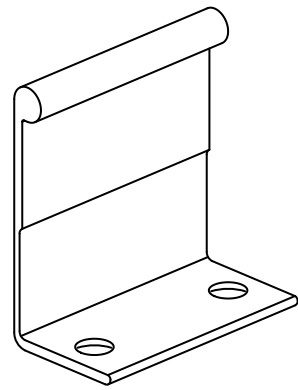


10071494

 2x

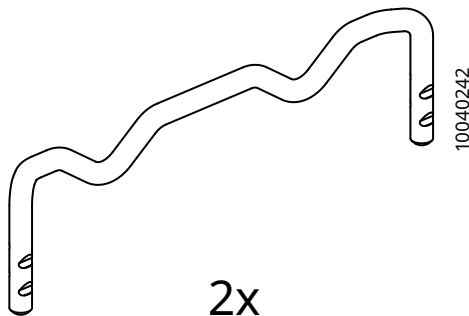


10040242

 2x

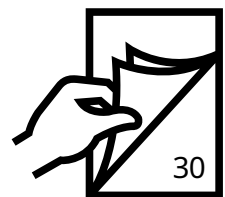


30

 
1



12x

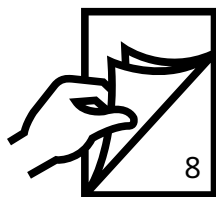 


2

 


4x



 
4x



16x

 


16x

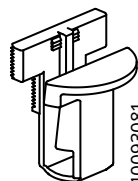 


6x



 
6x

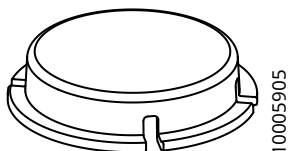


2x

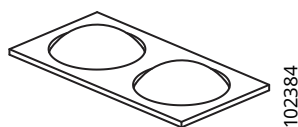 


2x

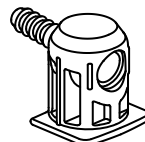 


16x

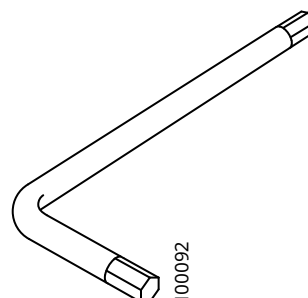 

1x


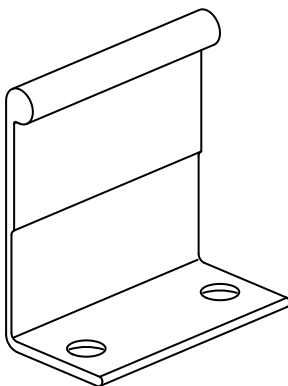 



2x

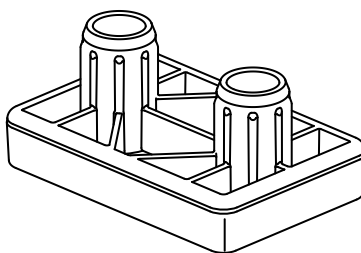 

6x




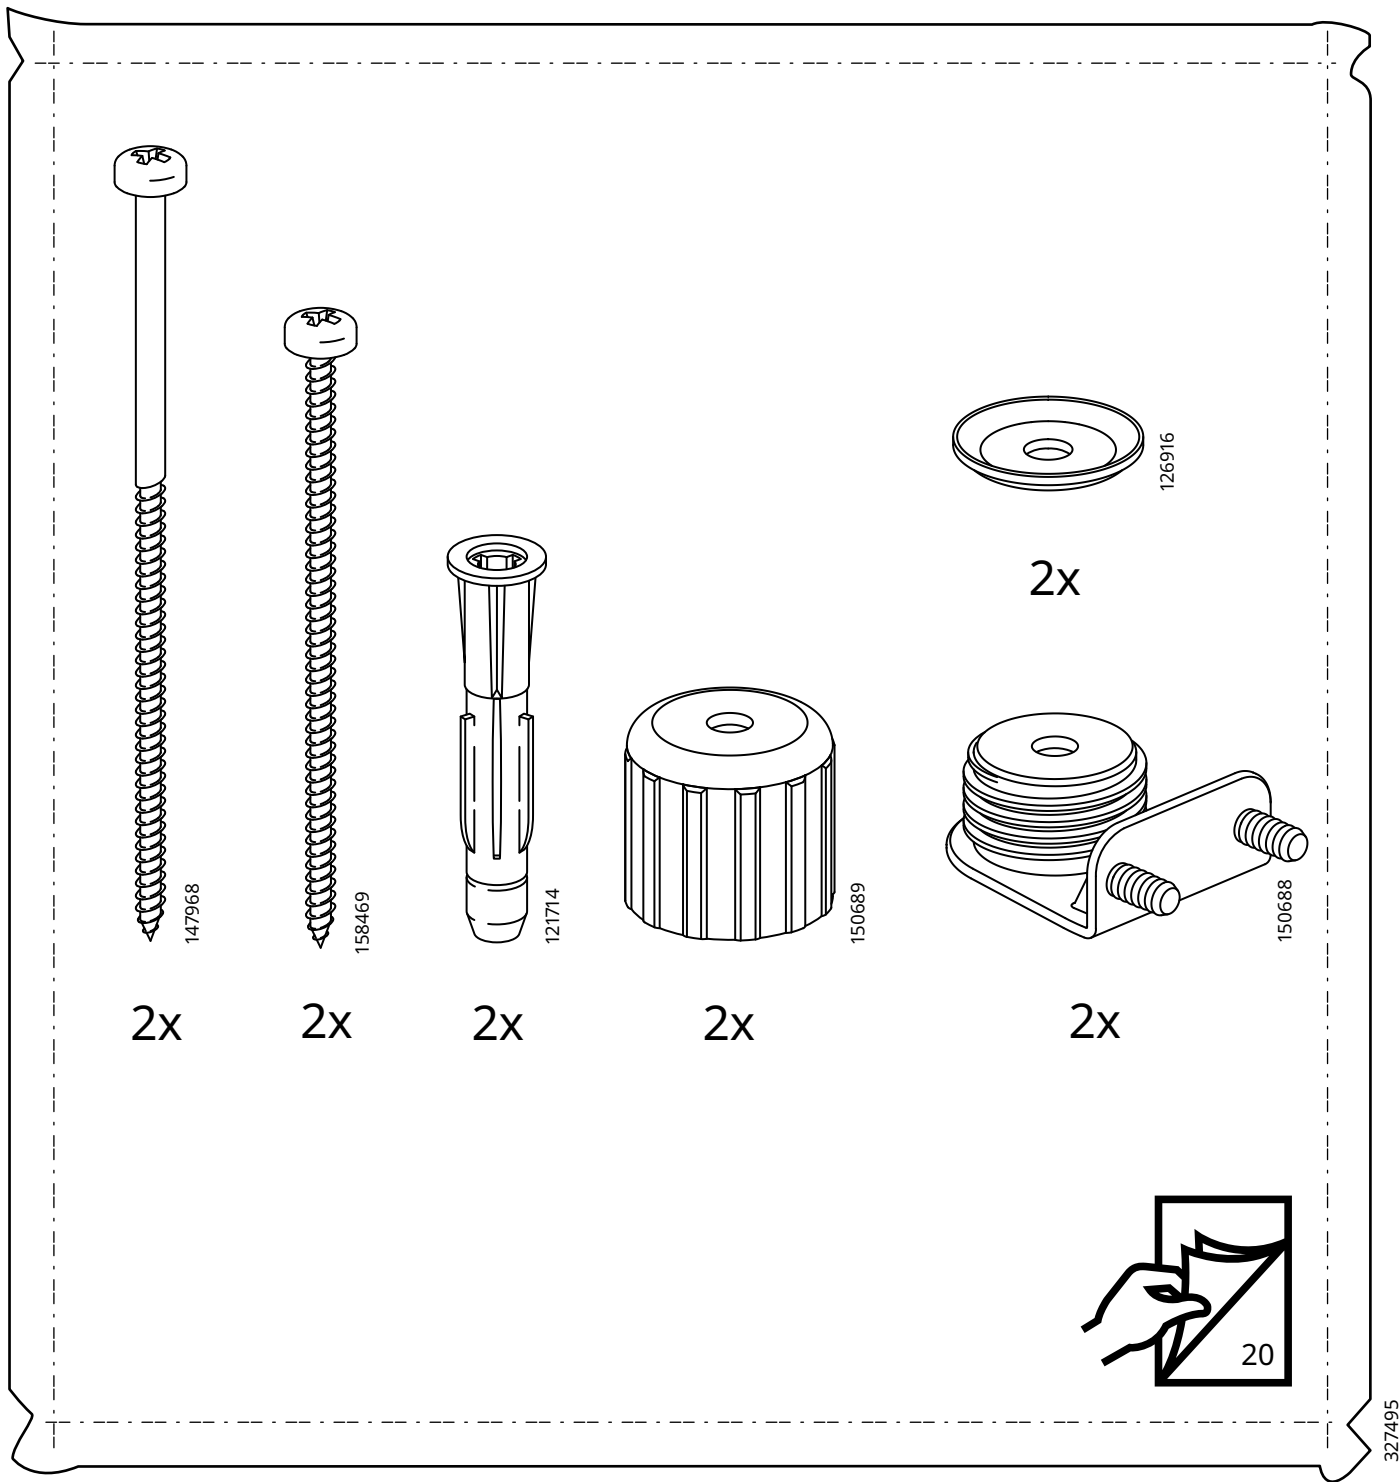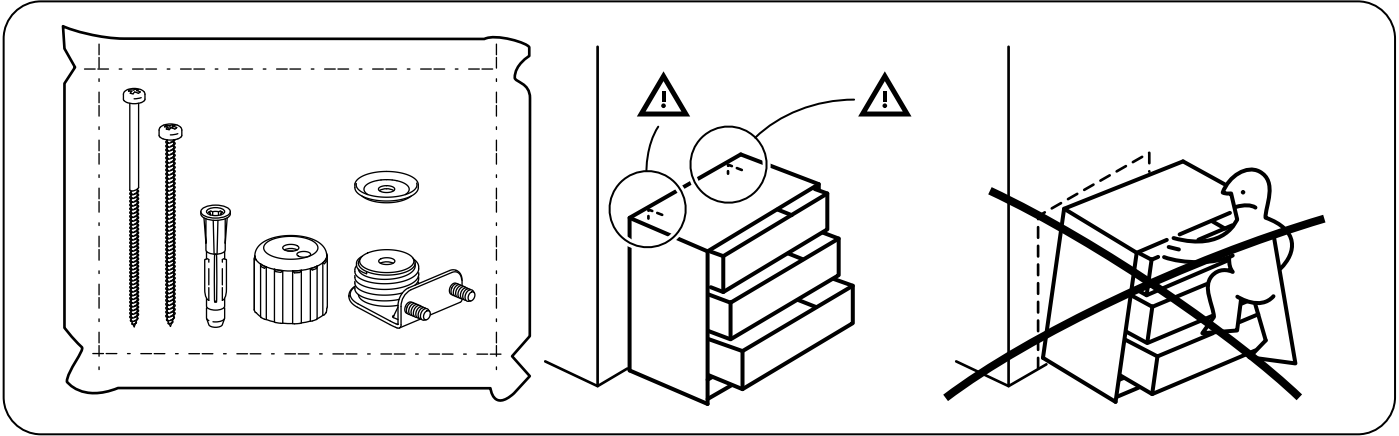  

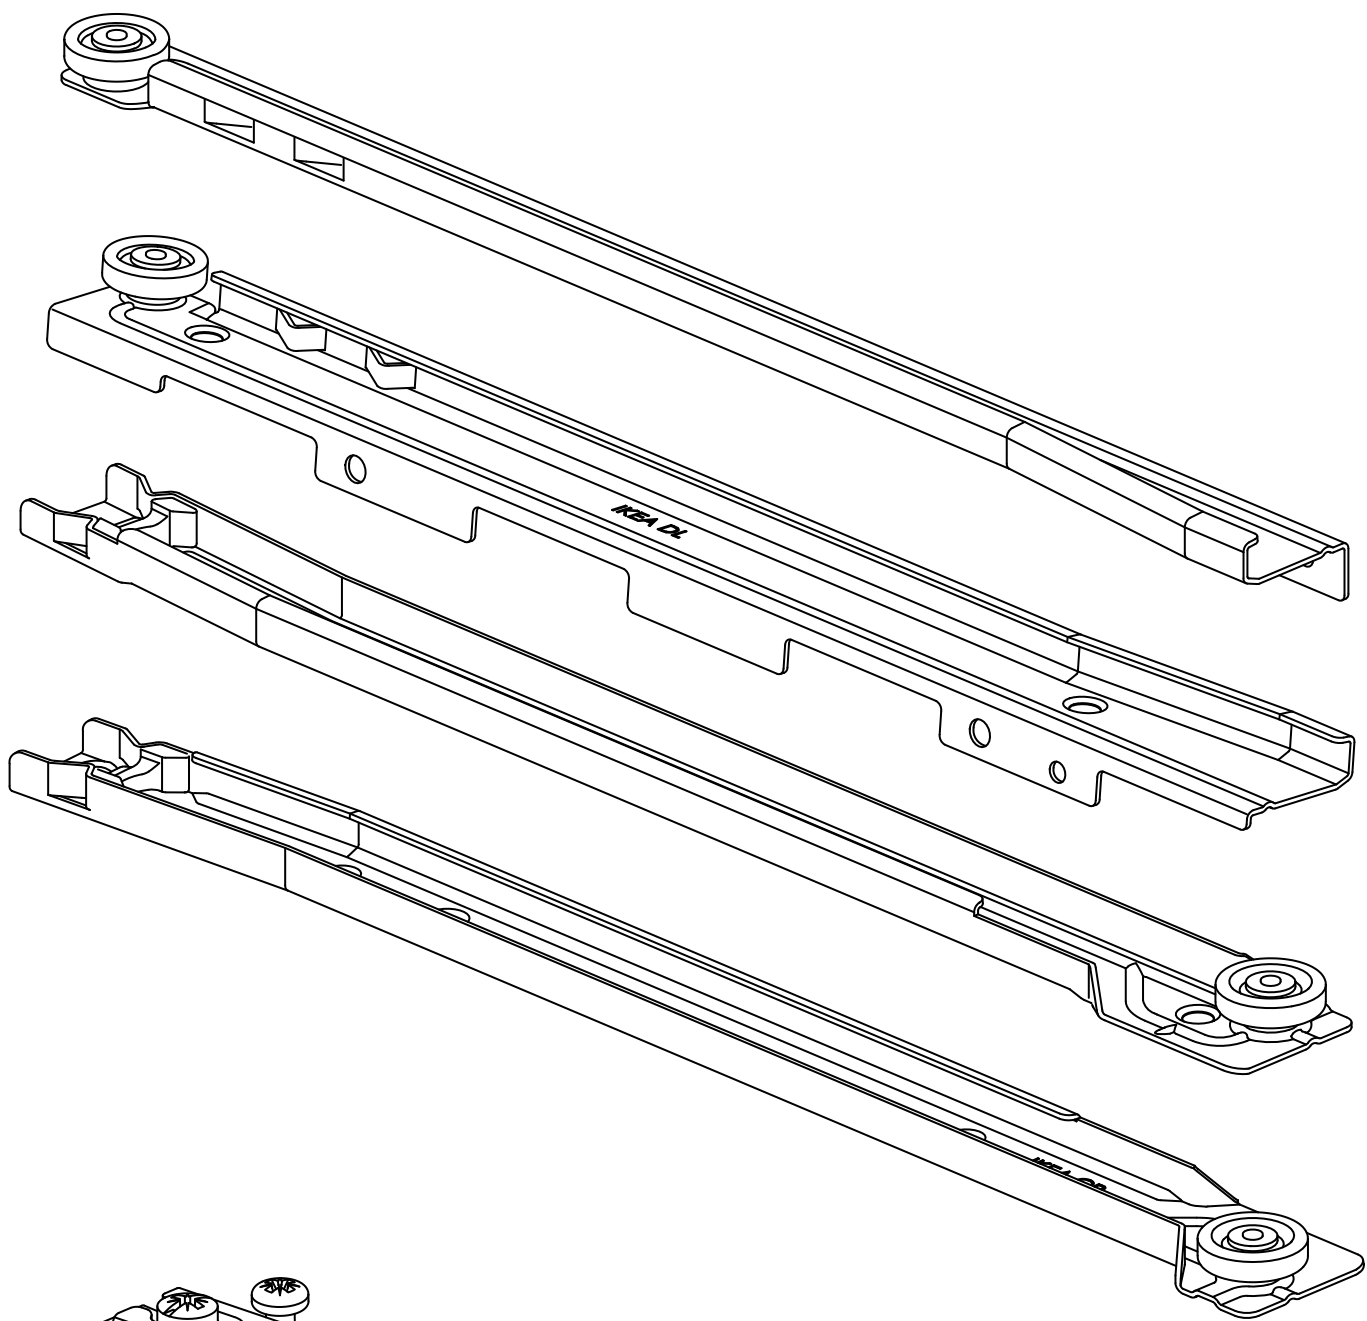 




10060247

 2x


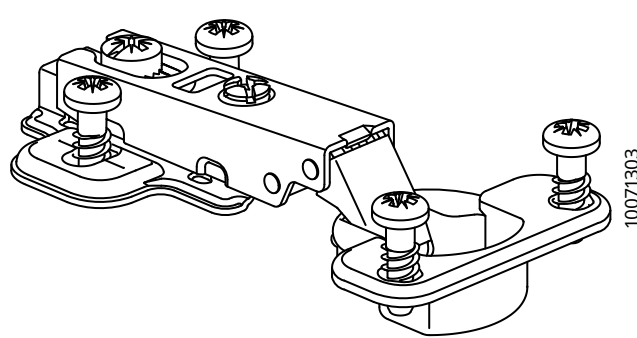


4x

   
1

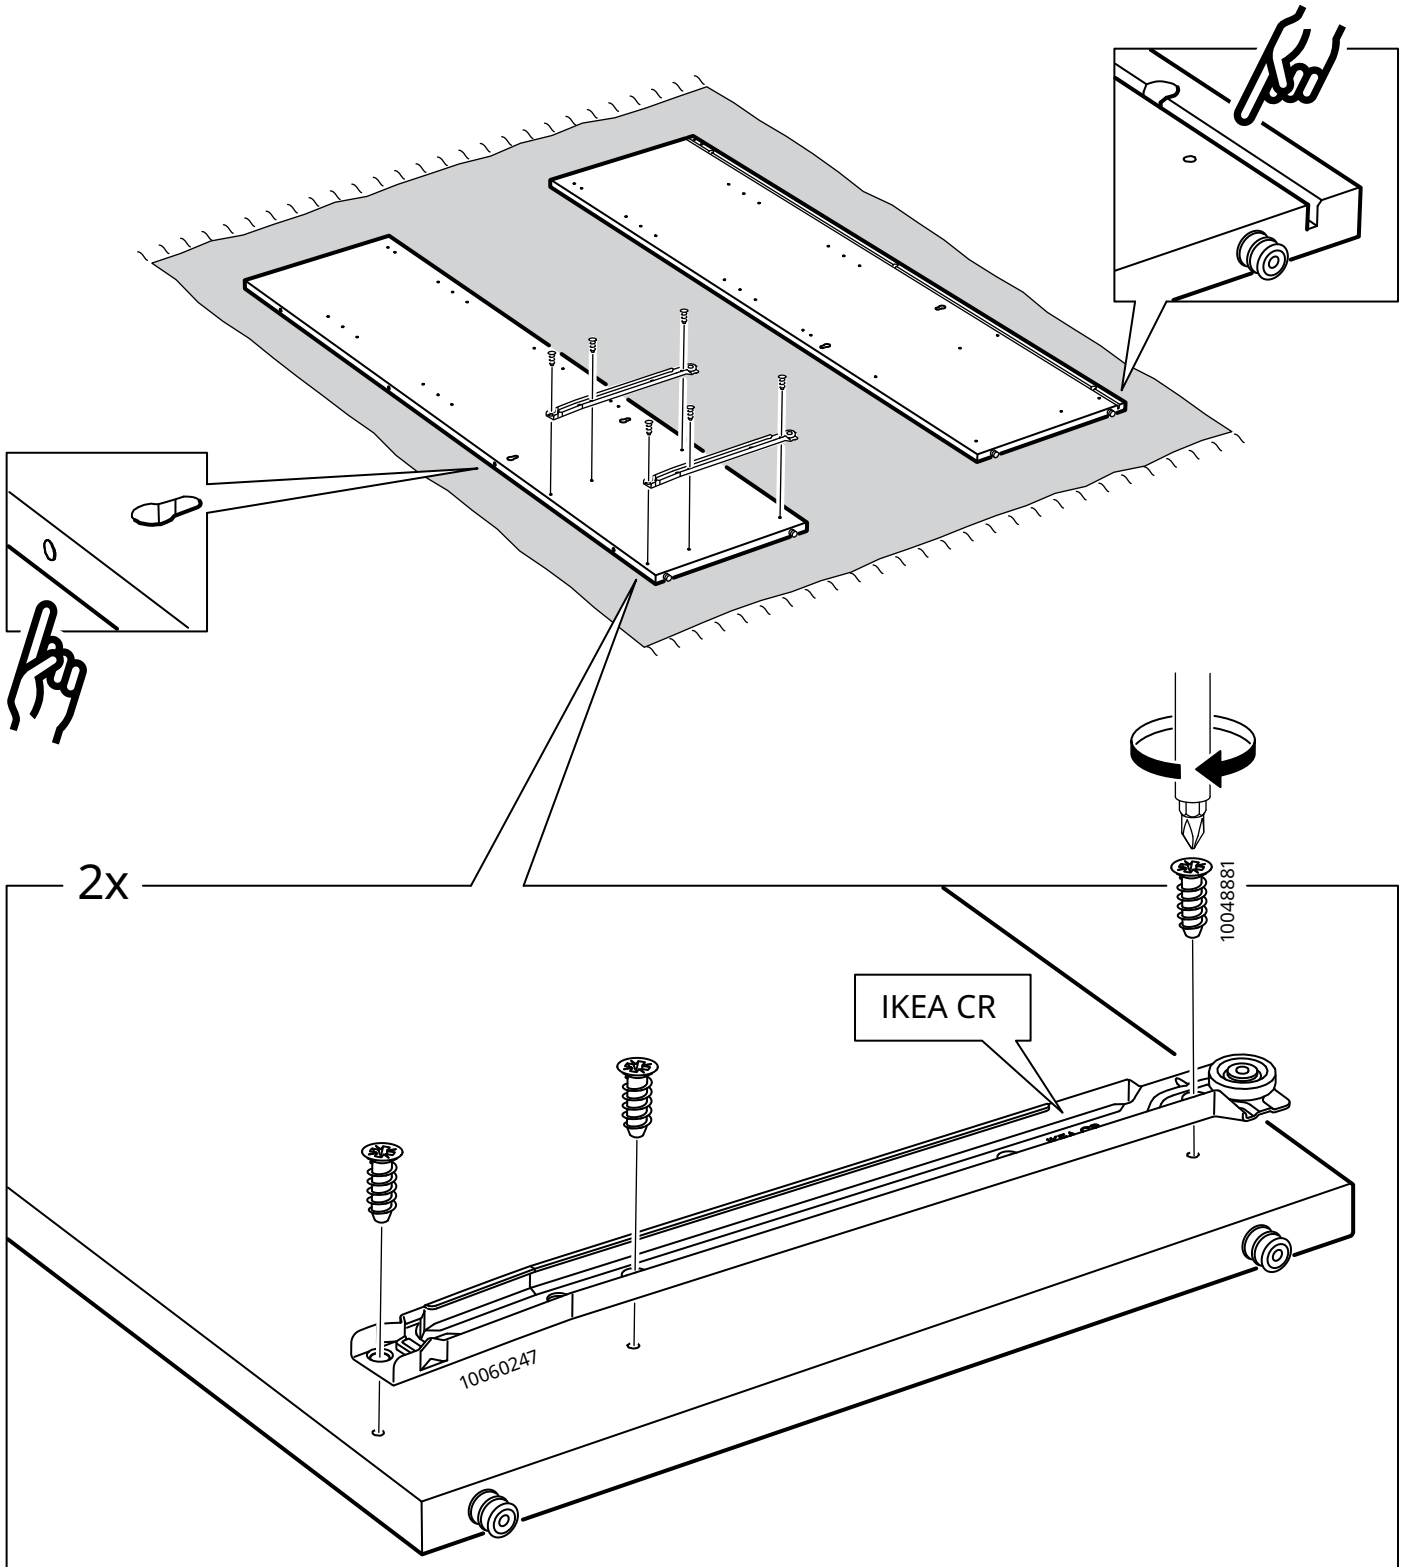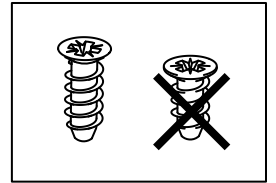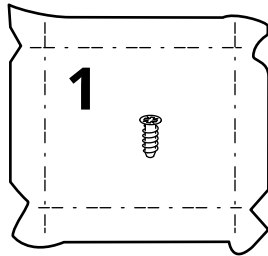


2

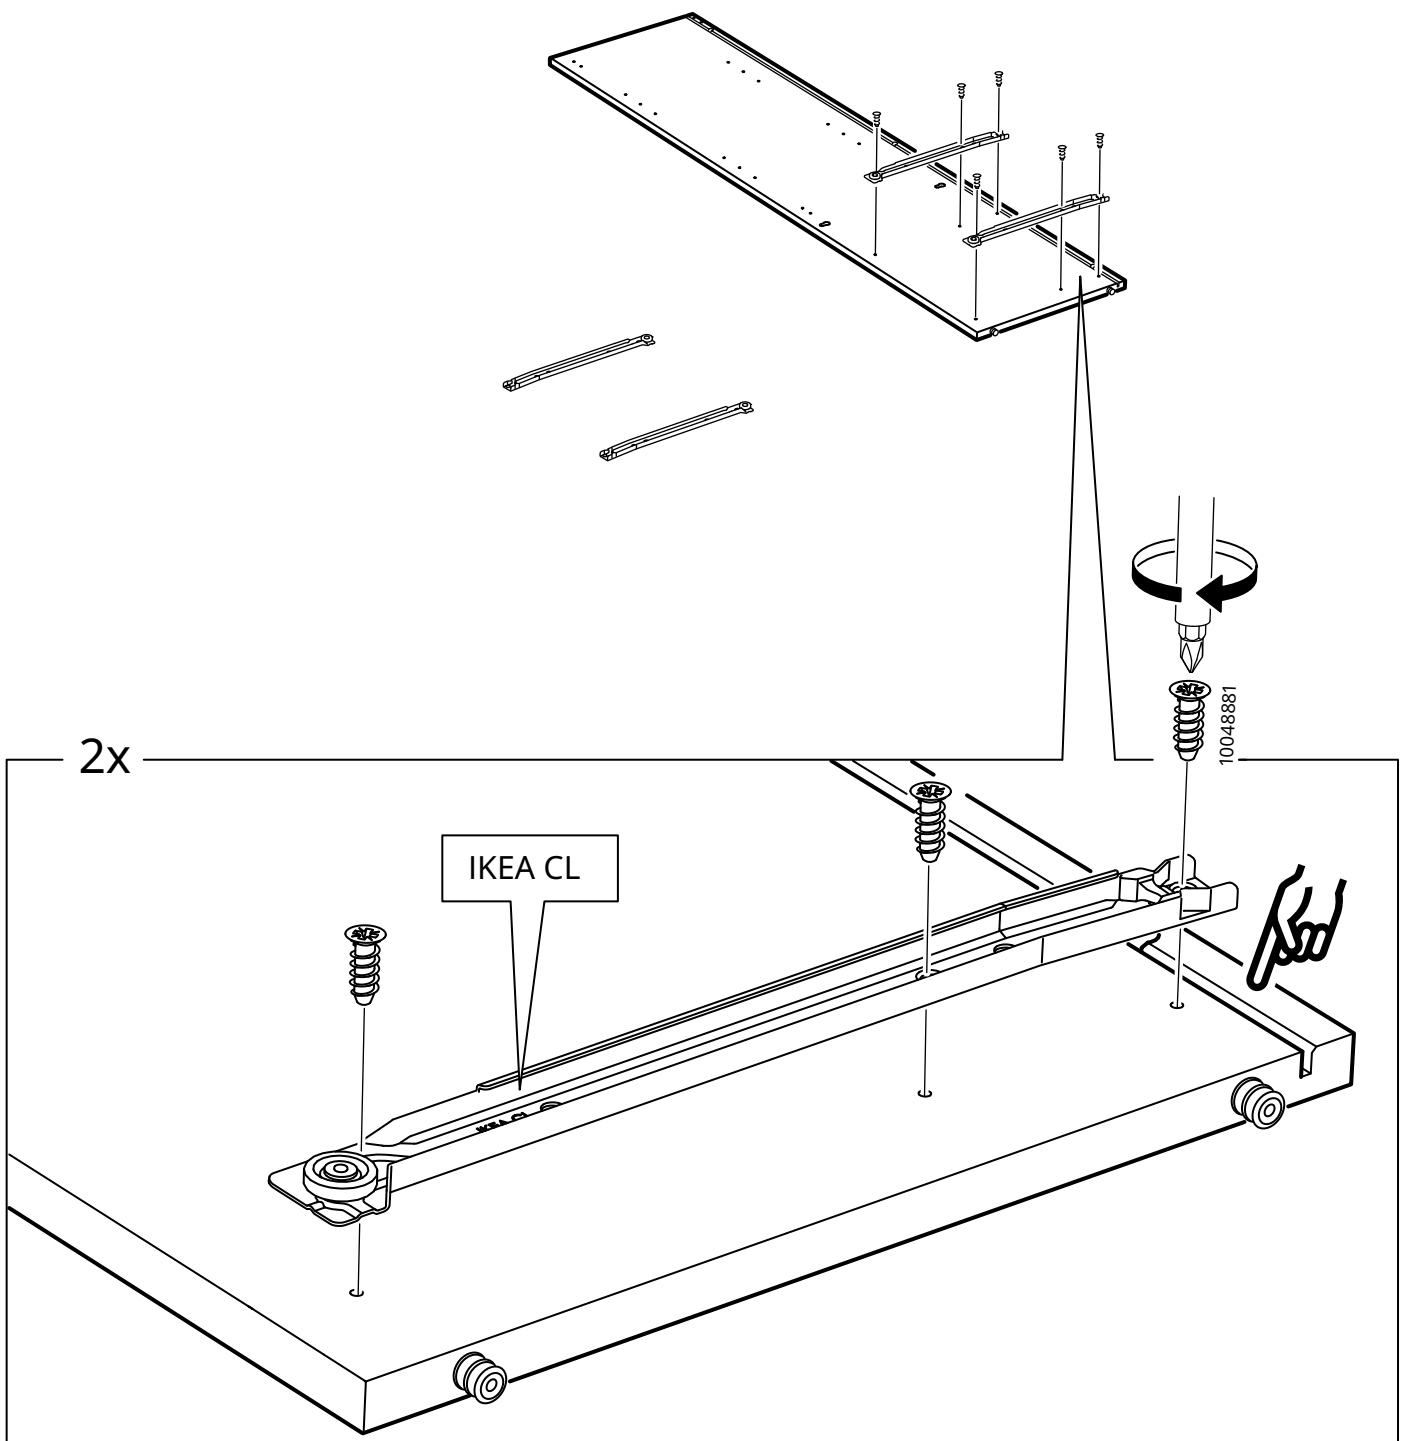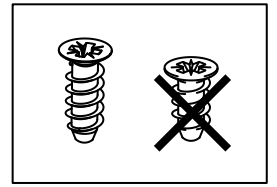  


3

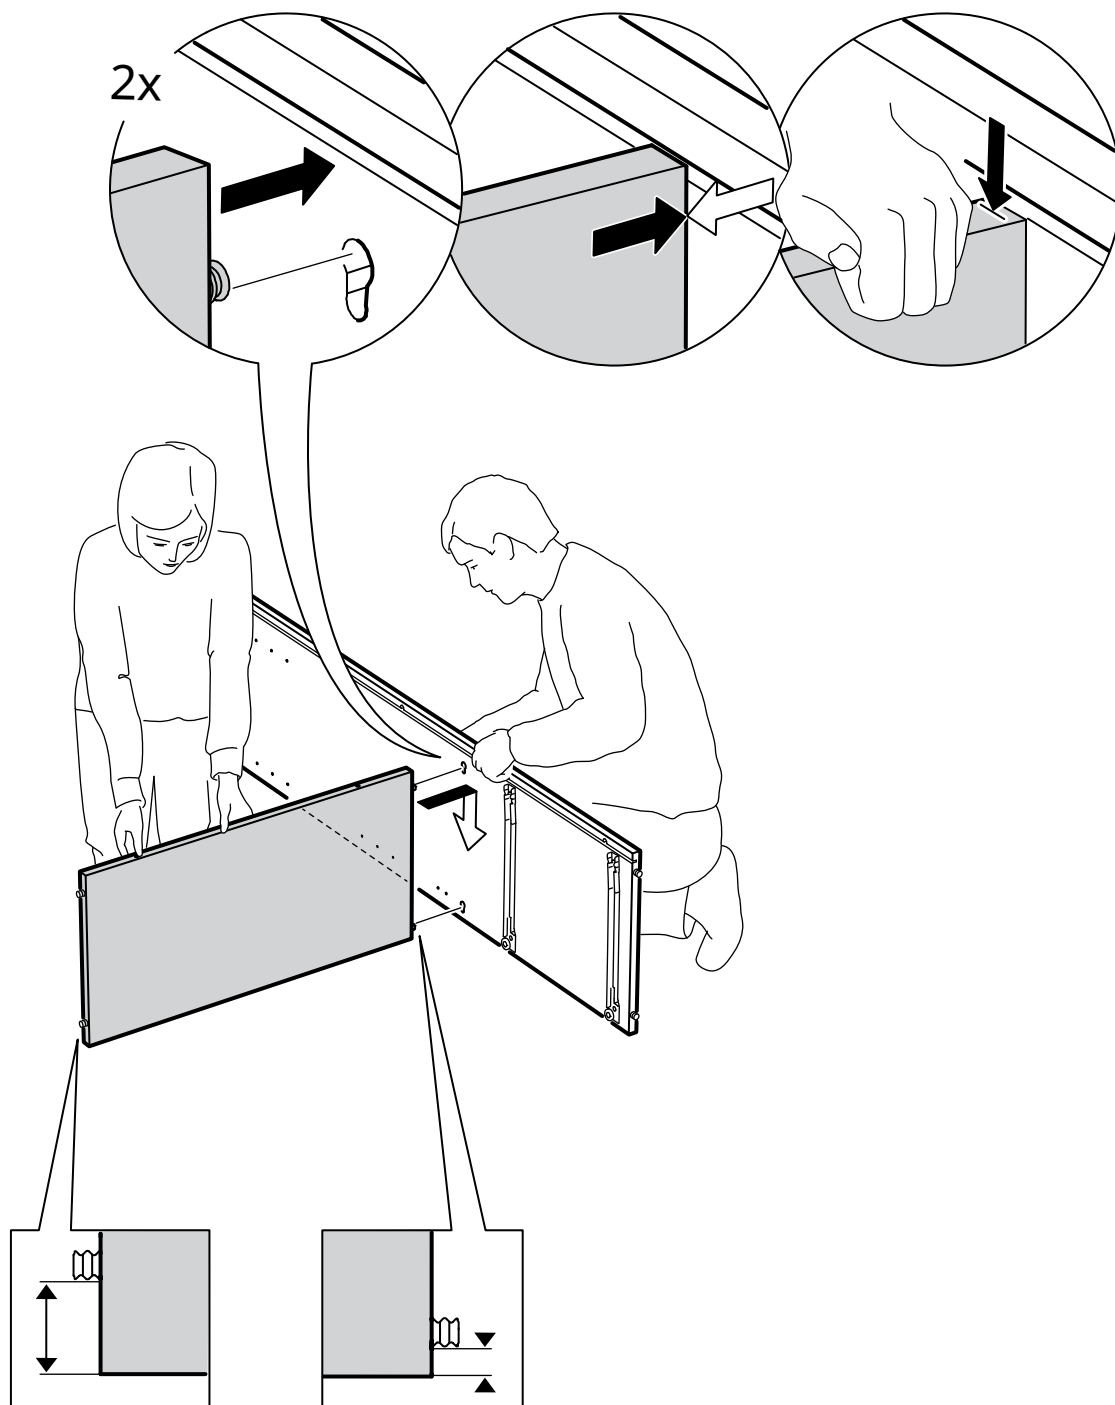 


4

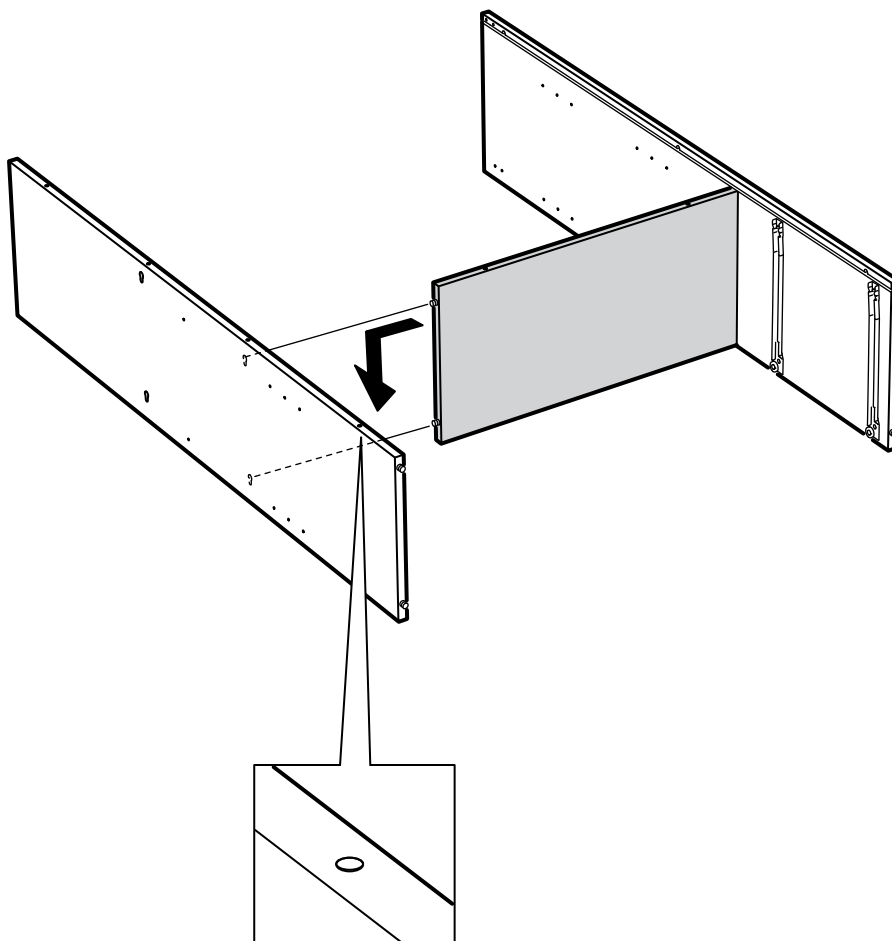 


5


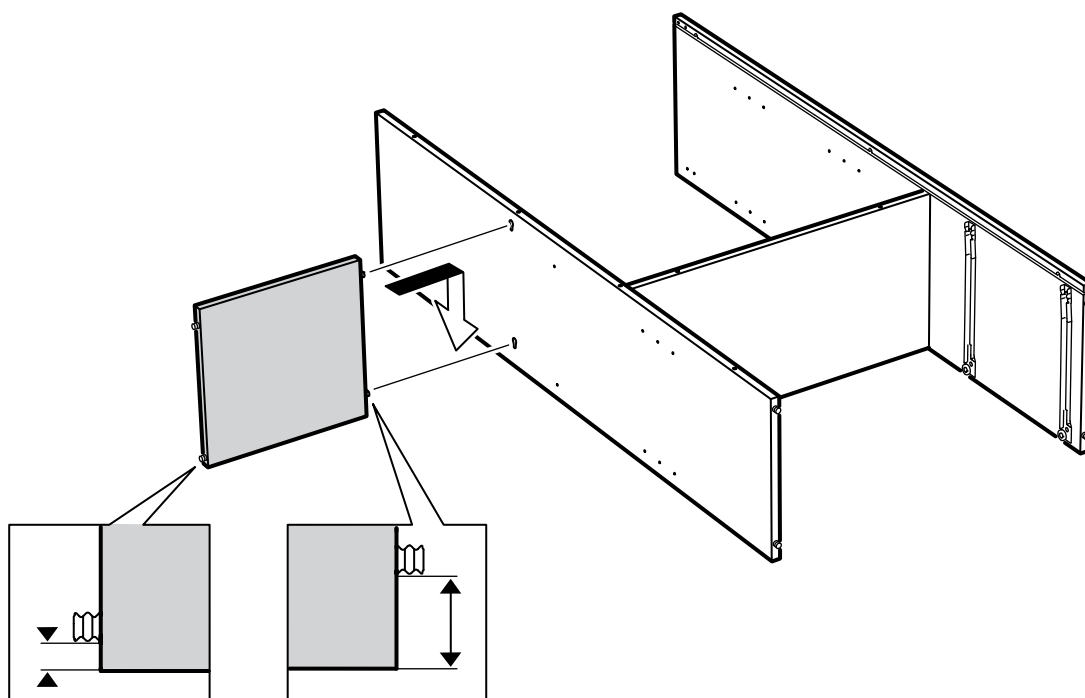 


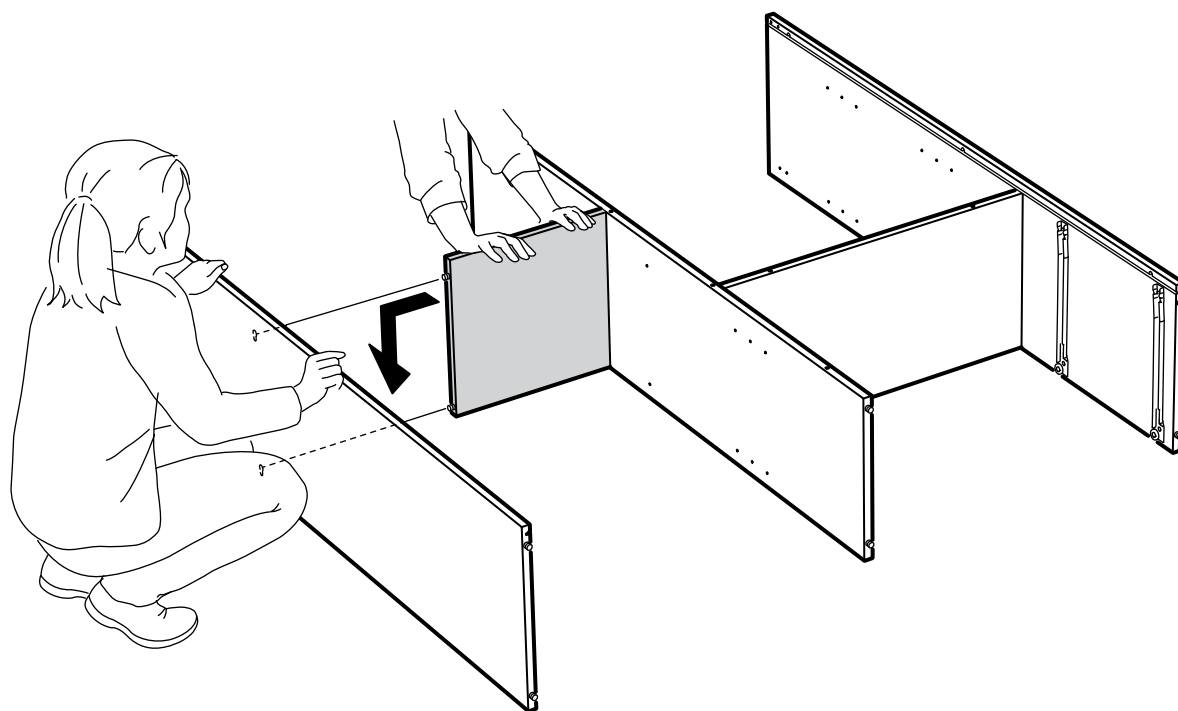 


7

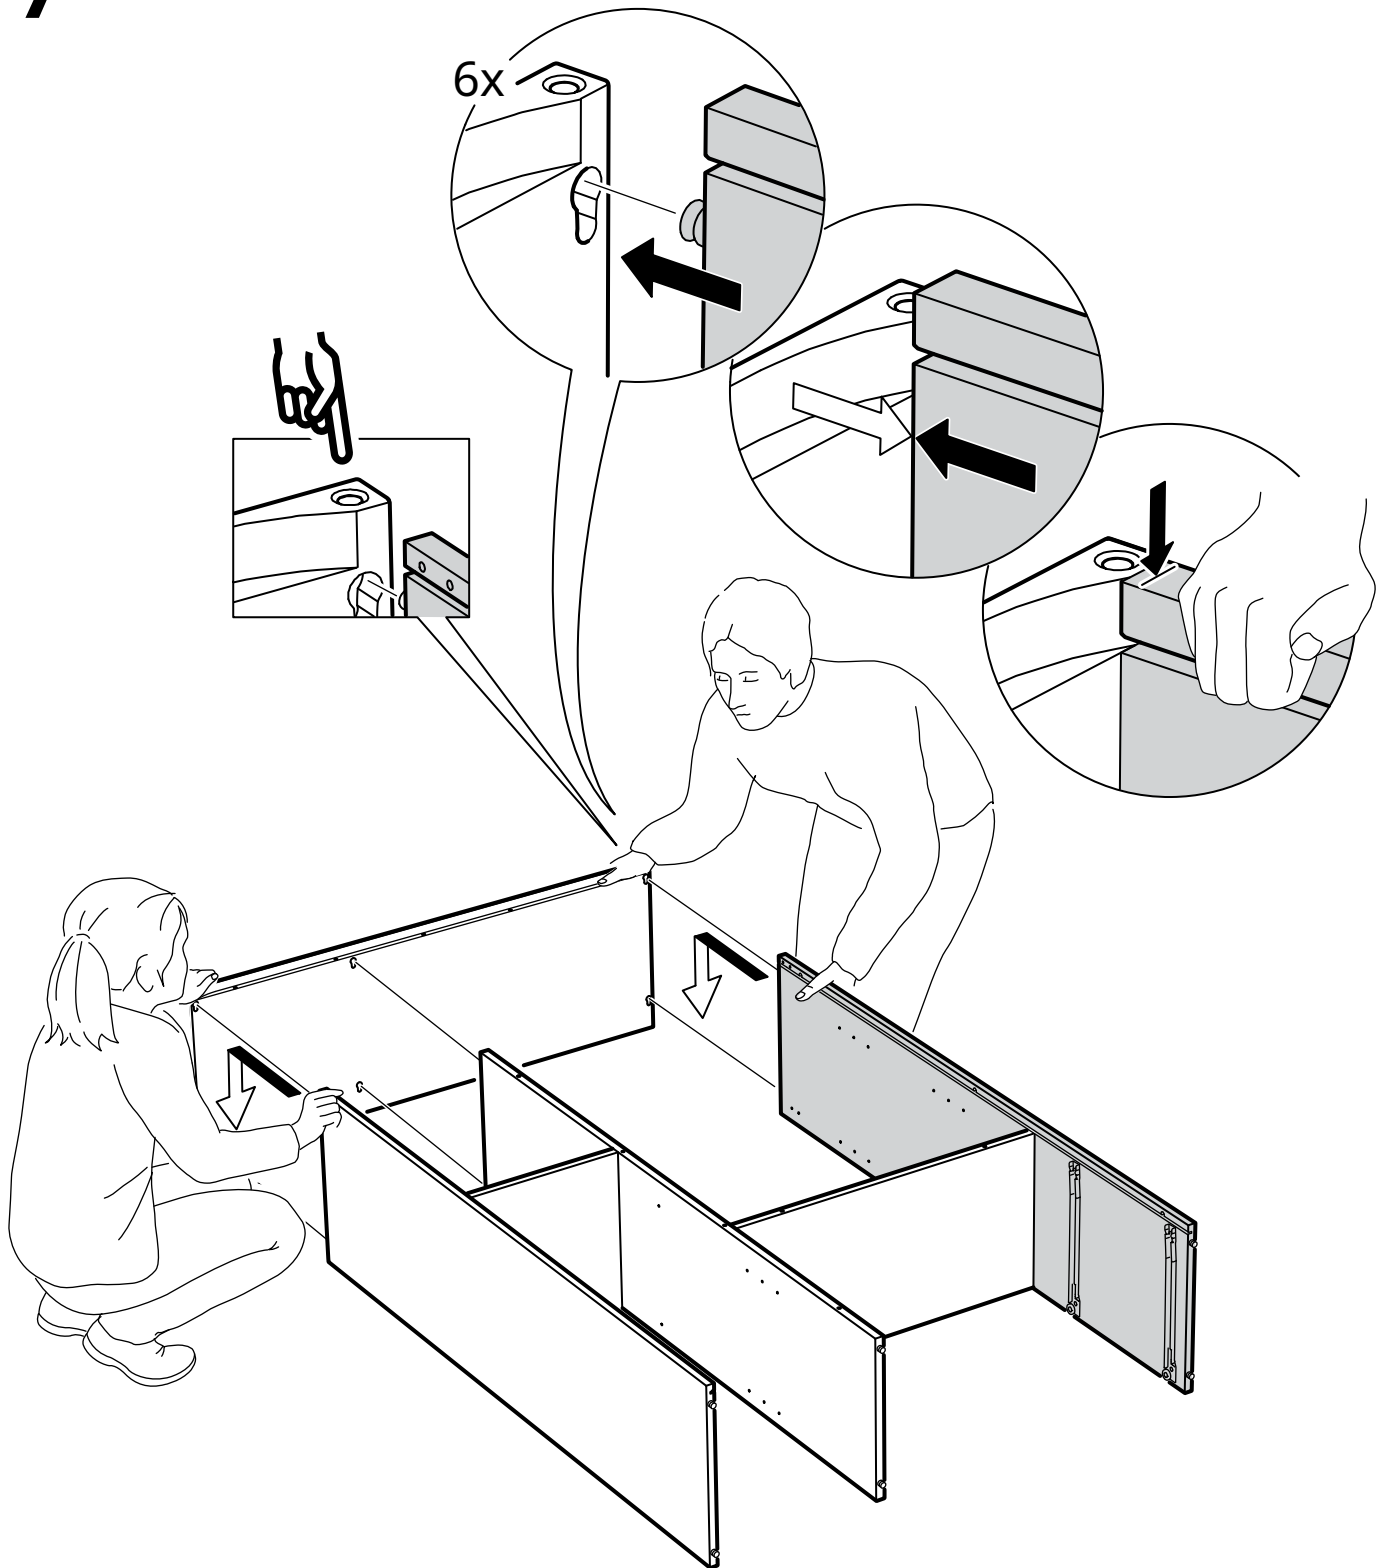 


8

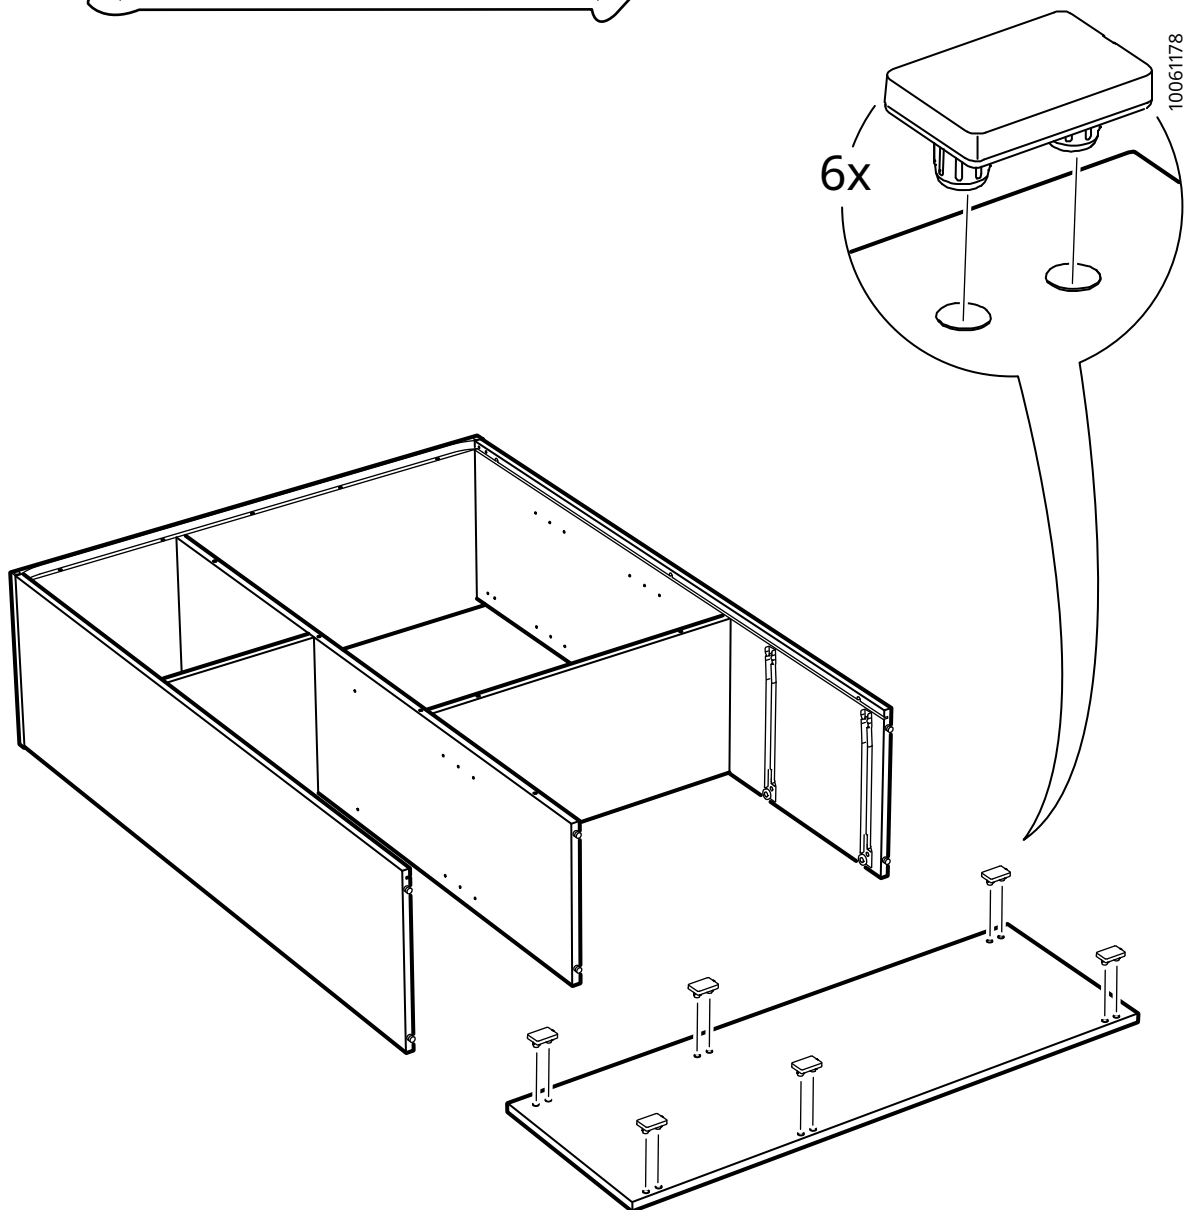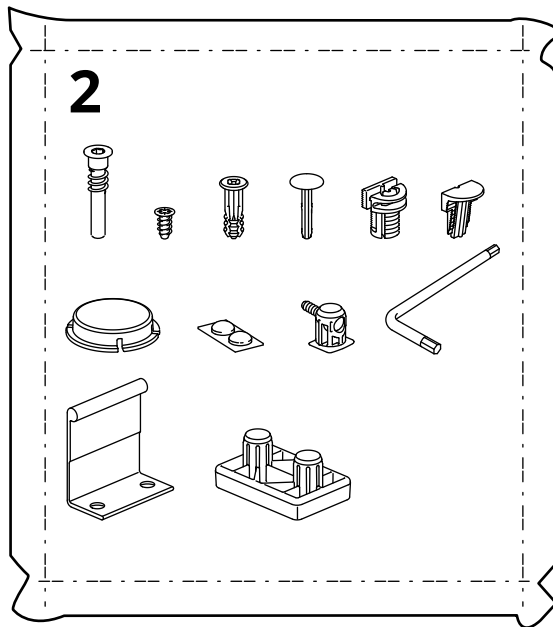  


9

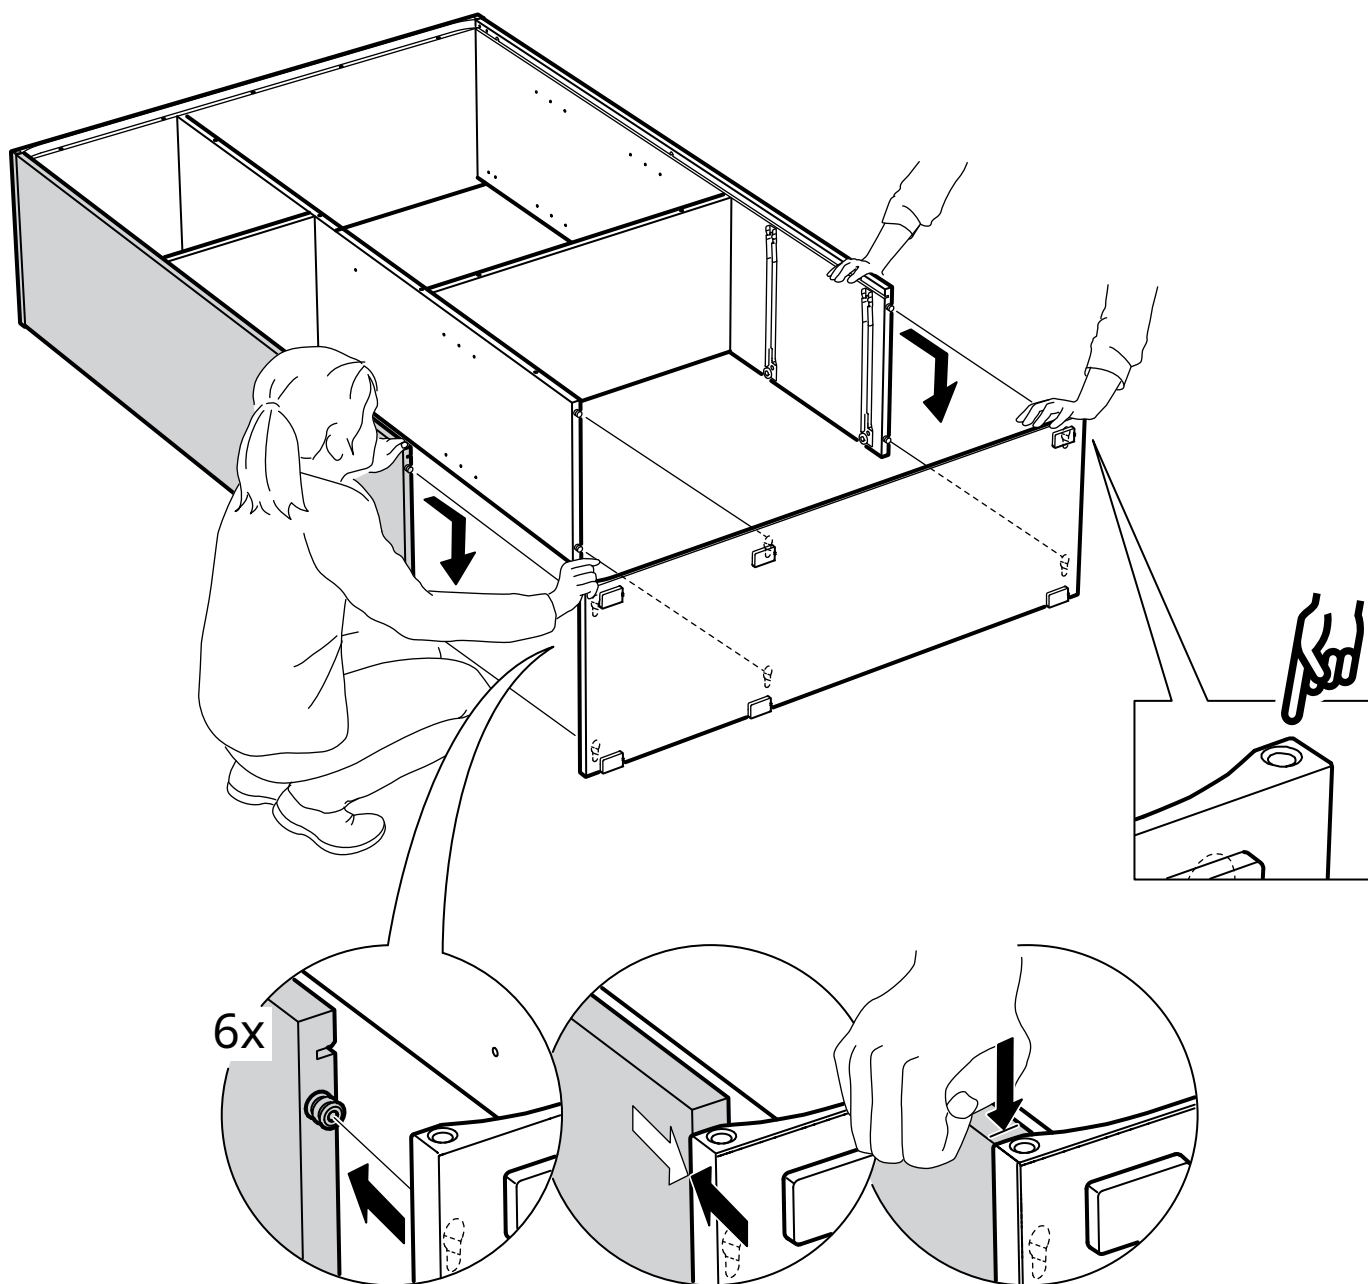 


10

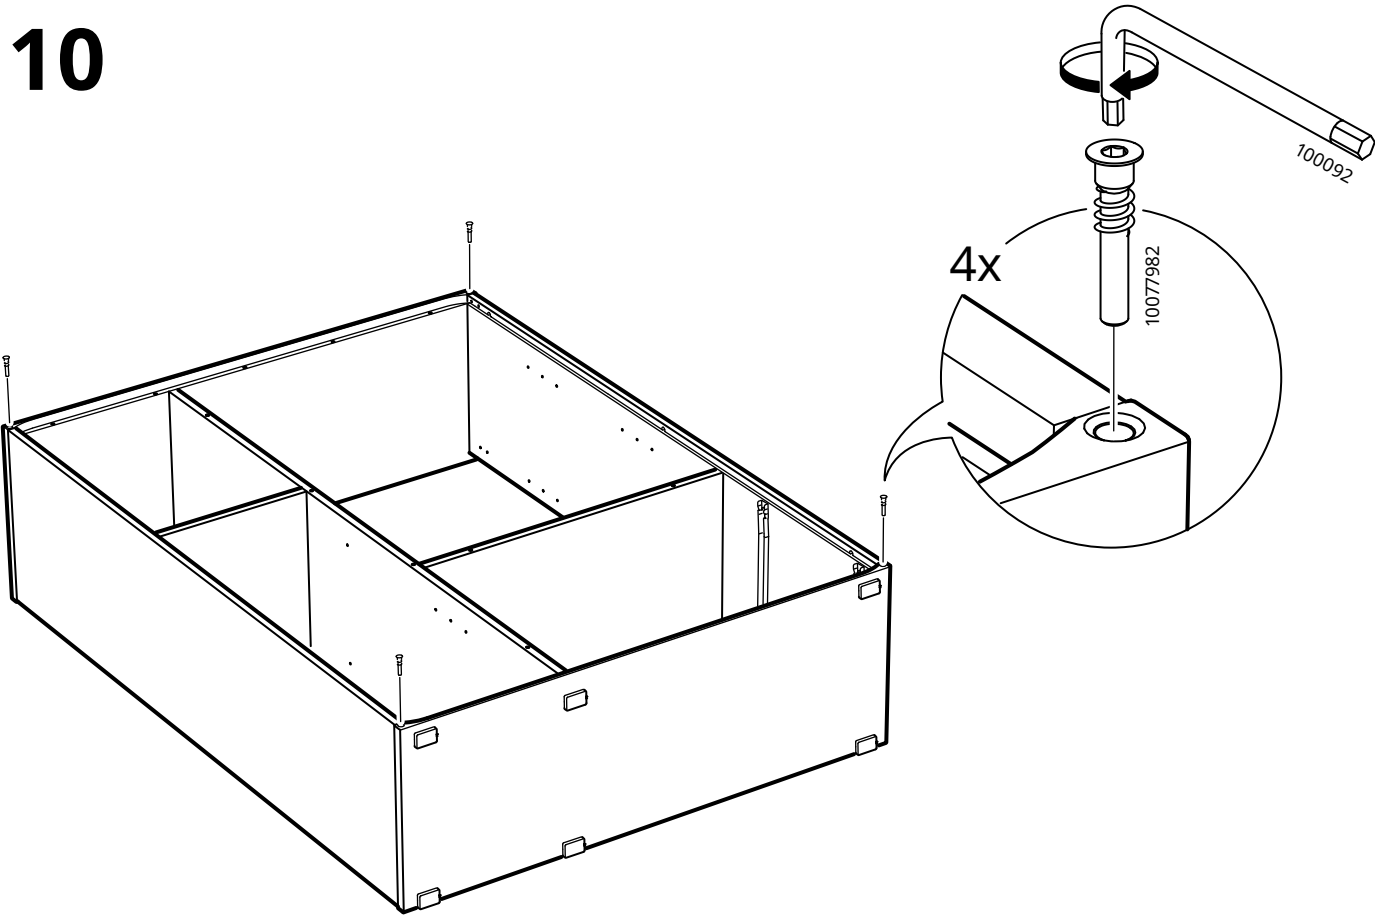 


11

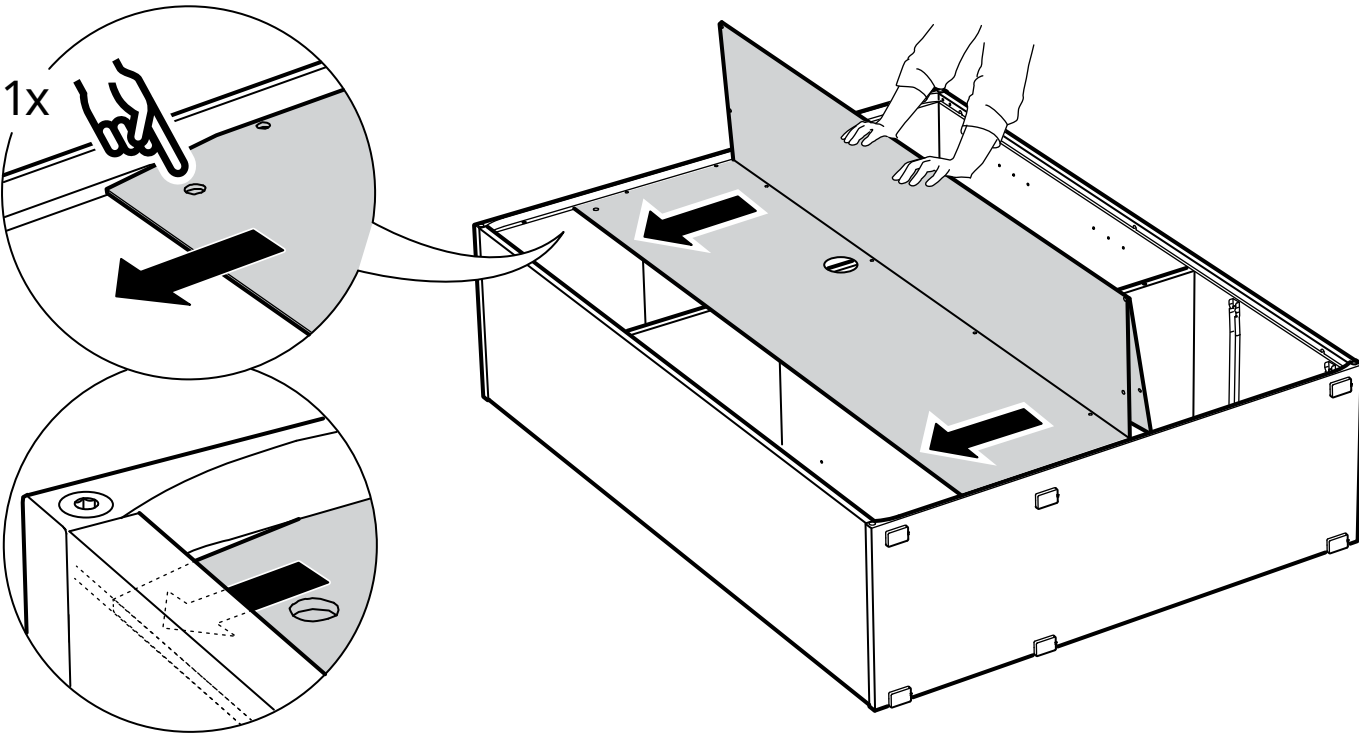 



12

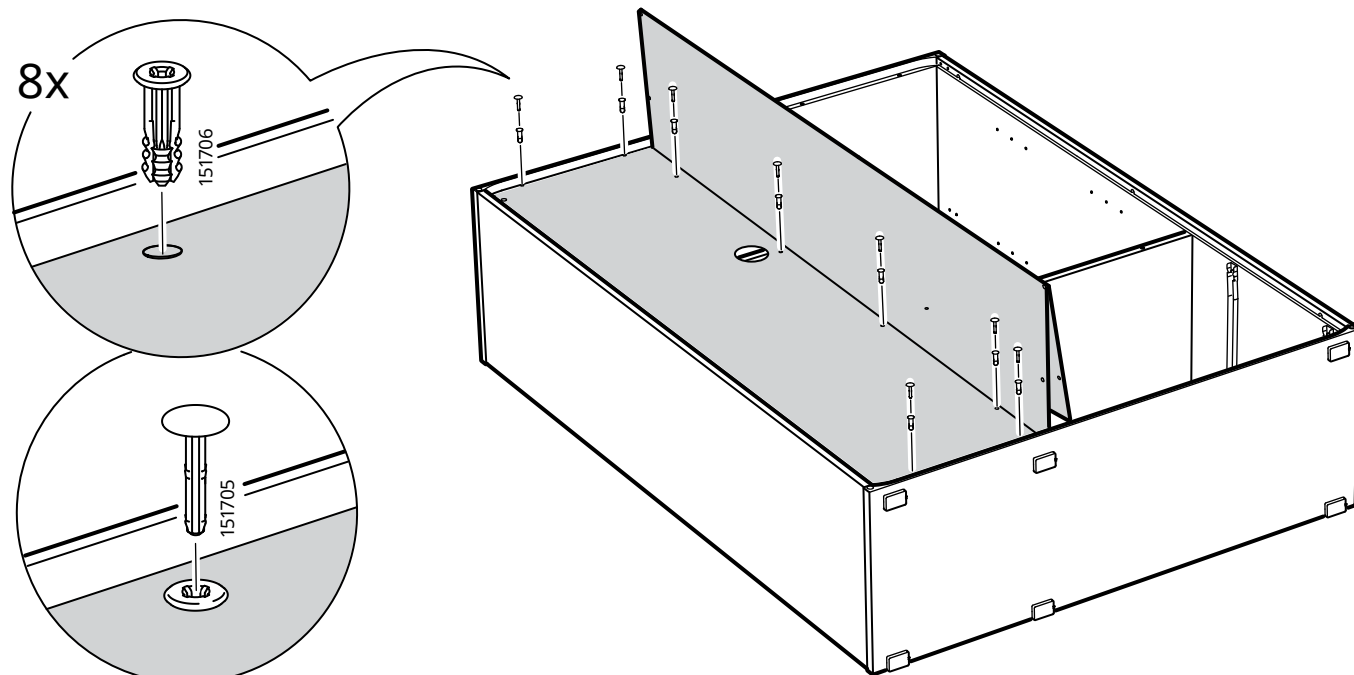 


13

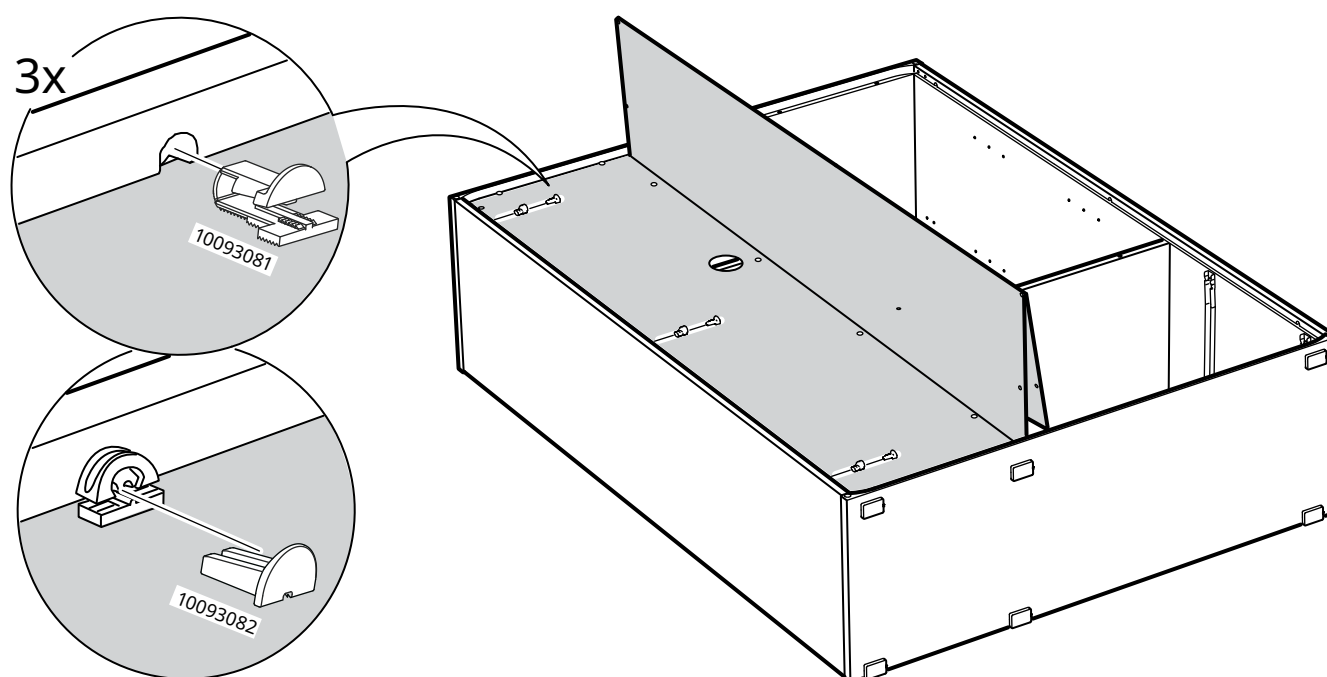 


14

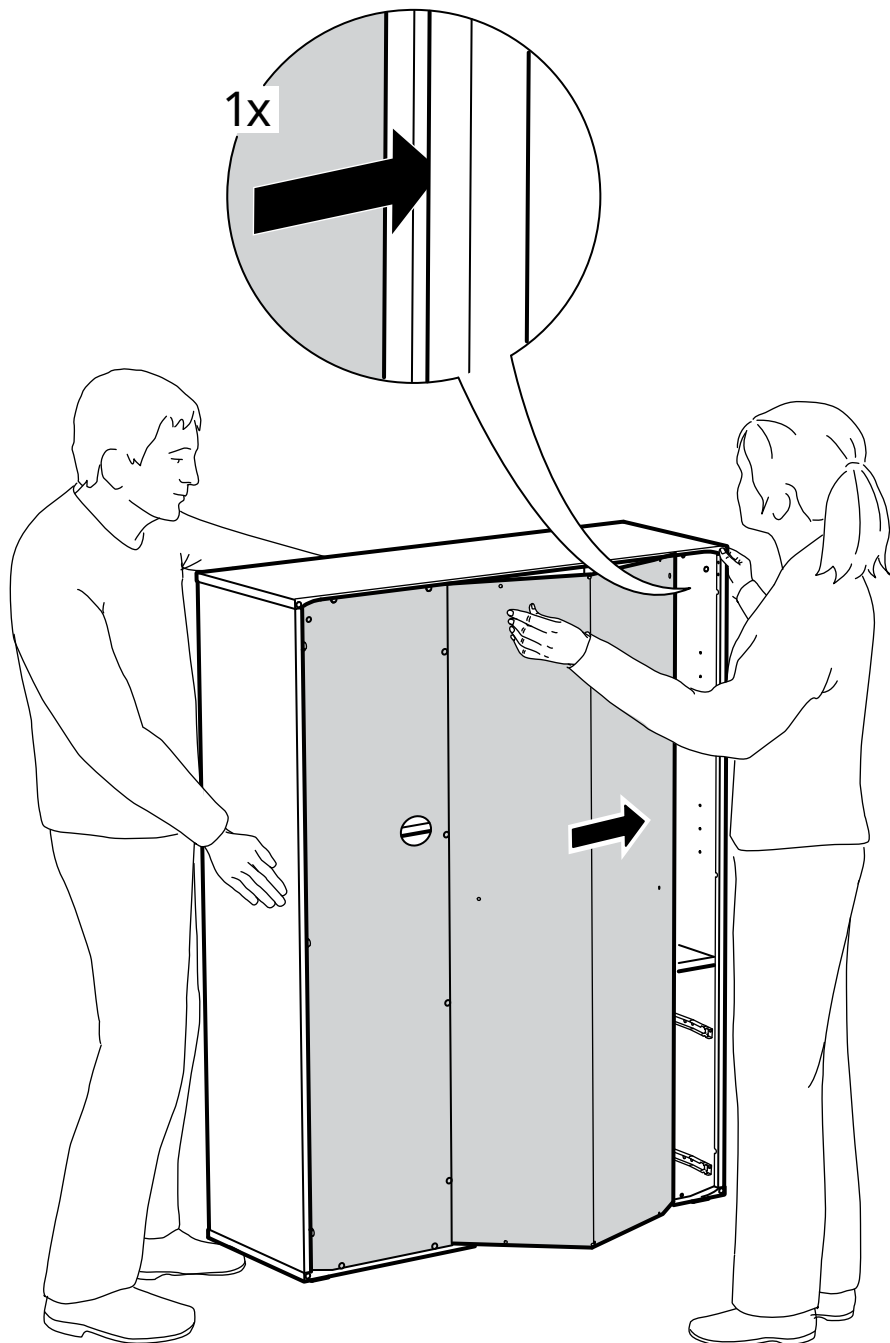 
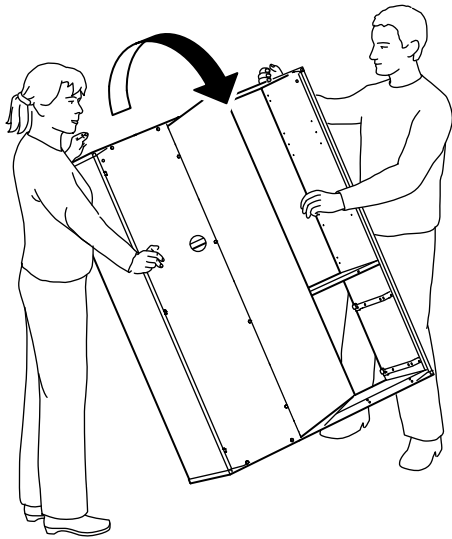 




15

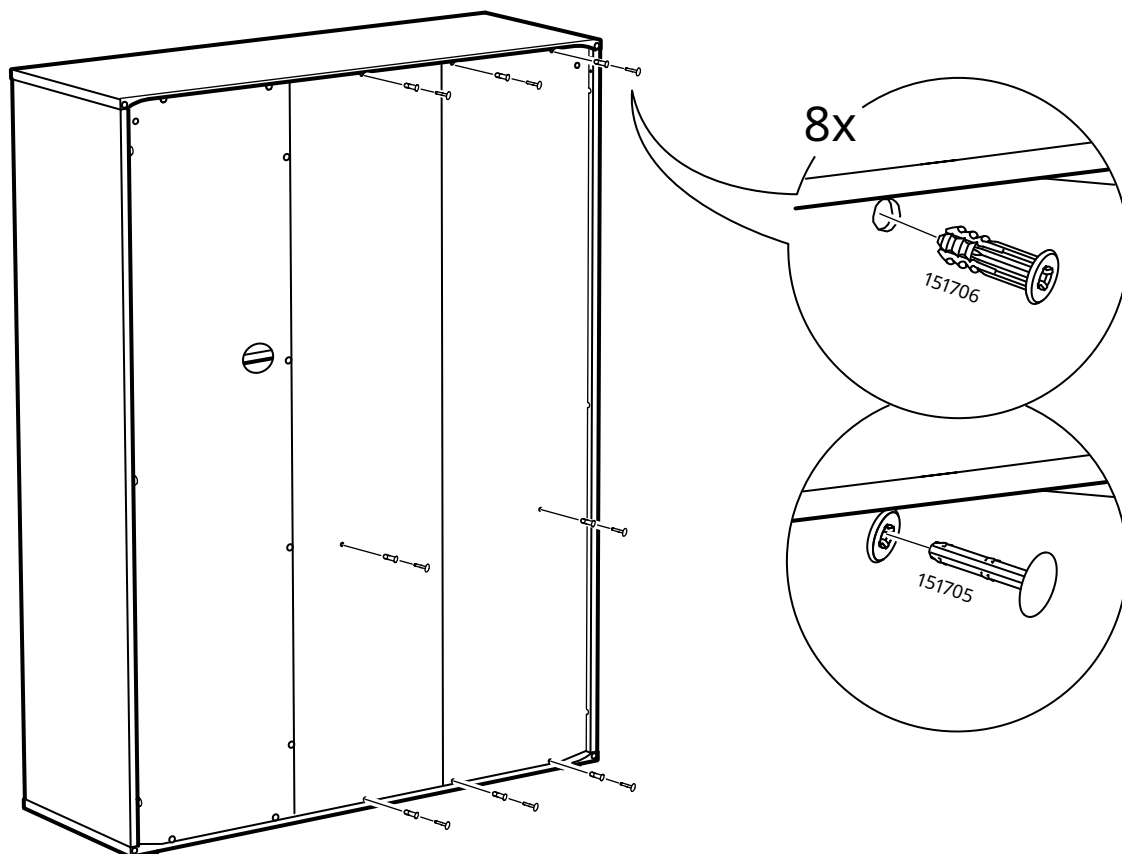 




16

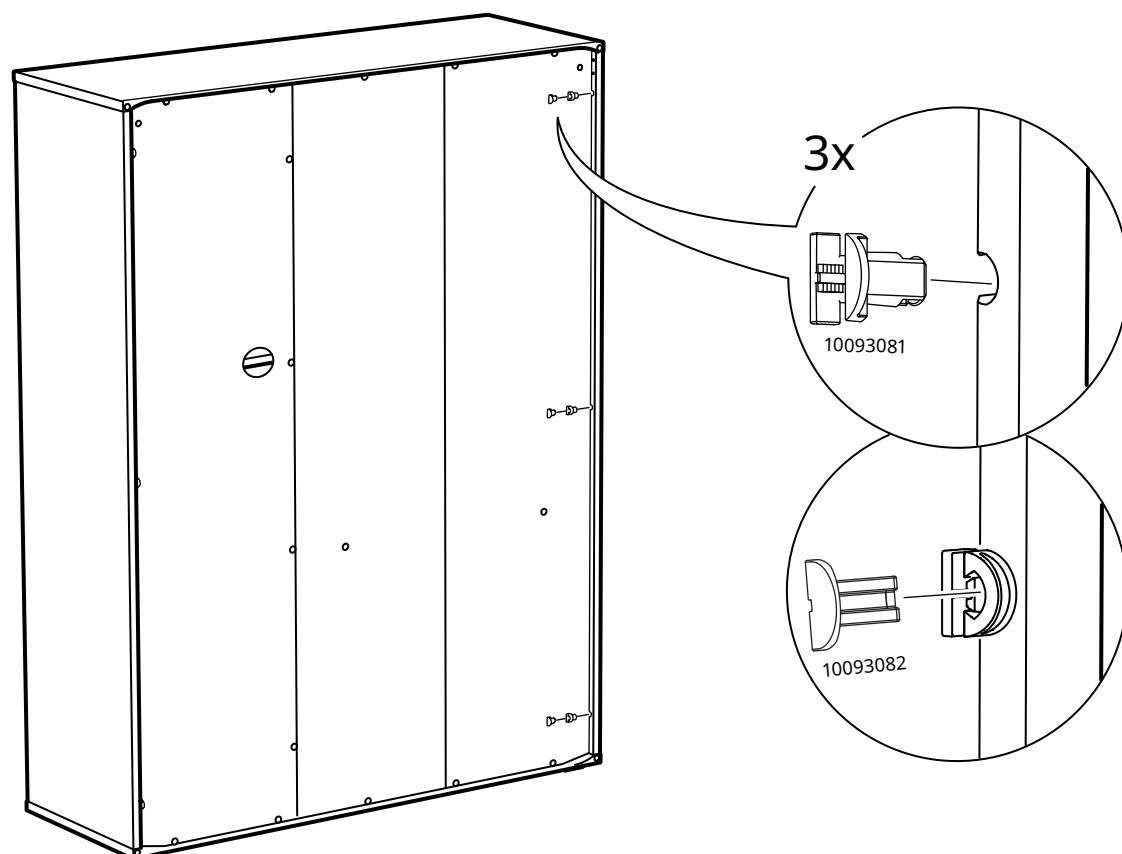 


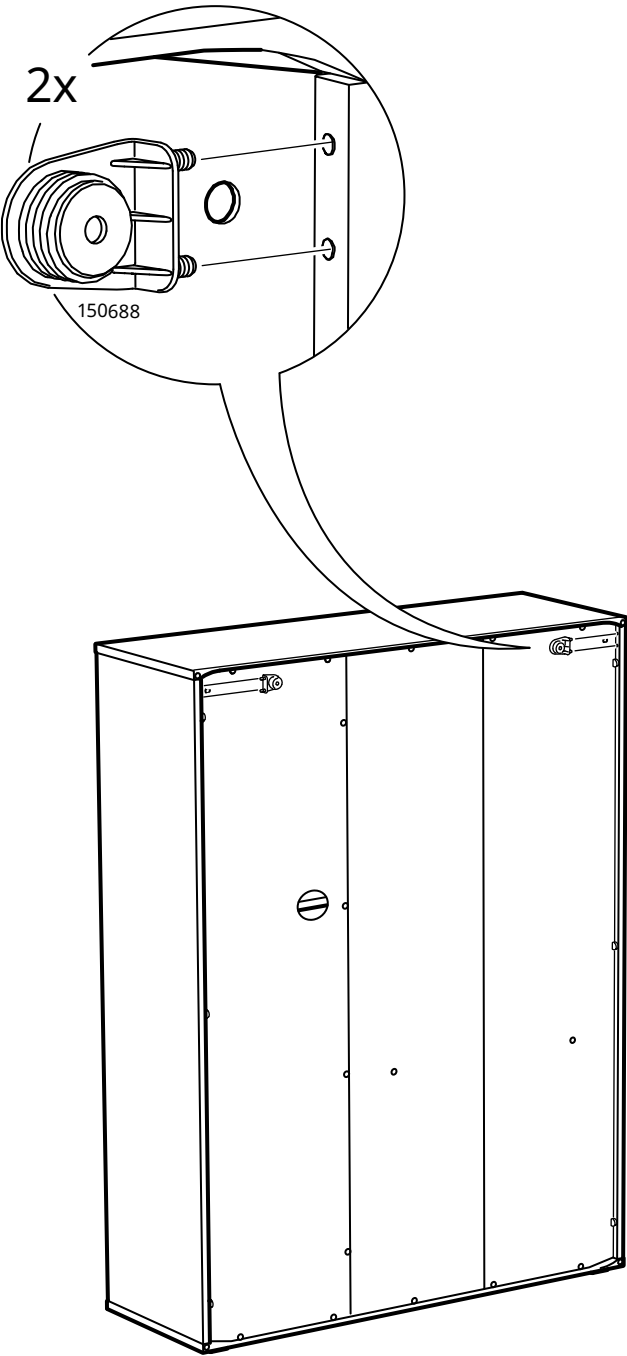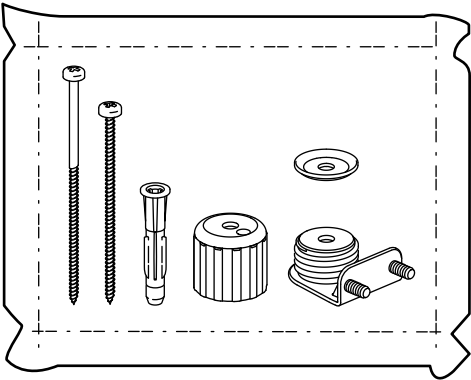  

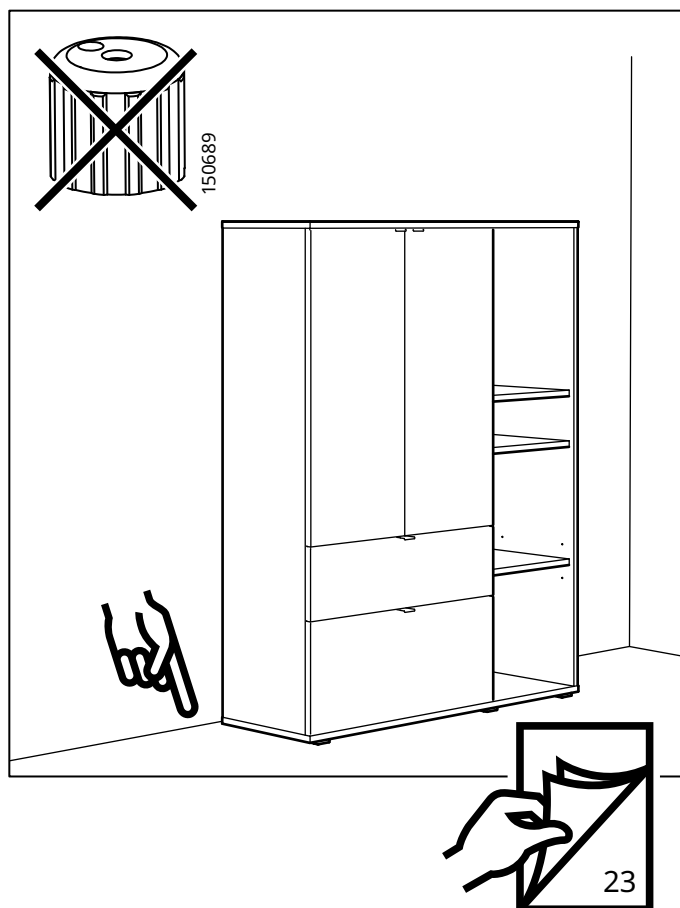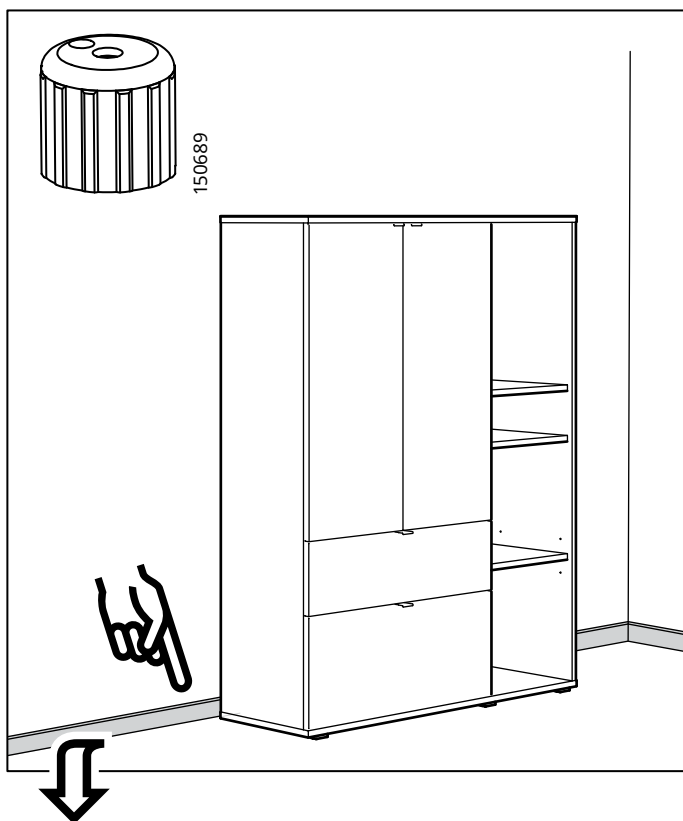  


18

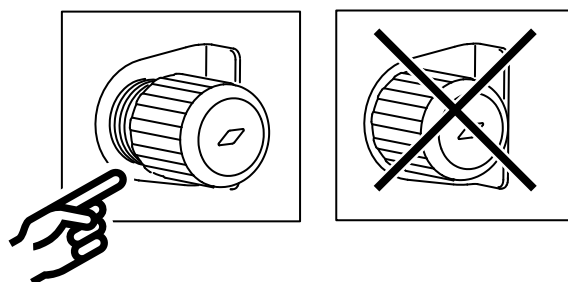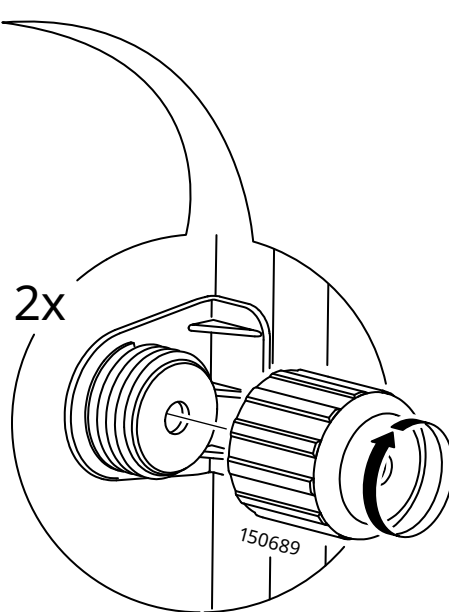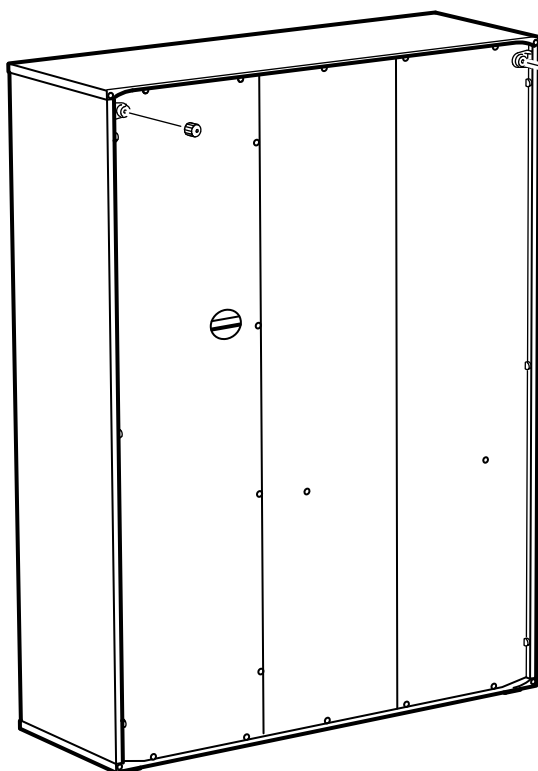   


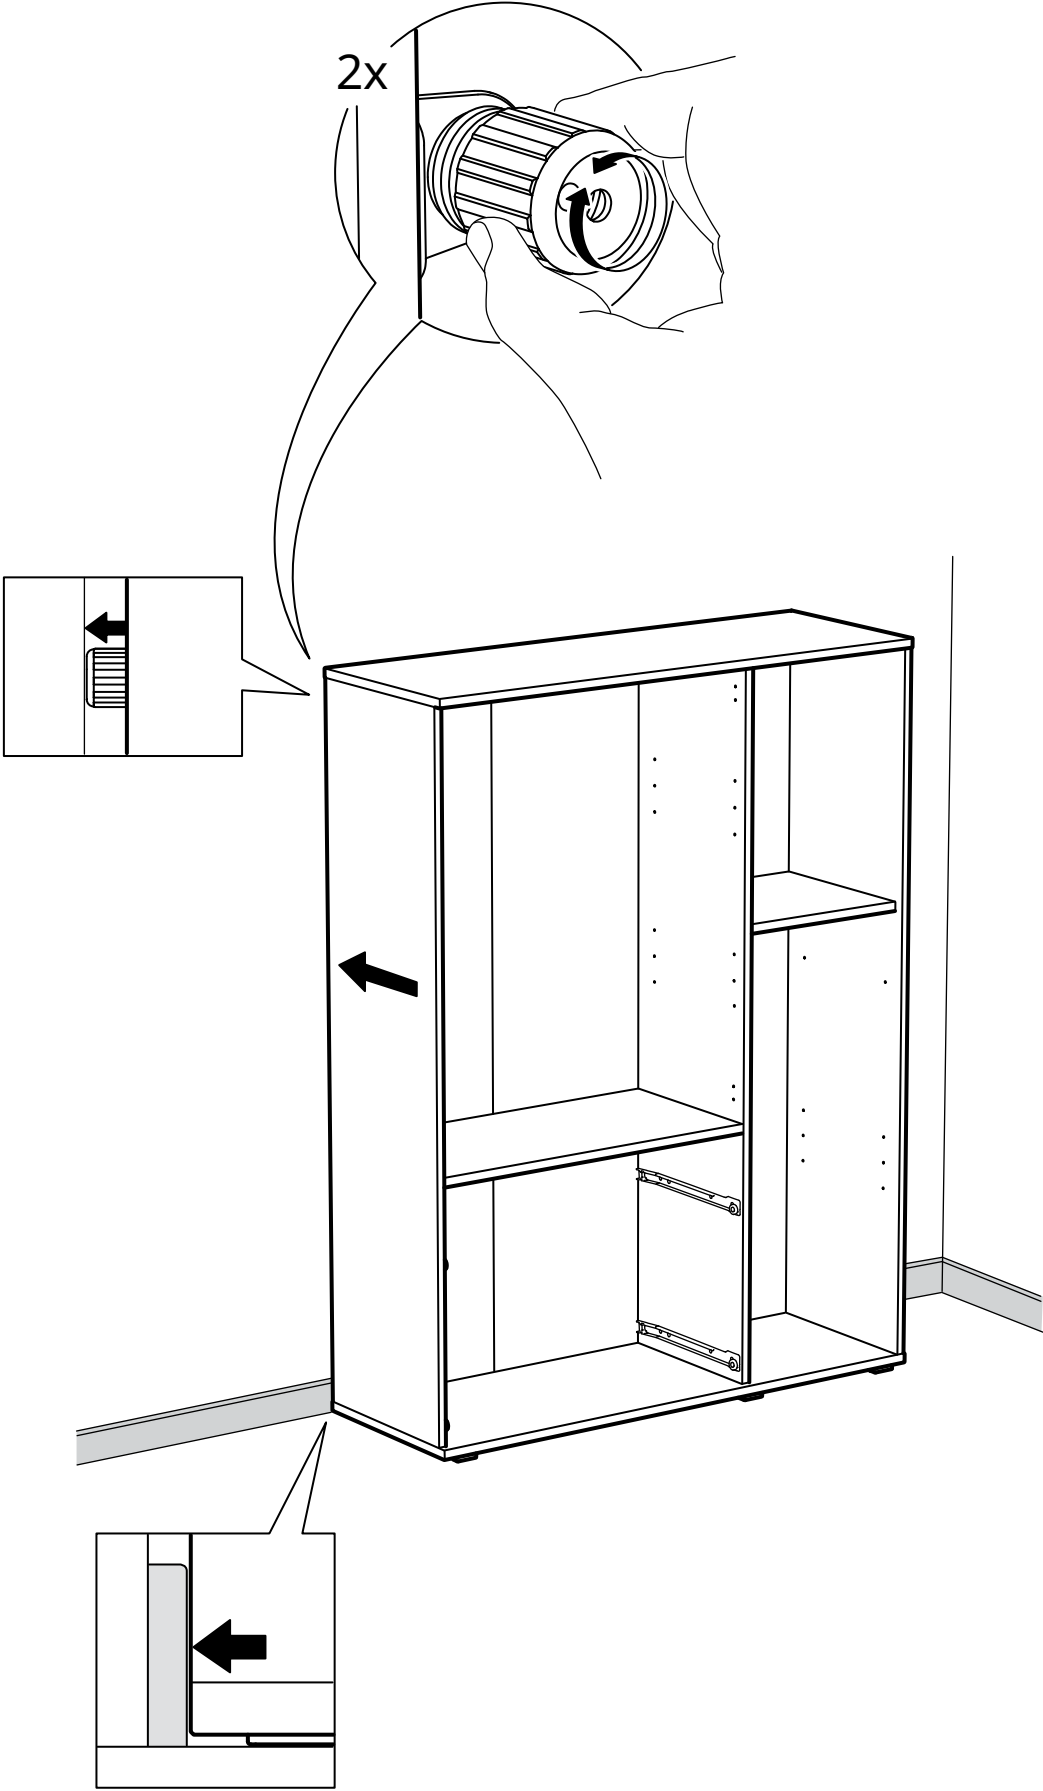 

20

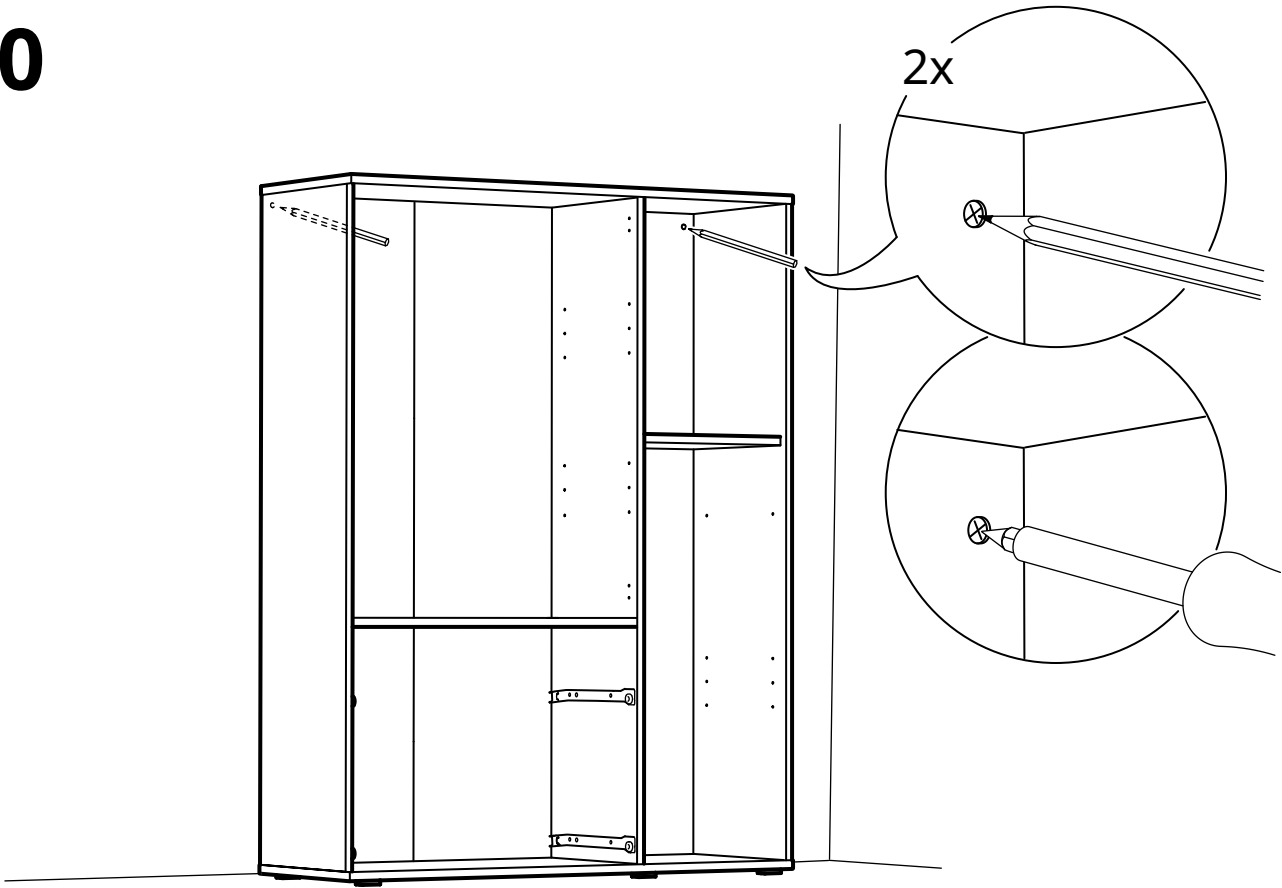 


21

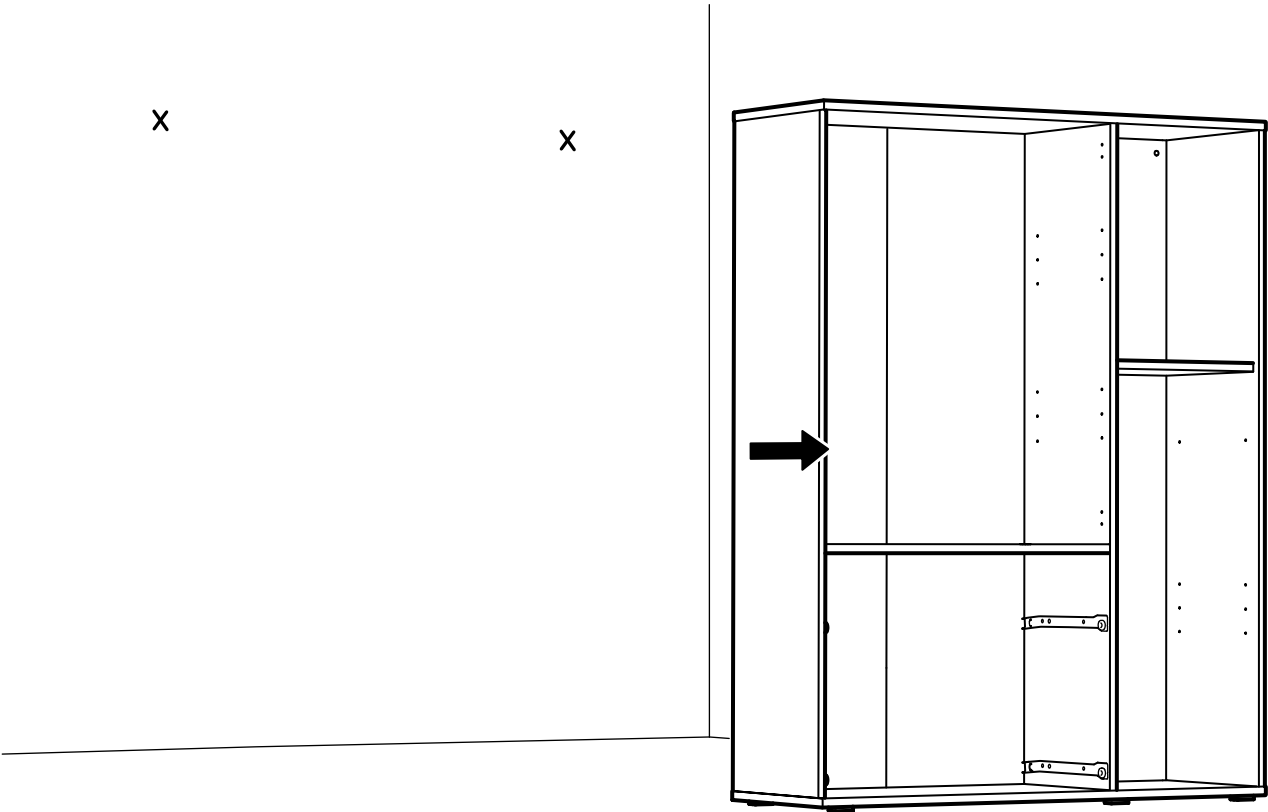 




www.IKEA.com/secure-it

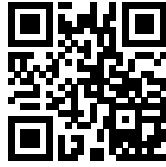 

www.IKEA.cn/secure-it

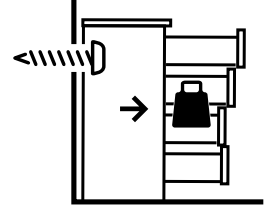 


22

English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

 
A

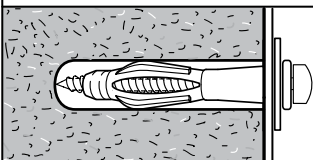


Ø 8 mm
(5/16")



 
1




2

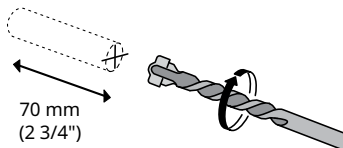 

3

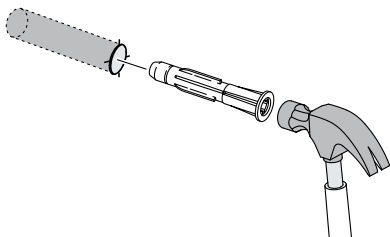 


B

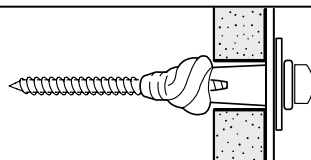 


Ø 8 mm
(5/16")



 
1




2

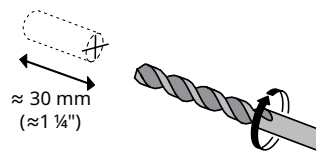 

3

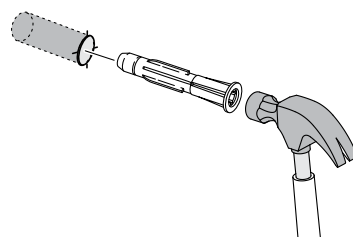 


C

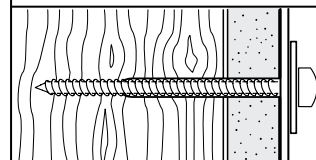 


Ø 3 mm
(1/8")




 
1





2


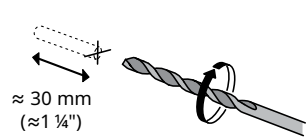 


3


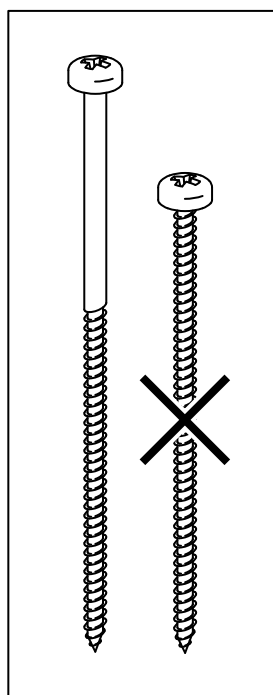 
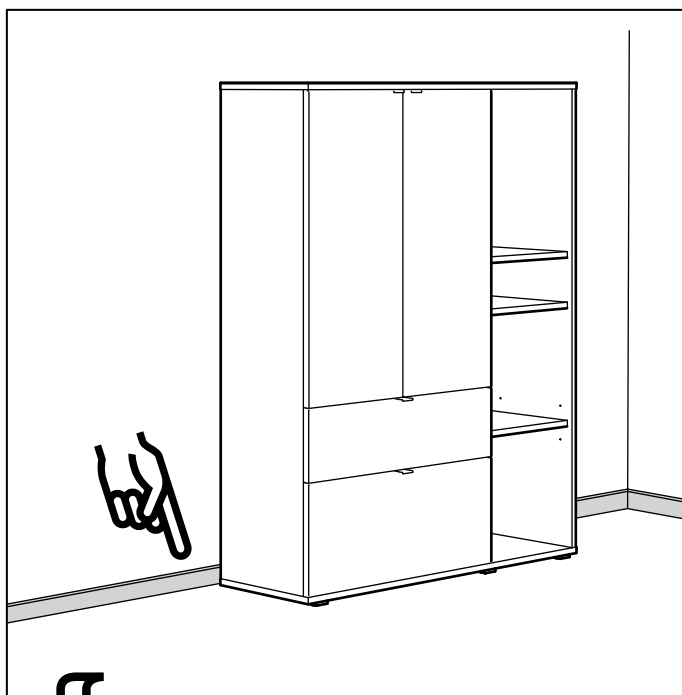 


⇕
23

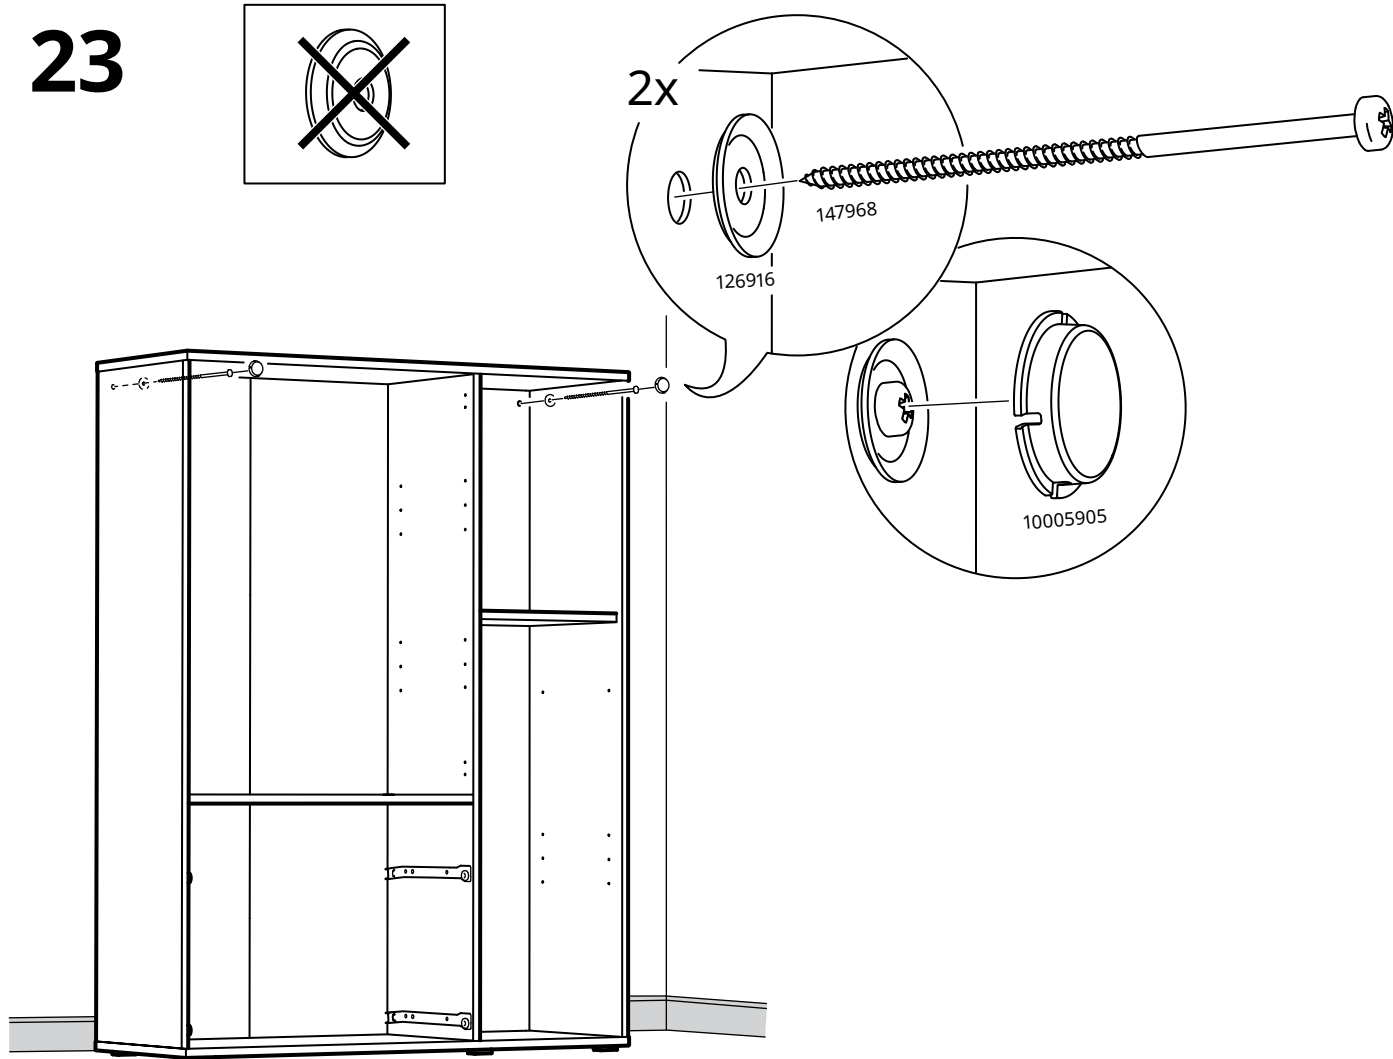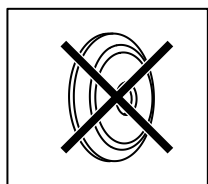  


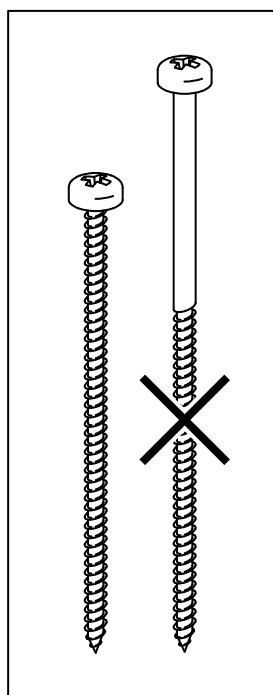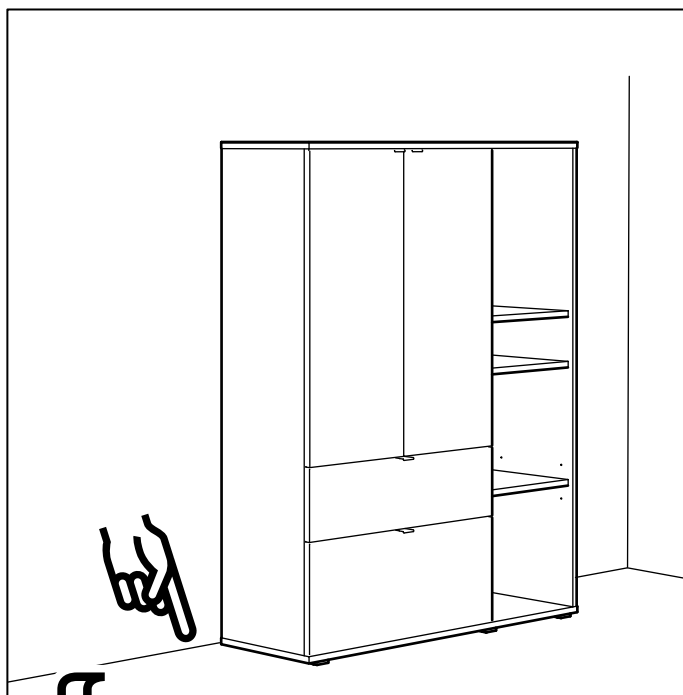  


23

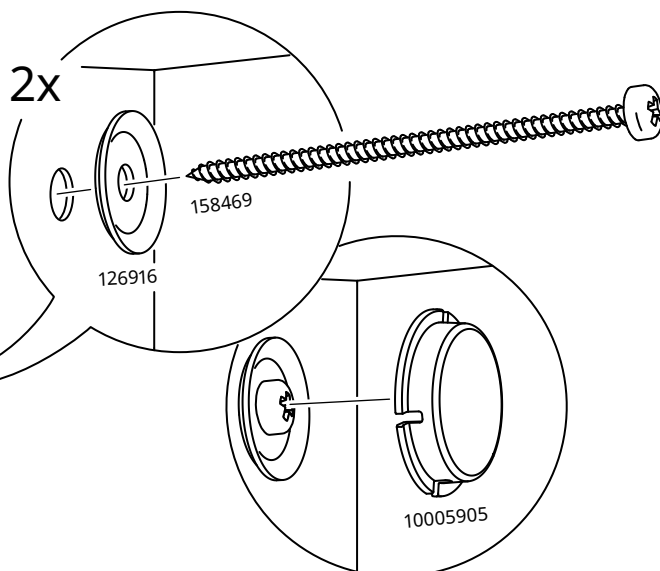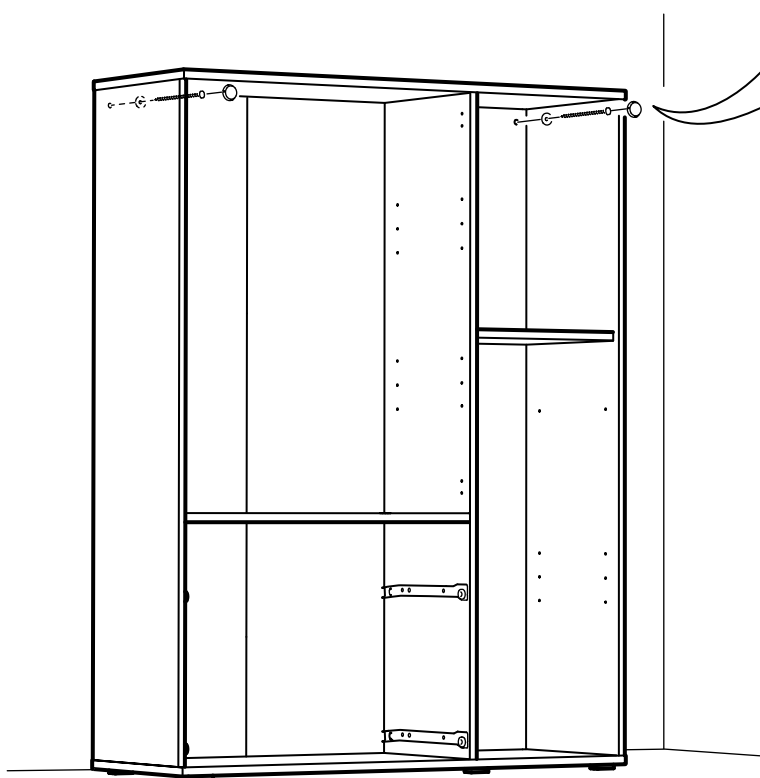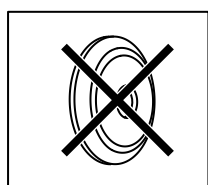   


24

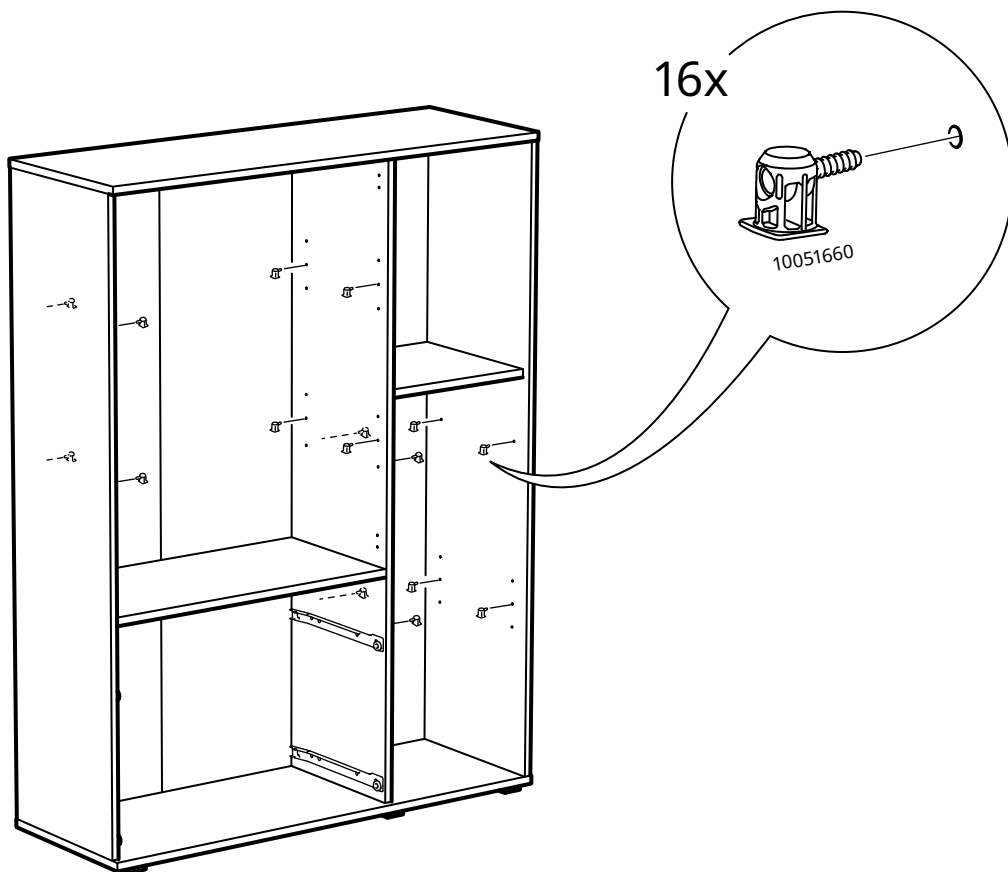 


25

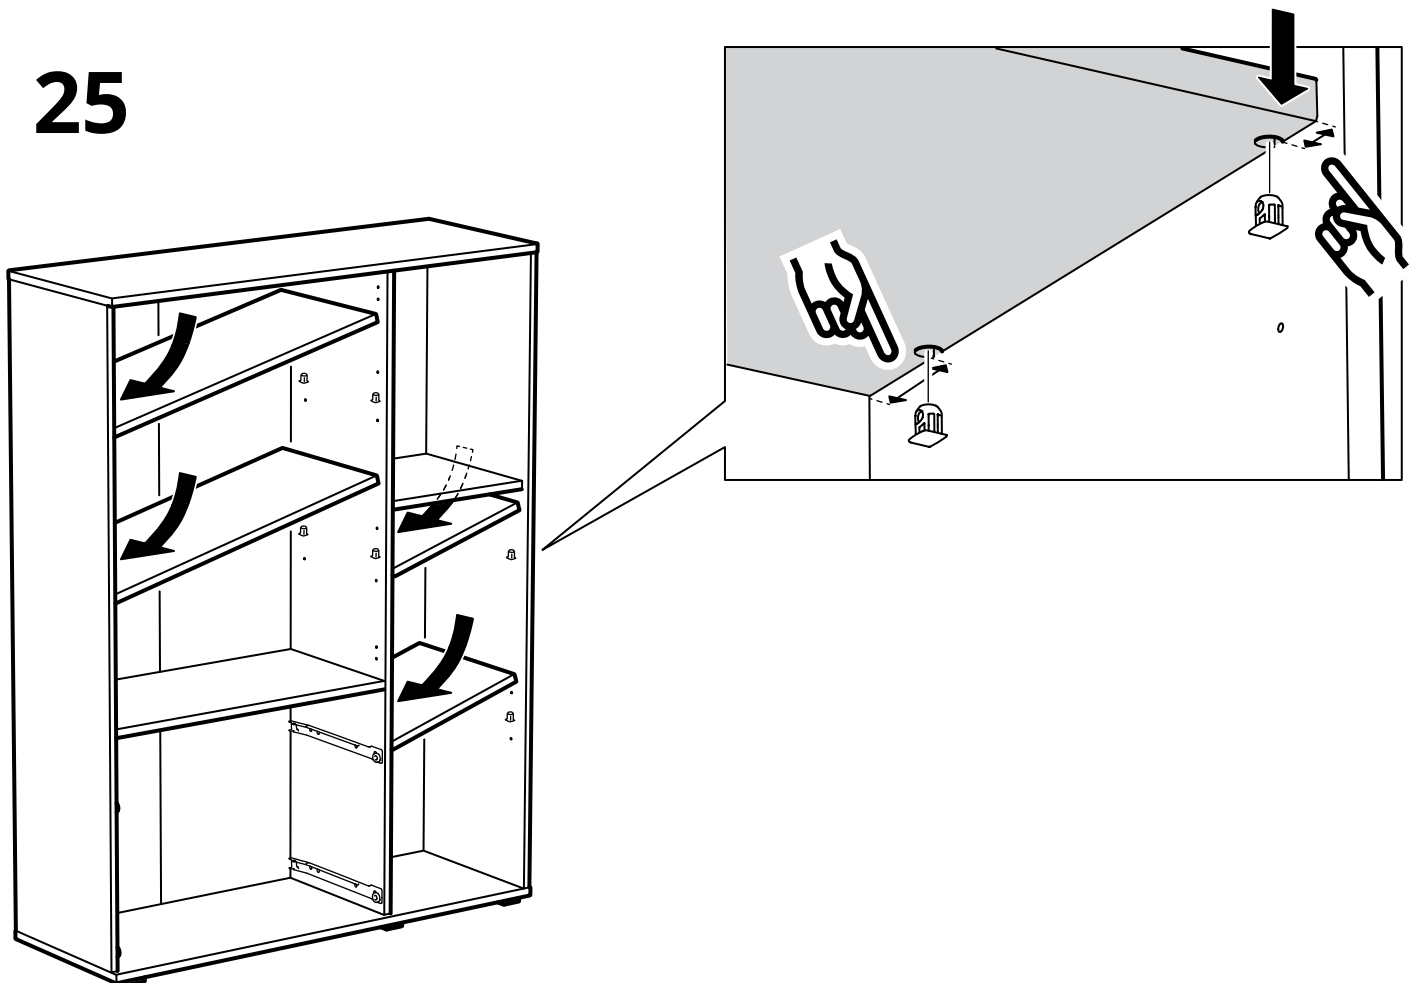 


26

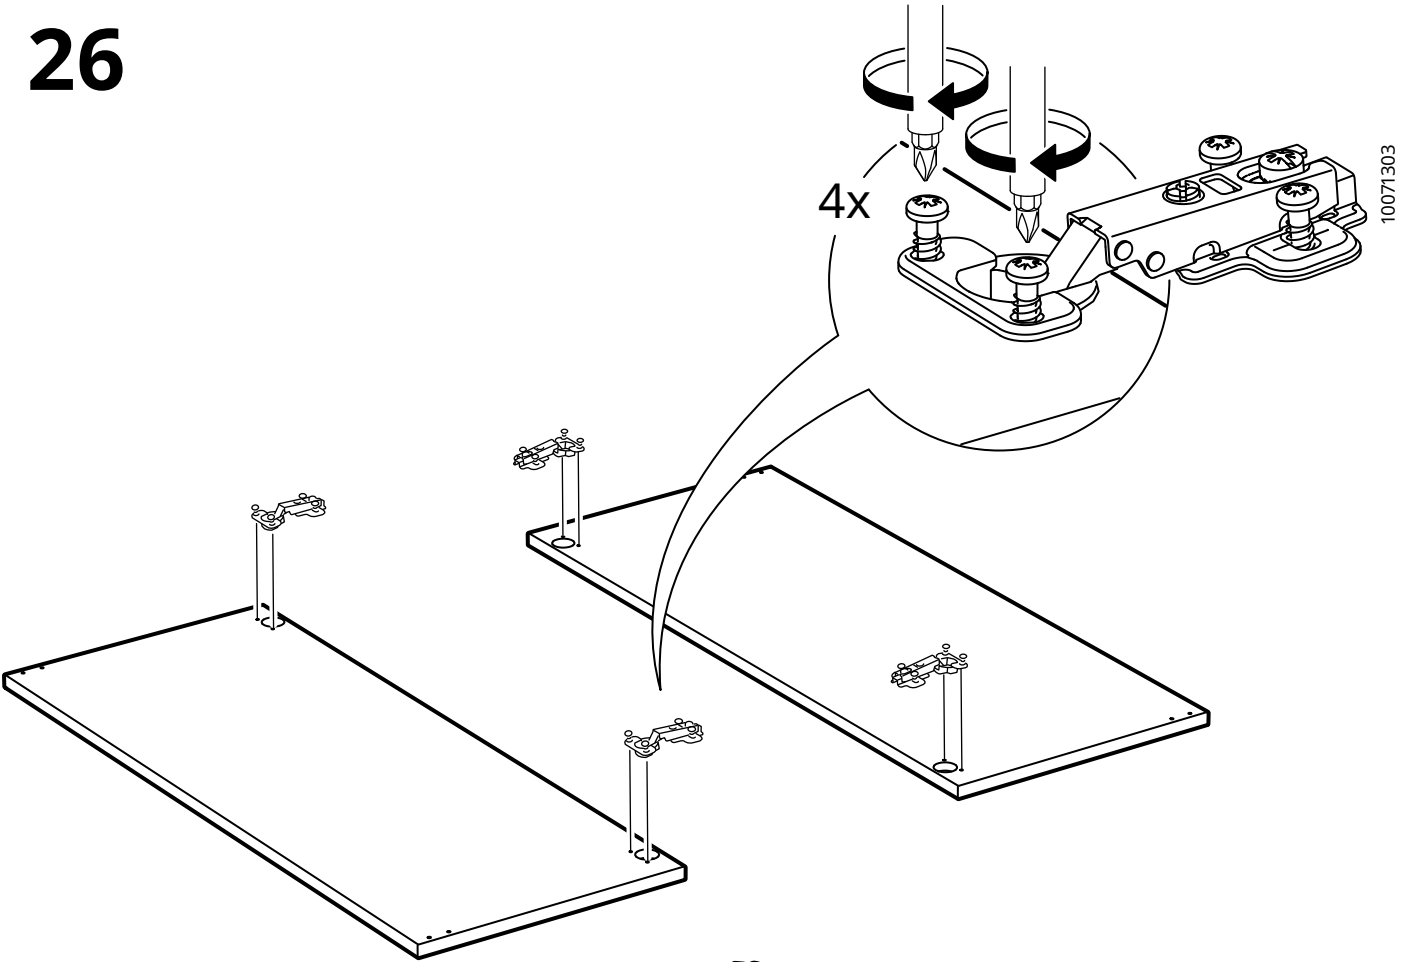 


27


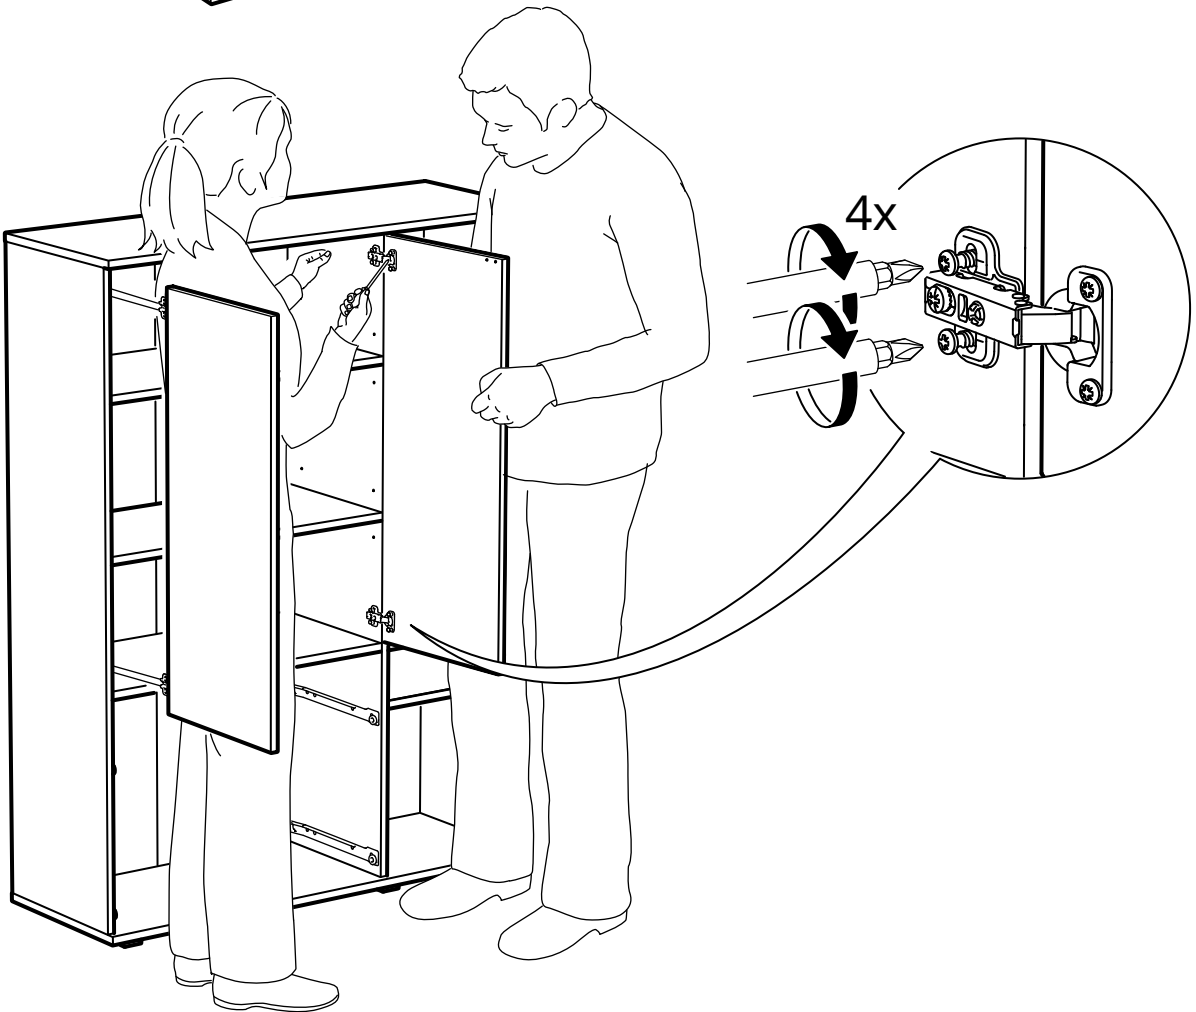 


28

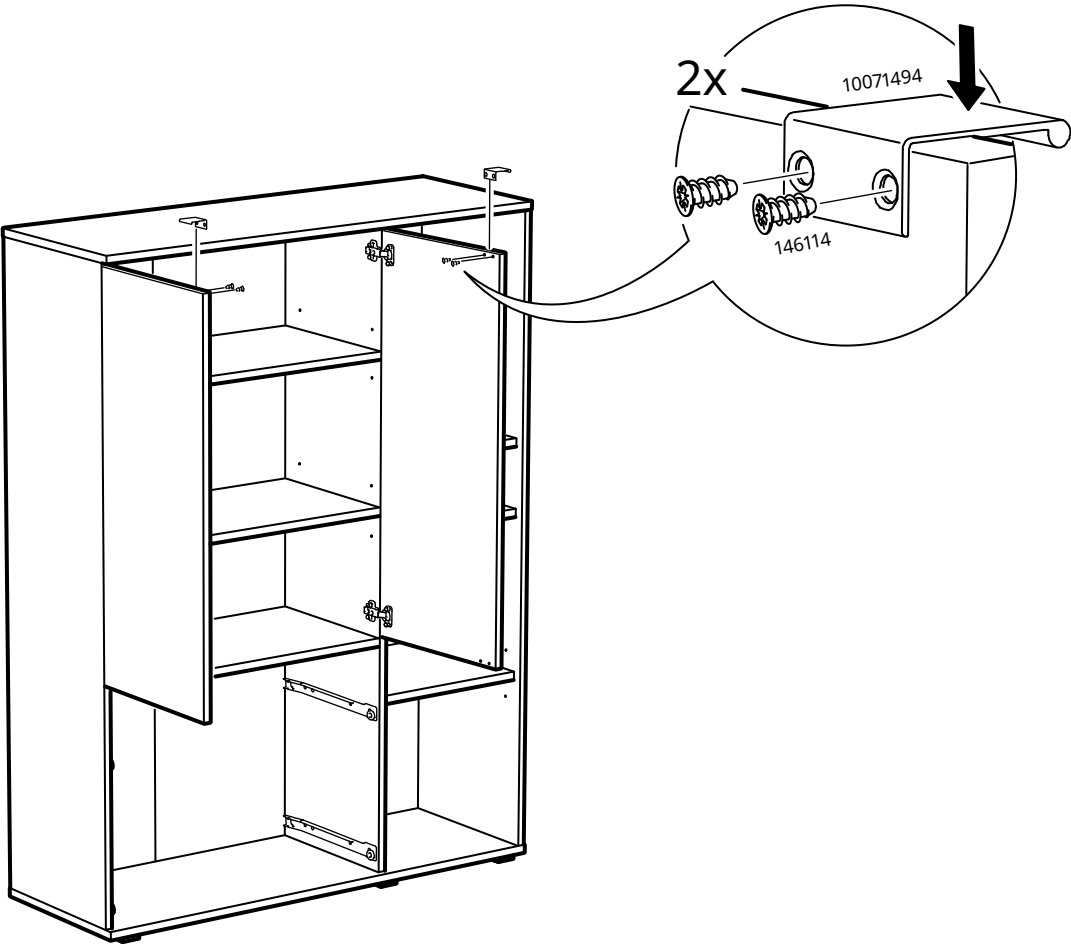 


29

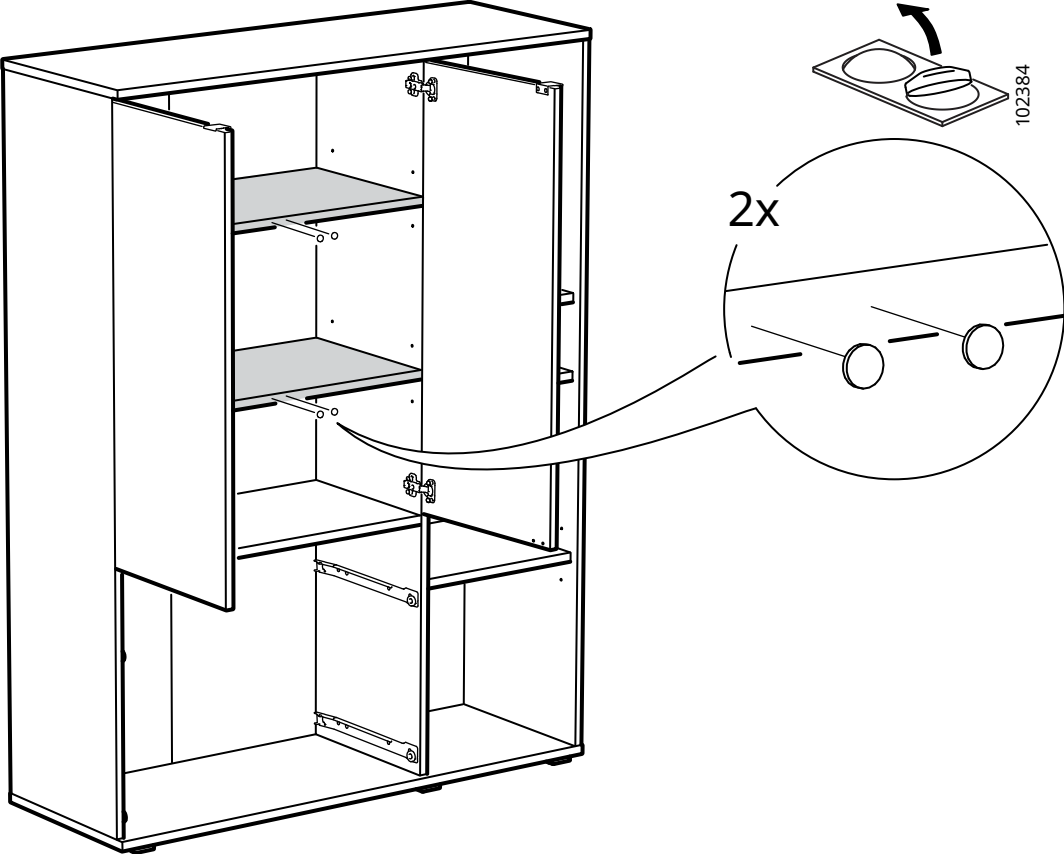 


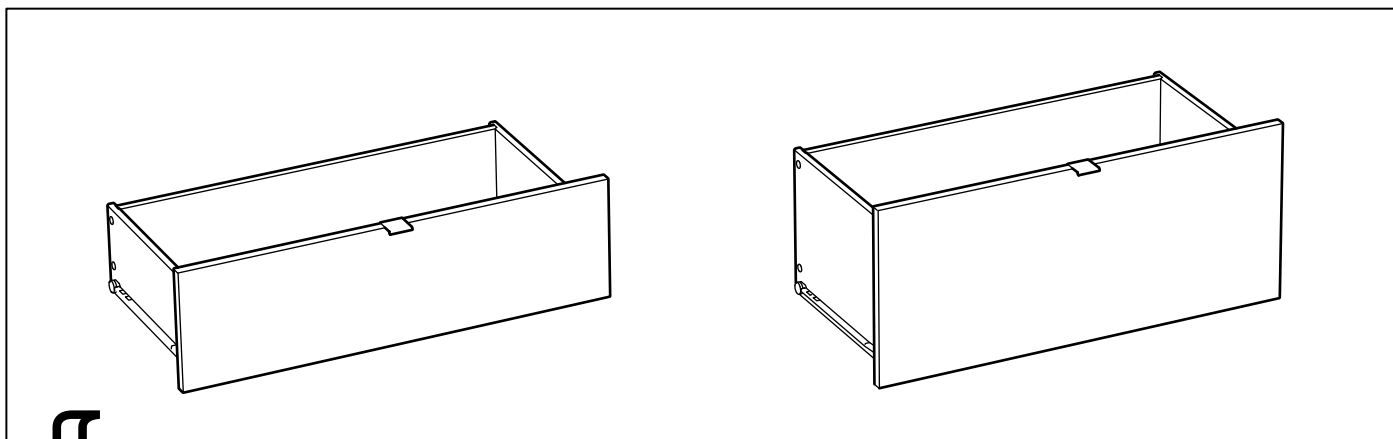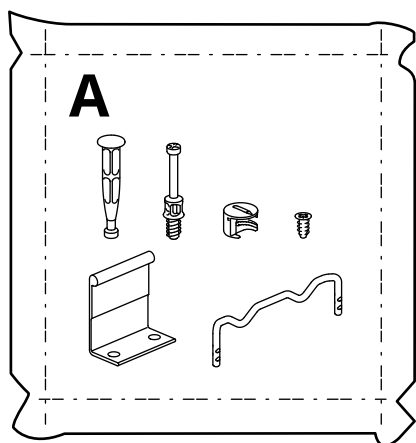  


30

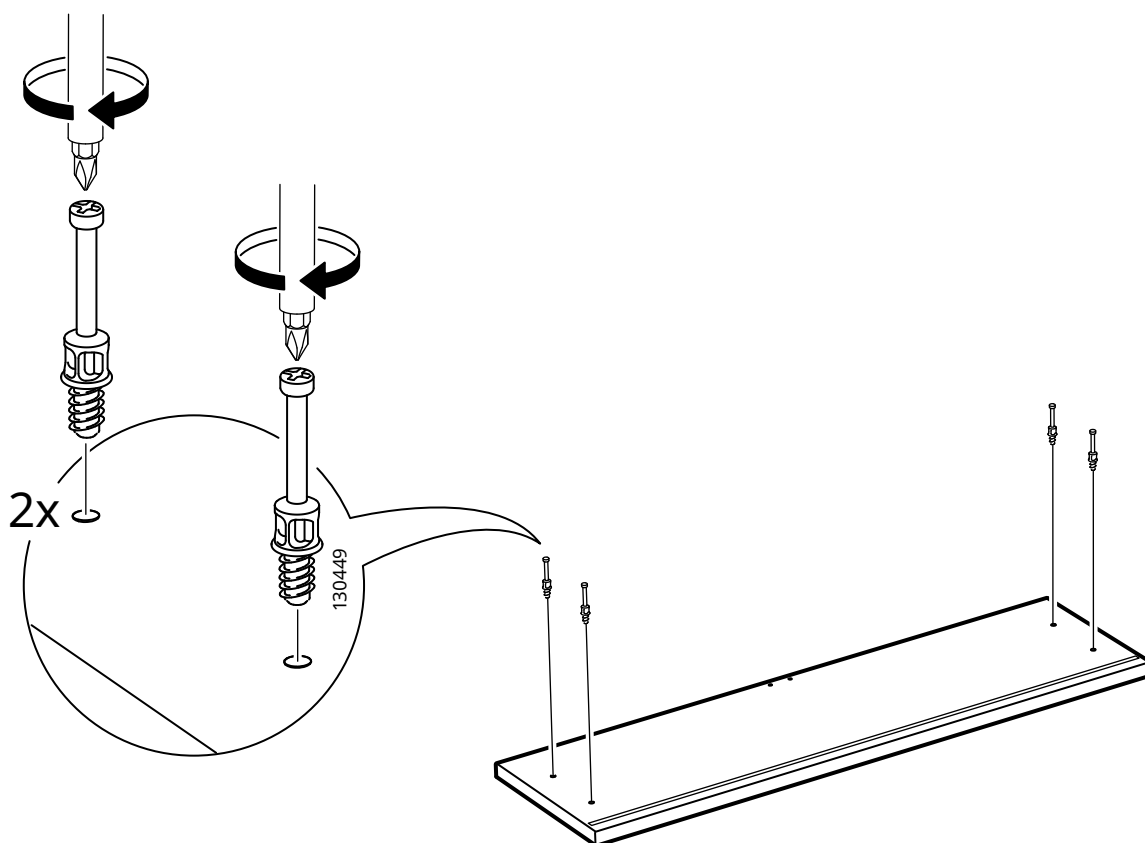 


31

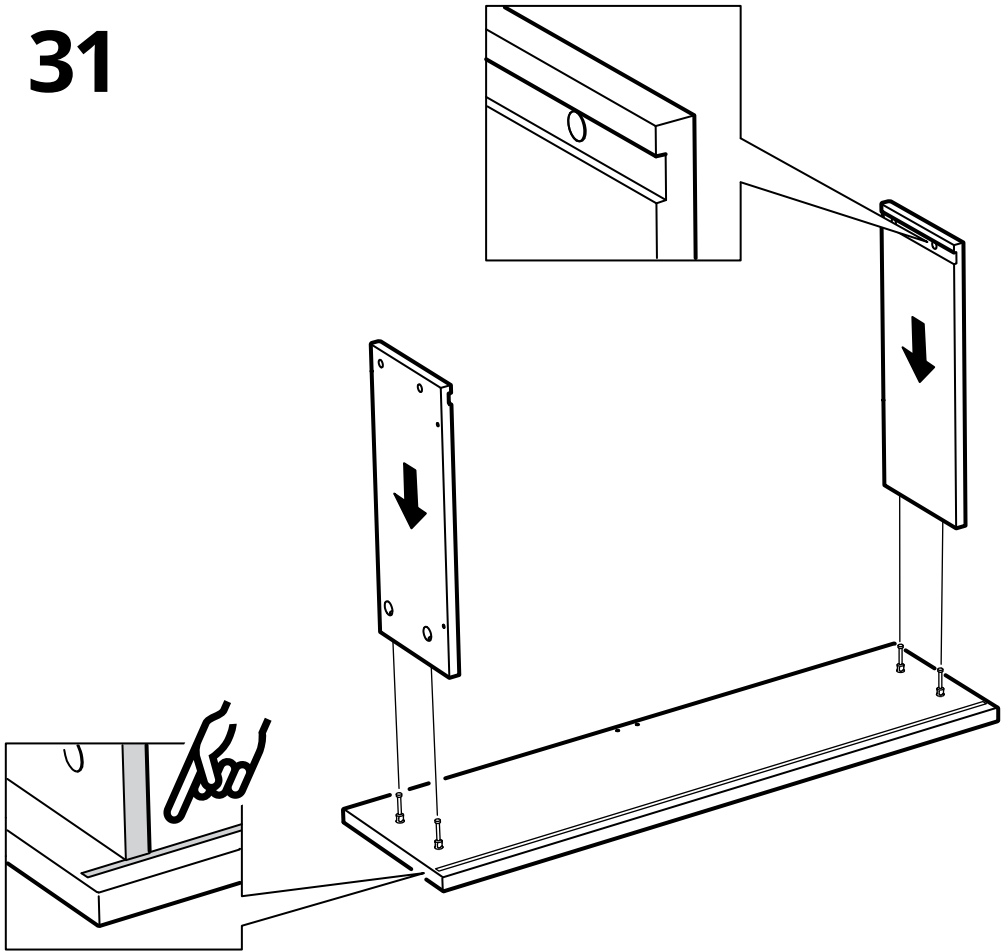 


32

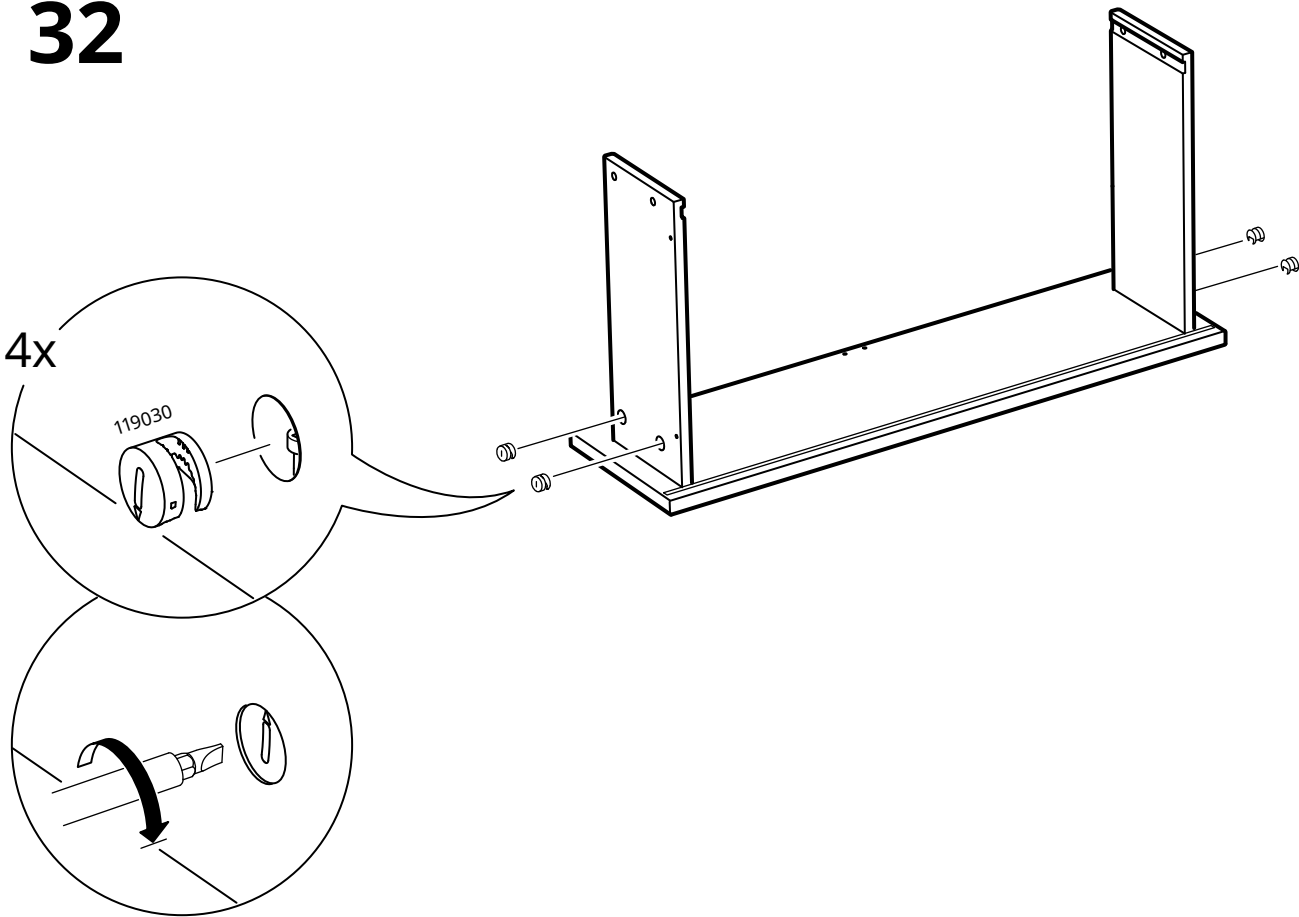 


33

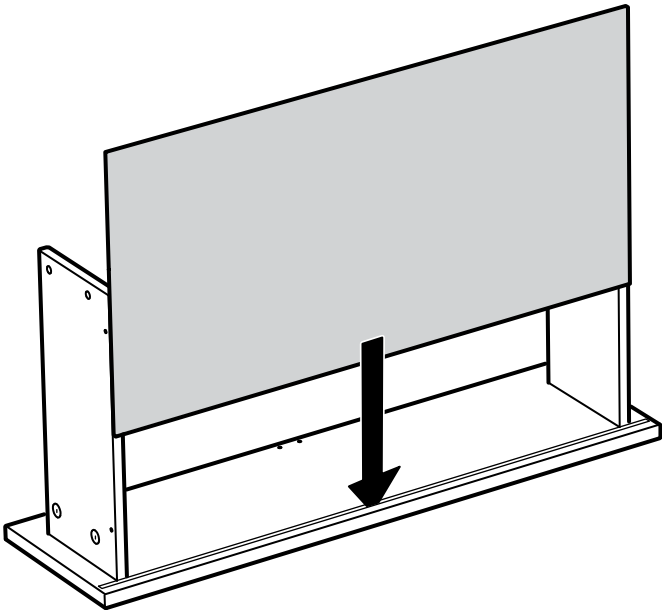 


34

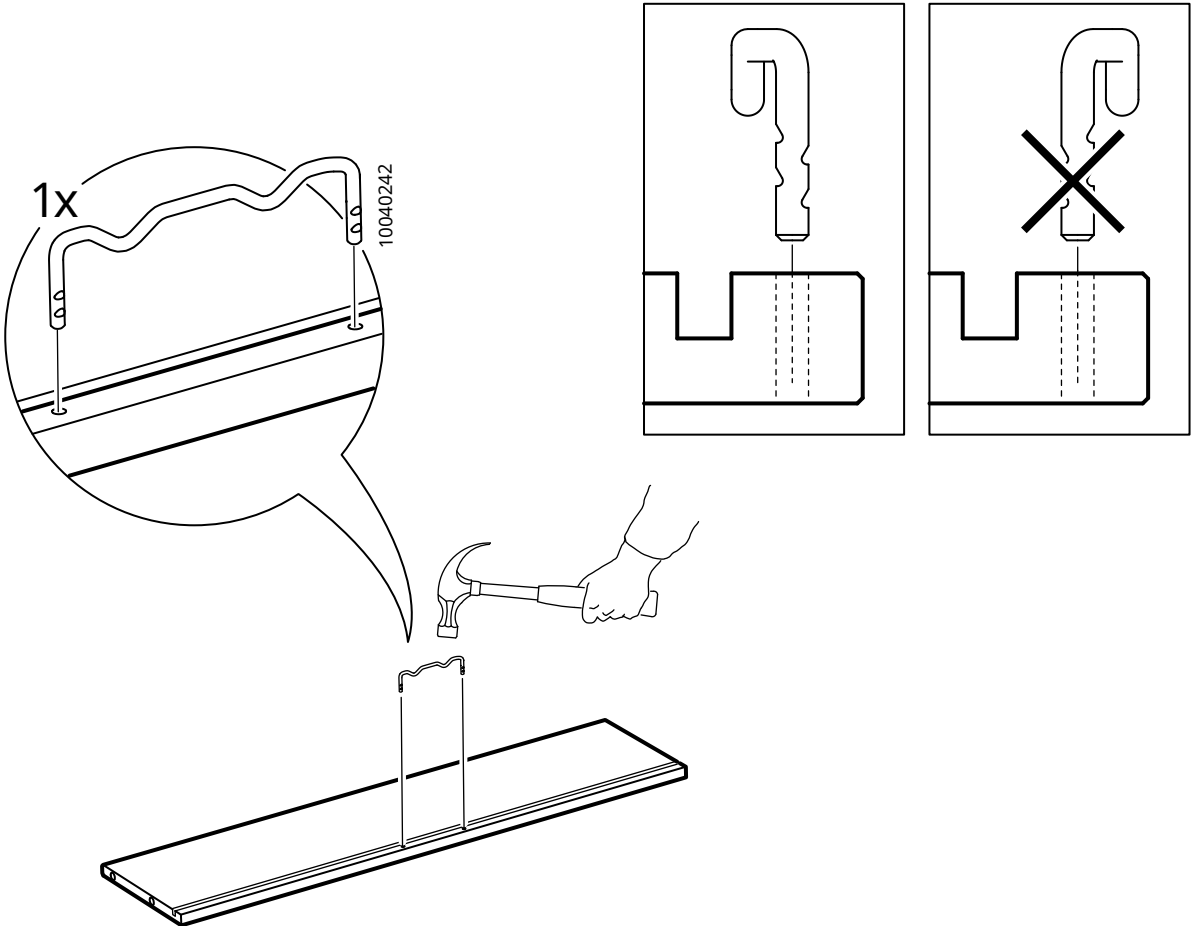 


35

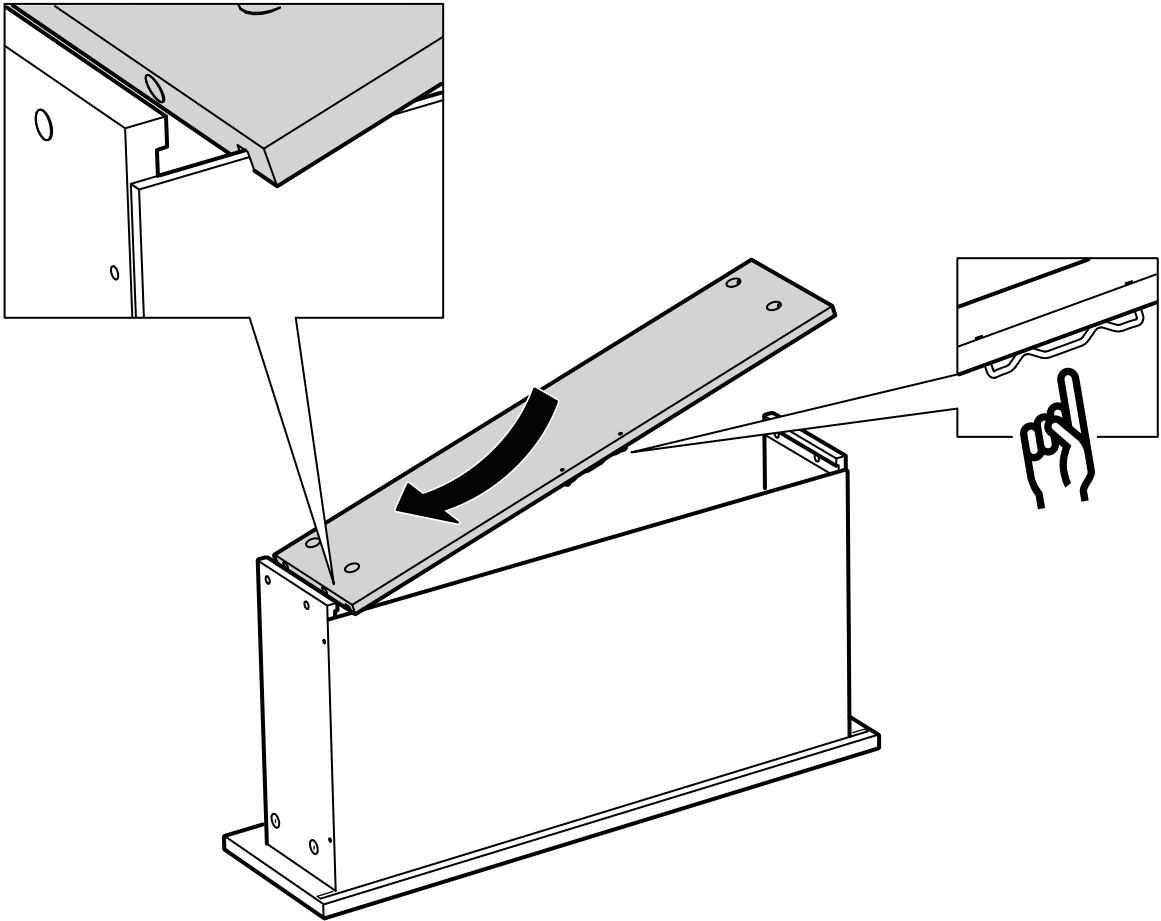 


36

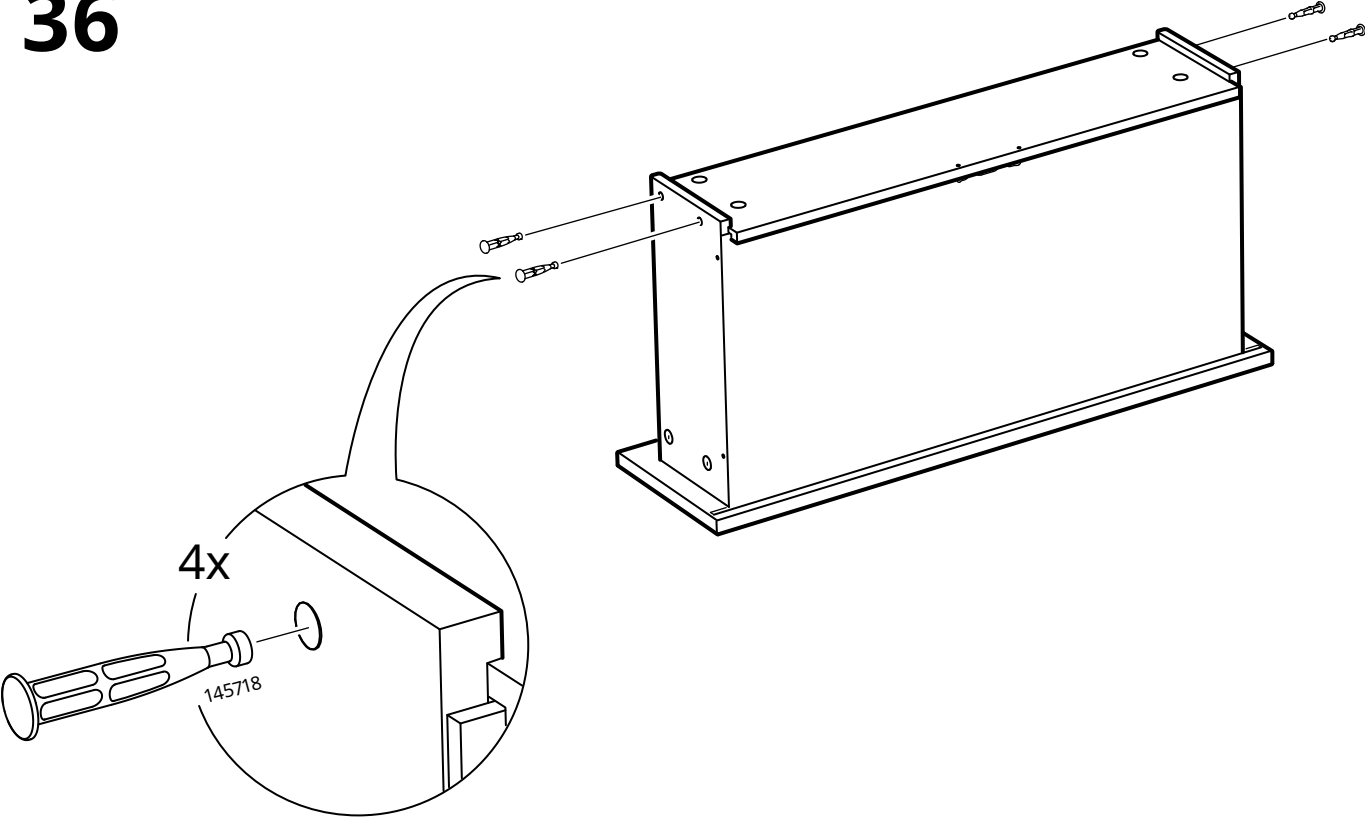 


37

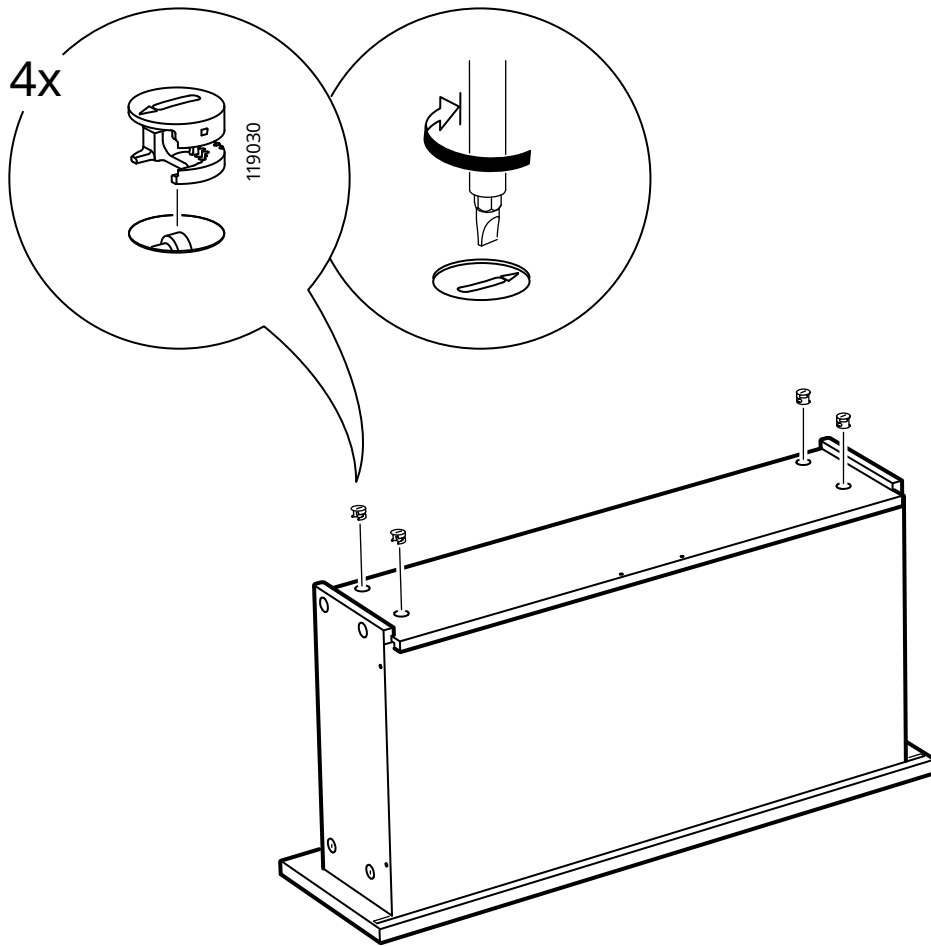 

38

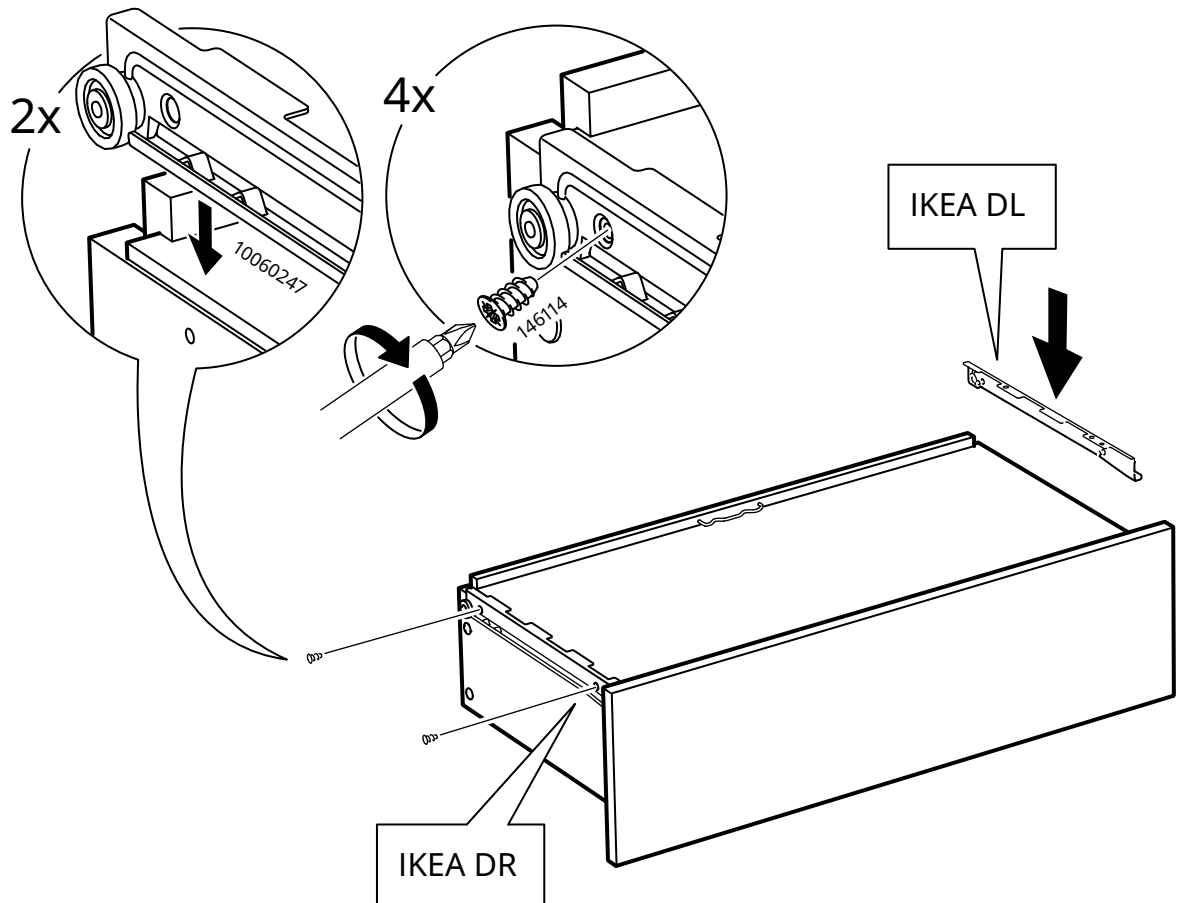 

39

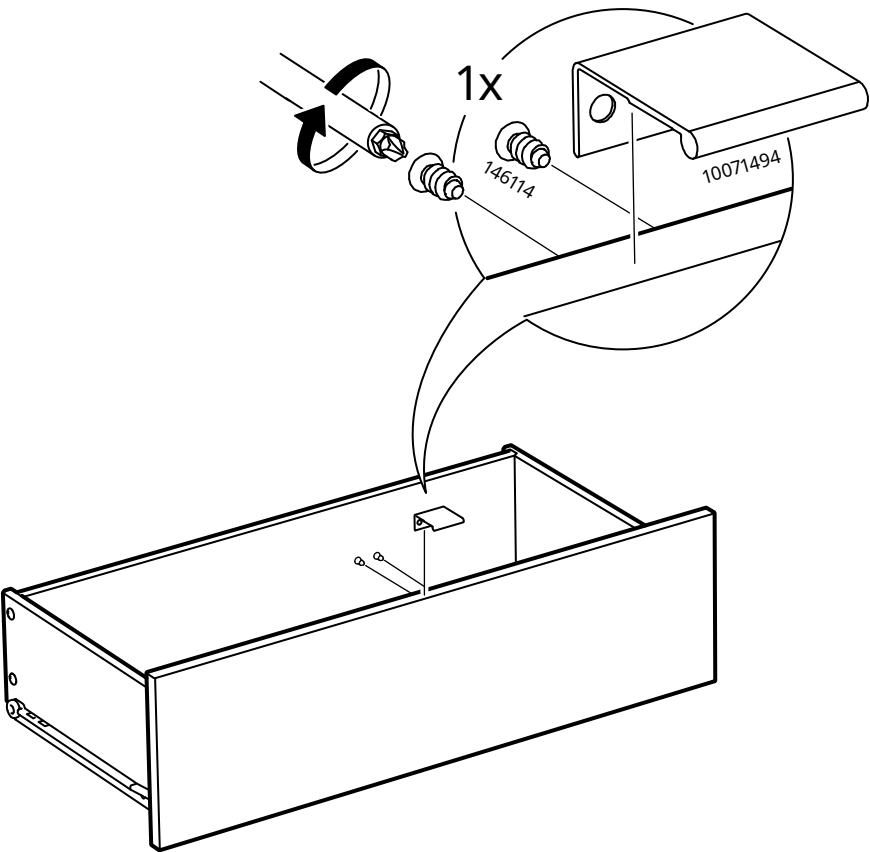 

40

