

# Bathroom showers

## Design

H Preutz/N Karlsson


### Care instructions

**Showers:** Clean with a soft damp cloth only using water and a mild washing-up detergent or soap. Never use scouring powder, steel wool, a de scaling agent or a detergent that is acidic or contains alcohol or an abrasive. To remove larger lime scale deposits – use diluted, ordinary white vinegar and rinse with water.

**Shower door/screen:** Remove lime scale stains using a small amount of lime dissolving solution, e.g. vinegar or lemon juice. Then clean again with a damp cloth. Do not use scouring-powder, steel wool, hard or sharp tools which can scratch the surface.

### Good to know

Wall fittings are provided with the product. If you are uncertain about the installation, contact a professional. The installation shall be made in accordance with valid local building and plumbing regulations

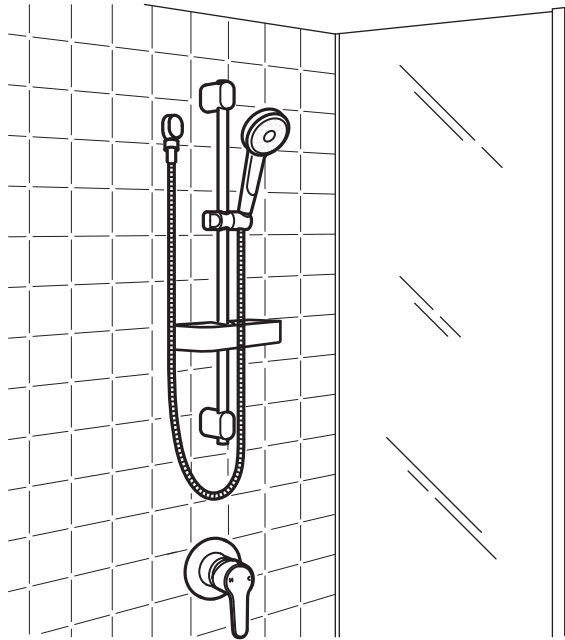

## Safety

The thermostatic mixer is preset to a safety stop temperature of 38°C. Since operating conditions in each supply system varies, it might be necessary to calibrate the mixer according to the service and installation instructions.

10

All shower mixers, shower door, shower screen and shower tray have a 10-year guarantee. Read more in the guarantee brochure.


3

All the riser rails, head/hand showers, hoses, parking bracket, shower shelves and OPPEJEN wipers and door seals have a 3-year guarantee. Read more in the guarantee brochure.

### Everyone deserves a refreshing shower

The IKEA showers are fully coordinated, with everything you need for a great shower experience: mixers, shower heads, hand showers with different spray functions and bathroom accessories, all in the same family. Complete your bathroom with shower door and screen to create the perfect shower area. All IKEA showers are equipped with water and energy-efficient shower heads and hand showers. This is achieved by having a flow regulator, which reduces the water flow. You'll save water and energy compared to a shower without a flow regulator. Everyone deserves a refreshing shower experience every day. And what can be more revitalising than knowing you can save water (and money on your water and energy bills) at the same time? Just pick and choose the shower function you need in your bathroom.



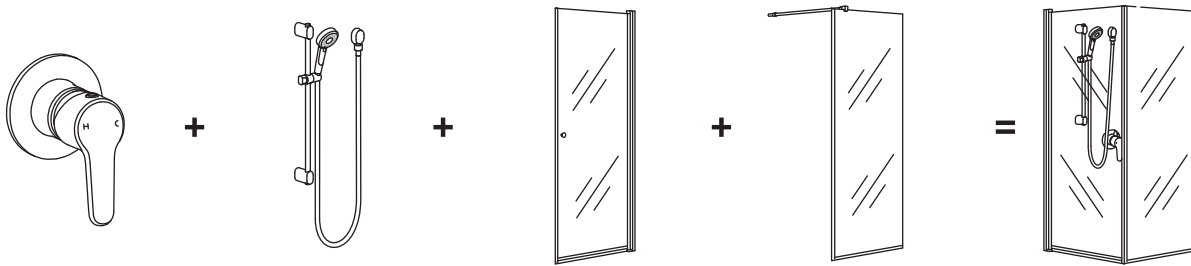






 





 
 
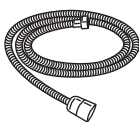

# How to build




1. Here are a few practical steps to help you choose the right product for a great shower experience. Before the purchase consider what shower needs you have in your bathroom. Do you need to refresh an existing shower? Then you may choose a riser rail with hand shower kit and wall outlet. All IKEA riser rail kits are compatible with any shower mixer of another manufacturer. The shower kits come in 3 different families – VALLAMOSSE, BROGRUND and VOXNAN just pick the one that suits your style and bathroom best.
2. In case if you want to revitalize your existing shower you can choose to change the hand shower or the shower hose. IKEA shower series offer a wide variety of shower heads and hand showers that come with different spray functions. You can choose between 1, 3 and 5 spray function hand showers. The shower head and hand shower with full spray function gives a wide and even coverage for a relaxing shower experience. The mesh spray function boosts the force of the water spray which is perfect for rinsing thick hair. The massage spray function varies the water flow from soft to hard for an invigorating experience that takes away the tension. The mist spray function produces fine droplets of water that feel gentle, soft and relaxing. On the 3-spray hand shower you can choose between full spray or mesh spray or you can combine the two, giving you the best of both worlds. With the 5-spray hand shower you can alternate between full, mist or massage sprays, or choose your favorite combination of full/mist or full/massage, giving you even more alternatives for a relaxing shower.
3. If you are planning to update your entire shower area then you can choose one of the IKEA mixers and combine with a riser rail kit that includes all the functions you need for a destressing and relaxing shower experience. IKEA shower mixers come as a shower mixer or bath/shower mixer so they are a perfect fit both for a bath tub and shower enclosure.
4. If you want to add a shower door and/or shower screen this can be done in many different ways. Put together a shower door and a shower screen and you have created a complete shower enclosure. Or just add a shower screen instead of using a shower curtain. You choose! You can complete your new shower with mixer taps and towel accessories from the same family for a full style coordination of your bathroom. BROGRUND and VOXNAN series feature a complete range of showers, mixer taps and bathroom accessories that will make your bathroom uniquely you.
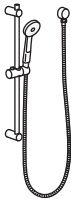
# All parts

All shower mixers, shower door, shower screen and shower tray have 10-year guarantee and all the riser rails, shower head with arm, hand showers, hoses, parking bracket and shower shelves have 3-years guarantee.

	<b>LILLREVET shower hose</b> , 150 cm (59"). White 404.084.36		<b>BROGRUND 3-spray hand shower.</b> Hand shower Ø90 mm (3½"). Chrome-plated finish 403.425.58
	<b>LILLREVET single-spray hand shower.</b> Hand shower Ø80 mm (3¼"). White 403.967.25		<b>BROGRUND 5-spray hand shower.</b> Hand shower Ø100 mm (4"). Chrome-plated finish 603.425.62
	<b>VALLAMOSSE shower mixer.</b> Faucet diameter 80 mm (3¼"). Chrome-plated finish 304.338.32		<b>VOXNAN shower mixer.</b> Faucet diameter 80 mm (3¼"). Chrome-plated finish 304.338.27
	<b>VALLAMOSSE bath/shower mixer with spout.</b> Max. length, spout 234 mm (9¼") and facet diameter 130 mm (5"). Chrome-plated finish 504.338.31		<b>VOXNAN bath/shower mixer with spout.</b> Max. length, spout 234 mm (9¼") and facet diameter 130 mm (5"). Chrome-plated finish 504.338.26
	<b>VALLAMOSSE riser rail with hand shower and wall outlet.</b> WELS 3 star rating, 8.5L/m. Hand shower Ø80 mm (3¼"), riser rail height 62 cm (24½"). Single-spray hand shower. Chrome plated finish 703.496.62		<b>VOXNAN riser rail with hand shower and wall outlet.</b> WELS 3 star rating, 8.5L/m. Hand shower Ø90 mm (3½"), riser rail height 68 cm (26¾"). Single-spray hand shower. Chrome plated finish 203.426.15
	<b>VALLAMOSSE single-spray hand shower.</b> WELS 3 star rating, 8.5L/m. Hand shower Ø80 mm (3¼"). Chrome-plated finish 803.496.52		<b>VOXNAN single-spray shower head with arm.</b> WELS 3 star rating, 8.5L/m. Shower head Ø200 mm (7¾"), depth 54 cm (21¼"). Chrome-plated finish 904.338.34
	<b>BROGRUND shower mixer.</b> Faucet diameter 80 mm (3¼"). Chrome-plated finish 304.337.28		<b>VOXNAN 3-spray hand shower.</b> WELS 3 star rating, 8.5L/m. Hand shower Ø90 mm (3½"). Chrome-plated finish 703.425.85
	<b>BROGRUND bath/shower mixer with spout.</b> Max. length, spout 234 mm (9¼") and facet diameter 130 mm (5"). Chrome-plated finish 504.337.27		<b>VOXNAN 5-spray hand shower.</b> WELS 3 star rating, 8.5L/m. Hand shower Ø105 mm (4¼"). Chrome-plated finish 603.425.81
	<b>BROGRUND riser rail with hand shower and wall outlet.</b> WELS 3 star rating, 8.5L/m. Hand shower Ø90 mm (3½"), riser rail height 65 cm (25½"). Single-spray hand shower. Chrome plated finish 603.425.57		<b>KOLSJÖN shower hose</b> , 150 cm (59"). Chrome-plated finish 003.425.98
	<b>BROGRUND single-spray shower head with arm.</b> WELS 3 star rating, 8.5L/m. Shower head Ø200 mm (7¾"), depth 54 cm (21¼"). Chrome-plated finish 104.338.33		

# Mixer taps and towel accessories

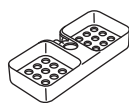

**BROGRUND shower shelf**, 25×10×4 cm (9¾×4¾×1½").

Chrome plated 703.285.27



 
**BROGRUND mixer tap, tall**, height 30 cm (11").  
WELS 6 star rating, 4.0L/m.

Chrome plated brass 603.430.95




**BROGRUND mixer tap**, height 17 cm (6¾").  
WELS 6 star rating, 4.0L/m.

Chrome plated brass 203.430.83



**BROGRUND towel rail**, length 67 cm (26½").

 Stainless steel 003.285.35

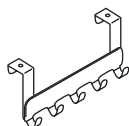

**BROGRUND hanger for door**, width 29 cm (11½").

Stainless steel 903.285.45



 
**BROGRUND towel holder 3 bars**, width 43-63 cm (17-24¾").

Stainless steel 404.267.08




**BROGRUND hook**, 2 pack.

Stainless steel 403.285.43



**BROGRUND extendable towel stand**, width 124-155 cm,  
height 84 cm.

 Stainless steel 104.089.99



**BROGRUND corner wall shelf unit**, width 19 cm, depth 19  
cm, height 58 cm.

Stainless steel 604.089.87



**VOXNAN shower shelf**, 25×13×6 cm (9¾×5×2¼").

Chrome plated 503.285.90



**VOXNAN mixer tap, tall**, height 30 cm (11¾").  
WELS 6 star rating, 4.0L/m.

Chrome plated brass 203.430.59



 
**VOXNAN mixer tap**, height 18 cm (7⅞").  
WELS 6 star rating, 4.0L/m.

Chrome plated brass 903.430.89



**VOXNAN towel rail**, length 63 cm (24¾").

Chrome plated finish 003.286.01



**VOXNAN hanger for door**, width 35.8 cm (14").

Chrome-plated finish 403.285.81