

# **MIRAKULÖS**





Please refer to the chapter IKEA GUARANTEE for contact details of the after sales customer service centre.

Contents			
Safety information	4	Additional functions	15
Conditions of Use	5	Hints and tips	16
Safety instructions	6	Care and cleaning	17
Installation	8	Troubleshooting	20
Product description	9	Technical data	22
Before first use	9	Energy efficiency	22
Daily use	10	ENVIRONMENTAL CONCERNS	23
Clock functions	12	IKEA GUARANTEE	23
Using the accessories	14		

Subject to change without notice.

# **A Safety information**

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible if an incorrect installation and use causes injuries and damages. Always keep the instructions with the appliance for future reference.

# Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Do not let children play with the appliance.
- Keep all packaging away from children and dispose of it appropriately.
- Keep children and pets away from the appliance when it operates or when it cools down. Accessible parts are hot.
- If the appliance has a child safety device, this should be activated.

 Children shall not carry out cleaning and user maintenance of the appliance without supervision.

 Children aged 3 years and under must be kept away from this appliance when it is in operation at all times.

# **General Safety**

- Only a qualified person must install this appliance and replace the cable.
- WARNING: The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
- Always use oven gloves to remove or put in accessories or ovenware.
- Before maintenance cut the power supply.
- Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- Do not use a steam cleaner to clean the appliance.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the glass door since they can scratch the surface, which may result in shattering of the glass.
- If the mains power supply cable is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons to avoid an electrical hazard.
- To remove the shelf supports first pull the front of the shelf support and then the rear end away from the side walls.
   Install the shelf supports in the opposite sequence.
- The means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.

# **Conditions of Use**

This appliance is intended to be used in household and similar applications such as:

Farm houses

 By clients in serviced apartments, holiday apartments and other residential type environments.

# Safety instructions

#### Installation



**Warning!** Only a qualified person must install this appliance.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Follow the installation instruction supplied with the appliance.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Do not pull the appliance by the handle.
- Keep the minimum distance from the other appliances and units.
- Make sure that the appliance is installed below and adjacent safe structures.
- The sides of the appliance must stay adjacent to appliances or to units with the same height.

#### **Electrical connection**



**Warning!** Risk of fire and electrical shock.

- All electrical connections should be made by a qualified electrician.
- The appliance must be earthed.
- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- Always use a correctly installed shockproof socket.
- Do not use multi-plug adapters and extension cables.
- Make sure not to cause damage to the mains plug and to the mains cable.
   Should the mains cable need to be replaced, this must be carried out by our Authorised Service Centre.

- Do not let mains cables touch or come near the appliance door, especially when the door is hot.
- The shock protection of live and insulated parts must be fastened in such a way that it cannot be removed without tools.
- Connect the mains plug to the mains socket only at the end of the installation.
   Make sure that there is access to the mains plug after the installation.
- If the mains socket is loose, do not connect the mains plug.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Use only correct isolation devices: line protecting cut-outs, fuses (screw type fuses removed from the holder), earth leakage trips and contactors.
- The electrical installation must have an isolation device which lets you disconnect the appliance from the mains at all poles. The isolation device must have a contact opening width of minimum 3 mm.

#### Use



**Warning!** Risk of injury, burns and electrical shock or explosion.

- This appliance is for household use only.
- Do not change the specification of this appliance.
- Make sure that the ventilation openings are not blocked.
- Do not let the appliance stay unattended during operation.
- Deactivate the appliance after each use.
- Be careful when you open the appliance door while the appliance is in operation. Hot air can release.
- Do not operate the appliance with wet hands or when it has contact with water.
- Do not apply pressure on the open door.

- Do not use the appliance as a work surface or as a storage surface.
- Open the appliance door carefully. The use of ingredients with alcohol can cause a mixture of alcohol and air.
- Do not let sparks or open flames to come in contact with the appliance when you open the door.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.

\_\_\_\_\_ Wo

**Warning!** Risk of damage to the appliance.

- To prevent damage or discoloration to the enamel:
  - do not put ovenware or other objects in the appliance directly on the bottom.
  - do not put aluminium foil directly on the bottom of cavity of the appliance.
  - do not put water directly into the hot appliance.
  - do not keep moist dishes and food in the appliance after you finish the cooking.
  - be careful when you remove or install the accessories.
- Discoloration of the enamel or stainless steel has no effect on the performance of the appliance.
- Use a deep pan for moist cakes. Fruit juices cause stains that can be permanent.
- This appliance is for cooking purposes only. It must not be used for other purposes, for example room heating.
- Always cook with the oven door closed.
- If the appliance is installed behind a furniture panel (e.g. a door) make sure the door is never closed when the appliance is in operation. Heat and moisture can build up behind a closed furniture panel and cause subsequent damage to the appliance, the housing unit or the floor. Do not close the

furniture panel until the appliance has cooled down completely after use.

#### **Care and Cleaning**



**Warning!** Risk of injury, fire, or damage to the appliance.

- Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.
- Make sure the appliance is cold. There is a risk that the glass panels can break.
- Replace immediately the door glass panels when they are damaged. Contact the Authorised Service Centre.
- Be careful when you remove the door from the appliance. The door is heavy!
- Clean regularly the appliance to prevent the deterioration of the surface material.
- Fat and food remaining in the appliance can cause fire.
- If you use an oven spray, obey the safety instructions on the packaging.

#### Internal light

 The type of light bulb or halogen lamp used for this appliance is only for household appliances. Do not use it for house lighting.



Warning! Risk of electrical shock.

- Before replacing the lamp, disconnect the appliance from the power supply.
- Only use lamps with the same specifications.

#### Disposal



**Warning!** Risk of injury or suffocation.

- Disconnect the appliance from the mains supply.
- Cut off the mains electrical cable close to the appliance and dispose of it.
- Remove the door to prevent children and pets to get closed in the appliance.
- · Packaging material:

The packaging material is environmentally-friendly and recyclable. Plastic parts are marked with international abbreviations such as PE. PS, etc. Dispose of the packaging material in the containers provided for this purpose at your local waste management facility.

#### Service

- To repair the appliance contact an Authorised Service Centre.
- Use original spare parts only.

# Installation



Warning! Refer to Safety chapters.

#### Assembly



Refer to the Assembly Instructions for the installation.

#### Electrical installation



Warning! Only a qualified person must do the electrical installation



The manufacturer is not responsible if you do not follow the safety precautions from the Safety chapters.

This appliance is supplied without a main plug and a main cable.

#### Cable

Cable types applicable for installation or replacement:

H07 RN-F, H05 RN-F, H05 RRF, H05 VV-F. H05 V2V2-F (T90), H05 BB-F


For the section of the cable refer to the total power on the rating plate. You can also refer to the table:

Total power (W)	Section of the cable (mm²)
maximum 1380	3 x 0.75
maximum 2300	3 x 1
maximum 3680	3 x 1.5

The earth cord (green / yellow cable) must be 2 cm longer than phase and neutral cables (blue and brown cables).

# **Product description**

#### **General overview**

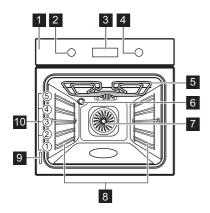

- Control panel
- 2 Knob for the oven functions
- 3 Electronic programmer
- 4 Knob for the temperature
- 5 Grill
- 6 Lamp
- 7 Fan
- 8 Shelf support, removable
- 9 Rating plate
- 10 Shelf positions

#### Accessories

- Wire shelf x 1
   For cookware, cake tins, roasts.
- Baking tray x 1
   For cakes and biscuits.
- Grill- / Roasting pan x 1

To bake and roast or as pan to collect fat.

• Telescopic runners x 2 sets For shelves and trays.

# Before first use



**Warning!** Refer to Safety chapters.



To set the Time of day refer to "Clock functions" chapter.

# **Initial Cleaning**

Remove all accessories and removable shelf supports from the appliance.



Refer to "Care and cleaning" chapter.

Clean the appliance and the accessories before first use.

Put the accessories and the removable shelf supports back to their initial position.

#### **Preheating**

Preheat the empty appliance before first use.

- 1. Set the function and the maximum temperature.
- 2. Let the appliance operate for 1 hour.
- 3. Set the function and set the maximum temperature.
- **4.** Let the appliance operate for 15 minutes.

Accessories can become hotter than usual. The appliance can emit an odour and smoke. This is normal. Make sure that the airflow in the room is sufficient.

#### Using the Mechanical child lock

 
The appliance has the child lock installed and activated. It is below the control panel on the right side.

To open the oven door with the child lock installed, pull the child lock handle up as shown in the picture.



Close the oven door without pulling the child lock.

To remove the child lock, open the oven door and remove the child lock with the torx key. The torx key is in the oven fitting bag.

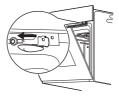

Screw back the screw into the hole after removing the child lock.

# Daily use



**Warning!** Refer to Safety chapters.

#### Retractable knobs

To use the appliance, press the control knob. The control knob comes out.

#### Activating and deactivating the appliance

 Turn the knob for the oven functions clockwise to an oven function.

#### Oven functions

Over	function	Application
0	Off position	The appliance is off.

**2.** Turn the knob for the temperature to set the temperature.

The display shows the set temperature.

To deactivate the appliance, turn the knob for the oven functions to the off position.

Oven function		Application	
Forced Air Cooking		To bake on up to 3 shelf positions at the same time and to dry food. When you use this function, decrease the oven temperature by 20 - 40 °C from the standard temperatures you use for cooking with the function Conventional (Top and Bottom Heat).	
	Conventional (Top and Bottom Heat)	To bake and roast food on one shelf position.	
***	Grilling	To grill flat food in the middle of the shelf. To make toasts.	
	Bottom Heat	To bake cakes with crispy bottom and to preserve food.	
¥	Grilling with Fan	To roast larger meat joints or poultry with bones on one shelf position. Also to make gratins and to brown.	
(A)	Bread and Pizza Baking	To bake food on 1 shelf position for a more intensive browning and a crispy bottom. When you use this function, decrease the oven temperature by 20 - 40 °C from the standard temperatures you use for cooking with the function Conventional (Top and Bottom Heat).	
※	Defrost	This function can be used for defrosting frozen foods, such as vegetables and fruits. The defrosting time depends on the amount and size of the frozen food.	
	Top Heat	To brown bread, cakes and pastries. To finish cooked dishes.	
***	Fast Grilling	To grill flat food in large quantities and to toast bread.	
	Light	To activate the lamp without a cooking function. It can be used with residual heat in final cooking phase to save energy.	

## Display



- A. Time and temperature
- B. Heat-up and residual heat indicator
- C. Water tank (selected models only)
- **D.** Core temperature sensor (selected models only)
- E. Door lock (selected models only)
- F. Hours / minutes
- G. Clock functions

#### **Buttons**

Button	Function	Description
— MINUS		To set the time.
4	CLOCK	To set a clock function.
+	PLUS	To set the time.

#### **Heat-up indicator**

When you activate an oven function, the bars in the display  $\hat{\xi}$  come on one by one.

The bars show that the oven temperature increases or decreases.

# Clock functions

#### **Clock functions table**

Clock function		Application	
9	TIME OF DAY	To show or change the time of day. You can change the time of day only when the appliance is off.	
→	DURATION	To set how long the appliance operates. Use only when an oven function is set.	
<b>→</b>	END	To set when the appliance deactivates. Use only when an oven function is set.	
$ \rightarrow \rightarrow $	TIME DELAY	Combination of DURATION and END function.	

Clock function		Application	
\(\sigma\)	MINUTE MINDER	Use to set a countdown time. This function has no effect on the operation of the appliance. You can set the MINUTE MINDER at any time, also if the appliance is off.	
00:00	COUNT UP TIMER	If you do not set any other clock function the COUNT UP TIMER automatically monitor how long the appliance operates. The counting starts immediately when the oven starts to heat. The Count Up Timer cannot be used with the functions: DURATION, END.	

#### Setting and changing the time

After the first connection to the mains, wait until the display shows **hr** and "12:00". "12" flashes.

- 1. Press + or to set the hours.
- 2. Press to confirm and switch to set the minutes.

The display shows **min** and the set hour. "**00**" flashes.

- 3. Press + or to set the current minutes.
- Press to confirm or the set time of day will be saved automatically after 5 seconds.

The display shows the new time.

To change the time of day press again and again until the indicator for the time of day again the display.

# Setting the DURATION function during cooking function

- 1. Press again and again until starts to flash. starts
- 2. Press + or to set the minutes and then the hours for DURATION time.

  Press 1 to confirm.

When the time ends an acoustic signal sounds for 2 minutes.  $\rightarrow$  and time setting

flash in the display. The appliance deactivates automatically.

**3.** Press any button to stop the acoustic signal.

# Setting the END function during cooking function

- Press <sup>1</sup> again and again until → starts to flash.
- 2. Press + or to set the hours and then the minutes for END time. Press 1 to confirm.

At the set time an acoustic signal sounds for 2 minutes.  $\rightarrow$  and time setting flash in the display. The appliance deactivates automatically.

**3.** Press any button to stop the acoustic signal.

#### **Setting the TIME DELAY function**

- Press ⊕ again and again until → starts to flash.
- Press + or to set the minutes and then the hours for DURATION time.
   Press to confirm.

The display shows flashing  $\rightarrow$ .

 Press + or - to set the hours and then the minutes for END time. Press to confirm.

Appliance turns on automatically later on, works for the set DURATION time and stops at the set END time. At the set time an acoustic signal sounds for 2 minutes. 

and time setting flash in the display. The appliance deactivates.

**4.** Press any button to stop the acoustic signal.

#### **Setting the MINUTE MINDER**

- 1. Press again and again until and "00" flash in the display.
- Press + or to set the MINUTE MINDER.
   First you set the seconds, then the minutes.

When the time you set is longer than 60 minutes, **hr** flash in the display.

- 3. Set the hours.
- The MINUTE MINDER starts automatically after 5 seconds. After 90% of the set time, an acoustic signal sounds.
- 5. When the set time ends, an acoustic signal sounds for 2 minutes. "00:00" and 

  flash in the display. Press any button to stop the acoustic signal.

#### **COUNT UP TIMER**

Press again and again until the display shows time without any symbols.

# Using the accessories




**Warning!** Refer to Safety chapters.

#### Inserting the accessories


Wire shelf:

Push the shelf between the guide bars of the shelf support and make sure that the feet point down.

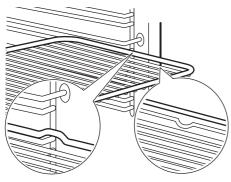


Baking tray / Deep pan:

Push the baking tray / deep pan between the guide bars of the shelf support.

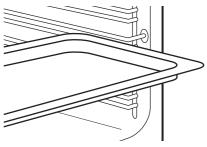

Wire shelf and baking tray / deep pan together:

Push the baking tray / deep pan between the guide bars of the shelf support and the wire shelf on the guide bars above.

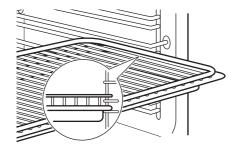

Small indentation at the top increase safety. The indentations are also anti-tip devices. The high rim around the shelf prevents cookware from slipping of the shelf.


#### Using the telescopic runners

 Keep the installation instructions for the telescopic runners for future use.

With telescopic runners you can put in and remove the shelves more easily.



**Caution!** Do not clean the telescopic runners in the dishwasher. Do not lubricate the telescopic runners.

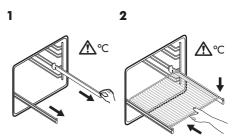

Pull out the right and left hand telescopic runners. Put the wire shelf on the telescopic runners and carefully push them into the appliance.

Make sure you push back the telescopic runners fully in the appliance before you close the oven door.



You can also use the telescopic runners with the trays or pans supplied with the appliance.



**Warning!** Refer to "Product description" chapter.

# **Additional functions**

## **Using the Child Lock**

When the Child Lock is on, the appliance cannot be activated accidentally.

- 1. Ensure the knob for the oven functions is in the off position.
- 2. Press and hold and at the same time for 2 seconds.

An acoustic signal sounds. SAFE comes on in the display.

To deactivate the Child Lock, repeat step 2.

#### Automatic switch-off

For safety reasons the appliance deactivates automatically after some time if an oven function operates and you do not change any settings.

Temperature (°C)	Switch-off time (h)
30 - 115	12.5
120 - 195	8.5

Temperature (°C)	Switch-off time (h)
200 - 245	5.5
250 - maximum	1.5

After an automatic switch-off, deactivate the appliance fully. Then you can activate it again.



The Automatic switch-off does not work with the functions: Duration, End.

#### Residual heat indicator

When you deactivate the appliance, the display shows the residual heat indicator if the temperature in the oven is more than

40 °C. Turn the knob for the temperature left or right to show the oven temperature.

#### **Cooling fan**

When the appliance operates, the cooling fan activates automatically to keep the surfaces of the appliance cool. If you deactivate the appliance, the cooling fan can continue to operate until the appliance cools down.

#### Safety thermostat

Incorrect operation of the appliance or defective components can cause dangerous overheating. To prevent this, the oven has a safety thermostat which interrupts the power supply. The oven activates again automatically when the temperature drops.

# Hints and tips

#### **General information**

- Use the function Forced Air Cooking to preheat the oven in the fastest way.
- Whenever preheating, remove the wire shelves and trays from the cavity to have the fastest performance.
- The appliance has five shelf positions.
   Count the shelf positions from the bottom of the appliance floor.
- The appliance has a special system which circulates the air and constantly recycles the steam. With this system you can cook in a steamy environment and keep the food soft inside and crusty outside. It decreases the cooking time and energy consumption to a minimum.
- Moisture can condense in the appliance or on the door glass panels. This is normal. Always stand back from the appliance when you open the appliance door while cooking. If you notice moisture inside of the oven, keep the door open for a couple of minutes.

- Clean the moisture after each use of the appliance.
- Do not put the objects directly on the appliance floor and do not put aluminium foil on the components when you cook. This can change the baking results and cause damage to the enamel.

#### **Baking cakes**

- Do not open the oven door before 3/4 of the set cooking time is up.
- If you use two baking trays at the same time, keep one empty level between them.

#### Cooking meat and fish

- Use a deep pan for very fatty food to prevent the oven from stains that can be permanent.
- Leave the meat for approximately 15 minutes before carving so that the juice does not seep out.
- To prevent too much smoke in the oven during roasting, add some water into the

deep pan. To prevent the smoke condensation, add water each time after it dries up.

#### **Cooking times**

Cooking times depend on the type of food, its consistency, and volume.

Initially, monitor the performance when you cook. Find the best settings (heat setting, cooking time, etc.) for your cookware, recipes and quantities when you use this appliance.

#### **Cooking table**

Quantity (kg)	Food	Function	Shelf posi- tion	Temperature (°C)	Time (min)
1 - 1.5	Pork		2	180	90 - 120
1 - 1.5	Lamb	(&)	2	175	110 - 130
1	Beef		2	200	50 - 70
1 - 1.5	Chicken	(A)	2	200	70 - 85
1.2	Rabbit	(A)	2	175	60 - 80
1.5	Duck	(A)	2	220	120 - 150
4	Turkey		2	180	210 - 240
1	Fish		2	190	45 - 60
-	Plum cake	(A)	2	160	50 - 60
1	Pies		2	170	80 - 100
-	Biscuits	(A)	2 and 4	140 - 150	35 - 40
2	Lasagne		2	180 - 190	25 - 40
1	White Bread		1	190	60 - 70
1	Pizza	(A)	1	190 - 210	10 - 20

# Care and cleaning



**Warning!** Refer to Safety chapters.

#### Notes on cleaning

 Clean the front of the appliance with a soft cloth with warm water and a cleanina agent.

- To clean metal surfaces, use a dedicated cleaning agent.
- · Clean the appliance interior after each use. Fat accumulation or other food remains may result in a fire. The risk is higher for the grill pan.
- Clean stubborn dirt with a special oven cleaner
- Clean all accessories after each use and let them dry. Use a soft cloth with warm water and a cleaning agent.
- If you have nonstick accessories, do not clean them using aggressive agents. sharp-edged objects or a dishwasher. It can cause damage to the nonstick coating.

#### Stainless steel or aluminium appliances

Clean the oven door with a (i)damp cloth or sponge only. Dry it with a soft cloth.

Do not use steel wool, acids or abrasive materials as they can damage the oven surface. Clean the oven control panel with the same precautions.

 
#### Cleaning the door gasket

- Regularly do a check of the door gasket. The door aasket is around the frame of the oven cavity. Do not use the appliance if the door gasket is damaged. Contact the Service.
- To clean the door gasket, use a soft cloth with warm water and a cleaning agent.


## Removing the shelf supports

To clean the oven, remove the shelf supports.

1. Pull the front of the shelf support away from the side wall.

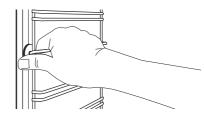

 2. Pull the rear end of the shelf support away from the side wall and remove it.

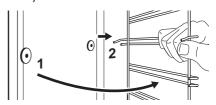

Install the shelf supports in the opposite sequence.



The retaining pins on the telescopic runners must point to the front.

#### Cleaning the oven door


The oven door has three glass panels. You can remove the oven door and the internal alass panels to clean them.



The oven door can close if you try to remove the glass panels before you remove the oven door.



Caution! Do not use the appliance without the glass panels.

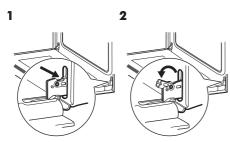


Open the door fully and hold the two door hinges.

Lift and turn the levers on the two hinges.




Close the oven door halfway to the first opening position. Then pull forward and remove the door from its seat. Put the door on a soft cloth on a stable surface.

 Hold the door trim (B) on the top edge of the door at the two sides and push inwards to release the clip seal.

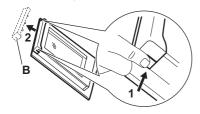

Pull the door trim to the front to remove it

 
Hold the door glass panels by their top edge and carefully pull them out one by one. Start from the top panel. Make sure the glass slides out of the supports completely.

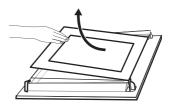

Clean the glass panels with water and soap. Dry the glass panels carefully.

When the cleaning is completed, install the glass panels and the oven door. Do the above steps in the opposite sequence.

Make sure that you put the glass panels (A and B) back in the correct sequence. The first panel (A) has a decorative frame. The screen-printing zone must face the inner side of the door. Make sure that after the installation the surface of the glass panel frame (A) on the screen-printing zones is not rough when you touch it.

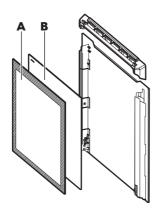

Make sure that you install the middle panel of glass in the seats correctly.



#### Replacing the lamp

Put a cloth on the bottom of the interior of the appliance. It prevents damage to the lamp glass cover and the cavity.



Warning! Danger of electrocution! Disconnect the fuse before you replace the lamp. The lamp and the lamp glass cover can be hot.



**Caution!** Always hold the halogen lamp with a cloth to prevent grease residue from burning on the lamp.

- 1. Deactivate the appliance.
- 2. Remove the fuses from the fuse box or deactivate the circuit breaker.
- **3.** Turn the lamp glass cover counterclockwise to remove it.
- 4. Clean the glass cover.
- Replace the oven light bulb with a 40 W, 220 240 V (50 Hz), 350 °C heat resistant oven light bulb (connection type: G9).
- 6. Install the glass cover.

# **Troubleshooting**



**Warning!** Refer to Safety chapters.

#### What to do if...

Problem	Possible cause	Remedy
The oven does not heat up.	The oven is deactivated.	Activate the oven.
The oven does not heat up.	The clock is not set.	Set the clock.
The oven does not heat up. The necessary settings are not set.		Make sure that the settings are correct.
The oven does not heat up.	The automatic switch-off is activated.	Refer to "Automatic switch-off".

Problem	Possible cause	Remedy
The oven does not heat up.	The Child Lock is on.	Refer to "Using the Child Lock".
The oven does not heat up.	The door is not closed correctly.	Fully close the door.
The oven does not heat up.	The fuse is blown.  Make sure that the fithe cause of the mall If the fuse is blown a and again, contact of fied electrician.	
The lamp does not operate.	The lamp is defective.	Replace the lamp.
Steam and condensation settle on the food and in the cavity of the oven.	You left the dish in the oven for too long.  Do not leave the of the oven for longe 20 minutes after the process ends.	
The display shows an error code that is not in this table.	There is an electrical fault.	Deactivate the oven with the house fuse or the safety switch in the fuse box and activate it again.     If the display shows the error code again, contact an Authorised Service Centre.

#### Service data

If you cannot find a solution to the problem yourself, contact an Authorised Service Centre.

The necessary data for the service centre is on the rating plate. The rating plate is on

the front frame of the appliance cavity. Do not remove the rating plate from the appliance cavity.

We recommend that you write the data here:		
Model (MOD.)		
Product number (PNC)		
Serial number (S.N.)		

# **Technical data**

## **Technical data**

Dimensions (internal)	Width Height Depth	480 mm 361 mm 416 mm
Area of baking tray	1438 cm²	
Top heating element	2300 W	
Bottom heating element	1000 W	
Grill	2300 W	
Ring	2400 W	
Total rating	2480 W	
Voltage	220 - 240 V	
Frequency	50 - 60 Hz	
Number of functions	9	

# **Energy efficiency**

# Product information according to EU 66/2014

Model identification	MIRAKULÖS 903.220.44
Energy Efficiency Index	100.0
Energy consumption with a standard load, conventional mode	0.93 kWh/cycle
Energy consumption with a standard load, fan-forced mode	0.85 kWh/cycle
Number of cavities	1
Heat source	Electricity
Volume	72
Type of oven	Built-In Oven
Mass	33.4 kg

EN 60350-1 - Household electric cooking appliances - Part 1: Ranges, ovens, steam ovens and grills - Methods for measuring performance.

#### **Energy saving**



The appliance contains features which help you save energy during everyday cooking.

#### **General hints**

Make sure that the oven door is closed properly when the appliance operates and keep it closed as much as possible during the cooking.

Use metal dishes to improve energy saving.

When possible, do not preheat the oven before you put the food inside.

When the cooking duration is longer than 30 minutes, reduce the oven temperature to minimum 3 - 10 minutes before the end of

the cooking time, depending on the duration of the cooking. The residual heat inside the oven will continue to cook.

Use the residual heat to warm up other dishes.

## Cooking with fan

When possible, use the cooking functions with fan to save energy.

#### Residual heat

If a programme with the Duration or End Time selection is activated and the cooking time is longer than 30 minutes, the heating elements automatically deactivate earlier in some oven functions.

The fan and lamp continue to operate.

#### Keep food warm

Choose the lowest possible temperature setting to use residual heat and keep a meal warm. The display shows the residual heat indicator or temperature.

# **ENVIRONMENTAL CONCERNS**

Recycle the materials with the symbol  $\not\subset \mathring{\mathcal{J}}$ . Put the packaging in applicable containers to recycle it. Help protect the environment and human health and to recycle waste of electrical and electronic appliances. Do not

dispose appliances marked with the symbol with the household waste. Return the product to your local recycling facility or contact your municipal office.

# **IKEA GUARANTEE**

#### How long is the IKEA guarantee valid?

This guarantee is valid for five (5) years from the original date of purchase of Your appliance at IKEA Pty Ltd, ABN 84006270757 or at Cebas Pty Ltd, ABN 15 009 156 003 (Both Trading as IKEA) unless the appliance is named LAGAN in which case two (2) years of guarantee apply. The original sales receipt is required as proof of

purchase. If service work is carried out under guarantee, this will not extend the guarantee period for the appliance.

Which appliances are not covered by the IKEA five (5) years guarantee?

The range of appliances named LAGAN.

Who will execute the service?

IKEA service provider will provide the service through its own service operations or authorized service partner network. Contact IKEA for further information.

If you encounter any trouble with the appliance and wish to register a service call or make a claim, please refer to <a href="https://www.ikea.com.au">www.ikea.com.au</a> for your local store after sales customer service center phone number, online email and opening times.

The principal address and contact details in Australia are:

For Queensland, New South Wales, and Victorian customers please contact:

**IKEA Pty Ltd** 

IKEA Pty Ltd IKEA Service Office

L1 Clock Tower, 630 Princes Highway Tempe, NSW 2044

Contact - IKEA Customer Service at www.IKEA.com.au

For Western Australian and South Australian customers please contact:

Cebas Pty Ltd

8c Sunray Drive, Innaloo WA 6018 Australia

Contact - IKEA Customer Service at www.IKEA.com.au

# What does this guarantee cover?

The guarantee covers faults of the appliance, which have been caused by faulty construction or material faults from the date of purchase from IKEA. This guarantee applies to domestic use only. The products have been designed and tested for domestic purposes only and this guarantee

does not cover damage arising from use of the Product in a commercial environment.

The exceptions are specified under the headline "What is not covered under this guarantee?" Within the guarantee period, the costs to remedy the fault e.g. repairs, parts, labour and travel will be covered, provided that the appliance is accessible for repair without special expenditure. Replaced parts become the property of IKFA.

The guarantee exists only if the appliance complies and is installed in accordance with:

- The technical specifications.
- The Assembly Instructions and user manual Safety Information.

IKEA's guarantee is subject to Australian Consumer Law - see Schedule 2 to Competition and Consumer Act, 2010. This guarantee is in addition to (and does not exclude, restrict or modify in any way) any non-excludable statutory warranties in Australia.

## What will IKEA do to correct the problem?

IKEA appointed service provider will examine the product and decide, at its sole discretion, if it is covered under this guarantee. They will notify you as to whether your claim is covered under this guarantee. If your claim is approved, the IKEA service provider or its authorized service partner, will then, at its sole discretion, either repair the defective product or replace it with the same or a comparable product.

# What is not covered under this guarantee?

- Normal wear and tear.
- Deliberate or negligent damage, damage caused by failure to observe operating instructions, incorrect installation or by connection to the wrong voltage, damage caused by chemical or electro-chemage.

ical reaction, rust, corrosion or water damage including but not limited to damage caused by excessive lime in the water supply, damage caused by abnormal environmental conditions.

- Consumable parts including batteries and lamps.
- Non-functional and decorative parts which do not affect normal use of the appliance, including any scratches and possible colour differences.
- Accidental damage caused by foreign objects including insect or vermin infestation or substances and cleaning or unblocking of filters, drainage systems or soap drawers.
- Damage to the following parts: ceramic glass, accessories, crockery and cutlery baskets, feed and drainage pipes, seals, lamps and lamp covers, screens, knobs, casings and parts of casings. Unless such damages can be proved to have been caused by production faults.
- Cases where no fault could be found during a technician's visit.
- Repairs not carried out by our appointed service providers and/or an authorized service contractual partner or where non-original parts have been used.
- Repairs caused by installation which is faulty or not according to specification.
- The use of the appliance in a non-domestic environment i.e. professional use.
- Transportation damages. If a customer transports the product to their home or other address, IKEA is not liable for any damage that may occur during transport. However, if IKEA delivers the product to the customer's delivery address, then damage to the product that occurs during this delivery will be covered by this guarantee.
- Cost for carrying out the initial installation of the IKEA appliance.
   However, if an IKEA service provider or its authorized service partner repairs or replaces the appliance under the terms of this guarantee, the service provider or

its authorized service partner will reinstall the repaired appliance or install the replacement, if necessary.

 The appliance's serial number or warranty seal has been removed or defaced.

#### How country law applies

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law (ACL). You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This guarantee is not intended in any way to limit or exclude such rights and remedies that you may have under law.

You can find out more information about the Australian Consumer Law on the ACCC website: www.accc.gov.au

#### Area of validity

This IKEA guarantee applies only to products purchased and installed in AUSTRALIA.

# What you must do to make a claim under the augrantee:

To make a claim under the guarantee contact IKEA after sales customer service center at the above address, the IKEA catalogue or refer to <a href="www.ikea.com.au">www.ikea.com.au</a> for your local store customer service phone number, online email and opening times. Please describe the problem that you are facing with the appliance in detail along with your product article number (8 digit code) and date of purchase at the time of call registration.

# Please do not hesitate to contact the dedicated after sales customer service center for IKEA appliances to:

- Make a service request under this guarantee;
- Ask for clarification on installation of the IKEA appliance in the dedicated IKEA kitchen furniture.
- Ask for clarification on user manual contents and specifications of the IKEA appliance.

To ensure that we provide you with the best assistance, please read carefully the Assembly Instructions and/or the User Manual section of this booklet before contacting us.

#### How to reach us if you need our service



The IKEA after sales customer service centre will assist you on the phone with basic trouble shooting for your appliance at the time of service call request. Please refer to the IKEA catalogue or <a href="www.ikea.com.au">www.ikea.com.au</a> and select your local store for local store phone numbers and opening times.

**(**)

Please describe the problem that you are facing with the appliance in detail along with your product article number (8 digit code) and date of purchase at the time of call registration.

# **(**)

#### SAVE THE SALES RECEIPT!

have purchased.

Kindly keep all these details and original invoice of purchase handy during the service technician's visit to enable him to carry out the job.

It is your proof of purchase and required for the guarantee to apply. Note that the receipt reports also the IKEA article name and number (8 digit code) for each of the appliances you