 
 
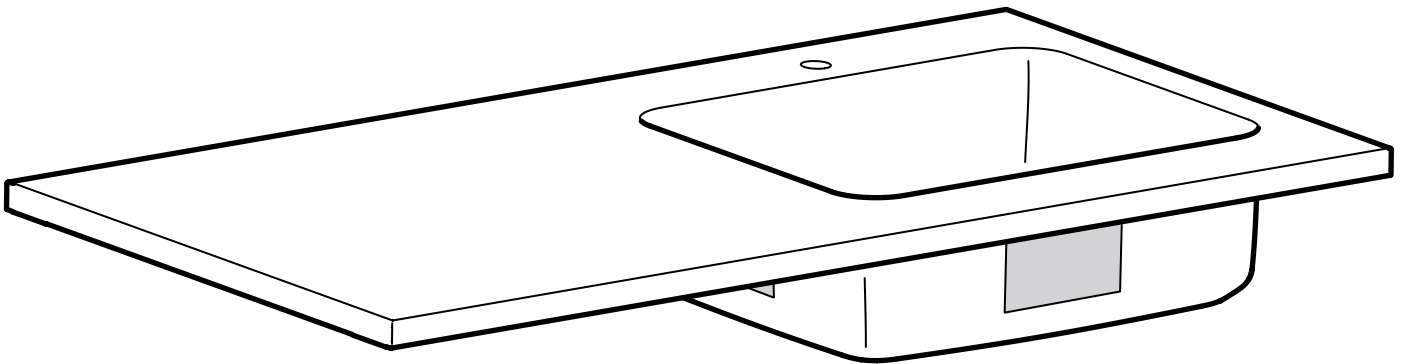 
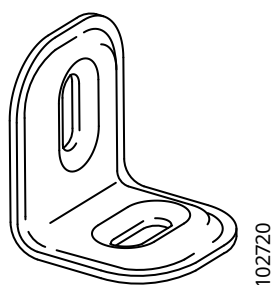 
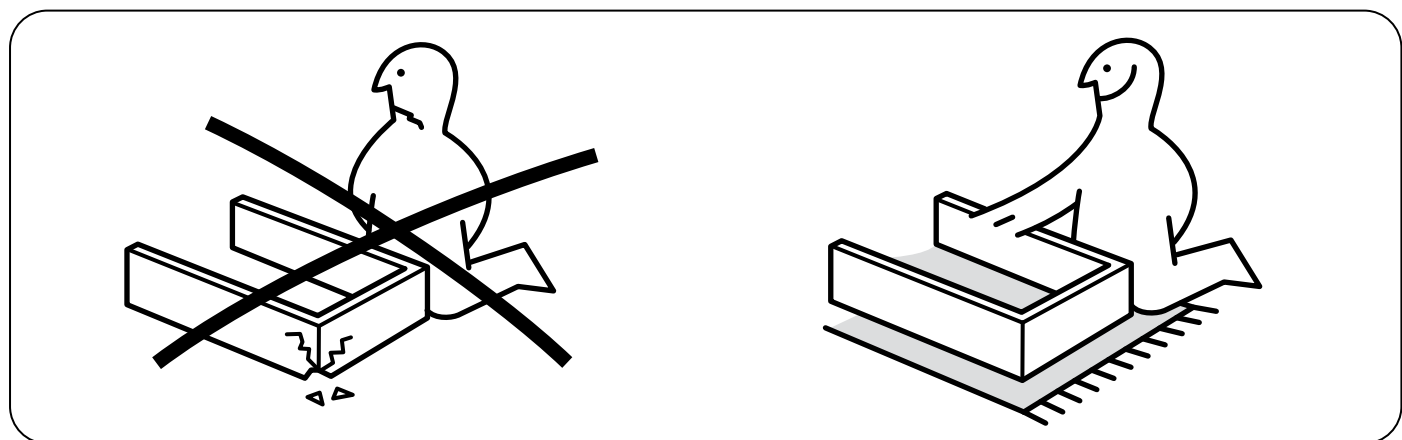 


OLOFSJÖN

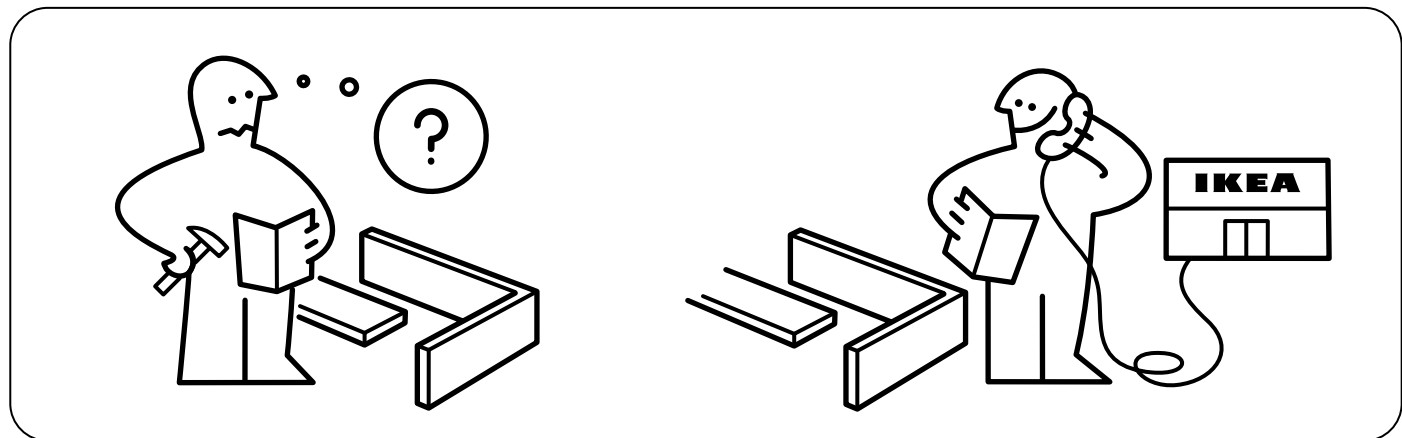

Design and Quality
IKEA of Sweden

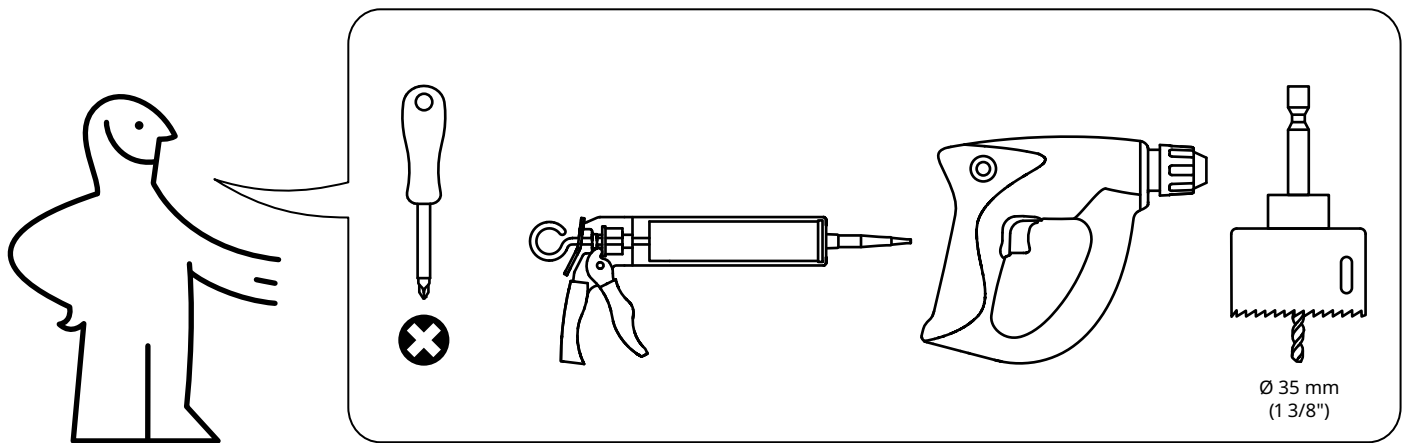

 
102720

2x





122901

14x

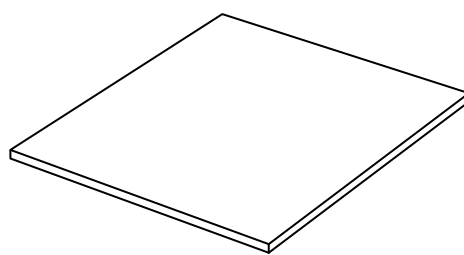





10107966


 
 
12x

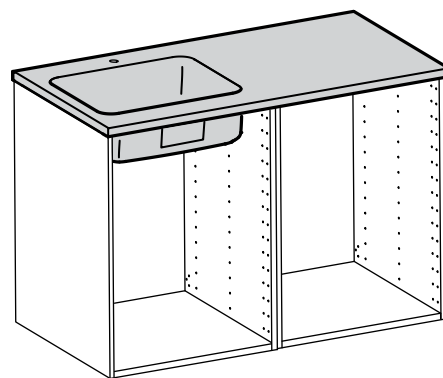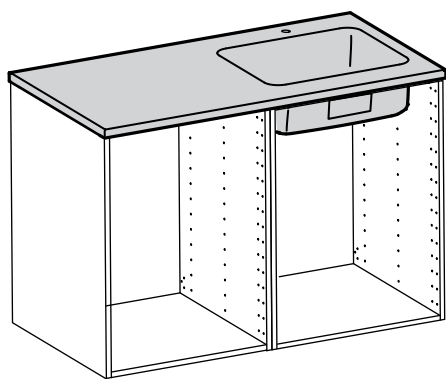



1

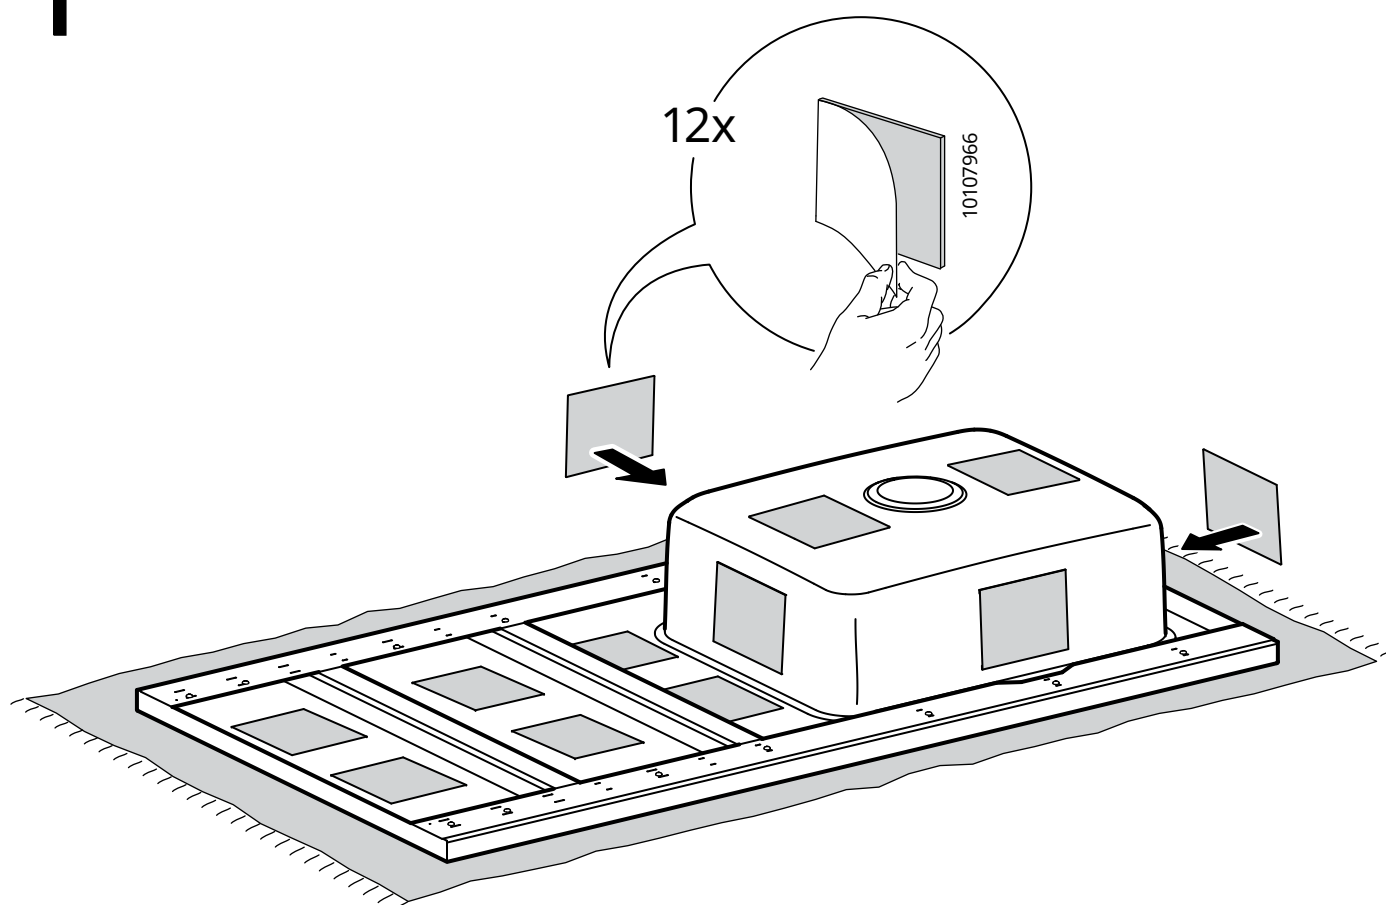 

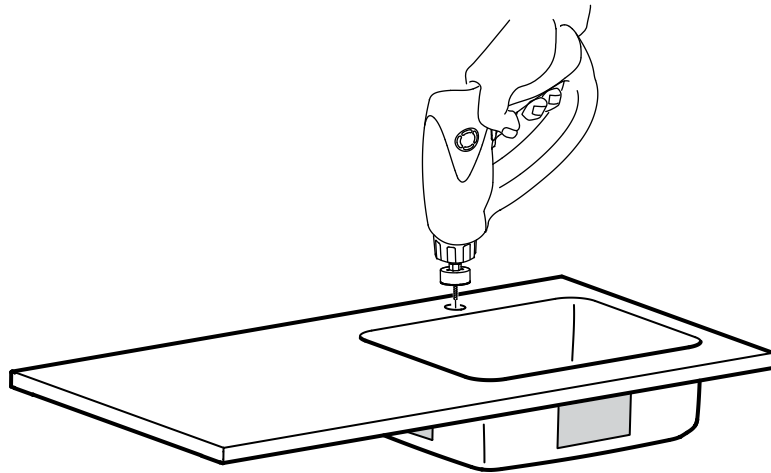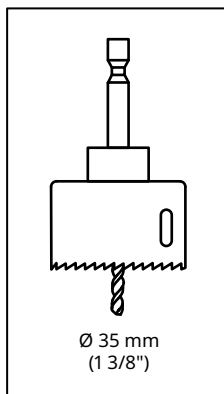  
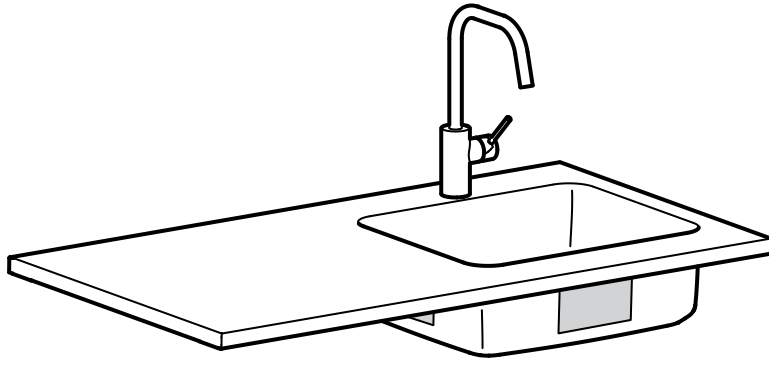 


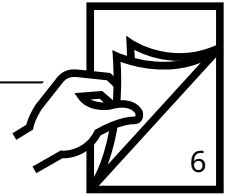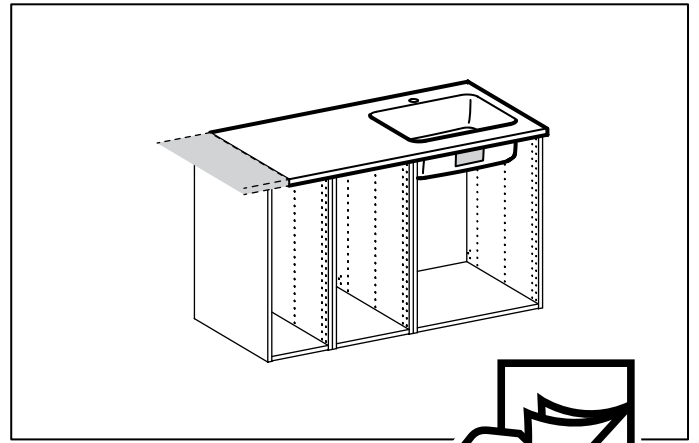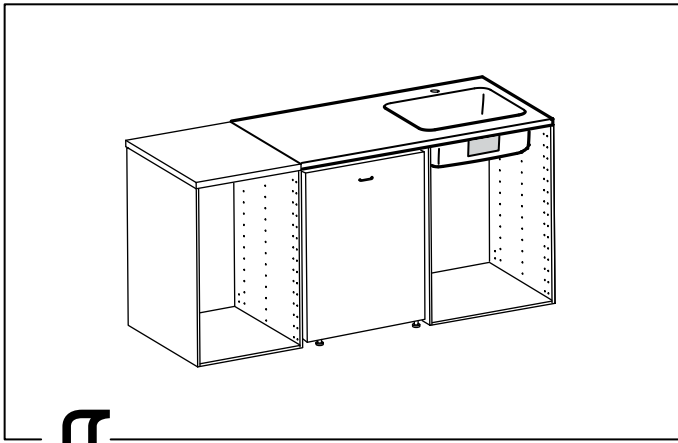   


2

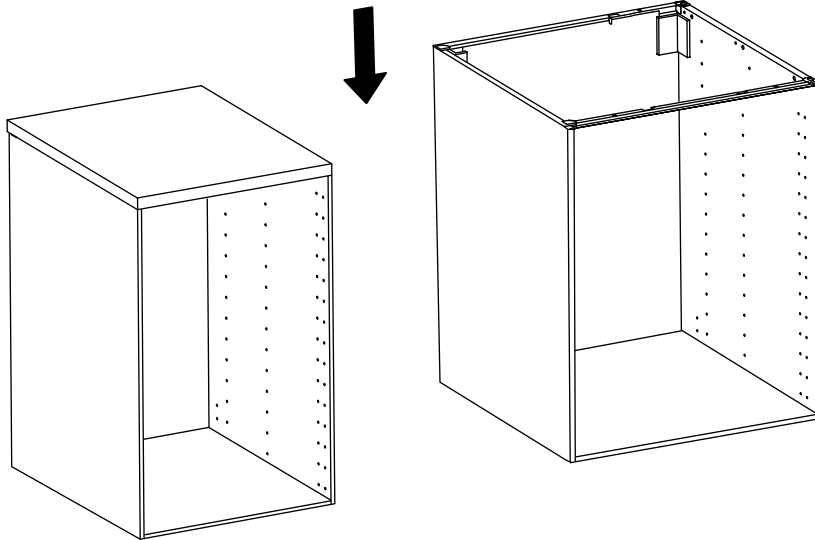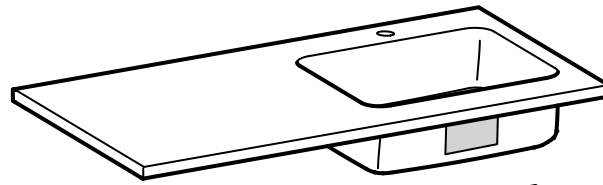  


3

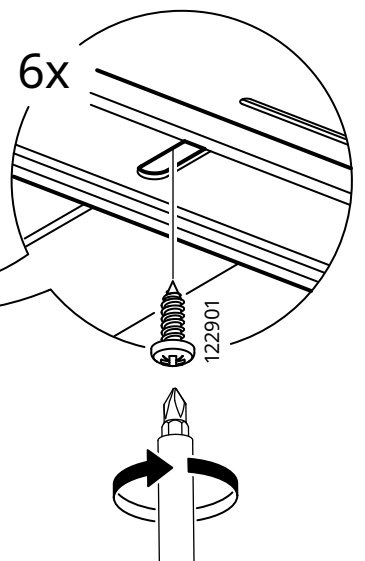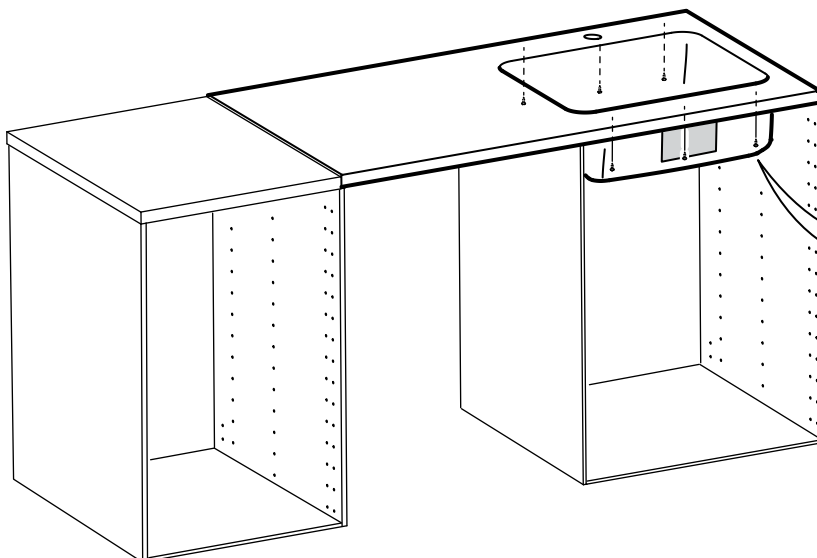  


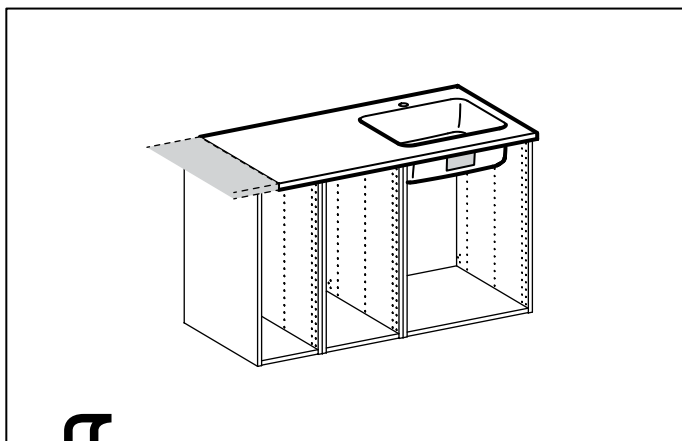 


2


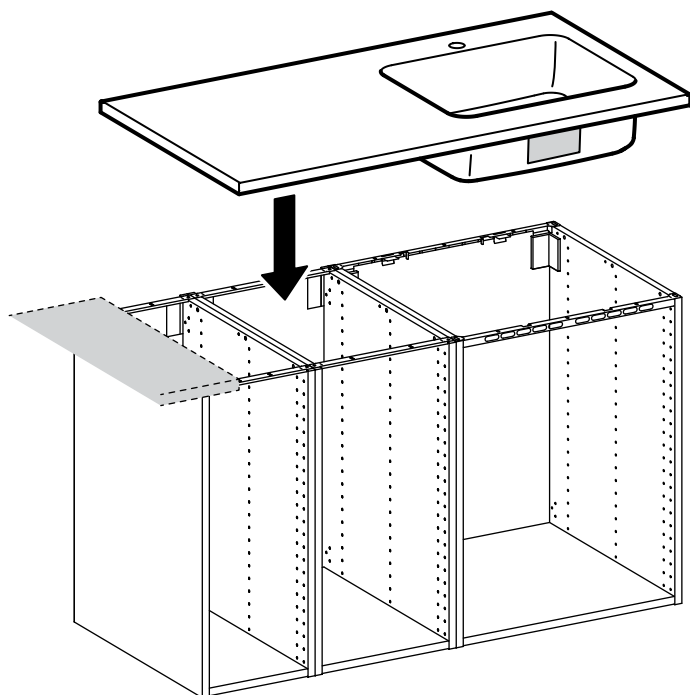 


3

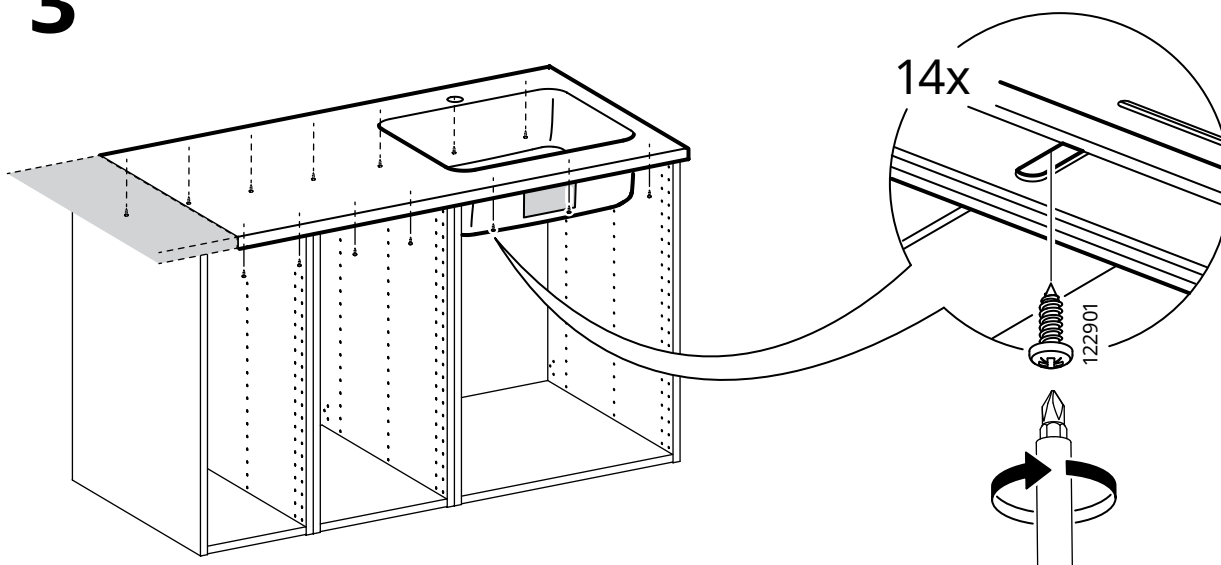 


4

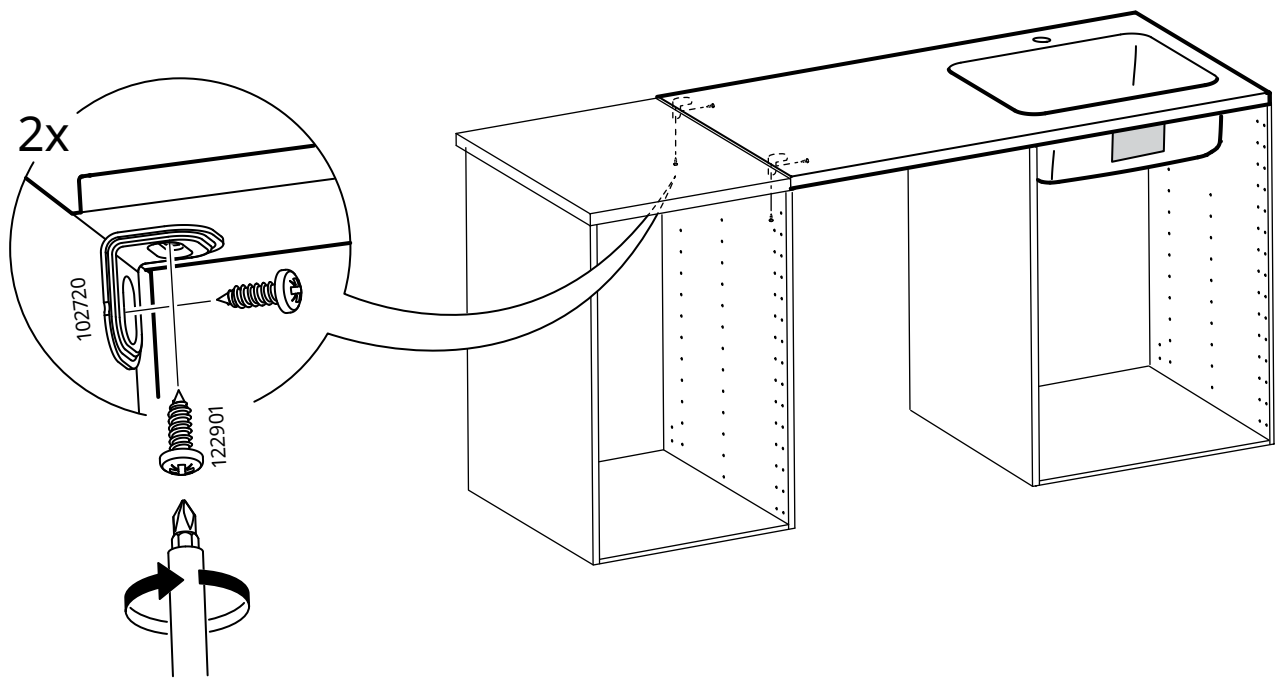 


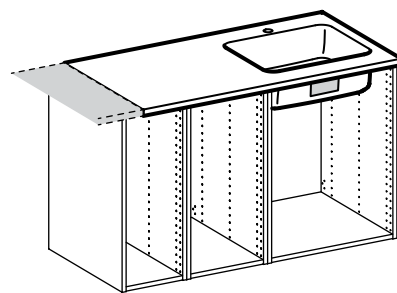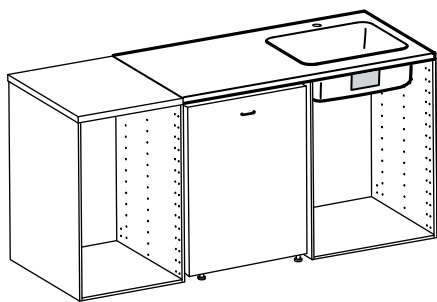  

5

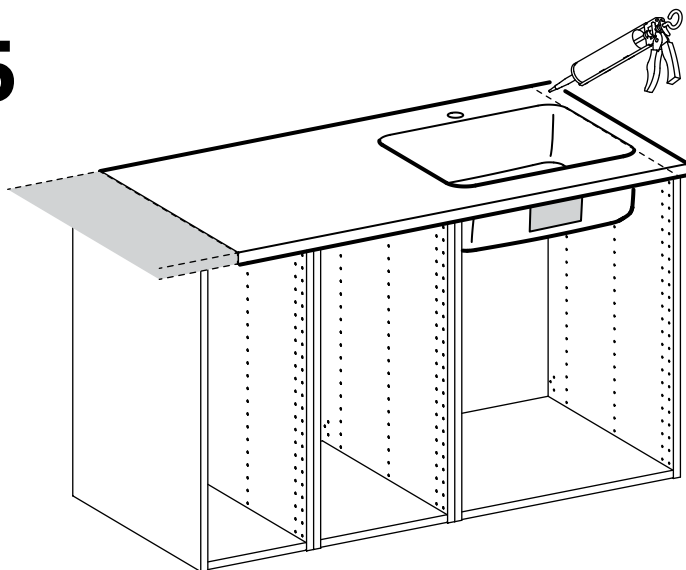 

1x

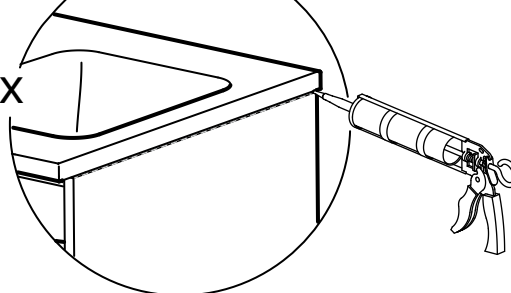 

English

Apply silicone in order to prevent liquids from penetrating into the worktop.

NOTE! Silicone is not included!

Français

Appliquer de la silicone afin d'éviter que des liquides ne pénètrent dans le plan de travail. REMARQUE : la silicone est vendue séparément.

Español

Aplica silicona para evitar que penetren líquidos en la encimera. ¡ATENCIÓN! No se incluye la silicona.

