


DUKTIG



Design and Quality
IKEA of Sweden

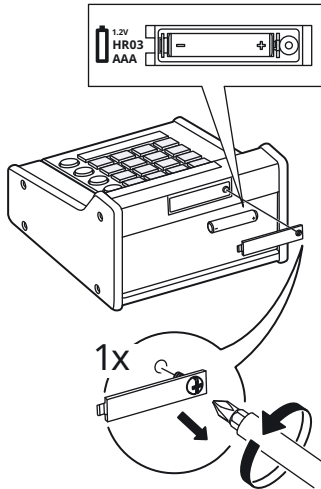

English

Important - Read carefully - Save for future use

IKEA of Sweden, Box 702, S-343 81 Älmhult

Caution

Battery is to be inserted with the correct polarity.


Exhausted battery must be removed from the toy.

Adult supervision is required when charging a rechargeable battery.

The supply terminals are not to be short-circuited.

A non-rechargeable battery must not be recharged.

The rechargeable battery must be removed from the toy before charging.

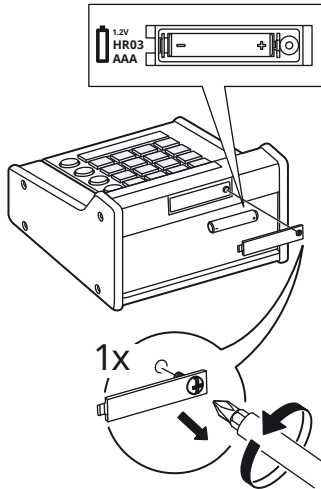

Français

Important ! A lire attentivement et à conserver.

IKEA of Sweden, Box 702, S-343 81 Älmhult

Attention

Insérer la pile en respectant les polarités.

Toute pile déchargée doit être retirée du jouet.

La recharge de la pile rechargeable doit se faire sous la surveillance d'un adulte.

Ne pas court-circuiter les pôles.

Ne jamais tenter de recharger une pile non rechargeable.

Toujours retirer la pile du jouet avant de procéder à sa recharge.

Español

Importante. Leer detenidamente. Guardar

IKEA of Sweden, Box 702, S-343 81 Älmhult

Atención

Coloca la pila en el producto con la polaridad correcta.

Saca la pila del juguete cuando se gaste.

Asegúrate de que un adulto supervise siempre el cambio de pilas recargables.

No cortocircuites los terminales.

No intentes recargar pilas no recargables.

Retira la pila recargable del juguete antes de ponerla a cargar.