 
 
 
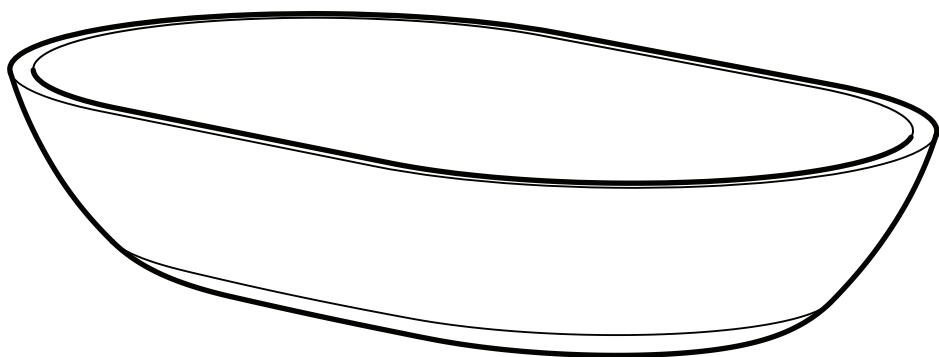 
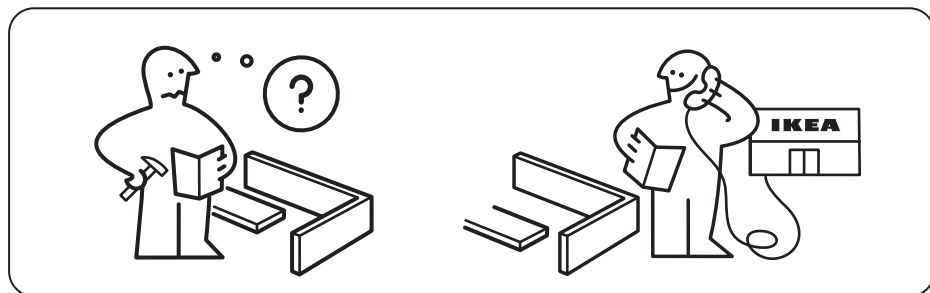 


OXMYREN

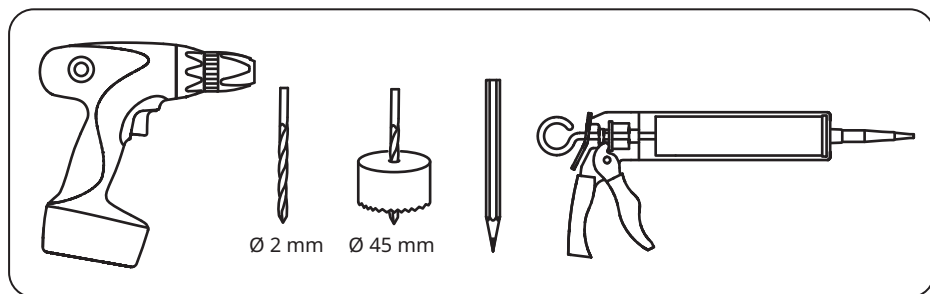 


Design and Quality
IKEA of Sweden

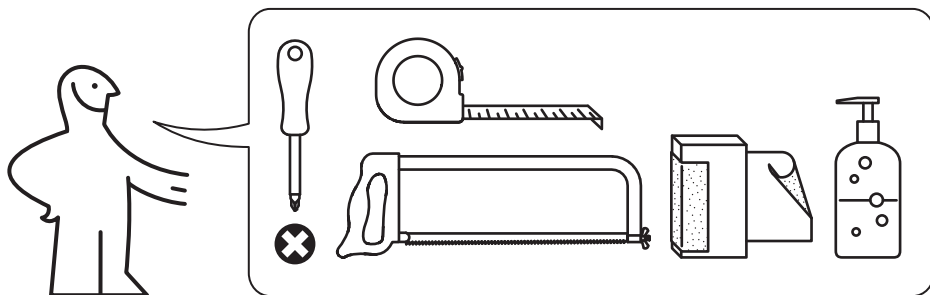


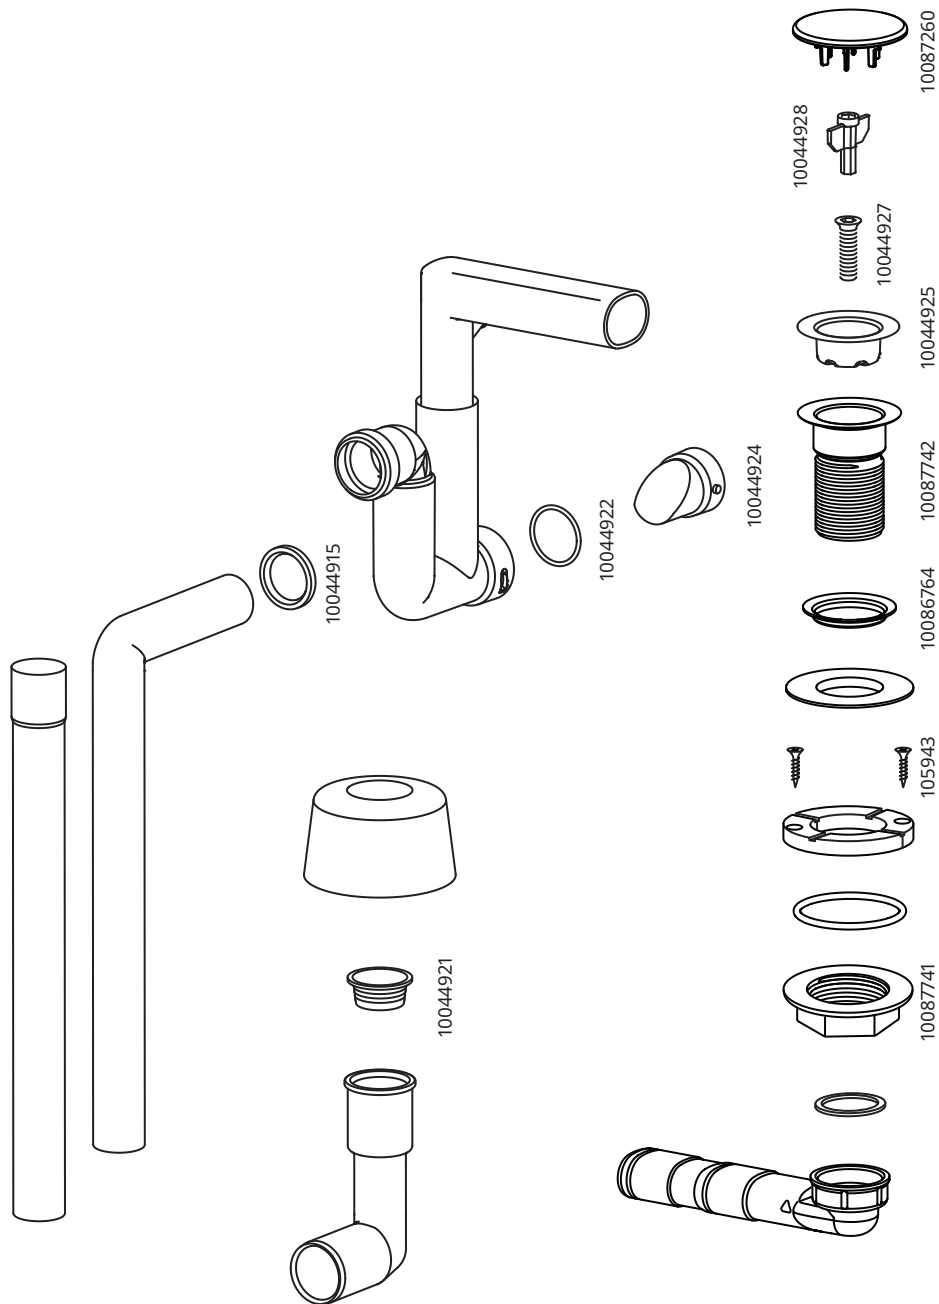


1

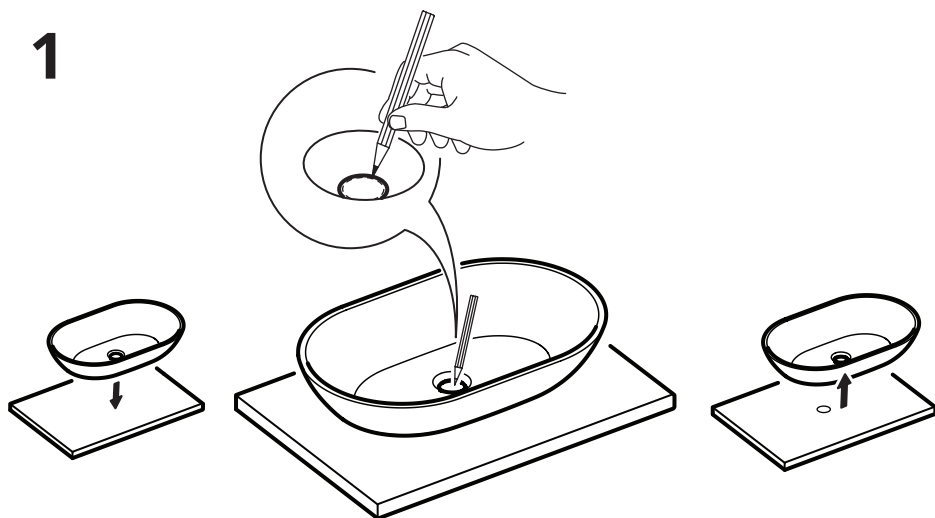

2

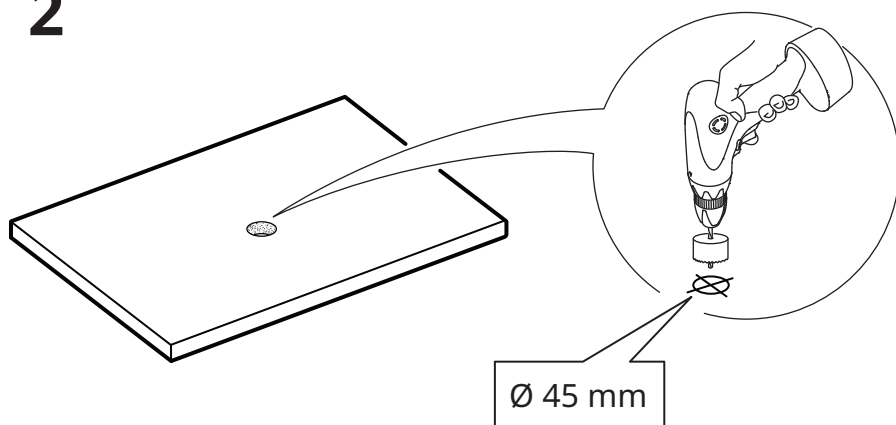 

3

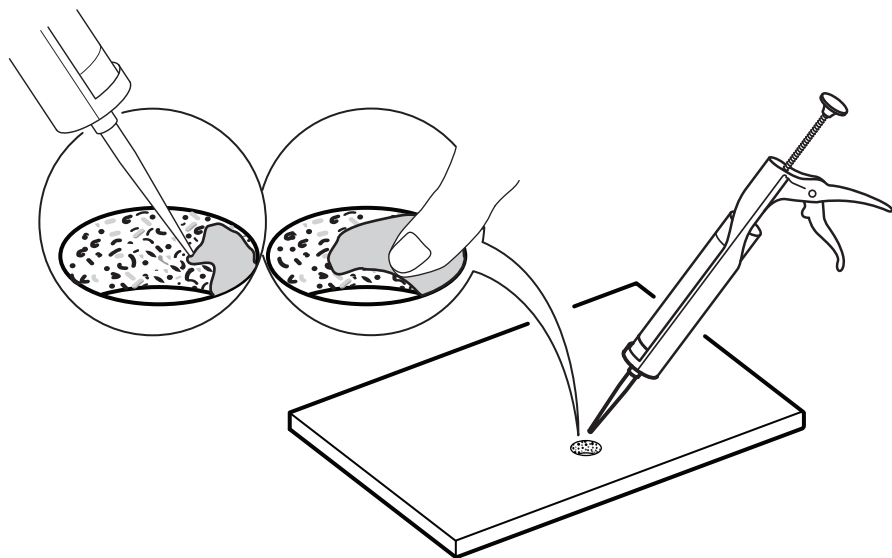 

Español

¡ATENCIÓN! Silicona no incluida.

Català

Nota: no s'inclou la silicona.

 
Euskara

ADI: Silikona bereiz saltzen da.


Galego

ATENCIÓN! Silicona non incluída.


4

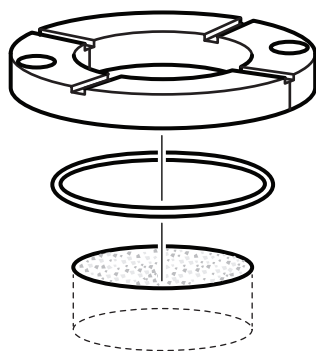


5



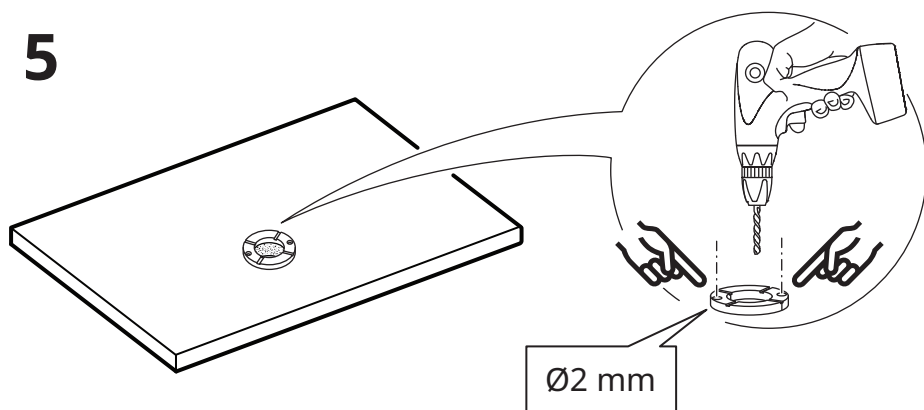 





6

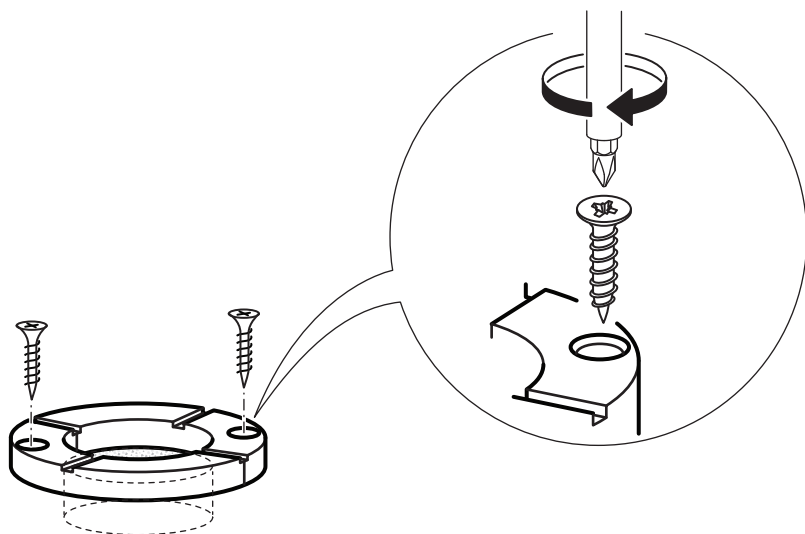 


7

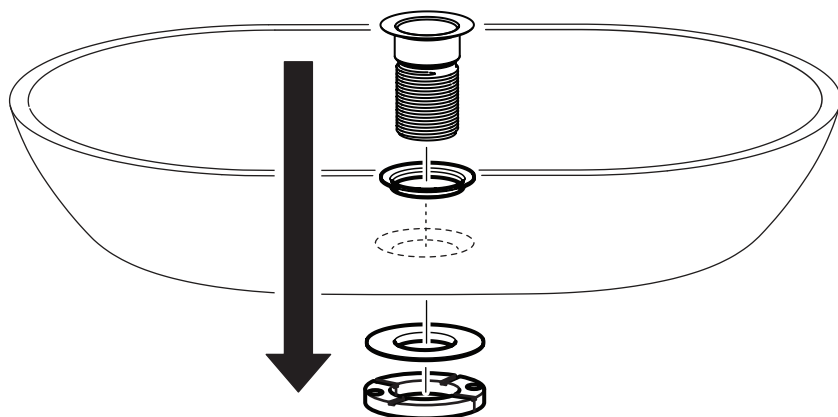 

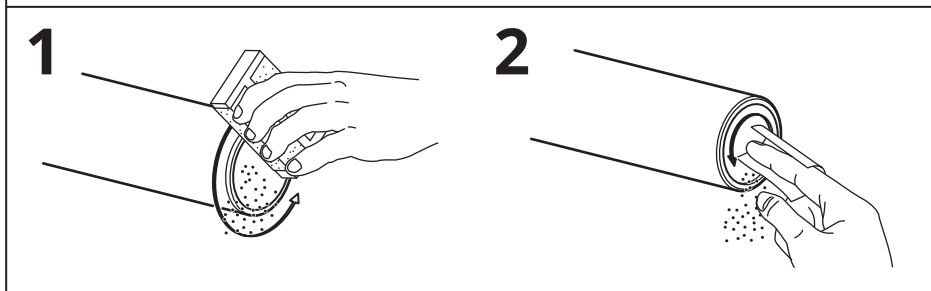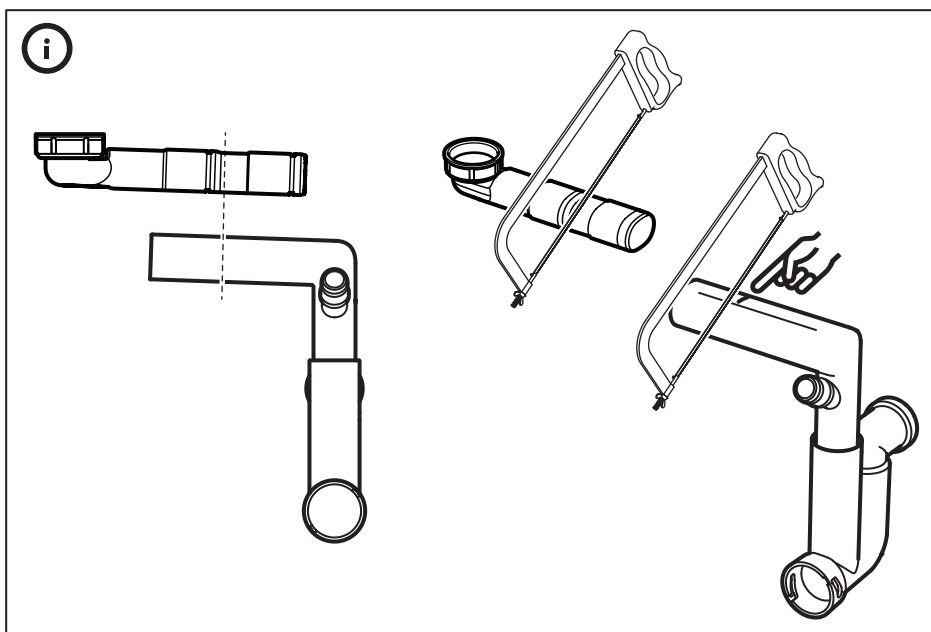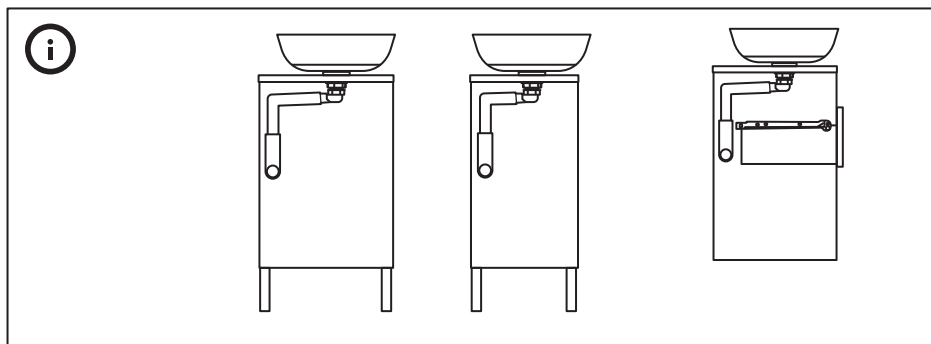   


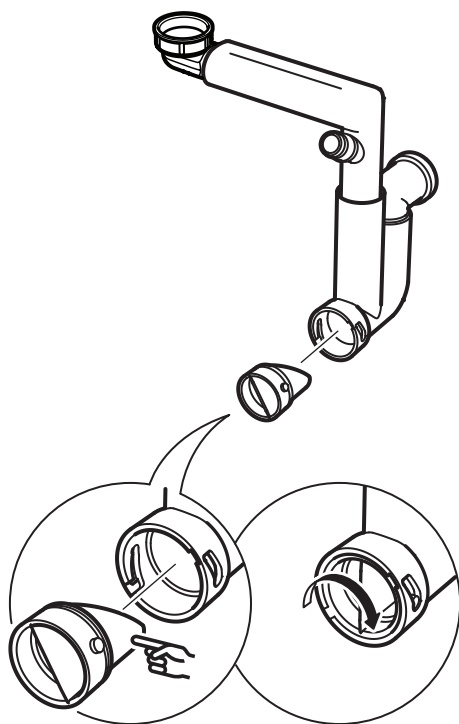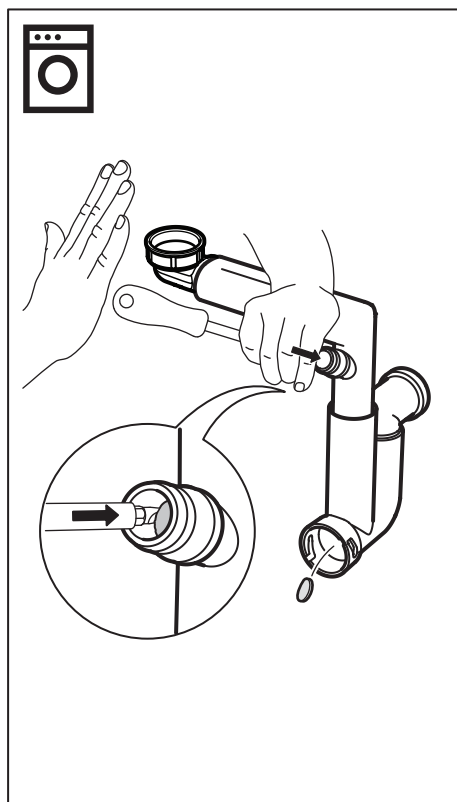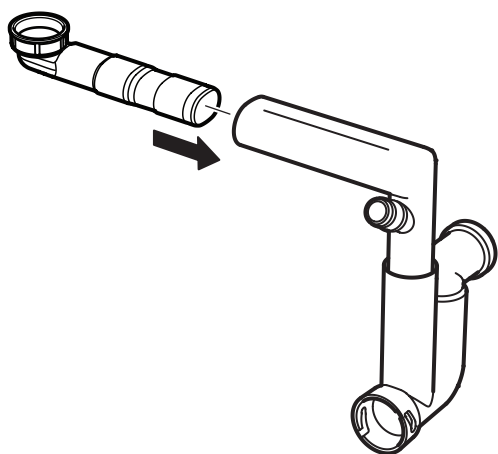   



8


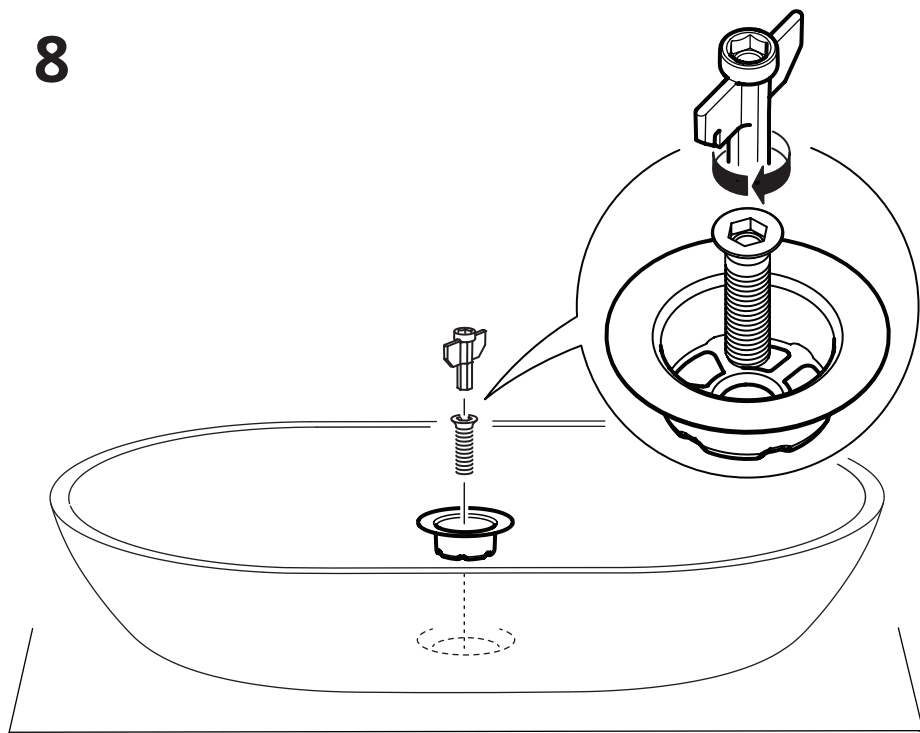 




9



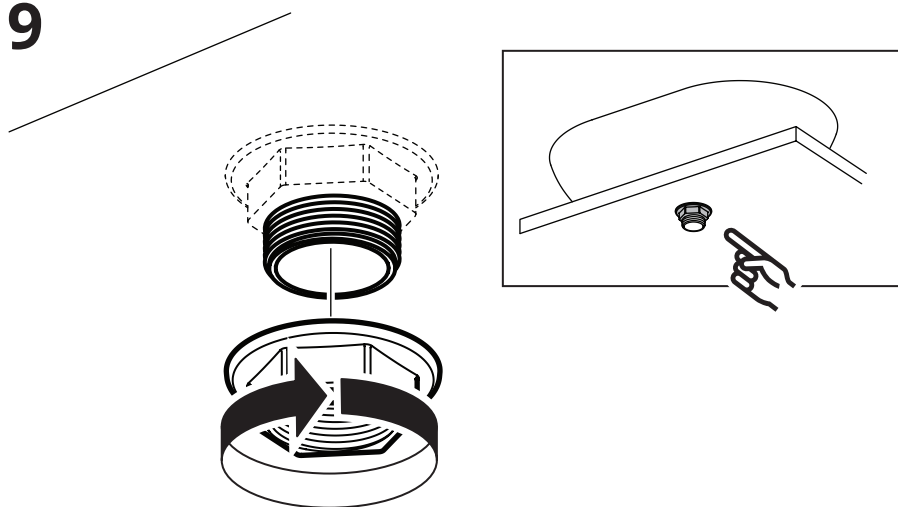 


10

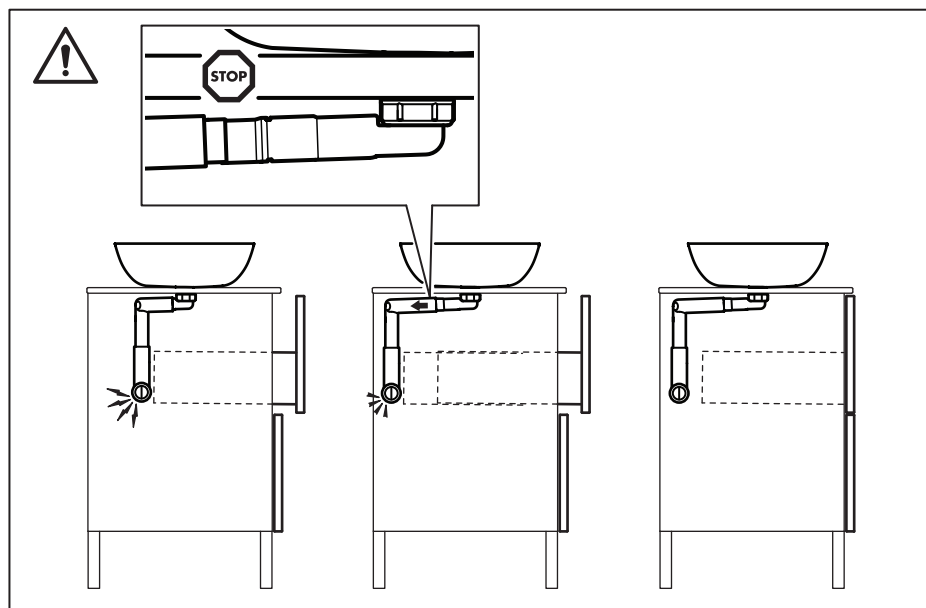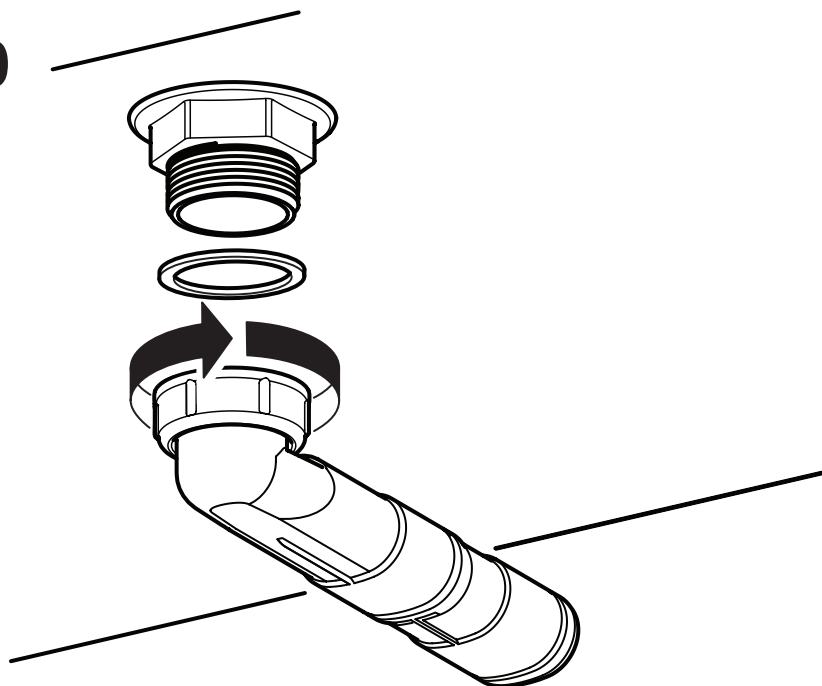  


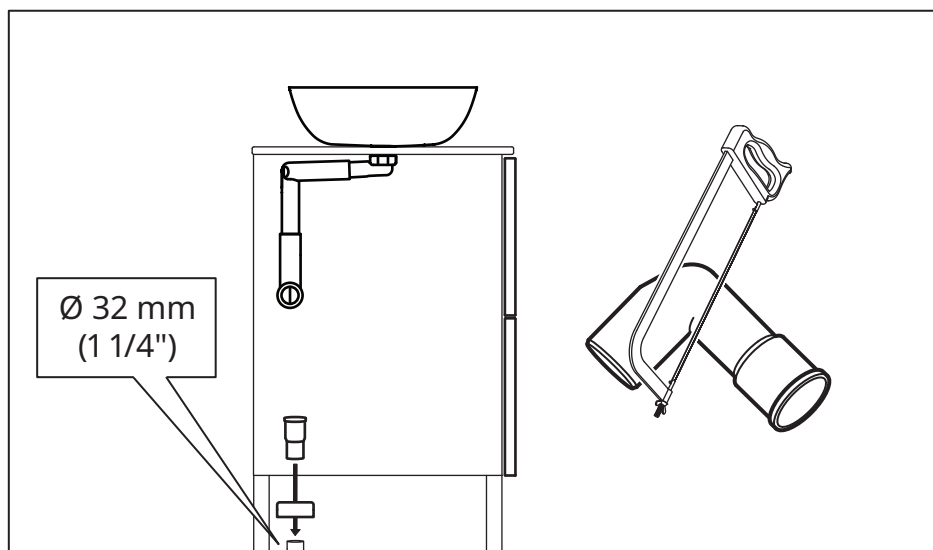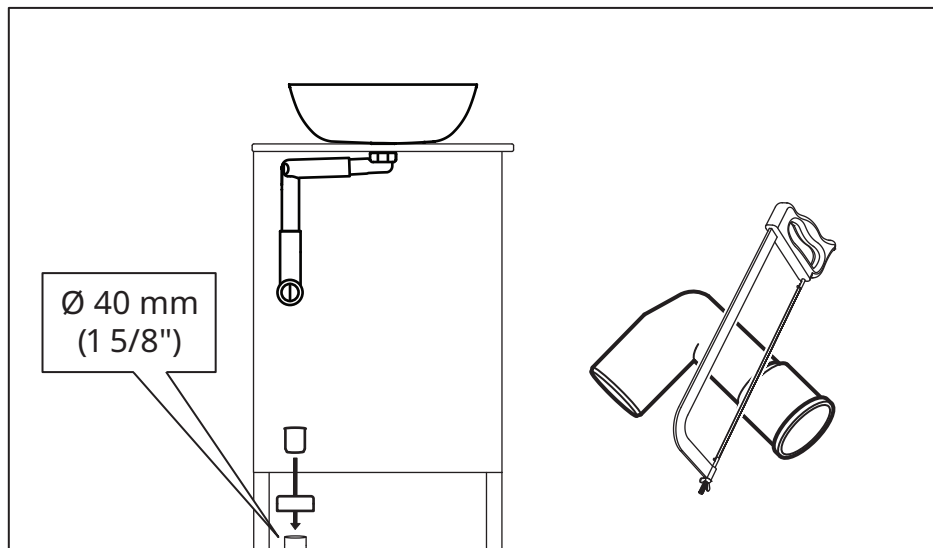  

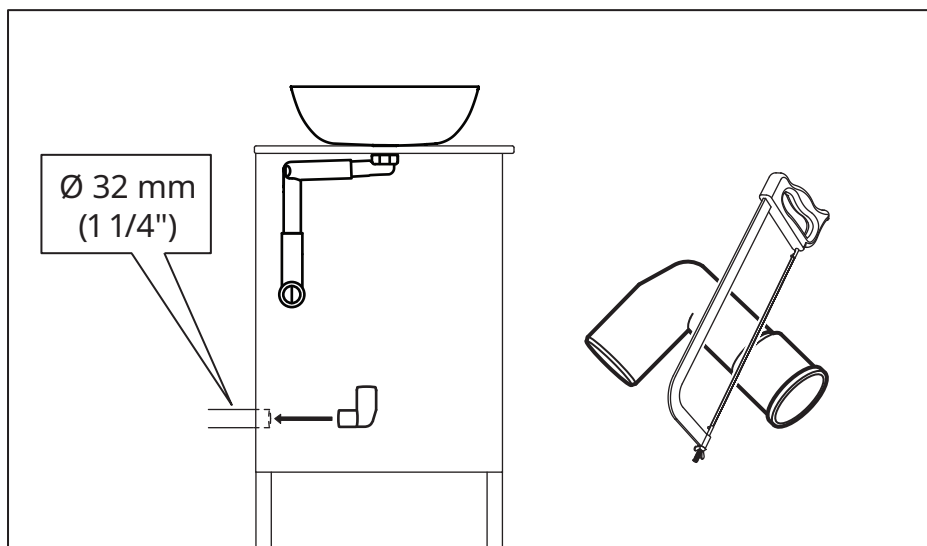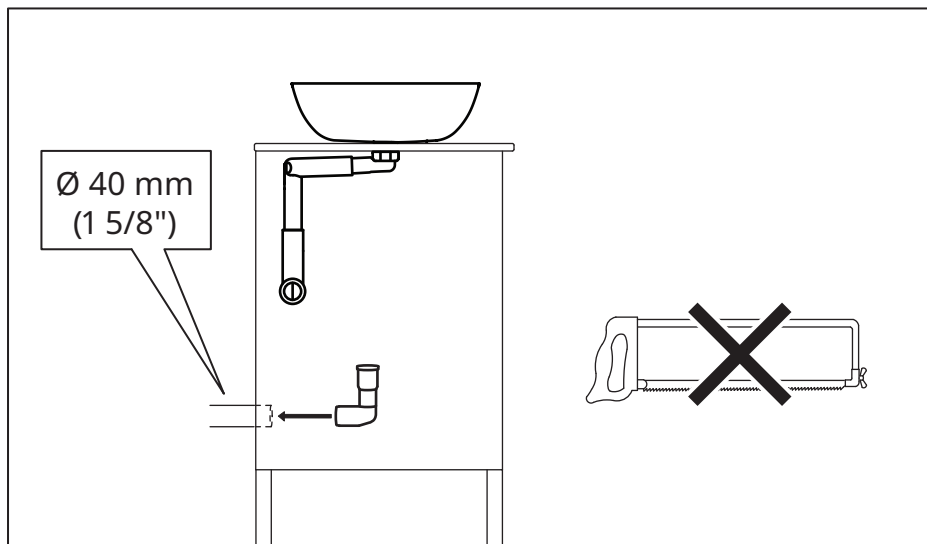  

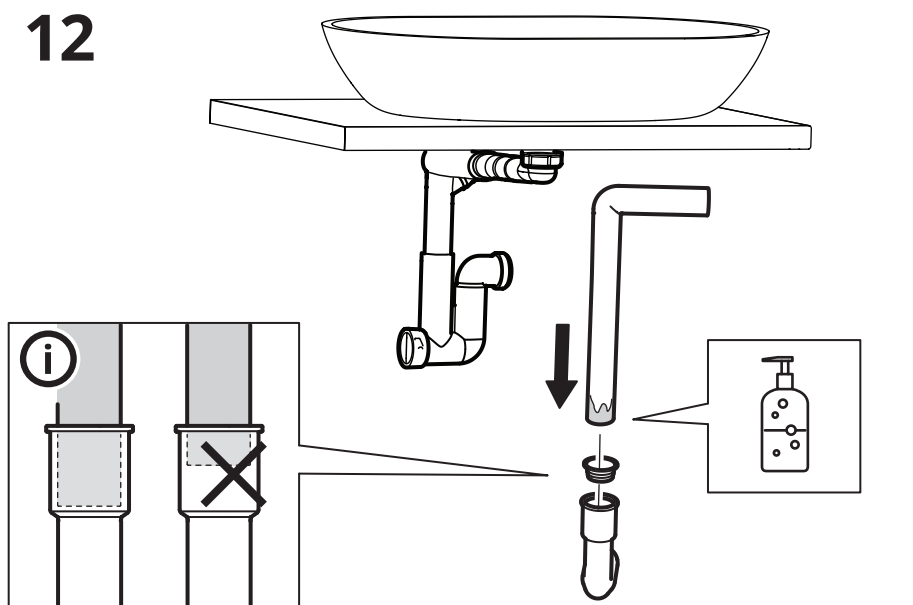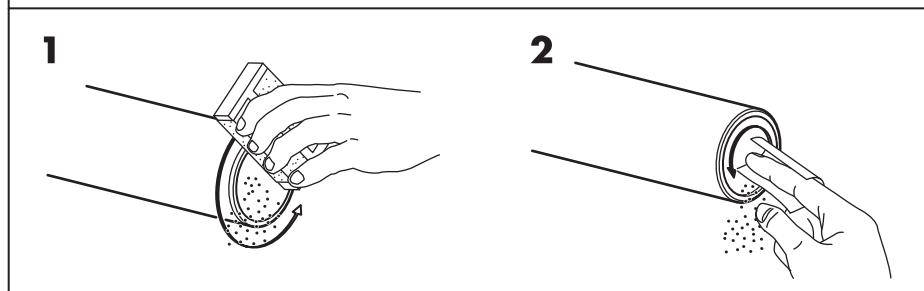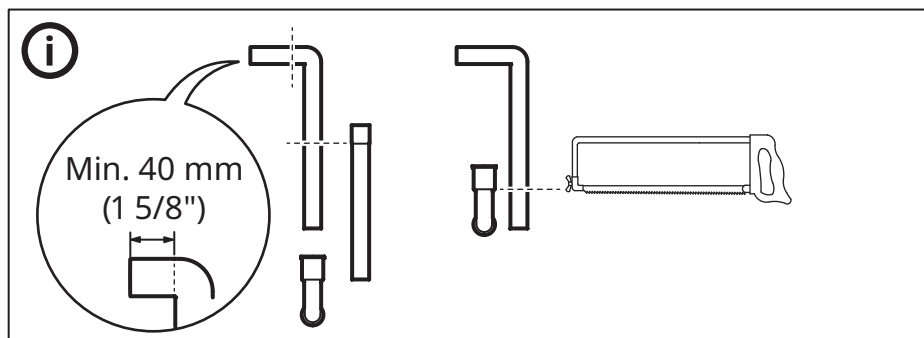   

13

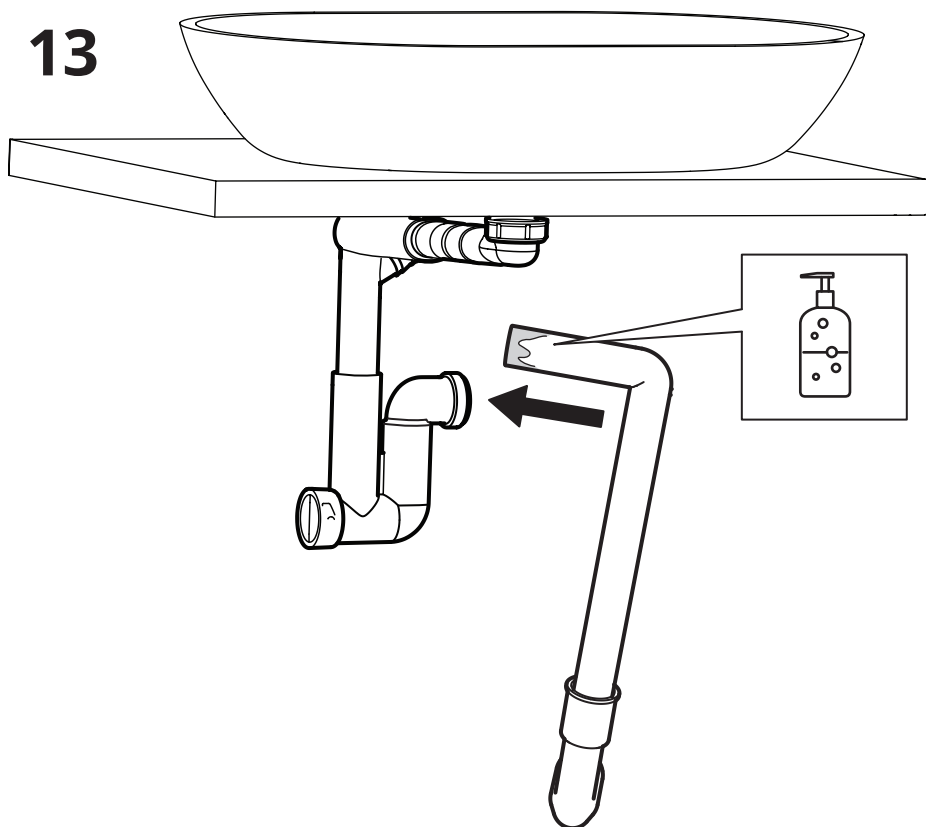 

Español

Sigue las instrucciones que acompañan los electrodomésticos.

Català

 
Segueix les instruccions que acompanyen els electrodomèstics.

 
Euskara

 
Jarraitu etxetresna elektrikoarekin datozen jarraibideak.

Galego

Sigue as instrucións que acompañan os electrodomésticos.

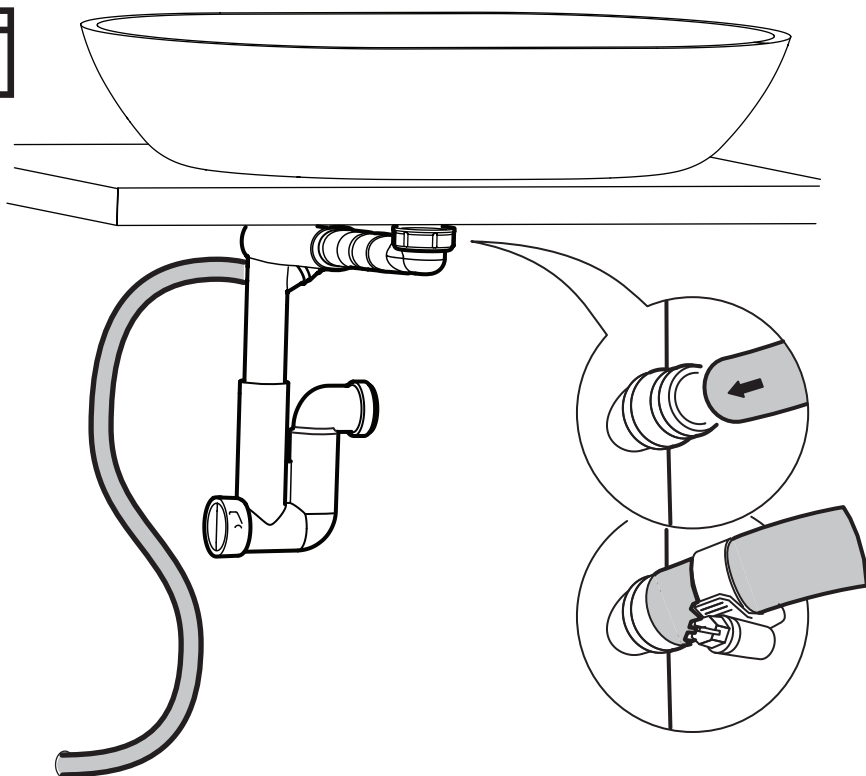

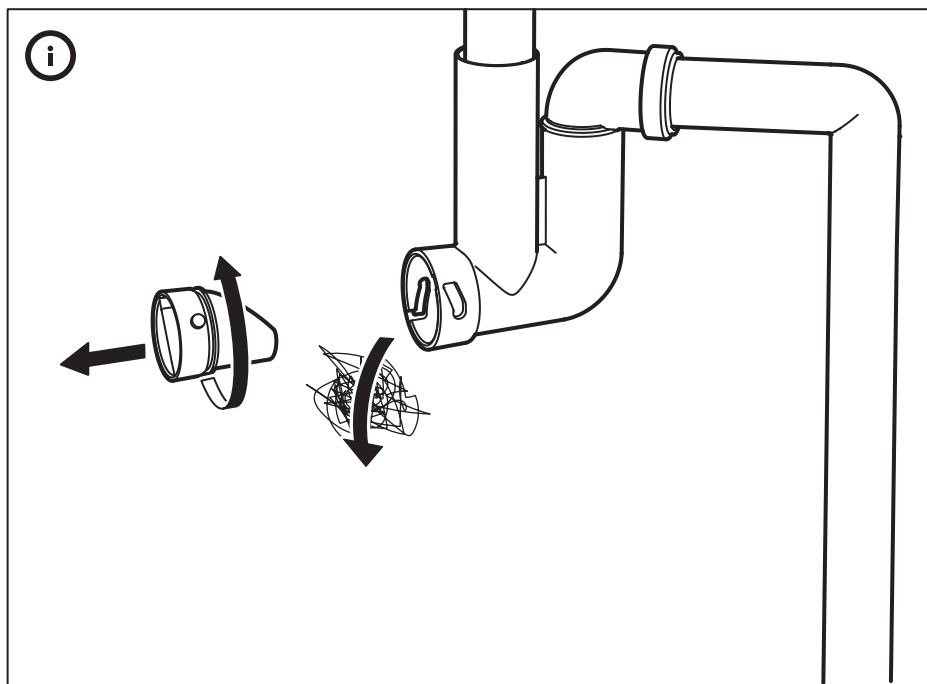

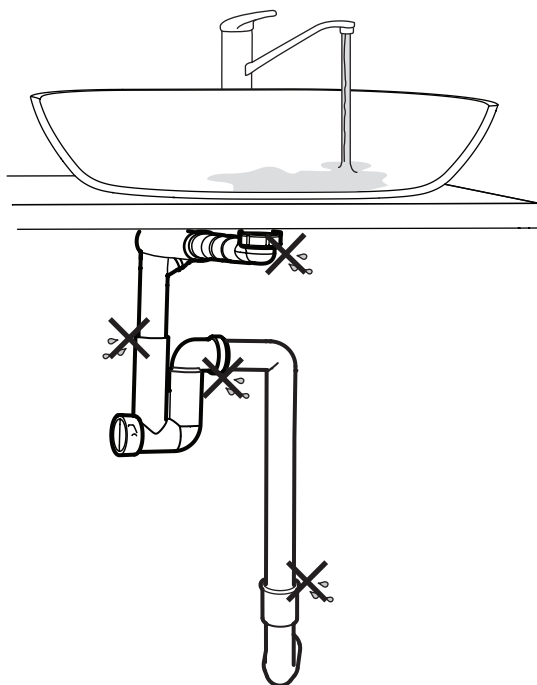

Español

Después de utilizado durante cierto tiempo, comprueba que todas las conexiones estén taponadas.

Català

Després de fer-lo servir durant un temps, comprova que totes les connexions estan ben fixades.

Euskara

Erabilera-aldi baten ondoren, konexio guztiak egiaztatu behar dira estuta daudela ziurtatzeko.

Galego

Despois dun tempo de uso, comproba que todas as conexións estean taponadas.

