


RUNSKÄR

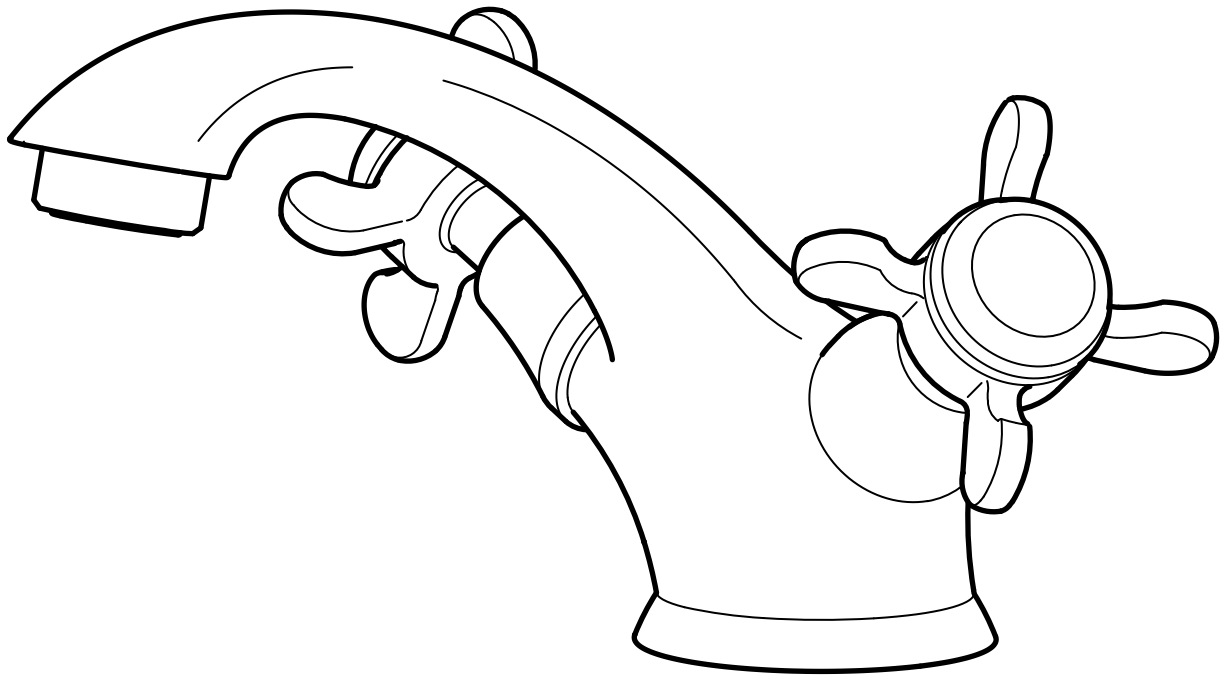



Design and Quality
IKEA of Sweden



**English**



Installation must be performed in compliance with current local construction and plumbing regulations. If in doubt, contact a professional.

**English**


Switch off main shut-off valve before changing mixer tap.

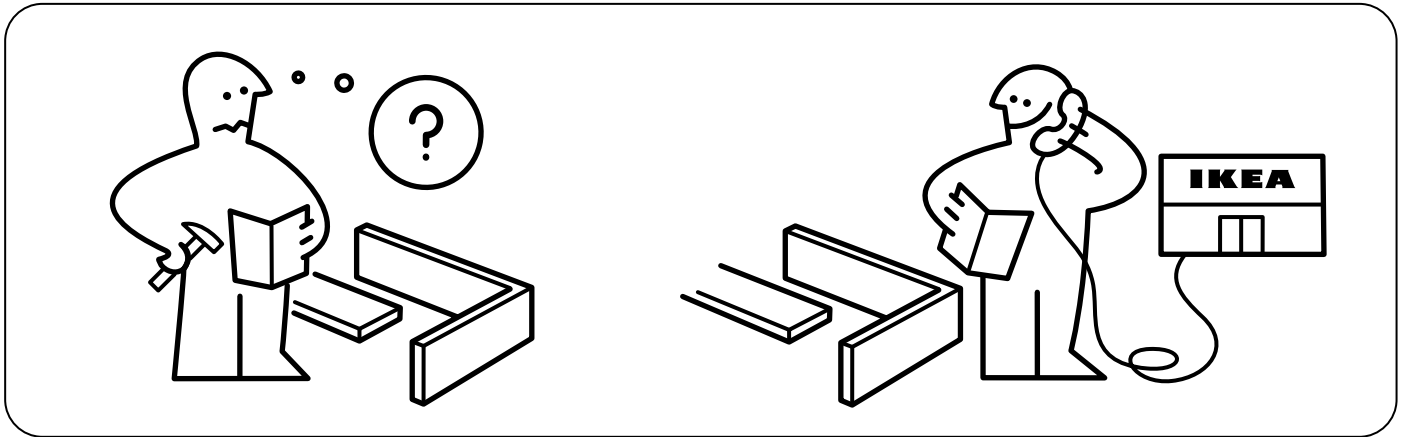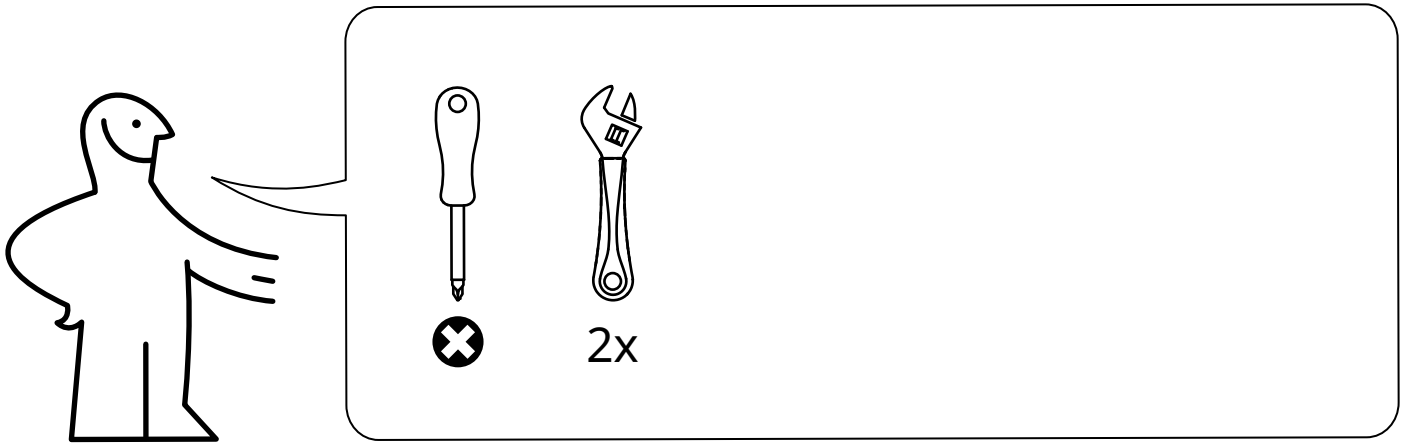

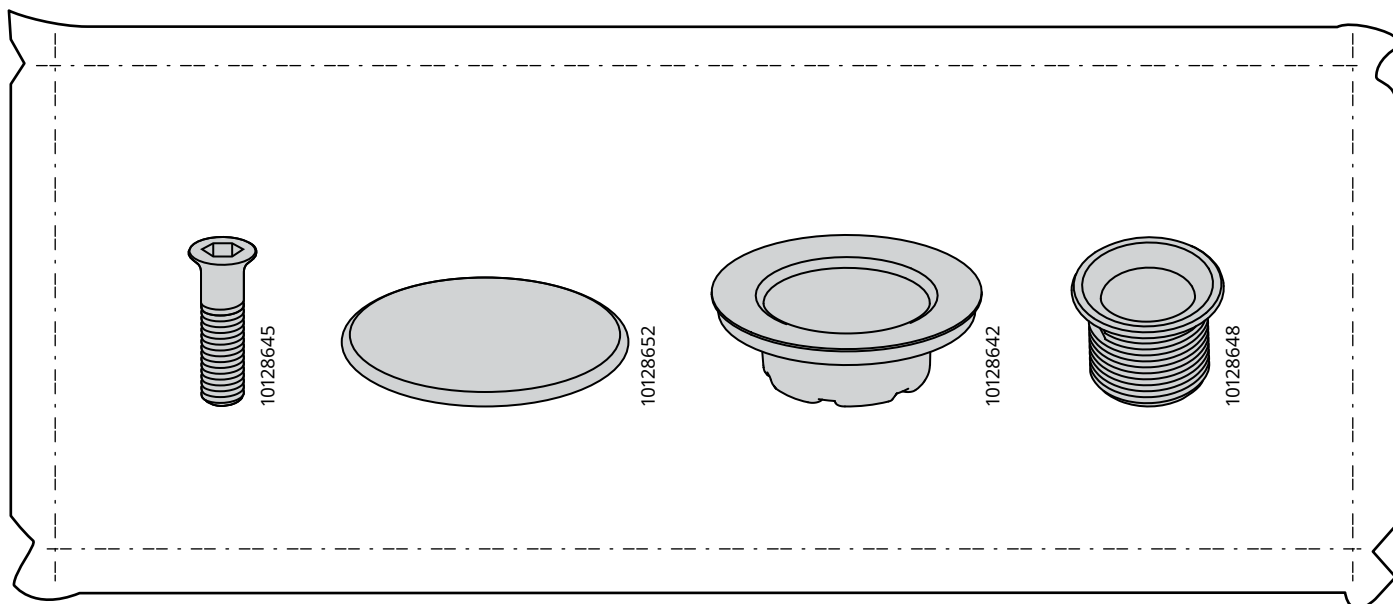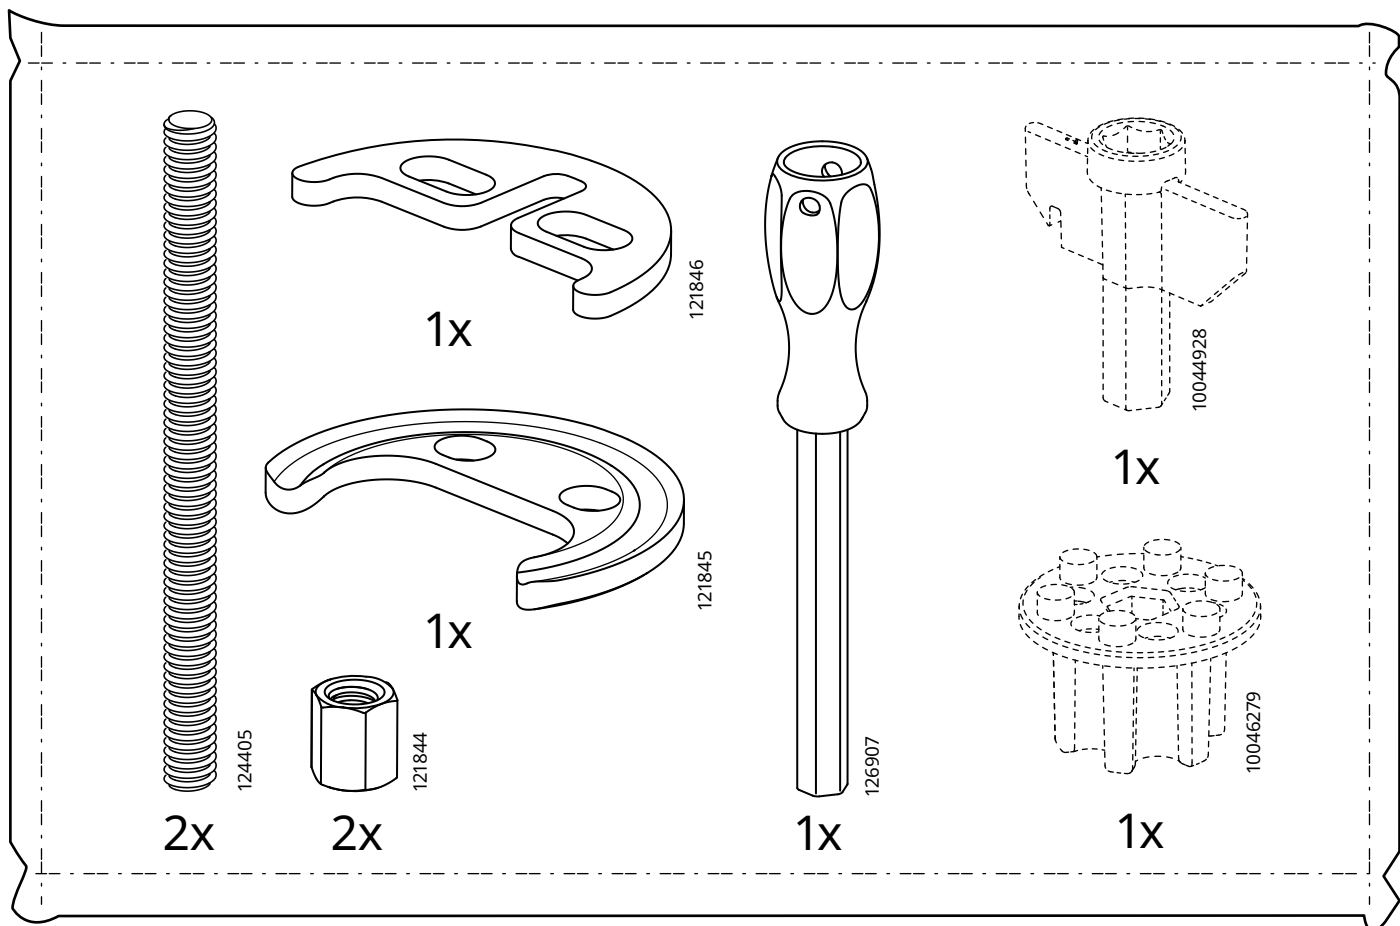


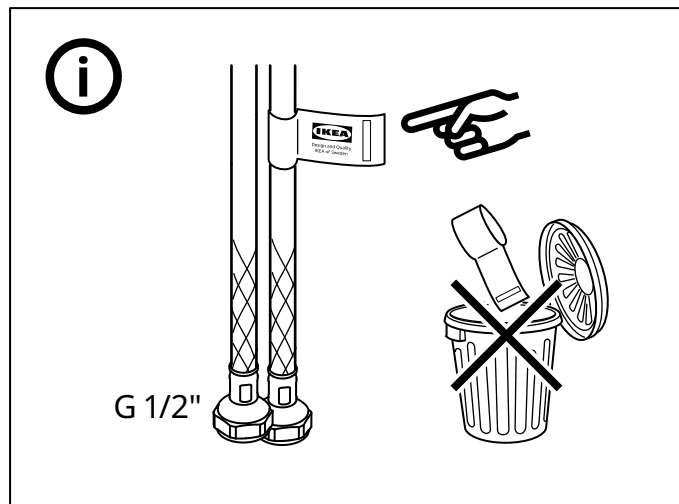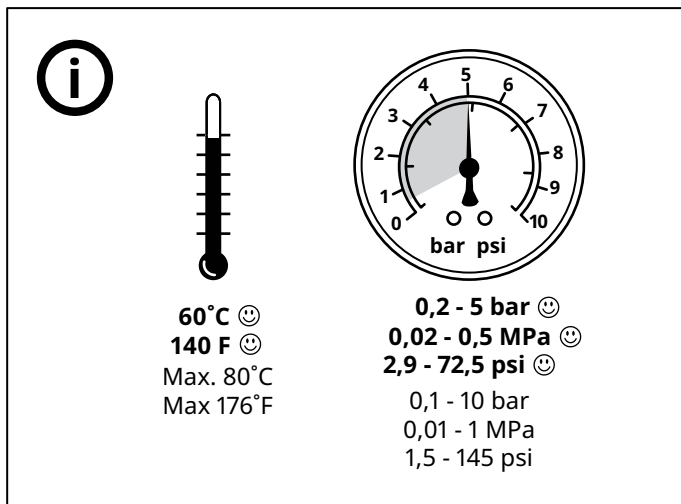

1

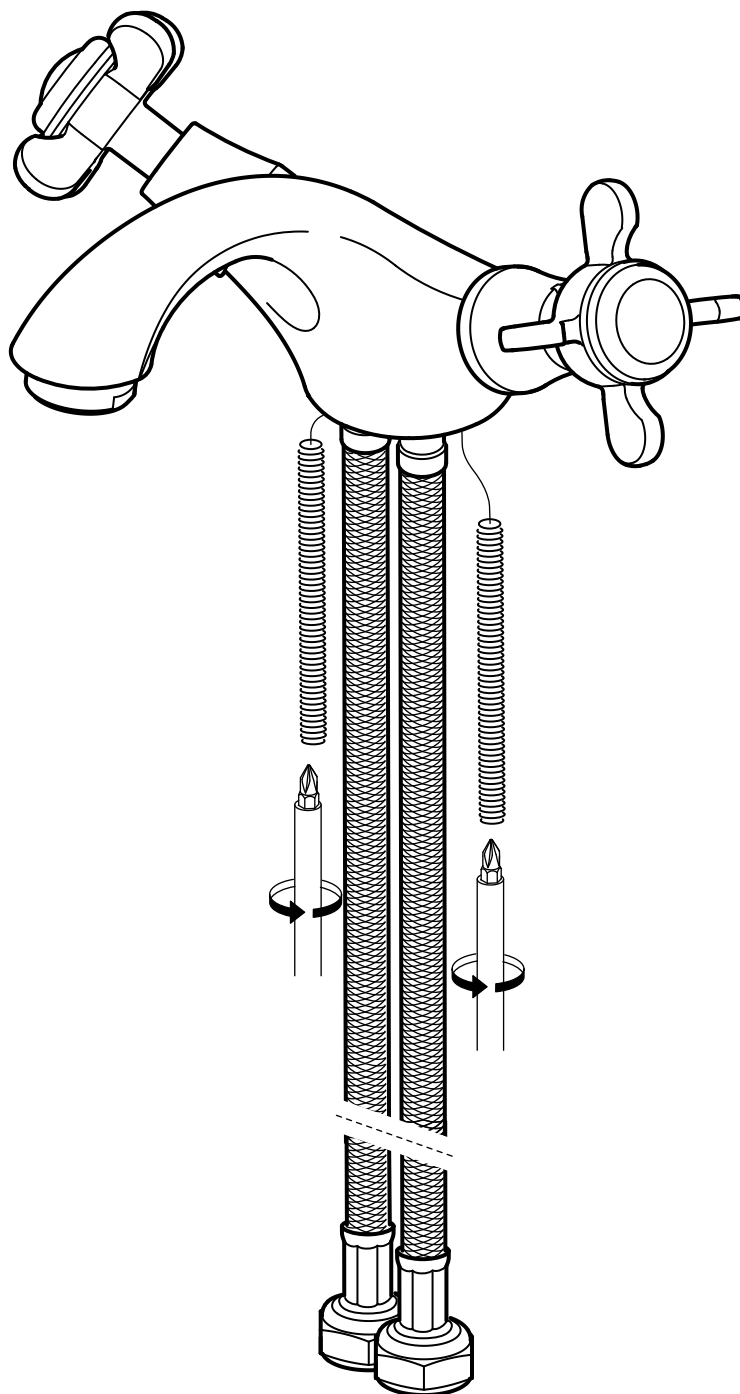


2

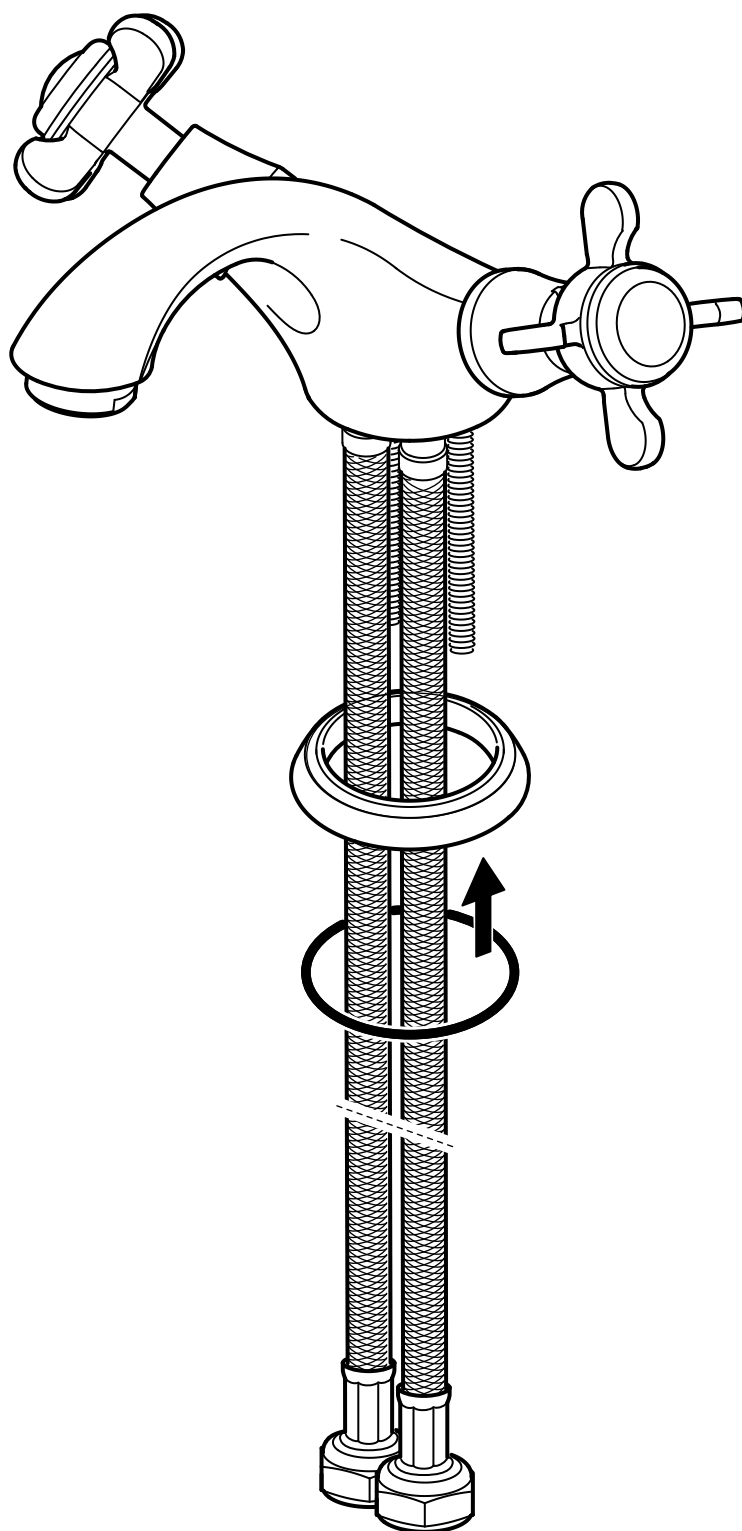


3

50 mm max.
2" max.

Ø 34 - 37 mm
Ø 1 3/8" - 1 7/16"



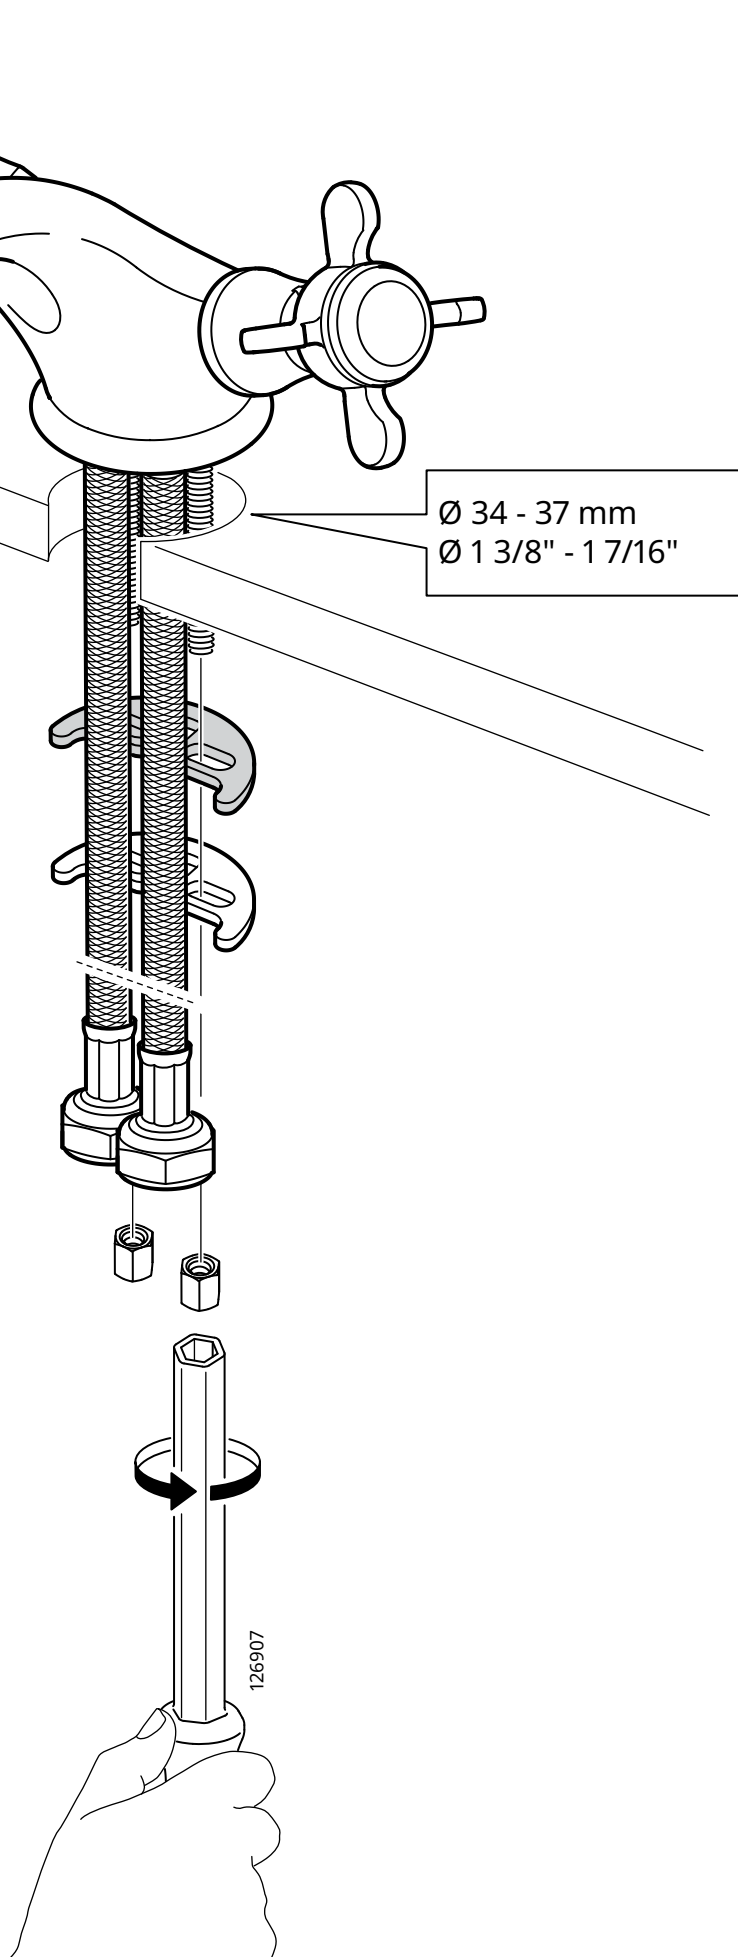


4



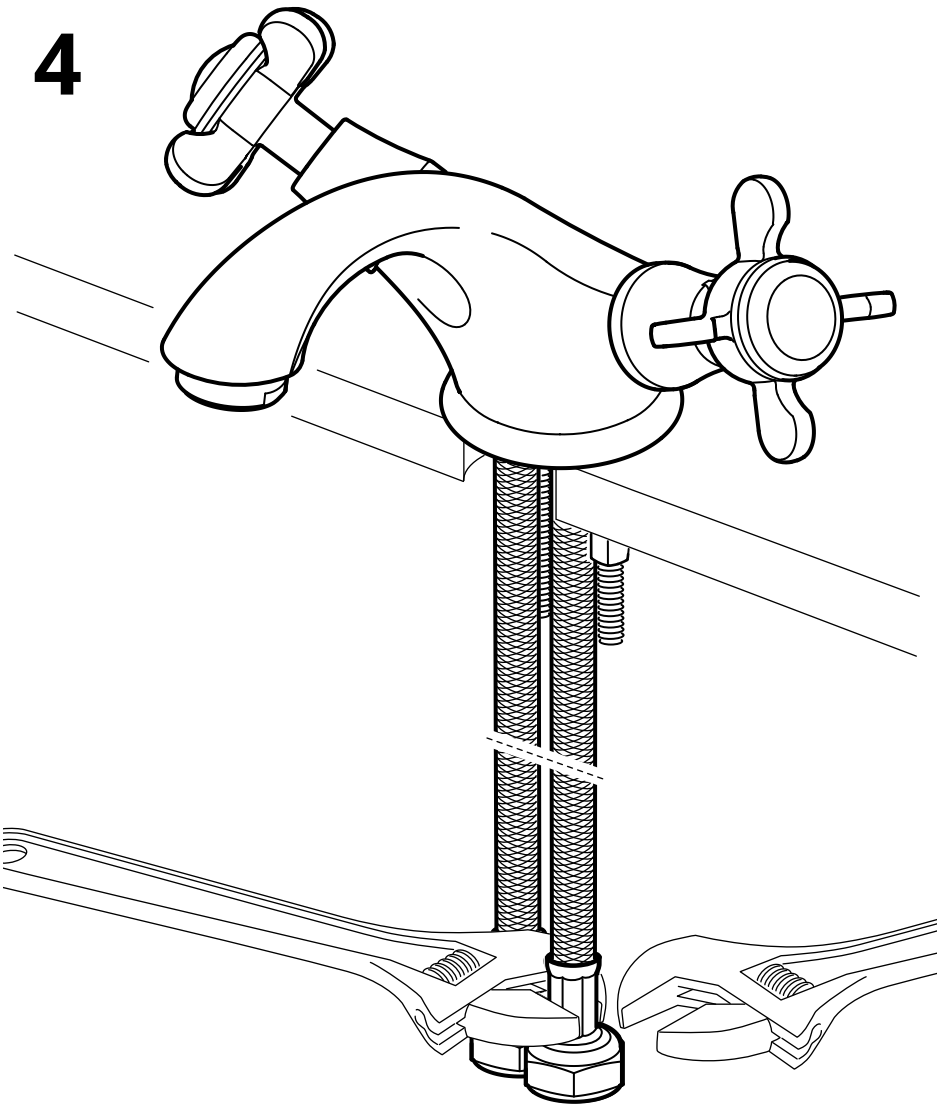


English

IMPORTANT! Do not tighten too hard: this can damage hoses/pipes and washers.

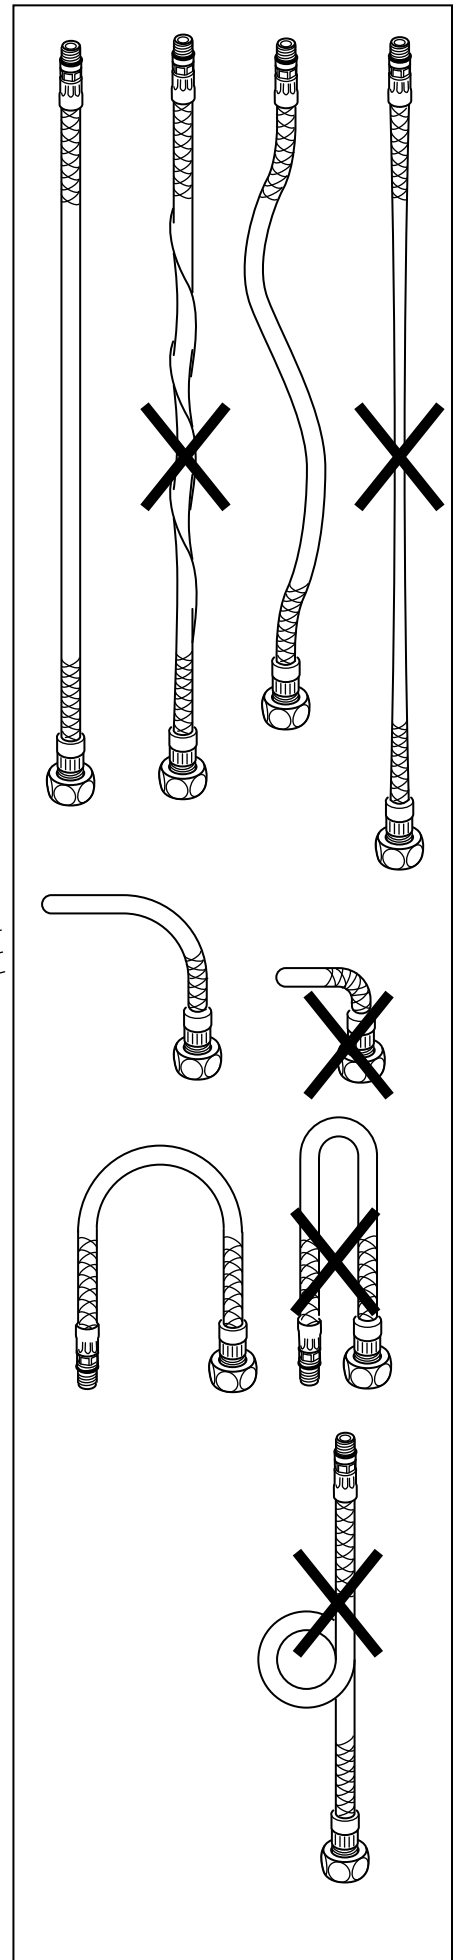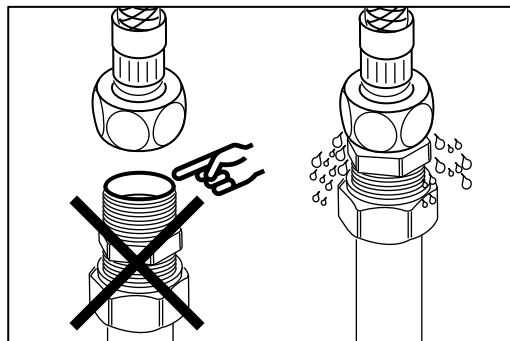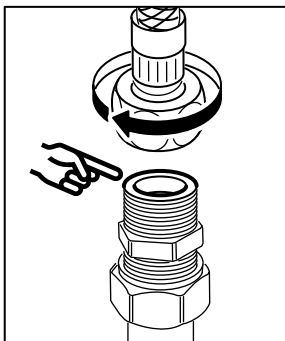

5

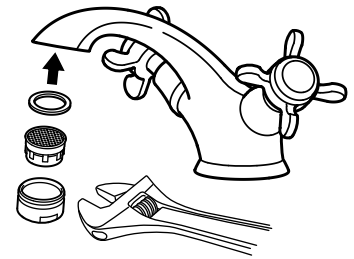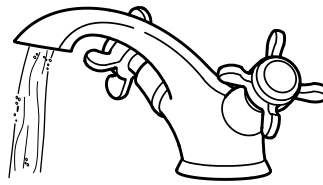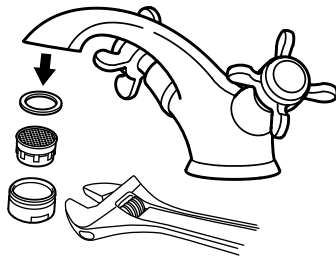

10004087
Pre-fitted
High pressure



Low pressure

English

Before use: Unscrew the Aerator/Flow Guide and allow the water to run freely for a few minutes. Then screw the Aerator/Flow Guide back in place. Ensure that it is tight to prevent removal by hand.



English

Check at regular intervals to make sure that the installation is not leaking.









English






Inlet supply hoses shall be installed where light is excluded.




English


Water supplies shall be at reasonably balanced pressures from a common source (e.g. hot and cold supplies both from the same storage or both from a supply pipe). Where the fitting is supplied from unbalanced supplies (e.g. hot and cold supplies from separate sources) an 'Approved' single check valve or some other no less effective backflow prevention device shall be fitted immediately upstream of both hot and cold water inlets.

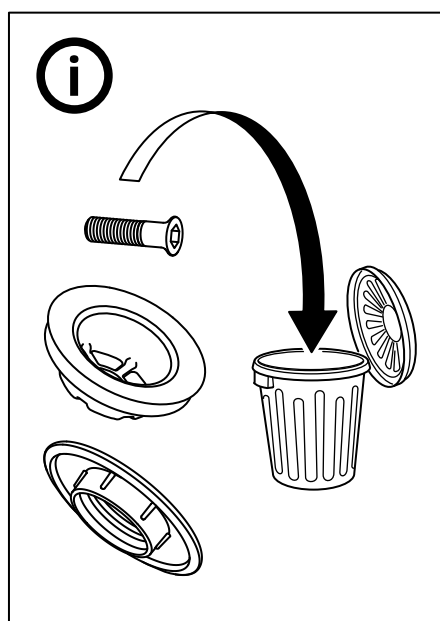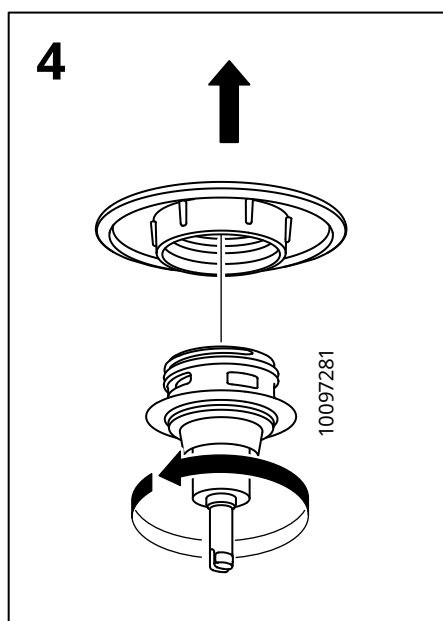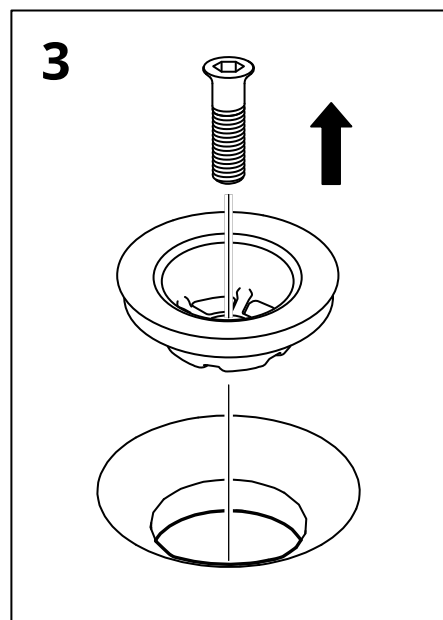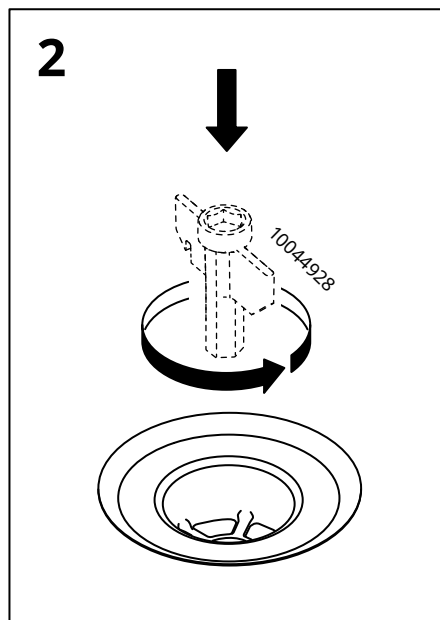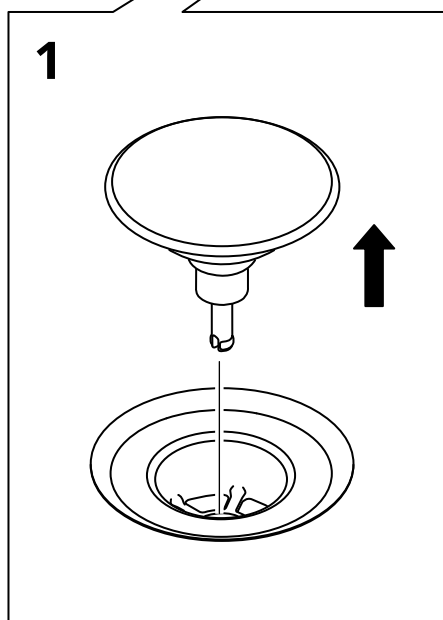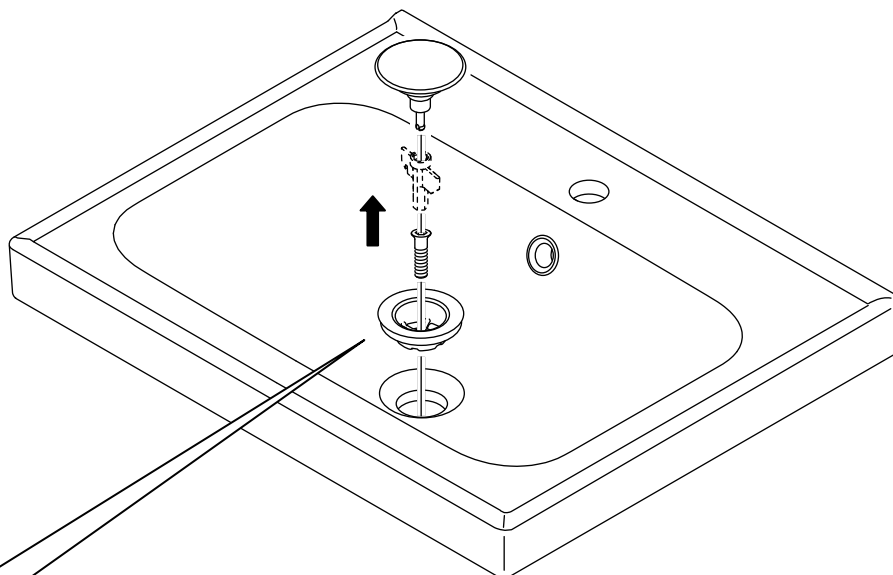

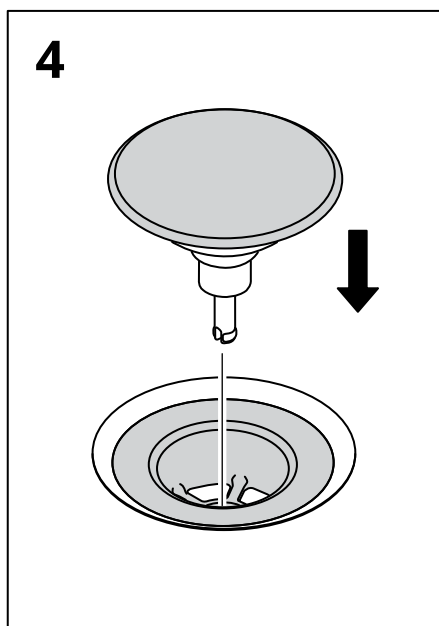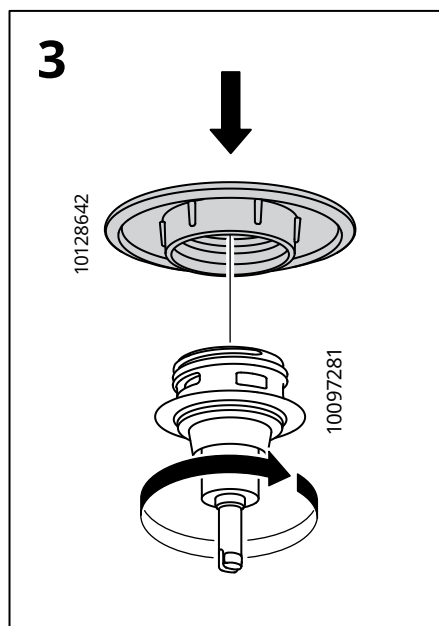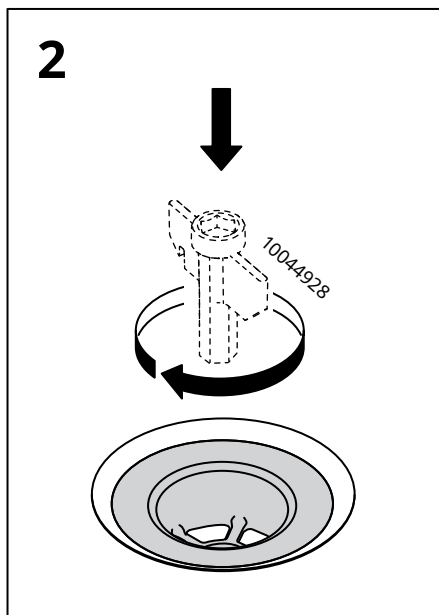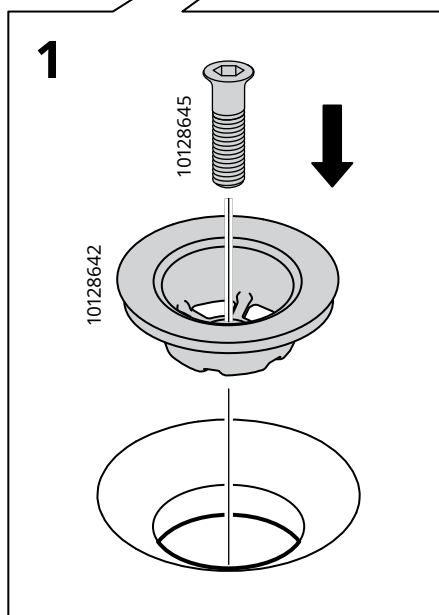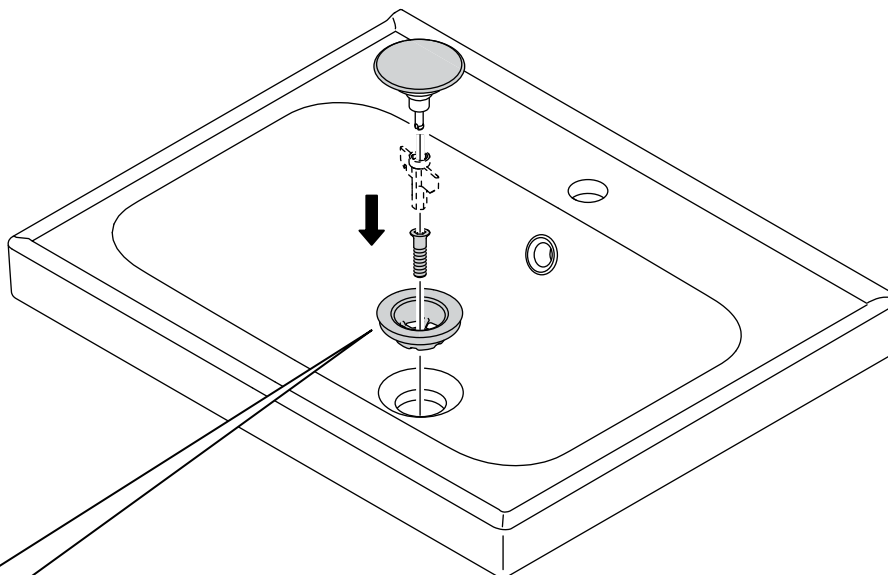


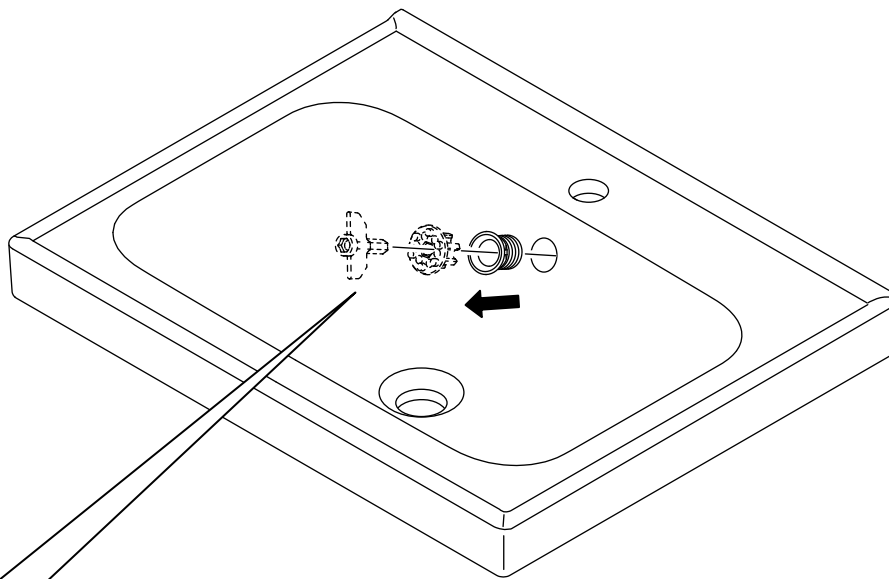


1

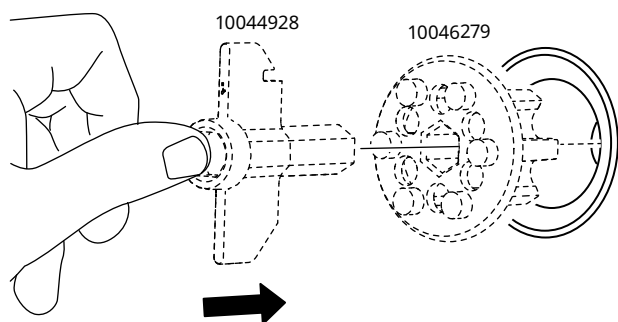


2

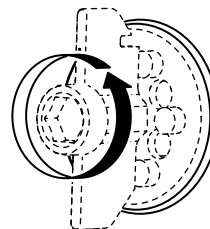


3

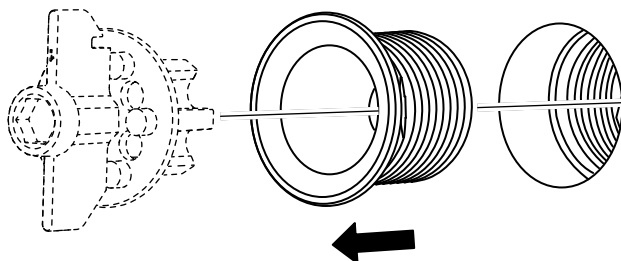


i

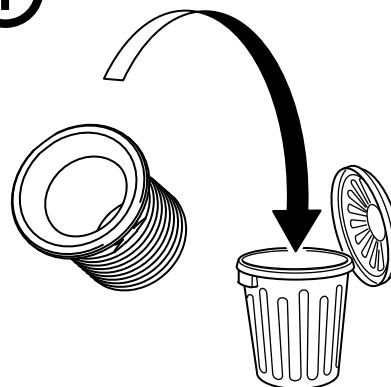


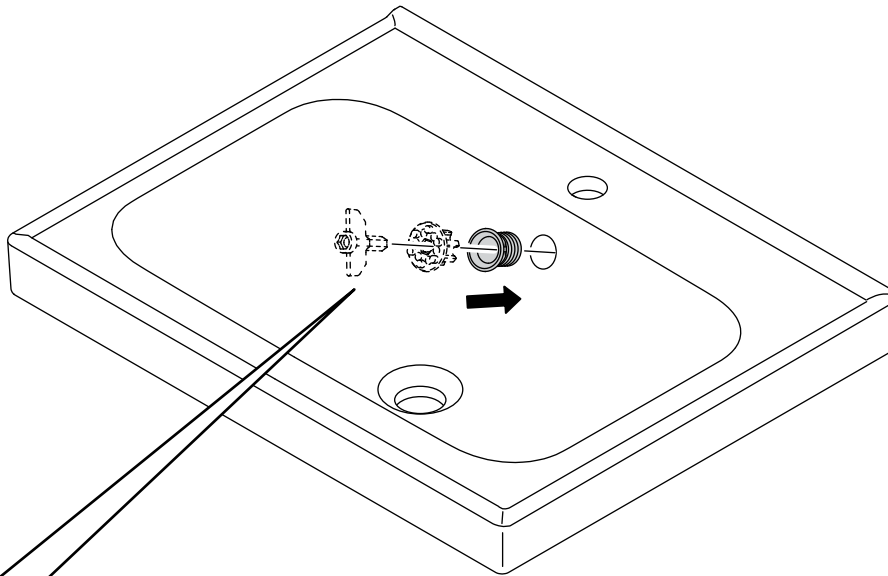

1

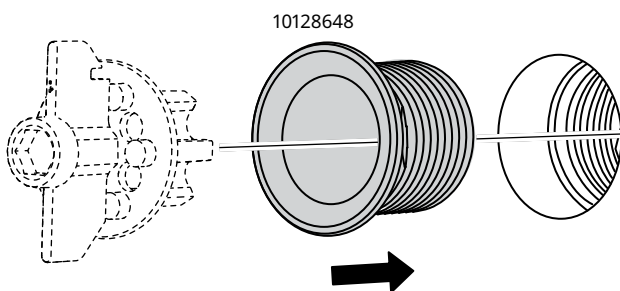

2

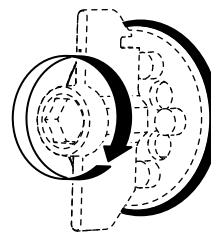

3

