



FINSMAKARE


en

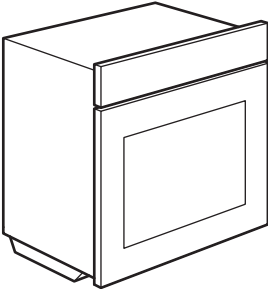

Design and Quality
IKEA of Sweden

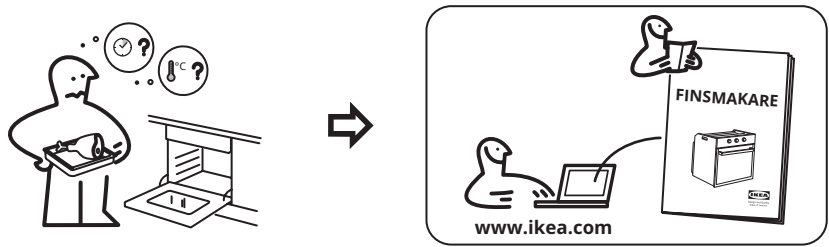


1x

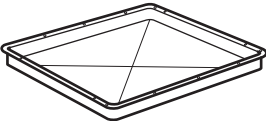


1x



2x

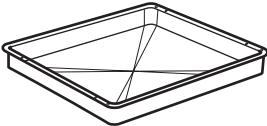





1x

 


1x



2x

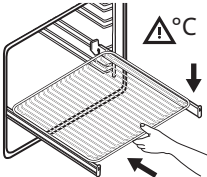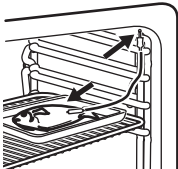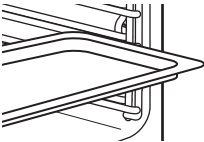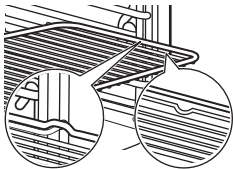

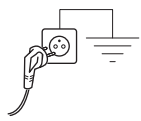

1

00:00

06:00

2

06:00

06:59

1

2

3

English



3 sec

1

3

4

2

⌚ 16:30

⌚ 00:15

150°C

3 sec

5

6

30-230°C

⌚ 16:30

⌚ 00:15



150°C



3 sec

8


9

7

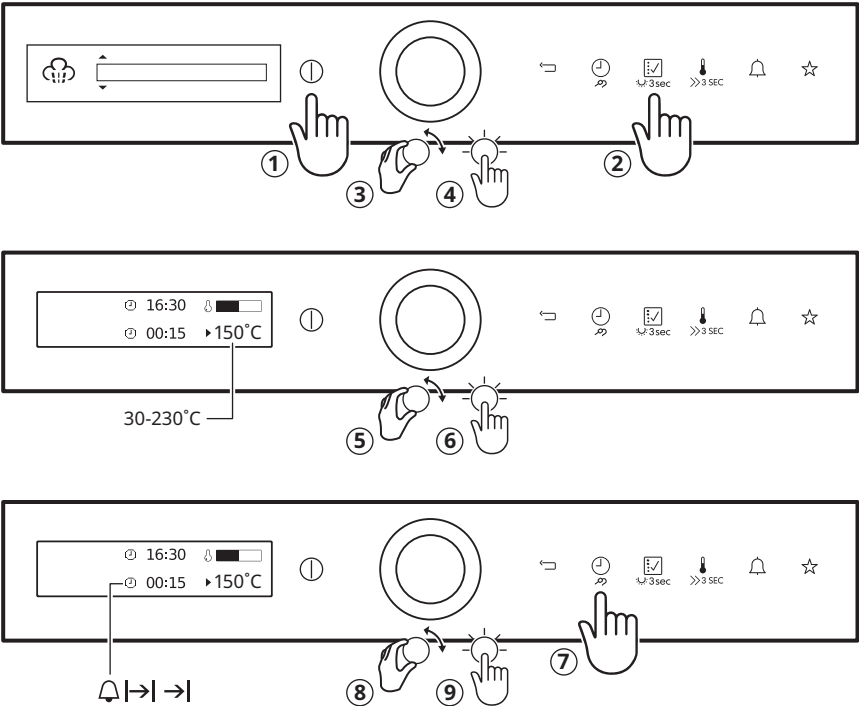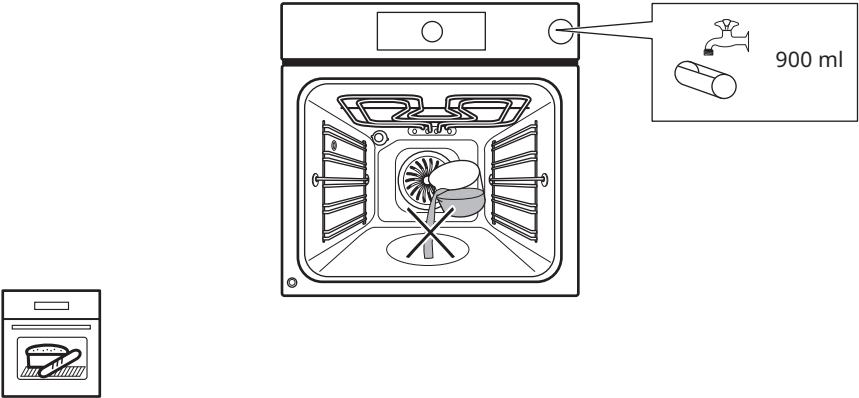

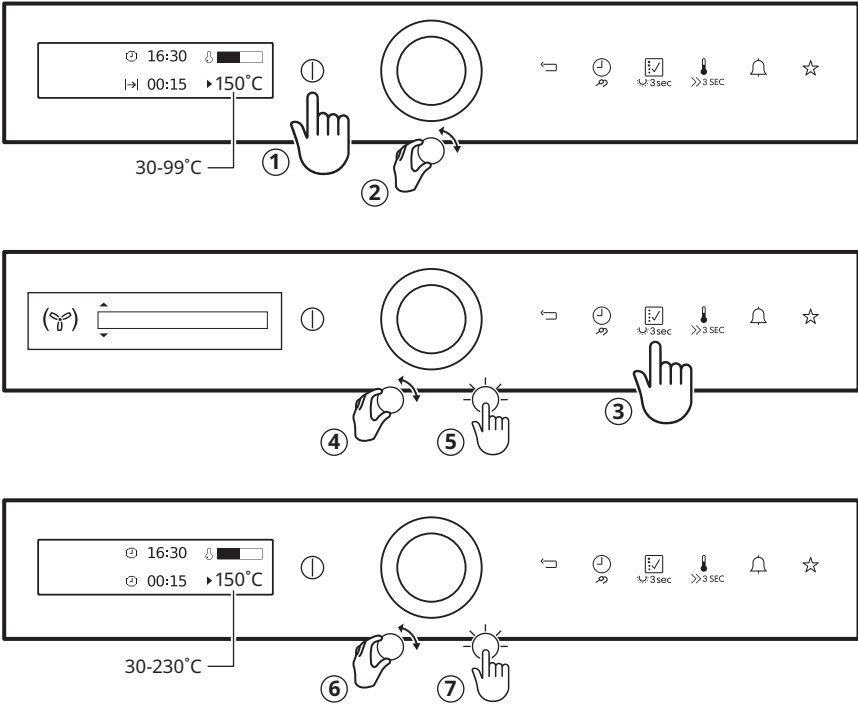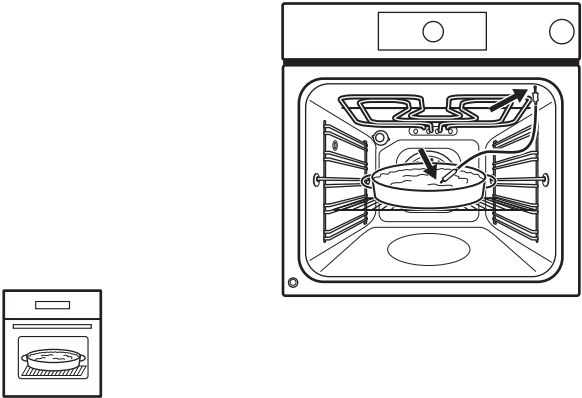


Product Description

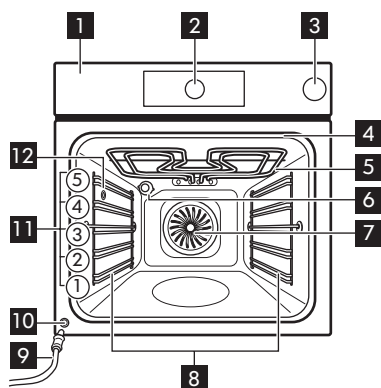


- 1** Control panel
- 2** Electronic programmer
- 3** Water drawer
- 4** Socket for the core temperature sensor
- 5** Grill
- 6** Lamp
- 7** Fan
- 8** Shelf support, removable
- 9** Draining pipe
- 10** Water outlet valve
- 11** Shelf positions
- 12** Steam inlet

Control Panel

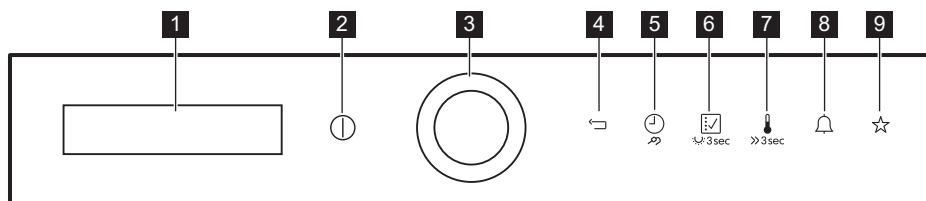

- 1** Display
- 2** ON / OFF
- 3** OK / Shuttle
- 4** Back key
- 5** Time / More functions
- 6** Heating Functions / Assisted Cooking / Lamp
- 7** Temperature / Fast Heat Up
- 8** Minute minder
- 9** Favourite programmes

Display

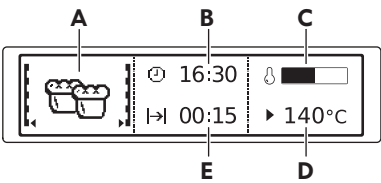

- A. Heating function
- B. Time of day
- C. Heat-up indicator
- D. Temperature
- E. Duration time or end time of a function

Other indicators of the display:

Symbol	Function
	The function is on.
	Shows current time.
	Shows the necessary time for cooking.
	Shows cooking duration.
	Shows the temperature.
	Shows when the set cooking time ends.
	The oven calculates required cooking time.
	Indicates heat level in the oven.
	Fast Heat Up is on.
	Shows that Weight Automatic function is on, or that you can change the weight setting
	Heat + Hold is on.

Heating Functions

- True Fan Cooking**
- True Fan + Steam**
- Conventional Cooking**
- Pizza Function**
- Slow Cooking**
- Bottom Heat**
- Moist Fan Baking**
- Frozen Foods**
- Grill**
- Fast Grilling**
- Turbo Grilling**
- Steam Regenerating**
- Even baking, tenderness, drying

Vegetables, side dishes, fish

Traditional baking

Baking pizza

For tender roasts

Baking cakes

Baking

For convenience food (e.g. french fries)

Grilling, toasting

Grilling big portions, toasting

Roasting meat, browning

Reheating on a plate

Specials



Bread Baking
Au Gratin



Dough Proving
Plate Warming



Preserving
Dehydrating



Keep Warm
Defrost

Notes on: Moist Fan Baking

This function was used to comply with the energy efficiency class and ecodesign requirements (according to EU 65/2014 and EU 66/2014). Tests according to:

For EU: EN 60350-1

For UK: BS EN 60350-1

The oven door should be closed during cooking so that the function is not interrupted and the oven operates with the highest energy efficiency possible.

When you use this function the lamp automatically turns off after 30 sec.
This function is designed to save energy during cooking. When you use this function, the temperature in the cavity may differ from the set temperature. The heating power may be reduced.

Troubleshooting

If you encounter an issue with your appliance, check "Troubleshooting" chapter


in the full version of the User Manual available on: www.ikea.com.

Product Information and Product Information Sheet / Product Information Sheet according to UK Ecodesign and Energy Labelling Regulations

Supplier's name	IKEA
Model identification	FINSMAKARE 004.118.84
Energy Efficiency Index	81.2
Energy efficiency class	A+
Energy consumption with a standard load, conventional mode	0.93 kWh/cycle
Energy consumption with a standard load, fan-forced mode	0.69 kWh/cycle
Number of cavities	1
Heat source	Electricity
Volume	72 l
Type of oven	Built-In Oven
Mass	39.0 kg
For EU: EN 60350-1- Household electric cooking appliances - Part 1: Ranges, ovens, steam ovens and grills - Methods for measuring performance. For UK: BS EN 60350-1 - Household electric cooking appliances - Part 1: Ranges, ovens, steam ovens and grills - Methods for measuring performance.	



867376177-B-232023

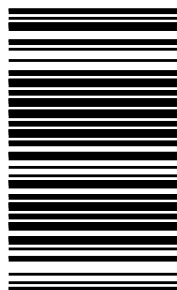

© Inter IKEA Systems B.V. 2023

21552

AA-2335901-3