



KULINARISK


en

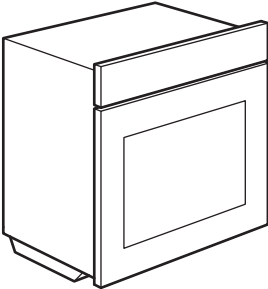

Design and Quality
IKEA of Sweden

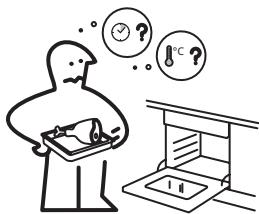


1x

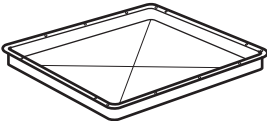


1x




2x

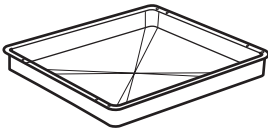





1x

 


1x

 

2x

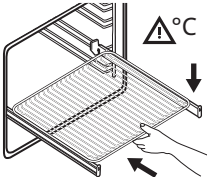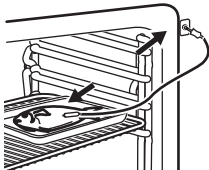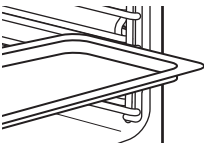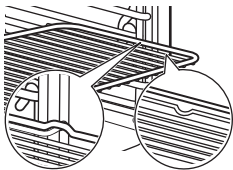

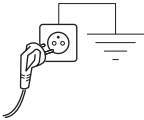

1

00:00

⏮

06:00

OK

2

06:00

⏮

06:59

OK

1

⏮

OK

2

⏮

OK

3

English

⏮

OK



⏰ 3 SEC

⏸ 3 SEC

★

⏰ 16:30

⏰ 00:15

▶ 150°C

⏮

⏭

OK

⏰ 3 SEC

⏸ 3 SEC

★

⏰ 16:30

⏰ 00:15

▶ 150°C

⏮

⏭

OK

⏰ 3 SEC

⏸ 3 SEC

★

⏰ 16:30





⏰ 00:15

▶ 150°C


⏮

⏭

OK

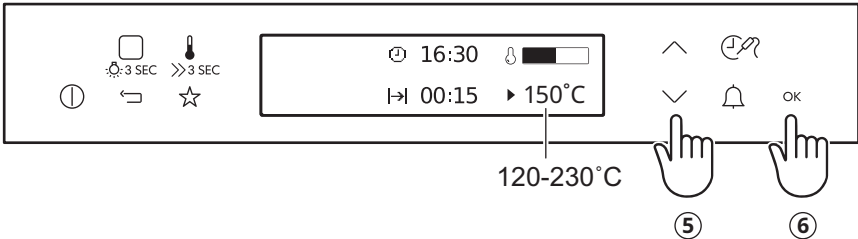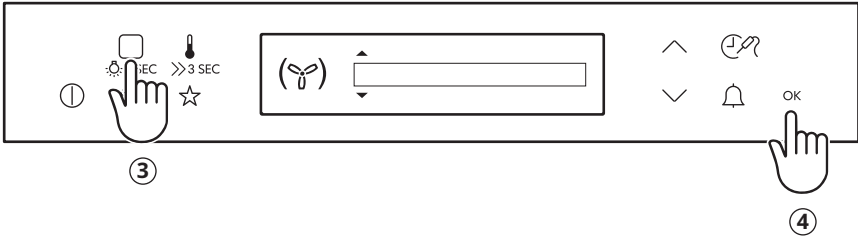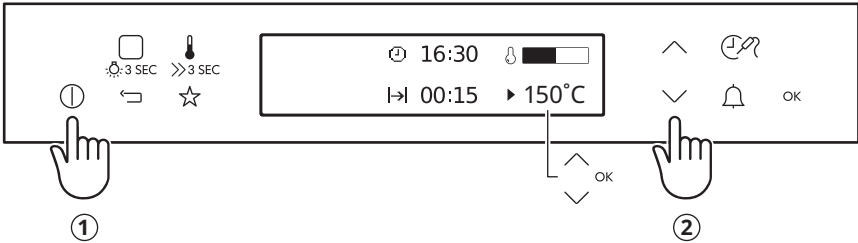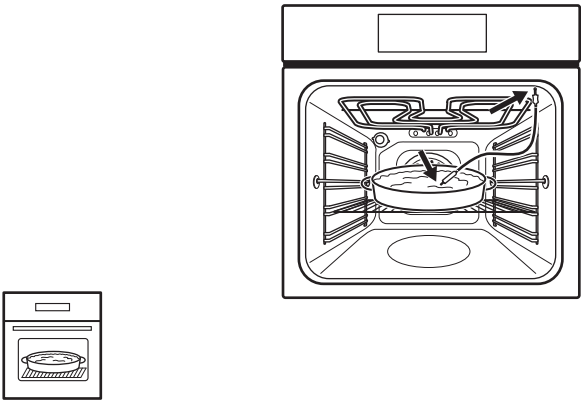


Product Description

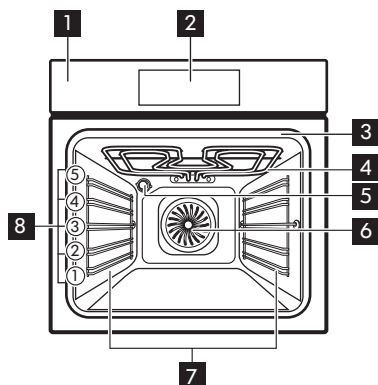


- 1** Control panel
- 2** Electronic programmer
- 3** Socket for the core temperature sensor
- 4** Grill
- 5** Lamp
- 6** Fan
- 7** Shelf support, removable
- 8** Shelf positions

Control Panel

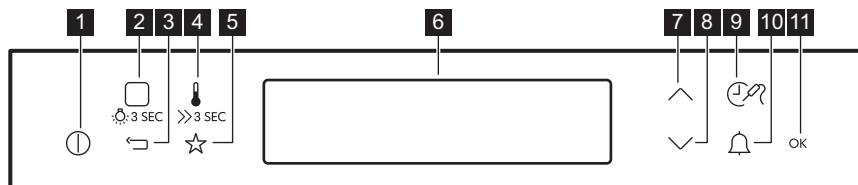

- 1** ON / OFF
- 2** Heating Functions / Assisted Cooking / Lamp
- 3** Back key
- 4** Temperature / Fast Heat Up
- 5** Favourite programmes
- 6** Display
- 7** Up key
- 8** Down key
- 9** Time / More functions
- 10** Minute minder
- 11** Confirm setting

Display

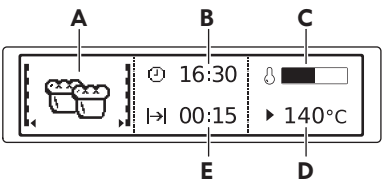

- A. Heating function
- B. Time of day
- C. Heat-up indicator
- D. Temperature
- E. Duration time or end time of a function

Other indicators of the display:

Symbol	Function
	The function is on.
	Shows current time.
	Shows the necessary time for cooking.
	Shows cooking duration.
	Shows the temperature.
	Shows when the set cooking time ends. Press and at the same time to reset the time.
	The oven calculates required cooking time.
	Indicates heat level in the oven.
	Fast Heat Up is on.
	Shows that Weight Automatic function is on, or that you can change the weight setting
	Heat + Hold is on.

Heating Functions

- True Fan Cooking**
- Conventional Cooking**
- Pizza Function**
- Slow Cooking**
- Bottom Heat**
- Moist Fan Baking**
- Frozen Foods**
- Grill**
- Fast Grilling**
- Turbo Grilling**
- Even baking, tenderness, drying
- Traditional baking
- Baking pizza
- For tender roasts
- Baking cakes
- Baking
- For convenience food (e.g. french fries)
- Grilling, toasting
- Grilling big portions, toasting
- Roasting meat, browning

Specials



Bread Baking
Au Gratin



Dough Proving



Plate Warming



Preserving



Dehydrating



Keep Warm



Defrost

Notes on: Moist Fan Baking

This function was used to comply with the energy efficiency class and ecodesign requirements (according to EU 65/2014 and EU 66/2014). Tests according to:

For EU: EN 60350-1

For UK: BS EN 60350-1

The oven door should be closed during cooking so that the function is not interrupted and the oven operates with the highest energy efficiency possible.

When you use this function the lamp automatically turns off after 30 sec.

This function is designed to save energy during cooking. When you use this function, the temperature in the cavity may differ from the set temperature. The heating power may be reduced.

Troubleshooting

If you encounter an issue with your appliance, check "Troubleshooting" chapter


in the full version of the User Manual available on: www.ikea.com.

Product Information and Product Information Sheet / Product Information Sheet according to UK Ecodesign and Energy Labelling Regulations

Supplier's name	IKEA
Model identification	KULINARISK 104.210.62
Energy Efficiency Index	81.2
Energy efficiency class	A+
Energy consumption with a standard load, conventional mode	0.93 kWh/cycle
Energy consumption with a standard load, fan-forced mode	0.69 kWh/cycle
Number of cavities	1
Heat source	Electricity
Volume	72 l
Type of oven	Built-In Oven
Mass	35,6 kg
For EU: EN 60350-1- Household electric cooking appliances - Part 1: Ranges, ovens, steam ovens and grills - Methods for measuring performance. For UK: BS EN 60350-1 - Household electric cooking appliances - Part 1: Ranges, ovens, steam ovens and grills - Methods for measuring performance.	



867376180-B-232023

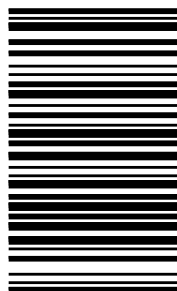

© Inter IKEA Systems B.V. 2023

21552

AA-2335903-3