



# KULINARISK

en




Design and Quality  
IKEA of Sweden



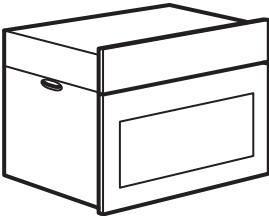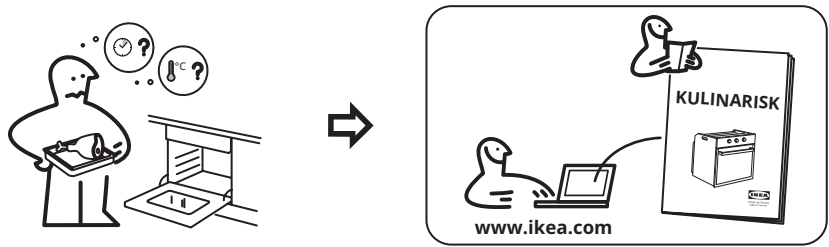


1x

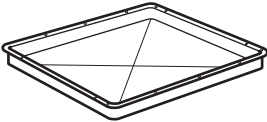

1x





 
1x




1x



1x

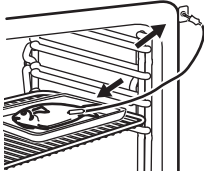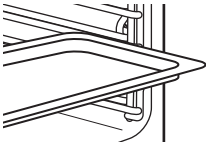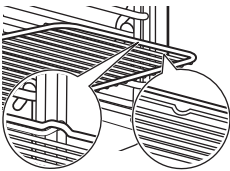

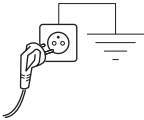

1

00:00

⏮

06:00

OK

2

06:00

⏮

06:59

OK

1

⏮

OK

2

⏮

OK

3

English

⏮

OK



⏰ 3 SEC

⏸ 3 SEC

★

⏰ 16:30

⏰ 00:15

▶ 150°C

⏮

⏭

OK

⏰ 3 SEC

⏸ 3 SEC

★

⏰ 16:30

⏰ 00:15

▶ 150°C

⏮

⏭

OK

⏰ 3 SEC

⏸ 3 SEC

★

⏰ 16:30





⏰ 00:15





▶ 150°C

⏮


⏭

OK

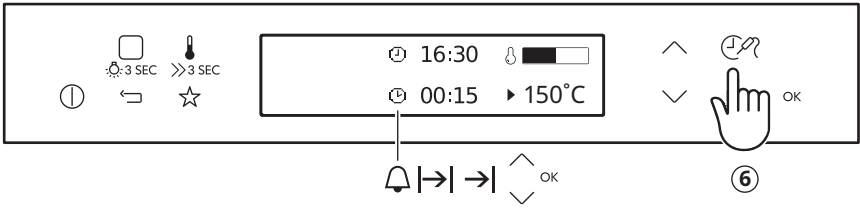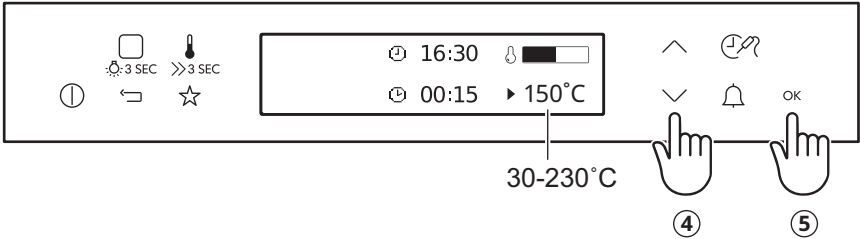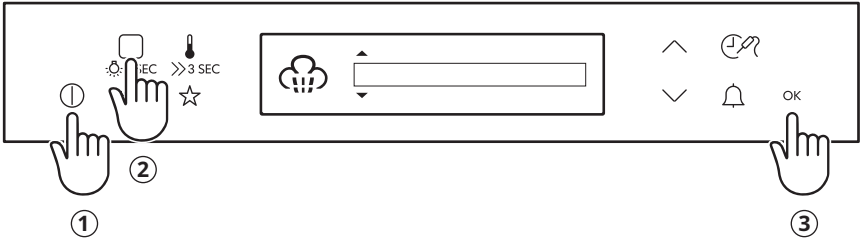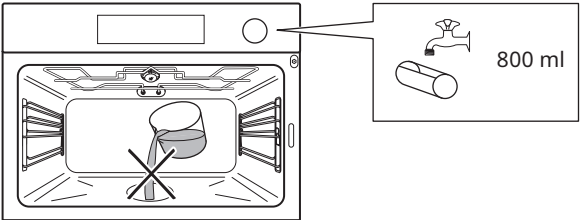

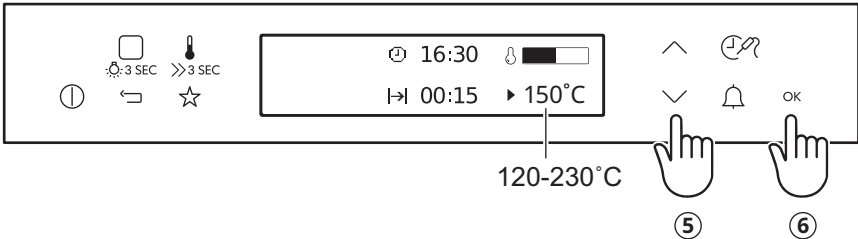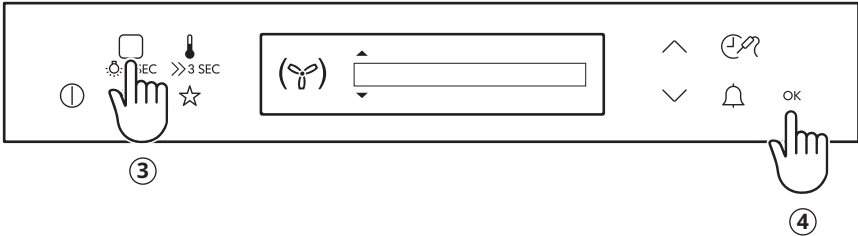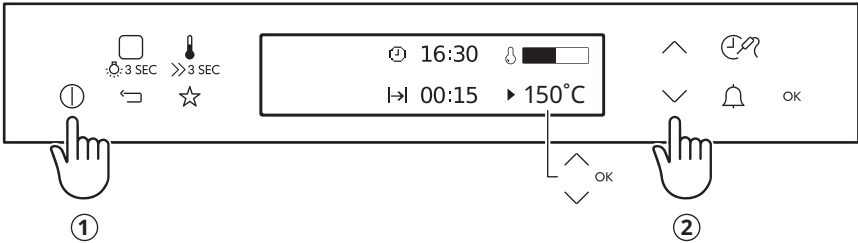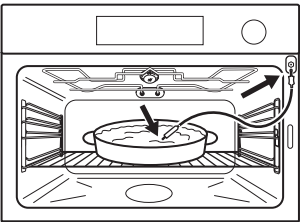


## Product Description

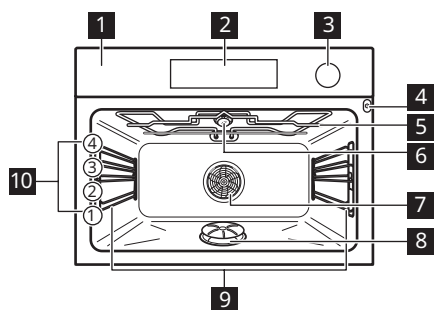


- 1** Control panel
- 2** Electronic programmer
- 3** Water drawer
- 4** Socket for the core temperature sensor
- 5** Grill
- 6** Lamp
- 7** Fan
- 8** Steam generator with cover
- 9** Shelf support, removable
- 10** Shelf positions

## Control Panel

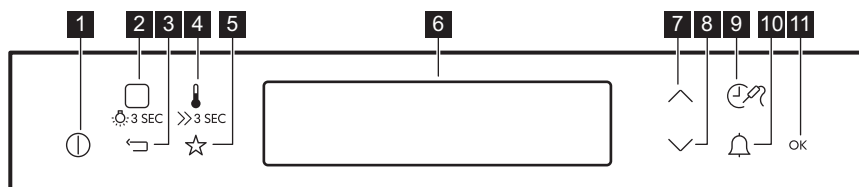





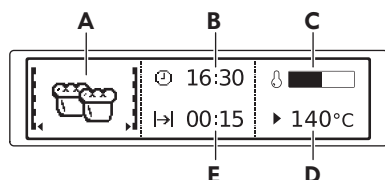







- 1** ON / OFF
- 2** Heating Functions / Assisted Cooking / Lamp
- 3** Back key
- 4** Temperature / Fast Heat Up
- 5** Favourite programmes
- 6** Display
- 7** Up key
- 8** Down key
- 9** Time / More functions
- 10** Minute minder
- 11** Confirm setting

## Display





 











- A.** Heating function
- B.** Time of day
- C.** Heat-up indicator
- D.** Temperature
- E.** Duration time or end time of a function









Other indicators of the display:

| Symbol  | Function  |
|---|---|
|  | The function is on.   |
|  | Shows current time.   |
|  | Shows the necessary time for cooking.   |
|  | Shows cooking duration.   |
|  | Shows the temperature.  |
|  | Shows when the set cooking time ends. Press  and  at the same time to reset the time. |
|  | The oven calculates required cooking time.  |
|  | Indicates heat level in the oven.   |
|  | Shows that Weight Automatic function is on, or that you can change the weight setting   |
|  | Heat + Hold is on.  |

Heating Functions

- **Full Steam**  
Vegetables, side dishes, fish
- **Humidity High**  
Custards, flans, terrines, fish
- **Humidity Low**  
Meat, poultry, oven dishes, casseroles
- **Steam Regenerating**  
Reheating on a plate
- **True Fan Cooking**  
Even baking, tenderness, drying
- **Conventional Cooking**  
Traditional baking
- **Pizza Function**  
Baking pizza
- **Slow Cooking**  
For tender roasts
- **Bottom Heat**  
Baking cakes
- **Moist Fan Baking**  
Baking
- **Frozen Foods**  
For convenience food (e.g. french fries)
- **Grill**  
Grilling, toasting
- **Fast Grilling**  
Grilling big portions, toasting
- **Turbo Grilling**  
Roasting meat, browning

Specials

- **Bread Baking**  
**Au Gratin**
- **Dough Proving**  
**Plate Warming**
- **Preserving**  
**Dehydrating**
- **Keep Warm**  
**Defrost**

Notes on: Moist Fan Baking

This function was used to comply with the energy efficiency class and ecodesign requirements (according to EU 65/2014 and EU 66/2014). Tests according to:



**For EU:** EN 60350-1

**For UK:** BS EN 60350-1

The oven door should be closed during cooking so that the function is not interrupted and the oven operates with the highest energy efficiency possible.

When you use this function the lamp automatically turns off after 30 sec.

This function is designed to save energy during cooking. When you use this function, the temperature in the cavity may differ from the set temperature. The heating power may be reduced.

Troubleshooting

If you encounter an issue with your appliance, check "Troubleshooting" chapter

in the full version of the User Manual available on: [www.ikea.com](http://www.ikea.com).

Product Information and Product Information Sheet / Product Information Sheet according to UK Ecodesign and Energy Labelling Regulations


|  |                       |
|--|-----------------------|
| Supplier's name  | IKEA                  |
| Model identification   | KULINARISK 304.168.23 |
| Energy Efficiency Index  | 94,5                  |
| Energy efficiency class  | A                     |
| Energy consumption with a standard load, conventional mode   | 0.93 kWh/cycle        |
| Energy consumption with a standard load, fan-forced mode   | 0.69 kWh/cycle        |
| Number of cavities   | 1                     |
| Heat source  | Electricity           |
| Volume   | 43 l                  |
| Type of oven   | Built-In Oven         |
| Mass   | 30.6 kg               |
| <b>For EU:</b> EN 60350-1- Household electric cooking appliances - Part 1: Ranges, ovens, steam ovens and grills - Methods for measuring performance.<br><b>For UK:</b> BS EN 60350-1 - Household electric cooking appliances - Part 1: Ranges, ovens, steam ovens and grills - Methods for measuring performance. |                       |







867371704-B-152023

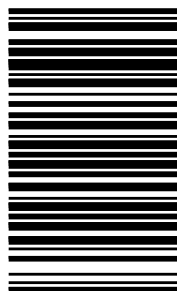

© Inter IKEA Systems B.V. 2023

21552

AA-2336063-4