LAGAN





Please refer to the last page of this manual for the full list of IKEA appointed After Sales Service Provider and relative national phone numbers.

GB ENGLISH

4

LANGUAGE

COUNTRY

Contents			
Safety information Safety instructions Installation Product description Daily use Hints and tips Care and cleaning Troubleshooting	4 6 9 12 12 13 14	Technical data Electrical connection Gas connection Energy efficiency Environmental concerns IKEA guarantee	15 17 18 20 21 21

Subject to change without notice.

A Safety information

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible if an incorrect installation and use causes injuries and damage. Always keep the instructions with the appliance for future reference.

Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children of less than 8 years of age and persons with very extensive and complex disabilities shall be kept away from the appliance unless continuously supervised.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep all packaging away from children and dispose of it appropriately.

 WARNING: The appliance and its accessible parts become hot during use. Keep children and pets away from the appliance when in use and when cooling down.

- If the appliance has a child safety device, it should be activated.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

General Safety

- This appliance is for cooking purposes only.
- This appliance is designed for single household domestic use in an indoor environment.
- This appliance may be used in, offices, hotel guest rooms, bed & breakfast guest rooms, farm guest houses and other similar accommodation where such use does not exceed (average) domestic usage levels.
- WARNING: The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements.
- Do not operate the appliance by means of an external timer or separate remote-control system.
- WARNING: Unattended cooking on a hob with fat or oil can be dangerous and may result in fire.
- Never use water to extinguish the cooking fire. Switch off the appliance and cover flames with e.g. a fire blanket or lid.
- CAUTION: The cooking process has to be supervised. A short term cooking process has to be supervised continuously.
- WARNING: Danger of fire: Do not store items on the cooking surfaces.
- Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot.
- Do not use the appliance before installing it in the built-in structure.

 Disconnect the appliance from the electrical supply before maintenance.

- Do not use a steam cleaner to clean the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, the Authorised Service Centre or similarly qualified persons in order to avoid a hazard.
- Where the appliance is directly connected to the power supply, an all-pole isolating switch with a contact gap is required. Complete disconnection in compliance with the conditions specified in overvoltage category III must be guaranteed. The earth cable is excluded from this.
- When you route the mains cable, make sure that the cable doesn't come into direct contact (for example using insulating sleeving) with parts that can reach temperatures of more than 50°C above room temperature.
- WARNING: Use only hob guards designed by the manufacturer of the cooking appliance or indicated by the manufacturer of the appliance in the instructions for use as suitable or hob guards incorporated in the appliance. The use of inappropriate guards can cause accidents.

Safety instructions

Installation



Warning! The appliance must be installed by the authorised installer.

- · Remove all the packaging.
- Do not install or use a damaged appliance.
- Follow the installation instructions supplied with the appliance.
- Keep the minimum distance from other appliances and units.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.

- Seal the cut surfaces with a sealant to prevent moisture to cause swelling.
- Protect the bottom of the appliance from steam and moisture.
- Do not install the appliance adjacent to a door or under a window. This prevents hot cookware falling from the appliance when the door or the window is opened.
- If the appliance is installed above drawers make sure that the space, between the bottom of the appliance and the upper drawer, is sufficient for air circulation.
- The bottom of the appliance can get hot.
 Make sure to install a non-combustible
 separation panel under the appliance to
 prevent access to the bottom.
 Refer to the Assembly Instructions.

Electrical Connection



Warning! Risk of fire and electric shock

- All electrical connections should be made by the authorised installer.
- The appliance must be earthed.
- Before carrying out any operation make sure that the appliance is disconnected from the power supply.
- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- Make sure the appliance is installed correctly. Loose and incorrect electricity mains cable or plug (if applicable) can make the terminal become too hot.
- Use the correct electricity mains cable.
- Do not let the electricity mains cable tangle.
- Make sure that a shock protection is installed
- installed.Use the strain relief clamp on the cable.
- Make sure the mains cable or plug (if applicable) does not touch the hot appliance or hot cookware, when you connect the appliance to the near sockets.
- Do not use multi-plug adapters and extension cables.
- Make sure not to cause damage to the mains plug (if applicable) or to the mains cable. Contact our Authorised Service Centre or an electrician to change a damaged mains cable.
- The shock protection of live and insulated parts must be fastened in such a way that it cannot be removed without tools.
- Connect the mains plug to the mains socket only at the end of the installation.
 Make sure that there is access to the mains plug after the installation.
- If the mains socket is loose, do not connect the mains plug.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Use only correct isolation devices: line protecting cut-outs, fuses (screw type

- fuses removed from the holder), earth leakage trips and contactors.
- The electrical installation must have an isolation device which lets you disconnect the appliance from the mains at all poles. The isolation device must have a contact opening width of minimum 3 mm.

Gas connection



Warning! Risk of fire and explosion

- All gas connections should be made by the authorised installer.
- Before installation, make sure that the local distribution conditions (nature of the gas and gas pressure) and the adjustment of the appliance are compatible.
- Make sure that there is air circulation around the appliance.
- The information about the gas supply is on the rating plate.
- This appliance is not connected to a device, which evacuates the products of combustion. Make sure to connect the appliance according to current installation regulations. Follow the requirements for adequate ventilation.

Use



Warning! Risk of injury, burns and electric shock.



Caution! The use of a gas cooking appliance results in the production of heat, moisture and products of combustion in the room in which it is installed. Ensure that the kitchen is well ventilated especially when the appliance is in use. Prolonged intensive use of the appliance may require additional ventilation, for example the increasing of mechanical ventilation where present, additional ventilation to safely remove the products of combustion to outside (external) air whilst also providing room air changes with additional ventilation. Consult a qualified person before installation of the additional ventilation.

- Do not change the specification of this appliance.
- Remove all the packaging, labelling and protective film (if applicable) before first use.
- Make sure that the ventilation openings are not blocked.
- Do not let the appliance stay unattended during operation.
- Set the cooking zone to "off" after each use.
- Do not put cutlery or saucepan lids on the cooking zones. They can become hot.
- Do not operate the appliance with wet hands or when it has contact with water.
- Do not use the appliance as a work surface or as a storage surface.
- When you place food into hot oil, it may splash.



Warning! Risk of fire and explosion

- Fats and oil when heated can release flammable vapours. Keep flames or heated objects away from fats and oils when you cook with them.
- The vapours that very hot oil releases can cause spontaneous combustion.

- Used oil, that can contain food remnants, can cause fire at a lower temperature than oil used for the first time.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.



Warning! Risk of damage to the appliance.

- Do not keep hot cookware on the control panel.
- · Do not let cookware boil dry.
- Be careful not to let objects or cookware fall on the appliance. The surface can be damaged.
- Never leave a burner on with empty cookware or without cookware.
- Do not put aluminium foil on the appliance.
- Use only stable cookware with the correct shape and diameter larger than the dimensions of the burners.
- Make sure cookware is centrally positioned on the burners.
- Do not use large cookware that overlap the edges of the appliance. This can cause damage to the worktop surface.
- Make sure the flame does not go out when you quickly turn the knob from the maximum to the minimum position.
- Use only the accessories supplied with the appliance.
- Do not install a flame diffuser on the burner.
- Do not let acid liquids, for example vinegar, lemon juice or limescale remover, touch the hob. This can cause matt patches.
- Discoloration of the enamel or stainless steel has no effect on the performance of the appliance.

Care and cleaning



Warning! Do not remove the buttons, knobs or gaskets from the control panel. Water may get inside the appliance and cause damage.

- Clean the appliance regularly to prevent the deterioration of the surface material.
- Deactivate the appliance and let it cool down before you clean it.
- Disconnect the appliance from the electrical supply before maintenance.
- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use any abrasive products, abrasive cleaning pads, solvents or metal objects.
- Do not clean the burners in the dishwasher.

Service

 To repair the appliance contact the Authorised Service Centre. · Use original spare parts only.

Disposal



Warning! Risk of injury or suffocation.

- Contact your municipal authority for information on how to discard the appliance correctly.
- Disconnect the appliance from the mains supply.
- Cut off the mains electrical cable close to the appliance and dispose of it.
- Flat the external gas pipes.

Installation



Warning! Refer to Safety chapters.

General information



Warning! [GB] Any gas installation must be carried out by a GAS SAFE REGISTER installer.



Warning! This appliance must be installed, connected or repaired only by a registered competent person to the relevant gas standard. Use only parts provided with the product. Use only original spare parts.


The manufacturer is not responsible for any injury to persons and pets or damage to property caused by a failure to comply the following requirements.




Caution! During the installation, you must refer to the Assembly Instructions.



Warning! Installation process must follow the laws, ordinances, directives, and standards, electrical safety rules, and regulations, proper recycling in accordance with the regulations, in force in the country of use.

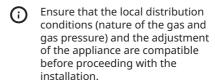



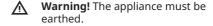





You must observe the minimum distances to other appliances and furniture cabinets or other units according to Assembly Instruction.

The minimum distance to be maintained from cut out edge to lateral wall must be 100 mm.

Protect the cut surfaces of the worktop against moisture using a suitable sealant included in the product in additional bag. Seal the appliance to the worktop with no gap. Do not use silicon sealant between the appliance and the worktop. Do not install the appliance next to the doors and under windows. Otherwise, the hot cookware may fall off the pan supports.

Important safety requirements

This hob must be installed in accordance with the Gas Safety (Installation and Use) Regulations (Current Edition) and the IEE Wiring Regulations (Current Edition).

Provision for ventilation

Detailed recommendations are contained in the following British Standards Codes Of Practice: B.S. 6172/B.S. 5440, Par. 2 and B.S. 6891 Current Editions. The hob should not be installed in a bed sitting room with a volume of less than 20 m³. If it is installed in a room of volume less than 5 m³ an air vent of effective area of 100 cm² is required. If it is installed in a room of volume between 5 m³ and 10 m³ an air vent of effective area of 50 cm² is required, while if the volume exceeds 11 m³ no air vent is required.


However, if the room has a door which opens directly to the outside no air vent is required even if the volume is between 5 m³ and 11 m³.

If there are other fuel burning appliances in the same room, B.S. 5440 Part 2 Current Edition, should be consulted to determine the requisite air vent requirements.

Location

The hob may be located in a kitchen, a kitchen/diner or bed sitting room (with a volume greater than 20 m³), but not in a bathroom or shower room.


The minimum distance combustible material can be fitted above the hob in line with the edges of the hob is 400 mm. If it is fitted below 400 mm a space of 50 mm must be allowed from the edges of the hob.

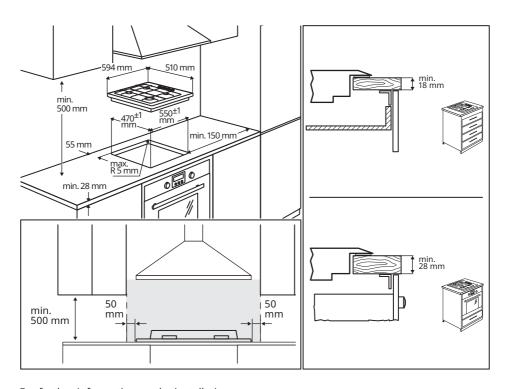

For further information on the installation refer to the Assembly Instruction.

Product description

Cooking surface layout

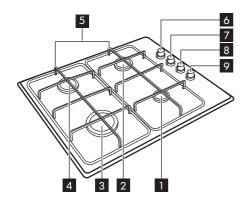

- 1 Auxiliary burner
- 2 Semi Rapid burner
- 3 Rapid burner
- 4 Semi Rapid burner
- 5 Removable pan supports
- 6 Semi Rapid burner control knob
- 7 Semi Rapid burner control knob
- 8 Rapid burner control knob
- 9 Auxiliary burner control knob

Burner control knob

The hob burner control knobs are on the right side of the hob.



Symbol	Description
•	there is no gas supply / off position
<\^>_	there is maximum gas sup- ply / ignition setting
۵	there is minimum gas sup- ply
00	to show the position of the burner

Daily use



Warning! Refer to Safety chapters.

Ignition of the burner




Always ignite the burner before you place the pots or pans.

To ignite the burner:

- Push the control knob and turn it anticlockwise to the maximum position marked with ⋄ ◊.
- 2. Keep the control knob pushed for about 5 sec. As a result thermocouple heats up, and the safety device switches off. If you do not push the knob, the gas supply is interrupted.
- **3.** When you light the flame, you can adjust

i If the burner does not ignite, after a few attempts, check if the crown and its cap are in correct positions.

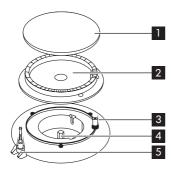

- 1 Burner cap
- 2 Burner crown
- 3 Ignition candle
- 4 Injector
- 5 Thermocouple
- Λ

Warning! Do not keep the control knob pressed for more than 15 seconds. If the burner does not light after 15 seconds, release the control knob, turn it into off position and wait for at least 1 minute before trying to light the burner again.

if there is no electricity, you can ignite the burner without an electrical device. In this case, approach the burner with flame, push the relevant knob and turn it anticlockwise to the maximum gas release position.

- Warning! Be careful when you use open fire in the kitchen environment. The manufacturer declines any responsibility in case of misusing the flame.
- i If the burner accidentally goes out, turn the control knob to the off position and wait for at least 1 minute before trying to light it again.
- When you switch on the mains after installation or a power cut, the spark generator activates automatically.
- The hob is supplied with the progressive valves. They make the flame regulation more precise.

Turning the burner off

To put the flame out, turn the relevant control knob clockwise to the symbol •.



Warning! Always turn the flame down or switch it off before you remove the pans from the burner.

Hints and tips



Warning! Refer to Safety chapters.

Diameters of cookware

(i)

Keep the cookware centered on the pan supports.

①

Use pots and pans with bottom fitting the size of burner used.

Burner	Minimum di- ameter of pots and pans	ameter of pots
Front left (Rapid)	180	260
Front right (Auxiliary)	80	180

Burner	Minimum di- ameter of pots and pans	ameter of pots
Back left (Semi-rap- id)	120	220
Back right (Semi-rap- id)	120	220

The bottom of the cookware should be as thick and flat as possible.

Care and cleaning



Warning! Refer to Safety chapters.

General information



Warning! Switch the appliance off and let it cool down before you clean it.



Warning! Do not clean the appliance with steam blasters or high-pressure cleaners.



Warning! Do not use abrasive cleaners, steel wool pads or acids. They damage the appliance.



Warning! Do not clean the burner cap and crown in a dishwasher. Risk of corrosion.

To remove any food remains, wash the enamelled elements, caps and crowns, with warm soapy water.

<u>()</u>

Remove fat or sugar stains immediately. Do not leave them on the hob surface while cooking.

Wash stainless steel elements with water, and dry with a soft cloth.

This model is equipped with an electrical ignition. To avoid problems with lightning, keep the ceramic "candle" with electrode clean.



Do not put the pan supports in a dishwasher. Wash them manually and dry with a soft cloth. After cleaning, make sure that the pan supports are in correct position.



To check the conditions of the gas supply pipe and the pressure adjuster, contact the After Sales Service Provider. The service is not free of charge.

After cleaning, be sure to wipe dry with a soft cloth.

Troubleshooting



Warning! Refer to Safety chapters.

What to do if...

Problem	Possible cause	Remedy
There is no spark when light- ning the gas.	There is no electrical supply.	Check if the unit is plugged in and the electrical supply is switched on.
	There is no electrical supply.	Check the house electric installation fuse.
	Burner cap and crown are placed incorrectly.	Check if the burner cap and crown are placed correctly.
The flame is extinguishes immediately after lightning.	Thermocouple is not heated enough.	After lightning the flame, keep the knob pushed for about 5 seconds.
The gas ring burns unevenly.	Burner crown is blocked with food residues.	Check if the main injector and the burner crown are not blocked with food remains.

If there is an error, first try to find a solution to the problem yourself. If you cannot find a solution to the problem yourself, contact your IKEA store call centre. You can find a full list of IKEA appointed contacts at the end of this manual.



If the appliance is misused wrongly or installed not by authorised technician, the service is not free of charge, even during the warranty period.

Technical data

Hob dimensions

Width	594 mm
Depth	510 mm
Built in height	44 mm

Appliance Category: II2H3+

Appliance gas supply: Natural gas G20 (2H) 20 mbar

This appliance is designed for use with natural gas but can be converted for use with other gas type according to table below.

Other technical data

Class Appliance: 3

TOTAL POWER			
Gas original:		G20 (2H) 20 mbar = 8.0 kW	
Gas replacement:		G30 (3+) 28-30 mbar = 567 g/h G31 (3+) 37 mbar = 557 g/h	
Gas connection:	R 1/2"		

Burner	Injector	Nominal	Nominal	Flow g/h	Reduced	
type mark	Injector mark	Power kW	G30 28/30 mbar	G31 37 mbar	Power kW	by-pass
			G20 20 mbar			
Rapid (large)	119	3.0	-	-	0.75	42
Semi-rapid (medium)	96	2.0	-	-	0.45	32
Auxiliary (small)	70	1.0	-	-	0.33	28
		G30/	G31 28-30/37	mbar		
Rapid (large)	86	2.8	204	200	0.75	42
Semi-rapid (medium)	71	2.0	145	143	0.45	32
Auxiliary (small)	50	1.0	73	71	0.33	28

Rating Plate



The graphic above represents the rating plate of the appliance (without serial number which is generated dynamically during the

production process), which is located at its underneath surface of the casing.

Dear Customer, please apply here aside the sticker you can find in the dedicate plastic

bag inserted inside the hob packaging. This will allow us to assist you better, by identifying precisely your hob, in case you

will need in future our assistance. Thank you for your help!



Electrical connection



Warning! Refer to Safety chapters.

Connection cable



Caution! Information for authorised installer only.



Warning!

The appliance must be earthed.



Warning!


Risk of injury from electrical current.


- The electrical mains terminal is under voltage.
- Make sure that the electrical mains terminal is free of voltage.
- Loose and inappropriate plug and socket connections. May overheat the terminal.
- Make sure that the clamping connections are installed correctly.
- Secure the cable with the strain relief clamp.

Before connecting, check that the nominal voltage of the appliance stated on the rating plate, corresponds to the available supply voltage. Also, check the power rating of the appliance and make sure that the wire is suitably sized to suit the appliance power rating. Refer to the Technical data chapter.

Electrical Requirements

Permanent electrical installation must comply with the latest I.E.E. Regulations and local Electricity Board regulations. For your own safety the installation must be done by a qualified electrician (e.g. your local Electricity Board, or a contractor who is on the roll of the National Inspection Council for Electrical Installation Contracting [NICEIC]).

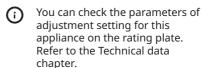

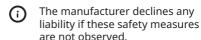

The appliance must be connected to a 220-240 V 50-60 Hz AC electrical supply.

Before activating the appliance, make sure the electrical supply voltage is the same as that indicated on the rating plate. The rating plate is located below the surface of the casing.

The appliance is supplied with a 3 core flexible supply cord requiring a 3 amp plug.

You must install the plug. The wires in the mains lead are coloured in accordance with the following code:

Green and yellow - Earth

Blue - Neutral

Brown - Live

- Connect the green and yellow (earth) wire to the terminal in the plug which is marked with the letter 'E' or the earth symbol , or coloured green and yellow.
- Connect the blue (neutral) wire to the terminal in the plug which is marked with the letter 'N' or coloured black.
- **3.** Connect the brown (live) wire to the terminal in the plug which is marked with the letter 'L' or coloured red.

There must be no cut or stray strands of wire present. The cord clamp must be correctly attached on the outer sheath.



Warning! Be careful when you dispose of the cut off plug. It is dangerous to put a cut off plug into a 13 amp socket. There is a risk of electrical shock.




Only a qualified electrician can replace the electrical cable, according to the current regulations.

Replacement of the connection cable



Warning! To replace the connection cable, the technician must have a specific equipment.

In this case, only cable type H03V2V2-F T90 must be used. The cable section must be suitable to the voltage and the working temperature. The yellow and green earth wire must be approximately 2 cm longer than the brown or black phase wire must be approximately 2.

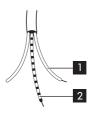

Gas connection



Warning! Refer to Safety chapters.



Caution! Information for authorised installer only.

Connection to main pipe



Warning! This appliance is not connected to a combustion products evacuation device.

The installation must be compatible with the current local regulations. Complying with the local regulations, the connection of the cooktop to the gas pipe network or gas cylinder must be made by means of a rigid

copper or steel pipe with fittings, or by means of a continuous surface stainless steel hose.



If there is a problem with the pipe, do not repair it yourself. Contact the local After Sales Service Provider. Refer to the Service chapter.

The connection must be installed correctly and fixed into the hob connection pipe. Otherwise, gas may leak from the connection pipe.



Warning! When you finish the installation, check the sealing and pipe fixing. To check the installation, use soapy water. Do not use the flame.

Gas setting conversion

You can use this model with natural gas. However, you can convert it for use with other gases, providing the correct injectors.

For more information on injector replacement, refer to the Technical data chapter.



Warning! Conversion or replacement can only be performed by a authorised technician.

To replace injectors:

- 1. Remove pan support.
- 2. Remove burner cap and crown.
- Using a socket spanner 7, unscrew and remove the injectors, and replace them with the ones required for the type of gas in use.
- **4.** Reassemble the parts, following the same procedure backwards.
- Place the label with relevant information for new type of gas close to the supply pipe before sealing the appliance. If the appliance is already sealed please stick it directly on the user manual booklet, after Technical data chapter, and close to the rating plate drawing.
- You can find this label in package supplied with appliance.


i If the feeding gas pressure is different or variable from the required one, you must install an appropriate pressure adjuster, which is not supplied with the product. If needed, it must be ordered separately from the local After Sales Service Provider, refer to the Service chapter. The pressure adjuster must be fitted on gas supply pipe, in compliance with the rules of the force.

The rating plate is located below the surface of the casing.


Adjusting flame level

When you install the hob, it is necessary to check the minimum flame setting:


- **1.** Turn the gas tap to the maximum position and ignite.
- Set the gas tap to the minimum flame position and turn the control knob from minimum to maximum several times. If the flame is unstable or extinguished, follow the procedure further.
- **3.** Re-ignite the burner and set to minimum.
- **4.** Remove the control knob and the gasket.

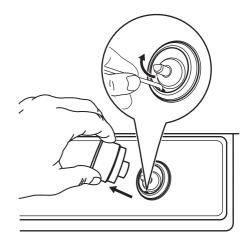

- Warning! Pay attention not to damage the gasket. Do not use sharp tool to remove it.
- 5. To adjust, use a thin bladed screwdriver and turn the adjustment screw until the flame is steady and does not extinguish when the knob is turned from minimum to maximum, and vice versa (see following picture).

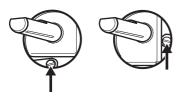

- **6.** Repeat this procedure for all burners.
- **7.** Reassemble the gasket and the knobs.

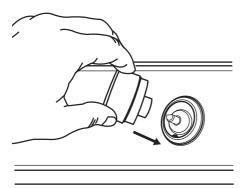

- Warning! Make sure to place the gasket exactly in the original position.
- Warning! If the appliance is connected to liquid gas (G31 propane or G30 butane), the regulation screw must be fastened as tightly as possible.
- i If the gasket is damaged, it must be ordered from the After Sales Service Provider.

Energy efficiency

Product Information according to EU and UK Ecodesign regulations

Model identification	I	LAGAN 605.220.92, LAGAN 805.231.99
Type of hob		Built-in hob
Number of gas burners		4

Energy efficiency per gas burner (EE gas burner)	Left rear - Semi-rapid	62.1%
	Right rear - Semi-rapid	59.4%
	Left front - Rapid	57.1%
	Right front - Auxiliary	not applicable
Energy efficiency for the gas hob (EE gas hob)		59.5%

EN 30-2-1: Domestic cooking appliances burning gas - Part 2-1: Rational use of energy - General

Energy saving

- Before use, make sure that the burners and pan supports are assembled correctly.
- Use cookware with diameters applicable to the size of burners.
- · Center the pot on the burner.
- When you heat up water, use only the amount you need.
- If it is possible, always put the lids on the cookware.
- When the liquid starts to boil, turn down the flame to barely simmer the liquid.
- If it is possible, use a pressure cooker. Refer to its user manual.

Product Information for power consumption and maximum time to reach applicable low power mode

Power consumption in off mode	0.3 W
Maximum time needed for the equipment to automatically reach the applicable low power mode	2 min

Environmental concerns

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of

appliances marked with the symbol A with the household waste. Return the product to your local recycling facility or contact your municipal office.

IKEA guarantee

Do you need extra help?

For any additional questions not related to After Sales of your appliances, like clarifications on installation of the IKEA appliance in the dedicated IKEA kitchen furniture or for clarification on functions of the IKEA appliances, please contact your nearest IKEA Customer Support Centre, the number is available on www.IKEA.com. We recommend you read the appliance documentation carefully before contacting us.

Read about our guarantee terms on www.ikea.com

For requests under this guarantee, do not hesitate to contact the IKEA appointed Authorized Service Centre. See the relative national phone numbers below/on the next page/on the last page.

For quicker service, always refer to the IKEA article name and number (8-digit code) found on the rating plate of your appliance.

SAVE THE SALES RECEIPT.

Country	Phone number	Call Fee	Opening time	
België		Binnenlandse gesprekskosten	8 tot 18.30 Weekdagen	
Веідіе	02/716.24.44	Birinerilariuse gesprekskosteri	Zaterdag 9 tot 13u	
Belgique		Tarif des appels nationaux	8 à 18.30 en semaine Samedi 9 à 13h	
България	+359 2 492 9397	Според тарифата на оператора за обаждания към стационарен номер	От 8:30 до 17:30 ч в работни дни	
Česká Republika	246 019721	Cena za místní hovor	8 až 20 v pracovních dnech	
Danmark	70 15 09 09	Landstakst	man fre. 09.00 - 20.00 lør søn. 09.00 - 18.00	
Deutschland	+49 (0)911 323 1016*	* 0,20 €/Verbindung aus dem Fest- netz max. 0,60 €/Verbindung aus dem Mobilfunknetz	Werktags von 8.00 bis 20.00	
Ελλάδα	211 176 8276	Υπεραστική κλήση	8 έως 20 κατά τις εργάσιμες ημέρες	
España	91 1875537	Tarifa de llamadas nacionales	De 8 a 20 en días laborables	
France	0170 36 02 05	Tarif des appels nationaux	9 à 21. En semaine	
Hrvatska	0038516323339	Cijena ovisi o pružatelju telefonske usluge korisnika	radnim danom od ponedjeljka do petka od 08:00 do 16:00	
Ireland	0 14845915	National call rate	8 till 20 Weekdays	
Ísland	+354 5852409	Innanlandsgjald fyrir síma	9 til 18. Virka daga	
Italia	02 00620818	Tariffa applicata alle chiamate nazionali	dalle 8 alle 20 nei giorni feriali	
Κυπρος	22 030 529	Υπεραστική κλήση	8.30 έως 16.30 κατά τις εργάσιμες ημέρες	
Lietuva	5 230 06 99	Nacionalinių pokalbių tarifai	Pr Ketv.: 8:00 - 12:00, 12:45 - 17:00 Pnkt.: 8:00 - 12:00, 12:45 - 15:45	
Luxembourg	35242431301	Tarif des appels nationaux	Lu-Ven 8:00-12:00/13:00-17:00	
Magyarország	06-1-252-1773	Belföldi díjszabás	Hétköznap 8.00 és 17.00 óra között	
Nederland	0172/468568	Geen extra kosten. Alleen lokaal tarief	ma-vr: 8.00 – 18:30 zat: 9.00 – 13:00	
Norge	22723500	Takst innland	8 til 18 ukedager	
Österreich	+43-1-2056356	max. 10 Cent/min.	Mo - Fr 8.00 - 20.00 Uhr	
Polska	801 400 711 +48 22 749 60 99	Koszt zgodny z taryfą operatora	Od 8 do 20 w dni robocze	
Portugal	211557985	Chamada Nacional	9 às 21. Dias de Semana *excepto feriados	
România	021 211 08 88	Tarif apel naţional	8 - 20 în zilele lucrătoare	
Россия	8 495 6662929	Действующие телефонные тарифы	с 8 до 20 по рабочим дням Время московское	
Schweiz		Tarif für Anrufe im Bundesgebiet	8 bis 20 Werktage	
Suisse	031 5500 324	Tarif des appels nationaux	8 à 20. En semaine	
Svizzera	051 5500 524	Tariffa applicata alle chiamate nazionali	dalle 8 alle 20 nei giorni feriali	
Slovenija	+38618108621	lokalni strošek je običajna tržna vred- nost, odvisna od ponudnika telefonije	8.00 – 16.00 ob delavnikih	
Slovensko	(02) 3300 2554	Cena vnútroštátneho hovoru	8 až 20 v pracovných dňoch	
Suomi	030 6005203	pvm/mpm	Ma – To 8:00 -18:00 Pe 9:00 -16:00	
Sverige	0775 700 500	lokalsamtal (lokal taxa)	mån-fre 8.30 - 20.00 lör-sön 9.30 - 18.00	
United Kingdom	020 3347 0044	National call rate	9 till 21. Weekdays	
Србија	+381117555444 (ако позивате изван Србије) 0117555444 (ако позивате из Србије)	Цена позива у националном саобраћају	Понедељак – субота: 09 – 20 Недеља: 09 – 18	
Eest	і, Latvija, Україна	www	.ikea.com	
	,			



