

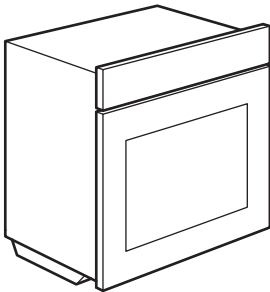


MUTEBO

 
en

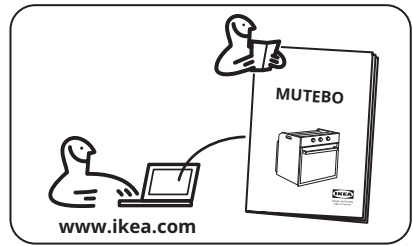

Design and Quality
IKEA of Sweden

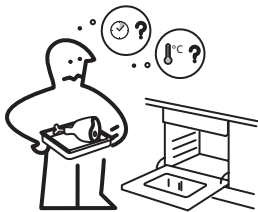


1x




1x



 1x



1x

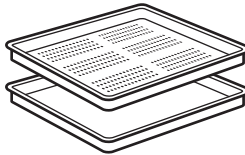





1x



1x



1x

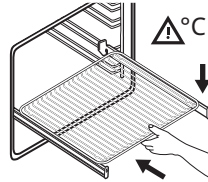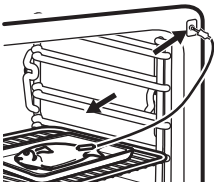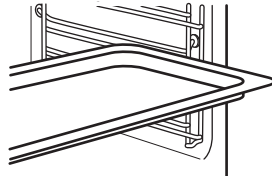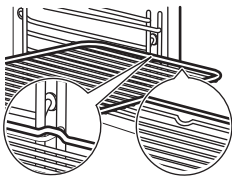



1



 
2




3



4



1

 

2



3



1




2



3



4

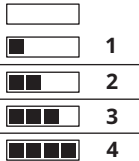

A

START



STOP

MAX 23 h 59 min

B

START



STOP



C

START



STOP

D

START



STOP

+ (...) min

E

06:59

06:58

06:57

...

00:00






F





00:00

00:01

00:02


...

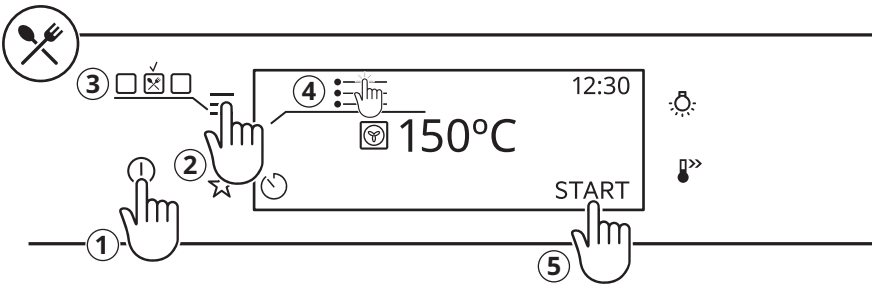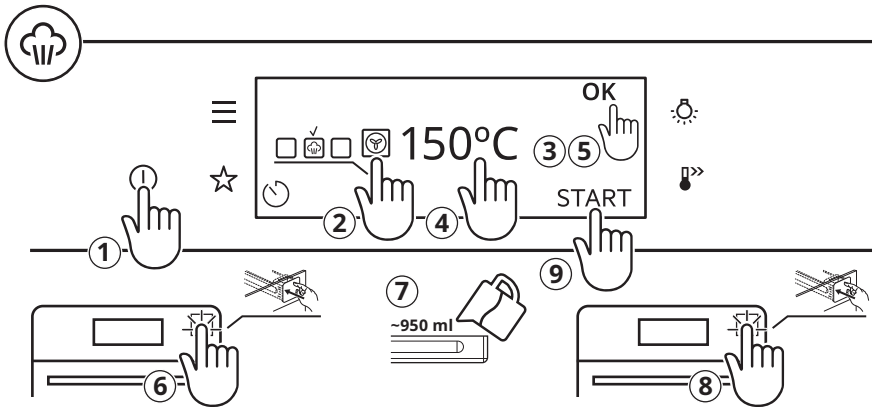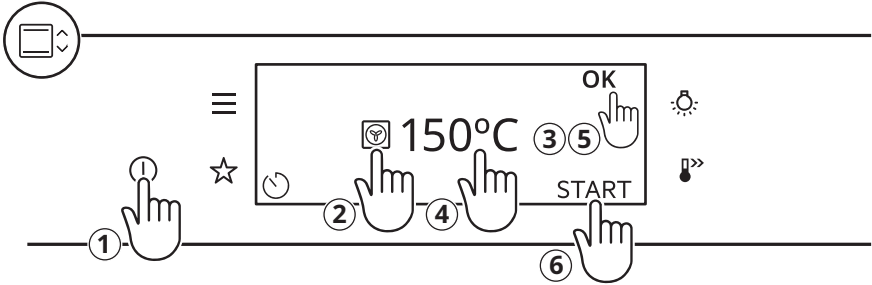

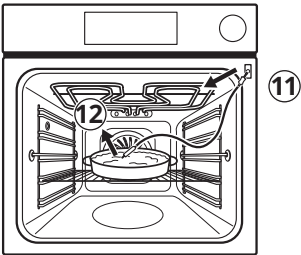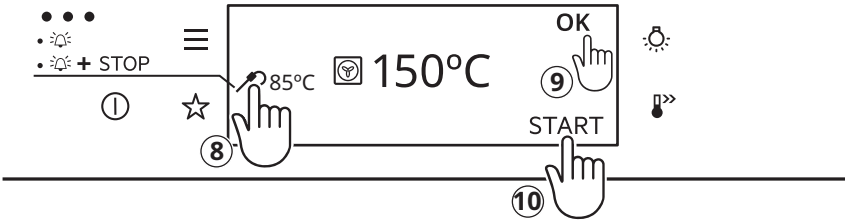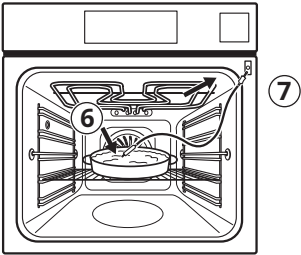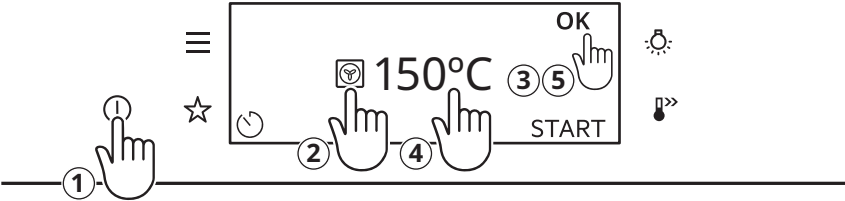

Product description


General overview

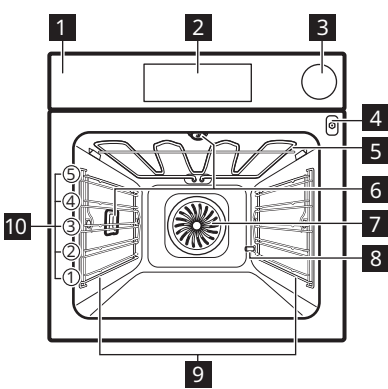

- 1 Control panel
- 2 Display
- 3 Water drawer
- 4 Socket for the food sensor
- 5 Heating element
- 6 Lamp
- 7 Fan
- 8 Descaling pipe outlet
- 9 Shelf support, removable
- 10 Shelf positions

Control panel

Control panel overview

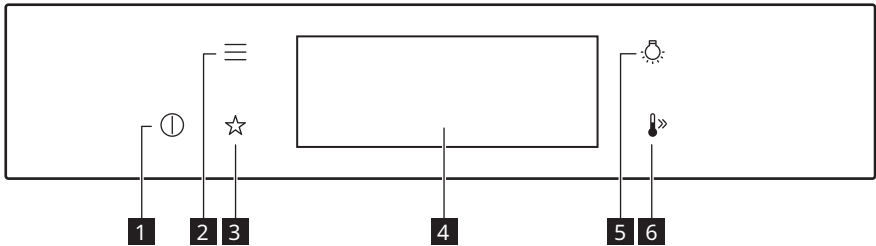


1	ON / OFF	Press and hold to turn the appliance on and off.
2	Menu	Lists the appliance functions.
3	Favourites	Lists the favourite settings.
4	Display	Shows the current settings of the appliance.

5	Lamp switch	To turn the lamp on and off.
6	Fast Heat Up	To turn on and off the function: Fast Heat Up.

Display indicators

Display with key functions.

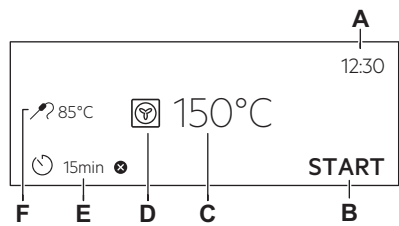

- A. Time of day
- B. START/STOP
- C. Temperature
- D. Heating functions
- E. Timer
- F. Food sensor (selected models only)

Basic indicators - to navigate on the display.

	To confirm the selection / setting.
	To go one level back in the menu.
	To undo the last action.
	To turn the options on and off.

Sound alarm function indicators - when the set time of cooking ends, the signal sounds.

	The function is on.
	The function is on. Cooking stops automatically.
	Sound alarm is off.
	To set the function: Delayed start.
	To cancel the setting.

Daily use

Heating functions

STANDARD

	True Fan Cooking: Even baking, tenderness, drying
	Conventional Cooking: Traditional baking
	Frozen Foods: French fries, potato wedges, spring rolls
	Pizza Function: Baking pizza
	Bottom Heat: Baking cakes
	Grill: Toasting, grilling
	Turbo Grilling: Roasting meat, browning

True Fan Cooking, Conventional Cooking:
When you set the temperature below 80 °C
the lamp automatically turns off after 30 sec.

SPECIALS

	Preserving: Preserving vegetables
	Dehydrating: Drying sliced fruit, mushrooms

	Plate Warming: Preheating plates
	Defrost: Defrosting
	Au Gratin: Making gratins, browning
	Slow Cooking: Preparing tender roast
	Keep Warm: Keeping food warm
	Moist Fan Baking: Baking

STEAM

	Easystem: Steaming, stewing, gentle crisping, baking, roasting
	Steam Regenerating: Reheating on a plate
	Bread Baking: Bread, bread rolls
	Dough Proving: Proving yeast dough
	Full Steam: Vegetables, side dishes, fish
	Humidity High: Custards, flans, terrines, fish
	Humidity Low: Meat, poultry, oven dishes, casseroles

Notes on: Moist Fan Baking

This function was used to comply with the energy efficiency class and ecodesign requirements. Tests according to:

BS EN 60350-1

The oven door should be closed during cooking so that the function is not interrupted and the oven operates with the highest energy efficiency possible.

When you use this function the lamp automatically turns off after 30 sec.

This function is designed to save energy during cooking. When you use this function, the temperature in the cavity may differ from the set temperature. The heating power may be reduced.

Water hardness

You can change the water hardness level in the menu: Settings / Setup / Water hardness.

Water hardness level	Test paper
1 - soft	<div><div></div><div></div></div>
2 - moderately hard	<div><div></div><div></div><div></div></div>
3 - hard	<div><div></div><div></div><div></div><div></div></div>
4 - very hard ¹⁾	<div><div></div><div></div><div></div><div></div><div></div></div>

1) When the tap water hardness level is 4, fill the water drawer with still bottled water.

Troubleshooting

If you encounter an issue with your appliance, check "Troubleshooting" chapter

in the full version of the User Manual available on: www.ikea.com.

Product Information Sheet according to UK Ecodesign and Energy Labelling Regulations

Supplier's name	IKEA
Model identification	MUTEBO 505.570.39
Energy Efficiency Index	61.9
Energy efficiency class	A++
Energy consumption with a standard load, conventional mode	1.09 kWh/cycle
Energy consumption with a standard load, fan-forced mode	0.52 kWh/cycle
Number of cavities	1
Heat source	Electricity
Volume	70 l
Type of oven	Built-In Oven
Mass	35.5 kg
BS EN 60350-1 - Household electric cooking appliances - Part 1: Ranges, ovens, steam ovens and grills - Methods for measuring performance.	

Menu structure

Menu

Menu item		Application
Assisted Cooking		Lists automatic programmes.
Cleaning		Lists cleaning programmes.
Favourites		Lists the favourite settings.
Options		To set the appliance configuration.
Settings	Setup	To set the appliance configuration.
	Service	Shows the software version and configuration.

Submenu for: Cleaning

Submenu	Application
Drying	Procedure for drying the cavity from the condensation remaining after a use of the steam functions.
Tank emptying	Procedure for removing the residual water from the water drawer after use of the steam functions.
Steam Cleaning	Light cleaning.
Steam Cleaning Plus	Thorough cleaning.
Descaling	Cleaning of the steam generation circuit from residual limestone.
Rinsing	Procedure for rinsing and cleaning the steam generation circuit after frequent use of the steam functions.

Submenu for: Options

Submenu	Application
Light	Turns the lamp on and off.
Child Lock	Prevents accidental activation of the appliance. When the option is on, the text Child Lock appears in the display when you turn on the appliance. To enable the appliance use, choose the code letters in the alphabetical order. Access to the timer, the remote operation and the lamp is available with the option on.
Fast Heat Up	Shortens the heat up time. It is available only for some of the appliance functions.
Cleaning Reminder	Turns the reminder on and off.
Time indication	Turns the clock on and off.
Digital clock style	Changes the format of the displayed time indication.

Submenu for: Setup


Submenu	Description
Language	Sets the appliance language.
Display brightness	Sets the display brightness.
Key tones	Turns the tone of the touch fields on and off. It is not possible to mute the tone for: ①.
Buzzer volume	Sets the volume of key tones and signals.
Water hardness	Sets the water hardness.
Time of day	Sets the current time and date.

Submenu for: Service

Submenu	Description
Demo mode	Activation / deactivation code: 2468
Software version	Information about software version.
Reset all settings	Restores factory settings.



867380092-A-082023

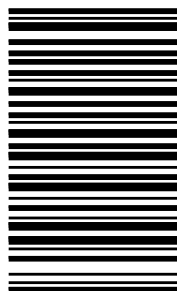

UK
CA

© Inter IKEA Systems B.V. 2023

21552

AA-2350585-2